55-1520-210-23 P-2/990

TM 55-1520-210-23P-2

TECHNICAL MANUAL

AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

This copy is a reprint which includes current pages from Changes 1 through 12.

This manual, together with TM 55-1520-210-23P-1 and TM 55-1520-210-23P-3, 27 February 1981, supersedes TM 55-1520-210-23P-1, TM 55-1520-210-23P-2, and TM 55-1520-210-23P-3, 1 March 1977, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY
27 FEBRUARY 1981

D 101. 11:

READEX FICHE best copy available

CHANGE
NO. 12

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 16 May 1990

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

For

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
811/812	811/812
823 through 826	823 through 826
829 through 836	829 through 836
839 through 842	839 through 842
845 through 856	845 through 856
859 through 864	859 through 864
867 through 876	867 through 876
885 through 890	885 through 890
893 through 896	893 through 896
897 through 900	897 through 900
905 and 906	905 and 906
909 through 918	909 through 918
918.1 and 918.2	918.1 and 918.2
919 through 922	919 through 922
929 and 930	929 and 930
933 through 936	933 through 936
945 through 960	945 through 960
963 through 968	963 through 968
973 and 974	973 and 974
977 and 978	977 and 978
981 through 989/990	981 through 989/990
993 and 994	993 and 994
1007 and 1008	1007 and 1008
1029 through 1042	1029 through 1042
1057 and 1058	1057 and 1058
1067 and 1068	1067 and 1068

Remove pages	Insert pages
1073 and 1074	1073 and 1074
1095 and 1096	1095 and 1096
1101 and 1102	1101 and 1102
1113 and 1114	1113 and 1114
1117/1118	1117/1118
1123 through 1127/1128	1123 through 1127/1128
1131 through 1142	1131 through 1142
1145 and 1146	1145 and 1146
1149 through 1154	1149 through 1154
1157 through 1167/1168	1157 through 1167/1168
1171 through 1174	1171 through 1174
1181 through 1184	1181 through 1184
1193 through 1198	1193 through 1198
1203 through 1205/1206	1203 through 1205/1206
1219 through 1222	1219 through 1222
1239 through 1242	1239 through 1242
1245 and 1246	1245 and 1246
----	1246.1 through 1246.30
1247 through 1256	1247 through 1256
1259 through 1262	1259 through 1262
1265 and 1266	1265 and 1266
1269 through 1271/1272	1269 through 1271/1272
1338 through 1352	1338 through 1352
1357 through 1362	1357 through 1362
1365/1366	1365/1366
1368 through 1372	1367 through 1372
1377 through 1383/1384	1377 through 1383/1384
1393 through 1396	1393 through 1396
1401/1402	1401/1402
1408 through 1410	1408 through 1410
1419 and 1420	1419 and 1420
1479/1480	1479/1480
1517 through 1520	1517 through 1520
1523 and 1524	1523 and 1524
1531 and 1532	1531 and 1532
1535 through 1537/1538	1535 through 1537/1538
1578 through 1584	1578 through 1584
1587 through 1602	1587 through 1602
1605 through 1613/1614	1605 through 1613/1614
1627 through 1648	1627 through 1648
1671 through 1676	1671 through 1676
1687 through 1692	1687 through 1692
1725 and 1726	1725 and 1726

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for All UH-1 Series Aircraft and EH-1H Helicopter, Electronic Countermeasure.

This is a reprint of change 11.

CHANGE
NO. 11

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 June 1989

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

For

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
809 blank/810	809 blank/810
811/812	811/812
812.1 and 812.2	812.1 and 812.2
812.3 and 812.4	-----
813 and 814	813 and 814
863 and 864	863 and 864
-----	864.1/864.2 through 864.4
875 through 878	875 through 878
889 and 890	889 and 890
893 and 894	893 and 894
947 and 948	947 and 948
951 and 952	951 and 952
1165 through 1167/1168	1165 through 1167/1168
1249/1250	1249/1250
1353 and 1354	1353 and 1354
1359 and 1360	1359 and 1360
1371 and 1372	1371 and 1372
1379 and 1380	1379 and 1380
1399 and 1400	1399 and 1400
1403 and 1404	1403 and 1404
1409 and 1410	1409 and 1410
1417/1418	1417/1418
1419 through 1422	1419 through 1422
1425 and 1426	1425 and 1426

Remove pages	Insert pages
1453 and 1454	1453 and 1454
1457 and 1458	1457 and 1458
1477 and 1478	1477 and 1478

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for All UH-1 Series Aircraft and EH-1 Helicopter, Electronic Countermeasure.

CHANGE No. 10

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 20 September 1988

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
811 and 812	811 and 812
829 and 830	829 and 830
853/854	853/854
855 and 856	855 and 856
859 and 860	859 and 860
875 through 878	875 through 878
889 through 894	889 through 894
917 and 918	917 and 918
957 and 958	957 and 958
969 and 970	969 and 970
993 and 994	993 and 994
997 through 1001/1002	997 through 1001/1002
1003 and 1004	1003 and 1004
1007 and 1008	1007 and 1008
1013 through 1016	1013 through 1016
1023 and 1024	1023 and 1024
1045 and 1046	1045 and 1046
1123 and 1124	1123 and 1124
1187 through 1189/1190	1187 through 1189/1190
1207 through 1210	1207 through 1210
1351 through 1354	1351 through 1354
1365/1366	1365/1366
1367 and 1368	1368
1371 and 1372	1371 and 1372
1377 and 1378	1377 and 1378
1381 and 1382	1381 and 1382
1399 through 1401/1402	1399 through 1401/1402
1412	1412
1413/1414	1413/1414
1415 through 1417/1418	1415 through 1417/1418

Remove pages	Insert pages
1429 and 1430	1429 and 1430
1433 through 1436	1433 through 1436
1439 and 1440	1439 and 1440
1453 and 1454	1453 and 1454
1473 and 1474	1473 and 1474
1477 through 1479/1480	1477 through 1479/1480
1481 through 1483/1484	1481 through 1483/1484
1499 and 1500	1499 and 1500
1503 through 1505/1506	1503 through 1505/1506
1507 and 1508	1507 and 1508
1519 and 1520	1519 and 1520
1523 through 1528	1523 through 1528
1531 through 1533/1534	1531 through 1533/1534
1535 and 1536	1535 and 1536
1629 through 1632	1629 through 1632
1663 through 1665/1666	1663 through 1665/1666
1669/1670	1669/1670
1671 and 1672	1671 and 1672
1695 through 1698	1695 through 1698

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for All UH-1 Series Aircraft.

This is a REPRINT of the current Change 9.

CHANGE }
NO. 9 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 22 August 1988

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
811 and 812	811 and 812
1023 through 1026	1023 through 1026
1037 through 1044	1037 through 1044
1359 through 1363/1364	1359 through 1363/1364
1439 through 1446	1439 through 1446
1461 through 1463/1464	1461 through 1463/1464
1465 and 1466	1465 and 1466

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for UH-1 C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

CHANGE
NO. 8

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 21 July 1987

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
810 through 812	810 through 812
- - -	812.1 through 812.2
813 and 814	813 and 814
- - -	918.1 and 918.2
919 and 920	919 and 920
- - -	976.1 through 976.8
977 and 978	977 and 978
1025 and 1026	1025 and 1026
1027/1028	1027/1028
1029 and 1030	1029 and 1030
1073 and 1074	1073 and 1074
- - -	1074.1 and 1074.2
1075 through 1078	1075 through 1078
- - -	1078.1/1078.2
1079 through 1082	1079 through 1082
1091 through 1096	1091 through 1096
1121 through 1126	1121 through 1126
1149 and 1150	1149 and 1150
1151/1152	1151/1152
1153 and 1154	1153 and 1154
1179/1180	1179/1180
1181 and 1182	1181 and 1182
1203 and 1204	1203 and 1204
1205/1206	1205/1206
1207 and 1208	1207 and 1208
1235 and 1236	1235 and 1236
- - -	1236.1 through 1236.6
1237 and 1238	1237 and 1238

Remove pages	Insert pages
1359 through 1364	1359 through 1363
1403 through 1407	1403 through 1406
1408 through 1410	1408 through 1410
1411 and 1412	1412
1419 through 1422	1419 through 1422
1447 through 1450	1447 through 1450
1451/1452	1451/1452
1453 and 1454	1453 and 1454
1455/1456	1455/1456
1457 and 1458	1457 and 1458
1501/1502	1501/1502
1503 and 1504	1503 and 1504
1609 through 1612	1609 through 1612
1613/1614	1613/1614
1615 and 1616	1615 and 1616
- - -	1616.1/1616.2
1617 through 1620	1617 through 1620

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31 AVUM and AVIM Maintenance Requirements for UH-1B/C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

CHANGE
NO. 7

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 June 1987

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8826 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
895 and 896	895 and 896
- - -	896.1/(896.2)
897 through 900	897 through 900
901 and 902	902
- - -	902.1/(902.2)
903 through 906	903 through 906
- - -	906.1/(906.2)
907 through 910	907 through 910
911 and 912	912
945 through 950	945 through 950
- - -	950.1/(950.2)
951 through 976	951 through 976
1003 through 1008	1003 through 1008
1009 and 1010	1010
1011/(1012)	1011/(1012)
1013 through 1016	1013 through 1016
1019 and 1020	1019 and 1020
1021/(1022)	1021/(1022)
1025 and 1026	1025 and 1026
1037 and 1038	1037 and 1038
1041 and 1042	1041 and 1042

Remove pages	Insert pages
1073 through 1076	1073 through 1076
1095 and 1096	1095 and 1096
1101 through 1104	1101 through 1104
1107 through 1114	1107 through 1114
1117/(1118)	1117/(1118)
1119 through 1122	1119 through 1122
- - -	1122.1/(1122.2)
1123/(1124)	1123/(1124)
1125 and 1126	1125 and 1126
1127/(1128)	1127/(1128)
1129 and 1130	1129 and 1130
1137 and 1138	1137 and 1138
1139/(1140)	1139/(1140)
1141 and 1142	1141 and 1142
1143/(1144)	1143/(1144)
1145 and 1146	1145 and 1146
1147/(1148)	1147/(1148)
1149 and 1150	1149 and 1150
1151/(1152)	1151/(1152)
1211 and 1212	1211 and 1212
1215 and 1216	1215 and 1216
1367 and 1368	1367 and 1368
1371 and 1372	1371 and 1372
1419 through 1422	1419 through 1422

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for UH-1C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

URGENT

TM 55-1520-210-23P-2
C 6

CHANGE
NO. 6

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 9 October 1986

Aviation Unit and Intermediate Maintenance
Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
1501/1502	1501/1502

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31 AVUM and AVIM Maintenance Requirements for UH-1B/C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

CHANGE
No. 5

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 22 July 1985

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
---	810 through 813
814 through 902	814 through 902
902.1 and 902.2	---
903 through 1071/1072	903 through 1071/1072
1072.1 through 1072.8	---
1073 through 1229/1230	1073 through 1229/1230
1230.1 through 1230.10	---
1231 through 1273	1231 through 1273/1274
1274 through 1337	---
1337 through 1502	1338 through 1502
1502.1 through 1502.4	---
1503 through 1725/1726	1503 through 1726
---	1727 through 1735

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

DONALD J. DELANDRO
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational, Direct Support, and General Support Maintenance requirements for UH-1B Helicopter, Utility; UH-1C Helicopter, Utility; UH-1H Helicopter, Utility; UH-1M Helicopter, Utility; EH-1H Helicopter, Electronic Countermeasure; and UH-1V Helicopter, Utility aircraft.

CHANGE
No. 4

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 30 March 1984

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) for HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below.

	Remove pages	Insert pages
Section II	882 thru 884	882 thru 884
	1703 thru 1724	1703 thru 1724.22
	1725	1725

2. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

3. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

ROBERT M. JOYCE
Major General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational Maintenance requirements for UH-1B, UH-1C/M, UH-1D/H and EH-1H aircraft.

'HANGE
NO. 3

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 9 October 1982

Aviation Unit and Intermediate Maintenance
Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)
FOR
HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL) UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below.

Remove pages	Insert pages
917 thru 920	917 thru 920
925 thru 934	925 thru 934
971 and 972	971 and 972
981 and 982	981 and 982
1015 thru 1018	1015 thru 1018
1021 and 1022	1021 and 1022
1025 thru 1032	1025 thru 1032
1035 thru 1038	1035 thru 1038
1041 thru 1052	1041 thru 1052
1130	1130
1135 and 1136	1135 and 1136
1147 and 1148	1147 and 1148
1151 and 1152	1151 and 1152

2. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

3. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

ROBERT M. JOYCE
Major General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational Maintenance Requirements for UH-1B, UH-1C/M, UH-1D/H and EH-1H aircraft.

CHANGE
No. 2

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 5 April 1982

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) FOR HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL) UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below.

Remove pages	Insert pages
925 and 926	925 and 926
975 and 976	975 and 976
987 and 988	987 and 988
1234	1234
1238 thru 1240	1238 thru 1240
1353 and 1354	1353 and 1354
1383 and 1384	1383 and 1384
1441 and 1442	1441 and 1442
1711 thru 1714	1711 thru 1714

2. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

3. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

ROBERT M. JOYCE
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational Maintenance Requirements for UH-1B, UH-1C/M, UH-1D/H, and EH-1H aircraft.

CHANGE }
No. 1 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 January 1982

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

for

HELICOPTER, UTILITY - TACTICAL TRANSPORT

UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V
NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-2, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below.

	Remove pages	Insert pages
Section II	814	814
	850 thru 860	850 thru 860
	863 thru 866	863 thru 866
	875 and 876	875 and 876
	898 thru 902	898 thru 902.2
	919 thru 924	919 thru 924
	929 thru 932	929 thru 932
	943 and 944	943 and 944
	959 thru 962	959 thru 962
	971 and 972	971 and 972
	981 and 982	981 and 982
	1057 and 1058	1057 and 1058
	1061 and 1062	1061 and 1062
	1071 and 1072	1071 thru 1072.8
	1081 and 1082	1081 and 1082
	1093 and 1094	1093 and 1094
	1195 thru 1202	1195 thru 1202
	1227 thru 1230	1227 thru 1230.10
	1256 thru 1258	1256 thru 1258
	1371 and 1372	1371 and 1372
	1444 thru 1448	1444 thru 1448
	1457 thru 1460	1457 thru 1460
	1474	1474
	1477 and 1478	1477 and 1478
	1492 thru 1498	1492 thru 1498
	-	1502.2 thru 1502.4
	1527 thru 1530	1527 thru 1530

Remove pages	Insert pages
1540 thru 1542	1540 thru 1542
1549 and 1550	1549 and 1550
1568 thru 1570	1568 thru 1570
1623 and 1624	1623 and 1624
1665 and 1666	1665 and 1666

2. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

3. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

ROBERT M. JOYCE
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational Maintenance requirements for UH-1B, UH-1C/M, UH-1D/H, and EH-1H aircraft.

TECHNICAL MANUAL

No. 55-1520-210-23P-2

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., *27 February 1981*

AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

Current as of 3 November 1980

NOTE:

This manual is printed in three volumes as follows:

TM 55-1520-210-23P-1, consisting of Table of Contents, Section I, and Section II (Functional Groups 02 thru 06).

TM 55-1520-210-23P-2, consisting of Section II (Functional Groups 07 thru 14).

TM 55-1520-210-23P-3, consisting of Section II (Functional Groups 16 thru 60), Section III, and Section IV.

The Table of Contents, Sections I, and IV are applicable to the -1, -2, and -3.

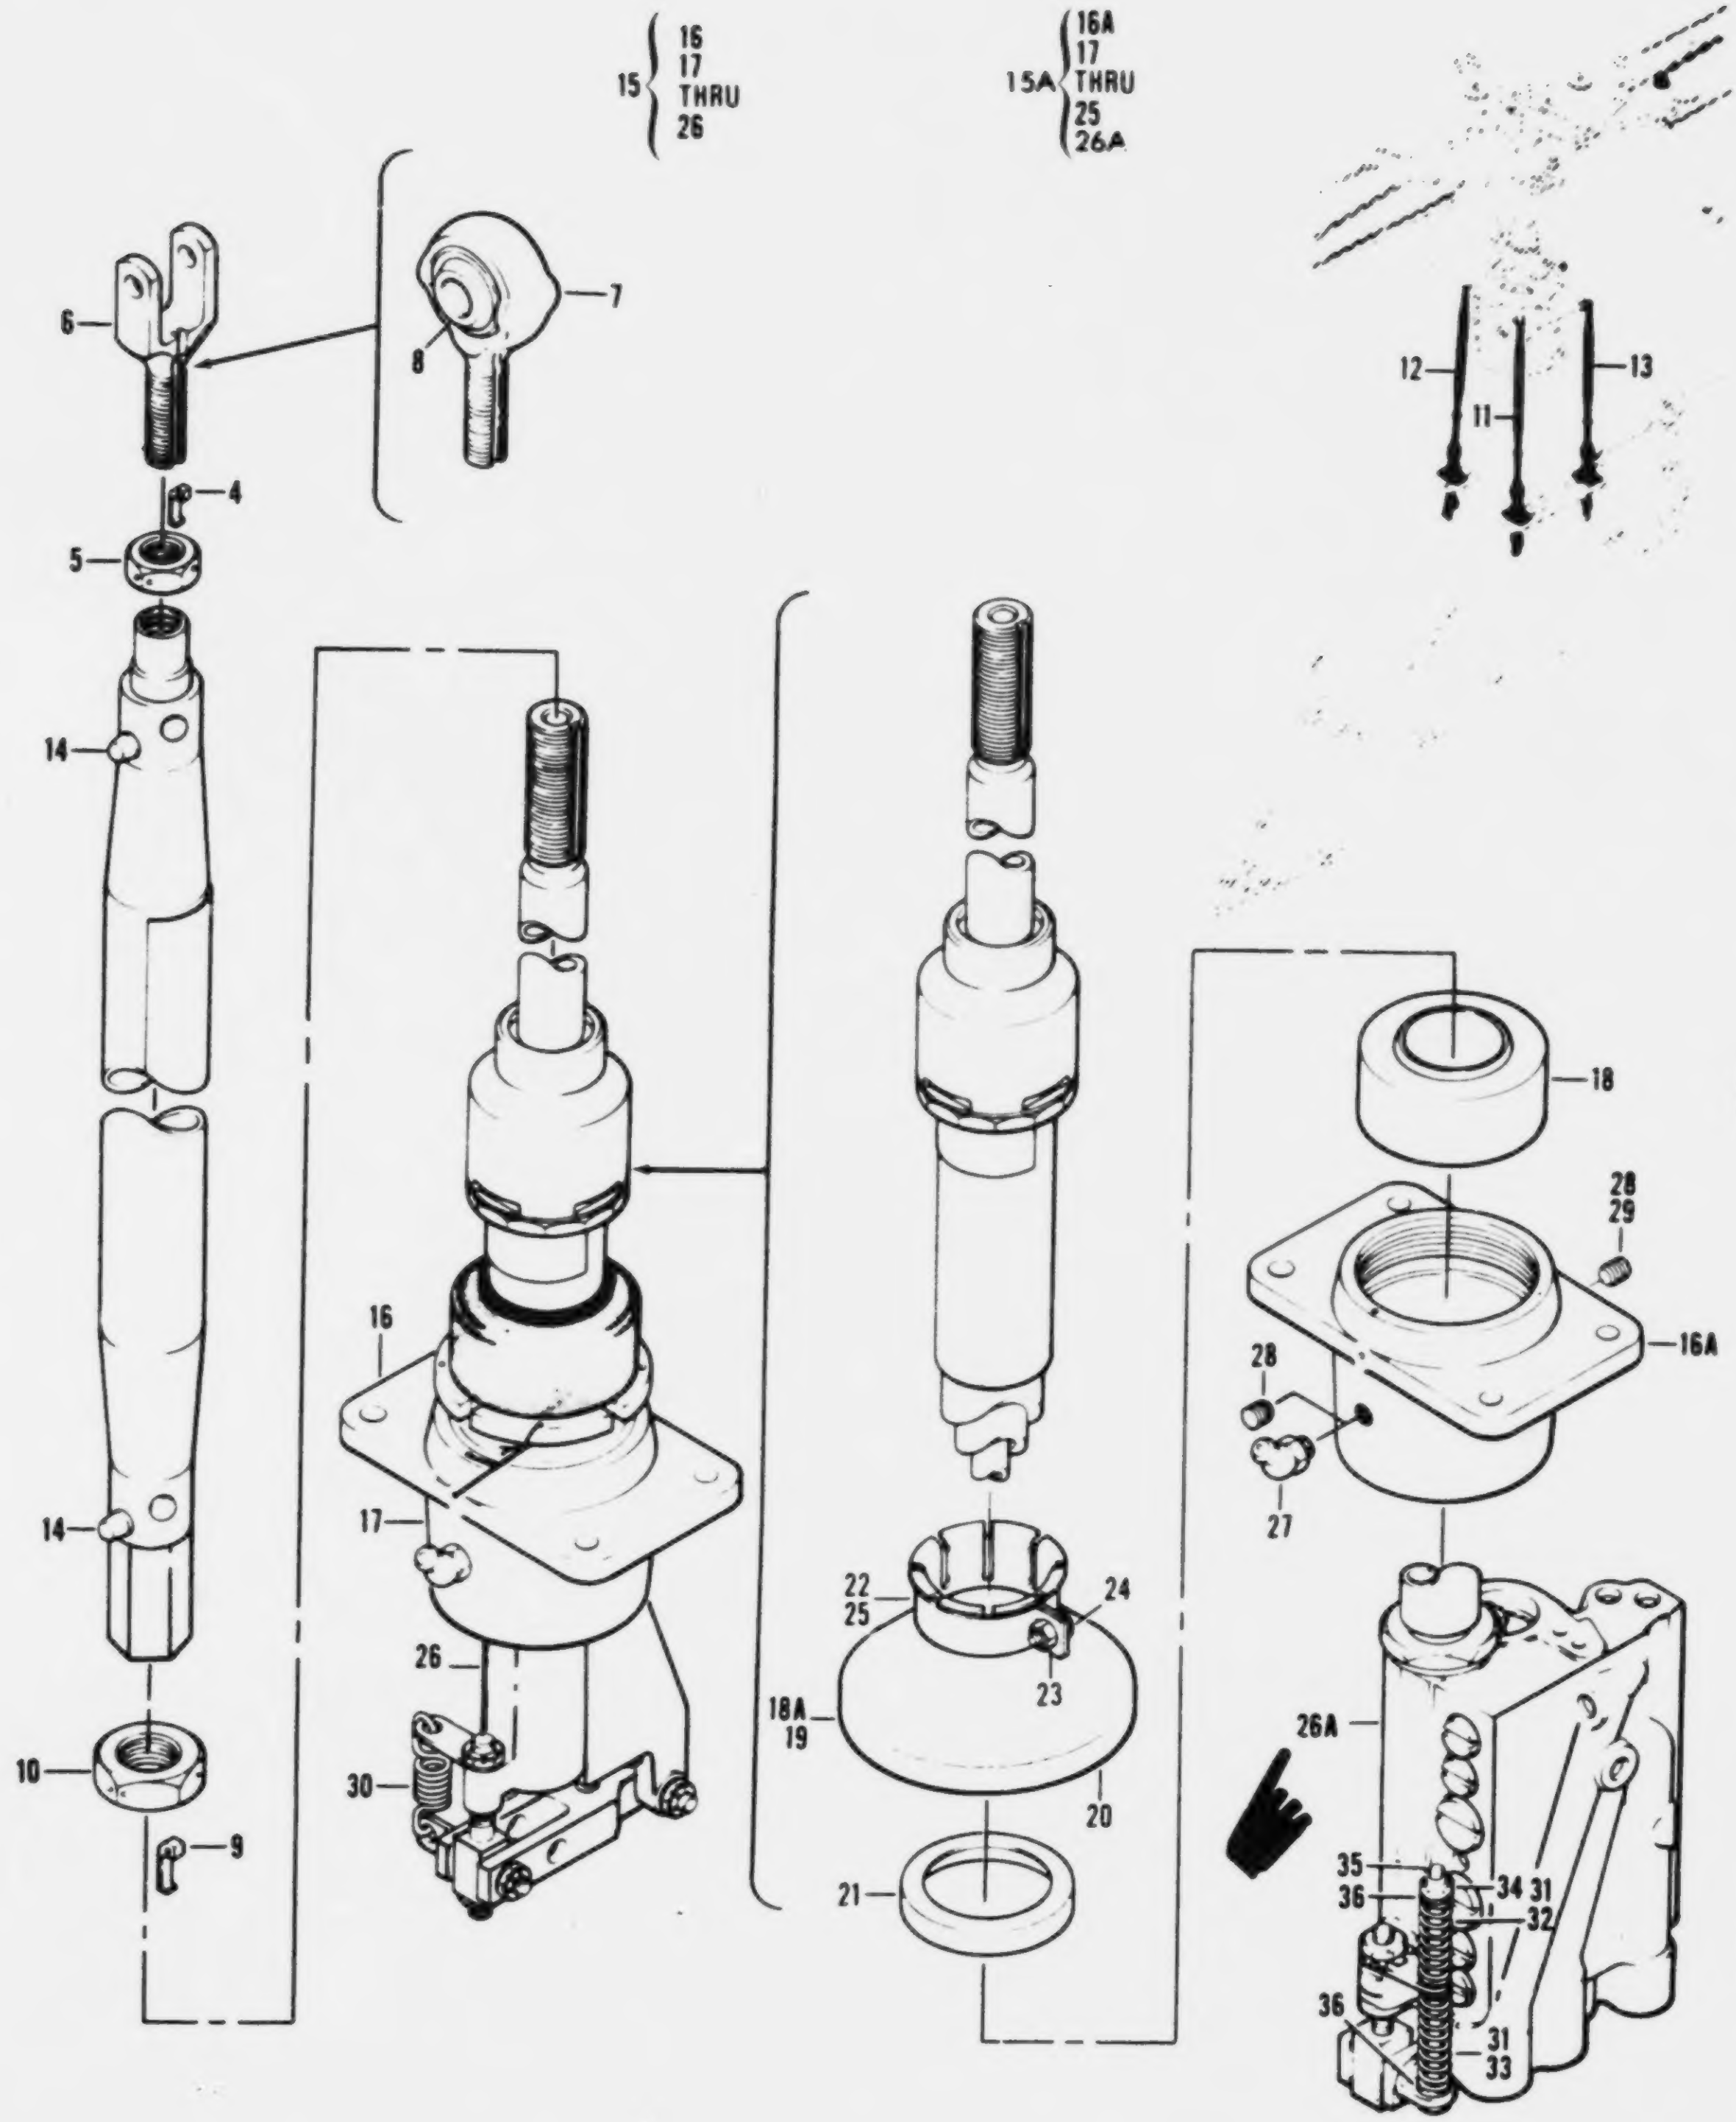
15 { 16 17 THRU 26
15A { 16A 17 THRU 25 26A
1
2
3
4
5
6
7
8
9
10
11
12
13
14
14
16
16A
17
18
18A
19
20
21
22
23
24
25
26
26A
27
28
28
29
30
31
31
32
33
34
35
36
36

Figure 185 Cylinder Assembly, Cyclic Flight Control Hydraulic

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS		
						DELETED		
185		A0000		97499	204-076-511-17	CYLINDER ASSEMBLY SEE FIG 361 FOR NHA UHM	EA	1
						DELETED :		
185		A0000		97499	204-076-511-19	CYLINDER ASSEMBLY SEE FIG 347 FOR NHA UHM	EA	1
						DELETED		
185		A0000		97499	204-076-511-21	CYLINDER ASSEMBLY SEE FIG 347 FOR NHA UHM	EA	1
185	4	PAOZZ	5340-00-621-8318	80205	NAS559-4	.LOCK,ROD END UHM	EA	1
185	5	PBOZZ	5310-00-582-8173	80205	NAS509-9	NUT,PLAIN,HEXAGON UHM	EA	1
						DELETED		
185	6	PAOZZ		97499	204-076-268-101	.CLEVIS,ROD END UHM	EA	1
185	7	PAOZZ	3120-01-030-3383	97499	204-076-426-5	.BEARING,PLAIN,ROD E U/O 204-076-511-17,-19,-21 UHM	EA	1
185	8	XAOZZ	3120-00-775-1847	97499	540-011-415-1	.BEARING,PLAIN,SELF-ALIGNING UHM	EA	1
185	9	PAOZZ	5340-00-716-4661	80205	NAS559-6	.LOCK,ROD END UHM	EA	1
						DELETED		
185	10	PAOZZ	5310-00-872-1267	97499	204-076-316-1	.NUT,PLAIN,HEXAGON U/O 204-076-511-17,-19,-2 UHM	EA	1
						DELETED		
185	11	PAOZZ	3040-00-872-1271	97499	204-076-068-1	.CONNECTING LINK,RIG U/O 204-076-511-17 UHM	EA	1
						DELETED.		
185	12	PAOZZ	3040-00-872-1273	97499	204-076-068-3	.TUBE ASSY,CONNECTIN U/O 204-076-511-19 UHM	EA	1
						DELETED		
185	13	PAOFF	3040-00-872-1272	97499	204-076-068-5	.CONNECTING LINK,RIG U/O 204-076-511-21 UHM	EA	1
185	14	PAFZZ	5320-00-579-5076	80205	NAS528A8	..COLLAR,GROOVED PIN- UHM	EA	4
						DELETED		
185	15B	PAODD	1650-01-016-3572	97499	204-076-511-9	.SERVOCYLINDER U/O 204-076-511-17,-19,-21 UHM	EA	1
						.DELETED		
185	16A	PAFZZ	1650-00-164-4260	97499	204-076-317-7	..HOUSING,BEARING U/O 204-076-511-9 UHM	EA	1
185	17	PAFZZ	1650-00-109-4854	97499	204-076-202-7	..NUT ASSY,HYDRAULIC UHM	EA	1
185	18	PAFZZ	3120-00-106-8873	50632	KSP6099-1	..BEARING,PLAIN,SELF-ALIGNING UHM	EA	3
185	18A	PAOZZ	1650-01-028-0451	50632	KSP9046-5	.SHIELD,CYLINDER RPLS-- PN KSP9046-1 NSN 1650-00-148-9076 UHM	EA	1
185	19	A0000		50632	KSP9046-3	.SHIELD ASSY UHM	EA	1
185	20	XAOZZ		50632	KSP9059	...SHIELD CYLINDER UHM	EA	1
185	21	PAOZZ	5330-01-028-8236	50632	KSP9056	...PACKING,PREFORMED UHM	EA	1
185	22	A0000		50632	KSP9055-1	...CLAMP ASSY UHM	EA	1
185	23	PAOZZ	5310-00-844-3302	96906	MS21043-3	....NUT,SELF-LOCKING,EX UHM	EA	1
185	24	PAOZZ	5306-00-156-2336	88044	AN3C3A	....BOLT,MACHINE UHM	EA	1
185	25	PAOZZ	5340-01-028-8233	50632	KSP9055-3	....CLAMP ASSEMBLY UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
185	26	XAOFF		97499	204-076-052-9	..SERVOCYLINDER HYDRAULIC,SEE FIG.186 FOR BREAKDOWN OF 204-076-052-9 (41000870) U/O PN 205-076-099-7 ....UHE,UHH,UHV,UHX	EA	1
185	26A	XAOFF		97499	204-076-003-5	..SERVOCYLINDER HYDRAULIC,SEE FIG.187 FOR BREAKDOWN OF 204-076-003-5 (41000310-001) U/O PN 204-076-511-9.....UHM	EA	1
185	27	PAOZZ	4730-00-172-0028	96906	MS15003-4	..FITTING,LUBRICATION U/O 205-076-099-7 & 204-076-511-9 ....UHM	EA	1
185	28	PAOZZ	5365-00-999-2368	97945	1604-129Y	..PLUG,MACHINE THREAD U/O 205-076-099-7......UHE,UHH,UHV,UHX	EA	V
185	29	PAOZZ	4730-00-188-3493	88044	AN932D2	..PLUG,PIPE U/O PN 205-076-056-105, 205-076-099-5........UHM	EA	1
185	30	PAOZZ	5360-00-675-1228	97499	204-076-192-1	.SPRING,HELICAL,EXTE U/O PN 205-076-056-105 ....UHE,UHH,UHV,UHX	EA	1
185	31	PAOZZ	5360-00-943-2575	97499	204-076-399-1	.SPRING,HELICAL,COMP U/O PN 204-076-511-17 & -19.........UHM	EA	2
185	32	PAOZZ	5360-00-943-2575	97499	204-076-399-1	.SPRING,HELICAL,COMP U/O PN 204-076-511-21...............UHM	EA	1
185	33	PAOZZ	5360-00-937-7540	97499	204-076-500-1	.SPRING,HELICAL,COMP U/O PN 204-076-511-21...............UHM	EA	1
185	34	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX U/O 204-076-511-17,-19,-21..........UHM	EA	1
185	35	PAOZZ	5306-00-638-5777	88044	AN3H36A	.BOLT,MACHINE U/O 204-076-511-17,-19,-21.................UHM	EA	1
185	36	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O 204-076-511-17,-19,-21..................UHM	EA	4

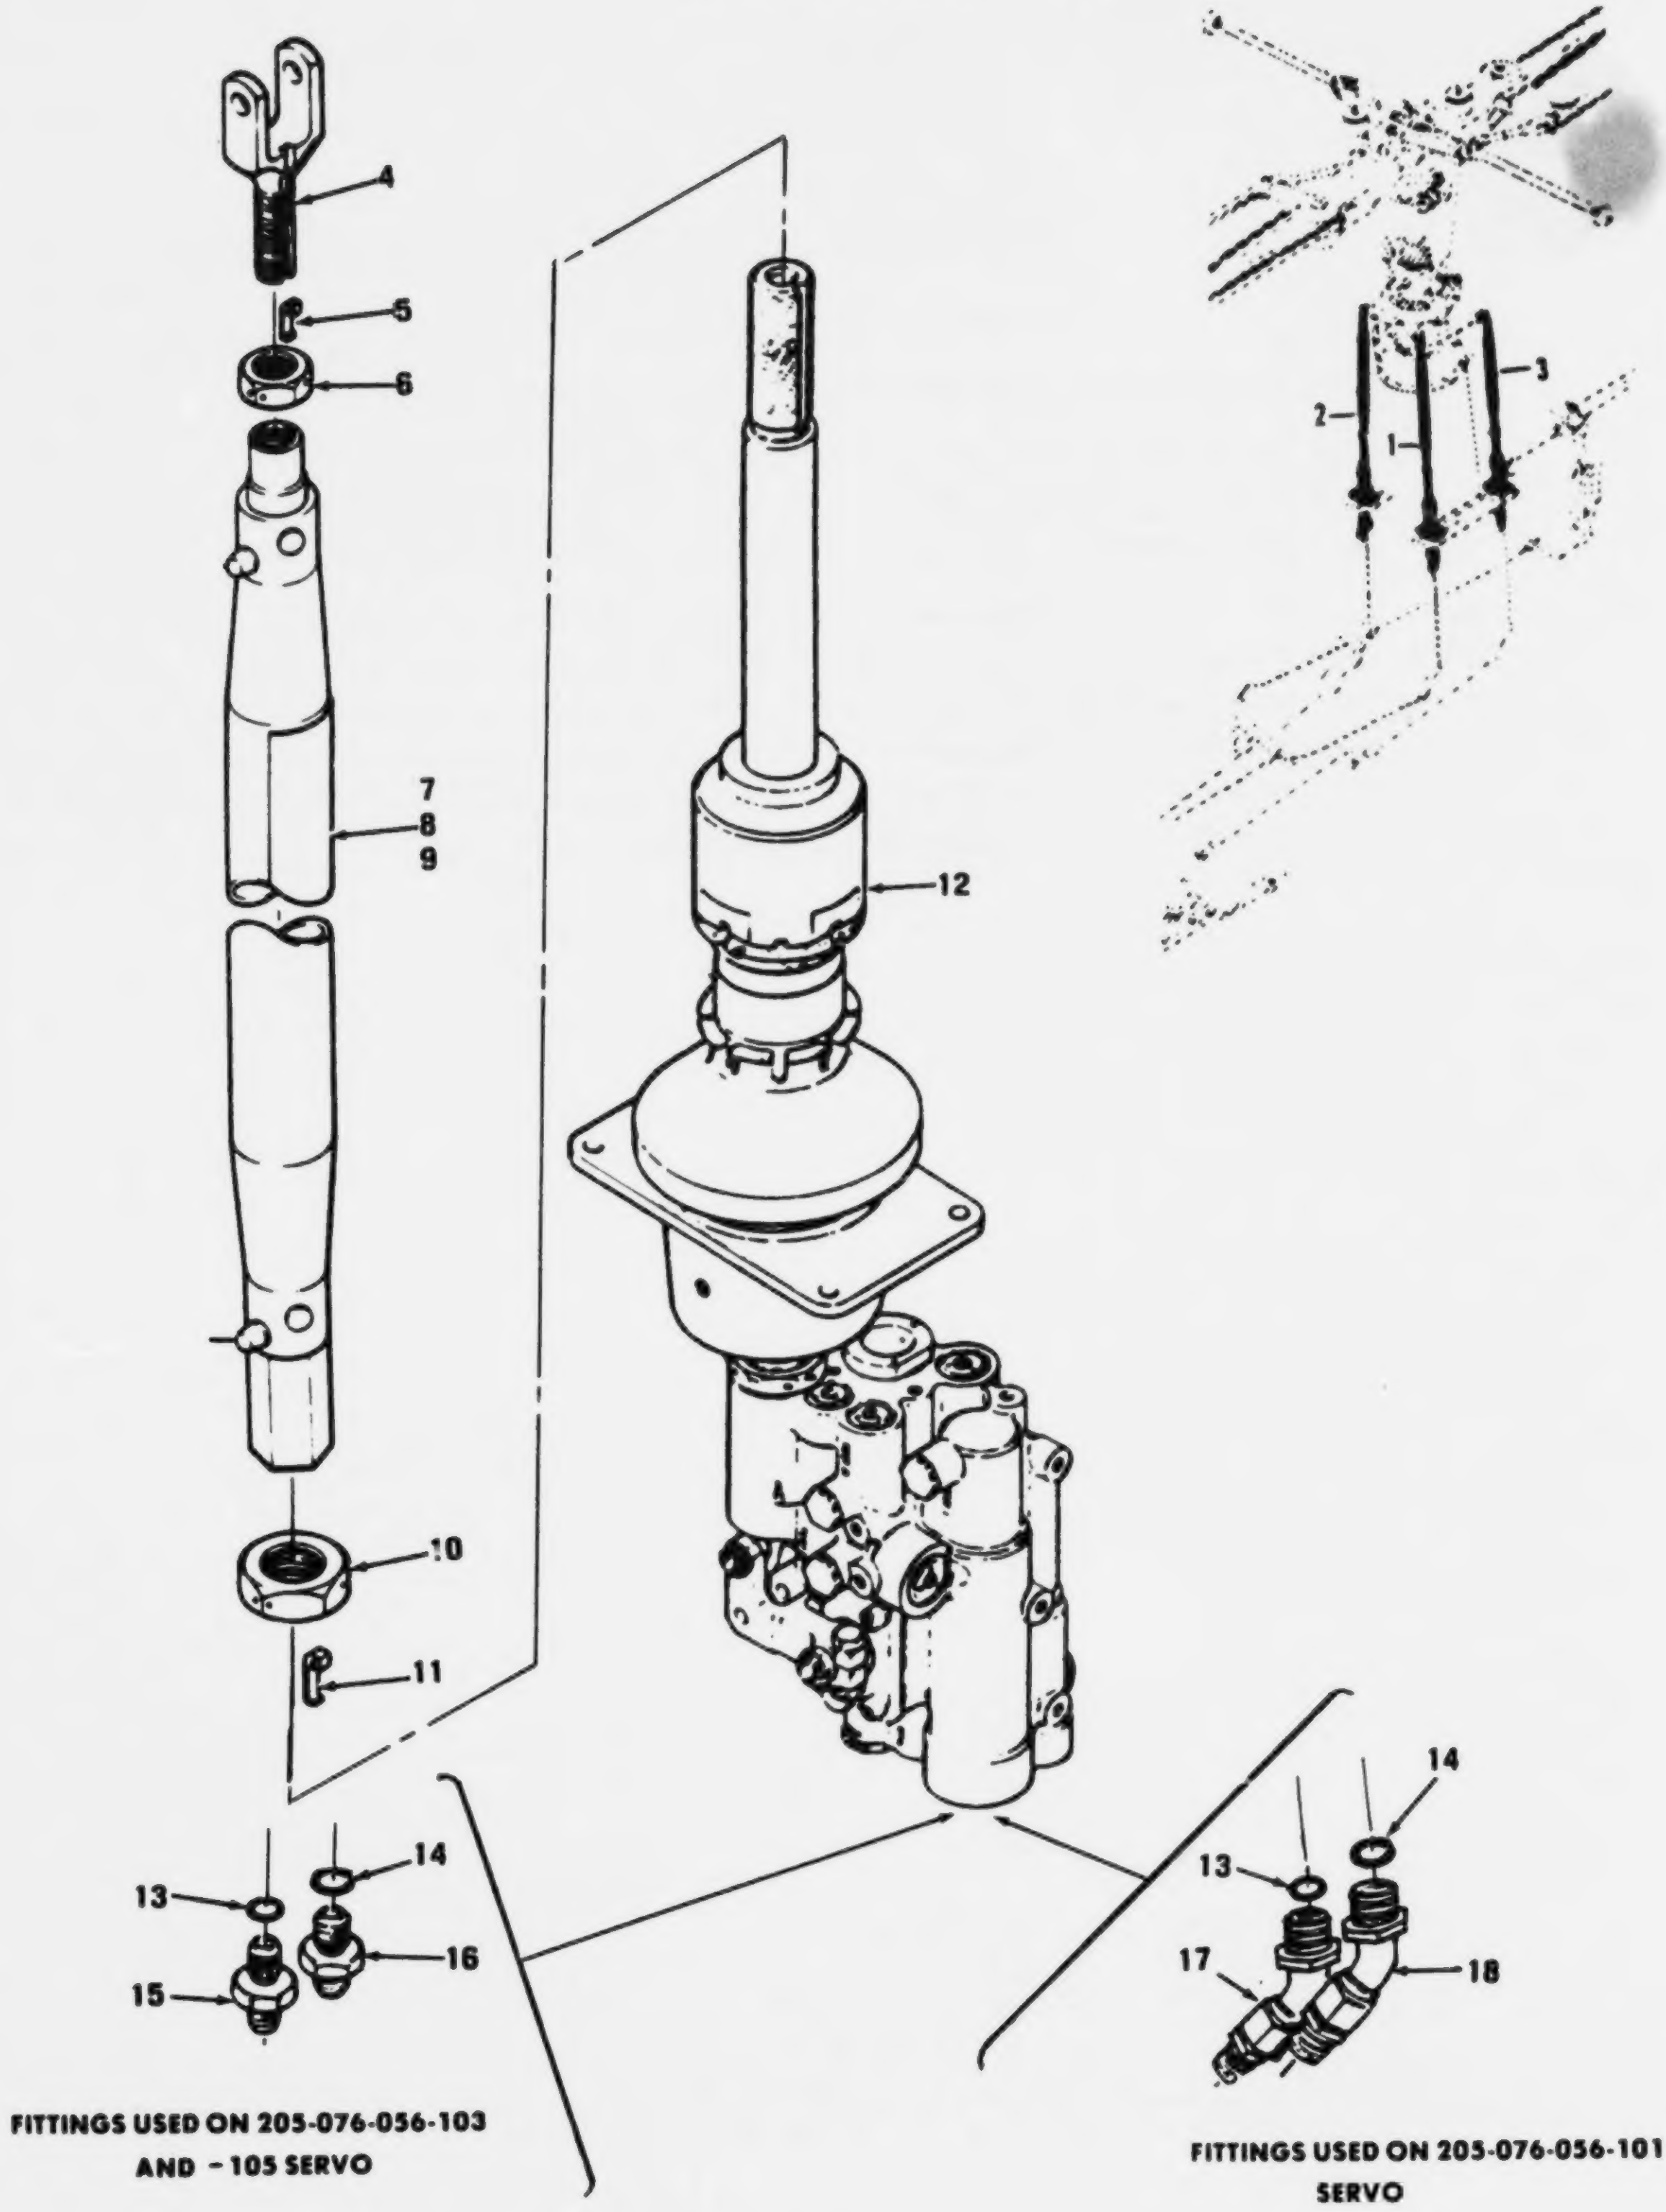
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
13
14
17
18
FITTINGS USED ON 205-076-056-103
AND -105 SERVO
FITTINGS USED ON 205-076-056-101
SERVO

Figure 185A Cylinder, Servo — Hydraulic.

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS		
185A		PADDD		97499	205-076-055-101	.CYLINDER,SERVO-HYDRAULIC (VENDOR P/N 41000970-001) ....UHE,UHH,UHV,UHX	EA	1
185A	1	PADZZ	1650-01-196-3619	81873	41001957	.RETAINER,SERVOCYLIN..........UHE,UHH,UHV,UHX	EA	3
185A	2	PADZZ	1650-00-013-8111	81873	42581	.CAP,VALVE..........UHE,UHH,UHV,UHX	EA	3
185A	3	PADZZ	5330-00-584-0265	96906	MS28775-012	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	9
185A	4	PAFZZ	5330-00-582-2133	96906	MS28775-011	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	4
185A	5	PADZZ	1650-00-975-7128	81873	42576	.SEAT,VALVE..........UHE,UHH,UHV,UHX	EA	4
185A	6	PADZZ	1650-01-010-5945	81873	41001728	.POPPET,VALVE,SERVOC..........UHE,UHH,UHV,UHX	EA	4
185A	7	PADZZ	5360-00-959-6020	81873	42579	.SPRING,HELICAL,COMP..........UHE,UHH,UHV,UHX	EA	4
185A	8	PAFZZ	4810-01-079-5521	81873	41001727	.GUIDE,VALVE,CHECK..........UHE,UHH,UHV,UHX	EA	4
185A	9	PADZZ	5310-00-782-8369	80205	NAS620C5L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
185A	10	PADZZ	1650-01-195-7780	81873	41001938	.RETAINER,ACCUMULATO..........UHE,UHH,UHV,UHX	EA	1
185A	11	PADZZ	1650-01-196-3613	81873	41001939	.GUIDE,PISTON,ACCUMU..........UHE,UHH,UHV,UHX	EA	1
185A	12	PADZZ	5330-00-585-7723	96906	MS28775-020	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
185A	13	PADZZ	5310-01-196-3640	81873	41001937	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
185A	14	PADZZ	5360-01-079-4585	81873	41001154	.SPRING,HELICAL,COMP..........UHE,UHH,UHV,UHX	EA	1
185A	15	PAFZZ	5360-01-079-4586	81873	41101151	.SPRING,HELICAL,COMP..........UHE,UHH,UHV,UHX	EA	1
185A	16	PADZZ	1650-01-079-5582	81873	41001124	.PISTON,HYDRAULIC AC..........UHE,UHH,UHV,UHX	EA	1
185A	17	PAFZZ	5330-01-024-9797	72902	711A3MR-160A-T	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
185A	18	PADZZ	1650-01-195-7779	81873	41001935	.RETAINER,CONTROL VA..........UHE,UHH,UHV,UHX	EA	1
185A	19	PADZZ	1650-01-195-7778	81873	41001934	.PLUG,CONTROL VALVE..........UHE,UHH,UHV,UHX	EA	1
185A	20	PADZZ	5330-00-551-8441	96906	MS28775-019	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
185A	21	PAFZZ	5310-00-897-6145	96906	MS21083C4	.NUT,SELF-LOCKING,HE..........UHE,UHH,UHV,UHX	EA	1
185A	22	PADZZ	5310-00-549-3447	81873	41001582	.WASHER,KEYWAY..........UHE,UHH,UHV,UHX	EA	1
185A	23	PADZZ	5310-01-195-7880	81873	41001936	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
185A	24	PADZZ	5330-00-616-1920	96906	MS28775-017	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	4
185A	25	PADZZ		81873	41001933	.SHIM..........UHE,UHH,UHV,UHX	EA	V
185A	26	PADZZ		81873	41001929	.SPOOL & SLEEVE ASSY..........UHE,UHH,UHV,UHX	EA	1
185A	27	PADZZ	5360-00-330-0078	81873	42571	.SPRING,HELICAL,COMP..........UHE,UHH,UHV,UHX	EA	1
185A	28	PADZZ	5365-00-246-4545	81873	41100363-001	.SHIM..........UHE,UHH,UHV,UHX	EA	V
185A	29	PADZZ	1650-00-072-8941	81873	42584	.SELECTOR SET,DIRECT..........UHE,UHH,UHV,UHX	EA	1
185A	30	PADZZ	5330-00-055-2923	81873	42567	.RETAINER,PACKING..........UHE,UHH,UHV,UHX	EA	1
185A	31	PAFZZ	1650-01-196-3621	81873	41001946	.RETAINER,THERMAL RE..........UHE,UHH,UHV,UHX	EA	1
185A	32	PADZZ	1650-00-072-5078	81873	42592	.CAP-RETAINER,SEQUEN..........UHE,UHH,UHV,UHX	EA	1
185A	33	PADZZ	5330-00-584-1840	96906	MS28775-014	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
185A	34	PADZZ	5340-00-927-7828	81873	42597	.DISK,SOLID,PLAIN..........UHE,UHH,UHV,UHX	EA	V
185A	35	PADZZ	5360-00-072-5080	81873	42593	.SPRING,HELICAL,COMP..........UHE,UHH,UHV,UHX	EA	1
185A	36	PADZZ	1650-00-945-3953	81873	42610	.DISK AND SEAT,VALVE..........UHE,UHH,UHV,UHX	EA	1
185A	37	PADZZ	1650-01-196-3620	81873	41001958	.RETAINER,VALVE..........UHE,UHH,UHV,UHX	EA	1
185A	38	PAFZZ	5330-00-579-8108	96906	MS28775-111	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
185A	39	PADZZ	1650-00-975-7122	81873	42559	.CAP,VALVE..........UHE,UHH,UHV,UHX	EA	1
185A	40	PADZZ	1650-00-953-5005	81873	42558	.SELECTOR SET,DIRECT..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
185A	41	PADZZ	1650-00-975-7132	81873	42557	.RETAINER,HELICAL CO	UHE,UHH,UHV,UHX	EA	1
185A	42	PADZZ	5360-00-330-0849	81873	42556	.SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
185A	43	PAFZZ	5310-01-196-3641	81873	41001945	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
185A	44	PAFZZ	5365-00-242-8891	81873	41000667	.PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	3
185A	45	PAFZZ	5330-00-803-7208	96906	MS28778-2	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	3
185A	46	PAFZZ	5305-00-566-6413	80205	NAS1351C4H8	.SCREW,CAP,SOCKET HE	UHE,UHH,UHV,UHX	EA	4
185A	47	PADZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	1
185A	48	PAFZZ	5310-00-785-1755	96906	MS17825-3	.NUT,SELF-LOCKING,SL	UHE,UHH,UHV,UHX	EA	1
185A	49	PADZZ	5305-01-196-3644	81873	41001956	.SCREW,SHOULDER	UHE,UHH,UHV,UHX	EA	1
185A	50	ADDDD	1650-01-196-3622	81873	41001947	.CRANK ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
185A	51	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER	UHE,UHH,UHV,UHX	EA	2
185A	52	PAFZZ	5310-00-961-8390	96906	MS17825-4	..NUT,SELF-LOCKING,SL	UHE,UHH,UHV,UHX	EA	1
185A	53	PAFZZ	5310-00-226-3911	96906	MS17826-4	..NUT,SELF-LOCKING,SL	UHE,UHH,UHV,UHX	EA	1
185A	54	PADZZ	5306-00-182-1525	88044	AN4CH7	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
185A	55	PADZZ	1650-01-196-3627	81873	41001955	..LEVER,INPUT	UHE,UHH,UHV,UHX	EA	1
185A	56	PADZZ	5365-01-047-3219	81873	41002499-001	..SHIM	UHE,UHH,UHV,UHX	EA	V
185A	57	PADZZ		81873	41002499-002	..SHIM	UHH,UHV,UHE,UHX	EA	V
185A	58	PADZZ	5365-01-047-8327	81873	41002499-003	..SHIM	UHE,UHH,UHV,UHX	EA	V
185A	59	PADZZ	5365-01-047-3221	81873	41002499-004	..SHIM	UHE,UHH,UHV,UHX	EA	V
185A	60	PADZZ	1650-01-196-3625	81873	41001951	..SHAFT ASSEMBLY,CRAN	UHE,UHH,UHV,UHX	EA	1
185A	61	XDFZZ		81873	82005527-005	..PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
185A	62	PAFZZ	3110-00-105-4100	70854	38HDB	..BEARING,BALL,DUPLEX	UHE,UHH,UHV,UHX	EA	1
185A	63	PADZZ	1650-01-196-3624	81873	41001949	..SPACER,CRANK ASSEMB	UHE,UHH,UHV,UHX	EA	1
185A	64	PADZZ	5365-01-195-3639	81873	41001954	..SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
185A	65	PAFZZ	5330-01-048-3278	25220	S32216	..RETAINER,PACKING	UHE,UHH,UHV,UHX	EA	1
185A	66	PAFZZ	5330-00-584-1840	96906	MS28775-014	..PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
185A	67	PADDD	1650-01-196-3623	81873	41001948	..HOUSING,CRANK ASSEM	UHE,UHH,UHV,UHX	EA	1
185A	68	PAFZZ	5330-01-196-3637	72902	7024MR-160	.SEAL,PLAIN ENCASED	UHE,UHH,UHV,UHX	EA	1
185A	69	PAFZZ		80205	NAS81885	.PLUG,PROTECTIVE	UHE,UHH,UHV,UHX	EA	1
185A	70	PAFZZ	5365-00-287-0093	88044	AN814-4DL	.PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	2
185A	71	PAFZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
185A	72	PAFZZ	1650-00-072-5081	81873	42588	.FILTER ELEMENT,FLUI	UHE,UHH,UHV,UHX	EA	2
185A	73	PAFZZ	5330-00-584-0266	96906	MS28775-010	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
185A	74	PADDD	1650-01-195-7777	81873	41004873	.HOUSING ASSY,SERVO	UHE,UHH,UHV,UHX	EA	1
185A	75	PAFZZ	5340-00-291-3484	96906	MS124695	..INSERT,SCREW THREAD	UHE,UHH,UHV,UHX	EA	4
185A	76	XDDZZ		92555	156001	..PLUG ASSEMBLY,SEALI	UHE,UHH,UHV,UHX	EA	2
185A	77	PAFZZ	5340-00-570-3734	92555	187001	..PLUG ASSEMBLY,SEALI	UHE,UHH,UHV,UHX	EA	7
185A	78	PADZZ	5935-00-003-5630	92555	218001	..LEE PLUG SET	UHE,UHH,UHV,UHX	EA	3
185A	79	PAFZZ	5330-00-559-6182	96906	MS28775-211	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
185A	80	PAFZZ	9905-01-195-7845	81873	41004949	.PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	1
185A	81	ADDDD		81873	41004948	.CYLINDER ASSY	UHE,UHH,UHV,UHX	EA	1
185A	82	PADZZ	5310-00-404-5683	81873	100641-1	..WASHER,KEY	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U M	(8) QTY INC IN UNIT
185A	1	A0000		97499	205-076-056-101	SERVO ASSEMBLY, SEE FIG. 203A AND FIG. 361 FOR NHA	UHE,UHH,UHV,UHX	EA	1
185A	2	A0000		97499	205-076-056-103	SERVO ASSEMBLY, SEE FIG. 203A AND FIG. 362 FOR NHA	UHE,UHH,UHV,UHX	EA	1
185A	3	A0000		97499	205-076-056-105	SERVO ASSEMBLY, SEE FIG. 203A AND FIG. 346 FOR NHA	UHE,UHH,UHV,UHX	EA	1
185A	4	PAOZZ	5340-00-989-2983	97499	204-076-268-1	.CLEVIS, ROD END	UHE,UHH,UHV,UHX	EA	1
185A	5	PAOZZ	5340-00-621-8318	80205	NAS559-4	.LOCK, ROD END	UHE,UHH,UHV,UHX	EA	1
185A	6	PBOZZ	5310-00-582-8173	80205	NAS509-9	.NUT, PLAIN, HEXAGON	UHE,UHH,UHV,UHX	EA	1
185A	7	PAOZZ	3040-00-982-8221	97499	204-076-267-1	.CONNECTING LINK, RIG U/O PN 205-076-056-101	UHE,UHH,UHV,UHX	EA	1
185A	8	PAOZZ	3040-00-982-7507	97499	204-076-267-3	.CONNECTING LINK, RIG U/O PN 205-076-056-103	UHE,UHH,UHV,UHX	EA	1
185A	9	PAOZZ	3040-00-982-8222	97499	204-076-267-5	.CONNECTING LINK, RIG U/O PN 205-076-056-105	UHE,UHH,UHV,UHX	EA	1
185A	10	PAOZZ	5310-00-208-5405	80205	NAS509-14	.NUT, PLAIN, HEXAGON	UHE,UHH,UHV,UHX	EA	1
185A	11	PAOZZ	5340-00-716-4661	80205	NAS559-6	.LOCK, ROD END	UHE,UHH,UHV,UHX	EA	1
185A	12	PAODD	1650-01-187-9395	97499	205-076-056-107	.SERVO CYLINDER	UHE,UHH,UHV,UHX	EA	1
185A	13	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING, PREFORMED	UHE,UHH,UHV,UHX	EA	1
185A	14	PAOZZ	5330-00-833-7491	96906	MS28778-5	.PACKING, PREFORMED	UHE,UHH,UHV,UHX	EA	1
185A	15	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE, TUBE U/O PN 205-076-056-103, -105	UHE,UHH,UHV,UHX	EA	1
185A	16	PAOZZ	4730-00-640-7213	96906	MS21902D5	.NIPPLE, TUBE U/O PN 205-076-056-103, -105	UHE,UHH,UHV,UHX	EA	1
185A	17	PAOZZ	4730-00-554-9180	96906	MS21907-J4	.ELBOW U/O PN 205-076-056-101	UHE,UHH,UHV,UHX	EA	1
185A	18	PAOZZ		96906	MS21907-J5	.ELBOW U/O PN 205-076-056-101	UHE,UHH,UHV,UHX	EA	1

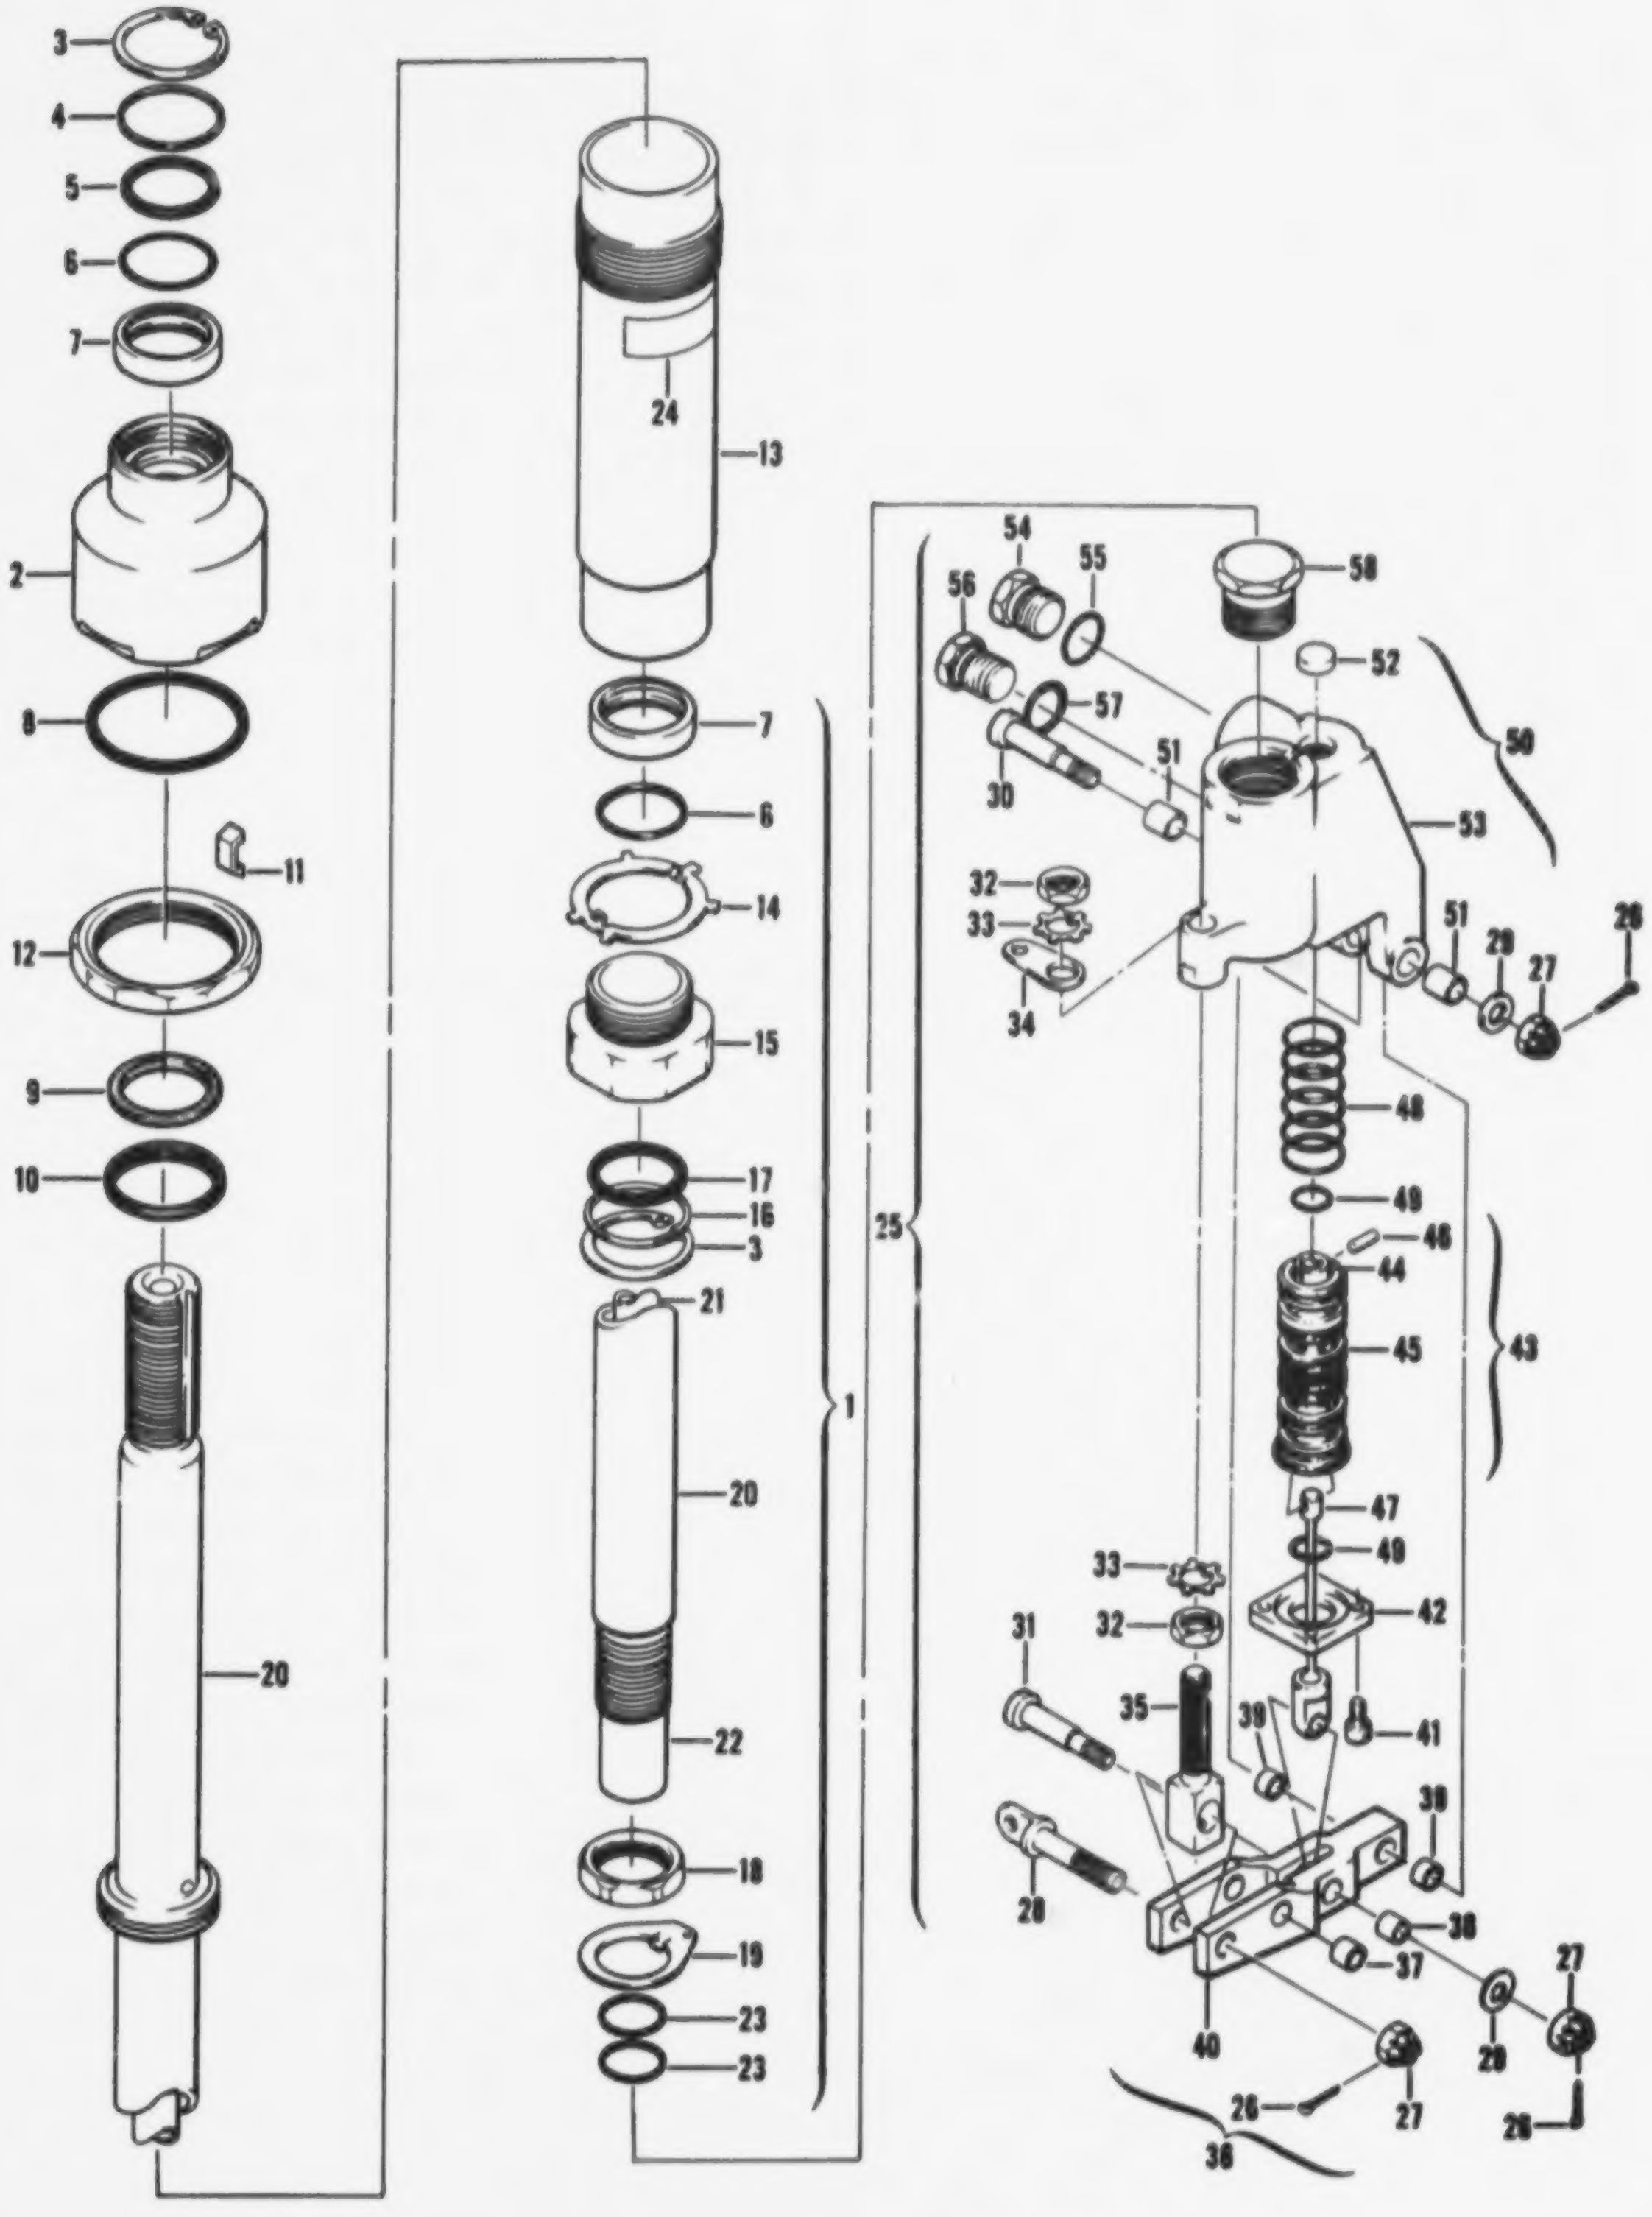
3
4
5
6
7
2
8
11
12
9
10
20
24
13
7
6
14
15
17
16
3
21
20
22
18
19
23
23
1
25
54
55
56
58
52
57
51
30
50
53
32
33
34
51
29
27
26
48
49
46
44
45
43
47
49
33
32
42
31
35
39
41
39
28
38
37
40
29
27
27
26
26
36

Figure 186. Servo Cylinder, hydraulic

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
186		XAOFF		97499	204-076-052-9	SERVOCYLINDER BREAKDOWN FOR PN 204-076-052-9 (41000870) SEE FIG 185 FOR NHA.......UHB,UHE,UHH,UHV,UHX	EA	1
186	1	XAOFF		81873	41000275	.CYLINDER ASSEMBLY.......UHB,UHE,UHH,UHV,UHX	EA	1
186	2	PAFZZ	1650-C0-908-6151	81873	100678-1	..CAP,LINEAR ACTUATIN.......UHB,UHE,UHH,UHV,UHX	EA	1
186	3	PAFZZ	5365-00-804-3892	96906	MS16625-1131	..RING,RETAINING.......UHB,UHE,UHH,UHV,UHX	EA	2
186	4	PAFZZ	5365-00-973-0479	81873	100631	..SPACER,RING.......UHB,UHE,UHH,UHV,UHX	EA	1
186	5	PAFZZ	1650-00-574-5075	97820	S11065-9T	..RING,WIPER.......UHB,UHE,UHH,UHV,UHX	EA	1
186	6	PAFZZ	5330-00-579-3163	96906	MS28775-214	..PACKING,PREFORMED.......UHB,UHE,UHH,UHV,UHX	EA	2
186	7	PAFZZ	1650-00-945-9314	97820	S11589-214	..STRIP,CAP,PACKING.......UHB,UHE,UHH,UHV,UHX	EA	2
186	8	PAFZZ	5330-00-641-3407	96906	MS28775-224	..PACKING,PREFORMED.......UHB,UHE,UHH,UHV,UHX	EA	1
186	9	PAFZZ	5330-00-054-8652	81873	105886	..PACKING,PREFORMED.......UHB,UHE,UHH,UHV,UHX	EA	1
186	10	PAFZZ	5330-00-955-9622	81873	100647	..PACKING,PREFORMED.......UHB,UHE,UHH,UHV,UHX	EA	1
186	11	PAFZZ	1650-00-932-5153	81873	105883	.KEY,HYDRAULIC SERVO CYLINDER.......UHB,UHE,UHH,UHV,UHX	EA	1
186	12	PAFZZ	5310-00-222-9254	81873	41000607	..NUT,PLAIN,ROUND.......UHB,UHE,UHH,UHV,UHX	EA	1
186	13	PAFZZ	1650-00-866-6029	81873	100679	..CYLINDER,SERVO ASSE.......UHB,UHE,UHH,UHV,UHX	EA	1
186	14	PAFZZ	5310-00-932-7732	81873	105873	..WASHER,KEY.......UHB,UHE,UHH,UHV,UHX	EA	1
186	15	PAFZZ	1650-00-944-4436	81873	100621-1	..CAP,LINEAR ACTUATIN.......UHB,UHE,UHH,UHV,UHX	EA	1
186	16	PAFZZ	5365-00-973-0479	81873	100631	..SPACER,RING.......UHB,UHE,UHH,UHV,UHX	EA	1
186	17	PAFZZ	1650-00-574-5075	97820	S11065-9T	..RING,WIPER.......UHB,UHE,UHH,UHV,UHX	EA	1
186	18	PAFZZ	5310-00-975-9397	81873	100624	..NUT,PLAIN,HEXAGON.......UHB,UHE,UHH,UHV,UHX	EA	1
186	19	PAFZZ	5310-00-404-5683	81873	100641-1	..WASHER,KEY.......UHB,UHE,UHH,UHV,UHX	EA	1
186	20	PAFFF	1650-00-956-9938	81873	1006[illegible]5	..PISTON,LINEAR ACTUA.......UHB,UHE,UHH,UHV,UHX	EA	1
186	21	XAFZZ		81873	100615-1	...ROD,PISTON.......UHB,UHE,UHH,UHV,UHX	EA	1
186	22	XAFZZ		92555	281002	...PLUG.......UHB,UHE,UHH,UHV,UHX	EA	1
186	23	PAFZZ	5330-00-559-6182	96906	MS28775-211	.PACKING,PREFORMED.......UHB,UHE,UHH,UHV,UHX	EA	2
186	24	XDFZZ	9905-00-168-3250	81873	41000268	.PLATE,IDENT.......UHB,UHE,UHH,UHV,UHX	EA	1
186	25	PAFFF	1650-00-134-3085	81873	41000267	.SERVO HEAD ASSY HYDRAULIC.......UHB,UHE,UHH,UHV,UHX	EA	1
186	26	PAFZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER.......UHB,UHE,UHH,UHV,UHX	EA	3
186	27	PAFZZ	5310-00-961-8390	96906	MS17825-4	..NUT,SELF-LOCKING,SL.......UHB,UHE,UHH,UHV,UHX	EA	3
186	28	PAFZZ	5306-00-638-2225	88044	AN43B13	..BOLT,EYE.......UHB,UHE,UHH,UHV,UHX	EA	1
186	29	PAFZZ	5310-00-531-9515	88044	AN960C416	..WASHER,FLAT.......UHB,UHE,UHH,UHV,UHX	EA	2
186	30	PAFZZ	5305-00-229-3663	81873	41000337	..SCREW,SHOULDER.......UHB,UHE,UHH,UHV,UHX	EA	1
186	31	PAFZZ	5305-00-229-3662	81873	41000262	..SCREW,SHOULDER.......UHB,UHE,UHH,UHV,UHX	EA	1
186	32	PAFZZ	5310-00-596-8422	88044	AN316-5R	..NUT,PLAIN,HEXAGON.......UHB,UHE,UHH,UHV,UHX	EA	2
186	33	MFFZZ		81873	100337	..WASHER,KEY.......UHB,UHE,UHH,UHV,UHX	EA	2
186	34	PAFZZ	1650-00-980-9506	81873	100640	..CLIP.......UHB,UHE,UHH,UHV,UHX	EA	1
186	35	PAFZZ	5306-00-851-5630	81873	100348	..BOLT,EYE.......UHB,UHE,UHH,UHV,UHX	EA	1
186	36	PAFFF	1650-00-229-6675	81873	41000265	..LEVER ASSY,SERVO HY.......UHB,UHE,UHH,UHV,UHX	EA	1
186	37	PAFZZ	3120-01-024-2537	81873	100633-2	...BEARING.......UHB,UHE,UHH,UHV,UHX	EA	2
186	38	PAFZZ	3120-00-457-9892	81873	41000259-002	...BEARING,SLEEVE.......UHB,UHE,UHH,UHV,UHX	EA	2
186	39	PAFZZ	3120-00-485-0716	81873	41000284-002	...BEARING,SLEEVE.......UHB,UHE,UHH,UHV,UHX	EA	2
186	40	XAFZZ		81873	41000256	...LEVER.......UHB,UHE,UHH,UHV,UHX	EA	1
186	41	PAFZZ	5305-00-068-5398	96906	MS24673-1	..SCREW,CAP,SOCKET.......UHB,UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
186	42	PAFZZ	1650-00-955-9617	81873	100592	..CAP,LINEAR ACTUATIN....................UHB,UHE,UHH,UHV,UHX	EA	1
186	43	PAFZZ	1650-00-236-6397	81873	41000248	..SELECTOR SET,SERVOC....................UHB,UHE,UHH,UHV,UHX	EA	1
186	44	XAFZZ		81873	105829	...SPOOL....................UHB,UHE,UHH,UHV,UHX	EA	1
186	45	XAFZZ		81873	41000247	...SLEEVE....................UHB,UHE,UHH,UHV,UHX	EA	1
186	46	PAFZZ	5315-00-847-5677	96906	MS16555-626	..PIN,STRAIGHT,HEA....................UHB,UHE,UHH,UHV,UHX	EA	1
186	47	PADZZ	1650-00-111-5363	81873	41000263	..DRIVE ROD,SERVOCYLI....................UHB,UHE,UHH,UHV,UHX	EA	1
186	48	PAFZZ	5330-00-618-1920	96906	MS28775-017	..PACKING,PREFORMED....................UHB,UHE,UHH,UHV,UHX	EA	6
186	49	PAFZZ	5330-00-954-1291	81873	41100354	..PACKING,PREFORME....................UHB,UHE,UHH,UHV,UHX	EA	2
186	50	PAFFF	1650-00-135-2585	81873	41000286	..HOUSING,SERVO,HYDRA....................UHB,UHE,UHH,UHV,UHX	EA	1
186	51	PAFZZ	3120-00-485-0716	81873	41000284-002	...BEARING,SLEEVE....................UHB,UHE,UHH,UHV,UHX	EA	2
186	52	XAFZZ		92555	281001	...PIN PLUG....................UHB,UHE,UHH,UHV,UHX	EA	1
186	53	XAFFF		81873	41000286-001	...HOUSING....................UHB,UHE,UHH,UHV,UHX	EA	1
186	54	PAFZZ	5340-00-292-3296	60995	SP4	..PLUG,PROTECTIVE,DUS....................UHB,UHE,UHH,UHV,UHX	EA	1
186	55	PAFZZ	5330-00-805-2966	96906	MS28778-4	..PACKING,PREFORMED....................UHB,UHE,UHH,UHV,UHX	EA	1
186	56	PAFZZ	5340-00-433-3254	60995	SP5	..PLUG,PROTECTIVE,DUS....................UHB,UHE,UHH,UHV,UHX	EA	1
186	57	PAFZZ	5330-00-833-7491	96906	MS28778-5	..PACKING,PREFORMED....................UHB,UHE,UHH,UHV,UHX	EA	1
186	58	PAFZZ	5340-00-630-3797	95760	WW12	..CAP-PLUG,PROTECT....................UHB,UHE,UHH,UHV,UHX	EA	1

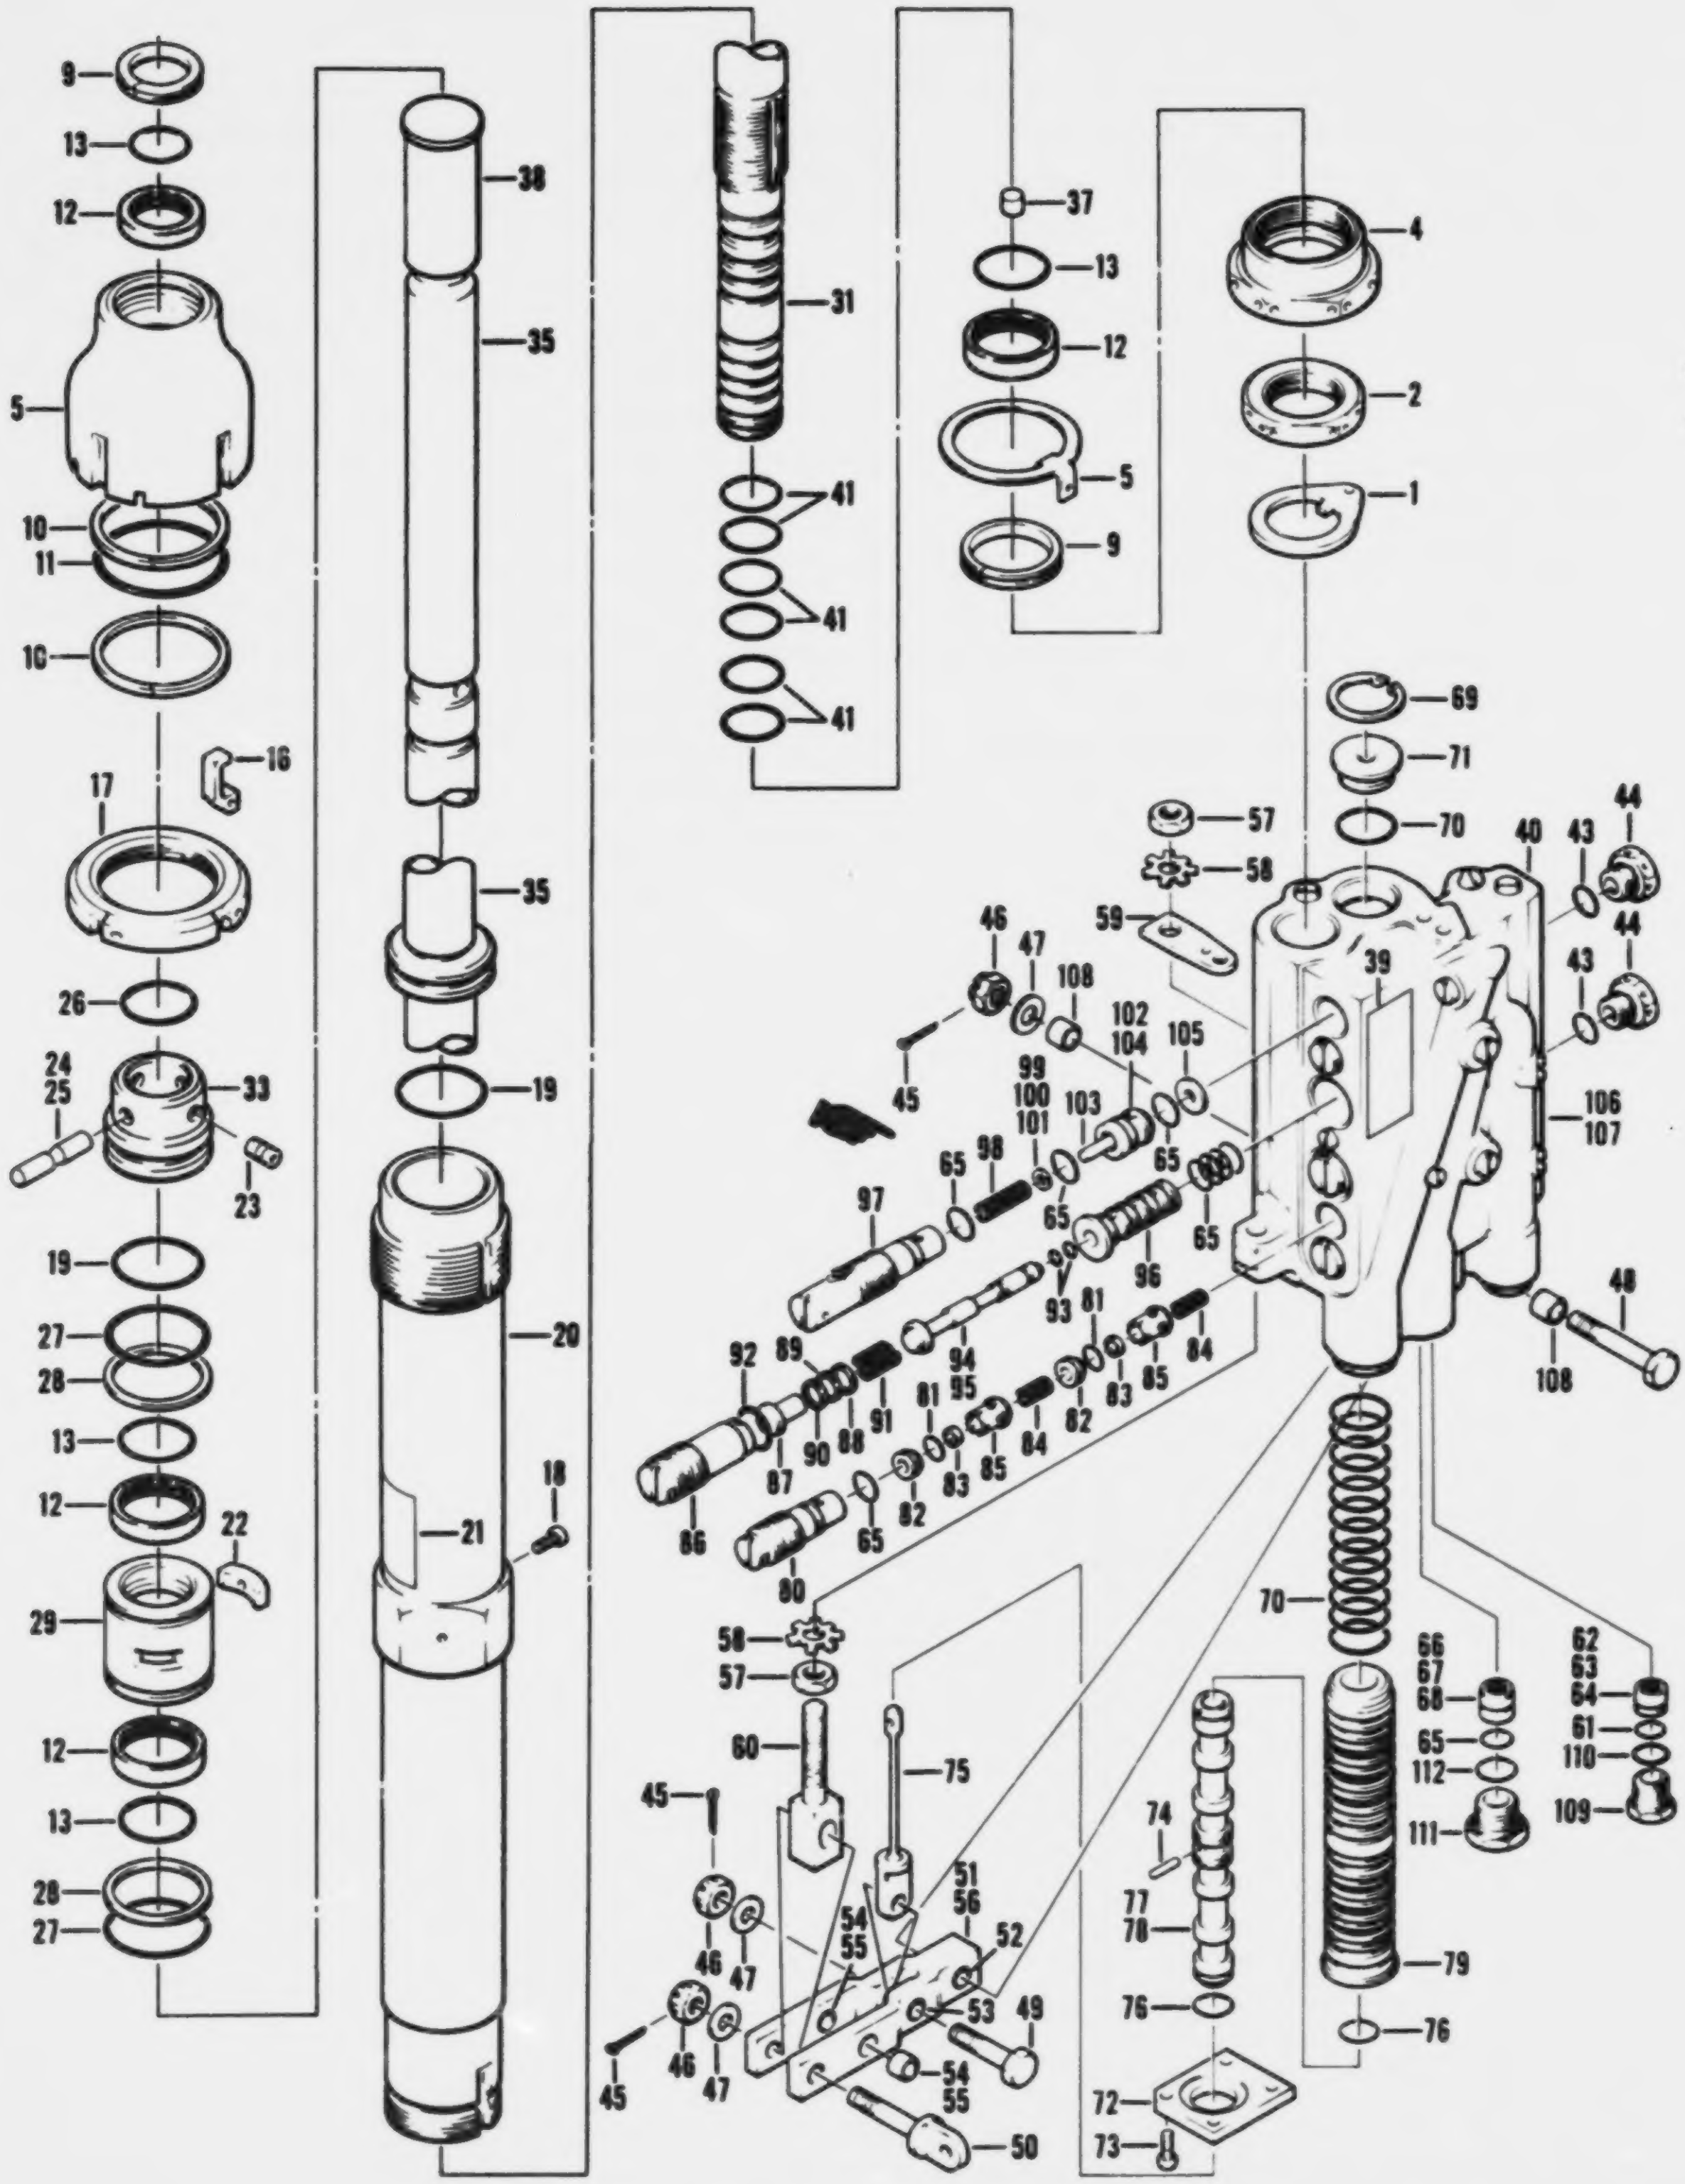
9
13
12
5
10
11
10
16
17
26
24
25
33
23
19
27
28
13
12
22
29
12
13
28
27
38
35
35
19
20
18
21
31
41
41
41
37
13
12
5
9
4
2
1
69
71
70
57
58
59
40
43
44
43
44
39
46
47
108
102
104
105
45
99
100
101
103
65
98
65
65
106
107
97
96
93
81
84
92
89
94
95
81
84
85
83
82
48
108
90
88
91
87
86
65
82
83
85
80
58
57
60
75
45
46
47
54
55
51
56
52
53
49
46
47
45
54
55
50
74
77
78
76
72
73
70
79
76
66
67
68
65
112
111
62
63
64
61
110
109

Figure 187. Servo Cylinder Assembly, Hydraulic

(1) ILLUSTRATION (A) 'IG. O.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
187		XADOO	1650-01-087-4285	97499	204-076-003-5	SERVOCYLINDER BREAKDOWN FOR PN 204-076-003-5 (41000310-001) SEE FIG 185 FOR NHA ..... UHC,UHM	EA	REF
'87		AFDOC		81873	41000311-001	.CYLINDER ASSEMBLY ..... UHC,UHM	EA	1
87		AFDOO		81873	41002997	..CYLINDER ASSEMBLY ..... UHC,UHM	EA	1
187	1	PADZZ	5310-00-638-0211	80205	NAS513-16	...WASHER,KEY ..... UHC,UHM	EA	1
187	2	PADZZ	5310-00-927-9544	81873	100336	...NUT,PLAIN,HEXAGON ..... UHC,UHM	EA	1
187	4	PADZZ	1650-01-018-1012	81873	41001128	...RETAINER,NUT ..... UHC,UHM	EA	1
187	5	PADZZ	5310-00-484-3964	81873	100330	...WASHER,KEY ..... UHC,UHM	EA	1
187	9	PADZZ	1650-01-018-0668	07060	CEC401-215-01	...RING,SCRAPER ..... UHC,UHM	EA	2
187	10	PADZZ	5330-00-848-9128	96906	MS28774-132	...RETAINER,PACKING ..... UHC,UHM	EA	2
187	11	PADZZ	5330-00-802-5905	96906	MS28775-132	...PACKING,PREFORME ..... UHC,UHM	EA	1
187	12	PADZZ	1650-00-995-2716	97820	S12562-215	...SEAL,CHANNEL ..... UHC,UHM	EA	4
187	13	PADZZ	5330-00-579-7911	96906	MS28775-215	...PACKING,PREFORMED ..... UHC,UHM	EA	4
187	15	PADZZ	1650-01-023-7356	81873	41001126	...CAP,CYLINDER ..... UHC,UHM	EA	1
187	16	PADZZ	5340-00-574-6018	80205	NAS559-3	...LOCK-ROD END ..... UHC,UHM	EA	1
187	17	PADZZ	5310-00-927-9547	81873	105835	...NUT,PLAIN,ROUND ..... UHC,UHM	EA	1
187	18	PADZZ	5305-00-411-7723	80205	NAS1352C08H6	...SCREW,CAP,SOCKET HE ..... UHC,UHM	EA	3
187	19	PADZZ	5330-01-010-4554	72902	721A7MR972P4	...PACKING,PREFORMED ..... UHC,UHM	EA	2
187	20	PADZZ	1650-00-931-2347	81873	10C328	...CYLINDER,ACTUATING, ... UHC,UHM	EA	1
187	21	XDOZZ		81873	41001215	....PLATE,IDENT ..... UHC,UHM	EA	1
187	22	PADZZ	1650-00-453-9520	81873	100332	...LOCK,RETAINER,SERVO CYLINDER,HYDRAULIC ..... UHC,UHM	EA	1
87	23	PADZZ	5305-00-104-2886	03038	LL57XE82J6HO	...SETSCREW ..... UHC,UHM	EA	1
187	24	PADZZ	5315-00-461-4350	81873	100325-1	...PIN,GROOVED,HEADLES ..... UHC,UHM	EA	1
187	25	PADZZ	5315-00-117-3179	81873	100325-11	...PIN,GROOVED,HEADLES ..... UHC,UHM	EA	1
187	26	PADZZ	5330-00-727-2637	96906	MS28775-023	...PACKING,PREFORMED ..... UHC,UHM	EA	1
187	27	PADZZ	5330-00-729-4992	96906	MS28775-027	...PACKING,PREFORME ..... UHC,UHM	EA	2
187	28	PADZZ	5330-00-477-6800	02697	8-027N300-9	...RETAINER,PACKING ..... UHC,UHM	EA	2
187	29	PADZZ	5330-00-456-6039	81873	100331	...RETAINER,PACKING ..... UHC,UHM	EA	1
187	31	PADOO	1650-01-015-7750	81873	41001182	...PISTON ASSY ..... UHC,UHM	EA	1
187	33	XADZZ		81873	41001199	....PISTON END ..... UHC,UHM	EA	1
187	35	XADZZ		81873	41001221	....ROD ASSY ..... UHC,UHM	EA	1
187	37	XADZZ		92555	PLGA2810020	.....PLUG ..... UHC,UHM	EA	4
187	38	PADZZ	5340-00-491-7583	99017	8104	...CAP,PROTECTIVE,DUST ..... UHC,UHM	EA	2
187	39	PADZZ	9905-01-018-5828	81873	41001155	..PLATE,IDENTIFICATIO ..... UHC,UHM	EA	1
187	40	PBDOO	1650-01-163-7597	81873	41000277	..HEAD ASSY,SERVO ..... UHC,UHM	EA	1
187	41	PADZZ	5330-00-618-0799	96906	MS28775-018	...PACKING,PREFORME ..... UHC,UHM	EA	6
187	43	PAFZZ	5330-00-805-2966	96906	MS28778-4	...PACKING,PREFORMED ..... UHC,UHM	EA	2
187	44	PAFZZ	5365-00-837-0856	96906	MS24391D4L	...PLUG,MACHINE THREAD ..... UHC,UHM	EA	2
187	45	PAFZZ	5315-00-815-1405	96906	MS24665-151	...PIN,COTTER ..... UHC,UHM	EA	3
187	46	PAFZZ	5310-00-961-8390	96906	MS17825-4	...NUT,SELF-LOCKING,SL ..... UHC,UHM	EA	3
187	47	PAFZZ	5310-00-531-9515	88044	AN960C416	...WASHER,FLAT ..... UHC,UHM	EA	3
187	48	PAFZZ	5305-00-229-3663	81873	41000337	...SCREW,SHOULDER ..... UHC,UHM	EA	1
187	49	PAFZZ	5305-00-229-3662	81873	41000262	...SCREW,SHOULDER ..... UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
187	50	PAFZZ	5306-00-638-2225	88044	AN43B13	...BOLT,EYE	UHC,UHM	EA	1
187	51	PAFFF	1650-00-454-8915	81873	41000257	...LEVER,MANUAL CONTRO	UHC,UHM	EA	1
187	52	PAFZZ	3120-00-485-0716	81873	41000284-002	....BEARING,SLEEVE	UHC,UHM	EA	2
187	53	PAFZZ	3120-00-457-9892	81873	41000259-002	....BEARING,SLEEVE	UHC,UHM	EA	2
187	54	PAFZZ	3120 00-956-2958	81873	100633	....BEARING,SLEEVE	UHC,UHM	EA	2
187	55	PAFZZ	3120-01-024-2537	81873	100633-2	....BEARING,SLEEVE	UHC,UHM	EA	2
187	56	XAFZZ		81873	41000258	....LEVER	UHC,UHM	EA	1
187	57	PAFZZ	5310-00-596-8422	88044	AN316-6R	...NUT,PLAIN,HEXAGON	UHC,UHM	EA	2
187	58	MFFZZ		81873	100337	...WASHER,KEY	UHC,UHM	EA	2
187	59	PAFZZ	1650-00-998-0148	81873	41100352	...CLIP,SERVOCYLINDER	UHC,UHM	EA	1
187	60	PAFZZ	5306-00-851-5630	81873	100348	...BOLT,EYE	UHC,UHM	EA	1
187	61	PADZZ	5330-00-584-0266	96906	MS28775-010	...PACKING, PREFORM	UHC,UHM	EA	1
187	62	PADZZ	1650-00-928-3888	81873	100345	...FILTER,FLUID PRESSURE	UHC,UHM	EA	1
187	63	XADZZ		81873	41862	....FILTER ELEMENT	UHC,UHM	EA	1
187	64	XADZZ		81873	100346	....RETAINER,FILTER	UHC,UHM	EA	1
187	65	PADZZ	5330-00-584-0265	96906	MS28775-012	...PACKING,PREFORMED	UHC,UHM	EA	17
187	66	PAFZZ	1650-00-072-6081	81873	42588	...FILTER ELEMENT,FLUI PRESSURE	UHC,UHM	EA	1
187	67	XAFZZ		81873	41862	....FILTER ELEMENT	UHC,UHM	EA	1
187	68	XADZZ		81873	42589	....SPOOL	UHC,UHM	EA	1
187	69	PADZZ	5365-00-771-7358	96906	MS16625-4093	...RING,RETAINING	UHC,UHM	EA	1
187	70	PADZZ	5330-00-618-0799	96906	MS28775-018	...PACKING,PREFORME	UHC,UHM	EA	13
187	71	PADZZ	5340-00-984-5669	81873	100322	...PLUG,PROTECTIVE,DUS	UHC,UHM	EA	1
187	72	PADZZ	5365-00-891-3208	81873	100323	...SPACER,PLATE	UHC,UHM	EA	1
187	73	PADZZ	5305-00-068-5398	96906	MS24673-1	...SCREW,CAP,SOCKET	UHC,UHM	EA	4
187	74	PADZZ	5315-00-456-6037	81873	100321	...PIN,STRAIGHT,HEADLE	UHC,UHM	EA	1
187	75	PADZZ	1650-00-453-9524	81873	41000256	...ROD,CONNECTOR DRIVE	UHC,UHM	EA	1
187	76	PADZZ	5330-00-458-2025	81873	41100358	...PACKING,PREFORMED	UHC,UHM	EA	2
187	77	PADZZ	1650-00-453-9522	81873	100315	...SELECTOR SET,DIRECT	UHC,UHM	EA	1
187	78	XADZZ		81873	100316	....SPOOL	UHC,UHM	EA	1
187	79	XADZZ		81873	100317	....SLEEVE	UHC,UHM	EA	1
187	80	PADZZ	1650-00-998-0150	81873	100327	...PLUG,SERVOCYLINDER	UHC,UHM	EA	2
187	81	PADZZ	5330-00-582-2133	96906	MS28775-011	...PACKING,PREFORMED	UHC,UHM	EA	4
187	82	PADZZ	1650-00-975-7128	81873	42576	...SEAT,VALVE	UHC,UHM	EA	4
187	83	PADZZ	1650-00-055-2922	81873	42577	...POPPET,VALVE	UHC,UHM	EA	4
187	84	PADZZ	5360-00-969-6020	81873	42579	...SPRING,HELICAL,COMP	UHC,UHM	EA	4
187	85	PADZZ	1650-00-179-6429	81873	42578-2	...SEAT,HELICAL COMPRE	UHC,UHM	EA	4
187	86	PADZZ	1650-00-998-0149	81873	100343	...PLUG,SERVOCYLINDER CYLINDER	UHC,UHM	EA	2
187	87	PADZZ	5315-00-929-1042	81873	100342	...PIN,SHOULDER,HEADED	UHC,UHM	EA	2
187	88	PADZZ	5365-00-457-9893	81873	41100334-001	...SHIM	UHC,UHM	EA	2
187	89	PADZZ	5365-00-664-2592	80063	6L58025-120	...SHIM	UHC,UHM	EA	2
187	90	PADZZ	5310-00-461-4361	81873	41100334-003	...WASHER,FLAT	UHC,UHM	EA	V
187	91	PADZZ	5360-00-485-9756	81873	100341	...SPRING,HELICAL,COMP	UHC,UHM	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
187	92	PAFZZ	5330-00-684-3419	96906	MS28775-016	...PACKING,PREFORMED	UHC,UHM	EA	2
187	93	PCDZZ	5330-00-292-0580	96906	MS28775-006	...PACKING,PREFORMED	UHC,UHM	EA	4
187	94	PADZZ	1650-00-928-3889	81873	100338	...SELECTOR SET,DIRECT	UHC,UHM	EA	2
187	95	XADZZ		81873	100340	....SPOOL	UHC,UHM	EA	1
187	96	XADZZ		81873	100339	....SLEEVE	UHC,UHM	EA	1
187	97	PADZZ	1650-00-998-0147	81873	100344	...PLUG,SERVOCYLINDER	UHC,UHM	EA	2
187	98	PADZZ	5360-00-462-3205	81873	100320	...SPRING,HELICAL,C	UHC,UHM	EA	2
187	99	PADZZ	5365-00-246-4545	81873	41100363-001	...SHIM	UHC,UHM	EA	V
187	100	PADZZ	5365-00-246-4543	81873	41100363-002	...SHIM	UHC,UHM	EA	V
187	101	PADZZ	5310-00-350-9674	81873	41100363-003	...WASHER,FLAT	UHC,UHM	EA	V
187	102	PADZZ	1650-00-072-8941	81873	42584	...SELECTOR SET,DIRECT	UHC,UHM	EA	2
187	103	XADZZ		81873	42569	....SLIDE,DIRECTIONAL	UHC,UHM	EA	1
187	104	XADZZ		81873	42568	....SLEEVE	UHC,UHM	EA	1
187	105	PADZZ	5330-00-065-2923	81873	42567	...RETAINER,PACKING	UHC,UHM	EA	2
187	106	PADDZ	1650-00-464-5771	81873	41000434	...HOUSING ASSY,SERVO CYLINDER	UHC,UHM	EA	1
187	107	XADZZ		81873	41000434-001	....HOUSING	UHC,UHM	EA	1
187	108	PAFZZ	3120-00-485-0716	81873	41000284-002	...BEARING,SLEEVE	UHC,UHM	EA	2
187	109	PAFZZ	5340-00-433-3253	60995	SP4	...PLUG,PROTECTIVE,DUS	UHC,UHM	EA	2
187	110	PAFZZ	5330-00-805-2966	96906	MS28778-4	...PACKING,PREFORMED	UHC,UHM	EA	2
187	111	PADZZ	5340-00-292-3292	60995	SP6	...PLUG,PROTECTIVE,DUS DUST AND MOISTURE SEAL	UHC,UHM	EA	2
187	112	PADZZ	5330-00-804-5695	96906	MS28778-6	...PACKING,PREFORMED	UHC,UHM	EA	2

Fig. 188, 189, 190, 191, & 192 NOT USED

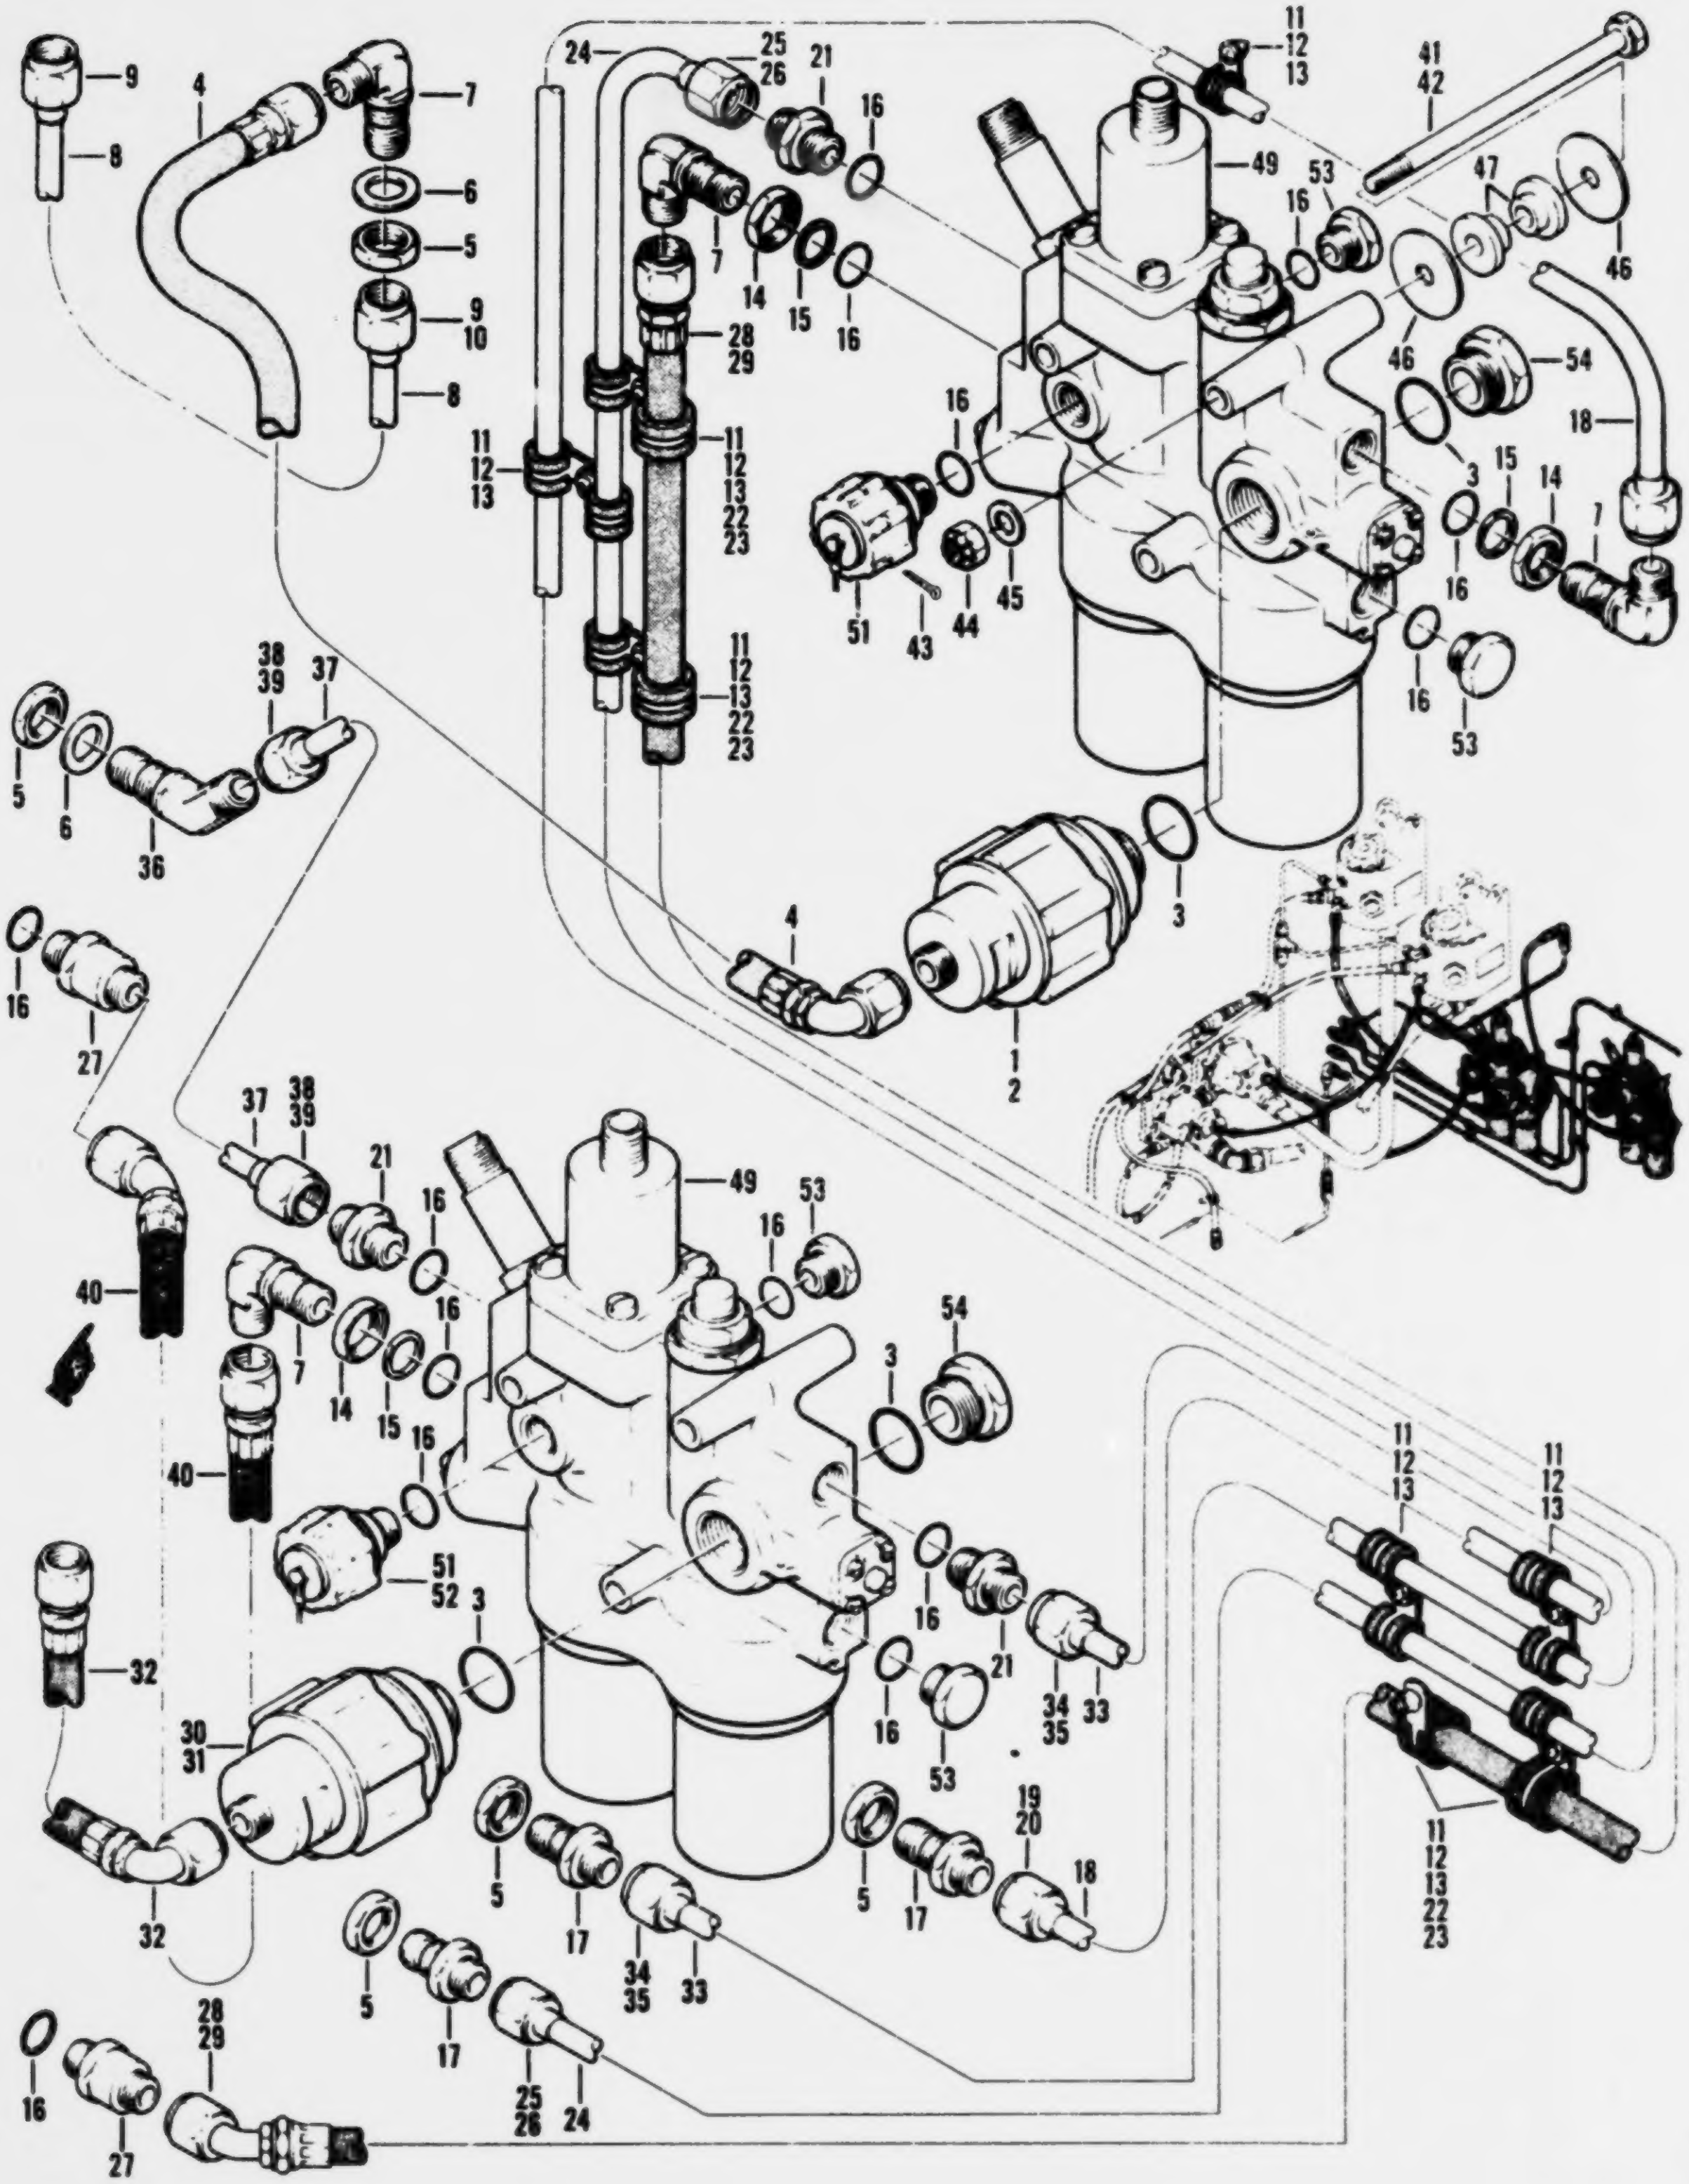
9
8
4
7
6
5
9
10
8
24
25
26
21
16
7
14
15
16
28
29
11
12
13
11
12
13
22
23
11
12
13
22
23
11
12
13
41
42
49
53
16
47
46
46
54
18
16
3
15
14
7
16
16
53
51
43
44
45
38
39
37
5
6
36
16
27
4
3
1
2
37
38
39
21
16
53
49
16
40
7
14
15
16
16
54
3
40
51
52
3
16
21
34
35
33
16
53
32
30
31
32
11
12
13
11
12
13
11
12
13
22
23
5
17
34
35
33
5
17
19
20
18
5
17
25
26
24
28
29
16
27

Figure 193. Hydraulic Installation, Dual System, Module Section

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
193		XCFZZ		97499	204-076-002-3	HYDRAULIC INSTL DUAL SYSTEM,MODULE SECTION USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA	UHC,UHM	EA	1
193		XCFZZ		97499	204-076-002-7	HYDRAULIC INSTL DUAL SYSTEM,MODULE SECTION USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA	UHC,UHM	EA	1
193	1	PAOZZ	4730-00-872-1179	00624	AE91043H	.COUPLING HALF,QUICK	UHC,UHM	EA	1
193	2	PAOZZ	4730-00-872-1178	00624	AE91044G	.COUPLING HALF,QUICK	UHC,UHM	EA	1
193	3	PAOZZ	5330-00-808-0794	96906	MS28778-8	.PACKING,PREFORMED	UHC,UHM	EA	4
193	4	MFOZZ		96906	MS8001G106C	.HOSE ASSEMBLY,NONME	UHC,UHM	EA	1
193	5	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	5
193	6	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT	UHC,UHM	EA	2
193	7	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW,TUBE	UHC,UHM	EA	4
193	8	PAOOO	4710-00-999-0900	97499	204-076-406-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
193	9	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	V
193	10	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	V
193	11	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHC,UHM	EA	V
193	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHC,UHM	EA	V
193	13	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHC,UHM	EA	V
193	14	PAOZZ	5310-00-277-5083	88044	AN6289D6	.LOCKNUT,TUBE FITTIN	UHC,UHM	EA	3
193	15	PAOZZ	5330-00-559-1939	96906	MS9058-06	.RETAINER,PACKING	UHC,UHM	EA	3
193	16	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED	UHC,UHM	EA	14
193	17	PAOZZ	4730-00-541-1749	96906	MS21924D6	.NIPPLE,TUBE	UHC,UHM	EA	3
193	18	PAOOO	4710-00-872-1188	97499	204-076-358-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
193	19	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	V
193	20	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	V
193	21	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE	UHC,UHM	EA	1
193	22	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP	UHC,UHM	EA	4
193	23	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	4
193	24	PAOOO	4710-00-872-1189	97499	204-076-359-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
193	25	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	V
193	26	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	V
193	27	XDOZZ	4820-00-903-3755	96906	MS24423-6	.VALVE,CHECK	UHC,UHM	EA	1
193	28	MFOZZ	DELETED	96906	MS8000G2408	.HOSE ASSEMBLY U/O PN 204-076-002-3	UHC,UHM	EA	1
193	29	XDOZZ		96906	MS8001G3808	.HOSE ASSEMBLY,NONME	UHC,UHM	EA	1
193	30	PAOZZ	4730-00-872-1179	00624	AE91043H	.COUPLING HALF,QUICK	UHC,UHM	EA	1
193	31	PAOZZ	4730-00-872-1178	00624	AE91044G	.COUPLING HALF,QUICK	UHC,UHM	EA	1
193	32	MFOZZ		96906	MS8001G125C	.HOSE ASSEMBLY	UHC,UHM	EA	1
193	33	PAOOO	4710-00-872-1205	97499	204-076-355-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
193	34	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	V
193	35	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	V
193	36	PAOZZ	4730-00-278-8165	96906	MS21907D6	.ELBOW,TUBE	UHC,UHM	EA	1
193	37	PAOOO	4710-00-872-1191	97499	204-076-364-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
193	38	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	V
193	39	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
193	40	MFOZZ	DELETED	98441	MS8006G133A	.HOSE ASSEMBLY,NONME..........UHC,UHM	EA	1
193	41	PAOZZ	5306-00-207-9791	88044	AN4H33A	.BOLT,MACHINE..........UHC,UHM	EA	3
193	42	XDOZZ		88044	AN4-42	.BOLT,MACHINE..........UHC,UHM	EA	3
193	43	PAOZZ	5315-00-239-8024	96906	MS24665-231	.PIN,COTTER..........UHC,UHM	EA	1
193	44	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN..........UHC,UHM	EA	3
193	45	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHC,UHM	EA	3
193	46	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT..........UHC,UHM	EA	6
193	47	MOOZZ	DELETED	97499	204-076-010-1	.SHOCK MOUNT..........UHC,UHM	EA	6
193	49	PAOFF	1650-00-435-4785	81873	88700-1	.MODULAR UNIT,HYDRAU SEE FIG. 194 FOR BREAKDOWN.......UHC,UHM	EA	2
193	51	PA000	4730-00-924-2056	00624	AE90003G	.COUPLING HALF,QUICK DISCONNECT..........UHC,UHM	EA	2
193	52	PAOZZ	5330-00-198-6163	88044	AN6227B14	..PACKING,PREFORMED..........UHC,UHM	EA	1
193	53	PBOZZ	5365-00-845-3502	96906	MS24391D6L	.PLUG,MACHINE THREAD..........UHC,UHM	EA	4
193	54	PAOZZ	5365-00-080-1846	96906	MS24391D8L	.PLUG,MACHINE THREAD..........UHC,UHM	EA	2

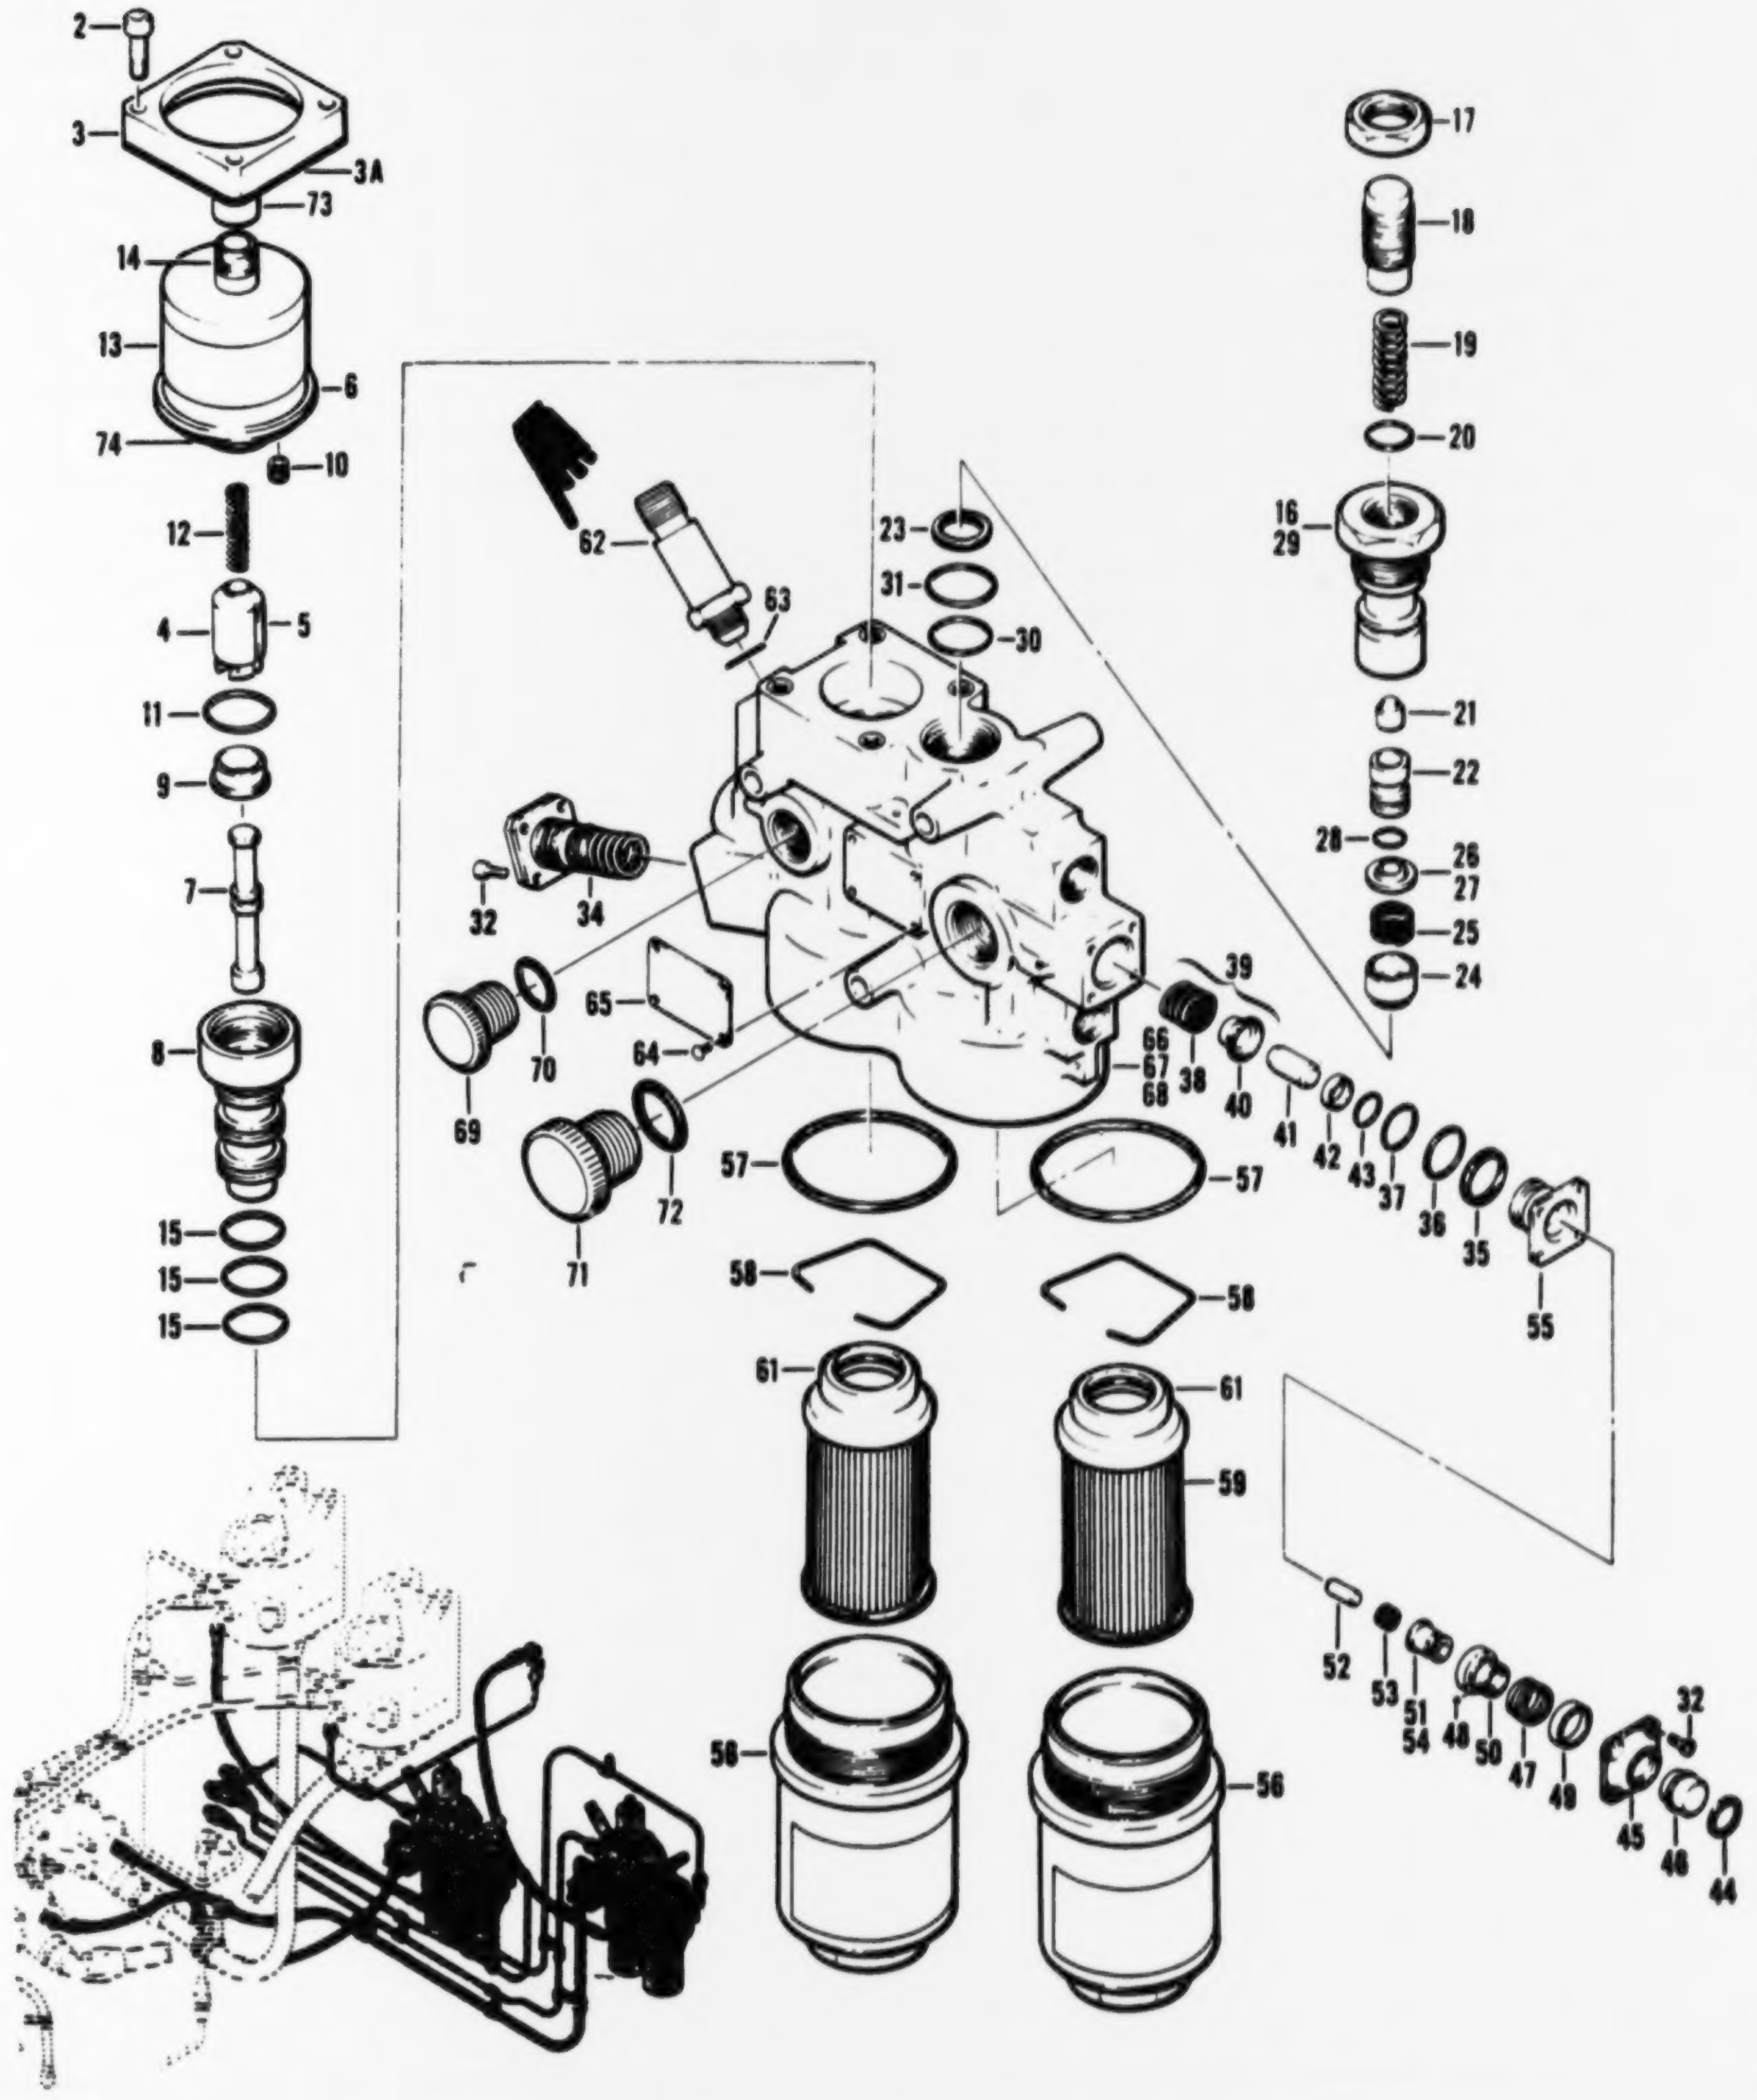
2
3
3A
73
14
13
6
74
10
12
4
5
11
9
7
8
15
15
15
62
63
23
31
30
34
32
69
70
65
64
71
72
57
57
58
58
61
61
59
56
56
17
18
19
20
16
29
21
22
28
26
27
25
24
39
66
67
68
38
40
41
42
43
37
36
35
55
52
53
51
54
48
50
47
49
32
45
46
44

Figure 194. Modular Hydraulic Unit Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS	USABLE ON CODE	U/M	QTY INC IN UNIT
194		PAOFF	1650-00-435-4785	81873	88700-1	MODULAR,HYDRAULIC UNIT ASSY SEE FIG.193 FOR NHA	UHC,UHM	EA	1
194	2	PAFZZ	5305-00-225-7765	96906	MS24673-12	.SCREW,CAP,SOCKET HE	UHC,UHM	EA	4
194	3	XDFZZ	5945-00-939-5941	81873	88612	.BRACKET,SOLENOID	UHC,UHM	EA	1
194	3A	PAOZZ	5330-01-052-9185	81873	48088919	.GASKET	UHC,UHM	EA	1
194	4	ADFFF	1650-00-955-9747	81873	88604-1	.VALVE,LINEAR,DIRECT	UHC,UHM	EA	1
194	5	XDFZZ		81873	88611-1	..PLATE,IDENT	UHC,UHM	EA	1
194	6	PBFZZ	1650-01-008-3044	81873	88606	..SELECTOR SET,DIRECT	UHC,UHM	EA	1
194	7	XAFZZ		81873	88608	...PISTON	UHC,UHM	EA	1
194	8	XAFZZ		81873	88607	...SLEEVE	UHC,UHM	EA	1
194	9	PBFZZ	5365-00-407-3260	81873	88609	..SPACER,SLEEVE	UHC,UHM	EA	1
19	10	PAFZZ	1550-00-407-3257	81873	200037-22	..INSERT,SPECIAL	UHC,UHM	EA	1
194	11	PAFZZ	5330-00-285-9842	96906	MS28778-10	..PACKING,PREFORMED	UHC,UHM	EA	1
194	12	PBFZZ	5360-01-056-5285	81873	48088893	..SPRING,HELICAL,COMP	UHC,UHM	EA	1
194	13	PAFFF	5945-00-852-0663	81873	88610	..SOLENOID,ELECTRICAL	UHC,UHM	EA	1
194	14	PAFZZ	5935-00-518-6361	71468	GS02-10SL4P001	...CONNECTOR,RECEPTACL	UHC,UHM	EA	1
194	15	PAFZZ	5330-00-618-1920	96906	MS28775-017	.PACKING,PREFORMED	UHC,UHM	EA	3
194	16	PAFFF	4820-00-916-2521	81873	88614	.VALVE,SAFETY RELIEF	UHC,UHM	EA	1
194	17	XAFZZ		81873	11242	..NUT	UHC,UHM	EA	1
194	18	XAFZZ		81873	11239	..SCREW	UHC,UHM	EA	1
194	19	XAFZZ		81873	43861	..SPRING	UHC,UHM	EA	1
194	20	PAFZZ	5330-00-584-1840	96906	MS28775-014	..PACKING,PREFORMED	UHC,UHM	EA	2
194	21	XAFZZ		81873	43862	..GUIDE	UHC,UHM	EA	1
194	22	XAFZZ		81873	43801	..VALVE	UHC,UHM	EA	2
194	23	PBFZZ	5365-00-063-9099	80756	RRT625K	..RING,RETAINING	UHC,UHM	EA	1
194	24	XAFZZ		81873	11240	..RETAINER	UHC,UHM	EA	1
194	25	XAFZZ		81873	43809	..SPRING	UHC,UHM	EA	1
194	26	XAFZZ		81873	43735	..BALL ASSEMBLY	UHC,UHM	EA	1
194	27	XAFZZ		96906	MS19060-1014	...BALL,BEARING	UHC,UHM	EA	1
194	28	PCFZZ	5330-00-582-2133	96906	MS28775-011	..PACKING,PREFORMED	UHC,UHM	EA	1
194	29	XAFZZ		81873	11241	..BODY	UHC,UHM	EA	1
194	30	PAFZZ	5330-00-285-9842	96906	MS28778-10	.PACKING,PREFORMED	UHC,UHM	EA	1
194	31	PAFZZ	5330-00-582-2855	96906	MS28775-113	.PACKING,PREFORMED	UHC,UHM	EA	1
194	32	PAFZZ	5305-00-949-7863	88044	AN500AD5-8	.SCREW,MACHINE	UHC,UHM	EA	8
194	34	PAFFF	1650-00-941-8789	96124	31-10038	.INDICATOR,PRESSURE	UHC,UHM	EA	2
194	35	PAFZZ	5330-00-937-1332	96906	MS28774-015	..RETAINER,PACKING	UHC,UHM	EA	1
194	36	PAFZZ	5330-00-618-5361	96906	MS28775-015	..PACKING,PREFORMED	UHC,UHM	EA	1
194	37	PAFZZ	5330-00-584-1840	96906	MS28775-014	..PACKING,PREFORMED	UHC,UHM	EA	1
194	38	PAFZZ	5360-00-911-8368	81873	53-10114	..SPRING,HELICAL,COMP	UHC,UHM	EA	1
194	39	XAFZZ		81873	63-10015	..PISTON ASSEMBLY	UHC,UHM	EA	1
194	40	XAFZZ		81873	53-10099	...SUPPORT	UHC,UHM	EA	1
194	41	XAFZZ		81873	53-10098	...PISTON	UHC,UHM	EA	1
194	42	XAFZZ		81873	53-10079	..SLIDE RING	UHC,UHM	EA	1

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
194	43	PCFZZ	5330-00-584-0285	96906	MS28775-012	.PACKING,PREFORMED	UHC,UHM	EA	1
194	44	XAFZZ		81873	53-10117	.SEAL	UHC,UHM	EA	1
194	45	XAFZZ		81873	53-10152	..STOP	UHC,UHM	EA	1
194	46	XAFZZ		81873	53-10102	.BUTTON	UHC,UHM	EA	1
194	47	XAFZZ		81873	53-10112	.SPRING	UHC,UHM	EA	1
194	48	PAFZZ	3110-00-044-2269	96906	MS19060-16	.BALL,BEARING	UHC,UHM	EA	4
194	49	XAFZZ		81873	53-10140	.RING	UHC,UHM	EA	1
194	50	XAFZZ		81873	53-10103	.GUIDE	UHC,UHM	EA	4
194	51	XAFZZ		81873	63-10013	.TRIPPER ASSEMBLY	UHC,UHM	EA	1
194	52	XAFZZ		81873	53-10110	..SLEEVE	UHC,UHM	EA	1
194	53	XAFZZ		81873	53-10101	..MAGNET	UHC,UHM	EA	1
194	54	XAFZZ		81873	53-10113	.SPRING	UHC,UHM	EA	1
194	55	XAFZZ		81873	53-10100	.HOUSING	UHC,UHM	EA	1
194	56	PAOZZ	4810-00-195-2154	81873	88613-1	.BOWL,FILTER,VALVE	UHC,UHM	EA	2
194	57	PAOZZ	5330-00-818-4591	96906	MS28775-135	.PACKING,PREFORMED	UHC,UHM	EA	2
194	58	PAOZZ	5340-00-916-2586	81873	52-10183	RETAINER,ELEMENT	UHC,UHM	EA	2
194	59	PAOZZ	4330-00-442-2484	97499	205-076-034-3	FILTER ELEMENT,FLUI	UHC,UHM	EA	2
194	61	PAOZZ	5330-00-579-8156	96906	MS28775-212	..PACKING,PREFORMED	UHC,UHM	EA	1
194	62	PAOZZ	5930-01-135-7375	81349	M9395/31 NPNEMN	.SWITCH,PRESSURE	UHC,UHM	EA	1
194	63	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED	UHC,UHM	EA	1
194	64	XDFZZ	5305-00-253-5603	96906	MS21318-1	.SCREW,DRIVE	UHC,UHM	EA	4
194	65	XDFZZ		81873	41000395	.PLATE,IDENT	UHC,UHM	EA	1
194	66	XAFZZ		81873	88603	HOUSING ASSY HYDRAULIC UNIT	UHC,UHM	EA	1
194	67	PAFZZ	5340-00-290-4497	96906	MS124736	..INSERT,SCREW THREAD	UHC,UHM	EA	4
194	68	XAFZZ	5340-00-953-3299	92555	343001	..PLUG ASSEMBLY,SEALI	UHC,UHM	EA	1
194	69	PAOZZ	5340-00-292-3292	60995	SP6	.PLUG,PROTECTIVE,DUS	UHC,UHM	EA	6
194	70	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED	UHC,UHM	EA	6
194	71	PAOZZ	5340-00-828-8802	60995	SP8	.PLUG,PROTECTIVE,DUS	UHC,UHM	EA	2
194	72	PAOZZ	5330-00-808-0794	96906	MS28778-8	.PACKING,PREFORMED	UHC,UHM	EA	2
194	73	PAOZZ	5340-00-616-4796	95760	EC10	.CAP,PROTECTIVE,DUST SHIPPING	UHC,UHM	EA	1
194	74	XAFZZ		99017	CD10	.CAP,PROTECTIVE SHIPPING	UHC,UHM	EA	1

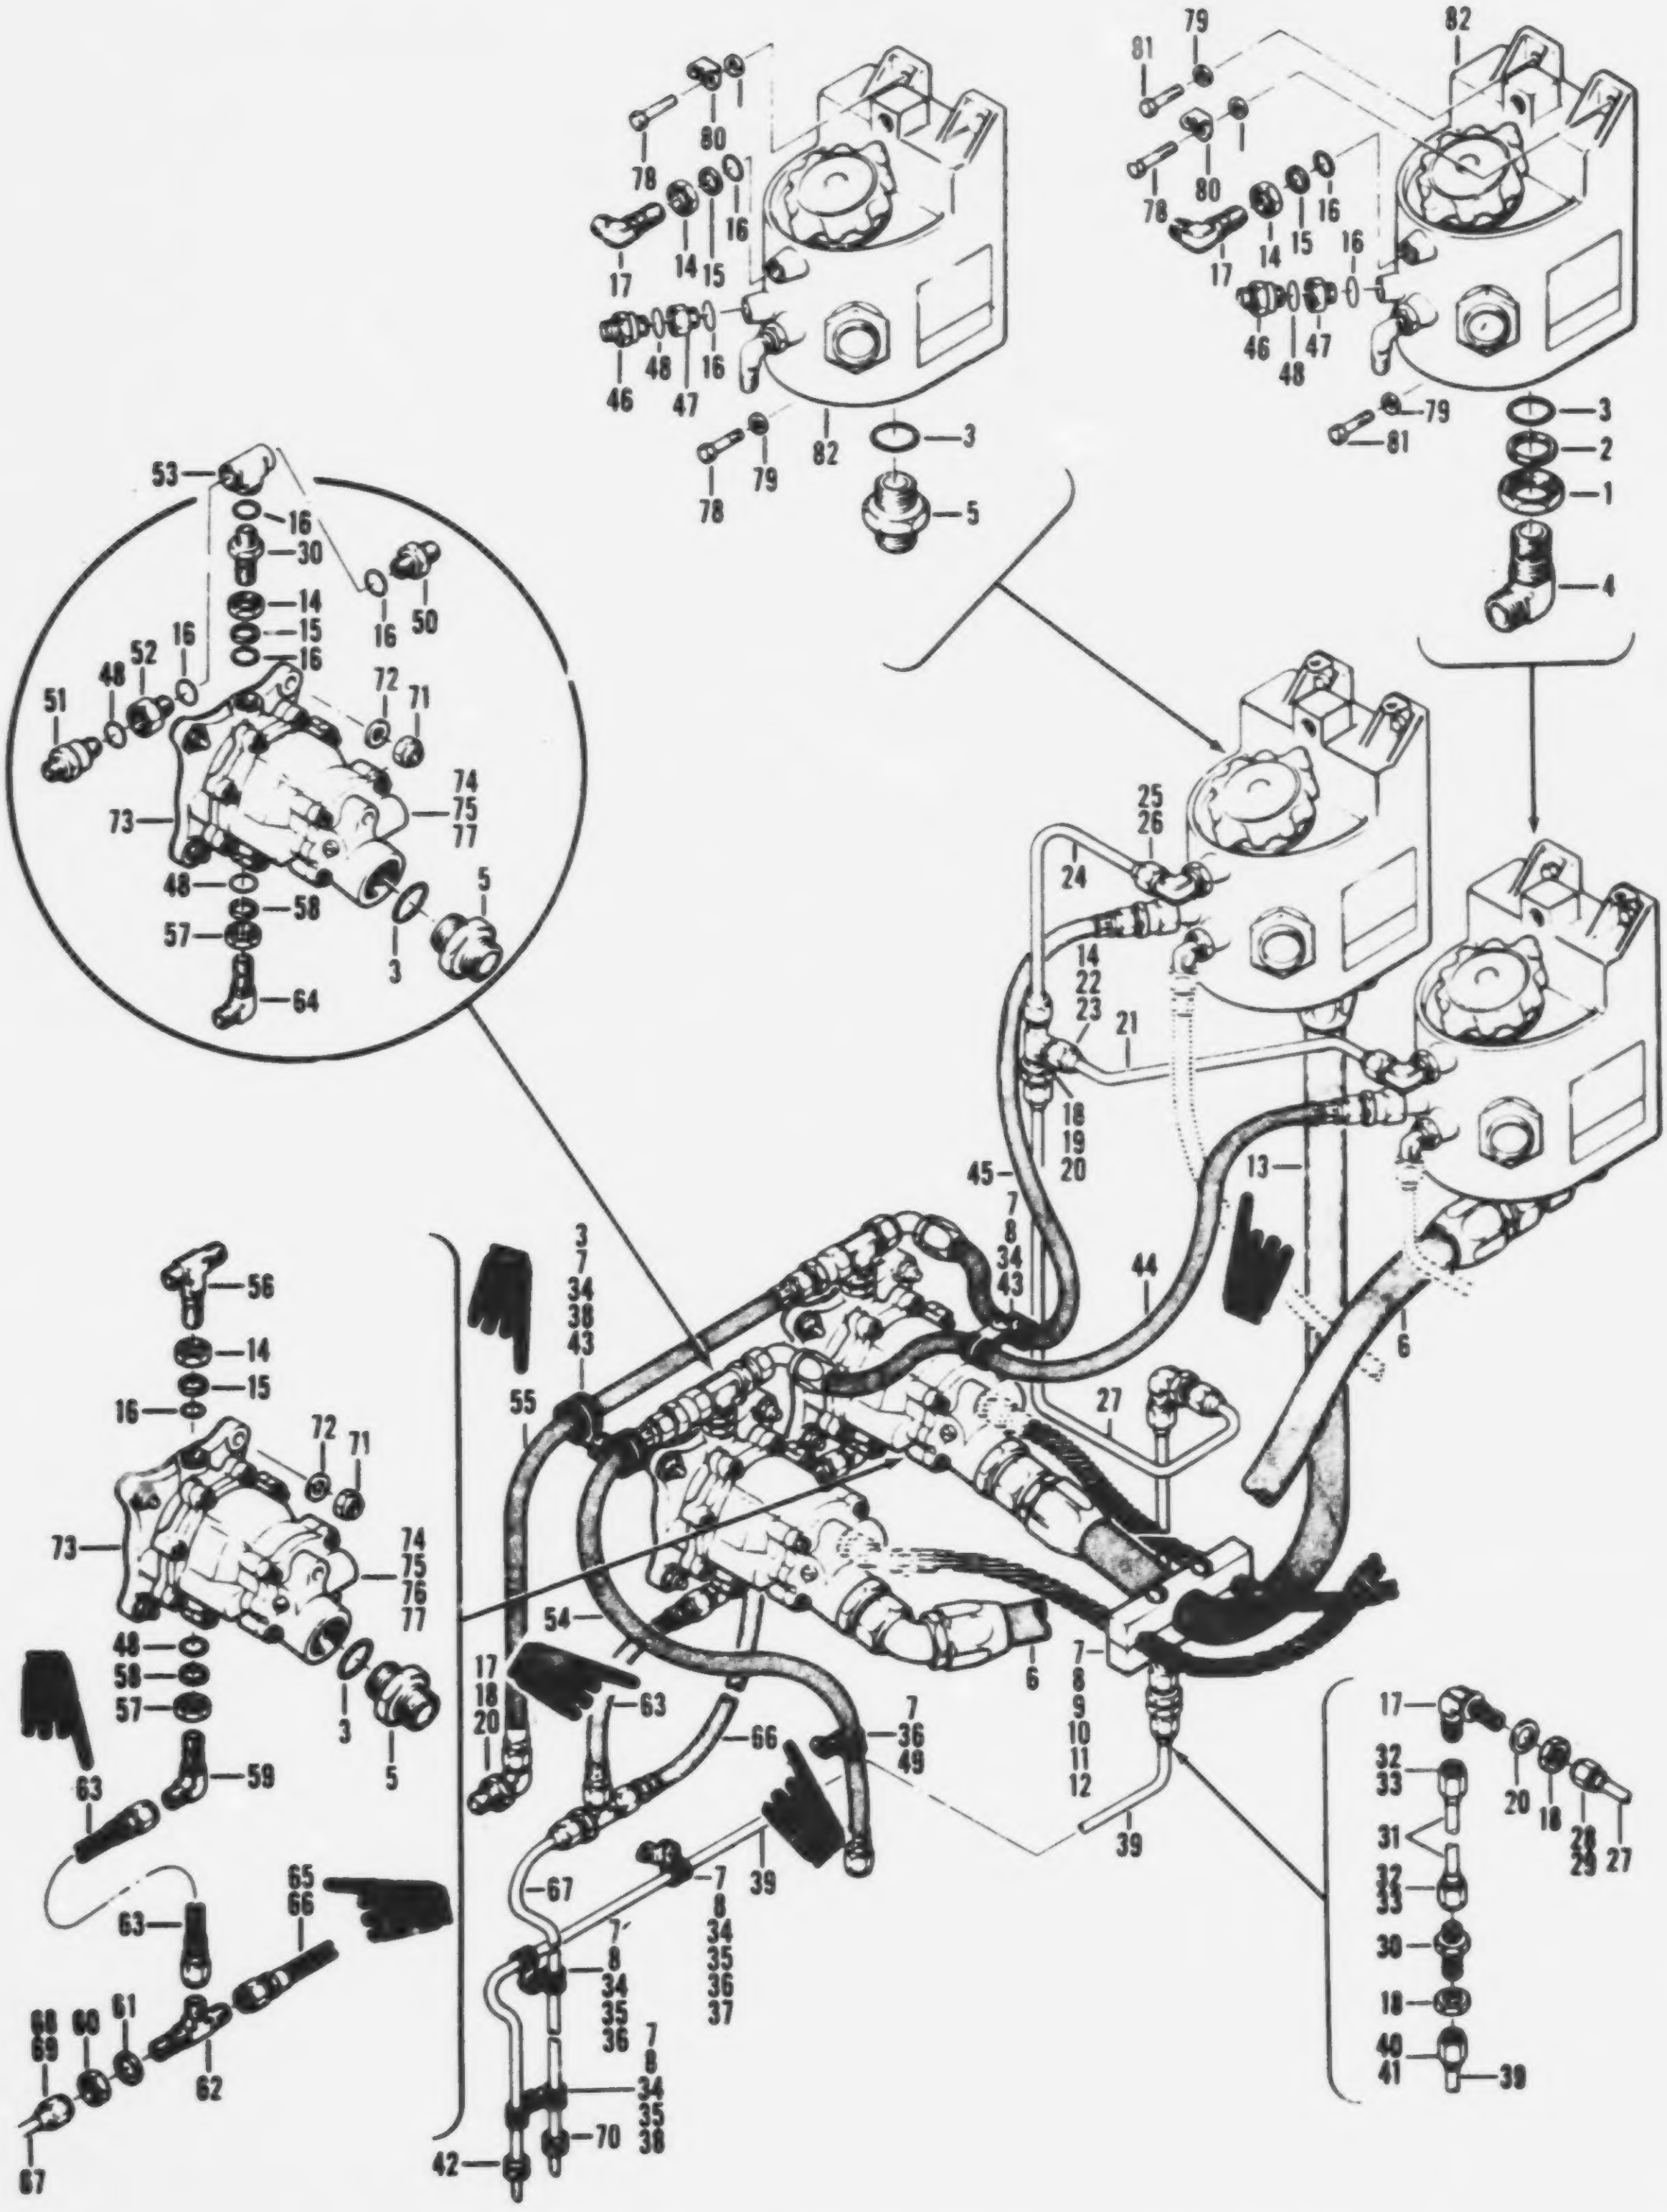
81
79
82
80
78
17
14
15
16
46
48
47
82
3
5
79
2
1
4
53
30
50
52
51
72
71
73
74
75
77
58
57
64
25
26
24
22
23
21
18
19
20
45
13
7
8
34
43
44
6
27
56
55
38
76
59
63
65
66
61
60
62
68
69
67
54
36
49
9
10
11
12
39
67
35
37
42
70
32
33
31
28
29
40
41

Figure 195. Hydraulic Installation, Dual System, Reservoir Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
195		XCFZZ		97499	204-076-002-3	HYDRAULIC INSTL DUAL SYSTEM,RESERVOIR SECTION USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA .... UHC,UHM	EA	1
195		XCFZZ		97499	204-076-002-7	HYDRAULIC INSTL DUAL SYSTEM,RESERVOIR SECTION USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA .... UHC,UHM	EA	1
195	1	PBOZZ	4730-00-277-5095	88044	AN6289D16	.LOCKNUT,TUBE FITTIN .... UHC,UHM	EA	1
195	2	PAOZZ	5330-00-527-9106	96906	MS9058-16	.RETAINER,PACKING .... UHC,UHM	EA	1
195	3	PAOZZ	5330-00-804-5694	96906	MS28778-16	.PACKING,PREFORMED .... UHC,UHM	EA	4
195	4	PAOZZ	4730-00-640-0598	96906	MS21908D16	.ELBOW,TUBE .... UHC,UHM	EA	1
195	5	PAOZZ	4730-00-289-6091	96906	MS21902D16	.NIPPLE,TUBE .... UHC,UHM	EA	3
195	6	MFOZZ		96906	MS87029M182B	.HOSE ASSEMBLY,NONME .... UHC,UHM	EA	1
195	7	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHC,UHM	EA	2
195	8	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHC,UHM	EA	V
195	9	XBOZZ	5340-00-777-8729	97499	120-033-16-6	.SHIM .... UHC,UHM	EA	2
195	10	XDOZZ		88044	AN525-10R30	.SCREW,MACHINE .... UHC,UHM	EA	2
195	11	PAOZZ	5340-00-913-4105	97499	204-076-433-3	.CLAMP,HALF .... UHC,UHM	EA	1
195	12	PAOZZ	5340-00-913-4106	97499	204-076-433-1	.CLAMP,HALF .... UHC,UHM	EA	1
195	13	MFOZZ	DELETED	96906	MS87029M180A	.HOSE ASSEMBLY,NONME .... UHC,UHM	EA	1
195	14	PAOZZ	5310-00-277-5083	88044	AN6289D6	.LOCKNUT,TUBE FITTIN .... UHC,UHM	EA	4
195	15	PAOZZ	5330-00-559-1939	96906	MS9058-06	.RETAINER,PACKING .... UHC,UHM	EA	4
195	16	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED .... UHC,UHM	EA	V
195	17	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW,TUBE .... UHC,UHM	EA	4
195	18	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON .... UHC,UHM	EA	4
195	19	PAOZZ	4730-00-246-9520	96906	MS21912D6	.TEE,TUBE .... UHC,UHM	EA	1
195	20	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT .... UHC,UHM	EA	3
195	21	PAOOO	4710-00-872-1183	97499	204-076-361-1	.TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
195	22	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING .... UHC,UHM	EA	V
195	23	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE .... UHC,UHM	EA	V
195	24	PAOOO	4710-00-872-1184	97499	204-076-362-1	.TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
195	25	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING .... UHC,UHM	EA	V
195	26	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE .... UHC,UHM	EA	V
195	27	PAOOO	4710-00-872-1204	97499	204-076-365-1	.TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
195	28	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE .... UHC,UHM	EA	V
195	29	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING .... UHC,UHM	EA	V
195	30	PAOZZ	4730-00-541-1749	96906	MS21924D6	.NIPPLE,TUBE .... UHC,UHM	EA	2
195	31	PAOOO	4710-00-872-1190	97499	204-076-383-1	.TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
195	32	PAOZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING .... UHC,UHM	EA	V
195	33	PAOZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE .... UHC,UHM	EA	V
195	34	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE .... UHC,UHM	EA	V
195	35	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP .... UHC,UHM	EA	3
195	35	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP .... UHC,UHM	EA	3
195	37	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHC,UHM	EA	2
195	38	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP .... UHC,UHM	EA	2
195	39	PAOOO	4710-00-872-1210	97499	204-076-384-1	.TUBE ASSEMBLY .... UHC,UHM	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG NO.	(B) ITEM NO								
195	40	PAOZZ	4730-00-554-7397	96906	MS21921-60	NUT, TUBE COUPLING	UHC, UHM	EA	V
195	41	PAOZZ	4730-00-554-7398	96906	MS21922-6	SLEEVE, CLINCH, TUBE	UHC, UHM	EA	V
195	42	PAOZZ	5325-00-291-9366	96906	MS35489-11	GROMMET, NONMETALLIC	UHC, UHM	EA	1
195	43	PAOZZ	5340-00-990-9301	81996	EA870007	CLAMP, LOOP	UHC, UHM	EA	2
195	44	MFOZZ		96906	MS8001G233C	HOSE ASSEMBLY, NONME	UHC, UHM	EA	1
195	45	MFOZZ		96906	MS8001G210F180	HOSE ASSEMBLY, NONME	UHC, UHM	EA	1
195	46	PAOZZ	4820-00-554-4332	97499	205-076-048-3	VALVE, CHECK	UHC, UHM	EA	2
195	47	PAOZZ	4730-00-684-6917	96906	MS243980-4	ADAPTER, STRAIGHT TUBE TO BOSS	UHC, UHM	EA	2
195	48	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING, PREFORMED	UHC, UHM	EA	V
195	49	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW, MACHINE	UHC, UHM	EA	1
195	50	PAOZZ	4730-00-289-6089	96906	MS21902D6	NIPPLE, TUBE	UHC, UHM	EA	1
195	51	PAOZZ	4820-00-945-3955	99473	2514-4	VALVE, CHECK	UHC, UHM	EA	1
195	52	PAOZZ	5365-00-804-7915	96906	MS24397D2	BUSHING, MACHINE THR	UHC, UHM	EA	1
195	53	PAOZZ	4730-00-277-5026	88044	AN93806	TEE, BOSS	UHC, UHM	EA	1
195	54	MFOZZ		96906	MS8001E156B	HOSE ASSEMBLY, NONME U/O PN 204-076-002-7	UHC, UHM	EA	1
195	55	MFOZZ	DELETED	96906	MS8001G242A	HOSE ASSEMBLY, NONME U/O PN 204-076-002-7	UHC, UHM	EA	1
195	56	PAOZZ	4730-00-289-2698	96906	MS2190906	TEE, TUBE	UHC, UHM	EA	1
195	57	PAOZZ	4730-00-277-6371	88044	AN6289D4	LOCKNUT, TUBE FITTIN	UHC, UHM	EA	V
195	58	PAOZZ	5330-00-246-6403	96906	MS28773-04	RETAINER, PACKING	UHC, UHM	EA	1
195	59	PAOZZ	4730-00-640-0830	96906	MS21908D4	ELBOW, TUBE	UHC, UHM	EA	1
195	60	PAOZZ	5310-00-282-7823	96906	MS244000D4	NUT, PLAIN, HEXAGON	UHC, UHM	EA	1
195	61	PAOZZ	5310-00-187-2401	88044	AN960PD716	WASHER, FLAT	UHC, UHM	EA	1
195	62	PAOZZ		96906	MS21912W4	TEE, TUBE	UHC, UHM	EA	1
195	63	MFOZZ	DELETED	96906	MS8001E172A	HOSE ASSEMBLY, NONME	UHC, UHM	EA	1
195	64	PBOZZ	4730-00-640-1215	96906	MS21907D4	ELBOW, TUBE	UHC, UHM	EA	1
195	65	MFOZZ	DELETED	96906	MS8000E200B	HOSE ASSEMBLY, NONME U/O PN 204-076-002-3	UHC, UHM	EA	1
195	66	MFOZZ	DELETED	96906	MS8000E210A	HOSE ASSEMBLY, NONME	UHC, UHM	EA	1
195	67	PAOOO	4710-00-872-1203	97499	204-076-366-1	TUBE ASSEMBLY, METAL	UHC, UHM	EA	1
195	68	PAOZZ	4730-00-555-8203	96906	MS21921-4D	NUT, TUBE COUPLING	UHC, UHM	EA	1
195	69	PAOZZ	4730-00-289-8619	96906	MS21922-4	SLEEVE, CLINCH, TUBE	UHC, UHM	EA	1
195	70	PAOZZ	5325-00-263-6632	96906	MS35489-6	GROMMET, NONMETALLIC	UHC, UHM	EA	1
195	71	PAOZZ	5310-00-807-1469	96906	MS21042-5	NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHC, UHM	EA	8
195	72	PAOZZ	5310-00-187-2399	88044	AN960PD516	WASHER, FLAT	UHC, UHM	EA	8
195	73	PAOZZ	5330-00-237-5653	96906	MS9135-01	GASKET	UHC, UHM	EA	2
195	74	PAOOO	4320-00-176-1261	97499	204-076-006-1	PUMP, AXIAL PISTON INTRCH	UHC, UHM	EA	2
195	75	PAOOO	4320-00-176-1261	75250	AP2V73	PUMP, AXIAL PISTON	UHC, UHM	EA	2
195	76	PAOOO	4320-00-176-1261	62983	PVB044-2	PUMP, AXIAL PISTONS	UHC, UHM	EA	2
195	77	PAOZZ	5306-00-182-2017	88044	AN4H6A	BOLT, MACHINE	UHC, UHM	EA	2
195	78	PAOZZ	5306-00-182-1958	88044	AN4H10A	BOLT, MACHINE	UHC, UHM	EA	4
195	79	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER, FLAT	UHC, UHM	EA	6
195	80	XDOZZ		97499	20-032-3	BRACKET, AIRCRAFT	UHC, UHM	EA	3
195	81	PAOZZ	5306-00-292-8252	88044	AN4H7A	BOLT, MACHINE	UHC, UHM	EA	2
195	82	PAOFF	1680-00-872-1154	97499	204-076-004-1	RESERVOIR ASSEMBLY. SEE FIG 196 FOR BREAKDOWN	UHC, UHM	EA	2

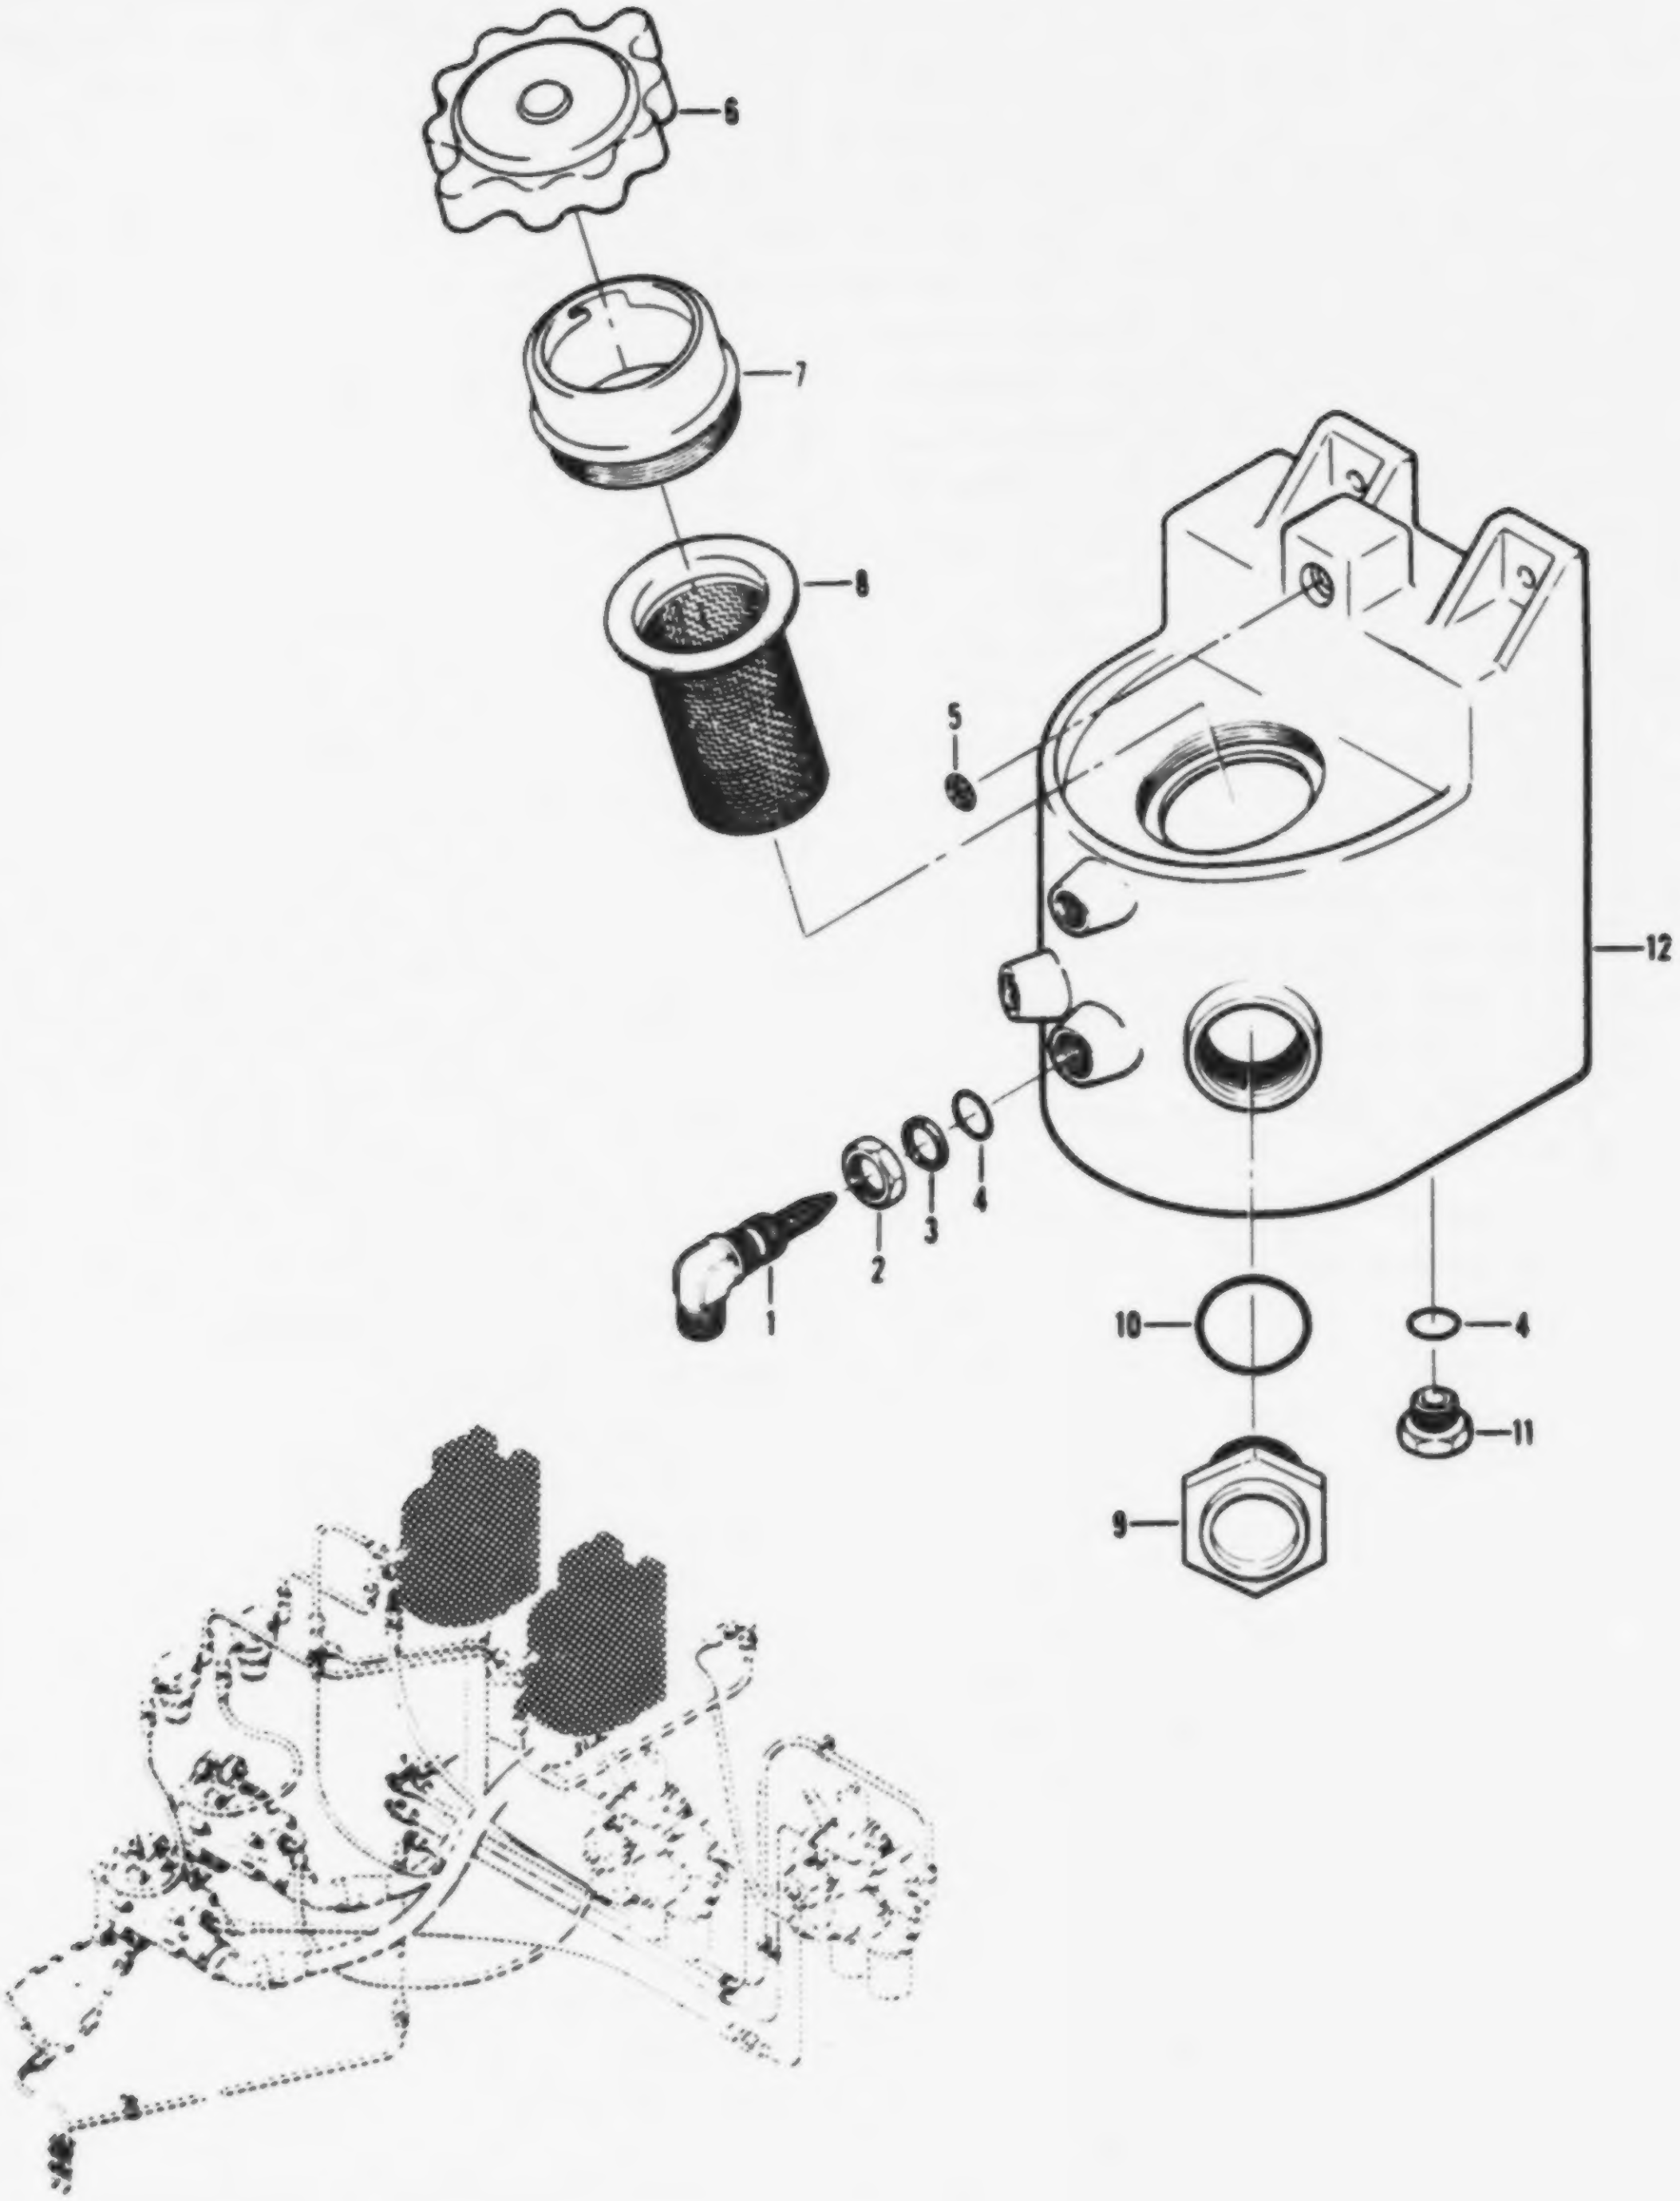
6
7
8
5
12
4
3
2
1
10
4
11
9

Figure 196. Hydraulic Flight Controls Reservoir Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	UM	QTY INC IN UNIT
196		PAOFF	1680-00-872-1154	97499	204-076-004-1	RESERVOIR ASSEMBLY, USBL EFF 64-14101 & SUBSEQUENT SEE FIG. 195 FOR NHA .... UHC,UHM	EA	1
196	1	PAOZZ	1650-00-919-1359	94330	B7584-1	BAFFLE ASSEMBLY .... UHC,UHM	EA	1
196	2	PAOZZ	5310-00-277-5083	88044	AN628906	LOCKNUT,TUBE FITTIN .... UHC,UHM	EA	1
196	3	PAOZZ	5330-00-559-1939	96906	MS9058-06	RETAINER,PACKING .... UHC,UHM	EA	1
196	4	PAOZZ	5330-00-804-5695	96906	MS28778-6	PACKING,PREFORMED .... UHC,UHM	EA	2
196	5	PAOZZ	1680-00-872-1153	94330	A7396	SCREEN,BREATHER VAL .... UHC,UHM	EA	1
196	6	PAOZZ	1615-00-701-9935	78567	FC3731	CAP ASSEMBLY .... UHC,UHM	EA	1
196	7	PAOZZ	1615-00-690-7294	78567	FC3662	ADAPTER ASSEMBLY,FI .... UHC,UHM	EA	1
196	8	PAOZZ	1680-00-872-1152	94330	SLB7395-2	STRAINER,HYDRAULIC .... UHC,UHM	EA	1
196	9	PAOZZ	6680-00-905-2664	97484	S51	INDICATOR,SIGHT,LIQ .... UHC,UHM	EA	1
196	10	PAOZZ	5330-00-804-5694	96906	MS28778-16	PACKING,PREFORMED .... UHC,UHM	EA	1
196	11	PAOZZ	4730-00-278-8794	88044	AN814-6DL	PLUG .... UHC,UHM	EA	1
196	12	XAOZZ		97499	204-076-004-3	TANK,HYDRAULIC .... UHC,UHM	EA	1

Fig. 197 NOT USED

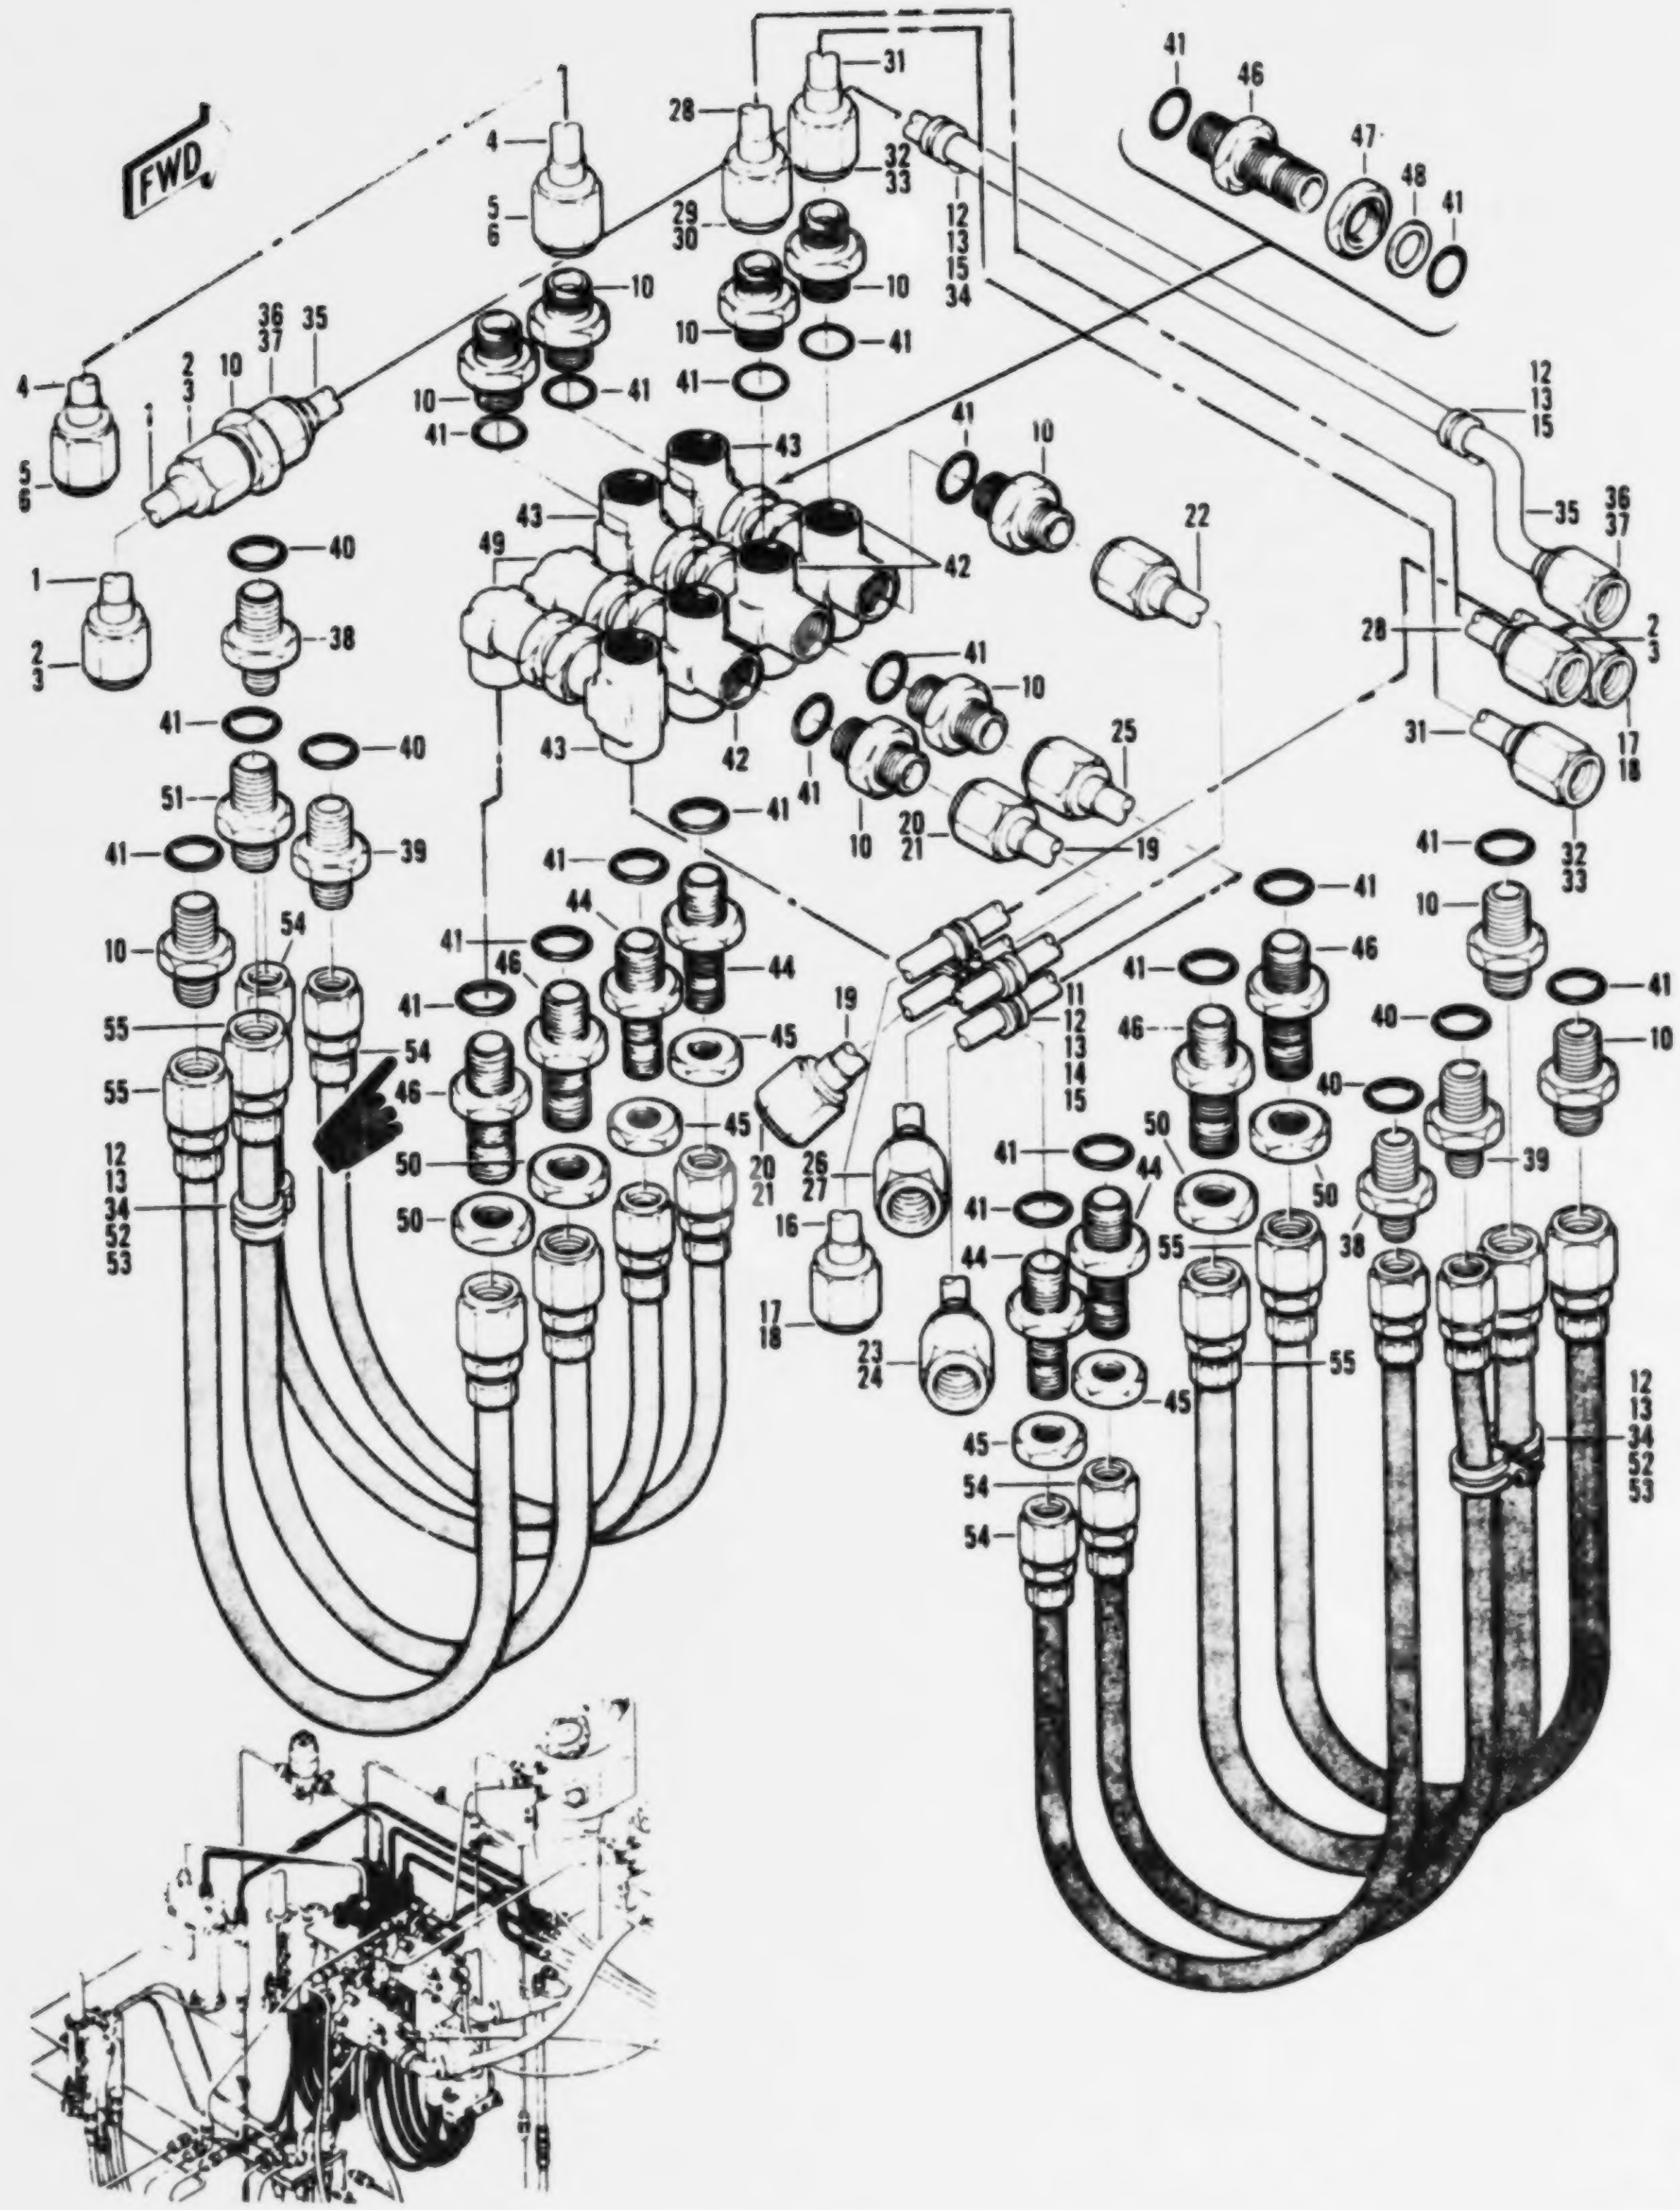
FWD
41
46
47
48
41
31
28
32
33
4
5
6
29
30
12
13
15
34
10
10
10
41
41
41
10
41
4
36
37
35
2
3
10
5
6
43
41
10
22
12
13
15
35
36
37
43
49
42
1
2
3
40
38
41
10
28
2
3
17
18
41
40
51
39
43
42
41
10
25
20
21
19
31
32
33
41
41
41
41
10
41
10
54
44
44
46
46
46
41
40
55
55
54
19
11
12
13
14
15
10
50
45
45
40
46
50
12
13
34
52
53
50
50
20
21
26
27
16
17
18
41
41
44
44
38
39
55
55
23
24
45
45
54
54
12
13
34
52
53

Figure 198. Hydraulic Installation, Dual System, Lines Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
198		XCFZZ		97499	204-076-002-7	HYDRAULIC INSTL DUAL SYSTEM,LINES SECTION USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA..........UHC,UHM	EA	1
198	1	MFOZZ	1560-00-914-5966	97499	204-076-451-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	2	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	3	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	4	MFOZZ	1560-00-913-3970	97499	204-076-450-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	5	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	6	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	10	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE..........UHC,UHM	EA	11
198	11	PAOZZ	5306-00-151-0782	88044	AN3-12A	.BOLT,MACHINE..........UHC,UHM	EA	1
198	12	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHC,UHM	EA	V
198	13	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHC,UHM	EA	V
198	14	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE..........UHC,UHM	EA	1
198	15	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP..........UHC,UHM	EA	V
198	16	MFOZZ	1560-00-913-4034	97499	204-076-470-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	17	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	18	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	19	MFOZZ	1560-00-914-6199	97499	204-076-468-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	20	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	21	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHM,UHC	EA	V
198	22	PAOFF	4710-00-872-1197	97499	204-076-346-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	23	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	24	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	25	PAOFF	4710-00-872-1196	97499	204-076-347-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	26	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	27	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	28	MFOZZ	1560-00-913-3974	97499	204-076-471-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	29	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	30	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	31	MFOZZ	1560-00-913-3975	97499	204-076-472-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	32	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	33	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	34	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHC,UHM	EA	V
198	35	MFOZZ	1560-00-914-5971	97499	204-076-452-1	.TUBE ASSEMBLY,METAL..........UHC,UHM	EA	1
198	36	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING..........UHC,UHM	EA	V
198	37	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE..........UHC,UHM	EA	V
198	38	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE,TUBE..........UHC,UHM	EA	3
198	39	PAOZZ	4820-00-930-5273	97499	204-076-437-1	.VALVE,CHECK..........UHC,UHM	EA	1
198	40	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED..........UHC,UHM	EA	4
198	41	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED..........UHC,UHM	EA	V
198	42	PAOZZ	4730-00-278-5024	88044	AN937D6	.CROSS,BOSS..........UHC,UHM	EA	3
198	43	PAOZZ	4730-00-277-5026	88044	AN938D6	.TEE,BOSS..........UHC,UHM	EA	3
198	44	PAOZZ	4730-00-931-7799	92003	ER832D0406	.REDUCER,BOSS..........UHC,UHM	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
198	44	PAOZZ	4730-00-931-7799	81343	AS1007D0406	REDUCER, BOSS . ALT	UHC, UHM	EA	4
198	45	PAOZZ	5310-00-282-7823	96906	MS2440004	NUT, PLAIN, HEXAGON	UHC, UHM	EA	4
198	46	PAOZZ	4730-00-541-1749	96906	MS2192406	NIPPLE, TUBE	UHC, UHM	EA	V
198	47	PAOZZ	5310-00-277-5083	88044	AN628906	LOCKNUT, TUBE FITTIN	UHC, UHM	EA	4
198	48	PAOZZ	5330-00-559-1939	96906	MS9058-06	RETAINER, PACKING	UHC, UHM	EA	4
198	49	PAOZZ	4730-00-278-3683	88044	AN93906	ELBOW, BOSS	UHC, UHM	EA	2
198	50	PAOZZ	5310-00-638-2605	96906	MS2440006	NUT, PLAIN, HEXAGON	UHC, UHM	EA	4
198	51	PAOZZ	4820-00-923-0625	97499	204-076-437-3	VALVE, CHECK	UHC, UHM	EA	1
198	52	PAOZZ	5340-00-993-6245	81996	EAB70005	CLAMP, LOOP	UHC, UHM	EA	2
198	53	PAOZZ	5340-00-990-9301	81996	EAB70007	CLAMP, LOOP	UHC, UHM	EA	2
198	54	MFOZZ	DELETED	96906	MS8001E214A	HOSE ASSEMBLY, NONME	UHC, UHM	EA	4
198	55	MFOZZ		96906	MS8001G230A	HOSE ASSEMBLY, NONME	UHC, UHM	EA	4

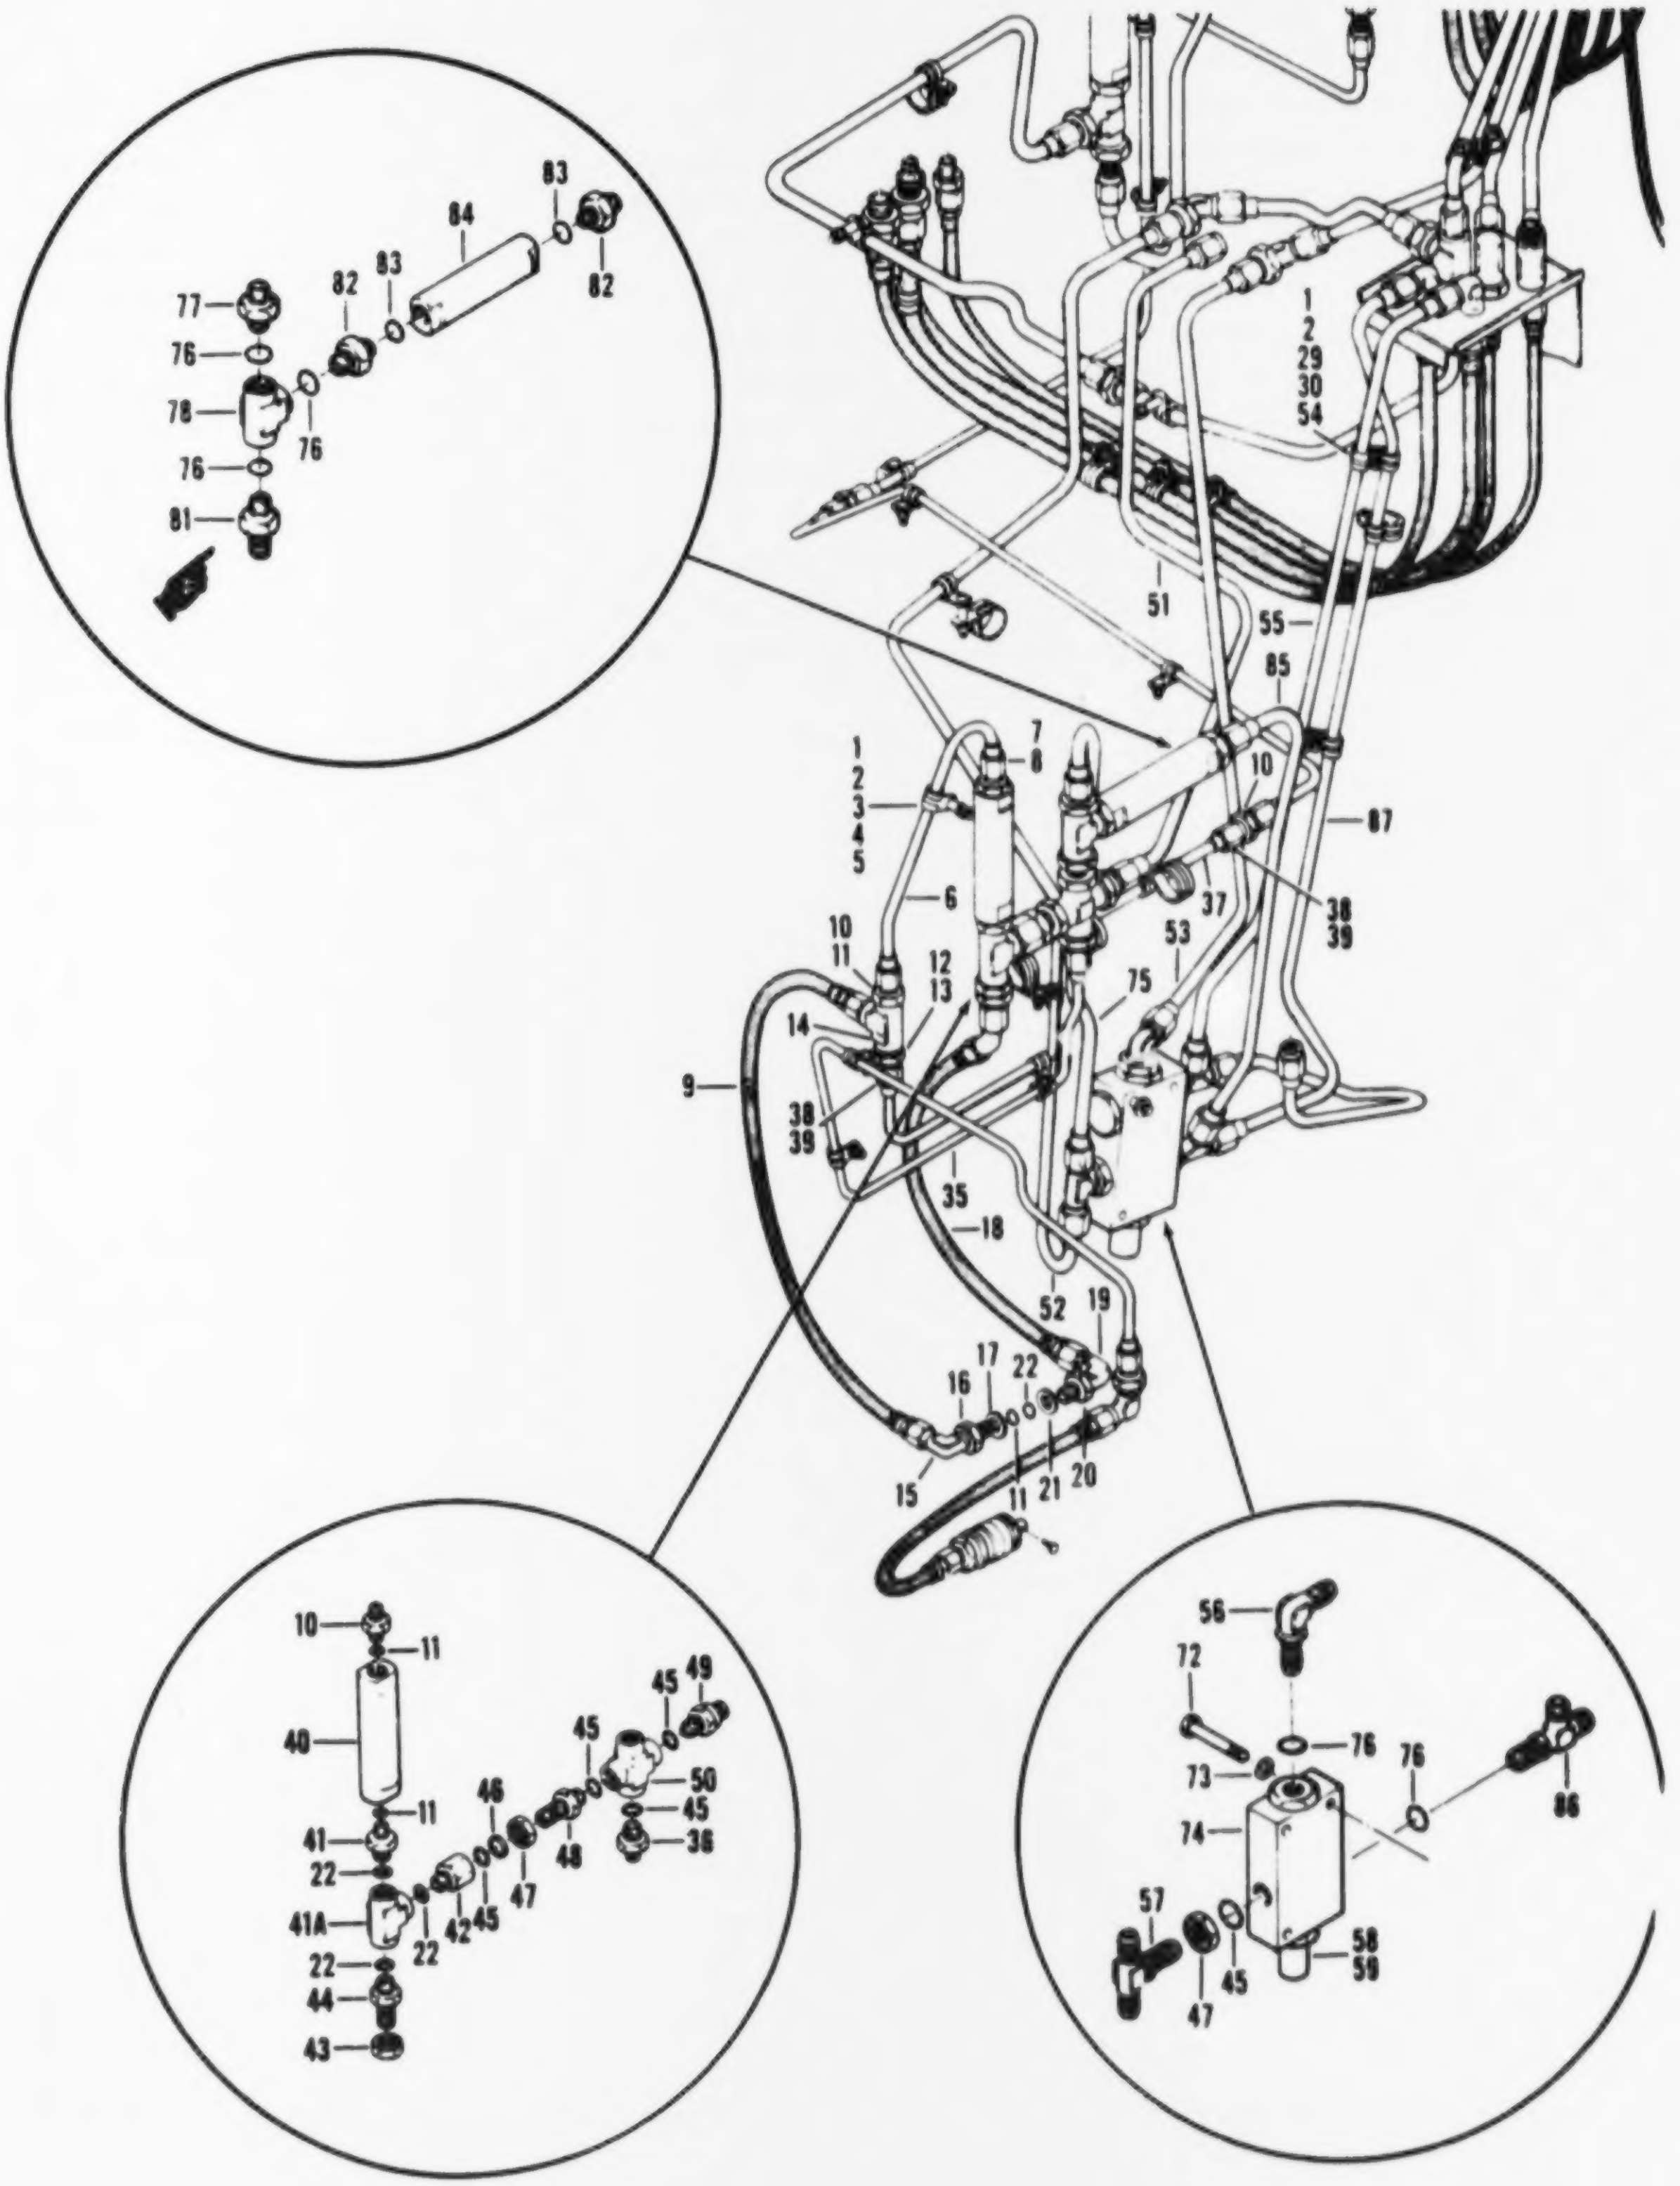
83
84
83
82
82
77
76
78
76
76
81
1
2
29
30
54
51
55
85
7
8
1
2
3
4
5
10
87
6
37
38
39
10
11
12
13
53
75
14
9
38
39
35
18
52
19
17
22
16
15
11
21
20
10
11
45
49
40
45
50
46
11
45
41
36
22
48
47
42
45
41A
22
22
44
43
56
72
76
76
73
86
74
57
58
59
47
45

Figure 199. Hydraulic Installation, Dual System, Lines Section (Sheet 1 of 2)

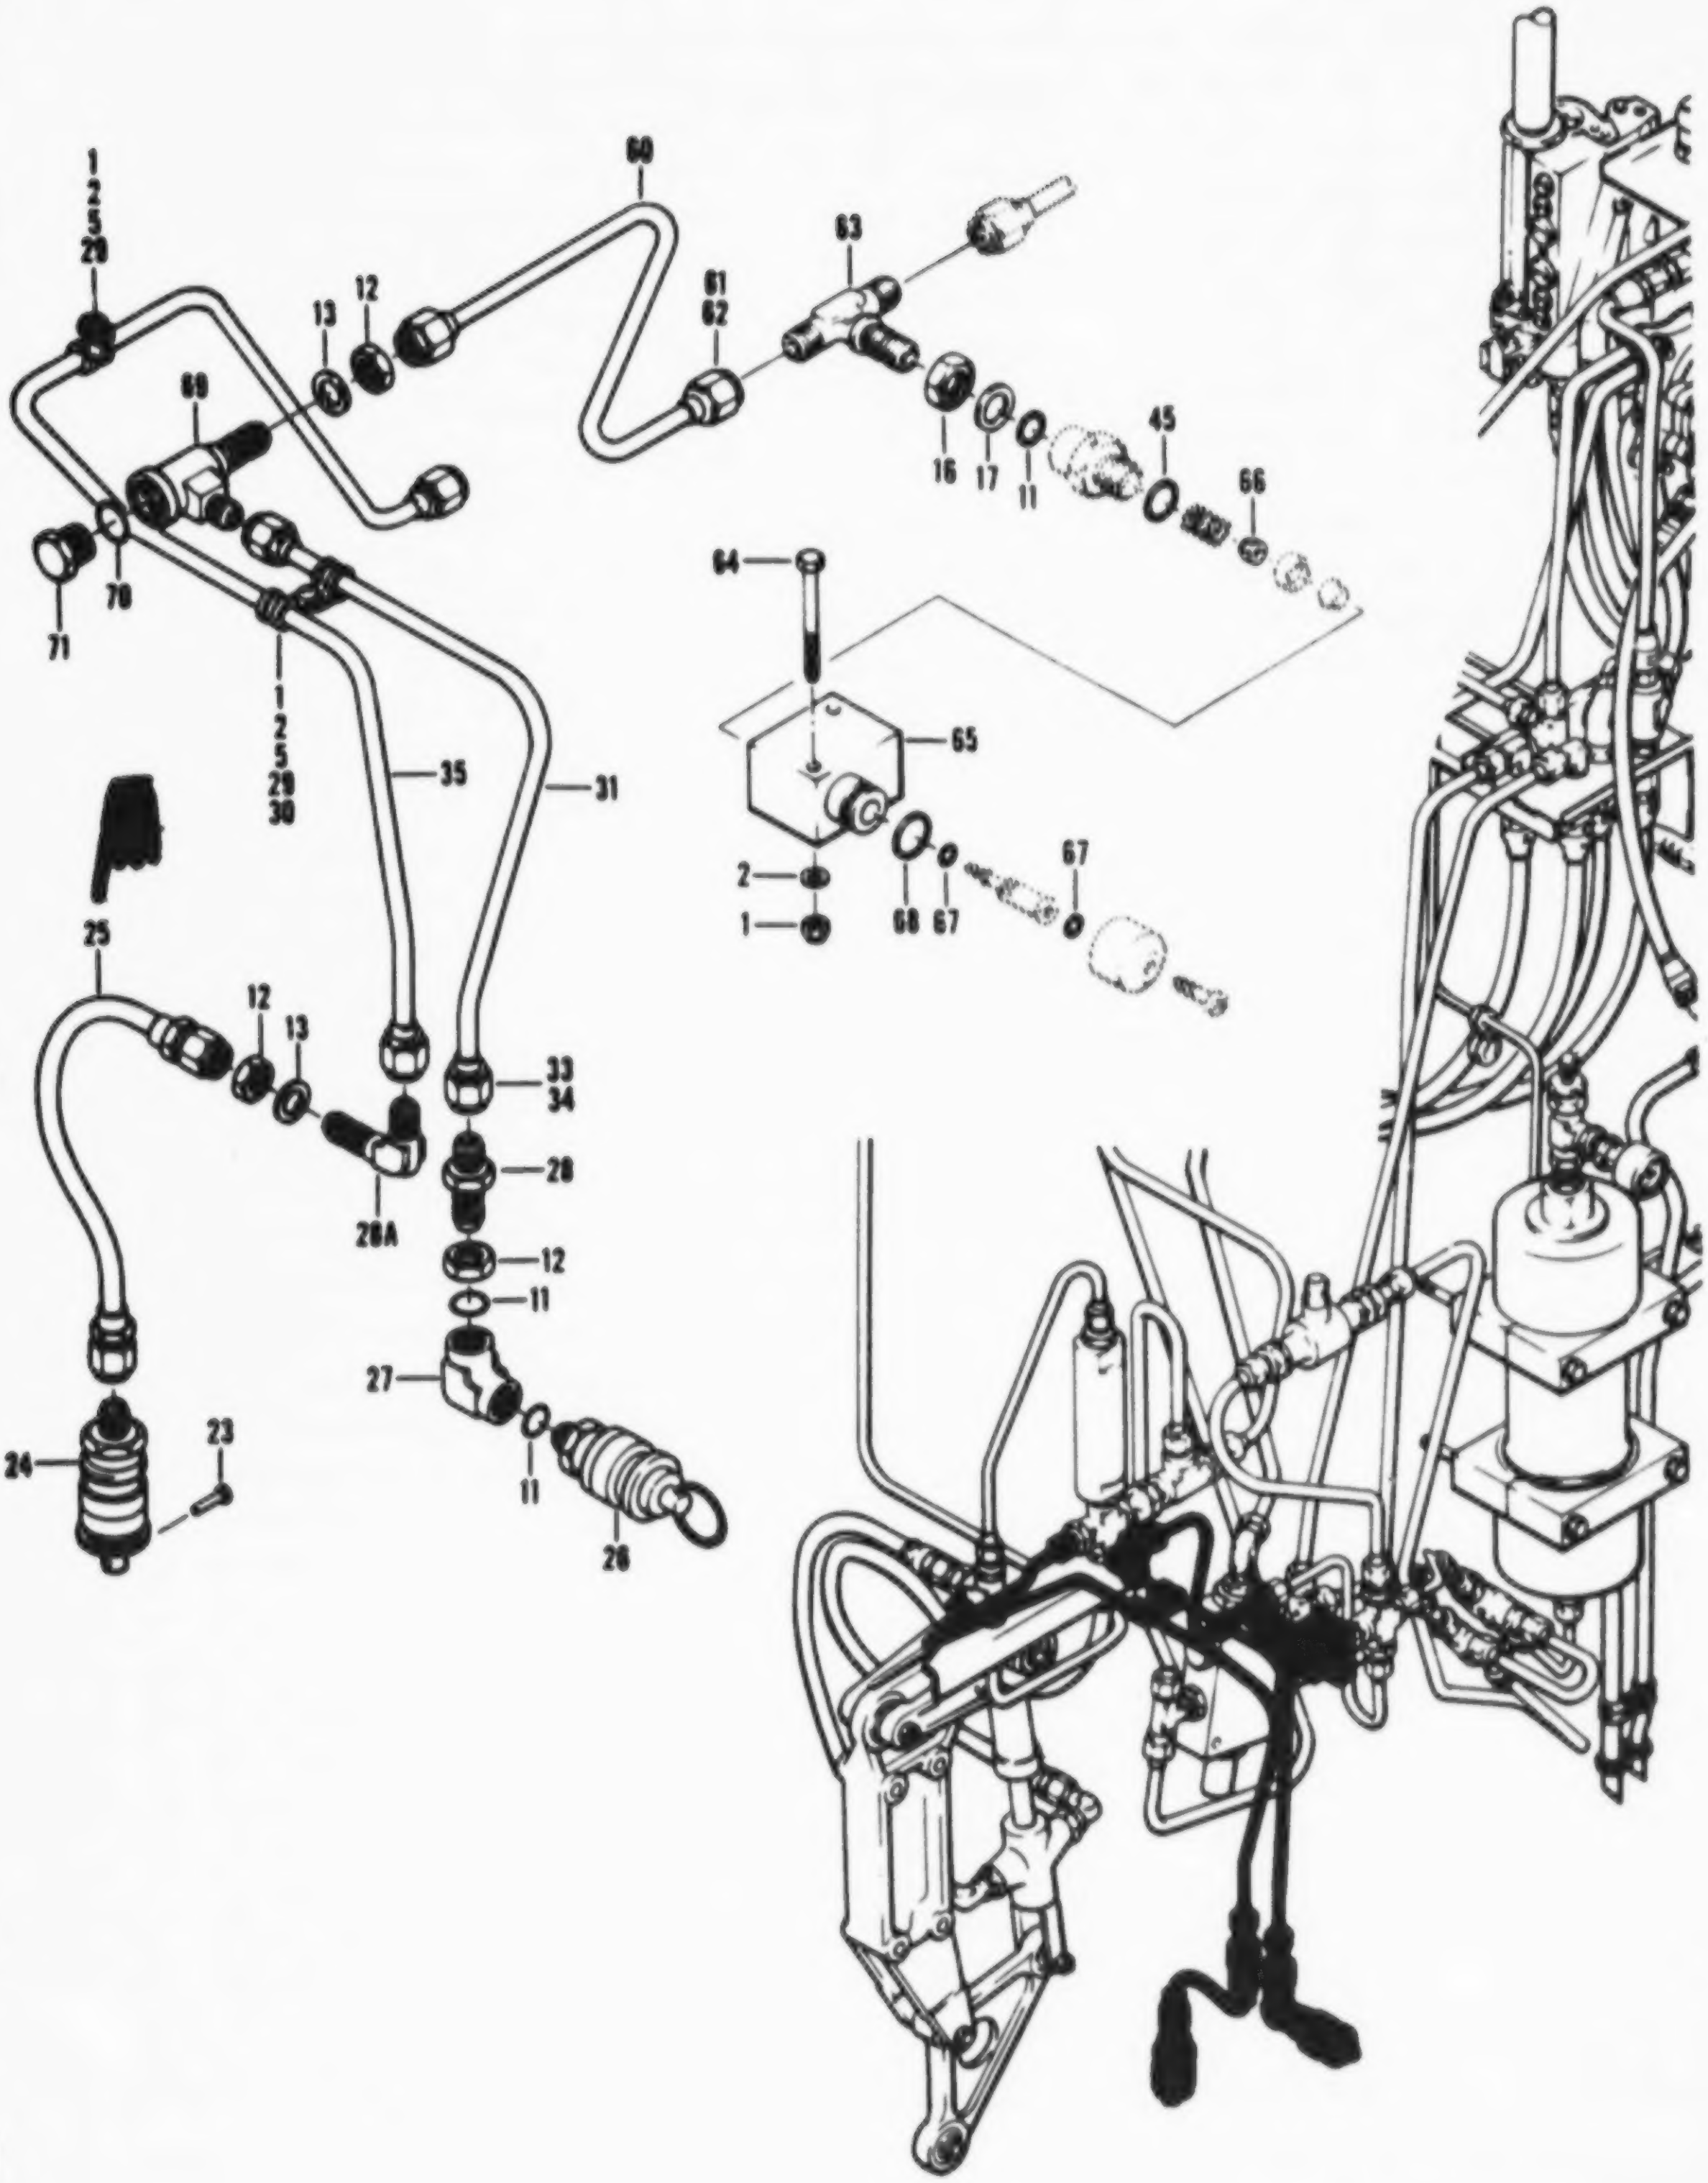
1
2
5
29
60
13
12
69
63
61
62
16
17
11
45
66
70
71
64
65
1
2
5
29
30
35
31
2
1
68
67
67
25
12
13
33
34
28
28A
12
11
27
11
26
24
23

Figure 199. Hydraulic Installation, Dual System, Lines Section (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
199		XCFZZ		97499	204-076-002-7	HYDRAULIC INSTL DUAL SYSTEM,LINES SECTION USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA	UHC,UHM	EA	1
199	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	6
199	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHC,UHM	EA	6
199	3	PAOZZ	5365-00-293-9800	80205	NAS43D03-24	.SPACER,SLEEVE	UHC,UHM	EA	1
199	4	PAOZZ	5305-00-912-7308	96906	MS27039-1-14	.SCREW,MACHINE	UHC,UHM	EA	1
199	5	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHC,UHM	EA	3
199	6	PAOFF	4710-00-872-1201	97499	204-076-386-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	7	PAFZZ	4730-00-555-8203	96906	MS21921-4D	..NUT,TUBE COUPLING	UHC,UHM	EA	6
199	8	PAFZZ	4730-00-289-8619	96906	MS21922-4	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	6
199	9	MFOZZ		96906	MS8001E184A	.HOSE ASSEMBLY,NONME	UHC,UHM	EA	1
199	10	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE,TUBE	UHC,UHM	EA	1
199	11	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED	UHC,UHM	EA	9
199	12	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	4
199	13	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT	UHC,UHM	EA	2
199	14	PAOZZ	4730-00-640-5111	96906	MS21911D4	.TEE,TUBE TO BOSS	UHC,UHM	EA	1
199	15	PAOZZ	4730-00-640-0830	96906	MS21908D4	.ELBOW,TUBE	UHC,UHM	EA	2
199	16	PAOZZ	4730-00-277-6371	88044	AN6289D4	.LOCKNUT,TUBE FITTIN	UHC,UHM	EA	1
199	17	PAOZZ	5330-00-246-6403	96906	MS28773-04	.RETAINER,PACKING	UHC,UHM	EA	1
199	18	MFOZZ		96906	MS80001F152B	.HOSE ASSEMBLY,NONME	UHC,UHM	EA	1
199	19	PAOZZ	4730-00-640-1226	96906	MS21908D5	.ELBOW,TUBE	UHC,UHM	EA	1
199	20	PBOZZ	4730-00-847-3792	96906	MS9099-05	.LOCKNUT,TUBE FITTIN	UHC,UHM	EA	1
199	21	PAOZZ	5330-00-515-3432	96906	MS9058-05	.RETAINER,PACKING	UHC,UHM	EA	1
199	22	PAOZZ	5330-00-833-7491	96906	MS28778-5	.PACKING,PREFORMED	UHC,UHM	EA	V
199	23	PAOZZ	5315-00-811-9102	96906	MS20392-1C11	.PIN,STRAIGHT HEADED	UHC,UHM	EA	1
199	24	PAOZZ	4730-00-930-6106	79326	60009J4	.COUPLING HALF,QUICK DISCONNECT	UHC,UHM	EA	1
199	25	MFOZZ	DELETED	96906	MS8001E102A	.HOSE ASSEMBLY,NONME	UHC,UHM	EA	1
199	26	PAOZZ	4730-00-930-6105	79326	60004J4	.PRESS CAP,ASSEMBLY	UHC,UHM	EA	1
199	27	PAOZZ	4730-00-278-3682	88044	AN939D4	.ELBOW,BOSS	UHC,UHM	EA	1
199	28	PAOZZ	4730-00-580-9166	96906	MS21924D4	.NIPPLE,TUBE	UHC,UHM	EA	2
199	28A	PAOZZ	4730-00-640-0830	96906	MS21908D4	.ELBOW,TUBE	UHC,UHM	EA	1
199	29	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHC,UHM	EA	1
199	30	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHC,UHM	EA	2
199	31	MFOZZ	1560-00-914-6195	97499	204-076-455-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	33	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	2
199	34	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
199	35	MFOZZ	1560-00-914-6004	97499	204-076-460-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	36	PAOZZ	4730-00-640-7201	96906	MS2191606-4	.REDUCER,TUBE	UHC,UHM	EA	1
199	37	MFOZZ	1560-00-913-4032	97499	204-076-461-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	38	PAFZZ	4730-00-555-8203	96906	MS21921-4D	..NUT,TUBE COUPLING	UHC,UHM	EA	2
199	39	PAFZZ	4730-00-289-8619	96906	MS21922-4	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
199	40	PAOZZ	1680-00-872-1200	97499	204-076-343-1	.VALVE ASSEMBLY,HYDR	UHC,UHM	EA	1
199	41	PAOZZ	4730-00-289-2776	96906	MS2191605-4	.REDUCER,TUBE	UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
199	41A	PAOZZ	4730-00-278-2792	88044	AN938D5	.TEE,BOSS	UHC,UHM	EA	1
199	42	PAOZZ	4730-00-720-4244	96906	MS21915D6-5	.ADAPTER,STRAIGHT TUBE TO BOSS	UHC,UHM	EA	1
199	43	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
199	44	PAOZZ	4730-00-618-0705	96906	MS21924D5	.NIPPLE,TUBE	UHC,UHM	EA	1
199	45	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED	UHC,UHM	EA	5
199	46	PAOZZ	5330-00-559-1939	96906	MS9058-06	.RETAINER,PACKING	UHC,UHM	EA	2
199	47	PAOZZ	5310-00-277-5083	88044	AN6289D6	.LOCKNUT,TUBE FITTIN	UHC,UHM	EA	2
199	48	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE	UHC,UHM	EA	2
199	49	PAOZZ	4820-00-923-0625	97499	204-076-437-3	.VALVE,CHECK	UHC,UHM	EA	1
199	50	PAOZZ	4730-00-278-5024	88044	AN937D6	.CROSS,BOSS	UHC,UHM	EA	1
199	51	MFOZZ	1560-00-928-1976	97499	204-076-481-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	52	MFOZZ	1560-00-914-6023	97499	204-076-465-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	53	MFOZZ	1560-00-914-6020	97499	204-076-464-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	54	PAOZZ	5340-00-989-4573	81996	EAB700016	.CLAMP,LOOP	UHC,UHM	EA	1
199	55	MFOZZ	1560-00-914-6011	97499	204-076-463-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	56	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW,TUBE	UHC,UHM	EA	1
199	57	PAOZZ	4730-00-289-2698	96906	MS21909D6	.TEE,TUBE	UHC,UHM	EA	1
199	58	PAOZZ	5365-00-289-4932	88044	AN814-10DL	.PLUG,MACHINE THREAD	UHC,UHM	EA	1
199	59	PAOZZ	5330-00-285-9842	96906	MS28778-10	.PACKING,PREFORMED	UHC,UHM	EA	1
199	60	MFOZZ	1560-00-914-6194	97499	204-076-453-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	61	PAFZZ	4730-00-555-8203	96906	MS21921-4D	..NUT,TUBE COUPLING	UHC,UHM	EA	2
199	62	PAFZZ	4730-00-289-8619	96906	MS21922-4	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
199	63	PAOZZ	4730-00-289-2697	96906	MS21909D4	.TEE,TUBE	UHC,UHM	EA	1
199	64	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE	UHC,UHM	EA	2
199	65	PAOOO	1650-00-930-5274	97499	204-076-013-1	.COCK,POPPET DRAIN	UHC,UHM	EA	1
199	66	PAOZZ	5310-00-807-1471	96906	MS21042L04	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	1
199	67	PAOZZ	5330-00-292-0577	96906	MS28775-007	..PACKING,PREFORMED	UHC,UHM	EA	2
199	68	PAOZZ	5330-00-579-8108	96906	MS28775-111	..PACKING,PREFORMED	UHC,UHM	EA	1
199	69	PAOZZ	4730-00-640-5111	96906	MS21911D4	.TEE,TUBE TO BOSS	UHC,UHM	EA	1
199	70	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED	UHC,UHM	EA	1
199	71	PAOZZ	5365-00-287-0093	88044	AN814-4DL	.PLUG,MACHINE THREAD	UHC,UHM	EA	1
199		XCFZZ		97499	204-076-014-1	.VALVE INSTL,LOCKOUT	UHC,UHM	EA	1
199	72	PAOZZ	5306-00-182-1964	88044	AN4H16A	..BOLT,MACHINE	UHC,UHM	EA	3
199	73	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT	UHC,UHM	EA	3
199	74	PAOOO	1650-00-839-7078	97499	209-076-136-1	..VALVE,HYDRAULIC,PRE	UHC,UHM	EA	1
199	75	MFOZZ	1560-00-986-6215	97499	204-076-488-1	..TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
199	76	PAOZZ	5330-00-804-5695	96906	MS28778-6	..PACKING,PREFORMED	UHC,UHM	EA	3
199	77	PAOZZ	4730-00-541-1749	96906	MS21924D6	..NIPPLE,TUBE	UHC,UHM	EA	1
199	78	PAOZZ	4730-00-277-6026	88044	AN938D6	..TEE,BOSS	UHC,UHM	EA	1
199	81	PAOZZ	4730-00-289-6089	96906	MS21902D6	..NIPPLE,TUBE	UHC,UHM	EA	1
199	82	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	..REDUCER,TUBE	UHC,UHM	EA	1
199	83	PAOZZ	5330-00-805-2966	96906	MS28778-4	..PACKING,PREFORMED	UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
199	84	PAOZZ	4820-00-937-8701	97499	204-076-343-3	..VALVE,SAFETY RELIEF.......UHC,UHM	EA	1
199	85	MFOZZ	1560-00-986-6209	97499	204-076-487-1	..TUBE ASSEMBLY,METAL.......UHC,UHM	EA	1
199	86	PAOZZ	4730-00-246-9620	96906	MS2191206	..TEE,TUBE.......UHC,UHM	EA	2
199	87	MFOZZ	4710-00-987-9822	97499	204-076-491-1	..TUBE ASSEMBLY,METAL.......UHC,UHM	EA	1

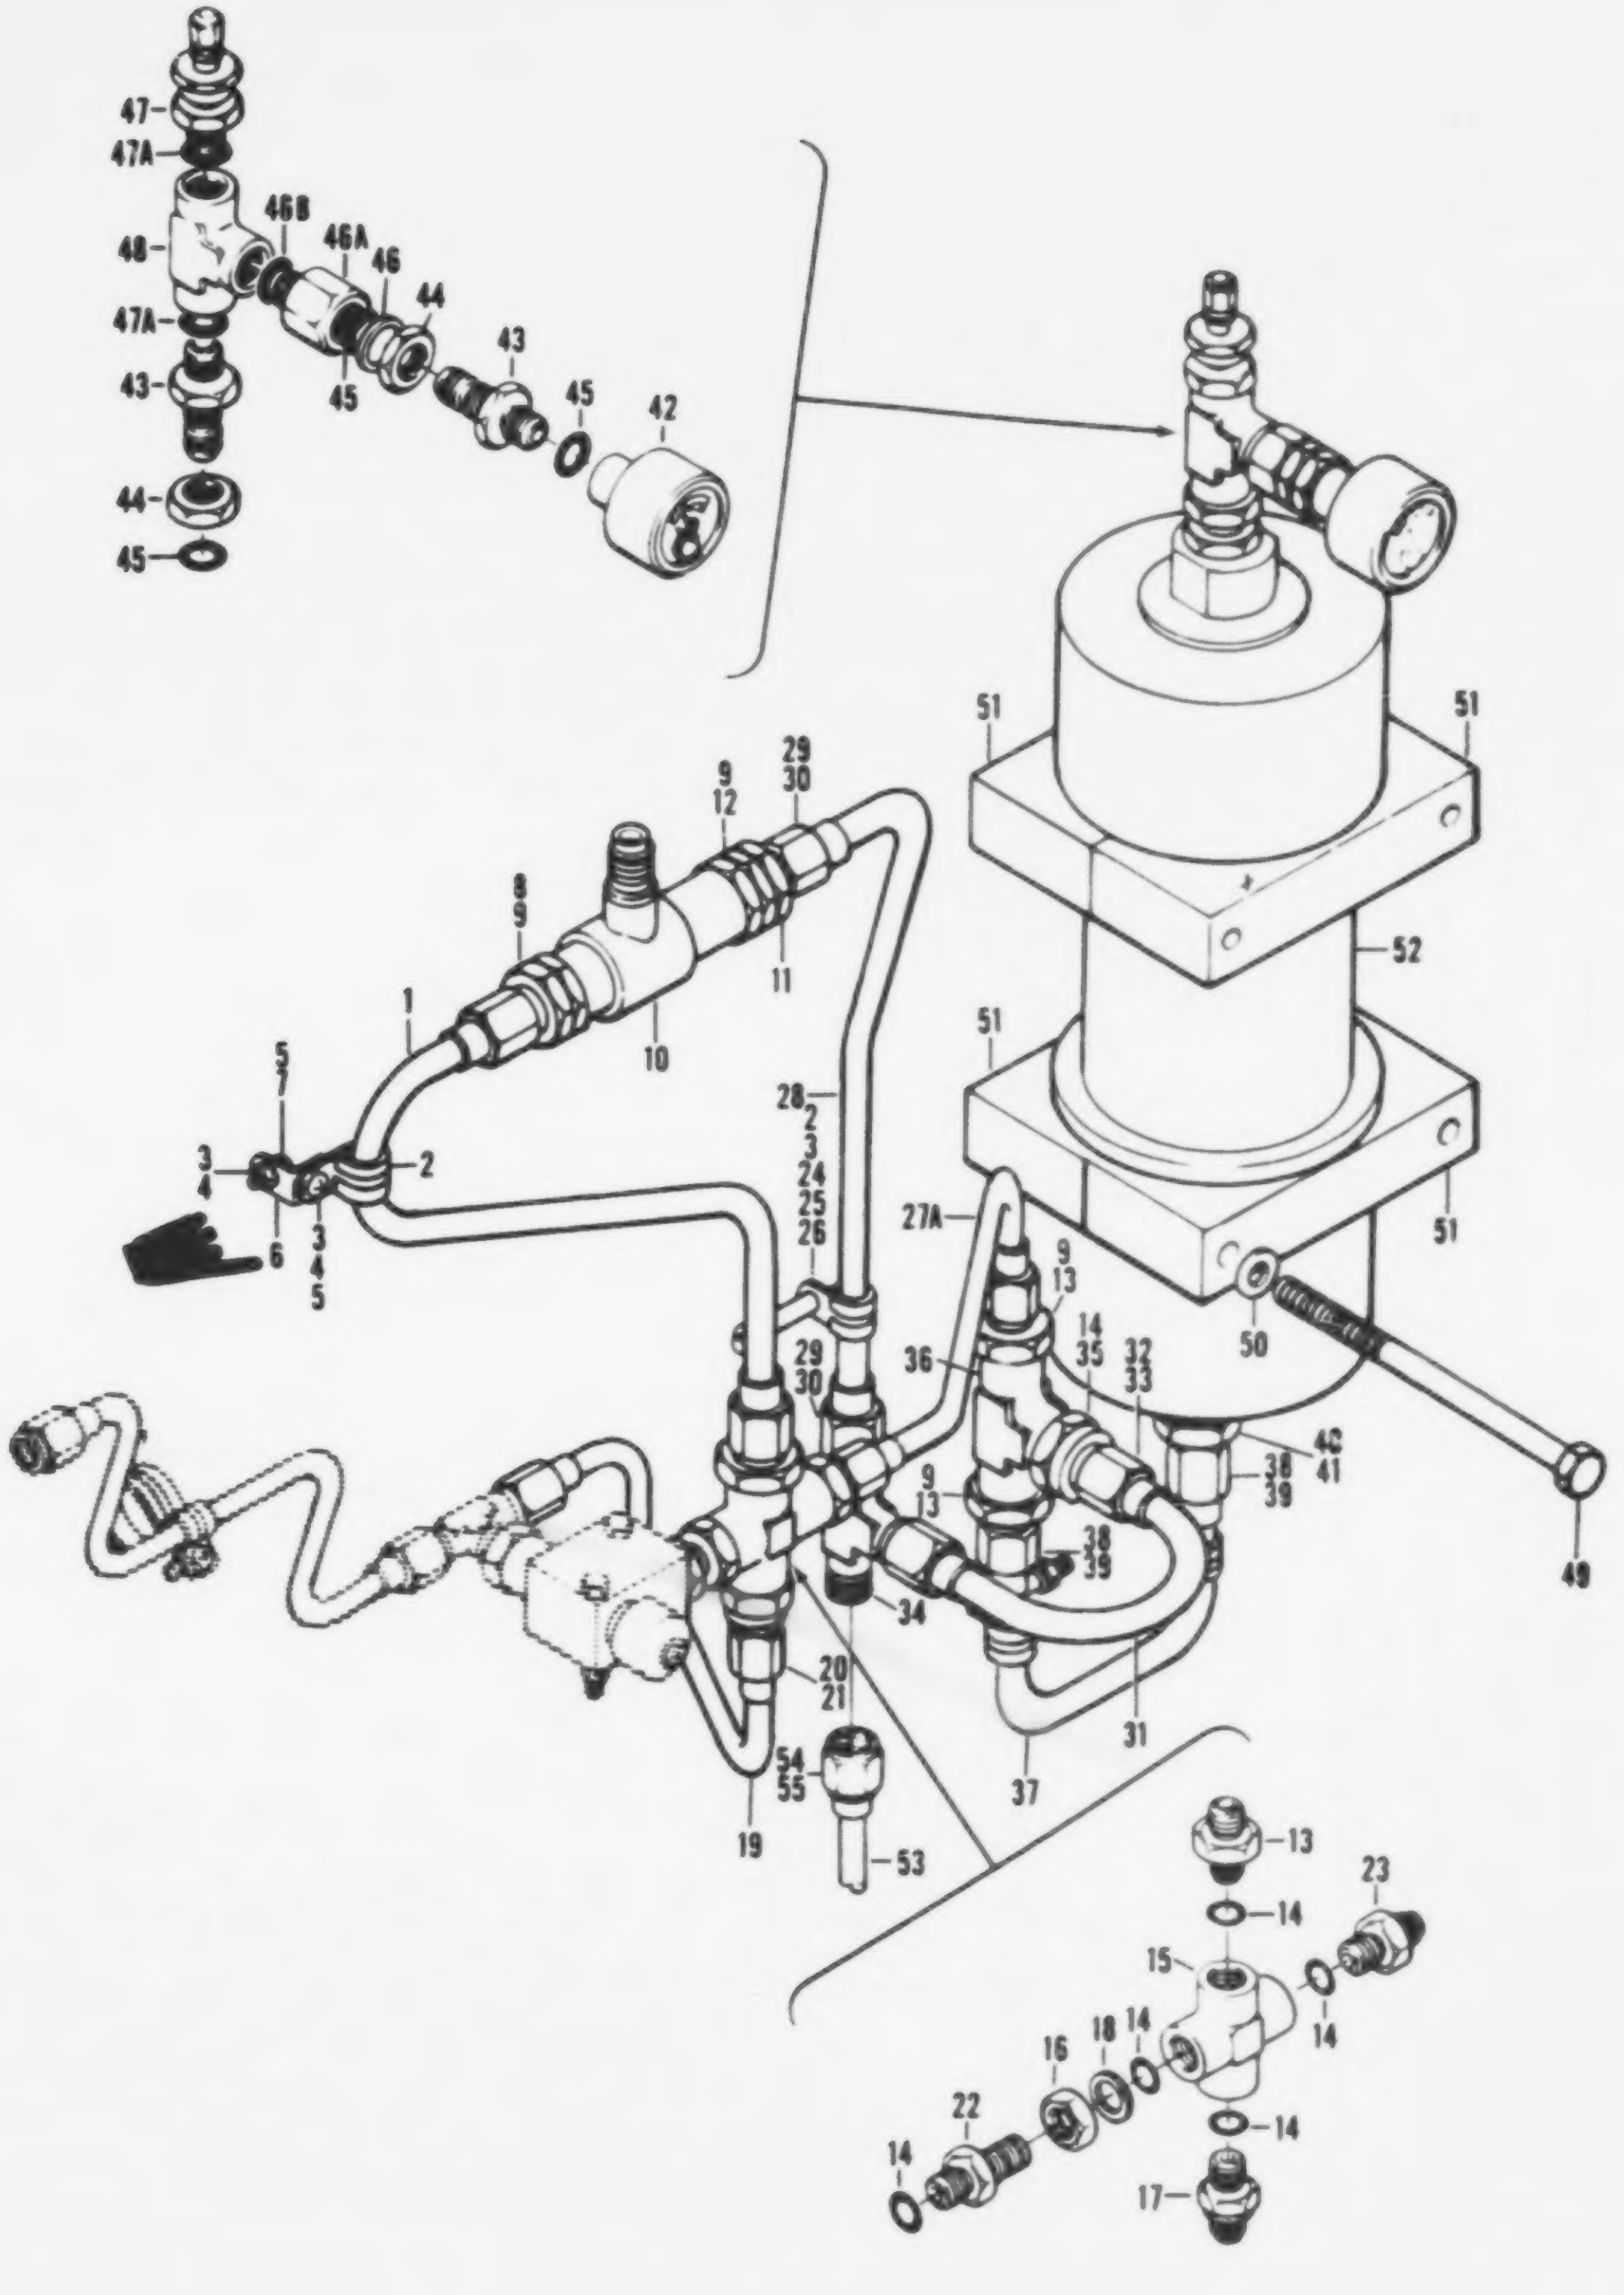
47
47A
48
47A
43
44
45
46B
46A
46
44
45
43
45
42
51
51
29
30
9
12
8
9
1
11
10
52
51
5
7
3
4
2
28
2
3
24
25
26
27A
51
6
3
4
5
9
13
14
35
32
33
50
36
29
30
40
41
38
39
9
13
38
39
49
34
20
21
31
37
54
55
19
53
13
14
23
15
14
16
18
14
22
14
14
17

Figure 200. Hydraulic Installation, Dual System, Lines Section (Sheet 1 of 3)

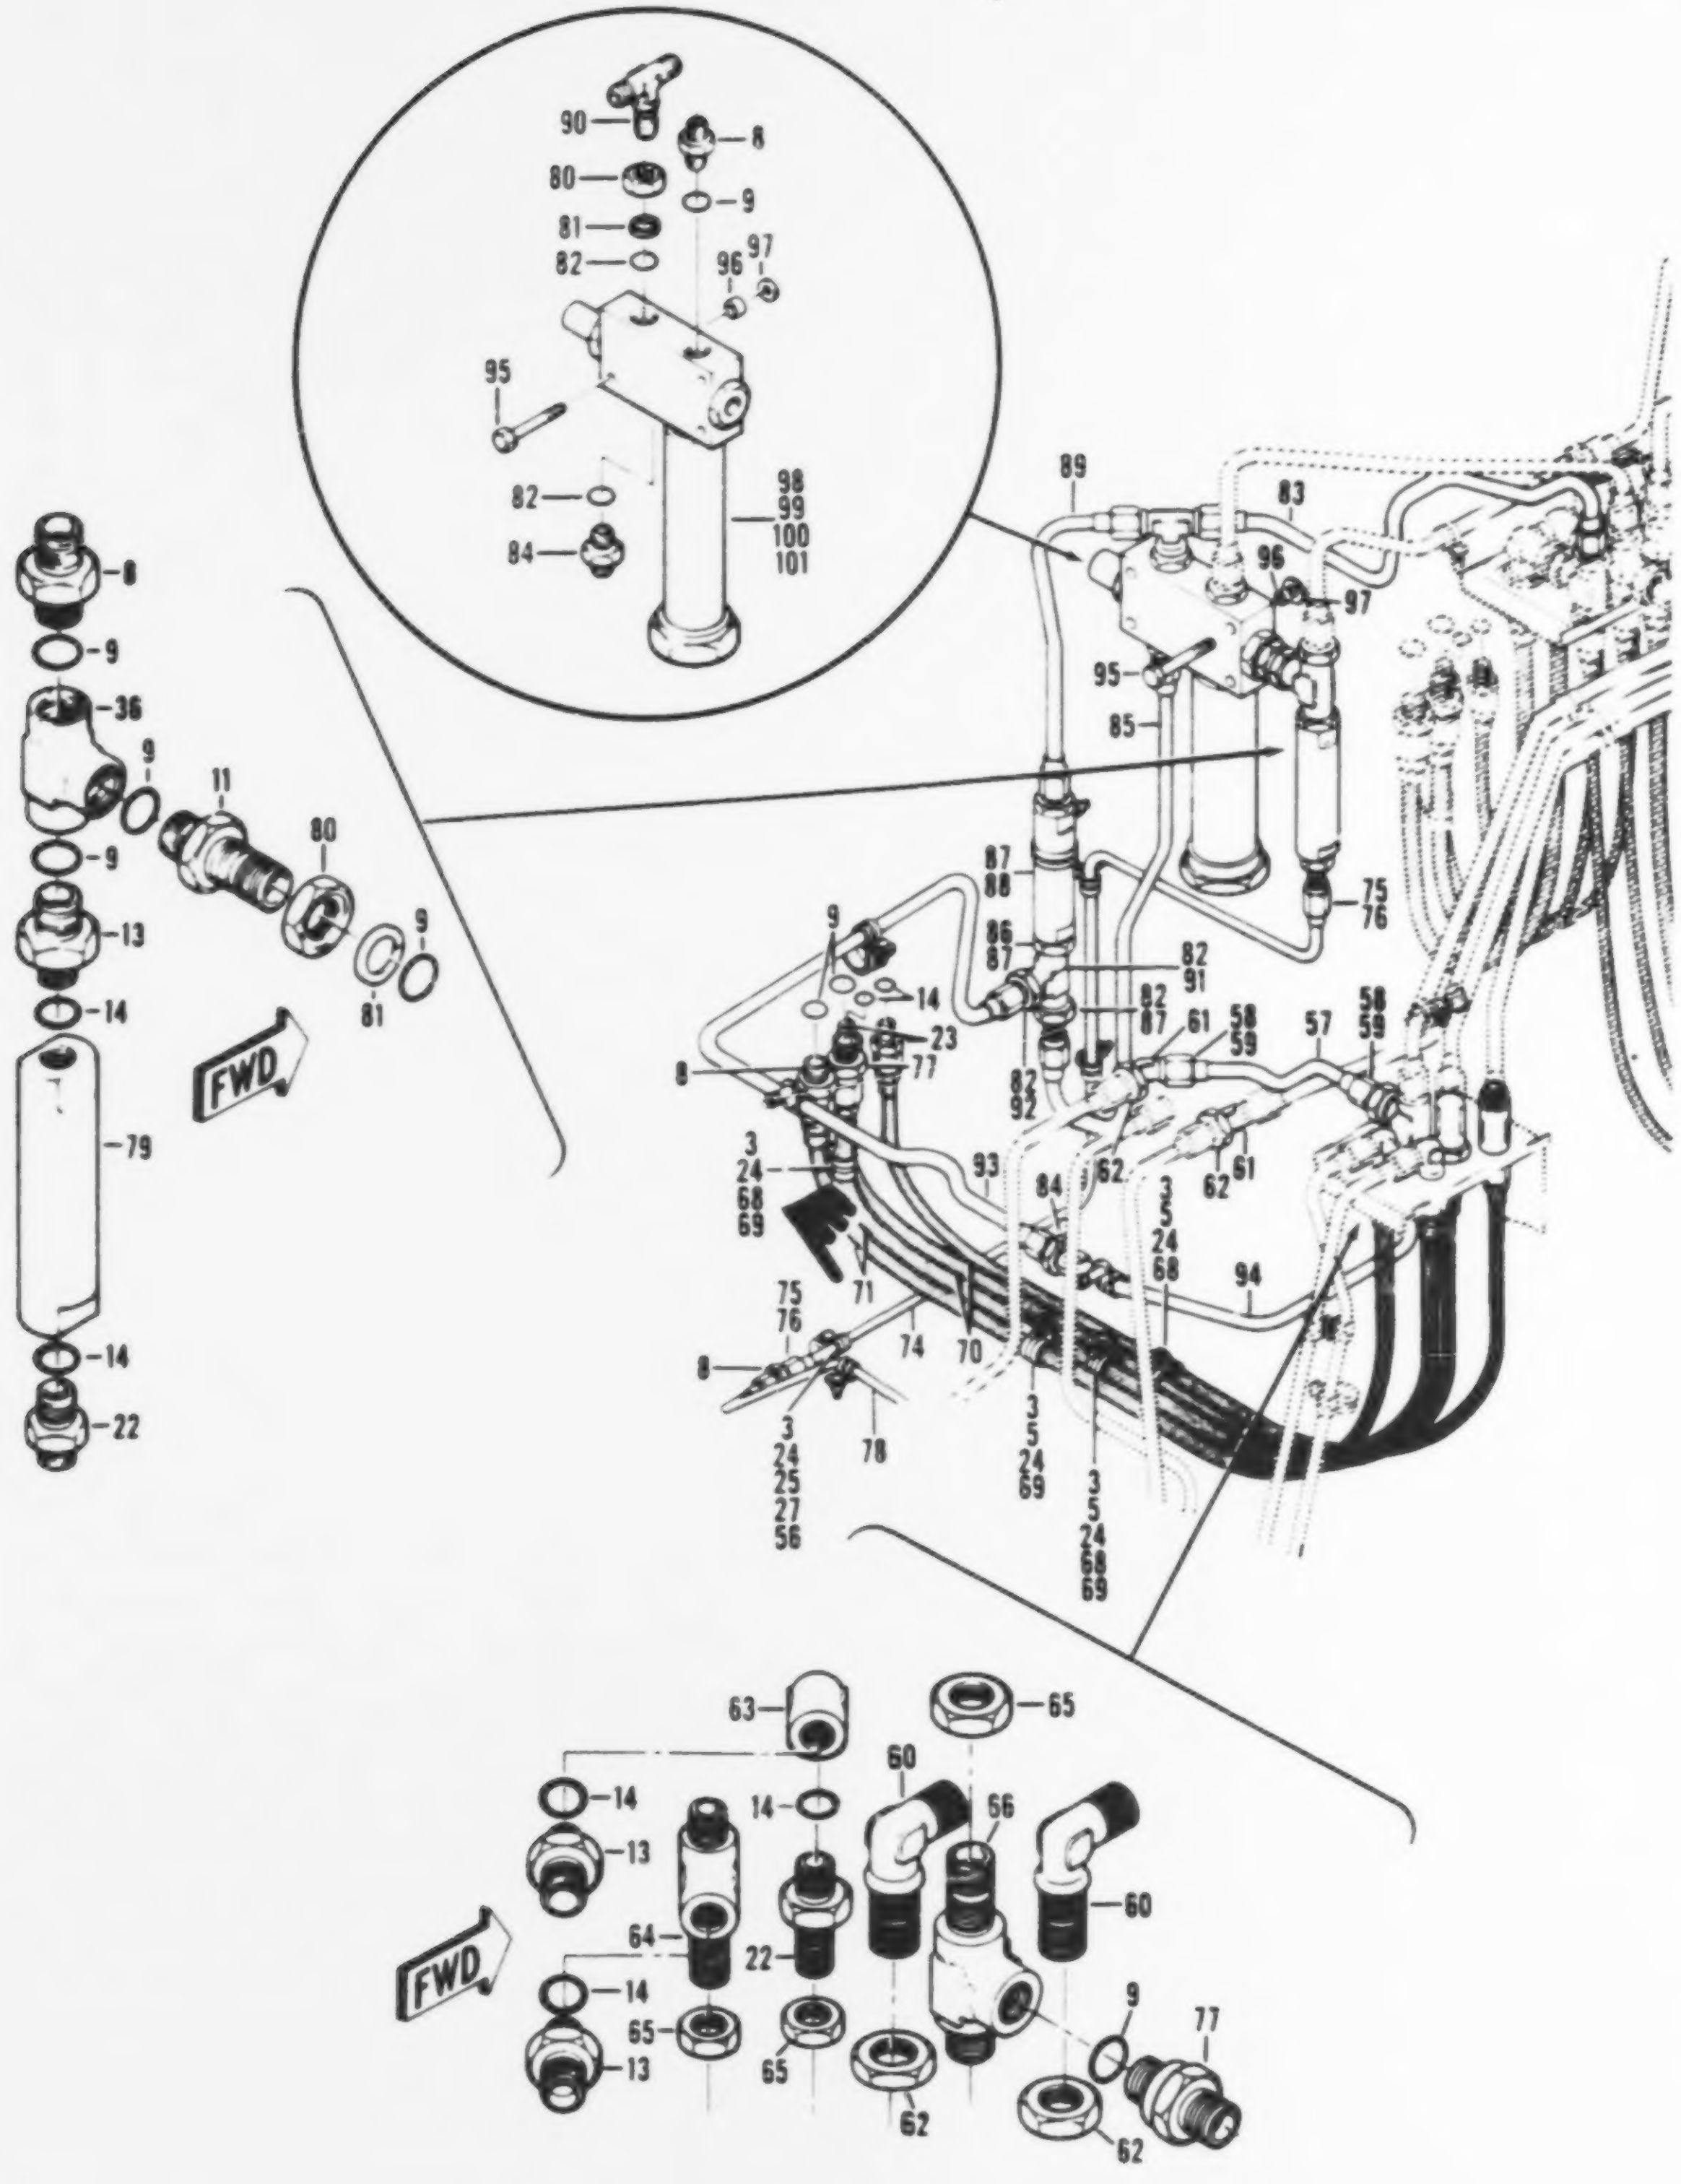
90
8
80
9
81
82
96
97
95
82
84
98
99
100
101
8
9
36
9
11
9
80
13
9
81
14
FWD
79
14
22
89
83
96
97
95
85
87
88
75
76
9
86
87
82
91
82
87
14
23
77
8
61
58
59
57
58
59
82
92
3
24
68
69
93
84
62
62
61
3
5
24
68
94
71
75
76
74
70
8
3
24
25
27
56
78
3
5
24
69
3
5
24
68
69
63
65
60
14
14
66
13
60
FWD
64
22
14
9
77
65
65
13
62
62

Figure 200. Hydraulic Installation, Dual System, Lines Section (Sheet 2 of 3)

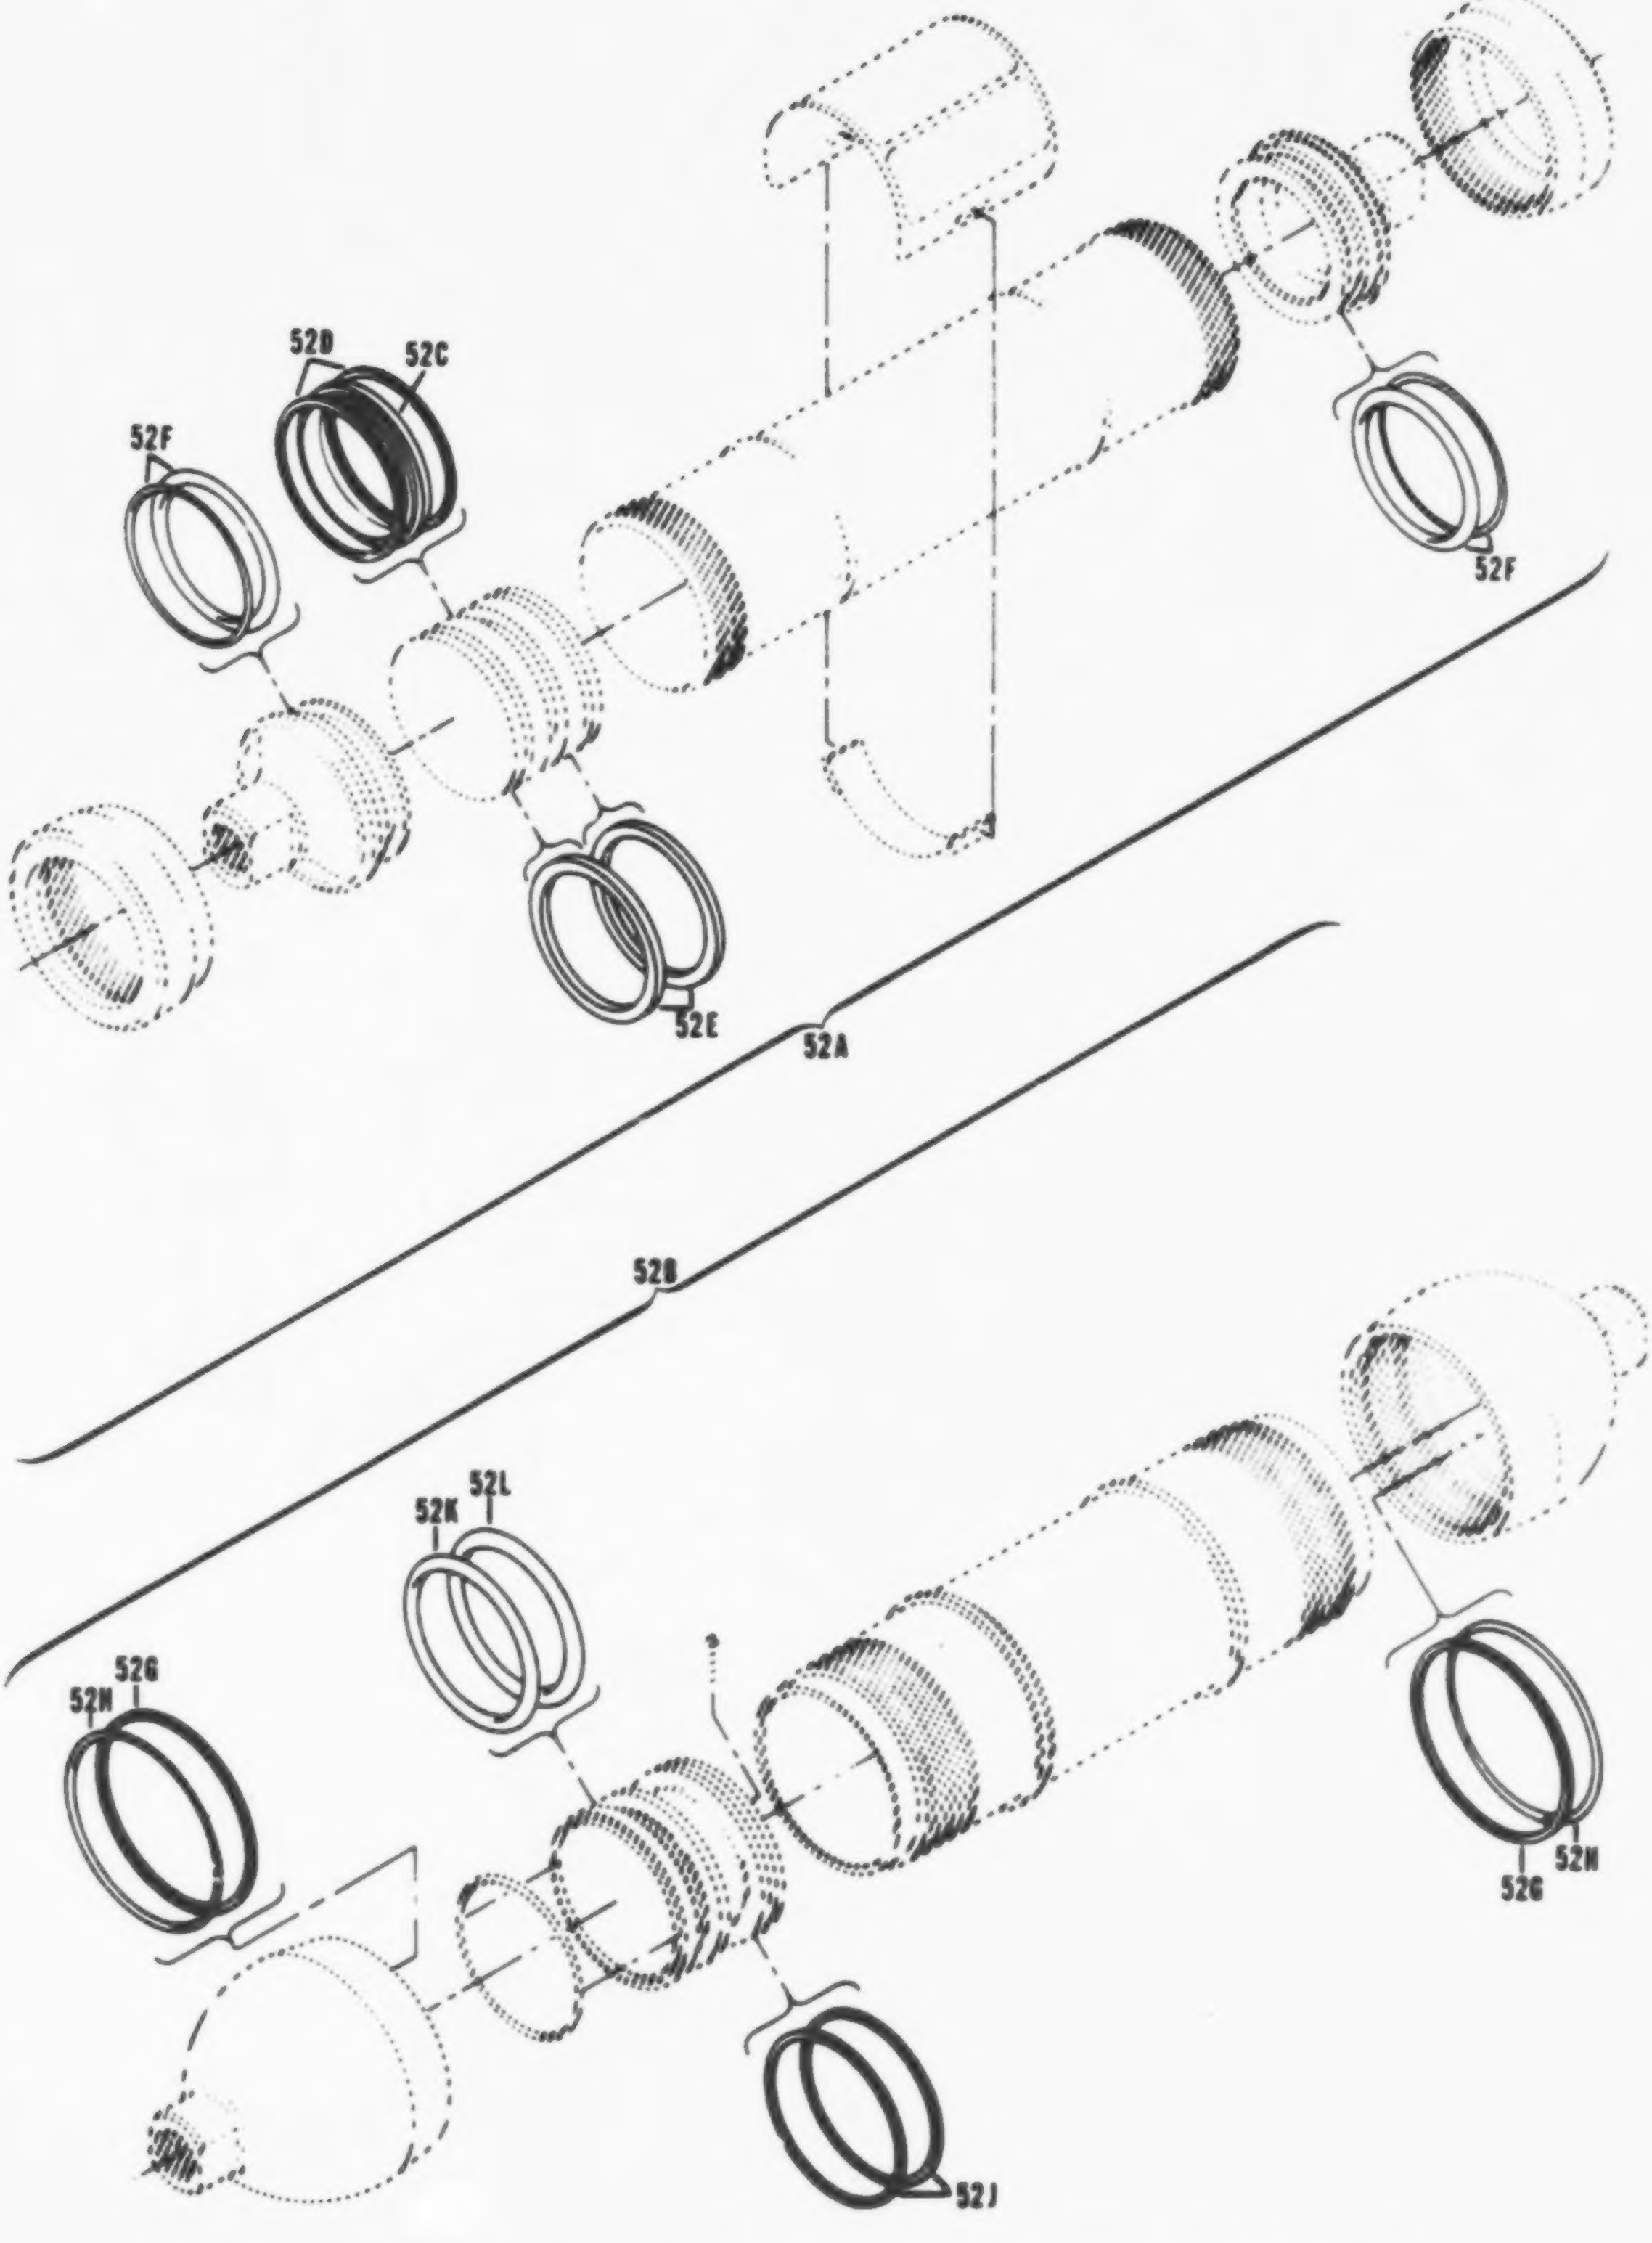
52D
52C
52F
52F
52E
52A
52B
52K
52L
52N
52G
52G
52N
52J

Figure 200. Hydraulic Installation, Dual System, Lines Section (Sheet 3 of 3)

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
200		XCFZZ		97499	204-076-002-7	HYDRAULIC INSTL DUAL SYSTEM,LINES SECTION USBL EFF 66-492 & SUBSEQUENT SEE FIG 6 FOR NHA	UHC,UHM	EA	1
200	1	MFOZZ	1560-00-862-3731	97499	204-076-501-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	2	PAOZZ	5340-00-187-6023	96906	MS21122-6	CLAMP,LOOP	UHC,UHM	EA	6
200	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHC,UHM	EA	V
200	4	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	2
200	5	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE	UHC,UHM	EA	11
200	6	MFOZZ	DELETED	97499	20-032-1	BRACKET,ENGINE	UHC,UHM	EA	1
200	7	PAOZZ	5365-00-622-1810	80205	NAS43D03-8	SPACER,SLEEVE	UHC,UHM	EA	1
200	8	PAOZZ	4730-00-289-6089	96906	MS21902D6	NIPPLE,TUBE	UHC,UHM	EA	V
200	9	PAOZZ	5330-00-804-5695	96906	MS28778-6	PACKING,PREFORMED	UHC,UHM	EA	18
200	10	PAOZZ	4810-00-930-5102	97499	204-076-439-1	VALVE,SOLENOID	UHC,UHM	EA	1
200	11	PAOZZ	4730-00-641-1749	96906	MS21924D6	NIPPLE,TUBE	UHC,UHM	EA	3
200	12	PAOZZ	5310-00-638-2805	96906	MS24400D6	NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
200	13	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	REDUCER,TUBE	UHC,UHM	EA	7
200	14	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING,PREFORMED	UHC,UHM	EA	11
200	15	PAOZZ	4730-00-278-8469	88044	AN937D4	CROSS,BOSS	UHC,UHM	EA	1
200	16	PAOZZ	4730-00-277-6371	88044	AN6289D4	LOCKNUT,TUBE FITTIN	UHC,UHM	EA	1
200	17	PAOZZ	4820-00-930-5273	97499	204-076-437-1	VALVE,CHECK	UHC,UHM	EA	1
200	18	PAOZZ	5330-00-246-6403	96906	MS28773-04	RETAINER,PACKING	UHC,UHM	EA	1
200	19	MFOZZ	1560-00-932-1199	97499	204-076-484-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	20	PAFZZ	4730-00-555-8203	96906	MS21921-4D	NUT,TUBE COUPLING	UHC,UHM	EA	6
200	21	PAFZZ	4730-00-289-8619	96906	MS21922-4	SLEEVE,CLINCH,TUBE	UHC,UHM	EA	6
200	22	PAOZZ	4730-00-580-9165	96906	MS21924D4	NIPPLE,TUBE	UHC,UHM	EA	2
200	23	PAOZZ	4730-00-142-2155	96906	MS21902D4	NIPPLE,TUBE	UHC,UHM	EA	4
200	24	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	6
200	25	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE	UHC,UHM	EA	4
200	26	PAOZZ	5365-00-585-3579	80205	NAS43D03-52	SPACER,SLEEVE	UHC,UHM	EA	1
200	27	PAOZZ	5340-00-151-5997	96906	MS21122-4	CLAMP,LOOP	UHC,UHM	EA	6
200	27A	MFOZZ		97499	204-076-483-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	28	MFOZZ	1560-00-854-9127	97499	204-076-502-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	29	PAFZZ	4730-00-554-7397	96906	MS21921-6D	NUT,TUBE COUPLING	UHC,UHM	EA	8
200	30	PAFZZ	4730-00-554-7398	96906	MS21922-6	SLEEVE,CLINCH,TUBE	UHC,UHM	EA	8
200	31	MFOZZ	1560-00-914-5976	97499	204-076-454-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	32	PAFZZ	4730-00-554-7397	96906	MS21921-6D	NUT,TUBE COUPLING	UHC,UHM	EA	2
200	33	PAFZZ	4730-00-554-7398	96906	MS21922-6	SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
200	34	PAOZZ	4730-00-278-2434	96906	MS21905D6	TEE,TUBE	UHC,UHM	EA	1
200	36	PAOZZ	4820-00-923-0625	97499	204-076-437-3	VALVE,CHECK	UHC,UHM	EA	1
200	36	PAOZZ	4730-00-277-5026	88044	AN9380б	TEE,BOSS	UHC,UHM	EA	3
200	37	MFOZZ	1560-00-914-6036	97499	204-076-459-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	38	PAFZZ	4730-00-555-8203	96906	MS21921-4D	NUT,TUBE COUPLING	UHC,UHM	EA	2
200	39	PAFZZ	4730-00-289-8619	96906	MS21922-4	SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
200	40	PAOZZ	4730-00-640-7200	96906	MS21916D8-4	REDUCER,TUBE	UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
200	41	PAOZZ	5330-00-808-0794	96906	MS28778-8	.PACKING,PREFORMED	UHC,UHM	EA	1
200	42	PAOZZ	6685-00-930-5237	34830	G-3565	.GAGE,PRESSURE,DIAL	UHC,UHM	EA	1
200	43	PAOZZ	4730-00-618-0705	96906	MS2192405	.NIPPLE,TUBE	UHC,UHM	EA	2
200	44	PBOZZ	4730-00-847-3792	96906	MS9099-05	.LOCKNUT,TUBE FITTIN	UHC,UHM	EA	2
200	45	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED	UHC,UHM	EA	3
200	46	PAOZZ	5330-00-515-3432	96906	MS9058-06	.RETAINER,PACKING	UHC,UHM	EA	1
200	46A	PAOZZ	4730-00-231-1324	88044	AN893-1D	.REDUCER,BOSS	UHC,UHM	EA	1
200	46B	PAOZZ	5330-00-833-7491	96906	MS28778-5	.PACKING,PREFORMED	UHC,UHM	EA	1
200	47	PAOOO	4820-00-535-6483	96906	MS28889-1	.VALVE,PNEUMATIC TAN	UHC,UHM	EA	1
200	47A	PAOZZ	5330-00-079-7381	96906	MS24690	..PACKING,PREFORMED	UHC,UHM	EA	1
200	48	PAOZZ	4730-00-278-2792	88044	AN938D5	.TEE,BOSS	UHC,UHM	EA	1
200	49	PAOZZ	5306-00-282-2678	88044	AN4H43A	.BOLT,MACHINE	UHC,UHM	EA	4
200	50	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHC,UHM	EA	5
200	51	PAOZZ	1560-00-930-5207	97499	204-076-447-1	.SUPPORT,ACCUMULATOR	UHC,UHM	EA	1
200	52	PAOFF	1650-00-591-0726	97499	209-076-136-1	.ACCUMULATOR,HYDRAUL	UHC,UHM	EA	1
200	52A	PAOFF	1650-00-591-0726	92003	2690324	.ACCUMULATOR,HYDRAUL	UHC,UHM	EA	1
200	52B	PAOFF	1650-00-591-0726	89307	60001-3	.ACCUMULATOR,HYDRAUL	UHC,UHM	EA	1
200	52C	PAFZZ	5330-00-641-1481	96906	MS28775-332	..PACKING,PREFORMED	UHC,UHM	EA	2
200	52D	XDFZZ		92003	1456-573461	..SPACER,RING	UHC,UHM	EA	2
200	52E	PAFZZ	1650-00-928-0283	92003	1456-573411	..RING,ACCUMULATOR	UHC,UHM	EA	2
200	52F	PAFZZ	5330-00-191-4926	89307	S304-12	..GASKET	UHC,UHM	EA	2
200	52G	PAFZZ	5330-00-576-9733	96906	MS28775-234	..PACKING,PREFORMED	UHC,UHM	EA	2
200	52H	PAFZZ	5330-00-582-1535	96906	MS28774-231	..PACKING,PREFORMED	UHC,UHM	EA	2
200	52J	PAFZZ	5330-00-297-9987	96906	MS28775-333	..PACKING,PREFORMED	UHC,UHM	EA	1
200	52K	PAFZZ	5330-00-292-0678	96906	MS28775-334	..PACKING,PREFORMED	UHC,UHM	EA	1
200	52L	PAFZZ	5330-00-008-5961	02886	6230-8TEFLON	..PACKING,PREFORMED	UHC,UHM	EA	1
200	53	MFOZZ	1560-00-914-6196	97499	204-076-467-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	54	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	2
200	55	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
200	56	PAOZZ	5340-00-698-8251	88044	AN743-12	.BRACKET,ANGLE	UHC,UHM	EA	1
200	57	MFOZZ	1560-00-914-6202	97499	204-076-489-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	58	PAFZZ	4730-00-554-7397	96906	MS21921-6D	..NUT,TUBE COUPLING	UHC,UHM	EA	2
200	59	PAFZZ	4730-00-554-7398	96906	MS21922-6	..SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
200	60	PAOZZ	4730-00-278-8160	96906	MS2190806	.ELBOW,TUBE	UHC,UHM	EA	2
200	61	PAOZZ	4730-00-278-8165	96906	MS2190706	.ELBOW,TUBE	UHC,UHM	EA	2
200	62	PAOZZ	5310-00-638-2806	96906	MS2440006	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	4
200	63	PAOZZ	4730-00-278-3882	88044	AN939D4	.ELBOW,BOSS	UHC,UHM	EA	1
200	64	PAOZZ	4730-00-277-9306	96906	MS2191004	.TEE,TUBE TO BOSS	UHC,UHM	EA	1
200	65	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	3
200	66	PAOZZ	4730-00-277-9256	96906	MS2191006	.TEE,TUBE TO BOSS	UHC,UHM	EA	7
200	68	PAOZZ	5340-00-993-6245	81996	EAB70006	.CLAMP,LOOP	UHC,UHM	EA	4
200	69	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP	UHC,UHM	EA	5

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG NO	(B) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
200	70	MFOZZ		96906	MS8001E330A	HOSE ASSEMBLY,NONME	UHC,UHM	EA	2
200	71	MFOZZ	DELETED	96906	MS8001G330A	HOSE ASSEMBLY,NONME	UHC,UHM	EA	2
200	74	MFOZZ	1560-00-914-9954	97499	204-076-474-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	75	PAFZZ	4730-00-555-8203	96906	MS21921-4D	NUT,TUBE COUPLING	UHC,UHM	EA	2
200	76	PAFZZ	4730-00-289-8619	96906	MS21922-4	SLEEVE,CLINCH,TUBE	UHC,UHM	EA	2
200	77	PAOZZ	4820-00-923-0625	97499	204-076-437-3	VALVE,CHECK	UHC,UHM	EA	2
200	78	MFOZZ	1560-00-927-9510	97499	204-076-480-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	79	PAOZZ	4820-00-872-3334	96906	MS28893A4-600	VALVE,SAFETY RELIEF	UHC,UHM	EA	1
200		XCFZZ		97499	204-076-014-1	VALVE INSTL,LOCKOUT	UHC,UHM	EA	REF
200	80	PAOZZ	5310-00-277-5083	88044	AN628906	LOCKNUT,TUBE FITTIN	UHC,UHM	EA	2
200	81	PAOZZ	5330-00-559-1939	96906	MS9058-06	RETAINER,PACKING	UHC,UHM	EA	2
200	82	PAOZZ	5330-00-804-5695	96906	MS28778-6	PACKING,PREFORMED	UHC,UHM	EA	5
200	83	MFOZZ	1560-00-986-6201	97499	204-076-486-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	84	PAOZZ	4730-00-289-6089	96906	MS2190206	NIPPLE,TUBE	UHC,UHM	EA	2
200	85	MFOZZ	4710-00-987-9820	97499	204-076-489-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	86	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING,PREFORMED	UHC,UHM	EA	2
200	87	PAOZZ	4730-00-640-7201	96906	MS2191606-4	REDUCER,TUBE	UHC,UHM	EA	2
200	88	PAOZZ	4820-00-937-8701	97499	204-076-343-3	VALVE,SAFETY RELIEF	UHC,UHM	EA	1
200	89	MFOZZ	1560-00-986-6234	97499	204-076-492-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
200	90	PAOZZ	4730-00-289-2898	96906	MS2190906	TEE,TUBE	UHC,UHM	EA	1
200	91	PAOZZ	4730-00-277-5026	88044	AN93806	TEE,BOSS	UHC,UHM	EA	1
200	92	PAOZZ	4730-00-541-1749	96906	MS2192406	NIPPLE,TUBE	UHC,UHM	EA	1
200	93	MFOZZ	1560-00-834-6669	97499	204-076-497-1	TUBE ASSEMBLY,METAL U/W STANDARD FUEL SYSTEM	UHC,UHM	EA	1
200	93	MFOZZ		97499	204-076-153-1	TUBE ASSEMBLY U/W CRASHWORTHY FUEL SYSTEM	UHC,UHM	EA	1
200	94	MFOZZ	4710-00-987-9821	97499	204-076-490-1	TUBE ASSEMBLY,METAL U/W STANDARD FUEL SYSTEM	UHC,UHM	EA	1
200	94	MFOZZ		97499	204-076-154-1	TUBE ASSEMBLY U/W CRASHWORTHY FUEL SYSTEM	UHC,UHM	EA	1
200	95	PAOZZ	5306-00-182-1966	88044	AN4H20A	BOLT,MACHINE	UHC,UHM	EA	3
200	96	PAOZZ	5365-00-585-9004	80205	NAS43D04-8	SPACER,SLEEVE	UHC,UHM	EA	2
200	97	PAOZZ	5310-00-184-9001	88044	AN960PD416L	WASHER,FLAT	UHC,UHM	EA	1
200	98	AOOOZ	1650-00-930-5275	97499	204-076-012-1	ACCUMULATOR,HYDRAUL VALVE	UHC,UHM	EA	1
200	99	PAOOO	1650-00-839-7078	97499	209-076-136-1	VALVE,HYDRAULIC,PRE	UHC,UHM	EA	1
200	100	PAOZZ	1650-00-877-7186	97499	204-076-012-5	ACCUMULATOR,HYDRAUL	UHC,UHM	EA	1
200	101	PAOZZ	5330-00-285-9842	96906	MS28778-10	PACKING,PREFORMED	UHC,UHM	EA	1

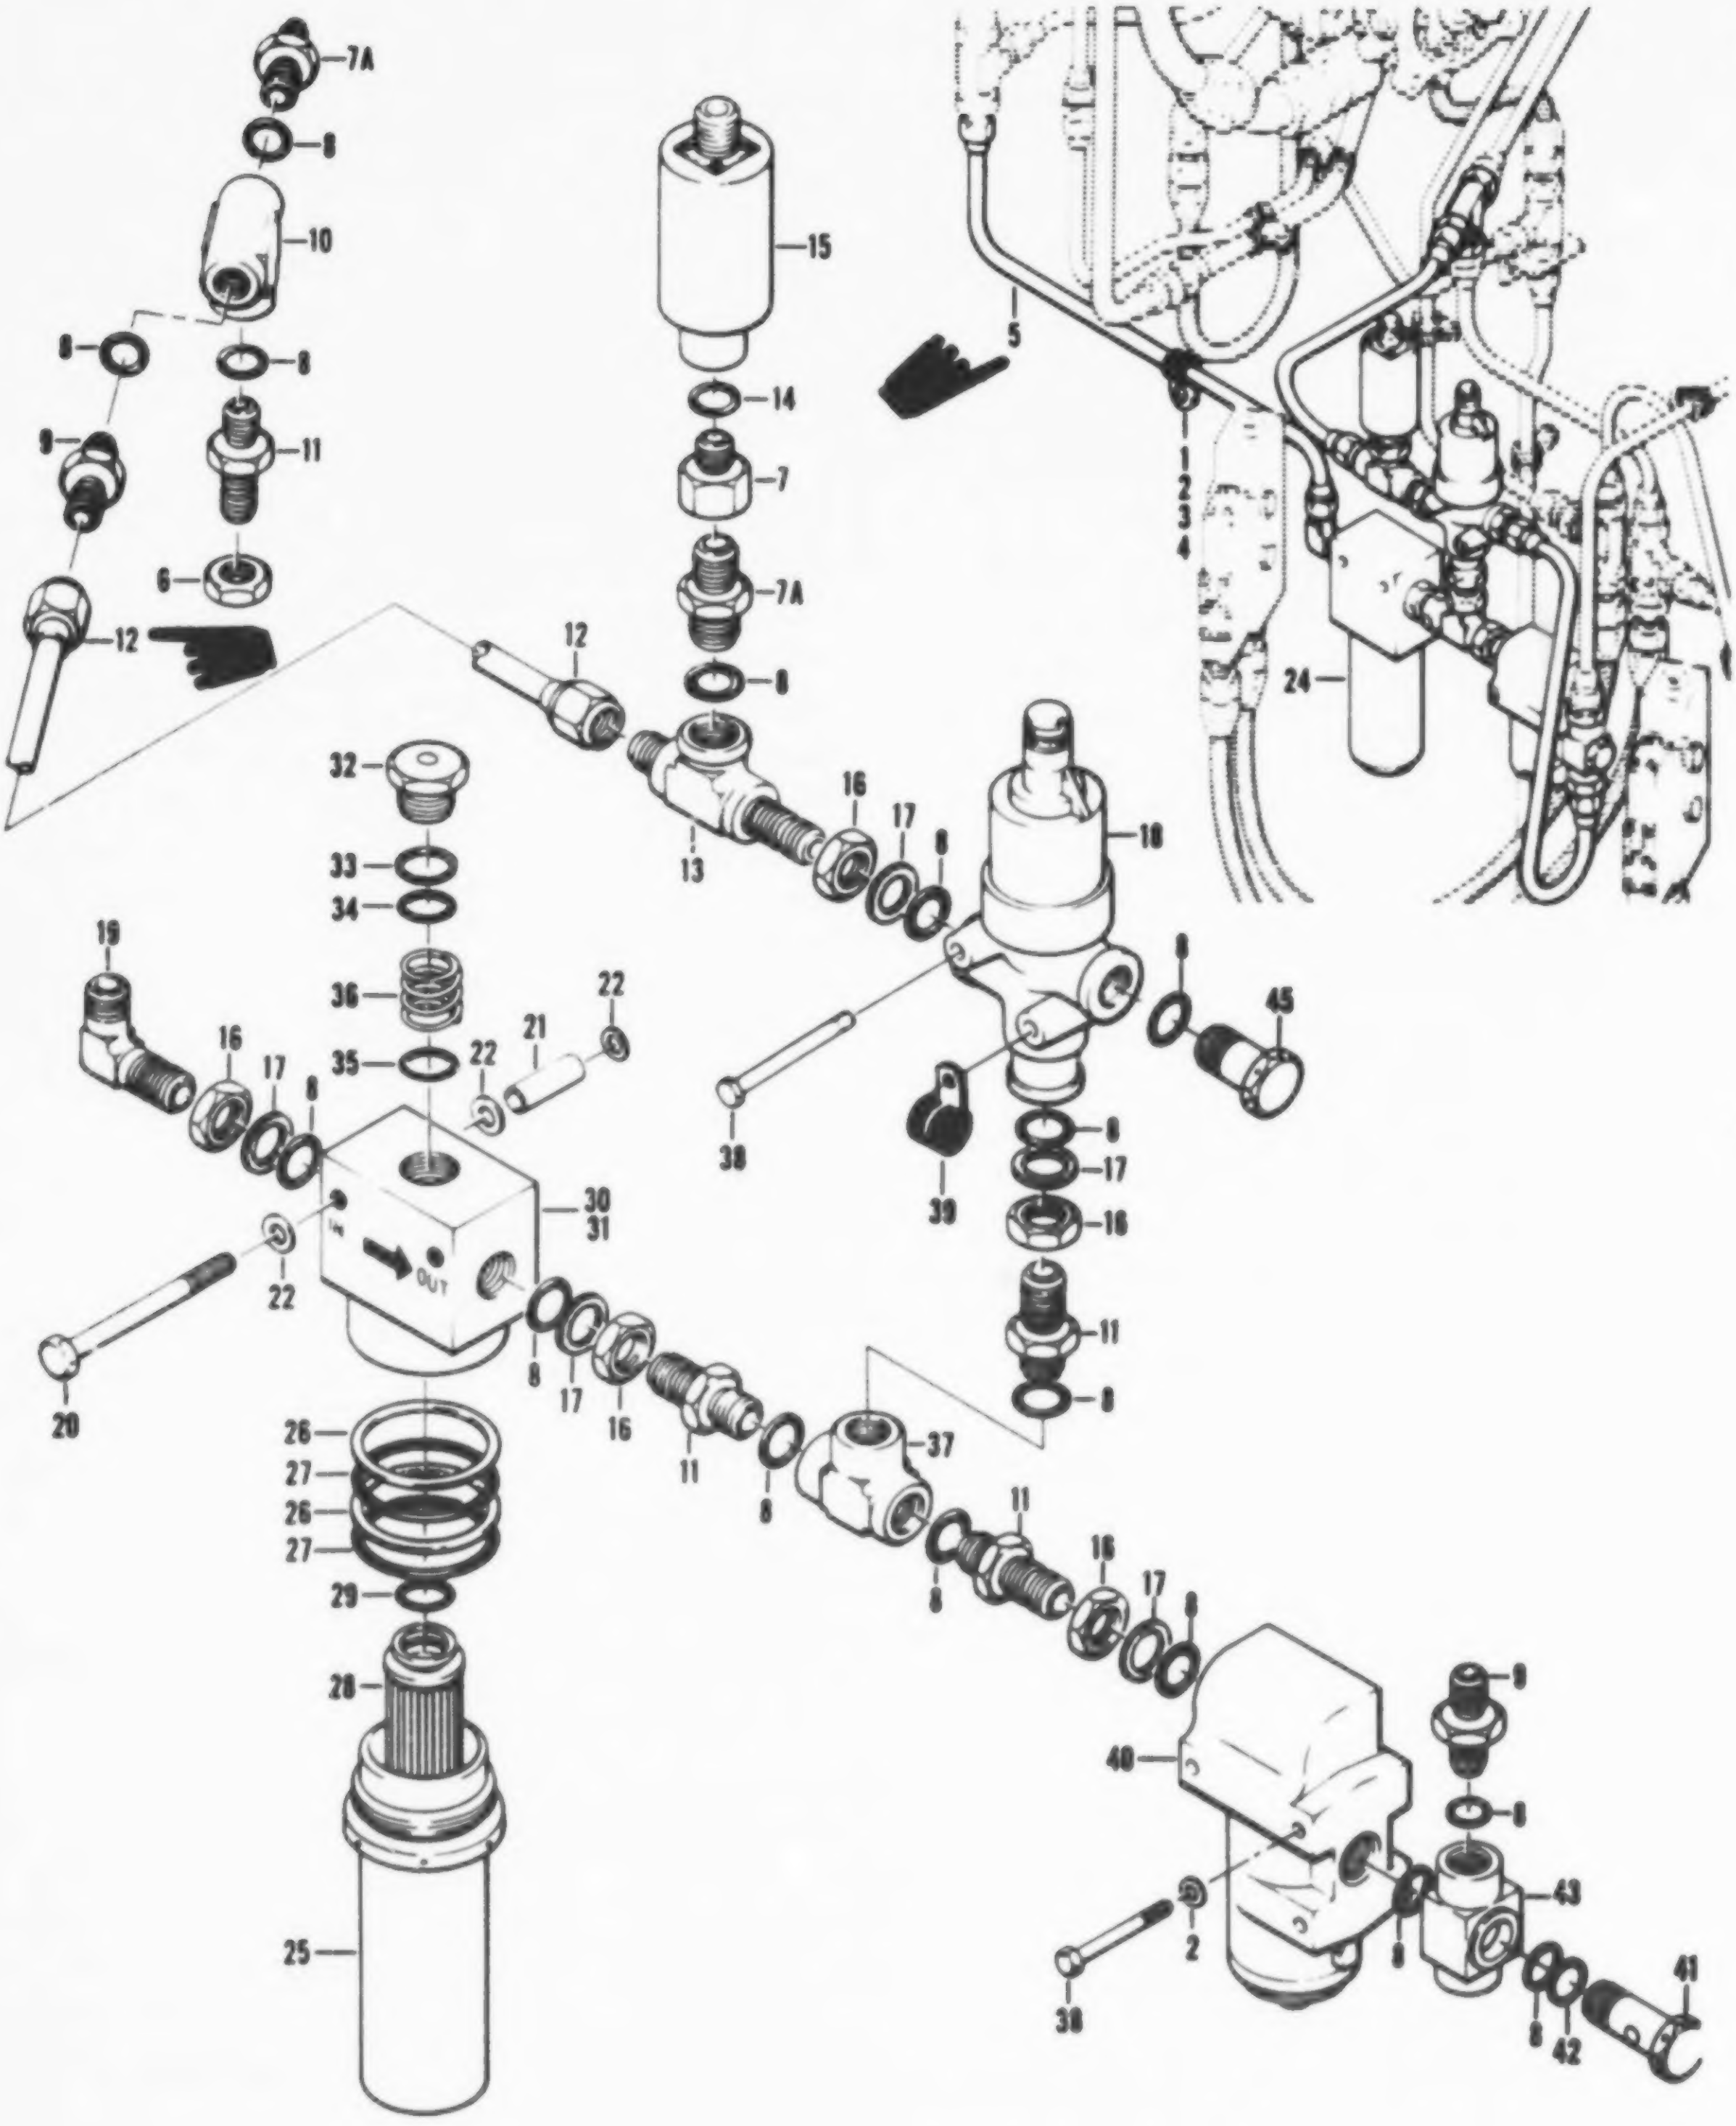
7A
8
10
8
8
9
11
6
12
15
14
7
7A
8
12
5
1
2
3
4
24
32
33
34
36
35
13
16
17
8
18
19
16
17
8
22
21
22
8
45
38
39
8
17
16
30
31
22
20
8
17
16
11
11
8
37
26
27
26
27
29
28
11
8
16
17
8
9
40
8
43
2
38
8
8
42
41
25

Figure 201. Hydraulic Installation, Forward Inboard Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
201		XCFZZ		97499	205-076-012-3	HYDRAULIC INSTL USBL EFF 62-2106 THRU 63-8859 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCFZZ		97499	205-076-012-5	HYDRAULIC INSTL USBL EFF 63-12956 THRU 63-13002 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCFZZ		97499	205-076-012-7	HYDRAULIC INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCFZZ		97499	205-076-023-1	HYDRAULIC INSTL USBL EFF 66-746 THRU 66-1146 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCOZZ		97499	205-076-023-5	HYDRAULIC INSTL USBL EFF 66-1147 THRU 68-15778 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCOZZ		97499	205-076-023-7	HYDRAULIC INSTL USBL EFF 68-16050 THRU 69-15291 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201		XCFZZ		97499	205-076-023-11	HYDRAULIC INSTL USBL EFF 69-15292 & SUBSEQUENT SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
201	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
201	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
201	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	1
201	4	PAOZZ	5340-00-187-6023	96906	MS21122-6	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	1
201	5	MFOZZ	4710-00-987-1358	97499	205-076-201-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
201	6	PAOZZ	5310-00-638-2605	96906	MS24400D6	NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
201	7	PAOZZ	5365-00-804-7915	96906	MS24397D2	BUSHING,MACHINE THR UHE,UHH,UHV,UHX	EA	1
201	7A	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	REDUCER,TUBE UHE,UHH,UHV,UHX	EA	1
201	8	PAOZZ	5330-00-804-5695	96906	MS28778-6	PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
201	9	PAOZZ	4730-00-289-6089	96906	MS21902D6	NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	1
201	10	PAOZZ	4730-00-277-5026	88044	AN938D6	TEE,BOSS UHE,UHH,UHV,UHX	EA	1
201	11	PAOZZ	4730-00-541-1749	96906	MS21924D6	NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	1
201	12	MFOZZ	4710-00-987-1402	97499	205-076-202-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
201	13	PAOZZ	4730-00-277-9256	96906	MS21910D6	TEE,TUBE TO BOSS UHE,UHH,UHV,UHX	EA	1
201	14	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
201	15	PAOZZ	5930-01-077-6302	81873	41001392	SWITCH,PRESSURE UHE,UHH,UHV,UHX	EA	1
201	16	PAOZZ	5310-00-277-5083	88044	AN6289D6	LOCKNUT,TUBE FITTIN UHE,UHH,UHV,UHX	EA	1
201	17	PAOZZ	5310-00-186-1295	96906	MS28777-6	WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
201	18	PAOZZ	1650-00-855-6057	97499	204-076-504-1	VALVE,LINEAR,DIRECT UHE,UHH,UHV,UHX	EA	1
201	19	PAOZZ	4730-00-278-8160	96906	MS21908D6	ELBOW,TUBE UHE,UHH,UHV,UHX	EA	1
201	20	PAOZZ	5306-00-182-2018	88044	AN4H24A	BOLT,MACHINE UHE,UHH,UHV,UHX	EA	2
201	21	PAOZZ	5365-00-633-5554	80205	NAS43D04-28	SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	2
201	22	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT UHE,UHH,UHV,UHX	EA	6
201	24	PAOOO	1650-00-288-6908	96906	MS28720-6	FILTER,FLUID USE ONLY ON ARMAMENT PORTION OF HYDRAULIC SYSTEM UHE,UHH,UHV,UHX	EA	1
201	24	PAOOO	1650-00-457-9844	97499	205-076-034-5	FILTER,FLUID UHE,UHH,UHV,UHX	EA	1
201	24	PAOOO	1650-00-457-9844	05228	7576727	FILTER,FLUID UHE,UHH,UHV,UHX	EA	1
201	24	PAOOO	1650-00-457-9844	81873	11-10972	FILTER,FLUID UHE,UHH,UHV,UHX	EA	1
201	24	PAOOO	1650-00-457-9844	90005	056448-01	FILTER,FLUID UHE,UHH,UHV,UHX	EA	1
201	24	PAOOO	1650-00-457-9844	90005	056448-01	FILTER,FLUID UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
201	25	PAOZZ	1650-00-176-3285	81873	52-10711	..BOWL,SEDIMENT U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	25	XAOZZ		05228	7577391	..BOWL,SEDIMENT U/O PN 7576727 ONLY	UHE,UHH,UHV,UHX	EA	1
201	25	XAOZZ		90005	056641	..BOWL,SEDIMENT U/O PN 056448-01	UHE,UHH,UHV,UHX	EA	1
201	26	PAOZZ	5330-00-850-7491	96906	MS28774-135	..RETAINER,PACKING U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	26	PAOZZ	5330-00-850-7491	96906	MS28774-135	..RETAINER,PACKING U/O PN 056448-01	UHE,UHH,UHV,UHX	EA	2
201	27	PAOZZ	5330-00-720-2859	96906	MS28775-135	..PACKING,PREFORME U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	27	PAOZZ	5330-01-112-4060	81349	M83461/1-134	..PACKING,PREFORME U/O PN 7576727 ONLY	UHE,UHH,UHV,UHX	EA	1
201	28	PAOZZ	4330-00-442-2484	97499	205-076-034-3	..FILTER ELEMENT,FLUI	UHE,UHH,UHV,UHX	EA	1
201	29	PAOZZ	5330-00-579-8156	96906	MS28775-212	..PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
201	30	XBOZZ	1650-00-176-3286	81873	52-10708	..HEAD,FLUID FILTER U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	30	XAOZZ		05228	7578094	..HEAD U/O PN 7576727 ONLY	UHE,UHH,UHV,UHX	EA	1
201	30	XAOZZ		90005	056642	..HEAD U/O PN 56448-01	UHE,UHH,UHV,UHX	EA	1
201	31	XDOZZ		05228	7577392	..PLATE,IDENTIFICATIO U/O PN 7576727 ONLY	UHE,UHH,UHV,UHX	EA	1
201	31	XAOZZ		90005	056645	..PLATE,IDENTIFICATIO U/O PN 56448-01	UHE,UHH,UHV,UHX	EA	1
201	32	PAOZZ	1650-00-204-3155	05228	7577390	..INDICATOR,SURGE COM U/O PN 7576727 ONLY	UHE,UHH,UHV,UHX	EA	1
201	32	XDOZZ		90005	049535	..INDICATOR U/O PN 56448-01	UHE,UHH,UHV,UHX	EA	1
201	33	PAOZZ	5330-00-937-1332	96906	MS28774-015	..RETAINER,PACKING U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	33	PAOZZ	5330-00-064-2570	96906	MS28774-016	..RETAINER,PACKING U/O PN 056448-01	UHE,UHH,UHV,UHX	EA	1
201	34	PAOZZ	5330-00-618-5361	96906	MS28775-015	..PACKING,PREFORMED U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	34	PAOZZ	5330-00-684-3419	96906	MS28775-16	..PACKING,PREFORMED U/O PN 7576727 ONLY	UHE,UHH,UHV,UHX	EA	1
201	34	PAOZZ	5330-00-584-1840	96906	MS28775-014	..PACKING,PREFORMED U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	35	PAOZZ	5330-00-684-3420	96906	MS28775-013	..PACKING,PREFORMED U/O PN 056448-01	UHE,UHH,UHV,UHX	EA	1
201	36	PAOZZ	5360-00-411-4690	81873	53-10191	..SPRING,HELICAL,COMP U/O PN 11-10972	UHE,UHH,UHV,UHX	EA	1
201	37	PAOZZ	4730-00-277-5026	88044	AN93806	.TEE,BOSS	UHE,UHH,UHV,UHX	EA	1
201	38	PAOZZ	5306-00-182-2011	88044	AN[illegible]22A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
201	39	PAOZZ	5340-00-954-6826	81996	EAB7000[illegible]	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
201	40	PAOZZ	4820-00-947-3562	97499	204-076-071-1	.VALVE,SAFETY RELIEF	UHE,UHH,UHV,UHX	EA	1
201	41	PAOZZ	4730-00-815-0292	80205	NAS551-6DH	.BOLT,FLUID PASSAGE	UHE,UHH,UHV,UHX	EA	1
201	42	PAOZZ	5330-00-050-1211	88044	AN6227B8	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
201	43	PAOZZ	4730-00-969-9211	97499	205-076-116-1	.CONNECTOR,MULTIPLE, PRESSURE LINE	UHE,UHH,UHV,UHX	EA	1
201	45	PBOZZ	5365-00-845-3502	96906	MS24391D6L	.PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	1

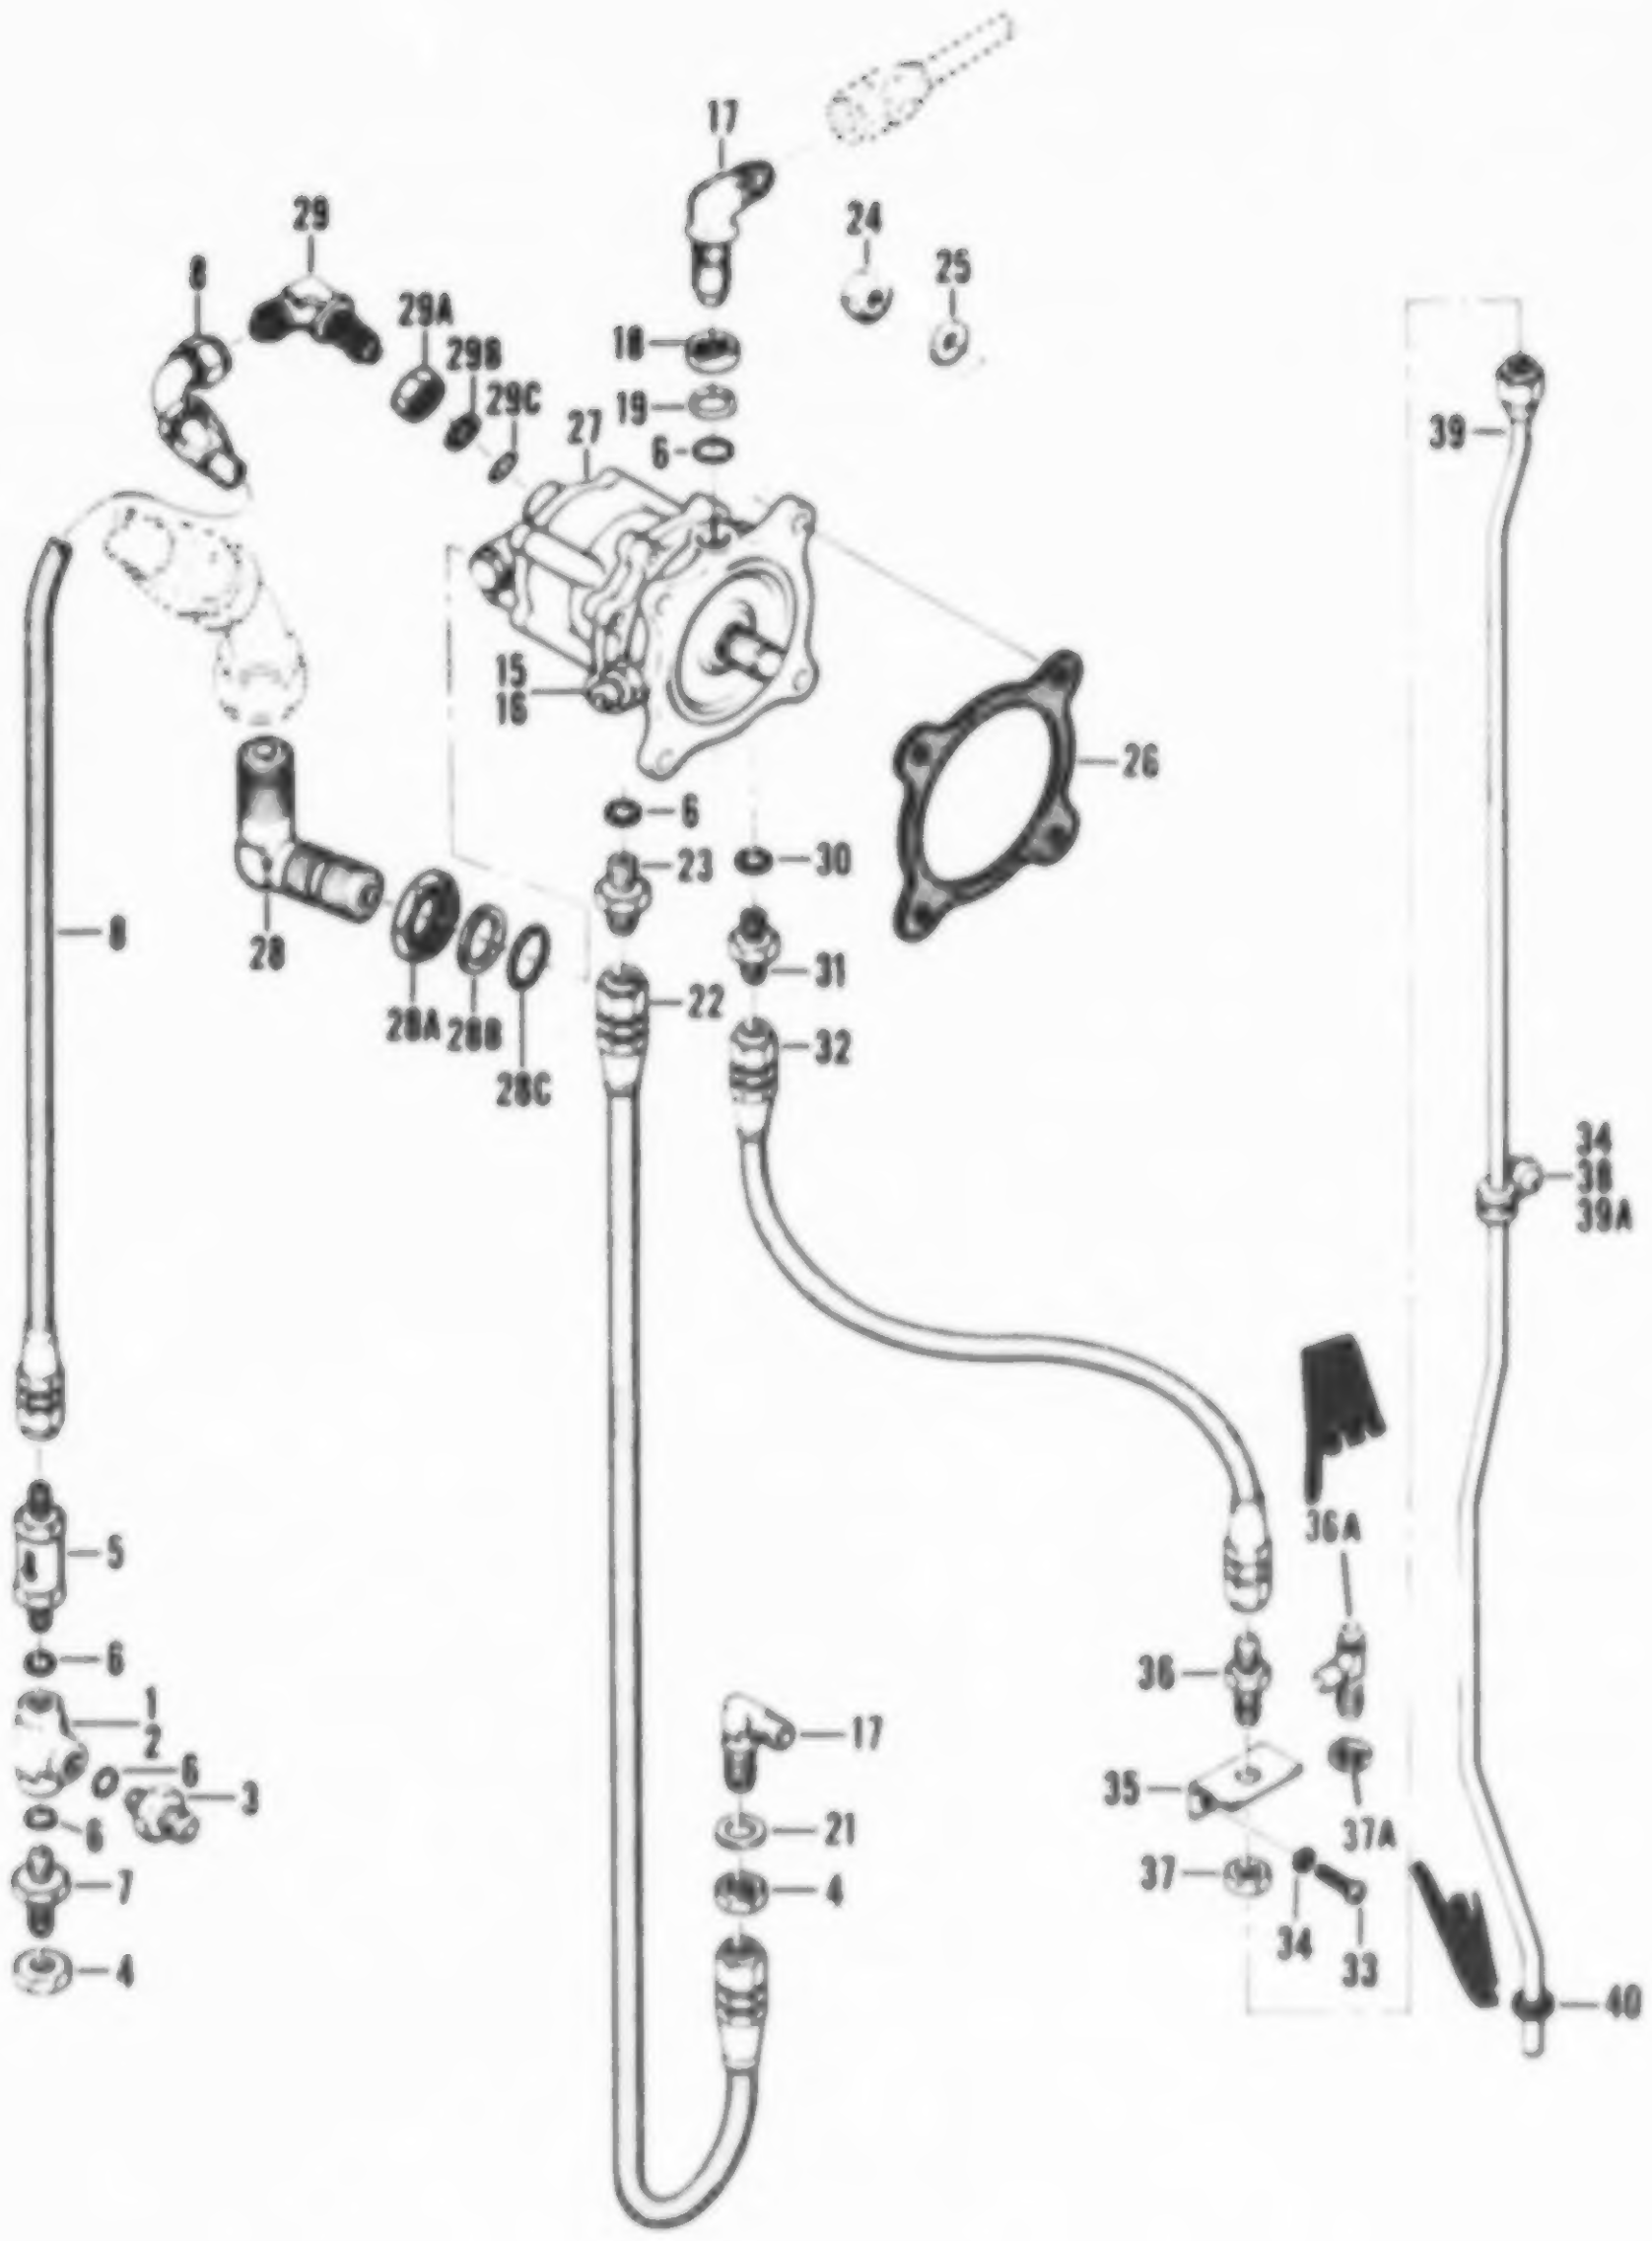
17
29
8
29A
29B
29C
24
25
18
19
6
27
39
15
16
26
6
23
30
8
28
31
28A
28B
28C
22
32
34
38
39A
36A
5
6
36
1
2
6
3
17
35
6
21
37A
7
4
37
34
33
4
40

Figure 202. Hydraulic Installation, Pump Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
202		XCFZZ		97499	205-076-012-3	HYDRAULIC INSTL USBL EFF 62-2106 THRU 63-[illegible]859 SEE FIG 7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-012-5	HYDRAULIC INSTL USBL EFF 63-12956 THRU 63-13002 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-012-7	HYDRAULIC INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-023-1	HYDRAULIC INSTL USBL EFF 66-746 THRU 66-1146 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-023-5	HYDRAULIC INSTL USBL EFF 66-1147 THRU 68-15778 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-023-7	HYDRAULIC INSTL USBL EFF 68-16050 THRU 69-15291 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202		XCFZZ		97499	205-076-023-11	HYDRAULIC INSTL USBL EFF 69-15292 & SUBSEQUENT SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
202	1	PAOZZ	4730-00-277-9257	96906	MS2191106	.TEE,TUBE TO BOSS USBL EFF 62-2106 THRU 69-15291 ... UHE,UHH,UHV,UHX	EA	1
202	2	PAOZZ	4730-00-277-5026	88044	AN938D6	.TEE,BOSS U/O PN 205-076-023-11 ... UHE,UHH,UHV,UHX	EA	1
202	3	PAOZZ	4820-00-923-0625	97499	204-076-437-3	.VALVE,CHECK U/O PN 205-076-023-11 ... UHE,UHH,UHV,UHX	EA	1
202	4	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
202	5	PAOZZ	4820-00-720-3991	96906	MS28890-6	.VALVE,CHECK ... UHE,UHH,UHV,UHX	EA	1
202	6	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	3
202	7	PAOZZ	4730-00-541-1749	96906	MS21924D6	.NIPPLE,TUBE U/O PN 205-076-023-11 ... UHE,UHH,UHV,UHX	EA	1
202	8	PAOZZ	4720-00-966-7495	98441	124038-600096	.HOSE ASSEMBLY NONME ... UHE,UHH,UHV,UHX	EA	1
202	15	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	.REDUCER,TUBE ... UHE,UHH,UHV,UHX	EA	1
202	15	PAOZZ	4730-00-640-1306	96906	MS21916D16-12	.REDUCER,TUBE ... UHE,UHH,UHV,UHX	EA	1
202	15	PBOZZ	4730-00-471-8529	97499	205-076-293-1	.REDUCER,TUBE U/O PN 205-076-023-5 ... UHE,UHH,UHV,UHX	EA	1
202	16	PAOZZ	5330-00-251-8839	96906	MS28778-12	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
202	17	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW,TUBE ... UHE,UHH,UHV,UHX	EA	1
202	18	PAOZZ	5310-00-277-5083	88044	AN6289D6	.LOCKNUT,TUBE FITTIN ... UHE,UHH,UHV,UHX	EA	1
202	19	PAOZZ	5310-00-186-1295	96906	MS28777-6	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
202	21	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
202	22	MFOZZ		96906	MS8001G146A	.HOSE ASSEMBLY,NONME ... UHE,UHH,UHV,UHX	EA	1
202	23	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	1
202	24	PAOZZ	5310-00-807-1469	96906	MS21042-5	.NUT,SELF-LOCKING,EX ... UHE,UHH,UHV,UHX	EA	4
202	25	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	8
202	26	PAOZZ	5330-00-237-5853	96906	MS9135-01	.GASKET ... UHE,UHH,UHV,UHX	EA	1
202	27	PAODO	4320-00-134-0980	97499	204-076-065	.PUMP,AXIAL PISTONS INTRCH ... UHE,UHH,UHV,UHX	EA	1
202	27	PAODO	4320-00-134-0980	62983	PV3-044-8	.PUMP,AXIAL PISTONS ... UHE,UHH,UHV,UHX	EA	1
202	28	PAOZZ	4730-00-878-6582	62983	325473	..ELBOW,TUBE ... UHE,UHH,UHV	EA	1
202	28A	PAOZZ	4730-00-277-5095	88044	AN6289D16	..LOCKNUT,TUBE FITTIN ... UHE,UHH,UHV	EA	1
202	28B	PAOZZ	5330-00-805-0478	96906	MS28777-16	..GASKET ... UHE,UHH,UHV	EA	1
202	28C	PAOZZ	5330-00-804-5694	96906	MS28778-16	..PACKING,PREFORMED ... UHE,UHH,UHV	EA	1
202	29	PAOZZ	4730-00-807-0691	96906	MS21926-80	..ELBOW,TUBE ... UHE,UHH,UHV	EA	1
202	29A	PAOZZ	5310-00-277-5083	88044	AN6289D6	..NUT,PLAIN,HEXAGON ... UHE,UHH,UHV	EA	1
202	29B	PAOZZ	5310-00-186-1295	96906	MS28777-6	..WASHER,FLAT ... UHE,UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
202	29C	PAOZZ	5330-00-804-5695	96906	MS28778-6	..PACKING,PREFORMED............... UHE,UHH,UHV	EA	1
202	30	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED..............................UHE,UHH,UHV,UHX	EA	1
202	31	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE,TUBE....................................UHE,UHH,UHV,UHX	EA	1
202	32	MFOZZ	4720-00-966-7492	98441	124041-4D0150	.HOSE ASSEMBLY,NONME............................UHE,UHH,UHV,UHX	EA	1
202	33	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..................................UHE,UHH,UHV,UHX	EA	2
202	34	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT....................................UHE,UHH,UHV,UHX	EA	2
202	35	MFOZZ	5340-00-986-9960	97499	205-076-102-1	.BRACKET,ANGLE INSTL............................UHE,UHH,UHV,UHX	EA	1
202	36	PAOZZ	4730-00-580-9165	96906	MS21924D4	.NIPPLE,TUBE....................................UHE,UHH,UHV,UHX	EA	1
202	36A	PAOZZ	4730-00-700-4977	96906	MS21912D4	.TEE TUBE.......................................UHE,UHH,UHV,UHX	EA	1
202	37	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON..............................UHE,UHH,UHV,UHX	EA	1
202	37A	PAOZZ	5310-00-159-6339	88044	AN924-4D	.NUT..UHE,UHH,UHV,UHX	EA	1
202	38	PAOZZ	5340-00-205-6301	96906	MS21919DG4	.CLAMP,LOOP.....................................UHE,UHH,UHV,UHX	EA	1
202	39	MFOZZ	1560-00-045-3942	97499	205-076-233-1	.TUBE ASSEMBLY,METAL............................UHE,UHH,UHV,UHX	EA	1
202	39A	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE..................................UHE,UHH,UHV,UHX	EA	1
202	40	PAOZZ	5325-00-763-6632	96906	MS35489-6	.GROMMET,NONMETALLIC............................UHE,UHH,UHV,UHX	EA	1

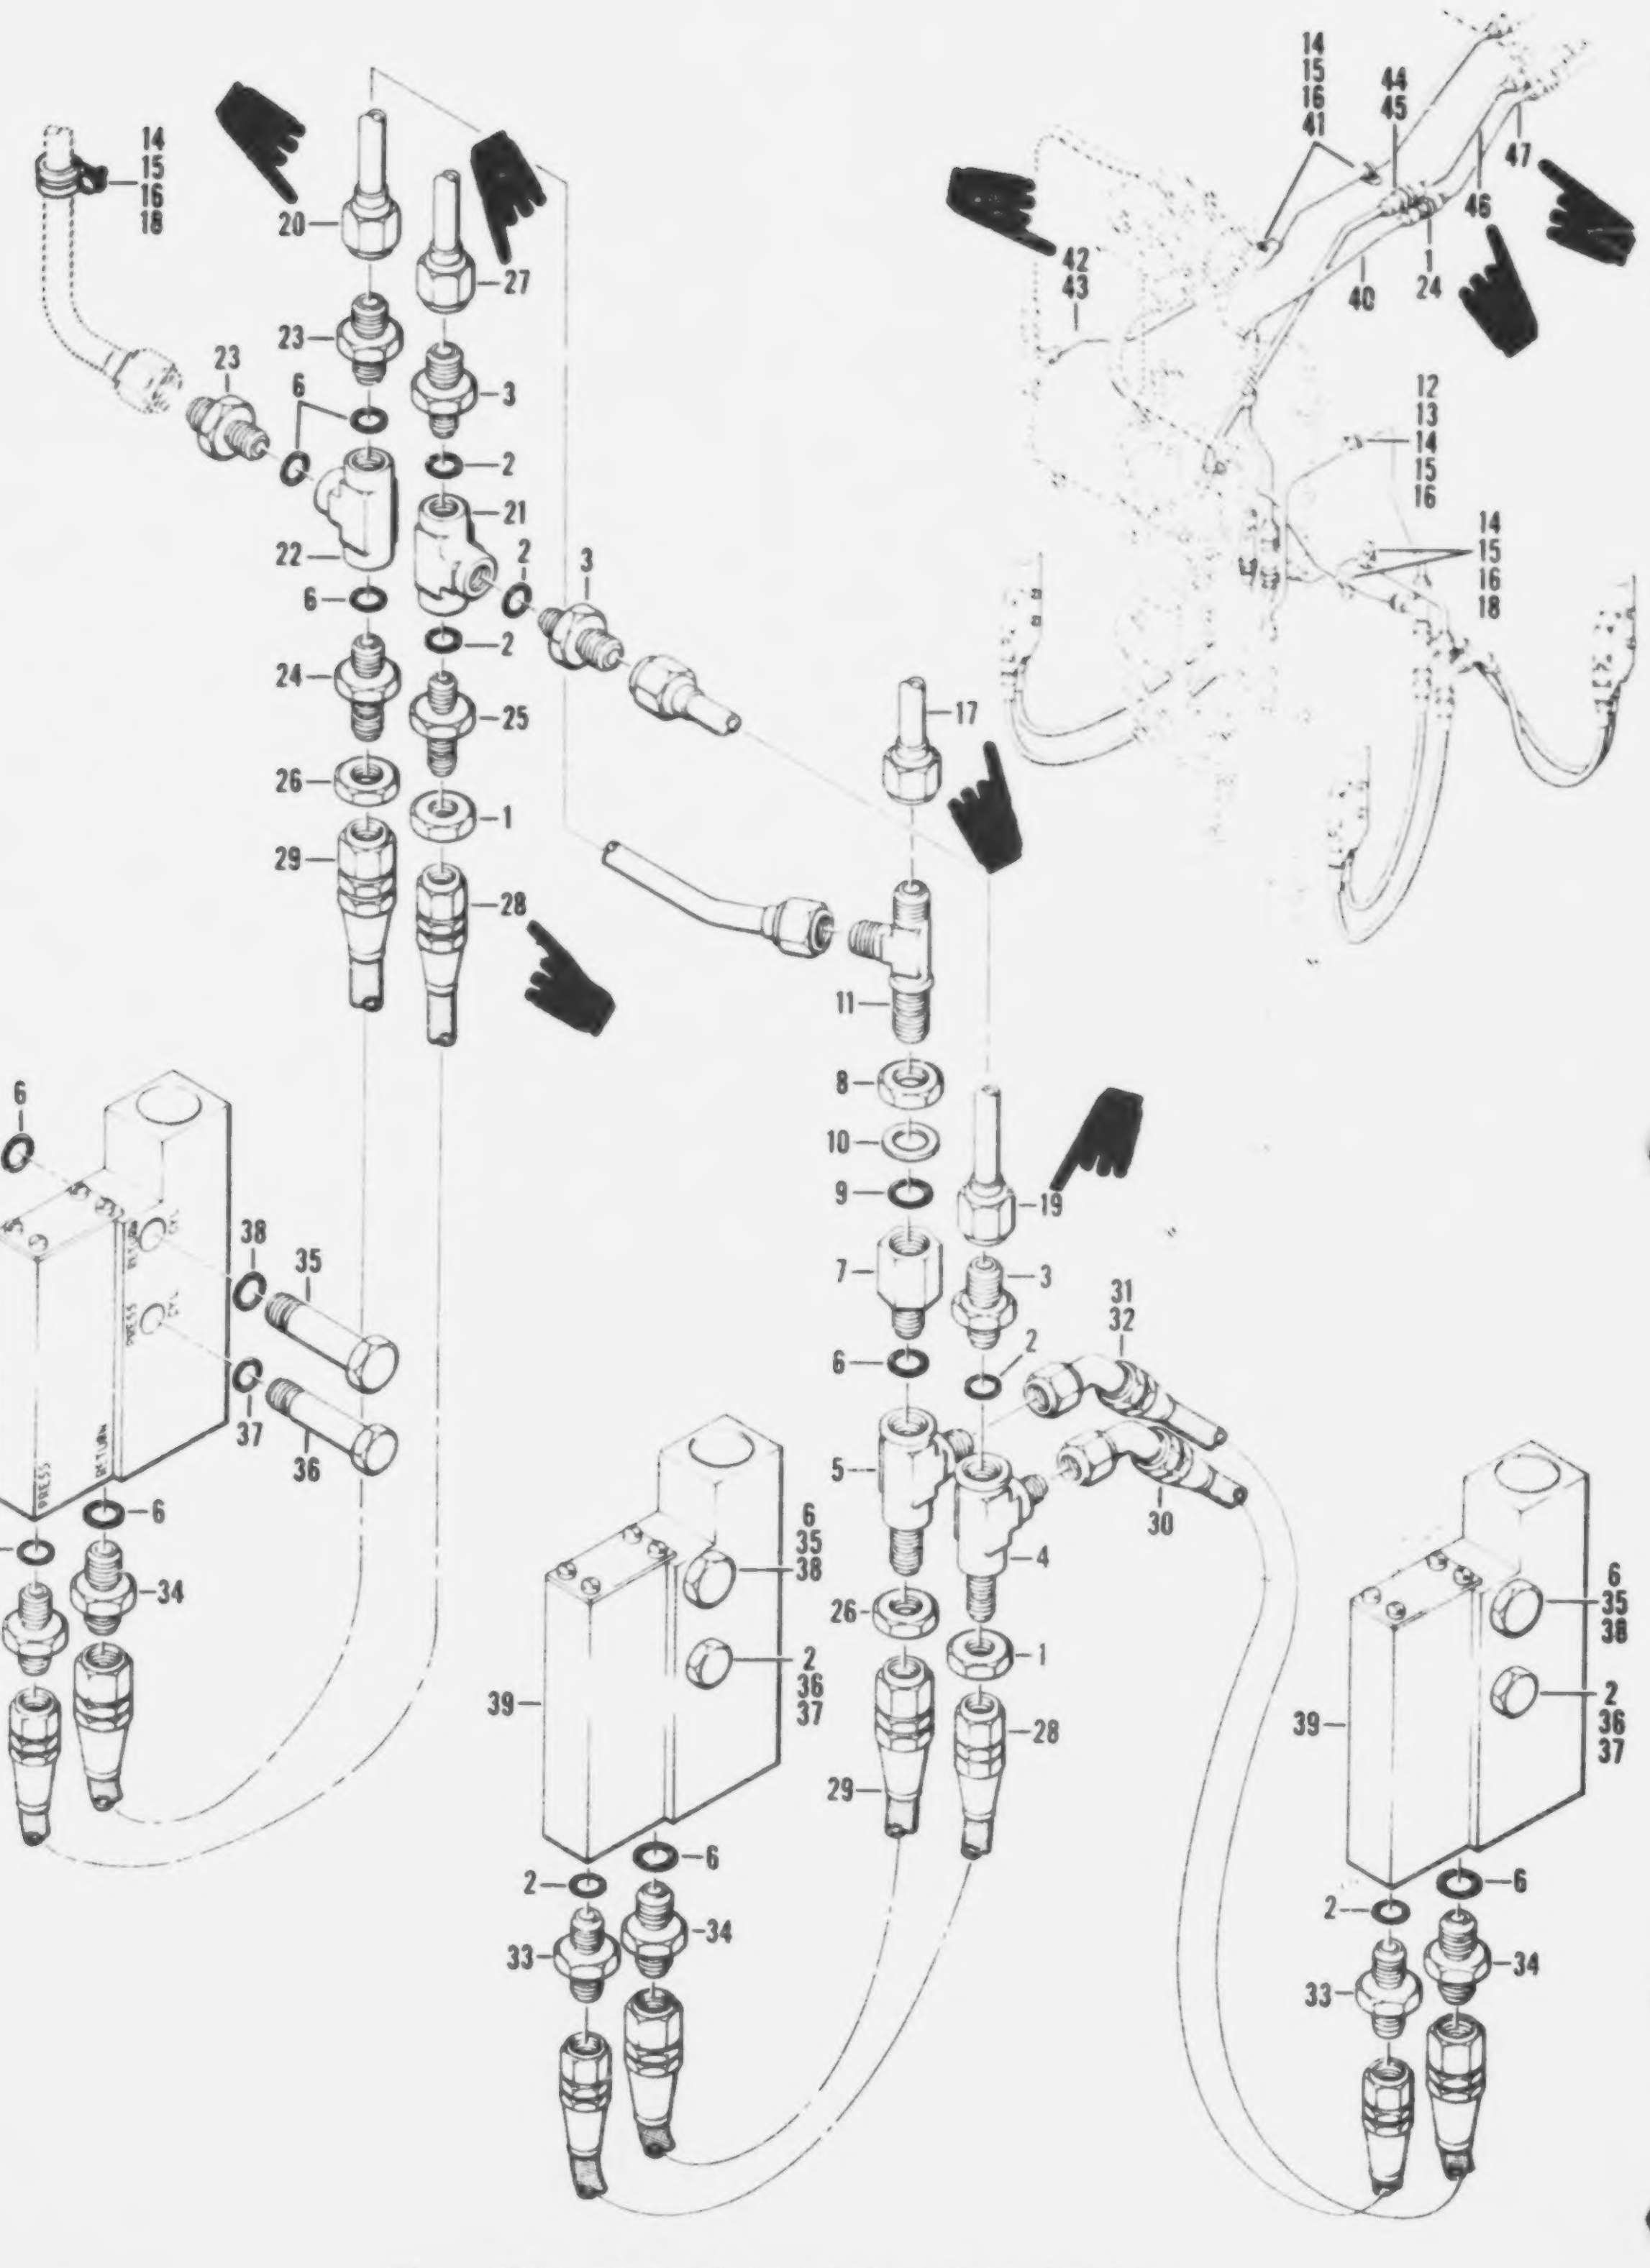
14
15
16
18
20
27
23
23
6
3
2
21
22
2
3
6
2
24
25
26
1
29
28
17
11
8
10
9
19
7
3
6
2
31
32
5
30
4
26
1
29
28
6
2
38
35
39
37
36
6
2
33
34
6
35
38
2
36
37
39
2
6
33
34
39
6
35
38
2
36
37
2
6
33
34
14
15
16
41
44
45
47
46
42
43
40
1
24
12
13
14
15
16
14
15
16
18

Figure 203. Hydraulic Installation, Center Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
203		XCFZZ		97499	205-076-012-3	HYDRAULIC INSTL USBL EFF 62-2106 THRU 63-8859 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
13		XCFZZ		97499	205-076-012-5	HYDRAULIC INSTL USBL EFF 63-12956 THRU 63-13002 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203		XCFZZ		97499	205-076-012-7	HYDRAULIC INSTL USBL EFF 64-13492 THRU 65-13901 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203		XCFZZ		97499	205-076-023-1	HYDRAULIC INSTL USBL EFF 66-746 THRU 66-1146 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203		XCFZZ		97499	205-076-023-5	HYDRAULIC INSTL USBL EFF 66-1147 THRU 68-15778 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203		XCFZZ		97499	205-076-023-7	HYDRAULIC INSTL USBL EFF 68-16050 THRU 69-15291 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203		XCFZZ		97499	205-076-023-11	HYDRAULIC INSTALLAT USBL EFF 69-15292 & SUBSEQUENT SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
203	1	PAOZZ	5310-00-282-7823	96906	MS24400D4	NUT,PLAIN HEXAGON UHE,UHH,UHV,UHX	EA	1
203	2	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
203	3	PAOZZ	4730-00-640-7201	96906	MS2191606-4	REDUCER,TUBE UHE,UHH,UHV,UHX	EA	1
203	4	PAOZZ	4730-00-640-5111	96906	MS21911D4	TEE,TUBE TO BOSS UHE,UHH,UHV,UHX	EA	1
203	5	PAOZZ	4730-00-289-4207	96906	MS21911D5	.TEE,TUBE TO BOSS UHE,UHH,UHV,UHX	EA	1
203	6	PAOZZ	5330-00-833-7491	96906	MS28778-5	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
203	7	PAOZZ	4730-00-720-4244	96906	MS21915D6-5	.ADAPTER,STRAIGHT,TU TO BOSS UHE,UHH,UHV,UHX	EA	1
203	8	PAOZZ	5310-00-277-5083	88044	AN628906	.LOCKNUT,TUBE FITTIN UHE,UHH,UHV,UHX	EA	1
203	9	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
203	10	PAOZZ	5310-00-186-1295	96906	MS28777-6	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
203	11	PAOZZ	4730-00-246-9520	96906	MS21912D6	.TEE,TUBE UHE,UHH,UHV,UHX	EA	1
203	12	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
203	13	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	1
203	14	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
203	15	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	1
203	16	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	1
203	17	MFOZZ	DELETED	97499	205-076-217-1	.TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
203	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	2
203	19	MFOZZ	DELETED	97499	205-076-204-1	.TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
203	20	MFOZZ	DELETED	97499	205-076-216-1	.TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
203	21	PAOZZ	4730-00-277-6157	88044	AN938D4	.TEE,BOSS UHE,UHH,UHV,UHX	EA	1
203	22	PAOZZ	4730-00-278-2792	88044	AN938D6	.TEE,BOSS UHE,UHH,UHV,UHX	EA	1
203	23	PAOZZ	4730-00-640-7191	96906	MS2191606-5	.REDUCER,TUBE UHE,UHH,UHV,UHX	EA	2
203	24	PAOZZ	4730-00-618-0705	96906	MS21924D6	.NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	1
203	25	PAOZZ	4730-00-580-9166	96906	MS21924D4	.NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	1
203	26	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
203	27	MFOZZ	DELETED	97499	205-076-203-1	.TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
203	28	MFOZZ	DELETED	96906	MS8001E200A	.HOSE ASSEMBLY,NONME UHE,UHH,UHV,UHX	EA	2
203	29	MFOZZ		96906	MS8001F200A	.HOSE ASSEMBLY,NONME UHE,UHH,UHV,UHX	EA	2
203	30	MFOZZ		96906	MS8001E1408	.HOSE ASSEMBLY U/O PN 205-076-012-9 UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO	(B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
203	31	XDOZZ		96906	MS8001F1508	HOSE ASSEMBLY,NONME .... UHE,UHH,UHV UHX	EA	1
203	32	MFOZZ		96906	MS8001E1508	HOSE ASSEMBLY,NONME .... UHE,UHH,UHV,UHX	EA	1
203	33	PAOZZ	4730-00-142-2155	96906	MS21902D4	NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	3
203	34	PAOZZ	4730-00-640-7213	96906	MS21902D5	NIPPLE TUBE .... UHE,UHH,UHV,UHX	EA	3
203	35	PAOZZ	4730-00-770-3484	97499	204-076-174-1	BOLT,FLUID PASSAGE .... UHE,UHH,UHV,UHX	EA	3
203	36	PAOZZ	4730-00-770-3483	97499	204-076-175-1	BOLT,FLUID PASSAGE .... UHE,UHH,UHV,UHX	EA	3
203	37	PAOZZ	5330-00-582-2133	96906	MS28775-011	PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	3
203	38	PAOZZ	5330-00-584-0265	96906	MS28775-012	PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	3
203	39	PAODO	4810-01-022-3699	97499	204-076-055-1	VALVE,HYDRAULIC SEE FIG 204 FOR BREAKDOWN OF PN 204-076-055-1 (42550-3) RPLS-- PN 42550 NSN 4810-00-833-1600, PN 42550-1 NSN 4810-992-0940 & PN 42550-2 NSN 4810-00-911-7349 .... UHE,UHH,UHV,UHX	EA	3
203	40	MFOZZ	1560-00-848-5048	97499	205-076-033-1	TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
203	41	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
203	42	MFOZZ	DELETED	97499	205-076-213-1	TUBE ASSEMBLY,METAL U/O PN 205-076-023-1,-3,-5 AND -7 .... UHE,UHH,UHV,UHX	EA	1
203	43	MFOZZ		97499	205-076-235-1	TUBE ASSEMBLY,METAL U/O PN 205-076-023-11 .... UHE,UHH,UHV,UHX	EA	1
203	44	PAOZZ	4730-00-541-1749	96906	MS21924D6	NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	1
203	45	PAOZZ	5310-00-638-2605	96906	MS2440006	NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
203	46	MFOZZ	DELETED	97499	205-076-214-1	TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
203	47	MFOZZ	DELETED	97499	205-076-206-1	TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1

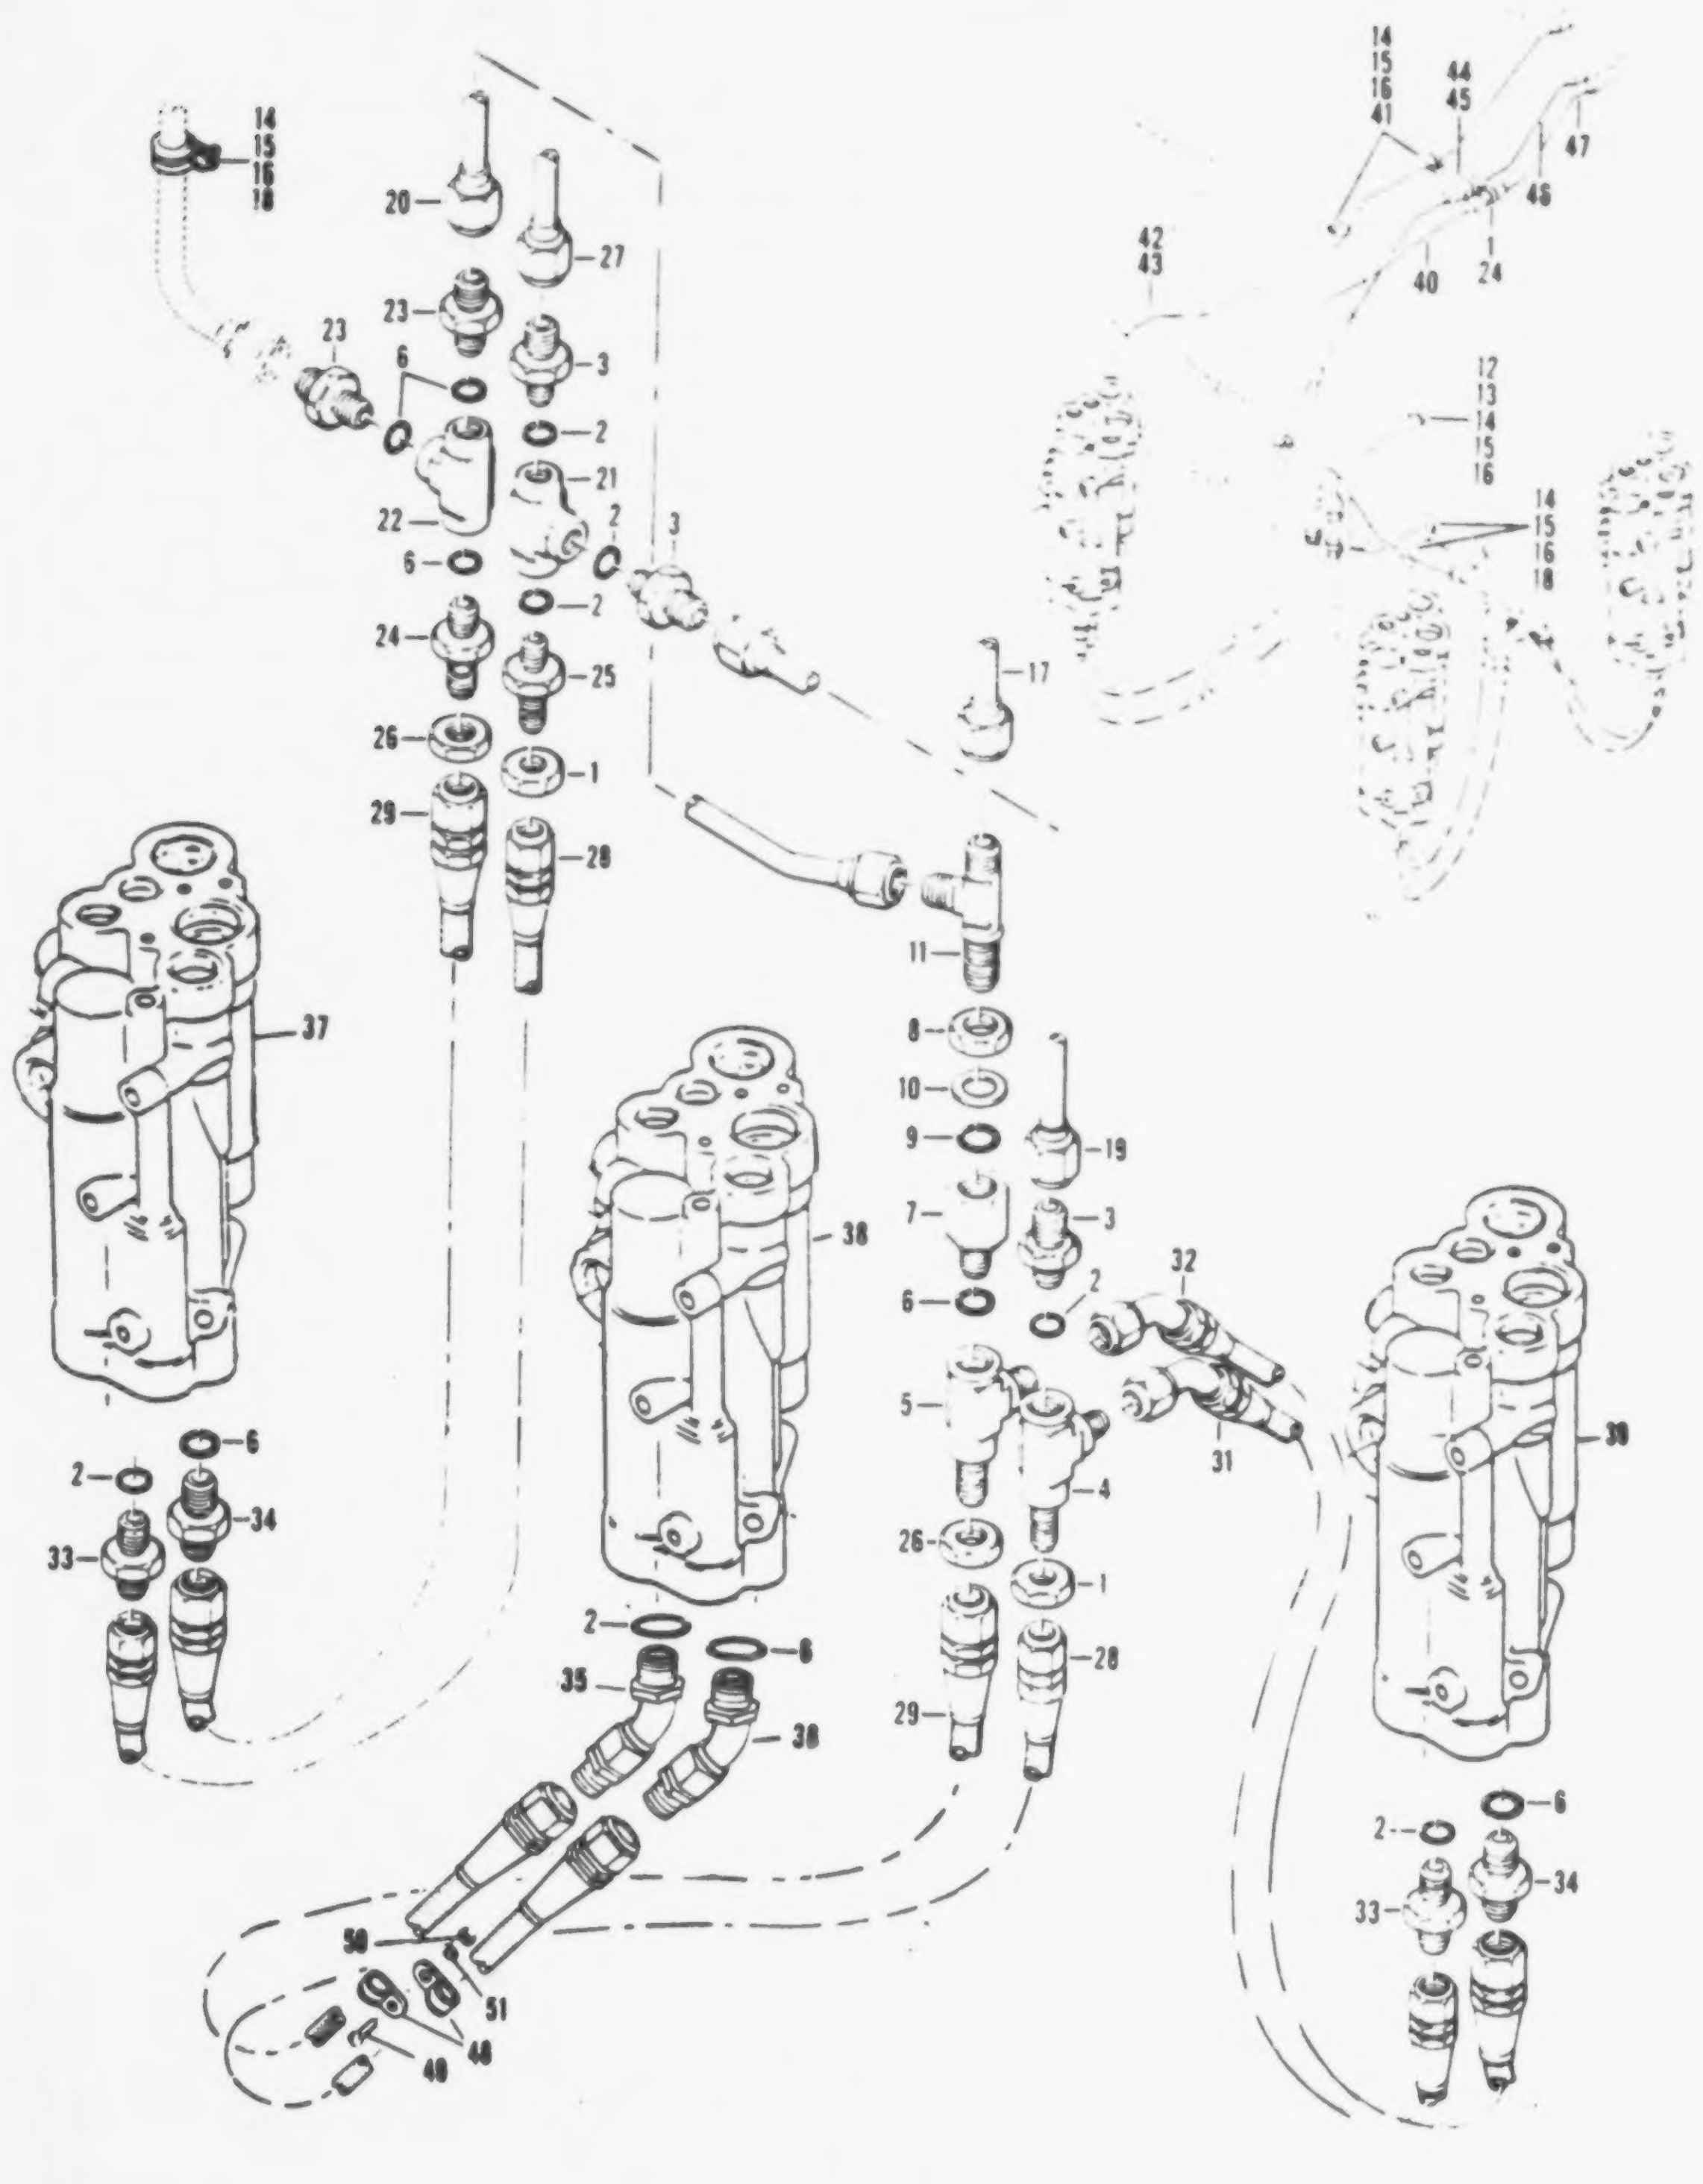
14
15
16
18
20
27
23
23
3
6
2
21
22
2
3
6
2
24
25
26
1
29
28
17
14
15
16
41
44
45
47
46
42
43
40
24
12
13
14
15
16
14
15
16
18
37
11
8
10
9
19
7
3
38
6
2
32
5
31
4
26
1
39
2
6
34
33
2
6
35
36
29
28
50
51
48
49
2
6
34
33

Figure 203 A Hydraulic Installation, Center Section (205-076-056 Servo)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
203A		XCFZZ		97499	205-076-012-3	HYDRAULIC INSTL USBL EFF 62-2106 THRU 63-8859 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-012-5	HYDRAULIC INSTL USBL EFF 63-12956 THRU 63-13002 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-012-7	HYDRAULIC INSTL USBL EFF 64-13492 THRU 65-13901 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-023-1	HYDRAULIC INSTL USBL EFF 66-746 THRU 66-1146 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-023-5	HYDRAULIC INSTL USBL EFF 66-1147 THRU 68-15778 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-023-7	HYDRAULIC INSTL USBL EFF 68-16050 THRU 69-15291 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A		XCFZZ		97499	205-076-023-11	HYDRAULIC INSTALLAT USBL EFF 69-15292 & SUBSEQUENT SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
203A	1	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON.......UHE,UHH,UHV,UHX	EA	1
203A	2	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	1
203A	3	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	.REDUCER,TUBE.......UHE,UHH,UHV,UHX	EA	1
203A	4	PAOZZ	4730-00-640-5111	96906	MS21911D4	.TEE,TUBE TO BOSS.......UHE,UHH,UHV,UHX	EA	1
203A	5	PAOZZ	4730-00-289-4207	96906	MS21911D5	.TEE,TUBE TO BOSS.......UHE,UHH,UHV,UHX	EA	1
203A	6	PAOZZ	5330-00-833-7491	96906	MS28778-5	.PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	1
203A	7	PAOZZ	4730-00-720-4244	96906	MS21915D6-5	.ADAPTER,STRAIGHT,TU TO BOSS.......UHE,UHH,UHV,UHX	EA	1
203A	8	PAOZZ	5310-00-277-5083	88044	AN6289D6	.LOCKNUT,TUBE FITTIN.......UHE,UHH,UHV,UHX	EA	1
203A	9	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	1
203A	10	PAOZZ	5310-00-186-1295	96906	MS28777-6	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	1
203A	11	PAOZZ	4730-00-246-9520	96906	MS21912D6	.TEE,TUBE.......UHE,UHH,UHV,UHX	EA	1
203A	12	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	1
203A	13	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE.......UHE,UHH,UHV,UHX	EA	1
203A	14	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	1
203A	15	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHE,UHH,UHV,UHX	EA	1
203A	16	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP.......UHE,UHH,UHV,UHX	EA	1
203A	17	MFOZZ	4710-00-987-1369	97499	205-076-217-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
203A	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	2
203A	19	MFOZZ	4710-00-987-1360	97499	205-076-204-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
203A	20	MFOZZ	4710-00-987-1368	97499	205-076-216-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
203A	21	PAOZZ	4730-00-277-5157	88044	AN938D4	.TEE,BOSS.......UHE,UHH,UHV,UHX	EA	1
203A	22	PAOZZ	4730-00-278-2792	88044	AN938D6	.TEE,BOSS.......UHE,UHH,UHV,UHX	EA	1
203A	23	PAOZZ	4730-00-640-7191	96906	MS21916D6-5	.REDUCER,TUBE.......UHE,UHH,UHV,UHX	EA	2
203A	24	PAOZZ	4730-00-618-0705	96906	MS21924D5	.NIPPLE,TUBE.......UHE,UHH,UHV,UHX	EA	1
203A	25	PAOZZ	4730-00-580-9165	96906	MS21924D4	.NIPPLE,TUBE.......UHE,UHH,UHV,UHX	EA	1
203A	26	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON.......UHE,UHH,UHV,UHX	EA	1
203A	27	MFOZZ	4710-00-986-9961	97499	205-076-203-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
203A	28	MFOZZ	4720-00-966-7488	96906	MS8001E200A	.HOSE ASSEMBLY,NONME.......UHE,UHH,UHV,UHX	EA	2
203A	29	MFOZZ		96906	MS8001F200A	.HOSE ASSEMBLY,NONME.......UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
203A	31	XDOZZ		96906	MS8001F150B	.HOSE ASSEMBLY, NONME.....UHE,UHH,UHV,UHX	EA	1
203A	32	MFOZZ		96906	MS8001E150B	.HOSE ASSEMBLY, NONME.....UHE,UHH,UHV,UHX	EA	1
203A	33	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE, TUBE U/O P/N 205-076-056-103,-105 SEE FIG 185A FOR INSTALLATION.....UHE,UHH,UHV,UHX	EA	2
203A	34	PAOZZ	4730-00-640-7213	96906	MS21902D5	.NIPPLE, TUBE U/O P/N 205-076-056-103,-105 SEE FIG 185A FOR INSTALLATION.....UHE,UHH,UHV,UHX	EA	2
203A	35	PAOZZ	4730-00-554- 9180	96906	MS21907-J4	.ELBOW U/O PN 205-076-056-101, SEE FIG 185A FOR INSTALLATION.....UHE,UHH,UHV,UHX	EA	1
203A	36	PAOZZ		96906	MS21907-J5	.ELBOW U/O PN 205-076-056-101, SEE FIG 185A FOR INSTALLATION.....UHE,UHH,UHV,UHX	EA	1
203A	37	AOOOO		97499	205-076-056-101	.SERVO ASSEMBLY SEE FIG 185A FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
203A	38	AOOOO		97499	205-076-056-103	.SERVO ASSEMBLY SEE FIG 185A FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
203A	39	AOOOO		97499	205-076-056-105	.SERVO ASSEMBLY SEE FIG 185A FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
203A	40	MFOZZ	1560-00-848-5048	97499	205-076-033-1	.TUBE ASSEMBLY, METAL.....UHE,UHH,UHV,UHX	EA	1
203A	41	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW MACHINE.....UHE,UHH,UHV,UHX	EA	2
203A	42	MFOZZ	4710-00-987-1365	97499	205-076-213-1	.TUBE ASSEMBLY, METAL U/O PN 205-076-023-1,-5 and -7 .....UHE,UHH,UHV,UHX	EA	1
203A	43	MFOZZ		97499	205-076-235-1	.TUBE ASSEMBLY, METAL U/O PN 205-076-023-11 .....UHE,UHH,UHV,UHX	EA	1
203A	44	PAOZZ	4730-00-541-1749	96906	MS21924D6	.NIPPLE, TUBE.....UHE,UHH,UHV,UHX	EA	1
203A	45	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT, PLAIN, HEXAGON.....UHE,UHH,UHV,UHX	EA	1
203A	46	MFOZZ	4710-00-987-1366	97499	205-076-214-1	.TUBE ASSEMBLY, METAL.....UHE,UHH,UHV,UHX	EA	1
203A	47	MFOZZ	4710-00-987-1362	97499	205-076-206-1	.TUBE ASSEMBLY, METAL.....UHE,UHH,UHV,UHX	EA	1
203A	48	PAOZZ	5340-00-187-6723	96906	MS21122-6	.CLAMP, LOOP.....UHE,UHH,UHV,UHX	EA	2
203A	49	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW, MACHINE.....UHE,UHH,UHV,UHX	EA	1
203A	50	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT.....UHE,UHH,UHV,UHX	EA	1
203A	51	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER, FLAT.....UHE,UHH,UHV,UHX	EA	1

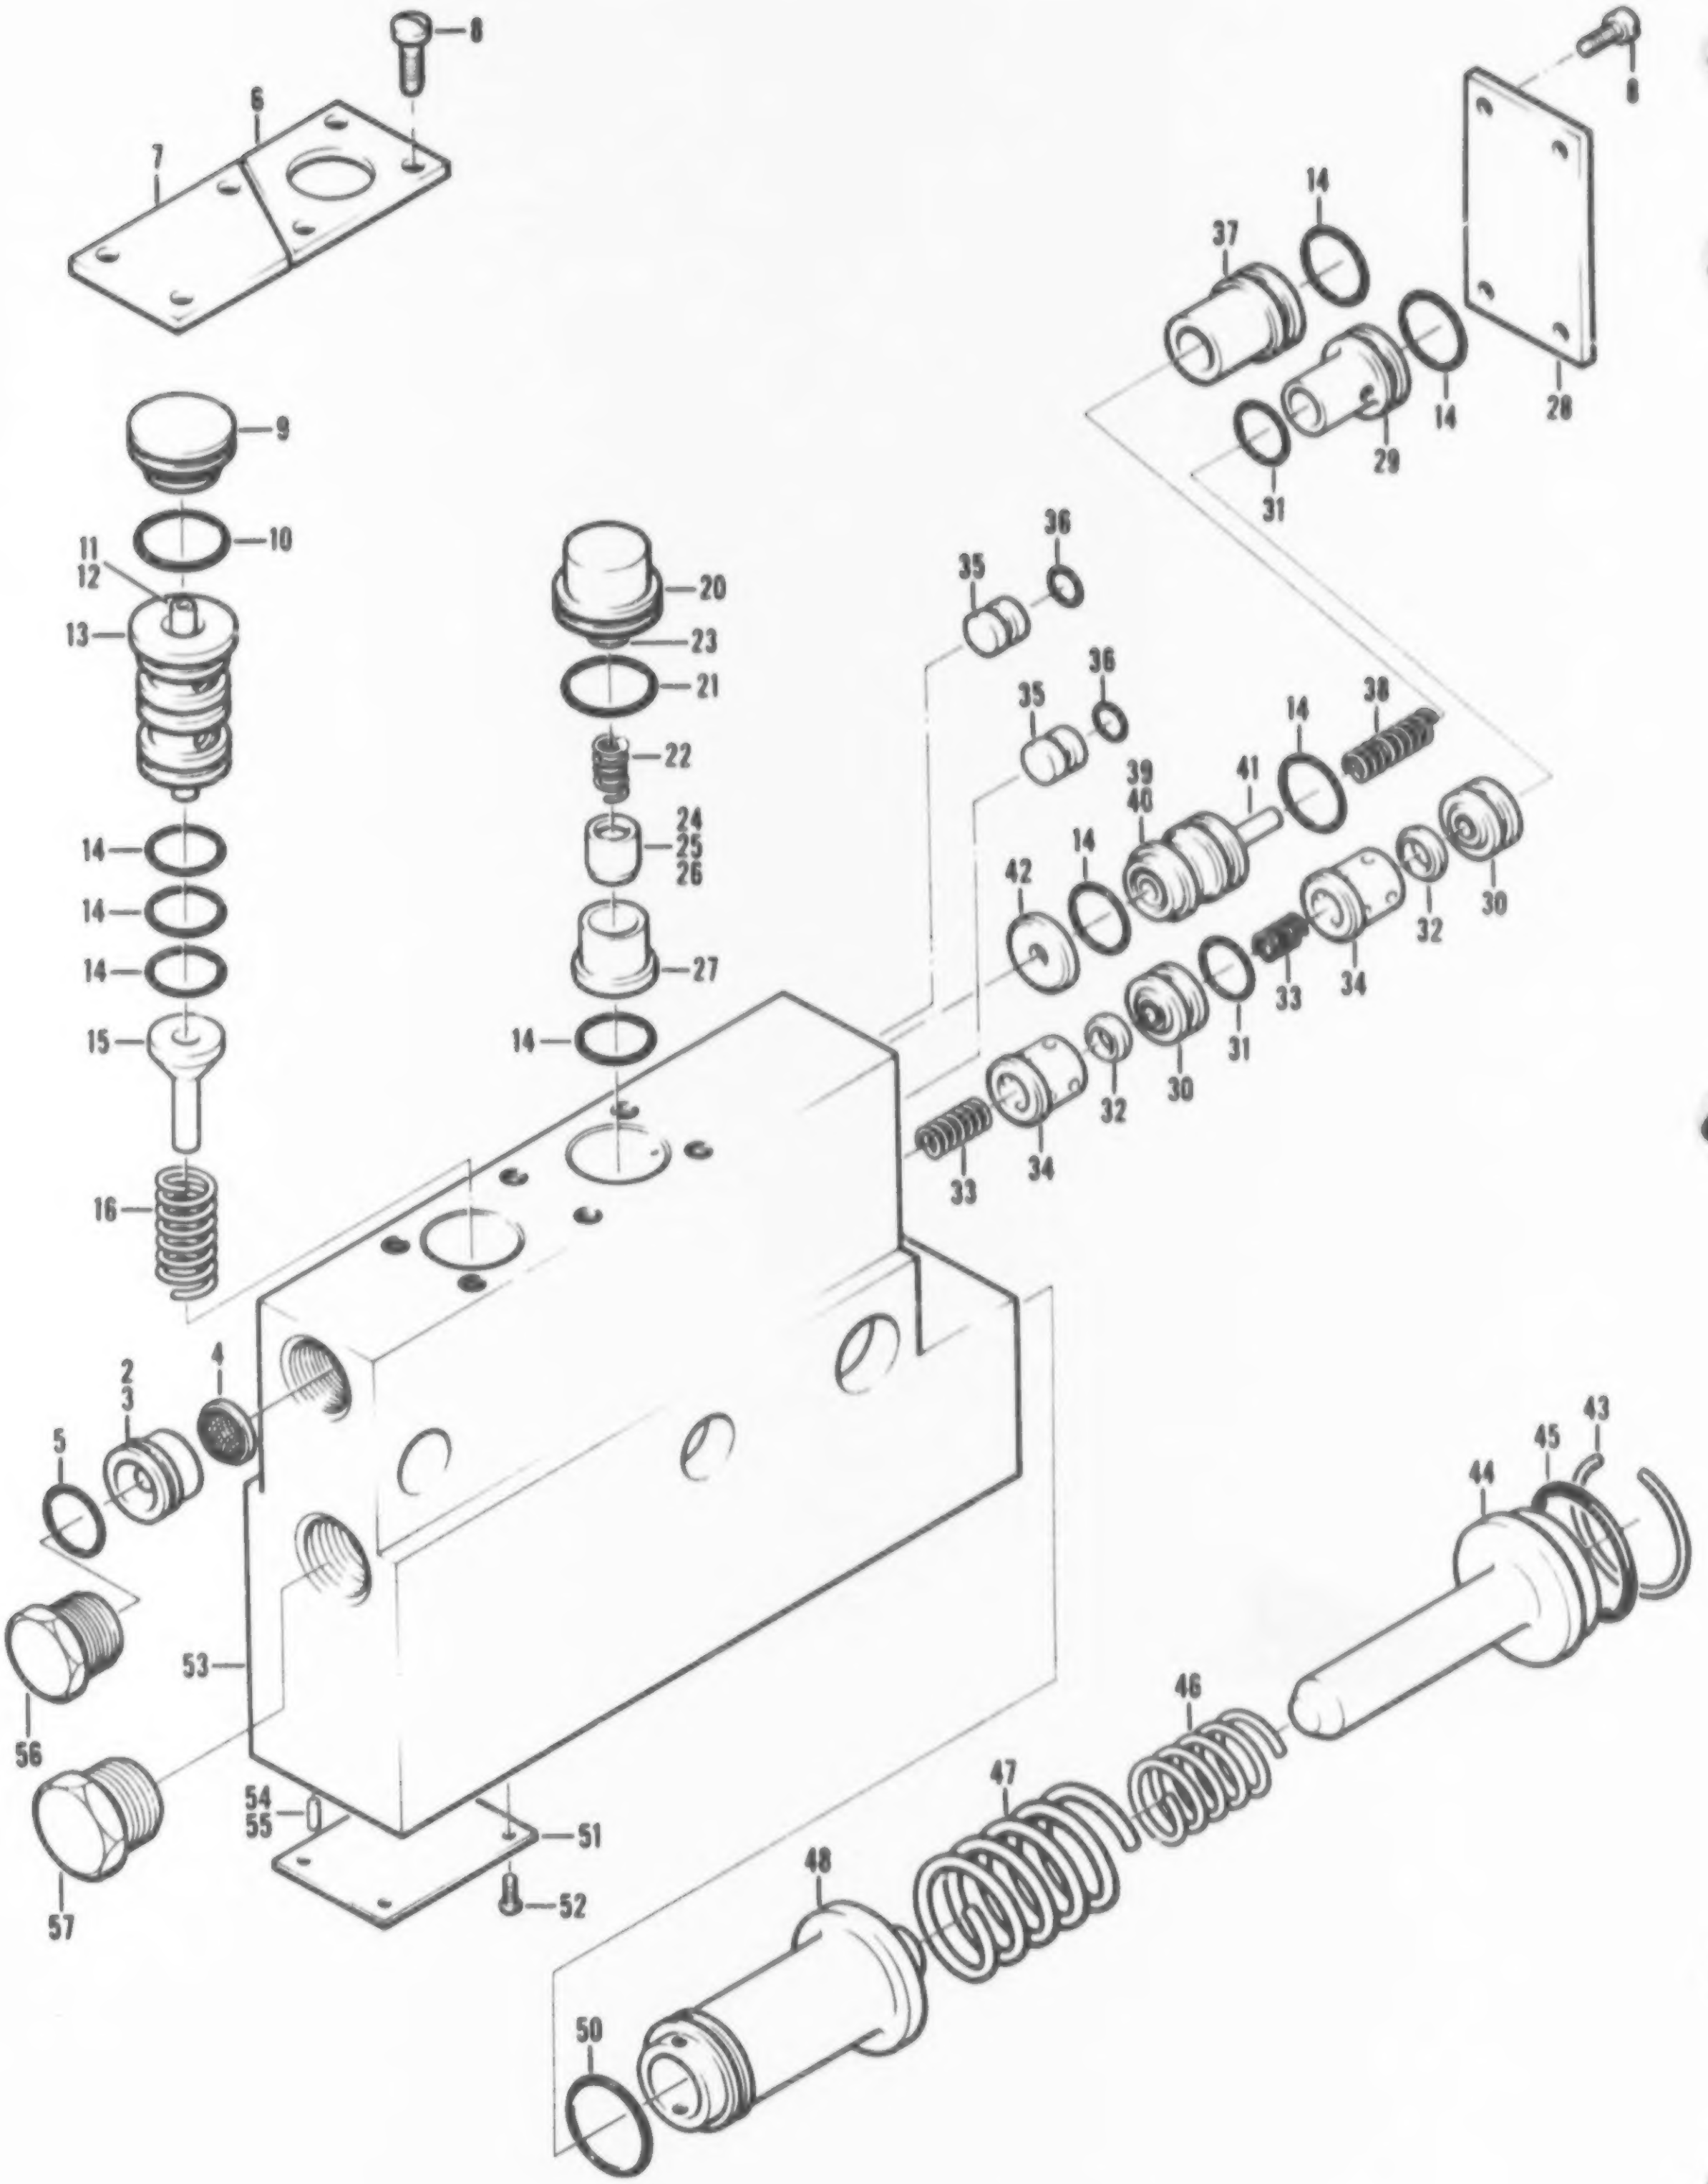
8
6
7
8
37
14
14
28
31
29
14
9
10
11
12
13
20
23
21
22
24
25
26
27
14
35
36
35
36
14
38
39
40
41
42
14
30
32
34
33
31
30
32
34
33
14
14
14
15
16
2
3
4
5
53
56
57
54
55
51
52
43
45
44
46
47
48
50

Figure 204. Valve Assembly, Irreversible Flight Control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
204		PAODD	4810-01-022-3699	97499	204-076-066-1	VALVE ASSEMBLY, IRREVERSIBLE FLIGHT CONTROL FOR PN 204-076-065-1 (42560-3) SEE FIG 190, 191 & 203 FOR NHA .... UHB,UHE,UHH,UHV,UHX	EA	1
204	2	PADZZ	1650-00-072-5081	81873	42588	.FILTER ELEMENT,FLUI .... UHB,UHE,UHH,UHV,UHX	EA	1
204	3	XADZZ		81873	42589	..SPOOL .... UHB,UHE,UHH,UHV,UHX	EA	1
204	4	XADZZ		81873	41862	..FILTER ELEMENT .... UHB,UHE,UHH,UHV,UHX	EA	1
204	5	PBOZZ	5330-00-584-0266	96906	MS28775-010	.PACKING, PREFORM .... UHB,UHE,UHH,UHV,UHX	EA	1
204	6	PBOZZ	1650-00-947-6944	81873	42596-1	.PLATE,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	7	MDOZZ	1650-00-947-6945	81873	42596-2	.PLATE,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	8	PADZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE .... UHB,UHE,UHH,UHV,UHX	EA	10
204	9	PADZZ	1650-00-975-7122	81873	42569	.CAP,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	10	PADZZ	5330-00-579-8108	96906	MS28775-111	.PACKING,PREFORMED .... UHB,UHE,UHH,UHV,UHX	EA	1
204	11	PADZZ	1650-00-953-6006	81873	42558	.SELECTOR SET,DIRECT .... UHB,UHE,UHH,UHV,UHX	EA	1
204	12	XADZZ		81873	42583	..SLIDE,DIRECTIONAL .... UHB,UHE,UHH,UHV,UHX	EA	1
204	13	XADZZ		81873	42582	..SLEEVE,DIRECTIONAL .... UHB,UHE,UHH,UHV,UHX	EA	1
204	14	PADZZ	5330-00-640-9613	88044	AN6227B7	.PACKING,PREFORMED .... UHB,UHE,UHH,UHV,UHX	EA	3
204	15	PADZZ	1650-00-975-7132	81873	42557	.RETAINER,HELICAL CO .... UHB,UHE,UHH,UHV,UHX	EA	1
204	16	PADZZ	5360-00-330-0849	81873	42556	.SPRING,HELICAL,COMP .... UHB,UHE,UHH,UHV,UHX	EA	1
204	20	PADZZ	1650-00-072-5078	81873	42592	.CAP-RETAINER,SEQUEN .... UHB,UHE,UHH,UHV,UHX	EA	1
204	21	PADZZ	5330-00-584-1840	96906	MS28775-014	.PACKING,PREFORMED .... UHB,UHE,UHH,UHV,UHX	EA	1
204	22	PADZZ	5360-00-072-5080	81873	42593	.SPRING,HELICAL,COMP .... UHB,UHE,UHH,UHV,UHX	EA	1
204	23	PADZZ	5340-00-927-7828	81873	42597	.DISK,SOLID,PLAIN .... UHB,UHE,UHH,UHV,UHX	EA	V
204	24	PADZZ	1650-00-945-3953	81873	42610	.DISK AND SEAT,VALVE U/O PN 42550-3 .... UHB,UHE,UHH,UHV,UHX	EA	1
204	25	XADZZ		81873	42590	..POPPET,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	26	XADZZ		81873	42590-1	..POPPET ASSEMBLY .... UHB,UHE,UHH,UHV,UHX	EA	1
204	27	XADZZ		81873	42591	..SEAT,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	28	PADZZ	1650-00-330-0165	81873	42570	.PLATE,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	29	PADZZ	1650-00-330-0169	81873	42573	.SPACER-SELECTOR .... UHB,UHE,UHH,UHV,UHX	EA	1
204	30	PADZZ	1650-00-975-7128	81873	42576	.SEAT,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	2
204	31	PADZZ	5330-00-582-2133	96906	MS28775-011	.PACKING,PREFORMED .... UHB,UHE,UHH,UHV,UHX	EA	2
204	32	PADZZ	1650-00-055-2922	81873	42577	.POPPET,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	2
204	33	PADZZ	5360-00-969-6020	81873	42579	.SPRING,HELICAL,COMP .... UHB,UHE,UHH,UHV,UHX	EA	2
204	34	PADZZ	1650-00-179-6429	81873	42578-2	.SEAT,HELICAL COMPRE SPRING .... UHB,UHE,UHH,UHV,UHX	EA	2
204	35	PADZZ	1650-00-330-0144	81873	42572	.PLUG,METALLIC,UNTHR .... UHB,UHE,UHH,UHV,UHX	EA	2
204	36	PADZZ	5330-00-292-0580	96906	MS28775-006	.PACKING,PREFORMED .... UHB,UHE,UHH,UHV,UHX	EA	2
204	37	PADZZ	1650-00-013-6111	81873	42581	.CAP,VALVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	38	PADZZ	5360-00-330-0076	81873	42571	.SPRING,HELICAL,COMP .... UHB,UHE,UHH,UHV,UHX	EA	1
204	39	PADZZ	1650-00-072-8941	81873	42584	.SELECTOR SET,DIRECT .... UHB,UHE,UHH,UHV,UHX	EA	1
204	40	XADZZ		81873	42568	..SLEEVE .... UHB,UHE,UHH,UHV,UHX	EA	1
204	41	XADZZ		81873	42569	..SLIDE,DIRECTIONAL .... UHB,UHE,UHH,UHV,UHX	EA	1
204	42	PADZZ	5330-00-055-2923	81873	42567	.RETAINER,PACKING .... UHB,UHE,UHH,UHV,UHX	EA	1
204	43	PADZZ	5365-00-950-0041	81873	42574	.RING,RETAINING .... UHB,UHE,UHH,UHV,UHX	EA	1
204	44	PADZZ	1650-00-911-3210	81873	42576-2	.SEAT,HELICAL COMPRE .... UHB,UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
204	45	PADZZ	5330-00-585-7723	96906	MS28775-020	.PACKING,PREFORMED........................UHB,UHE,UHH,UHV,UHX	EA	1
204	46	PADZZ	5360-00-330-0851	81873	42554	.SPRING,HELICAL,COMP......................UHB,UHE,UHH,UHV UHX	EA	1
204	47	PADZZ	5360-00-088-3048	81873	42553	.SPRING,HELICAL,COMP......................UHB,UHE,UHH,UHV,UHX	EA	1
204	48	PADZZ	1650-00-055-2921	81873	42555	.PISTON,VALVE............................UHB,UHE,UHH,UHV,UHX	EA	1
204	50	PADZZ	5330-01-024-9797	72902	711A3MR-160A-T	.PACKING,PREFORMED........................UHB,UHE,UHH,UHV,UHX	EA	1
204	51	XDDZZ		81873	41000437	.PLATE,IDENTIFICATIO......................UHB,UHE,UHH,UHV,UHX	EA	1
204	52	XDDZZ	5305-00-253-5603	96906	MS21318-1	.SCREW,DRIVE..............................UHB,UHE,UHH,UHV,UHX	EA	4
204	53	PADZZ	1650-00-911-3209	81873	42595-3	.HOUSING,VALVE............................UHB,UHE,UHH,UHV,UHX	EA	1
204	54	XADZZ		81873	42586	..PIN,STRAIGHT............................UHB,UHE,UHH,UHV,UHX	EA	1
204	55	XADZZ		92555	125001	..PLUG ASSEMBLY...........................UHB,UHE,UHH,UHV,UHX	EA	1
204	56	PAOZZ	5340-00-292-3296	60995	SP4	.PLUG, PROTECTIVE.........................UHB,UHE,UHH,UHV,UHX	EA	1
204	57	PAOZZ	5340-00-433-3254	60995	SP5	.PLUG,PROTECTIVE,DUS......................UHB,UHE,UHH,UHV,UHX	EA	1

best copy available

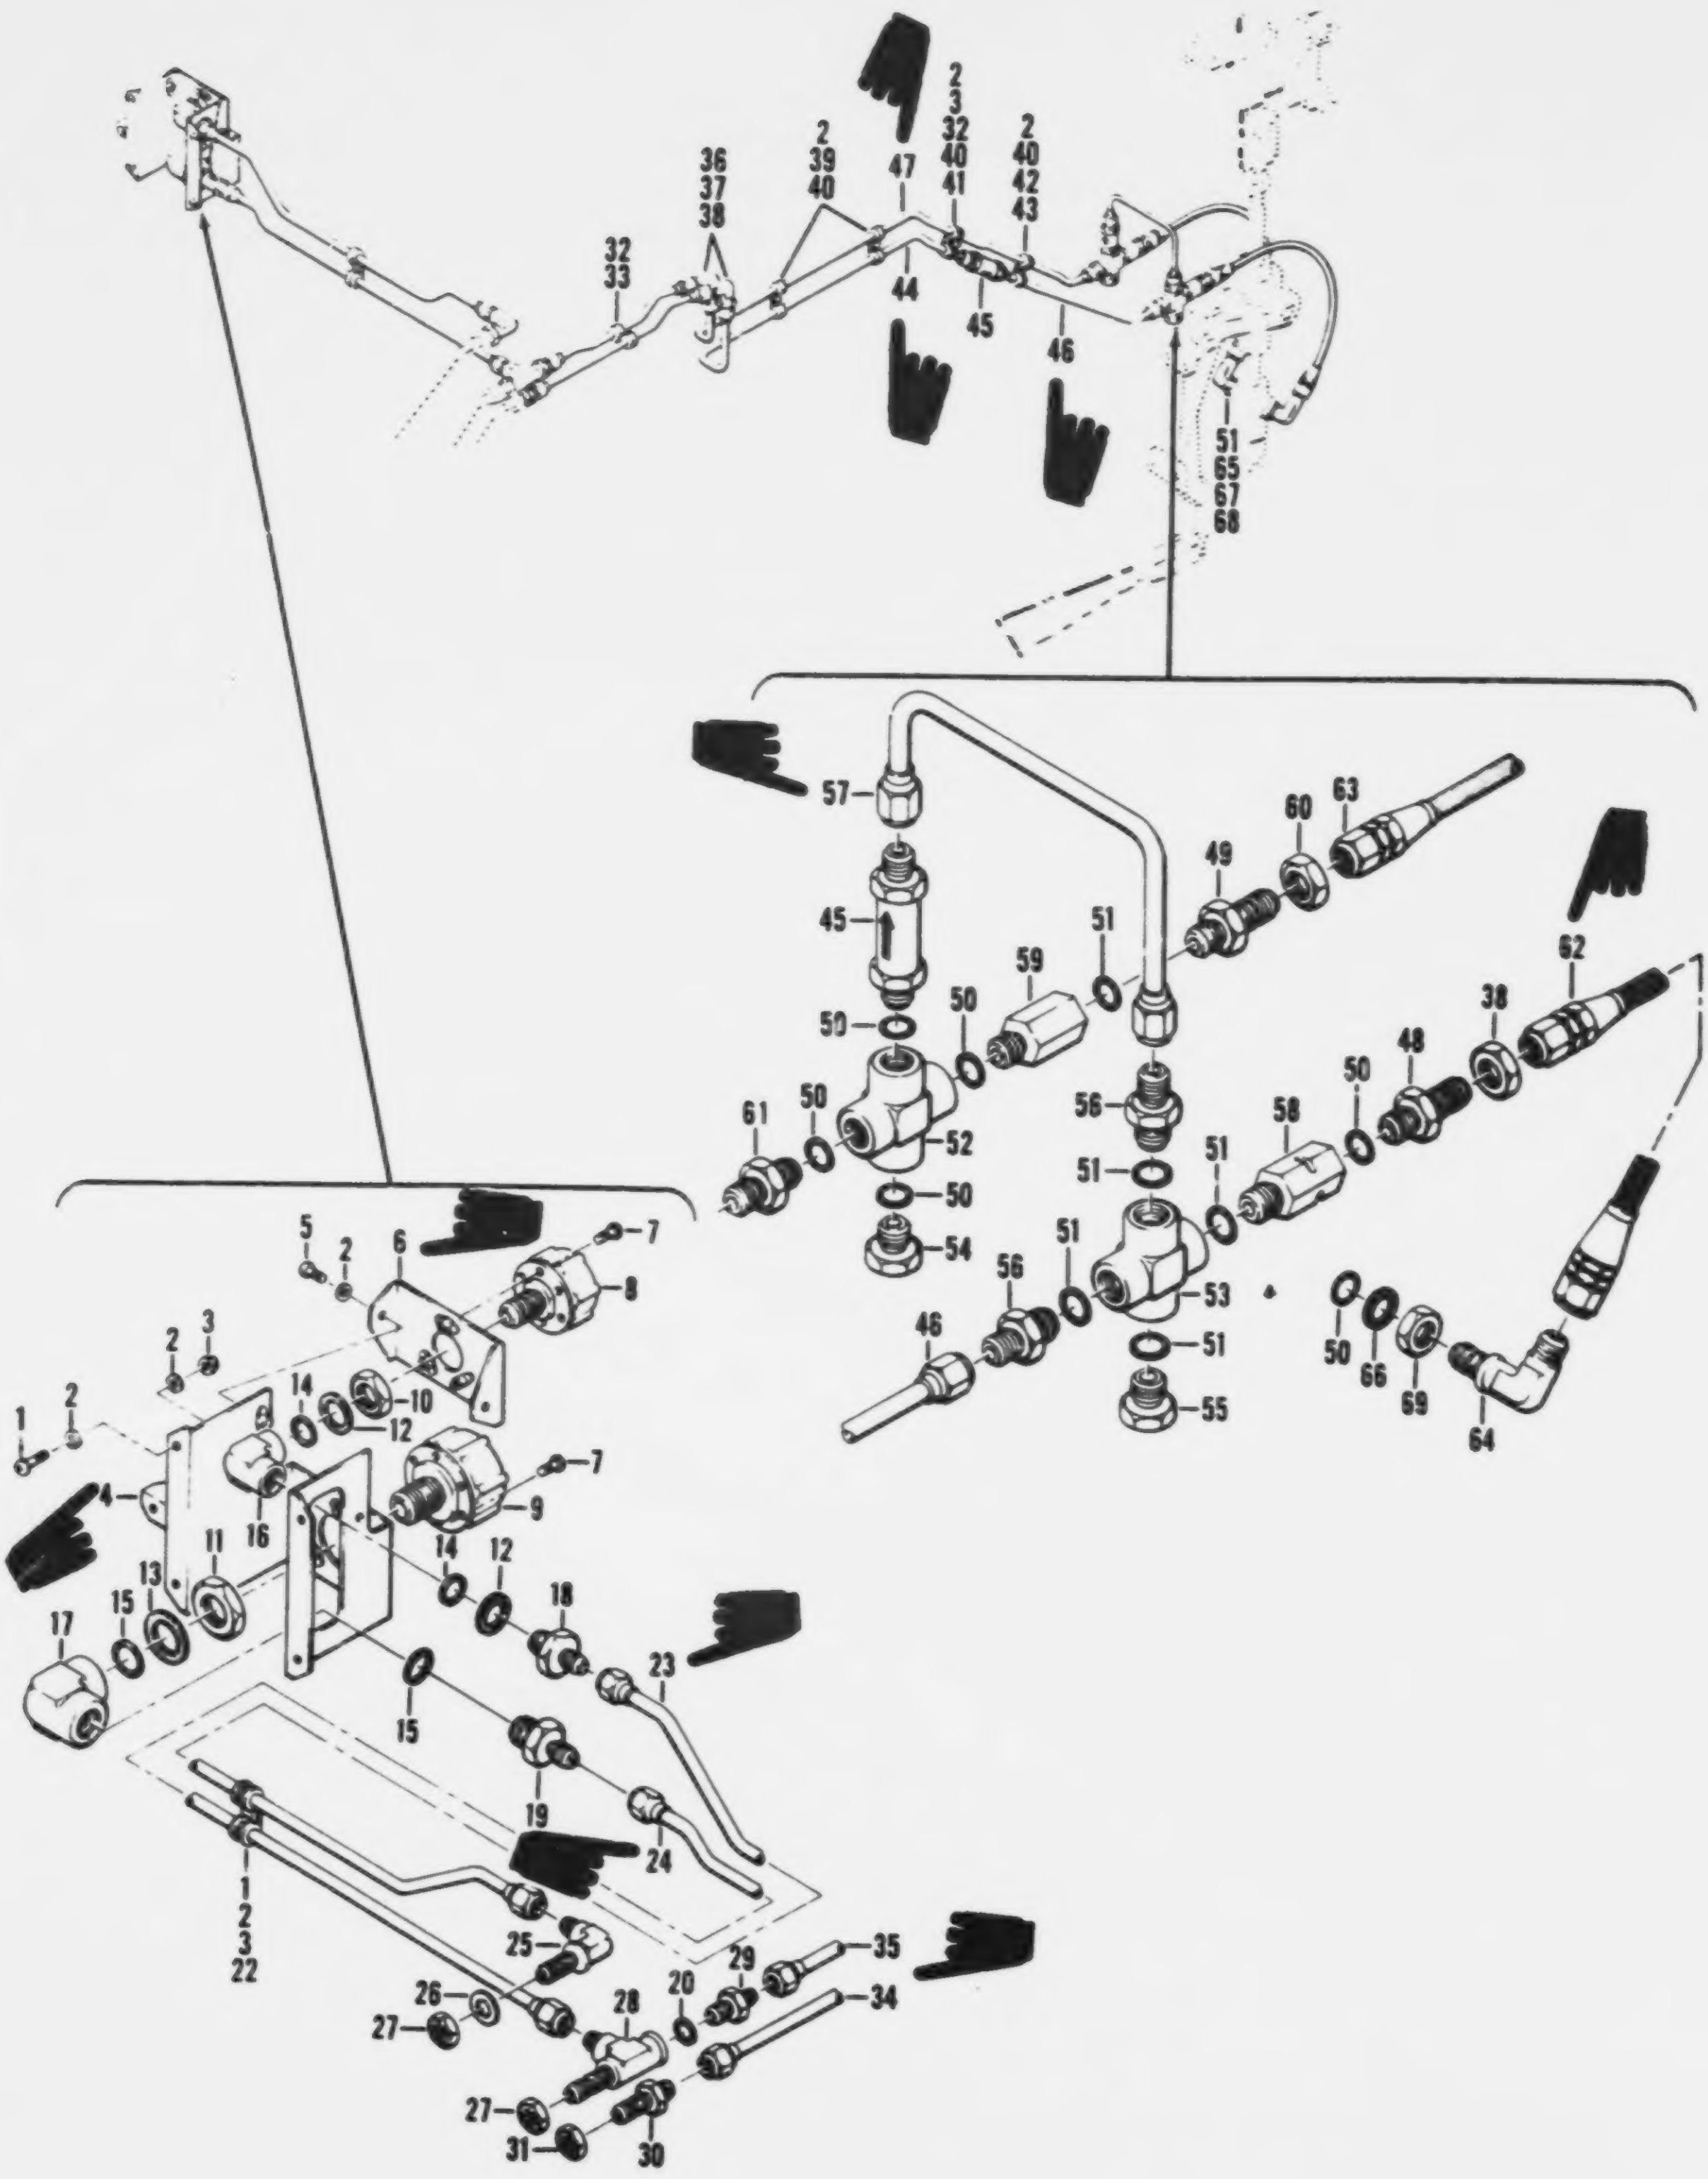
2
3
32
40
41
2
40
42
43
2
39
40
47
36
37
38
32
33
44
45
46
51
65
67
68
57
63
60
49
45
51
59
50
62
38
48
50
56
58
61
50
52
50
54
51
51
51
53
46
56
51
55
50
66
69
64
5
2
6
7
8
3
2
14
10
12
1
2
4
16
7
9
11
13
15
17
14
12
18
23
15
19
24
1
2
3
22
25
35
29
20
34
28
26
27
27
31
30

Figure 205. Hydraulic Installation, Aft Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
205		XCFZZ		97499	205-076-012-3	HYDRAULIC INSTL USBL EFF 62-2106 THRU 63-8859 SEE FIG 7 FOR NHA SEE FIG 203 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-075-012-5	HYDRAULIC INSTL USBL EFF 63-12956 THRU 63-13002 SEE FIG 7 FOR NHA SEE FIG 203 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-076-012-7	HYDRAULIC INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG 7 FOR NHA SEE FIG 203 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA SEE FIG 203 AND 206 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-076-023-1	HYDRAULIC INSTL USBL EFF 66-746 THRU 66-1146 SEE FIG 7 FOR NHA SEE FIG 203 AND 206 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-076-023-5	HYDRAULIC INSTL USBL EFF 66-1147 THRU 68-15778 SEE FIG 7 FOR NHA SEE FIG 203 AND 206 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-076-023-7	HYDRAULIC INSTL USBL EFF 68-16050 THRU 69-15291 SEE FIG 7 FOR NHA SEE FIG 203 AND 206 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205		XCFZZ		97499	205-076-023-11	HYDRAULIC INSTL USBL EFF 69-15292 & SUBSEQUENT SEE FIG 7 FOR NHA SEE FIG 203 AND 206 FOR BALANCE OF BREAKDOWN UHE,UHH,UHV,UHX	EA	1
205	1	PAOZZ	5306-00-912-7308	88044	AN525-10R14	.SCREW, MACHINE UHE,UHH,UHV,UHX	EA	6
205	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	17
205	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	7
205	4	MFOZZ	DELETED	97499	205-076-101-1	BRACKET ASSEMBLY UHE,UHH,UHV,UHX	EA	1
205	5	PAOZZ	5306-00-990-6444	96906	MS35207-261	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	2
205	6	MFOZZ	DELETED	97499	205-076-101-3	BRACKET ASSEMBLY,AI UHE,UHH,UHV,UHX	EA	1
205	7	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	6
205	8	PAOZZ	4730-00-709-0355	00624	3055S11-8D	.COUPLING HALF,QUICK WITH DUST CAP UHE,UHH,UHV,UHX	EA	1
205	9	PAOZZ	4730-00-033-4550	00624	3055S11-12D	.COUPLING HALF,QUICK UHE,UHH,UHV,UHX	EA	1
205	10	PAOZZ	4730-00-277-5081	88044	AN6289D8	.LOCKNUT,TUBE FITTIN UHE,UHH,UHV,UHX	EA	1
205	11	PAOZZ	4730-00-277-5077	88044	AN6289D12	.LOCKNUT,TUBE FITTIN UHE,UHH,UHV,UHX	EA	1
205	12	PAOZZ	5310-00-186-1380	96906	MS28777-8	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
205	13	PAOZZ	5330-00-684-3206	96906	MS28777-12	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
205	14	PAOZZ	5330-00-308-0794	96906	MS28778-8	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	2
205	15	PAOZZ	5330-00-251-8839	96906	MS28778-12	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	2
205	16	PAOZZ	4730-00-277-2458	88044	AN939D8	.ELBOW,BOSS UHE,UHH,UHV,UHX	EA	1
205	17	PAOZZ	4730-00-277-2461	88044	AN939D12	.ELBOW,BOSS UHE,UHH,UHV,UHX	EA	1
205	18	PAOZZ	4730-00-640-7199	96906	MS21916D8-6	.REDUCER,TUBE UHE,UHH,UHV,UHX	EA	1
205	19	PAOZZ	4730-00-640-5040	96906	MS21916D12-6	.REDUCER,TUBE UHE,UHH,UHV,UHX	EA	1
205	20	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
205	22	PAOZZ	5340-00-533-3513	81996	EAB700-6	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	2
205	23	MFOZZ	DELETED	97499	205-076-212-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
205	24	MFOZZ	DELETED	97499	205-076-141-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
205	25	PAOZZ	4730-00-541-6478	96906	MS21908-6	.ELBOW,TUBE UHE,UHH,UHV,UHX	EA	1
205	26	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
205	27	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	2

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
205	28	PAOZZ	4730-00-278-8397	96906	MS21911-6	.ELBOW,TUBE TO BOSS	UHE,UHH,UHV,UHX	EA	1
205	29	PAOZZ	4730-00-541-4901	96906	MS21916-6-4	.REDUCER,TUBE	UHE,UHH,UHV,UHX	EA	1
205	30	PAOZZ	4730-00-541-1750	96906	MS21924-4	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
205	31	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
205	32	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
205	33	PAOZZ	5340-00-533-3511	81996	EAB700-4	.CLAMP,SUPPORT	UHE,UHH,UHV,UHX	EA	2
205	34	MFOZZ	DELETED	97499	205-076-207-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
205	35	MFOZZ	DELETED	97499	205-076-210-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
205	36	PAOZZ	4730-00-541-6479	96906	MS21908-4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
205	37	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
205	38	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	3
205	39	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
205	40	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	8
205	41	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	1
205	42	XDOZZ	5305-00-286-1766	88044	AN525-10R20	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
205	43	PAOZZ	5365-00-825-7844	80205	NAS43D03-54	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
205	44	MFOZZ	DELETED	97499	205-076-160-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
205	45	PAOZZ	4820-00-989-7632	96906	MS28890-4	.VALVE,CHECK	UHE,UHH,UHV,UHX	EA	2
205	46	MFOZZ	DELETED	97499	205-076-161-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
205	47	MFOZZ	DELETED	97499	205-076-209-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
205	48	PAOZZ	4730-00-580-9165	96906	MS21924D4	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
205	49	PAOZZ	4730-00-618-0705	96906	MS21924D5	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
205	50	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	6
205	51	PAOZZ	5330-00-833-7491	96906	MS28778-5	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	6
205	52	PAOZZ	4730-00-278-8469	88044	AN937D4	.CROSS,BOSS	UHE,UHH,UHV,UHX	EA	1
205	53	PAOZZ	4730-00-289-5437	88044	AN937D5	.CROSS,BOSS	UHE,UHH,UHV,UHX	EA	1
205	54	PAOZZ	5365-00-837-0856	96906	MS24391D4L	.PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	1
205	55	PAOZZ	5365-00-124-3042	96906	MS24391D5L	.PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	1
205	56	PAOZZ	4730-00-289-2776	96906	MS21916D5-4	.REDUCER,TUBE	UHE,UHH,UHV,UHX	EA	2
205	57	MFOZZ	DELETED	97499	205-076-223-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
205	58	PAOZZ	4730-00-231-1324	88044	AN893-1D	.REDUCER,BOSS U/O PN 205-076-023-1 AND -3.	UHE,UHH,UHV,UHX	EA	1
205	59	PAOZZ	4730-00-595-4826	96906	MS21915D5-4	.ADAPTER,STRAIGHT,TU BOSS	UHE,UHH,UHV,UHX	EA	1
205	60	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
205	61	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
205	62	MFOZZ	DELETED	96906	MS8001E210A	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
205	63	MFOZZ		96906	MS8001F210A	.HOSE ASSEMBLY,NONME TETRAFLUOROETHYLENE	UHE,UHH,UHV,UHX	EA	1
205	64	PAOZZ	4730-00-640-0830	96906	MS21908D4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
205	65	PAOZZ	4730-00-640-1226	96906	MS21908D5	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
205	66	PAOZZ	5310-00-186-4947	96906	MS28777-4	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
205	67	PAOZZ	5310-00-684-2731	96906	MS28777-5	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
205	68	PBOZZ	4730-00-847-3792	96906	MS9099-05	.LOCKNUT,TUBE FITTIN	UHE,UHH,UHV,UHX	EA	1
205	69	PAOZZ	4730-00-277-6371	88044	AN6289D4	.LOCKNUT,TUBE FITTIN	UHE,UHH,UHV,UHX	EA	1

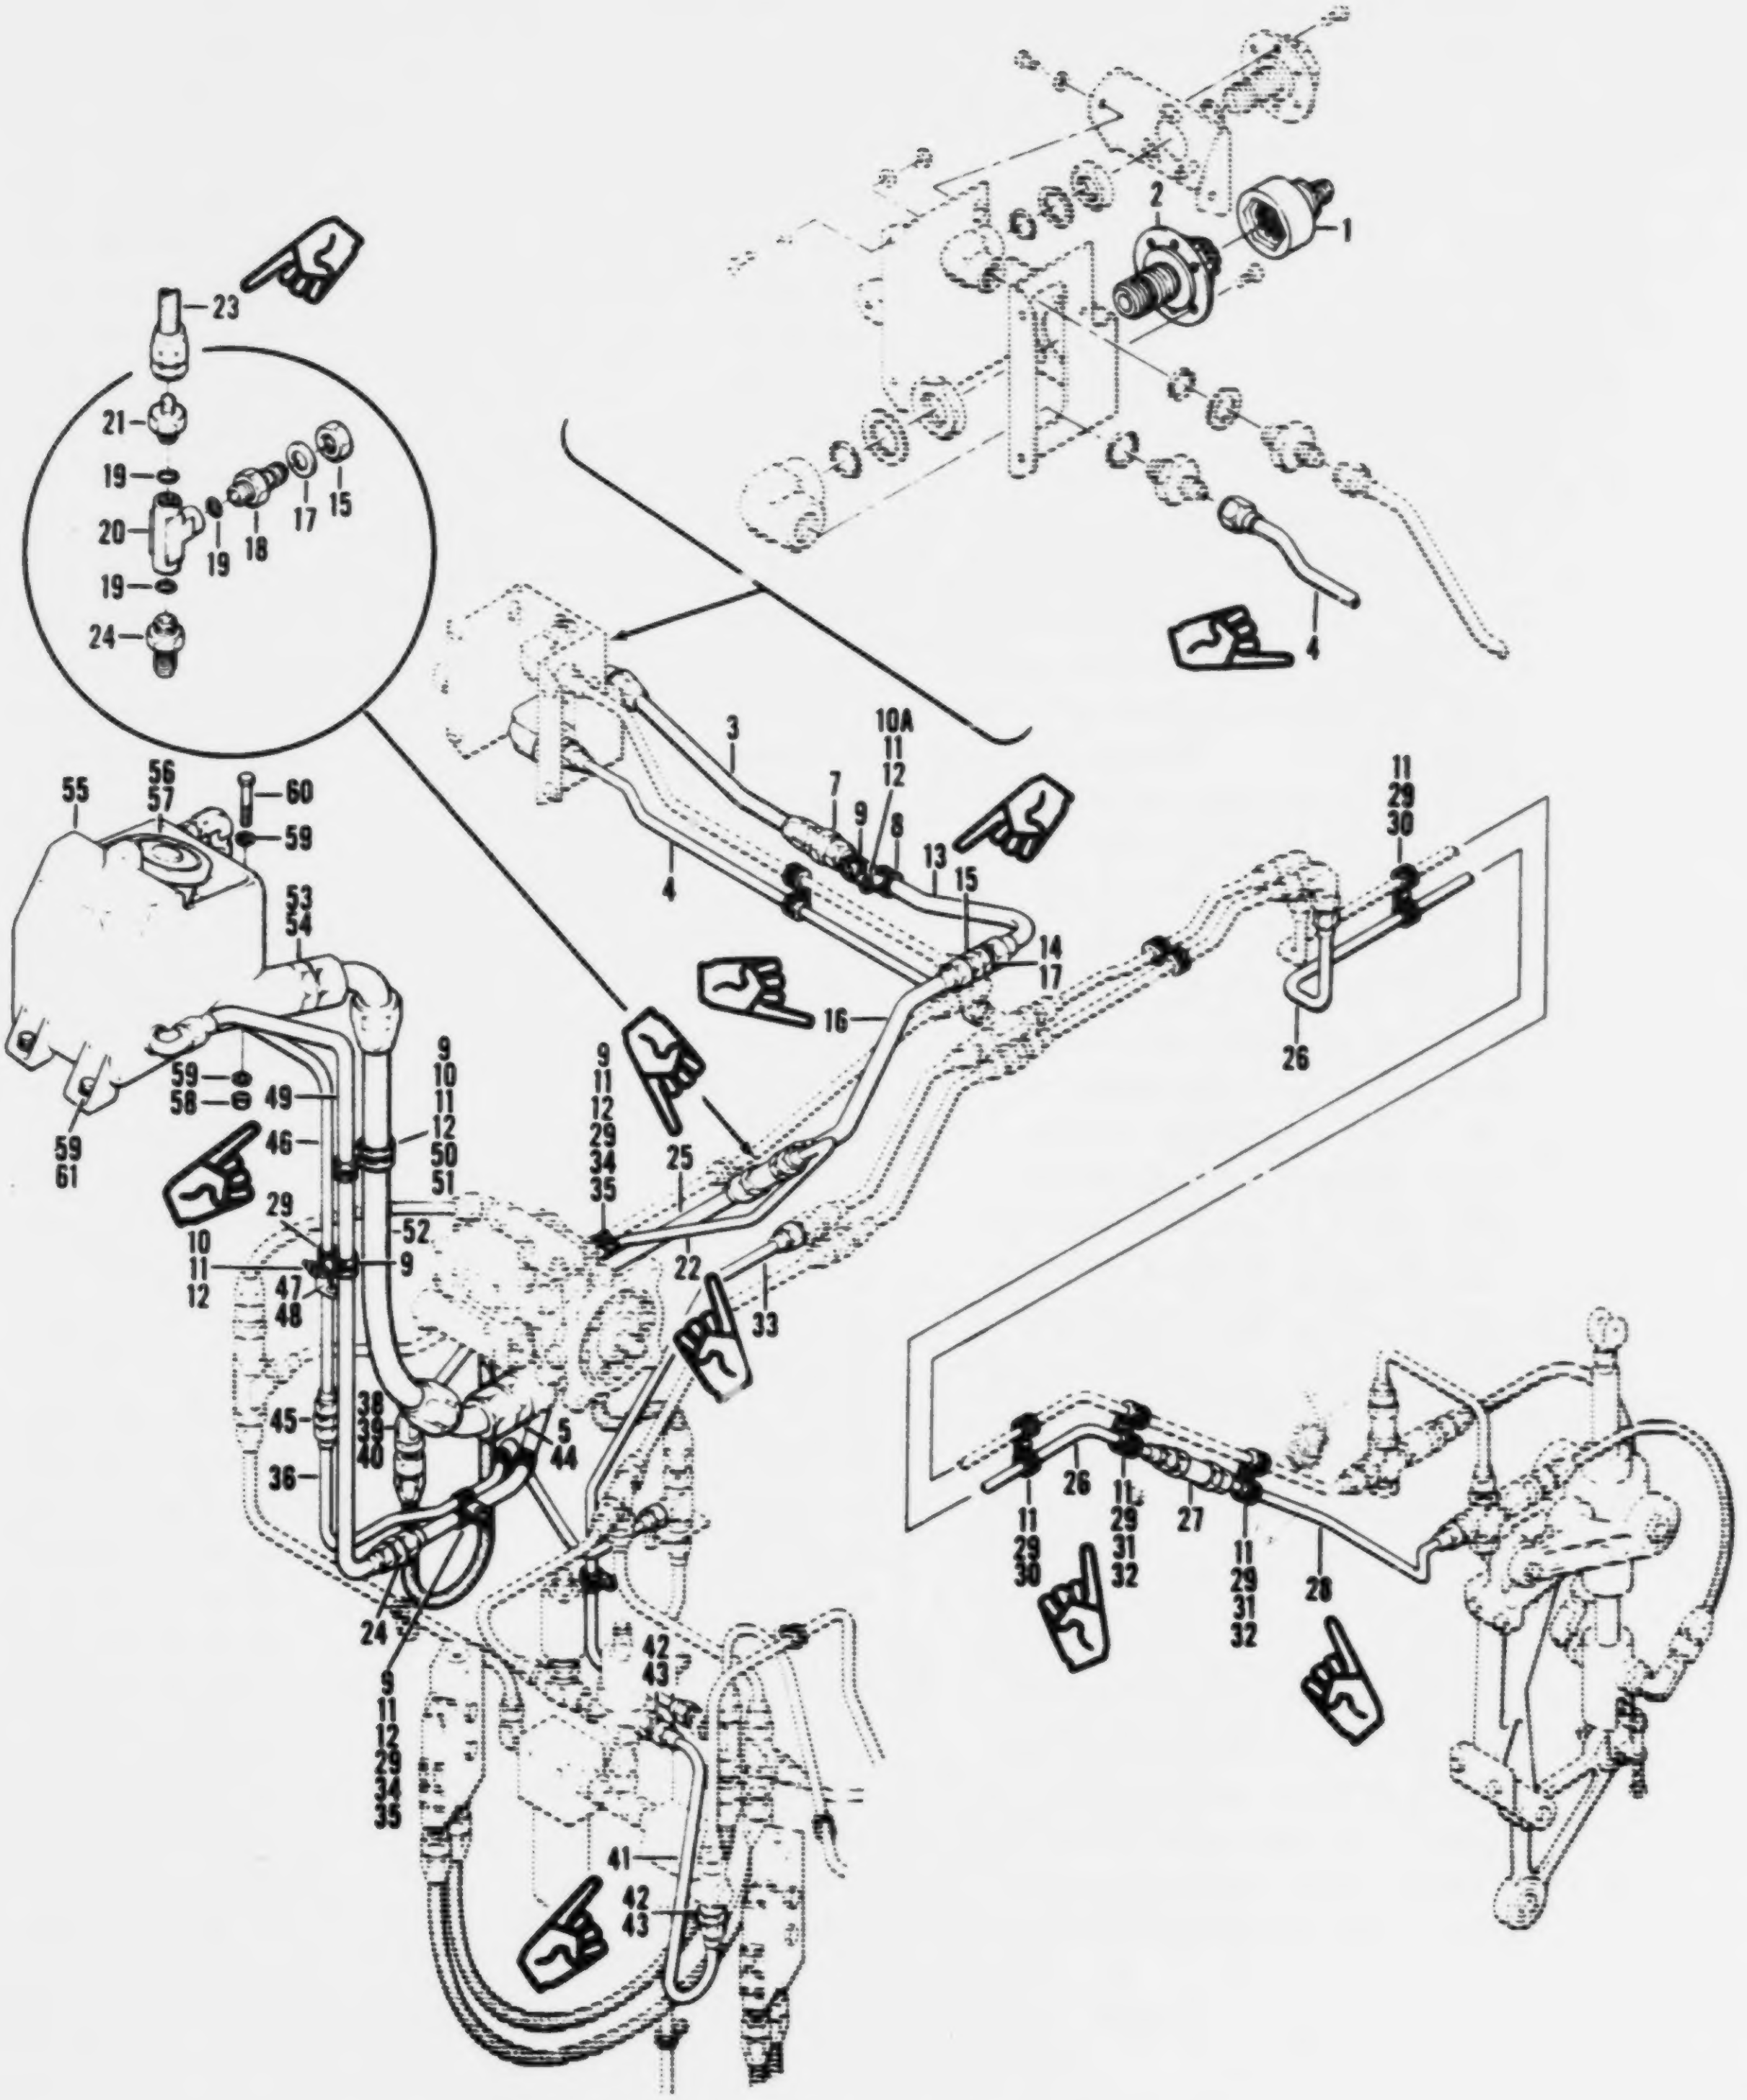
1
2
23
21
19
20
19
24
18
19
17
15
4
3
10A
11
12
7
9
8
13
15
14
17
16
4
55
56
57
60
59
53
54
11
29
30
26
59
58
59
61
49
46
9
10
11
12
50
51
9
11
12
29
34
35
25
29
52
10
11
12
9
47
48
22
33
45
36
38
39
40
5
44
24
9
11
12
29
34
35
42
43
41
42
43
26
11
29
30
11
29
31
32
27
11
29
31
32
28

Figure 206. Hydraulic Installation, Aft Section

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
206		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL SEE FIG.7 NHA .... UHE,UHH,UHV,UHX	EA	1
206		XCFZZ		97499	205-076-023-1	HYDRAULIC INSTL SEE FIG.7 NHA .... UHE,UHH,UHV,UHX	EA	1
?06		XCFZZ		97499	205-076-023-5	HYDRAULIC INSTL SEE FIG.7 NHA .... UHE,UHH,UHV,UHX	EA	1
206		XCFZZ		97499	205-076-023-7	HYDRAULIC INSTL SEE FIG.7 NHA .... UHE,UHH,UHV,UHX	EA	1
206		XCFZZ		97499	205-076-023-11	HYDRAULIC INSTL USBL EFF 69-15292 & SUBSEQUENT. SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
206	1	PAOZZ	4730-00-923-2763	00624	AE92123H	.COUPLING ASSY,HALF .... UHE,UHH,UHV,UHX	EA	1
206	2	PAOZZ	4730-00-834-0068	00624	300554-12D	.COUPLING HALF,QUICK MOUNTING .... UHE,UHH,UHV,UHX	EA	1
206	3	MFOZZ		96906	MS8001H094C	.HOSE ASSEMBLY,NONME .... UHE,UHH,UHV,UHX	EA	1
206	4	MFOZZ	DELETED	97499	205-076-141-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	5	PAOZZ	5330-00-251-8839	96906	MS28778-12	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	1
206	7	PAOZZ	4730-00-204-1972	96906	MS21902-8	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	1
206	8	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	1
206	9	PAOZZ	5340-00-954-6826	81996	EAB70008	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	4
206	10	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
206	10A	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
206	11	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	10
206	12	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
206	13	MFOZZ	DELETED	97499	205-076-258-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	14	PAOZZ	4730-00-541-1756	96906	MS21924-8	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	1
206	15	PAOZZ	5310-00-282-7835	96906	MS2440008	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
?06	16	MFOZZ	DELETED	97499	205-076-138-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	17	PAOZZ	5310-00-187-2404	88044	AN960PD1216	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	2
206	18	PAOZZ	4730-00-618-5374	96906	MS21924D8	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	2
206	19	PCOZZ	5330-00-808-0794	96906	MS28778-8	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	3
206	20	PAOZZ	4730-00-277-5065	88044	AN93808	.TEE,BOSS .... UHE,UHH,UHV,UHX	EA	3
206	21	PAOZZ	4730-00-640-7199	96906	MS21916D8-6	.REDUCER,TUBE .... UHE,UHH,UHV,UHX	EA	1
206	22	MFOZZ	DELETED	97499	205-076-158-1	.TUBE ASSEMBLY,METAL U/O PN 205-076-023-1 AND 205-076-012-9. .... UHE,UHH,UHV,UHX	EA	1
206	23	MFOZZ	DELETED	96906	MS8001G1308	.HOSE ASSY, TETRAFLOURETHYLENE .... UHE,UHH,UHV,UHX	EA	1
206	24	PAOZZ	4730-00-529-3763	96906	MS21902D8	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	1
206	25	MFOZZ	DELETED	97499	205-076-159-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	26	MFOZZ	DELETED	97499	205-076-160-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	27	PAOZZ	4820-00-989-7632	96906	MS28890-4	.VALVE,CHECK .... UHE,UHH,UHV,UHX	EA	1
206	28	MFOZZ	DELETED	97499	205-076-161-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	29	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
206	30	PAOZZ	5305-00-925-7857	88044	AN525-10R10	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
206	31	PAOZZ	5305-00-915-0040	96906	MS27039-1-20	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
206	32	PAOZZ	5365-00-825-7844	80205	NAS43DD3-64	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
206	33	MFOZZ	1560-00-939-7631	97499	205-076-140-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
206	34	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
206	35	PAOZZ		03538	N80P16022C6	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
206	36	MFOZZ	1560-00-939-7629	97499	205-076-136-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
206	38	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW,TUBE UHE,UHH,UHV,UHX	EA	1
206	39	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
206	40	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
206	41	MFOZZ	DELETED	97499	205-076-157-1	.TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
206	42	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	2
206	43	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	2
206	44	PAOZZ	4730-00-640-1306	96906	MS21916D16-12	.REDUCER,TUBE UHE,UHH,UHV,UHX	EA	1
206	45	PAOZZ	4730-00-142-2155	96906	MS21902D4	.NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	1
206	46	MFOZZ	DELETED	97499	205-076-156-1	.TUBE ASSEMBLY,METAL U/O PN 205-076-023-1,-5,-7,-11. UHE,UHH,UHV,UHX	EA	1
206	47	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
206	48	PAOZZ	5340-00-593-8251	88044	AN743-12	.BRACKET,ANGLE UHE,UHH,UHV,UHX	EA	1
206	49	MFOZZ	DELETED	97499	205-076-259-1	.TUBE ASSEMBLY METAL U/O PN 205-076-023-1,-5,-7,-11. UHE,UHH,UHV,UHX	EA	1
206	50	PAOZZ	5365-00-826-7868	80205	NAS43DD3-144	.SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	1
206	51	PAOZZ	5340-00-993-1470	81996	EAB700D18	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	1
206	52	XDOZZ		96906	MS87029M284E220	.HOSE ASSEMBLY,NONME UHE,UHH,UHV,UHX	EA	1
206	53	PAOZZ	4730-00-289-6091	96906	MS21902D16	.NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	1
206	54	PAOZZ	5330-00-804-5694	96906	MS28778-16	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
206	55	PAOFF	1650-00-923-0629	97499	205-076-135-1	.TANK,HYDRAULIC FLUI SEE FIG.207 FOR BREAKDOWN U/O PN 205-076-023-1,-5,-7,-11 UHE,UHH,UHV,UHX	EA	1
206	56	PAOZZ	4730-00-278-8794	88044	AN814-6DL	.PLUG,BLEEDER UHE,UHH,UHV,UHX	EA	1
206	57	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	1
206	58	PAOZZ		80205	NAS679A4	.NUT,SELF LOCKING UHE,UHH,UHV,UHX	EA	2
206	59	PAOZZ	5310-00-804-6801	80205	NAS1197-416L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	6
206	60	PAOZZ	5306-00-182-2017	88044	AN4H5A	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	1
206	61	PAOZZ	5306-00-151-1426	88044	AN4-6A	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	3

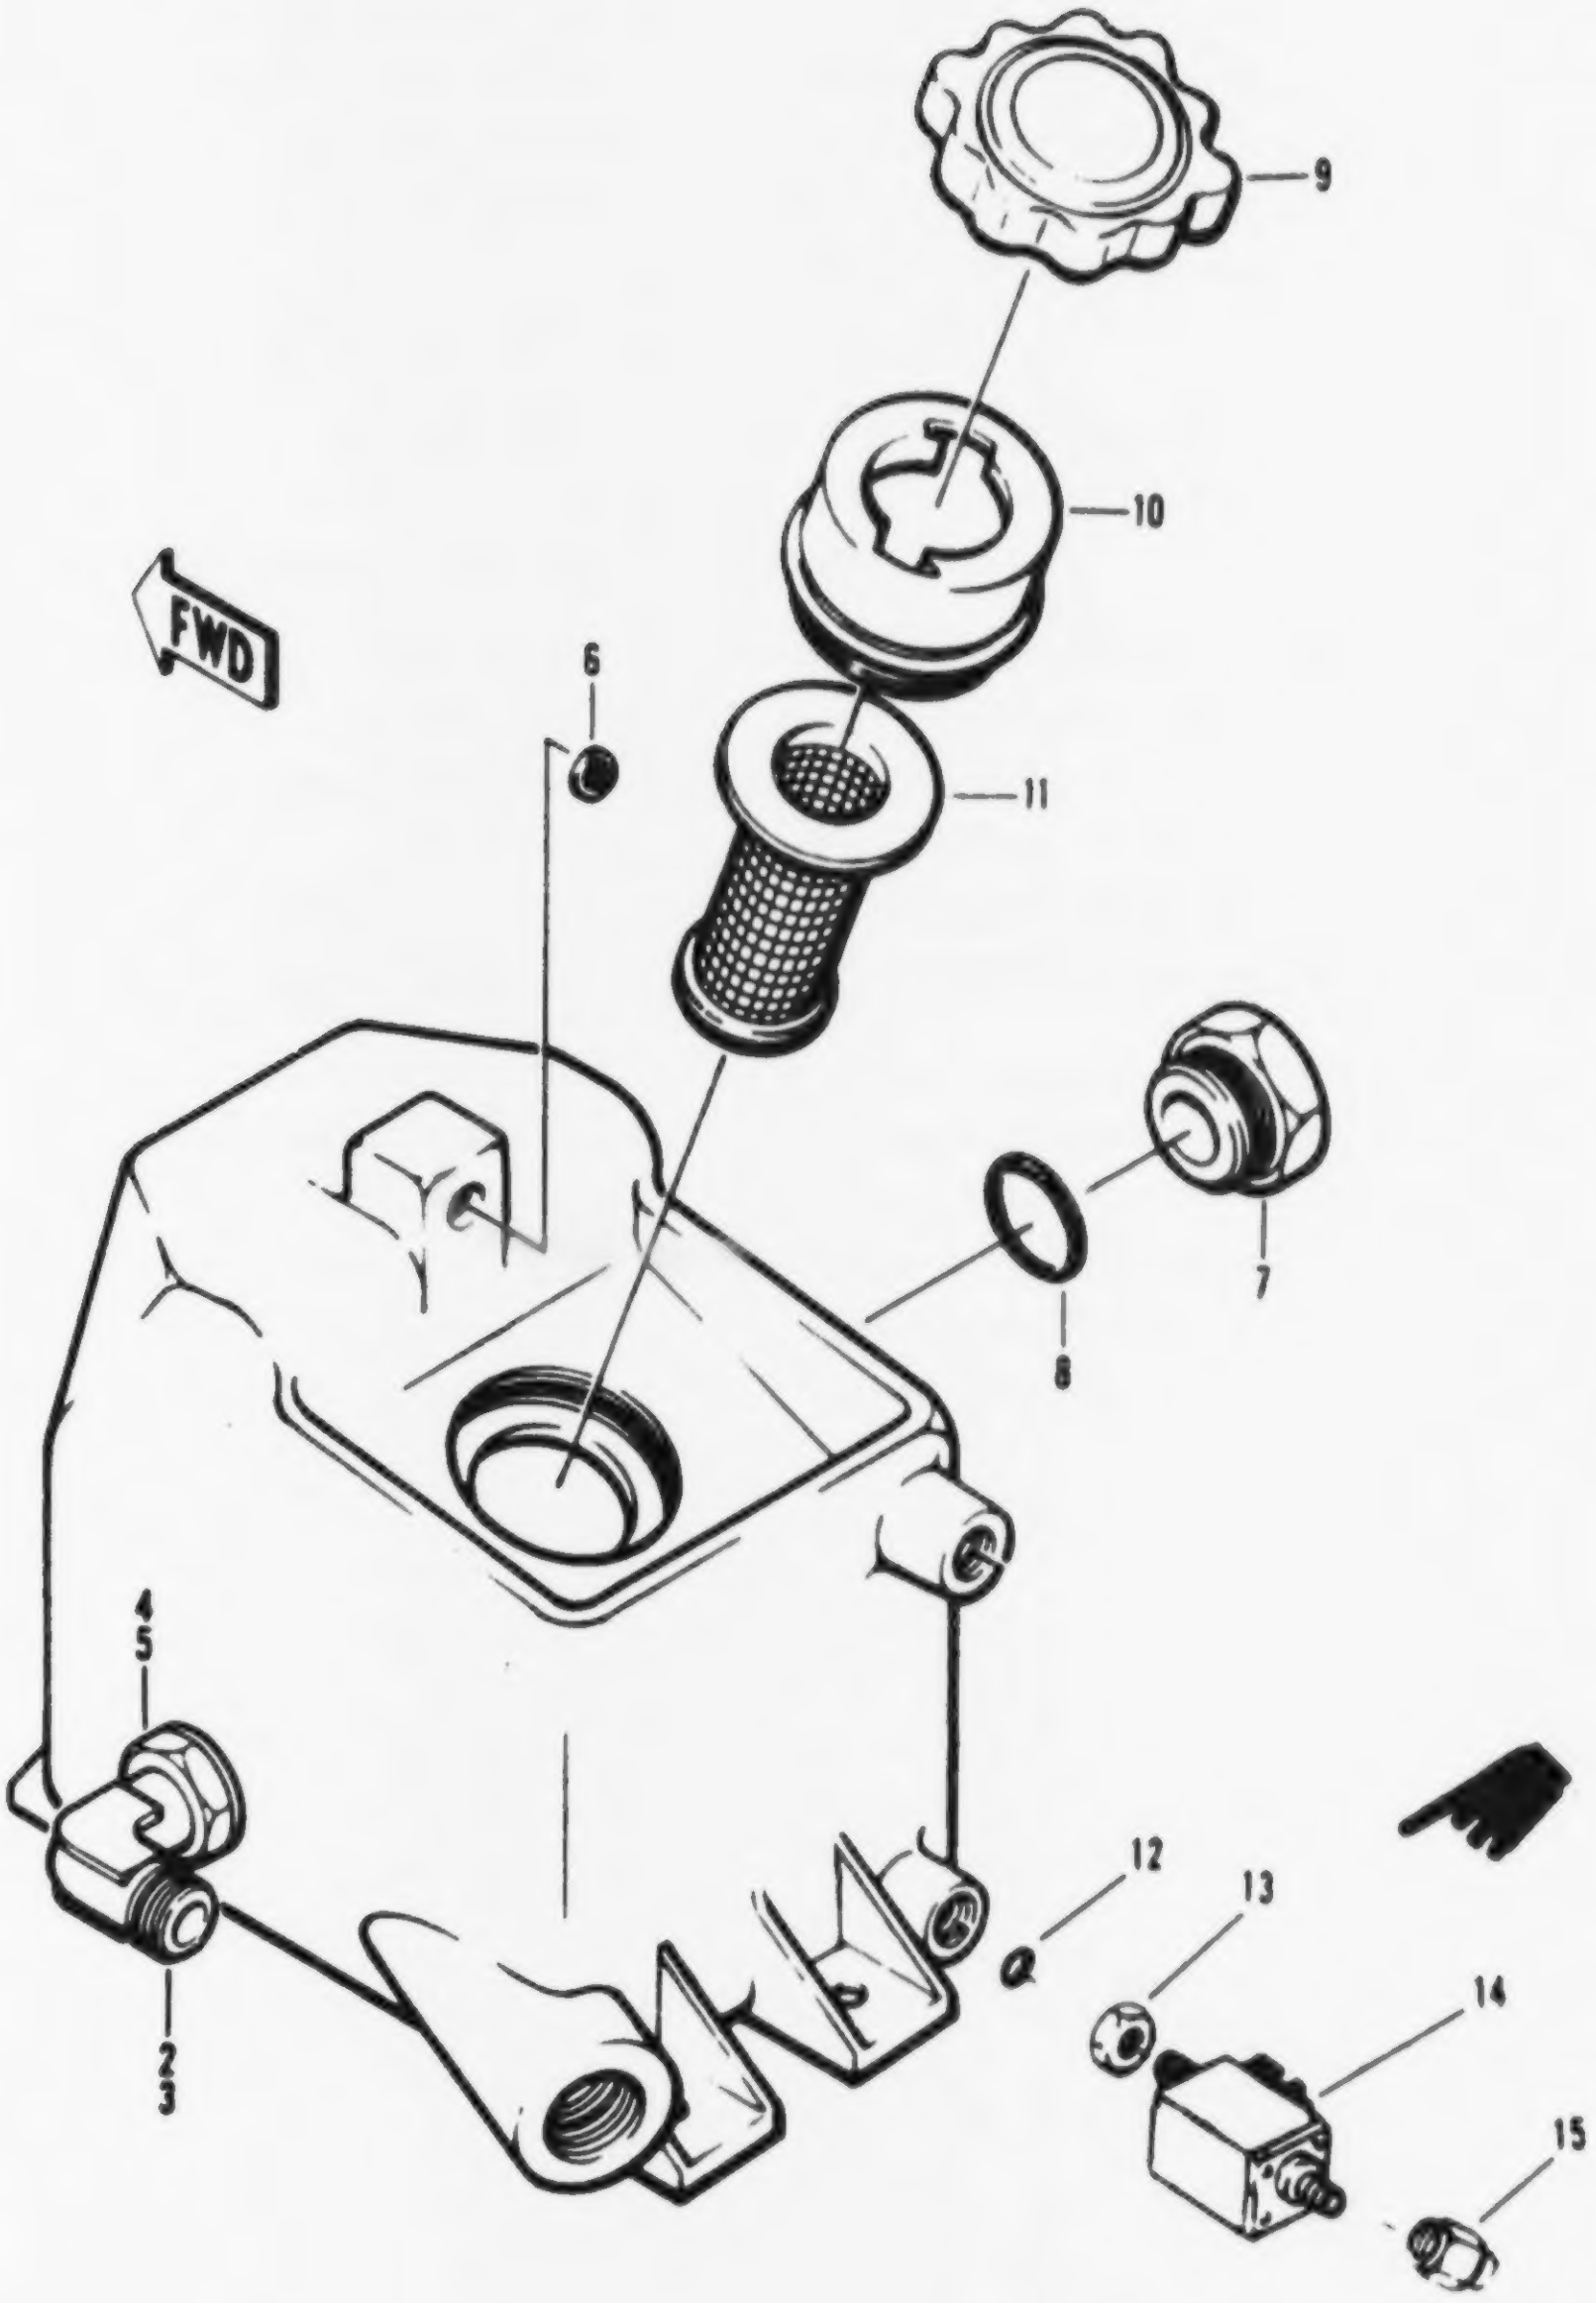
9
10
FWD
6
11
7
8
4
5
2
3
12
13
14
15

Figure 207. Tank, Hydraulic Fluid

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
207		PAOFF	1650-00-923-0629	97499	205-076-135-1	TANK,HYDRAULIC FLUI SEE FIG. 206 FOR NHA...............UHE,UHH,UHV,UHX	EA	1
207	2	PAOZZ	1650-00-924-7714	94330	B7584-2	.FITTING AND FILTER...........................UHE,UHH,UHV,UHX	EA	1
207	3	PAOZZ	5330-00-808-0794	96906	MS28778-8	.PACKING,PREFORMED............................UHE,UHH,UHV,UHX	EA	1
207	4	PAOZZ	5310-00-186-1380	96906	MS28777-8	.WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	1
207	5	PAOZZ	4730-00-277-5081	88044	AN6289D8	.LOCKNUT,TUBE FITTIN..........................UHE,UHH,UHV,UHX	EA	1
207	6	PAOZZ	1680-00-872-1153	94330	A7396	.SCREEN,BREATHER VAL..........................UHE,UHH,UHV,UHX	EA	1
207	7	PAOZZ	6680-00-905-2664	97484	S51	.INDICATOR,SIGHT,LIQ..........................UHE,UHH,UHV,UHX	EA	1
207	8	PAOZZ	5330-00-804-5694	96906	MS28778-16	.PACKING,PREFORMED............................UHE,UHH,UHV,UHX	EA	1
207	9	PAOZZ	1615-00-701-9935	78567	FC3731	.CAP ASSEMBLY.................................UHE,UHH,UHV,UHX	EA	1
207	10	PAOZZ	1615-00-690-7294	78567	FC3662	.ADAPTER ASSEMBLY,FI..........................UHE,UHH,UHV,UHX	EA	1
207	11	PAOZZ	1680-00-872-1152	94330	SLB7395-2	.STRAINER,HYDRAULIC...........................UHE,UHH,UHV,UHX	EA	1
207	12	PAOZZ	5330-00-804-5695	88044	AN6290-6	.PACKING,PREFORMED............................UHE,UHH,UHV,UHX	EA	1
207	13	PAOZZ	5310-00-638-2605	88044	AN924-6D	.NUT,PLAIN,HEXAGON............................UHE,UHH,UHV,UHX	EA	1
207	14	PAOZZ	4820-00-546-4959	94799	212-040-232-1	.VALVE,BALL...................................UHE,UHH,UHV,UHX	EA	1
207	15	PAOZZ	4730-00-949-7422	88044	AN929-6	.CAP,TUBE.....................................UHE,UHH,UHV,UHX	EA	1

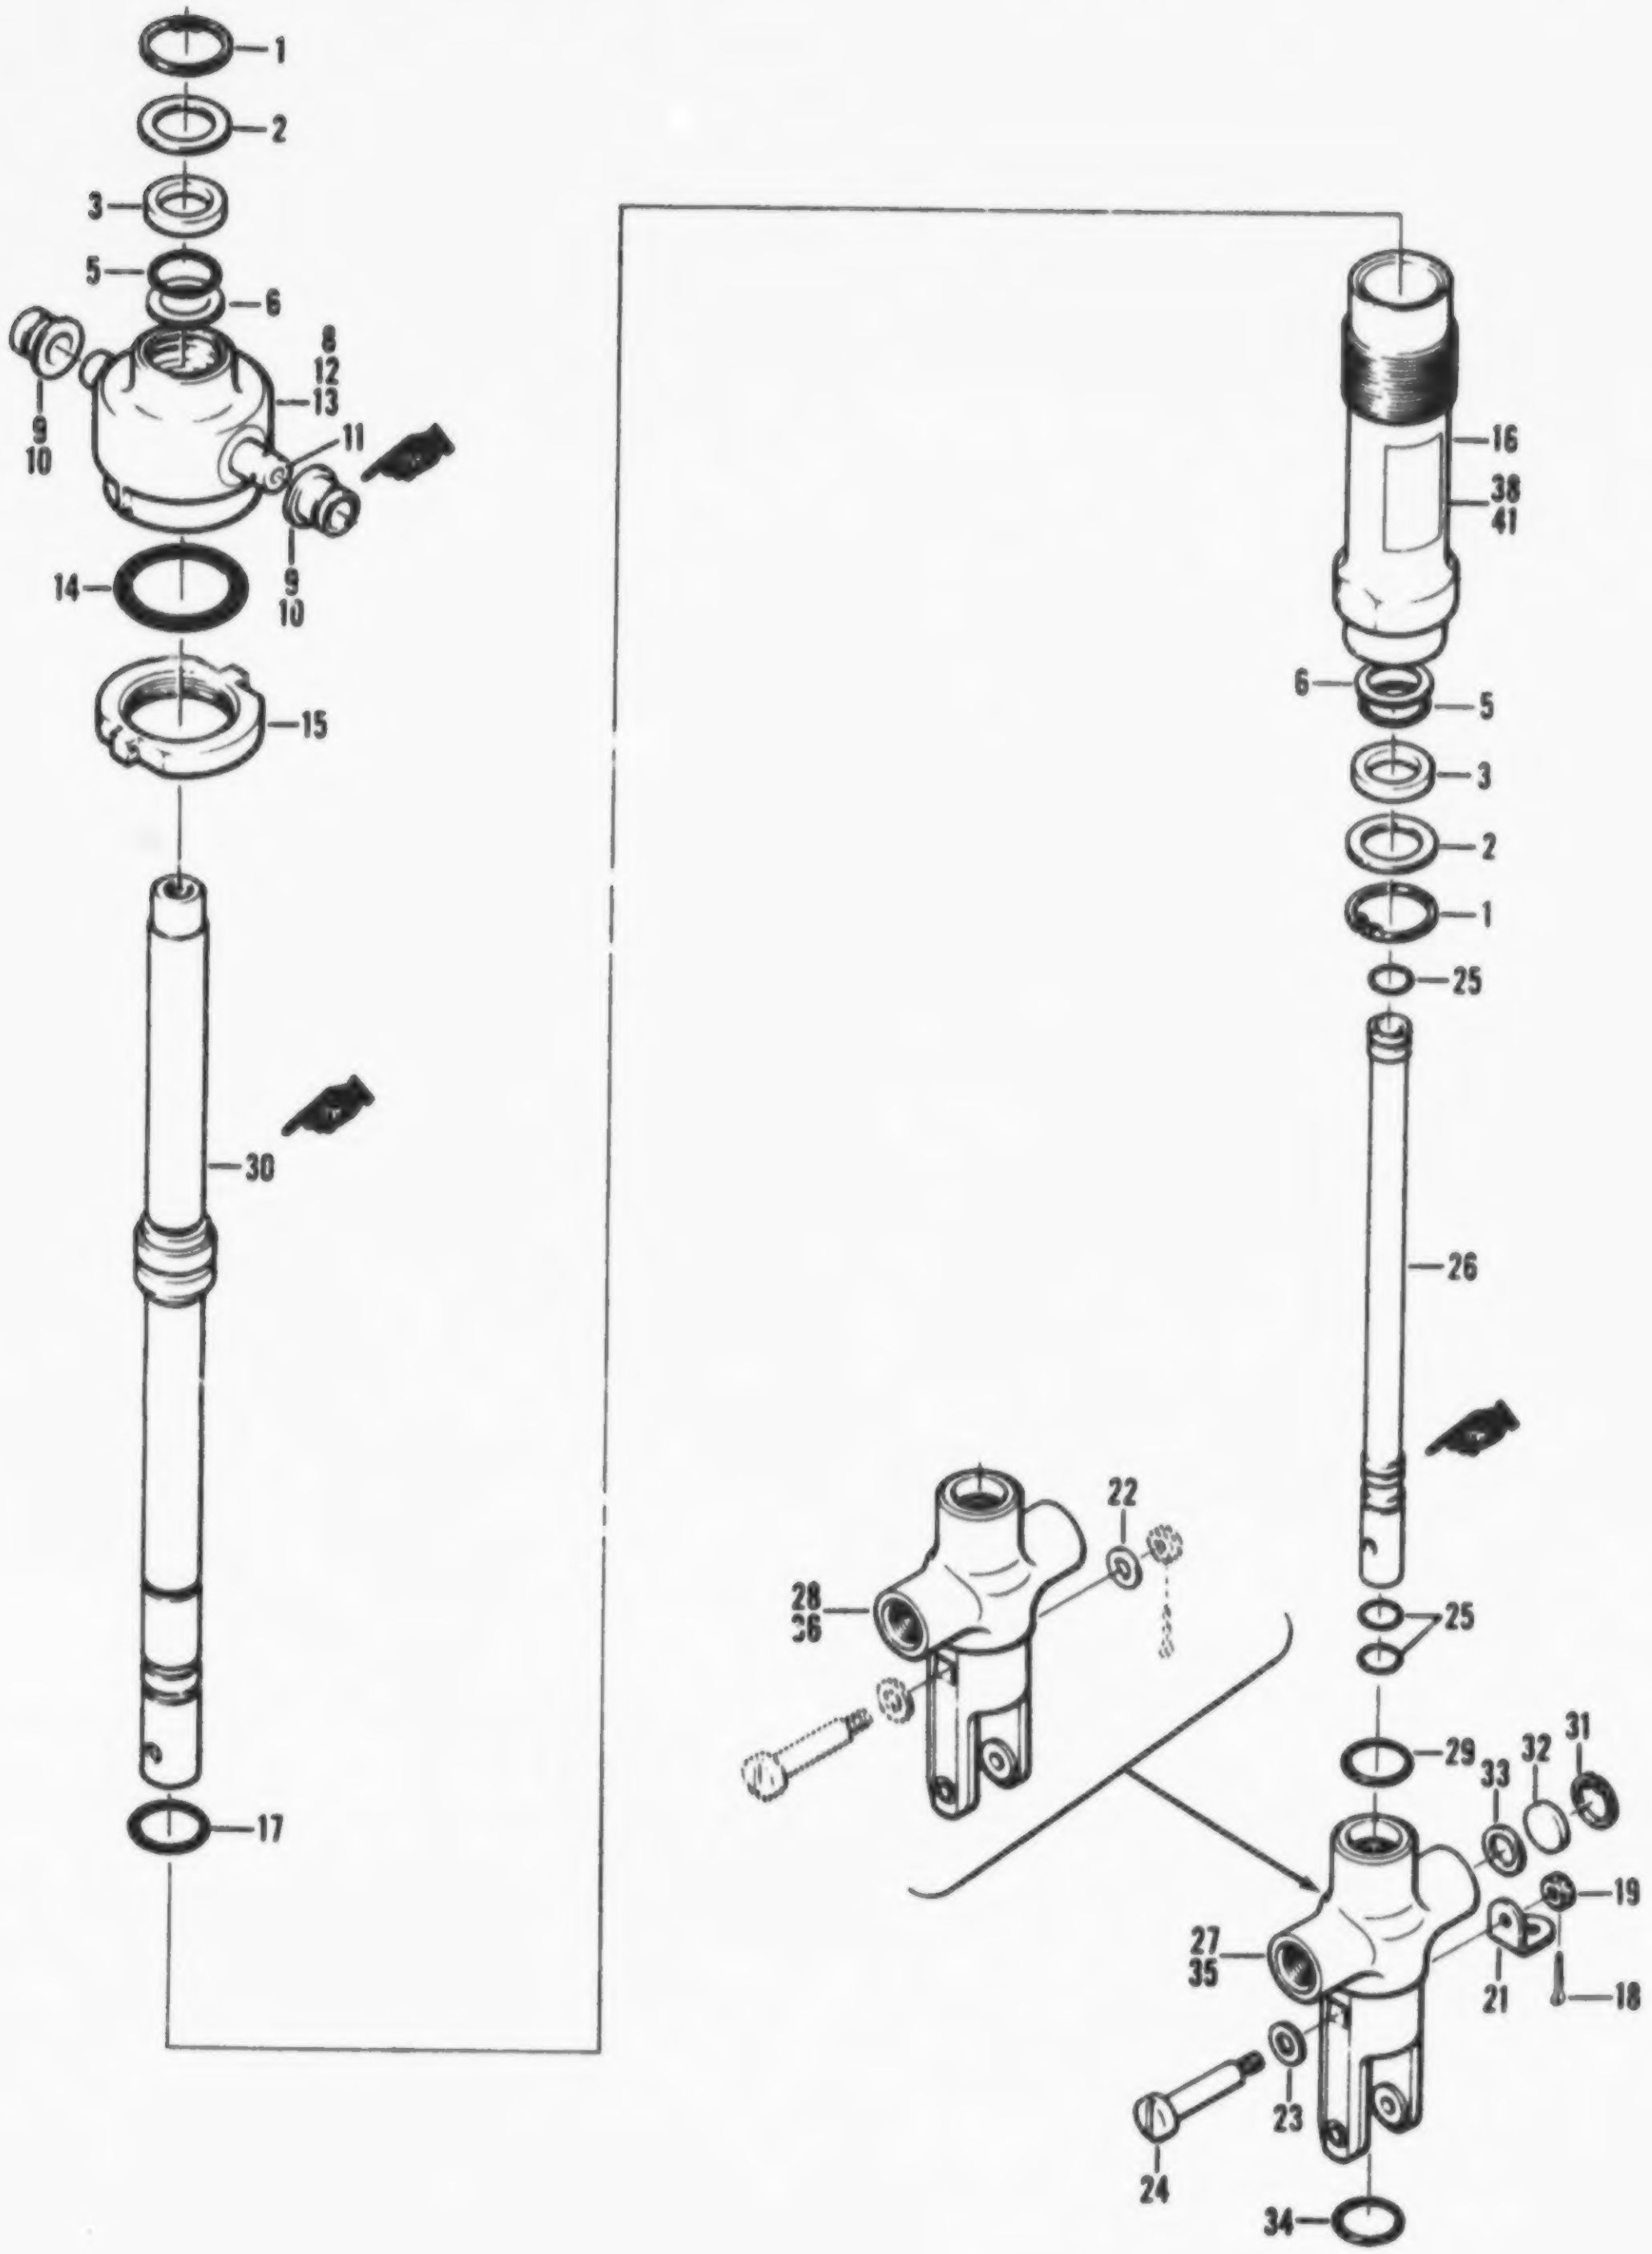
1
2
3
5
6
8
12
13
9
10
11
9
10
14
15
30
17
16
38
41
6
5
3
2
1
25
26
22
28
36
25
29
33
32
31
19
27
35
21
18
23
24
34

Figure 208. Servo Cylinder, Hydraulic

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
208		PAODF	1650-00-912-4122	92003	SGT220-7	SERVOCYLINDER SEE FIG.368 FOR NHA........UHB,UHC,UHM	EA	1
208		PAOFF	1650-00-014-2038	92003	SGT220-11	SERVOCYLINDER........UHE,UHH,UHV,UHX	EA	1
208	1	PAFZZ	5365-00-807-2636	96906	MS16625-1100	.RING,RETAINING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	2	PAFZZ	5365-00-687-8679	92003	SGT233-2	.SPACER,RING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	3	PAFZZ	1650-00-516-8268	97820	S11065-3T	.RING,WIPER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	5	PAFZZ	5330-00-618-0801	96906	MS28775-114	.PACKING,PREFORMED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	6	PAFZZ	5330-00-494-7250	97820	S11589-114-5	.SEAL,CAP STRIP........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	8	AFFZZ	1650-00-465-9254	92003	SGT235-3	.CAP ASSY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	9	PAFZZ	3120-00-738-5890	92003	SGT227-1	..BEARING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	10	XDFZZ	3120-00-133-6770	92003	SGT227-3	..BEARING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	11	PAFZZ	4730-00-277-4780	80205	NAS516-1A	..FITTING,LUBRICATION........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	12	XDFZZ		92003	SGT222-1	..CAP,LINEAR ACTUATIN........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	13	PAFZZ	1650-00-181-4668	92003	SGT222-3	..CAP,LINEAR ACTUATIN........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	14	PCFZZ	5330-00-584-0263	96906	MS28775-218	.PACKING,PREFORMED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	15	XAFZZ	5310-00-736-9047	92003	SGT224-1	.NUT,PLAIN,ROUND........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	16	XAFZZ	1650-00-725-7746	92003	SGT223-1	.CYLINDER,ACTUATING,........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	17	PAFZZ	5330-00-076-0352	97820	S11052-15TYPEQ	.SEAL,PISTON RING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	18	PAFZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	19	PAFZZ	5310-00-066-4289	96906	MS17826-3	.NUT,SELF-LOCKING HEXAGON........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	21	MDFZZ	1660-00-073-6596	97499	20-032-1	.BRACKET,ENGINE U/O PN SGT220-11........UHE,UHH,UHV,UHX	EA	1
208	22	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT U/O PN SGT220-7........UHB,UHC,UHM	EA	1
208	23	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	24	PAFZZ	5305-00-689-9973	92003	SGT229-1	.SCREW,SHOULDER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	25	PAFZZ	5330-00-584-0265	88044	AN6227-7	.PACKING,PREFORMED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
208	26	XDFZZ		92003	SGT225-1	.TUBE,TRANSFER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	27	XDFFF		92003	SGT234-1	.BODY-PISTON ASSY U/O PN SGT220-7........UHB,UHC,UHM	EA	1
208	28	XDFFF	1650-00-488-4970	92003	SGT234-3	.BODY-PISTON ASSY U/O PN SGT220-11........UHE,UHH,UHV,UHX	EA	1
208	29	PAFZZ	5330-00-067-3358	88044	AN6227-12	..PACKING,PREFORME........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	30	XAFZZ	1660-00-758-1395	92003	SGT221-1	..PISTON LINEAR ACTUATOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	31	PAFZZ	5365-00-804-9735	96906	MS16625-1037	..RING,RETAINING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	32	XAFZZ	1660-00-060-9654	92003	SGT231-1	..STRAINER,ELEMENT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	33	PAFZZ	5310-00-559-0065	70143	2-027164	..WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208	34	XDFZZ	3120-00-717-2802	92003	SGT228-1	..BUSHING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208	35	XAFZZ		14037	SGT226-2	..BODY........UHB,UHC,UHM	EA	1
208	36	XAFZZ		14037	SGT226-1	..BODY........UHE,UHH,UHV,UHX	EA	1
208	38	XAFZZ		92003	SGT 236-1	.PLATE,IDENTIFICATIO USE AFTER REWORK OF SERVO'S ....UHB,UHC,UHM	EA	1
208	41	XAFZZ		92003	SGT236-5	.PLATE,IDENTIFICATIO USE AFTER REWORK OF SERVO'S ....UHE,UHH,UHV,UHX	EA	1

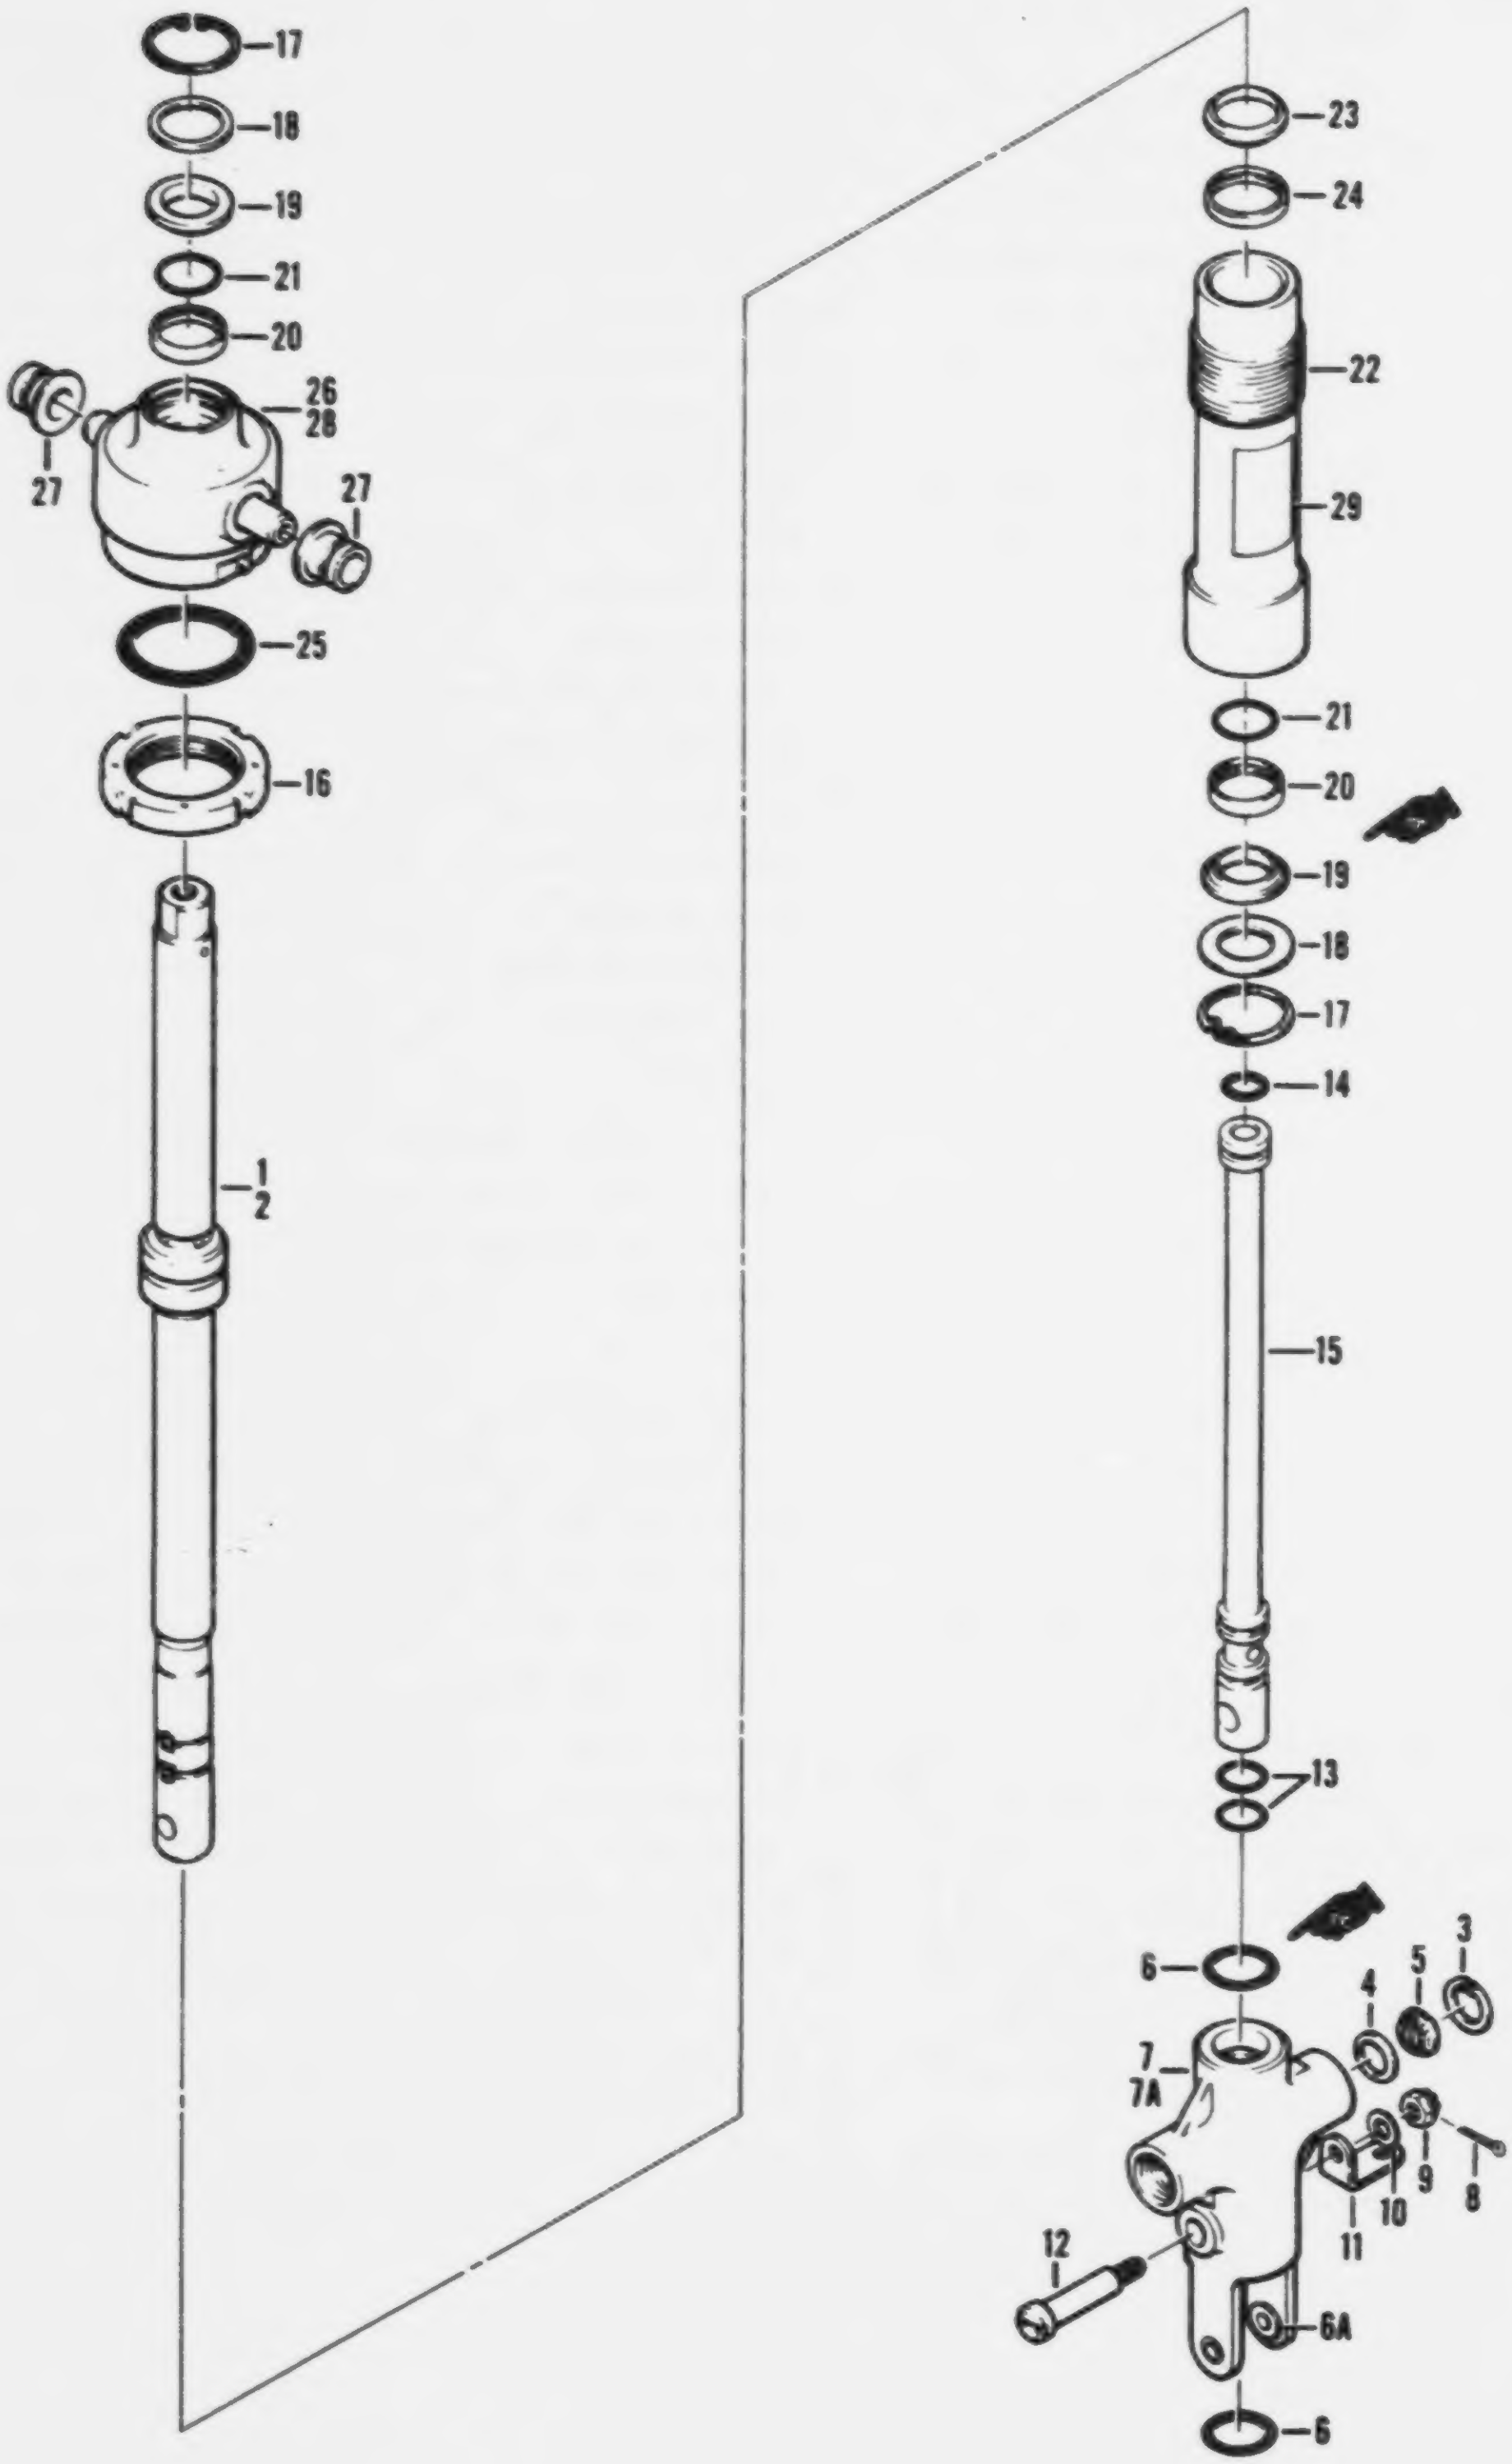
17
18
19
21
20
26
28
27
27
25
16
1
2
23
24
22
29
21
20
19
18
17
14
15
13
3
5
4
6
7
7A
9
8
10
11
12
6A
6

Figure 208A. Servo Cylinder, Hydraulic

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
208A		PAOFF	1650-00-912-4122	53583	1660-17	SERVOCYLINDER SEE FIG.368 FOR NHA ....UHB,UHC,UHM	EA	1
208A		PAOFF	1650-00-014-2038	53583	1660-23	SERVOCYLINDER SEE FIG.368 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
208A	1	PAFZZ	1650-00-836-2431	53583	8941	.SELECTOR SET,DIRECT U/O PN 1660-17..............UHB,UHC,UHM	EA	1
208A	1	PAFZZ	1650-00-836-2432	53583	8951	.SELECTOR SET,DIRECT U/O PN 1660-23 ....UHE,UHH,UHV,UHX	EA	1
208A	2	XAFZZ	1650-00-998-7895	53583	8939	..SHAFT,SHOULDERED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	3	PAFZZ	5365-00-203-1195	96906	MS16629-37	..RING,RETAINING..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	4	PAFZZ	5365-00-769-2332	53583	8314	..SPACER,RING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	5	PAFZZ	1680-00-795-1025	53583	8452	..FILTER,CYLINDER ASS.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	6	PAFZZ	5330-00-891-4686	53583	8907	..PACKING,PREFORME................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	6A	PAFZZ	3120-00-764-2373	53583	8382	..BUSHING,SLEEVE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	7	XAFZZ		53583	8938	..BODY U/O PN 1660-17............................UHB,UHC,UHM	EA	1
208A	7A	XAFZZ		53583	8948	..BODY U/O PN 1660-23........................UHE,UHH,UHV,UHX	EA	1
208A	8	PAFZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	9	PAFZZ	5310-00-167-1284	88044	AN310-3	.NUT,PLAIN,CASTELLAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	10	PAFZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT U/O PN 1660-17......................UHB,UHC,UHM	EA	1
208A	10	PAFZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT U/O PN 1660-23 ....UHE,UHH,UHV,UHX	EA	1
208A	11	MFOZZ	1650-00-073-6596	97499	20-032-1	.BRACKET,ENGINE U/O PN 1660-23...............UHE,UHH,UHV,UHX	EA	1
208A	12	PAFZZ	5305-00-761-6424	53583	1238	.SCREW,SHOULDER...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	13	PAFZZ	5330-00-582-2133	96906	MS28775-011	.PACKING..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	14	PAFZZ	5330-00-584-0266	96906	MS28775-010	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	15	PAFZZ	1650-00-850-4702	53583	8937	.TUBE SUBASSEMBLY SE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	16	PAFZZ	5310-00-764-5847	53583	1235	..NUT,PLAIN,ROUND.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	17	PAFZZ	5365-00-833-7454	96906	MS16625-1093	.RING,RETAINING...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	18	PAFZZ	5365-00-559-7973	53583	1207	.SPACER,RING......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	19	PAFZZ	1650-00-516-8268	97820	S11065-3T	.RING,WIPER.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	20	PAFZZ	5330-01-036-6803	53583	9025-114	.RETAINER,PACKING.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	21	PAFZZ	5330-00-067-3358	88044	AN6227-12	.PACKING,PREFORME.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	22	PAFZZ	1650-00-866-8139	53583	1364	.CYLINDER,ACTUATING,..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	23	PAFZZ	5330-00-761-1995	53583	8258-19	.PACKING,PREFORME.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	24	PAFZZ	5330-00-580-1271	14153	01339	.RETAINER,PACKING.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	25	PAFZZ	5330-00-579-7911	96906	MS28775-215	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	26	PAFZZ	1650-00-866-8137	53583	1329	.CAP,LINEAR ACTUATIN..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	27	PAFZZ	3120-00-403-1465	53583	1289	..BUSHING.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
208A	28	XAFZZ	1650-00-322-4221	53583	1363	..HEAD,POWER CYLINDER.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
208A	29	XDFZZ		53583	1665-19	.PLATE,IDENTIFICATIO U/O PN 1660-17..............UHB,UHC,UHM	EA	1
208A	29	PAFZZ	9905-00-835-4958	53583	1665-23	.PLATE,IDENTIFICATIO U/O PN 1660-23..........UHE,UHH,UHV,UHX	EA	1

Fig. 209 NOT USED

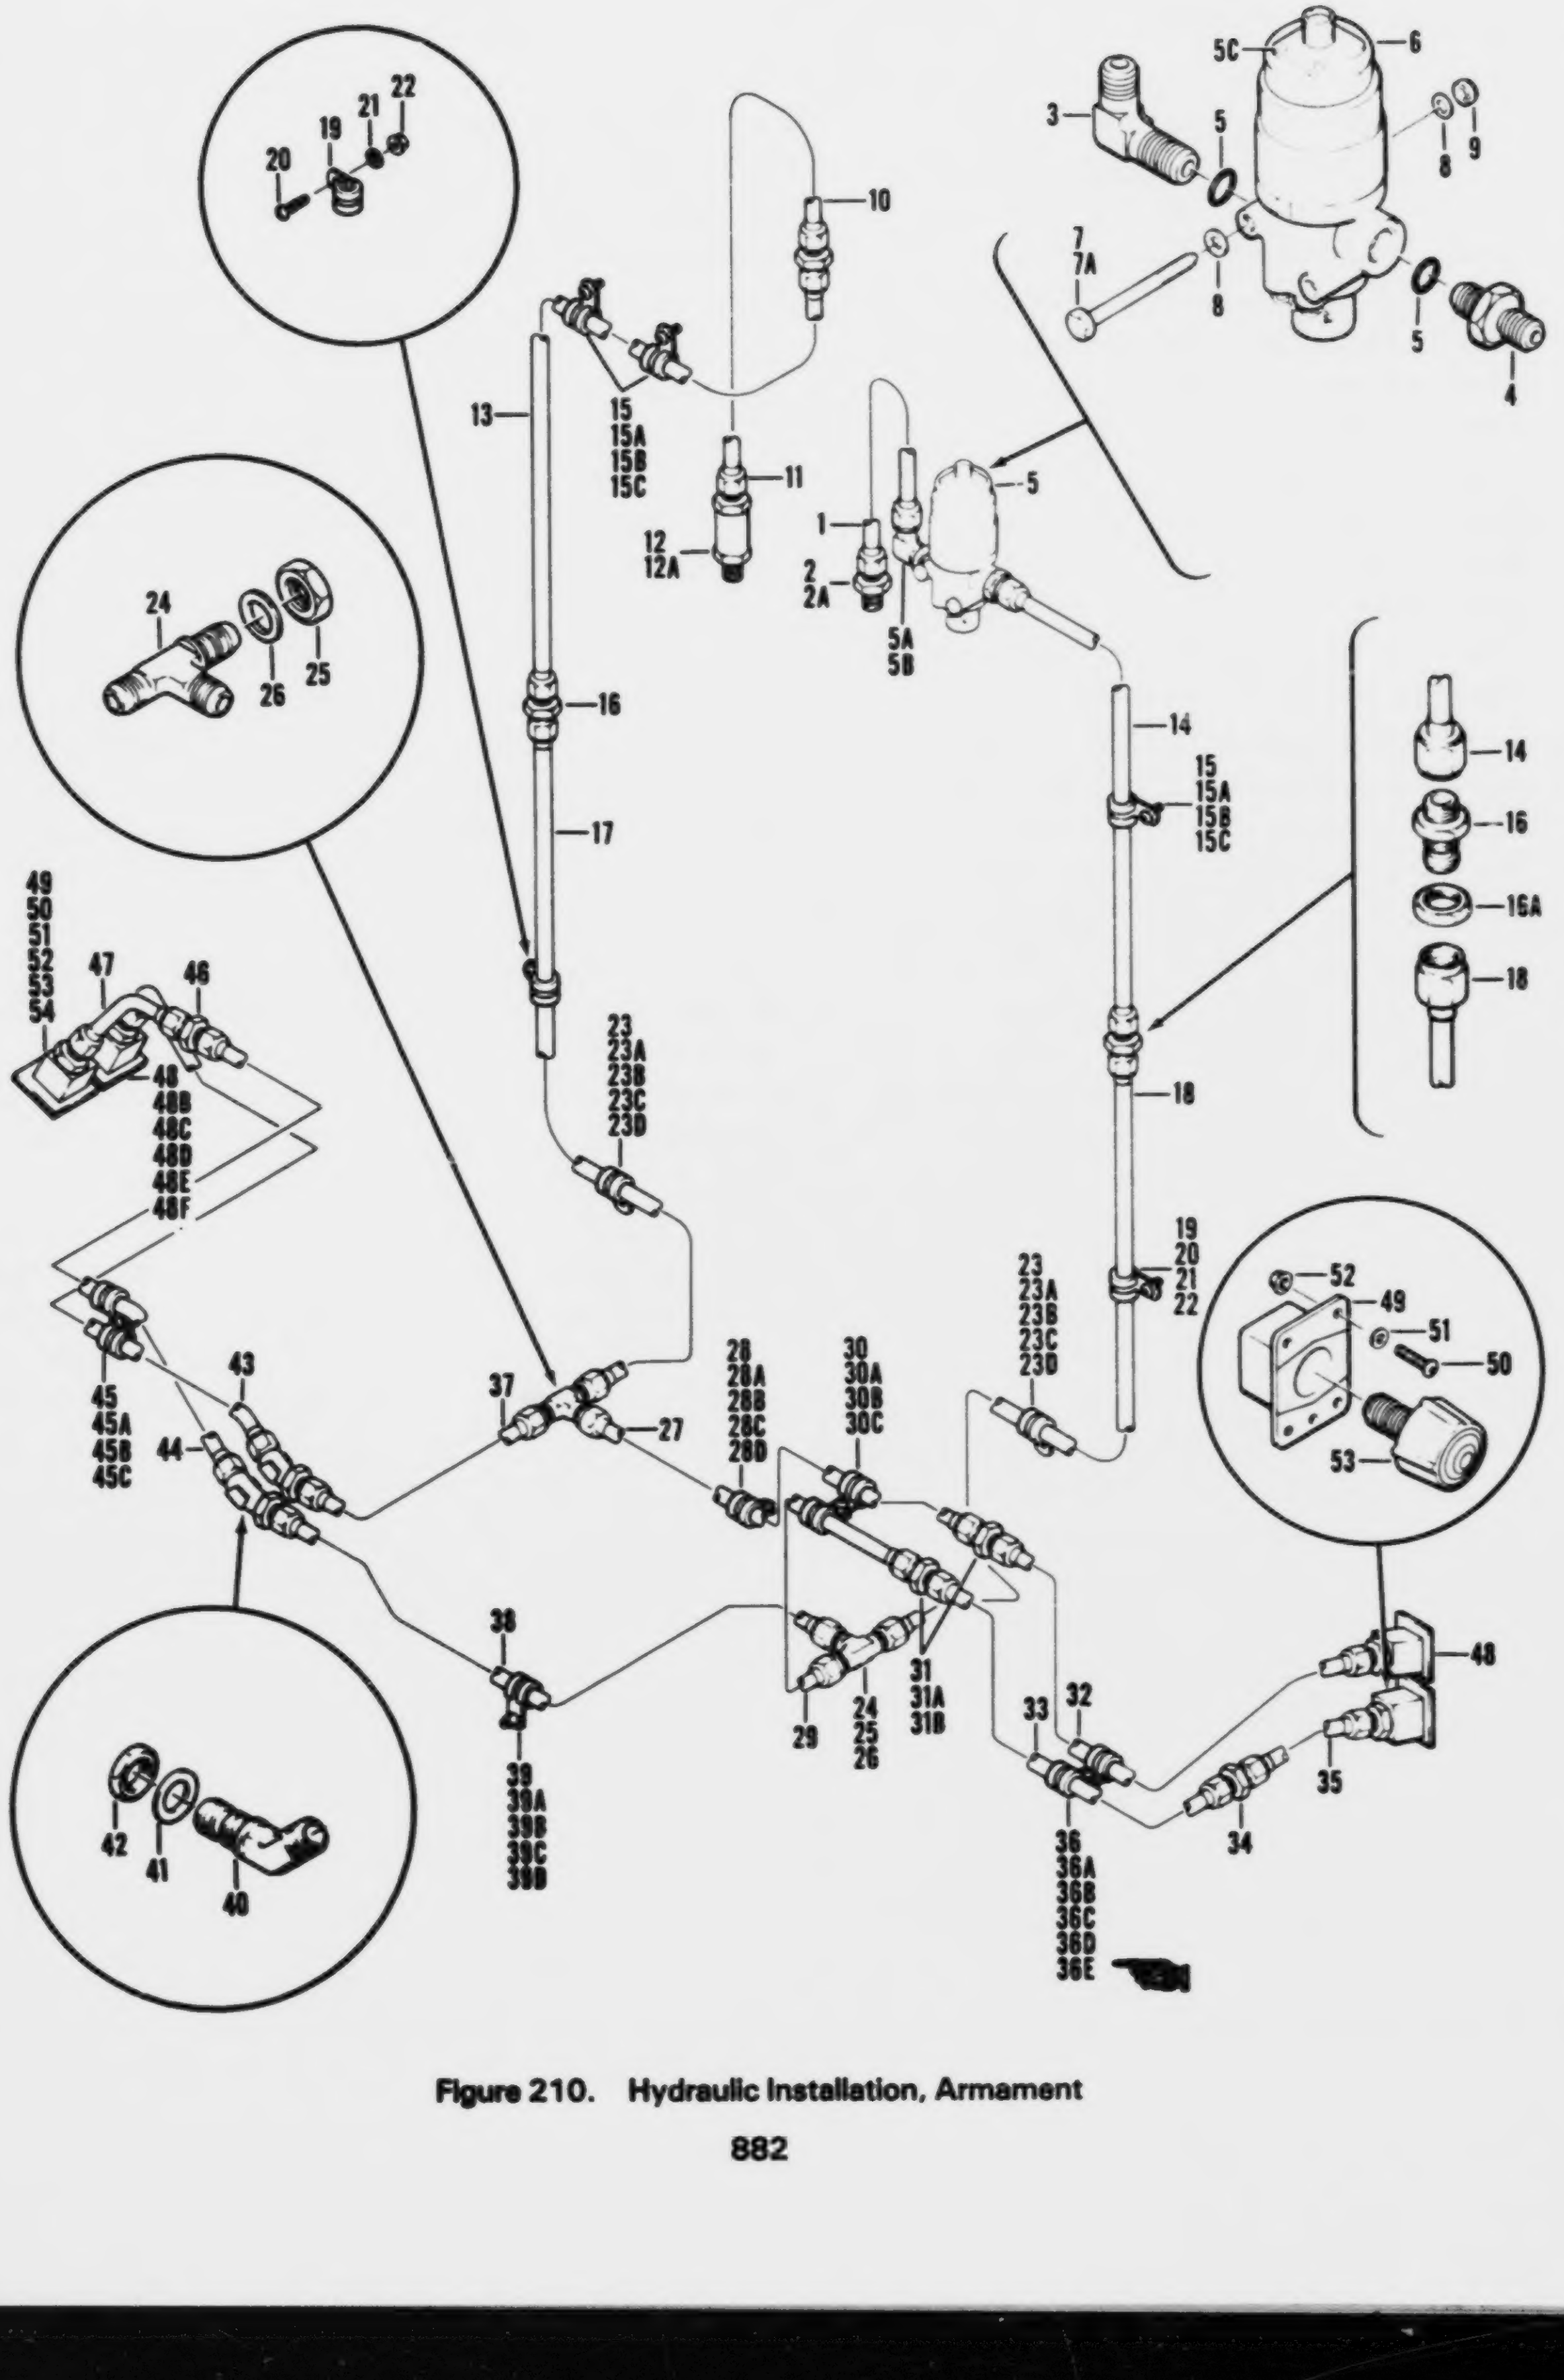
5C
6
3
5
8
9
7
7A
8
5
4
22
21
19
20
10
13
15
15A
15B
15C
11
12
12A
1
5
2
2A
5A
5B
24
26
25
16
14
15
15A
15B
15C
14
16
16A
18
17
49
50
51
52
53
54
47
46
48
48B
48C
48D
48E
48F
23
23A
23B
23C
23D
18
19
20
21
22
23
23A
23B
23C
23D
52
49
51
50
53
45
45A
45B
45C
43
44
37
27
28
28A
28B
28C
28D
30
30A
30B
30C
38
31
31A
31B
29
24
25
26
33
32
48
35
34
36
36A
36B
36C
36D
36E
39
39A
39B
39C
39D
42
41
40

Figure 210. Hydraulic Installation, Armament

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	UM	QTY INC IN UNIT
210		XCFZZ		97499	204-076-007-1	HYDRAULIC INSTL ARMAMENT USBL EFF 64-14101 THRU 65-12772 ....UHC,UHM	EA	1
210		XCFZZ		97499	204-076-007-3	HYDRAULIC INSTL ARMAMENT USBL EFF 66-492 & SUBSEQUENT ....UHC,UHM	EA	1
210	1	PAOZZ	4710-00-872-1163	97499	204-076-379-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
210	2	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE........UHC,UHM	EA	1
210	2A	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED........UHC,UHM	EA	1
210	3	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW,TUBE........UHC,UHM	EA	1
210	4	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE........UHC,UHM	EA	1
210	5	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED........UHC,UHM	EA	1
210	5A	PAOZZ	5310-00-277-5083	88044	AN6289D6	.LOCKNUT,TUBE FITTIN........UHC,UHM	EA	1
210	5B	PAOZZ	5330-00-559-1939	96906	MS9058-06	.RETAINER,PACKING........UHC,UHM	EA	1
210	5C	PBOZZ	5365-00-845-3502	96906	MS24391D6L	.PLUG,MACHINE THREAD........UHC,UHM	EA	1
210	6	PAOZZ	1650-00-855-6057	94641	1U1025	.VALVE,LINEAR,DIRECT........UHC,UHM	EA	1
210	7	PAOZZ	5306-00-182-2010	88044	AN3H21A	.BOLT,MACHINE........UHC,UHM	EA	2
210	7A	PAOZZ	5306-00-151-0775	88044	AN3-21A	.BOLT,MACHINE........UHC,UHM	EA	2
210	8	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHC,UHM	EA	4
210	9	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	2
210	10	PAOZZ	4710-00-872-1162	97499	204-076-380-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
210	11	PAOZZ	4730-00-289-6089	96906	MS21902D6	.NIPPLE,TUBE........UHC,UHM	EA	1
210	12	PAOZZ	4820-00-720-3991	96906	MS28890-6	.VALVE,CHECK........UHC,UHM	EA	1
210	12A	PAOZZ	5330-00-804-5695	96906	MS28778-6	.PACKING,PREFORMED........UHC,UHM	EA	1
210	13	PAOZZ	4710-00-872-1164	97499	204-076-378-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
210	14	PAOZZ	4710-00-872-1177	97499	204-076-372-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
210	15	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP........UHC,UHM	EA	3
210	15A	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........UHC,UHM	EA	3
210	15B	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHC,UHM	EA	3
210	15C	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	3
210	16	PAOZZ	4730-00-541-1749	96906	MS21924D6	.NIPPLE,TUBE........UHC,UHM	EA	2
210	16A	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON........UHC,UHM	EA	2
210	17	PAOZZ	4710-00-872-1165	97499	204-076-377-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
210	18	PAOZZ	4710-00-872-1171	97499	204-076-371-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
210	19	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP........UHC,UHM	EA	2
210	20	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........UHC,UHM	EA	2
210	21	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHC,UHM	EA	2
210	22	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	2
210	23	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP........UHC,UHM	EA	2
210	23A	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE........UHC,UHM	EA	2
210	23B	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........UHC,UHM	EA	4
210	23C	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHC,UHM	EA	4
210	23D	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	4
210	24	PAOZZ	4730-00-246-9520	96906	MS21912D6	.TEE,TUBE........UHC,UHM	EA	2
210	25	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON........UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) TEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UN
210	26	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT...UHC,UHM	EA	2
210	27	MFOZZ	1560-00-913-3963	97499	204-076-476-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	28	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP...UHC,UHM	EA	
210	28A	PAOZZ	5365-00-684-5980	80205	NAS43DD3-39	.SPACER,SLEEVE...UHC,UHM	EA	.
210	28B	XDOZZ	5305-00-286-1766	88044	AN525-10R20	.SCREW,MACHINE...UHC,UHM	EA	1
210	28C	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT...UHC,UHM	EA	1
210	28D	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON...UHC,UHM	EA	1
210	29	MFOZZ	1560-00-913-3958	97499	204-076-475-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	30	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP U/O PN 204-076-007-1...UHC,UHM	EA	2
210	30A	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-076-007-1...UHC,UHM	EA	1
210	30B	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-076-007-1...UHC,UHM	EA	1
210	30C	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-076-007-1 ...UHC,UHM	EA	1
210	31	PAOZZ	4730-00-541-1749	96906	MS219240G	.NIPPLE,TUBE...UHC,UHM	EA	2
210	31A	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT...UHC,UHM	EA	2
210	31B	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON...UHC,UHM	EA	2
210	32	MFOZZ	1560-00-913-3965	97499	204-076-478-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	33	MFOZZ	1560-00-913-3962	97499	204-076-477-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	34	PAOZZ	4730-00-640-7201	96906	MS2191606-4	.REDUCER,TUBE...UHC,UHM	EA	1
210	35	PAOZZ	4710-00-872-1168	97499	204-076-374-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	36	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP U/O PN 204-076-007-1...UHC,UHM	EA	2
210	36A	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP...UHC,UHM	EA	
210	36B	PAOZZ	5365-00-633-5558	80205	NAS43DD3-38	.SPACER,SLEEVE U/O PN 204-076-007-1...UHC,UHM	EA	.
210	36B	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE...UHC,UHM	EA	1
210	36C	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-076-007-1...UHC,UHM	EA	1
210	36C	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE...UHC,UHM	EA	1
210	36D	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-076-007-1...UHC,UHM	EA	1
210	36D	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT...UHC,UHM	EA	1
210	36E	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON...UHC,UHM	EA	1
210	37	PAOZZ	4710-00-872-1166	97499	204-076-376-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	38	PAOZZ	4710-00-872-1172	97499	204-076-369-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	1
210	39	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP...UHC,UHM	EA	1
210	39A	PAOZZ	5365-00-839-1270	80205	NAS43DD3-70	.SPACER,SLEEVE...UHC,UHM	EA	1
210	39B	PAOZZ		88044	AN525-10R24	.SCREW, MACHINE...UHC,UHM	EA	1
210	39C	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT...UHC,UHM	EA	1
210	39D	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON...UHC,UHM	EA	1
210	40	PAOZZ	4730-00-278-8165	96906	MS21907D6	.ELBOW,TUBE WASHER,HEXAGON...UHC,UHM	EA	2
210	41	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT...UHC,UHM	EA	2
210	42	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON...UHC,UHM	EA	2
210	43	MFOZZ	4710-00-872-1167	97499	204-076-375-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	
210	44	PAOZZ	4710-00-872-1173	97499	204-076-368-1	.TUBE ASSEMBLY,METAL...UHC,UHM	EA	
210	45	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP...UHC,UHM	EA	2
210	45A	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE...UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
210	45B	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER, FLAT	UHC, UHM	EA	1
210	45C	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHC, UHM	EA	1
210	46	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	REDUCER, TUBE	UHC, UHM	EA	1
210	47	PAOZZ	4710-00-872-1175	97499	204-076-367-1	TUBE ASSEMBLY, METAL	UHC, UHM	EA	1
210	48	PAOZZ	4730-00-826-8877	96906	MS24335-6	FLANGE, PIPE	UHC, UHM	EA	2
210	48B	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW, MACHINE	UHC, UHM	EA	8
210	48C	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER, FLAT	UHC, UHM	EA	8
210	48D	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHC, UHM	EA	8
210	48E	PAOZZ	4730-00-756-1943	00624	3302-6	COUPLING HALF, QUICK	UHC, UHM	EA	2
210	48F	PAOZZ	1650-00-868-2285	97499	30-008-4	CAP, DUST, RUBBER	UHC, UHM	EA	2
210	49	PAOZZ	4730-00-893-6837	96906	MS24335-4	ESCUTCHEON, PIPE-TUB	UHC, UHM	EA	2
210	50	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW, MACHINE	UHC, UHM	EA	8
210	51	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER, FLAT	UHC, UHM	EA	8
210	52	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHC, UHM	EA	8
210	53	PAOZZ	4730-00-903-4451	00624	3302-4	COUPLING HALF, QUICK	UHC, UHM	EA	2
210	54	PAOZZ	1650-00-868-2284	97499	30-008-3	CAP, DUST, RUBBER	UHC, UHM	EA	2

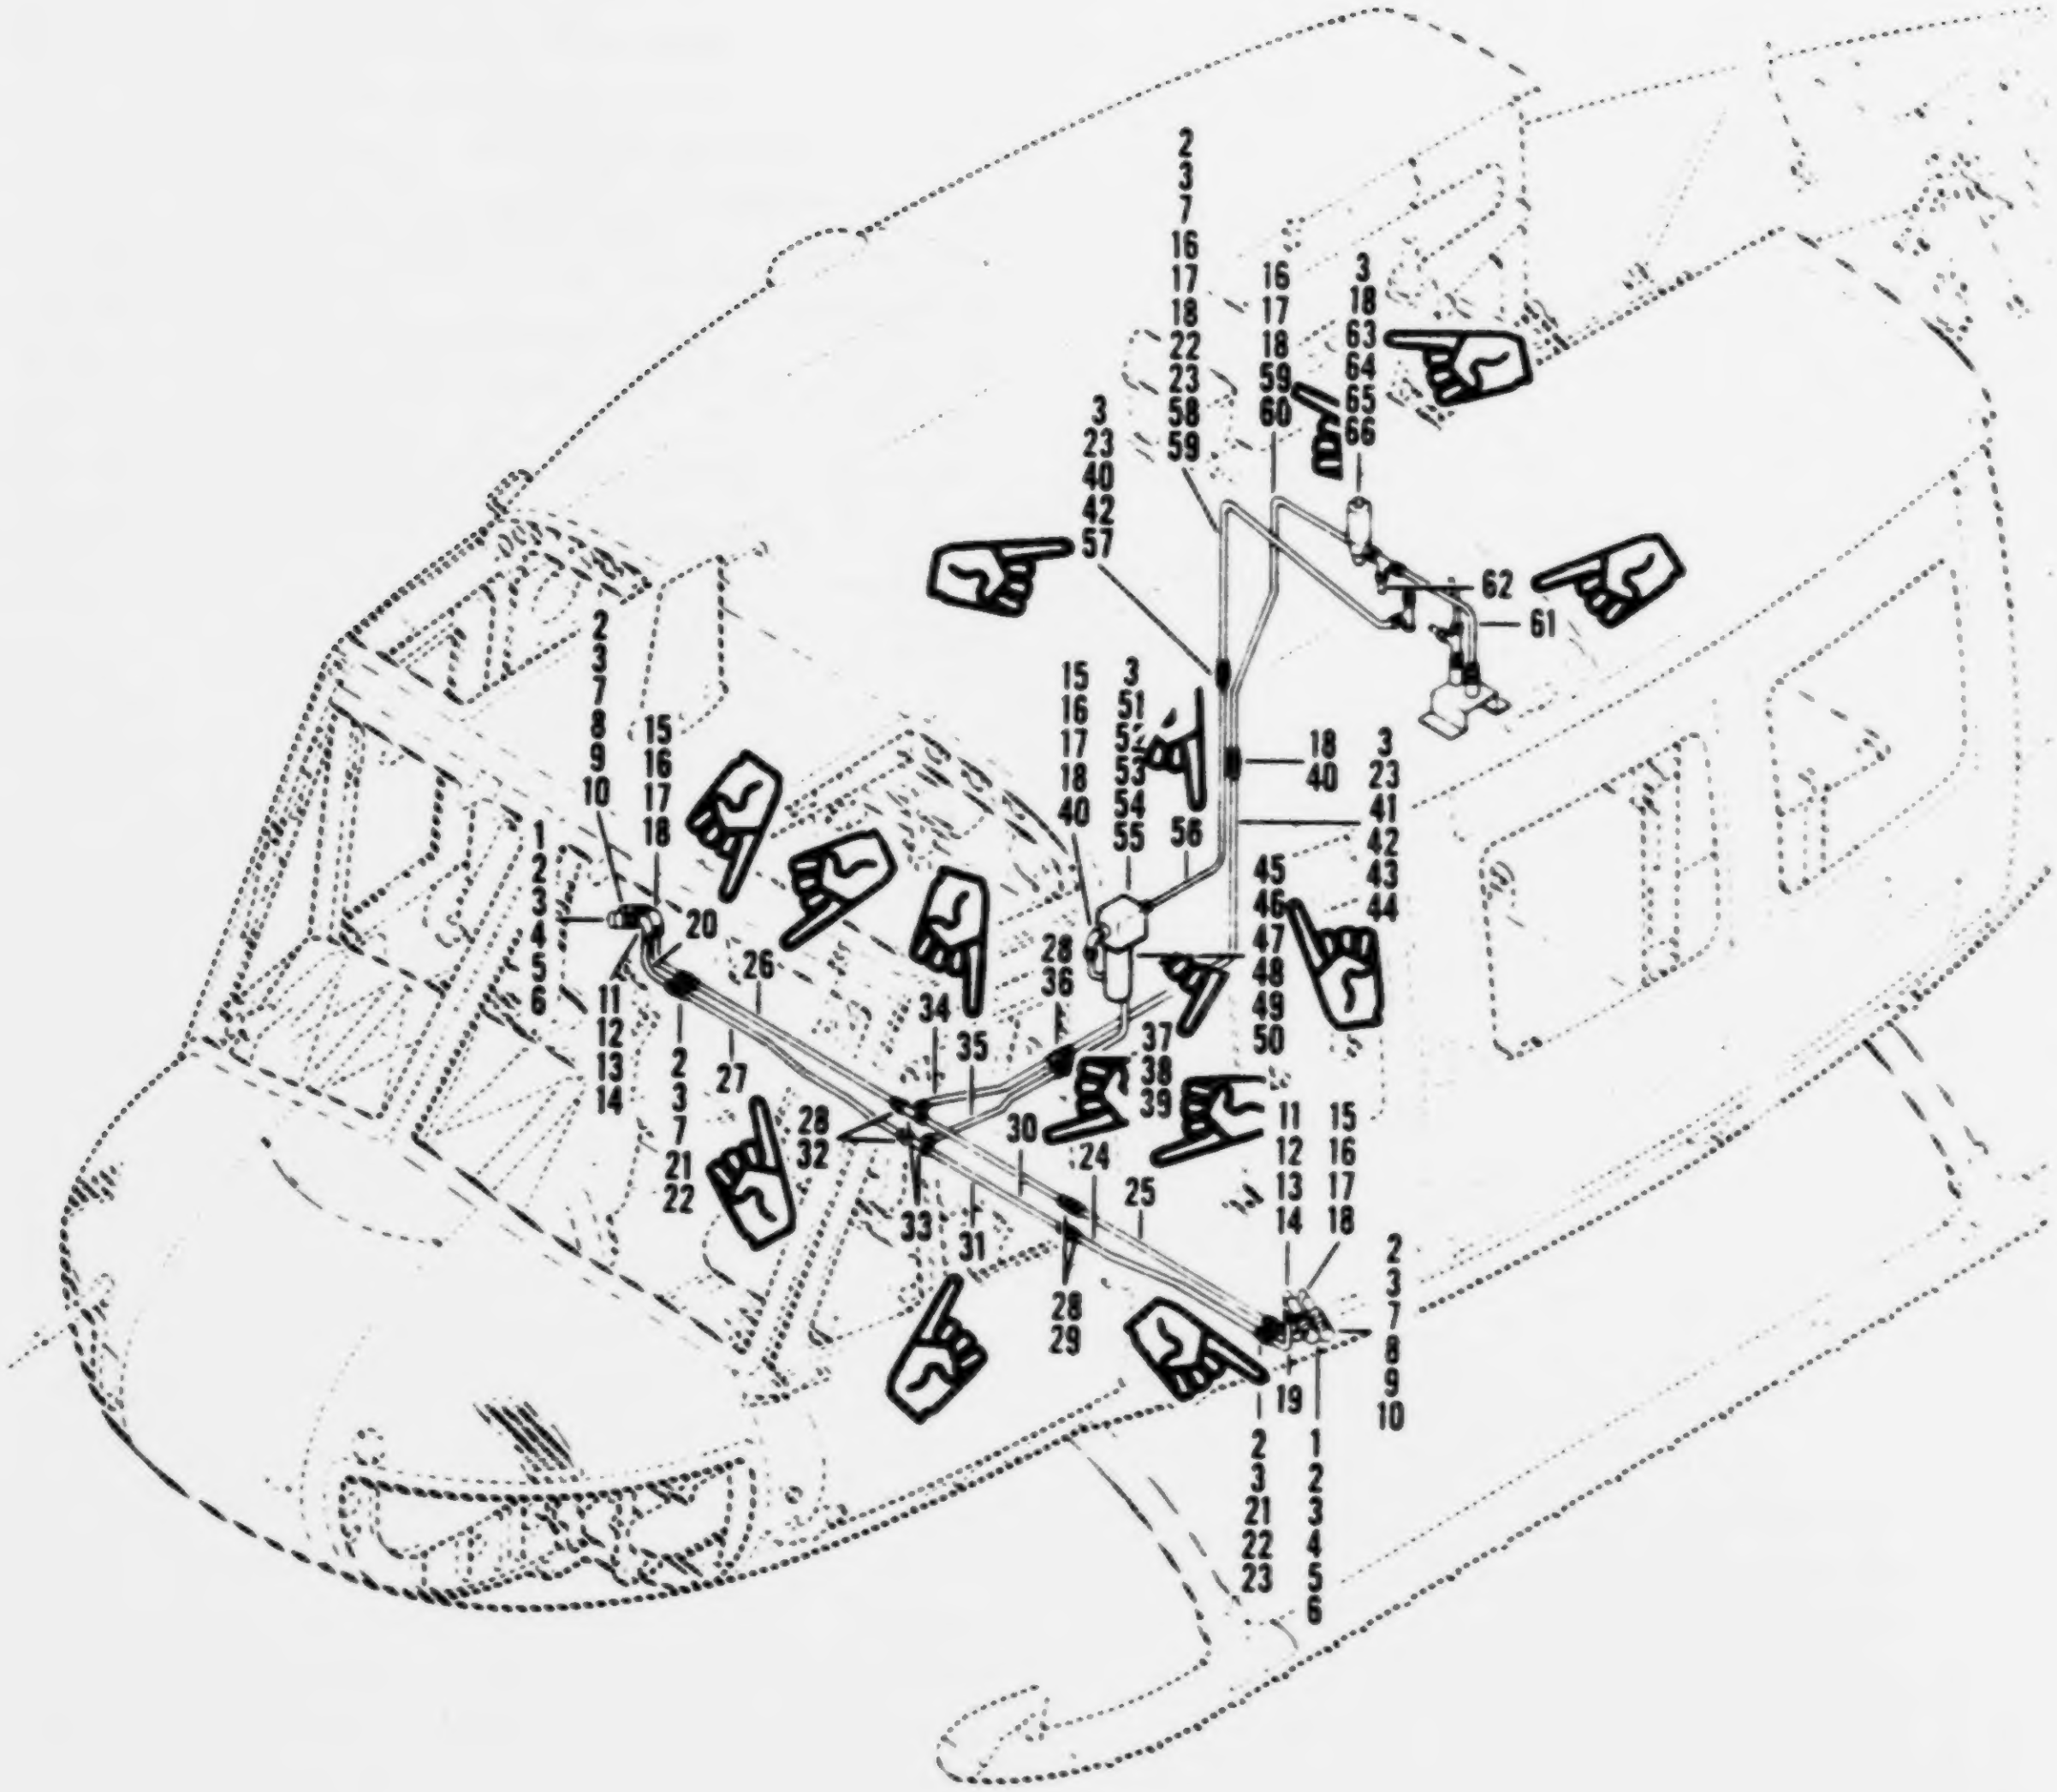
2 3 7 16 17 18 22 23 58 59
16 17 18 59 60
3 18 63 64 65 66
3 23 40 42 57
62
61
15 16 17 18 40
3 51 52 53 54 55
56
18 40
3 23 41 42 43 44
45 46 47 48 49 50
2 3 7 8 9 10
15 16 17 18
1 2 3 4 5 6
20
26
11 12 13 14
2 3 7 21 22
27
28 36
34
35
37 38 39
28 32
30
24
25
33
31
28 29
11 12 13 14
15 16 17 18
2 3 7 8 9 10
19
2 3 21 22 23
1 2 3 4 5 6

Figure 211. Hydraulic Installation, Armament

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
211		XCFZZ		97499	205-076-012-5	HYDRAULIC INSTL USBL EFF 63-12956 THRU 63-13002 SEE FIG 201 THRU 205 FOR ADDITIONAL BREAKDOWN UHE,UHH,UHV,UHX	EA	1
211		XCFZZ		97499	205-076-012-7	HYDRAULIC INSTL USBL EFF 64-13492 THRU 64-13884 SEE FIG 201 THRU 205 FOR ADDITIONAL BREAKDOWN UHE,UHH,UHV,UHX	EA	1
211		XCFZZ		97499	205-076-012-9	HYDRAULIC INSTL USBL EFF 64-13885 & SUBSEQUENT SEE FIG 201 THRU 205 FOR ADDITIONAL BREAKDOWN UHE,UHH,UHV,UHX	EA	1
211	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	8
211	2	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	V
211	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT UHE,UHH,UHV,UHX	EA	V
211	4	PAOZZ	4730-00-893-6837	96906	MS24335-4	ESCUTCHEON,PIPE-TUB UHE,UHH,UHV,UHX	EA	2
211	5	PAOZZ	4730-00-795-5790	00624	3202-4	COUPLING HALF,QUICK UHE,UHH,UHV,UHX	EA	2
211	6	PAOZZ	1650-00-868-2284	97499	30-008-3	CAP,DUST,RUBBER UHE,UHH,UHV,UHX	EA	2
211	7	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	8
211	8	PAOZZ	4730-00-826-8877	96906	MS24335-6	FLANGE,PIPE UHE,UHH,UHV,UHX	EA	2
211	9	PAOZZ	4730-00-795-5793	00624	3202-6	COUPLING HALF,QUICK UHE,UHH,UHV,UHX	EA	2
211	10	PAOZZ	1650-00-868-2285	97499	30-008-4	CAP,DUST,RUBBER UHE,UHH,UHV,UHX	EA	2
211	11	PAOZZ	4730-00-640-0830	96906	MS21908D4	ELBOW,TUBE UHE,UHH,UHV,UHX	EA	2
211	12	PAOZZ	4730-00-277-6371	88044	AN6289D4	LOCKNUT,TUBE FITTIN UHE,UHH,UHV,UHX	EA	2
211	13	PAOZZ	5310-00-186-4947	96906	MS28777-4	WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
211	14	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	2
211	15	PAOZZ	4730-00-278-8160	96906	MS21908D6	ELBOW,TUBE UHE,UHH,UHV,UHX	EA	3
211	16	PAOZZ	5310-00-277-5083	88044	AN6289D6	LOCKNUT,TUBE FITTIN UHE,UHH,UHV,UHX	EA	5
211	17	PAOZZ	5310-00-186-1295	96906	MS28777-6	WASHER,FLAT UHE,UHH,UHV,UHX	EA	5
211	18	PAOZZ	5330-00-004-5695	96906	MS28778-6	PACKING,PREFORMED UHE,UHH,UHV,UHX	EA	V
211	19	MFOZZ	DELETED	97499	205-076-254-1	TUBE ASSEMBLY,HYDRA UHE,UHH,UHV,UHX	EA	1
211	20	MFOZZ	DELETED	97499	205-076-255-1	TUBE ASSEMBLY,HYDRA UHE,UHH,UHV,UHX	EA	1
211	21	PAOZZ	4730-00-640-7201	96906	MS21916D6-4	REDUCER,TUBE UHE,UHH,UHV,UHX	EA	2
211	22	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE UHE,UHH,UHV,UHX	EA	2
211	23	PAOZZ	5340-00-187-6023	96906	MS21122-6	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	8
211	24	MFOZZ	DELETED	97499	205-076-252-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	25	MFOZZ	DELETED	97499	205-076-253-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	26	MFOZZ	DELETED	97499	205-076-250-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	27	MFOZZ	DELETED	97499	205-076-251-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	28	PAOZZ	5310-00-638-2605	96906	MS2440006	NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	V
211	29	PAOZZ	4730-00-541-1749	96906	MS21924D6	NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	2
211	30	MFOZZ	DELETED	97499	205-076-248-1	TUBE ASSEMBLY,HYDRA UHE,UHH,UHV,UHX	EA	1
211	31	MFOZZ	DELETED	97499	205-076-249-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	32	PAOZZ	5310-00-187-2402	88044	AN960PD916	WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
211	33	PAOZZ	4730-00-246-9520	96906	MS21912D6	TEE,TUBE UHE,UHH,UHV,UHX	EA	2
211	34	MFOZZ	DELETED	97499	205-076-246-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	35	MFOZZ	DELETED	97499	205-076-247-1	TUBE ASSEMBLY,HYDRA UHE,UHH,UHV,UHX	EA	1
211	36	PAOZZ	4730-00-541-1749	96906	MS21924D6	NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	4
211	37	MFOZZ	DELETED	97499	205-076-244-1	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
211	38	MFOZZ	DELETED	97499	205-076-245-1	TUBE ASSEMBLY,HYDRA UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
211	39	MFOZZ	DELETED	97499	205-076-257-1	TUBE ASSEMBLY, METAL	UHE, UHH, UHV, UHX	EA	1
211	40	PAOZZ	4730-00-278-8160	96906	MS21908D6	.ELBOW, TUBE	UHE, UHH, UHV, UHX	EA	1
211	41	PAOZZ	4730-00-289-6089	96906	MS21902D6	NIPPLE, TUBE	UHE, UHH, UHV, UHX	EA	3
211	42	PAOZZ	5305-00-206-1201	88044	AN525-10R14	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
211	43	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	3
211	44	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	1
211	45	MFOZZ	DELETED	97499	205-076-241-1	TUBE ASSEMBLY, METAL	UHE, UHH, UHV, UHX	EA	1
211	46	PAOOO	1650-00-288-6908	96906	MS28720-6	FILTER, FLUID	UHE, UHH, UHV, UHX	EA	1
211	47	PAOOO	4330-00-542-2060	88044	AN6235-2A	FILTER ELEMENT, FLUI PRESSURE	UHE, UHH, UHV, UHX	EA	1
211	48	PAOZZ	5330-00-067-3358	88044	AN6227B12	..PACKING, PREFORME	UHE, UHH, UHV, UHX	EA	1
211	49	PAOZZ	5330-00-054-6859	88044	AN6230-1	.PACKING, PREFORME	UHE, UHH, UHV, UHX	EA	1
211	50	PAOZZ	5330-00-297-9990	96906	MS28775-222	.PACKING, PREFORMED	UHE, UHH, UHV, UHX	EA	1
211	51	PAOZZ	5330-00-491-9397	96906	MS35803-222	..GASKET	UHE, UHH, UHV, UHX	EA	1
211	52	PAOZZ	5306-00-182-1965	88044	AN4H17A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	2
211	53	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	4
211	54	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	2
211	55	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	4
211	56	MFOZZ	DELETED	97499	205-076-234-1	.BRACKET, HYDRAULIC F	UHE, UHH, UHV, UHX	EA	1
211	57	MFOZZ	DELETED	97499	205-076-242-1	.TUBE ASSEMBLY, METAL	UHE, UHH, UHV, UHX	EA	1
211	58	PAOZZ	4820-00-720-3991	96906	MS28890-6	.VALVE, CHECK	UHE, UHH, UHV, UHX	EA	1
211	59	MFOZZ	DELETED	97499	205-076-131-1	..TUBE ASSEMBLY, HYDRA	UHE, UHH, UHV, UHX	EA	1
211	60	PAOZZ	4730-00-246-9520	96906	MS21912D6	.TEE, TUBE	UHE, UHH, UHV, UHX	EA	1
211	61	MFOZZ	DELETED	97499	205-076-236-1	.TUBE ASSEMBLY, HYDRA	UHE, UHH, UHV, UHX	EA	1
211	62	MFOZZ	DELETED	97499	205-076-238-1	.TUBE ASSEMBLY, METAL	UHE, UHH, UHV, UHX	EA	1
211	63	MFOZZ	DELETED	97499	205-076-237-1	.TUBE ASSEMBLY, METAL	UHE, UHH, UHV, UHX	EA	1
211	64	PAOZZ	5306-00-182-2011	88044	AN3H22A	BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	2
211	65	PAOZZ	1650-00-855-6057	94641	1U1025	VALVE, LINEAR, DIRECT	UHE, UHH, UHV, UHX	EA	1
211	66	PBOZZ	5365-00-845-3502	96906	MS24391D6L	.PLUG, MACHINE THREAD	UHE, UHH, UHV, UHX	EA	1

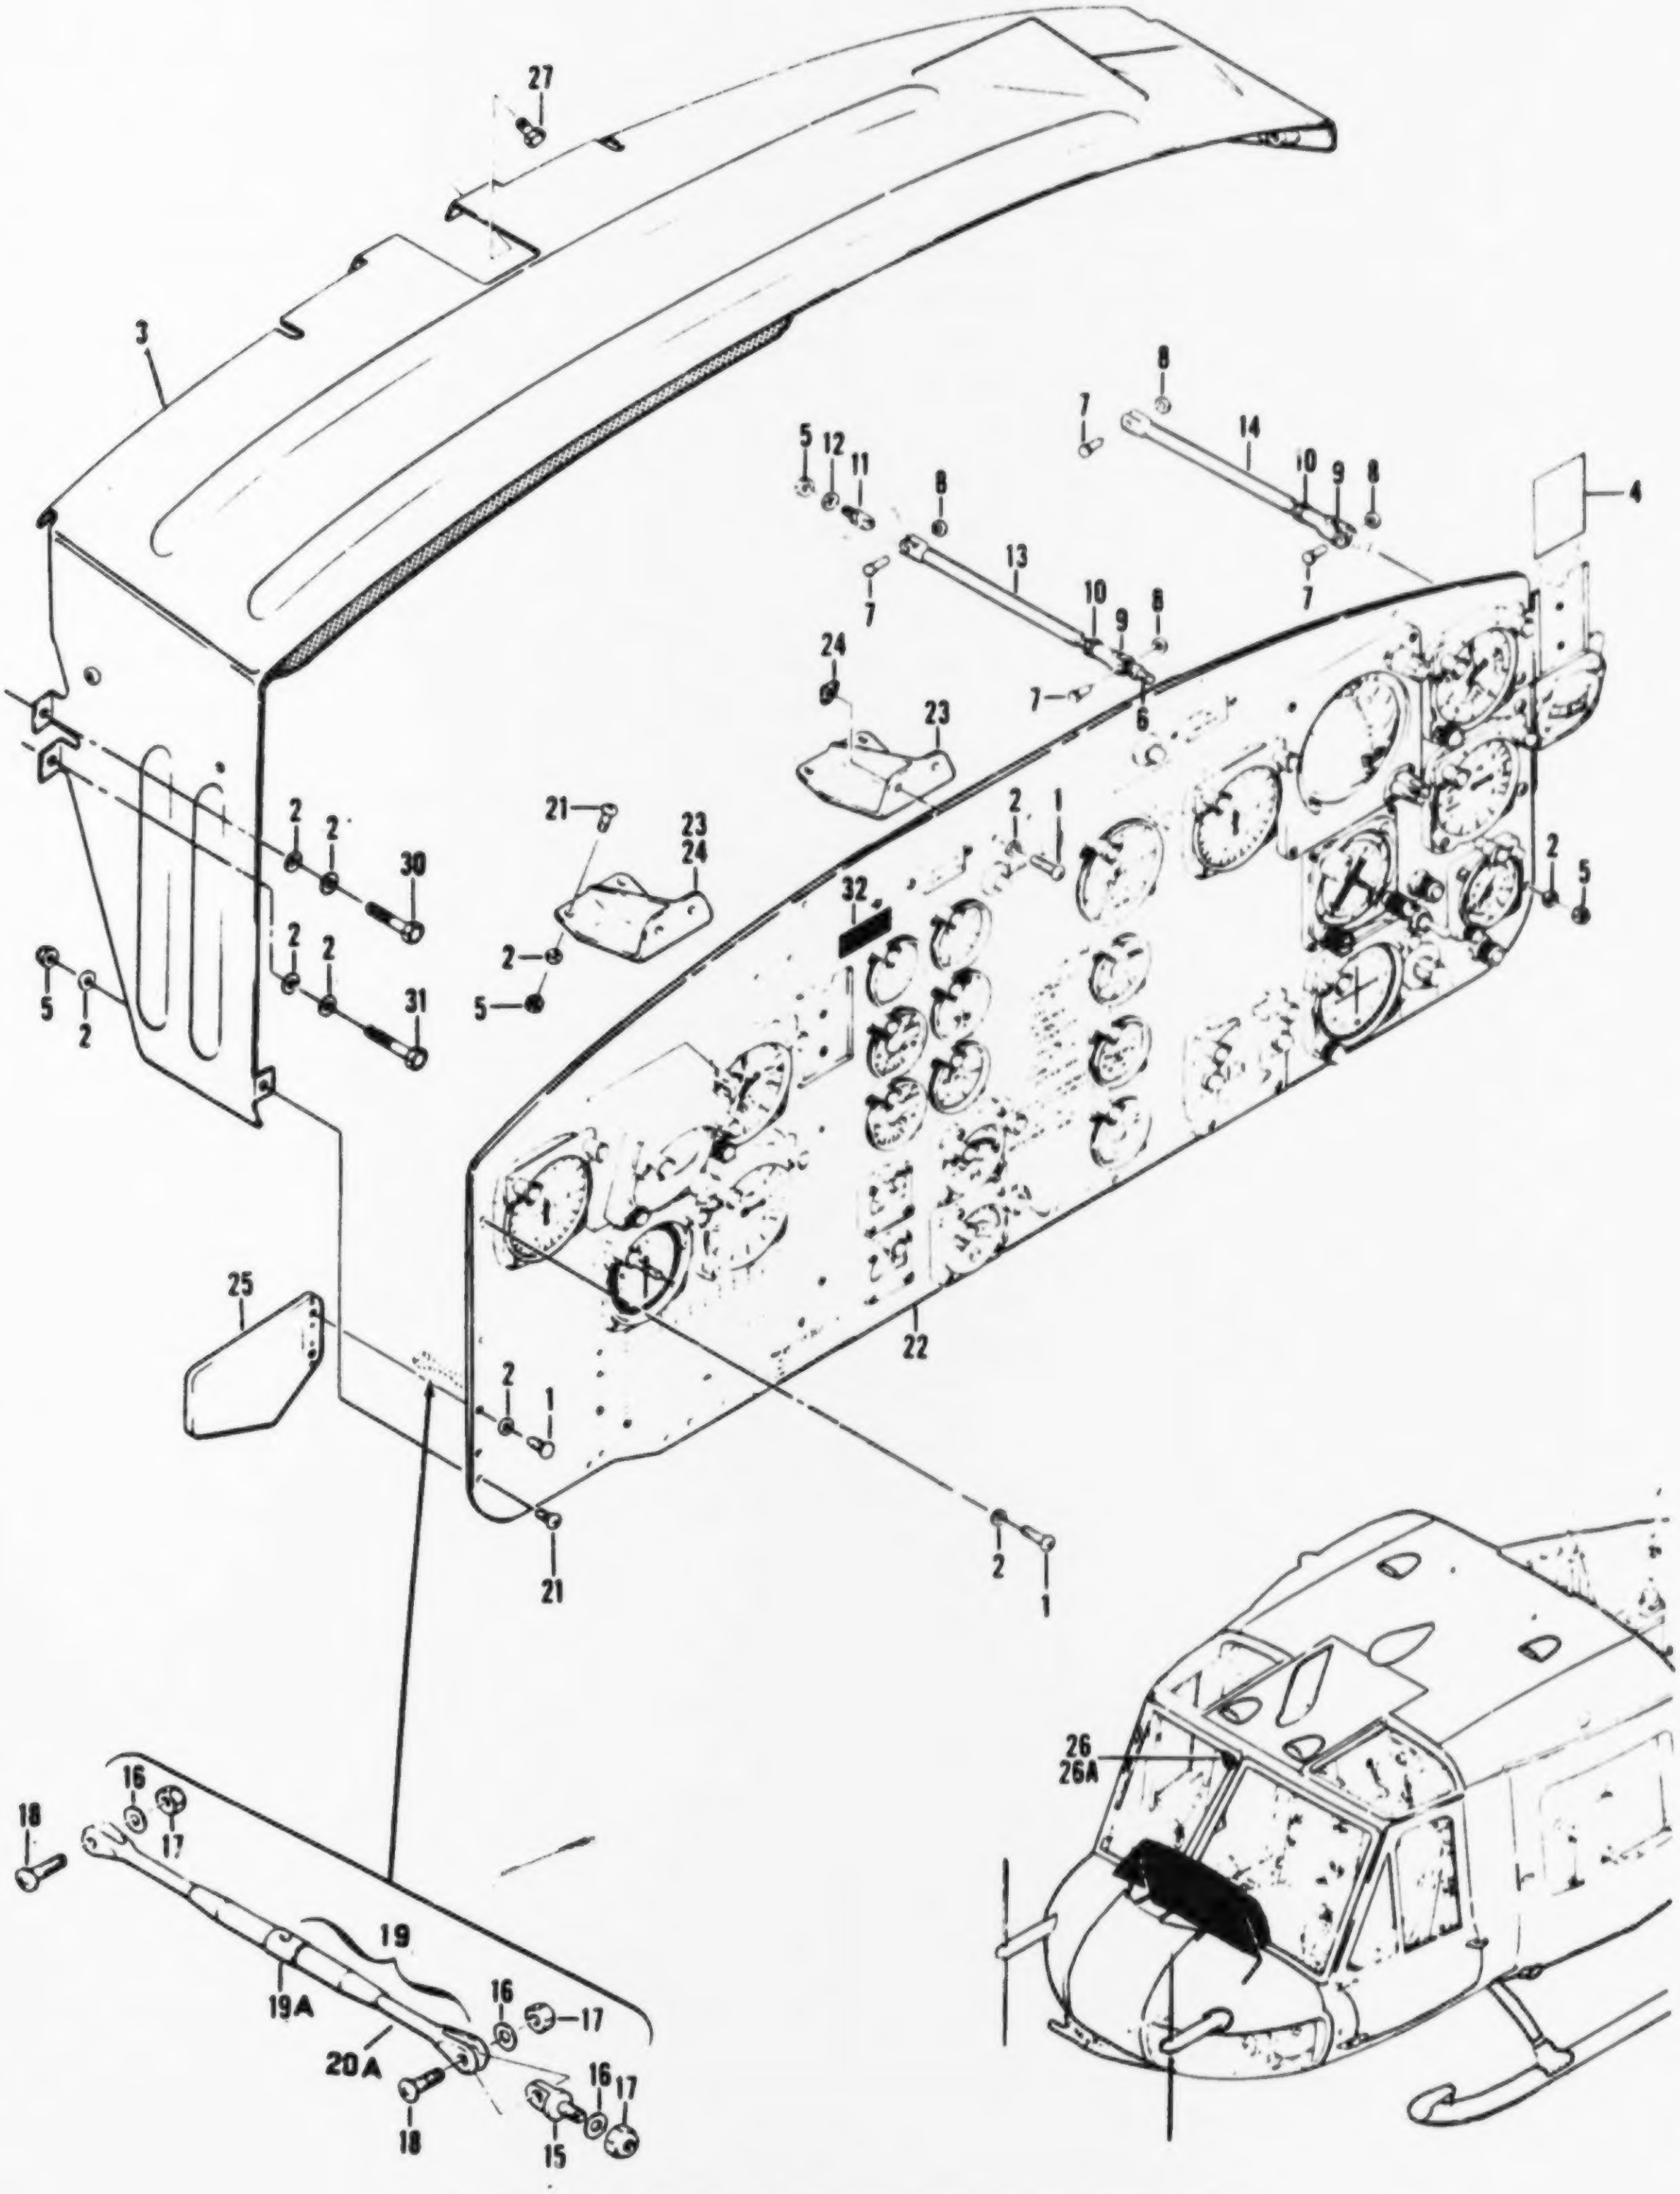
27
3
8
7
14
10
9
8
4
5
12
11
8
13
7
10
9
8
7
24
23
7
6
21
23
24
2
2
30
2
1
32
2
5
2
5
2
2
2
31
5
2
25
22
2
1
21
2
1
26
26A
18
16
17
19
19A
20A
16
17
18
16
17
15

Figure 212. Panel and Pedestal Installation, Instrument

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 08 INSTRUMENT SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
212		XCFZZ		97499	204-070-704-1	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 60-3546 THRU 60-3619 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-3	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 61-686 THRU 61-719 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-9	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 61-720 THRU 61-735 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-11	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 61-736 THRU 61-803 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-5	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-19	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 62-1997 THRU 62-12555 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-21	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 63-8500 THRU 63-12952 SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-35	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 64-13902 & SUBSEQUENT SEE FIG.6 FOR NHA....UHB	EA	1
212		XCFZZ		97499	204-070-704-45	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA....UHC, UHM	EA	1
212		XCFZZ		97499	204-070-704-41	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 65-9416 THRU 65-12772 SEE FIG.6 FOR NHA....UHC, UHM	EA	1
212		XCFZZ		97499	204-070-704-55	PANEL AND PEDESTAL INSTALLATION INSTRUMENT USBL EFF 66-492 THRU 66-601 SEE FIG.6 FOR NHA....UHC, UHM	EA	1
212		XCFZZ		97499	205-070-112-3	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 66-602 THRU 66-15105 SEE FIG.6 FOR NHA....UHC, UHM	EA	1
212		XCFZZ		97499	205-070-112-11	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 66-15106 & SUBSEQUENT SEE FIG 6 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-3	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 62-2106 THRU 62-12372 SEE FIG 7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-5	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-9	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 63-12956 THRU 63-13002 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-7	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 64-13492 THRU 64-13661 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-13	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 64-13662 THRU 64-13901 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-11	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 65-9565 THRU 65-9810 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-100-15	PANEL AND PEDESTAL INSTALLATION, INSTRUMENT USBL EFF 65-9811 THRU 65-12895 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-112-1	PANEL AND PEDESTAL INSTALLATION USBL EFF 66-746 THRU 66-16867 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-112-7	PANEL AND PEDESTAL INSTALLATION USBL EFF 66-16868 THRU 67-17777 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-112-21	PANEL AND PEDESTAL INSTL U/O (UH-1B) PN 204-070-704-1, -3, -5, -9, -11, -19, & -21 U/O PN 205-070-100-3, -5, & -9 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-112-27	PANEL, AND PEDESTAL INSTALLATION USBL EFF 68-15325 THRU 68-16625 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-112-35	PANEL AND PEDESTAL INSTALLATION USBL EFF 69-15000 THRU 69-15291 SEE FIG.7 FOR NHA....UHE, UHH, UHV, UHX	EA	1
212		XCFZZ		97499	205-070-112-37	PANEL AND PEDESTAL INSTALLATION USBL EFF 69-15292 & SUBSEQUENT SEE FIG.7 FOR NHAA....UHE, UHH, UHV, UHX	EA	1
212	1	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW, MACHINE....UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	17
212	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER, FLAT....UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	26

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
212	3	PAOOO	1560-00-075-3385	97499	204-070-008-21	.SHIELD ASSY,GLARE U/O (UH-1B) PN 204-070-704-1,-3,-5,-9,-11, -19,& -21 U/O PN 205-070-100-3,-5, & -9 SEE FIG.213 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
212	3	PAOOO	1560-00-133-7119	97499	204-072-023-19	.SHIELD ASSY,GLARE U/O (UH-1B) PN 204-070-704-35 U/O PN 205-070-100-7,-11,-13,-15, & 205-070-112-1,-7,-21,-27,-35, & -37 SEE FIG.213 FOR BREAKDOWN............UHE,UHH,UHM,UHV,UHX	EA	1
212	4	PAOZZ	6605-00-584-4227	88044	AN5823-1	.FORM,PRINTED............UHE,UHH,UHM,UHV,UHX	EA	2
212	5	PAFZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	9
212	6	PAFZZ	5306-00-638-2216	88044	AN42B4	.BOLT,EYE............UHE,UHH,UHM,UHV,UHX	EA	1
212	7	PBFZZ	5315-00-951-2395	96906	MS20392-2C13	.PIN,STRAIGHT,HEADED............UHE,UHH,UHM,UHV,UHX	EA	4
212	8	PAFZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT............UHE,UHH,UHM,UHV,UHX	EA	4
212	9	PAFZZ	5340-00-838-1591	96906	MS27975-4	.CLEVIS,ROD END............UHE,UHH,UHM,UHV,UHX	EA	2
212	10	PAFZZ	5310-00-208-7589	88044	AN316-4R	.NUT,PLAIN,HEXAGON............UHE,UHH,UHM,UHV,UHX	EA	2
212	11	PAFZZ	5306-00-638-2214	88044	AN42B3	.BOLT,EYE............UHE,UHH,UHM,UHV,UHX	EA	1
212	12	PAFZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT............UHE,UHH,UHM,UHV,UHX	EA	1
212	13	PAFZZ	3040-00-859-6119	80205	NAS356-64-820	.CONNECTING LINK, RIGID............UHE,UHH,UHM,UHV,UHX	EA	1
212	14	PAFZZ	3040-00-859-6118	80205	NAS356-64-550	.CONNECTING LINK, RIGID............UHE,UHH,UHM,UHV,UHX	EA	1
212		XCFZZ		97499	204-070-135-1	.BRACE INSTL TO RADIO............UHE,UHH,UHM,UHV,UHX	EA	1
212	15	PAFZZ	5306-00-638-2214	88044	AN42B3	..BOLT,EYE............UHE,UHH,UHM,UHV,UHX	EA	2
212	16	PAFZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT............UHE,UHH,UHM,UHV,UHX	EA	6
212	17	PAFZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	6
212	18	PAFZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE............UHE,UHH,UHM,UHV,UHX	EA	4
212	19	PAFZZ	5340-00-010-3090	96906	MS21256-2	..CLIP,RETAINING............UHE,UHH,UHM,UHV,UHX	EA	1
212	19A	PAFZZ	5340-00-061-1812	96906	MS21251-3L	..TURNBUCKLE BODY............UHE,UHH,UHM,UHV,UHX	EA	1
212	20	PAFZZ	5340-00-081-3637	96906	MS21252-3RL	..CLEVIS,ROD END............UHE,UHH,UHM,UHV,UHX	EA	2
212	20A	PAFZZ	5340-00-068-0529	96906	MS21252-3LL	..CLEVIS, ROD END............UHE,UHH,UHM,UHV,UHX	EA	1
212	21	PAFZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE............UHE,UHH,UHM,UHV,UHX	EA	2
212	22	XCFZZ		97499	204-070-161-1	.PANEL ASSY U/O PN 204-070-704-1 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-3	.PANEL ASSY U/O PN 204-070-704-3 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-7	.PANEL ASSY U/O PN 204-070-704-9 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-11	.PANEL ASSY U/O PN 204-070-704-5 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-19	.PANEL ASSY U/O PN 204-070-704-11 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-23	.PANEL ASSY U/O PN 204-070-704-19 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-25	.PANEL ASSY U/O PN 204-070-704-21 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-27	.PANEL ASSY U/O PN 204-070-704-35 SEE FIG.216 FOR BREAKDOWN	EA	1
212	22	XCFZZ		97499	204-070-161-29	.PANEL ASSY U/O PN 204-070-704-45 SEE FIG.216 FOR BREAKDOWN ....UHM	EA	1
212	22	XCFZZ		97499	204-070-161-31	.PANEL ASSY U/O PN 204-070-704-41 SEE FIG.216 FOR BREAKDOWN ....UHM	EA	1
212	22	XCFZZ		97499	204-070-161-35	.PANEL ASSY U/O PN 204-070-704-55 SEE FIG.216 FOR BREAKDOWN ....UHM	EA	1
212	22	XCFZZ		97499	204-072-026-1	.PANEL ASSY U/O PN 205-070-112-3 SEE FIG.216 FOR BREAKDOWN ....UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
212	22	XCFZZ		97499	205-070-120-3	PANEL ASSY U/O PN 205-070-100-3 SEE FIG 216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-120-5	.PANEL ASSY U/O PN 205-070-100-5 SEE FIG 216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-120-9	.PANEL ASSY U/O PN 205-070-100-9 SEE FIG.216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-120-7	PANEL ASSY U/O PN 205-070-100-7 & -13 SEE FIG.216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-120-13	.PANEL ASSY U/O PN 205-070-100-15 SEE FIG.216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-120-11	PANEL ASSY U/O PN 205-070-100-11 SEE FIG.216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-949-1	.PANEL ASSY U/O PN 205-070-112-1 SEE FIG.216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-949-5	.PANEL ASSY U/O PN 205-070-112-7 SEE FIG.216 FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-949-9	PANEL ASSY U/O PN 205-070-112-21 & -27 SEE FIG.216 FOR BREAKDOWN........ UHE, UHH, UHV, UHX	EA	1
212	22	XCFZZ		97499	205-070-949-17	PANEL ASSY U/O PN 205-070-112-35 & -37 SEE FIG.216 FOR BREAKDOWN. .... UHE, UHH, UHV, UHX	EA	1
212	23	PAOOO	1560-00-758-1425	97499	204-070-296-1	.SUPPORT, STRUCTURAL .... UHE, UHH, UHM, UHV, UHX	EA	2
212	24	PAOZZ	5310-00-772-3720	96906	MS21075L3	..NUT, SELF-LOCKING, PLATE .... UHE, UHH, UHM, UHV, UHX	EA	2
212	25	XDFZZ	1560-00-498-6527	97499	205-072-470-1	.BRACKET ASSY, PANEL U/O PN 205-070-112-35, &-37 .... UHE, UHH, UHV, UHX	EA	1
212	25	XBFZZ	1560-00-498-6526	97499	205-072-470-2	.BRACKET ASSY, PANEL U/O PN 205-070-112-35, &-37 .... UHE, UHH, UHV, UHX	EA	1
212	26	PAOZZ	6685-00-980-6762	96906	MS28028-2	.THERMOMETER, SELF-IN .... UHE, UHH, UHM, UHV, UHX	EA	1
212	26A	PAOZZ	6685-00-049-6669	65092	96451	..BUSHING RUBBER .... UHE, UHH, UHM, UHV, UHX	EA	2
212	27	PAFZZ	5306-00-182-2058	88044	AN3H5A	.BOLT, MACHINE .... UHE, UHH, UHM, UHV, UHX	EA	2
212	30	PAFZZ	5306-00-182-2011	88044	AN3H22A	.BOLT, MACHINE U/O (UH-1B) PN 204-070-704-1, -3, -5, -9, -11, -19, -21 U/O PN 205-070-100-3, -5, & -9 .... UHE, UHH, UHV, UHX	EA	1
212	31	PAFZZ	5306-00-282-5821	88044	AN3H26A	.BOLT, MACHINE U/O (UH-1B) PN 204-070-704-1, -3, -5, -9, -11, -19, & -21 U/O PN 205-070-100-3, -5, & -9 .... UHE, UHH, UHM, UHV, UHX	EA	1
212	31	PAFZZ	5306-00-282-5821	88044	AN3H26A	.BOLT, MACHINE U/O (UH-1B) PN 204-070-704-35 U/O PN 205-070-100-7, -11, -13, -15, & PN 205-070-112-1 & -7 .... UHE, UHH, UHV, UHX	EA	2
212	32	PAFZZ	9905-00-772-7713	97499	100-009-1	.PLATE, IDENTIFICATIO .... UHE, UHH, UHM, UHV, UHX	EA	1

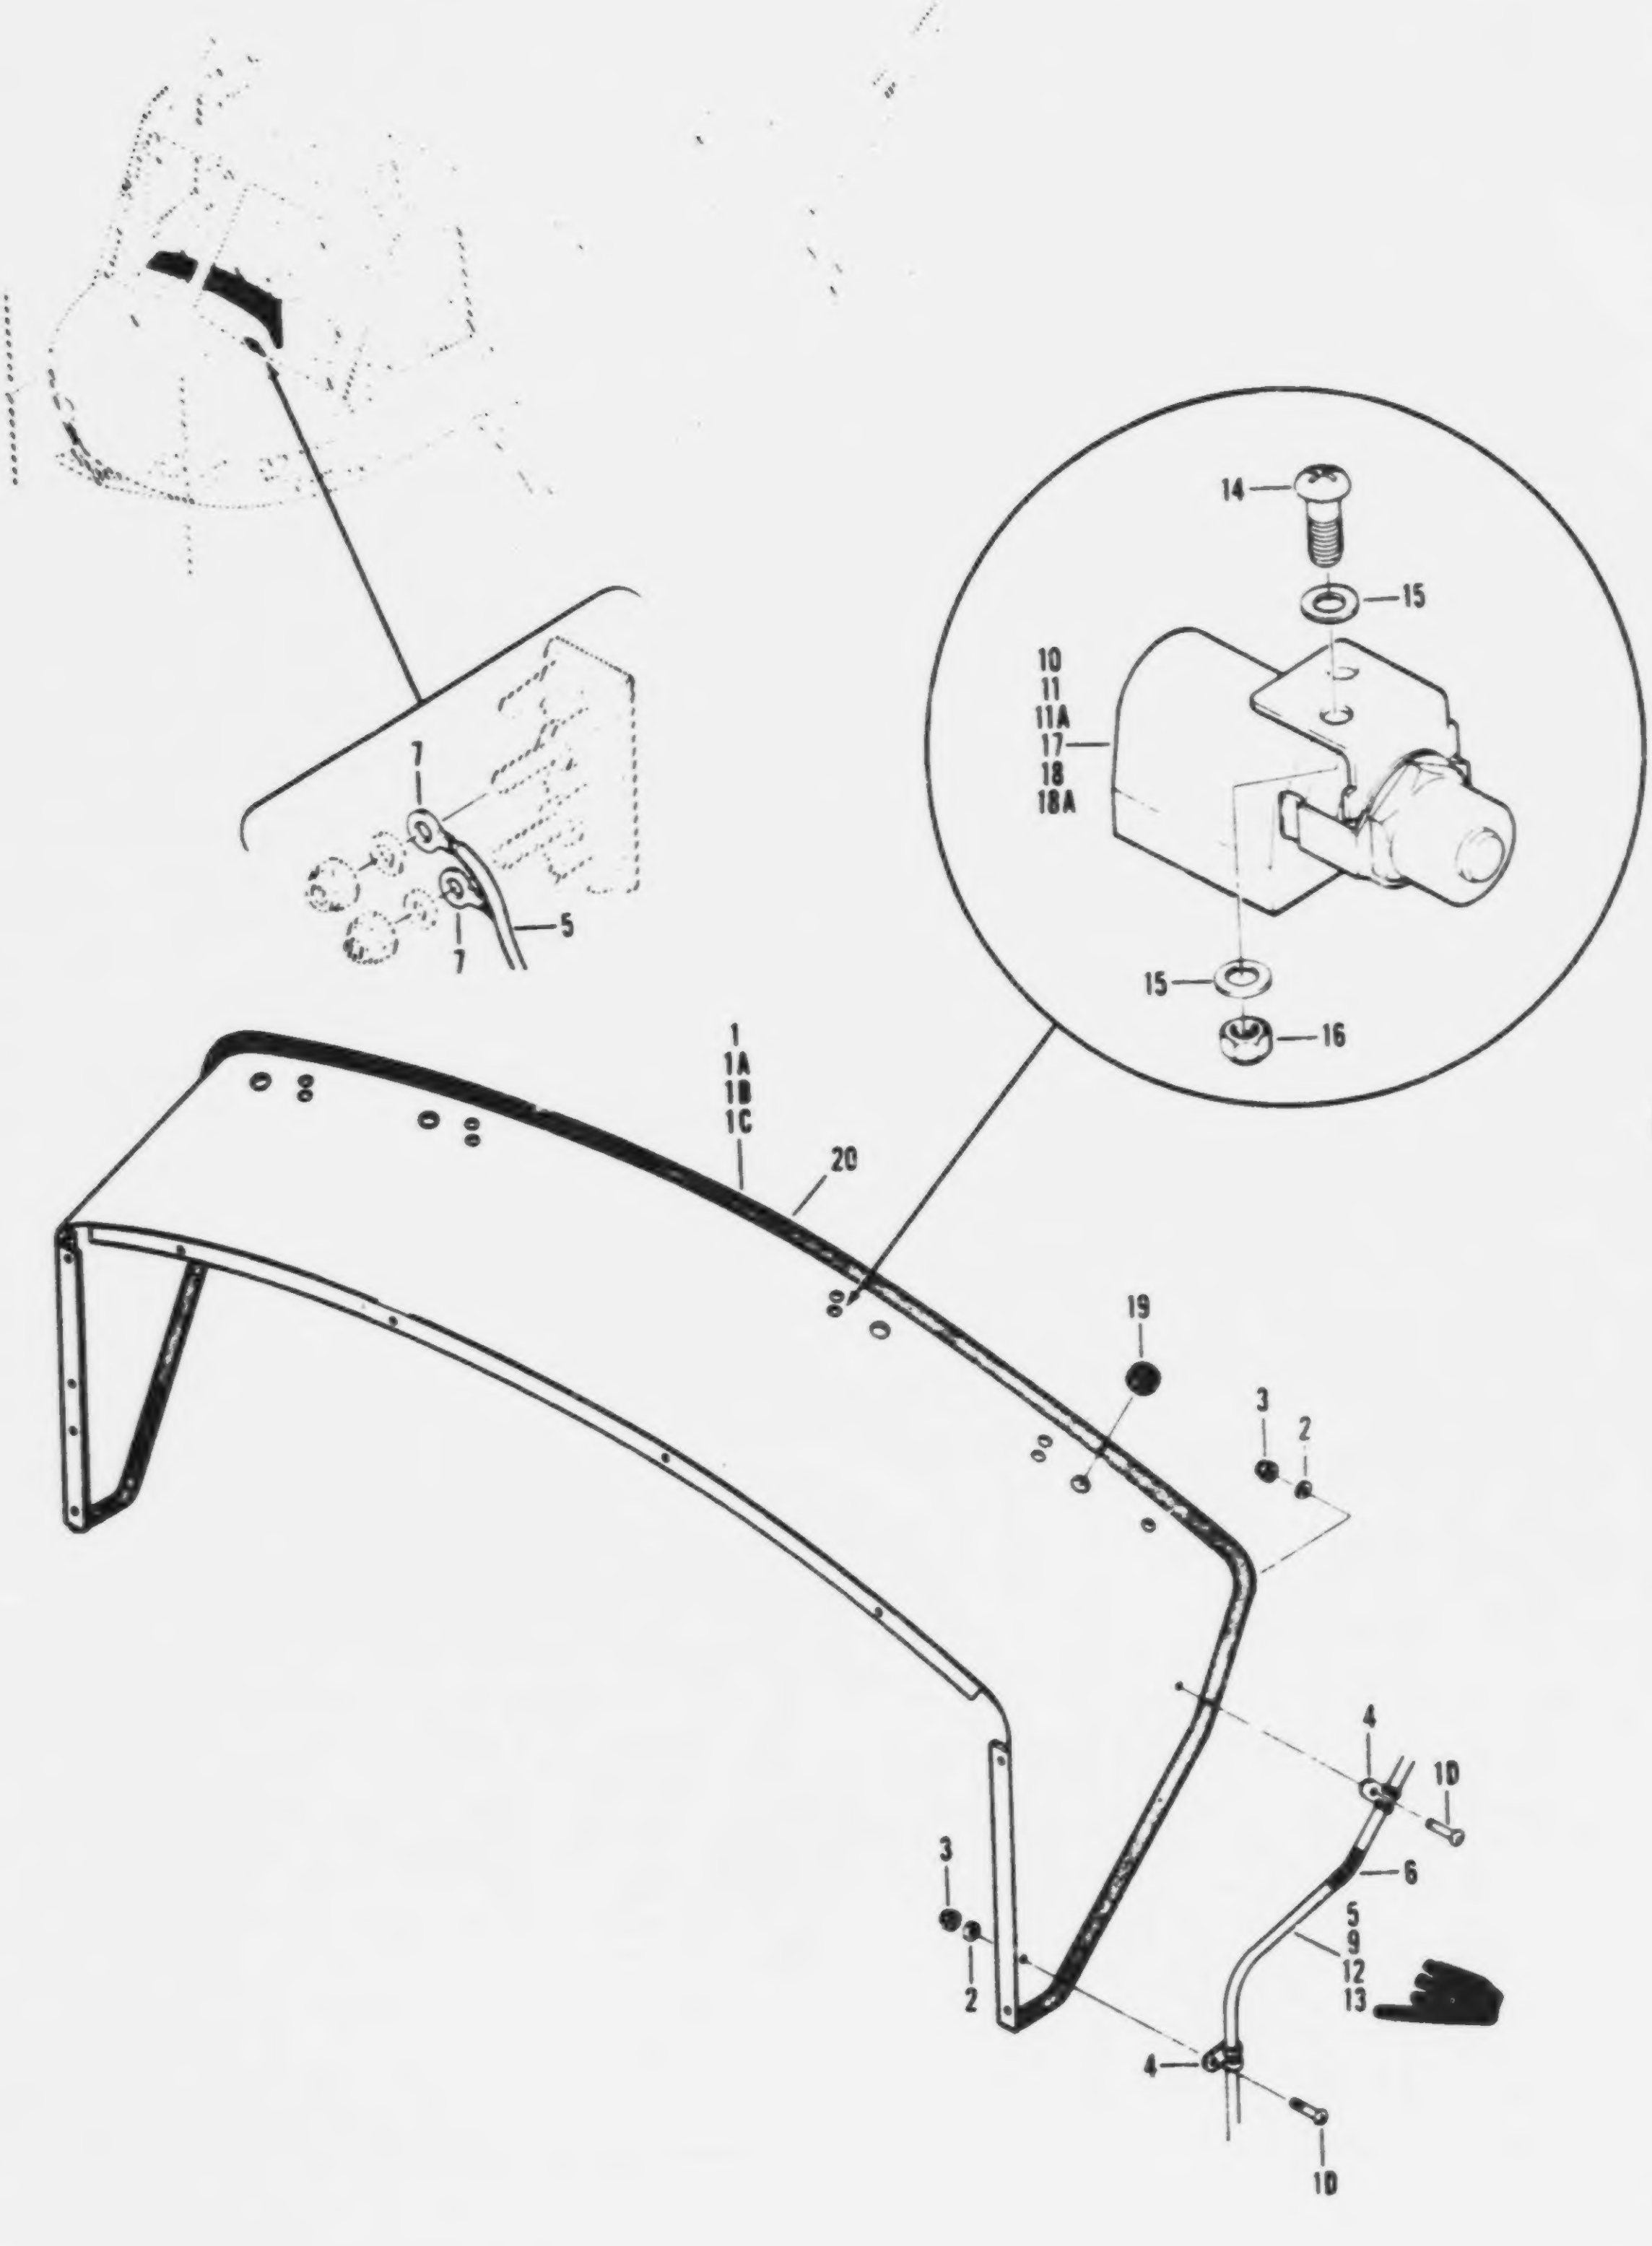
7
7
7
5
14
15
10
11
11A
17
18
18A
15
16
1
1A
1B
1C
20
19
3
2
4
10
6
5
9
12
13
3
2
4
10

Figure 213. Glare Shield Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 08 INSTRUMENT SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
213		PA000	1560-00-075-3385	97499	204-070-008-21	SHIELD ASSY,GLARE USBL EFF (UH-1B) 60-3546 THRU 63-12952, USBL EFF 62-2106 THRU 63-13002 SEE FIG.212 FOR NHA ...... UHB,UHE,UHH,UHV,UHX	EA	1
213		PA000	1560-00-133-7119	97499	204-072-023-19	SHIELD ASSY,GLARE USBL EFF (UH-1B)64-13902 & SUBSEQUENT USBL EFF 64-13492 THRU 69-15291 SEE FIG 212 FOR NHA HA ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	1	PAOZZ	1680-01-129-5777	12757	82SDSCC-D-0150	GLARESHIELD,PANEL USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ...... UHH,UHV	EA	1
213	1A	PAOZZ	5305-00-984-4984	96906	MS35206-227	..SCREW,MACHINE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ...... UHH,UHV	EA	12
213	1B	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER,FLAT USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ...... UHH,UHV	EA	2
213	1C	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ...... UHH,UHV	EA	12
213	1D	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
213	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
213	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
213	4	PAOZZ	5340-00-990-9298	81996	EAB700D3	.CLAMP,LOOP ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
213	5	A0000		97499	205-075-521-1	.WIRING ASSEMBLY U/O PN 204-072-023-19 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	5	A0000	1560-00-885-3552	97499	204-075-427-11	.WIRING ASSEMBLY U/O PN 204-070-008-21 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	6	MFOZZ		97499	130-005-7-10	..INSULATION TUBING U/O PN 205-075-521-1 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	7	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O P/N 205-075-521-1 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	9	XDOZZ		81349	M81044-2-22-9	..WIRE,ELECTRICAL U/O PN 205-075-521-1 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
213	10	PAOZZ	6220-00-295-0897	96906	MS25027-1	..LIGHT,COCKPIT,ACFT U/O P/N 205-075-521-1 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	11	PAOZZ	6240-00-299-4742	96906	MS25069-1495	..LAMP,INCANDESCENT U/O P/N 205-075-521-1 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	11	PAOZZ	6240-00-155-8714	96906	MS25231-313	..LAMP,INCANDESCENT USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ...... UHH,UHV	EA	5
213	11A	PAOZZ	1680-01-129-5416	81996	6210-EG-002-10	..FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ...... UHH,UHV	EA	5
213	12	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
213	13	MFOZZ	DELETED	97499	85T4-11-3	..INSULATION TUBE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	13	MFOZZ		97499	85T4-11-4	..INSULATION,TUBE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	13	MFOZZ		97499	130-005-7-10	..INSULATION TUBING U/O PN 205-075-521-1 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	14	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	9
213	15	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	19
213	16	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	9
213	17	PAOZZ	6240-00-299-4742	96906	MS25069-1495	.LAMP,INCANDESCENT U/O PN 204-070-008-21 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	18	PAOZZ	6220-00-295-0897	96906	MS25027-1	.LIGHT,COCKPIT,ACFT U/O PN 204-070-008-21 ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	18A	PAOZZ	6210-00-284-0715	72914	A4863	.LIGHT,PANEL ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
213	19	PAOZZ	5325-00-641-2792	96906	MS35489-60	.GROMMET,NONMETALLIC U/O PN 204-070-008-21 ...... UHB,UHE,UHH,UHV,UHX	EA	4
213	19	PAOZZ	5325-00-174-9336	96906	MS35489-31	.GROMMET,NONMETALLIC ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
213	20	PAOZZ	1560-00-129-6286	97499	110-072-3	.BUMPER,GLARE SHIELD ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	5

Fig. 214 & 215 NOT USED

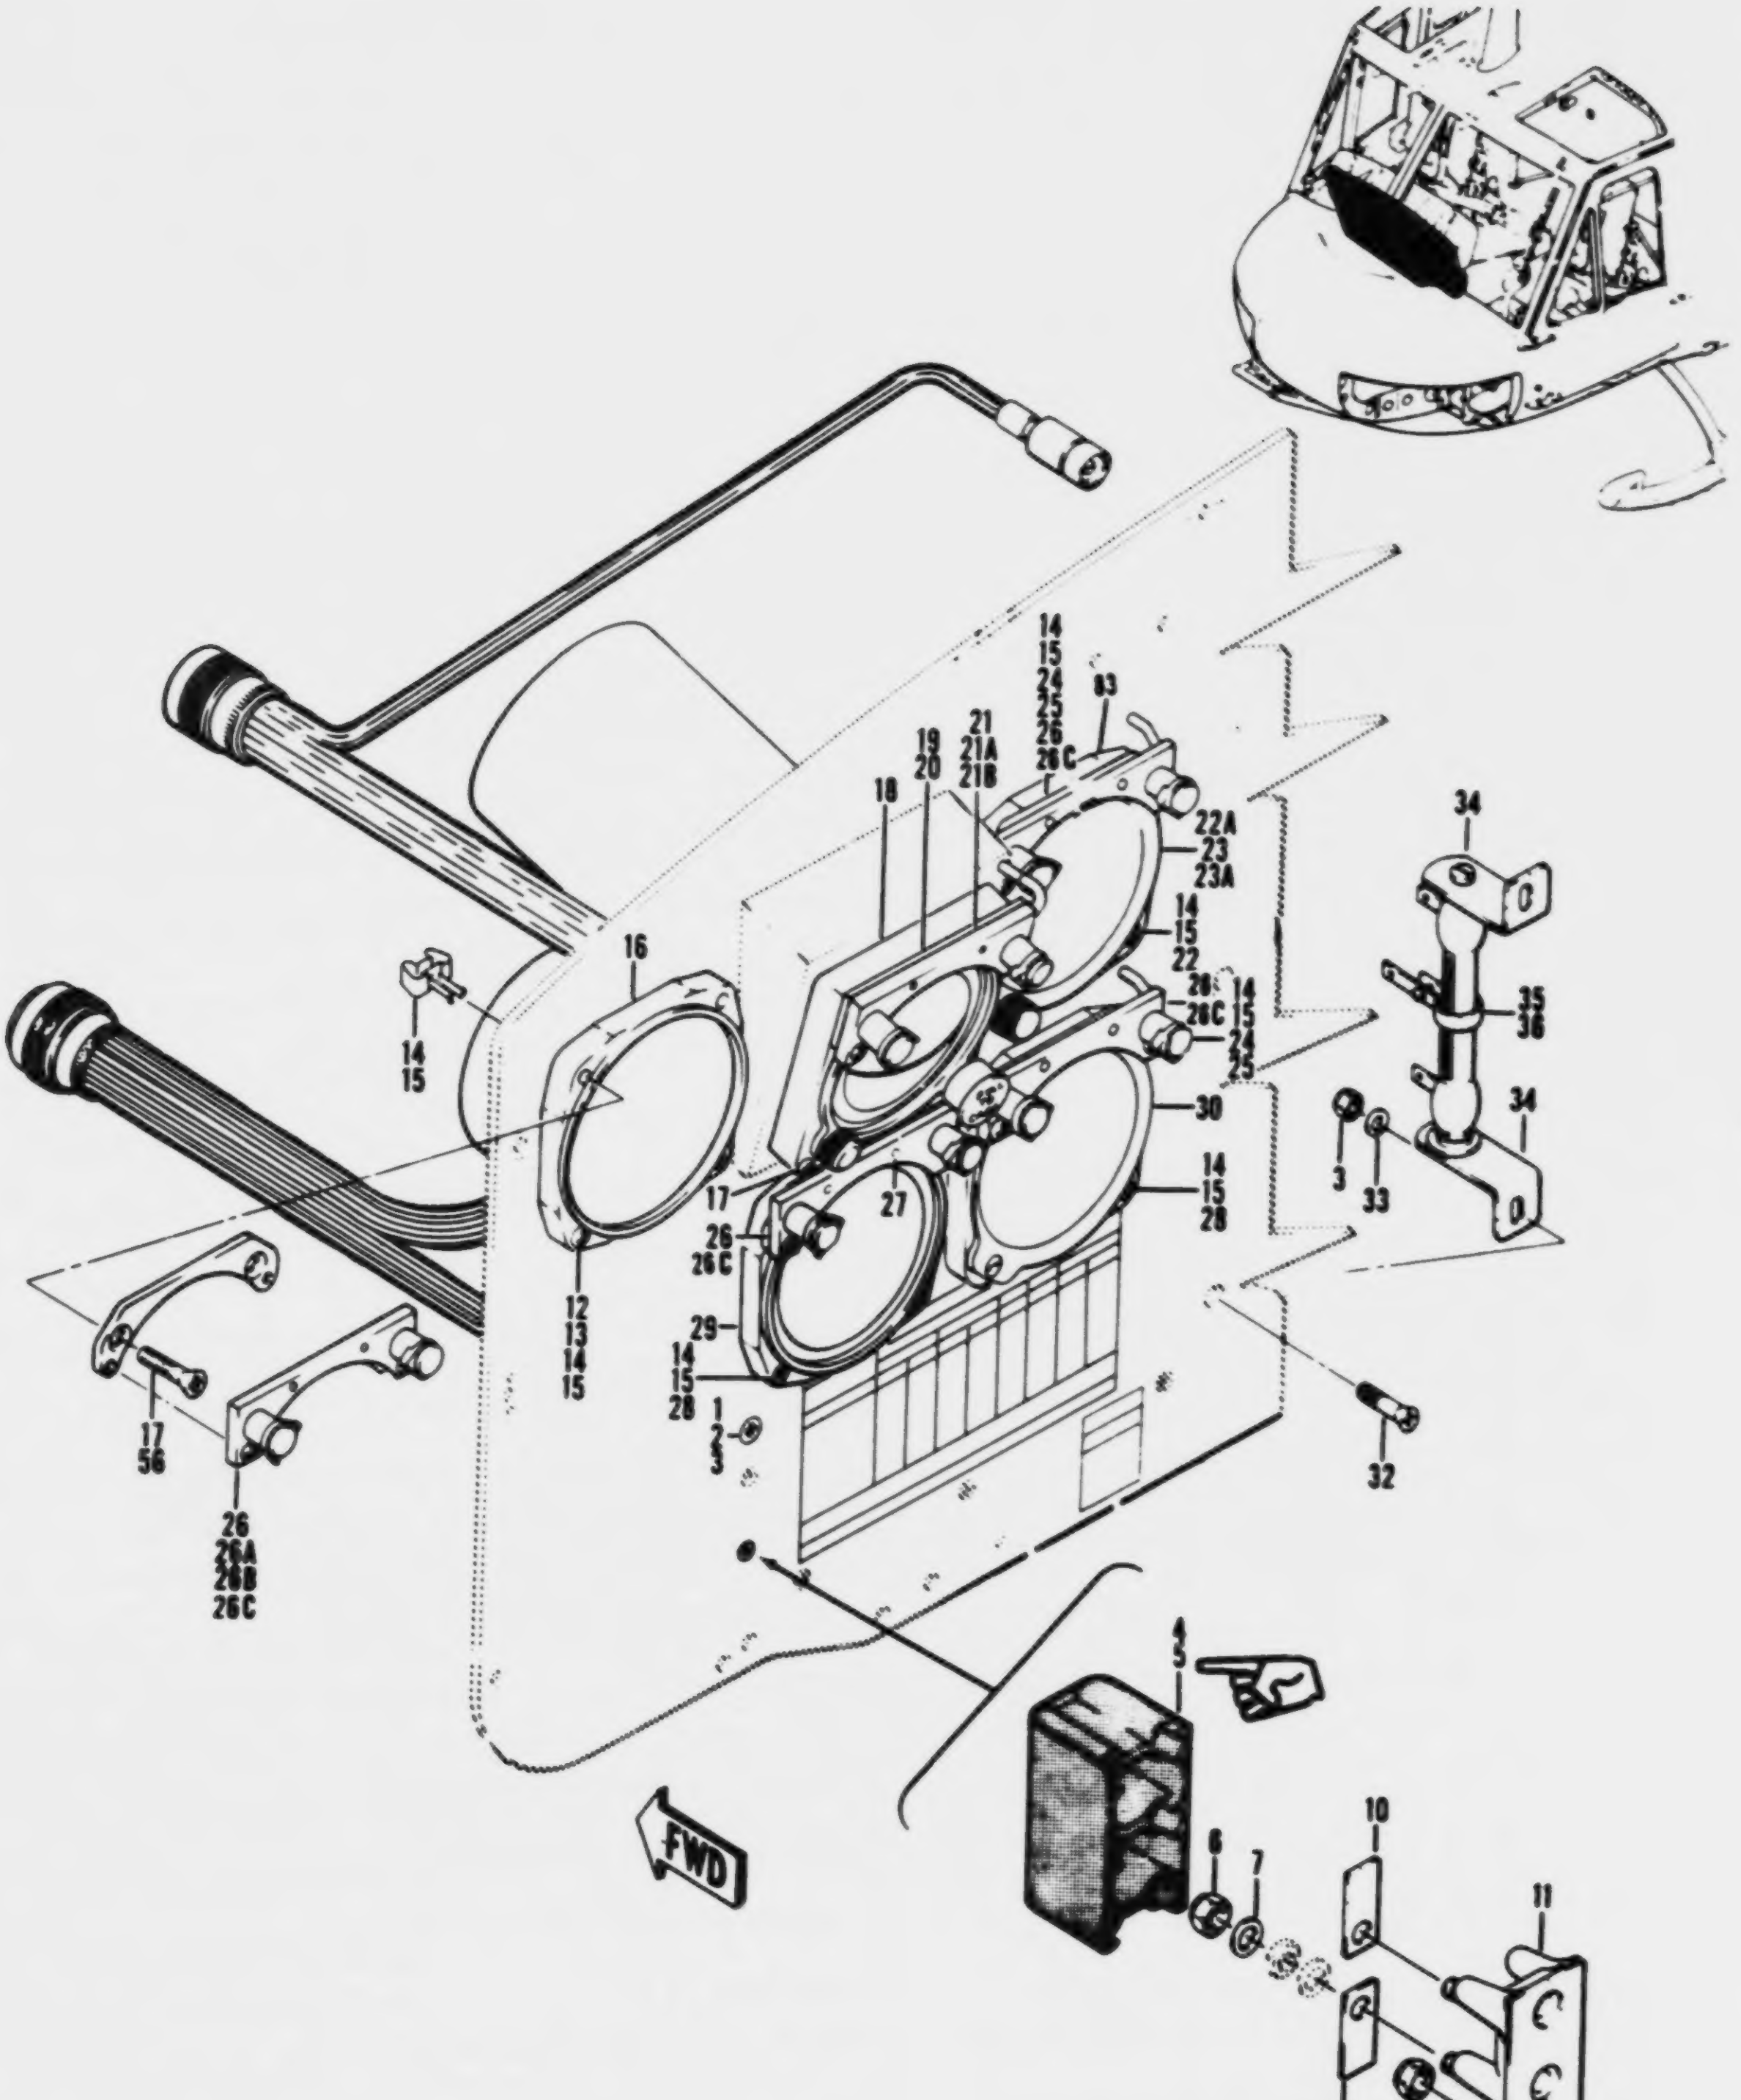
14
15
24
25
26
26C
83
21
21A
21B
19
20
18
22A
23
23A
14
15
22
26
26C
14
15
24
25
34
35
36
16
14
15
30
3
33
34
14
15
28
17
27
26
26C
29
14
15
28
12
13
14
15
1
2
3
32
17
56
26
26A
26B
26C
4
5
FWD
6
7
10
11
10
8
9

Figure 216. Panel Assembly, Instrument, Left Hand Section (Sheet 1 of 3)

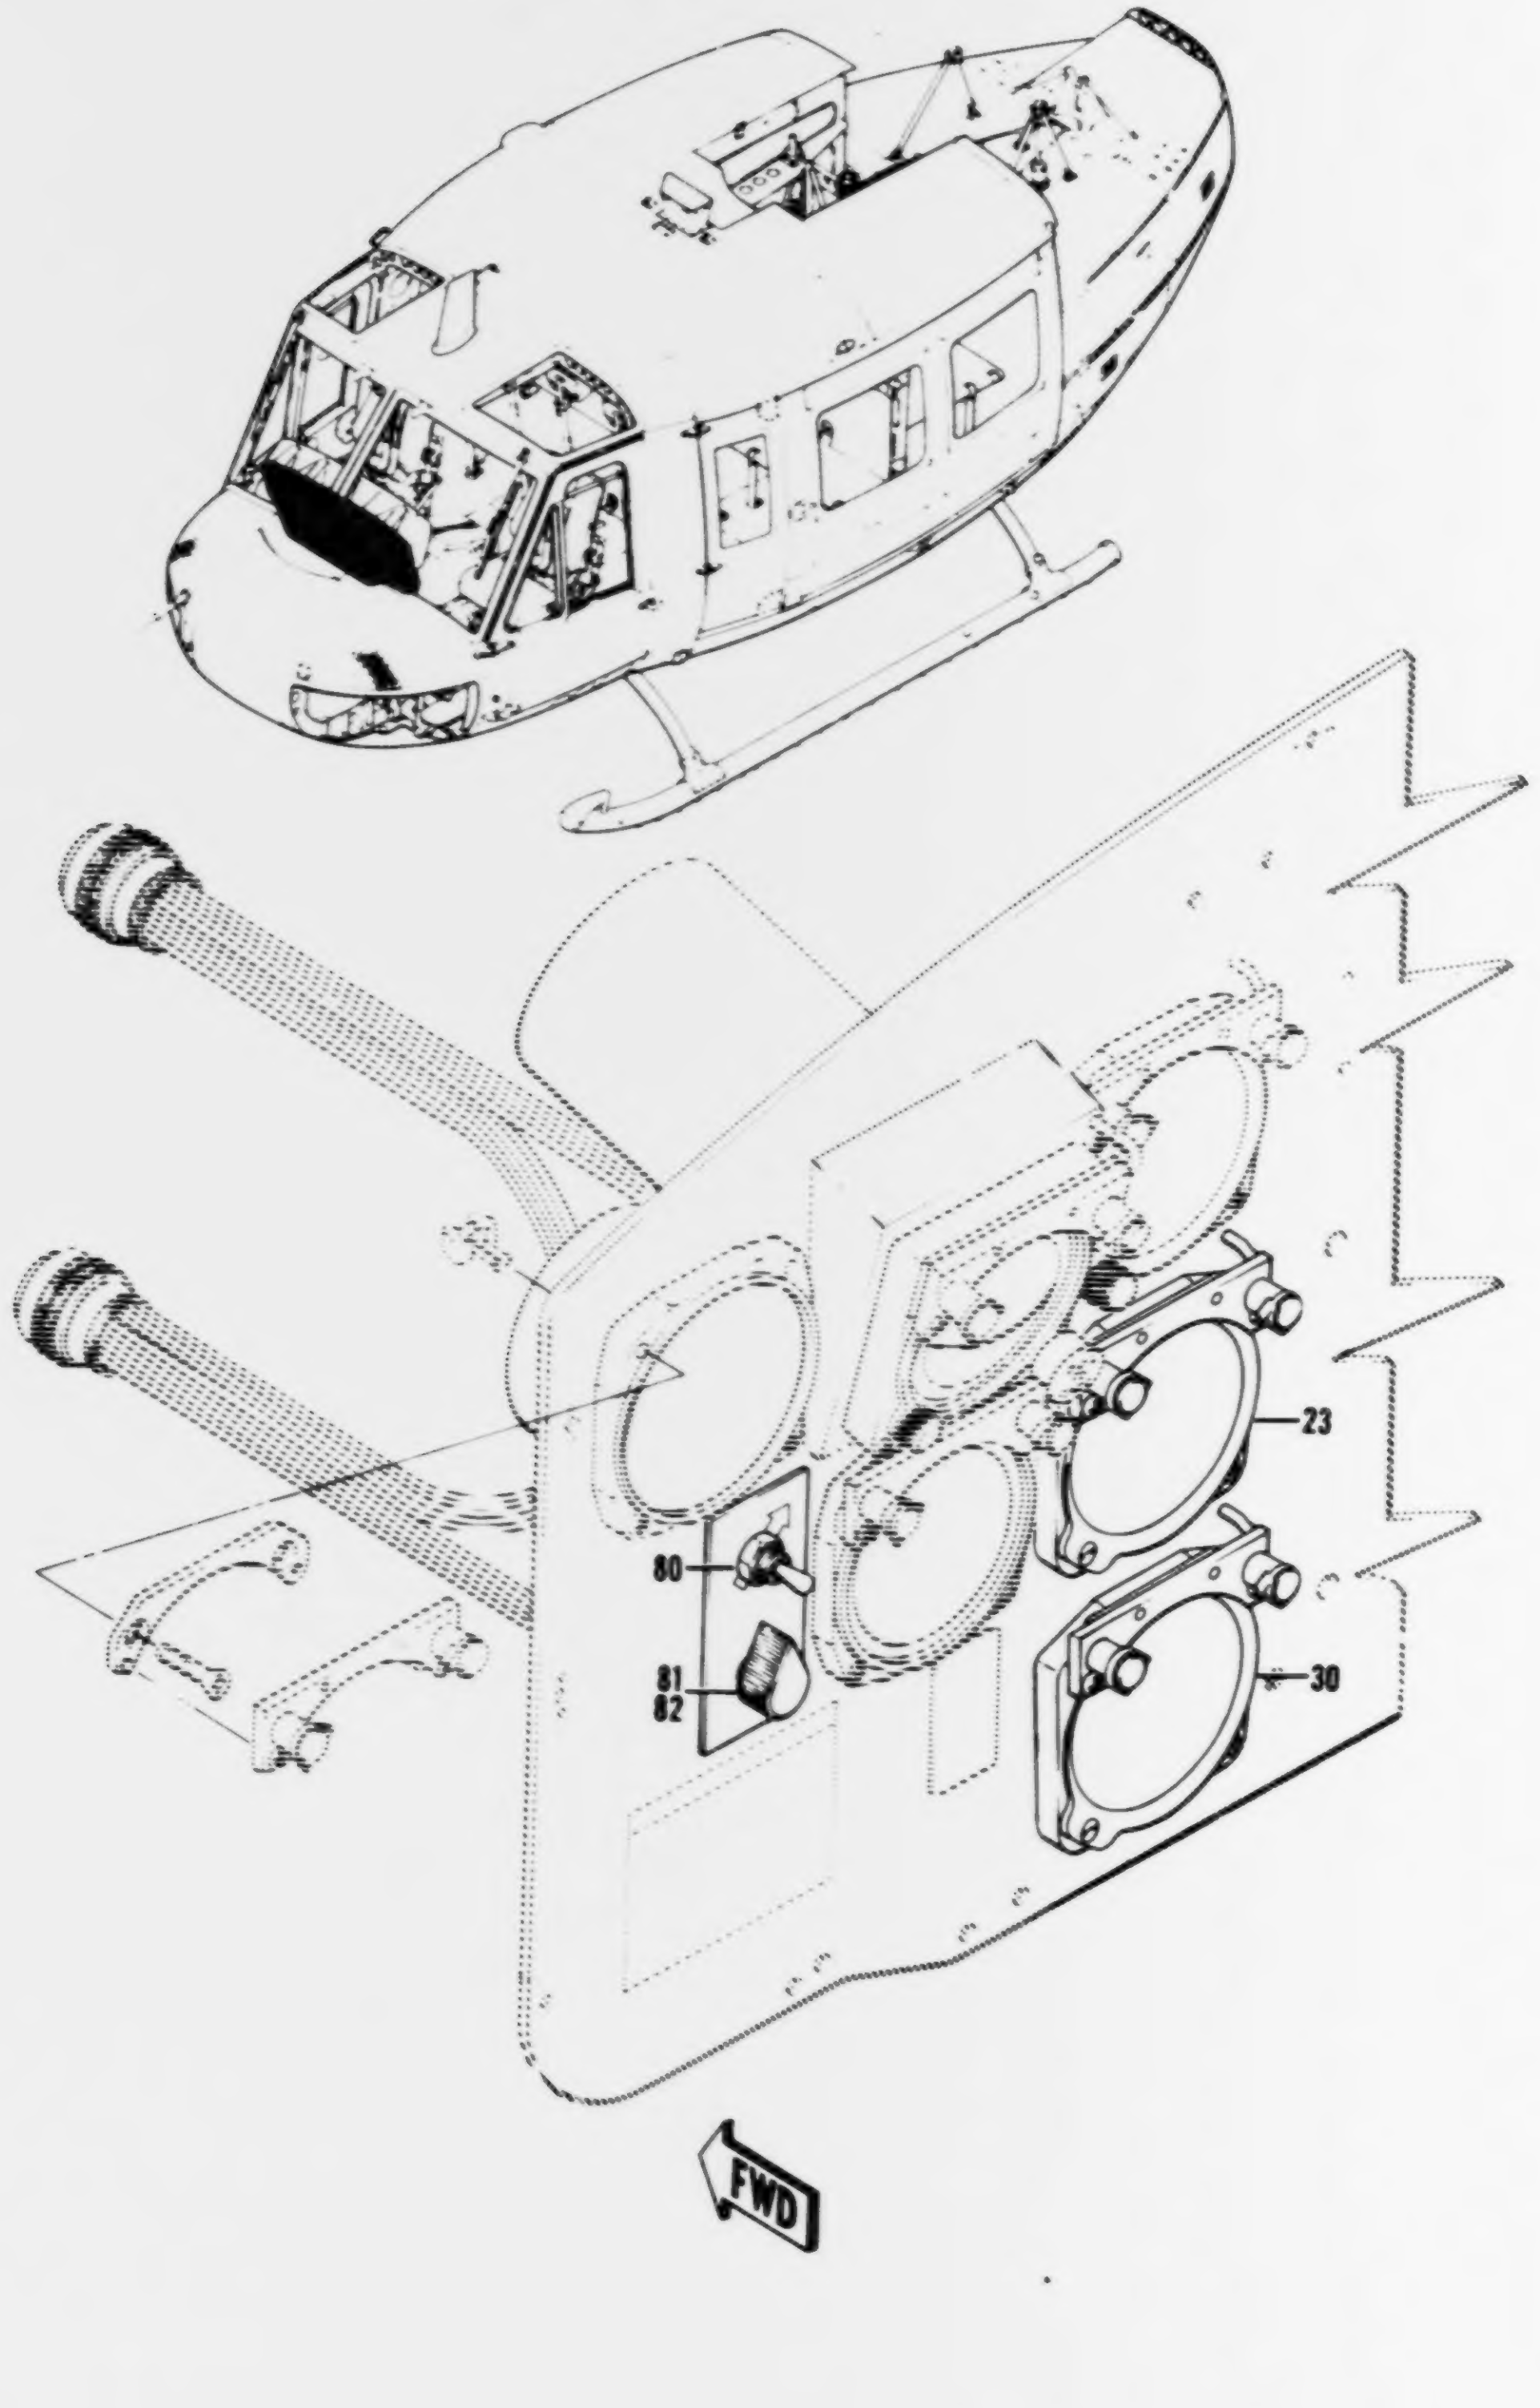
23
80
81
82
30
FWD

Figure 216. Panel Assembly, Instrument, Left Hand Section (Sheet 2 of 3)

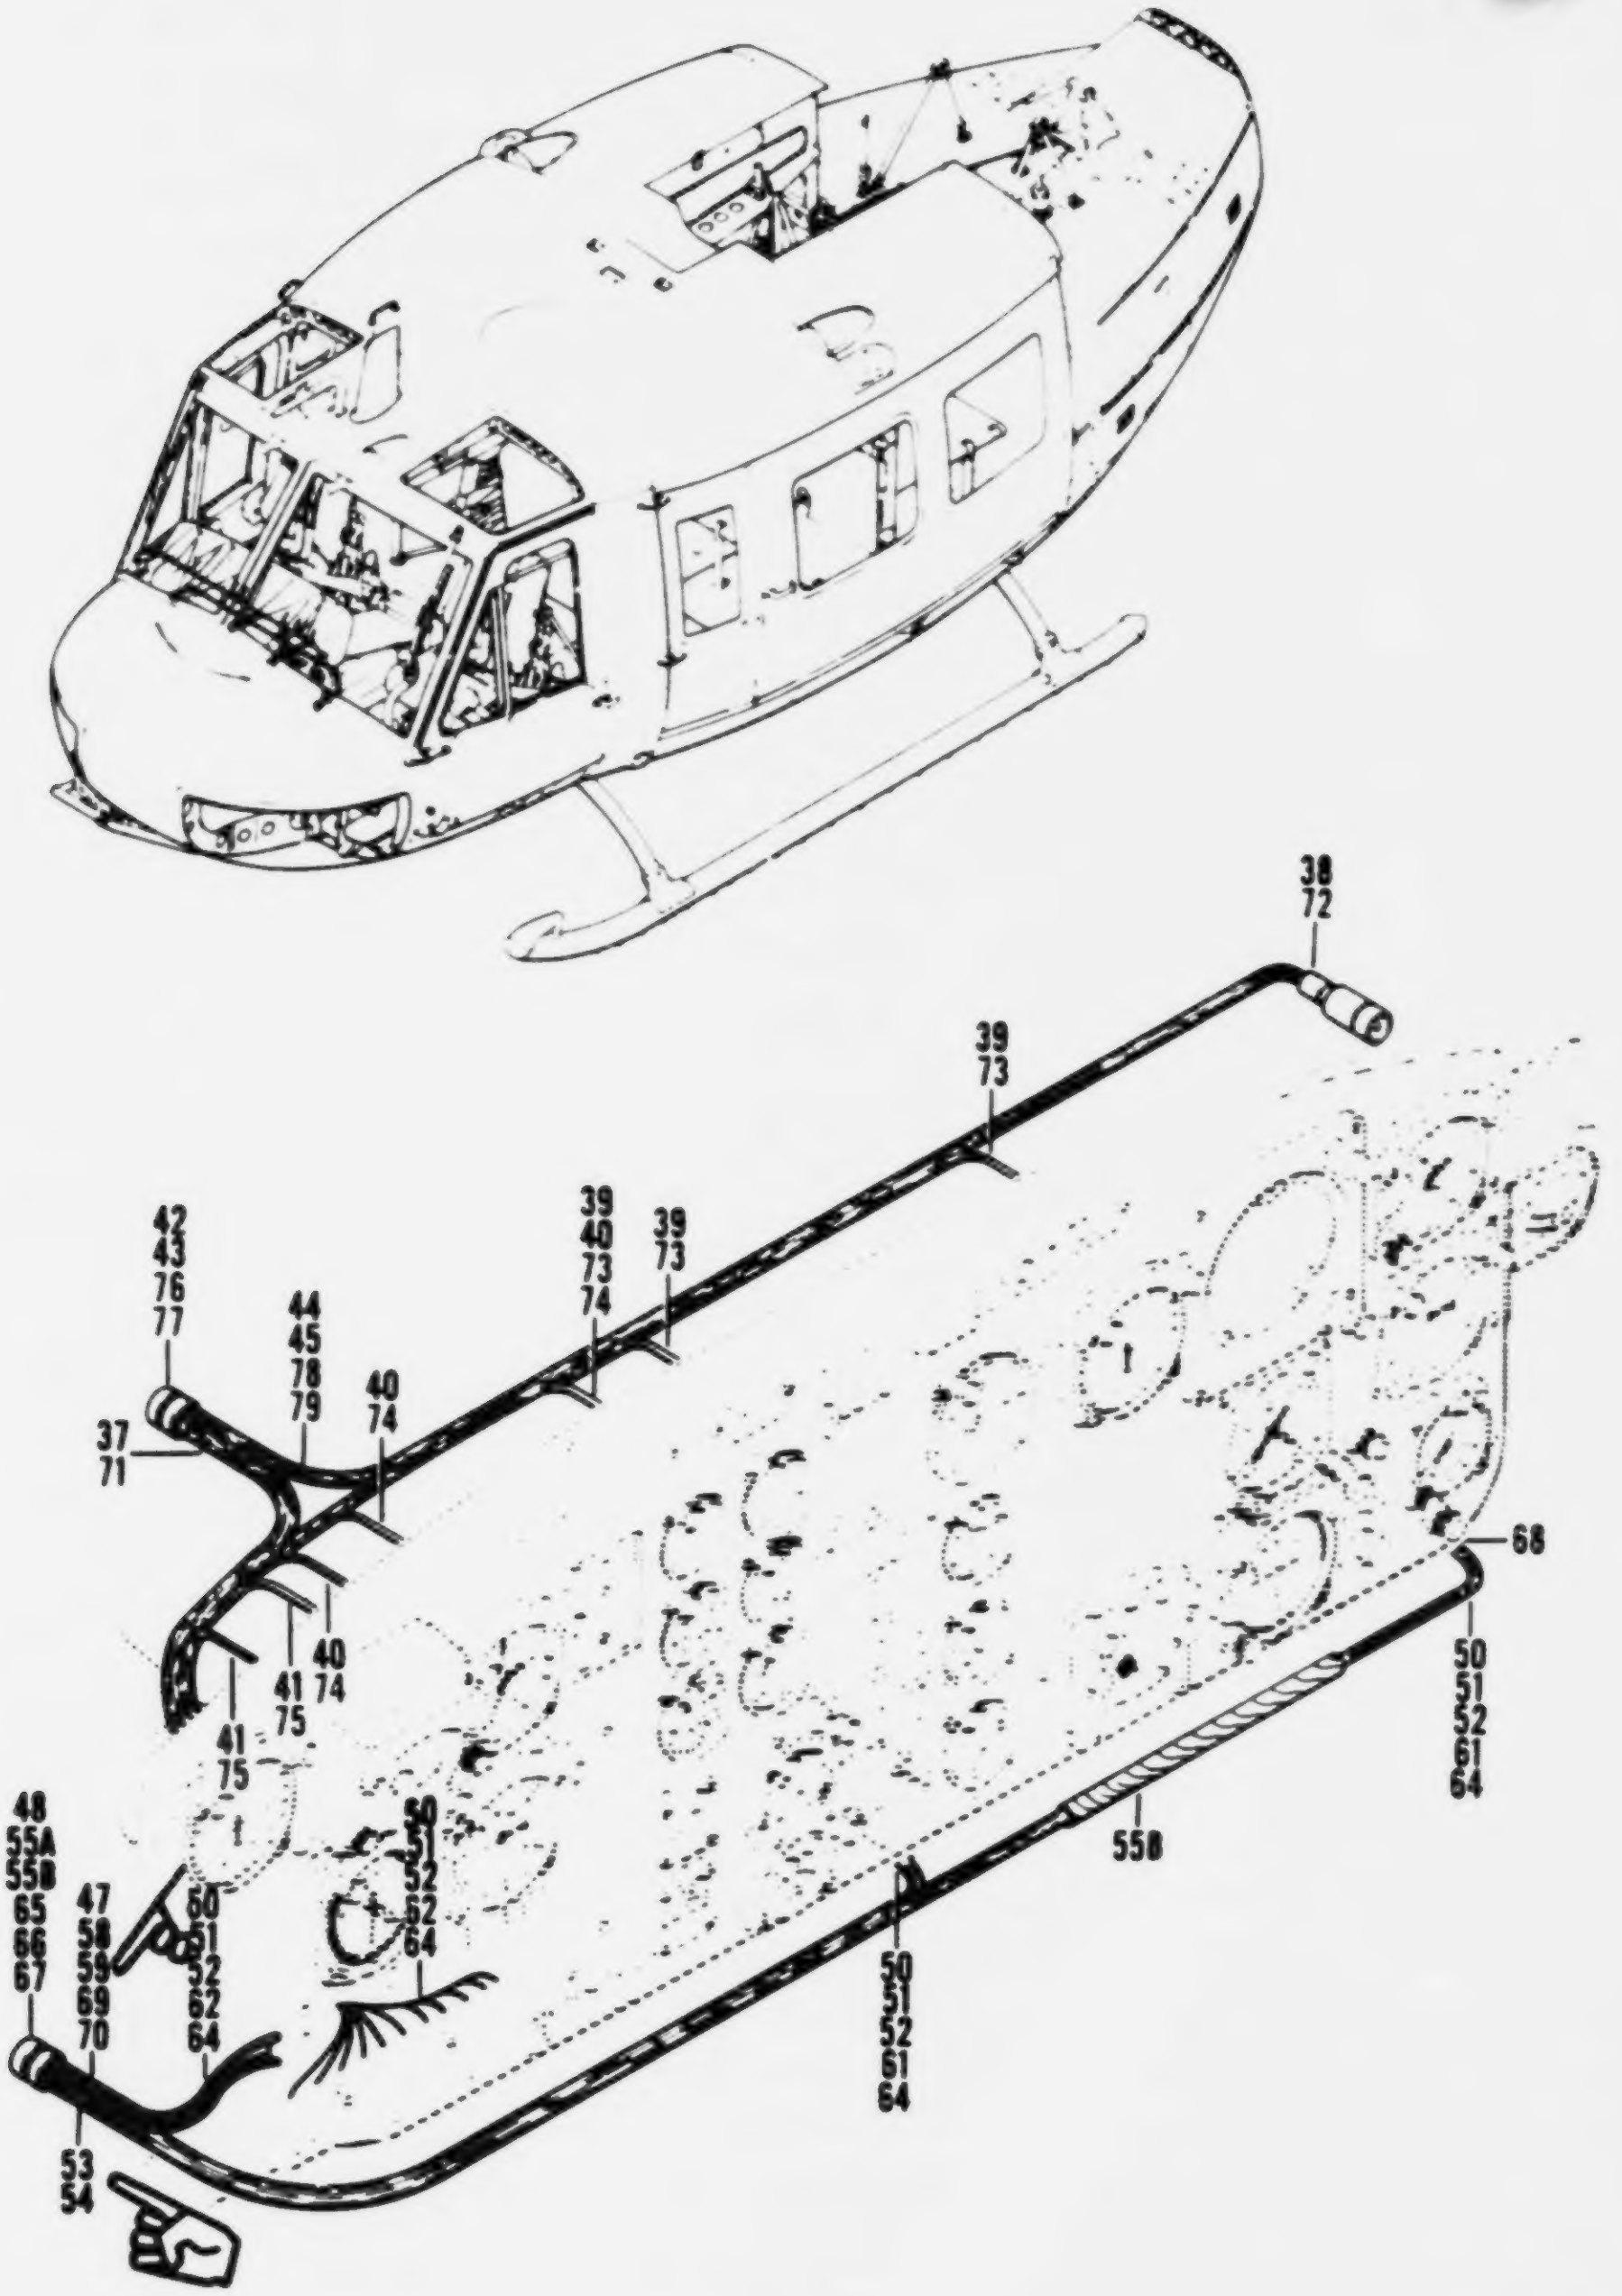
38
72
39
73
39
40
73
74
39
73
42
43
76
77
44
45
78
79
40
74
37
71
68
40
74
41
75
41
75
50
51
52
61
64
48
55A
55B
65
66
67
47
58
59
69
70
50
51
52
62
64
50
51
52
62
64
55B
50
51
52
61
64
53
54

Figure 216. Panel Assembly, Instrument, Left Hand Section (Sheet 3 of 3)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 06 INSTRUMENT SYSTEMS		
216		XCFZZ		97499	204-070-161-29	PANEL ASSY,INSTR USSL EFF 64-14101 THRU 64-14191 SEE FIG. 212 FOR NHA..........UHM	EA	1
216		XCFZZ		97499	204-070-161-31	PANEL ASSY,INSTR USBL EFF 65-9416 THRU 65-12772 SEE FIG.212 FOR NHA..........UHM	EA	1
216		XCFZZ		97499	204-070-161-35	PANEL ASSY,INSTR USBL EFF 66-492 THRU 66-601 SEE FIG.212 FOR NHA..........UHM	EA	1
216		XCFZZ		97499	204-072-026-1	PANEL ASSY,INSTR USBL EFF 66-602 & SUBSEQUENT SEE FIG.212 FOR NHA..........UHM	EA	1
216		XCFZZ		97499	205-070-120-3	PANEL ASSY,INSTR USBL EFF 62-2106 THRU 62-12372 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-120-5	PANEL ASSY,INSTR USBL EFF 63-8739 THRU 63-8859 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-120-9	PANEL ASSY,INSTR USBL EFF 63-12956 THRU 63-13002 SEE FIG. 212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-120-7	PANEL ASSY,INSTR USBL EFF 64-13492 THRU 64-13901 SEE FIG. 212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-120-13	PANEL ASSY,INSTR USBL EFF 65-9811 THRU 65-10135 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-120-11	PANEL ASSY,INSTR USBL EFF 65-9566 THRU 65-12895 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-949-1	PANEL ASSY,INSTR USBL EFF 66-746 THRU 66-16867 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-949-5	PANEL ASSY,INSTR USBL EFF 66-16868 THRU 67-17777 SEE FIG. 212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-949-9	PANEL ASSY,INSTR USBL EFF 67-17778 THRU 68-16625 SEE FIG. 212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		97499	205-070-949-17	PANEL ASSY,INSTR USBL EFF 69-15000 & SUBSEQUENT SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
216		XCFZZ		20309	ES-J-220357	PANEL ASSEMBLY..........UHE	EA	1
216		XCFZZ		20309	ES-4-221282	PANEL,INSTR.ASSY. SEE FIG.58 FOR NHA..........UHX	EA	REF
216	1	PAOZZ	5305-00-053-1089	96906	MS35199-61	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	1
216	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	1
216	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	1
216	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.....UHE,UHH,UHM,UHV,UHX	EA	1
216	4	MFOZZ	5940-00-411-7734	96906	MS18029-1S2	.COVER,TERMINAL BOARD..........UHE,UHH,UHM,UHV,UHX	EA	1
216	5	MFOZZ	DELETED	96906	MS18029-1S11	.COVER,TERMINAL BOARD U/O PN 204-070-161-31..........UHM	EA	1
216	6	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	2
216	7	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	2
216	8	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	2
216	9	PAOZZ	5305-00-053-1089	96906	MS35199-61	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	3
216	10	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE..........UHE,UHH,UHM,UHV,UHX	EA	2
216	11	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD..........UHE,UHH,UHM,UHV,UHX	EA	1
216	12	PAOZZ	5305-00-059-8255	96906	MS35214-31	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
216	13	PAOZZ	5305-00-957-7808	96906	MS24693BB33	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
216	14	PAOZZ	5310-00-208-4736	80205	NAS487-15	.NUT,SHEET SPRING U/O PN 205-070-120-3,-5,-7,-9,-11 & -13 AND 204-070-161-29 & -31..........UHE,UHH,UHM,UHV	EA	V
216	15	PAOZZ	5310-00-208-3464	80205	NAS487-14	.NUT,SHEET SPRING U/O PN 205-070-949-1 & -5 AND 204-072-026-1..........UHE,UHH,UHM,UHV	EA	V
216	16	PAOZZ	6610-00-526-4397	96906	MS28045T2	.INDICATOR,INDICATED SPEED..........UHE,UHH,UHM,UHV,UHX	EA	1
216	17	PBOZZ	5305-00-059-8255	96906	MS35214-30	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
216	18	PAODD	6610-00-731-7969	96906	MS17313-1	INDICATOR,ATTITUDE........UHE,UHH,UHM,UHV,UHX	EA	1
216	19	PAOZZ	5305-00-899-1941	96906	MS24693BB32	.SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	2
216	20	PAOZZ	5310-00-208-3467	80205	NAS487-13	.NUT,SHEET SPRING........UHE,UHH,UHM,UHV,UHX	EA	4
216	21	PAOZZ	6210-00-295-1729	72914	B6611	.LIGHT,PANEL........UHE,UHH,UHM,UHV,UHX	EA	1
216	21A	PAOZZ		96906	MS35214-14	..SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	2
216	21B	PAOZZ		96906	MS35338-97	..WASHER,LOCK........UHE,UHH,UHM,UHV,UHX	EA	2
216	22	PAOZZ	5305-00-438-8682	96906	MS35206-328	.SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	1
216	22A	PAOZZ	4730-00-412-4620	81996	1560EG151-1	.ADAPTER,STRAIGHT,PI PIPE TO BOSS........UHE,UHH,UHM,UHV,UHX	EA	1
216	23	PAODD	6610-00-115-2405	07878	TYPEAAU32A	.ALTIMETER,ENCODER USE-AFT-CMPL-W MWO 55-1500-219-30-4 -219-30-4........UHE,UHH,UHM,UHV	EA	1
216	23	PAODD	6610-00-134-5625	89944	AAU32A	ALTIMETER,ENCODER........UHE,UHH,UHM,UHV	EA	REF
216	23	PAODC	6610-01-055-0468	99251	3252011-0101	ALTIMETER,ENCODER........UHH,UHM,UHV	EA	REF
216	23A	PAOZZ	5365-01-055-5398	81996	1560-UH1-740-2	SPACER PILOTS........UHH,UHM,UHV	EA	1
216	24	PAOZZ	5305-00-059-8465	96906	MS24693BB36	.SCREW,MACHINE U/O PN 204-070-161-29 & -31 U/O PN 205-070-120-3, -5 7,-9,-11,& -13........UHE,UHH,UHM,UHV	EA	2
216	25	PAOZZ	5305-00-948-4162	96906	MS24693BB34	.SCREW,MACHINE U/O PN 204-072-026-1 AND U/O PN 205-070-949-1, -5, -9 & -17........UHE,UHH,UHM,UHV	EA	2
216	26	PAOZZ	6210-00-548-0370	72914	B6618	.LIGHT,PANEL........UHE,UHH,UHM,UHV	EA	4
216	26A	PAOZZ	5305-00-207-7465	96906	MS35214-14	..SCREW,MACHINE........UHE,UHH,UHM,UHV	EA	2
216	26B	PAOZZ	5310-00-184-8996	96906	MS35338-97	..WASHER,LOCK........UHE,UHH,UHM,UHV	EA	2
216	26C	PAOZZ	680-01-230-0520	81996	EGD-0928-1	..BULB,CAP,NVG........UHE,UHH,UHV,UHX	EA	12
216	27	PAOZZ	5305-00-059-8256	96906	MS35214-31	.SCREW,MACHINE........UHM	EA	2
216	28	PAOZZ	5305-00-957-7808	96906	MS24693BB33	.SCREW,MACHINE........UHM	EA	2
216	29	PDOCD	5826-00-505-3094	96906	MS28027-1	.INDICATOR,COURSE........UHE,UHH,UHM,UHV	EA	1
216	30	PAOZZ	6610-00-952-8832	96906	MS25454-3	.INDICATOR,VERTICAL VELOCITY RPLS--PN SLZ9084 NSN 6610-00-893-0893........UHE,UHH,UHM,UHV,UHX	EA	1
216	30	PAOZZ	6610-01-125-0726	96906	MS25454-5	.INDICATOR,VERTICAL........UHE,UHH,UHM,UHV,UHX	EA	1
216	30	PAOZZ	6610-00-012-4624	98810	RC30V	.INDICATOR,VERTICAL VELOCITY SEE TM55-6610-228-40 FOR BREAKDOWN........UHE,UHH,UHM,UHV,UHX	EA	1
216	30	PAOZZ	6610-00-903-0714	10639	SLZ9125A	.INDICATOR,VERTICAL VELOCITY SEE TM55-6610-228-40 FOR BREAKDOWN........UHE,UHH,UHM,UHV,UHX	EA	1
216	32	PAOZZ	5305-00-957-7811	96906	MS24693S272	.SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	2
216	33	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHM,UHV,UHX	EA	2
216	34	XBOZZ	5905-00-860-3372	96906	MS75009-35	.BRACKET ASSEMBLY........UHE,UHH,UHM,UHV,UHX	EA	1
216	35	PAOZZ	5905-00-892-0558	81349	RX35V240	.RESISTOR,ADJUSTABLE........UHE,UHH,UHM,UHV,UHX	EA	1
216	36	PAOZZ	5905-00-108-6922	81349	RCR20G151JS	.RESISTOR,FIXED,COMP USE-AFT-CMPL-W MWO 55-1520-220-30/1 ....UHM	EA	1
216	37	A0000	1560-00-074-1982	97499	205-075-414-3	.CABLE ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
216	38	PBOZZ	5935-00-296-8004	88044	AN-3116-2	..CONNECTOR,PLUG,ELEC........UHE,UHH,UHV,UHX	EA	1
216	39	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	13
216	40	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	12
216	41	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	4
216	42	PAOZZ	5935-00-836-1417	96906	MS3116E16-26P	..CONNECTOR,PLUG,ELEC........UHE,UHH,UHV,UHX	EA	1
216	43	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS MOISTURE SEAL........UHE,UHH,UHV,UHX	EA	6
216	44	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING........UHE,UHH,UHV,UHX	EA	11
216	45	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........UHE,UHH,UHV,UHX	FT	1
216	46	A0000	1560-00-898-0090	97499	204-075-458-7	.CABLE ASSEMBLY COMMUNICATION U/O PN 205-070-120-3,-6,-7,-9,	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						-11, -13 & PN 205-070-949-1 & -5.................UHE,UHH,UHV		
216	47	A0000	1560-00-774-8642	97499	204-075-458-9	WIRING HARNESS,PANE COMMUNICATION U/O PN 205-070-949-9,-17 ES-J-221282..................................UHE,UHH,UHV,UHX	EA	1
216	48	PAOZZ	5935-00-782-1947	96906	MS3126E14-19PW	..CONNECTOR,PLUG E............................UHE,UHH,UHV,UHX	EA	1
216	49	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-458-7..............UHE,UHH,UHV	EA	4
216	50	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-458-9..........UHE,UHH,UHV,UHX	EA	8
216	51	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-458-7..............UHE,UHH,UHV	EA	3
216	52	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-458-9..........UHE,UHH,UHV,UHX	EA	5
216	53	MOOZZ	DELETED	97499	85T4-8-1	..TUBE INSULATION............................UHE,UHH,UHV,UHX	EA	9
216	54	PBOZZ	6145-00-553-1897	81349	MILW16878TYPEB22	..WIRE,ELECTRICAL U/O PN 204-075-458-9......UHE,UHH,UHV,UHX	FT	V
216	55	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O PN 204-075-458-7...........UHE,UHH,UHV	FT	V
216	55A	PAOZA	5999-00-812-2082	96906	MS24255-20S	.CONTACT,ELECTRICAL U/O PN ES-J-221282...................UHX	EA	5
216	55B	PAOZZ	9330-00-724-6175	99207	2001T18P01	.TUBING,PLASTIC,SPIR USE ON ES-J-221282.................UHX	EA	V
216	56	PAOZZ	5305-00-059-8256	96906	MS35214-31	.SCREW,MACHINE U/O PN 204-072-026-1 AND 205-070-949-1,-5,-9, & -17 ES-J-221282................UHE,UHH,UHM,UHV,UHX	EA	2
216	56	PBOZZ	5305-00-206-2507	96906	MS35215-56	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	2
216	56	PAOZZ	5305-00-206-2511	96906	MS35215-57	.SCREW,MACHINE...........................UHE,UHH,UHM,UHV,UHX	EA	2
216	58	A0000	5995-00-074-2010	97499	204-075-977-5	.CABLE ASSEMBLY,INST U/O PN 204-070-161-29,-31 & -35.....UHM	EA	1
216	59	A0000	6150-00-915-0035	97499	204-075-977-11	.CABLE ASSEMBLY,INST PANEL U/O PN 204-070-161-35.........UHM	EA	1
216	61	PAOZZ	5940-00-204-8966	96906	MS25035-102	..TERMINAL,LUG U/O PN 204-075-977-5,& -11................UHM	EA	4
216	62	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-977-11.....................UHM	EA	2
216	64	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-977-5,& -11................UHM	EA	4
216	65	XBOZZ	5935-00-823-5322	96906	MS25251-16	..PLUG,END SEAL,ELECT U/O PN 204-075-977-5,& -11.........UHM	EA	1
216	66	XDOZZ	5935-00-686-9529	96906	MS24132R3	..SHIELD,ELECTRICAL U/O PN 204-075-977-5,& -11...........UHM	EA	1
216	67	PAOZZ	5935-00-782-1947	96906	MS3126E14-19PW	..CONNECTOR,PLUG E U/O PN 204-075-977-5,& -11............UHM	EA	1
216	68	PAOZZ	5935-00-845-2891	81312	MRE9SGVL	..CONNECTOR,RECEPTACL U/O PN 204-075-977-5,& -11.........UHM	EA	1
216	69	MOOZZ	DELETED	97499	85T4-8-1	..TUBE U/O PN 204-075-977-5,& -11........................UHM	EA	1
216	70	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O PN 204-075-977-5,& -11.............UHM	FT	V
216	71	A000Z	1560-00-074-1984	97499	204-075-949-5	.CABLE ASSEMBLY U/O PN 204-070-161-29,-31 & -35..........UHM	EA	1
216	72	PBOZZ	5935-00-296-8004	88044	AN-3116-2	..CONNECTOR,PLUG,ELEC....................................UHM	EA	1
216	73	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG...UHM	EA	1
216	74	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG...UHM	EA	12
216	75	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG...UHM	EA	2
216	76	PAOZZ	5935-00-165-3342	96906	MS3126E16-26P	..CONNECTOR,PLUG,ELEC....................................UHM	EA	1
216	77	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS MOISTURE SEAL......................UHM	EA	1
216	78	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING....................................UHM	EA	1
216	79	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..UHM	FT	1
216	80	PAOZZ	5355-00-556-0145	96906	MS91528-1K2B	.KNOB U/O PN ES-J-221282.................................UHX	EA	1
216	81	PAOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE U/O PN ES-J-221282........................UHX	EA	1
216	82	PAOZZ	5930-00-246-1427	81349	M3786/4-0874	.SWITCH,ROTARY U/O PN ES-J-221282........................UHX	EA	1
216	83	PAOZZ	6210-00-295-1729	72914	B6611-10	.LIGHT PANEL...UHV	EA	3

Page 901 Deleted

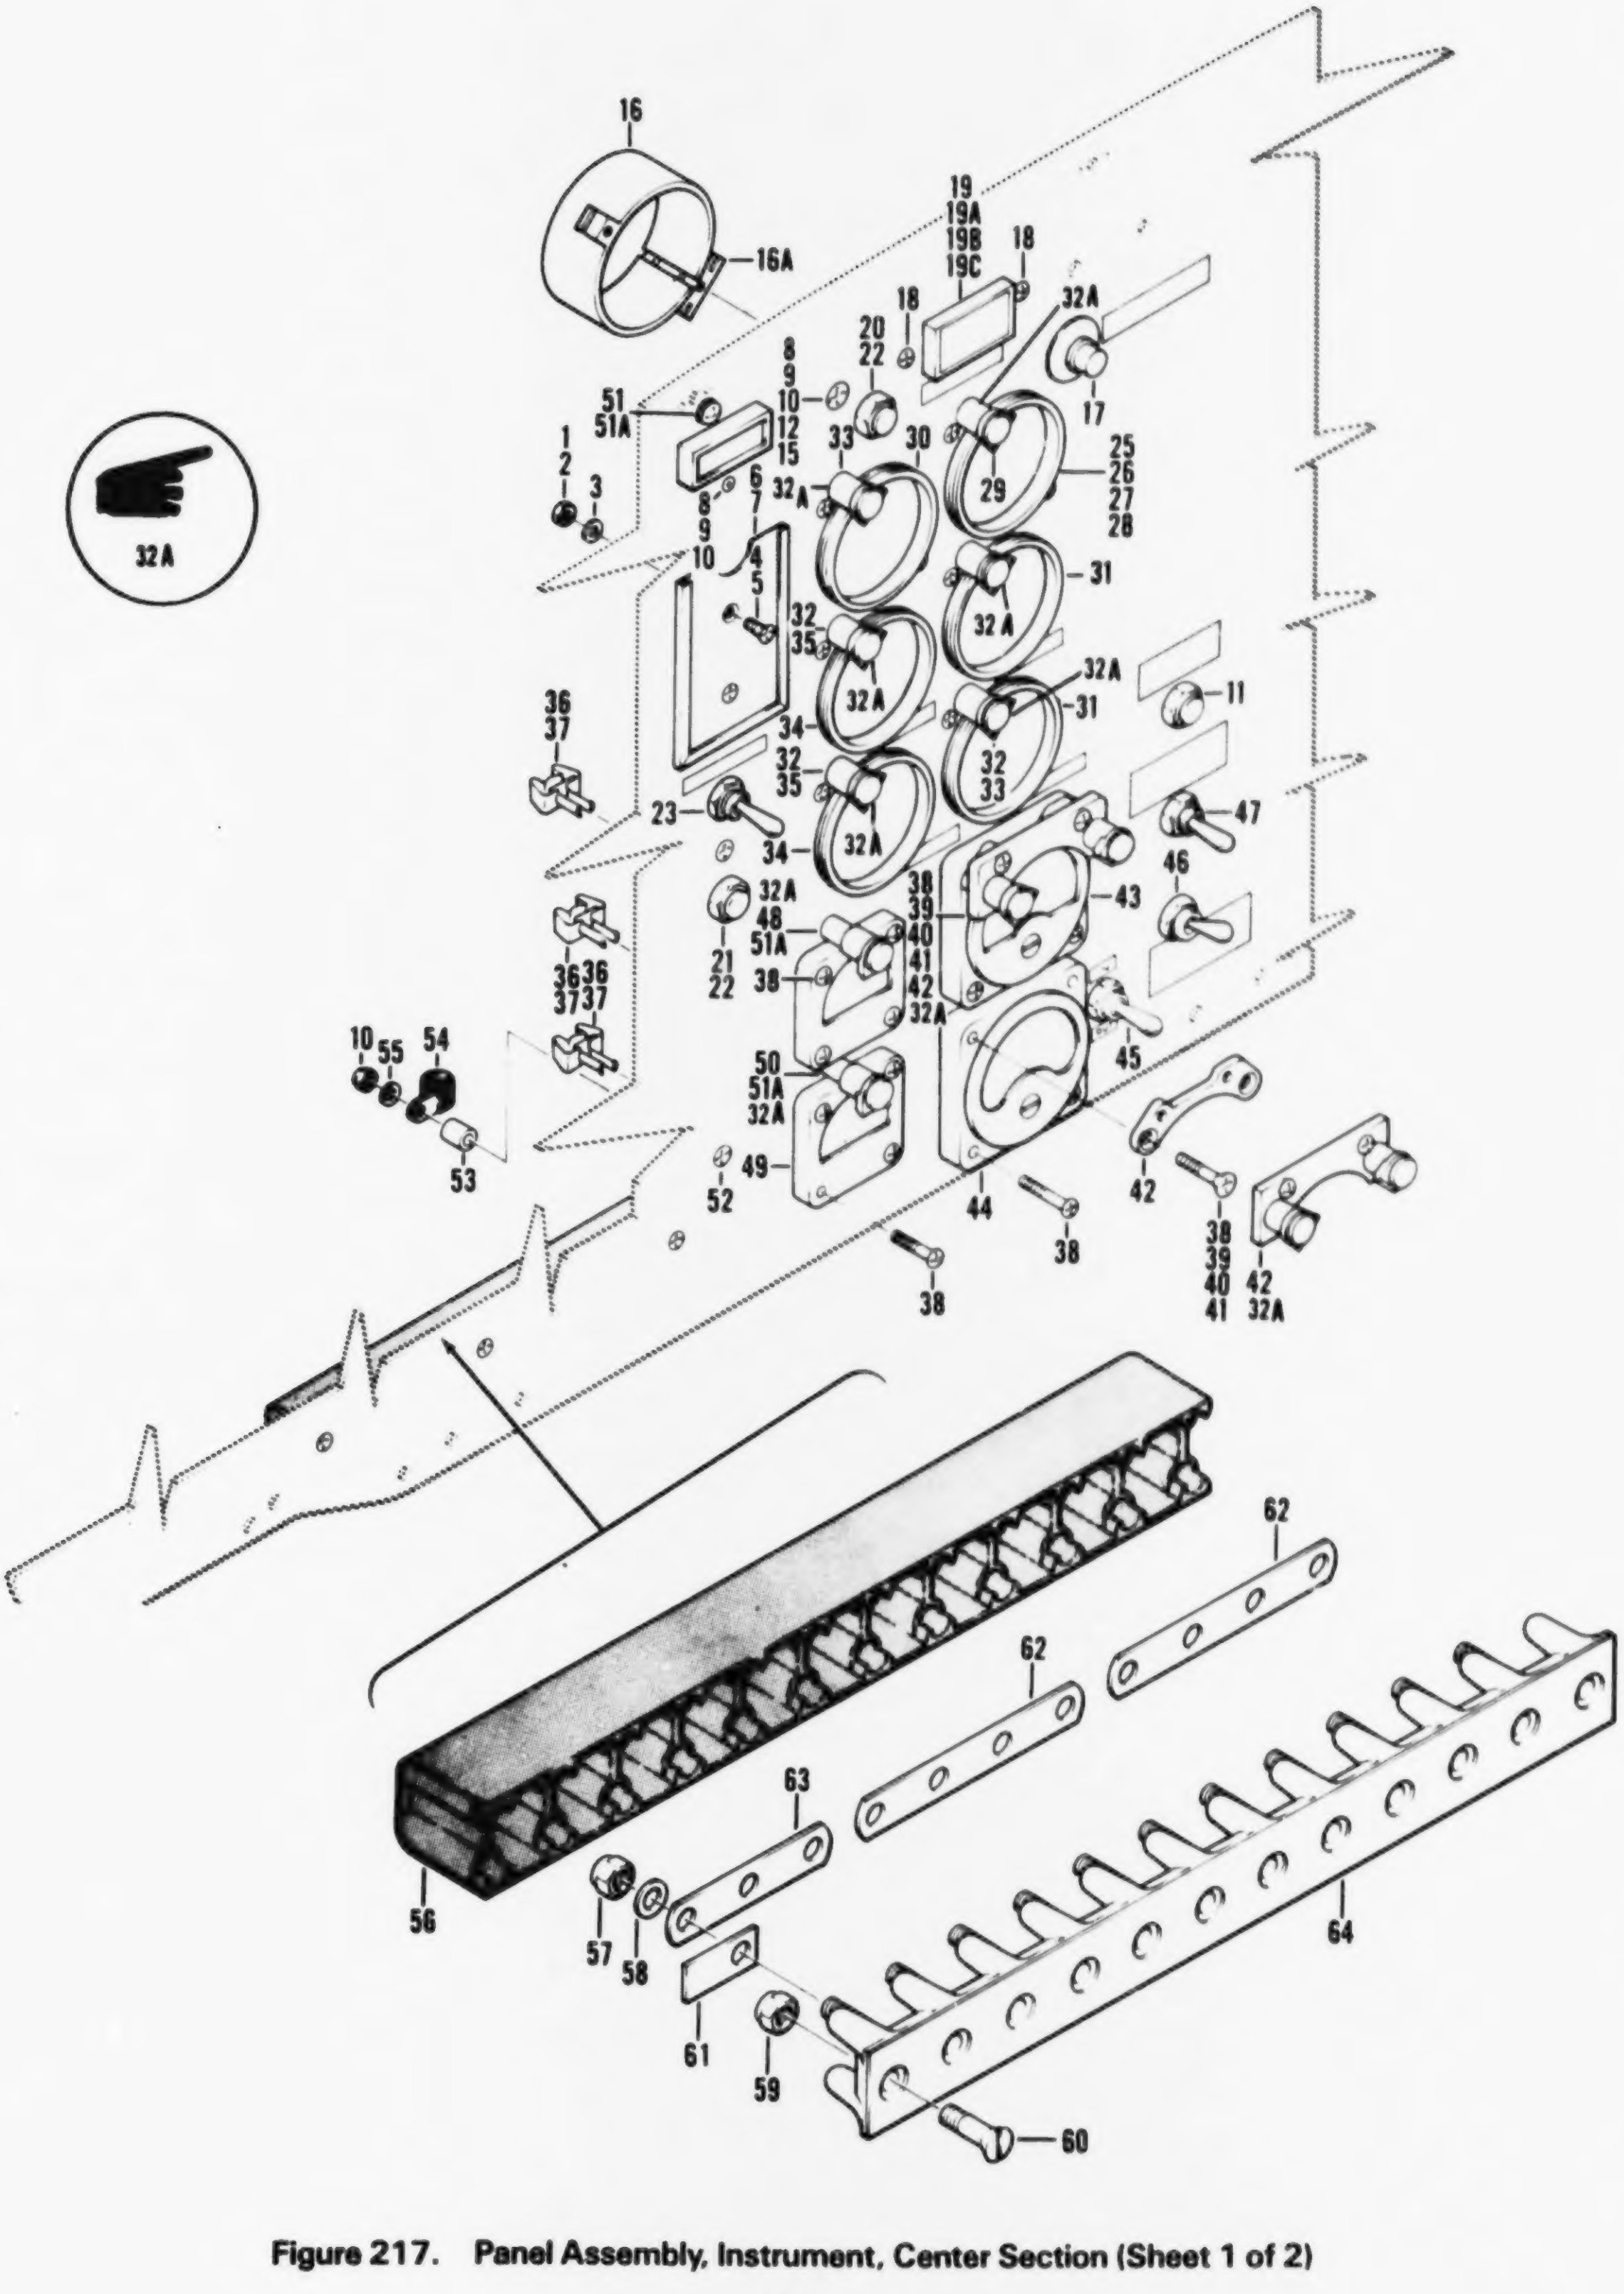
16
16A
19
19A
19B
19C
18
18
20
22
32A
17
8
9
10
12
15
51
51A
1
2
3
33
30
25
26
27
28
29
6
7
4
5
8
9
10
32A
32A
31
32
35
32A
32A
31
11
36
37
34
32
35
32A
32
33
23
34
32A
47
46
32A
48
51A
38
39
40
41
42
32A
43
21
22
38
36
37
36
37
10
55
54
45
50
51A
32A
49
52
53
44
42
38
38
38
39
40
41
42
32A
62
62
63
56
57
58
64
61
59
60

Figure 217. Panel Assembly, Instrument, Center Section (Sheet 1 of 2)

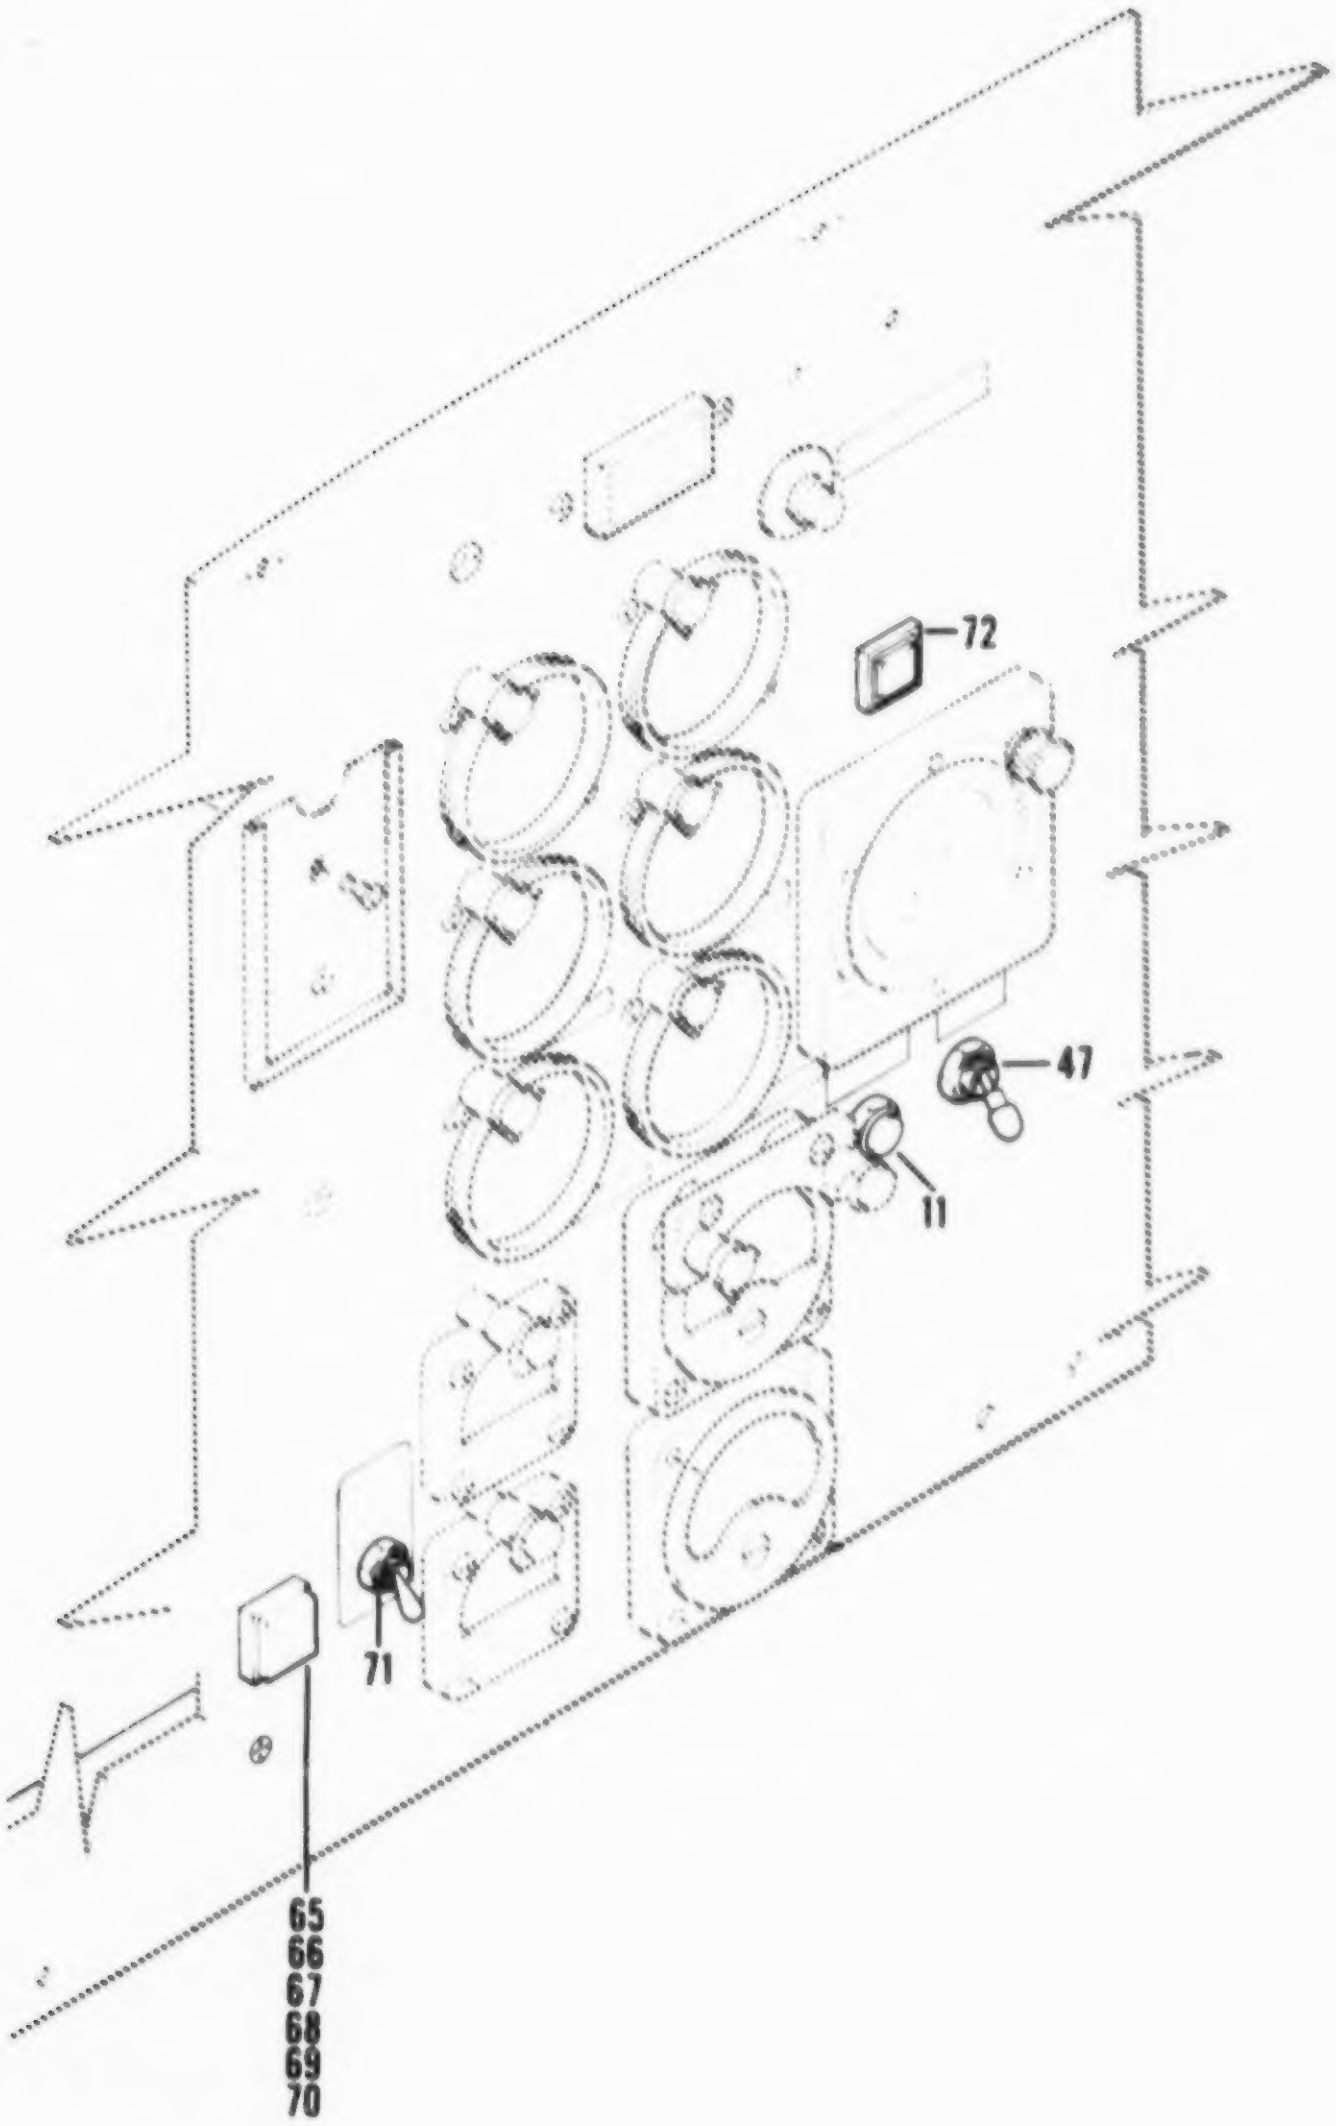
72
47
11
71
65
66
67
68
69
70

Figure 217. Panel Assembly, Instrument, Center Section (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 08 INSTRUMENT SYSTEMS		
217		XCFZZ		97499	204-070-161-29	PANEL ASSY,INSTR USBL EFF 64-14101 THRU 64-14191 SEE FIG. 212 FOR NHA........................UHM	EA	1
217		XCFZZ		97499	204-070-161-31	PANEL ASSY,INSTR USBL EFF 65-9416 THRU 65-12772 SEE FIG.212 FOR NHA........................UHM	EA	1
217		XCFZZ		97499	204-070-161-35	PANEL ASSY,INSTR USBL EFF 62-492 THRU 66-601 SEE FIG.212 FOR NHA........................UHM	EA	1
217		XCFZZ		97499	204-072-026-1	PANEL ASSY,INSTR USBL EFF 66-602 & SUBSEQUENT SEE FIG.212 FOR NHA........................UHM	EA	1
217		XCFZZ		97499	205-070-120-3	PANEL ASSY,INSTR USBL EFF 62-2106 THRU 62-12372 SEE FIG.212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-120-5	PANEL ASSY,INSTR USBL EFF 63-8739 THRU 63-8859 SEE FIG.212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-120-9	PANEL ASSY,INSTR USBL EFF 63-12956 THRU 63-13002 SEE FIG. 212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-120-7	PANEL ASSY,INSTR USBL EFF 64-13492 THRU 64-13901 SEE FIG 212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-120-13	PANEL ASSY,INSTR USBL EFF 65-9811 THRU 65-10135 SEE FIG.212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-120-11	PANEL ASSY,INSTR USBL EFF 65-9565 THRU 65-12895 SEE FIG.212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-949-1	PANEL ASSY,INSTR USBL EFF 66-746 THRU 66-16867 SEE FIG.212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-949-5	PANEL ASSY,INSTR USBL EFF 66-16868 THRU 67-17777 SEE FIG. 212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-949-9	PANEL ASSY,INSTR USBL EFF 67-17778 THRU 68-16625 SEE FIG. 212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		97499	205-070-949-17	PANEL ASSY,INSTR USBL EFF 69-15000 & SUBSEQUENT SEE FIG.212 FOR NHA........................UHE,UHH,UHV	EA	1
217		XCFZZ		20309	ES-4-221282	PANEL.INSTR.ASSY. SEE FIG.58 FOR NHA....................UHX	EA	REF
217	1	PAOZZ	5310-00-176-8127	88044	AN340-3	.NUT,PLAIN,HEXAGO U/O PN 204-070-161-29,-31,U/O PN 205-070-120-3,-5,-7,-9,-11, &-13....................UHE,UHH,UHM,UHV	EA	2
217	2	PAOZZ	5310-00-934-9738	96906	MS35649-222	.NUT,PLAIN,HEXAGON U/O PN 205-070-949-1,-5,-9,&-17,& ES-J-221282....................UHE,UHH,UHV,UHX	EA	4
217	3	PAOZZ	5310-00-261-7437	88044	AN935-3L	.WASHER,LOCK....................UHE,UHH,UHM,UHV,UHX	EA	2
217	4	XBOZZ	5305-00-753-4301	88044	AN505PB3R5	.SCREW,MACHINE U/O PN 204-070-161-29,-31,U/O PN 205-070-120-3,-5,-7,-9,-11, &-13....................UHE,UHH,UHM,UHV	EA	2
217	5	PAOZZ	5305-00-045-7943	96906	MS35198-5	.SCREW,MACHINE U/O PN 205-070-949-1,-5,-9,&-17,& ES-J-221282 ....UHE,UHH,UHV,UHX	EA	2
217	6	PAOZZ	9905-00-634-1473	82918	AC074-837	.HOLDER,CARD-LABE....................UHE,UHH,UHM,UHV,UHX	EA	1
217	7	PAOZZ	6605-00-584-4227	88044	AN5823-1	.FORM,PRINTED....................UHE,UHH,UHM,UHV,UHX	EA	1
217	8	PAOZZ	5305-00-206-2511	96906	MS35215-57	.SCREW,MACHINE U/O PN 205-070-949-1,-5, -9,& -17 ....UHE,UHH,UHV,UHX	EA	2
217	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-070-949-1,-5, -9,& -17 ....UHE,UHH,UHV,UHX	EA	4
217	10	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-070-949-1,-5,-9,& -17....................UHE,UHH,UHV,UHX	EA	3
217	11	PAOZZ	6210-00-284-0289	96906	MS25041-4	.LIGHT,INDICATOR U/O PN 205-070-949-1,-5,-9,& -17 ....UHE,UHH,UHV,UHX	EA	2
217	12	PAOZZ	5305-00-053-1089	96906	MS35199-61	.SCREW,MACHINE U/O PN 204-070-161-29,-31 & PN 205-070-120-3,-5,-7,-9,-11,& -13....................UHE,UHH,UHM,UHV	EA	1
217	15	PAOZZ	5310-00-550-0286	96906	MS35336-15	.WASHER,LOCK U/O PN 204-072-026-1 & U/O PN 205-070-949-1 ....UHE,UHH,UHM,UHV	EA	1
217	16	PAOZZ	5340-00-558-3617	96906	MS28042-1	.CLAMP,INSTRUMENT MO....................UHE,UHH,UHM,UHV,UHX	EA	1
217	16A	PAOZZ	5305-00-206-2511	96906	MS35215-57	..SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
217	17	PAOZZ	5930-00-504-6223	96906	MS25089-4C	.SWITCH,PUSH..............................UHE,UHH,UHM,UHV,UHX	EA	1
217	18	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE............................UHE,UHH,UHM,UHV,UHX	EA	2
217	19	PAOZZ	6220-00-738-8368	97499	204-075-705-3	.INDICATOR,MASTER CA......................UHE,UHH,UHM,UHV,UHX	EA	1
217	19A	PAOZZ	1680-01-129-5400	12757	82SDSCC-D-0051-1	.FILTER CAP,INSTRUME USE AFTER NIGHT VISION GOGGLES ARE INSTALLED...UHH,UHV	EA	1
217	19B	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ....UHH,UHV	EA	1
217	19C	PAOZZ	1680-01-129-5408	81996	6210-EG-002-2	.FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED...UHH,UHV	EA	1
217	20	XDOOZ	6210-00-542-6393	96906	MS25041-2	.LIGHT,INDICATOR..............................UHE,UHH,UHV,UHX	EA	2
217	21	PAOZZ	6210-00-284-0289	96906	MS25041-4	.LIGHT,INDICATOR USE-AFT-CMPL-W MWO 55-1520-220-30/1.....UHM	EA	1
217	22	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT.......................UHE,UHH,UHM,UHV,UHX	EA	2
217	23	PAOZZ	5930-00-856-1654	96906	MS24659-23G	.SWITCH,TOGGLE USE-AFT-CMPL-W MWO 55-1520-220-30/1.......UHM	EA	1
217	25	PAODD	6680-00-868-9810	89305	393004-01699	.INDICATOR,LIQUID QU SEE TM 55-6620-277-40 FOR BREAKDOWN ....UHM	EA	1
217	26	PAODD	6680-00-181-1955	97499	205-061-633-7	.INDICATOR,LIQUID QU QUANTITY SEE TM55-6620-277-40 FOR BREAKDOWN....................................UHE,UHH,UHV,UHX	EA	1
217	27	PAODD	6680-00-181-1955	89305	393004-01409	.INDICATOR,LIQUID QU QUANTITY SEE TM55-6620-277-40 FOR BREAKDOWN....................................UHE,UHH,UHV,UHX	EA	1
217	28	PAODD	6680-00-104-6704	05808	DSF419	.INDICATOR,LIQUID QUANTITY........................UHE,UHH,UHV	EA	1
217	29	PAOZZ	6210-00-548-0196	72914	A67451RY24	.LIGHT,PANEL..............................UHE,UHH,UHM,UHV,UHX	EA	3
217	30	PAOZZ	6620-00-514-5334	96906	MS28010-1	.INDICATOR,PRESSURE.......................UHE,UHH,UHM,UHV,UHX	EA	1
217	31	PAOFA	6685-00-557-0370	96906	MS28009-1	.INDICATOR,TEMPERATU TEMPERATURE,ENGINE AND TRANSMISSION OIL ....UHE,UHH,UHM,UHV,UHX	EA	2
217	32	PAOZZ	6210-00-987-1423	72914	A-6750-1-24	.LIGHT,PANEL..............................UHE,UHH,UHM,UHV,UHX	EA	6
217	32A	PAOZZ	1680-01-230-0520	81996	EGD-0928-1	..BULB,CAP,NVG...................................UHE,UHH,UHV,UHX	EA	12
217	33	PAOZZ	5365-00-594-6056	80205	NAS43DD4-6	.SPACER,SLEEVE............................UHE,UHH,UHM,UHV,UHX	EA	2
217	34	PAOZA	6620-00-179-1886	81349	MIL-I-58099	.INDICATOR,PRESSURE TRANSMISSION & ENGINE OIL ....UHE,UHH,UHM,UHV,UHX	EA	2
217	35	PAOZZ	5365-00-580-5790	80205	NAS43DD4-12	.SPACER,SLEEVE............................UHE,UHH,UHM,UHV,UHX	EA	2
217	36	PAOZZ	5310-00-208-4735	80205	NAS487-15	.NUT,SHEET SPRING U/O PN 204-070-161-29,-31, & U/O PN 205-070-120-3,-5,-7,-9, -11,&-13..................UHE,UHH,UHM,UHV	EA	8
217	37	PAOZZ	5310-00-208-3464	80205	NAS487-14	.NUT,SHEET SPRING U/O PN 205-070-949-1,&-5 ....UHE,UHH,UHM,UHV	EA	8
217	38	PAOZZ	5305-00-637-1125	96906	MS35214-29	.SCREW,MACHINE U/O PN 204-070-161-29,& U/O PN 205-070-949-1, &-5......................................UHE,UHH,UHM,UHV	EA	V
217	39	PAOZZ	5305-00-637-1125	96906	MS35214-29	.SCREW,MACHINE U/O PN 204-070-161-31,204-072-026-1,& U/O PN 205-070-120-3, -5,-7,-9,-11,&-13.............UHE,UHH,UHM,UHV	EA	8
217	40	PAOZZ	5305-00-849-7035	96906	MS24693BB31	.SCREW,MACHINE U/O PN 204-070-161-29.....................UHM	EA	4
217	41	PAOZZ	5305-00-849-7035	96906	MS24693BB31	.SCREW,MACHINE U/O PN 205-070-949-1,-5,-9,&-17,& ES-J-221282 ....UHE,UHH,UHV,UHX	EA	2
217	42	XDOZZ	6210-00-557-3009	72914	B6624	.LIGHT,PANEL........................... ..UHE,UHH,UHM,UHV,UHX	EA	2
217	43	PAOZZ	6625-00-235-4782	88044	AN3203V30	.VOLTMETER-DC.............................UHE,UHH,UHM,UHV,UHX	EA	1
217	44	PAOZZ	6625-00-538-9683	96906	MS24332-1	.VOLTMETER................................UHE,UHH,UHM,UHV,UHX	EA	1
217	45	PBOZZ	5930-00-655-1514	96906	MS35058-22	.SWITCH,TOGGLE...................................UHE,UHH,UHM,UHV	EA	1
217	46	PAOZZ	5930-00-655-1518	96906	MS35058-27	.SWITCH,TOGGLE U/O PN 204-070-161-29,-31,&-35............UHM	EA	1
217	47	PBOZZ	5930-00-057-4760	96906	MS24659-23F	.SWITCH,TOGGLE U/O PN 205-070-949-9,&-17,& ES-J-221282 ....UHE,UHH,UHV,UHX	EA	1
217	48	PAOZZ	6210-00-226-9259	72914	A-6815-24	.LIGHT,PANEL..............................UHE,UHH,UHM,UHV,UHX	EA	1
217	49	PAOZZ	6625-00-544-5899	96906	MS25025-1	.METER,SPECIAL SCALE SCALE...............UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
217	50	PAOZZ	6210-00-557-3009	72914	B6624	LIGHT,PANEL	UHE,UHH,UHM,UHV,UHX	EA	1
217	51	PAOOO	6210-00-284-0289	96906	MS25041-4	.LIGHT,INDICATOR	UHE,UHH,UHM,UHV,UHX	EA	1
217	51A	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT	UHE,UHH,UHM,UHV,UHX	EA	2
217	52	PAOZZ	5305-00-958-0586	96906	MS35207-273	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
217	53	PAOZZ	5365-00-727-1891	80205	NAS43DD3-128	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
217	54	PAOZZ	5340-00-989-4569	81996	EAB700D9	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
217	55	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
217	56	MFOZZ	5940-00-498-2227	96906	MS18029-1S11	.COVER,TERMINAL BOARD	UHE,UHH,UHM,UHV,UHX	EA	1
217	57	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	1
217	58	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	11
217	59	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	3
217	60	PAOZZ	5305-00-282-5958	96906	MS24693BB4	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
217	61	PAOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE	UHE,UHH,UHM,UHV,UHX	EA	2
217	62	MOOZZ	6150-00-557-7660	96906	MS25226-2-4	.BUS,CONNECTOR	UHE,UHH,UHM,UHV,UHX	EA	2
217	63	XDOZZ		96906	MS25226-2-3	.BUS,CONDUCTOR	UHE,UHH,UHM,UHV,UHX	EA	1
217	64	MOOZZ	5940-00-132-2762	96906	MS27212-1-11	.TERMINAL BOARD	UHE,UHH,UHM,UHV,UHX	EA	1
217	65	AOOOO		57958	5066079	.CABLE ASSY,CREW USE ON ES-J-221282	UHX	EA	1
217	66			08719	10648EL3-21	..SWITH,PUSH USE ON ES-J-221282	UHX	EA	1
217	67	PAOZZ	5999-00-402-2563	81349	M39029/1-16-22	..CONTACT,ELECTRICAL USE ON ES-J-221282	UHX	EA	5
217	68	PAOZZ		81349	MIL-W-1687814 22 AWG CLR9	..WIRE,ELECTRICAL USE ON ES-J-221282	UHX	EA	V
217	69	PAOZZ		81349	MIL-W-1687814 24 AWG CLR9	..WIRE,ELECTRICAL USE ON ES-J-221282	UHX	EA	V
217	70	PAOZZ	5970-01-075-5476	06090	TMS-1/4NO13-4	..INSULATION SLEEVING USE ON ES-J-221282	UHX	EA	V
217	71	PAOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE USE ON ES-J-221282	UHX	EA	1
217	72	PAOZZ	5930-01-106-0298	08719	10620AEL1-2	.SWITCH,PUSH USE ON ES-J-221282	UHX	EA	1

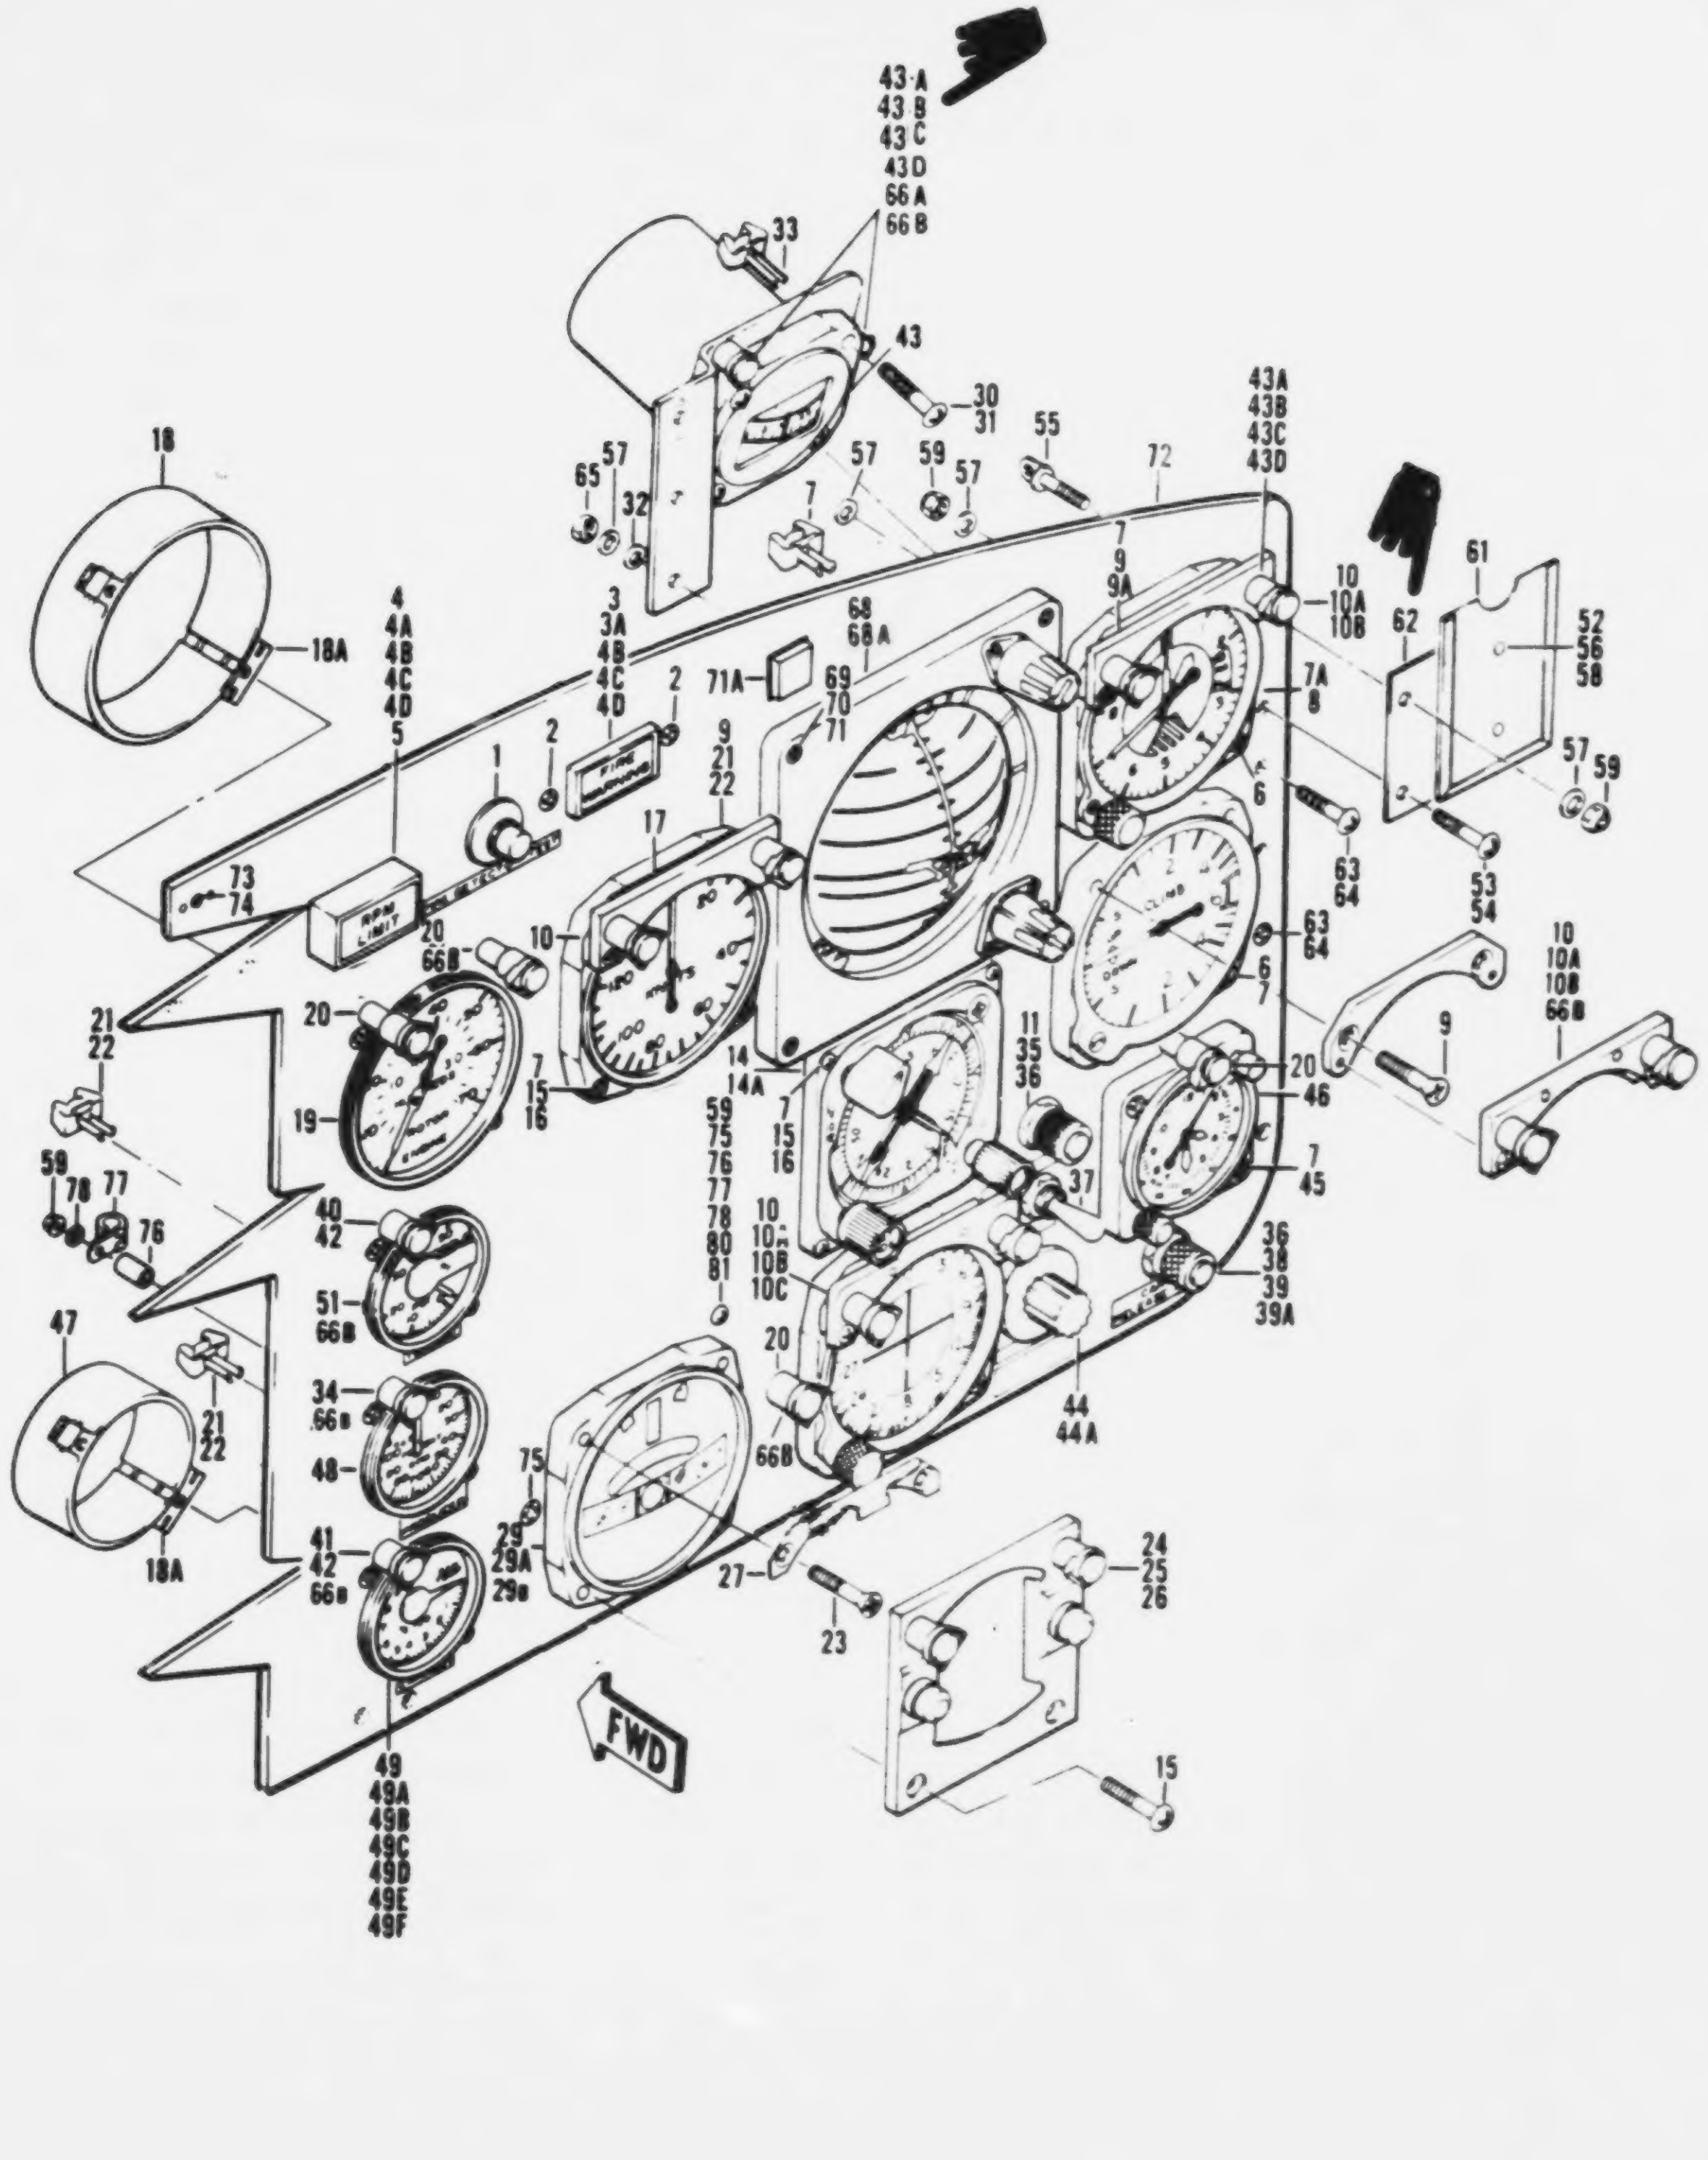
43A
43B
43C
43D
66A
66B
33
43
30
31
55
72
43A
43B
43C
43D
18
18A
65
57
32
57
59
57
7
4
4A
4B
4C
4D
5
3
3A
4B
4C
4D
2
1
2
FIRE WARNING
68
68A
71A
69
70
71
9
21
22
17
7
9
9A
10
10A
10B
61
62
52
56
58
7A
8
6
63
64
57
59
53
54
73
74
RPM LIMIT
20
66B
10
KNOTS
CLIMB
21
22
20
19
7
15
16
14
14A
7
15
16
59
75
76
77
78
80
81
11
35
36
20
46
7
45
63
64
6
7
10
10A
10B
66B
9
37
59
78
77
76
40
42
51
66B
47
21
22
34
66B
48
18A
41
42
66B
10
10A
10B
10C
20
66B
44
44A
36
38
39
39A
75
29
29A
29B
27
23
24
25
26
15
FWD
49
49A
49B
49C
49D
49E
49F

Figure 218. Panel Assembly, Instrument, Right Hand Section (Sheet 1 of 2)

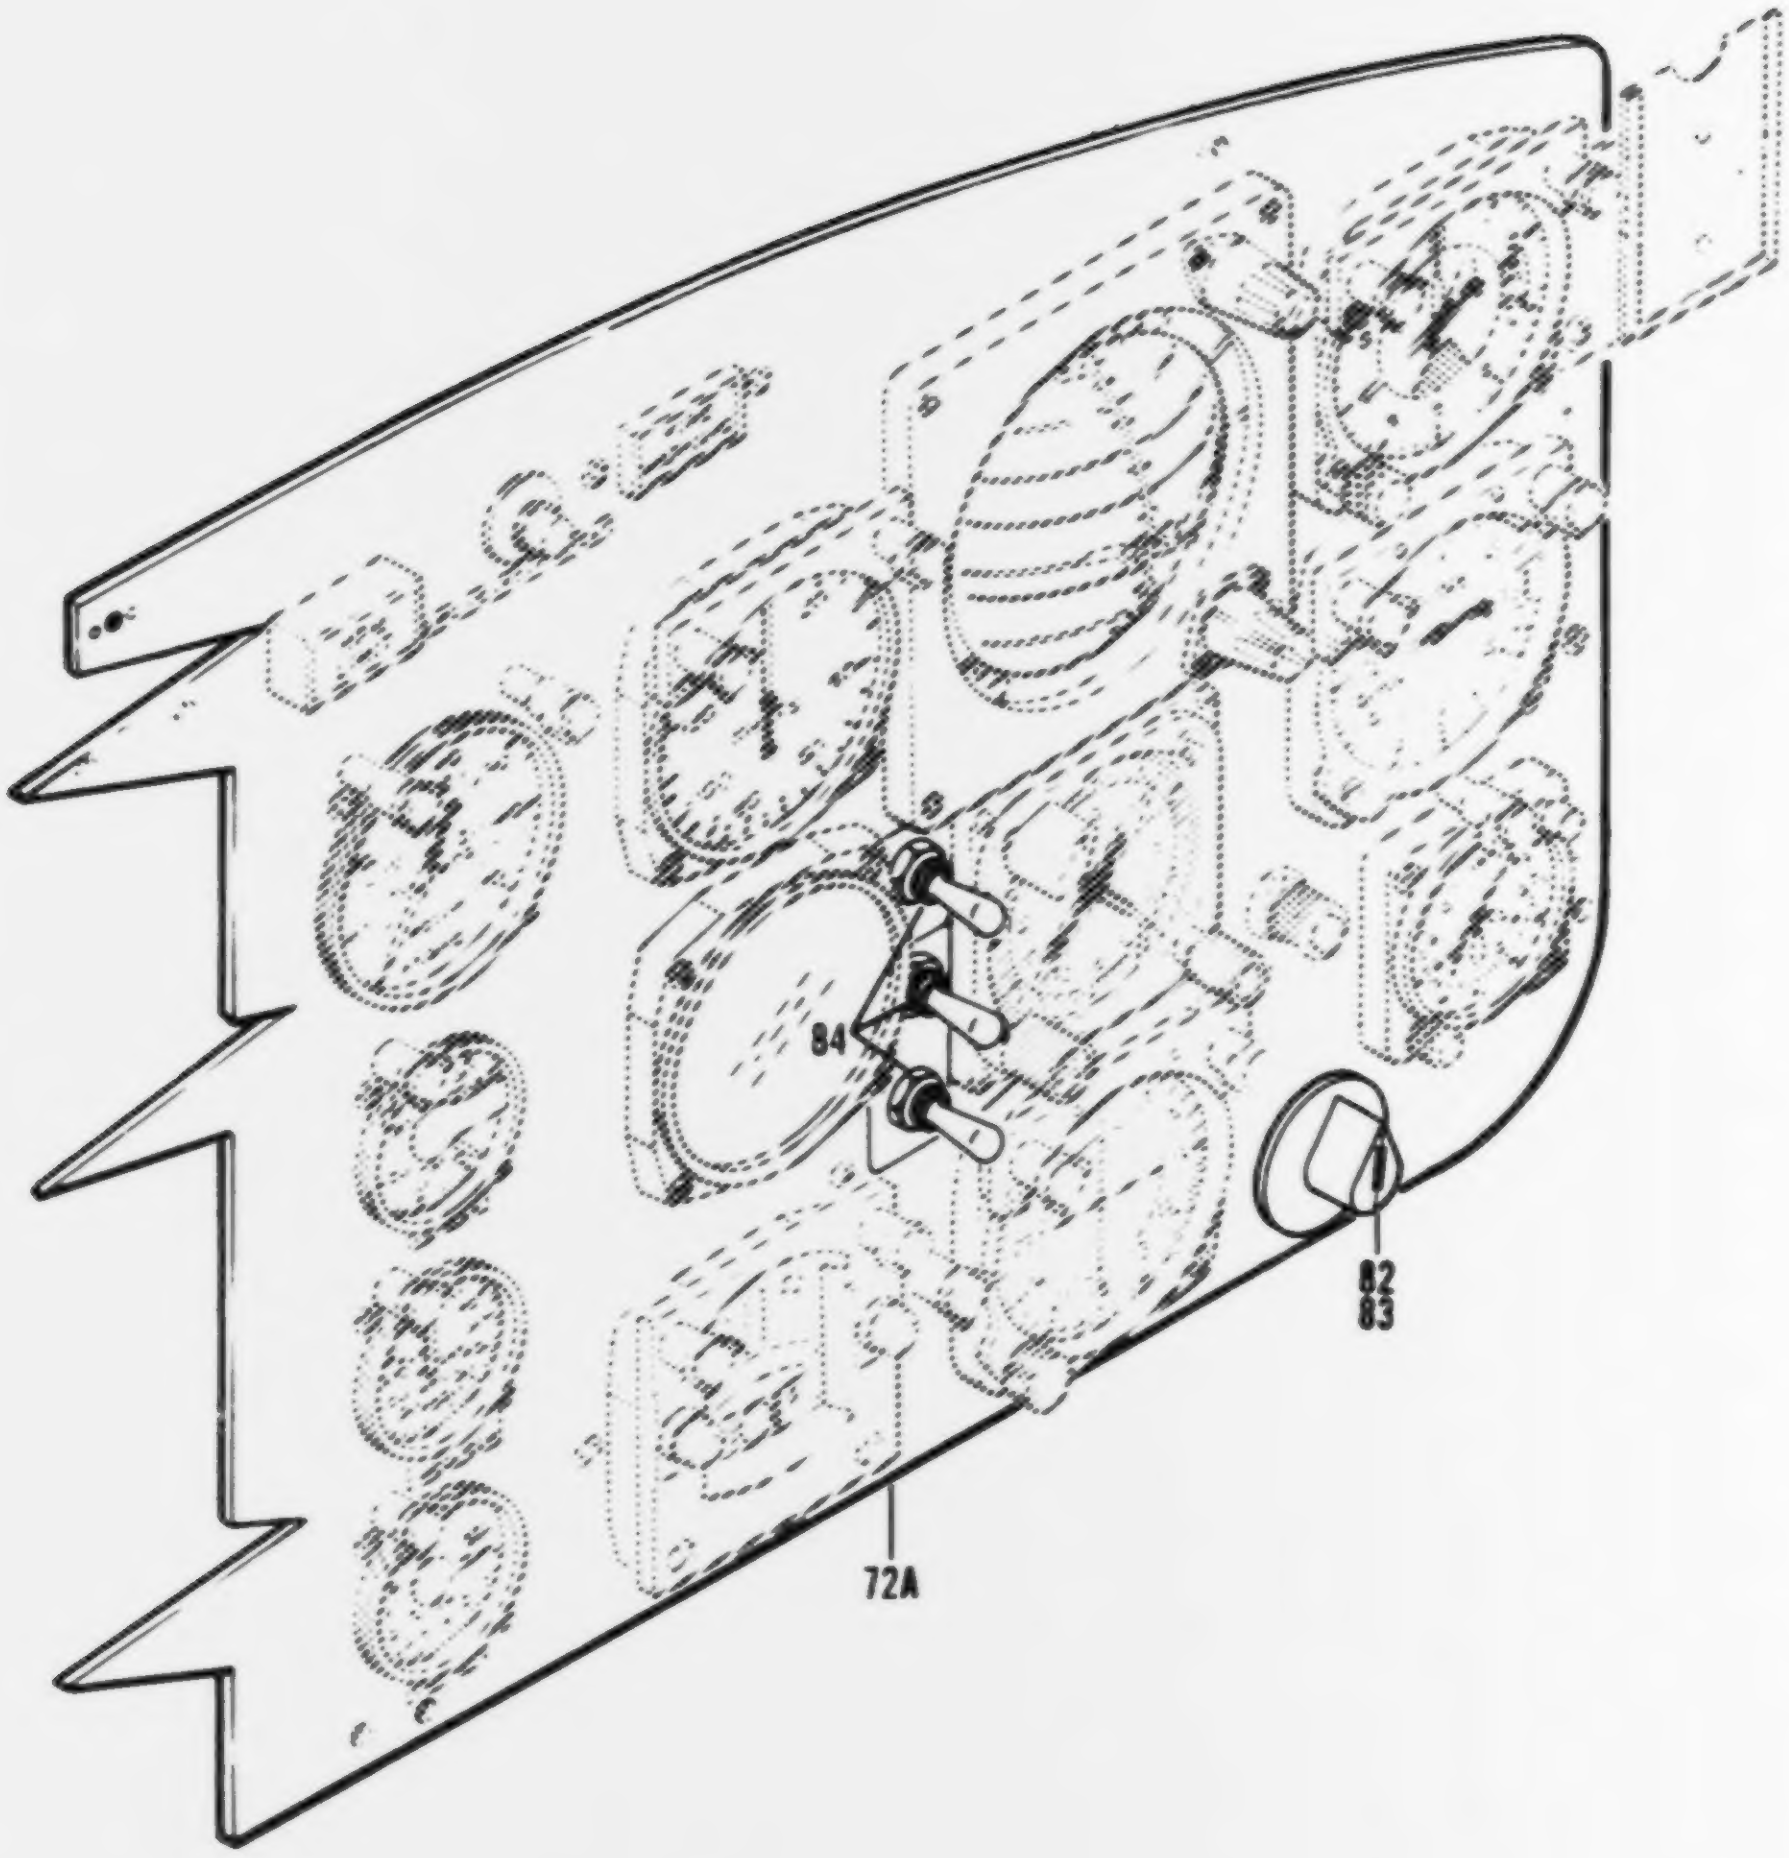

Figure 218. Panel Assembly, Instrument, Right Hand Section (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 08 INSTRUMENT SYSTEMS		
218		XCFZZ		97499	204-070-161-29	PANEL ASSEMBLY,INST USBL EFF 64-14101 THRU 64-14191 SEE FIG.212 FOR NHA..........UHM	EA	1
218		XCFZZ		97499	204-070-161-31	PANEL ASSY,INSTR USBL EFF 65-9416 THRU 65-12772 SEE FIG.212 FOR NHA..........UHM	EA	1
218		XCFZZ		97499	204-070-161-35	PANEL ASSY,INSTR USBL EFF 62-492 THRU 66-601 SEE FIG.212 FOR NHA..........UHM	EA	1
218		XCFZZ		97499	204-072-026-1	PANEL ASSY,INSTR USBL EFF 66-602 AND SUBSEQUENT SEE FIG.212 FOR NHA..........UHM	EA	1
218		XCFZZ		97499	205-070-120-3	PANEL ASSY,INSTR USBL EFF 62-2106 THRU 62-12372 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-120-5	PANEL ASSY,INSTR USBL EFF 63-8739 THRU 63-8859 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-120-9	PANEL ASSEMBLY,INST USBL EFF 63-12956 THRU 63-13002 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-120-7	PANEL ASSY,INSTR USBL EFF 64-13492 THRU 64-13901 SEE FIG. 212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-120-13	PANEL ASSY,INSTR USBL EFF 65-9811 THRU 65-10135 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-120-11	PANEL ASSY,INSTR USBL EFF 65-9565 THRU 65-12895 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-949-1	PANEL ASSY,INSTR USBL EFF 66-746 THRU 66-16867 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		37499	205-070-949-5	PANEL ASSY,INSTR USBL EFF 66-16868 THRU 67-17777 SEE FIG. 212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-949-9	PANEL ASSY,INSTR USBL EFF 67-1778 THRU 68-16625 SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		97499	205-070-949-17	PANEL ASSY,INSTR USBL EFF 69-15000 & SUBSEQUENT SEE FIG.212 FOR NHA..........UHE,UHH,UHV	EA	1
218		XCFZZ		20309	ES-4-221282	PANEL,INSTR.ASSY. SEE FIG.5B FOR NHA..........UHX	EA	1
218	1	PAOZZ	5930-00-501-1749	96906	MS25089-3C	.SWITCH,PUSH..........UHE,UHH,UHM,UHV,UHX	EA	1
218	2	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
218	3	PAOZZ	6340-00-759-0710	97499	204-075-705-17	.INDICATOR,FIRE WARNING..........UHE,UHH,UHM,UHV,UHX	EA	1
218	3A	PAOZZ	1680-01-129-5403	81996	82SDSCC-D-0051-6	.FILTER CAP,INSTRUME USE AFTER NIGHT VISION GOGGLES ARE INSTALLED..........UHH,UHV	EA	1
218	4	PAOZZ	6210-00-073-6594	97499	205-074-026-1	.LIGHT,INDICATOR..........UHE,UHH,UHM,UHV,UHX	EA	1
218	4A	PAOZZ	1680-01-129-5401	12757	82SDSCC-D-0051-2	.FILTER CAP,INSTRUME USE AFTER NIGHT VISION GOGGLES ARE INSTALLED..........UHH,UHV	EA	2
218	4B	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ....UHH,UHV	EA	4
218	4C	PAOZZ	1680-01-129-5420	81996	6210-EG-002-14	.FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED..........UHH,UHV	EA	2
218	4D	PAOZZ	5310-00-777-5776	96906	MS21059-06	.NUT,SELF-LOCKING,PL USE AFTER NIGHT VISION GOGGLES ARE INSTALLED..........UHH,UHV	EA	2
218	5	PAOZZ	6240-00-155-8714	96906	MS25231-313	.LAMP,INCANDESCENT..........UHE,UHH,UHM,UHV,UHX	EA	2
218	6	PAOZZ	5305-00-438-8682	96906	MS35206-328	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
218	7	PAOZZ	5310-00-208-4736	80205	NAS487-15	.NUT,SHEET SPRING..........UHE,UHH,UHM,UHV,UHX	EA	20
218	7A	PAOZZ	4730-00-412-4620	81996	1560EG151	.ADAPTER,STRAIGHT, PIPE TO BOSS..........UHE,UHH,UHM,UHV,UHX	EA	1
218	8	PAODD	6610-00-110-3368	81349	MIL-A-81851TYPEA AU-31/A	.ALTIMETER,PRESSURE USE-AFT-CMP-W MWO 55-1500-219-30/4 219-30-4..........UHE,UHH,UHM,UHV,UHX	EA	1
218	9	PAOZZ	5305-00-059-8465	96906	MS24693BB36	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	6
218	9A	PAOZZ	5365-01-055-5399	81996	1560UH1-740-1	.SPACER PILOTS..........UHH,UHM,UHV	EA	1
218	10	PAOZZ	6210-00-548-0370	72914	B6618	.LIGHT,PANEL..........UHE,UHH,UHM,UHV,UHX	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
218	10A	PAOZZ	5305-00-948-4162	96906	MS24693BB34	..SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	8
218	10B	PAOZZ	5310-00-184-8996	96906	MS35338-97	..WASHER,LOCK..........UHE,UHH,UHM,UHV,UHX	EA	8
218	10C	PAOZZ	6210-00-295-1729	72914	B6611-10	.LIGHT,PANEL..........UHE,UHH,UHV,UHX	EA	1
218	11	PAOZZ	6610-00-952-8832	96906	MS25454-3	.INDICATOR,VERTICAL..........UHE,UHH,UHM,UHV,UHX	EA	1
218	11	PAOZZ	6610-00-012-4624	98810	RC30V	.INDICATOR,VERTICAL SEE TM55-6610-282 FOR BREAKDOWN ....UHE,UHH,UHM,UHV	EA	1
218	11	PAOZZ	6610-00-903-0714	10639	SLZ9125A	.INDICATOR,VERTICAL SEE TM55-6610-277-40 FOR BREAKDOWN ....UHE,UHH,UHM,UHV	EA	1
218	14	PAODD	5826-00-897-4889	56232	1783755-615	.INDICATOR,RADIO-MAG MAGNETIC..........UHE,UHH,UHM,UHV	EA	1
218	14A	PAOZZ	1680-01-230-0523	81996	EGD-0934-3	..BEZEL,RMI,NVG ....UHE,UHH,UHV,UHX	EA	1
218	15	PAOZZ	5305-00-059-8256	96906	MS35214-31	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	6
218	16	PAOZZ	5310-00-208-3464	80205	NAS487-14	.NUT,SHEET SPRING..........UHE,UHH,UHM,UHV,UHX	EA	4
218	17	PAOZZ	6610-00-526-4397	96906	MS28045T2	.INDICATOR,INDICATED AIR SPEED..........UHE,UHH,UHM,UHV,UHX	EA	1
218	18	PAOZZ	5340-00-579-6359	96906	MS28042-2A	.CLAMP,INSTRUMENT..........UHE,UHH,UHM,UHV,UHX	EA	1
218	18A	PAOZZ	5305-00-206-2511	96906	MS35215-57	..SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	4
218	19	PAODD	6680-00-907-8380	97499	204-070-155-1	.INDICATOR,ELECTRICA TACHOMETER..........UHE,UHH,UHM,UHV,UHX	EA	1
218	19	PAODD	6680-00-907-8380	82047	8DJ67FBC1	.INDICATOR,ELECTRICA TACHOMETER..........UHE,UHH,UHM,UHV,UHX	EA	1
218	19	PAODD	6680-00-841-0302	55972	41105C5A4B3	.INDICATOR,ELECTRICA TACHOMETER..........UHE,UHH,UHM,UHV,UHX	EA	1
218	20	PAOZZ	6210-00-226-9259	72914	A6815-24	.LIGHT,PANEL..........UHE,UHH,UHM,UHV,UHX	EA	3
218	21	PAOZZ	5310-00-208-4736	80205	NAS487-15	.NUT,SHEET SPRING U/O PN 204-070-161-29,-31,& U/O PN 205-070-120-3,-5,-7,-9, -11,& -13..........UHE,UHH,UHM,UHV	EA	4
218	22	PAOZZ	5310-00-208-3464	80205	NAS487-14	.NUT,SHEET SPRING U/O PN 204-072-026-1,& PN 205-070-949-1,-5,-9,&-17, ES-J-221282..........UHE,UHH,UHM,UHV,UHX	EA	8
218	23	PAOZZ	5305-00-957-7808	96906	MS24693BB33	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	4
218	24	PA000	6210-00-578-6803	72914	B6602A1	.LIGHT,PANEL..........UHE,UHH,UHM,UHV,UHX	EA	1
218	25	PAOZZ	6210-00-283-9608	72914	A6747	.LENS,LIGHT..........UHE,UHH,UHM,UHV,UHX	EA	1
218	26	PAOZZ	6250-00-283-9747	72914	A5749A24	..LAMPHOLDER..........UHE,UHH,UHM,UHV,UHX	EA	2
218	27	PAOZZ	6220-00-420-7903	72914	A-6503	..CLIP,MOUNTING,INSTR..........UHE,UHH,UHM,UHV,UHX	EA	1
218	29	PAOZZ	6610-00-169-1489	06987	3935-2	.INDICATOR,TURN AND SLIP..........UHE,UHH,UHM,UHV,UHX	EA	1
216	29A	PAOZZ	6610-00-339-1254	96906	MS28024-3A	.INDICATOR,TURN AND U/O PN 205-070-949-17,ES-J-221282 ....UHE,UHH,UHV,UHX	EA	1
218	30	PBOZZ	5305-00-059-8255	96906	MS35214-30	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	1
218	31	PAOZZ	5305-00-059-8256	96906	MS35214-31	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	6
218	32	PAOZZ	5310-00-261-8278	96906	MS35338-100	.WASHER,LOCK..........UHE,UHH,UHM,UHV,UHX	EA	2
218	33	PAOZZ	5310-00-208-3467	80205	NAS487-13	.NUT,SHEET SPRING..........UHE,UHH,UHM,UHV,UHX	EA	4
218	34	PAOZZ	6210-00-548-0196	72914	A67451RY24	.LIGHT,PANEL..........UHE,UHH,UHM,UHV,UHX	EA	1
218	35	PAOZZ	6210-00-538-8770	96906	MS25041-3	.LIGHT,INDICATOR..........UHE,UHH,UHM,UHV,UHX	EA	1
218	36	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP,INCANDESCENT..........UHE,UHH,UHM,UHV,UHX	EA	1
218	37	PBOZZ	5930-00-655-1514	96906	MS35058-22	.SWITCH,TOGGLE..........UHE,UHH,UHM,UHV	EA	1
218	38	PAOZZ	6210-00-635-4700	96906	MS25041-8	.LIGHT,INDICATOR..........UHE,UHH,UHM,UHV	EA	1
218	39	PAOZZ	6210-00-284-0289	96906	MS25041-4	.LIGHT,INDICATOR..........UHE,UHH,UHM,UHV	EA	1
218	39A	PAOZZ	1680-01-129-5411	81996	6210-EG-002-5	.FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED..........UHH,UHV	EA	5
218	39A	PAOZZ	1680-01-129-5412	81996	6210-EG-002-6	.FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED..........UHH,UHV	EA	5
218	40	PAOZZ	5365-00-580-5790	80205	NAS43DD4-12	.SPACER,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	1
218	41	PAOZZ	5365-00-594-6056	80205	NAS43DD4-6	.SPACER,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
218	42	PAOZZ	6210-00-987-1423	72914	A-6750-1-24	.LIGHT,PANEL UHE,UHH,UHM,UHV,UHX	EA	2
218	43	PAOZZ	6605-00-551-8187	96906	MS17983-2	.COMPASS,MAGNETIC,MO MOUNTED UHE,UHH,UHM,UHV,UHX	EA	1
218	43A	PAOZZ	6210-01-129-5430	22973	5602-BG-28	.LIGHT,PANEL USE AFTER NIGHT VISION GOGGLES ARE INSTALLED UHH,UHV	EA	3
218	43B	PAOZZ	5940-00-712-6404	14726	K5919N	.TERMINAL,QUICK DISC USE AFTER NIGHT VISION GOGGLES ARE INSTALLED UHH,UHV	EA	2
218	43C	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL,LUG USE AFTER NIGHT VISION GOGGLES INSTL UHH,UHV	EA	4
218	43D	PAOZZ	5365-00-580-3563	80205	NAS43DD3-18	.SPACER,SLEEVE USE AFTER NIGHT VISION GOGGLES INSTL UHH,UHV	[illegible]	3
218	44	PAOZZ	5355-00-721-9864	96906	MS25167P2C	.KNOB UHE,UHH,UHM,UHV,UHX	[illegible]	1
218	44A	PAOZZ	5905-00-856-8140	97499	204-075-352-1	.RESISTOR,VARIABLE,W UHE,UHH,UHM,UHV,UHX	EA	1
218	45	PAOZZ	5305-00-637-1125	96906	MS35214-29	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	2
218	46	PAODD	6645-00-084-1424	81349	A13A2	.CLOCK,AIRCRAFT,MECH UHE,UHH,UHM,UHV,UHX	EA	1
218	47	PAOZZ	5340-00-014-5970	96906	MS28042-1A	.CLAMP,INSTRUMENT MO UHE,UHH,UHM,UHV,UHX	EA	3
218	48	PAODD	6620-00-557-3023	81349	MIL125623TYPEMU1	.INDICATOR,ELECTRICA ELECTRICAL TACHOMETER UHE,UHH,UHM,UHV,UHX	EA	1
218	49	PAOFZ	6685-00-557-5910	65092	157800	.INDICATOR,TEMPERATU TEMPERATURE THERMOCOUPLE UHE,UHH,UHM,UHV,UHX	EA	1
218	49A	PAOZZ	5310-00-261-8278	96906	MS35338-100	..WASHER,LOCK UHE,UHH,UHM,UHV,UHX	EA	1
218	49B	PAOZZ	5305-00-206-2510	96906	MS35215-55	..SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	1
218	49C	PAOZZ	5310-00-136-1471	88044	AN961-10T	..WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	1
218	49D	PAOZZ	5305-00-637-1123	96906	MS35214-42	..SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	1
218	49E	PAOZZ	5310-00-576-0546	96906	MS35338-99	..WASHER,LOCK UHE,UHH,UHM,UHV,UHX	EA	1
218	49F	PAOZZ	5310-00-264-1389	88044	AN961-8T	..WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	1
218	51	PAOZA	6620-01-191-8693	81996	6620A-0001	.INDICATOR,PRESSURE UHE,UHH,UHM,UHV,UHX	EA	1
218	52	PBOZZ	5305-00-823-5791	88044	AN509B3R4	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	2
218	53	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	1
218	54	PAOZZ	5305-00-735-9335	80205	NAS662B2R4	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	2
218	55	PAOZZ	5306-00-638-2216	88044	AN42B4	.BOLT,EYE UHE,UHH,UHM,UHV,UHX	EA	1
218	56	PAOZZ	5310-00-261-7437	88044	AN935-3L	.WASHER,LOCK UHE,UHH,UHM,UHV,UHX	EA	2
218	57	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	2
218	58	PAOZZ	5310-00-176-8127	88044	AN340-3	.NUT,PLAIN,HEXAGO UHE,UHH,UHM,UHV,UHX	EA	2
218	59	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	4
218	61	PAOZZ	6605-00-684-4227	88044	AN5823-1	.FORM,PRINTED UHE,UHH,UHM,UHV,UHX	EA	1
218	62	MFOZZ	DELETED	97499	204-070-143-3	.PLATE,MOUNTING,CARD HOLDER UHE,UHH,UHM,UHV,UHX	EA	1
218	63	PBOZZ	5305-00-206-2507	96906	MS35215-56	.SCREW,MACHINE U/O PN 205-070-120-7,-11,&-13 UHE,UHH,UHM,UHV	EA	2
218	64	PBOZZ	5305-00-206-2507	96906	MS35215-56	.SCREW,MACHINE U/O PN 205-070-120-3,-5,&-9 UHE,UHH,UHV	EA	3
218	65	PAOZZ	5310-00-905-8434	96906	MS21083B3	.NUT,SELF-LOCKING,HE HEXAGON UHE,UHH,UHM,UHV,UHX	EA	2
218	66	MDOZZ	DELETED	97499	204-072-054-1	.BRACKET,COMPASS UHE,UHH,UHM,UHV,UHX	EA	1
218	66A	PAOZZ	1680-01-230-0524	81996	EGD-0941-1	.LIGHT,POST UHE,UHH,UHV,UHX	EA	2
218	66B	PAOZZ	1680-01-230-0520	81996	EGD-0928-1	..BULB,CAP,NVG UHE,UHH,UHV,UHX	EA	15
218	67	XDOZZ		97499	204-070-064-1	.LINK UHE,UHH,UHM,UHV	EA	1
218	68	PAODD	6610-00-781-8531	81996	INDA5UH1	.INDICATOR,ATTITUDE UHE,UHH,UHM,UHV,UHX	EA	1
218	68	PAODD	6610-00-179-9035	35351	148700-01-01	.INDICATOR,ATTITUDE UHE,UHH,UHM,UHV,UHX	EA	1
218	68	PAODD	6610-00-758-2385	35351	141400-01-01	.INDICATOR,ATTITUDE SEE TM55-6610-203 FOR BREAKDOWN	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						........................UHE,UHH,UHM,UHV,UHX		
218	68	PAODD	6610-00-906-0210	99251	DSA274	.INDICATOR,ATTITUDE........UHE,UHH.UHM,UHV,UHX	EA	1
218	68	PAODD	6610-00-912-3613	10138	102550	.INDICATOR,ATTITUDE INTRCH........UHE,UHH,UHM,UHV,UHX	EA	1
218	68A	PAOZZ	1680-01-230-0525	81996	EGD-0926-3	..BEZEL........UHE,UHH,UHV,UHX	EA	1
218	69	PAOZZ	5305-00-206-2511	96906	MS35215-57	.SCREW,MACHINE........UHM	EA	4
218	70	PBOZZ	5305-00-225-6214	96906	MS2469388275	.SCREW,MACHINE........UHE,UHH,UHV.UHX	EA	4
218	71	PAOZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK........UHM	EA	4
218	72	XBOFF	1560-00-918-3029	97499	204-070-475-43	.PANEL,ASSEMBLY U/O PN 204-070-161-29,&-31 61-29,& -31........UHM	EA	1
218	72	XBOFF		97499	204-070-475-49	.PANEL ASSEMBLY U/O PN 204-070-161-35........UHM	EA	1
218	72	XBOFF		97499	205-070-948-35	PANEL ASSEMBLY U/O PN 204-072-026-1........UHM	EA	1
218	72	XDOFF		97499	204-070-475-45	PANEL,ASSEMBLY U/O PN 205-070-120-3,-5,-7, -11,& -13 ....UHE,UHH,UHV	EA	1
218	72	XBOFF		97499	205-070-948-31	PANEL ASSEMBLY U/O PN 205-070-949-1........UHE,UHH,UHV	EA	1
218	72	XBOFF		97499	205-070-948-39	.PANEL ASSEMBLY U/O P/N 205-070-949-5 OBS AFT CMPL W/MWO55- 1520-242-50-XX........UHE,UHH,UHV	EA	1
218	72	XBOFF		97499	205-070-948-47	.PANEL ASSEMBLY U/O PN 205-070-949-1-9........UHE,UHH,UHV	EA	1
218	72	XDOFF		97499	205-070-948-59	.PANEL,ASSEMBLY U/O P/N 205-070-949-17. OBS AFT CMPL W/ MWO55-1520-242-50-XX........UHE,UHH,UHV	EA	1
218	72	XDOOO		20309	ES-J-221283	.INSTR PANEL USE ON ES-J-221282........UHX	EA	1
218	73	MOOZZ		97499	204-070-749-1	..BRACKET,INSTRUMENT........UHE,UHH,UHM,UHV,UHX	EA	1
218	74	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL PLATE........UHE,UHH,UHM.UHV,UHX	EA	1
218	75	PAOZZ	5305-00-958-0586	96906	MS35207-273	.SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	2
218	76	PAOZZ	5365-00-727-1891	80205	NAS43D03-128	.SPACER,SLEEVE........UHE,UHH,UHM,UHV,UHX	EA	2
218	77	PAOZZ	5340-00-151-5993	96906	MS21122-8	.CLAMP,LOOP........UHE,UHH,UHM,UHV,UHX	EA	2
218	78	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT........UHE,UHH,UHM,UHV,UHX	EA	2
218		XCFZZ		20309	ES-F-220443	INSTRUMENT PANEL, INSTL SEE FIG.5A FOR NHA........UHE,UHX	EA	1
218	80	PAOZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE........UHE,UHX	EA	2
218	81	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHX	EA	2
218	82	PAOZZ		96906	MS91528-1K2B	.KNOB USE ON ES-J-221282........UHX	EA	1
218	83	XDOZZ		81349	M3786/4-0868	.SWITCH,ROTARY USE ON ES-J-221282........UHX	EA	1
218	84	PAOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE USE ON ES-J-221282........UHX	EA	3

Fig. 219, 220, & 221 NOT USED

Page 911 Deleted

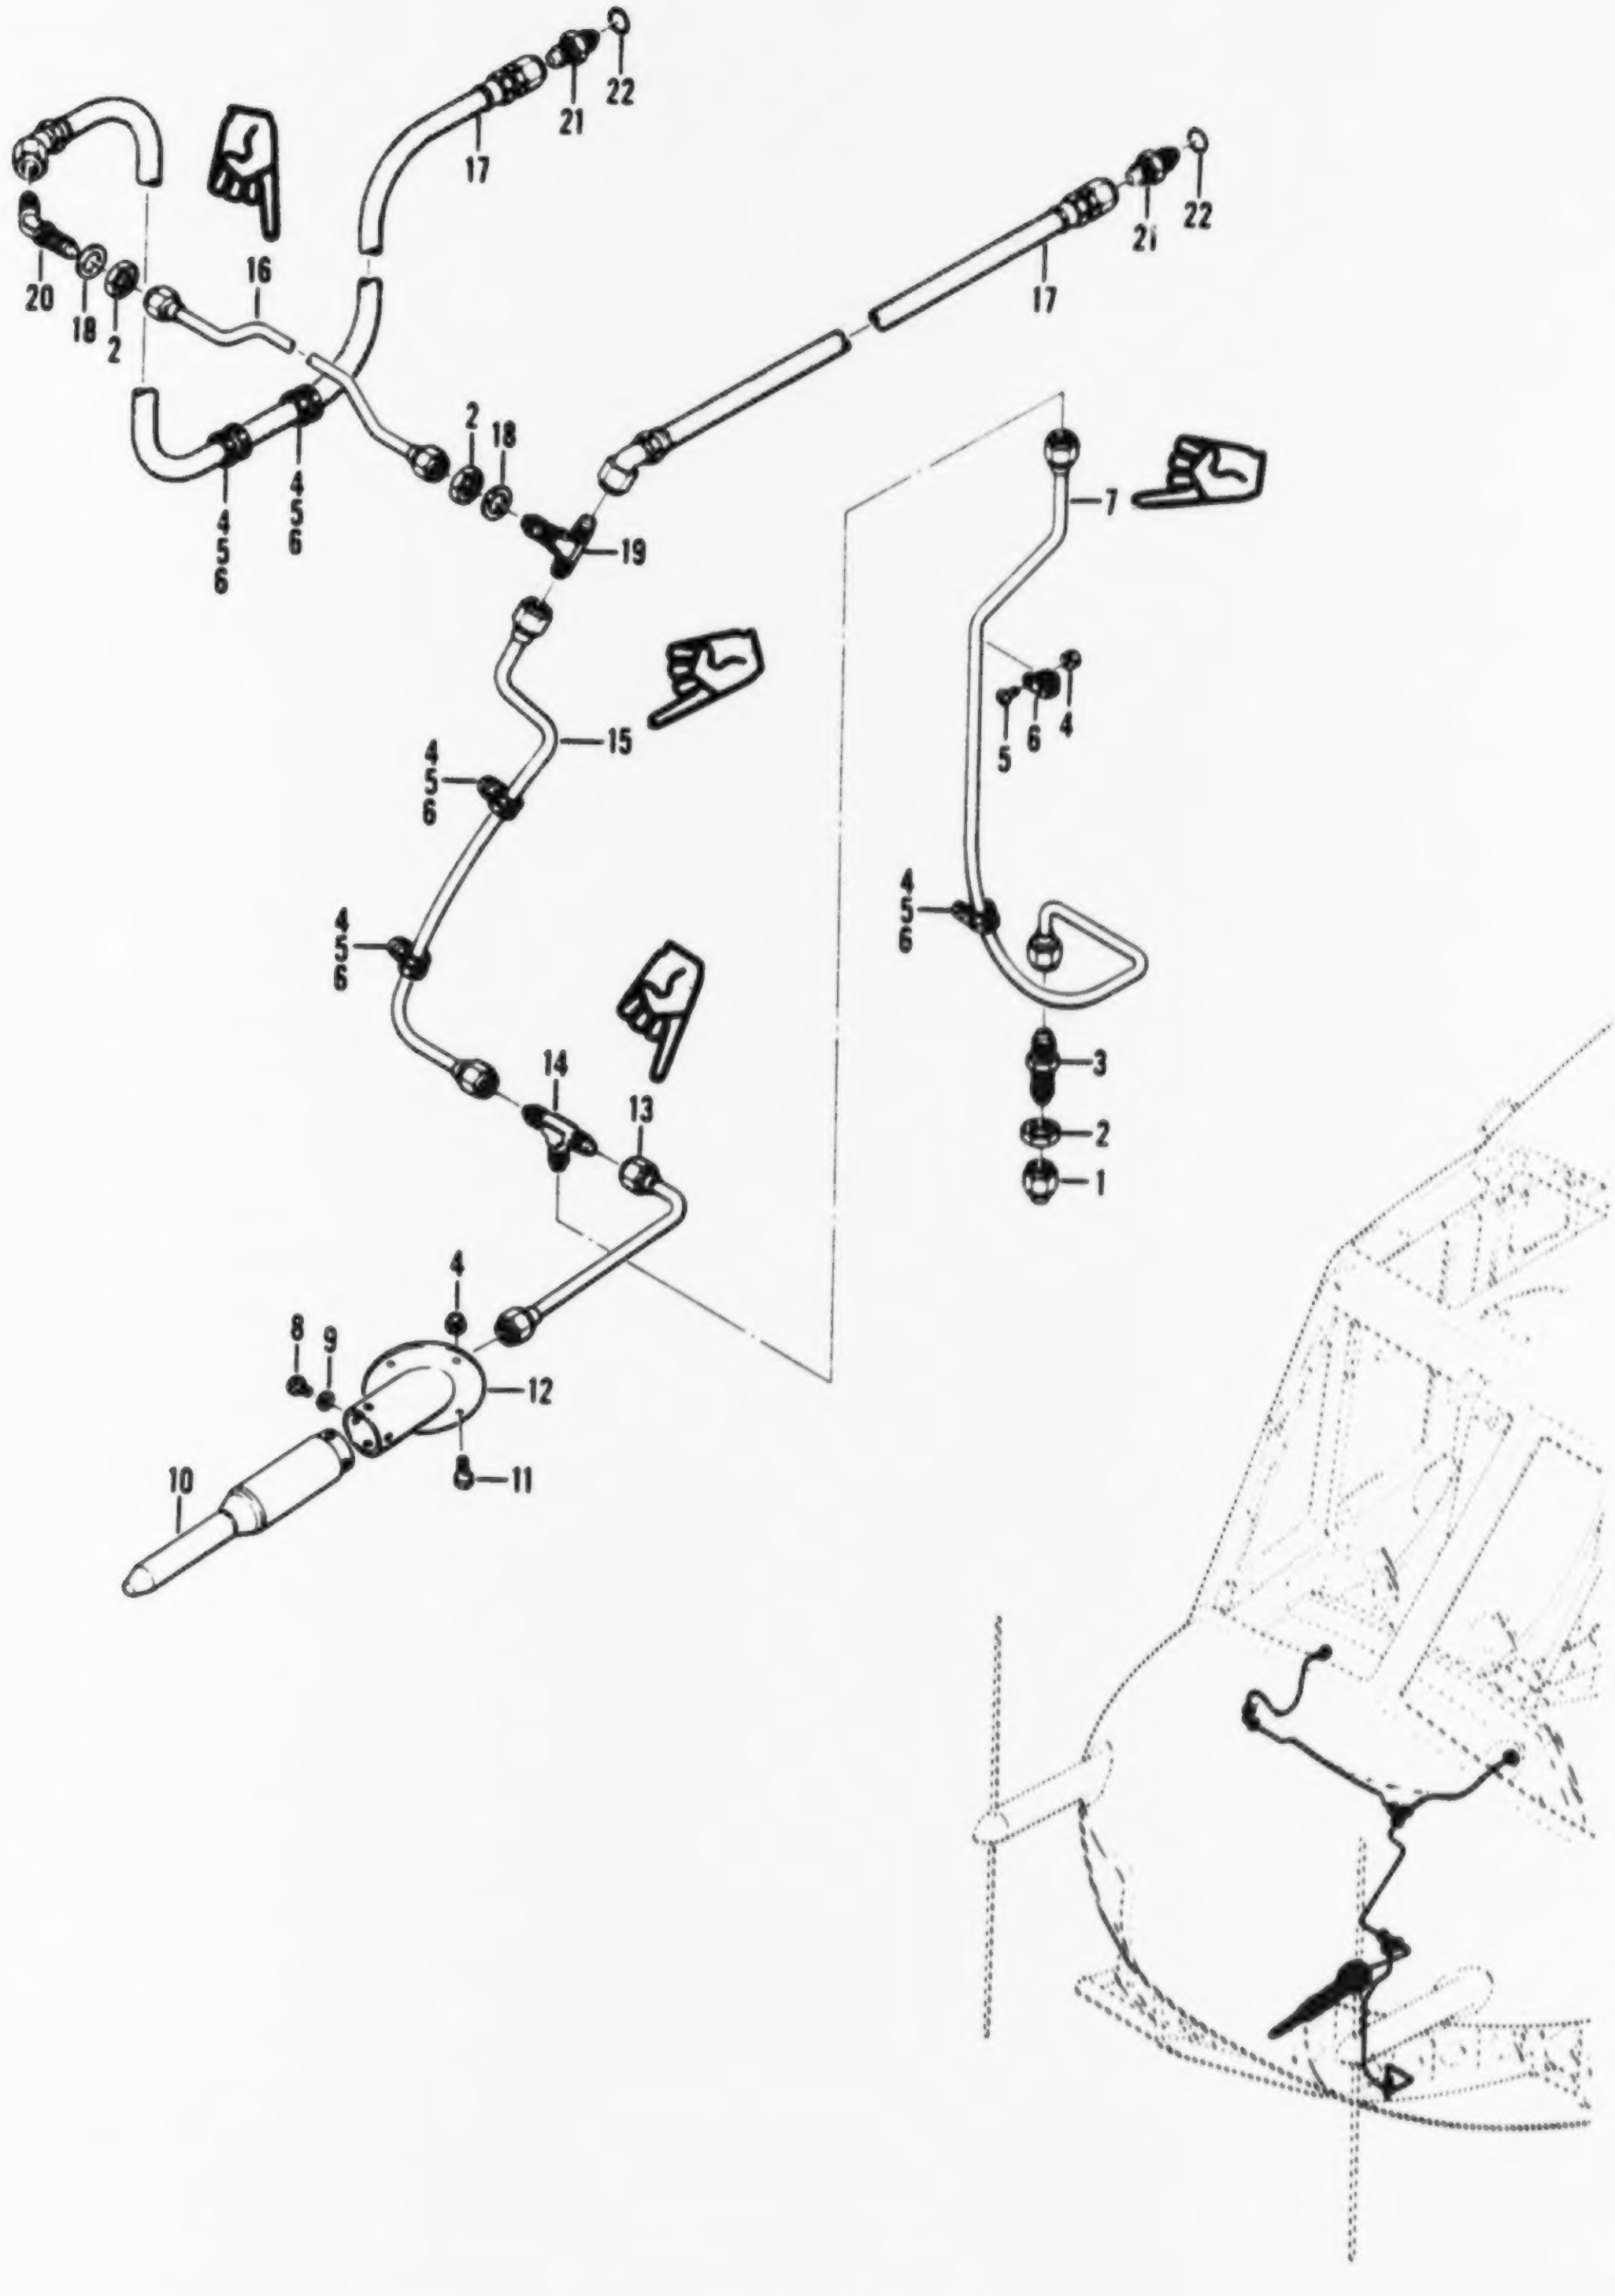
22
21
17
21
22
17
16
20
18
2
4
5
6
4
5
6
2
18
19
7
15
5
6
4
4
5
6
4
5
6
4
5
6
14
13
3
2
1
4
8
9
12
11
10

Figure 222. Piping Installation, Pitot

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 08 INSTRUMENT SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
222		XCFZZ		97499	204-070-012-1	PIPING INSTL USBL EFF (UH-1B) 60-3546 THRU 62-1255 USBL EFF 62-2106 THRU 63-13002 SEE FIG.6 & 7 FOR NHA .... UHB, UHE, UHH, UHV, UHX	EA	1
222		XCFZZ		97499	204-070-012-3	PIPING INSTL USBL EFF (UH-1B) 63-8500 & SUBSEQUENT USBL EFF 64-13492 THRU 64-13901 SEE FIG.6 & 7 FOR NHA .... UHB, UHE, UHH, UHV, UHX	EA	1
222		XCFZZ		97499	204-070-012-7	PIPING INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA .... UHE, UHH, UHV, UHX	EA	1
222	1	XDOZZ	4730-00-221-2115	88044	AN929-4	.CAP, TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	2	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT, PLAIN, HEXAGON .... UHB, UHE, UHH, UHV, UHX	EA	3
222	3	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE, TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON .... UHB, UHE, UHH, UHV, UHX	EA	10
222	5	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW, MACHINE .... UHB, UHE, UHH, UHV, UHX	EA	6
222	6	PAOZZ	5340-00-161-5997	96906	MS21122-4	.CLAMP, LOOP .... UHB, UHE, UHH, UHV, UHX	EA	6
222	7	MFOZZ	DELETED	97499	204-070-134-11	.TUBE ASSEMBLY, METAL .... UHB, UHE, UHH, UHV, UHX	EA	1
222	8	PAOZZ	5305-00-958-4351	96906	MS35207-226	.SCREW, MACHINE .... UHB, UHE, UHH, UHV, UHX	EA	4
222	9	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER, LOCK .... UHB, UHE, UHH, UHV, UHX	EA	4
222	10	PAOZZ	6610-00-526-7849	88044	AN5813-1	.PITOT TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	11	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW, MACHINE U/O PN 204-070-012-1 & -3 .... UHB, UHE, UHH, UHV, UHX	EA	4
222	12	PAOZZ	1560-00-691-2120	97499	204-070-107-13	.SUPPORT ASSEMBLY, PITOT TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	13	MFOZZ	DELETED	97499	204-070-110-71	.TUBE ASSEMBLY, METAL .... UHB, UHE, UHH, UHV, UHX	EA	1
222	14	PAOZZ	4730-00-722-1207	96906	MS24402D4	.TEE, TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	15	MFOZZ	DELETED	97499	204-070-110-3	.TUBE ASSEMBLY, METAL .... UHB, UHE, UHH, UHV, UHX	EA	1
222	16	MFOZZ	DELETED	97499	204-070-110-7	.TUBE ASSEMBLY, METAL .... UHB, UHE, UHH, UHV, UHX	EA	1
222	17	MFOZZ		96906	MS8000E1808	.HOSE ASSEMBLY .... UHB, UHE, UHH, UHV, UHX	EA	2
222	18	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER, FLAT .... UHB, UHE, UHH, UHV, UHX	EA	2
222	19	PBOZZ	4730-00-684-6903	96906	MS24395D4	.TEE, TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	20	PAOZZ	4730-00-803-6049	96906	MS24396D4	.ELBOW, TUBE .... UHB, UHE, UHH, UHV, UHX	EA	1
222	21	PAOZZ	4730-00-834-9660	96906	MS24392D4	.NIPPLE, TUBE .... UHB	EA	2
222	22	PAOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING, PREFORMED .... UHB	EA	2

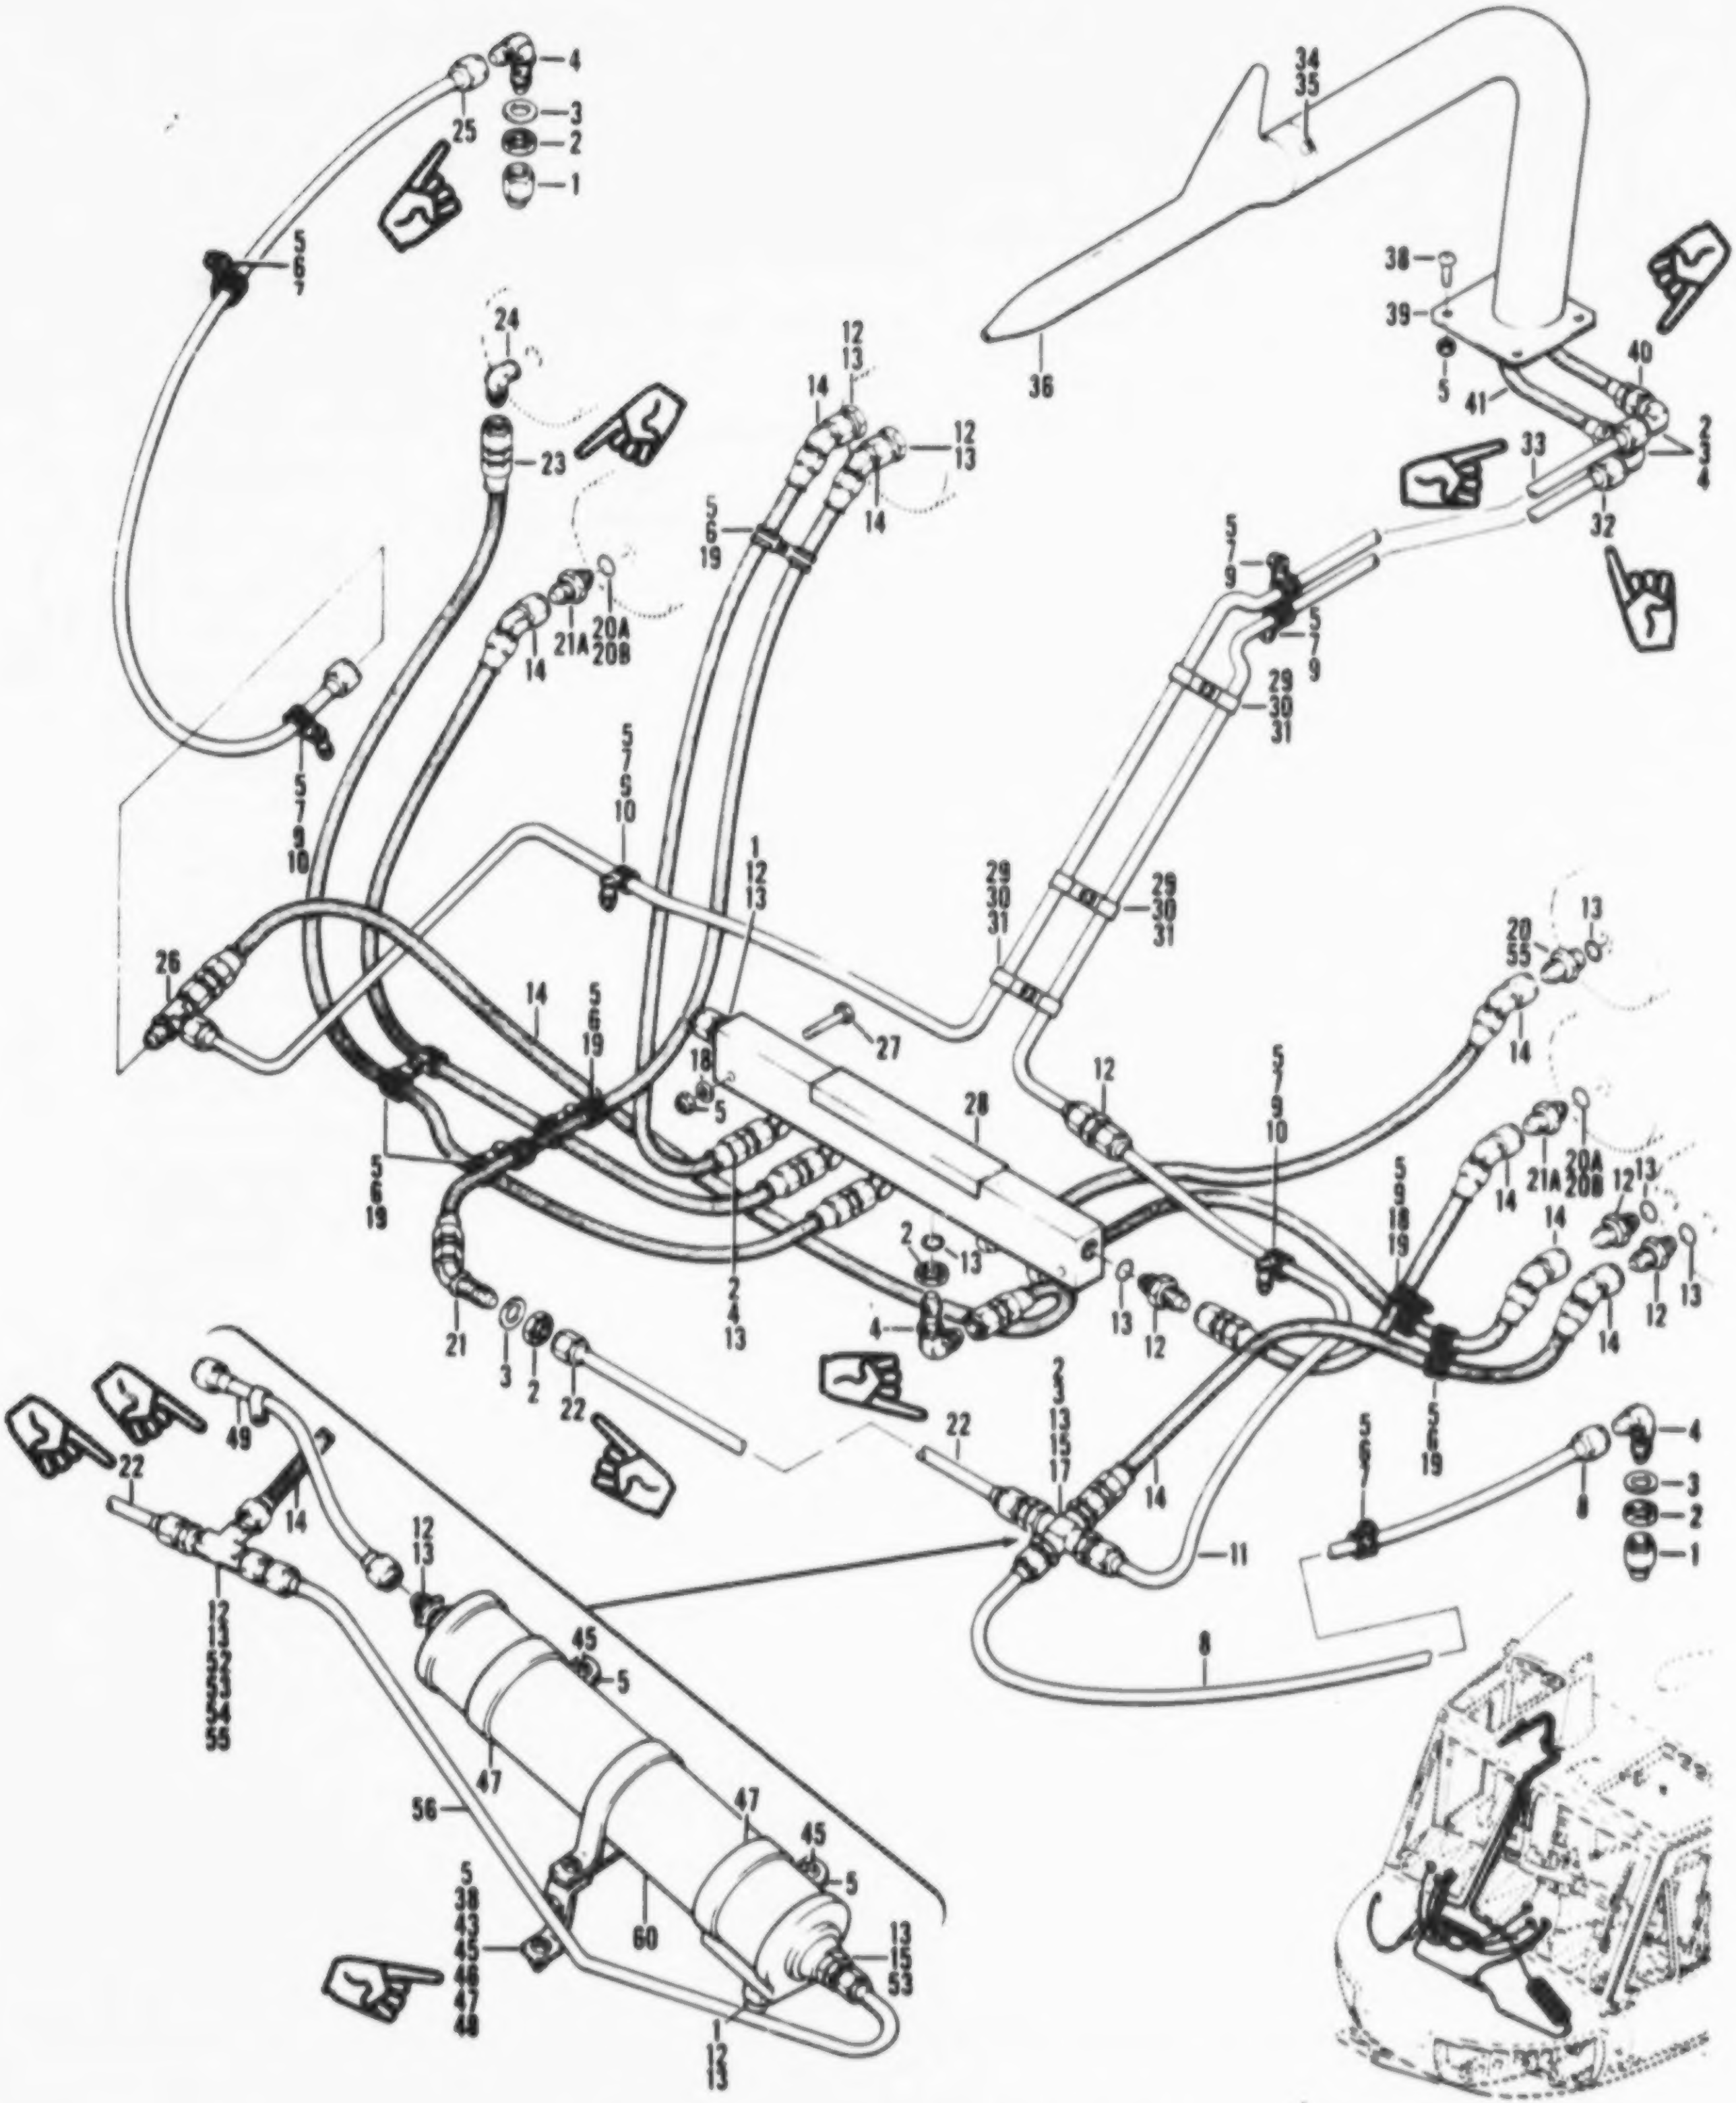
4
3
2
1
25
5
6
7
24
23
12
13
14
12
13
14
34
35
36
38
39
5
41
40
2
3
4
33
32
5
6
19
21A
20A
20B
14
5
7
9
5
7
9
29
30
31
5
7
9
10
5
7
9
10
1
12
13
29
30
31
29
30
31
26
14
5
6
19
27
18
5
28
12
5
7
9
10
20
55
13
14
5
9
18
19
14
21A
20A
20B
12
13
14
12
13
5
6
19
2
4
13
2
13
4
21
3
2
22
13
12
14
12
13
22
2
3
13
15
17
14
5
6
7
8
4
3
2
1
11
8
22
49
14
12
13
12
13
52
53
54
55
45
5
47
56
47
45
5
5
38
43
45
46
47
48
60
13
15
53
1
12
13

Figure 223. Piping Installation, Instrument

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 08 INSTRUMENT SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
223		XCFZZ		97499	204-072-197-1	PIPING INSTL INSTRUMENT USBL EFF 64-14101 THRU 66-601 SEE FIG 6 FOR NHA ......UHC,UHM	EA	1
223		XCFZZ		97499	204-072-197-5	PIPING INSTL INSTRUMENT USBL EFF (UH-1C) 66-602 & SUBSEQUENT USBL EFF 66-746 & SUBSEQUENT SEE FIG.6 & 7 FOR NHA ......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	1	PAOZZ	4730-00-278-5006	88044	AN929-4	.CAP,TUBE ......UHC,UHE,UHH,UHM,UHV,UHX	EA	3
223	2	PAOZZ	5310-00-159-6339	88044	AN924-4D	NUT,PLAIN,HEXAGON ......UHC,UHE,UHH,UHM,UHV,UHX	EA	10
223	3	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT 6 EA U/O PN 204-072-197-1, 5 EA U/O PN 204-072-197-5 ......UHC,UHE,UHH,UHM,UHV,UHX	EA	6
223	4	PAOZZ	4730-00-725-4351	96906	MS24394D4	ELBOW,TUBE 10 EA U/O PN 204-072-197-1, 9 EA U/O PN 204-072-197-5......UHC,UHE,UHH,UHM,UHV,UHX	EA	10
223	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, 19 EA U/O PN 204-072-197-1, 23 EA U/O PN 204-072-197-5......UHC,UHE,UHH,UHM,UHV,UHX	EA	23
223	6	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE 7 EA U/O PN 204-072-197-1, 9 EA U/O PN 204-072-197-5......UHC,UHE,UHH,UHM,UHV,UHX	EA	9
223	7	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP 7 EA U/O PN 204-072-197-1, 6 EA U/O PN 204-072-197-5......UHC,UHE,UHH,UHM,UHV,UHX	EA	7
223	8	MFOZZ		97499	204-072-270-1	TUBE ASSEMBLY,METAL U/O PN 204-072-197-1 ......UHC,UHM	EA	1
223	9	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE......UHC,UHE,UHH,UHM,UHV,UHX	EA	6
223	10	PAOZZ	5365-00-684-2093	80205	NAS43D03-16	SPACER,SLEEVE ......UHC,UHE,UHH,UHM,UHV,UHX	EA	3
223	11	MFOZZ		97499	204-072-269-1	TUBE ASSEMBLY,METAL U/O PN 204-072-197-1......UHC,UHM	EA	1
223	12	PAOZZ	4730-00-834-9560	96906	MS24392D4	.NIPPLE,TUBE......UHC,UHE,UHH,UHM,UHV,UHX	EA	10
223	13	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING,PREFORMED 17 EA U/O PN 204-072-197-1, 18 EA U/O PN 204-072-197-5......UHC,UHE,UHH,UHM,UHV,UHX	EA	18
223	14	MFOZZ		96906	MS8000E1808	.HOSE ASSEMBLY......UHC,UHE,UHH,UHM,UHV,UHX	EA	7
223	15	PAOZZ	4730-00-715-0018	96906	MS24393D4	NIPPLE,TUBE......UHC,UHM	EA	1
223	17	PAOZZ	4730-00-278-8469	88044	AN937D4	.CROSS,BOSS U/O PN 204-072-197-1......UHC,UHM	EA	1
223	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT......UHC,UHE,UHH,UHM,UHV,UHX	EA	3
223	19	PAOZZ	5340-00-993-6245	81996	EAB70005	CLAMP,LOOP......UHC,UHE,UHH,UHM,UHV,UHX	EA	12
223	20	PAOZZ	4730-00-240-5905	88044	AN816-4D	ADAPTER,STRAIGHT......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	20A	PAOZZ	5330-00-833-7491	96906	MS28778-5	PACKING,PREFORMED......UHC,UHE,UHH,UHM,UHV,UHX	EA	2
223	20B	PAOZZ	5330-00-804-5695	96906	MS28778-6	PACKING,PREFORMED USE IN LIEU OF MS28778-5 WHEN MS25454-3 IS INSTALLED......UHC,UHE,UHH,UHM,UHV,UHX	EA	2
223	21	PAOZZ	4730-00-803-5049	969C5	MS24396D4	.ELBOW,TUBE......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	21	PAOZZ	4730-00-684-7157	96906	MS24399D7	.REDUCER,TUBE MAY BE REQ'D AS ALTERNATE FOR ABOVE ITEM WHEN MS25454-30 IS INSTALLED......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	21A	PAOZZ	4730-00-187-3577	88044	AN919-3D	.REDUCER,TUBE......UHC,UHE,UHM,UHV,UHX	EA	2
223	22	MFOZZ	DELETED	97499	204-070-110-7	.TUBE ASSEMBLY,METAL......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	23	MFOZZ	DELETED	96906	MS8000E300A	.HOSE ASSY......UHC,UHE,UHH,UHM,UHV,UHX	EA	2
223	24	PAOZZ	4730-00-186-9961	96906	MS20822-4D	.ELBOW,PIPE TO TUBE......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	24	PAOZZ	4730-00-240-5905	88044	AN816-4D	.ADAPTER,STRAIGHT PIPE TO TUBE MAY BE REQ'D AS AN ALTERNATE FOR ABOVE ITEM......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	24	PAOZZ	4730-00-186-9951	96906	MS20823-4D	.ELBOW,PIPE TO TUBE ALTERNATE FOR ABOVE ITEMS MS20822-4D & AN816-4D......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	25	MFOZZ	DELETED	97499	204-072-267-1	.TUBE ASSEMBLY,METAL......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	26	PAOZZ	4730-00-722-1207	96906	MS24402D4	.TEE,TUBE......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	27	PAOZZ	5306-00-182-2062	88044	AN3H11A	.BOLT,MACHINE......UHC,UHE,UHH,UHM,UHV,UHX	EA	2
223	28	PAOZZ	6610-00-677-5976	18631	PDG0190	.MANIFOLD,AIRCRAFT INSTRUMENT......UHC,UHE,UHH,UHM,UHV,UHX	EA	1
223	29	XDOZZ		96906	MS24621-19	.SCREW,MACHINE......UHC,UHE,UHH,UHM,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
223	30	PAOZZ	5310-00-187-2398	88044	AN960PD6L	WASHER, FLAT	UHE, UHH, UHM, UHV, UHX	EA	3
223	31	PAOZZ	5340-00-988-3210	96906	MS25281R4	CLAMP, LOOP	UHE, UHH, UHM, UHV, UHX	EA	6
223	32	MFOZZ	DELETED	97499	204-072-268-1	TUBE ASSEMBLY, METAL	UHE, UHH, UHM, UHV, UHX	EA	1
223	33	MFOZZ	DELETED	97499	204-072-265-1	TUBE ASSEMBLY, METAL	UHE, UHH, UHM, UHV, UHX	EA	1
223	34	PAOZZ	5305-00-958-4351	96906	MS35207-226	SCREW, MACHINE	UHE, UHH, UHM, UHV, UHX	EA	4
223	35	PAOZZ	5310-00-045-4007	96906	MS35338-41	WASHER, LOCK	UHE, UHH, UHM, UHV, UHX	EA	4
223	36	PAOZZ	6610-00-919-7487	97499	204-072-195-1	PITOT-STATIC TUBE INTRCH 204-072-195-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	38	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW, MACHINE	UHE, UHH, UHM, UHV, UHX	EA	4
223	39	PAOZZ	1560-00-918-0713	97499	204-072-196-1	SUPPORT ASSY, PITOT	UHE, UHH, UHM, UHV, UHX	EA	1
223	40	MFOZZ	DELETED	96906	MS8000E160A	HOSE ASSEMBLY	UHE, UHH, UHM, UHV, UHX	EA	1
223	41	MFOZZ	4720-00-941-8932	98441	4720EG003-4C0165	HOSE ASSEMBLY	UHE, UHH, UHM, UHV, UHX	EA	1
223	43	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	SCREW, MACHINE U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	45	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW, MACHINE U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	46	MFOZZ	DELETED	97499	20-032-1	BRACKET, ENGINE U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	47	PAOZZ	5340-00-993-5475	81996	EAB700034	CLAMP, LOOP U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	3
223	48	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET, ANGLE U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	49	MFOZZ	DELETED	97499	204-072-355-1	TUBE ASSEMBLY, METAL U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	52	PAOZZ	4730-00-804-8683	96906	MS24389D4	TEE, TUBE TO BOSS U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	53	PAOZZ	5310-00-282-7823	96906	MS24400D4	NUT, PLAIN, HEXAGON U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	2
223	54	PAOZZ	5310-00-187-2401	88044	AN960PD716	WASHER, FLAT U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	55	PAOZZ	4730-00-839-8364	97499	204-072-299-1	ADAPTER, STRAIGHT U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	2
223	56	MFOZZ		97499	204-072-364-1	TUBE ASSEMBLY U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1
223	60	PAOZZ	1560-00-839-8365	12849	500-0759	PLENUM, AIR LINE U/O PN 204-072-197-5	UHE, UHH, UHM, UHV, UHX	EA	1

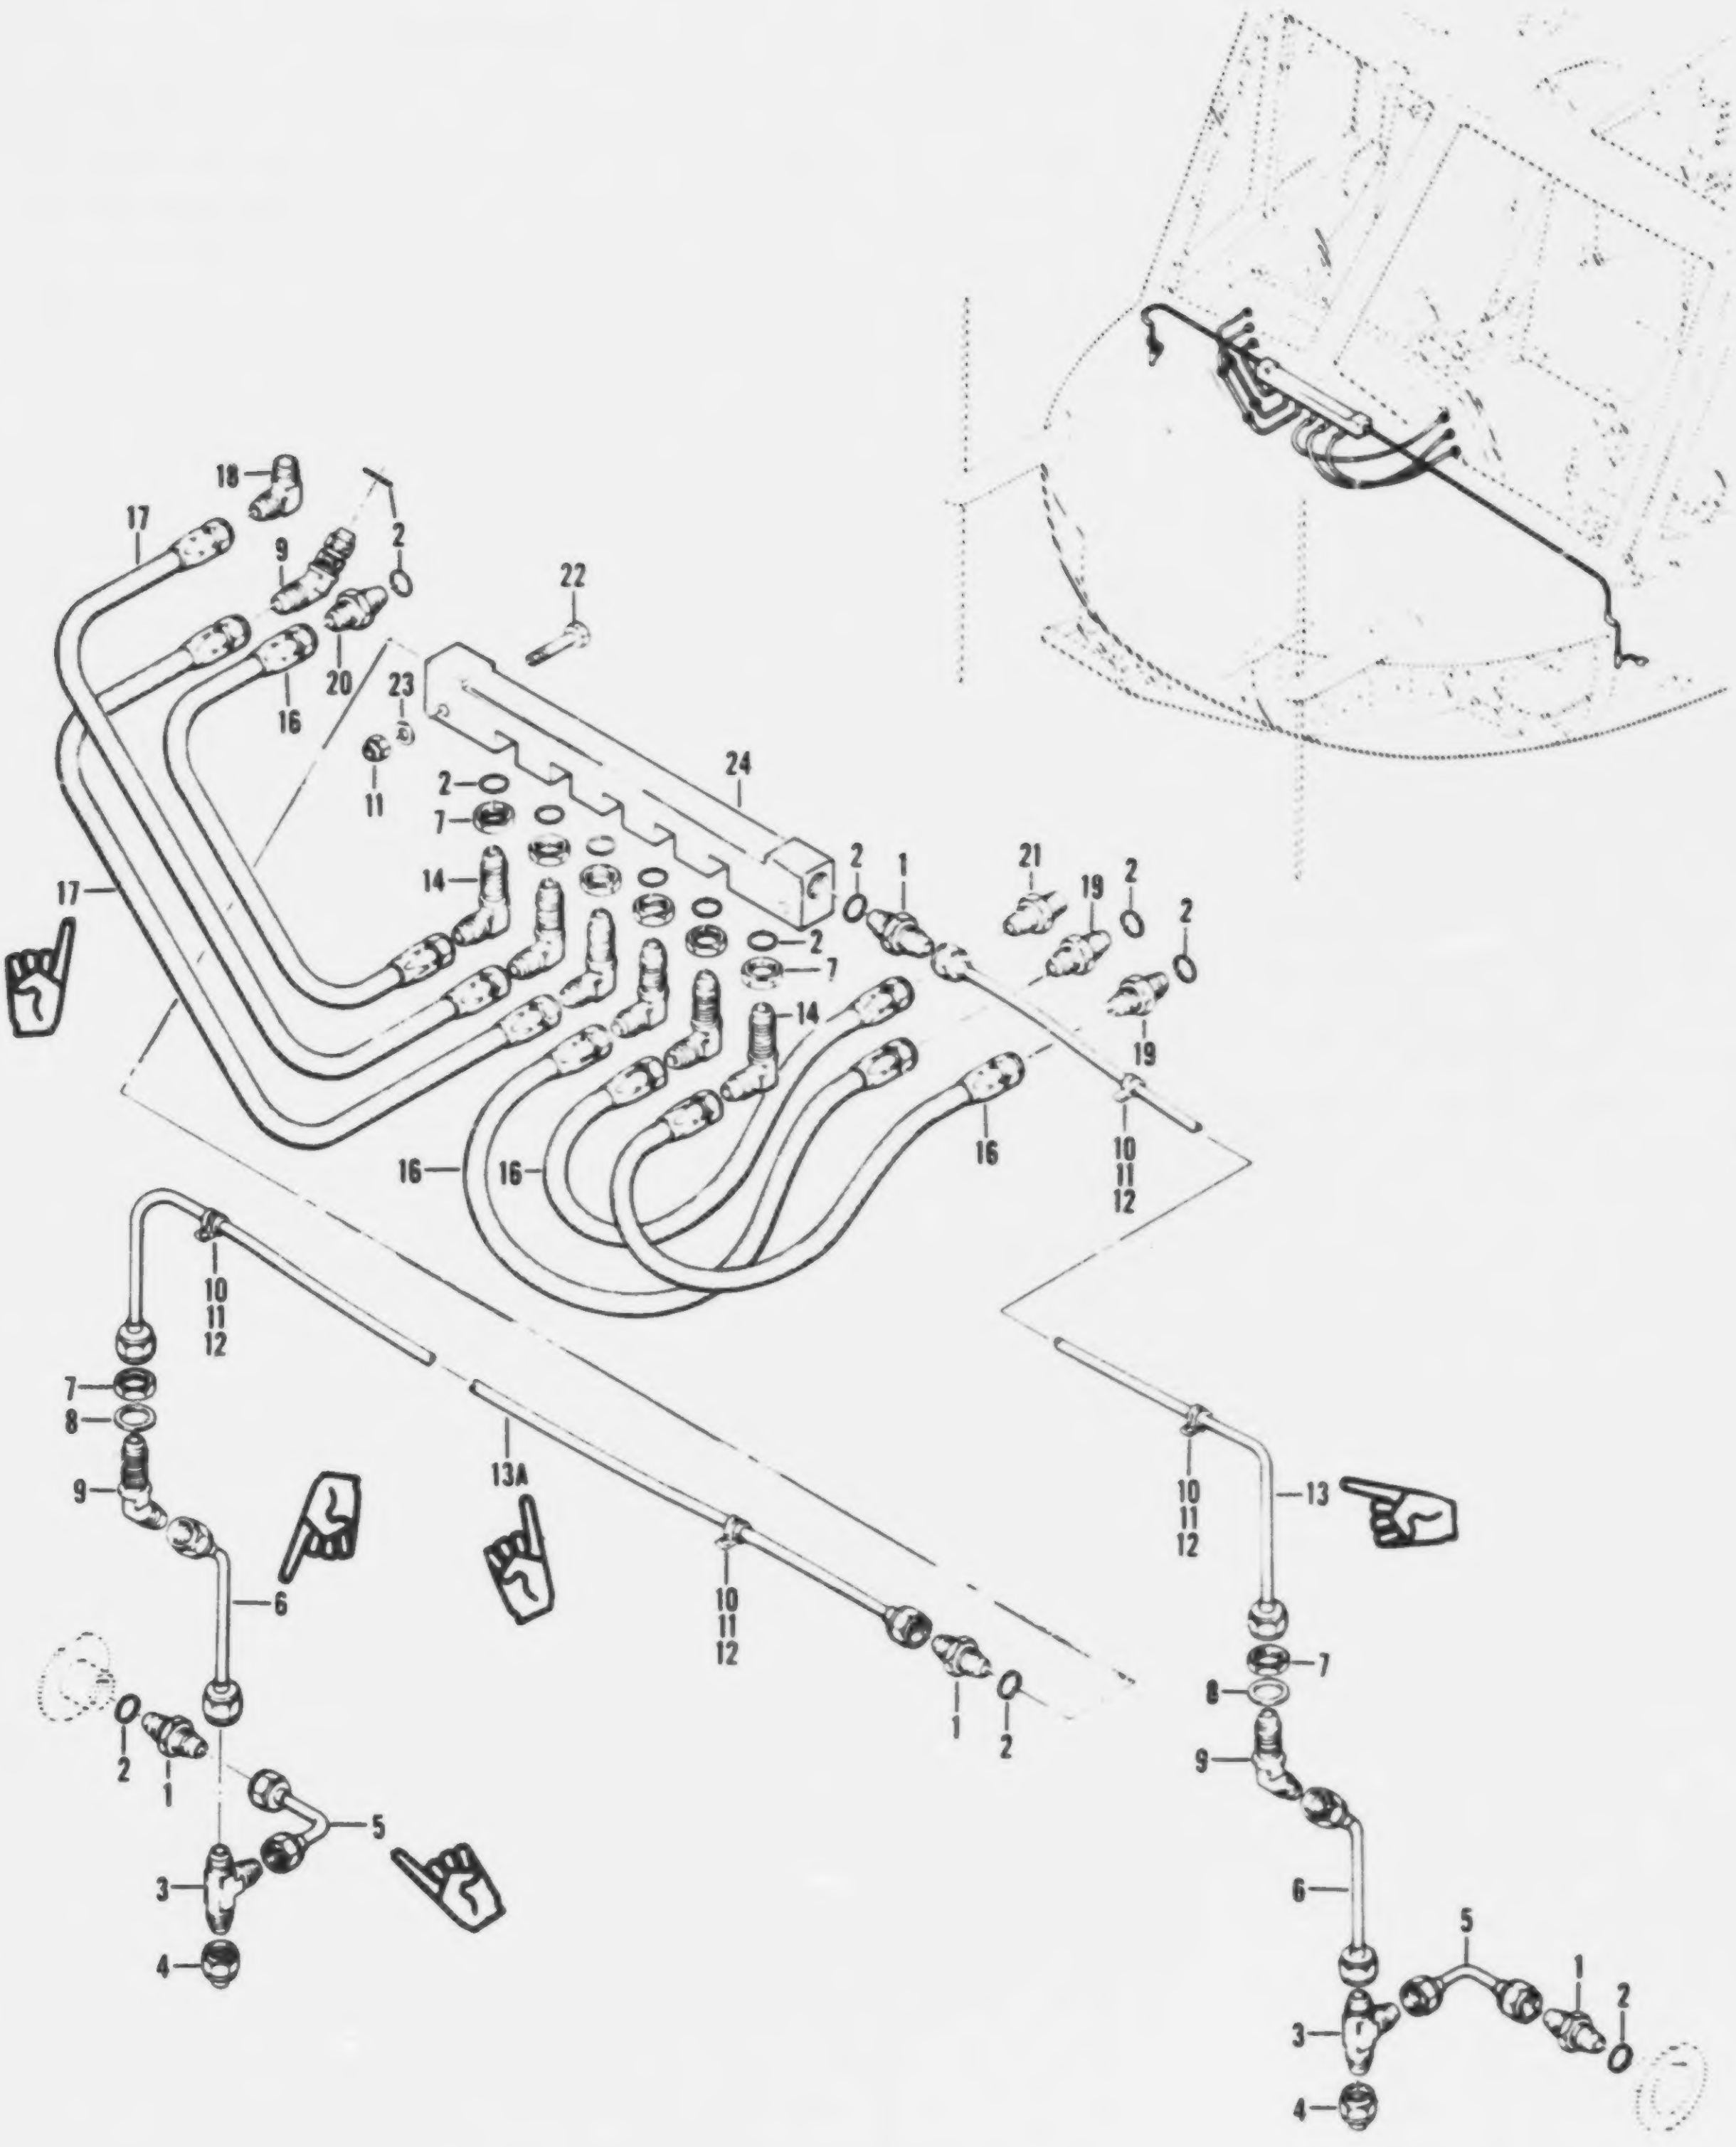
18
17
9
2
22
20
16
23
11
24
2
7
14
17
2
1
21
19
2
2
2
7
14
19
10
11
12
16
16
16
10
11
12
7
8
9
13A
10
11
12
10
11
12
13
6
1
2
2
1
5
3
4
7
8
9
6
5
1
2
3
4

Figure 224. Piping Installation, Instrument Static System

(1) ILLUSTRATION (A) FIG NO	(B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 08 INSTRUMENT SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
224		XCFZZ		97499	204-070-012-1	PIPING INSTL INSTRUMENT STATIC SYSTEM USBL EFF UH-1B 60-3546 THRU 62-12555 USBL EFF C2-2106 THRU 63-13002 SEE FIG 6 & 7 FOR NHA NHA	UHB, UHE, UHH, UHV, UHX	EA	1
224		XCFZZ		97499	204-070-012-3	PIPING INSTL INSTRUMENT STATIC SYSTEM USBL EFF (UH-1B) 63-8500 & SUBSEQUENT USBL EFF 64-13492 THRU 64-13901 SEE FIG 6 & 7 FOR NHA HA	UHB, UHE, UHH, UHV, UHX	EA	1
224		XCFZZ		97499	204-070-012-7	PIPING INSTL INSTRUMENT STATIC SYSTEM USBL EFF 65-9565 THRU 65-12895 SEE FIG 6 & 7 FOR NHA	UHE, UHH, UHV, UHX	EA	1
224	1	PAOZZ	4730-00-834-9560	96906	MS24392D4	NIPPLE, TUBE	UHB, UHE, UHH, UHV, UHX	EA	4
224	2	PAOZZ	5330-00-805-2966	96906	MS28778-4	PACKING, PREFORMED	UHB, UHE, UHH, UHV, UHX	EA	V
224	3	PAOZZ	4730-00-722-1207	96906	MS24402D4	TEE, TUBE	UHB, UHE, UHH, UHV, UHX	EA	2
224	4	PAOZZ	4730-00-221-2115	88044	AN929-4	CAP, TUBE	UHB, UHE, UHH, UHV, UHX	EA	2
224	5	MFOZZ	DELETED	97499	204-070-110-153	TUBE ASSEMBLY, METAL	UHB, UHE, UHH, UHV, UHX	EA	2
224	6	MFOZZ	DELETED	97499	204-070-110-155	TUBE ASSEMBLY, METAL	UHB, UHE, UHH, UHV, UHX	EA	2
224	7	PAOZZ	5310-00-282-7823	96906	MS2440004	NUT, PLAIN, HEXAGON	UHB, UHE, UHH, UHV, UHX	EA	8
224	8	PAOZZ	5310-00-187-2401	88044	AN960PD716	WASHER, FLAT	UHB, UHE, UHH, UHV, UHX	EA	2
224	9	PAOZZ	4730-00-803-5049	96906	MS2439604	ELBOW, TUBE	UHB, UHE, UHH, UHV, UHX	EA	3
224	10	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW, MACHINE	UHB, UHE, UHH, UHV, UHX	EA	4
224	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING. EXTENDED WASHER, HEXAGON	UHB, UHE, UHH, UHV, UHX	EA	6
224	12	PAOZZ	5340-00-151-5997	96906	MS21122-4	CLAMP, LOOP	UHB, UHE, UHH, UHV, UHX	EA	4
224	13	MFOZZ	DELETED	97499	204-070-110-65	TUBE ASSEMBLY, METAL	UHB, UHE, UHH, UHV, UHX	EA	1
224	13A	MFOZZ	DELETED	97499	204-070-110-67	TUBE ASSEMBLY, METAL	UHB, UHE, UHH, UHV, UHX	EA	1
224	14	PAOZZ	4730-00-725-4351	96906	MS24394D4	ELBOW, TUBE	UHB, UHE, UHH, UHV, UHX	EA	6
224	16	MFOZZ		96906	MS8000E1808	HOSE ASSEMBLY	UHB, UHE, UHH, UHV, UHX	EA	4
224	17	MFOZZ	DELETED	96906	MS8000E300A	HOSE ASSEMBLY	UHB, UHE, UHH, UHV, UHX	EA	2
224	18	PAOZZ	4730-00-186-9961	96906	MS20822-4D	ELBOW, PIPE TO TUBE	UHB, UHE, UHH, UHV, UHX	EA	1
224	19	PAOZZ	4730-00-834-9560	96906	MS24392-D4	NIPPLE, TUBE	UHB, UHE, UHH, UHV, UHX	EA	2
224	20	PAOZZ	4730-00-684-7451	96906	MS2439904	REDUCER, TUBE	UHB, UHE, UHH, UHV, UHX	EA	1
224	21	PAOZZ	4730-00-240-5905	88044	AN816-4D	ADAPTER, STRAIGHT PIPE TO TUBE	UHB, UHE, UHH, UHV, UHX	EA	1
224	22	PAOZZ	5306-00-182-2062	88044	AN3H11A	BOLT, MACHINE	UHB, UHE, UHH, UHV, UHX	EA	2
224	23	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT	UHB, UHE, UHH, UHV, UHX	EA	2
224	24	PAOZZ	6610-00-677-5976	18631	PDG0190	MANIFOLD, AIRCRAFT	UHB, UHE, UHH, UHV, UHX	EA	1

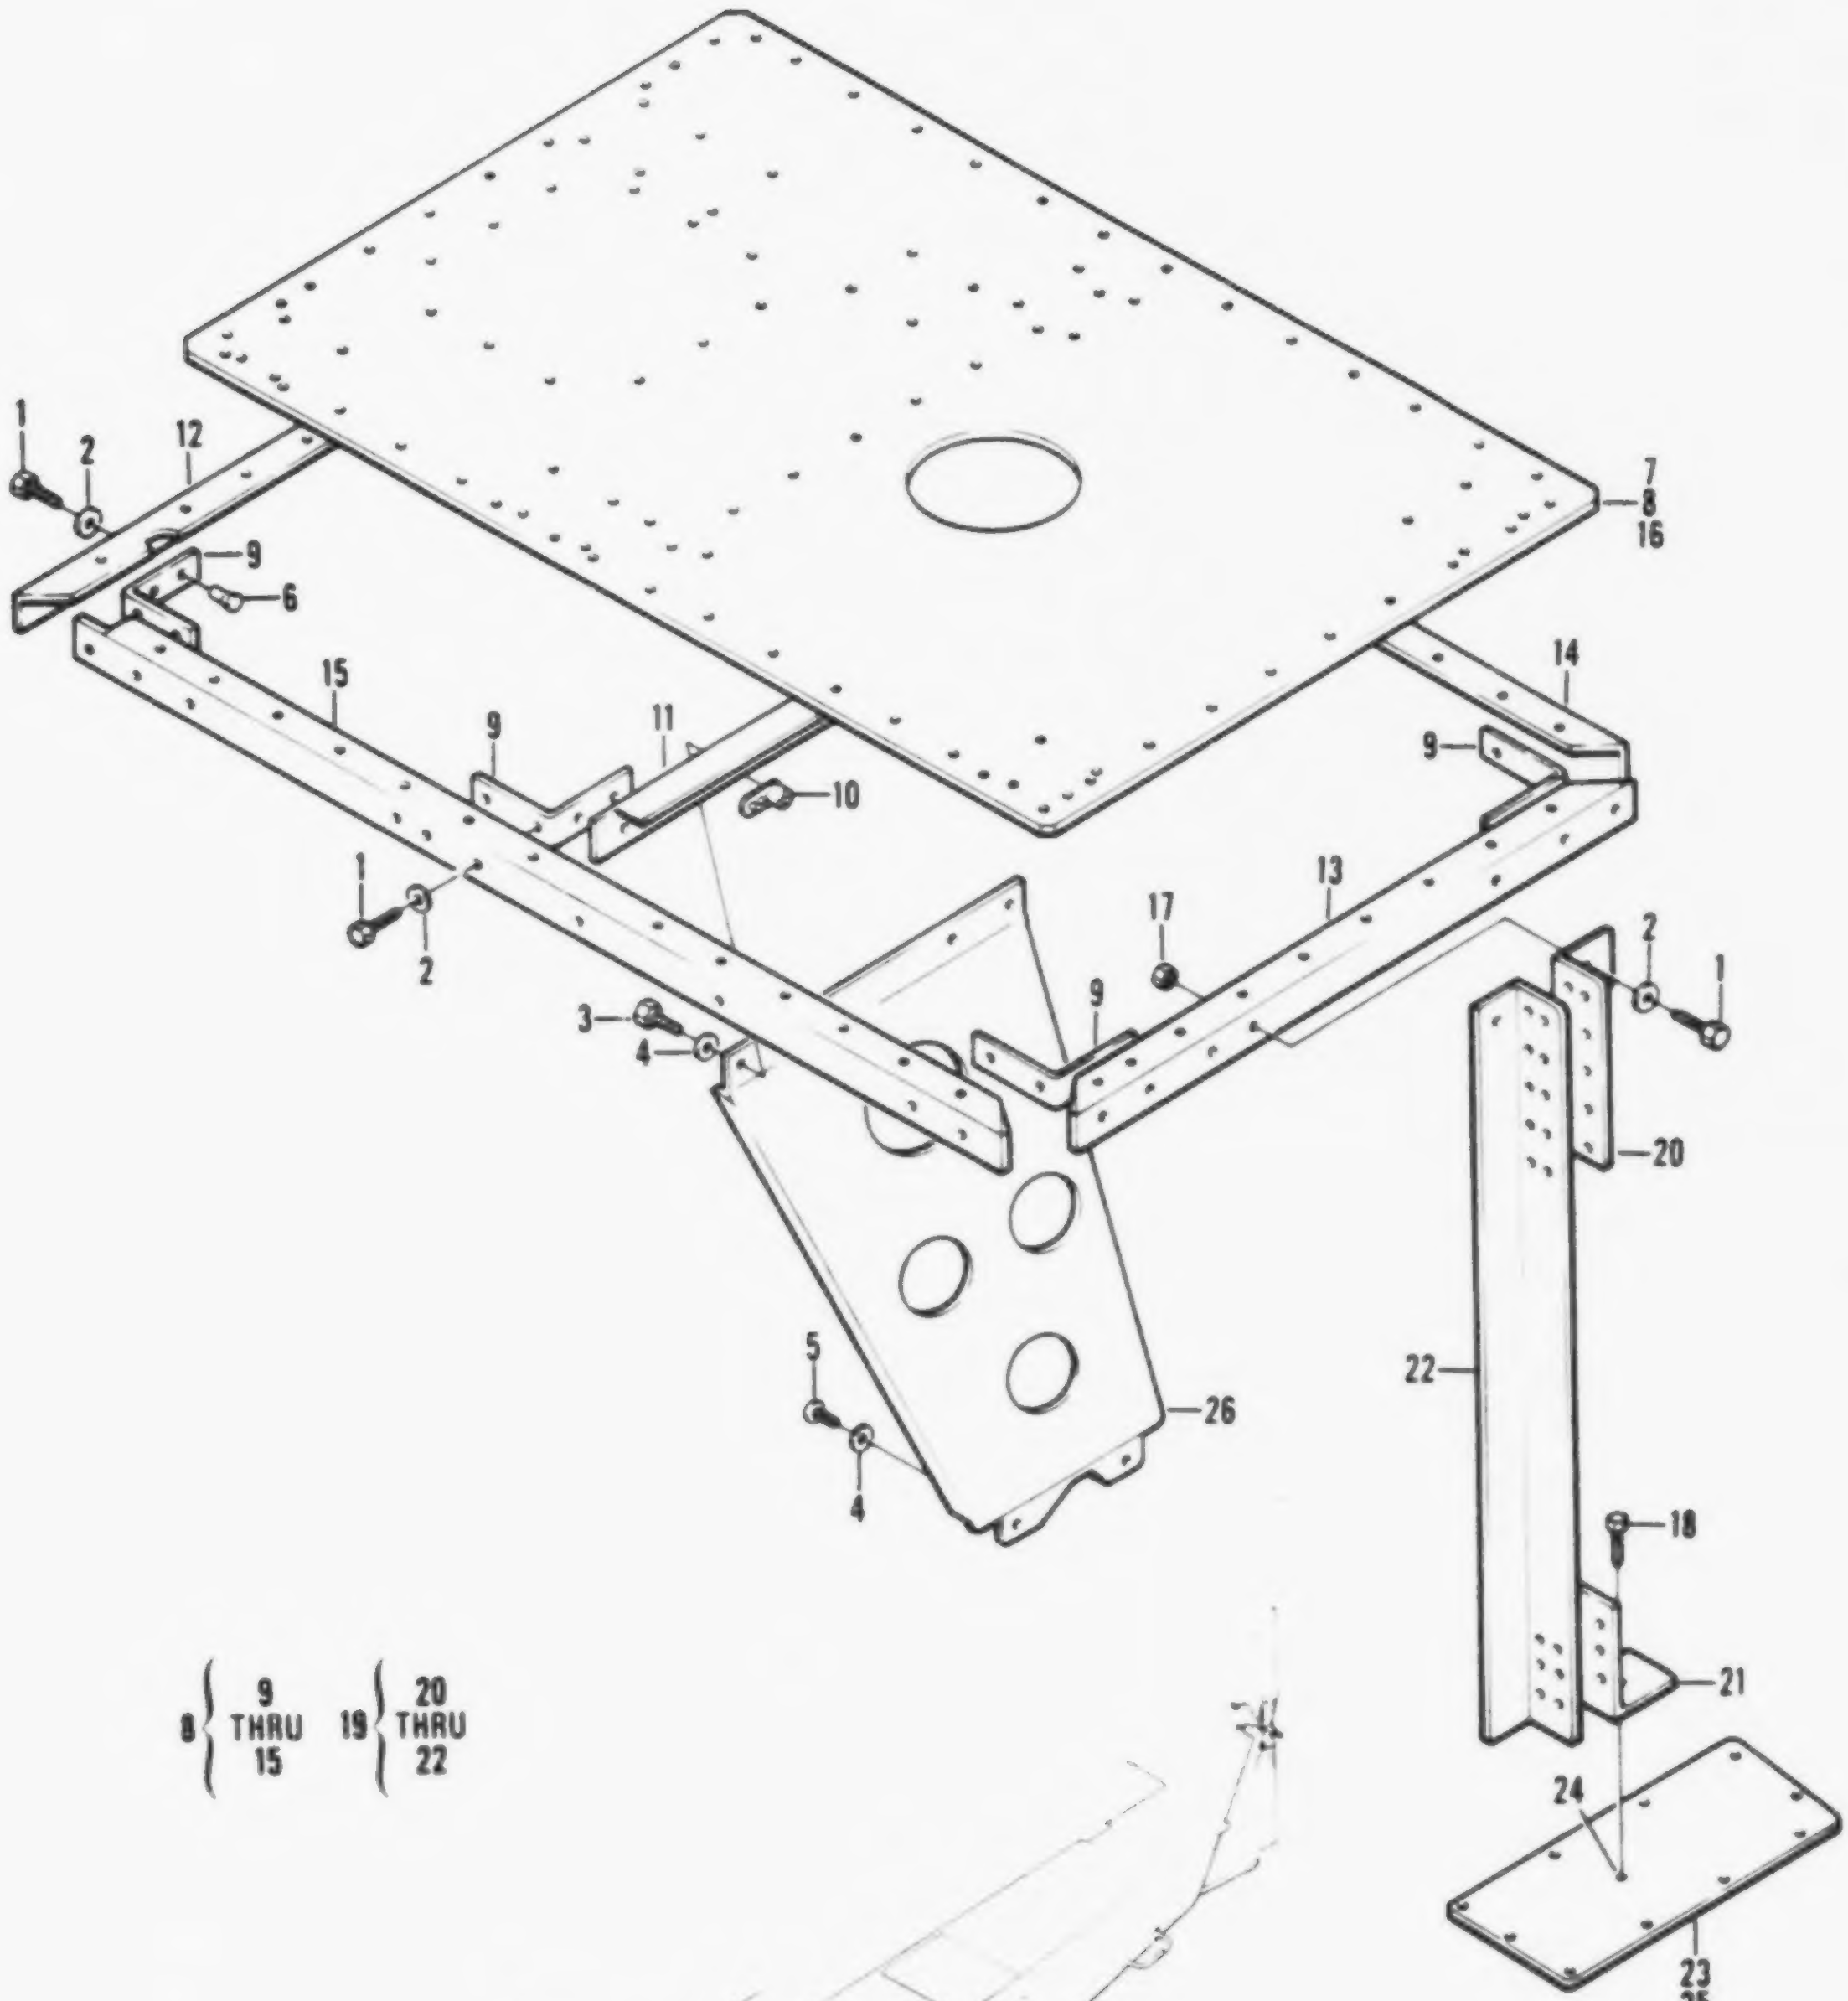
1
2
12
9
6
7
8
16
15
9
11
10
14
9
1
2
17
13
2
1
3
4
9
20
22
5
4
26
18
21
24
23
25
8 { 9 THRU 15
19 { 20 THRU 22
27
29
28

Figure 224A. ASN-86 and ARN-103 Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
224A		XCFZZ		20309	ES-F-213930	ASN86 AND ARN103 ASSEMBLIES AND INSTALLATION SEE FIG.5B FOR NHA UHX	EA	1
224A	1	PAOZZ	5306-00-151-2541	88044	AN4C-5	.BOLT,MACHINE UHX	EA	17
224A	2	PAOZZ	5310-00-809-4058	96906	MS27183-10	.WASHER,FLAT UHX	EA	18
224A	3	PAOZZ	5306-00-145-7020	88044	AN3C-5	.BOLT,MACHINE UHX	EA	4
224A	4	PAOZZ	5310-00-809-8546	96906	MS27183-8	.WASHER,FLAT UHX	EA	6
224A	5	PAOZZ	5306-00-145-7022	88044	AN3C-7	.BOLT MACHINE UHX	EA	2
224A	6	PAOZZ		32831	604D4-74-70	.FASTENER,STRUCTURAL UHX	EA	2
224A	7	XDOOO		20309	ES-D-213925	.BRACKET ASSY UHX	EA	1
224A	8	XDOOO		20309	ES-D-213926	..SUPPORT,SHELF ASSY UHX	EA	1
224A	9	XDOZZ		20309	ES-D-213926-6	...STRAP UHX	EA	5
224A	10	PAOZZ	5310-00-732-0711	96906	MS21052L3	...NUT,SELF-LOCKING,PL UHX	EA	4
224A	11	XDOZZ		20309	ES-D-213926-2	...ANGLE UHX	EA	1
224A	12	XDOZZ		20309	ES-D-213926-1	...ANGLE UHX	EA	1
224A	13	XDOZZ		20309	ES-D-213926-3	...ANGLE UHX	EA	1
224A	14	XDOZZ		20309	ES-D-213926-4	...ANGLE UHX	EA	1
224A	15	XDOZZ		20309	ES-D-213926-5	...ANGLE UHX	EA	1
224A	16	XDOZZ		20309	ES-D-213927	..TOP SHELF UHX	EA	1
224A	17	PAOZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING,HE UHX	EA	2
224A	18	PAOZZ		88044	AN4C-10	.SCREW, MACHINE UHX	EA	1
224A	19	XDOOO		20309	ES-D-213922	.SUPPORT ASSY UHX	EA	1
224A	20	XDOZZ		20309	ES-C-213924-1	..BRACKET,ANGLE UHX	EA	1
224A	21	XDOZZ		20309	ES-C-213924-2	..BRACKET,ANGLE UHX	EA	1
224A	22	XDOZZ		20309	ES-C-213923	..BRACKET,ANGLE UHX	EA	1
224A	23	XDOOO		20309	ES-C-213928	.PLATE,STRUCT,A/C UHX	EA	1
224A	24	PAOZZ	5310-00-728-5519	96906	MS21078-4	..NUT,SELF-LOCKING,PL UHX	EA	1
224A	25	MFOZZ		20309	ES-C-213928-1	..PLATE,STRUCT A/C UHX	EA	1
224A	25	XDOZZ		20309	ES-D-221730	.BRACKET,STIFFENER UHX	EA	1
224A	27	XDJOO		20309	ES-D-221557	.ANTANNA,TOP,INSTL AT-741()/ARN SEE FIG 69 FOR BREAKDOWN UHX	EA	1
224A	28	XDOOO		20309	ES-D-221556	.ANTANNA,BOTTOM, INSTL,AT-741()ARN SEE FIG 65 FOR BREAKDOWN UHX	EA	1
224A	29	XCFZZ		20309	ES-F-221526	.INSTL OF ATTITUDE INSTALLATION OF ATTITUDE HEADING REF SET FOR AN/ASN-86 SEE FIG. 16F FOR BREAKDOWN UHX	EA	1

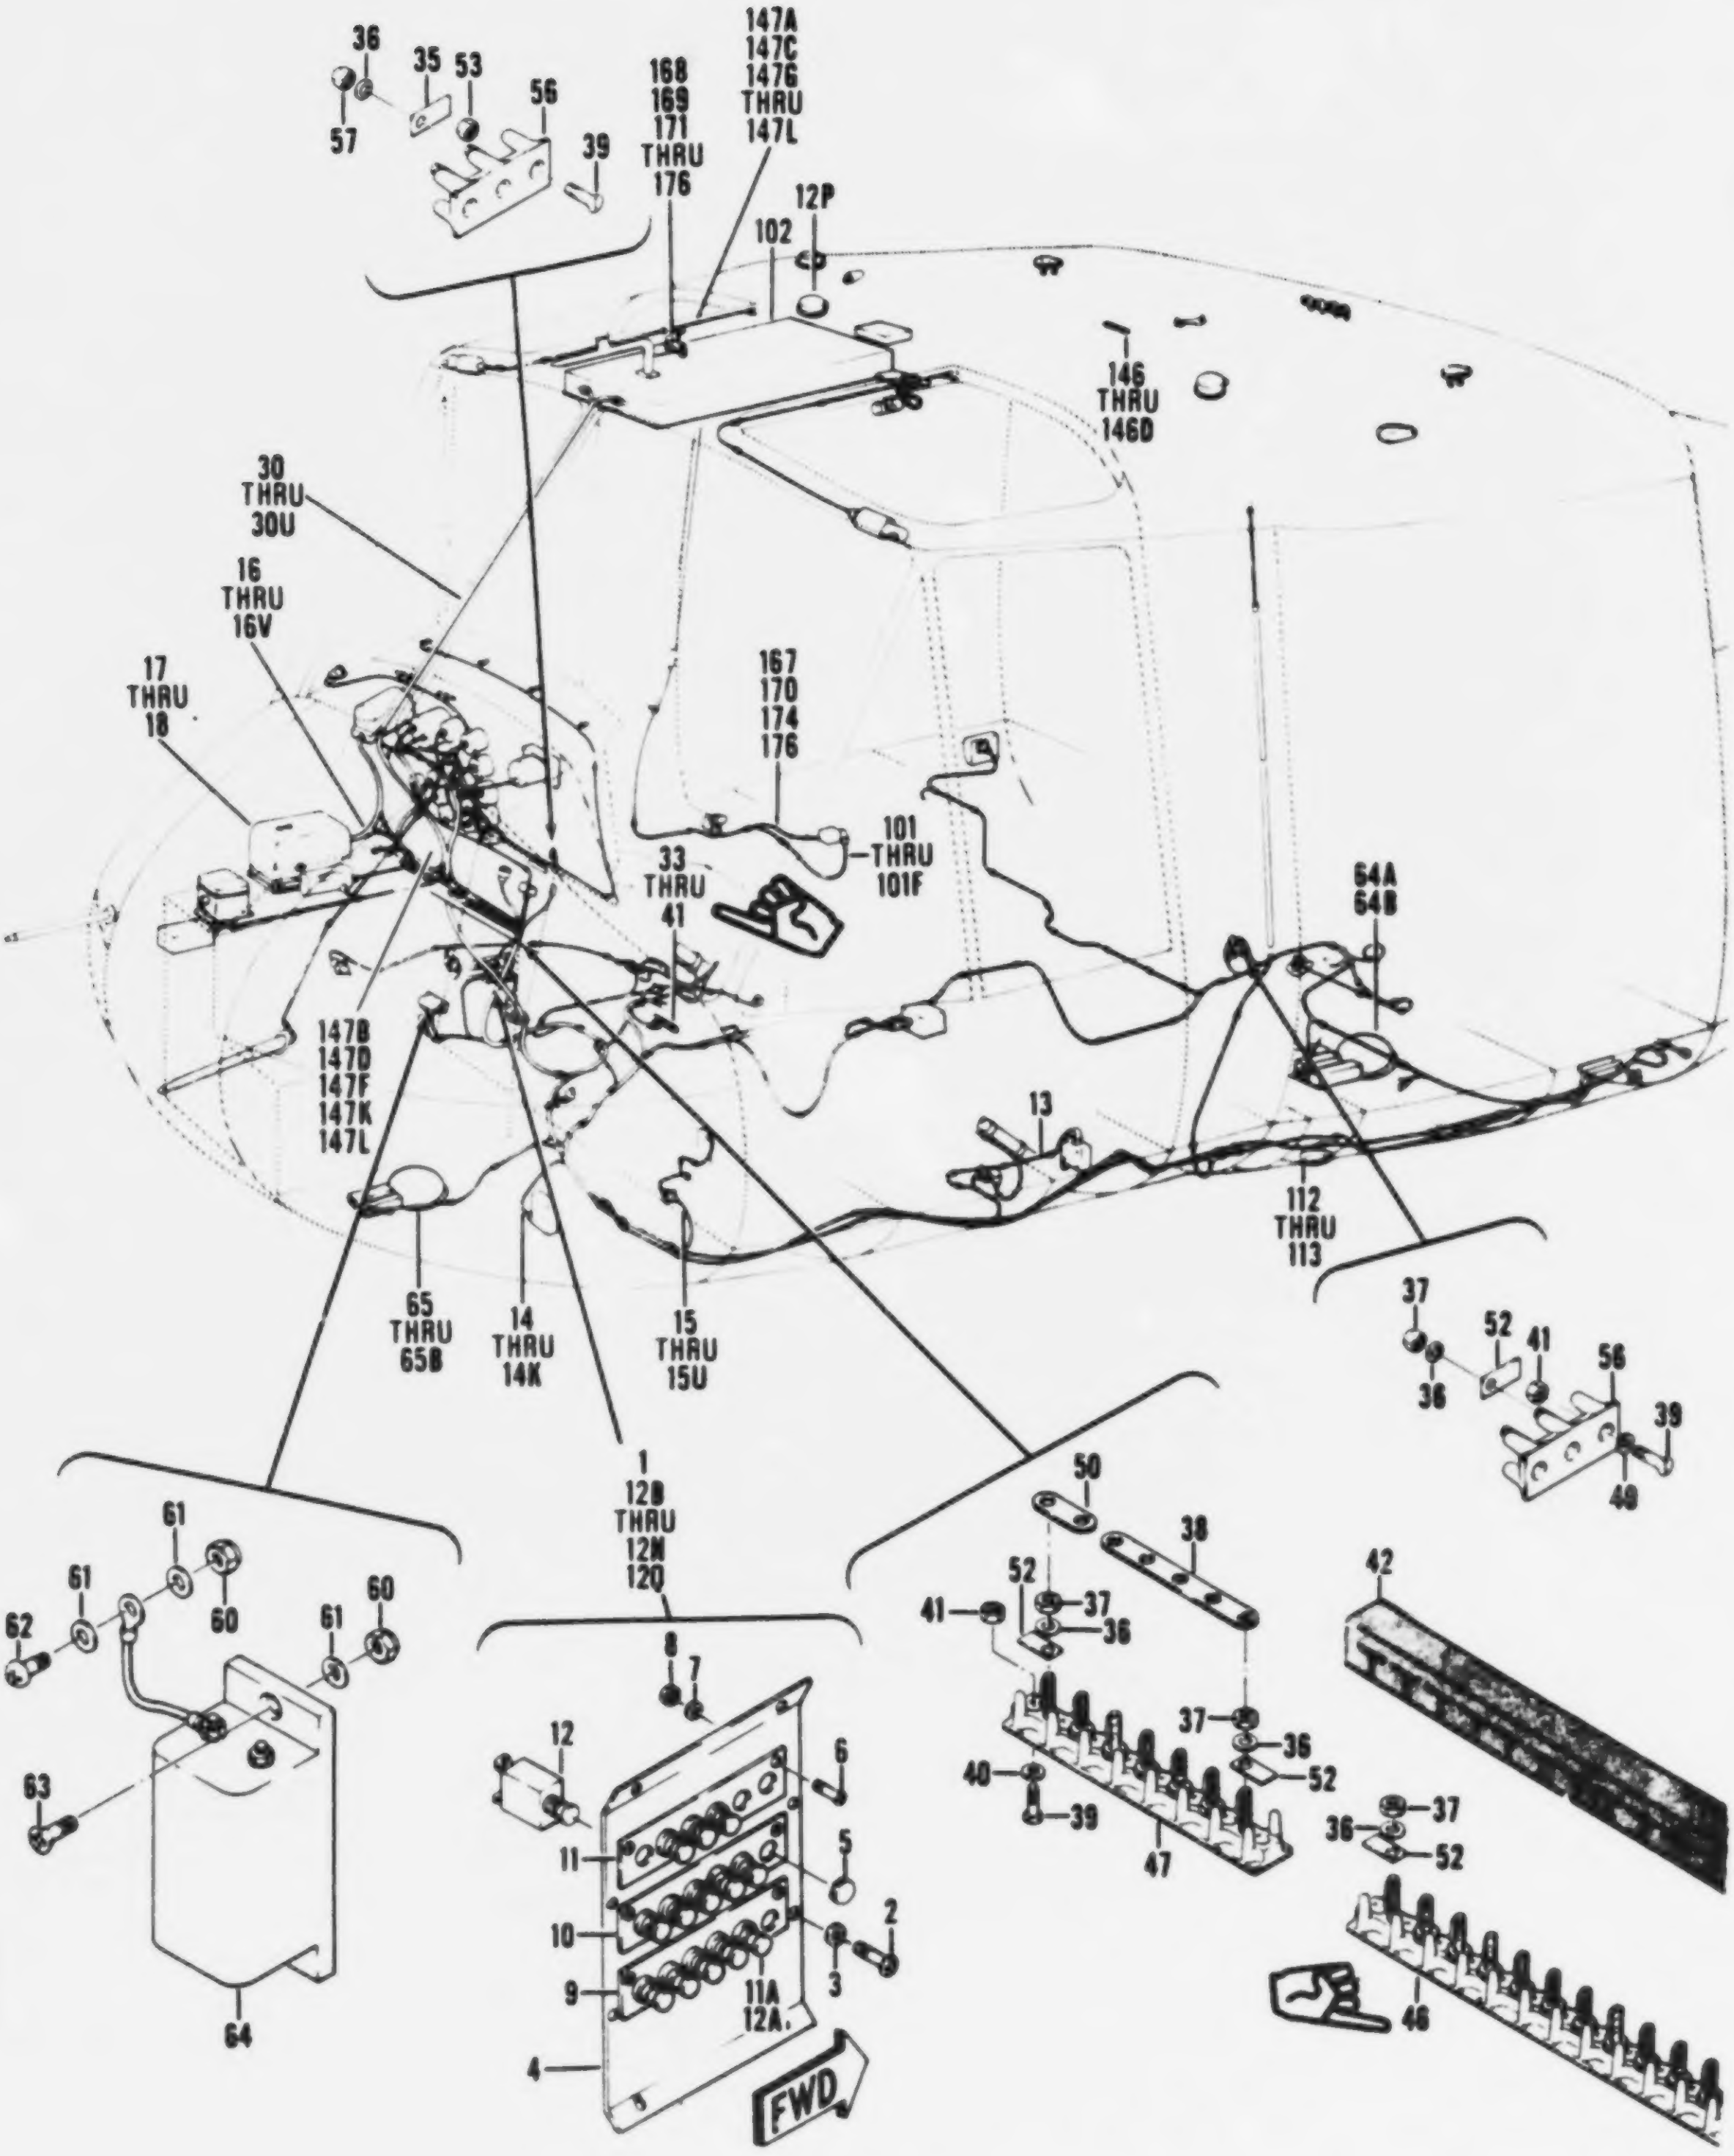
36
35
53
56
57
39
168
169
171
THRU
176
147A
147C
147G
THRU
147L
12P
102
146
THRU
146D
30
THRU
30U
16
THRU
16V
17
THRU
18
167
170
174
176
101
THRU
101F
33
THRU
41
64A
64B
147B
147D
147F
147K
147L
13
112
THRU
113
65
THRU
65B
14
THRU
14K
15
THRU
15U
37
52
41
56
36
39
40
1
12B
THRU
12N
12Q
50
38
61
61
60
61
60
62
63
64
8
7
12
6
11
5
10
2
3
9
11A
12A
4
FWD
42
52
37
41
36
37
36
52
40
39
47
37
36
52
46

Figure 225. Electrical Installation, Forward Section (Sheet 1 of 3)

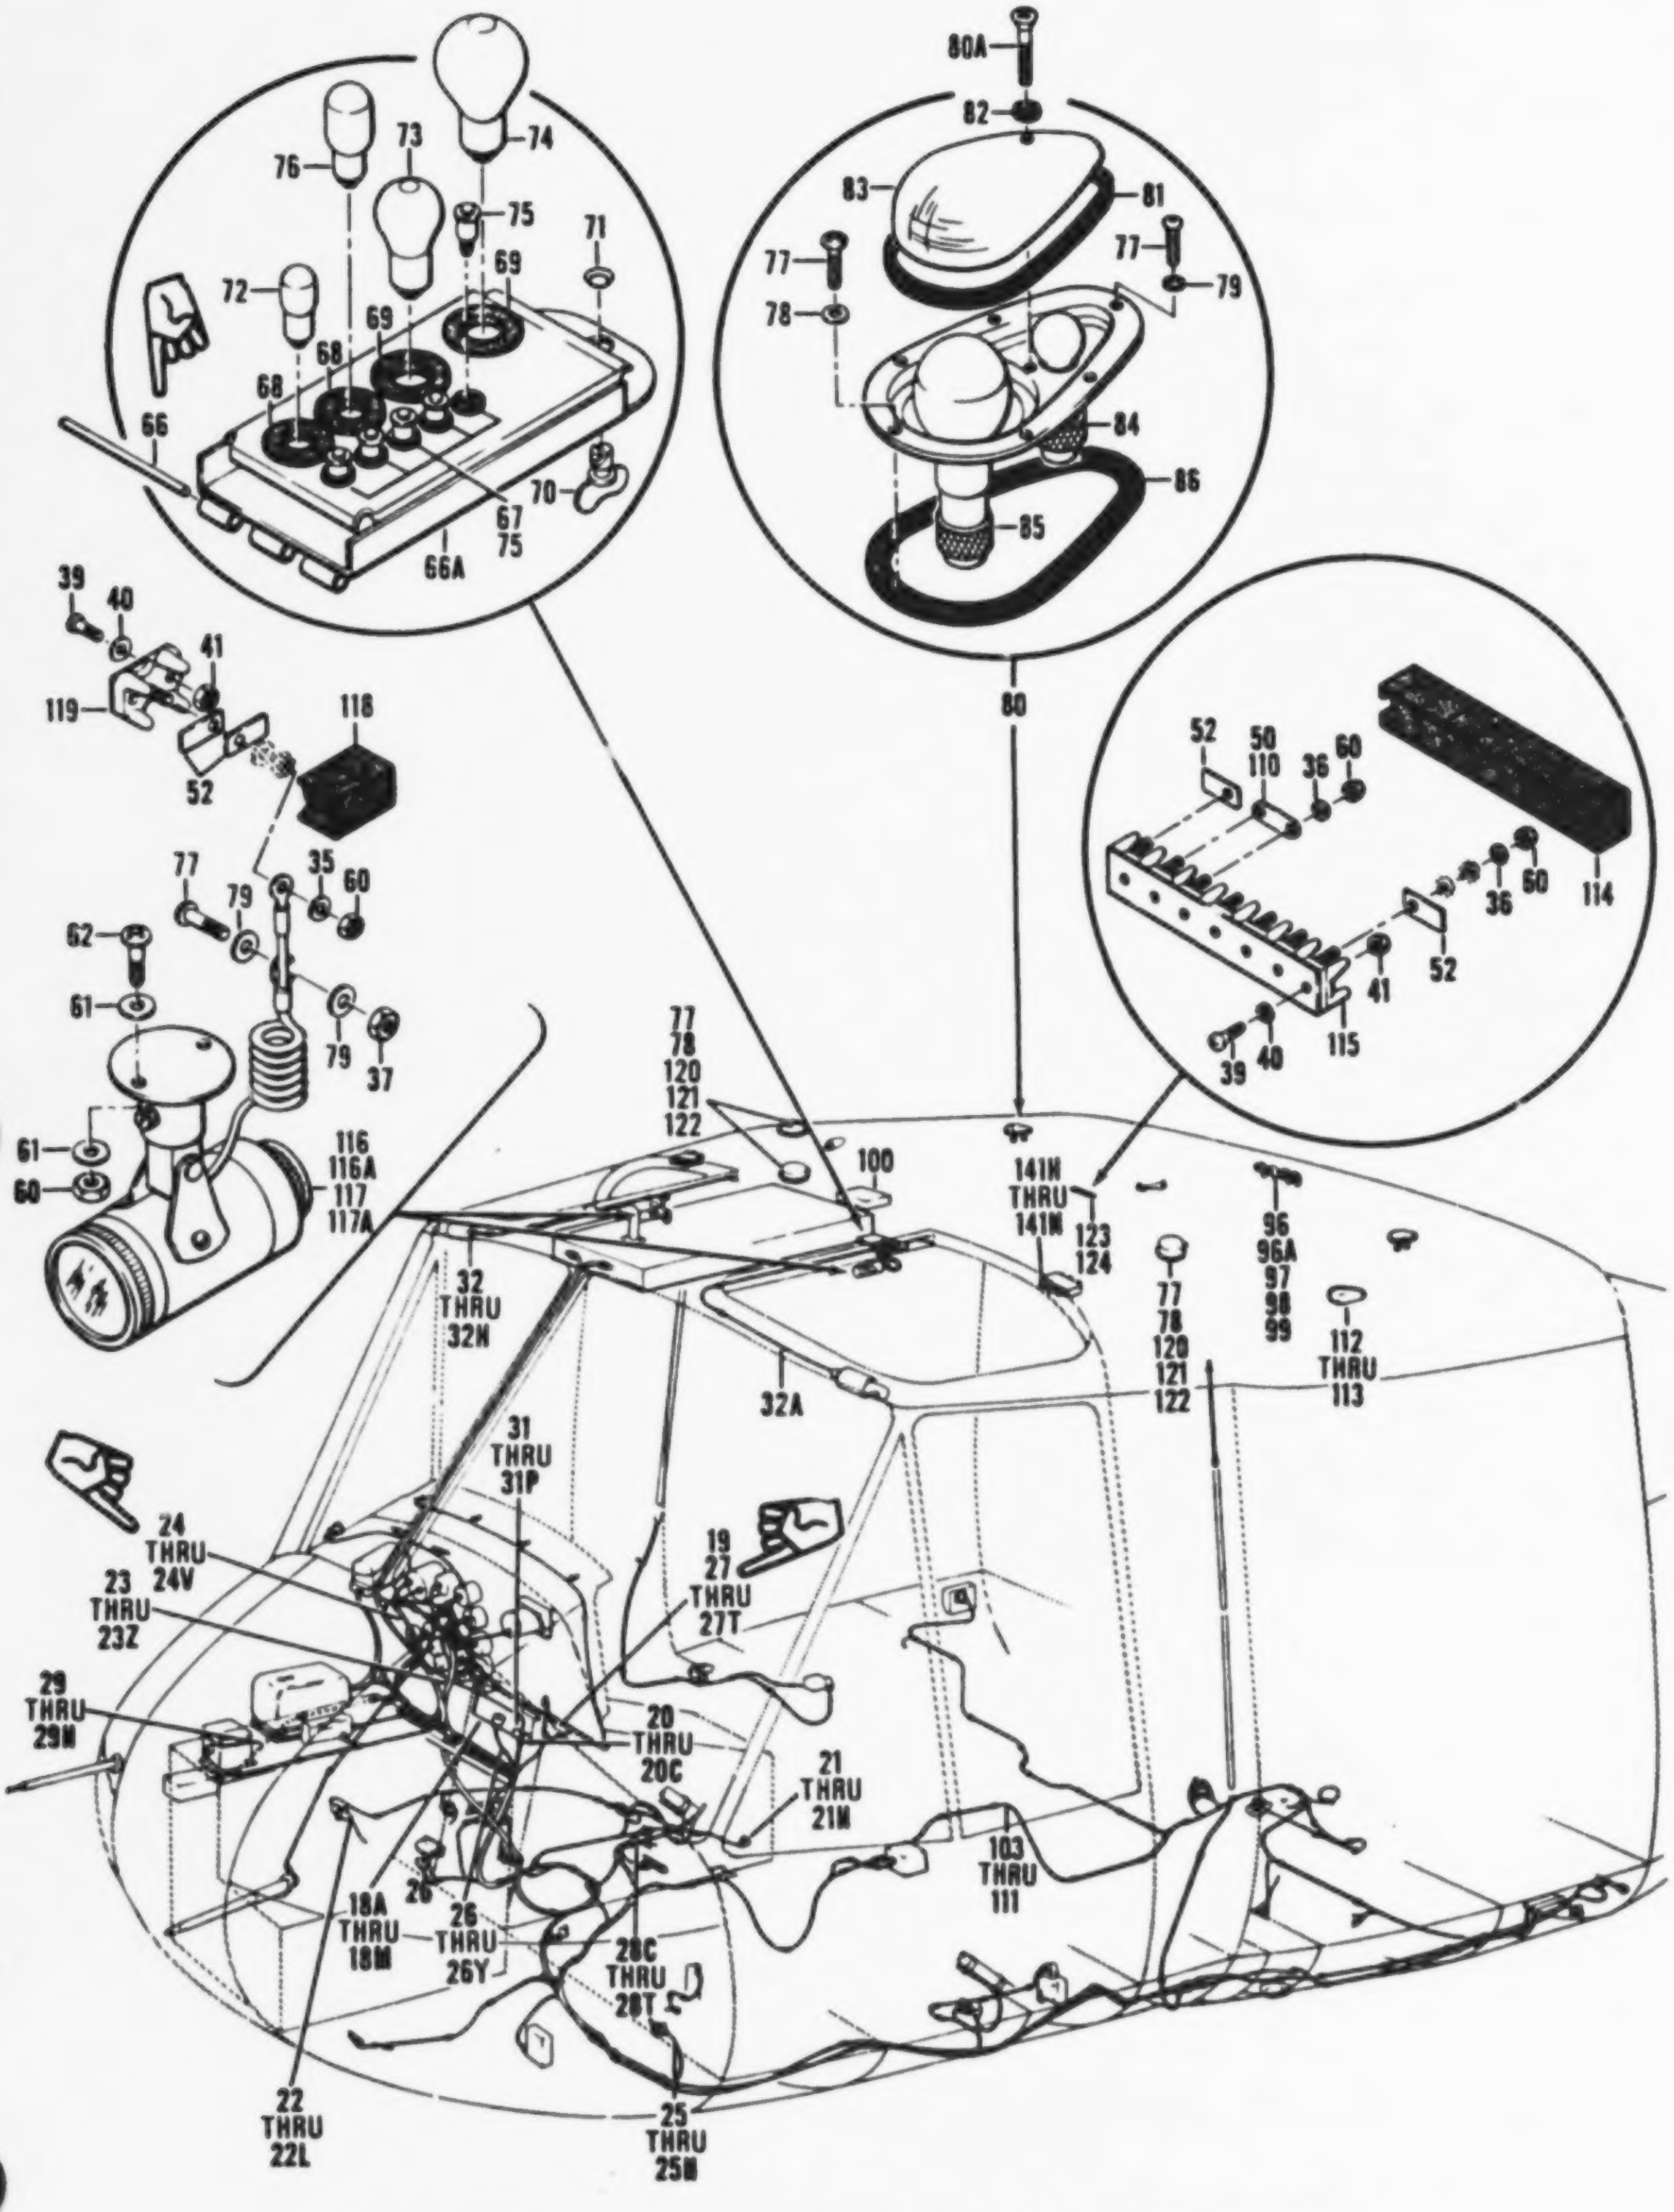
76
73
74
75
71
72
69
69
68
68
66
67
75
70
66A
80A
82
83
81
77
77
79
78
84
86
85
80
39
40
41
119
118
52
77
35
60
79
62
61
79
37
61
60
116
116A
117
117A
52
50
110
36
60
114
60
36
52
41
115
39
40
77
78
120
121
122
100
141H
THRU
141N
123
124
96
96A
97
98
99
32
THRU
32N
77
78
120
121
122
112
THRU
113
32A
31
THRU
31P
24
THRU
24V
23
THRU
23Z
19
27
THRU
27T
29
THRU
29N
20
THRU
20C
21
THRU
21N
103
THRU
111
18A
THRU
18M
26
26
THRU
26Y
28C
THRU
28T
22
THRU
22L
25
THRU
25N

Figure 225. Electrical Installation, Forward Section (Sheet 2 of 3)

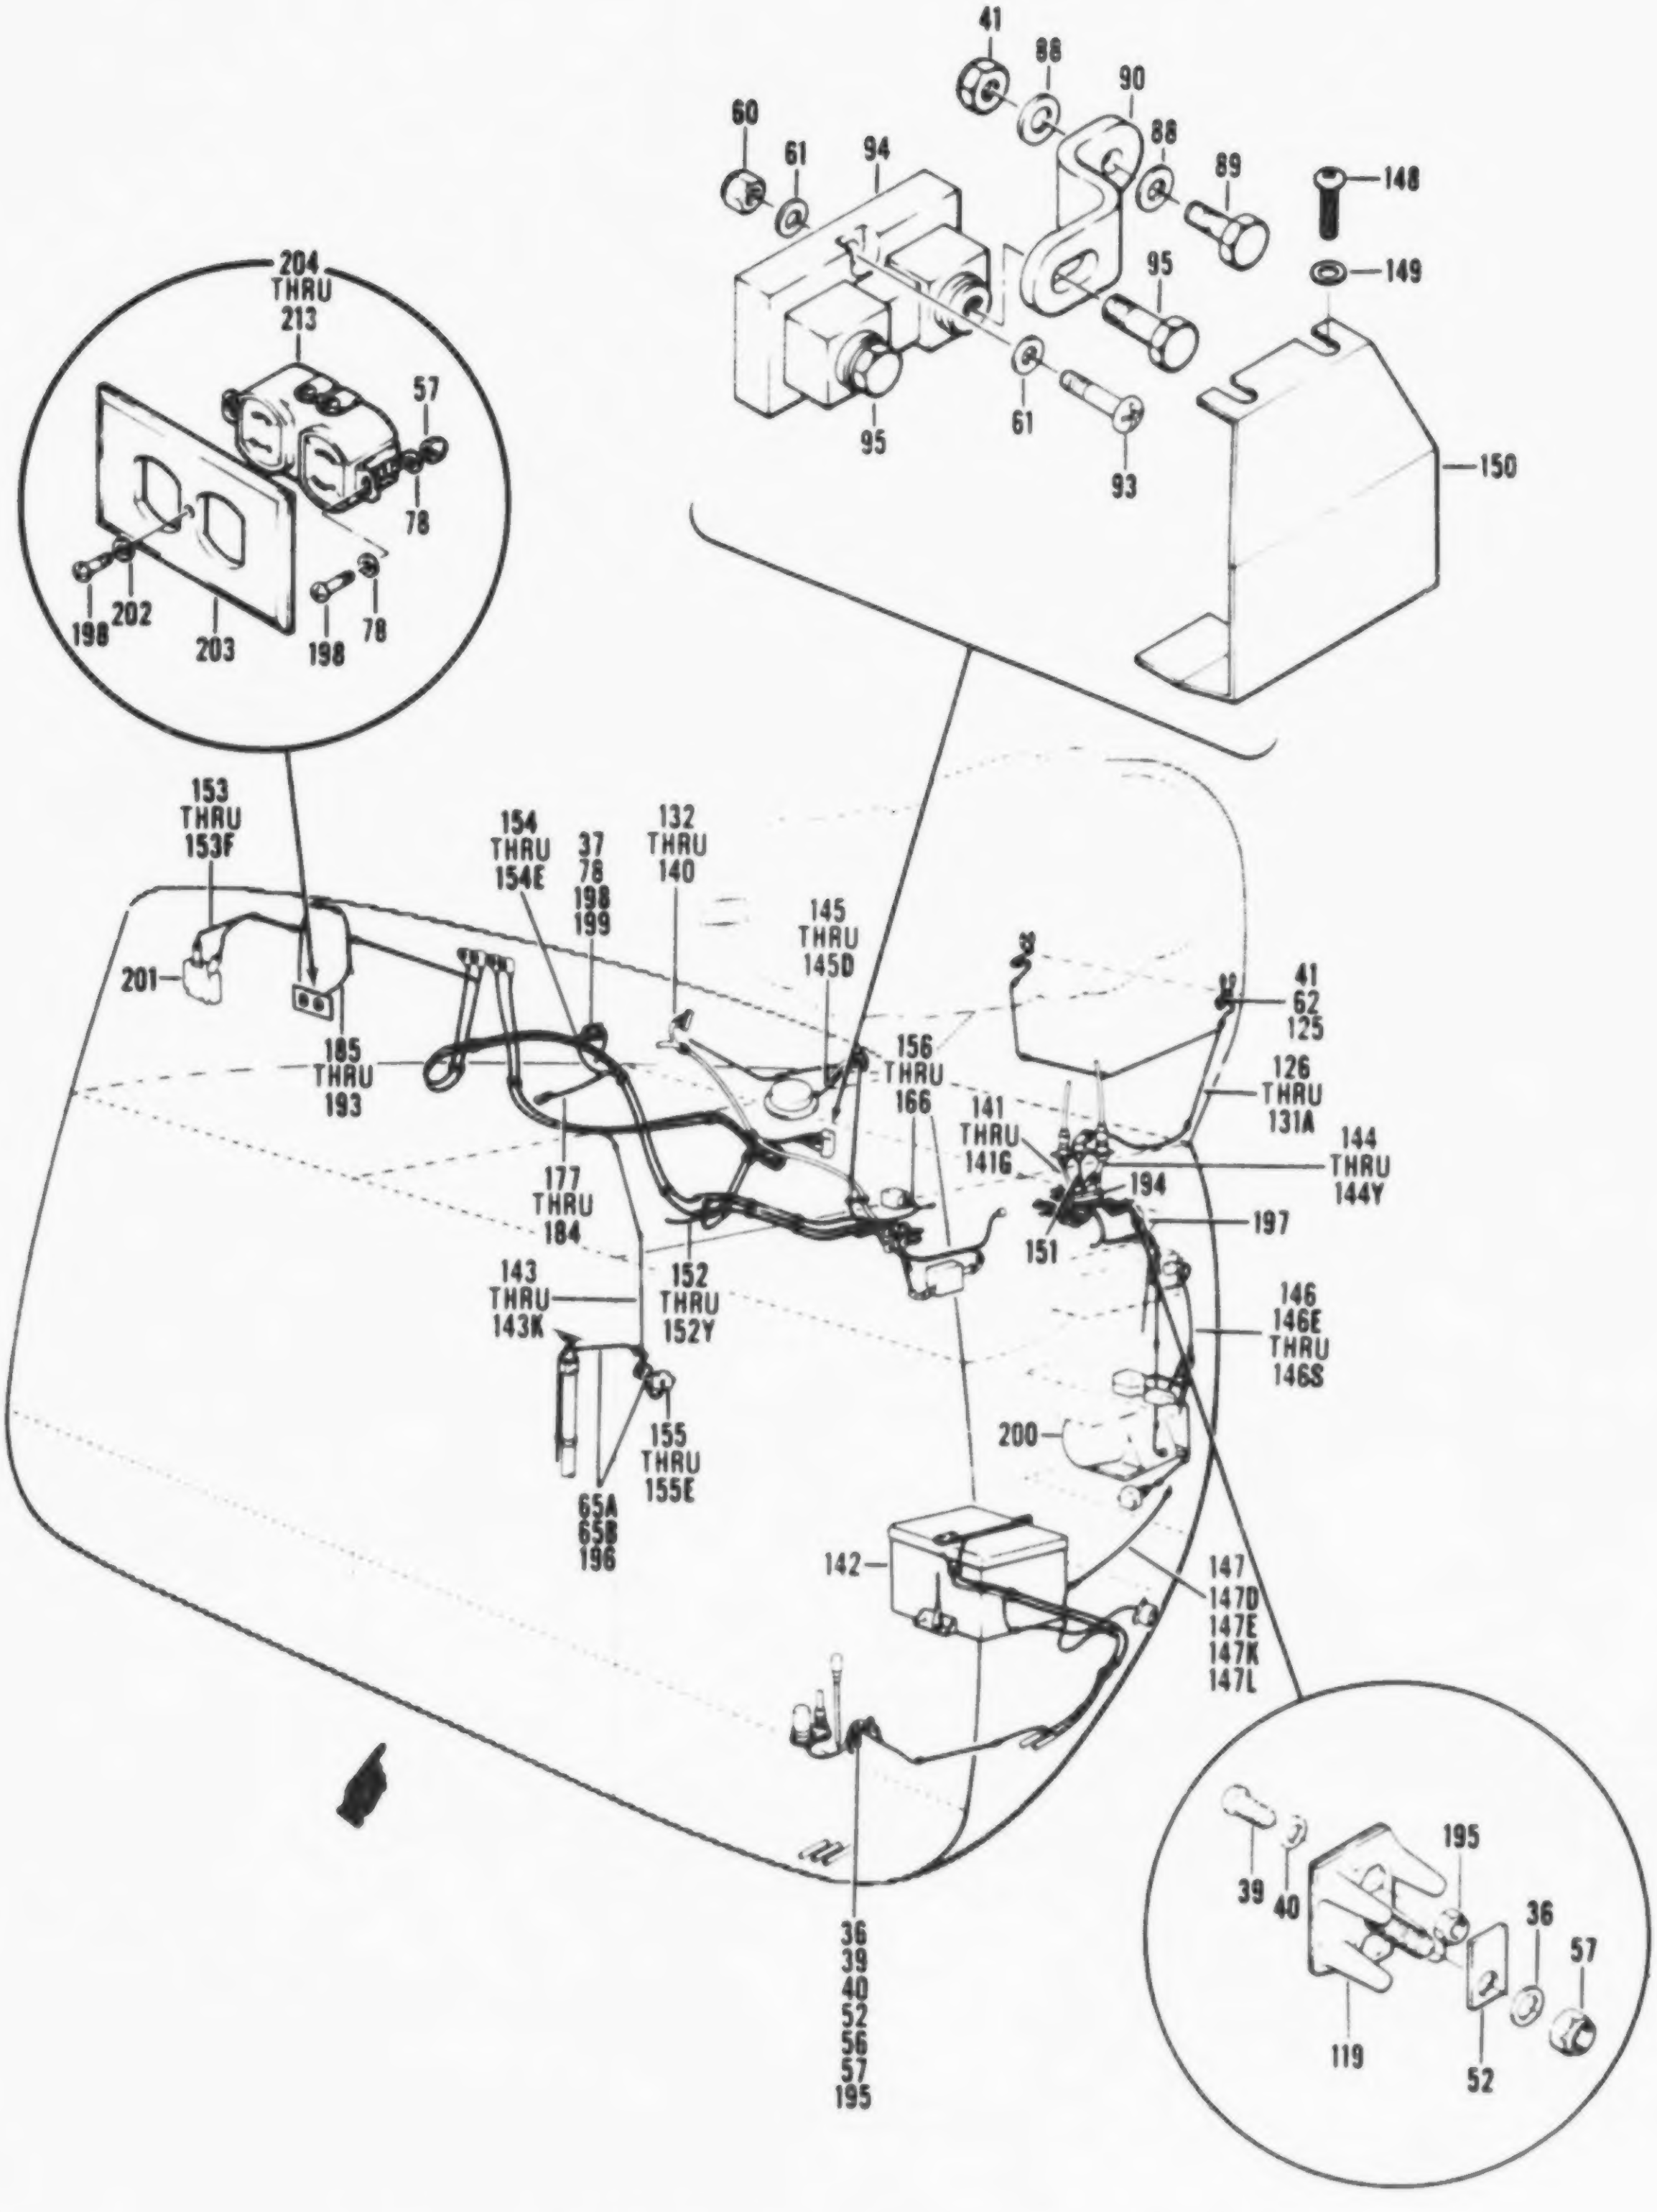
41
88
90
60
61
94
88
89
148
95
149
95
61
93
150
204 THRU 213
57
78
198
202
203
198
78
153 THRU 153F
154 THRU 154E
37 78 198 199
132 THRU 140
145 THRU 145D
201
185 THRU 193
41 62 125
156 THRU 166
126 THRU 131A
141 THRU 141G
144 THRU 144Y
194
197
177 THRU 184
151
143 THRU 143K
152 THRU 152Y
146 146E THRU 146S
155 THRU 155E
200
65A 65B 196
142
147 147D 147E 147K 147L
195
39
40
36
57
119
52
36 39 40 52 56 57 195

Figure 225. Electrical Installation, Forward Section (Sheet 3 of 3)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(C)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
225		XCFZZ		97499	204-075-017-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 60-3546 THRU 60-3619 SEE FIG.6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-017-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 61-686 THRU 61-803 SEE FIG.6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-017-5	ELECTRICAL INSTL FORWARD SECTION USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-043-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 62-1997 THRU 62-12555 SEE FIG 6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-044-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 63-8500 THRU 63-8658 SEE FIG.6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-044-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 63-8659 THRU 63-12952 SEE FIG.6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-063-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 64-13902 THRU 64-14100 SEE FIG.6 FOR NHA ... UHB	EA	1
225		XCFZZ		97499	204-075-063-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA ... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-075-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 65-9416 THRU 65-12772 SEE FIG.6 FOR NHA ... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-083-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-492 THRU 66-601 SEE FIG 6 FOR NHA ... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-083-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-602 THRU 66-15022 SEE FIG.6 FOR NHA ... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-083-5	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-15023 THRU 66-15105 SEE FIG.6 FOR NHA ... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-083-9	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-15106 THRU 66-15147 SEE FIG.6 FOR NHA ... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-083-7	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-15148 & SUBSEQUENT SEE FIG 6 FOR NHA ... UHC,UHM	EA	1
225	1	XCFZZ		97499	204-075-108-9	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 204-075-017-1,-3,& -5 ... UHB	EA	1
225	1	XCFZZ		97499	204-075-108-21	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 204-075-043-1, 204-075-044-1,-3,& 204-075-063-1 ... UHB	EA	1
225	1	XCFZZ		97499	204-075-178-1	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 204-075-063-3 ... UHC,UHM	EA	1
225	1	XCFZZ		97499	204-075-178-5	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 204-075-075-1 & 204-075-083-1 ... UHC,UHM	EA	1
225	1	XCFZZ		97499	204-075-178-13	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 204-075-083-3 & -5 ... UHC,UHM	EA	1
225	1	XCFZZ		97499	204-075-178-21	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 204-075-083-7 ... UHC,UHM	EA	1
225	2	PAOZZ	5305-00-984-6193	96906	MS35206-245	..SCREW,MACHINE ... UHB,UHC,UHM	EA	8
225	3	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT ... UHB,UHC,UHM	EA	8
225	4	AFOFZ	1560-00-731-8924	97499	204-075-108-11	..PANEL ASSEMBLY U/O PN 204-075-108-9 ... UHB	EA	1
225	4	AFOFO	1560-00-299-0985	97499	204-075-108-23	..PANEL ASSEMBLY U/O PN 204-075-108-21 ... UHB	EA	1
225	4	AFOFZ	6110-00-924-0455	97499	204-075-178-3	..PANEL ASSEMBLY U/O PN 204-075-178-1 ... UHC,UHM	EA	1
225	4	AFOFZ	6110-00-924-0454	97499	204-075-178-7	..PANEL ASSEMBLY U/O PN 204-075-178-5 ... UHC,UHM	EA	1
225	4	AFOFZ	6110-00-927-3630	97499	204-075-178-15	..PANEL ASSEMBLY U/O PN 204-075-178-13 ... UHC,UHM	EA	1
225	4	AFOFZ	6110-00-891-3123	97499	204-075-178-23	..PANEL,CIRCUIT BREAK U/O PN 204-075-178-21 ... UHC,UHM	EA	1
225	4	XDFZZ	1680-00-761-2529	97499	204-075-163-1	...PANEL,CIRCUIT BREAK ... UHB,UHC,UHM	EA	1
225	4	PAFZZ	5975-00-902-5073	97499	204-075-164-41	...PANEL,BLANK U/O PN 204-075-178-23 ... UHC,UHM	EA	1
225	5	PAOZZ	5340-00-691-2734	83058	BS51338K5900	...BUTTON,PLUG 3 EA U/O P/N 204-075-178-3 &-15 2 EA U/O P/N 204-075-178-7 4 EA U/O P/N 204-075-178-23 ... UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	6	PBOZZ	5305-00-206-3716	96906	MS35214-25	...SCREW,MACHINE......UHB,UHC,UHM	EA	6
225	7	PAOZZ	5310-00-187-2398	88044	AN960PD6L	...WASHER,FLAT......UHB,UHC,UHM	EA	6
225	8	PAOZZ	5310-00-877-5622	96906	MS21044B06	...NUT,SELF-LOCKING, HEXAGON......UHB,UHC,UHM	EA	6
225	9	PAOZZ	9905-00-845-0958	97499	204-075-164-1	...PLATE,IDENTIFICATIO......UHB,UHC,UHM	EA	1
225	10	PAOZZ	9905-00-845-0960	97499	204-075-164-3	...PLATE,IDENTIFICATIO U/O PN 204-075-178-3 & -7 ......UHB,UHC,UHM	EA	1
225	10	PAOZZ	9905-00-928-6273	97499	204-075-164-15	...PLATE,IDENTIFICATIO U/O PN 204-075-178-15......UHC,UHM	EA	1
225	10	PAOZZ	5975-00-902-5073	97499	204-075-164-41	...PLATE,IDENTIFICATIO U/O PN 204-075-178-23......UHC,UHM	EA	1
225	11	PAOZZ	9905-00-063-9037	97499	204-075-164-9	...PLATE,IDENTIFICATIO U/O PN 204-075-178-3......UHB	EA	1
225	11	PAOZZ	9905-00-924-5649	97499	204-075-164-37	...PLATE,IDENTIFICATIO U/O PN 204-075-178-7......UHC,UHM	EA	1
225	11	PAOZZ	9905-00-924-5637	97499	204-075-164-35	...PLATE,IDENTIFICATIO U/O PN 204-075-178-15 & -23 ......UHC,UHM	EA	1
225	11A	PBOZZ	5925-00-929-7271	96906	MS22073-1 1/2	...CIRCUIT BREAKER U/O PN 204-075-178-3 & -7......UHC,UHM	EA	1
225	12	PAOZZ	5925-00-045-9095	76374	MP1501C	...CIRCUIT BREAKER 14 EA U/O P/N 204-075-178-3,-7 AND -15 13 EA U/O P/N 204-075-178-23......UHB,UHC,UHM	EA	14
225	12A	PAOZZ	5925-00-914-3505	96906	MS22073-2	...CIRCUIT BREAKER......UHB,UHC,UHM	EA	1
225	12B	AOOOZ		97499	204-075-425-5	...WIRING ASSEMBLY......UHB	EA	1
225	12C	AOOOO		97499	204-075-425-11	...WIRING ASSEMBLY U/O PN 204-075-178-3......UHC,UHM	EA	1
225	12D	AOOOO	6150-00-924-0430	97499	204-175-424-11	...WIRING ASSEMBLY U/O PN 204-075-178-15......UHC,UHM	EA	1
225	12E	AOOOO		97499	204-175-424-21	...WIRING ASSEMBLY U/O PN 204-075-178-23......UHC,UHM	EA	1
225	12F	PAOZZ	5940-00-813-0698	96906	MS25036-101	....TERMINAL,LUG......UHB	EA	6
225	12F	PAOZZ	5940-00-813-0698	96906	MS25036-101	....TERMINAL,LUG U/O PN 204-075-425-11 & 204-175-424-11 ......UHC,UHM	EA	1
225	12G	PAOZZ	5940-00-204-8966	96906	MS25036-102	....TERMINAL,LUG U/O PN 204-175-424-21......UHC,UHM	EA	1
225	12H	PAOZZ	5940-00-143-4771	96906	MS25036-103	....TERMINAL,LUG U/O PN 204-075-425-11......UHC,UHM	EA	1
225	12H	PAOZZ	5940-00-143-4771	96906	MS25036-103	....TERMINAL,LUG U/O PN 204-175-424-11 & -21......UHC,UHM	EA	2
225	12J	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 204-075-425-11......UHC,UHM	EA	1
225	12J	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 204-175-424-11......UHC,UHM	EA	31
225	12J	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 204-175-424-21......UHC,UHM	EA	30
225	12K	PBOZZ	6145-00-851-8505	96906	MS25190B20	....WIRE,ELECTRICAL......UHB,UHC,UHM	FT	V
225	12L	PAOZZ	5940-01-007-7875	81349	M7928/3-2	....SPLICE,CONDUCTOR U/O PN 204-075-425-11......UHC,UHM	EA	1
225	12M	PAOZZ	5935-00-660-7008	74545	5256	....CONNECTOR,RECEPTACL......UHC,UHM	EA	1
225	12N	MFOZZ		97499	85T4-10-12	....INSULATION TUBE......UHC,UHM	EA	1
225	12P	XCFZZ		97499	204-075-177-1	.PANEL INSTL CIRCUIT BREAKER,EXTERNAL STORES U/O PN 204-075-017-5 SEE FIG. 248 FOR BREAKDOWN......UHB	EA	1
225	12Q	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE......UHB	EA	6
225	13	AOOOO	1560-00-731-8935	97499	204-075-406-17	.CABLE ASSEMBLY FORE AND AFT FORCE TRIM......UHB,UHC,UHM	EA	1
225	14	AOOOO	1560-00-731-8936	97499	204-075-406-19	.CABLE ASSEMBLY LATERAL FORCE TRIM......UHB,UHC,UHM	EA	1
225	14A	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE TO CONNECTOR......UHB,UHC,UHM	EA	1
225	14B	PAOZZ	5935-00-875-3527	96906	MS3108R14S9SC	..CONNECTOR,PLUG,ELEC FORE & AFT MAG BRK. U/O PN 204-075-406-17......UHB,UHC,UHM	EA	1
225	14D	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL......UHB,UHC,UHM	FT	V
225	14E	PAOZZ	5935-00-062-0119	96906	MS3106R14S9S	..CONNECTOR,PLUG ELECTRICAL,LATERAL MAG BRK. U/O PN 204-075-406-19......UHB,UHC,UHM	EA	1
225	14H	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG......UHB,UHC,UHM	EA	1
225	14J	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG......UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	14K	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHB,UHC,UHM	FT	2
225	15	PAOZZ	5305-00-889-2998	96906	MS35206-216	.SCREW,MACHINE..........UHB,UHC,UHM	EA	4
225	15A	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT..........UHB,UHC,UHM	EA	8
225	15B	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	4
225	15C	PAOZZ	5305-00-543-5058	96906	MS35265-16	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
225	15D	AOOOZ	1560-00-732-1681	97499	204-075-423-5	.CABLE ASSY,COPILOTS CYCLIC STICK DISCONNECT U/O PN 204-075-017-1,-3 & -5..........UHB	EA	1
225	15D	AOOOZ	1560-00-567-3061	97499	204-075-939-1	.CABLE ASSY,COPILOTS CYCLIC STICK DISCONNECT U/O PN 204-075-043-1..........UHB	EA	1
225	15D	AOOOZ	1560-00-567-3043	97499	204-075-426-13	.CABLE ASSY,COPILOTS CYCLIC STICK DISCONNECT U/O (UH-1B) PN 204-075-044-1,-3,& 20 4-075-063-1 U/O (UH-1C) PN 204-075-063-3,204-075-075-1,204-0 75-083-1 & -5..........UHB,UHC,UHM	EA	1
225	15D	AOOOZ	1560-00-927-1280	97499	204-075-969-5	.CABLE ASSY,COPILOTS CYCLIC STICK DISCONNECT U/O PN 204-075-083-3,-5, -7,& -9..........UHC,UHM	EA	1
225	15D	AOOOZ	1560-00-928-1982	97499	204-075-977-13	.CABLE ASSY,COPILOTS CYCLIC STICK DISCONNECT U/O PN 204-075-083-1,-3, -5,-7,& -9..........UHC,UHM	EA	1
225	15E	PAOZZ	5935-00-801-6622	96906	MS3100R20-27SC	..CONNECTOR,RECEPTACL C PLT CYCLIC STICK. U/O PN 204-075-423-5..........UHB	EA	1
225	15F	PAOZZ	5935-00-972-5475	02660	69-6R10SL4S100	..CONNECTOR,PLUG,ELEC EMER COLL HYD. U/O PN 204-075-977-13..........UHC,UHM	EA	1
225	15G	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE CLAMP U/O PN 204-075-423-5..........UHB	EA	1
225	15H	PAOZZ	5935-00-226-1846	77820	PT00E20-27S	..RECEPTACLE,CONNECTO ELECTRICAL,C PLT CYCLIC STICK. U/O PN 204-075-939-1,204-075-13 & 204-075-969-5..........UHB,UHC,UHM	EA	1
225	15J	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-423-5, 204-075-939-1,& 204-075-426-13..........UHB,UHC,UHM	EA	1
225	15K	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-969-5..........UHC,UHM	EA	7
225	15L	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-977-13..........UHC,UHM	EA	1
225	15M	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-977-13..........UHC,UHM	EA	1
225	15N	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O UH-1C PN 204-075-969-5..........UHB,UHC,UHM	EA	1
225	15P	PAOZZ	5935-00-603-6966	96906	MS3418-24N	..CLAMP,CABLE..........UHB,UHC,UHM	EA	1
225	15Q	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-423-5..........UHB	FT	7
225	15R	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-423-5..........UHB	FT	1
225	15S	PBOZZ	6145-00-643-0651	81349	MILW16878TYPEB18	..WIRE,ELECTRICAL U/O PN 204-075-423-5..........UHB	FT	V
225	15T	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O PN 204-075-939-1..........UHB	FT	V
225	15U	PBOZZ	6145-00-851-8505	96906	MS25190B20	. WIRE,ELECTRICAL..........UHB,UHC,UHM	FT	V
225	16	AOOOZ	1560-00-896-9311	97499	204-075-429-1	.CABLE ASSEMBLY CONTROL U/O UH-1C PN 204-075-063-3..........UHB,UHC,UHM	EA	1
225	16	AOOOZ	6150-00-924-0452	97499	204-075-429-7	.CABLE ASSEMBLY CONTROL U/O PN 204-075-075-1, 204-075-083-1, -3,-5,-7,& -9..........UHC,UHM	EA	1
225	16A	PAOZZ	5935-00-755-3804	96906	MS3116E14-19S	..CONNECTOR,PLUG,ELEC AMPLIFIER,ATT.IND U/O PN 204-075-429-1..........UHB,UHC,UHM	EA	1
225	16B	XDOZZ		96906	MS3406R24-28S	..CONNECTOR,PLUG,ELEC REPLACED BY PN MS3456L24-28S..........UHB,UHC,UHM	EA	1
225	16B	PAOZZ	5935-00-759-8564	96906	MS3456L24-28S	..CONNECTOR,PLUG,ELEC ROLL & PITCH GYRO REPLACES P/N MS3406R24-28S U/O PN 204-075-429-7..........UHB,UHC,UHM	EA	10
225	16C	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE..........UHB,UHC,UHM	EA	1
225	16D	PAOZZ	5365-00-390-6598	35351	27713-26	..SHIM U/O PN 204-075-429-7..........UHC,UHM	EA	V
225	16E	PAOZZ	5365-00-390-6600	35351	27713-27	..SHIM U/O PN 204-075-429-7..........UHC,UHM	EA	1
225	16F	XBOZZ	5310-00-390-6601	35351	27713-28	. WASHER,FLAT U/O PN 204-075-429-7..........UHC,UHM	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	16G	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-429-1 .... UHB,UHC,UHM	EA	1
225	16G	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-429-7 .... UHC,UHM	EA	3
225	16H	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-429-7 .... UHC,UHM	EA	2
225	16J	MOOZZ		97499	85T4-12-2	..INSULATION TUBE U/O PN 204-075-429-1 .... UHB,UHC,UHM	EA	1
225	16J	MOOZZ		97499	85T4-12-2	..INSULATION TUBE U/O PN 204-075-429-7 .... UHC,UHM	EA	7
225	16K	MOOZZ	5970-00-172-3685	97499	130-005-7-8	..TUBE,INSULATION U/O PN 204-075-429-1 .... UHB,UHC,UHM	EA	1
225	16L	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-429-1 .... UHB,UHC,UHM	FT	1
225	16M	MOOZZ		97499	130-005-4-2	..INSULATION,TUBE .... UHC,UHM	EA	1
225	16N	PAOZZ	5935-00-855-1766	35351	110372-01	..SHIELD,ELECTRICAL U/O PN 204-075-429-7 .... UHC,UHM	EA	1
225	16P	PBOOO	5935-00-721-3645	81349	MS28748-6C00G1A	..CONNECTOR,RECEPTACL U/O PN 204-075-429-7 .... UHC,UHM	EA	1
225	16Q	PAOZZ	5310-00-579-2597	70210	S8167E8-032	...WASHER,FLAT .... UHB,UHC,UHM	EA	1
225	16R	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER U/O PN 204-075-429-1 .... UHB,UHC,UHM	EA	1
225	16S	PBOZZ	5330-00-909-7038	35351	113825-01	..GASKET .... UHB,UHC,UHM	EA	1
225	16T	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	16U	PBOZZ	6145-00-553-1897	81349	MILW16878TYPEB22	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	16V	PBOZZ	6145-00-553-1922	97499	BS22	..CABLE,SPECIAL U/O PN 204-075-429-1 .... UHB,UHC,UHM	FT	V
225	17	XCFZZ		97499	204-075-306-3	.EQUIPMENT INSTL NOSE COMPARTMENT U/O PN 204-075-017-1,-3,-5,& 204-075-043-1 .... UHB	EA	1
225	17	XCFZZ		97499	204-075-385-3	.EQUIPMENT INSTL NOSE COMPARTMENT U/O PN 204-075-044-1 & -3 .... UHB	EA	1
225	17	XCFZZ		97499	204-075-514-3	.EQUIPMENT INSTL NOSE COMPARTMENT U/O PN 204-075-075-1,204-075-083-1,-3-5 & -7 .... UHB,UHC,UHM	EA	1
225	17	XCFZZ		97499	204-075-514-7	.EQUIPMENT INSTL NOSE COMPARTMENT U/O PN 204-075-075-1, 204-075-083-1,-3,-5,& -7 .... UHC,UHM	EA	1
225	17A	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ...... UHB,UHC,UHM	EA	8
225	17B	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT .... UHB,UHC,UHM	EA	8
225	17C	PAOZZ	5305-00-989-7435	96906	MS35207-264	..SCREW,MACHINE .... UHB,UHC,UHM	EA	4
225	17D	PAOZZ	5305-00-993-2463	96906	MS35207-279	..SCREW,MACHINE .... UHB,UHC,UHM	EA	4
225	17E	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ...... UHB,UHC,UHM	EA	4
225	17F	PAOZZ	5310-00-857-5557	96906	MS21045L4	..NUT,SELF-LOCKING, HEXAGON .... UHB,UHC,UHM	EA	4
225	18	PAOOO	6340-01-153-8073	97499	205-074-033-103	..BOX,WARNING CONTROL SEE FIG.240 FOR BREAKDOWN .... UHB,UHC,UHM	EA	1
225	18A	MOOZZ		81996	1560UH1-772-1	..CABLE ASSY,EXTENDER USED TO TEST RPM WARNING BOXES .... UHB,UHC,UHM	EA	V
225	18B	MOOZZ		81996	1560UH1-772-2	..CABLE ASSEMBLY,JUMP USED TO TEST RPM WARNING BOXES .... UHB,UHC,UHM	EA	V
225	18C	PAOZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	18D	PAOZZ	5970-00-899-6664	81349	MIL-I-631	...INSULATION SLEEVING .... UHB,UHC,UHM	FT	V
225	18E	PAOZZ	5935-00-078-3586	96906	MS3120F14-19P	...CONNECTOR,RECEPTACL .... UHB,UHC,UHM	EA	1
225	18F	PAOZZ	5935-00-765-5989	96906	MS3126F14-19S	...CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
225	18G	PBOZZ	5935-00-909-7894	83330	1513-102	...JACK ASSEMBLY,TIP .... UHB,UHC,UHM	EA	1
225	18H	PAOZZ	5905-00-141-0591	81349	RCR20G103JS	...RESISTOR,FIXED, COMPOSITION .... UHB,UHC,UHM	EA	1
225	18J	PAOZZ	5935-00-578-3494	35351	742436-01	...PLUG,TIP .... UHB,UHC,UHM	EA	2
225	18K	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR .... UHB,UHC,UHM	EA	1
225	18L	PAOFF	1680-00-894-6543	96182	792-100	.PANEL ASSEMBLY WORD CAUTION CONTROL U/O PN 204-075-017-1,-3,-5,& 204-074-043-1 SEE FIG.236 FOR BREAKDOWN .... UHB	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
225	18L	PAOFF	1680-00-105-9316	97499	204-075-705-9	.PANEL,FAULT-FUNCTIO INDICATOR U/O PN 204-075-044-1,-3,& 204-075-063-1 INTRCH....UHB	EA	1
225	18L	PAOFF	1680-00-285-7984	96182	249-100	.PANEL,FAULT-FUNCTIO INDICATOR SEE FIG.238 FOR BREAKDOWN ....UHB	EA	1
225	18L	PAOFF	1680-00-143-8692	72914	80-0070-1	.PANEL,FAULT-FUNCTIO INDICATOR SEE FIG.237 FOR BREAKDOWN ....UHB	EA	1
225	18L	XDOFF	1680-00-924-7755	96182	141-10450-025	.PANEL,FAULT-FUNCTIO CAUTION CONTROL SEE FIG.234 FOR BREAKDOWN....EAKDOWN....UHC,UHM	EA	1
225	18L	PAOFF	1680-00-456-0915	97499	204-075-705-27	.PANEL,FAULT-FUNCTIO SEE FIG.231 & 232 FOR BREAKDOWN ....UHC,UHM	EA	1
225	18L	PAOFF	1680-00-930-5101	96182	4408-100-27	.PANEL ASSEMBLY-WORD CAUTION CONTROL SEE FIG.233 FOR BREAKDOWN....EAKDOWN....UHC,UHM	EA	1
225	18L	PAOFF	1680-00-456-0915	72914	80-0199-17	.PANEL ASSEMBLY-WORD CAUTION CONTROL SEE FIG.234 FOR BREAKDOWN....EAKDOWN....UHC,UHM	EA	1
225	18M	PAOZZ	5325-00-351-4597	72794	PFSC3-1-2-38A	.STUD ASSEMBLY USE TO INSTALL MASTER CAUTION UNIT TO INSTRUMENT PANEL....UHB,UHC,UHM	EA	10
225	19	PAOOO	1680-00-867-1241	97499	204-075-812-1	.PANEL ASSY,ENGINE PEDESTAL CONTROL U/O PN 204-075-017-1,-3,-5 204-075-044-1,-3,& 204-075-063-1 SEE FIG.258 FOR BREAKDOWN ....UHB	EA	1
225	19	PBOOO	1680-00-915-5925	97499	204-075-812-7	.PANEL ASSY,ENGINE PEDESTAL CONTROL U/O PN 204-075-063-3 & 204-075-075-1 SEE FIG.258 FOR BREAKDOWN....UHC,UHM	EA	1
225	19	XBOOZ	6110-00-420-4298	97499	204-075-812-13	.PANEL ASSY,ENGINE PEDESTAL CONTROL U/O PN 204-075-083-1 & -3 SEE FIG.258 FOR BREAKDOWN....UHC,UHM	EA	1
225	19	XBOOZ	6110-00-168-3724	97499	204-075-586-1	.PANEL ASSY,ENGINE CONTROL U/O PN 204-075-083-5,-7 & -9 SEE FIG.259 FOR BREAKDOWN....UHC,UHM	EA	1
225	20	AOOOO		81996	1560UH1-520-1	.CONTROL PANEL ASSY....UHB	EA	1
225	20	AOOOO		81996	1560UH1-520-3	.CONTROL PANEL ASSY....UHC,UHM	EA	1
225	20	PBOOO	1680-00-915-5924	97499	204-075-827-1	.PANEL ASSY,CONTROL HYDRAULIC BOOST U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7 SEE FIG.256 FOR BREAKDOWN....UHC,UHM	EA	1
225	20A	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE....UHB,UHC,UHM	EA	3
225	20B	PAOZZ	5365-00-580-3563	80205	NAS43DD3-18	.SPACER,SLEEVE....UHB,UHC,UHM	EA	3
225	20C	PAOZZ	5365-00-541-9955	80205	NAS43HT3-10	.SPACER,SLEEVE U/O PN 204-075-075-1....UHC,UHM	EA	4
225	21	AOOOZ	2925-00-874-0856	97499	204-075-406-15	.CABLE ASSEMBLY U/O PN UH-1B PN 204-075-017-1,-3,& -5 U/O UH-1C PN 204-083-3,5-7,-9....UHB,UHC,UHM	EA	1
225	21A	AOOOZ	2925-00-570-5253	97499	204-075-939-9	.CABLE ASSEMBLY FORCE TRIM MAGNETIC BRAKE U/O UH-1B PN 204-075-043-1, 204-075-044-1,& 204-075-063-1 U/O UH-1C PN 204-075-063-3, 204-075-075-1,& 204-075-083-1....UHB,UHC,UHM	EA	1
225	21B	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 204-075-406-15....UHB,UHC,UHM	EA	1
225	21C	PAOZZ	5935-00-876-3527	96906	MS3108R14S9SC	..CONNECTOR,PLUG,ELEC ANTI-TORQUE MAG BRAKE....UHB,UHC,UHM	EA	1
225	21E	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG....UHB,UHC,UHM	EA	1
225	21F	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHB,UHC,UHM	EA	1
225	21G	XDOZZ		97499	85T4-7-2	..INSULATION TUBE....UHB,UHC,UHM	FT	1
225	21H	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
225	22	AOOOZ	1560-00-732-1682	97499	204-075-423-7	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 204-075-017-1,-3,& -5....UHB	EA	1
225	22	AOOOZ	1560-00-567-2975	97499	204-075-939-3	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 204-075-043-1....UHB	EA	1
225	22	AOOOZ	1560-00-567-2991	97499	204-075-946-7	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O UH-1B PN 204-075-044-1,-3 & 204-075-063-1 U/O UH-1C PN 204-075-075-1 & 204-075-083-1....UHB,UHC,UHM	EA	1
225	22	AOOOZ	1560-00-927-1282	97499	204-075-969-3	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 204-075-083-3,-5, -7,& -9....UHC,UHM	EA	1
225	22	AOOOZ	1560-00-927-1281	97499	204-075-969-1	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 204-075-083-3,-5, -7,& -9....UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	22A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O UH-1C PN 204-075-946-7......UHB,UHC,UHM	EA	2
225	22A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-969-3................UHC,UHM	EA	6
225	22A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-969-1................UHC,UHM	EA	2
225	22B	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS MOISTURE SEAL U/O PN 204-075-423-7 ....UHB	EA	1
225	22C	PBOZZ	5935-00-880-7894	96906	MS3120E14-19S	..CONNECTOR,RECEPTACL PLT,CYCLIC STICK. U/O PN 204-075-939-3,204-075-946-7 & 204-075-969-3................UHB,UHC,UHM	EA	1
225	22D	PBOZZ	6145-00-643-0651	81349	MILW16878TYPEB18	..WIRE,ELECTRICAL U/O UH-1B PN 204-075-423-7..........UHB	FT	V
225	22E	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O PN 204-075-939-3 & 204-075-969-1 ....UHB,UHC,UHM	FT	V
225	22F	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O UH-1C PN 204-075-946-7 & 204-075-969-3....................UHB,UHC,UHM	EA	1
225	22F	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-969-1.............UHC,UHM	EA	2
225	22G	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....................UHB,UHC,UHM	FT	V
225	22H	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-969-1................UHC,UHM	EA	2
225	22K	PAOZZ	5935-00-626-3101	96906	MS3450W28-21S	..CONNECTOR,RECEPTACL ELECTRICAL,EXT FUEL DISC (LH,RH) ....UHC,UHM	EA	2
225	22L	PAOZZ	5935-00-622-2831	96906	MS3456W14S2S	..CONNECTOR,PLUG,ELEC....................UHB,UHC,UHM	EA	2
225	23	AOOOZ	1560-00-760-3326	97499	204-075-420-15	.HARNESS ASSY,ENGINE INSTRUMENTS U/O PN 204-075-017-1,-3 -5, 204-075-043-1, 204-075-044-1,& -3....................UHB	EA	1
225	23	AOOOZ	1560-00-869-8150	97499	204-075-420-17	.CABLE ASSY,ENGINE INSTRUMENTS U/O PN 204-075-063-1......UHB	EA	1
225	23	AOOOZ	1560-00-869-6326	97499	204-075-420-19	.CABLE ASSY,ENGINE INSTRUMENTS U/O PN 204-075-063-3 ....UHC,UHM	EA	1
225	23	AOOOZ	6150-00-924-0448	97499	204-175-424-3	.CABLE ASSY,ENGINE INSTRUMENTS U/O PN 204-075-076-1, 204-075-083-1,-3,-5,-7,& -9....................UHC,UHM	EA	1
225	23A	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE ELECTRICAL....................UHB,UHC,UHM	EA	3
225	23B	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE ELECTRICAL....................UHB,UHC,UHM	EA	6
225	23C	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....................UHB,UHC,UHM	FT	V
225	23D	PBOZZ	6145-00-619-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O UH-1C PN 204-075-420-19 ....UHB,UHC,UHM	EA	1
225	23E	PBOZZ	6145-00-836-2241	97499	BS20	..CABLE,ELECTRICAL U/O UH-1C PN 204-075-420-19 ....UHB,UHC,UHM	FT	V
225	23F	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG....................UHB	EA	1
225	23G	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-420-19................UHC,UHM	EA	6
225	23H	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-424-3................UHC,UHM	EA	7
225	23I	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG....................UHB,UHC,UHM	EA	9
225	23J	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-424-3................UHC,UHM	EA	1
225	23K	MOOZZ	5970-00-672-9399	97499	85T4-11-2	..INSULATION,SLEEVING U/O PN 204-175-424-3...........UHC,UHM	EA	5
225	23L	MOOZZ		97499	85T4-3-6	..INSULATION TUBE U/O PN 204-175-424-3..............UHC,UHM	EA	4
225	23M	MOOZZ		97499	130-005-8-4	..INSULATION TUBE U/O PN 204-175-424-3..............UHC,UHM	EA	1
225	23N	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O UH-1C PN 204-075-420-19 ....UHB,UHC,UHM	FT	1
225	23P	MOOZZ	5970-00-672-9399	97499	85T4-11-2	..INSULATION,SLEEVING U/O PN 204-175-424-3...........UHC,UHM	EA	5
225	23Q	PAOZZ	5935-00-[illegible]37-7382	02660	165-6[illegible]-1008	..CONNECTOR,PLUG,ELEC....................UHB,UHC,UHM	EA	1
225	23R	PAOZZ	5935-00-810-1890	95712	1-690-1	..CONNECTOR,PLUG,ELEC FUEL TANK BLKHD. U/O UH-1C PN 204-075-420-19....................UHB,UHC,UHM	EA	1
225	23T	PAOZZ	5935-00-9[illegible]4-0457	05209	PC205A10	..CONNECTOR,PLUG,ELEC LH FUEL QTY DISC. U/O PN 204-175-424-3 ....UHC,UHM	EA	1
225	23U	PAOZZ	5935-00-6[illegible]-3638	95712	1-728-1	..CONNECTOR,PLUG,ELEC FUEL TANK,BLKHD. U/O UH-1C PN 204-	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						075-420-19 .... UHB,UHC,UHM		
225	23V	PAOZZ	5935-00-871-5052	95712	1-905-1	..CONNECTOR,PLUG,ELEC FUEL TANK,BLKHD U/O UH-1C PN 204-075-420-19 .... UHB,UHC,UHM	EA	1
225	23W	PAOZZ	5935-00-924-0458	05209	PC205B10	..CONNECTOR,PLUG,ELEC LH FUEL QTY DISC U/O PN 204-175-424-3 .... UHC,UHM	EA	1
225	23X	PAOZZ	5935-00-924-0460	05209	PC205F10	..CONNECTOR,PLUG,ELEC LH FUEL QTY DISC U/O PN 204-175-424-3 .... UHC,UHM	EA	1
225	23Y	MOOZZ		97499	130-005-8-4	..INSULATION TUBE U/O PN 204-175-424-3 .... UHC,UHM	EA	1
225	23Z	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC ENG OIL PRESS IND,XMSN OIL PRESS,GAS PROD TACH U/O PN 204-075-420-15 .... UHB	EA	3
225	23Z	PBOZZ	5935-00-813-4717	96906	MS3106R14S2S	..CONNECTOR,PLUG,ELEC ENG OIL TEMP IND,XMSN OIL TEMP,FUEL PRESS IND. U/O PN 204-075-420-15 .... UHB	EA	3
225	23Z	MOOZZ		97499	85T4-2-4	..INSULATION TUBE U/O UH-B PN 204-075-420-17 U/O UH-1C PN 204-075-420-19 .... UHB,UHC,UHM	EA	3
225	24	AOOOZ	1560-00-731-8998	97499	204-075-425-1	.CABLE ASSY,FLIGHT INSTRUMENTS U/O PN 204-075-063-3 .... UHB,UHC,UHM	EA	1
225	24	AOOOZ	6150-00-924-0419	97499	204-175-424-5	.CABLE ASSY,FLIGHT INSTRUMENTS U/O PN 204-075-075-1 .... UHC,UHM	EA	1
225	24	AOOOO		97499	204-175-424-23	.CABLE ASSY-FLIGHT INSTRUMENTS U/O PN 204-075-083-1,-3,-5,-7, & -9 .... UHC,UHM	EA	1
225	24A	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE U/O UH-1C PN 204-075-425-1 .... UHB,UHC,UHM	EA	3
225	24B	PBOZZ	5940-00-502-7570	24617	6718477	..TERMINAL,LUG U/O PN 204-075-424-5 .... UHC,UHM	EA	1
225	24C	PAOZZ	5940-00-229-7564	88044	AN5538-2	..TERMINAL,LUG U/O PN 204-075-425-1 .... UHB,UHC,UHM	EA	7
225	24D	PAOZZ	5940-00-229-7564	88044	AN5538-2	..TERMINAL,LUG U/O PN 204-175-424-5 & 204-175-424-23 .... UHC,UHM	EA	1
225	24E	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG .... UHB,UHC,UHM	EA	19
225	24F	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHB,UHC,UHM	EA	2
225	24G	PAOZZ	5940-00-113-8179	96906	MS25036-107	..TERMINAL,LUG U/O PN 204-075-425-1 .... UHB,UHC,UHM	EA	2
225	24H	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O UH-1C PN 204-075-425-1 .... UHB,UHC,UHM	EA	3
225	24J	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-424-5 .... UHC,UHM	EA	5
225	24K	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O UH-1C PN 204-075-425-1 .... UHB,UHC,UHM	FT	12
225	24L	MOOZZ	DELETED	97499	85T4-500-2	..TUBING INSULATION .... UHB,UHC,UHM	EA	4
225	24M	PAOZZ	DELETED	96906	MS3057-4A	..CLAMP,CABLE U/O UH-1C PN 204-075-425-1 .... UHB,UHC,UHM	EA	2
225	24N	MOOZZ		97499	85T4-3-6	..INSULATION TUBE U/O PN 204-175-424-23 .... UHC,UHM	EA	V
225	24P	PAOZZ	5935-00-082-0119	96906	MS3106R14S9S	..CONNECTOR,PLUG,ELEC U/O PN 204-075-425-1 .... UHB,UHC,UHM	EA	2
225	24Q	PAOZZ	5935-00-990-3791	77820	10-214614-7S	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	2
225	24R	PBOZZ	5935-00-880-7894	96906	MS3120E14-19S	..CONNECTOR,RECEPTACL TRANSMISSION DISC. U/O 204-175-424-5 & 204-175-424-23 .... UHC,UHM	EA	1
225	24S	PAOZZ	6145-00-543-0252	04939	MILW5846TY2CLA	..CABLE,ELECTRICAL U/O PN 204-075-425-1 .... UHB,UHC,UHM	FT	V
225	24T	PBOZZ	6145-00-535-5036	81349	MILW5846TYPE4CLA	..CABLE,ELECTRICAL U/O PN 204-175-424-5 .... UHC,UHM	FT	V
225	24U	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	24V	PAOZZ	5305-00-889-2998	96906	MS35206-216	..SCREW,MACHINE .... UHB,UHC,UHM	EA	11
225	25	AOOOZ	1560-00-731-8999	97499	204-075-425-3	.CABLE ASSY,CO-PILOT COLLECTIVE STICK DISCONNECT U/O .UH-1C PN 204-075-063-3 .... UHB,UHC,UHM	EA	1
225	25	AOOOZ	6150-00-924-0442	97499	204-175-424-7	.CABLE ASSY,CO-PILOT COLLECTIVE STICK DISCONNECT U/O PN 204-075-075-1, 204-075-083-1,& -3 .... UHC,UHM	EA	1
225	25	AOOOZ	6150-00-927-9537	97499	204-175-424-19	.CABLE ASSY CO-PILOT COLLECTIVE STICK DISCONNECT U/O PN 204-075-083-5,-7,& -9 .... UHC,UHM	EA	1
225	25A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-424-19 .... UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	25B	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL,LUG U/O UH-1C PN 204-175-424-7 UHB,UHC,UHM	EA	2
225	25C	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL,LUG U/O PN 204-175-424-7,& -19 UHC,UHM	EA	1
225	25D	PAOZZ	5935-00-809-0786	96906	MS3057-10A	.CLAMP,CABLE U/O UH-1C PN 204-075-425-3 UHB,UHC,UHM	EA	1
225	25E	PAOZZ	5940-01-007-7876	81349	M7928/3-3	.SPLICE,CONDUCTOR U/O PN 204-175-424-19 UHC,UHM	EA	1
225	25F	PBOZZ	5935-00-801-6618	96906	MS3100R18-1S	.CONNECTOR,RECEPTACL ELECTRIC ..COPLT COLL STICK UHB,UHC,UHM	EA	1
225	25G	XDOZZ		97499	85T4-7-2	.INSULATION TUBE U/O UH-1C PN 204-075-425-3 UHB,UHC,UHM	FT	V
225	25H	PBOZZ	6145-00-851-8505	96906	MS25190B20	.WIRE,ELECTRICAL UHB,UHC,UHM	FT	V
225	26	AOOOZ	1560-00-731-8950	97499	204-075-412-3	.CABLE ASSY,HYDRAULI CONTROL PANEL U/O UH-1C PN 204-075-063-3 UHB,UHC,UHM	EA	1
225	26	AOOOZ	1560-00-871-8666	97499	204-075-412-21	.CABLE ASSY,HYDRAULI CONTROL PANEL U/O PN 204-075-063-3 UHC,UHM	EA	1
225	26	AOOOZ	1560-00-923-7135	97499	204-175-424-13	.CABLE ASSY,HYDRAULI CONTROL PANEL U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9 UHC,UHM	EA	1
225	26A	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHB,UHC,UHM	FT	V
225	26B	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE CLAMP U/O UH-1C PN 204-075-412-21 UHB,UHC,UHM	EA	1
225	26C	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-075-412-21 UHC,UHM	EA	1
225	26D	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O UH-1C PN 204-175-424-13 UHB,UHC,UHM	EA	2
225	26E	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-424-13 UHC,UHM	EA	4
225	26F	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-424-13 UHC,UHM	EA	1
225	26G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR UHB	EA	2
225	26G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-412-21 UHC,UHM	EA	1
225	26G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-424-13 UHC,UHM	EA	5
225	26H	PAOZZ	5935-00-687-1135	96906	MS3100R10SL3S	..CONNECTOR,RECEPTACL U/O PN 204-175-424-13 UHC,UHM	EA	2
225	26I	XDOZZ	5935-00-626-3120	96906	MS3456W20-27S	..CONNECTOR,PLUG, ELECTRICAL UHB,UHC,UHM	EA	1
225	26J	XDOZZ		97499	85T4-7-2	..INSULATION TUBE UHB	FT	7
225	26K	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-412-21 UHC,UHM	FT	1
225	26L	PAOZZ	5365-00-598-5416	96906	MS3420-12	..BUSHING,RUBBER U/O PN 204-075-412-21 UHC,UHM	EA	1
225	26M	PAOZZ	5940-00-772-3509	09922	CYW16	..CABLE NIPPLE U/O PN 204-175-424-13 UHC,UHM	EA	1
225	26N	PAOZZ	5935-00-557-1973	96906	MS25183A10SL4S	..CONNECTOR,PLUG,ELEC U/O PN 204-175-424-13 UHC,UHM	EA	2
225	26P	PAOZZ	5935-00-687-1135	96906	MS3100R10SL3S	..CONNECTOR,RECEPTACL U/O PN 204-175-424-13 UHC,UHM	EA	1
225	26Q	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O PN 204-175-424-13 UHC,UHM	FT	V
225	26R	XDOZZ		56289	JN14-1700A	FILTER,RADIO UHB	EA	1
225	26S	AOOOZ	1560-00-872-1110	97499	204-075-909-5	.CABLE ASSEMBLY USBL EFF 60-3546 & SUBSEQUENT 34/2 UHB	EA	1
225	26T	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG UHB	EA	1
225	26U	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG UHB	EA	1
225	26V	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG UHB	EA	3
225	26W	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHB	FT	V
225	26X	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	..CONNECTOR,PLUG,ELEC UHB	EA	1
225	26Y	PAOZZ	5935-00-626-3120	96906	MS3456W20-27S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
225	27	AOOOZ	1560-00-732-1684	97499	204-075-424-1	.CABLE ASSY,ENGINE CONTROL PANEL U/O PN 204-075-017-1,-3,-5, & 204-075-043-1 UHB	EA	1
225	27	AOOOZ	1560-00-567-2984	97499	204-075-946-3	.CABLE ASSY,ENGINE CONTROL PANEL U/O PN 204-075-044-1 & -3 UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	27	A000Z	1560-00-906-0280	97499	204-075-946-13	CABLE ASSY,ENGINE CONTROL PANEL U/O PN 204-075-063-1 UHB	EA	1
225	27	A000Z	1560-00-923-7134	97499	204-175-430-3	CABLE ASSY,ENGINE CONTROL PANEL U/O PN 204-075-063-3 UHC,UHM	EA	1
225	27	A000Z	6150-00-924-0417	97499	204-175-425-13	CABLE ASSY,ENGINE CONTROL PANEL U/O PN 204-075-075-1, 204-075-083-1,& -3 UHC,UHM	EA	1
225	27	A000Z	1560-00-929-3649	97499	204-175-425-15	CABLE ASSY,ENGINE CONTROL PANEL U/O PN 204-075-083-5,-7,& -9 UHC,UHM	EA	1
225	27A	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG U/O PN 204-075-946-13 UHB	EA	7
225	27B	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 204-075-424-1 UHB	EA	8
225	27B	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 204-075-946-3 UHB	EA	1
225	27B	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 204-175-430-3 UHC,UHM	EA	15
225	27B	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 204-175-425-13 & -15 UHC,UHM	EA	13
225	27C	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG U/O UH-1B PN 204-075-424-1 U/O UH-1C PN 204-075-946-13 & 204-175-430-3 UHB,UHC,UHM	EA	2
225	27C	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG U/O PN 204-175-425-13 & -15 UHC,UHM	EA	3
225	27D	XDOZZ		97499	85T4-7-2	INSULATION TUBE U/O PN 204-075-946-13 UHB	FT	6
225	27D	XDOZZ		97499	85T4-7-2	INSULATION TUBE U/O PN 204-175-425-13 & -15 UHC,UHM	FT	9
225	27E	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG U/O PN 204-175-430-3 UHC,UHM	EA	1
225	27E	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG U/O PN 204-175-425-13 & -15 UHC,UHM	EA	5
225	27F	PAOZZ	5940-00-143-4775	96906	MS25036-156	TERMINAL,LUG U/O PN 204-175-425-13 & -15 UHC,UHM	EA	1
225	27G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR U/O PN 204-075-424-1 & 204-075-946-13 UHB,UHC,UHM	EA	2
225	27G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR U/O PN 204-075-946-3, 204-175-425-13,& -15 UHB,UHC,UHM	EA	1
225	27G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR U/O PN 204-175-430-3 UHC,UHM	EA	1
225	27H	PBOZZ	5935-00-884-1621	96906	MS25251-20	PLUG,END SEAL U/O PN 204-175-430-3 UHC,UHM	EA	1
225	27J	PAOZZ	5940-01-007-7876	81349	M7928/3-3	SPLICE,CONDUCTOR UHB	EA	1
225	27K	PAOZZ	5340-00-984-2123	77820	10-101033-11	PLUG,PROTECTIVE,DUS DUST & MOISTURE SEAL UHB	EA	V
225	27L	PBOZZ	5935-00-904-7717	96906	MS3126E20-39S	CONNECTOR,PLUG,ELEC ENGINE PANEL UHC,UHM	EA	1
225	27M	MOOZZ	5970-00-488-5050	97499	85T4-7-4	INSULATION TUBE U/O PN 204-075-946-3,-13,& 204-175-430-3 UHB,UHC,UHM	EA	V
225	27N	PAOZZ	5935-00-820-0555	96906	MS3106R14S5S	CONNECTOR,PLUG,ELEC FUEL VALVE SHUTOFF U/O PN 204-175-425-13 & -15 UHC,UHM	EA	1
225	27P	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB2U	WIRE,ELECTRICAL U/O UH-1C PN 204-175-430-3 UHB,UHC,UHM	FT	V
225	27Q	PAOZZ	5915-00-878-0340	80183	JN14-1600B	FILTER NETWORK U/O PN 204-075-946-13 UHB	EA	1
225	27R	PAOZZ	5915-00-878-0340	80183	JN14-1600B	FILTER NETWORK FUEL BOOST PUMP UHC,UHM	EA	3
225	27S	PBOZZ	6145-00-578-6605	96906	MS25190B16	WIRE,ELECTRICAL UHB,UHC,UHM	FT	V
225	27T	PBOZZ	6145-00-851-8505	96906	MS25190B20	WIRE,ELECTRICAL UHB,UHC,UHM	FT	V
225	28C	A000Z	1560-00-732-1685	97499	204-075-424-3	CABLE ASSY,PILOT COLLECTIVE STICK DISCONNECT U/O UH-1C PN 204-075-063-3 UHB,UHC,UHM	EA	1
225	28D	A000Z	1560-00-923-7132	97499	204-175-427-3	CABLE ASSY,PILOT COLLECTIVE STICK DISCONNECT U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9 UHC,UHM	EA	1
225	28E	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 204-075-424-3 UHB,UHC,UHM	EA	10
225	28F	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 204-175-427-3 UHC,UHM	EA	9
225	28G	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG U/O UH-1C PN 204-175-427-3 UHC,UHM	EA	1
225	28H	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG U/O UH-1C PN 204-075-424-3 UHB,UHC,UHM	EA	2
225	28J	PAOZZ	5940-00-204-8990	96906	MS25036-111	TERMINAL,LUG U/O PN 204-175-427-3 UHC,UHM	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
225	28K	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG U/O PN 204-175-427-3..................UHC,UHM	EA	2
225	28L	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-427-3..................UHC,UHM	EA	4
225	28M	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O UH-1C PN 204-075-424-3......UHB,UHC,UHM	EA	2
225	28N	PAOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O UH-1C PN 204-075-424-3......UHB,UHC,UHM	EA	2
225	28P	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O UH-1C PN 204-075-424-3 ....UHB,UHC,UHM	EA	6
225	28Q	PBOZZ	5935-00-902-5364	96906	MS3120E16-28S	..CONNECTOR,RECEPTACL PILOTS COLL STICK..........UHB,UHC,UHM	EA	1
225	28R	PBOZZ	6145-00-578-6604	96906	MS25190B14	..WIRE,ELECTRICAL U/O PN 204-075-424-3..........UHB,UHC,UHM	FT	V
225	28S	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..................................UHB,UHC,UHM	FT	V
225	28T	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL U/O PN 204-175-427-3..............UHC,UHM	FT	V
225	29	A0000	1560-00-567-2992	97499	204-075-949-1	.CABLE ASSY,RPM-WARN U/O UH-1B PN 204-075-044-1,-3 & 204-075-063-1 U/O UH-1C 204-075-063-3..............UHB,UHC,UHM	EA	1
225	29	A000Z	1560-00-923-7131	97499	204-175-427-5	.CABLE ASSY,POWER U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9..................................UHC,UHM	EA	1
225	29A	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-427-5..................UHC,UHM	EA	5
225	29B	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-949-1..............UHB,UHC,UHM	EA	1
225	29C	PAOZZ	5940-00-143-4771	96906	MS25036-103	.TERMINAL,LUG......................................UHB,UHC,UHM	EA	1
225	29D	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-949-1..........UHB,UHC,UHM	EA	1
225	29E	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	..CONNECTOR,PLUG,ELEC HI-LO RPM WARNING..........UHB,UHC,UHM	EA	1
225	29F	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG.....................................UHB,UHC,UHM	EA	1
225	29G	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..................................UHB,UHC,UHM	FT	V
225	29H	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS MOISTURE SEAL U/O PN 204-075-949-1 ....UHB,UHC,UHM	EA	V
225	30	A000Z	1560-00-731-9009	97499	204-075-428-1	.CABLE ASSEMBLY INSTRUMENT PANEL DISCONNECT U/O PN 204-075-017-1 & -3..................................UHB	EA	1
225	30	A000Z	1560-00-987-1393	97499	204-075-447-3	.CABLE ASSY,FORWARD INSTRUMENT PANEL DISCONNECT U/O UH-1B PN 204-075-017-5,204-075-043-1,204-075-044-1,-3, 204-075-063-1, UH-1C PN 204 075-063-3..............UHB,UHC,UHM	EA	1
225	30	A000Z	1560-00-923-9066	97499	204-175-428-1	.CABLE ASSY,POWER PANEL DISCONNECT U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7-1,-3,-5,-7,& -9..............UHC,UHM	EA	1
225	30A	PBOZZ	5935-00-688-4026	96906	MS3057-8A	..CLAMP,CABLE U/O PN 204-075-428-1..........................UHB	EA	1
225	30B	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE U/O PN 204-075-428-1.......................UHB	EA	1
225	30C	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER,CABLE U/O PN 204-075-428-1.......................UHB	EA	1
225	30D	PBOZZ	5935-00-853-3135	96906	MS3100R24-7S	..CONNECTOR,RECEPTACL HTR DISC. U/O PN 204-075-428-1 & 204-075-447-3..................................UHB,UHC,UHM	EA	1
225	30E	PAOZZ	5935-00-833-0362	96906	MS3108R16S1S	..CONNECTOR,PLUG,ELEC.......................................UHB	EA	1
225	30F	PBOZZ	5935-00-849-7171	96906	MS3108R20-27S	..CONNECTOR,PLUG,ELEC HTR CONT BOX. U/O PN 204-075-428-1 & 204-075-447-3..................................UHB,UHC,UHM	EA	1
225	30G	PAOZZ	5940-00-204-8990	96906	MS25036-111	..TERMINAL,LUG U/O PN 204-075-428-1 & 204-075-447-3 ....UHB,UHC,UHM	EA	1
225	30H	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-428-1 & 204-075-447-3 ....UHB,UHC,UHM	EA	1
225	30H	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-428-1..............UHC,UHM	EA	2
225	30I	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-428-1 & 204-075-447-3 ....UHB,UHC,UHM	EA	1
225	30I	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-428-1..................UHC,UHM	EA	3
225	30J	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG.....................................UHB,UHC,UHM	EA	1
225	30J	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-428-1..................UHC,UHM	EA	1
225	30K	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG U/O PN 204-075-428-1 & 204-075-447-3	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						UHB, UHC, UHM		
225	30L	MOOZZ	5970-00-195-9548	97499	130-005-6-4	INSULATION SLEEVING U/O PN 204-075-428-1 UHB	EA	1
225	30M	XDOZZ		97499	85T4-7-2	INSULATION TUBE U/O PN 204-075-428-1 UHB	FT	1
225	30N	PBOZZ	6145-00-851-8505	96906	MS25190B20	WIRE, ELECTRICAL UHB, UHC, UHM	FT	V
225	30P	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	WIRE, ELECTRICAL U/O PN 204-075-428-1 & 204-075-447-3 UHB, UHC, UHM	FT	V
225	30Q	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	WIRE, ELECTRICAL U/O PN 204-075-428-1 & 204-075-447-3 UHB, UHC, UHM	FT	V
225	30R	PBOZZ	5935-00-902-5364	96906	MS3120E16-26S	CONNECTOR, RECEPTACL INST PANEL DISC U/O PN 204-175-428-1 UHC, UHM	EA	1
225	30S	PBOZZ	5940-00-688-6005	96906	MS25036-143	TERMINAL, LUG U/O PN 204-175-428-1 UHC, UHM	EA	2
225	30T	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL, LUG U/O PN 204-175-428-1 UHC, UHM	EA	8
225	30U	PBOZZ	6145-00-578-6606	81349	M5086-2-22-9	WIRE, ELECTRICAL U/O PN 204-175-428-1 UHC, UHM	EA	1
225	31	AOOOZ	1560-00-732-1686	97499	204-075-424-5	CABLE ASSY, CAUTION PANEL U/O PN 204-075-017-1, -3, -5, & 204-075-043-1 UHB	EA	1
225	31	AOOOZ	1560-00-567-2978	97499	204-075-946-1	CABLE ASSY, CAUTION PANEL U/O PN 204-075-044-1, -3, & 204-075-063-1 UHB	EA	1
225	31	AOOOZ	1560-00-871-8665	97499	204-075-946-11	CABLE ASSY, CAUTION PANEL U/O PN 204-075-063-3 UHC, UHM	EA	1
225	31	AOOOZ	6150-00-924-0449	97499	204-175-425-11	CABLE ASSY, CAUTION PANEL U/O PN 204-075-075-1 UHC, UHM	EA	1
225	31	AOOOZ	6150-00-955-9477	97499	204-175-437-3	CABLE ASSY, CAUTION PANEL U/O PN 204-075-083-1, -3, -5, -7, & -9 UHC, UHM	EA	1
225	31A	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL, LUG U/O PN 204-075-946-11 UHB, UHC, UHM	EA	1
225	31B	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL, LUG UHB	EA	1
225	31B	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL, LUG U/O PN 204-175-425-11, & 204-175-437-3 UHC, UHM	EA	8
225	31C	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL, LUG UHB	EA	1
225	31C	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL, LUG U/O PN 204-175-425-11 & 204-175-437-3 UHC, UHM	EA	4
225	31D	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	WIRE, ELECTRICAL UHB, UHC, UHM	FT	V
225	31D	PBOZZ	6145-00-543-0551	81349	MILW16878TYPEB18	WIRE, ELECTRICAL UHB, UHC, UHM	FT	V
225	31E	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL, LUG U/O PN 204-175-425-11 & 204-175-437-3 UHC, UHM	EA	1
225	31F	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	CONNECTOR, PLUG, ELEC FUEL BOOST PRESS SW (RH & LH) U/O PN 204-175-437-3 UHC, UHM	EA	2
225	31G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE, CONDUCTOR U/O UH-1C 204-075-946-11 UHB, UHC, UHM	EA	1
225	31G	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE, CONDUCTOR U/O PN 204-175-425-11 & 204-175-437-3 UHC, UHM	EA	7
225	31H	MOOZZ	5970-00-342-8362	97499	85T4-10-2	INSULATION SLEEVING U/O UH-1C PN 204-075-946-11 UHB, UHC, UHM	EA	1
225	31H	MOOZZ	5970-00-342-8362	97499	85T4-10-2	INSULATION SLEEVING U/O PN 204-175-425-11 & 204-175-437-3 UHC, UHM	EA	20
225	31I	MOOZZ		97499	85T4-8-6	INSULATION, TUBE U/O PN 204-175-425-11 UHC, UHM	EA	2
225	31I	MOOZZ		97499	85T4-8-6	INSULATION TUBE U/O PN 204-175-437-3 UHC, UHM	EA	4
225	31J	PAOZZ	5999-00-805-5620	09922	CYW10	CAP, ELECTRICAL U/O PN 204-075-946-1 & -11 UHB, UHC, UHM	EA	1
225	31K	PBOZZ	5999-00-807-3775	96906	MS25274-4	CAP, ELECTRICAL PN 204-175-425-11 UHC, UHM	EA	1
225	31L	PAOZZ	5935-00-773-3052	81312	MRAC26SJTC6H8	CONNECTOR BODY, PLUG CAUTION PANEL UHB, UHC, UHM	EA	1
225	31M	PAOZZ	5999-00-975-9573	81312	100-2018S	CONTACT, ELECTRICAL U/W PN MRAC26SJTC6H8 UHB, UHC, UHM	EA	1
225	31N	PBOZZ	6145-00-851-8505	96906	MS25190B20	WIRE, ELECTRICAL UHB, UHC, UHM	FT	V
225	31P	PAOZZ	5940-00-929-3706	96906	MS25189-112	TERMINAL, LUG UHH, UHV	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION		(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.						USABLE ON CODE		
225	32	AOOOZ	1560-00-731-8939	97499	204-075-407-5	CABLE ASSEMBLY U/O UH-1B PN 204-075-017-1,-3-5, 204-075-043-1, 204-075-044-1,& -3	UHB	EA	1
225	32A	AOOOZ	1560-00-871-8718	97499	204-075-967-3	CABLE ASSEMBLY U/O PN 204-075-044-1,-3	UHB	EA	1
225	32B	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG U/O PN 204-075-967-3	UHB	EA	28
225	32C	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHB	EA	1
225	32D	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG U/O PN 204-075-967-3	UHB	EA	2
225	32E	PAOZZ	5935-00-240-0173	96906	MS3057-4A	CLAMP,CABLE	UHB	EA	1
225	32F	XDOZZ		97499	85T4-7-2	INSULATION TUBE U/O PN 204-075-407-5	UHB	FT	1
225	32F	XDOZZ		97499	85T4-7-2	INSULATION TUBE U/O PN 204-075-967-3	UHB	FT	3
225	32G	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	WIRE,ELECTRICAL	UHB	FT	V
225	32H	PBOZZ	6145-00-851-8505	96906	MS25190B20	WIRE,ELECTRICAL U/O PN 204-075-407-5	UHB	FT	V
225	33	MDOZZ	5940-00-247-0524	96906	MS18029-1S6	COVER,TERMINAL BOAR U/O UH-1B PN 204-075-017-1,-3-5	UHB	EA	1
225	33	MDOZZ	5940-00-411-7737	96906	MS18029-1S7	COVER,TERMINAL BOAR U/O UH-1B PN 204-075-017-1,-3-5, 204-075-044-1,3, 204-075-063-1,-3,& 204-075-075-1	UHB,UHC,UHM	EA	2
225	33	MDOZZ	DELETED	94640	397-9	COVER,TERMINAL BOAR U/O PN 204-075-043-1	UHB	EA	1
225	33	MDOZZ	DELETED	96906	MS18029-1S10	COVER,TERMINAL BOAR U/O PN 204-075-063-3, 204-075-075-1,& 204-075-083-1	UHB,UHC,UHM	EA	1
225	34	XDOZZ		96906	MS27212-1-6	TERMINAL BOARD U/O UH-1B PN 204-075-017-1,-3,-5	UHB,UHC,UHM	EA	1
225	34	MDOZZ	DELETED	96906	MS27212-1-9	TERMINAL BOARD U/O PN 204-075-043-1	UHB	EA	1
225	34	XDOZZ		96906	MS27212-1-10	TERMINAL BOARD U/O PN 204-075-044-1,-3, 204-075-063-1,-3 204-075-075-1,& 204-075-083-1	UHB,UHC,UHM	EA	1
225	35	XBOZZ	5970-00-926-2544	96906	MS25227-1A	INSULATOR,PLATE	UHB,UHC,UHM	EA	2
225	36	PAOZZ	5310-00-194-0634	88044	AN961-6	WASHER,FLAT	UHB,UHC,UHM	EA	V
225	37	PAOZZ	5310-00-807-1472	96906	MS21042L06	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	V
225	38	XDOZZ		96906	MS25226-2-5	LINK,TERMINAL CONNECTING	UHB,UHC,UHM	EA	2
225	39	PBOZZ	5305-00-889-2997	96906	MS35206-215	SCREW,MACHINE	UHB,UHC,UHM	EA	24
225	40	PAOZZ	5310-00-550-5009	96906	MS15795-704	WASHER,FLAT	UHB,UHC,UHM	EA	V
225	41	PAOZZ	5310-00-807-1471	96906	MS21042L04	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	V
225	42	MDOZZ	5940-00 194-6642	96906	MS18029-1S12	COVER,TERMINAL BOAR	UHC,UHM	EA	1
225	46	MDOZZ	DELETED	96906	MS27212-1-12	TERMINAL BOARD	UHB,UHC,UHM	EA	1
225	47	MDOZZ	5940-00-132-2772	96906	MS27212-1-7	TERMINAL BOARD	UHB,UHC,UHM	EA	1
225	50	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	BUS,CONDUCTOR CONNECTING	UHB,UHC,UHM	EA	3
225	52	XBOZZ	5970-00-926-2544	96906	MS25227-1A	INSULATOR,PLATE	UHB,UHC,UHM	EA	V
225	53	PBOZZ	5310-00-857-6558	96906	MS21045L04	NUT,SELF-LOCKING,HE	UHB,UHC,UHM	EA	2
225	56	MDOZZ	5940-00-132-2767	96906	MS27212-1-2	TERMINAL BOARD	UHB,UHC,UHM	EA	4
225	57	PAOZZ	5310-00-857-4948	96906	MS21045L6	NUT,SELF-LOCKING, HEXAGON	UHB,UHC,UHM	EA	7
225	60	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	26
225	61	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHB,UHC,UHM	EA	15
225	62	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE	UHB,UHC,UHM	EA	6
225	63	PBOZZ	5305-00-984-7341	96906	MS35191-273	SCREW,MACHINE	UHB,UHC,UHM	EA	2
225	64	PAOZZ	5945-00-538-3657	81349	MILR7611TYPEMA1	RELAY,ELECTROMAGNET	UHB,UHC,UHM	EA	1
225	64A	PAOFF	6220-00-075-1989	72914	G8385-1	LIGHT,LANDING, SEE FIG.244 FOR BREAKDOWN	UHB,UHC,UHM	EA	1
225	64B	PAOZZ	6240-00-557-3065	96906	MS25241-4581	LAMP,INCANDESCENT	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	65	PAOFF	6220-00-144-4687	81349	M81174-2-1A	LIGHT,SEARCH AIRCRAFT UHB,UHC,UHM	EA	1
225	65A	PAOZZ	5305-00-984-6193	96906	MS35206-245	SCREW,MACHINE UHB,UHC,UHM	EA	8
225	65B	PAOZZ	5310-00-184-8966	88044	AN960PD8	WASHER,FLAT UHB,UHC,UHM	EA	12
225	66	MFOZZ	DELETED	96906	MS20253-2-225	PIN,STRAIGHT,HEADED U/O PN 204-075-083-9 UHC,UHM	EA	1
225	66A	XBOOO	6220-00-759-9904	97499	204-075-144-9	CONTAINER ASSY LAMP UHB,UHC,UHM	EA	1
225	67	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC UHB,UHC,UHM	EA	5
225	68	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC UHB,UHC,UHM	EA	2
225	69	PAOZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET,NONMETALLIC UHB,UHC,UHM	EA	2
225	70	PAOZZ	5325-00-281-6204	72794	AW3 1-2T10	.STUD,TURNLOCK FASTENER UHB,UHC,UHM	EA	1
225	71	PAOZZ	5325-00-281-4969	72794	GH3-1-2	.EYELET,TURNLOCK UHB,UHC,UHM	EA	1
225	72	PAOZZ	6240-00-155-8714	96906	MS25231-313	.LAMP,INCANDESCENT UHB,UHC,UHM	EA	1
225	73	PAOZZ	6240-00-155-7784	96906	MS35478-307	.LAMP,INCANDESCENT UHB,UHC,UHM	EA	1
225	74	PAOZZ	6240-00-155-7932	96906	MS25235R311	.LAMP,INCANDESCENT UHB,UHC,UHM	EA	1
225	75	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP,INCANDESCENT UHB,UHC,UHM	EA	5
225	76	PAOZZ	6240-00-299-4742	96906	MS25069-1495	.LAMP,INCANDESCENT UHB,UHC,UHM	EA	1
225	77	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE UHB,UHC,UHM	EA	V
225	78	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT UHB,UHC,UHM	EA	34
225	79	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT UHB,UHC,UHM	EA	6
225	80	PAOOO	6220-00-283-9334	88044	AN3177-9	.LIGHT,NAVIGATIONAL UHB,UHC,UHM	EA	2
225	80A	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE UHB,UHC,UHM	EA	1
225	81	PAOZZ	5330-00-813-0648	88044	AN904-1	..GASKET UHB,UHC,UHM	EA	1
225	82	PAOZZ	5330-00-292-0432	88044	AN899-1	..GASKET UHB,UHC,UHM	EA	1
225	83	PAOZZ	6220-00-432-4246	96906	MS25216-2	..LENS,LIGHT UHB,UHC,UHM	EA	1
225	84	PAOZZ	6240-00-155-7848	96906	MS15570-303	..LAMP,INCANDESCENT UHB,UHC,UHM	EA	1
225	85	PAOZZ	6240-00-155-7924	96906	MS25235-311	..LAMP,INCANDESCENT UHB,UHC,UHM	EA	1
225	86	PAOZZ	5330-00-700-4478	97499	204-075-151-1	.GASKET UHB,UHC,UHM	EA	2
225	88	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT UHB,UHC,UHM	EA	2
225	89	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE UHB,UHC,UHM	EA	1
225	90	PAOZZ	6150-00-771-5731	97499	204-075-153-1	.BUS,CONDUCTOR UHB,UHC,UHM	EA	1
225	93	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE UHB,UHC,UHM	EA	2
225		AOOOO	6625-00-733-2581	97499	204-075-152-1	.SHUNT ASSEMBLY UHB,UHC,UHM	EA	1
225	94	MOOZZ		97499	204-075-152-3	..SHUNT UHB,UHC,UHM	EA	1
225	95	PAOZZ	5306-00-838-0660	96906	MS20074-06-07	..BOLT,MACHINE UHB,UHC,UHM	EA	2
225	96	XBOZZ	5975-00-548-9531	88044	AN3063-12	.ELBOW,ELECTRICAL CONDUIT U/O UH-1B PN 204-075-017-1,-3,-5 & 204-075-043-1 UHB	EA	4
225	96	XDOZZ		88044	AN3063-16	.BOX CONNECTOR,ELECT U/O PN 204-075-044-1,-3, 204-075-063-1, -3, 204-075-075-1,& 204-075-083-1 UHB,UHC,UHM	EA	4
225	96A	PBOZZ	5310-00-280-6080	96906	MS39081-12	.NUT,PLAIN,HEXAGON U/O UH-1B PN 204-075-017-1,-3,-5,& 204-075-043-1 UHB	EA	4
225	97	PAOZZ	5975-00-240-2646	88044	AN3066-16	.LOCKNUT,ELECTRICAL U/O PN 204-075-044-1,-3, 204-075-063-1,-3, 204-075-075-1,& 204-075-083-1 UHB,UHC,UHM	EA	4
225	98	PAOZZ	5935-00-223-0572	96906	MS3057-12A	.ADAPTER,CABLE CLAMP U/O UH-1B PN 204-075-017-1,-3,-5,& 204-075-043-1 UHB	EA	4
225	98	PAOZZ	5935-00-280-2353	96906	MS3057-16A	.ADAPTER,CABLE CLAMP U/O PN 204-075-044-1,-3, 204-075-063-1, -3, 204-075-075-1,& 204-075-083-1 UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	99	XBOZZ	5310-00-880-1227	97499	204-075-154-1	.WASHER,FLAT U/O PN 204-075-017-1,-3, -5,& 204-075-043-1 ....UHB	EA	8
225	99	PBOZZ	5310-00-913-1595	97499	204-075-154-3	.WASHER,FLAT U/O PN 204-075-044-1,-3, 204-075-083-1,-3, 204-075-075-1,& 204-075-083-1....UHB,UHC,UHM	EA	8
225	100	XBOOO	1680-00-133-6837	97499	204-075-225-1	.PANEL,CONTROL ELECTRICAL-AFT LIGHT DOME CONTROL SEE FIG.284 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
225	101	AOOOZ	1560-00-731-9008	97499	204-075-427-9	.CABLE ASSEMBLY OUTLET VALVE....UHB,UHC,UHM	EA	1
225	101A	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE....UHB,UHC,UHM	EA	1
225	101C	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHB,UHC,UHM	EA	1
225	101D	XDOZZ		97499	85T4-7-2	..INSULATION TUBE....UHB,UHC,UHM	FT	1
225	101E	XDOZZ		97499	85T4-7-2	..INSULATION TUBE....UHB,UHC,UHM	FT	5
225	101F	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
225	102	XCFZZ		97499	204-075-113-1	.CONSOLE INSTL U/O PN 204-075-017-1 SEE FIG.245 FOR BREAKDOWN....UHB	EA	1
225	102	XCFZZ		97499	204-075-113-7	.CONSOLE INSTL U/O PN 204-075-017-3 SEE FIG.246 FOR BREAKDOWN....UHB	EA	1
225	102	XCFZZ		97499	204-075-113-13	.CONSOLE INSTL U/O PN 204-075-017-5 SEE FIG.245 FOR BREAKDOWN....UHB	EA	1
225	102	XCFZZ		97499	204-075-602-1	.CONSOLE INSTL U/O PN 204-075-044-1 SEE FIG.246 FOR BREAKDOWN....UHB	EA	1
225	102	XCFZZ		97499	204-075-602-9	.CONSOLE INSTL U/O PN 204-075-044-3 SEE FIG.246 FOR BREAKDOWN....UHB	EA	1
225	102	XCFZZ		97499	204-075-610-1	.CONSOLE INSTL U/O PN 204-075-083-1 SEE FIG.246 FOR BREAKDOWN....UHB	EA	1
225	102	XCFZZ		97499	204-075-610-7	.CONSOLE INSTL U/O PN 204-075-083-3 SEE FIG.246 FOR BREAKDOWN....UHC,UHM	EA	1
225	102	XCFZZ		97499	204-075-611-1	.CONSOLE INSTL U/O PN 204-075-075-1 SEE FIG.245 FOR BREAKDOWN....UHC,UHM	EA	1
225	102	XCFZZ		97499	204-075-611-7	.CONSOLE INSTL U/O PN 204-075-083-1 SEE FIG.246 FOR BREAKDOWN....UHC,UHM	EA	1
225	102	XCFZZ		97499	204-075-611-11	.CONSOLE INSTL U/O PN 204-075-083-3 SEE FIG.246 FOR BREAKDOWN....UHC,UHM	EA	1
225	102	XCFZZ		97499	204-075-611-17	.CONSOLE INSTL U/O PN 204-075-083-5 SEE FIG.246 FOR BREAKDOWN....UHC,UHM	EA	1
225	102	XCFZZ		97499	204-075-611-23	.CONSOLE INSTL U/O PN 204-075-083-7 SEE FIG.246 FOR BREAKDOWN....UHC,UHM	EA	1
225	102	XCFZZ		97499	204-075-611-27	.CONSOLE INSTL U/O PN 204-075-083-9 SEE FIG.246 FOR BREAKDOWN....UHC,UHM	EA	1
225	103	AOOOZ	1560-00-987-1390	97499	204-075-904-1	.CABLE ASSY,FORWARD FUEL U/O PN 204-075-017-5 & 204-075-043-1....UHB	EA	1
225	103	AOOOZ	1560-00-567-2969	97499	204-075-904-7	.CABLE ASSY,EXTERNAL FUEL U/O UH-1B PN 204-075-044-1,-3, 204-075-083-1....UHB,UHC,UHM	EA	1
225	104	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-904-1....UHB	EA	2
225	105	PAOZZ	5935-00-628-3101	96906	MS3450W28-21S	..CONNECTOR LH EXT STORES DISC....UHB	EA	2
225	106	XBOZZ	5935-00-823-6322	96906	MS25251-16	..PLUG,END SEAL,ELECT....UHB,UHC,UHM	EA	1
225	107	PAOZZ	5935-00-622-2830	96906	MS3456W18-1S	..CONNECTOR,PLUG,ELEC EXT FUEL PANEL....UHB,UHC,UHM	EA	1
225	108	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG....UHB,UHC,UHM	EA	4
225	109	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-904-1....UHB	EA	4
225	110	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
225	111	PBOZZ	6145-00-861-8506	96906	MS25190820	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
225	112	PBOZZ	6220-00-283-9337	88044	AN3033-9	.LIGHT,NAVIGATIONAL....UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	112A	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE	UHB,UHC,UHM	EA	1
225	112B	PAOZZ	5330-00-260-8156	88044	AN889-1	..GASKET	UHB,UHC,UHM	EA	1
225	112C	PAOZZ	6220-00-151-7536	88044	AN3042-1	..LENS,LIGHT A/C RED	UHB,UHC,UHM	EA	1
225	112D	PAOZZ	6220-00-497-2213	88044	AN3042-2	..LENS,LIGHT A/C GREEN	UHB,UHC,UHM	EA	1
225	112E	PAOZZ	6240-00-681-8366	96906	MS25309-7512	..LAMP,INCANDESCENT	UHB,UHC,UHM	EA	1
225	113	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE	UHB,UHC,UHM	EA	6
225	114	MOOZZ	5940-00-411-7737	96906	MS18029-1S7	.COVER,TERMINAL BOAR	UHB,UHC,UHM	EA	1
225	115	MOOZZ	5940-00-132-2772	96906	MS27212-1-7	.TERMINAL BOARD	UHB,UHC,UHM	EA	1
225	116	PAOOO	6220-00-349-9294	96906	MS17245-5A	.LIGHT,PANEL	UHB,UHC,UHM	EA	2
225	116A	PAOZZ	6220-00-169-1502	72914	87041-6	..CORD ASSEMBLY,ELECT	UHB,UHC,UHM	EA	1
225	117	PAOZZ	6240-00-155-8714	96906	MS25231-313	..LAMP,INCANDESCENT	UHB,UHC,UHM	EA	1
225	117A	PBOZZ	6220-00-500-3682	96906	MS17246-1	.MOUNTING BASE U/W PN MS17245-5A	UHB,UHC,UHM	EA	2
225	118	MOOZZ	5940-00-642-1377	94640	397-1	.COVER,TERMINAL BOAR	UHB,UHC,UHM	EA	2
225	119	MOOZZ	5940-00-132-2760	96906	MS27212-1-1	.TERMINAL BOARD	UHB,UHC,UHM	EA	2
225	120	PAOOO	6220-00-299-7136	96906	MS25358-1	.LIGHT,DOME	UHB,UHC,UHM	EA	3
225	121	PAOZZ	6220-00-283-9732	96906	MS25358-4	..LENS,DOME LIGHT	UHB,UHC,UHM	EA	1
225	122	PAOZZ	6240-00-155-7784	96906	MS35478-307	..LAMP,INCANDESCENT	UHB,UHC,UHM	EA	1
225	123	PAOZZ	5905-00-901-8942	81349	RW22V6R8	.RESISTOR,FIXED,WIRE	UHB,UHC,UHM	EA	1
225	124	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE	UHB,UHC,UHM	EA	2
225	125	PAOZZ	5340-00-285-7010	88044	AN742D6	.CLAMP,LOOP	UHB,UHC,UHM	EA	2
225	126	AOOOZ	1560-00-731-8931	97499	204-075-405-23	.CABLE ASSEMBLY	UHB,UHC,UHM	EA	1
225	127	PAOZZ	5935-00-028-3613	96906	MS3057-3A	..CLAMP,CABLE ELECTRICAL CONNECTOR	UHB,UHC,UHM	EA	4
225	128	PAOZZ	5935-00-809-0786	96906	MS3057-10A	..CLAMP,CABLE	UHB,UHC,UHM	EA	1
225	129	MOOZZ		97499	85T4-4-24	..INSULATION TUBE	UHB,UHC,UHM	EA	1
225	130	PBOZZ	5935-00-849-4268	96906	MS3106R8S1S	..CONNECTOR,PLUG,ELEC FIRE DET ELEMENT	UHB,UHC,UHM	EA	4
225	131	PBOZZ	6145-00-174-4461	81349	M22759/1-8-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	EA	1
225	131A	MOOZZ		97499	130-005-5-4	..INSULATION TUBING	UHB,UHC,UHM	EA	1
225	132	AOOOZ	1560-00-739-4603	97499	204-075-416-11	.CABLE ASSY,MAIN GENERATOR U/O PN 204-075-017-1	UHB	EA	1
225	132	AOOOZ	1560-00-858-0012	97499	204-075-416-13	.CABLE ASSY,MAIN GENERATOR U/O PN 204-075-017-3,-5, 204-075-043-1, 204-075-044-1,-3,& 204-075-063-1	UHB	EA	1
225	132	AOOOZ	1560-00-869-6325	97499	204-075-416-15	.CABLE ASSY,MAIN GENERATOR	UHC,UHM	EA	1
225	133	PBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O UH-1B PN 204-075-416-11	UHB,UHC,UHM	EA	1
225	134	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG	UHB,UHC,UHM	EA	1
225	135	PBOZZ	5970-00-812-2967	81349	M23053/5-108-0	..INSULATION SLEEVING	UHC,UHM	FT	V
225	136	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG	UHB,UHC,UHM	EA	1
225	137	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	138	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	139	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL U/O UH-1B PN 204-075-416-11	UHB	FT	V
225	140	PAOZZ	6145-00-578-6606	81349	M5086-2-22-9	..WIRE, ELECTRICAL U/O UH-1B PN 204-075-416-13	UHC,UHM	EA	1
225	141	AOOOZ	1560-00-731-9005	97499	204-075-427-5	.CABLE ASSEMBLY STARTER DISCONNECT	UHB,UHC,UHM	EA	1
225	141A	PBOZZ	5940-00-557-4341	96906	MS25036-123	..TERMINAL,LUG	UHB,UHC,UHM	EA	2
225	141B	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG	UHB,UHC,UHM	EA	2
225	141C	PAOZZ	5935-00-019-3415	71468	252-0129-000	..ADAPTER CONNECTO	UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	141D	PBOZZ	5935-00-836-9088	96906	MS3100R36-6SC	..CONNECTOR,RECEPTACL ELECTRICAL,START-GEN DISC .... UHB,UHC,UHM	EA	1
225	141E	PAOZZ	5940-00-113-8191	96906	MS25036-127	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
225	141F	PBOZZ	6145-00-578-6596	81349	M5086/2-2-9	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	141G	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	141H	AOOOZ	5905-00-128-6712	97499	204-075-519-1	.RESISTOR ASSEMBLY U/O PN 204-075-063-1,-3, 204-075-075-1, 204-075-083-1,-3,-5,& -7 .... UHB,UHC,UHM	EA	1
225	141J	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE .... UHB,UHC,UHM	EA	4
232	141J	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT .... UHB,UHC,UHM	EA	4
225	141K	MFOZZ	5905-00-872-2678	97499	204-075-520-1	..PLATE ASSY,MOUNTING .... UHB,UHC,UHM	EA	1
225	141L	PAOZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE .... UHB,UHC,UHM	EA	5
225	141M	PAOZZ	5905-00-513-2360	81349	RER75F1R00R	..RESISTOR,FIXED,WIRE .... UHB,UHC,UHM	EA	3
225	141N	PAOZZ	5310-00-807-1471	96906	MS21042L04	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHB,UHC,UHM	EA	6
225	142	XCFZZ		97499	204-075-107-5	.BATTERY INSTL U/O PN 204-075-017-1 SEE FIG 266 FOR BREAKDOWN .... UHB	EA	1
225	142	XCFZZ		97499	204-075-115-1	.BATTERY INSTL U/O PN 204-075-017-3 SEE FIG 266 FOR BREAKDOWN .... UHB	EA	1
225	142	XCFZZ		97499	204-075-115-3	.BATTERY INSTL U/O PN 204-075-017-5, 204-075-043-1, 204-075-044-1,-3 & 204-075-063-1 SEE FIG 266 FOR BREAKDOWN .... UHB	EA	1
225	142	XCFZZ		97499	204-075-601-3	.BATTERY INSTL SEE FIG 266 FOR BREAKDOWN .... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-111-7	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-017-1,-3,-5 & 204-075-043-1 SEE FIG 270 FOR BREAKDOWN .... UHB	EA	1
225		XCFZZ		97499	204-075-603-1	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-044-1 & -3 SEE FIG 270 FOR BREAKDOWN .... UHB	EA	1
225		XCFZZ		97499	204-075-603-5	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-063-1 SEE FIG 270 FOR BREAKDOWN .... UHB	EA	1
225		XCFZZ		97499	204-075-603-7	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-063-3 SEE FIG 270 FOR BREAKDOWN .... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-612-1	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-075-1 SEE FIG 270 FOR BREAKDOWN .... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-612-5	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-083-1,-3,&-5 SEE FIG 270 FOR BREAKDOWN .... UHC,UHM	EA	1
225		XCFZZ		97499	204-075-612-9	.EQUIPMENT INSTL ELECTRICAL AND RADIO COMPARTMENT U/O PN 204-075-083-7 SEE FIG 270 FOR BREAKDOWN .... UHC,UHM	EA	1
225	143	AOOOZ	1560-00-731-8995	97499	204-075-422-7	.CABLE ASSY,CARGO U/O PN 204-075-017-1 & -3 .... UHB	EA	1
225	143	AOOOZ	1560-00-987-1398	97499	204-075-900-7	.CABLE ASSY,FORWARD U/O PN 204-075-017-5 .... UHB	EA	1
225	143	AOOOZ	1560-00-567-2977	97499	204-075-939-7	.CABLE ASSY,CARGO U/O UH-1B PN 204-075-043-1, 204-075-044-1,-3 & 204-075-063-1 .... UHB,UHC,UHM	EA	1
225	143A	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 204-075-422-7 .... UHB	EA	1
225	143B	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-422-7 .... UHB	EA	3
225	143C	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-900-7 & 204-075-939-7 .... UHB,UHC,UHM	EA	1
225	143D	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
225	143E	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O UH-1B PN 204-075-422-7 & 204-075-900-7 .... UHB	EA	1
225	143F	PBOZZ	5935-00-686-9640	96906	MS3100R14S-7S	..CONNECTOR,RECEPTACL ELECTRICAL,CARGO SLING,DISC .... UHB,UHC,UHM	EA	1
225	143F	PAOZZ	5935-00-549-3279	96906	MS3450W14S7S	..CONNECTOR,RECEPTACE CARGO SLING DISC .... UHB,UHC,UHM	EA	1
225	143H	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-422-7 .... UHB	FT	2
225	143I	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-939-7 .... UHB,UHC,UHM	FT	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	143J	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	143K	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	144	AOOOZ	1560-00-731-9001	97499	204-075-426-3	.CABLE ASSY,ENGINE DISCONNECT U/O PN 204-075-017-1,3,-5,& 204-075-043-1	UHB	EA	1
225	144	AOOOZ	1560-00-567-2974	97499	204-075-908-5	.CABLE ASSY,ENGINE DISCONNECT U/O UH-1B PN 204-075-044-1, -3,204-075-063-1 U/O UH-1C PN 204-075-063-3	UHB,UHC,UHM	EA	1
225	144	AOOOZ	6150-00-924-0418	97499	204-175-424-9	.CABLE ASSY,ENGINE DISCONNECT U/O PN 204-075-075-1	UHC,UHM	EA	1
225	144	AOOOZ	6150-00-955-9478	97499	204-175-424-17	.CABLE ASSY,ENGINE DISCONNECT U/O PN 204-075-083-1,-3,-5,-7,& -9	UHC,UHM	EA	1
225	144A	PBOZZ	5940-00-502-7570	24617	6718477	..TERMINAL,LUG U/O UH-1B PN 204-075-426-3 U/O UH-1C PN 204-175-424-9 & -17	UHB,UHC,UHM	EA	1
225	144B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-413-3 & 204-075-426-3	UHB	EA	7
225	144C	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-908-5	UHB,UHC,UHM	EA	1
225	144D	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-424-9 & -17	UHC,UHM	EA	3
225	144E	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O UH-1B PN 204-075-426-3	UHB,UHC,UHM	EA	2
225	144F	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 204-075-908-5	UHB,UHC,UHM	EA	1
225	144G	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O PN 204-175-424-17	UHC,UHM	EA	6
225	144H	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER,CABLE CLAMP	UHB,UHC,UHM	EA	1
225	144I	PAOZZ	5365-00-598-5416	96906	MS3420-12	..BUSHING,RUBBER U/O PN 204-175-424-9 & -17	UHC,UHM	EA	1
225	144J	PAOZZ	5365-00-141-6943	96906	MS3420-16	..BUSHING,RUBBER U/O PN 204-175-424-9 & -17	UHC,UHM	EA	1
225	144K	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-424-9 & -17	UHC,UHM	EA	3
225	144L	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-413-3 & 204-075-426-3	UHB	EA	19
225	144M	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-418-7	UHB,UHC,UHM	EA	16
225	144N	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-908-5	UHB,UHC,UHM	EA	1
225	144P	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR	UHB,UHC,UHM	EA	1
225	144Q	PAOZZ	5935-00-226-1845	71468	CA20312-2866	..RECEPTACLE, CONNECTOR ELECTRICAL,ENGINE DECK DISC	UHB,UHC,UHM	EA	1
225	144R	MOOZZ	5970-00-342-8352	97499	85T4-1-2	..INSULATION TUBE U/O UH-1B PN 204-075-908-5	UHB,UHC,UHM	EA	1
225	144S	MOOZZ	5970-00-342-8352	97499	85T4-1-2	..INSULATION TUBE U/O UH-1B PN 204-075-426-3	UHB	EA	2
225	144T	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-426-3	UHB	FT	37
225	144U	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-908-5	UHB,UHC,UHM	FT	1
225	144V	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	144W	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	144X	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
225	144Y	PAOZZ	6145-00-643-0252	04939	MILW5846TY2CLA	..CABLE,SPECIAL PURPO U/O UH-1C PN 204-075-908-5	UHB,UHC,UHM	FT	V
225	145	AOOOZ	6150-00-924-0416	97499	204-175-425-9	.CABLE ASSY,PUMP TRANSFER PANEL FLOAT SWITCH U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9	UHC,UHM	EA	1
225	145A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG	UHC,UHM	EA	2
225	145B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG	UHC,UHM	EA	1
225	145C	PAOZZ	5935-00-815-1541	96906	MS3116E8-4S	..CONNECTOR,PLUG,ELEC TRANS PUMP FLOAT SW	UHC,UHM	EA	1
225	145D	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL	UHC,UHM	FT	V
225	146	AOOOZ	1560-00-731-8958	97499	204-075-414-9	.CABLE ASSY,FUSELAGE AND DOME LIGHT U/O UH-1C PN 204-075-063-3	UHB,UHC,UHM	EA	1
225	146	AOOOZ	6150-00-924-0415	97499	204-175-426-5	.CABLE ASSY,FUSELAGE AND DOME LIGHTS U/O PN 204-075-075-1,		EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						204-075-083-1,-3,-5,-7,& -9 .... UHC,UHM		
225	146A	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG .... UHB,UHC,UHM	EA	22
225	146B	PAOZZ	5940-00-557-1829	96906	MS25036-149	..TERMINAL,LUG .... UHB,UHC,UHM	EA	2
225	146C	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	146D	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	146E	AOOOZ	1560-00-731-8930	97499	204-075-405-17	.CABLE ASSY, TAILLIGHT AND FIRE DETECTOR U/O UH-1C PN 204-075-063-3 .... UHB,UHC,UHM	EA	1
225	146F	AOOOZ	6150-00-924-0451	97499	204-175-426-1	.CABLE ASSY, TAILLIGHT AND FIRE DETECTOR U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9 .... UHC,UHM	EA	1
225	146G	PBOZZ	5365-00-663-2125	88044	AN3420-10	..BUSHING,RUBBER U/O PN 204-175-426-1 .... UHC,UHM	EA	1
225	146H	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE U/O PN 204-075-405-17 .... UHB,UHC,UHM	EA	1
225	146I	PAOZZ	5935-00-809-0786	96906	MS3057-10A	..CLAMP,CABLE U/O PN 204-175-426-1 .... UHC,UHM	EA	3
225	146J	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-426-1 .... UHC,UHM	EA	5
225	146K	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-426-1 .... UHC,UHM	EA	6
225	146L	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-405-17 .... UHB,UHC,UHM	EA	1
225	146M	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-405-17 .... UHB,UHC,UHM	FT	1
225	146N	PAOZZ	5935-00-061-2476	96906	MS3100K18-12S	..CONNECTOR,RECEPTACL FIRE DET DISC U/O PN 204-175-426-1 .... UHC,UHM	EA	1
225	146P	PAOZZ	5935-00-972-5475	02660	69-6R10SL4S100	..CONNECTOR,PLUG,ELEC U/O PN 204-075-405-17 .... UHB,UHC,UHM	EA	1
225	146Q	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O PN 204-075-405-17 .... UHB,UHC,UHM	FT	V
225	146R	PBOZZ	5935-00-715-2756	96906	MS3126F10-6S	..CONNECTOR,PLUG,E U/O PN 204-075-405-17 .... UHC,UHM	EA	1
225	146S	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL U/O PN 204-075-405-17 .... UHB,UHC,UHM	FT	V
225	147	AOOOZ	6150-00-924-0412	97499	204-175-427-7	.CABLE ASSY,AC POWER U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9 .... UHC,UHM	EA	1
225	147A	AOOOZ	6150-00-927-3631	97499	204-175-427-11	.CABLE ASSY,AC POWER U/O PN 204-075-083-1,-3, -5,-7,& -9 .... UHC,UHM	EA	1
225	147B	AOOOO		97499	204-175-427-13	.CABLE ASSY,AC POWER U/O PN 204-075-083-7 .... UHC,UHM	EA	1
225	147C	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-427-11 .... UHC,UHM	EA	2
225	147D	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-427-7 & -13 .... UHC,UHM	EA	4
225	147E	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-427-7 .... UHC,UHM	EA	6
225	147F	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-427-13 .... UHC,UHM	EA	5
225	147G	PAOZZ	5935-00-201-8072	88044	AN3115-1	..CONNECTOR,PLUG,ELEC PITOT HTR CONN U/O PN 204-175-427-11 .... UHC,UHM	EA	1
225	147H	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-175-427-11 .... UHC,UHM	FT	2
225	147J	MOOZZ		97499	85T4-4-50	..INSULATION TUBE U/O PN 204-175-427-11 .... UHC,UHM	EA	1
225	147K	MOOZZ		97499	85T4-9-2	..INSULATING TUBING .... UHC,UHM	EA	1
225	147L	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL .... UHC,UHM	FT	V
225	148	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHB,UHC,UHM	EA	3
225	149	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT .... UHB,UHC,UHM	EA	3
225	150	PAOZZ	1560-00-898-6877	97499	204-075-167-1	.GUARD,MAIN GENERATO U/O PN 204-075-017-1,-3, -5, 204-075-043-1, 204-075-044-1,-3,& 204-075-063-1 .... UHB	EA	1
225	151	AOOOZ	1560-00-731-8928	97499	204-075-406-5	.CABLE ASSY,FIRE DETECTOR DISCONNECT U/O UH-1C PN 204-075-063-3 .... UHB,UHC,UHM	EA	1
225	151	AOOOZ	6150-00-924-0451	97499	204-175-426-1	.CABLE ASSY,FIRE DETECTOR DISCONNECT U/O PN 204-075-075-1, 204-075-083-1,-3,-5,-7,& -9 .... UHC,UHM	EA	1
225	152	AOOOZ	1560-00-731-8932	97499	204-075-405-25	.CABLE ASSY,OIL VALV AND SUMP LIGHT U/O UH-1B PN 204-075-017-1,-3,-5, 204-075-043-17, 204-075-044-1,-3,& 204-075-063-1 .... UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	152A	PAOZZ	5935-00-809-0786	96906	MS3057-10A	..CLAMP,CABLE U/O PN 204-075-405-5 & 204-175-426-1 .... UHB,UHC,UHM	EA	1
225	152B	PAOZZ	5935-00-061-2476	96906	MS3100K18-12S	..CONNECTOR,RECEPTACL U/O PN 204-075-405-5 & 204-175-426-1 .... UHB,UHC,UHM	EA	1
225	152C	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE U/O PN 204-075-405-25 .... UHB	EA	1
225	152D	PAOZZ	5935-00-820-0555	96906	MS3106R14S5S	..CONNECTOR,PLUG,ELEC OIL VALVE U/O PN 204-075-405-25 .... UHB	EA	1
225	152E	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-075-405-1 .... UHB,UHC,UHM	EA	1
225	152F	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-426-1 .... UHC,UHM	EA	5
225	152G	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-405-25 & 204-175-426-1 .... UHB,UHC,UHM	EA	1
225	152H	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-405-25 .... UHB	EA	1
225	152I	PAOOO	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-405-25 .... UHB	EA	1
225	152J	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING U/O PN 204-075-405-25 .... UHB	EA	1
225	152K	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-405-25 .... UHB	FT	1
225	152L	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	152M	PBOZZ	5365-00-663-2125	88044	AN3420-10	..BUSHING,RUBBER U/O PN 204-175-426-1 .... UHC,UHM	EA	1
225	152N	PBOZZ	5935-00-715-2756	96906	MS3126F10-6S	..CONNECTOR,PLUG,ELEC TAIL & ANTI COLL LT DISC U/O PN 204-175-426-1 .... UHC,UHM	EA	1
225	152P	AOOOZ	1560-00-731-8951	97499	204-075-412-7	.CABLE ASSY,FUEL CELL BULKHEAD .... UHB	EA	1
225	152Q	PAOZZ	5935-00-600-1890	95712	1-690-1	..CONNECTOR,PLUG,ELEC FUEL TANK DISC .... UHB	EA	2
225	152R	PAOOO	5935-00-681-3638	95712	1-728-1	..CONNECTOR,PLUG,ELEC FUEL TANK BLKHD .... UHB	EA	2
225	152S	PAOZZ	5935-00-590-3865	95712	1-890-1	..ADAPTER,CONNECTOR FUEL TANK BLKHD .... UHB	EA	1
225	152T	PAOZZ	5935-00-539-0203	95712	1-891-1	..ADAPTER,CONNECTOR FUEL TANK BLKHD .... UHB	EA	2
225	152U	MOOZZ	5935-00-504-3684	95712	1-892-1	..ADAPTER,CONNECTOR FUEL TANK BLKHD .... UHB	EA	2
225	152U	PAOZZ	5330-00-168-6160	95712	1-309-10	..PACKING,PREFORMED .... UHB	EA	1
225	152V	PBOZZ	6145-00-836-2241	97499	BS20	..CABLE,ELECTRICAL .... UHB	FT	2
225	152W	PAOZZ	5935-00-871-5052	95712	1-905-1	..CONNECTOR,PLUG,ELEC FUEL TANK BLKHD .... UHB	EA	2
225	152X	MOOZZ	5970-00-759-5450	97499	85T4-14-1	..TUBE,INSULATION .... UHB	EA	4
225	152Y	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL .... UHB	FT	V
225	153	AOOOZ	1560-00-731-8976	97499	204-075-415-15	.CABLE ASSY,HYDRAULI CONTROLS DISCONNECT .... UHB	EA	1
225	153	AOOOZ	1560-00-871-8663	97499	204-075-955-19	.CABLE ASSY,HYDRAULI CONTROLS DISCONNECT U/O PN 204-075-063-3 .... UHC,UHM	EA	1
225	153A	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE .... UHB	EA	1
225	153B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
225	153C	PAOZZ	5935-00-557-1863	96906	MS25183A10SL3S	..CONNECTOR,PLUG,ELEC U/O PN 204-075-415-13 .... UHC,UHM	EA	1
225	153D	XDOZZ		97499	85T4-7-2	..INSULATION TUBE .... UHB,UHC,UHM	FT	1
225	153E	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
225	153F	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE .... UHB,UHC,UHM	EA	4
225	154	AOOOZ	1560-00-732-1683	97499	204-075-423-9	.CABLE ASSY, TRANSMISSION DISCONNECT U/O UH-1C PN 204-075-063-3 .... UHB,UHC,UHM	EA	1
225	154A	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
225	154B	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR .... UHB,UHC,UHM	EA	8
225	154C	XDOZZ		97499	85T4-7-2	..INSULATION TUBE .... UHB,UHC,UHM	FT	9
225	154D	PBOZZ	5935-00-880-7894	96906	MS3126C14-19S	..CONNECTOR,RECEPTACL XMSN DISC .... UHB,UHC,UHM	EA	1
225	154E	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
225	155	AOOOZ	1560-00-731-8997	97499	204-075-424-9	.CABLE ASSY,FUEL BOOST PRESSURE SWITCH..................UHB	EA	1
225	155	AOOOZ	6150-00-939-[illegible]621	97499	204-175-404-9	.CABLE ASSY,FUEL BOOST PRESSURE SWITCH U/O PN 204-075-063-3..................UHC,UHM	EA	1
225	155A	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE..................UHB,UHC,UHM	EA	4
225	155B	PAOZZ	5935-00-255-[illegible]864	97499	30-031-12	..CLAMP..................UHB,UHC,UHM	EA	2
225	155C	PAOZZ	5940-00-143-[illegible]771	96906	MS25036-103	..TERMINAL,LUG..................UHB,UHC,UHM	EA	2
225	155D	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..................UHB,UHC,UHM	FT	4
225	155E	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..................UHB,UHC,UHM	FT	V
225	156	AOOOZ	1560-00-732-[illegible]90	97499	204-075-428-9	.CABLE ASSY,FUEL OIL PRESSURE TRANSMITTER U/O UH-1C PN 204-075-063-3..................UHB,UHC,UHM	EA	1
225	156A	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE..................UHB,UHC,UHM	EA	2
225	156B	PAOZZ	5935-00-820-05[illegible]5	96906	MS3106R14S5S	..CONNECTOR,PLUG,ELEC FUEL SHUT-OFF VALVE..................UHB,UHC,UHM	EA	1
225	156C	XDOZZ		97499	30-0514S2S	..INSULATION TUBE..................UHB,UHC,UHM	EA	1
225	156D	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..................UHB,UHC,UHM	FT	V
225	156E	AOOOZ	1560-00-760-33[illegible]1	97499	204-075-428-19	.CABLE ASSY,RH FUEL TANK BULKHEAD DISCONNECT..................UHB	EA	1
225	156F	AOOOZ	1560-00-731-90[illegible]0	97499	204-075-428-11	.CABLE ASSY,FUEL TANK INTERCONNECT U/O PN 204-075-017-1,-3, -5, 204-075-043-1,204-075-044-1, & -3..................UHB	EA	1
225	156G	AOOOZ	1560-00-869-81[illegible]	97499	204-075-428-21	.CABLE ASSY,FUEL TANK INTERCONNECT U/O PN 204-075-063-1..................UHB	EA	1
225	156H	PAOZZ	5935-00-600-1890	95712	1-690-1	..CONNECTOR,PLUG,ELEC FUEL TANK BLKHD..................UHB	EA	1
225	156I	PAOZZ	5935-00-871-5052	95712	1-905-1	..CONNECTOR,PLUG,ELEC FUEL TANK BLKHD..................UHB	EA	4
225	156J	PAOZZ	5935-00-683-4978	95712	1-713-1	..ADAPTER,CONNECTOR FUEL TANK BLKHD ADAPTER. U/O PN 204-075-428-11 & -21..................UHB	EA	1
225	156K	PAOZZ	5935-00-557-181[illegible]	95712	5193-1	..ADAPTER,TEE FUEL TANK BLKHD ADAPTER. U/O PN 204-075-428-11 & -21..................UHB	EA	
225	156L	PAOZZ	5935-00-590-3865	95712	1-890-1	..ADAPTER,CABLE TO CONNECTOR. FUEL TANK BLKHD..................UHB	EA	2
225	156L	PAOZZ	5330-00-168-6160	95712	1-309-10	..PACKING,PREFORMED..................UHB	EA	1
225	156M	MOOZZ	5970-00-759-5450	97499	85T4-14-1	..TUBE,INSULATION U/O PN 204-075-428-19..................UHB	EA	V
225	156N	PBOZZ	6145-00-836-2241	97499	BS20	..CABLE,ELECTRICAL U/O PN 204-075-428-19 & -21..................UHB	FT	V
225	156P	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O PN 204-075-428-11 & -19..................UHB	EA	1
225	156Q	PAOZZ	5935-00-504-3684	95712	1-892-1	..ADAPTER,CABLE TO CONNECTOR.FUEL TANK BLKHD. U/O PN 204-075-428-19..................UHB	EA	2
225	156Q	PAOZZ	5330-00-168-6160	95712	1-309-10	...PACKING,PREFORMED..................UHB	EA	1
225	156R	AOOOZ	1560-00-731-9009	97499	204-075-428-1	.CABLE ASSY,HEATER CONTROL U/O PN 204-075-017-1 & -3..................UHB	EA	1
225	156S	AOOOZ	1560-00-987-1393	97499	204-075-447-3	.CABLE ASSY,HEATER CONTROL U/O UH-1B 204-075-043-1, 204-075-043-1, 204-075-044-1,-3, 204-075-063-1 UH-1C PN 204-075-063-3..................UHB,UHC,UHM	EA	1
225	156T	PBOZZ	5935-00-558-4026	96906	MS3057-8A	..CLAMP,CABLE U/O PN 204-075-428-1..................UHB	EA	1
225	156U	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE CLAMP U/O PN 204-075-428-1..................UHB	EA	1
225	156V	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER,PLUG U/O PN 204-075-428-1..................UHB	EA	1
225	156W	PBOZZ	5935-00-853-3135	96906	MS3100R24-7S	..CONNECTOR,RECEPTACL HTR DISC RECPT..................UHB,UHC,UHM	EA	1
225	156X	PAOZZ	5935-00-833-0362	96906	MS3108R16S1S	..CONNECTOR,PLUG,ELEC CABIN AIR ELEMENT. U/O PN 204-075-428-1..................UHB	EA	1
225	156Y	PBOZZ	5935-00-849-7171	96906	MS3108R20-27S	..CONNECTOR,PLUG,ELEC HTR CONT BOX..................UHB,UHC,UHM	EA	1
225	156Z	PAOZZ	5940-00-204-8990	96906	MS25036-111	..TERMINAL,LUG..................UHB,UHC,UHM	EA	
225	157	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR..................UHB,UHC,UHM	EA	1
225	158	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG..................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
225	159	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG........UHB,UHC,UHM	EA	1
225	160	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG........UHB,UHC,UHM	EA	1
225	161	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING U/O PN 204-075-428-1........UHB	EA	2
225	162	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-428-1........UHB	FT	1
225	163	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL........UHB,UHC,UHM	FT	V
225	164	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL........UHB,UHC,UHM	FT	V
225	165	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL........UHB,UHC,UHM	FT	V
225	166	PBOZZ	6145-00-993-5490	81349	MILW22759	..WIRE,ELECTRICAL U/O UH-1B PN 204-075-428-1 ....UHB,UHC,UHM	EA	1
225	167	AOOOZ	1560-00-987-1395	97499	204-075-447-7	.CABLE ASSY,FORWARD THERMOSTAT U/O UH-1B PN 204-075-017-5,204-075-043-1,204-075-044-1,-3,204-075-063-1 U/O PN 204-075-063-3........UHB,UHC,UHM	EA	1
225	168	AOOOZ	1560-00-731-9007	97499	204-075-427-7	.CABLE ASSY,HEATER TEMPERATURE CONTROL BOX U/O PN 204-075-017-1 & -3........UHB	EA	1
225	169	PAOZZ	5935-00-809-0786	96906	MS3057-10A	..CLAMP,CABLE U/O PN 204-075-427-7........UHB	EA	1
225	170	PAOZZ	5935-00-990-3791	77820	10-214614-7S	..CONNECTOR,PLUG,ELEC U/O PN 204-075-447-7........UHB,UHC,UHM	EA	1
225	171	PBOZZ	5935-00-835-4339	96906	MS3108R18-1S	..CONNECTOR,PLUG,ELEC TEMP CONTROL BOX. U/O PN 204-075-427-7 ....UHB	EA	1
225	172	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-427-7........UHB	EA	1
225	173	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-075-427-7........UHB	EA	1
225	174	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........UHB,UHC,UHM	FT	1
225	175	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL U/O PN 204-075-427-7........UHB	FT	V
225	176	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL........UHB,UHC,UHM	FT	V
225	177	AOOOZ	1560-00-732-1689	97499	204-075-428-3	.CABLE ASSY,CABIN AIR PRESSURE SWITCH U/O PN 204-075-017-1,-3,-5 & 204-075-043-1........UHB	EA	1
225	178	AOOOZ	1560-00-567-3059	97499	204-075-904-9	.CABLE ASSEMBLY AIR PRESSURE SWITCH U/O PN .UH-1B PN 204-075-044-1,-3 & 204-075-063-1, UH-1C PN 204-075-063-3 ....UHB,UHC,UHM	EA	1
225	179	PAOZZ	5935-00-259-7447	96906	MS3108B18-10S	..CONNECTOR,PLUG,ELEC AIR PRESS SW........UHB,UHC,UHM	EA	1
225	180	PAOZZ	5935-00-809-0786	96906	MS3057-10A	..CLAMP,CABLE........UHB,UHC,UHM	EA	1
225	181	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........UHB,UHC,UHM	FT	1
225	182	MOOZZ		97499	85T4-6-4	..INSULATION,TUBE U/O PN 204-075-904-9........UHB,UHC,UHM	EA	1
225	183	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL........UHB,UHC,UHM	FT	V
225	184	PBOZZ	6145-00-993-5490	81349	M22759/5-18-9	..WIRE,ELECTRICAL........UHB,UHC,UHM	EA	1
225	185	AOOOZ	1560-00-731-8983	97499	204-075-417-11	.CABLE ASSY,FUEL CELL BULKHEAD U/O PN 204-075-017-1,-3,-5 & 204-075-043-1........UHB	EA	1
225	186	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG........UHB	EA	3
225	187	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........UHB	FT	3
225	188	PAOZZ	5935-00-553-3283	02660	165-33	..CONNECTOR,PLUG,ELEC FLOAT SW BLKHD CONN........UHB	EA	1
225	189	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL........UHB	FT	V
225	190	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING EXTENDED WASHER,HEXAGON........UHB,UHC,UHM	EA	4
225	192	PAOZZ	5305-00-984-6195	96906	MS35206-247	.SCREW,MACHINE........UHB,UHC,UHM	EA	2
225	193	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE........UHB,UHC,UHM	EA	2
225	194	PBOZZ	5905-00-059-9451	88044	AN5534-2	.RESISTOR,THERMAL........UHB,UHC,UHM	EA	1
225	195	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE HEXAGON........UHB,UHC,UHM	EA	4
225	196	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET........UHB,UHC,UHM	EA	1
225	197	PAOZZ	5975-00-553-6995	96906	MS25171-1S	.CABLE NIPPLE, ELECTRICAL........UHB,UHC,UHM	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
225	198	PAOZZ	5306-00-889-3000	96906	MS35206-230	.SCREW,MACHINE UHB,UHC,UHM	EA	2
225	199	PAOZZ	6210-00-729-9396	72914	A5395C1	.LIGHT,PANEL UHB,UHC,UHM	EA	1
225	200	XCFZZ		97499	204-075-106-7	.INVERTER INSTL,MAIN AND SPARE U/O PN 204-075-017-1 & -3 SEE FIG 264 FOR BREAKDOWN UHB	EA	1
225	200	XCFZZ		97499	204-075-120-1	.INVERTER INSTL,MAIN MAIN AND SPARE U/O (UHIC) PN 204-075-017-5,204-075-043-1, 204-075-044-1,-3,204-075-063-1 (UHIC) 204-075-063-3,204-075- 075-1,204-075-083-1,-3,-5,& -7 SEE FIG 264 FOR BREAKDOWN UHB,UHC,UHM	EA	1
225	201	PAOZZ	5930-00-504-6223	96906	MS25089-4C	.SWITCH,PUSH UHB,UHC,UHM	EA	1
225	202	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK UHB,UHC,UHM	EA	2
225	203	XDOZZ		89513	98101	PLATE,COVER UHB,UHC,UHM	EA	1
225	204	PAOZZ	5935-01-016-2464	81349	WC596-6-1	CONNECTOR,RECEPTACL UHB,UHC,UHM	EA	2
225	206	PAOZZ	5935-00-722-8176	96906	MS90376-18Y	.COVER,ELECTRICAL CONNECTOR UHB,UHC,UHM	EA	1
225	207	PAOZZ	5340-00-577-8992	96906	MS25177-18	.CAP,PROTECTIVE,DUST UHB,UHC,UHM	EA	1
225	208	PAOZZ	5935-00-500-5018	71468	025-0510-000	.COVER,ELFCTRICAL CONNECTOR UHB,UHC,UHM	EA	1
225	209	PAOZZ	5935-00-280-2308	71468	025-0498-000	.COVER,ELECTRICAL CONNECTOR UHB,UHC,UHM	EA	2
225	210	PAOZZ	5325-00-174-9045	96906	MS35489-26	.GROMMET,NONMETALLIC UHB,UHC,UHM	EA	2
225	211	PAOZZ	5325-00-276-6098	96906	MS35489-78	.GROMMET,NONMETALLIC UHB,UHC,UHM	EA	1
225	212	PAOZZ	5365-00-618-9242	80205	NAS43DD3-45	.SPACER,SLEEVE U/O PN 204-075-063-1,& -3 UHB,UHC,UHM	EA	1
225	213	PAOZZ	2925-00-552-5747	88937	44HY26254	.SWITCH,ROTARY UHB,UHC,UHM	EA	1

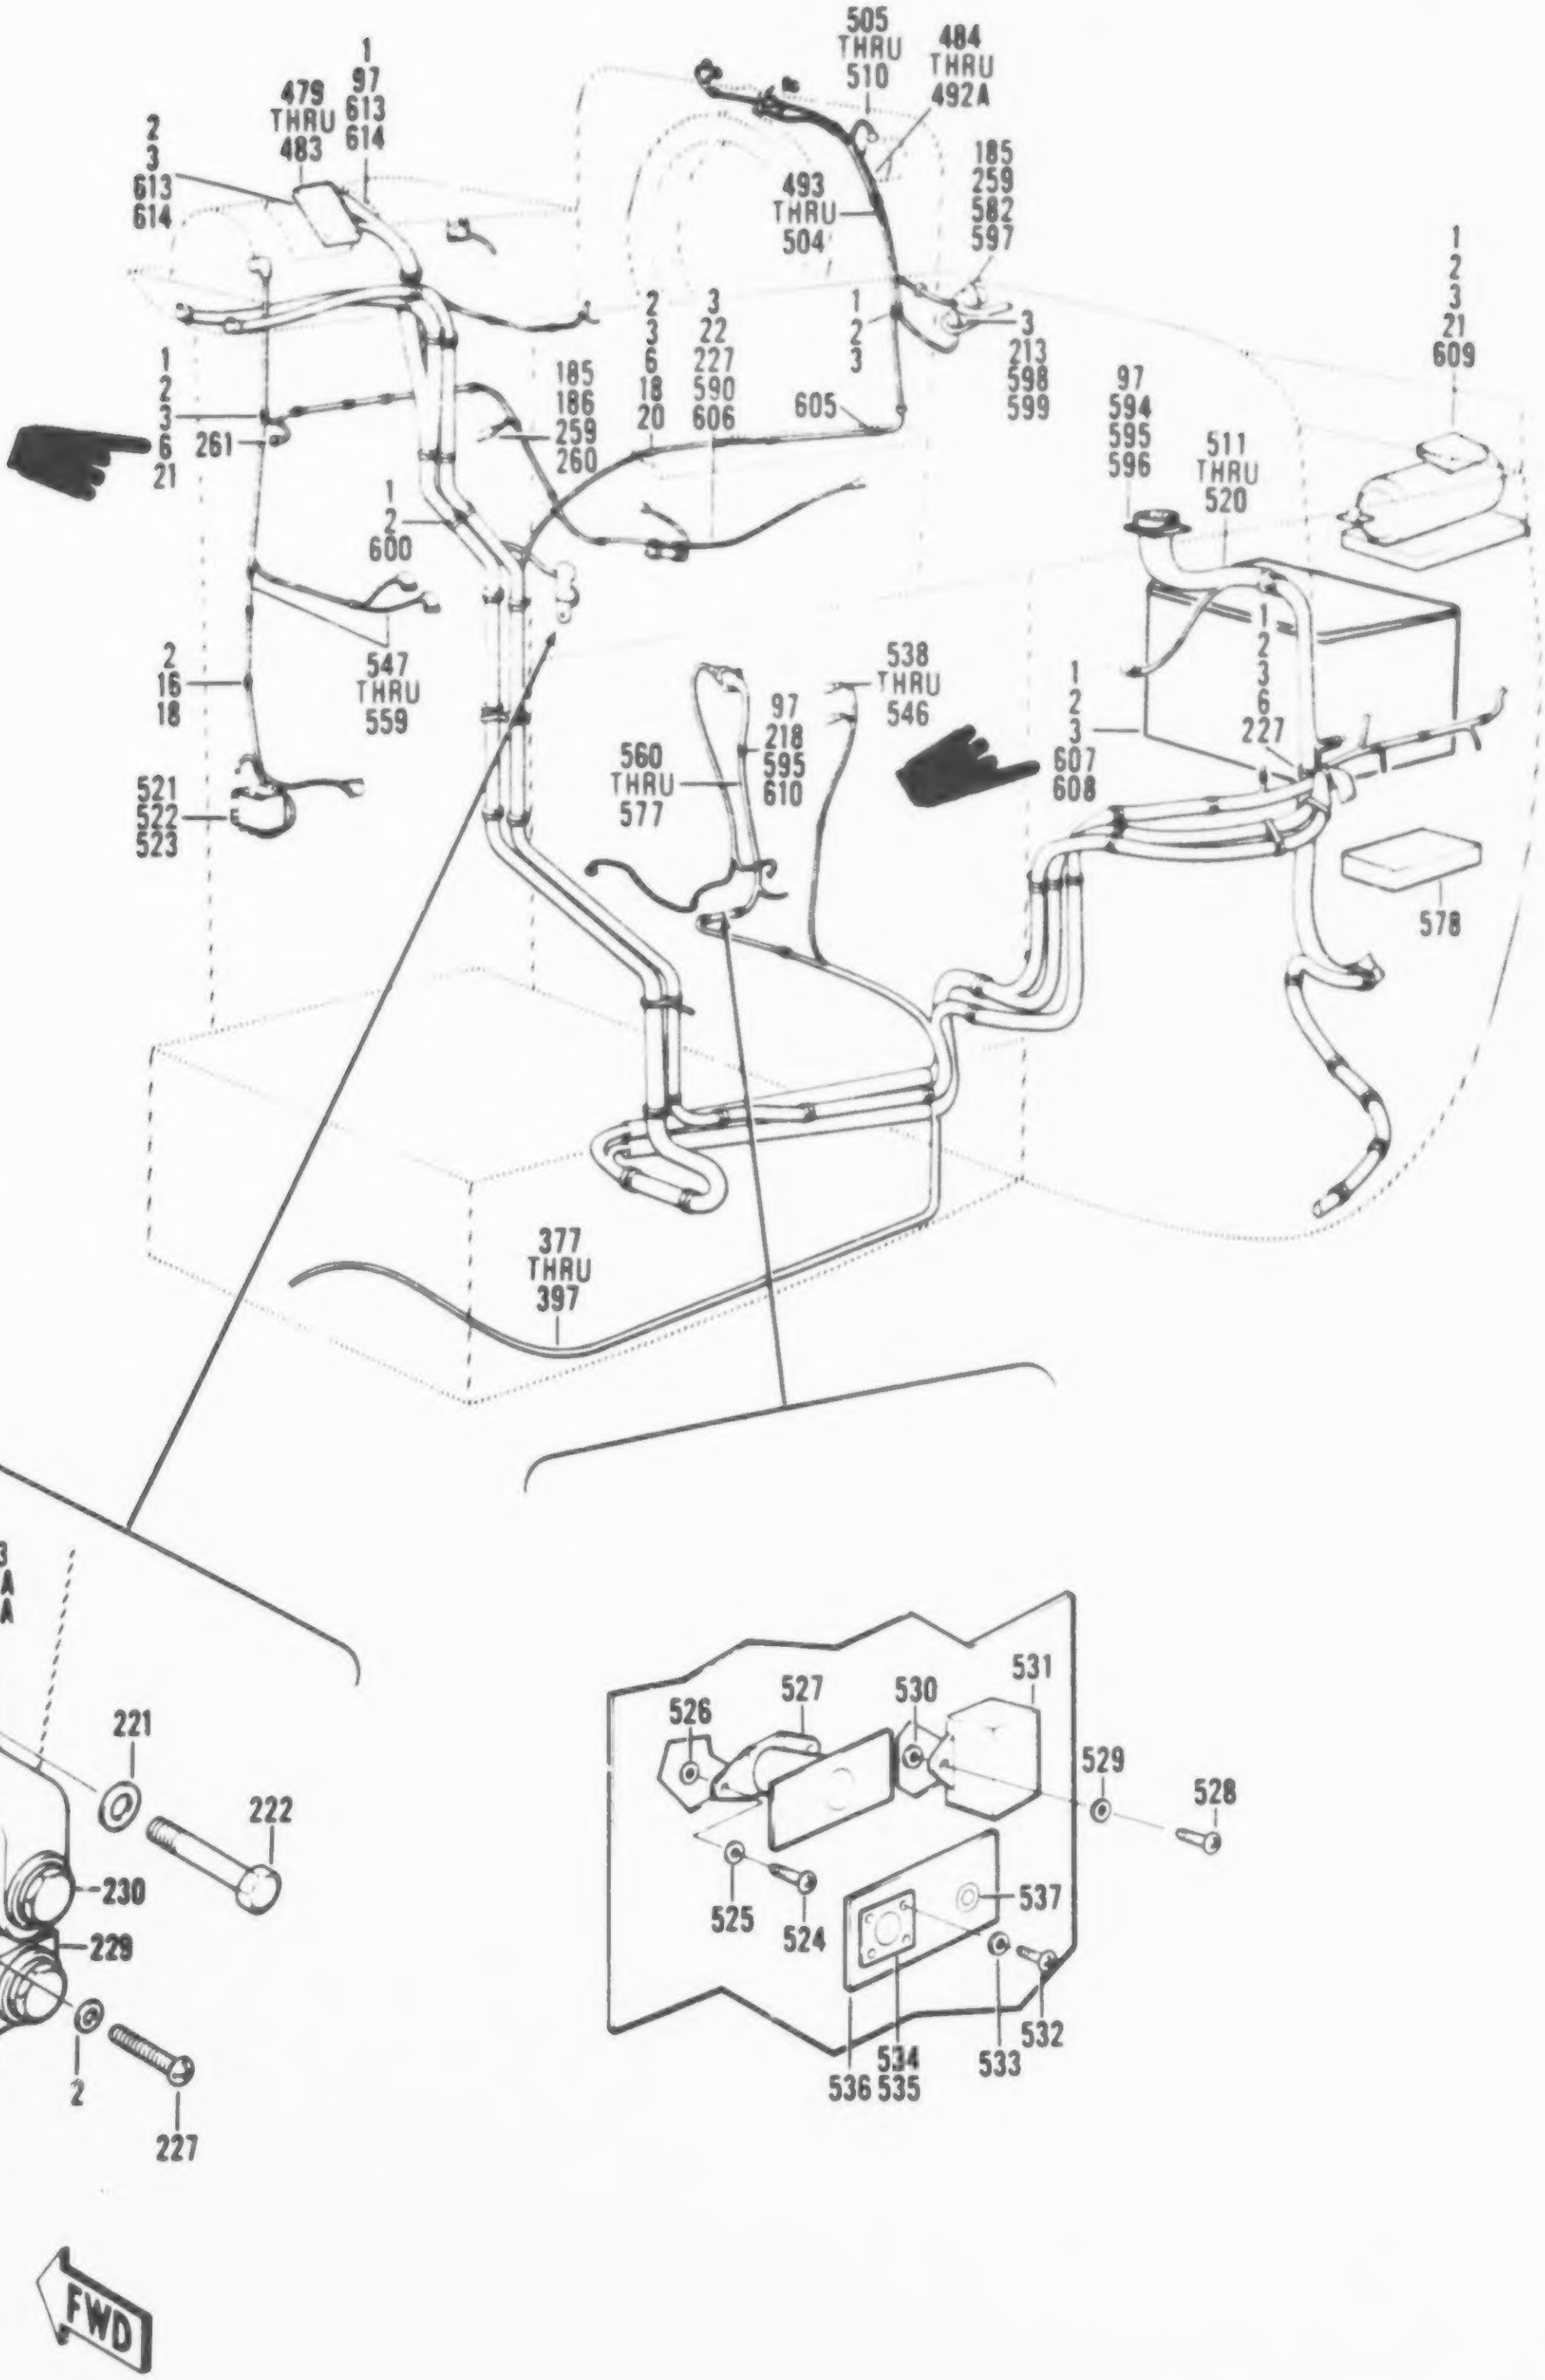
505 THRU 510
484 THRU 492A
1 97 613 614
479 THRU 483
2 3 613 614
185 259 582 597
493 THRU 504
1 2 3
3 213 598 599
2 3 6 18 20
3 22 227 590 606
605
1 2 3 21 609
1 2 3 6 21
261
185 186 259 260
97 594 595 596
511 THRU 520
1 2 600
2 16 18
547 THRU 559
538 THRU 546
97 218 595 610
560 THRU 577
1 2 3 6 227
1 2 3 607 608
521 522 523
578
377 THRU 397
14
221
223 227A 230A
224
221
222
3
2
230
229
228
2
227
526
527
530
531
529
528
525
524
537
536
534 535
533
532
FWD

Figure 226. Electrical Installation, Forward Section (Sheet 1 of 6)

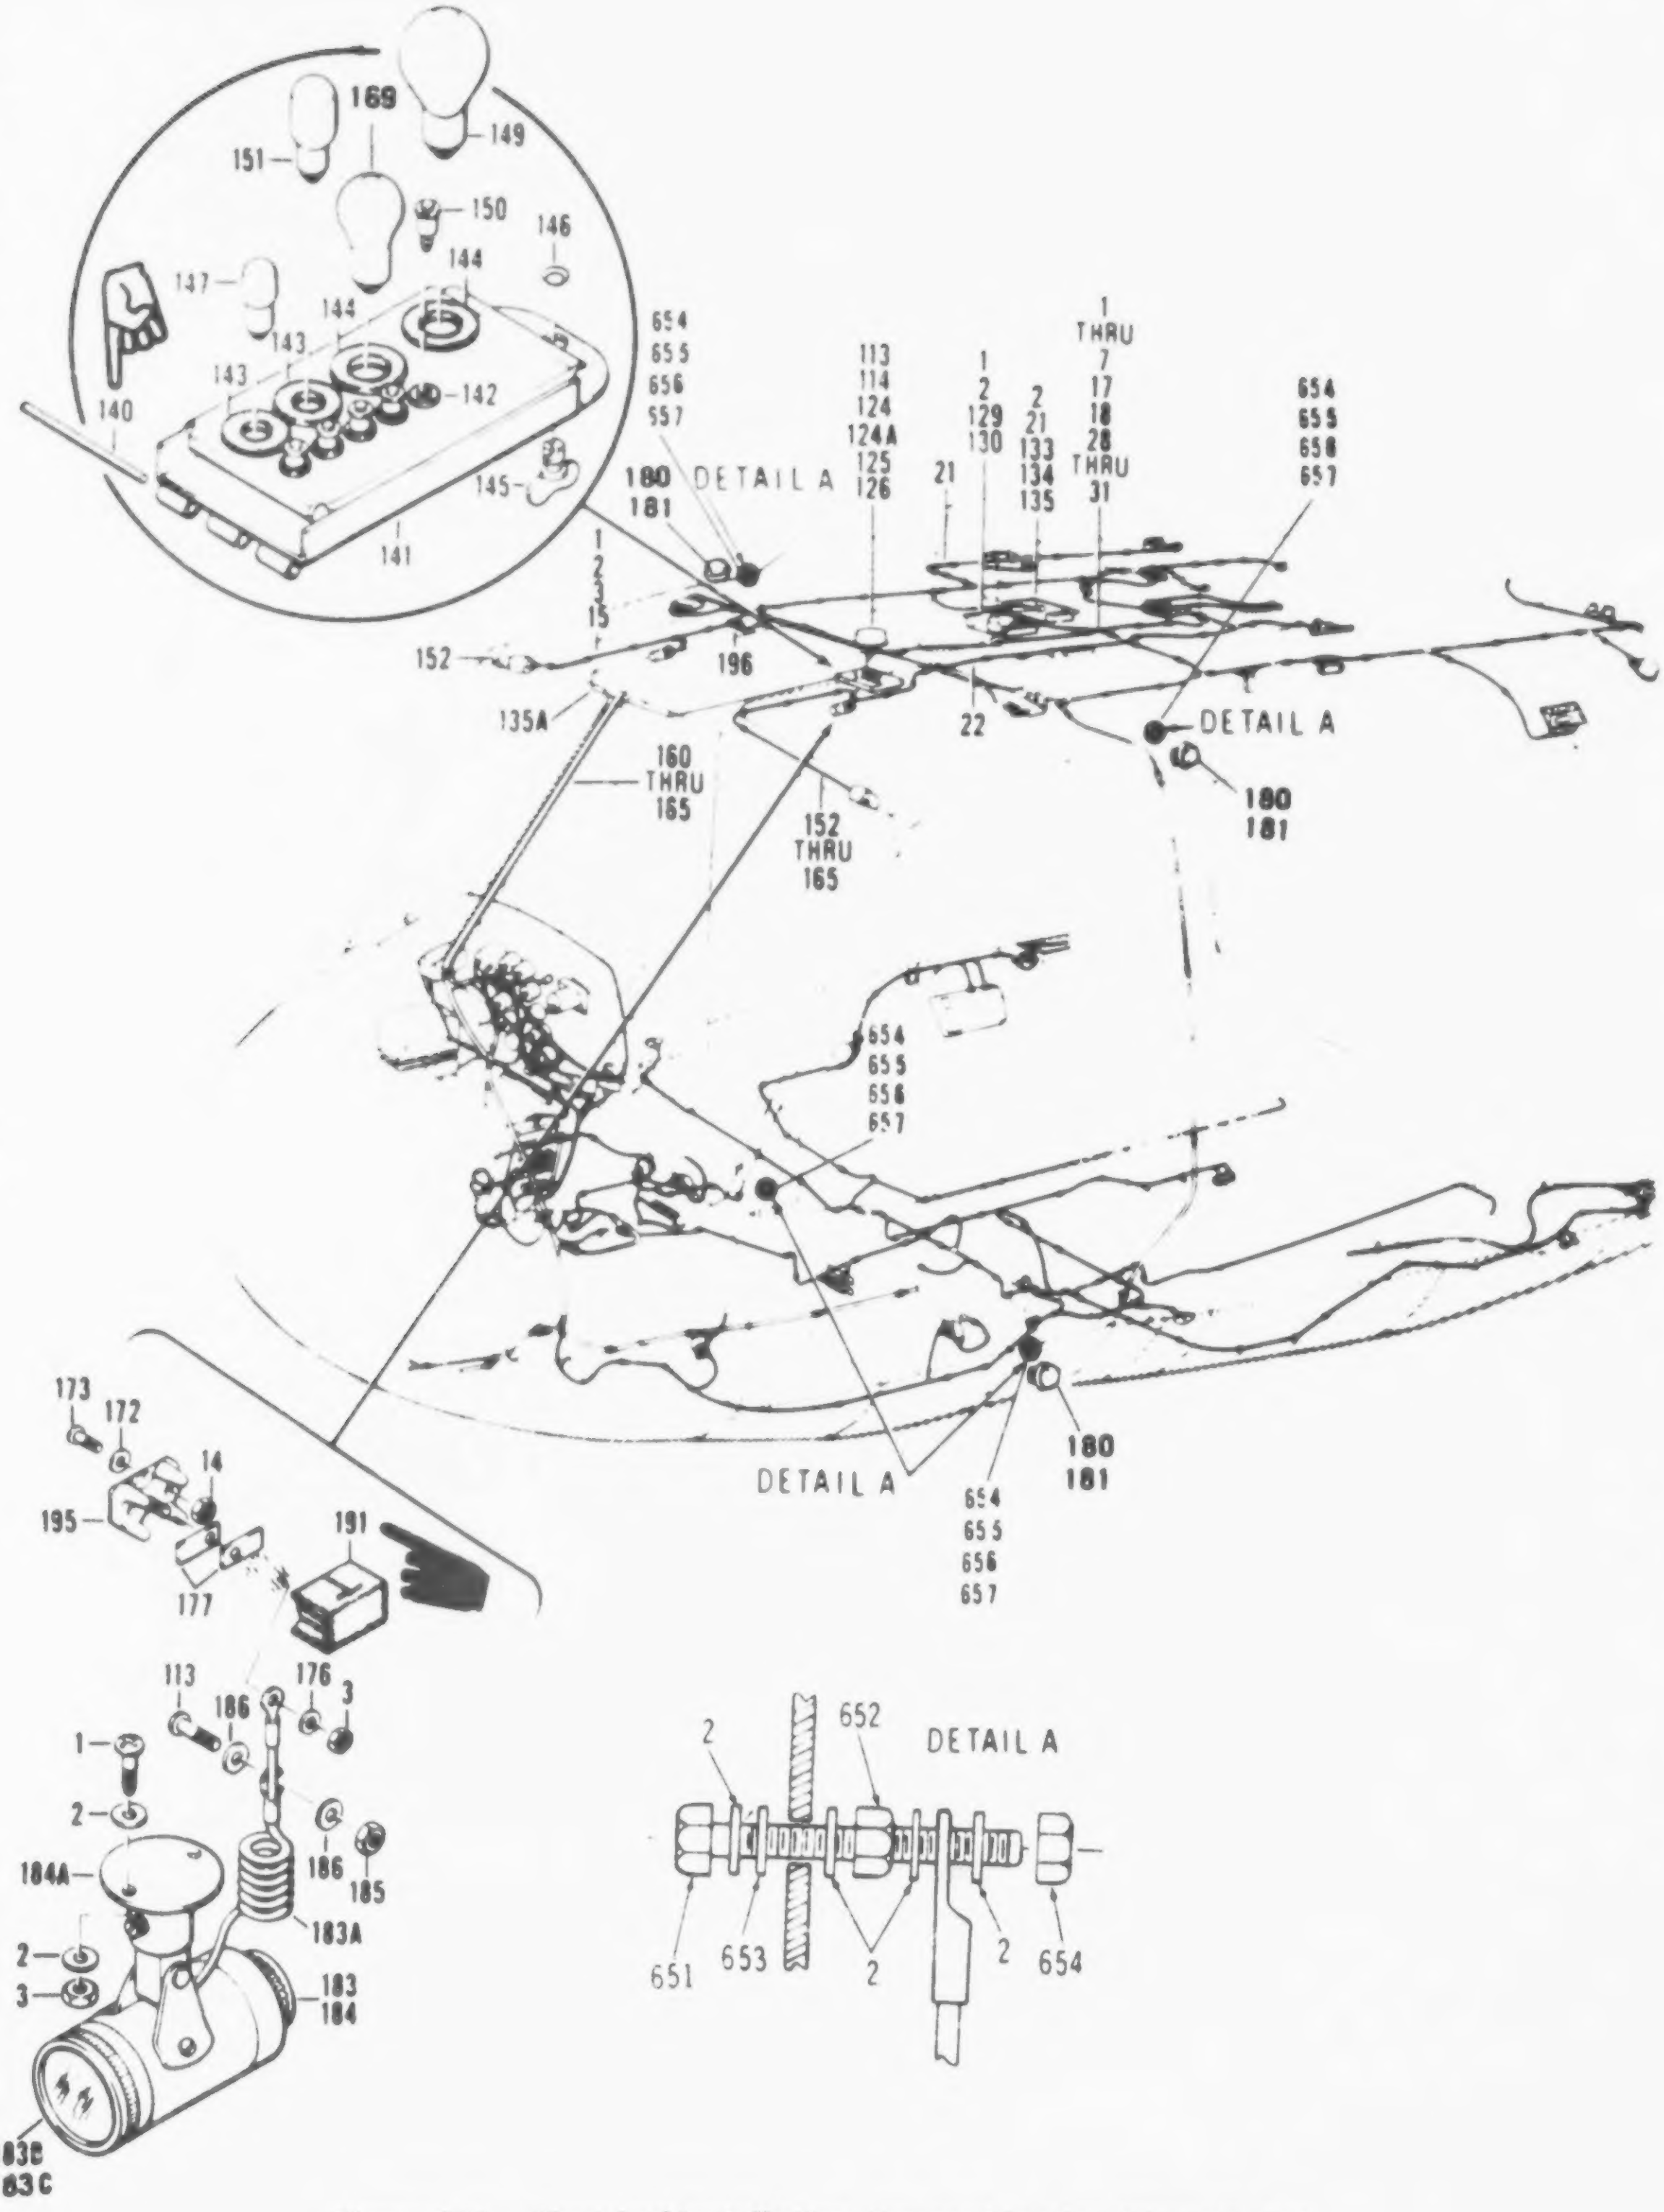
169
151
149
150
146
147
144
144
143
143
142
140
145
141
654
655
656
657
180
181
DETAIL A
113
114
124
124A
125
126
1
2
129
130
2
21
133
134
135
21
1
THRU
7
17
18
28
THRU
31
654
655
656
657
1
2
3
15
152
196
135A
22
DETAIL A
180
181
160
THRU
165
152
THRU
165
654
655
656
657
173
172
14
195
191
177
180
181
DETAIL A
654
655
656
657
113
176
3
186
1
2
186
185
184A
183A
2
3
183
184
183B
183C
2
652
DETAIL A
651
653
2
2
654

Figure 226. Electrical Installation, Forward Section (Sheet 2 of 6)

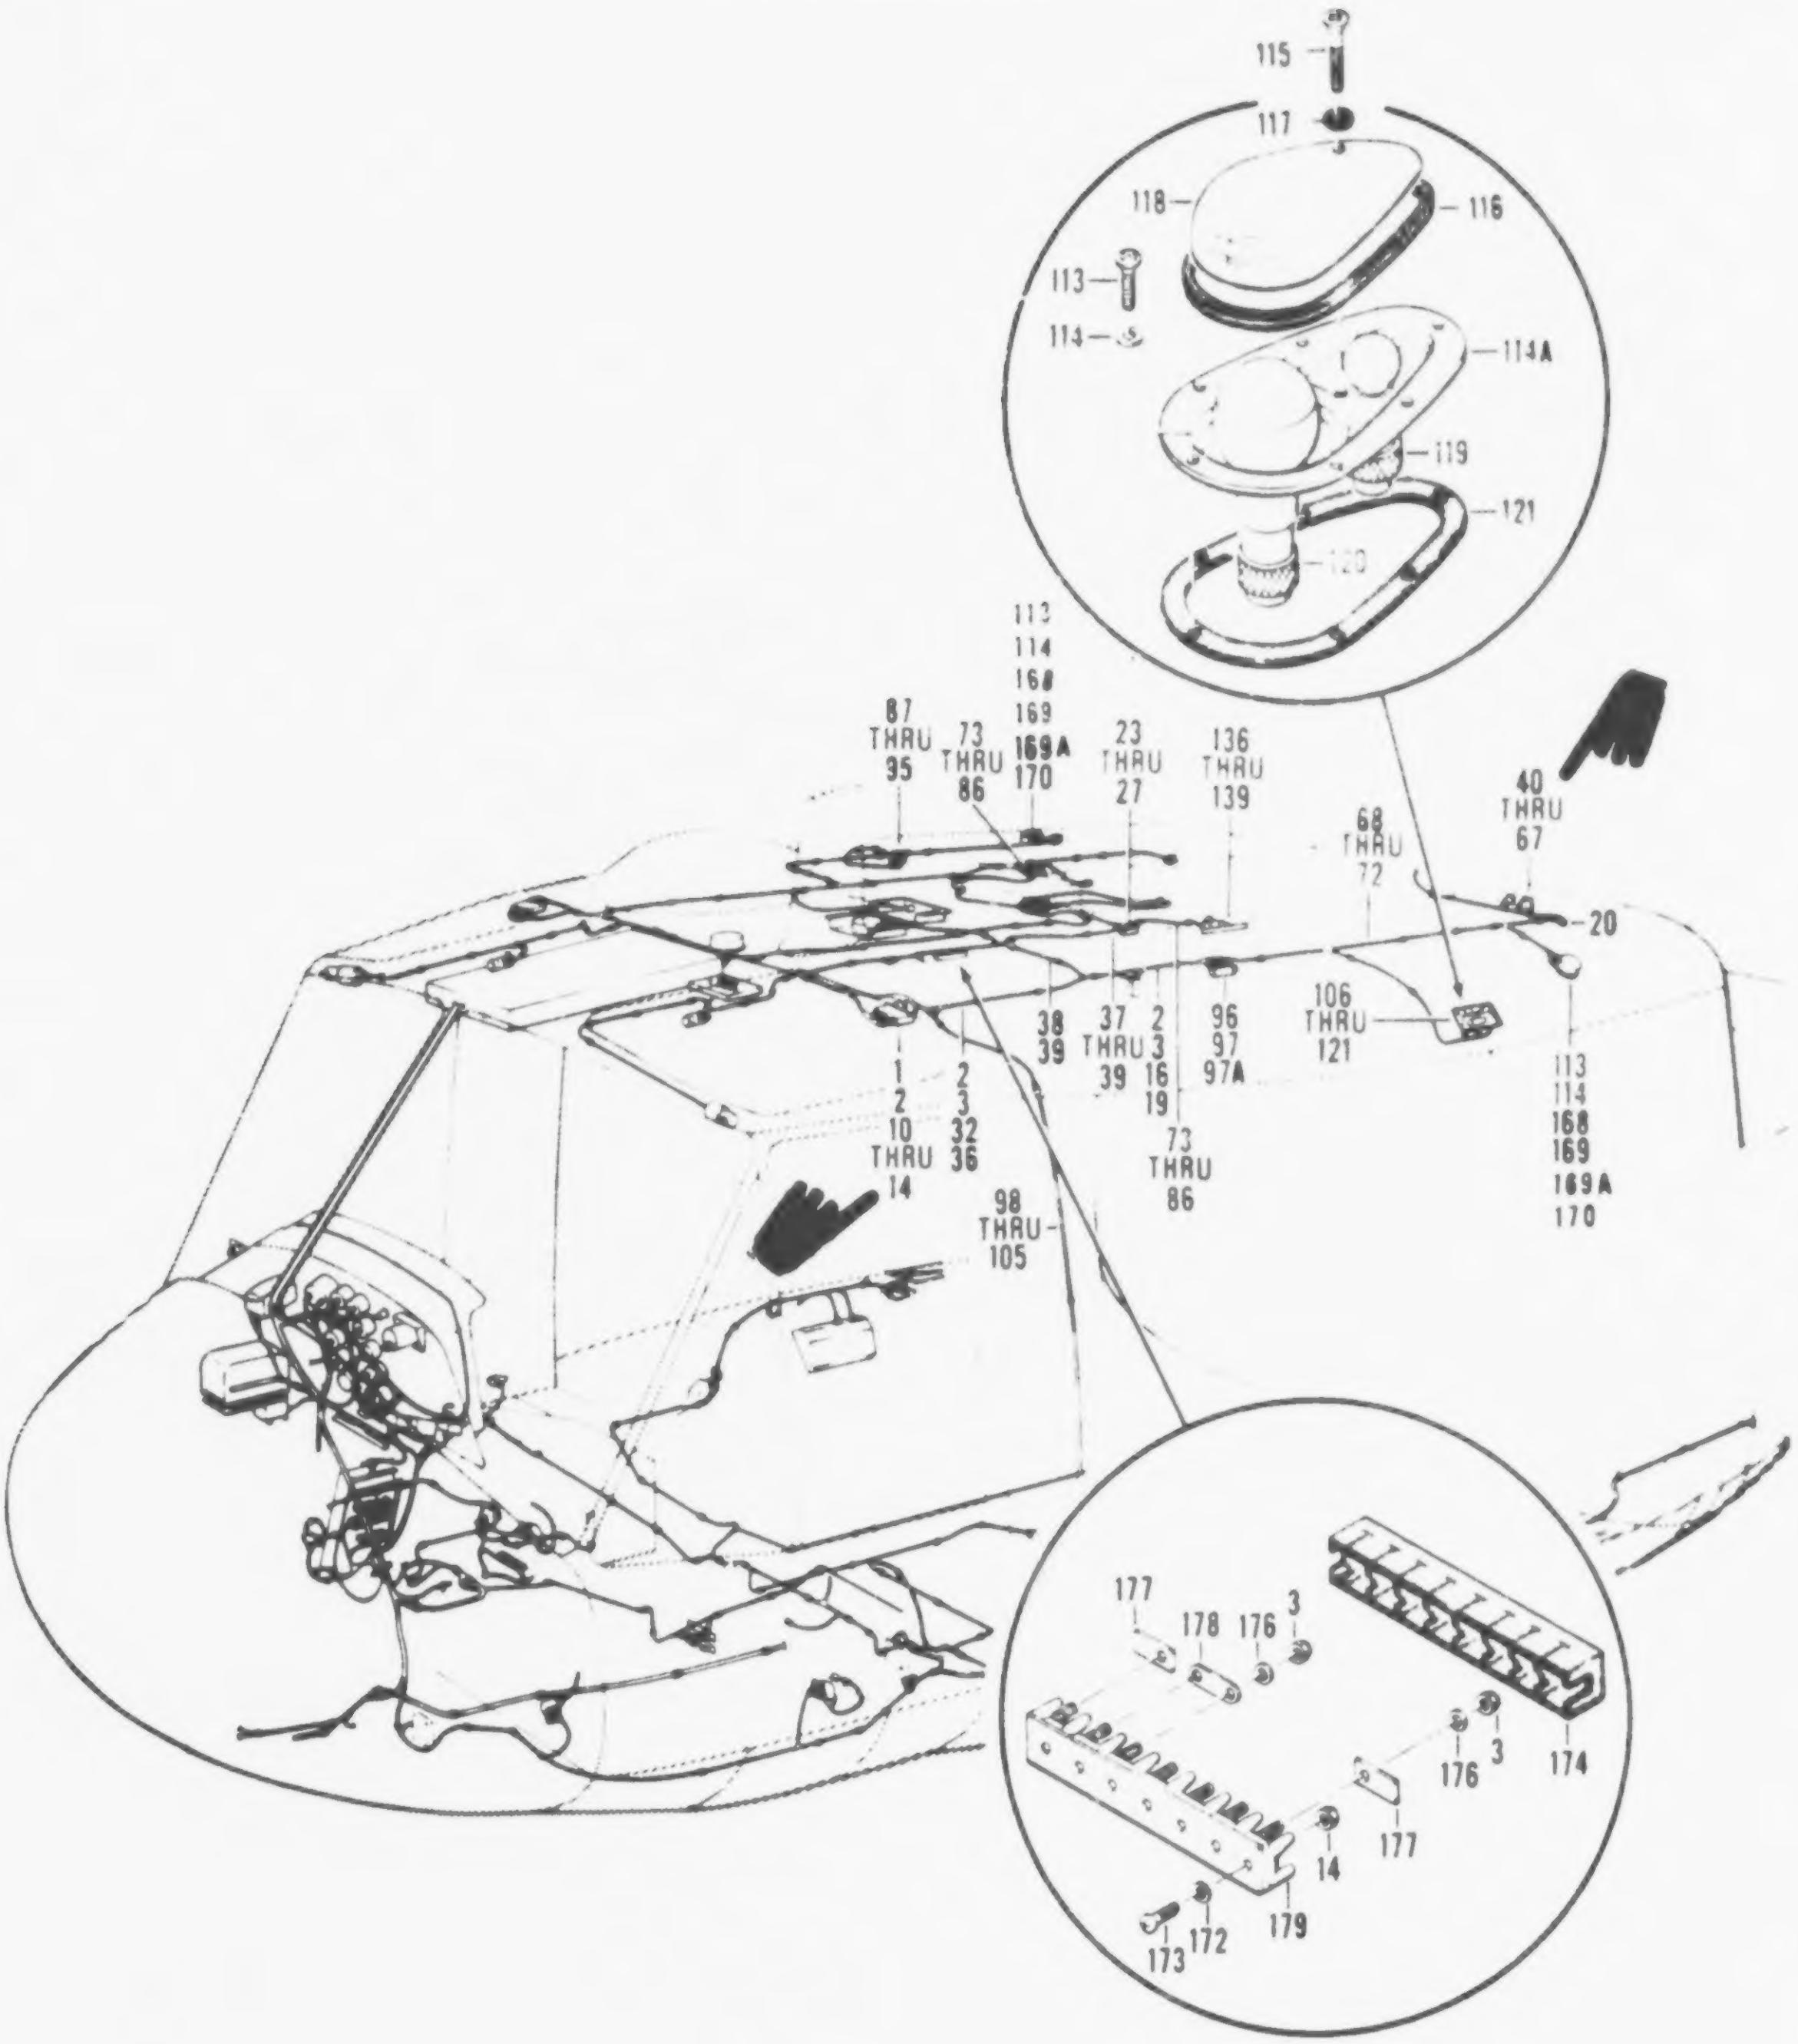
115
117
118
116
113
114
114A
119
121
120
113
114
168
169
169A
170
87
THRU
95
73
THRU
86
23
THRU
27
136
THRU
139
68
THRU
72
40
THRU
67
20
38
39
37
THRU
39
2
3
16
19
96
97
97A
106
THRU
121
113
114
168
169
169A
170
1
2
10
THRU
14
2
3
32
36
73
THRU
86
98
THRU
105
177
178
176
3
174
176
3
177
14
179
173
172

Figure 226. Electrical Installation, Forward Section (Sheet 3 of 6)

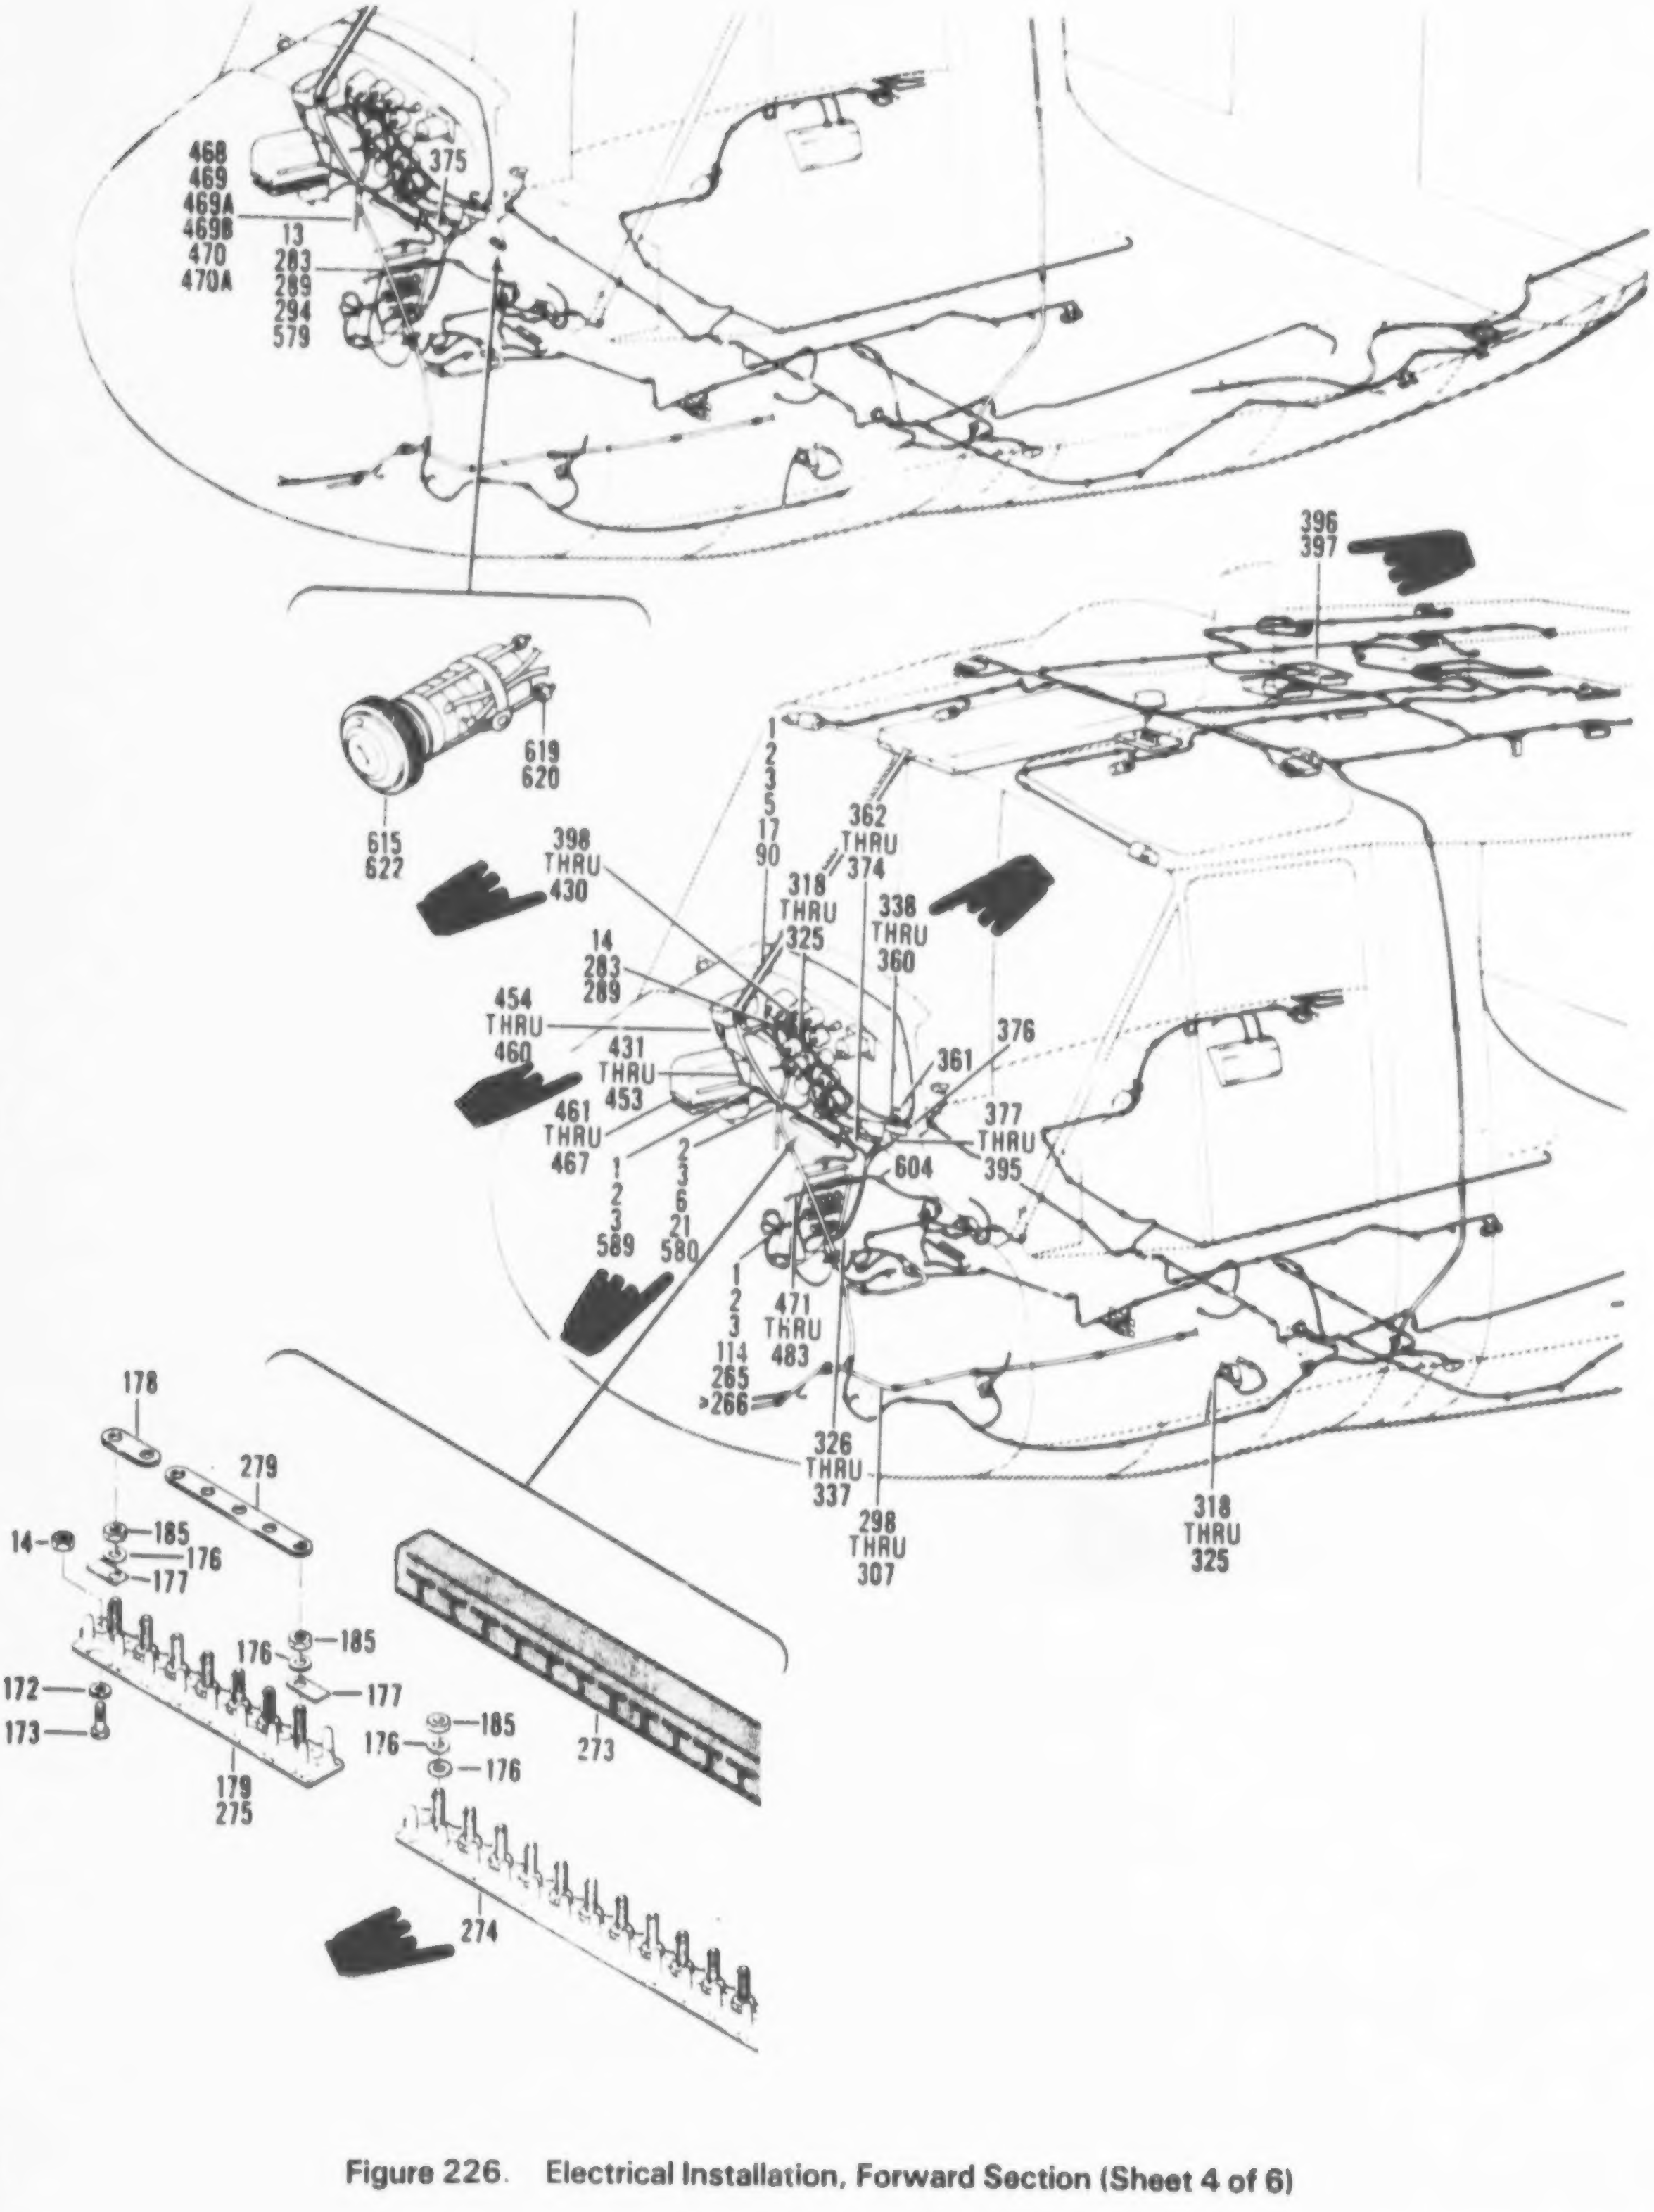
468
469
469A
469B
470
470A
375
13
283
289
294
579
396
397
619
620
615
622
1
2
3
5
17
90
362
THRU
374
398
THRU
430
318
THRU
325
338
THRU
360
14
283
289
454
THRU
460
431
THRU
453
376
361
461
THRU
467
377
THRU
395
2
3
6
21
580
604
1
2
3
589
1
2
3
114
265
>266
471
THRU
483
326
THRU
337
298
THRU
307
318
THRU
325
178
279
14
185
176
177
176
185
177
172
173
179
275
185
176
176
273
274

Figure 226. Electrical Installation, Forward Section (Sheet 4 of 6)

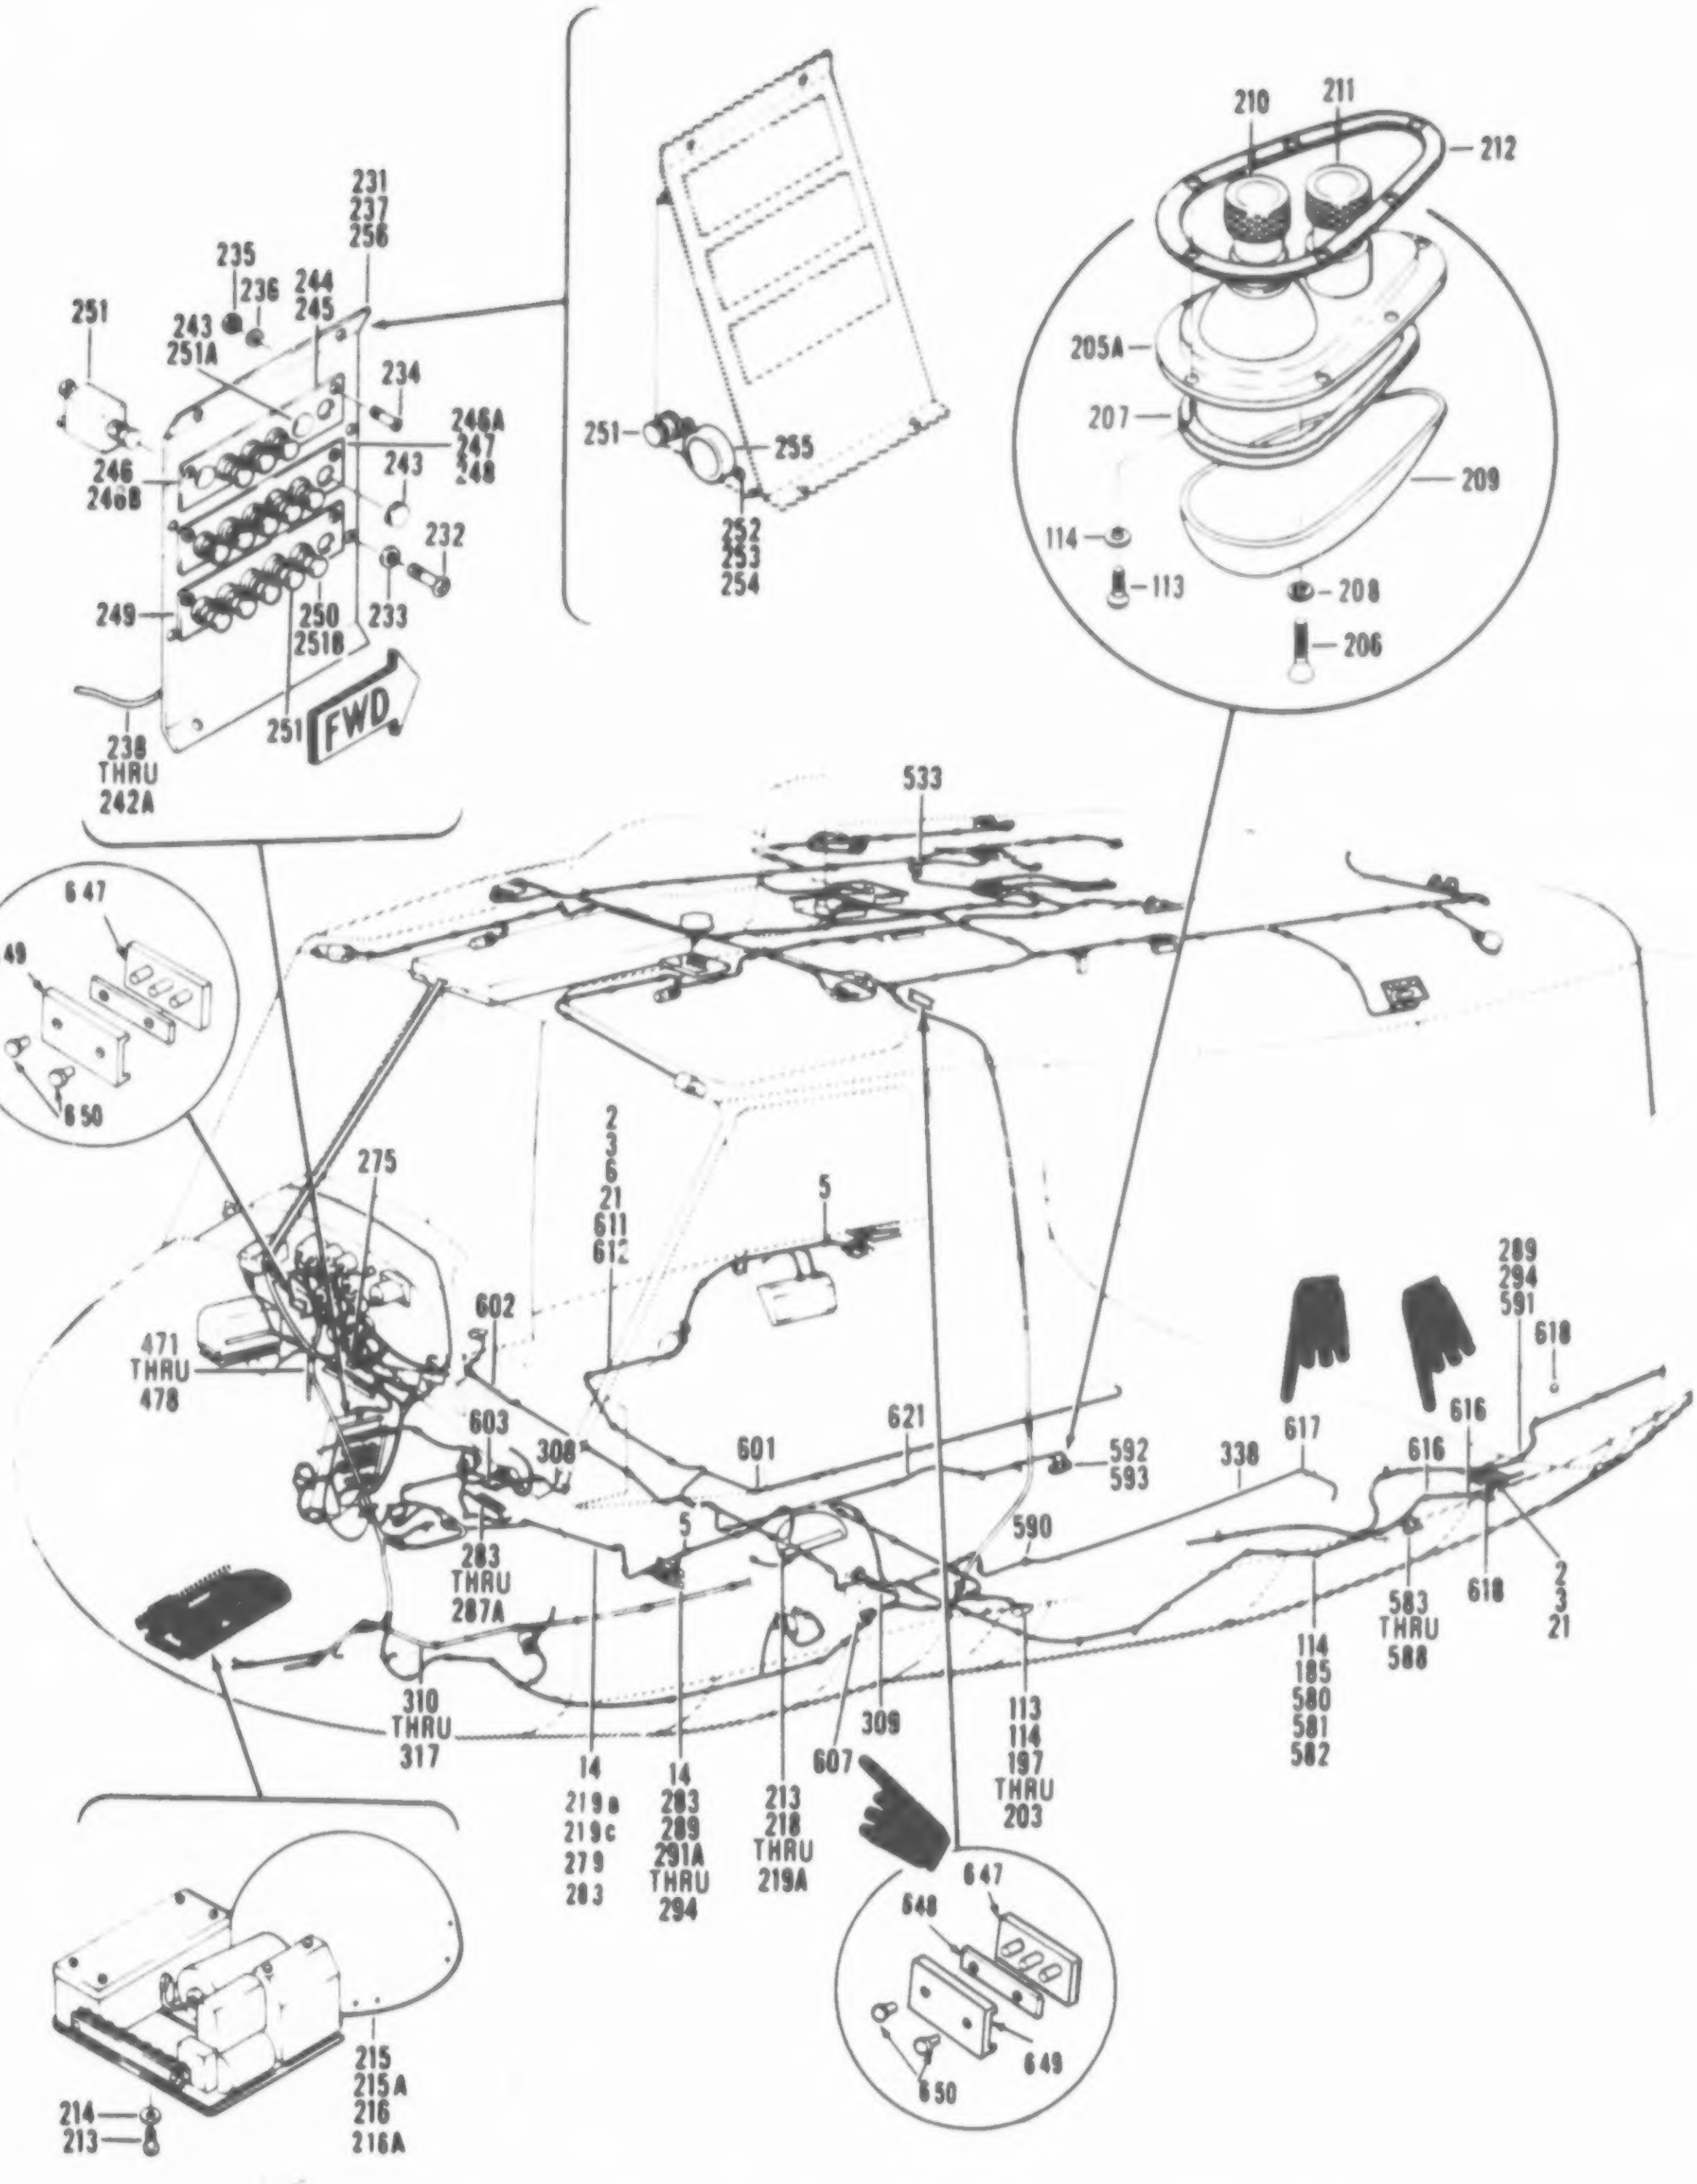
231
237
256
235
236
244
245
251
243
251A
234
246A
247
248
246
246B
243
232
249
250
251B
233
251
FWD
238
THRU
242A
251
255
252
253
254
210
211
212
205A
207
209
114
113
208
206
533
647
649
650
275
2
3
6
21
611
612
5
289
294
591
618
602
471
THRU
478
603
308
601
621
592
593
338
617
616
616
618
2
3
21
283
THRU
287A
5
590
583
THRU
588
114
185
580
581
582
310
THRU
317
14
219a
219c
279
283
14
283
289
291A
THRU
294
213
218
THRU
219A
607
309
113
114
197
THRU
203
647
648
649
650
215
215A
216
216A
214
213

Figure 226. Electrical Installation, Forward Section (Sheet 5 of 6)

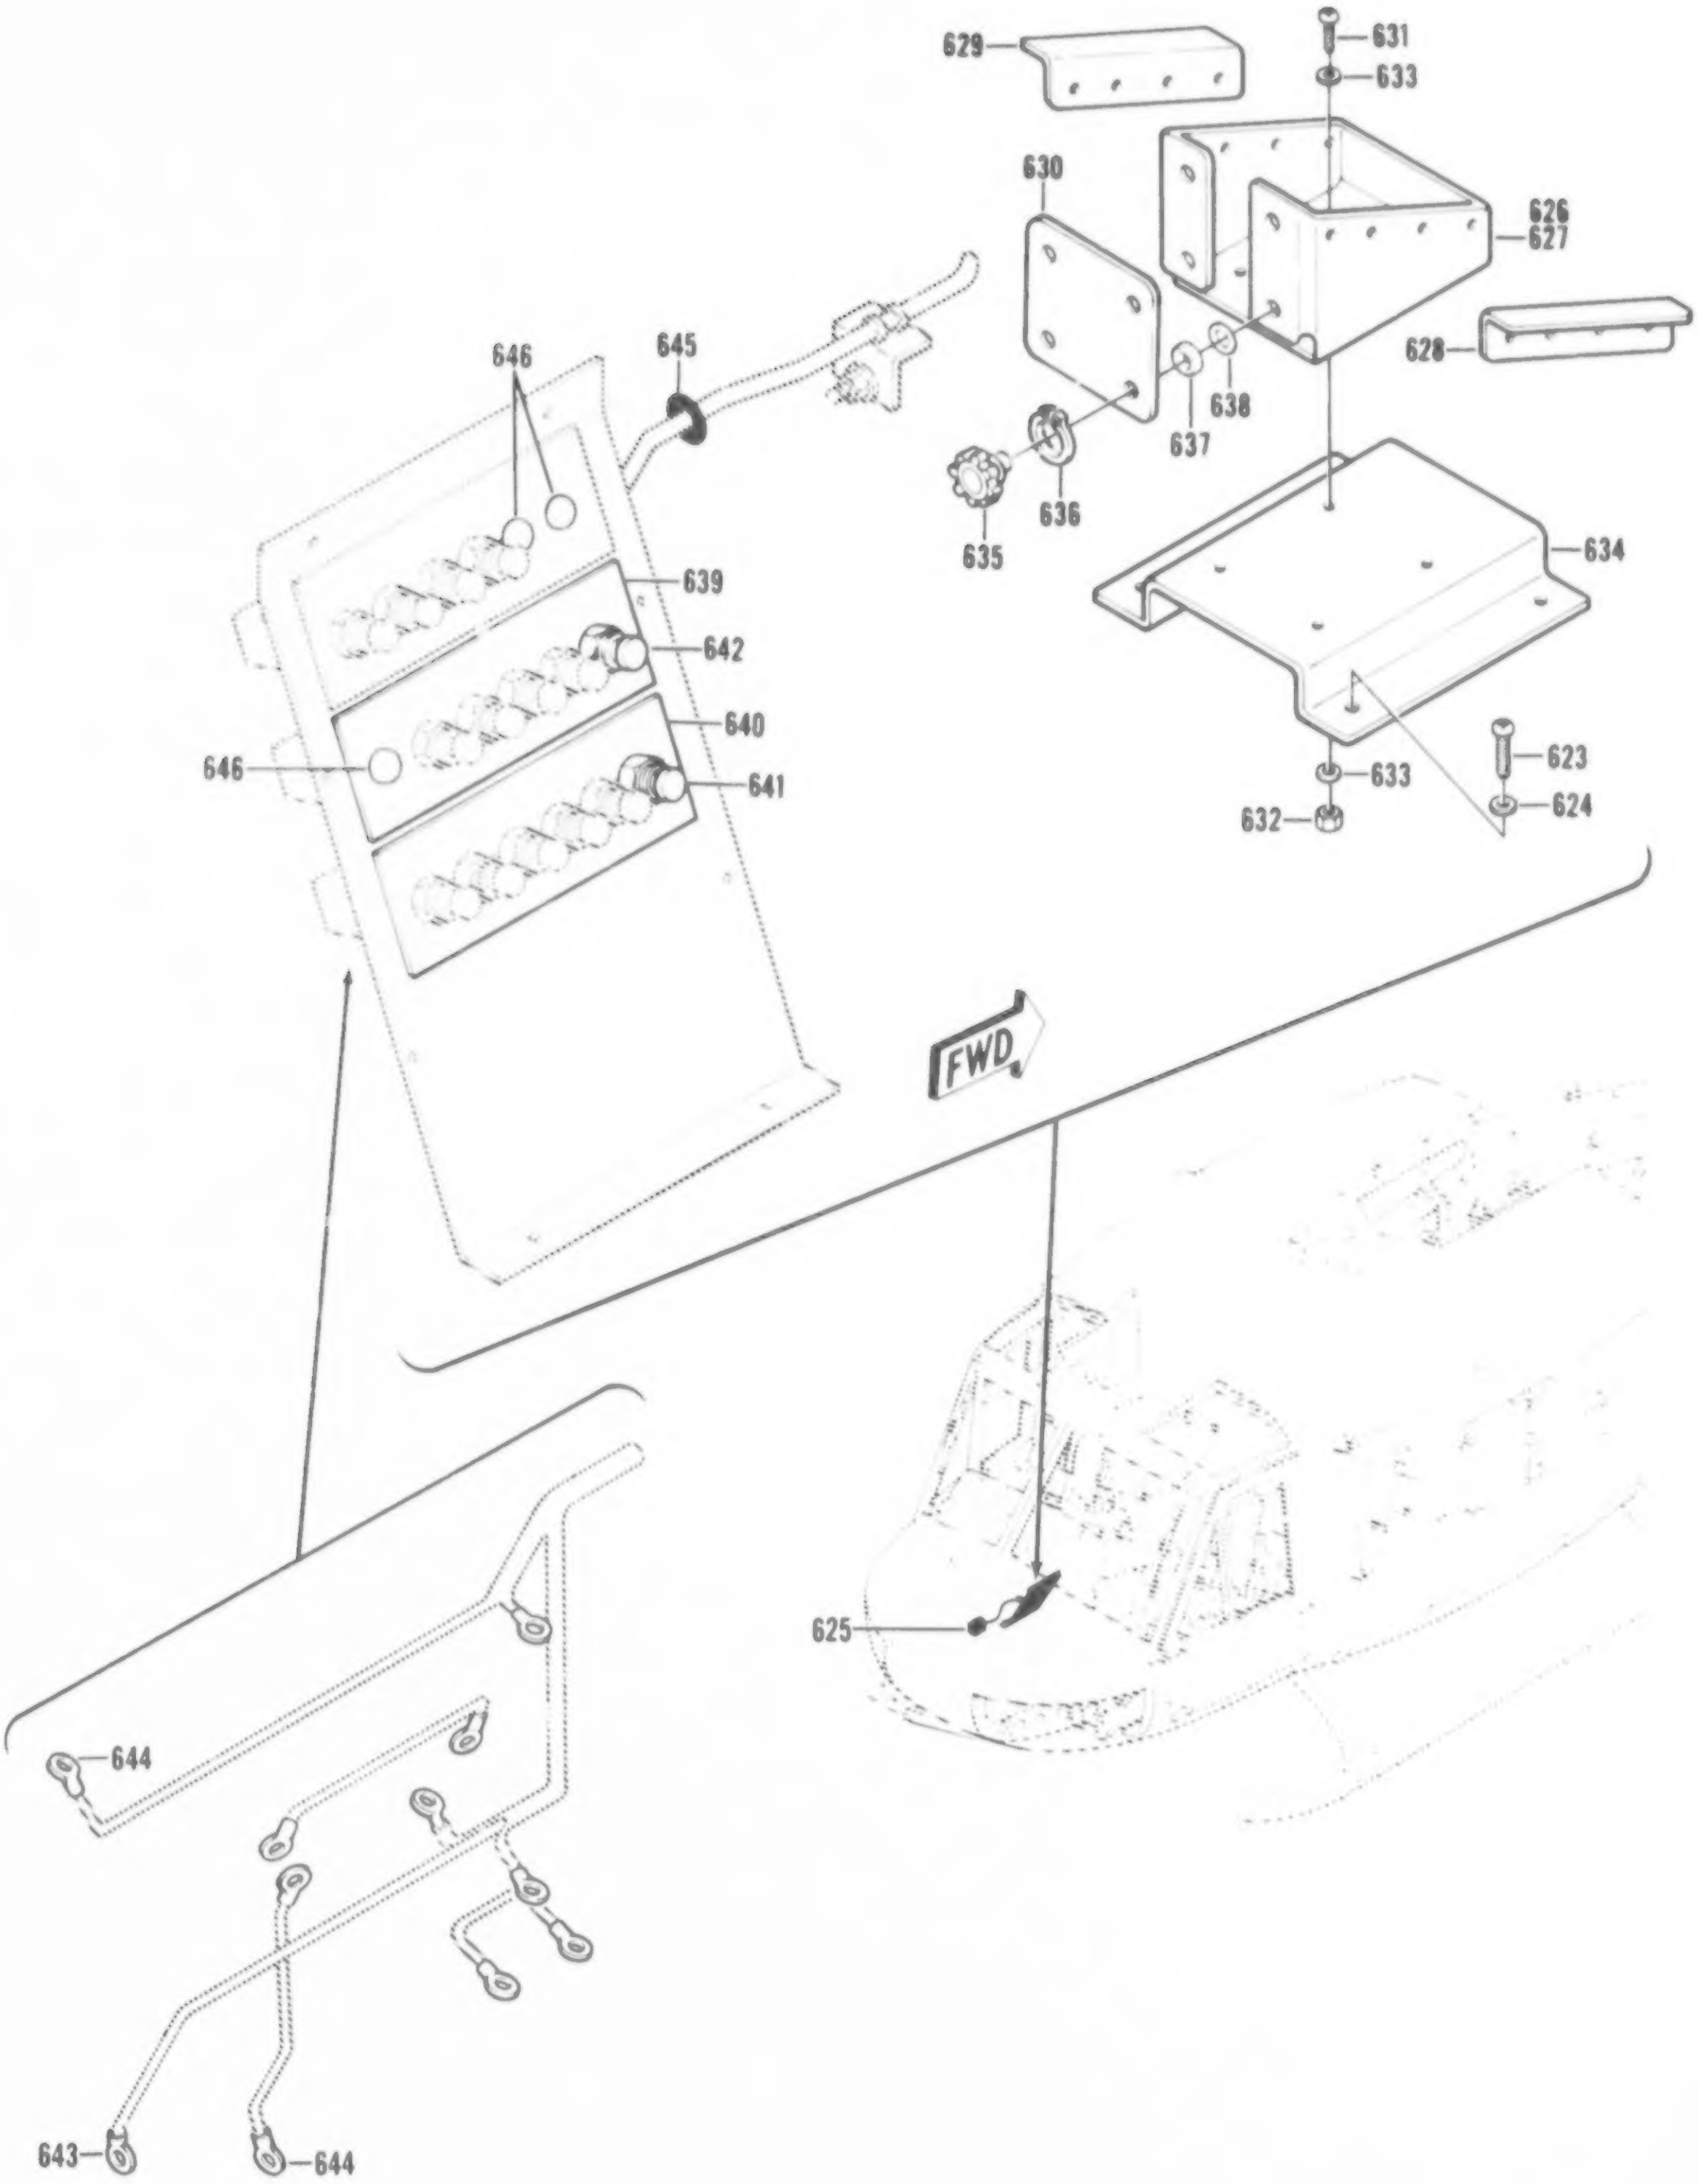
629
631
633
630
626
627
628
646
645
638
637
636
635
634
639
642
640
646
641
623
633
624
632
FWD
625
644
643
644

Figure 226. Electrical Installation, Forward Section (Sheet 6 of 6)

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
226		XCFZZ		97499	205-075-006-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-008-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 63-8739 THRU 63-8803 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-008-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 63-8804 THRU 63-8859 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-008-5	ELECTRICAL INSTL FORWARD SECTION USBL EFF 63-12956 THRU 63-13002 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-013-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 64-13492 THRU 64-13561 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-013-3	ELECTRICAL INSTL, FORWARD SECTION USBL EFF 64-13562 THRU 64-13901 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-018-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 65-9565 THRU 65-9810 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-018-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 65-9811 THRU 66-12895 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-032-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-746 THRU 66-16033 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-032-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-16034 THRU 66-16306 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-032-15	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-16307 THRU 66-16448 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-032-13	ELECTRICAL INSTL FORWARD SECTION USBL EFF 66-16449 THRU 66-16867 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-032-9	ELECTRICAL INSTL FORWARD SECTION........RU 66-8577........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-036-1	ELECTRICAL INSTL FORWARD SECTION USBL EFF 67-17145 THRU 67-17312 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-036-3	ELECTRICAL INSTL FORWARD SECTION USBL EFF 67-17313 THRU 67-17777 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-036-7	ELECTRICAL INSTL FORWARD SECTION SEE FIG.7 FOR NHA........NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-036-9	ELECTRICAL INSTL FORWARD SECTION SEE FIG.7 FOR NHA........NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-036-11	ELECTRICAL INSTL FORWARD SECTION USBL EFF 69-15292 & SUBSEQUENT SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		97499	205-075-036-15	ELECTRICAL INSTL FORWARD SECTION USBL EFF 71-20000 AND SUBSEQUENT SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
226		XCOZZ		97499	205-075-036-17	ELECTRICAL INSTL........UHE,UHH,UHV,UHX	EA	1
226	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	V
226	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	V
226	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	38
226	5	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC........UHE,UHH,UHV,UHX	EA	14
226	6	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE........UHE,UHH,UHV,UHX	EA	25
226	7	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE........UHE,UHH,UHV,UHX	EA	8
226	10	AOOOZ	5905-00-128-6712	97499	204-075-519-1	.RESISTOR ASSEMBLY U/O PN 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3, 205-075-036-1,& -3........UHE,UHH,UHV,UHX	EA	2
226	11	PAOZZ	5905-01-141-5516	91637	RH50X021D1R000J	..RESISTOR,FIXED,WIRE........UHE,UHH,UHV,UHX	EA	3
226	12	MFOZZ	5905-00-872-2678	97499	204-075-520-1	..PLATE ASSY,MOUNTING........UHE,UHH,UHV,UHX	EA	1
226	13	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	9
226	14	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						........UHE,UHH,UHV,UHX		
226	15	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	5
226	15A	PAOZZ	5365-00-837-1482	80205	NAS43DD3-31	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	1
226	16	PAOZZ	5365-00-584-2093	80205	NAS43DD3-16	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	10
226	17	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	7
226	18	PAOZZ	5365-00-652-3100	80205	NAS43DD3-54	SPACER,SLEEVE -2145,1615-00-766-8592 & 1615-00-865-7913 ....UHE,UHH,UHV,UHX	EA	5
226	19	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	10
226	20	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	3
226	21	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	11
226	22	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	3
226	23	PBOZZ	5365-00-663-2125	88044	AN3420-10	BUSHING,RUBBER........UHE,UHH,UHV,UHX	EA	1
226	24	PAOZZ	5975-00-548-5901	88044	AN3063-10	ELBOW ELECTRICAL CO CONDUIT ....UHE,UHH,UHV,UHX	EA	1
226	24A	PAOZZ	5975-00-263-1100	88044	AN3064-10	CHASE NIPPLE,CONDUI........UHE,UHH,UHV,UHX	EA	1
226	25	PAOZZ	5935-01-201-9223	81349	M85049/41-10A	.CLAMP,CABLE,ELECTRI........UHE,UHH,UHV,UHX	EA	1
226	26	PAOZZ	5975-00-280-6079	88044	AN3066-10	.LOCKNUT,ELECTRICAL CONDUIT........UHE,UHH,UHV,UHX	EA	1
226	27	PAOZZ	5310-00-187-2394	88044	AN960PD1616L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	1
226	28	PAOZZ	5975-00-177-2283	88044	AN3420-16	BUSHING,ELECTRICAL........UHE,UHH,UHV,UHX	EA	2
226	29	PAOZZ	5975-00-548-9556	88044	AN3064-16	.CHASE NIPPLE,CON CONDUIT........UHE,UHH,UHV,UHX	EA	2
226	30	PAOZZ	5975-00-240-2646	88044	AN3066-16	.LOCKNUT, ELECTRI CONDUIT........UHE,UHH,UHV,UHX	EA	2
226	31	PBOZZ	5310-00-913-1595	97499	204-075-154-3	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	4
226	32	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	1
226	36	PAOZZ	6150-00-163-1230	97499	120-055-1-12	.BUS,CONDUCTOR........UHE,UHH,UHV,UHX	EA	2
226	37	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE U/O PN 205-075-036-1........UHE,UHH,UHV,UHX	EA	1
226	38	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT U/O PN 205-075-036-1........UHE,UHH,UHV,UHX	EA	3
226	39	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX EXTENDED WSHER,HEXAGON U/O PN 205-075-036-1........UHE,UHH,UHV,UHX	EA	1
226	40	AOOOZ	1560-00-987-5240	97499	205-075-405-3	.CABLE ASSY,ENGINE DISCONNECT U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	40	AOOOZ	1560-00-570-6255	97499	205-075-418-3	.CABLE ASSY,ENGINE DISCONNECT U/O PN 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1 & -3........UHE,UHH,UHV,UHX	EA	1
226	40	AOOOZ	6150-00-955-9413	97499	205-075-418-5	.CABLE ASSY,ENGINE DISCONNECT U/O PN 205-075-032-1 ....UHE,UHH,UHV,UHX	EA	1
226	40	AOOOZ	1560-00-834-6518	97499	205-075-418-7	.CABLE ASSY,ENGINE DISCONNECT U/O PN 205-075-032-3 & -13 ....UHE,UHH,UHV,UHX	EA	1
226	40	AOOOZ	6150-00-989-0008	97499	205-075-418-9	.CABLE ASSY,ENGINE DISCONNECT U/O PN 205-075-032-9, 205-075-036-1,-3,-7,-9,& -11........UHE,UHH,UHV,UHX	EA	1
226	41	PBOZZ	5935-00-754-8711	96906	MS3108R10SL-3S	..CONNECTOR, PLUG, ELECTRICAL HYD PRESS SWITCH U/O PN 205-075-418-9........UHE,UHH,UHV,UHX	EA	1
226	42	PAOZZ	5935-00-226-1846	71468	CA20312-2866	..RECEPTACLE,CONNE CONNECTOR ENG DISCONNECT ....UHE,UHH,UHV,UHX	EA	1
226	43	PAOZZ	5935-01-137-2305	81349	M85049/41-16A	..CLAMP,CABLE,ELECTRI CONNECTOR ENG DISCONNECT ....UHE,UHH,UHV,UHX	EA	1
226	44	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC CONNECTOR ENG OIL PRESSURE IND. ....UHE,UHH,UHV,UHX	EA	2
226	45	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI ENG.OIL TEMP IND........UHE,UHH,UHV,UHX	EA	1
226	46	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-405-3 & 205-075-418-3 ....UHE,UHH,UHV,UHX	EA	1
226	46	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-418-5 & -7.....UHE,UHH,UHV,UHX	EA	16

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	46	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-418-9..........UHE,UHH,UHV,UHX	EA	11
226	48	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-405-3 205-075-418-3 ....UHE,UHH,UHV,UHX	EA	1
226	48	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-418-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	7
226	49	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 205-075-405-3 & 205-075-418-3 ....UHE,UHH,UHV,UHX	EA	1
226	49	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 205-075-418-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	2
226	50	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O PN 205-075-418-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	6
226	51	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-405-3 & 205-075-418-3 ....UHE,UHH,UHV,UHX	EA	1
226	51	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-418-5......UHE,UHH,UHV,UHX	EA	7
226	51	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-418-7 & -9 ....UHE,UHH,UHV,UHX	EA	6
226	52	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-405-3 & 205-075-418-3 ....UHE,UHH,UHV,UHX	EA	1
226	52	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-418-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	4
226	53	MOOZZ	DELETED	97499	85T4-1-2	..INSULATION TUBE U/O PN 205-075-405-3.......UHE,UHH,UHV,UHX	EA	1
226	53	MOOZZ	DELETED	97499	85T4-1-2	..INSULATION TUBE U/O PN 205-075-418-3.......UHE,UHH,UHV,UHX	EA	V
226	53	MOOZZ	DELETED	97499	85T4-1-2	..INSULATION TUBE U/O PN 205-075-418-5,-7,& -9 ....UHE,UHH,UHV,U	EA	2
226	54	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-405-3.......UHE,UHH,UHV,UHX	FT	1
226	54	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-418-3 & -5 ....UHE,UHH,UHV,UHX	FT	8
226	54	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-418-7 & -9 ....UHE,UHH,UHV,UHX	FT	9
226	55	PAOZZ	5935-00-622-2831	96906	MS3456W14S2S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
226	56	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	57	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	58	PBOZZ	5940-00-636-7098	96906	MS25189-102	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	FT	V
226	59	PAOZZ	5940-00-502-7570	24617	6718477	..TERMINAL,LUG U/O PN 205-075-405-3 ....UHE,UHH,UHV,UHX	EA	1
226	60	PAOZZ	5940-00-502-7570	24617	6718477	..TERMINAL,LUG U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
226	61	PAOZZ	5365-00-682-1427	96906	MS3420-4A	..BUSHING,RUBBER U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
226	62	PAOZZ	5365-00-820-4535	96906	MS3420-6	..BUSHING,RUBBER U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
226	63	PAOZZ	5365-00-698-5416	96906	MS3420-12	..BUSHING,RUBBER U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
226	64	PAOZZ	5365-00-141-6943	96906	MS3420-16	..BUSHING,RUBBER U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
226	65	MFOZZ	5970-00-196-9548	97499	130-006-6-4	..INSULATION SLEEVING U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	2
226	66	PAOZZ	6145-00-643-0252	04939	MILW5846TY2CLA	..CABLE,SPECIAL PURPO U/O PN 205-075-418-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	FT	V
226	67	PAOZZ	5945-00-060-1342	81349	M5757/8-002	..RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
226	68	AOOOZ	1560-00-570-5279	97499	205-075-407-19	.CABLE ASSY,FIRE DETECTOR DISCONNECT U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	68	AOOOZ	1560-00-567-3068	97499	205-075-420-5	.CABLE ASSY,FIRE DETECTOR DISCONNECT U/O PN 205-075-008-1,-	EA	1

best copy available

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, -15,205-075-036-1,-3,-7, -9,& -11......UHE,UHH,UHV,UHX		
226	69	XDOZZ		96906	MS3057-8A	..CLAMP,CABLE..........UHE,UHH,UHV,UHX	EA	1
226	70	PAOZZ	5935-01-049-0067	96906	MS3450KT16S1S	..CONNECTOR,RECEPTACL..........UHE,UHH,UHV,UHX	EA	1
226	71	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
226	72	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	73	AOOOZ	1560-00-987-5241	97499	205-075-405-7	.CABLE ASSEMBLY TRANSMISSION..........UHE,UHH,UHV,UHX	EA	1
226	74	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING..........UHE,UHH,UHV,UHX	EA	1
226	75	PBOZZ	5935-00-813-4717	96906	MS3106R14S2S	..CONNECTOR,PLUG,E..........UHE,UHH,UHV,UHX	EA	1
226	76	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
226	77	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS MOISTURE SEAL..........UHE,UHH,UHV,UHX	EA	10
226	78	PBOZZ	5935-00-880-7894	96906	MS3120E14-19S	..CONNECTOR,RECEPTACL XMSN DISC..........UHE.UHH,UHV,UHX	EA	1
228	79	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
226	80	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR..........UHE,UHH,UHV,UHX	EA	8
226	81	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	10
226	82	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE..........UHE,UHH,UHV,UHX	EA	1
226	83	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI..........UHE,UHH,UHV,UHX	EA	1
226	84	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	5
226	85	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
226	86	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	87	AOOOO		97499	205-075-438-39	.CABLE ASSY, HOIST,POWER & CONTROL..........UHE,UHH,UHV,UHX	EA	1
226	88	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	89	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	7
226	90	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	2
225	91	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	4
226	92	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
226	93	PBOZZ	5940-00-557-4341	96906	MS25036-123	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
226	94	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	95	PAOZZ	5935-00-549-3282	96906	MS340W32-6S	..CONNECTOR,RECEPTACL RECEPTACLE..........UHE,UHH,UHV,UHX	EA	1
226	96	PBOZZ	5905-00-059-9451	88044	AN5534-2	.RESISTOR,THERMAL THERMOC RES SPOOL..........UHE,UHH,UHV,UHX	EA	1
226	97	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	2
226	97A	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT..........UHE,UHH,UHv,UHX	EA	4
226	98	AOOOZ	1560-00-987-5243	97499	205-075-407-9	.WIRING ASSY, FUSELAGE & DOME LIGHTS U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	98	AOOOZ	1560-00-570-5264	97499	205-075-420-1	.CABLE ASSY, FUSELAGE & DOME LIGHTS U/O PN 205-075-008-1,-3,-5 & 205-075-013-1 & -3..........UHE,UHH,UHV,UHX	EA	1
226	98	AOOOZ	6150-00-924-0414	97499	205-075-433-7	.CABLE ASSY,POWER FUSELAGE & DOME LIGHTS U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-9,-13,-15, 205-075-036-1,-3,-7,-9 & -11..........UHE,UHH,UHV,UHX	EA	1
226	99	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-433-7..........UHE,UHH,UHV,UHX	EA	22
226	99	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-407-9 & 205-075-420-1 ....UHE,UHH,UHV,UHX	EA	1
226	100	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-433-7..........UHE,UHH,UHV,UHX	EA	2
226	100	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-407-9 & 205-075-420-1 ....UHE,UHH,UHV,UHX	EA	1
226	101	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC U/O PN 205-075-407-9 & 205-075-420-1	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
226	102	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING..........UHE,UHH,UHV,UHX	EA	1
226	103	PAOZZ	5365-00-598-5282	96906	MS3420-4	..BUSHING,RUBBER U/O PN 205-075-420-1........UHE,UHH,UHV,UHX	EA	1
226	104	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	105	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	106	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	5
226	107	PBOOO	6220-00-283-9337	88044	AN3033-9	.LIGHT,NAVIGATION..........UHE,UHH,UHV,UHX	EA	2
226	108	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
226	109	PAOZZ	5330-00-260-8156	88044	AN889-1	..GASKET..........UHE,UHH,UHV,UHX	EA	1
226	110	PAOZZ	6220-00-151-7536	88044	AN3042-1	..LENS,LIGHT..........UHE,UHH,UHV,UHX	EA	1
226	111	PAOZZ	6220-00-497-2213	88044	AN3042-2	..LENS,LIGHT..........UHE,UHH,UHV,UHX	EA	1
226	112	PAOZZ	6240-00-681-8366	96906	MS25309-7512	..LAMP,INCANDESCENT..........UHE,UHH,UHV,UHX	EA	1
226	113	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	32
226	114	PAOZZ	5310-00-187-2398	88044	AN960PD8L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	44
226	114A	PAOOO	6220-00-283-9334	88044	AN3177-9	.LIGHT,NAVIGATION..........UHE,UHH,UHV,UHX	EA	2
226	115	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE..........UHE,UHH UHV,UHX	EA	1
226	116	PAOZZ	5330-00-813-0648	88044	AN904-1	..GASKET..........UHE,UHH,UHV,UHX	EA	1
226	117	PAOZZ	5330-00-292-0432	88044	AN899-1	.GASKET..........UHE,UHH,UHV,UHX	EA	1
226	118	PAOZZ	6220-00-432-4246	96906	MS25216-2	..LENS,LIGHT..........UHE,UHH,UHV,UHX	EA	1
226	119	PAOZZ	6240-00-155-7848	96906	MS15570-303	..LAMP,INCANDESCENT..........UHE,UHH,UHV,UHX	EA	1
226	120	PAOZZ	6240-00-155-7924	96906	MS25235-311	..LAMP,INCANDESCENT..........UHE,UHH,UHV,UHX	EA	1
226	121	PAOZZ	5330-00-700-4478	97499	204-075-151-1	.GASKET..........UHE,UHH,UHV,UHX	EA	2
226	124	PAOOO	6220-00-299-7136	96906	MS25358-1	.LIGHT,DOME..........UHE,UHH,UHV,UHX	EA	1
226	124A	PAOZZ	6220-00-283-9732	96906	MS25358-4	..LENS,LIGHT..........UHE,UHH,UHV,UHX	EA	1
226	125	PAOZZ	6240-00-155-7784	96906	MS35478-307	..LAMP,INCANDESCENT..........UHE,UHH,UHV,UHX	EA	3
226	126	PAOZZ	6240-00-155-7932	96906	MS25235R311	..LAMP,INCANDESCEN..........UHE,UHH,UHV,UHX	EA	3
226	129	XDOFF	1680-00-249-3330	97499	205-075-129-1	.SUPPORT ASSY,LIGHT..........UHE,UHH,UHV,UHX	EA	1
226	130	XDFZZ	5310-00-275-4317	88044	AN362C632	..NUT,SELF-LOCKING PLATE..........UHE,UHH,UHV,UHX	EA	4
226	133	PBOOO	1560-00-781-9080	97499	205-075-331-3	.SUPPORT,DOME LIGHT..........UHE,UHH,UHV,UHX	EA	1
226	134	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER..........UHE,UHH,UHV,UHX	EA	4
226	135	PAOOO	1560-00-014-9524	97499	205-075-202-1	.CONTROL PANEL ASSEM -AFT DOME LIGHT SEE FIG.254 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-141-1	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-006-1 SEE FIG.245 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-143-1	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-008-1 SEE FIG.246 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-143-7	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-008-3 SEE FIG.246 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-143-11	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-008-5 SEE FIG.246 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-111-1	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-013-1 & -3 SEE FIG.246 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-111-7	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-018-1 SEE FIG.246 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	206-075-111-17	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-018-3 SEE FIG.246 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	136A	XCFZZ		97499	205-075-111-13	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-032-1 SEE	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
						FIG.246 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX		
226	135A	XCFZZ		97499	205-075-111-23	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-032-3 SEE FIG.246 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-111-33	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-032-13 SEE FIG.246 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-111-37	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-032-9 SEE FIG.280 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-111-41	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-032-15 SEE FIG.246 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-111-45	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-036-1 SEE FIG.246 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-111-51	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-036-3 SEE FIG.246 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-111-59	CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-036-7 SEE FIG.246 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-156-1	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-036-9 SEE FIG.246 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
226	135A	XCFZZ		97499	205-075-156-25	.CONSOLE INSTL ELECTRICAL OVERHEAD U/O PN 205-075-036-11 SEE FIG.246 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
226	135A	XCOZZ		97499	205-075-156-45	.CONSOLE INSTL ELECTRICAL OVERHEAD SEE FIG.246 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
226	136	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE U/O PN 205-075-006-1, 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13,& -15..................................UHE,UHH,UHV,UHX	EA	12
226	136	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE U/O PN 205-075-036-1 & -3.....UHE,UHH,UHV,UHX	EA	4
226	137	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT U/O PN 205-075-006-1, 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13,& -15 ....UHE,UHH,UHV,UHX	EA	12
226	137	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT U/O PN 205-075-036-1,-3,-7,& -9 & -11 ....UHE,UHH,UHV,UHX	EA	4
226	138	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON U/O PN 205-075-006-1,205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, & -15............UHE,UHH,UHV,UHX	EA	12
226	138	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON U/O PN 205-075-036-1,-3,-7,-9 & -11....................UHE,UHH,UHV,UHX	EA	4
226	139	PAOZZ	5935-00-241-0355	74545	7526	.CONNECTOR,RECEPTACL U/O PN 205-075-006-1, 205-075-008-1,-3, -5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13,& -15....................................UHE,UHH,UHV,UHX	EA	6
226	139	PAOZZ	5935-00-241-0355	74545	7526	.CONNECTOR,RECEPTACL U/O PN 205-075-036-1,-3,-7,-9 & -11 ....UHE,UHH,UHV,UHX	EA	2
226	140	MFOZZ	DELETED	96906	MS20253-2-225	.PIN,STRAIGHT,HEA HEADLESS..................UHE,UHH,UHV,UHX	EA	1
226	141	XBOOZ	6240-00-759-9904	97499	204-075-144-9	.CONTAINER ASSEMB SPARE LAMP.................UHE,UHH,UHV,UHX	EA	1
226	142	PAOZZ	5325-00-174-5317	96906	MS35489-4	..GROMMET,NONMETALLIC........................UHE,UHH,UHV,UHX	EA	5
226	143	PAOZZ	5325-00-291-9366	96906	MS35489-11	..GROMMET,NONMETALLIC........................UHE,UHH,UHV,UHX	EA	2
226	144	PAOZZ	5325-00-281-1557	96906	MS35489-17	..GROMMET,NONMETALLIC........................UHE,UHH,UHV,UHX	EA	2
226	145	PAOZZ	5325-00-281-6204	72794	AW3 1-2T10	..STUD,TURNLOCK FA FASTENER.................UHE,UHH,UHV,UHX	EA	1
226	146	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER..................UHE,UHH,UHV,UHX	EA	1
226	147	PAOZZ	6240-00-155-8714	96906	MS25231-313	.LAMP,INCANDESCENT...........................UHE,UHH,UHV,UHX	EA	1
226	149	PAOZZ	6240-00-155-7932	96906	MS25235R311	.LAMP,INCANDESCEN............................UHE,UHH,UHV,UHX	EA	1
226	150	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP,INCANDESCENT...........................UHE,UHH,UHV,UHX	EA	5
226	151	PAOZZ	6240-00-299-4742	96906	MS25069-1495	.LAMP,INCANDESCEN............................UHE,UHH,UHV,UHX	EA	1
226	152	AOOOZ	1560-00-869-8155	97499	205-075-431-3	.CABLE ASSY,WIND SHIELD WIPER-PILOTS U/O PN 205-075-013-1,-	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						3,205-075-018-1,205-075-032-1,-3,-9,-13,-15,205-075-036-1,-3,-7,-9,& -11 UHE,UHH,UHV,UHX		
226	152	AOOZZ	6150-00-869-8156	97499	205-075-431-5	CABLE ASSY,WIND SHIELD WIPER-COPILOT U/O PN 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13 & -15, 205-075-036-1,-3,-7,-9 & -11 UHE,UHH,UHV,UHX	EA	1
226	153	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	1
226	154	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	1
226	155	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	156	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	157	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE UHE,UHH,UHV,UHX	EA	1
226	158	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC UHE,UHH,UHV,UHX	EA	1
226	159	PAOZZ	5365-00-598-5282	96906	MS3420-4	..BUSHING,RUBBER UHE,UHH,UHV,UHX	EA	1
226	160	AOOZZ	6150-00-927-3631	97499	204-175-427-11	.CABLE ASSY,PITOT HEATER U/O PN 205-075-032-1,-3,-9, -13,-15,205-075-036-1,-3, -7,-9,& -11 UHE,UHH,UHV,UHX	EA	1
226	161	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	2
226	162	PAOZZ	5935-00-201-8072	88044	AN3115-1	..CONNECTOR,PLUG,ELEC PITOT HTR CONN UHE,UHH,UHV,UHX	EA	1
226	163	XDOZZ		97499	85T4-7-2	..INSULATION TUBE UHE,UHH,UHV,UHX	FT	2
226	164	MOOZZ		97499	85T4-4-50	..INSULATION TUBE UHE,UHH,UHV,UHX	EA	1
226	165	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	168	PAOOO	6220-00-299-7136	96906	MS25358-1	.LIGHT,DOME UHE,UHH,UHV,UHX	EA	2
226	168	PAOZZ	6220-00-283-9732	96906	MS25358-4	..LENS,LIGHT UHE,UHH,UHV,UHX	EA	1
226	169	PAOZZ	6240-00-060-4707	08108	1309	..LAMP,INCANDESCENT UHE,UHH,UHV,UHX	EA	5
226	169A	PAOZZ	1680-01-230-0526	81996	EGD-0933-1	..FILTER,DOME,NVG UHE,UHH,UHV,UHX	EA	4
226	170	PAOZZ	6240-00-155-7932	96906	MS25235R311	..LAMP,INCANDESCEN UHE,UHH,UHV,UHX	EA	3
226	172	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	12
226	173	PBOZZ	5306-00-889-2997	96906	MS35206-215	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	16
226	174	MOOZZ	5940-00-411-7737	96906	MS18029-1S7	.COVER,TERMINAL BOAR UHE,UHH,UHV,UHX	EA	1
226	176	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	50
226	177	PAOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE UHE,UHH,UHV,UHX	EA	10
226	178	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR CONNECTING UHE,UHH,UHV,UHX	EA	2
226	179	MOOZZ	5940-00-132-2772	96906	MS27212-1-7	.TERMINAL BOARD UHE,UHH,UHV,UHX	EA	2
226	180	PAOZZ	1680-01-230-052[illegible]	81996	EGD-0930-3	.LIGHT,NAVIGATIONAL,NVG UHE,UHH,UHV,UHX	EA	4
226	181	PAOZZ	1680-01-230-0528	81996	EGD-0963-1	.GASKET U/O PN EGD-0930-3 UHE,UHH,UHV,UHX	EA	4
226	183	PAOOO	6220-00-349-9294	96906	MS17245-5A	.LIGHT,COCKPIT,AIRCR UHE,UHH,UHV,UHX	EA	2
226	183A	PAOZZ	6220-00-169-1502	72914	B7041-6	..CORD ASSEMBLY,ELECT UHE,UHH,UHV,UHX	EA	1
226	183B	PAOZZ		81996	EGD-0942-3	..FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED UHH,UHV	EA	2
226	183B	PAOZZ	1680-01-129-5414	81996	6210-EG-002-8	..FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED UHH,UHV	EA	1
226	183B	PAOZZ	1680-01-129-5415	81996	6210-EG-002-9	..FILTER,INSTRUMENT,L USE AFTER NIGHT VISION GOGGLES ARE INSTALLED UHH,UHV	EA	1
226	183C	PAOZZ	5975-00-984-6582	96906	MS3367-1-0	..STRAP,TIEDOWN U/O PN EGD-0942-3 UHE,UHH,UHV.UHX	EA	2
226	184	PAOZZ	6240-00-155-8714	96906	MS25231-313	..LAMP,INCANDESCENT UHE,UHH,UHV,UHX	EA	1
226	184A	PBOZZ	6220-00-500-3682	96906	MS17246-1	.MOUNTING BASE,LIGHT COCKPIT U/W MS17245-5A UHE,UHH,UHV,UHX	EA	2
226	185	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	2
226	186	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
226	191	MOOZZ	DELETED	94640	397-1	.COVER,TERMINAL BOARD UHE,UHH,UHV,UHX	EA	2
226	196	MOOZZ	5940-00-132-2760	96906	MS27212-1-1	.TERMINAL BOARD UHE,UHH,UHV,UHX	EA	2
226	196	XCFZZ		97499	204-075-177-15	.PANEL INSTL CIRCUIT BREAKER,EXTERNAL STORES U/O PN 205-075-	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
	.					006-1 SEE FIG.248 FOR BREAKDOWN	UHE,UHH,UHV,UHX		
226	197	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
226	198	PBOOO	6220-00-283-9337	88044	AN3033-9	.LIGHT,NAVIGATION	UHE,UHH,UHV,UHX	EA	2
226	199	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
226	200	PAOZZ	5330-00-260-8156	88044	AN889-1	..GASKET	UHE,UHH,UHV,UHX	EA	1
226	201	PAOZZ	6220-00-151-7536	88044	AN3042-1	..LENS,LIGHT NAVIGATIONAL LIGHT-RED	UHE,UHH,UHV,UHX	EA	1
226	202	PAOZZ	6220-00-497-2213	88044	AN3042-2	..LENS,LIGHT NAVIGATIONAL LIGHT-GREEN	UHE,UHH,UHV,UHX	EA	1
226	203	PAOZZ	6240-00-681-8366	96906	MS25309-7512	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	1
226	205A	PAOOO	6220-00-283-9334	88044	AN3177-9	.LIGHT,NAVIGATION	UHE,UHH,UHV,UHX	EA	1
226	206	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
226	207	PAOZZ	5330-00-813-0648	88044	AN904-1	..GASKET	UHE,UHH,UHV,UHX	EA	1
226	208	PAOZZ	5330-00-292-0432	88044	AN899-1	..GASKET	UHE,UHH,UHV,UHX	EA	1
226	209	PAOZZ	6220-00-432-4244	96906	MS25215-	..LENS,LIGHT NAVIGATIONAL	UHE,UHH,UHV,UHX	EA	1
226	210	PAOZZ	6240-00-155-7924	96906	MS25235-311	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	1
226	211	PAOZZ	6240-00-155-7848	96906	MS15570-303	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	1
226	212	PAOZZ	5330-00-700-4478	97499	204-075-151-1	.GASKET	UHE,UHH,UHV,UHX	EA	1
226	213	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	15
226	214	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
226	215	PAODO	6220-00-144-4687	81349	M81174-2-1A	.LIGHT,LANDING,AIRCR AIRCRAFT INTRCH	UHE,UHH,UHV,UHX	EA	1
226	215A	PAOZZ	6220-01-180-6996	81996	EGD-0931-1	..FILTER,SEARCHLIGHT,NVG	UHH,UHE,UHX	EA	1
226	216	PAOZZ	6240-00-557-3065	96906	MS25241-4581	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	1
226	216A	PAOZZ	6240-00-690-1094	08806	4571	.LAMP,INCANDESCENT USE WITH PN EGD-0931-1 ONLY	UHE,UHH,UHX	EA	1
226	218	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
226	219	PAOFF	6220-00-075-1989	72914	G8385-1	.LIGHT,LANDING,AIRCR SEE FIG.244 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
226	219A	PAOZZ	6240-00-557-3065	96906	MS25241-4581	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	1
226	219B	PAOZZ	6240-00-690-1094	08806	4571	..LAMP,INCANDESCENT USE WITH PN EGD 0931-1 ONLY	UHV	EA	1
226	221	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
226	222	PAOZZ	5306-00-182-2017	88044	AN4H5A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
226	223	PAOZZ	6150-00-771-5731	97499	204-075-153-1	.BUS,CONDUCTOR	UHE,UHH,UHV,UHX	EA	1
226	224	XDOZZ		86928	5712-68-16	.WASHER,FLAT U/O PN 205-075-018-1 & -3	UHE,UHH,UHV,UHX	EA	V
226	227	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
226	227A	PAOZZ	5365-00-134-3861	97499	205-075-157-1	.SHIM U/O PN 205-075-036-11 U/W PN 204-075-152-1	UHE,UHH,UHV,UHX	EA	1
226	228	AOOOO	6625-00-733-2681	97499	204-075-152-1	.SHUNT ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
226	229	MDOZZ		97499	204-075-152-3	..SHUNT	UHE,UHH,UHV,UHX	EA	1
226	230	PAOZZ	5306-00-838-0660	96906	MS20074-06-07	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
226	230A	PAOZZ	6150-00-437-7524	97499	205-075-160-1	.BUS,CONDUCTOR U/O PN 205-075-036-11	UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-1	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-006-1	UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-5	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-008-1,-3,-5, & 205-075-013-1	UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-9	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-013-3	UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-13	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-018-1,-3, 205-075-032-1,-3,& -15	UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-17	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-032-9 & -13	UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-21	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-036-1		EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						........UHE,UHH,UHV,UHX		
226	231	XCFZZ		97499	205-075-101-25	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-036-3 ....UHE,UHH,UHV,UHX	EA	1
226	231	XCFZZ		97499	205-075-101-29	.PANEL INSTL,A-C CIRCUIT BREAKER U/O PN 205-075-036-7,-9,& -11........UHE,UHH,UHV,UHX	EA	1
226	232	PAOZZ	5305-00-984-6192	96906	MS35206-244	..SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	8
226	233	PAOZZ	5310-00-184-9002	88044	AN960PD8L	..WASHER,FLAT........UHE,UHH,UHV,UHX	EA	8
226	234	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	6
226	235	PAOZZ	5310-00-877-5622	96906	MS21044B06	..NUT,SELF-LOCKING,HE HEXAGON........UHE,UHH,UHV,UHX	EA	6
226	236	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER,FLAT........UHE,UHH,UHV,UHX	EA	6
226	237	AOOOZ	1560-00-987-5233	97499	205-075-101-3	..PANEL ASSY U/O PN 205-075-101-1........UHE,UHH,UHV,UHX	EA	1
226	237	AOOOZ	1560-00-567-2954	97499	205-075-101-7	..PANEL ASSY U/O PN 205-075-101-5........UHE,UHH,UHV,UHX	EA	1
226	237	AOOOZ	6110-00-911-7678	97499	205-075-101-11	..PANEL ASSY U/O PN 205-075-101-9........UHE,UHH,UHV,UHX	EA	1
226	237	AOOOZ	5925-00-947-3469	97499	205-075-101-15	..CIRCUIT PANEL BOX U/O PN 205-075-101-13....UHE,UHH,UHV,UHX	EA	1
226	237	AOOOZ	6110-00-891-3122	97499	205-075-101-19	..PANEL ASSY U/O PN 205-075-101-17........UHE,UHH,UHV,UHX	EA	1
226	237	AOOOO		97499	205-075-101-23	..PANEL ASSY U/O PN 205-075-101-21........UHE,UHH,UHV,UHX	EA	1
226	237	AOOOO		97499	205-075-101-27	..PANEL ASSY U/O PN 205-075-101-25........UHE,UHH,UHV,UHX	EA	1
226	237	AOOOO		97499	205-075-101-31	..PANEL ASSY U/O PN 205-075-101-29........UHE,UHH,UHV,UHX	EA	1
226	238	AOOOO		97499	205-075-404-3	...WIPING ASSY U/O PN 205-075-101-3........UHE,UHH,UHV,UHX	EA	1
226	238	AOOOO		97499	205-075-404-9	...WIRING ASSY U/O PN 205-075-101-7........UHE,UHH,UHV,UHX	EA	1
226	238	AOOOO		97499	205-075-404-11	...WIRING ASSY U/O PN 205-075-101-11........UHE,UHH,UHV,UHX	EA	1
226	238	AOOOO		97499	205-075-404-13	...WIRING ASSY U/O PN 205-075-101-15........UHE,UHH,UHV,UHX	EA	1
226	238	AOOOO		97499	205-075-404-15	...WIRING ASSY U/O PN 205-075-101-19,-23,& -27 ....UHE,UHH,UHV,UHX	EA	1
226	238	AOOOO		97499	205-075-404-19	...WIRING ASSY U/O PN 205-075-101-31........UHE,UHH,UHV,UHX	EA	1
226	239	PAOZZ	5940-00-813-0698	96906	MS25036-101	....TERMINAL,LUG U/O PN 205-075-404-19........UHE,UHH,UHV,UHX	EA	5
226	240	PAOZZ	5940-00-204-8966	96906	MS25036-102	....TERMINAL,LUG U/O PN 205-075-404-3 & -9 ....UHE,UHH,UHV,UHX	EA	1
226	240	PAOZZ	5940-00-204-8966	96906	MS25036-102	....TERMINAL,LUG U/O PN 205-075-404-11,-13,& -15 ....UHE,UHH,UHV,UHX	EA	5
226	241	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 205-075-404-3........UHE,UHH,UHV,UHX	EA	39
226	241	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 205-075-404-9........UHE,UHH,UHV,UHX	EA	1
226	241	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 205-075-404-11........UHE,UHH,UHV,UHX	EA	35
226	241	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 205-075-404-13........UHE,UHH,UHV,UHX	EA	37
226	241	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 205-075-404-15........UHE,UHH,UHV,UHX	EA	34
226	241	PAOZZ	5940-00-557-1629	96906	MS25036-149	....TERMINAL,LUG U/O PN 205-075-404-19........UHE,UHH,UHV,UHX	EA	33
226	242	PBOZZ	6145-00-851-8506	96906	MS25190B20	....WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	242A	PAOZZ	5940-00-143-4771	96906	MS25036-103	....TERMINAL,LUG U/O PN 205-075-404-11,-13, -15,& -19 ....UHE,UHH,UHV,UHX	EA	2
226	243	PAOZZ	5340-00-761-6417	61864	BS51338K2215	...BUTTON,PLUG U/O PN 205-075-101-3,7,-11, -19,& -23 ....UHE,UHH,UHV,UHX	EA	4
226	243	PAOZZ	5340-00-761-6417	61864	BS51338K2215	...BUTTON,PLUG U/O PN 205-075-101-15 & -27 ....UHE,UHH,UHV,UHX	EA	3
226	243	PAOZZ	5340-00-761-6417	61864	BS51338K2215	...BUTTON,PLUG U/O PN 205-075-101-31........UHE,UHH,UHV,UHX	EA	5
226	243	PAOZZ	5340-00-691-2734	83058	BS51338K5900	...BUTTON,PLUG........UHE,UHH,UHV	EA	4
226	244	PAOZZ	9905-00-845-0969	97499	204-075-164-5	...PLATE,IDENTIFICATIO U/O PN 205-075-101-3,-7, -11,& -31 ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	245	PAOZZ	9905-00-924-5637	97499	204-075-164-35	...PLATE,IDENTIFICATIO U/O PN 205-075-101-15 & -19 ......UHE,UHH,UHV,UHX	EA	1
226	246	PAOZZ	9905-00-883-1685	97499	204-075-164-45	...PLATE,IDENTIFICATIO U/O PN 205-075-101-23 ......UHE,UHH,UHV,UHX	EA	1
226	246A	PAOZZ		97499	204-075-164-43	...PLATE,IDENTIFICATIO......UHE,UHH,UHV	EA	1
226	246B	PAOZZ		97499	204-075-164-47	...PLATE,IDENTIFICATIO......UHE,UHH,UHV,UHX	EA	1
226	247	PAOZZ	9905-00-845-0960	97499	204-075-164-3	...PLATE,IDENTIFICATIO U/O PN 205-075-101-3,-7, -11,& -15 ......UHE,UHH,UHV	EA	1
226	248	PAOZZ	5975-00-902-5073	97499	204-075-164-41	...PANEL,BLANK U/O PN 205-075-101-19,-23,& -31 ......UHE,UHH,UHV	EA	1
226	249	PAOZZ	9905-00-845-0958	97499	204-075-164-1	...PLATE,IDENTIFICATIO......UHE,UHH,UHV	EA	1
226	250	PBOZZ	5925-00-929-7271	96906	MS22073-1 1/2	...CIRCUIT BREAKER U/O PN 205-075-101-3,-7,-11,-15,CIRCUIT BREAKER 1.5 OR 2.0 AMP MAY BE USED FOR COURSE INDICATOR ON PANEL ASSEMBLY PN 205-075-101-15......UHE,UHH,UHV	EA	1
226	251	PAOZZ	5925-00-045-9095	76374	MP1501C	...CIRCUIT BREAKER U/O PN 205-075-101-3 & -7.....UHE,UHH,UHV	EA	13
226	251	PAOZZ	5925-00-912-8343	96906	MS22073-1	...CIRCUIT BREAKER U/O PN 205-075-101-9,-13, -17,-21,-25,& -29......UHE,UHH,UHV	EA	1
226	251	PAOZZ	5925-00-912-8343	96906	MS22073-1	...CIRCUIT BREAKER U/O PN 205-075-101-15 & -27......P MAY BE USED FOR PN 205-075-101-15 ......UHE,UHH,UHV	EA	14
226	251	PAOZZ	5925-00-912-8343	96906	MS22073-1	...CIRCUIT BREAKER U/O PN 205-075-101-11,-19,& -23 ......UHE,UHH,UHV,UHX	EA	13
226	251	PAOZZ	5925-00-912-8343	96906	MS22073-1	...CIRCUIT BREAKER U/O PN 205-075-101-31......UHE,UHH,UHV	EA	12
226	251A	PAOZZ	5925-00-937-5669	96906	MS22073-10	...CIRCUIT BREAKER U/O PN 205-075-101-27......UHE,UHH,UHV	EA	1
226	251B	PAOZZ	5925-00-914-3505	96906	MS22073-2	...CIRCUIT BREAKER U/O PN 205-075-101-15,-19,-23,-27,& -31 ......UHE,UHH,UHV,UHX	EA	1
226	252	PAOZZ	5305-00-990-6444	96906	MS35207-251	..SCREW,MACHINE U/O PN 205-075-101-9,-13,-17, -21,& -25 ......UHE,UHH,UHV,UHX	EA	3
226	253	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON U/O PN 205-075-101-9,-13,-17,-21,&-25......UHE,UHH,UHV,UHX	EA	3
226	254	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT U/O PN 205-075-101-9,-13,-17, -21,& -25 ......UHE,UHH,UHV,UHX	EA	5
226	255	PAOZZ	5935-00-680-7008	74545	5256	..CONNECTOR,RECEPTACL U/O PN 205-075-101-9,-13,-17, -21 & -25......UHE,UHH,UHV,UHX	EA	2
226	256	PAOZZ	1680-00-761-2529	97499	204-075-163-1	...PANEL ASSY......UHE,UHH,UHV,UHX	EA	1
225	259	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	7
226	260	PAOZZ	6210-00-729-9396	72914	A5395C1	.LIGHT,PANEL INDICATOR......UHE,UHH,UHV,UHX	EA	1
226	261	PAOZZ	5930-00-504-6223	96906	MS25089-4C	.SWITCH,PUSH......UHE,UHH,UHV,UHX	EA	1
226	265	PBOZZ	5305-00-984-7341	96906	MS35191-273	.SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	2
226	266	PAOZZ	5945-00-538-3657	81349	MILR7611TYPEMA1	.RELAY,ELECTROMAGNET......UHE,UHH,UHV,UHX	EA	1
226	273	MOOZZ	5940-00-194-6542	96906	MS18029-1S12	.COVER,TERMINAL BOAR......UHE,UHH,UHV,UHX	EA	1
226	274	MOOZZ	DELETED	96906	MS27212-1-12	.TERMINAL BOARD......UHE,UHH,UHV,UHX	EA	1
226	275	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD U/O PN 205-075-008-1,-3,-5 205-075-013-1,-3, 205-075-018-1 & -3......UHE,UHH,UHV,UHX	EA	1
226	279	XDOZZ		96906	MS25226-2-5	.LINK,TERMINAL CONNECTING......UHE,UHH,UHV,UHX	EA	4
226	283	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	24
226	287	XDOZZ		96906	MS27212-1-10	.TERMINAL BOARD......UHE,UHH,UHV,UHX	EA	1
226	287A	XDOZZ		96906	MS27212-1-6	.TERMINAL BOARD U/O PN 205-075-008-1,-3,-5 205-075-013-1,-3, 205-075-018-1,& -3......UHE,UHH,UHV,UHX	EA	1
226	289	PAOZZ	5305-00-889-2998	96906	MS35206-216	.SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	12
226	291A	PAOZZ	5975-00-239-9652	05209	C3A	.CAP,DUST......UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
226	291A	XDOZZ		05209	C3E	.CAP,DUST............UHE,UHH,UHV,UHX	EA	1
226	292	XDOZZ		05209	BJ4A	.CONNECTOR ASSEMBLY............UHE,UHH,UHV,UHX	EA	1
226	293	PAOZZ	5975-00-987-5352	05209	BJ4F	.JUNCTION BOX............UHE,UHH,UHV,UHX	EA	1
226	294	PAOZZ	5305-00-543-5058	96906	MS35265-16	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	3
226	298	AOOZZ	1560-00-567-3037	97499	205-075-416-1	.CABLE ASSY,CO-PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-006-1............UHE,UHH,UHV,UHX	EA	1
226	298	AOOZZ	1560-00-567-3042	97499	205-075-416-5	.CABLE ASSY,CO-PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-008-1 & -3............UHE,UHH,UHV,UHX	EA	1
226	298	AOOZZ	1560-00-796-5025	97499	205-075-425-5	.CABLE ASSY,CO-PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-008-5, 205-075-013-1,-3, 205-075-018-1,& -3 ....UHE,UHH,UHV,UHX	EA	1
226	298	AOOOZ	1560-00-927-1213	97499	205-075-425-9	.CABLE ASSY,CO-PILOT CYCLIC STICK U/O PN 205-075-032-1,-3,-9, -13,-15,205-075-036-1,-3 -7,-9,&-11........UHE,UHH,UHV,UHX	EA	1
226	299	PAOZZ	5935-00-801-6622	96906	MS3100R20-27S	..CONNECTOR,RECEPTACL U/O PN 205-075-416-1 & -5 ....UHE,UHH,UHV,UHX	EA	1
226	300	PAOZZ	5935-00-226-1846	77820	PT00E20-27S	..CONNECTOR,RECEPTACL CO-PILOTS CYCLIC STICK U/O PN 205-075-425-5,-9............UHE,UHH,UHV,UHX	EA	1
226	301	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE CLAMP U/O PN 205-075-416-1 & -5 ....UHE,UHH,UHV,UHX	EA	1
226	302	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL,LUG U/O PN 205-075-416-1,-5,& 205-075-425-5 ....UHE,UHH,UHV,UHX	EA	1
226	303	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-416-1......UHE,UHH,UHV,UHX	EA	1
226	304	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-416-1.......UHE,UHH,UHV,UHX	FT	1
226	305	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL............UHE,UHH,UHV,UHX	FT	V
226	306	PBOZZ	6145-00-643-0651	81349	MILW16878TYPEB18	..WIRE,ELECTRICAL U/O PN 205-075-416-1.......UHE,UHH,UHV,UHX	FT	V
226	307	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O PN 205-075-416-5, 205-075-425-5,& -9 ....UHE,UHH,UHV,UHX	FT	V
226	308	AOOOZ	2925-00-874-0856	97499	204-075-406-15	.CABLE ASSEMBLY ANTI-TORQUE............UHE,UHH,UHV,UHX	EA	1
226	309	AOOOZ	1560-00-731-8935	97499	204-075-406-17	.CABLE ASSY,FORE & AFT FORCE TRIM............UHE,UHH,UHV,UHX	EA	1
226	310	AOOOZ	1560-00-731-8936	97499	204-075-406-19	.CABLE ASSY,LATERAL FORCE TRIM............UHE,UHH,UHV,UHX	EA	1
226	311	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI............UHE,UHH,UHV,UHX	EA	1
226	312	PAOZZ	5935-00-875-3527	96906	MS3108R14S9SC	..CONNECTOR,PLUG,ELEC............UHE,UHH,UHV,UHX	EA	1
226	312	PAOZZ	5935-00-875-3527	96906	MS3108R14S9SC	..CONNECTOR,PLUG,ELEC U/O PN 204-075-406-15,& -17 ....UHE,UHH,UHV,UHX	EA	2
226	313	PAOZZ	5935-00-062-0119	96906	MS3106R14S9S	..CONNECTOR,PLUG,ELEC............UHE,UHH,UHV,UHX	EA	1
226	314	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG............UHE,UHH,UHV,UHX	EA	1
226	315	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG............UHE,UHH,UHV,UHX	EA	1
226	316	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-406-15 & -19 ....UHE,UHH,UHV,UHX	FT	1
226	316	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-406-17......UHE,UHH,UHV,UHX	FT	2
226	317	PBOZZ	5940-00-636-7098	96906	MS25189-102	..TERMINAL,LUG............UHE,UHH,UHV,UHX	FT	V
226	318	AOOOZ	1560-00-567-3036	97499	205-075-414-1	.CABLE ASSY,CO-PILOT COLLECTIVE STICK DISCONNECT U/O PN 205-075-006-1, 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, -15,205-075-036-1. ....UHE,UHH,UHV,UHX	EA	1
226	318	AOOOO		97499	205-075-414-7	.CABLE ASSY,CO-PILOT COLLECTIVE STICK DISCONNECT U/O PN 205-075-036-9,& -11............UHE,UHH,UHV,UHX	EA	1
226	319	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-414-7..........UHE,UHH,UHV,UHX	EA	1
226	320	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-414-1..........UHE,UHH,UHV,UHX	EA	1
226	321	PAOZZ	5935-01-077-2646	96906	MS3450W18-1S	..CONNECTOR,RECEPTACL ELECTRICAL............UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	322	PAOZZ	5935-01-201-9223	81349	M85049/41-10A	..CLAMP,CABLE,ELECTRI .... UHE,UHH,UHV,UHX	EA	1
226	323	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-414-7....... UHE,UHH,UHV,UHX	FT	2
226	324	PBOZZ	5365-00-663-2125	88044	AN[illegible]20-10	..BUSHING,RUBBER............................ UHE,UHH,UHV,UHX	EA	1
226	325	PBOZZ	5940-00-636-7098	96906	MS25189-102	..TERMINAL,LUG.............................. UHE,UHH,UHV,UHX	FT	V
226	326	AOOOZ	1560-00-567-3063	97499	205-075-417-1	.CABLE ASSY,PILOT COLLECTIVE STICK DISCONNECT U/O PN 205-075-006-1, 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3,& 205-075-032-1..................... UHE,UHH,UHV,UHX	EA	1
226	326	AOOOZ	6150-00-989-0043	97499	205-075-417-17	.CABLE ASSY,POWER COLLECTIVE STICK DISCONNECT U/O PN 205-075-032-3,-9,-13, -15,205-075-036-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
226	326	AOOOO		97499	205-075-417-19	.CABLE ASSY,PILOT COLLECTIVE STICK DISCONNECT U/O PN 205-075-036-9 & -11.......................... UHE,UHH,UHV,UHX	EA	1
226	327	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS DUST AND MOISTURE SEAL U/O PN 205-075-417-1.................................. UHE,UHH,UHV,UHX	EA	1
226	327	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS DUST AND MOISTURE SEAL U/O PN 205-075-417-17 & -19.............................. UHE,UHH,UHV,UHX	EA	5
226	328	PBOZZ	5935-00-902-5364	96906	MS3120E16-26S	..CONNECTOR,RECEPTACL ELECTRICAL PILOT COLLECTIVE STICK .... UHE,UHH,UHV,UHX	EA	1
226	329	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-417-19......... UHE,UHH,UHV,UHX	EA	11
226	330	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-417-1.......... UHE,UHH,UHV,UHX	EA	1
226	330	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-417-17......... UHE,UHH,UHV,UHX	EA	11
226	331	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-417-1.......... UHE,UHH,UHV,UHX	EA	1
226	331	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-417-17 & -19 .... UHE,UHH,UHV,UHX	EA	2
226	332	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-417-1.......... UHE,UHH,UHV,UHX	EA	1
226	332	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-417-17 & -19 .... UHE,UHH,UHV,UHX	EA	4
226	333	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O PN 205-075-417-1.......... UHE,UHH,UHV,UHX	EA	1
226	333	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O PN 205-075-417-17 & -19 .... UHE,UHH,UHV,UHX	EA	2
226	334	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 205-075-417-1.......... UHE,UHH,UHV,UHX	EA	1
226	334	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 205-075-417-17 & -19 .... UHE,UHH,UHV,UHX	EA	2
226	335	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-417-1...... UHE,UHH,UHV,UHX	EA	1
226	335	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-417-19..... UHE,UHH,UHV,UHX	EA	4
226	335	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-417-17..... UHE,UHH,UHV,UHX	EA	5
226	336	PBOZZ	6145-00-578-6604	81349	M5086/2-14-9	..WIRE,ELECTRICAL........................... UHE,UHH,UHV,UHX	FT	V
226	337	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL........................... UHE,UHH,UHV,UHX	FT	V
226	338	AOOOZ	1560-00-567-3035	97499	205-075-413-1	.CABLE ASSY,CAUTION PANEL U/O PN 205-075-006-1 .... UHE,UHH,UHV,UHX	EA	1
226	338	AOOOZ	1560-00-567-3065	97499	205-075-418-1	.CABLE ASSY,CAUTION PANEL U/O PN 205-075-008-1,-3,-5 205-075-013-1 & -3.......................... UHE,UHH,UHV,UHX	EA	1
226	338	AOOOZ	6150-00-924-0445	97499	205-075-433-3	.CABLE ASSY,CAUTION PANEL U/O PN 205-075-018-1 & -3 .... UHE,UHH,UHV,UHX	EA	1
226	338	AOOOZ	6150-00-955-9460	97499	205-075-433-11	.CABLE ASSY,CAUTION PANEL U/O PN 205-075-032-1,-3, -13,& -15 .... UHE,UHH,UHV,UHX	EA	1
226	338	AOOOO		97499	205-075-901-1	.CABLE ASSY,CAUTION PANEL U/O PN 205-075-032-9, 205-075-036-1,-3,-7,-9,& -11.......................... UHE,UHH,UHV,UHX	EA	1
226	339	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 205-075-413-1 & 205-075-418-1 .... UHE,UHH,UHV,UHX	EA	1
226	340	PAOZZ	5935-00-622-2831	96906	MS3456W14S2S	..CONNECTOR,PLUG,ELEC........................ UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
226	341	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-413-1 & 205-075-418-1 ....UHE,UHH,UHV,UHX	EA	1
226	341	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-433-3 & -11....UHE,UHH,UHV,UHX	EA	13
226	341	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-901-1..........UHE,UHH,UHV,UHX	EA	14
226	342	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-413-1 & 205-075-418-1 ....UHE,UHH,UHV,UHX	EA	1
226	342	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-433-3,-11,& 205-075-901-1 ....UHE,UHH,UHV,UHX	EA	6
226	344	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-413-1, 205-075-418-1, 205-075-433-3,& -11........UHE,UHH,UHV,UHX	EA	1
226	345	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-413-1 & 205-075-418-1 ....UHE,UHH,UHV,UHX	EA	1
226	345	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-433-3,-11,& 205-075-901-1 ....UHE,UHH,UHV,UHX	EA	6
226	346	PAOZZ	5999-00-661-0416	96906	MS25274-2	..CAP,ELECTRICAL U/O PN 205-075-418-1 & 205-075-433-11 ....UHE,UHH,UHV,UHX	EA	1
226	347	PBOZZ	5935-00-721-3645	81349	M28748/6C00G1A	..CONNECTOR,RECEPTACL........UHE,UHH,UHV,UHX	EA	1
226	348	MOOZZ	5970-00-195-9548	97499	130-006-6-4	..INSULATION SLEEVING........UHE,UHH,UHV,UHX	EA	1
226	349	MOOZZ	DELETED	97499	85T4-10-2	..INSULATION SLEEVING U/O PN 205-075-413-1 & 205-075-418-1 ....UHE,UHH,UHV,UHX	EA	1
226	349	MOOZZ	DELETED	97499	85T4-10-2	..INSULATION SLEEVING U/O PN 205-075-433-3 & -11 ....UHE,UHH,UHV,UHX	EA	21
226	349	MOOZZ	DELETED	97499	85T4-10-2	..INSULATION SLEEVING U/O PN 205-075-901-1 ....UHE,UHH,UHV,UHX	EA	24
226	350	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-413-1 & 205-075-418-1 ....UHE,UHH,UHV,UHX	FT	1
226	350	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-433-3,-11,& 205-075-901-1 ....UHE,UHH,UHV,UHX	FT	3
226	351	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	352	PBOZZ	5940-00-636-7098	96906	MS25189-102	..TERMINAL,LUG........UHE,UHH,UHV,UHX	FT	V
226	353	PBOZZ	6145-00-643-0651	81349	MILW16878TYPEB18	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	354	PAOZZ	5940-00-683-4282	97499	30-010-1	..SPLICE,CONDUCTOR U/O PN 205-075-901-1......UHE,UHH,UHV,UHX	EA	2
226	355	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	356	MOOZZ	DELETED	97499	85T4-2-108	.INSULATION SLEEVING U/O PN 205-075-032-1....UHE,UHH,UHV,UHX	EA	1
226	357	MOOZZ		97499	85T4-1-106	.INSULATION SLEEVING U/O PN 205-075-032-1,-3,-13, -15,205-075-036-1,-3,-7,........UHE,UHH,UHV,UHX	EA	1
226	358	MOOZZ		97499	85T4-2-116	.TUBE INSULATION U/O PN 205-075-032-1,-3,-13, -15,205-075-036-1,-3,-7, -9,& -11........UHE,UHH,UHV,UHX	EA	1
226	359	MOOZZ		97499	85T4-4-8	.INSULATION TUBE U/O PN 205-075-032-1,-3,-13, -15,205-075-036-1,-3,-7, -9,& -11........UHE,UHH,UHV,UHX	EA	1
226	359A	PAOZZ	5935-00-773-3052	81312	MRAC26SJTC6H8	CONNECTOR BODY,PLUG........UHE,UHH,UHV,UHX	EA	1
226	360	PAOZZ	5306-00-515-8064	88044	AN4-7A	.BOLT,MACHINE U/O PN 205-075-036-1 & -11.....UHE,UHH,UHV,UHX	EA	1
226	361	PAOFF	1680-00-894-6643	96182	792-100	.PANEL ASSEMBLY WORD CAUTION CONTROL U/O PN 205-075-006-1 SEE FIG.236 FOR BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
226	361	PAOFF	1680-00-105-9316	97499	204-075-705-9	.PANEL,FAULT-FUNCTIO INDICATOR U/O PN 205-075-008-1,-3,-5, 205-075-013-1 & -3........UHE,UHH,UHV,UHX	EA	1
226	361	PAOFF	1680-00-285-7984	96182	249-100	.PANEL,FAULT-FUNCTIO INDICATOR SEE FIG.238 FOR BREAKDOWN ..UHE,UHH,UHV,UHX U/O 205-075-008-1,-3,-5 205-075-013-1,-3	EA	1
226	361	PAOFF	1680-00-105-9316	72914	80-0070-1	.PANEL,FAULT-FUNCTIO INDICATOR SEE FIG.237 FOR BREAKDOWN ..UHE,UHH,UHV,UHX U/O 205-075-008-1,-3,-5 205-075-013-1,-3	EA	1
226	361	PAOFF	1680-00-850-4351	97499	204-075-705-45	.PANEL,FAULT-FUNCTIO CAUTION CONTROL SEE FIG.231 & 232 FOR BREAKDOWN INTRCH........UHE,UHH,UHV,UHX U/O 205-075-036-1,-3,-7,-9,-11,-15,-17	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
226	361	PAOFF	1680-00-759-8274	96182	4408-100-45	.PANEL ASSEMBLY-WORD CAUTION CONTROL SEE FIG 233 FOR BREAKDOWN. U/O 205-075-036-1,-3,-7,-9,-11, -15,-17 ..UHE,UHH,UHV,UHX	EA	1
226	361	PAOFF	1680-00-850-4361	96182	141-10450-045	.PANEL,FAULT-FUNCTIO CAUTION CONTROL SEE FIG.234 FOR BREAKDOWN U/O 205-075-036-1,-3,-7,-9,-11, -15,-17 ..UHE,UHH,UHV,UHX	EA	1
226	362	A000Z	1560-00-987-5254	97499	205-075-407-5	.CABLE ASSY,HYDRAUL CAUTION CONTROL U/O PN 205-075-006-1, 205-075-008-1,-3,-5, 205-075-013-1,& -3......UHE,UHH,UHV,UHX	EA	1
226	363	A000Z	6150-00-924-0443	97499	205-075-432-9	.CABLE ASSY,HYDRAUL CONTROL PANEL U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, -15,205-075-036-1,-3,-7, -9,&-11 ....UHE,UHH,UHV,UHX	EA	1
226	364	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE CLAMP U/O PN 205-075-407-5 ....UHE,UHH,UHV,UHX	EA	1
226	365	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-432-9........UHE,UHH,UHV,UHX	EA	2
226	366	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-407-5........UHE,UHH,UHV,UHX	EA	1
226	367	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
226	368	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
226	369	PAOZZ	5935-00-626-3120	96906	MS3456W20-27S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
226	369A	PAOZZ	5935-00-626-3120	96906	MS3456W20-27S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
226	370	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
226	371	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-407-5......UHE,UHH,UHV,UHX	EA	1
226	371	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-432-9......UHE,UHH,UHV,UHX	EA	3
226	372	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	8
226	373	PAOZZ	5365-00-598-5416	96906	MS3420-12	..BUSHING,RUBBER U/O PN 205-075-407-5......UHE,UHH,UHV,UHX	EA	1
226	374	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	375	PB000	1560-00-915-5926	97499	205-075-207-1	.PANELXASSEMBLY,CONT HYDRAULIC U/O PN 205-075-018-1,& -3 SEE FIG.256 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	375	PA000	1680-00-179-6009	97499	205-075-210-7	.PANEL CONTROL,ELECT ELECTRICAL-HYDRAULIC U/O PN 205-075-032-1,-3,-9,-13,-15 & 205-075-036-1 & -11 SEE FIG.256 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	375	PA000	1680-00-168-5672	97499	204-075-827-3	.PANEL,INDICATING,LI LIGHT TRANSMITTING U/O PN 205-075-036-3,-7,-9 SEE FIG.256 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	376	PB000	6110-00-916-2559	97499	205-075-205-5	.PANEL ASSEMBLY,CONT ENGINE U/O PN 205-075-018-1 & -3 SEE FIG.260 FOR BREAKDOWN DWN..........UHE,UHH,UHV,UHX	EA	1
226	376	PB000	6110-00-105-6255	97499	205-075-205-7	.PANEL ASSEMBLY,CONT ENGINE U/O PN 205-075-032-1 SEE FIG 260 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
226	376	PA000	6110-00-168-3807	97499	205-075-251-1	.PANEL ASSY,CONTROL ENGINE U/O PN 205-075-032-3,-9,-13,-15 & 205-075-036-1,-3 -7 & -9 SEE FIG 263 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
226	376	XB00Z	6110-00-168-8605	97499	205-075-251-5	.PANEL,CONTROL CONTROL U/O PN 205-075-036-11 SEE FIG.263 FOR BREAKDOWN DWN..........UHE,UHH,UHV,UHX	EA	1
226	377	A000Z	1560-00-567-3019	97499	205-075-410-1	.CABLE ASSY,ENGINE PANEL U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	377	A000Z	1560-00-567-3031	97499	205-075-410-7	.CABLE ASSY,ENGINE PANEL U/O PN 205-075-008-1,-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
226	377	A000Z	1560-00-906-0279	97499	205-075-410-11	.CABLE ASSY,ENGINE PANEL U/O PN 205-075-013-1 & -3 ....UHE,UHH,UHV,UHX	EA	1
226	377	A000Z	6150-00-916-2587	97499	205-075-410-15	.CABLE ASSY,ENGINE PANEL U/O PN 205-075-018-1,-3,& 205-075-032-1..........UHE,UHH,UHV,UHX	EA	1
226	377	A000Z	6150-00-989-0046	97499	205-075-410-17	.CABLE ASSY,ENGINE PANEL U/O PN 205-075-032-3,-13,& -15 ....UHE,UHH,UHV,UHX	EA	1
226	377	A0000		97499	205-075-901-3	.CABLE ASSY,ENGINE CONTROL PANEL U/O PN 205-075-032-9, 205-075-036-1,-3,& -7..........UHE,UHH,UHV,UHX	EA	1
226	377	A0000		97499	205-075-901-5	.CABLE ASSY,ENGINE CONTROL PANEL U/O PN 205-075-036-9 ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	377	A0000		97499	205-075-901-9	.CABLE ASSY,ENGINE CONTROL PANEL U/O PN 205-075-036-11,& -15 ....UHE,UHH,UHV,UHX	EA	1
226	378	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-410-11 & 205-075-901-5 ....UHE,UHH,UHV,UHX	EA	11
226	378	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-901-9..........UHE,UHH,UHV,UHX	EA	12
226	379	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-410-1 & -7.....UHE,UHH,UHV,UHX	EA	1
226	379	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-410-15,-17,& 205-075-901-3 ....UHE,UHH,UHV,UHX	EA	11
226	380	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-410-1 & -7.....UHE,UHH,UHV,UHX	EA	1
226	380	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-410-11, -15,-17,205-075-901-3, & -5........UHE,UHH,UHV,UHX	EA	7
226	381	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-410-1 & -7.....UHE,UHH,UHV,UHX	EA	1
226	381	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-410-11, -15,-17,205-075-901-3, & -5........UHE,UHH,UHV,UHX	EA	7
226	381	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-901-9..........UHE,UHH,UHV,UHX	EA	8
226	382	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-410-1 & -7 ....UHE,UHH,UHV,UHX	FT	1
226	382	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-410-11, -15,-17,205-075-901-3,-5, & -9........UHE,UHH,UHV,UHX	FT	7
226	383	MOOZZ	5970-00-342-8362	97499	85T4-10-2	..INSULATION TUBE U/O PN 205-075-410-15,-17,& 205-075-901-3 ....UHE,UHH,UHV,UHX	EA	1
226	384	PAOZZ	5935-00-506-6639	96906	MS3418-14N	..CLAMP,CABLE,ELECTRI........UHE,UHH,UHV,UHX	EA	1
226	385	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-410-1 & -7 ....UHE,UHH,UHV,UHX	EA	1
226	385	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-410-11.....UHE,UHH,UHV,UHX	EA	2
226	385	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-410-15,-17, 205-075-901-3, & -9........UHE,UHH,UHV,UHX	EA	8
226	385	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR PN 205-075-901-5..........UHE,UHH,UHV,UHX	EA	7
226	386	PAOZZ	5915-00-878-0340	80183	JN14-16008	..FILTER NETWORK FILTER FUEL PUMP MOTOR U/O PN 205-075-410-11,-15,-17........UHE,UHH,UHV,UHX	EA	2
226	386	PAOZZ	5915-00-878-0340	80183	JN14-16008	..FILTER NETWORK FILTER FUEL PUMP MOTOR U/O PN 205-075-901-3,-5........UHE,UHH,UHV,UHX	EA	1
226	386	PAOZZ	5915-00-878-0340	80183	JN14-16008	..FILTER NETWORK FILTER FUEL PUMP MOTOR U/O PN 205-075-901-9........UHE,UHH,UHV,UHX	EA	3
226	387	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	388	PBOZZ	5935-00-904-7717	96906	MS3126E20-39S	..CONNECTOR,PLUG,E ENGINE PANEL........UHE,UHH,UHV,UHX	EA	1
226	389	PAOZZ	5935-00-422-5243	96906	MS3406R14S5S	..CONNECTOR,PLUG,ELEC........UHE,UHH,UHV,UHX	EA	1
226	390	PAOZZ	5935-00-622-2830	96906	MS3456W18-1S	..CONNECTOR,PLUG,ELEC........UHE,UHH,UHV,UHX	EA	1
226	390A	PAOZZ	5935-00-622-2830	96906	MS3456W18-1S	..CONNECTOR,PLUG,ELEC........UHE,UHH,UHV,UHX	EA	1
226	391	PAOZZ	5935-00-626-3101	96906	MS3450W28-21S	..CONNECTOR,RECEPTACL........UHE,UHH,UHV,UHX	EA	2
226	392	PBOZZ	5935-00-973-5407	96906	MS3114E14-5S	..CONNECTOR,RECEPT ELECTRICAL RH INT AUX FUEL DISC U/O PN 205-075-410-1,-7........UHE,UHH,UHV,UHX	EA	2
226	392	PBOZZ		81349	MIL-C-26482	..CONNECTOR,RECEPT ELECTRICAL RH INT AUX FUEL DISC U/O PN 205-075-410-1,-7........UHE,UHH,UHV,UHX	EA	2
226	393	PBOZZ	5935-00-900-2084	96906	MS3124E14-5S	..CONNECTOR,RECEPT ELECTRICAL RH INT AUX FUEL DISC U/O PN 205-075-410-1,-7........UHE,UHH,UHV,UHX	EA	1
226	393	PBOZZ	5935-00-900-2084	96906	MS3124E14-5S	..CONNECTOR,RECEPT ELECTRICAL RH INT AUX FUEL DISC U/O PN 205-075-410-15,-17, 205-075-901-3,-5,-9......UHE,UHH,UHV,UHX	EA	2
226	394	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	395	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
226	396	PAOZZ	5310-00-821-1489	82577	174870	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	397	MOOZZ	DELETED	96906	MS25083-2BB6	.LEAD,ELECTRICAL U/O PN 205-075-018-1, 205-075-032-1,-3,-9,-13,& -15..........UHE,UHH,UHV,UHX	EA	1
226	398	AOOOZ	1560-00-567-3064	97499	205-075-417-3	.CABLE ASSY,INSTRUME U/O PN 205-075-006-1, 205-075-008-1,-3, & -5..........UHE,UHH,UHV,UHX	EA	1
226	398	AOOOZ	1560-00-869-8147	97499	205-075-417-5	.CABLE ASSY,INSTRUME U/O PN 205-075-013-1 & -3 ....UHE,UHH,UHV,UHX	EA	1
226	398	AOOOZ	6150-00-924-0450	97499	205-075-422-5	.CABLE ASSY,INSTRUME U/O PN 205-075-018-1,-3, 205-075-032-1, -3,-9,-13, -15,205-075-036-1,-3,-7, -9,&-11 ....UHE,UHH,UHV,UHX	EA	1
226	399	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE U/O PN 205-075-417-3,& -5......UHE,UHH,UHV,UHX	EA	1
226	399	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE U/O PN 205-075-422-5..........UHE,UHH,UHV,UHX	EA	2
226	400	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 205-075-417-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
226	400	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 205-075-422-5 ....UHE,UHH,UHV,UHX	EA	4
226	401	PAOZZ	5935-00-544-5143	96906	MS3456W14S7S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-417-3 & 205-075-422-5 ....UHE,UHH,UHV,UHX	EA	2
226	402	PAOZZ	5935-00-622-2831	96906	MS3456W14S2S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	2
226	403	PAOZZ	5935-00-600-1890	95712	1-690-1	..CONNECTOR,PLUG ELEC U/O PN 205-075-417-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
226	404	PAOZZ	5935-00-681-3638	95712	1-728-1	..CONNECTOR,PLUG,ELEC U/O PN 205-075-417-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
226	405	PAOZZ	5935-00-871-5052	95712	1-905-1	..CONNECTOR,PLUG,ELEC U/O PN 205-075-417-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
226	406	PAOZZ	5935-00-787-7382	02660	165-61-1008	..CONNECTOR,PLUG,ELEC FUEL QTY IND..........UHE,UHH,UHV,UHX	EA	1
226	407	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-417-3,& -5.....UHE,UHH,UHV,UHX	EA	1
226	407	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-422-5..........UHE,UHH,UHV,UHX	EA	13
226	408	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-422-5..........UHE,UHH,UHV,UHX	EA	3
226	409	PAOZZ	5940-00-113-8179	96906	MS25036-107	..TERMINAL,LUG U/O PN 205-075-417-5..........UHE,UHH,UHV,UHX	EA	1
226	410	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-422-5..........UHE,UHH,UHV,UHX	EA	3
226	411	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-417-3,& -5.....UHE,UHH,UHV,UHX	EA	1
226	412	PAOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 205-075-417-5..........UHE,UHH,UHV,UHX	EA	1
226	413	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-422-5..........UHE,UHH,UHV,UHX	EA	6
226	414	PAOZZ	5940-00-502-7570	24617	6718477	..TERMINAL,LUG U/O PN 205-075-422-5..........UHE,UHH,UHV,UHX	EA	7
226	415	PAOZZ	5940-00-229-7564	88044	AN5538-2	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
226	416	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING U/O PN 205-075-417-5 & 205-075-422-5 ....UHE,UHH,UHV,UHX	EA	2
226	417	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-417-3,& -5 ....UHE,UHH,UHV,UHX	FT	1
226	418	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-422-5.......UHE,UHH,UHV,UHX	FT	26
226	419	XDOZZ		97499	85T4-5-2	..INSULATION SLEEVE U/O PN 205-075-417-3.....UHE,UHH,UHV,UHX	EA	1
226	419	XDOZZ		97499	85T4-5-2	..INSULATION SLEEVE U/O PN 205-075-417-5.....UHE,UHH,UHV,UHX	EA	V
226	419	XDOZZ		97499	85T4-5-2	..INSULATION SLEEVE U/O PN 205-075-422-5.....UHE,UHH,UHV,UHX	EA	2
226	420	MOOZZ	DELETED	97499	85T4-500-2	..TUBING INSULATION U/O PN 205-075-417-3.....UHE,UHH,UHV,UHX	EA	1
226	420	MOOZZ	DELETED	97499	85T4-500-2	..TUBING INSULATION U/O PN 205-075-417-5.....UHE,UHH,UHV,UHX	EA	V
226	420	MOOZZ	DELETED	97499	85T4-500-2	..TUBING INSULATION U/O PN 205-075-422-5.....UHE,UHH,UHV,UHX	EA	4
226	420	XDOZZ		97499	130-005-7-4	..INSULATION SLEEVE..........UHE,UHH,UHV,UHX	EA	4
226	421	PAOZZ	5365-00-820-4535	88044	AN3420-6	..BUSHING,RUBBER U/O PN 205-075-417-5 & 205-075-422-5 ....UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	422	PAOZZ	5365-00-598-5282	96906	MS3420-4	..BUSHING,RUBBER U/O PN 205-075-417-5 & 205-075-422-5 .... UHE,UHH,UHV,UHX	EA	2
226	423	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL.......................... UHE,UHH,UHV,UHX	FT	V
226	424	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL.......................... UHE,UHH,UHV,UHX	FT	V
226	425	PBOZZ	6145-00-836-2241	97499	BS20	..CABLE,SPECIAL PURPO...................... UHE,UHH,UHV,UHX	FT	V
226	426	PBOZZ	6145-00-635-5036	81349	MILW5846TYPE4CLA	..CABLE,SPECIAL PURPO...................... UHE,UHH,UHV,UHX	FT	V
226	427	PAOZZ	5940-00-772-3509	09922	CYW16	..SPLICE,CONDUCTOR......................... UHE,UHH,UHV,UHX	EA	1
226	428	PAOZZ	5935-00-924-0457	05209	PC205A10	..CONNECTOR,PLUG,ELEC UNSHLD TANK UNIT COUPLER U/O PN 205-075-422-5.......................... UHE,UHH,UHV,UHX	EA	1
226	429	PAOZZ	5935-00-924-0458	05209	PC205B10	..CONNECTOR,PLUG,E RH FUEL TANK SUMP U/O PN 205-075-422-5 .... UHE,UHH,UHV,UHX	EA	1
226	430	PAOZZ	5935-00-924-0460	05209	PC205F10	..CONNECTOR,PLUG,E SHLD TANK UNIT.COUPLER U/O PN 205-075-422-5.......................... UHE,UHH,UHV,UHX	EA	1
226	431	AOOOZ	1560-00-760-3324	97499	205-075-408-7	.HARNESS ASSY, ATTITUDE CONTROL U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1 & -3........... UHE,UHH,UHV,UHX	EA	1
226	431	AOOOZ	6150-00-924-0446	97499	205-075-433-1	.CABLE ASSY, ATTITUDE CONTROL U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-9,-13,-15, 205-075-036-1,-3,-7,-9,& -11 .... UHE,UHH,UHV,UHX	EA	1
226	432	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI...................... UHE,UHH,UHV,UHX	EA	1
226	433	PAOZZ	5935-01-137-2305	81349	M85049/41-16A	..CLAMP,CABLE,ELECTRI CONNECTOR............ UHE,UHH,UHV,UHX	EA	1
226	434	PBOZZ	5935-00-800-1309	96906	MS3101R24-28SC	..CONNECTOR,PLUG,ELEC...................... UHE,UHH,UHV,UHX	EA	1
226	435	XDOZZ		81349	M28748/6C00G1A	..CONNECTOR,RECEPTACL...................... UHE,UHH,UHV,UHX	EA	1
226	435A	PACZA	5999-00-975-9573	81312	100-2018S	..CONTACT,ELECTRICAL U/W 5935-00-833-9480,PN MRAC14SG7 ONLY .... UHE,UHH,UHV,UHX	EA	14
226	436	PAOZZ	5935-00-855-1766	35351	110372-01	..SHIELD,ELECTRICAL C U/O PN 205-075-433-1 .... UHE,UHH,UHV,UHX	EA	1
226	437	PAOZZ	5365-00-390-6598	35351	27713-26	..SHIM U/O PN 205-075-433-1................ UHE,UHH,UHV,UHX	EA	V
226	438	PAOZZ	5365-00-390-6600	35351	27713-27	..SHIM U/O PN 205-075-433-1................ UHE,UHH,UHV,UHX	EA	1
226	439	XBOZZ	5310-00-390-6601	35351	27713-28	..WASHER,FLAT U/O PN 205-075-433-1......... UHE,UHH,UHV,UHX	EA	V
226	440	PAOZZ	5935-00-820-0555	96906	MS3106R14S5S	..CONNECTOR,PLUG,ELEC...................... UHE,UHH,UHV,UHX	EA	1
226	441	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-408-7 .... UHE,UHH,UHV,UHX	EA	1
226	442	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-408-7........ UHE,UHH,UHV,UHX	EA	1
226	442	PAOZZ	5940-00-143-4771	96906	MS25035-103	..TERMINAL,LUG U/O PN 205-075-433-1........ UHE,UHH,UHV,UHX	EA	2
226	443	PAOZZ	5365-00-820-4535	88044	AN3420-6	..BUSHING,RUBBER........................... UHE,UHH,UHV,UHX	EA	1
226	444	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-408-7........ UHE,UHH,UHV,UHX	EA	1
226	444	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-433-1........ UHE,UHH,UHV,UHX	EA	2
226	445	PAOZZ	5999-00-729-1628	96906	MS25274-3	..CAP,ELECTRICAL U/O PN 205-075-408-7...... UHE,UHH,UHV,UHX	EA	8
226	446	PBOZZ	6145-00-653-1922	97499	BS22	..CABLE,SPECIAL PURPO U/O PN 205-075-408-7 .... UHE,UHH,UHV,UHX	FT	V
226	447	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O PN 205-075-408-7..... UHE,UHH,UHV,UHX	FT	V
226	448	PBOZZ	6145-00-653-1897	81349	MILW16878TYPEB22	..WIRE,ELECTRICAL.......................... UHE,UHH,UHV,UHX	FT	V
226	449	MOOZZ		97499	85T4-12-2	..INSULATION TUBE U/O PN 205-075-408-7..... UHE,UHH,UHV,UHX	EA	1
226	449	MOOZZ		97499	85T4-12-2	..INSULATION TUBE U/O PN 205-075-433-1..... UHE,UHH,UHV,UHX	EA	2
226	450	MOOZZ	DELETED	97499	85T4-1-2	..INSULATION TUBE U/O PN 205-075-408-7..... UHE,UHH,UHV,UHX	EA	2
226	451	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-408-7..... UHE,UHH,UHV,UHX	FT	1
226	451	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-433-1..... UHE,UHH,UHV,UHX	FT	6
226	452	MOOZZ		97499	85T4-375-12	..TUBE,INSULATION U/O PN 205-075-408-7..... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
226	454	A000Z	6150-00-948-9545	97499	205-075-408-9	.CABLE ASSEMBLY,SPEC WARNING LIGHT USBL EFF 62-2106 THRU 62-12372 .... UHE,UHH,UHV,UHX	EA	1
226	454	A000Z	6150-00-948-9588	97499	205-075-408-11	.CABLE ASSY,SPECIAL FUEL FILTER WARNING LIGHT USBL EFF 62-2106 THRU 62-12372 .... UHE,UHH,UHV,UHX	EA	1
226	455	PAOZZ	5940-00-557-1529	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-408-11 .... UHE,UHH,UHV,UHX	EA	1
226	456	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-408-11 .... UHE,UHH,UHV,UHX	EA	2
226	457	XDOZZ		96906	MS25041-2	..LIGHT,INDICATOR .... UHE,UHH,UHV,UHX	EA	1
226	458	XDOZZ		77820	PT06E8-2S	..CONNECTOR,PLUG,ELEC .... UHE,UHH,UHV,UHX	EA	1
226	458	PAOZZ	5935-01-009-3993	96906	MS3116E8-2S	..CONNECTOR,PLUG,ELEC .... UHE,UHH,UHV,UHX	EA	1
226	459	PAOZZ	6145-00-056-8145	97499	140-008-18	..WIRE,ELECTRICAL U/O PN 205-075-408-9 .... UHE,UHH,UHV,UHX	EA	V
226	460	PBOZZ	5940-00-636-7098	96906	MS25189-102	.TERMINAL,LUG U/O PN 205-075-408-11 .... UHE,UHH,UHV,UHX	FT	V
226	461	XCFZZ		97499	205-075-300-7	.EQUIPMENT INSTL NOSE U/O PN 205-075-006-1 .... UHE,UHH,UHV,UHX	EA	1
226	462	PAODD	6340-01-153-8073	97499	205-074-033-103	. BOX,WARNING CONTROL SEE FIG 240 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	462A	MOOZZ		81996	1560UH1-772-1	..CABLE ASSY,EXTENDER USED TO TEST RPM WARNING BOXES .... UHE,UHH,UHV,UHX	EA	V
226	462B	MOOZZ		81996	1560UH1-772-2	..CABLE ASSY,JUMPER USED TO TEST RPM WARNING BOXES .... UHE,UHH,UHV,UHX	EA	V
226	462C	PAOZZ	5940-00-636-7098	96906	MS25189-102	...TERMINAL,LUG .... UHE,UHH,UHV,UHX	FT	V
226	462D	PAOZZ	5970-00-899-6664	81349	MIL-I-631	...INSULATION SLEEVING .... UHE,UHH,UHV,UHX	FT	V
226	462E	PAOZZ	5935-00-078-3586	96906	MS3120F14-19P	...CONNECTOR,RECEPTACL .... UHE,UHH,UHV,UHX	EA	1
226	462E	PAOZZ	5935-00-765-5989	96906	MS3126F14-19S	...CONNECTOR,PLUG,ELEC .... UHH,UHE,UHV,UHX	EA	1
226	462F	PBOZZ	5935-00-909-7894	83330	1513-102	...JACK ASSEMBLY,TIP .... UHE,UHH,UHV,UHX	EA	1
226	462G	PAOZZ	5905-00-141-0591	81349	RCR20G103JS	...RESISTOR,FIXED,COMP .... UHE,UHH,UHV,UHX	EA	1
226	462H	PAOZZ	5935-00-578-3494	35351	742436-01	...PLUG,TIP .... UHE,UHH,UHV,UHX	EA	2
226	462J	PAOZZ	5940-01-079-1647	81349	M7928/5-3	...SPLICE,CONDUCTOR .... UHE,UHH,UHV,UHX	EA	1
226	463	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX EXTENDED WASHER HEXAGON .... UHE,UHH,UHV,UHX	EA	4
226	464	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
226	465	PAOZZ	5305-00-952-0760	96906	MS35207-277	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
226	466	PAOZZ	5305-00-993-2460	96906	MS35207-282	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
226	467	XCFZZ		97499	205-075-334-3	.EQUIPMENT INSTL NOSE U/O PN 205-075-008-1,-3,& -5 SEE FIG 241 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	467	XCFZZ		97499	205-075-337-3	.EQUIPMENT INSTL NOSE U/O PN 205-075-013-1 SEE FIG.241 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	467	XCFZZ		97499	205-075-337-7	.EQUIPMENT INSTL NOSE U/O PN 205-075-013-3 SEE FIG.241 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	467	XCFZZ		97499	205-075-337-9	.EQUIPMENT INSTL NOSE U/O PN 205-075-018-1 & -3 SEE FIG.241 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	467	XCFZZ		97499	205-075-500-3	.EQUIPMENT INSTL NOSE U/O PN 205-075-032-1 & -3 SEE FIG.242 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	467	XCFZZ		97499	205-075-507-3	.EQUIPMENT INSTL NOSE U/O PN 205-075-032-9,-13,-15 & 205-075-036-1,& -3 SEE FIG.242 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	467	XCFZZ		97499	205-075-513-3	.EQUIPMENT INSTL NOSE U/O PN 205-075-036-7,-9,& -11 SEE FIG.243 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
226	468	A000Z	1560-00-987-5287	97499	205-075-408-3	.CABLE ASSEMBLY BATTERY TO BUS U/O PN 205-075-006-1 .... UHE,UHH,UHV,UHX	EA	1
226	468	A000Z	1560-00-924-7710	97499	205-075-437-5	.CABLE ASSEMBLY,ELEC BATTERY TO BUS U/O PN 205-075-008-1,-3,-5,205-075-013-1,-3,205-075-018-1,-3,205-075-032-1,-3,-9,-13,	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						-15,205-075-036-1,-3,-3,-7,-9,& -11..........UHE,UHH,UHV,UHX		
226	469	PAOZZ	5940-00-914-3109	96906	MS25437-15	..TERMINAL,LUG................................UHE,UHH,UHV,UHX	EA	4
226	469A	PAOZZ	5940-00-892-3111	96906	MS25435-15	..TERMINAL,LUG................................UHE,UHH,UHV,UHX	EA	2
226	469B	PAOZZ	5940-00-187-5126	96906	MS25438-15	..TERMINAL,LUG U/D PN 205-075-437-5..........UHE,UHH,UHV,UHX	EA	2
226	470	PBOZZ	6145-00-727-4430	96906	MS25191-28	..WIRE,ELECTRICAL..............................UHE,UHH,UHV,UHX	FT	V
226	470A	MOOZZ		97499	130-005-9-6	..INSULATING TUBING U/O PN 205-075-437-5.....UHE,UHH,UHV,UHX	EA	5
226	471	AOOOZ	1560-00-567-3038	97499	205-075-416-3	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-006-1..UHE,UHH,UHV,UHX	EA	1
226	471	AOOOZ	1560-00-567-3062	97499	205-075-416-7	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-008-1 & -3......................................UHE,UHH,UHV,UHX	EA	1
226	471	AOOOZ	1560-00-878-0322	97499	205-075-425-7	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-008-5, 205-075-013-1,-3, 205-075-018-1,& -3 ....UHE,UHH,UHV,UHX	EA	1
226	471	AOOOZ	1560-00-927-1214	97499	205-075-425-11	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT U/O PN 205-075-032-1,-3, -9,-13,-15,205-075-036-1, -3,-7,-9,& -11 ....UHE,UHH,UHV,UHX	EA	1
226	471	AOOOO		97499	205-075-425-21	.CABLE ASSY,PILOT CYCLIC STICK DISCONNECT....UHE,UHH,UHV,UHX	EA	1
226	471	AOOOO		97499	205-075-425-19	.CABLE ASSY,ELEC U/O PN 205-075-036-15......UHE,UHH,UHV,UHX	EA	1
226	472	PBOZZ	5935-00-880-7894	96906	MS3120E14-19S	..CONNECTOR,RECEPTACL ELECTRICAL.............UHE,UHH,UHV,UHX	EA	1
226	473	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-416-3,-7,& 205-075-425-7 ....UHE,UHH,UHV,UHX	EA	1
226	473A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-425-11,& -19 ....UHE,UHH,UHV,UHX	EA	4
226	474	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR...........................UHE,UHH,UHV,UHX	EA	1
226	475	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..............................UHE,UHH,UHV,UHX	FT	V
226	475	PBOZZ	6145-00-643-0551	81349	MILW16878TYPEB18	..WIRE,ELECTRICAL U/O PN 205-075-416-3.......UHE,UHH,UHV,UHX	FT	V
226	476	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL U/O PN 205-075-416-7, 205-075-425-11,& -19 ....UHE,UHH,UHV,UHX	FT	V
226	477	PBOZZ	6145-00-553-1897	81349	MILW16878TYPEB22	..WIRE,ELECTRICAL U/O PN 205-075-425-19......UHE,UHH,UHV,UHX	FT	V
226	478	PAOZZ	5935-00-226-1846	77820	PT00E20-27S	..CONNECTOR,RECEPTACL ELECTRICAL U/O PN 205-075-425-19 ....UHE,UHH,UHV,UHX	EA	1
226	479	AOOOZ	1560-00-567-3013	97499	205-075-407-21	.CABLE ASSY,MAIN GENERATOR U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	479	AOOOZ	1560-00-570-5276	97499	205-075-420-7	.CABLE ASSY,MAIN GENERATOR U/O PN 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, -15, 205-075-036-1,-3,-7, -9,& -11.................UHE,UHH,UHV,UHX	EA	1
226	480	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 205-075-407-21.........UHE,UHH,UHV,UHX	EA	1
226	481	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG................................UHE,UHH,UHV,UHX	EA	1
226	482	PAOZZ	5940-01-079-1375	81349	M7928/5-4	..SPLICE,CONDUCTOR U/O PN 205-075-407-21.....UHE,UHH,UHV,UHX	EA	1
226	483	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL..............................UHE,UHH,UHV,UHX	FT	V
226	484	AOOOZ	1560-00-987-5255	97499	205-075-407-3	.CABLE ASSY, FIRE DETECTOR...................UHE,UHH,UHV,UHX	EA	1
226	485	PAOZZ	5365-00-598-5417	969C3	MS3420-3	..BUSHING,RUBBER...............................UHE,UHH,UHV,UHX	EA	4
226	486	PAOZZ	5365-00-141-5944	88044	AN3420-8	..BUSHING,RUBBER...............................UHE,UHH,UHV,UHX	EA	1
226	487	PAOZZ	5935-00-028-3613	96906	MS3057-3A	..CLAMP,CABLE CONNECTOR.......................UHE,UHH,UHV,UHX	EA	4
226	488	XDOZZ		96906	MS3057-8A	..CLAMP,CABLE..................................UHE,UHH,UHV,UHX	EA	1
226	489	PAOZZ	5935-00-255-1865	97499	30-031-16	..CLAMP,CABLE,ELECTRI.........................UHE,UHH,UHV,UHX	EA	1
226	490	XDOZZ		96906	MS3406K8S1S	..CONNECTOR,PLUG,ELEC.........................UHE,UHH,UHV,UHX	EA	4
226	490A	PAOZZ	5935-00-630-5729	96906	MS3456K8S1S	..CONNECTOR,PLUG,ELEC.........................UHE,UHH,UHV,UHX	EA	4
226	491	PBOZZ	5935-00-993-6268	96906	MS3108K16S1P	..CONNECTOR,PLUG,E.............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
226	492	PAOZZ	5935-00-626-3140	96906	MS3450W16S1P	..CONNECTOR,RECEPTACL UHE,UHH,UHV,UHX	EA	1
226	492A	PAOZZ	6145-00-635-9867	96906	MS27125-18	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	493	AOOOZ	1560-00-567-3014	97499	205-075-407-23	.CABLE ASSY,ICE DETECTOR U/O PN 205-075-006-1 UHE,UHH,UHV,UHX	EA	1
226	493	AOOOZ	1560-00-871-8654	97499	205-075-420-15	.CABLE ASSY,ICE DETECTOR USBL EFF 62-2106 THRU 65-9810 UHE,UHH,UHV,UHX	EA	1
226	493	AOOOZ	1560-00-567-3071	97499	205-075-420-9	.CABLE ASSY,ICE DETECTOR U/O PN 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-032-1,-3,-9,-13, -15,205-075-036-1,-3,-7, -9,& -11 UHE,UHH,UHV,UHX	EA	1
226	494	PAOZZ	5935-00-644-5143	96906	MS3456W14S7S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-420-15 UHE,UHH,UHV,UHX	EA	1
225	495	PAOZZ	5935-00-878-3609	96906	MS3106R14S2SX	..CONNECTOR,PLUG,ELEC U/O PN 205-075-407-23 & 205-075-420-9 UHE,UHH,UHV,UHX	EA	1
226	496	XDOZZ		97499	30-051R14S2SX	..CONNECTOR BODY,PLUG UHE,UHH,UHV,UHX	EA	1
226	496	PAOZZ	5935-00-630-5728	96906	MS3456W14S2SX	..CONNECTOR,PLUG,ELEC UHE,UHH,UHV,UHX	EA	1
226	497	PAOZZ	5935-00-517-8518	96906	MS3451W14S2PX	..CONNECTOR,PLUG,ELEC ENG.ICE DET C/A CONN U/O PN 205-075-420-15 UHE,UHH,UHV,UHX	EA	1
226	498	PAOZZ	5935-00-062-0231	77820	10-214614-2S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-420-15 UHE,UHH,UHV,UHX	EA	1
226	498	PAOZZ	5935-00-622-2831	96906	MS3456W14S2S	..CONNECTOR,PLUG,ELEC UHE,UHH,UHV,UHX	EA	1
226	499	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE U/O PN 205-075-420-15 UHE,UHH,UHV,UHX	EA	1
226	500	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 205-075-407-23 & 205-075-420-9 UHE,UHH,UHV,UHX	EA	1
226	501	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-407-23 & 205-075-420-9 UHE,UHH,UHV,UHX	FT	1
226	502	PAOZZ	5365-00-820-4535	88044	AN3420-6	..BUSHING,RUBBER U/O PN 205-075-407-23 & 205-075-420-9 UHE,UHH,UHV,UHX	EA	2
226	503	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O PN 205-075-407-23 UHE,UHH,UHV,UHX	FT	V
226	504	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	505	AO[illegible]		97499	205-075-434-11	.CABLE ASSY,ENGINE AIR DIFFERENTIAL PRESSURE SWITCH U/O PN 205-075-032-9,205-075-036-1,-3,-7,-9 & -11 UHE,UHH,UHV,UHX	EA	1
226	506	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	1
226	507	PBOZZ	5940-00-636-7098	96906	MS25189-102	..TERMINAL,LUG UHE,UHH,UHV,UHX	FT	V
226	508	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR UHE,UHH,UHV,UHX	EA	1
226	509	PAOZZ	5935-00-687-1135	96906	MS3100R10SL3S	..CONNECTOR,RECEPTACL UHE,UHH,UHV,UHX	EA	1
226	510	PAOZZ	5940-00-683-4282	97499	30-010-1	..SPLICE,CONDUCTOR UHE,UHH,UHV,UHX	EA	1
226	511	AOOOZ	1560-00-987-5282	97499	205-075-405-5	.CABLE ASSY,STARTER GENERATOR DISCONNECT U/O PN 205-075-006-1 UHE,UHH,UHV,UHX	EA	1
226	511	AOOOZ	1560-00-567-3006	97499	205-075-405-11	.CABLE ASSY,STARTER GENERATOR DISCONNECT U/O PN 205-075-008-1,-3,-5, 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, -15,205-075-036-1,-3,-7, -9,& -11 UHE,UHH,UHV,UHX	EA	1
226	512	PBOZZ	6145-00-578-6597	81349	MIL-W-5087/2	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	513	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
226	514	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	1
226	515	PAOZZ	5940-00-549-9242	00779	322894	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	1
226	516	PAOZZ	5365-00-634-6853	96906	MS3420-24A	..BUSHING,RUBBER U/O PN 205-075-405-11 UHE,UHH,UHV,UHX	EA	1
226	517	PAOZZ	5935-00-280-2192	96906	MS3057-24A	..CLAMP,CABLE,ELECTRI UHE,UHH,UHV,UHX	EA	1
226	518	PAOZZ	5935-00-019-3415	71468	252-0129-000	..ADAPTER CONNECTO UHE,UHH,UHV,UHX	EA	1
226	519	PAOZZ	5935-00-758-1596	96906	MS3450KT36-6S	..CONNECTOR,ELECTRICAL UHE,UHH,UHV,UHX	EA	1
226	520	PBOZZ	5935-00-872-5139	81349	M83723-28-0	..PLUG,END SEAL UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	521	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
226	522	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
226	523	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
226	524	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,&-3..........UHE,UHH,UHV,UHX	EA	2
226	525	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,& -3..........UHE,UHH,UHV,UHX	EA	2
226	526	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON U/O PN 205-075-006-1,205-075-008-1,-3 ,-5,205-075-013-1,& -3 ....UHE,UHH,UHV,UHX	EA	2
226	527	PAOZZ	5945-00-686-6877	96906	MS24166D1	.RELAY,ELECTROMAGNET U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,& -3..........UHE,UHH,UHV,UHX	EA	1
226	528	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,& -3..........UHE,UHH,UHV,UHX	EA	2
226	529	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,& -3..........UHE,UHH,UHV,UHX	EA	2
226	530	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,& -3 ....UHE,UHH,UHV,UHX	EA	2
226	531	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET U/O PN 205-075-006-1,205-075-008-1,-3,-5,205-075-013-1,& -3..........UHE,UHH,UHV,UHX	EA	1
226	532	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
226	533	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
226	534	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	6
226	535	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX EXTENDED WASHER HEXAGON ....UHE,UHH,UHV,UHX	EA	4
226	536	PAOZZ	5325-00-290-6163	96906	MS35489-13	.GROMMET,NONMETALLIC..........UHE,UHH,UHV,UHX	EA	1
226	537	PAOZZ	5935-00-818-1027	18876	8034538-4	.COVER,ELECTRICAL CO..........UHE,UHH,UHV,UHX	EA	1
226	538	AOOOZ	1560-00-567-3012	97499	205-075-407-17	.CABLE ASSY,FUEL TANK DISCONNECT U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	538	AOOOZ	1560-00-567-3070	97499	205-075-420-3	.CABLE ASSY,FUEL TANK DISCONNECT U/O PN 205-075-008-1,-3 & -5..........UHE,UHH,UHV,UHX	EA	1
226	538	AOOOZ	1560-00-869-6327	97499	205-075-420-11	.CABLE ASSY,FUEL TANK DISCONNECT U/O PN 205-075-013-1 & -3 ....UHE,UHH,UHV,UHX	EA	1
226	536	AOOOZ	1560-00-923-7133	97499	205-075-422-7	.CABLE ASSY,FUEL TANK DISCONNECT U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-9,-15 & 205-075-036-1,-3,-7,-9 & -11 ....UHE,UHH,UHV,UHX	EA	1
226	539	PAOZZ	5935-00-924-0457	05209	PC205A10	..CONNECTOR,PLUG,ELEC U/O PN 205-075-422-7 ....UHE,UHH,UHV,UHX	EA	4
226	540	PAOZZ	5935-00-924-0460	05209	PC205F10	..CONNECTOR,PLUG,E U/O PN 205-075-422-7......UHE,UHH,UHV,UHX	EA	4
226	541	PAOZZ	5935-00-600-1890	95712	1-690-1	..CONNECTOR,PLUG,ELEC U/O PN 205-075-407-17, 205-075-420-3,& -11..........UHE,UHH,UHV,UHX	EA	1
226	542	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-422-7..........UHE,UHH,UHV,UHX	EA	10
226	543	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-407-17, 205-075-420-3,& -11 ....UHE,UHH,UHV,UHX	EA	1
226	544	PAOZZ	5935-00-871-5052	95712	1-905-1	..CONNECTOR,PLUG,ELEC U/O PN 205-075-407-17, 205-075-420-3,& -11..........UHE,UHH,UHV,UHX	EA	2
226	545	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	546	PBOZZ	6145-00-836-2241	97499	BS20	..CABLE,SPECIAL PURPO..........UHE,UHH,UHV,UHX	FT	V
226	547	AOOOZ	1560-00-567-3030	97499	205-075-410-5	.CABLE ASSY,CARGO SLING U/O PN 205-075-006-1 ....UHE,UHH,UHV,UHX	EA	1
226	547	AOOOZ	1560-00-567-3033	97499	205-075-410-9	.CABLE ASSY,CARGO SLING U/O PN 205-075-008-1,-3,-5,205-075-013-1,-3 205-075-018-1,-3 205-075-032-1,-3,-9,-13,-15 205-075-036-1, -3, -9, & -11 ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	548	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O PN 205-075-410-9 ....UHE,UHH,UHV,UHX	EA	1
226	549	PBOZZ	5935-00-686-9540	96906	MS3100R14S-7S	..CONNECTOR,RECEPTACL ELECTRICAL CARGO SLING DISC ....UHE,UHH,UHV,UHX	EA	1
226	549	PBOZZ	5935-00-549-3279	96906	MS3450W14S7S	..CONNECTOR,RECEPTACL ELECTRICAL CARGO SLING DISC ....UHE,UHH,UHV,UHX	EA	1
226	550	PAOZZ	5935-00-549-3279	96906	MS3450W14S7S	..CONNECTOR,RECEPTACL..........UHE,UHH,UHV,UHX	EA	1
226	551	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-410-5..........UHE,UHH,UHV,UHX	EA	1
226	552	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
226	553	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-410-9..........UHE,UHH,UHV,UHX	EA	1
226	554	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-410-5..........UHE,UHH,UHV,UHX	EA	2
226	555	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-410-9......UHE,UHH,UHV,UHX	EA	1
226	556	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	1
226	557	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	558	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
226	559	PAOZZ	5365-00-820-4535	88044	AN3420-6	..BUSHING,RUBBER U/O PN 205-075-410-5........UHE,UHH,UHV,UHX	EA	1
226	560	AOOOZ	1560-00-567-3010	97499	205-075-406-9	.CABLE ASSY,HEATER DISCONNECT U/O PN 205-075-006-1, 205-075-008-1,-3,-5, 205-075-013-1,& -3..........UHE,UHH,UHV,UHX	EA	1
226	560	AOOOZ	6150-00-924-0444	97499	205-075-432-3	.CABLE ASSY,HEATER DISCONNECT U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-13,& -15..........UHE,UHH,UHV,UHX	EA	1
226	560	AOOOZ	6150-00-989-0013	97499	205-075-432-17	.CABLE ASSY,HEATER DISCONNECT U/O PN 205-075-032-9, 205-075-036-1,-3,-7,-9,& -11..........UHE,UHH,UHV,UHX	EA	1
226	561	AOOOZ	6150-00-955-9401	97499	205-075-432-1	.CABLE ASSY,HEATER CONTROL U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-13,& -15..........UHE,UHH,UHV,UHX	EA	1
226	561	AOOOZ	6150-00-989-0010	97499	205-075-432-19	.CABLE ASSY,HEATER CONTROL U/O PN 205-075-032-9, 205-075-036-1,-3,-7,-9,& -11..........UHE,UHH,UHV,UHX	EA	1
226	562	PAOZZ	5935-00-422-5243	96906	MS3406R14S5S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-432-1 ....UHE,UHH,UHV,UHX	EA	1
226	563	XDOZZ		77820	PT06E8-2S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-432-19 ....UHE,UHH,UHV,UHX	EA	1
226	563	PAOZZ	5935-01-009-3993	96906	MS3116E8-2S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
226	564	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	..CONNECTOR,PLUG,ELEC HYD BYPASS SOL U/O 205-075-406-9 ....UHE,UHH,UHV,UHX	EA	1
226	565	PAOZZ	5935-00-805-4995	96906	MS3100R32-7S	..CONNECTOR,PLUG,E U/O PN 205-075-406-9......UHE,UHH,UHV,UHX	EA	1
226	566	PAOZZ	5935-00-765-6035	96906	MS3126E12-10P	..CONNECTOR,PLUG,ELEC HEATER DISC. U/O PN 205-075-432-1,-17 ....UHE,UHH,UHV,UHX	EA	1
226	567	PBOZZ	5935-00-774-8146	96906	MS3120E12-10S	..CONNECTOR,RECEPTACL HEATER DISC RECEPT. U/O PN 205-075-432-3,-17..........UHE,UHH,UHV,UHX	EA	1
226	568	PAOZZ	5935-00-988-3546	96906	MS3126E10-6S	..CONNECTOR,PLUG,ELEC VAR MIX VALVE U/O PN 205-075-432-19 ....UHE,UHH,UHV,UHX	EA	1
226	569	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-406-9..........UHE,UHH,UHV,UHX	EA	1
226	569	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-432-3 & -17....UHE,UHH,UHV,UHX	EA	4
226	570	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-406-9 & 205-075-432-19 ....UHE,UHH,UHV,UHX	EA	1
226	570	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-432-3 & -17....UHE,UHH,UHV,UHX	EA	2
226	571	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG U/O PN 205-075-406-9..........UHE,UHH,UHV,UHX	EA	1
226	572	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-406-9......UHE,UHH,UHV,UHX	EA	1
226	572	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR U/O PN 205-075-432-1 & -19 ....UHE,UHH,UHV,UHX	EA	2
226	573	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-406-9......UHE,UHH,UHV,UHX	FT	1

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	574	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL....................UHE,UHH,UHV,UHX	FT	V
226	575	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL....................UHE,UHH,UHV,UHX	FT	V
226	576	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....................UHE,UHH,UHV,UHX	FT	V
226	577	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE....................UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-108-1	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-006-1 SEE FIG.272 & 273 FOR BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-109-1	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-008-1,-3,-5 & 205-075-013-1,& -3 SEE FIG.272 & 273 FOR BREAKDOWN....................UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-112-1	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-018-1 & -3 SEE FIG.273 & 274 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-112-3	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-032-1,-3,-13 & -15SEE FIG.274 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-112-7	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-032-9 SEE FIG.274 FOR BREAKDOWN..............UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-112-9	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-036-1,-3,-7,-9,&-11 SEE FIG.274 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
226	578	XCFZZ		97499	205-075-112-11	.EQUIPMENT INSTL AFT ELECTRICAL COMPARTMENT U/O PN 205-075-036-1,-3,-7,-9,&-11 SEE FIG.274 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
226	579	MFOZZ	DELETED	97499	205-075-151-1	.BRACKET,CONNECTOR U/O PN 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, 205-075-036-1,-3,-7,-9,& -11.......UHE,UHH,UHV,UHX	EA	3
226	580	PAOZZ	5340-00-993-1470	81996	EAB700018	.CLAMP,LOOP....................UHE,UHH,UHV,UHX	EA	1
226	581	PAOZZ	5305-00-984-4989	96906	MS35206-229	.SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	6
226	582	PAOZZ	5305-00-282-2712	88044	AN503-6-8	.SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	2
226	583	AOOOZ	1560-00-906-0278	97499	205-075-410-13	.CABLE ASSY,FILTER NETWORK U/O PN 205-075-013-1,-3, 205-075-018-1,-3, 205-075-032-1,-3,-9,-13, -15,205-075-036-1,-3,-7, -9,& -11....................UHE,UHH,UHV,UHX	EA	1
226	584	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG....................UHE,UHH,UHV,UHX	EA	1
226	585	PAOZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR....................UHE,UHH,UHV,UHX	EA	1
226	586	XDOZZ		97499	85T4-7-2	..INSULATION TUBE....................UHE,UHH,UHV,UHX	FT	2
226	587	PAOZZ	5915-00-878-0340	80183	JN14-1600B	..FILTER NETWORK....................UHE,UHH,UHV,UHX	EA	1
226	588	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....................UHE,UHH,UHV,UHX	FT	V
226	589	PAOZZ	5340-00-514-3009	88044	AN735D43	.CLAMP,LOOP....................UHE,UHH,UHV,UHX	EA	1
226	590	PAOZZ	5325-00-174-5314	96906	MS35489-5	.GROMMET,NONMETALLIC....................UHE,UHH,UHV,UHX	EA	1
226	591	PBOZZ	5935-00-990-5580	96906	MS3181-14N	.COVER,ELECTRICAL CO....................UHE,UHH,UHV,UHX	EA	2
226	592	PAOZZ	5305-00-958-0585	96906	MS35207-273	.SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	1
226	593	PAOZZ	5365-00-825-8562	80205	NAS43D03-132	.SPACER,SLEEVE....................UHE,UHH,UHV,UHX	EA	1
226	594	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	1
226	595	PAOZZ	5305-00-984-5193	96906	MS35206-245	.SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	3
226	596	PAOZZ	5310-00-167-0833	88044	AN960-8L	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	4
226	597	PAOZZ	5310-00-167-0832	88044	AN960-6L	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	4
226	598	XDOZZ		88044	AN500A4-8	.SCREW,MACHINE....................UHE,UHH,UHV,UHX	EA	1
226	599	PAOZZ	5310-00-167-0831	88044	AN960-4L	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	4
226	600	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
226	601	PAOZZ	5325-00-184-9846	96906	MS35489-10	.GROMMET,NONMETALLIC....................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	602	PAOZZ	5325-00-174-5316	96906	MS35489-2	.GROMMET,NONMETALLIC.........UHE,UHH,UHV,UHX	EA	1
226	603	PAOZZ	5325-00-263-6651	96906	MS35489-12	.GROMMET,NONMETALLIC.........UHE,UHH,UHV,UHX	EA	1
226	604	PAOZZ	5325-00-290-6163	96906	MS35489-13	.GROMMET,NONMETALLIC.........UHE,UHH,UHV,UHX	EA	1
226	605	PAOZZ	5325-00-276-6089	96906	MS35489-16	.GROMMET,NONMETALLIC.........UHE,UHH,UHV,UHX	EA	1
226	606	PAOZZ	5325-00-276-6343	96906	MS35489-23	.GROMMET,NONMETALLIC.........UHE,UHH,UHV,UHX	EA	1
226	607	MFOZZ	DELETED	97499	205-075-133-1	.BRACKET ASSEMBLY U/O PN 205-075-006-1.......UHE,UHH,UHV,UHX	EA	1
226	608	XCFZZ		97499	205-075-115-1	.BATTERY INSTL U/O PN 205-075-018-1,-3 & 205-075-032-1,-3,-9,-13,-15 & 205-075-036-1,-3,-7,-9 & -11 SEE FIG.269 FOR BREAKDOWN.........UHE,UHH,UHV,UHX	EA	1
226	608	XCFZZ		97499	205-075-140-1	.INVERTER INSTL MAIN & SPARE U/O PN 205-075-006-1 SEE FIG. 265 FOR BREAKDOWN.........UHE,UHH,UHV,UHX	EA	1
226	609	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
226	610	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
226	611	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
226	612	PAO"Z	5365-00-294-0580	80205	NAS43DD3-48	.SPACER,SLEEVE.........UHE,UHH,UHV,UHX	EA	1
226	613	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
226	614	PAOZZ	5310-00-905-8434	96906	MS21083B3	.NUT,SELF-LOCKING,HE HEXAGON.........UHE,UHH,UHV,UHX	EA	1
226	615	PAOZZ	5905-00-901-8942	81349	RW22V6R8	.RESISTOR,FIXED,WIRE.........UHE,UHH,UHV,UHX	EA	1
226	616	MOOZZ	DELETED	97499	85T4-1-27	.INSULATION SLEEVING U/O PN 205-075-013-1....UHE,UHH,UHV,UHX	EA	1
226	617	MOOZZ	DELETED	97499	85T4-2-27	.INSULATION SLEEVING U/O PN 205-075-013-1....UHE,UHH,UHV,UHX	FT	1
226	618	PAOZZ	5340-00-570-5385	06840	10-101964-141	.CAP,PROTECTIVE,DUST.........UHE,UHH,UHV,UHX	EA	1
226	619	PBOZZ	5310-00-596-7691	96906	MS35335-18	.WASHER,LOCK.........UHE,UHH,UHV,UHX	EA	1
226	620	PAOZZ	5310-00-934-9758	96906	MS35649-202	.NUT,PLAIN,HEXAGON.........UHE,UHH,UHV,UHX	EA	1
226	621	PAOZZ	5365-00-825-7845	80205	NAS43DD3-53	.SPACER,SLEEVE.........UHE,UHH,UHV,UHX	EA	1
226	622	PAOZZ	2925-00-552-5747	88937	44HY26254	.SWITCH,ROTARY LOCK.........UHE,UHH,UHV,UHX	EA	1
226		XCFZZ		20309	ES-D-221681	AC CIRCUIT BREAKER SEE FIG.58 FOR NHA.........UHX	EA	1
226	623	PAOZZ	5305-00-059-3659	96905	MS51958-63	.SCREW,MACHINE.........UHX	EA	4
226	624	PAOZZ	5310-00-809-8546	96906	MS27183-8	.WASHER,FLAT.........UHX	EA	4
226	625	XDOOO		20309	ES-D-221692	.ASSEMBLY,TRANSFORME.........UHX	EA	1
226	626	XDOZZ		20309	ES-D-221693	..SUPPORT,TRANSFORMER.........UHX	EA	1
226	627	XDOZZ		20309	ES-D-221693-1	...SUPPORT.........UHX	EA	1
226	628	XDOZZ		20309	ES-D-221693-2	...STIFFENER R/H.........UHX	EA	1
226	629	XDOZZ		20309	ES-D-221693-3	...STIFFENER L/H.........UHX	EA	1
226	630	XDOZZ		20309	ES-B-221694	..SHIELD.........UHX	EA	1
226	631	PAOZZ	5305-00-054-6670	96906	MS51957-45	..SCREW,MACHINE.........UHX	EA	4
226	632	PAOZZ	5310-00-811-3494	96906	MS21044N08	..NUT,SELF-LOCKING,HE.........UHX	EA	4
226	633	PAOZZ	5310-00-809-8544	96906	MS27183-7	..WASHER,FLAT.........UHX	EA	8
226	634	XDOZZ		20309	ES-C-221695	..MOUNT.........UHX	EA	1
226	635	PAOZZ	5940-00-907-5939	96906	MS18029-21	..NUT ASSEMBLY.........UHX	EA	4
226	636	PAOZZ	5365-00-252-4721	96906	MS16624-1040	..RING,RETAINING.........UHX	EA	4
226	637	PAOZZ	5310-00-081-8087	96906	MS21044N06	..NUT,SELF-LOCKING,HE.........UHX	EA	4
226	638	PAOZZ	5310-00-983-8483	96906	MS27183-5	..WASHER,FLAT.........UHX	EA	4
226	639	XDOZZ		20309	ES-C-221702	.NAMEPLATE.........UHX	EA	1
226	640	XDOZZ		20309	ES-C-221703	.NAMEPLATE,AC BREAKE.........UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226	641	XDOZZ		96906	MS22074-3	.CIRCUIT BREAKER	UHX	EA	1
226	642	PAOZZ		96906	MS22074-1	.CIRCUIT BREAKER	UHX	EA	1
226	643	PAOZZ	5940-00-143-4771	96906	MS25036-103	.TERMINAL,LUG	UHX	EA	1
226	644	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL,LUG	UHX	EA	10
226	645	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC	UHX	EA	1
226	646	XDOZZ		57771	D3161	.HOLE PLUG,BRASS	UHX	EA	3
226	647	PBOZZ	5940-00-132-2768	96906	MS27212-1-3	..BOARD,TERMINAL	UHE,UHH,UHV,UHX	EA	2
226	648	PBOZZ	1650-00-600-6258	96906	MS25226-2-2	..TERMINAL STRIP	UHE,UHH,UHV,UHX	EA	1
226	649	PBOZZ	5940-00-907-5939	96906	MS18029-12S-3	..COVER,TERMINAL	UHE,UHH,UHV,UHX	EA	2
226	650	PAOZZ	5940-00-907-5939	96906	MS18029-21	..COVER,NUT	UHE,UHH,UHV,UHX	EA	4
226	651	PAOZZ	5305-00-993-1848	96906	MS35207-265	..SCREW	UHE,UHH,UHV,UHX	EA	4
226	652	PAOZZ	5310-00-934-0751	96906	MS35650-302	..NUT,FLAT	UHE,UHH,UHV,UHX	EA	4
226	653	PAOZZ	5310-00-596-7691	96906	MS35335-32	..WASHER,LOCKING	UHE,UHH,UHV,UHX	EA	4
226	654	PAOZZ	5310-00-902-6676	96906	MS21083N3	..NUT,SELF-LOCKING	UHE,UHH,UHV,UHX	EA	8
226	655	PAOZZ	5940-01-191-7099	78076	20-032-1	..BRACKET	UHE,UHH,UHV UHX	EA	2
226	656	PAOZZ	5340-00-291-5353	96906	MS21919WDG2	..CLAMP	UHE,UHH,UHV,UHX	EA	2
226	657	PAOZZ	5305-00-944-5929	96906	MS25039-1-07	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4

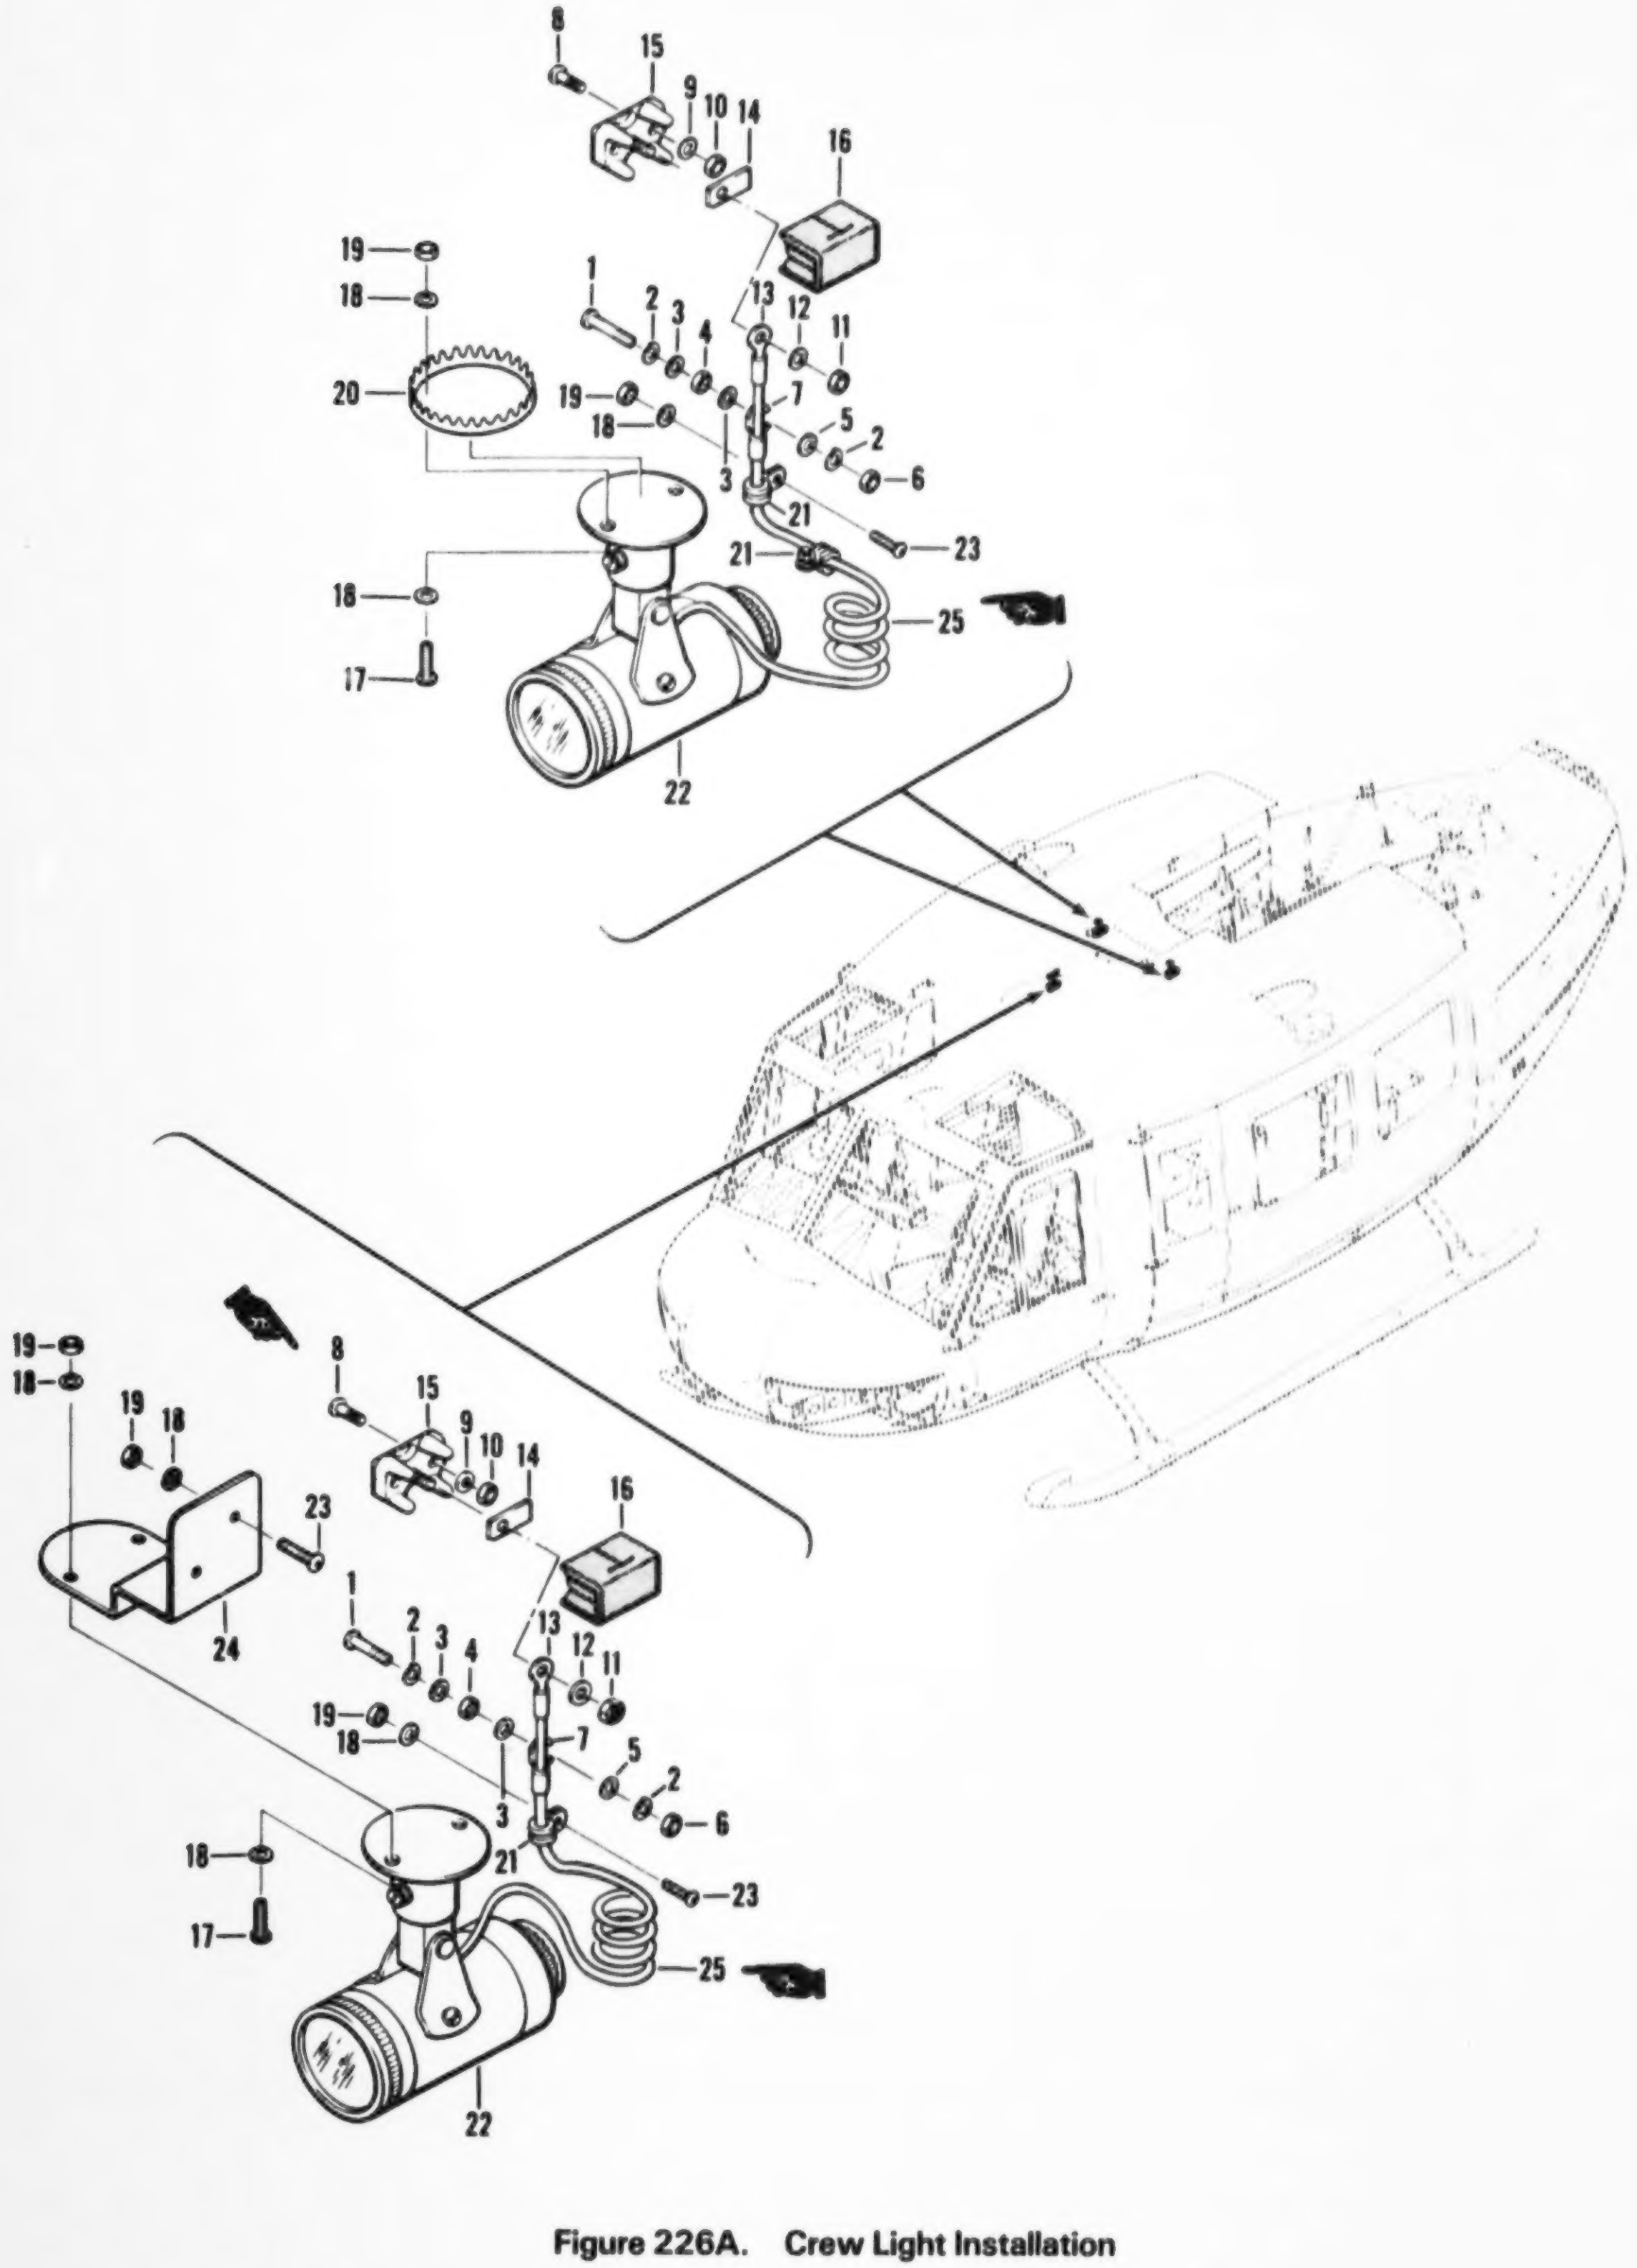
8
15
9
10
14
16
19
18
20
1
2
3
4
13
12
11
19
18
7
5
2
6
3
21
23
21
25
18
17
22
19
18
19
18
8
15
9
10
14
16
23
24
1
2
3
4
13
12
11
19
18
7
5
2
6
3
21
23
18
17
25
22

Figure 226A. Crew Light Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS			
226A		XCFZZ		20309	ES-F-220165	CREW LIGHT SEE FIG.5A FOR NHA	UHE	EA	1
226A	1	PAOZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE	UHE	EA	3
226A	2	PAOZZ	5310-00-045-3299	96906	MS35338-42	.WASHER,LOCK	UHE	EA	6
226A	3	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT	UHE	EA	6
226A	4	PAOZZ	5310-00-934-9757	96906	MS35649-282	.NUT,SELF,LOCKING	UHE	EA	3
226A	5	PAOZZ	5310-00-515-8058	88044	AN960-8	.WASHER,FLAT	UHE	EA	6
226A	6	PAOZZ	5310-00-857-5564	96906	MS21045L08	.NUT,SELF,LOCKING	UHE	EA	3
226A	7	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL,LUG	UHE	EA	3
226A	8	PAOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE	UHE	EA	6
226A	9	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT	UHE	EA	6
226A	10	PAOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE	UHE	EA	6
226A	11	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF,LOCKING	UHE	EA	3
226A	12	PAOZZ	5310-00-135-1472	88044	AN961-6T	.WASHER,FLAT	UHE	EA	3
226A	13	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL,LUG	UHE	EA	3
226A	14	PAOZZ	5970-00-426-1583	96906	MS3373-A1	.INSULATOR,WASHER	UHE	EA	6
226A	15	MFOZZ		96906	MS27212-1-1	.TERMINAL,BOARD	UHE	EA	3
226A	16	XDOZZ		97151	63647001-1	.COVER	UHE	EA	3
226A	17	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE	UHE	EA	6
226A	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHX	EA	20
226A	19	PAOZZ		96906	MS21045L3	.NUT	UHE,UHX	EA	10
226A	20	PAOZZ	5325-00-027-0321	96906	MS21266-1N	.GROMMET,NONMETALLIC	UHE	EA	2
226A	21	PAOZZ	5340-01-069-1794	96906	MS21122W3	.CLAMP,LOOP	UHE	EA	4
226A	22	PAOZZ	6220-00-349-9294	96906	MS17245-5A	.LIGHT,COCKPIT	UHE	EA	3
226A	23	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE	EA	4
226A	24	MFOZZ		20309	ES-B-220112	.BRACKET	UHE	EA	1
226A	25	PAOZZ	6220-00-169-1502	72914	B7041-6	.CORD ASSEMBLY,ELECT	UHE	EA	3

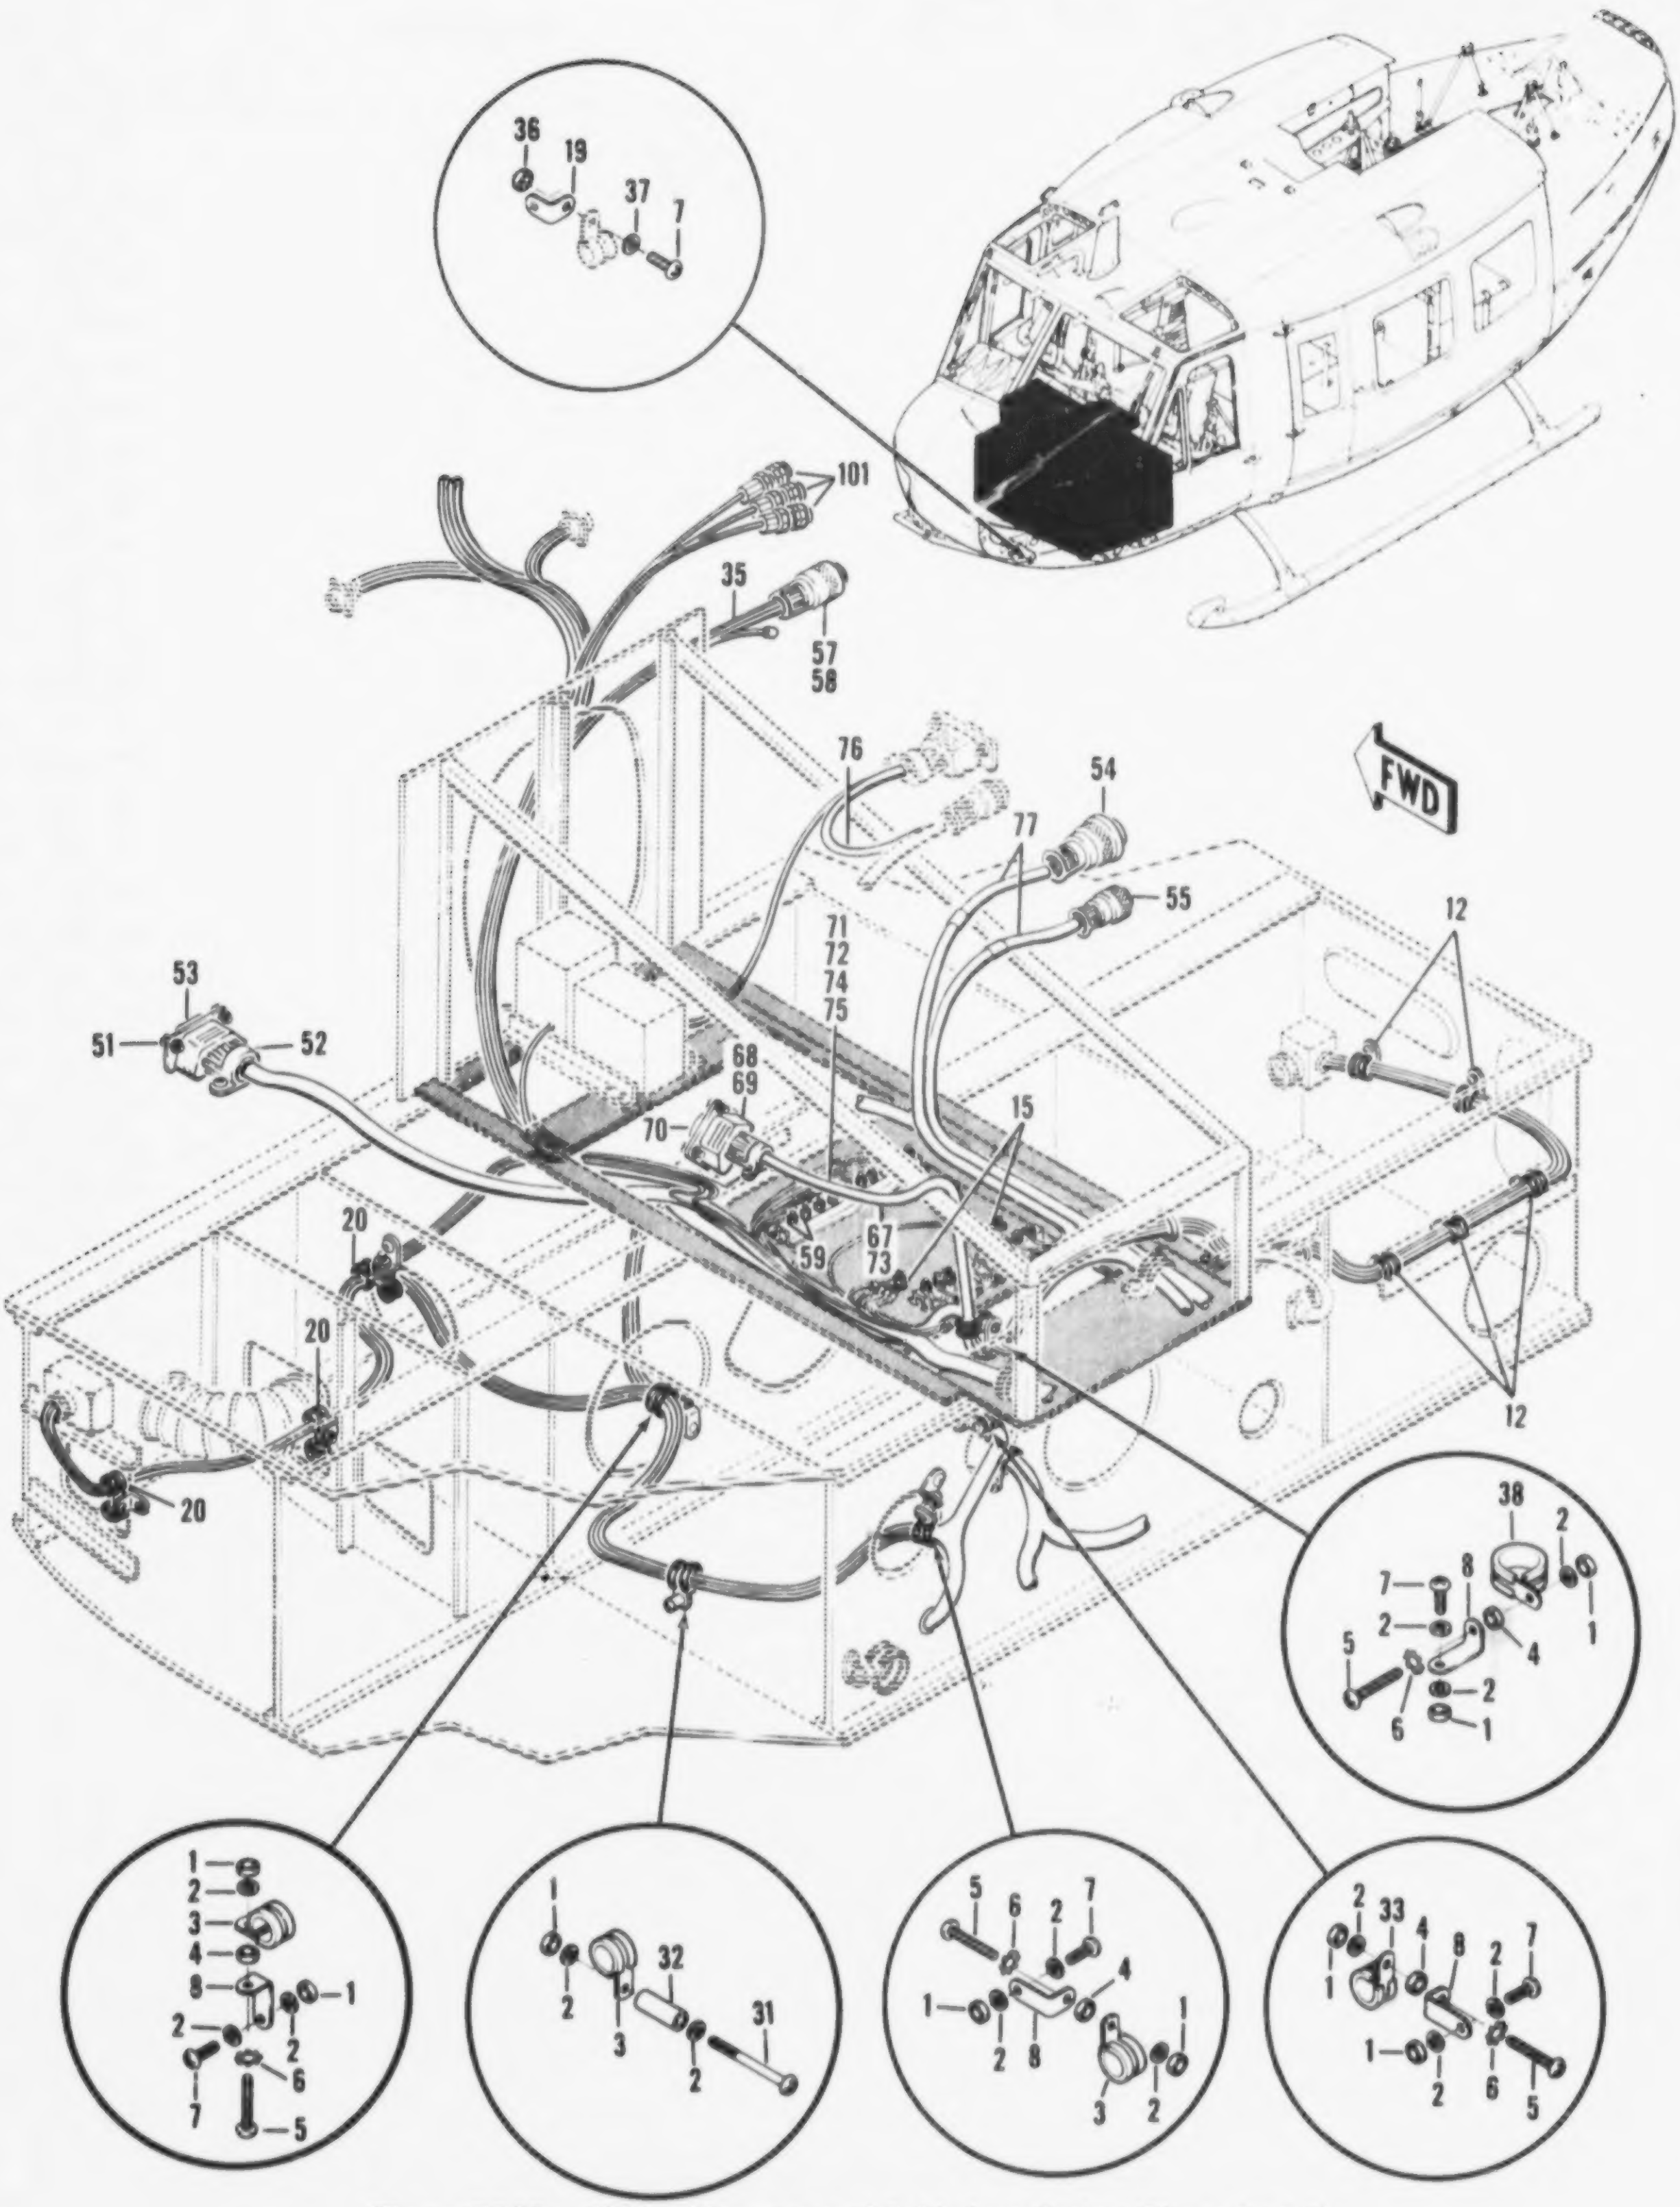
36
19
37
7
101
35
57
58
76
54
77
55
FWD
12
53
51
52
71
72
74
75
68
69
70
15
67
73
59
20
20
20
12
38
2
7
8
2
4
1
5
2
6
1
1
2
3
4
8
1
2
2
6
7
5
1
32
2
3
31
2
5
6
2
7
4
1
2
8
1
3
2
2
33
4
8
2
7
1
1
2
6
5

Figure 226B. Wiring Harness and Cable Installation (Sheet 1 of 4)

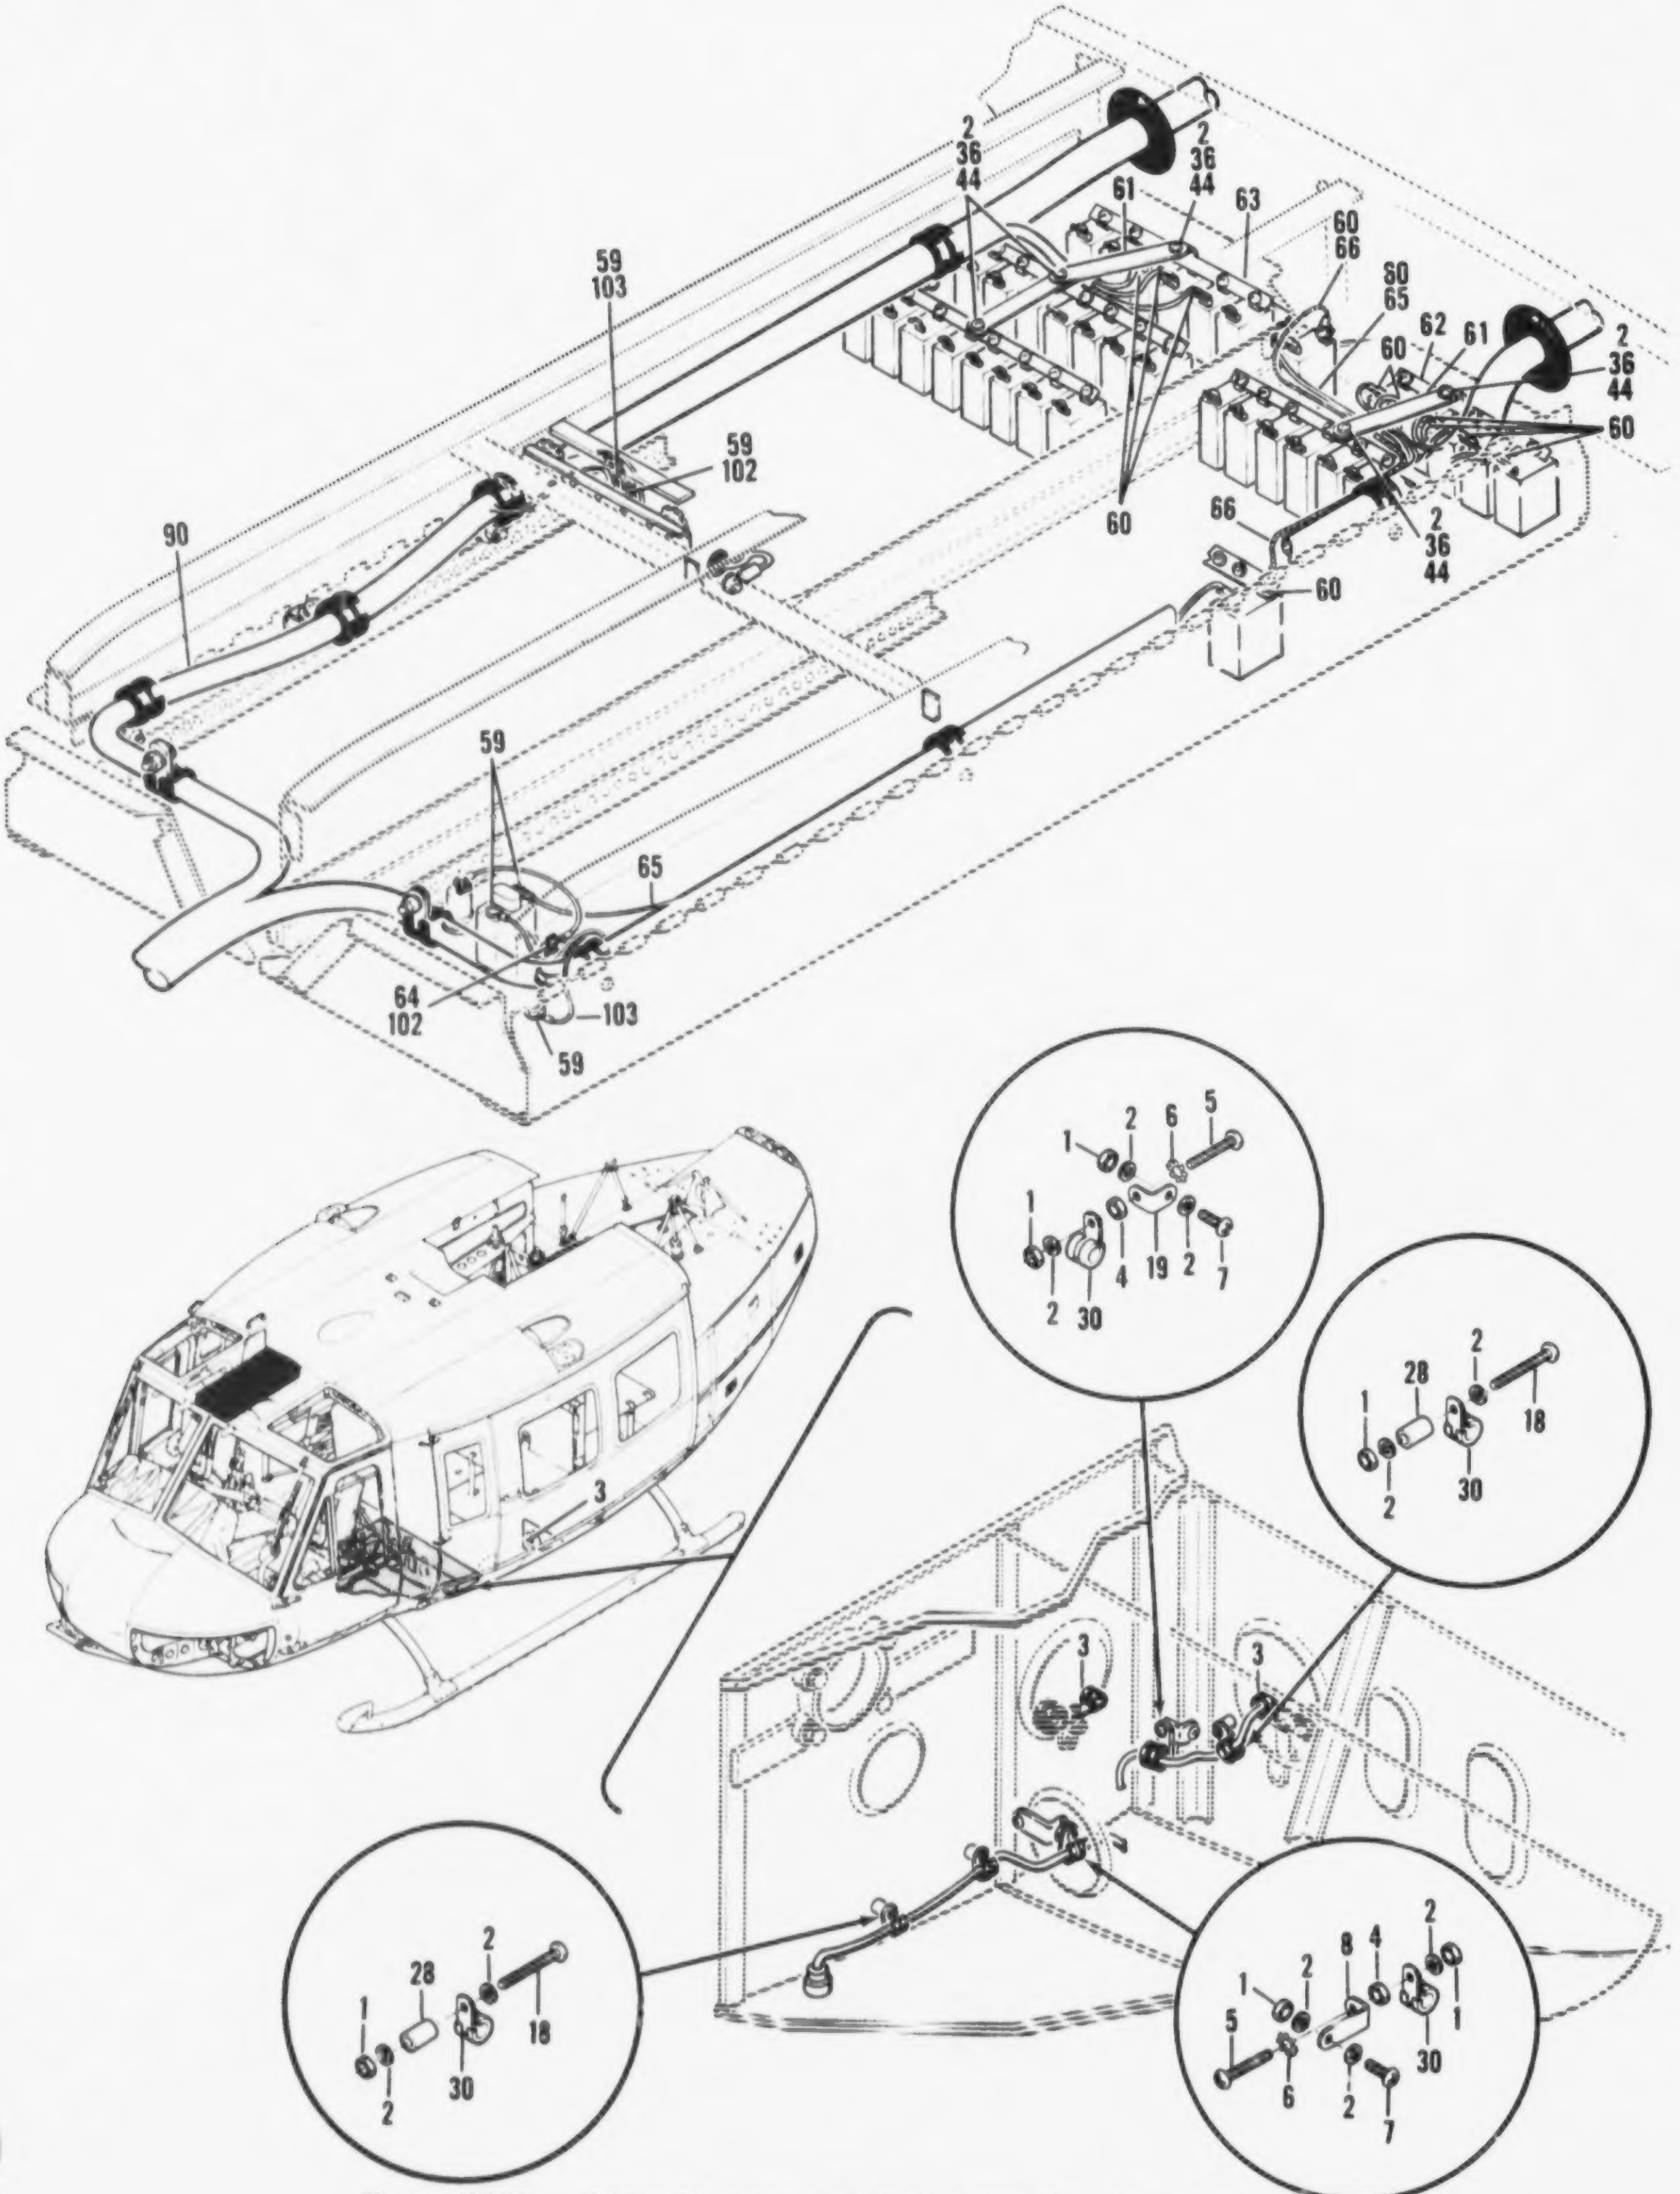
2
36
44
2
36
44
61
63
60
66
59
103
60
65
62
61
60
2
36
44
60
59
102
60
90
66
2
36
44
60
59
65
64
102
103
59
1
2
6
5
1
4
19
2
7
2
30
2
28
1
18
2
30
3
3
3
2
28
1
18
2
30
1
2
8
4
2
5
6
2
7
30
1

Figure 226B. Wiring Harness and Cable Installation (Sheet 2 of 4)

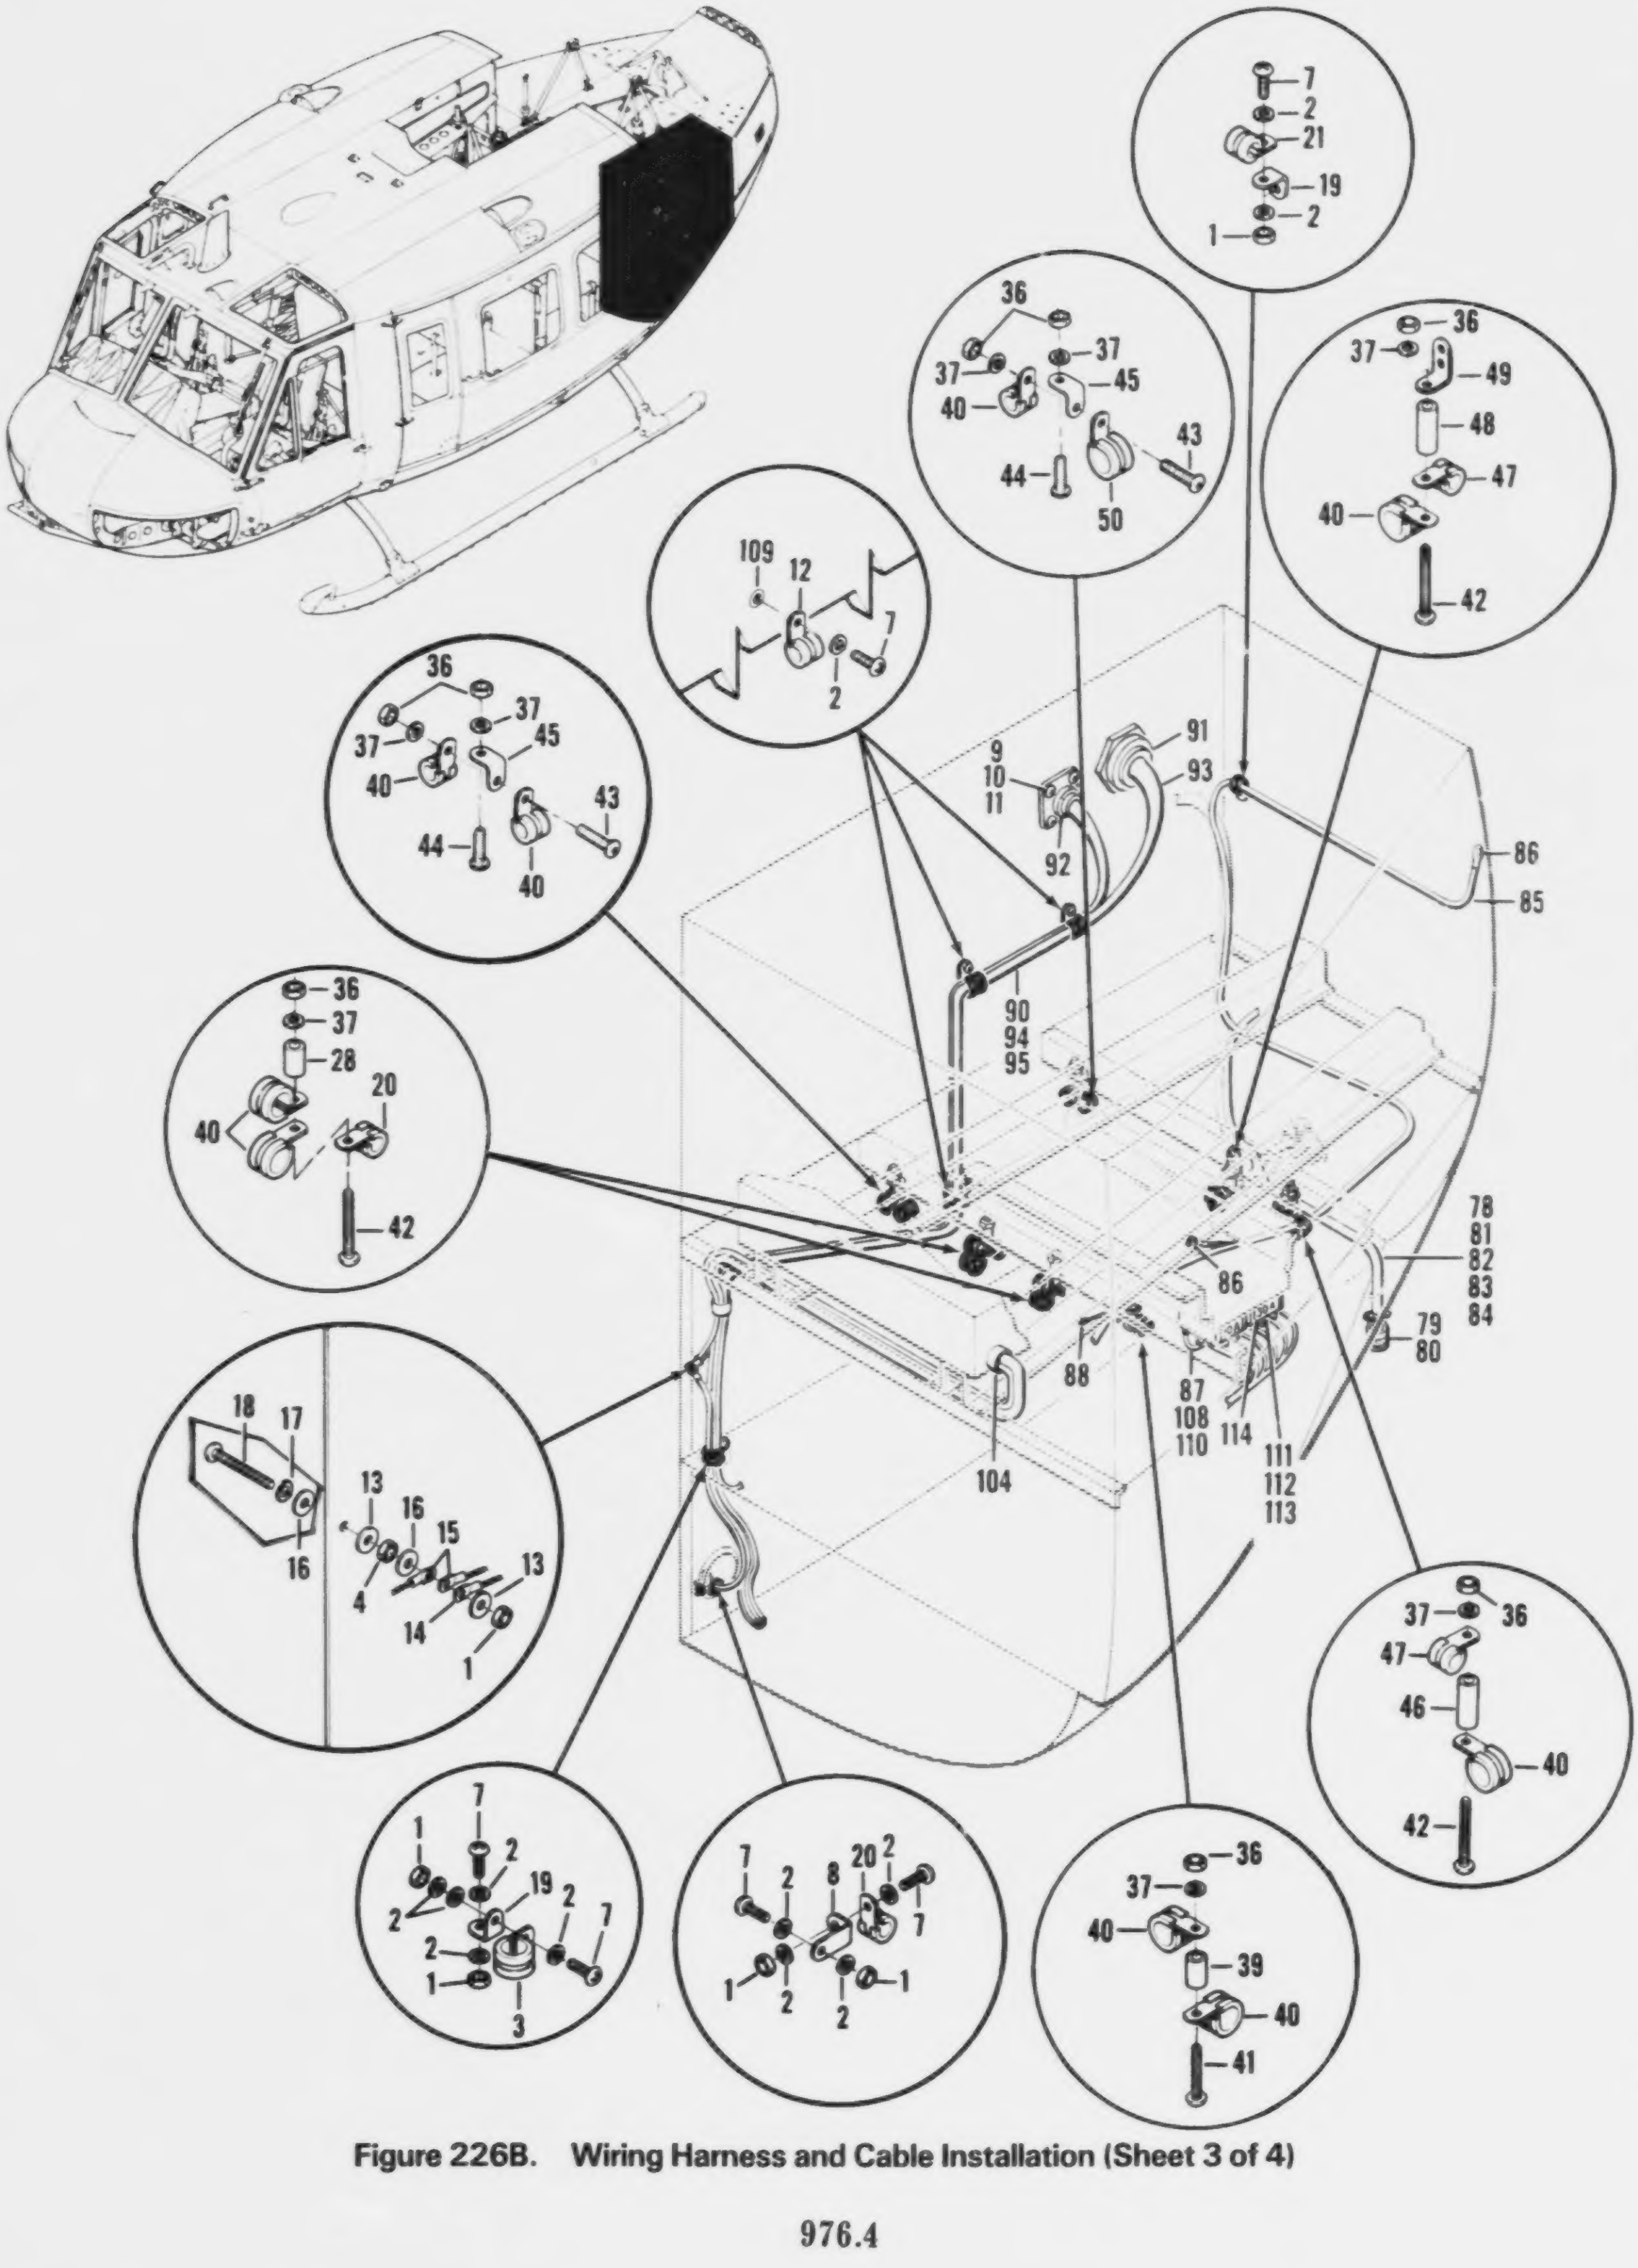
7
2
21
19
2
1
36
37
45
37
40
43
44
50
36
37
49
48
47
40
42
109
12
7
2
36
37
45
37
40
43
44
40
9
10
11
91
93
92
86
85
90
94
95
36
37
28
20
40
42
78
81
82
83
84
79
80
86
88
87
108
110
114
111
112
113
104
18
17
16
13
16
15
13
4
14
1
36
37
47
46
40
42
1
7
2
19
2
2
7
2
1
3
7
2
8
20
2
7
1
2
2
1
36
37
40
39
40
41

Figure 226B. Wiring Harness and Cable Installation (Sheet 3 of 4)

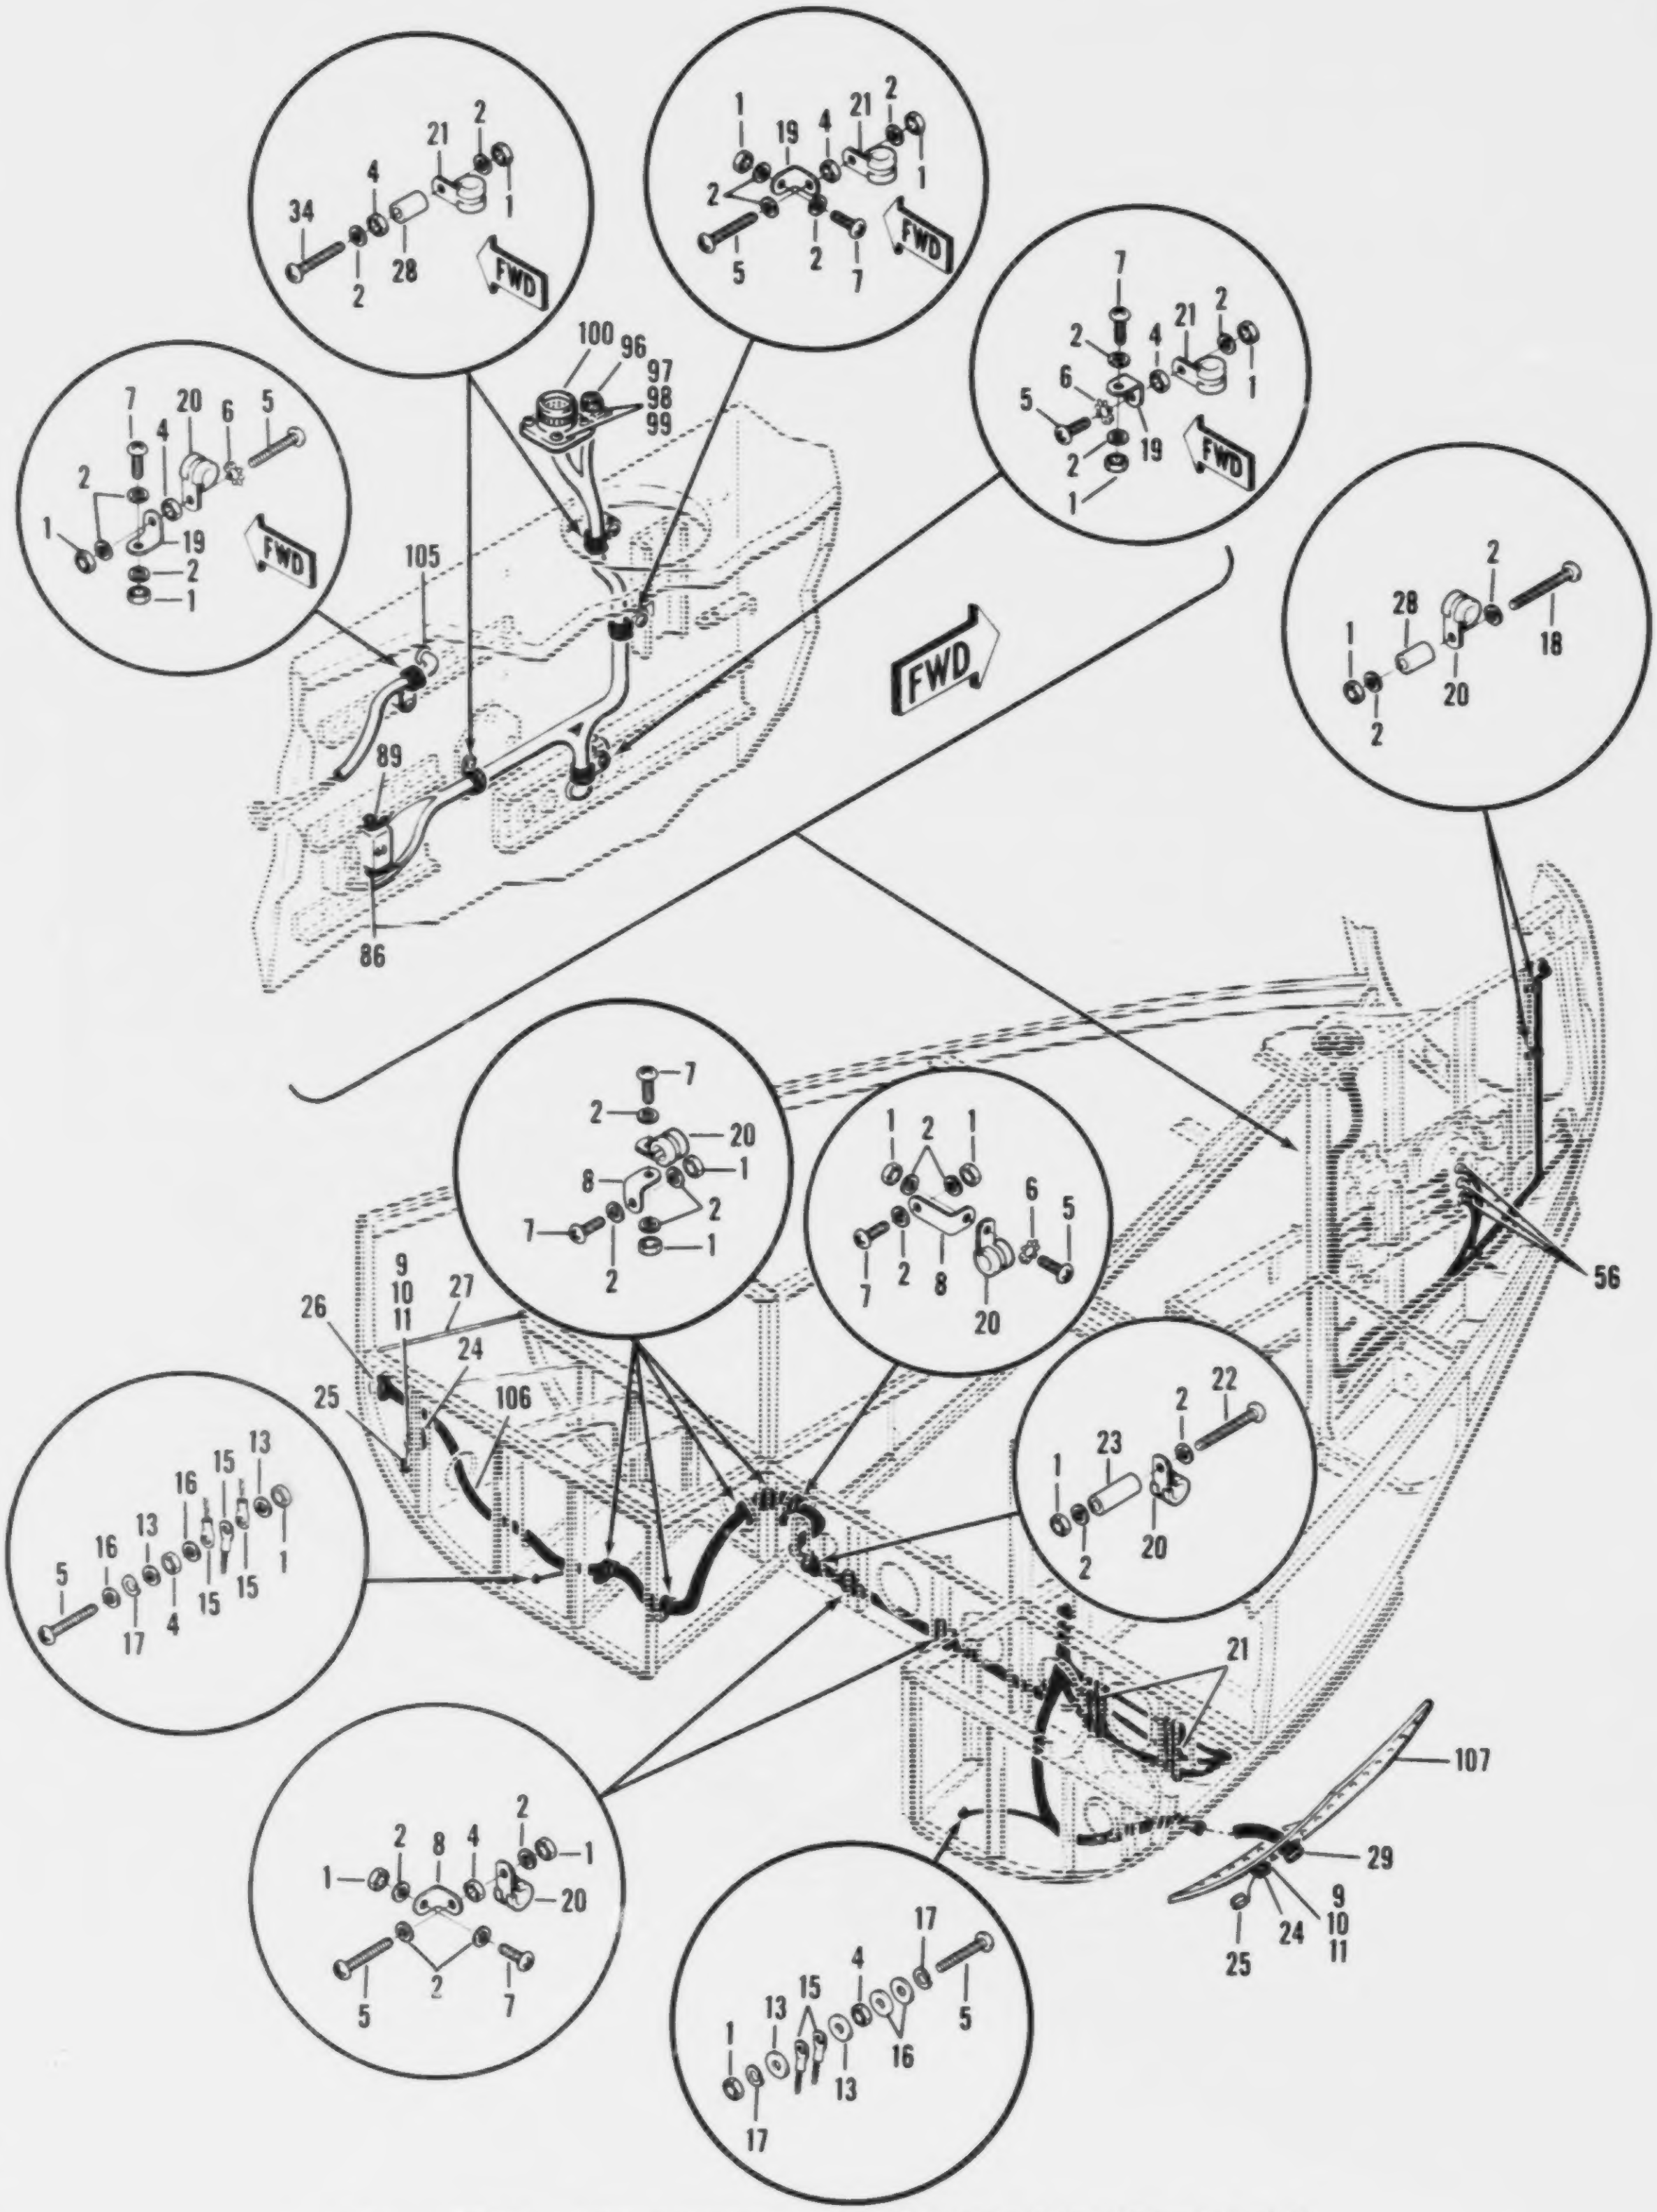
34
4
21
2
1
2
28
FWD
1
19
4
21
2
2
1
5
2
7
FWD
100
96
97
98
99
7
2
6
4
21
2
1
5
19
2
1
FWD
7
20
6
5
2
4
1
19
2
1
FWD
105
FWD
89
86
2
28
1
18
20
2
7
2
20
8
1
7
2
1
2
1
2
1
6
5
7
2
8
20
56
9
10
11
27
26
24
25
106
13
15
16
13
5
16
4
15
15
1
17
2
22
23
1
2
20
21
107
2
8
4
2
1
1
20
5
2
7
29
9
10
11
24
25
17
4
15
13
5
16
1
13
17

Figure 226B. Wiring Harness and Cable Installation (Sheet 4 of 4)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
226B		XCFZZ		20309	ES-F-221290	WIRE HARNESS AND CABLE INSTL.FUSELAGE,SEE FIG.5B FOR NHA .... UHX	EA	1
226B	1	PAOZZ	5310-00-857-4945	96906	MS21045L3	.NUT,SELF-LOCKING,HE........ UHX	EA	45
226B	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........ UHX	EA	77
226B	3	PAOZZ	5340-00-598-4201	96906	MS21919DG11	.CLAMP,LOOP........ UHX	EA	7
226B	4	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON........ UHX	EA	14
226B	5	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE........ UHX	EA	9
226B	6	PAOZZ	5310-00-596-7691	96906	MS35335-32	.WASHER,LOCK........ UHX	EA	9
226B	7	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........ UHX	EA	25
226B	8	XDOZZ		20309	ES-B-220311-1	.BRACKET,ANGLE........ UHX	EA	12
226B	9	PAOZZ	5310-00-934-9734	96906	MS35650-342	.NUT,PLAIN,HEXAGON........ UHX	EA	9
226B	10	PAOZZ	5310-00-782-1349	96906	MS15795-804	.WASHER,FLAT........ UHX	EA	9
226B	11	PAOZZ	5305-00-889-2998	96906	MS35206-216	.SCREW,MACHINE........ UHX	EA	9
226B	12	PAOZZ	5340-00-205-6302	96906	MS21919DG5	.CLAMP,LOOP........ UHX	EA	5
226B	13	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT........ UHX	EA	5
226B	14	PAOZZ	5940-00-143-4780	96906	MS25036-108	.TERMINAL,LUG........ UHX	EA	1
226B	15	PAOZZ	5940-00-143-4771	96905	MS25036-103	.TERMINAL,LUG........ UHX	EA	10
226B	16	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........ UHX	EA	6
226B	17	PAOZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK........ UHX	EA	4
226B	18	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE........ UHX	EA	5
226B	19	XDOZZ		20309	ES-B-220311-2	.BRACKET,ANGLE........ UHX	EA	5
226B	20	PAOZZ	5340-00-052-9552	96906	MS21104DW3	.CLAMP,LOOP........ UHX	EA	18
226B	21	PAOZZ	5340-00-543-4394	96906	MS21919DG6	.CLAMP,LOOP........ UHX	EA	8
226B	22	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE........ UHX	EA	1
226B	23	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE........ UHX	EA	1
226B	24	PAOZZ	5935-00-947-1036	96906	MS3115-14A	.DUMMY CONNECTOR,REC........ UHX	EA	2
226B	25	PAOZZ	5935-00-990-5580	96906	MS3181-14N	.COVER,ELECTRICAL CO........ UHX	EA	2
226B	26	PAOZZ		96906	MS3474W14-19SW	.CONNECTOR,RECEPTACL........ UHX	EA	1
226B	26	PAOZZ	5935-00-912-9362	96906	MS3124E14-19SW	.CONNECTOR,RECEPTACL........ UHX	EA	1
226B	27	MFOZZ		20309	ES-D-221175-1	.PANEL M/F 1560009910340 AND 9535000844413........ UHX	EA	1
226B	28	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE........ UHX	EA	6
226B	29	PAOZZ	5935-01-106-1712	96906	MS3474W14-19S	.CONNECTOR,RECEPTACL........ UHX	EA	1
226B	30	XDOZZ	5340-00-106-0555	96906	MS21104DW2	.CLAMP,LOOP........ UHX	EA	4
226B	31	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE........ UHX	EA	1
226B	32	PAOZZ	5365-00-808-2527	80205	NAS43DD3-40	.SPACER,SLEEVE........ UHX	EA	1
226B	33	PAOZZ	5340-00-565-0004	96906	MS21919DG10	.CLAMP,LOOP........ UHX	EA	1
226B	34	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE........ UHX	EA	1
226B	35	XDOZZ		06090	D-133-06	.SPLICE........ UHX	EA	1
226B	36	PAOZZ	5310-00-208-9255	96906	MS21044C3	.NUT,SELF-LOCKING,HE........ UHX	EA	13
226B	37	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT........ UHX	EA	7
226B	38	XDOZZ	5340-00-682-1617	96906	MS21919DG12	.CLAMP,LOOP........ UHX	EA	1
226B	39	PAOZZ	5365-00-294-0580	80205	NAS43DD3-48	.SPACER,SLEEVE........ UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226B	40	XDOZZ		96906	MS21919DG9	.CLAMP,LOOP	UHX	EA	11
226B	41	PAOZZ	5305-00-059-3665	96906	MS51958-69	.SCREW,MACHINE	UHX	EA	1
226B	42	PAOZZ	5305-00-059-3664	96906	MS51958-68	.SCREW,MACHINE	UHX	EA	4
226B	43	PAOZZ	5305-00-059-3661	96906	MS51958-65	.SCREW,MACHINE	UHX	EA	2
226B	44	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE	UHX	EA	6
226B	45	PAOZZ	5340-00-151-5901	96906	MS9592-010	.BRACKET,ANGLE	UHX	EA	2
226B	46	PAOZZ	5365-00-808-2527	80205	NAS43DD3-40	.SPACER,SLEEVE	UHX	EA	1
226B	47	XDOZZ	5340-00-205-6301	96906	MS21919DG4	.CLAMP,LOOP	UHX	EA	2
226B	48	PAOZZ	5365-00-662-8788	80205	NAS43DD3-36	.SPACER,SLEEVE	UHX	EA	1
226B	49	PAOZZ	5340-00-721-8182	88044	AN743-13	.BRACKET,ANGLE	UHX	EA	1
226B	50	PAOZZ	5340-00-200-7451	96906	MS21919WDG17	.CLAMP,LOOP	UHX	EA	1
226B	51	XDOZZ		71468	D110550	.JACKSCREW	UHX	EA	2
226B	52	PAOZZ	5935-01-016-1216	81349	M24308/21-1	.SHIELD,ELECTRICAL C	UHX	EA	1
226B	53	PAOZZ	5935-00-490-5219	81349	M24308/2-1	.CONNECTOR,RECEPTACL	UHX	EA	1
226B	54	PAOZZ	5935-00-765-5989	96906	MS3126F14-19S	.CONNECTOR,PLUG,ELEC	UHX	EA	1
226B	55	PAOZZ	5935-00-731-0139	96906	MS3126F12-10S	.CONNECTOR,PLUG,ELEC	UHX	EA	1
226B	56	PAOZZ	5940-00-143-4777	96906	MS25036-157	.TERMINAL,LUG	UHX	EA	4
226B	57	PAOZZ	5935-00-261-6872	96906	MS27473T10B-35S	.CONNECTOR,PLUG,ELEC	UHX	EA	1
226B	58	PAOZZ	5935-00-622-1280	96906	MS27506B10-2	.CLAMP,CABLE,ELECTRI	UHX	EA	1
226B	59	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL,LUG	UHX	EA	7
226B	60	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG	UHX	EA	30
226B	61	MFOZZ		20309	ES-B-221720	.JUMPER BUS BAR M/F 9535002322293 AND 5970008151295	UHX	EA	2
226B	62	PAOZZ	6150-00-225-0269	97499	204-075-230-5	.BUS,CONDUCTOR	UHX	EA	1
226B	63	PAOZZ	6150-00-225-0268	97499	20-077-6A2C	.BUS,CONDUCTOR	UHX	EA	1
226B	64	PAOZZ	5940-00-113-9828	96906	MS25036-148	.TERMINAL,LUG	UHX	EA	1
226B	65	XDOZZ		20309	ES-B-221721-1	.CABLE ASSY SPECIAL	UHX	EA	1
226B	66	XDOZZ		20309	ES-B-221721-2	.CABLE ASSY SPECIAL	UHX	EA	1
226B	67	AOOOO		20309	ES-F-221304	.WIRING HARNESS APR-	UHX	EA	1
226B	68	PAOZZ	5340-00-139-7498	71468	D110278	..STRIKE,CATCH	UHX	EA	2
226B	69	PAOZZ	5935-01-028-6751	81349	M24308/20-3	..SHIELD,ELECTRICAL C	UHX	EA	1
226B	70	PAOZZ	5935-00-410-9250	81349	M24308/2-3	..CONNECTOR,RECEPTACL	UHX	EA	1
226B	71	PAOZZ	5940-01-135-7077	81349	M83519/1-3	..SPLICE,CONDUCTOR	UHX	EA	1
226B	72	PAOZZ	5970-00-812-2968	81349	M23053/5-102-0	..INSULATION SLEEVING	UHX	EA	V
226B	73	PAOZZ	6145-00-578-7519	81349	M5086/1-20-9	..WIRE,ELECTRICAL	UHX	EA	V
226B	74	PAOZZ	6145-00-608-5484	81349	M7078/3-22-1	..CABLE,SPECIAL PURPO	UHX	EA	V
226B	75	PAOZZ	6145-00-578-7520	81349	M5086/1-22-9	..WIRE,ELECTRICAL	UHX	EA	V
226B	76	XDOZZ		20309	ES-B-221722	.CABLE ASSY SPECIAL	UHX	EA	1
226B	77	PAOZZ	5940-01-135-7077	81349	M83519/1-3	.SPLICE,CONDUCTOR	UHX	EA	2
226B	78	AOOOO		20309	ES-F-221302	.WIRE HARNESS AND	UHX	EA	1
226B	79	PAOZZ	5935-00-368-0449	96906	MS27473T12E35S	..CONNECTOR,PLUG,ELEC	UHX	EA	1
226B	80	PAOZZ	5935-00-163-3651	96906	MS27506B12-2	..CLAMP,CABLE,ELECTRI	UHX	EA	1
226B	81	PAOZZ	5940-01-135-7077	81349	M83519/1-3	..SPLICE,CONDUCTOR	UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
226B	82	XDOZZ		06090	D-133-06	..SPLICE SOLDER	UHX	EA	9
226B	83	PAOZZ	6145-00-578-7520	81349	M5086/1-22-9	..WIRE,ELECTRICAL	UHX	EA	V
226B	84	PAOZZ	6145-00-578-7519	81349	M5086/1-20-9	..WIRE,ELECTRICAL	UHX	EA	V
226B	85	XDOZZ		20309	ES-B-221723	.CABLE ASSY,SPECIAL	UHX	EA	1
226B	86	PAOZZ	5940-00-557-4341	96906	MS25036-123	.TERMINAL,LUG	UHX	EA	6
226B	87	PAOZZ	5940-00-143-4775	96906	MS25036-156	.TERMINAL,LUG	UHX	EA	5
226B	88	PAOZZ	5940-00-115-2677	96906	MS20659-144	.TERMINAL,LUG	UHX	EA	1
226B	89	PAOZZ	5975-00-250-6871	96906	MS25171-3S	.CABLE NIPPLE,ELECTR	UHX	EA	2
226B	90	AOOOO		20309	ES-F-221718	.HARNESS ASSY M130	UHX	EA	1
226B	91	PAOZZ	5935-00-726-7101	96906	MS3124E14-19S	..CONNECTOR,RECEPT	UHX	EA	1
226B	92	XDOZZ		96906	MS27508E10B35P	..CONNECTOR,RECEPTACL	UHX	EA	1
226B	93	PAOZZ	5940-01-079-1375	81349	M7928/5-4	..SPLICE,CONDUCTOR	UHX	EA	3
226B	94	PAOZZ	6145-00-578-7520	81349	M5086/1-22-9	..WIRE,ELECTRICAL	UHX	EA	V
226B	95	PAOZZ	6145-00-578-7519	81349	M5086/1-20-9	..WIRE,ELECTRICAL	UHX	EA	V
226B	96	PAOZZ	5935-01-110-7065	96906	MS3450W16S-1S	.CONNECTOR,RECPTACL	UHX	EA	1
226B	97	PAOZZ	5310-00-088-0551	96906	MS21044N04	.NUT,SELF-LOCKING,HE	UHX	EA	8
226B	98	PAOZZ	5310-00-950-1310	96906	MS27183-4	.WASHER,FLAT	UHX	EA	16
226B	99	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE	UHX	EA	8
226B	100	PAOZZ	5935-01-020-6477	96906	MS3100R24-12S	.CONNECTOR,RECEPTACL	UHX	EA	1
226B	101	PAOZZ		81349	M9012/55-3026	.CONNECTOR,PLUG,ELEC	UHX	EA	6
226B	102	XDOZZ		20309	ES-B-221643-1	.CABLE ASSY SPECIAL	UHX	EA	1
226B	103	XDOZZ		20309	ES-B-221543-2	.CABLE ASSY SPECIAL	UHX	EA	1
226B	104	XDOZZ		71468	DPGM38829-1	.CONTACT,ELEC	UHX	EA	1
226B	105	PAOZZ	5325-00-276-6228	96906	MS35489-9	.GROMMET,NONMETALLIC	UHX	EA	1
226B	106	PAOZZ	5940-01-079-1375	81349	M7928/5-4	.SPLICE,CONDUCTOR	UHX	EA	4
226B	107	MFOZZ		20309	ES-D-221175-2	.PANEL M/F 1560009910339 AND 9535000844413	UHX	EA	1
226B	108	PAOZZ		81349	M5086/1-12-9	.WIRE,ELECTRICAL	UHX	EA	V
226B	109	PAOZZ	5340-01-092-0463	29372	504D3-48-60	.INSERT,SCREW THREAD	UHX	EA	3
226B	110	PAOZZ	5940-00-143-4774	96906	MS25036-153	.TERMINAL,LUG	UHX	EA	9
226B	111	PAOZZ	5305-00-054-6653	96906	MS51957-29	.SCREW,MACHINE	UHX	EA	4
226B	112	PAOZZ	5310-00-983-8483	96906	MS27183-5	.WASHER,FLAT	UHX	EA	4
226B	113	PAOZZ	5925-00-881-2465	96906	MS21984-30	.CIRCUIT BREAKER	UHX	EA	1
226B	114	XDOZZ		20309	ES-C-221545-2	.PLATE IDENTIFITION	UHX	EA	1

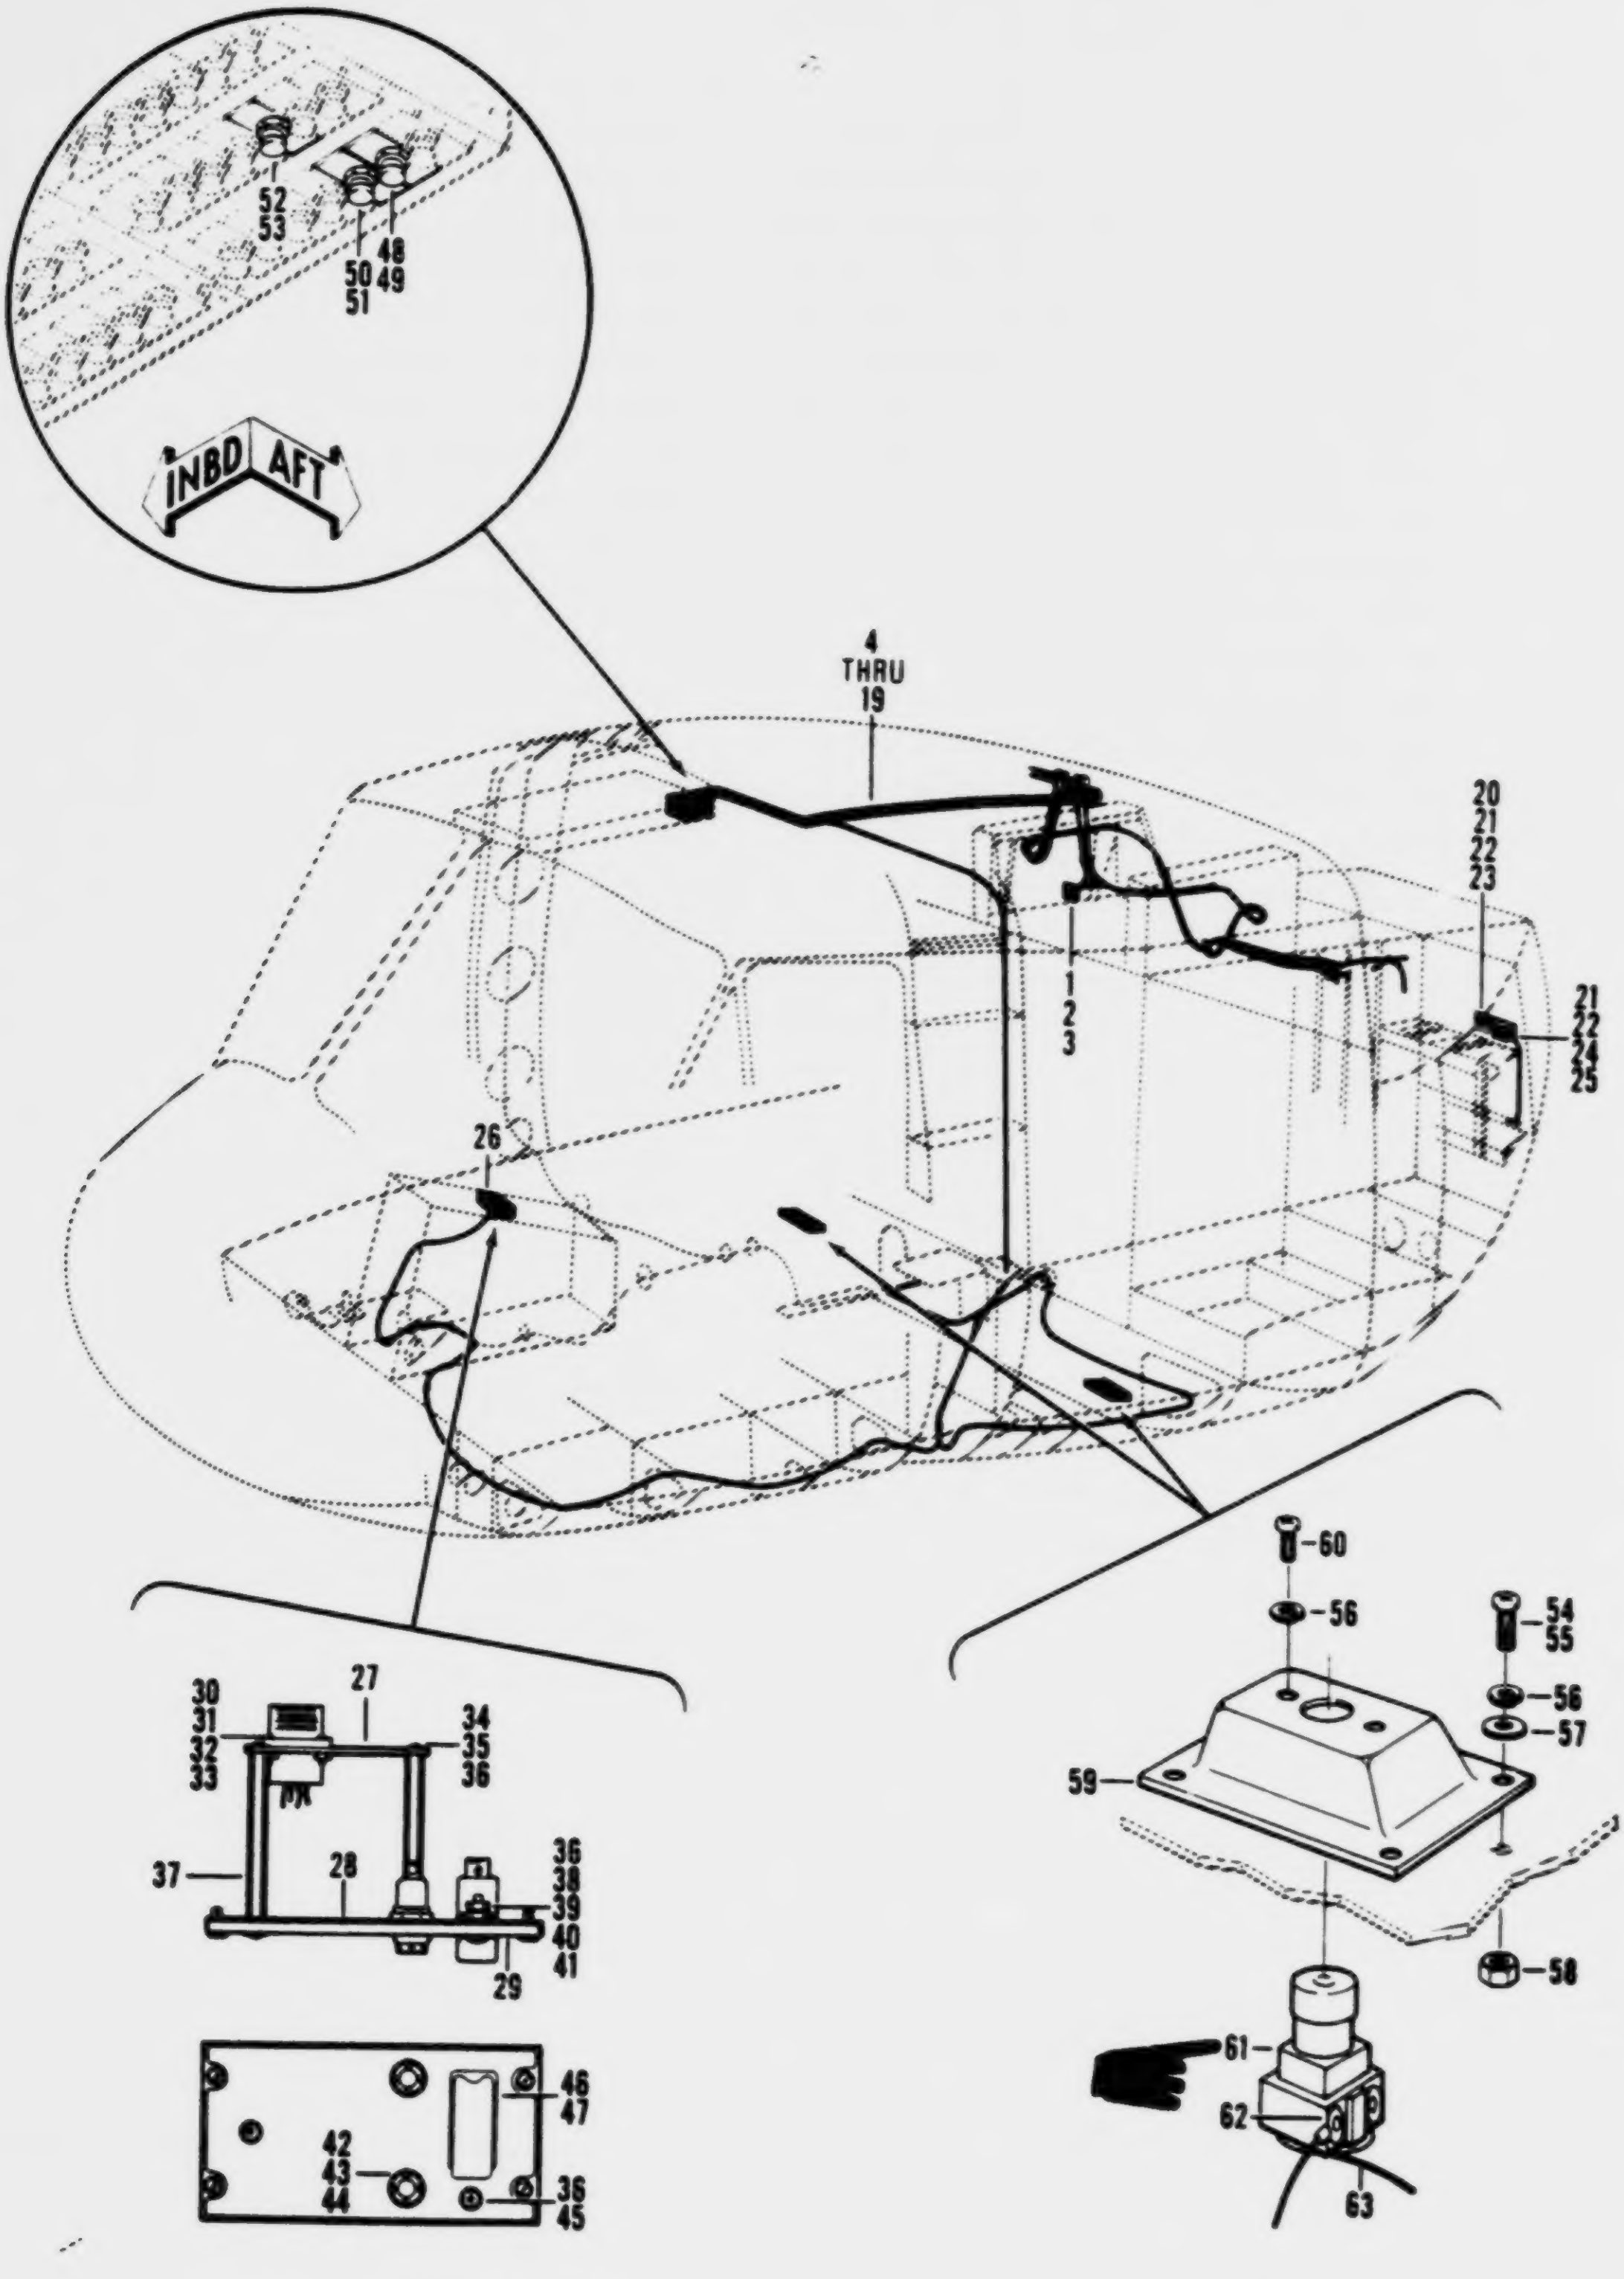
52
53
48
49
50
51
INBD
AFT
4
THRU
19
20
21
22
23
1
2
3
21
22
24
25
26
27
30
31
32
33
34
35
36
37
28
36
38
39
40
41
29
46
47
42
43
44
36
45
60
56
54
55
56
57
59
58
61
62
63

Figure 227. Electrical Installation, Rescue Hoist and Door Gunners Foot Mike Switch

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
227		XCFZZ		97499	204-706-106-1	ELECTRICAL INSTL INTERNAL RESCUE HOIST USBL EFF UH-1B 62-1872 & SUBSEQUENT.......UHB,UHC,UHM	EA	1
227	1	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE.......UHB,UHC,UHM	EA	4
227	2	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT.......UHB,UHC,UHM	EA	8
227	3	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	4
227	4	AOOOO		97499	205-075-438-19	.CABLE ASSEMBLY.......UHB,UHC,UHM	EA	1
227	5	AOOOZ	1680-00-993-5454	97499	205-075-438-21	.CABLE ASSY,SPECIAL PURPOSE.......UHB,UHC,UHM	EA	1
227	6	PAOZZ	5935-00-721-0488	96906	MS3106R14S6S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	1
227	7	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL U/O PN 205-075-438-19.......UHB,UHC,UHM	FT	V
227	8	PAOZZ	5935-00-837-6696	96906	MS3100R32-6S	..CONNECTOR,RECEPTACL CABIN ROOF DISC.......UHB,UHC,UHM	EA	1
227	9	PAOZZ	5935-00-821-0345	96906	MS3102R14S6P	..CONNECTOR,RECEPTACL CA CUT CONT PNL U/O PN 205-075-438-21.......UHB,UHC,UHM	EA	1
227	10	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	7
227	11	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG U/O PN 205-075-438-21.......UHB,UHC,UHM	EA	2
227	12	PBOZZ	5940-00-557-4341	96906	MS25036-123	.TERMINAL,LUG U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	3
227	13	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	9
227	14	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-438-21.......UHB,UHC,UHM	EA	3
227	15	PBOZZ	6145-00-851-8505	96906	MS25190B20	.WIRE,ELECTRICAL.......UHB,UHC,UHM	FT	V
227	16	PAOZZ	5940-00-143-4771	96906	MS25036-103	. TERMINAL,LUG U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	3
227	17	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-438-21.......UHB,UHC,UHM	EA	1
227	18	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	3
227	19	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 205-075-438-19.......UHB,UHC,UHM	EA	1
227	20	PAOZZ	5306-00-151-0785	88044	AN3-7A	.BOLT,MACHINE.......UHB,UHC,UHM	EA	2
227	21	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	2
227	22	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......UHB,UHC,UHM	EA	4
227	23	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET RESCUE HOIST.......UHB,UHC,UHM	EA	1
227	24	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE.......UHB,UHC,UHM	EA	2
227	25	PAOZZ	5925-00-954-3720	82647	D7235-1-125	.CONTACT SET,CIRCUIT.......UHB,UHC,UHM	EA	1
227	26	XBOOO		97499	204-075-574-1	.PANEL ASSY,CONTROL.......UHB,UHC,UHM	EA	1
227	27	MFOZZ	1680-00-987-9940	97499	204-075-577-1	..PLATE,SPACER,HOIST.......UHB,UHC,UHM	EA	1
227	28	XBOZZ		97499	204-075-575-1	..PLATE ASSEMBLY.......UHB,UHC,UHM	EA	1
227	29	XBOZZ		97499	204-075-576-1	..PANEL,EDGE LIGHT.......UHB,UHC,UHM	EA	1
227	30	PAOZZ	5305-00-889-2998	96906	MS35206-216	..SCREW,MACHINE.......UHB,UHC,UHM	EA	3
227	31	PAOZZ	5305-00-543-5058	96906	MS35265-16	..SCREW,MACHINE.......UHB,UHC,UHM	EA	1
227	32	PAOZZ	5310-00-807-1471	96906	MS21042L04	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	4
227	33	PAOZZ	5310-00-187-2397	88044	AN960PD4L	..WASHER,FLAT.......UHB,UHC,UHM	EA	1
227	34	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE.......UHB,UHC,UHM	EA	3
227	35	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE.......UHB,UHC,UHM	EA	3
227	36	PAOZZ	5310-00-209-0788	88044	AN936B6	..WASHER,LOCK.......UHB,UHC,UHM	EA	6
227	37	XDOZZ	5340-00-896-6246	97499	204-075-242-3	..POST,ELECTRICAL-.......UHB,UHC,UHM	EA	3
227	38	PAOZZ	5305-00-837-3343	96906	MS24693S28	..SCREW,MACHINE.......UHB,UHC,UHM	EA	1
227	39	PAOZZ	5310-00-934-9747	96906	MS35649-262	..NUT,PLAIN,HEXAGON.......UHB,UHC,UHM	EA	1
227	40	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER,FLAT.......UHB,UHC,UHM	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
227	41	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	1
227	42	XDOOZ		96906	MS25010B11A327	..LIGHT,PANEL	UHB,UHC,UHM	EA	2
227	43	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT	UHB,UHC,UHM	EA	2
227	44	PAOZZ	6210-00-519-2653	96906	MS25010BT1A	...LIGHT,PANEL	UHB,UHC,UHM	EA	2
227	45	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE	UHB,UHC,UHM	EA	2
227	46	XDOZZ		97499	204-075-717-3	..GUARD,SWITCH	UHB,UHC,UHM	EA	1
227	47	PBOZZ	5930-00-655-1514	96906	MS35058-22	..SWITCH,TOGGLE	UHB,UHC,UHM	EA	1
227	48	XBOZZ	9905-00-412-1140	97499	204-075-289-139	.PLATE,IDENTIFICATIO RESCUE HOIST POWER	UHB,UHC,UHM	EA	1
227	49	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER	UHB,UHC,UHM	EA	1
227	50	XBOZZ	9905-00-412-1141	97499	204-075-289-141	.PLATE,IDENTIFICATIO RESCUE HOIST CONTROL	UHB,UHC,UHM	EA	1
227	51	PAOZZ	5925-00-937-5669	81349	MS22073-10	.CIRCUIT BREAKER	UHB,UHC,UHM	EA	1
227	52	XBOZZ	9905-00-412-1142	97499	204-075-289-143	.PLATE,IDENTIFICATIO RESCUE HOIST CABLE CUTTER	UHB,UHC,UHM	EA	1
227	53	PAOZZ	5925-00-985-8319	96906	MS22073-5	.CIRCUIT BREAKER	UHB,UHC,UHM	EA	1
227		XCFZZ		97499	1560UH1-343-1	ELECTRICAL INSTL DOOR GUNNERS FOOT MIKE SWITCH	UHB,UHC,UHM	EA	1
227		XCFZZ		97499	1560UH1-343-2	ELECTRICAL INSTL, DOOR GUNNERS FOOT MIKE SWITCH	UHE,UHH,UHV,UHX	EA	1
227	54	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE	UHB,UHC,UHM	EA	4
227	55	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
227	56	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHE,UHH,UHV,UHX	EA	4
227	57	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
227	58	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING, HEXAGON	UHE,UHH,UHV,UHX	EA	4
227	59	PAOZZ	5965-00-484-3966	81996	1560UH1-343-3	.BRACKET,MICROPHONE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
227	60	PAOZZ	5305-00-958-0661	96906	MS35207-227	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
227	61	PAOZZ	5930-00-950-9145	96906	MS25039-1	.SWITCH,PUSH	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
227	62	PAOZZ	5940-00-813-0698	96906	MS25036-101	.TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
227	63	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	.WIRE,ELECTRICAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V

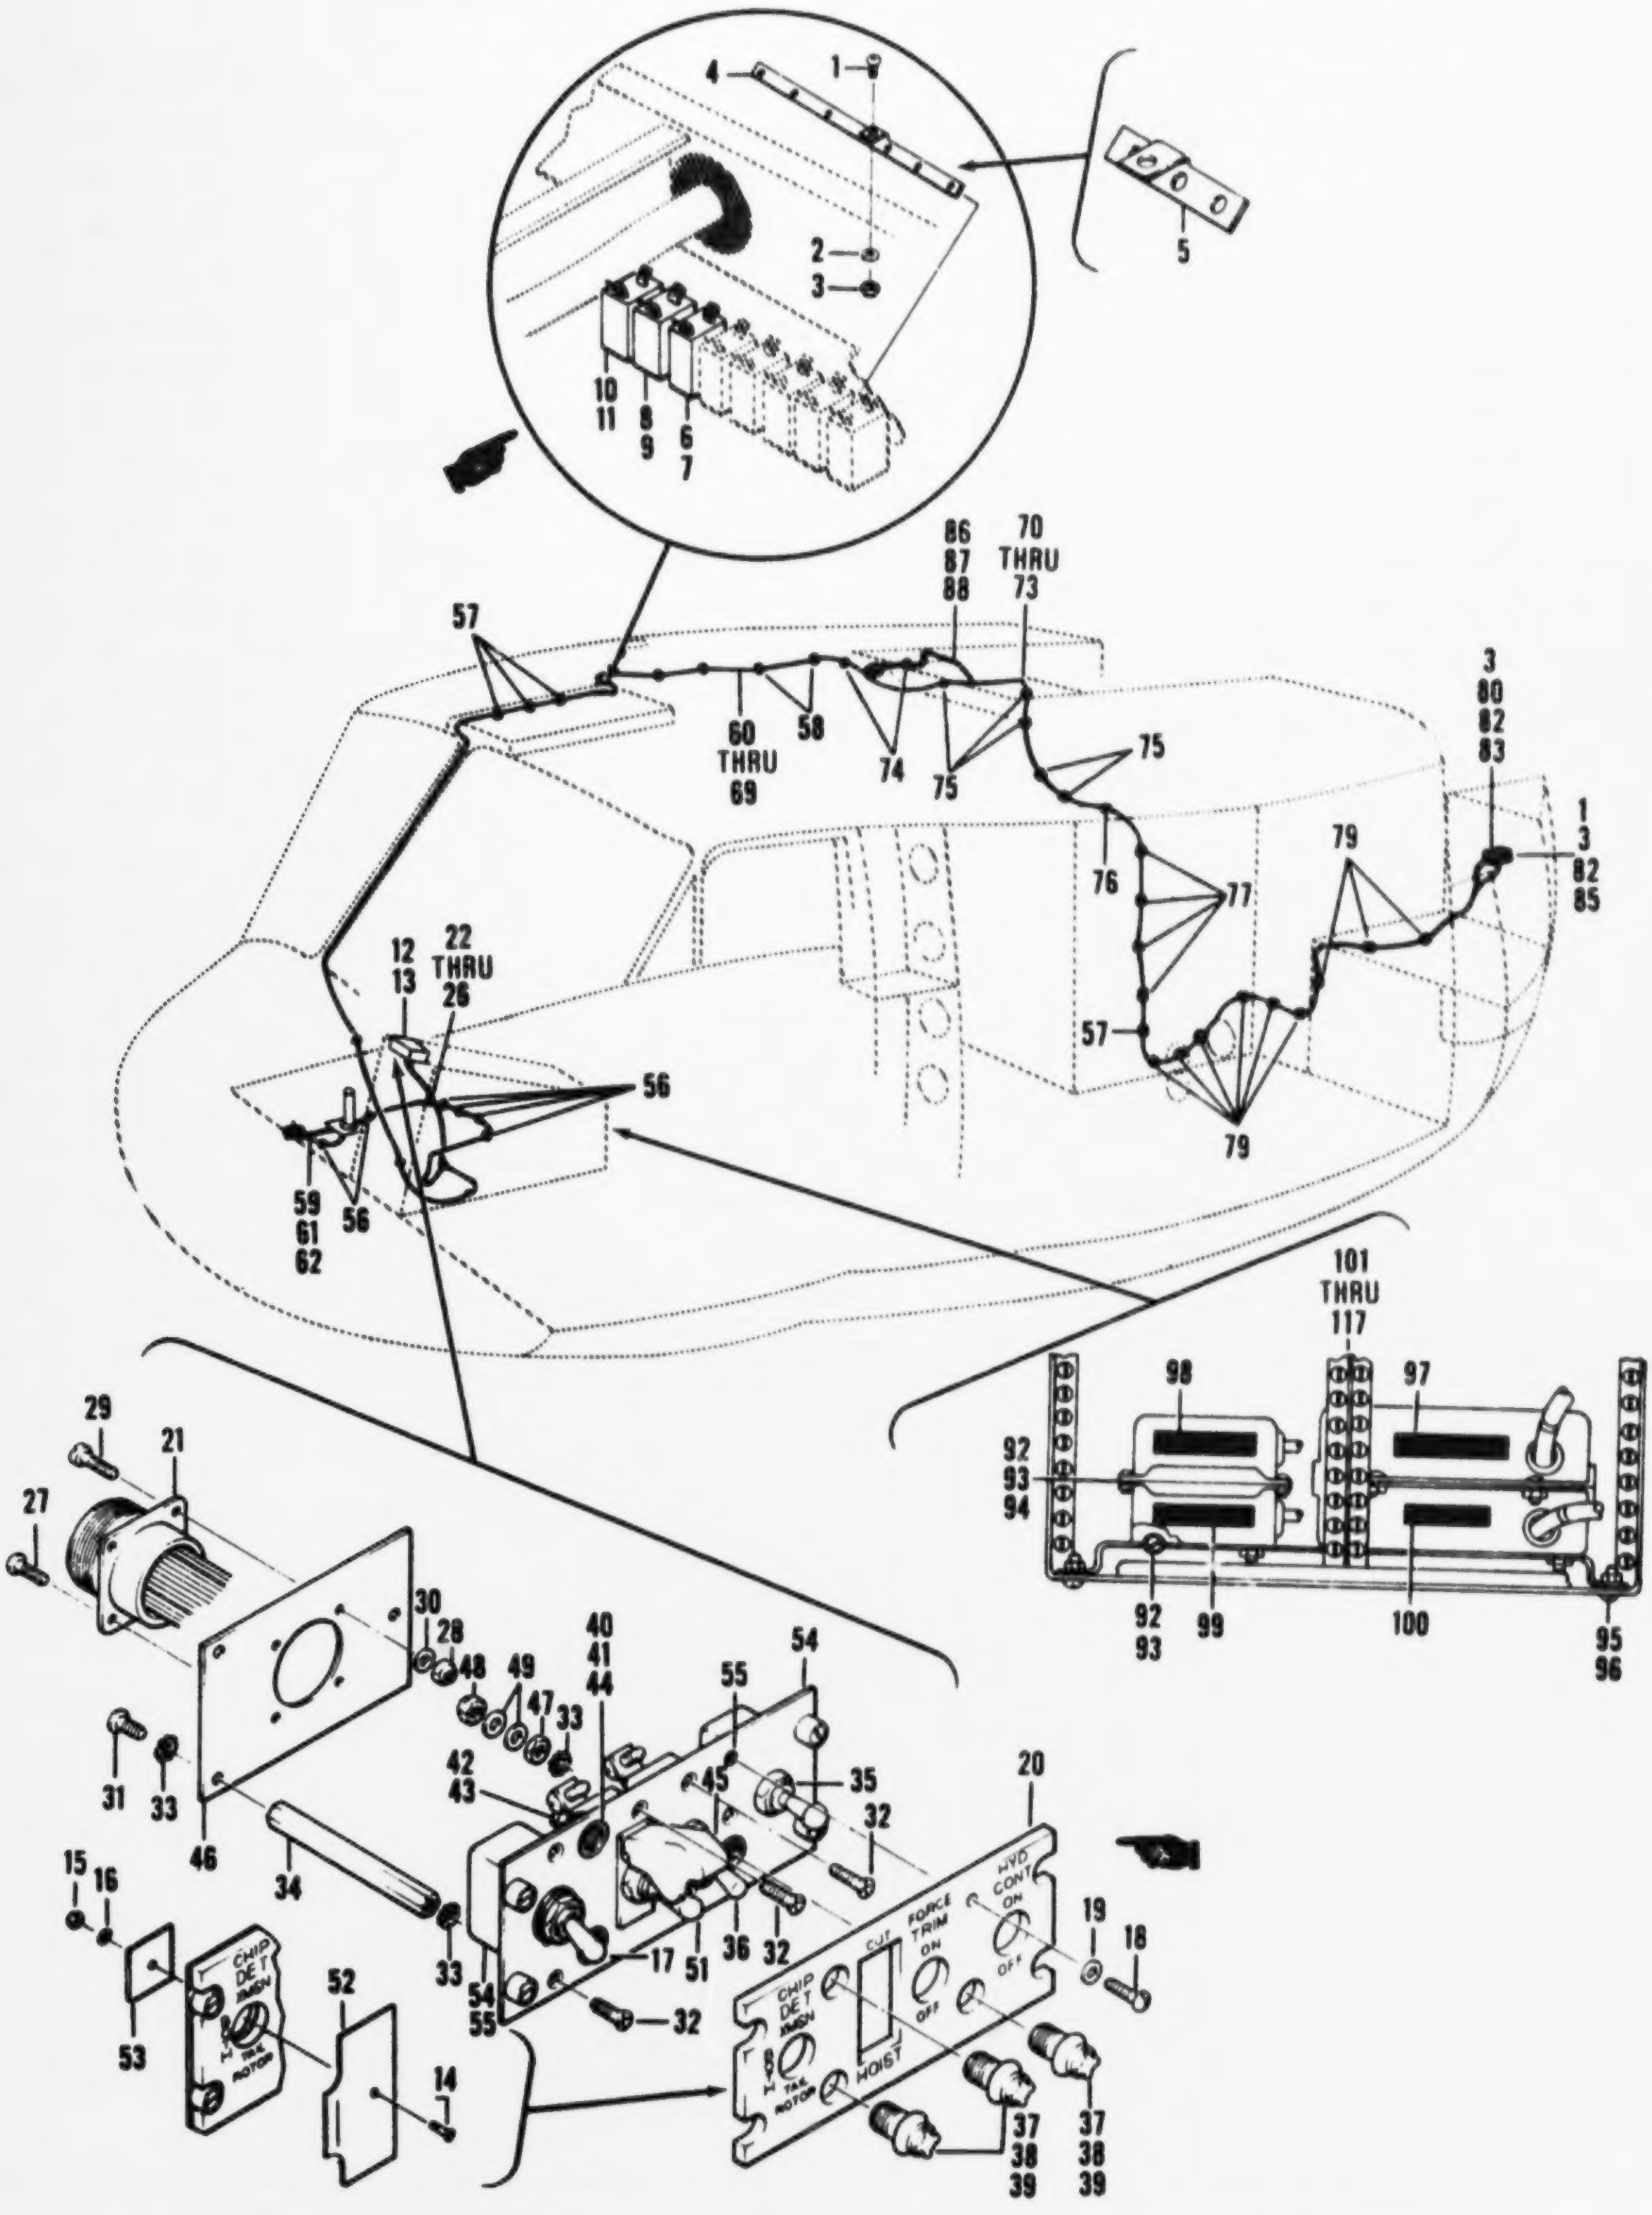
4
1
5
2
3
10
11
8
9
6
7
86
87
88
70
THRU
73
57
60
THRU
69
58
74
75
75
3
80
82
83
1
3
82
85
79
76
77
12
13
22
THRU
26
56
57
79
59
61
62
56
101
THRU
117
98
97
92
93
94
92
93
99
100
95
96
29
21
27
30
28
48
40
41
44
54
49
47
33
55
31
33
42
43
45
35
20
46
32
34
15
16
33
17
51
36
32
CHIP
DET
SWCH
TAIL
ROTOR
52
54
55
32
CUT
HOIST
FORCE
TRIM
ON
OFF
HYD
CONT
ON
OFF
19
18
53
14
37
38
39
37
38
39

Figure 228. Electrical Installation, Rescue Hoist and Discrete Signal Discriminator

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
228		XCFZZ		97499	205-706-033-1	ELECTRICAL INSTL INTERNAL RESCUE HOIST USBL EFF 63-8739 THRU 65-12895..........UHE,UHH,UHV,UHX	EA	1
228		XCFZZ		97499	205-706-033-3	ELECTRICAL INSTL, INTERNAL RESCUE HOIST USBL EFF 66-746 & SUBSEQUENT..........UHE,UHH,UHV,UHX	EA	1
228	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
228	2	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
228	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
228	4	PAOZZ	6150-00-225-0267	74992	0-077-8A2D	.BUS,CONDUCTOR U/O PN 205-706-033-1..........UHE,UHH,UHV,UHX	EA	1
228	5	XDOZZ		97499	20-077-3A2B	.BUS BAR U/O PN 205-706-033-3..........UHE,UHH,UHV,UHX	EA	1
228	6	XBOZZ	9905-00-412-1140	97499	204-075-289-139	.PLATE,IDENTIFICATIO..........UHE,UHH,UHV,UHX	EA	1
228	7	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	1
228	8	XBOZZ	9905-00-412-1141	97499	204-075-289-141	.PLATE,IDENTIFICATIO..........UHE,UHH,UHV,UHX	EA	1
228	9	PBOZZ	5925-00-681-4952	96906	MS25244-10	.CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	1
228	10	XBOZZ	9905-00-412-1142	97499	204-075-289-143	.PLATE,IDENTIFICATIO..........UHE,UHH,UHV,UHX	EA	1
228	11	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	1
228	12	XBOOO		97499	205-075-210-1	.CONTROL PANEL ASSEMBLY,HYDRAULIC U/O PN 205-706-033-1..........UHE,UHH,UHV,UHX	EA	1
228	13	PAOOO	1680-00-179-6009	97499	205-075-210-7	.CONTROL PANEL ASSEMBLY,HYDRAULIC..........UHE,UHH,UHV,UHX	EA	1
228	14	PAOZZ	5305-00-837-3343	96906	MS24693S28	..SCREW,MACHINE U/O PN 205-075-210-1..........UHE,UHH,UHV,UHX	EA	1
228	15	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
228	16	PAOZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK U/O PN 205-075-210-1..........UHE,UHH,UHV,UHX	EA	1
228	17	PBOZZ	5930-00-044-3518	96906	MS25201-6	..SWITCH,TOGGLE U/O PN 205-075-210-7..........UHE,UHH,UHV,UHX	EA	1
228	18	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
228	19	PAOZZ	5310-00-167-0699	88044	AN960B6	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
228	20	XBOZZ	1680-00-131-4307	97499	205-075-238-1	..PANEL,EDGE LITE..........UHE,UHH,UHV,UHX	EA	1
228	21	AOOOZ	6150-00-955-9404	97499	205-075-438-3	..CABLE ASSY..........UHE,UHH,UHV,UHX	EA	1
228	22	PAOZZ	5935-01-048-0092	96906	MS3450W20-27P	...CONNECTOR,RECEPTACL..........UHH,UHV	EA	1
228	23	PAOZZ	5940-00-204-8966	96906	MS25036-102	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	8
228	24	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	6
228	25	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	4
228	26	PBOZZ	6145-00-851-8506	96906	MS25190B20	...WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	V
228	27	PAOZZ	5305-00-889-2998	96906	MS35206-216	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
228	28	PAOZZ	5310-00-807-1471	96906	MS21042L04	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
228	29	PAOZZ	5305-00-543-5058	96906	MS35265-16	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
228	30	PAOZZ	5310-00-187-2397	88044	AN960PD4L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
228	31	PAOZZ	5305-00-934-4988	96906	MS35206-228	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
228	32	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	5
228	33	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK..........UHE,UHH,UHV,UHX	EA	5
228	34	XDOZZ	5340-00-896-6246	97499	204-075-242-3	..POST,ELECTRICAL-..........UHE,UHH,UHV,UHX	EA	3
228	35	PAOZZ	5930-00-781-7101	96906	MS24658-22G	..SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
228	36	PBOZZ	5930-00-687-1097	88044	AN3022-2	..SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
228	37	XDOOZ		96906	MS25010B11A327	..LIGHT,PANEL..........UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
228	38	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	1
228	39	AOOOZ	6210-00-519-2653	96906	MS25010B11A	...LIGHT,PANEL	UHE,UHH,UHV,UHX	EA	1
228	40	XDOZZ		96906	MS25082B21	....NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
228	41	PAOZZ	5310-00-905-5454	96906	MS35333-121	....WASHER,LOCK	UHE,UHH,UHV,UHX	EA	1
228	42	PAOZZ	5310-00-339-1061	96906	MS35333-104	....WASHER,LOCK	UHE,UHH,UHV,UHX	EA	1
228	43	PAOZZ	5305-00-637-5884	96906	MS35214-12	....SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
228	44	PAOZZ	6210-00-933-1405	96906	MS250108	....LIGHT,PANEL	UHE,UHH,UHV,UHX	EA	1
228	45	XDOZZ		97499	90-045-5	..GUARD,SWITCH	UHE,UHH,UHV,UHX	EA	1
228	46	MFOZZ	1560-00-948-0367	97499	205-075-237-5	..PLATE ASSY	UHE,UHH,UHV,UHX	EA	1
228	47	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
228	48	PAOZZ	5310-00-934-9747	96906	MS35649-282	..NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
228	49	PAOZZ	5310-00-187-2398	88044	AN960PD8L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
228	51	PBOZZ	5930-00-655-1514	96906	MS35058-22	..SWITCH,TOGGLE	UHE,UHH,UHV,UHX	EA	1
228	52	MFOZZ	6110-00-988-0092	97499	205-075-210-3	..PLATE,PANEL,CONTROL U/O PN 205-075-210-1	UHE,UHH,UHV,UHX	EA	1
228	53	MFOZZ	6110-00-988-0093	97499	205-075-210-5	..PLATE,PANEL,CONTROL U/O PN 205-075-210-1	UHE,UHH,UHV,UHX	EA	1
228	54	XAOZZ		97499	205-075-237-1	..PLATE MOUNTING	UHE,UHH,UHV,UHX	EA	1
228	55	PAOZZ	5310-00-489-5009	46384	CL632-2	...NUT,PLAIN,CLINCH	UHE,UHH,UHV,UHX	EA	1
228	56	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	6
228	57	PAOZZ	5340-00-989-4572	81996	EAB7000D15	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	4
228	58	XDOZZ	5340-00-989-4569	81996	EAB70009	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
228	59	AOOOZ	1680-00-133-7083	97499	205-075-438-1	.CABLE ASSY,RESCUE U/O PN 205-706-033-1	UHE,UHH,UHV,UHX	EA	1
228	60	AOOOZ		97499	205-075-438-5	.CABLE ASSEMBLY,POWE	UHE,UHH,UHV,UHX	EA	1
228	61	PAOZZ	5930-00-912-3171	97151	65C49022	..SWITCH,TOGGLE U/O PN 205-075-438-1	UHE,UHH,UHV,UHX	EA	1
228	62	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
228	63	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-070-438-5	UHE;UHH,UHV,UHX	EA	7
228	64	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-070-438-5	UHE,UHH,UHV,UHX	EA	2
228	65	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-438-5	UHE,UHH,UHV,UHX	EA	4
228	66	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG U/O PN 205-070-438-5	UHE,UHH,UHV,UHX	EA	3
228	67	PBOZZ	5940-00-557-4341	96906	MS25036-123	..TERMINAL,LUG U/O PN 205-070-438-5	UHE,UHH,UHV,UHX	EA	3
228	68	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL U/O PN 205-070-438-5	UHE,UHH,UHV,UHX	FT	V
228	69	PAOZZ	5935-00-837-6696	96906	MS3100R32-6S	..CONNECTOR,RECEPTACL CABIN ROOF DISC.U/O PN 205-070-438-5	UHE,UHH,UHV,UHX	EA	1
228	70	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
228	71	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
228	72	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
228	73	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
228	74	PAOZZ	5340-00-993-6244	81996	EAB7000D10	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
228	75	PAOZZ	5935-01-016-2464	81348	WC596-6-1	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	5
228	76	PAOZZ	5340-00-548-7812	81996	EAB700-20	.CLAMP,LOOP	UHE,UHH,UHV.UHX	EA	1
228	77	PAOZZ	5340-00-993-1470	81996	EAB7000D18	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	4
228	79	PAOZZ	5340-00-989-4570	81996	EAB7000D13	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	9

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
228	80	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	2
228	82	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	4
228	83	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET RESCUE HOIST........UHE,UHH,UHV,UHX	EA	1
228	85	PAOZZ	5925-00-954-3720	82647	D7235-1-125	.CONTACT SET,CIRCUIT........UHE,UHH,UHV,UHX	EA	1
228	86	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1
228	87	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	3
228	88	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
228		XCFZZ	1560-00-053-4144	81996	1560UH1-430-1	MODIFICATION KIT DISCRETE SIGNAL USE-AFT-CMPL-W MWO 55-1520-211-40/5........UHB,UHC,UHM	EA	1
228		XCFZZ	1560-00-053-4142	81996	1560UH1-429-1	MODIFICATION KIT DISCRETE SIGNAL USE-AFT- CMPL-W MWO 55-1520-210-40/2 USBL EFF 63-8739 THRU 65-12895 ....UHE,UHH,UHV,UHX	EA	1
228		XCFZZ	1560-00-053-4141	81996	1560UH1-428-1	MODIFICATION KIT DISCRETE SIGNAL USE-AFT- CMPL-W MWO 55-1520-210-40/1 USBL EFF 66-746 THRU 67-17777 ....UHE,UHH,UHV,UHX	EA	1
228	92	PAOZZ	5305-00-543-5059	96906	MS35265-29	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	93	PAOZZ	5310-00-167-0832	88044	AN960-6L	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	94	PAOZZ	5310-00-807-1465	96906	MS21042-06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	95	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
228	96	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
228	97	MOOZZ		81996	1560EG035-3	.LABEL,LEFT,CREW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	98	MOOZZ		81996	1560EG035-4	.LABEL,RIGHT,CREW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	99	MOOZZ		81996	1560EG035-2	.LABEL,CO-PILOT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	100	MOOZZ		81996	1560EG035-1	.LABEL,PILOT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	101	MFOZZ		81996	1560UH1-423-1	.PLATE........UHB,UHC,UHM	EA	1
228	102	MFOZZ		81996	1560UH1-427-1	.CHANNEL........UHB,UHC,UHM	EA	2
228	103	MFOZZ		81996	1560UH1-424-1	.COVER........UHB,UHC,UHM	EA	1
228	104	MFOZZ		81996	1560UH1-425-1	.BRACKET U/O PN 1560UH1-429-1........UHE,UHH,UHV,UHX	EA	1
228	105	MFOZZ		81996	1560UH1-426-1	COVER U/O PN 1560UH1-429-1........UHE,UHH,UHV,UHX	EA	1
228	106	MFOZZ		81996	1560UH1-431-1	.BRACKET U/O PN 1560UH1-428-1........UHE,UHH,UHV,UHX	EA	1
228	107	PAOZZ	5940-00-813-0698	96906	MS25036-101	.TERMINAL,LUG........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	44
228	108	PAOZZ	5940-01-007-7875	81349	M7928/3-2	.SPLICE,CONDUCTOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
228	109	PAOZZ	5940-00-686-7371	00779	323931	.FERRULE,METALLIC SH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
228	110	PAOZZ	5970-00-812-2969	92194	FIT221 1-8BLACK	.INSULATION SLEEVING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	111	PAOZZ	5970-00-822-9217	80249	MP2282-2	.SLEEVING,TEXTILE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
228	112	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	.WIRE,ELECTRICAL........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	113	PAOZZ	6145-00-608-5484	81349	M7078-3-22-1	.CABLE,SPECIAL PURPO........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
228	114	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	115	PAOZZ	5905-00-104-8345	81349	RCR20G560JS	.RESISTOR,FIXED COMPOSITION......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	116	PBOZZ	5905-00-114-5361	81349	RCR20G121JS	.RESISTOR,FIXED, COMPOSITION.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
228	117	PAOZZ	5905-00-110-0196	81349	RCR20G102JS	.RESISTOR,FIXED, COMPOSITION.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

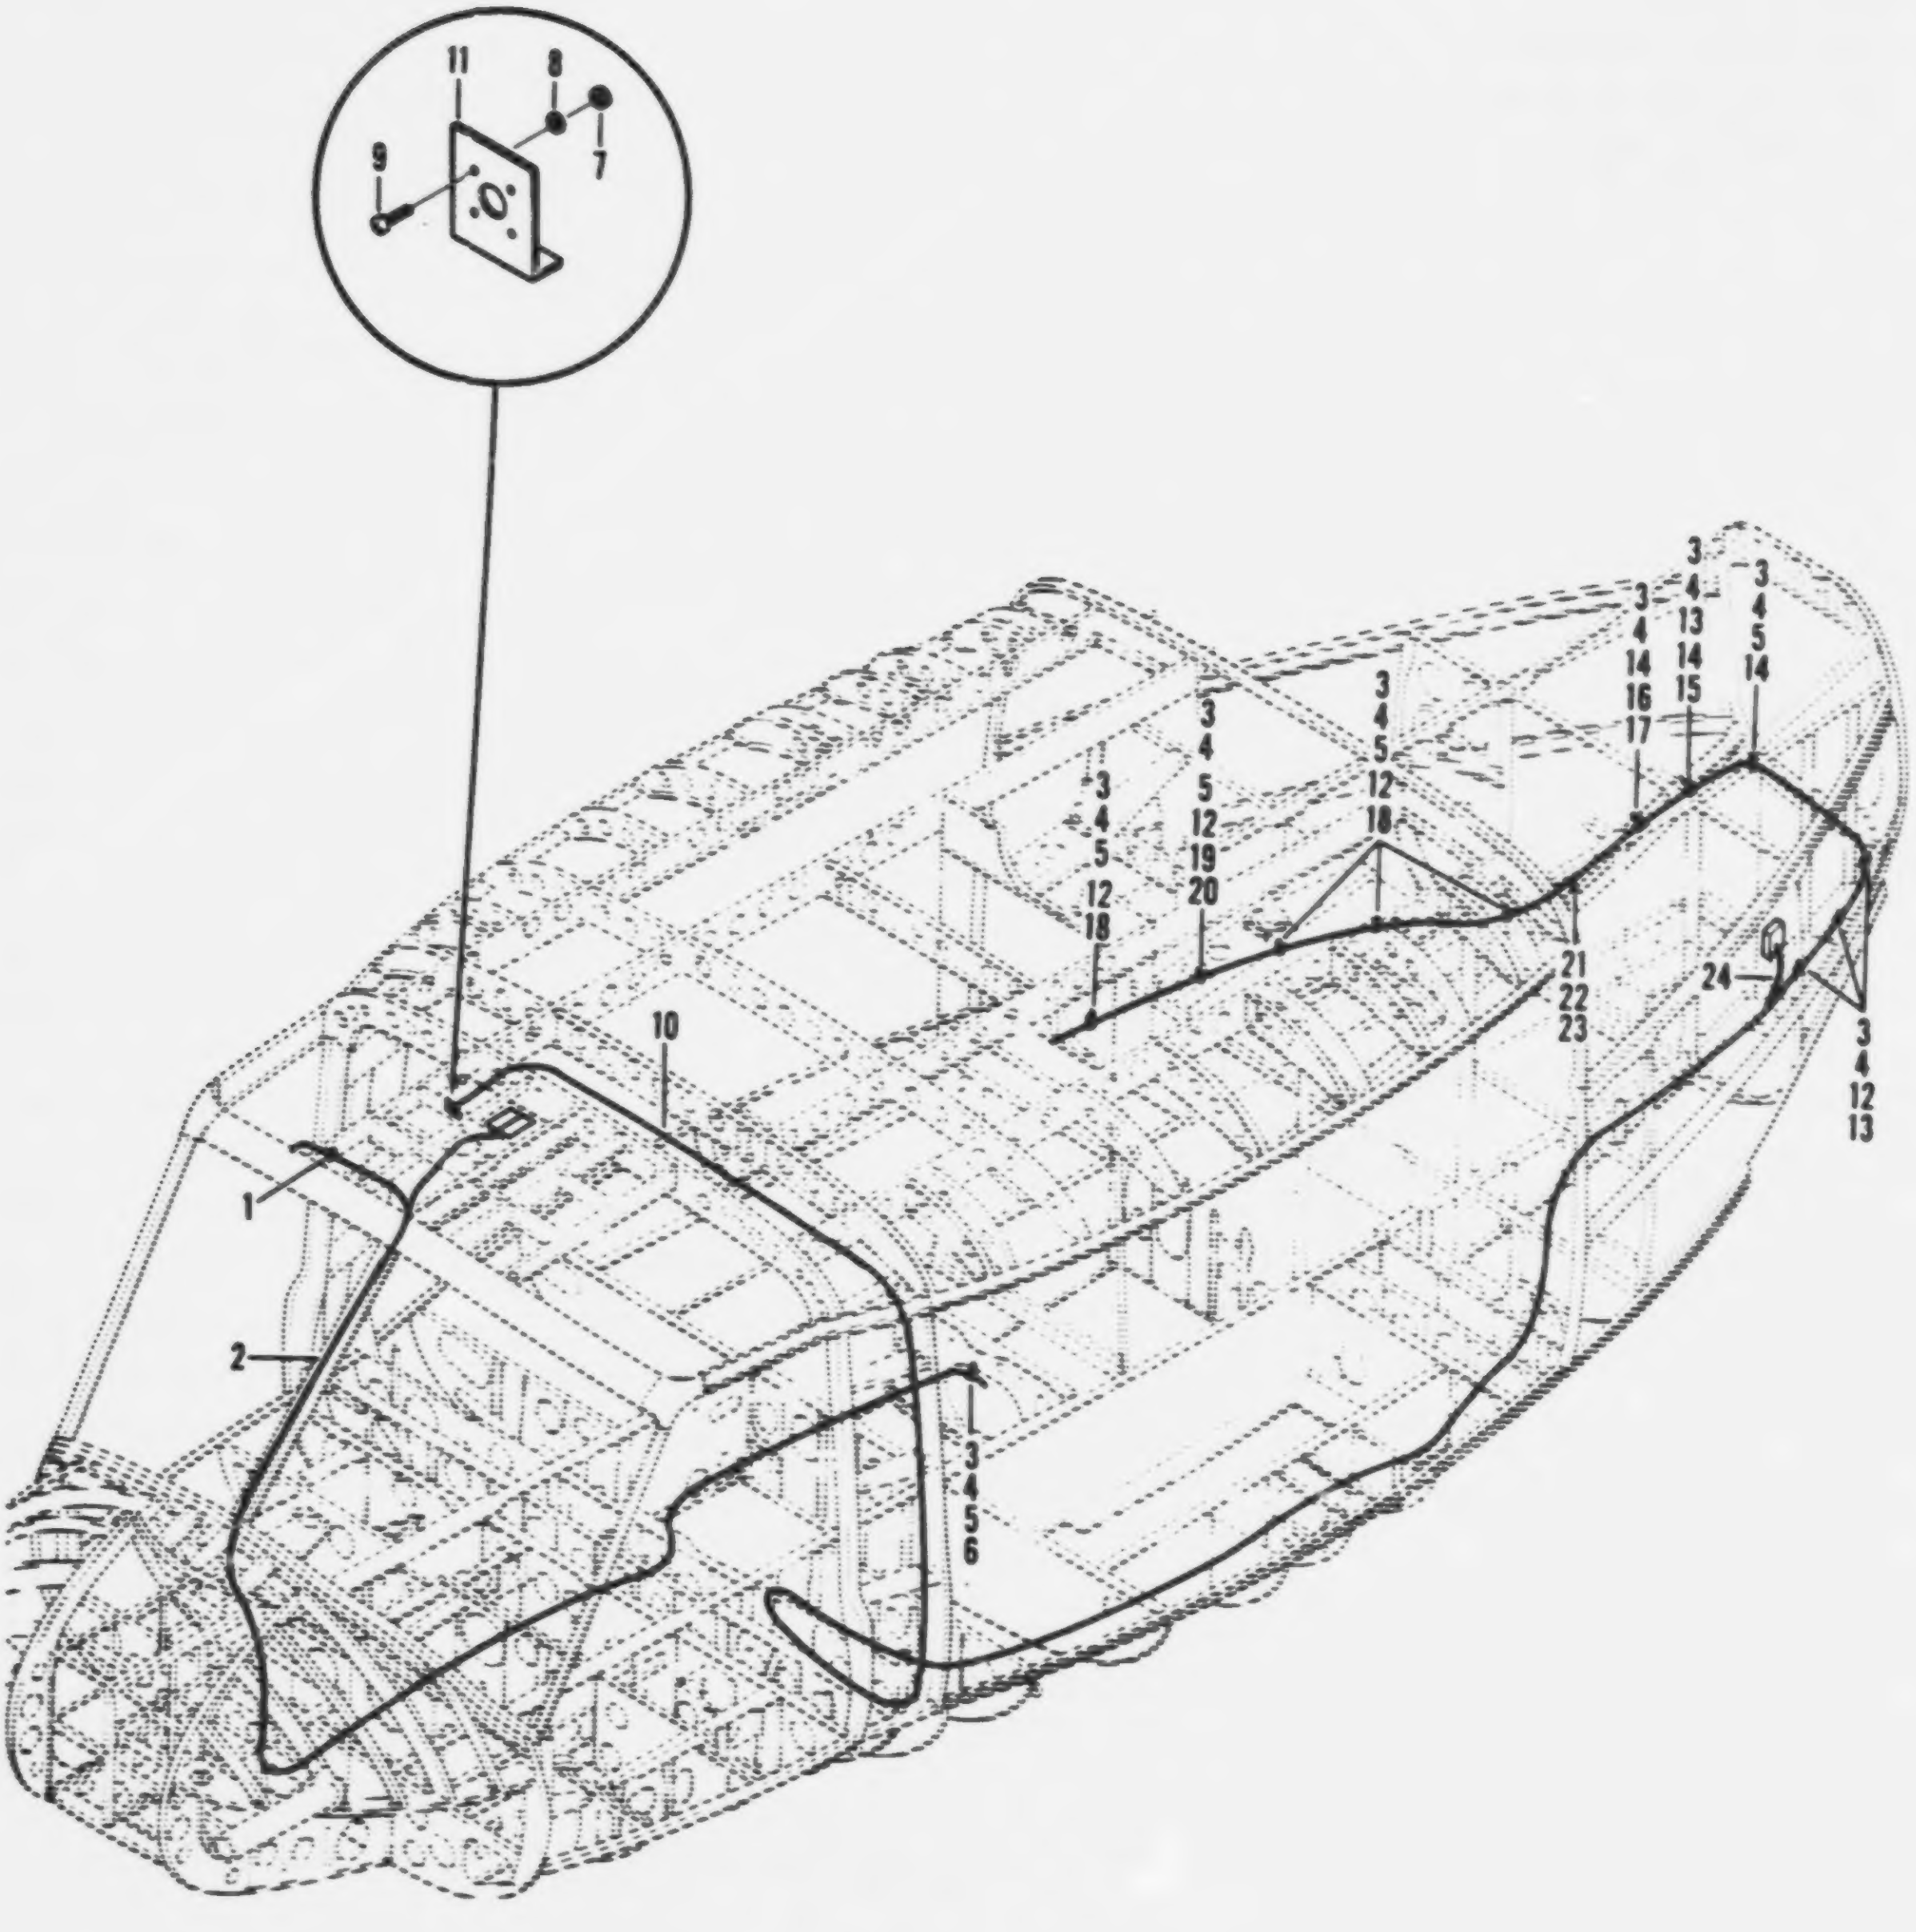
11
8
9
7
10
1
2
3
4
5
12
18
3
4
5
12
19
20
3
4
5
12
18
21
22
23
3
4
14
16
17
3
4
13
14
15
3
4
5
14
24
3
4
12
13
3
4
5
6

Figure 229. Electrical Installation, Smoke Generator

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
229		XCFZZ		97499	53E00-74A	ELECTRICAL INSTL SMOKE GENERATOR............UHE,UHH,UHV,UHX	EA	1
229	1	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC..........................UHE,UHH,UHV,UHX	EA	1
229	2	PBOZZ	1560-00-420-7868	99551	U6429	.WIRING HARNESS,BRAN..........................UHE,UHH,UHV,UHX	EA	1
229	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	14
229	4	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	10
229	5	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	12
229	6	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	1
229	7	PAOZZ	5310-00-982-4999	96906	MS21044C04	.NUT,SELF-LOCKING, HEXAGON..........................UHE,UHH,UHV,UHX	EA	4
229	8	PAOZZ	5310-00-595-6211	96906	MS15795-803	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	4
229	9	PAOZZ	5305-00-054-5649	96906	MS51957-15	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	4
229	10	PBOZZ	1560-00-420-7870	99551	U6427	.WIRING HARNESS..........................UHE,UHH,UHV,UHX	EA	1
229	11	MFOZZ		99551	U6390	.BRACKET..........................UHE,UHH,UHV,UHX	EA	1
229	12	PAOZZ	5340-00-989-4569	81996	EAB700D9	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	11
229	13	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	2
229	14	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	3
229	15	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
229	16	PAOZZ	5365-00-662-3100	80205	NAS43D03-64	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
229	17	XDOZZ		03538	N80P16022C6	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	1
229	18	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........................UHE,UHH,UHV,UHX	EA	4
229	19	MFOZZ	1660-00-073-6596	97499	20-032-1	.BRACKET,ENGINE..........................UHE,UHH,UHV,UHX	EA	1
229	20	PAOZZ	5340-00-993-6249	81996	EAB700D20	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	1
229	21	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
229	22	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT..........................UHE,UHH,UHV,UHX	EA	1
229	23	PBOZZ	5306-00-531-8979	88044	AN6-7A	.BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	1
229	24	PBOZZ	1560-00-420-7869	99551	U6426	.WIRING HARNESS..........................UHE,UHH,UHV,UHX	EA	1

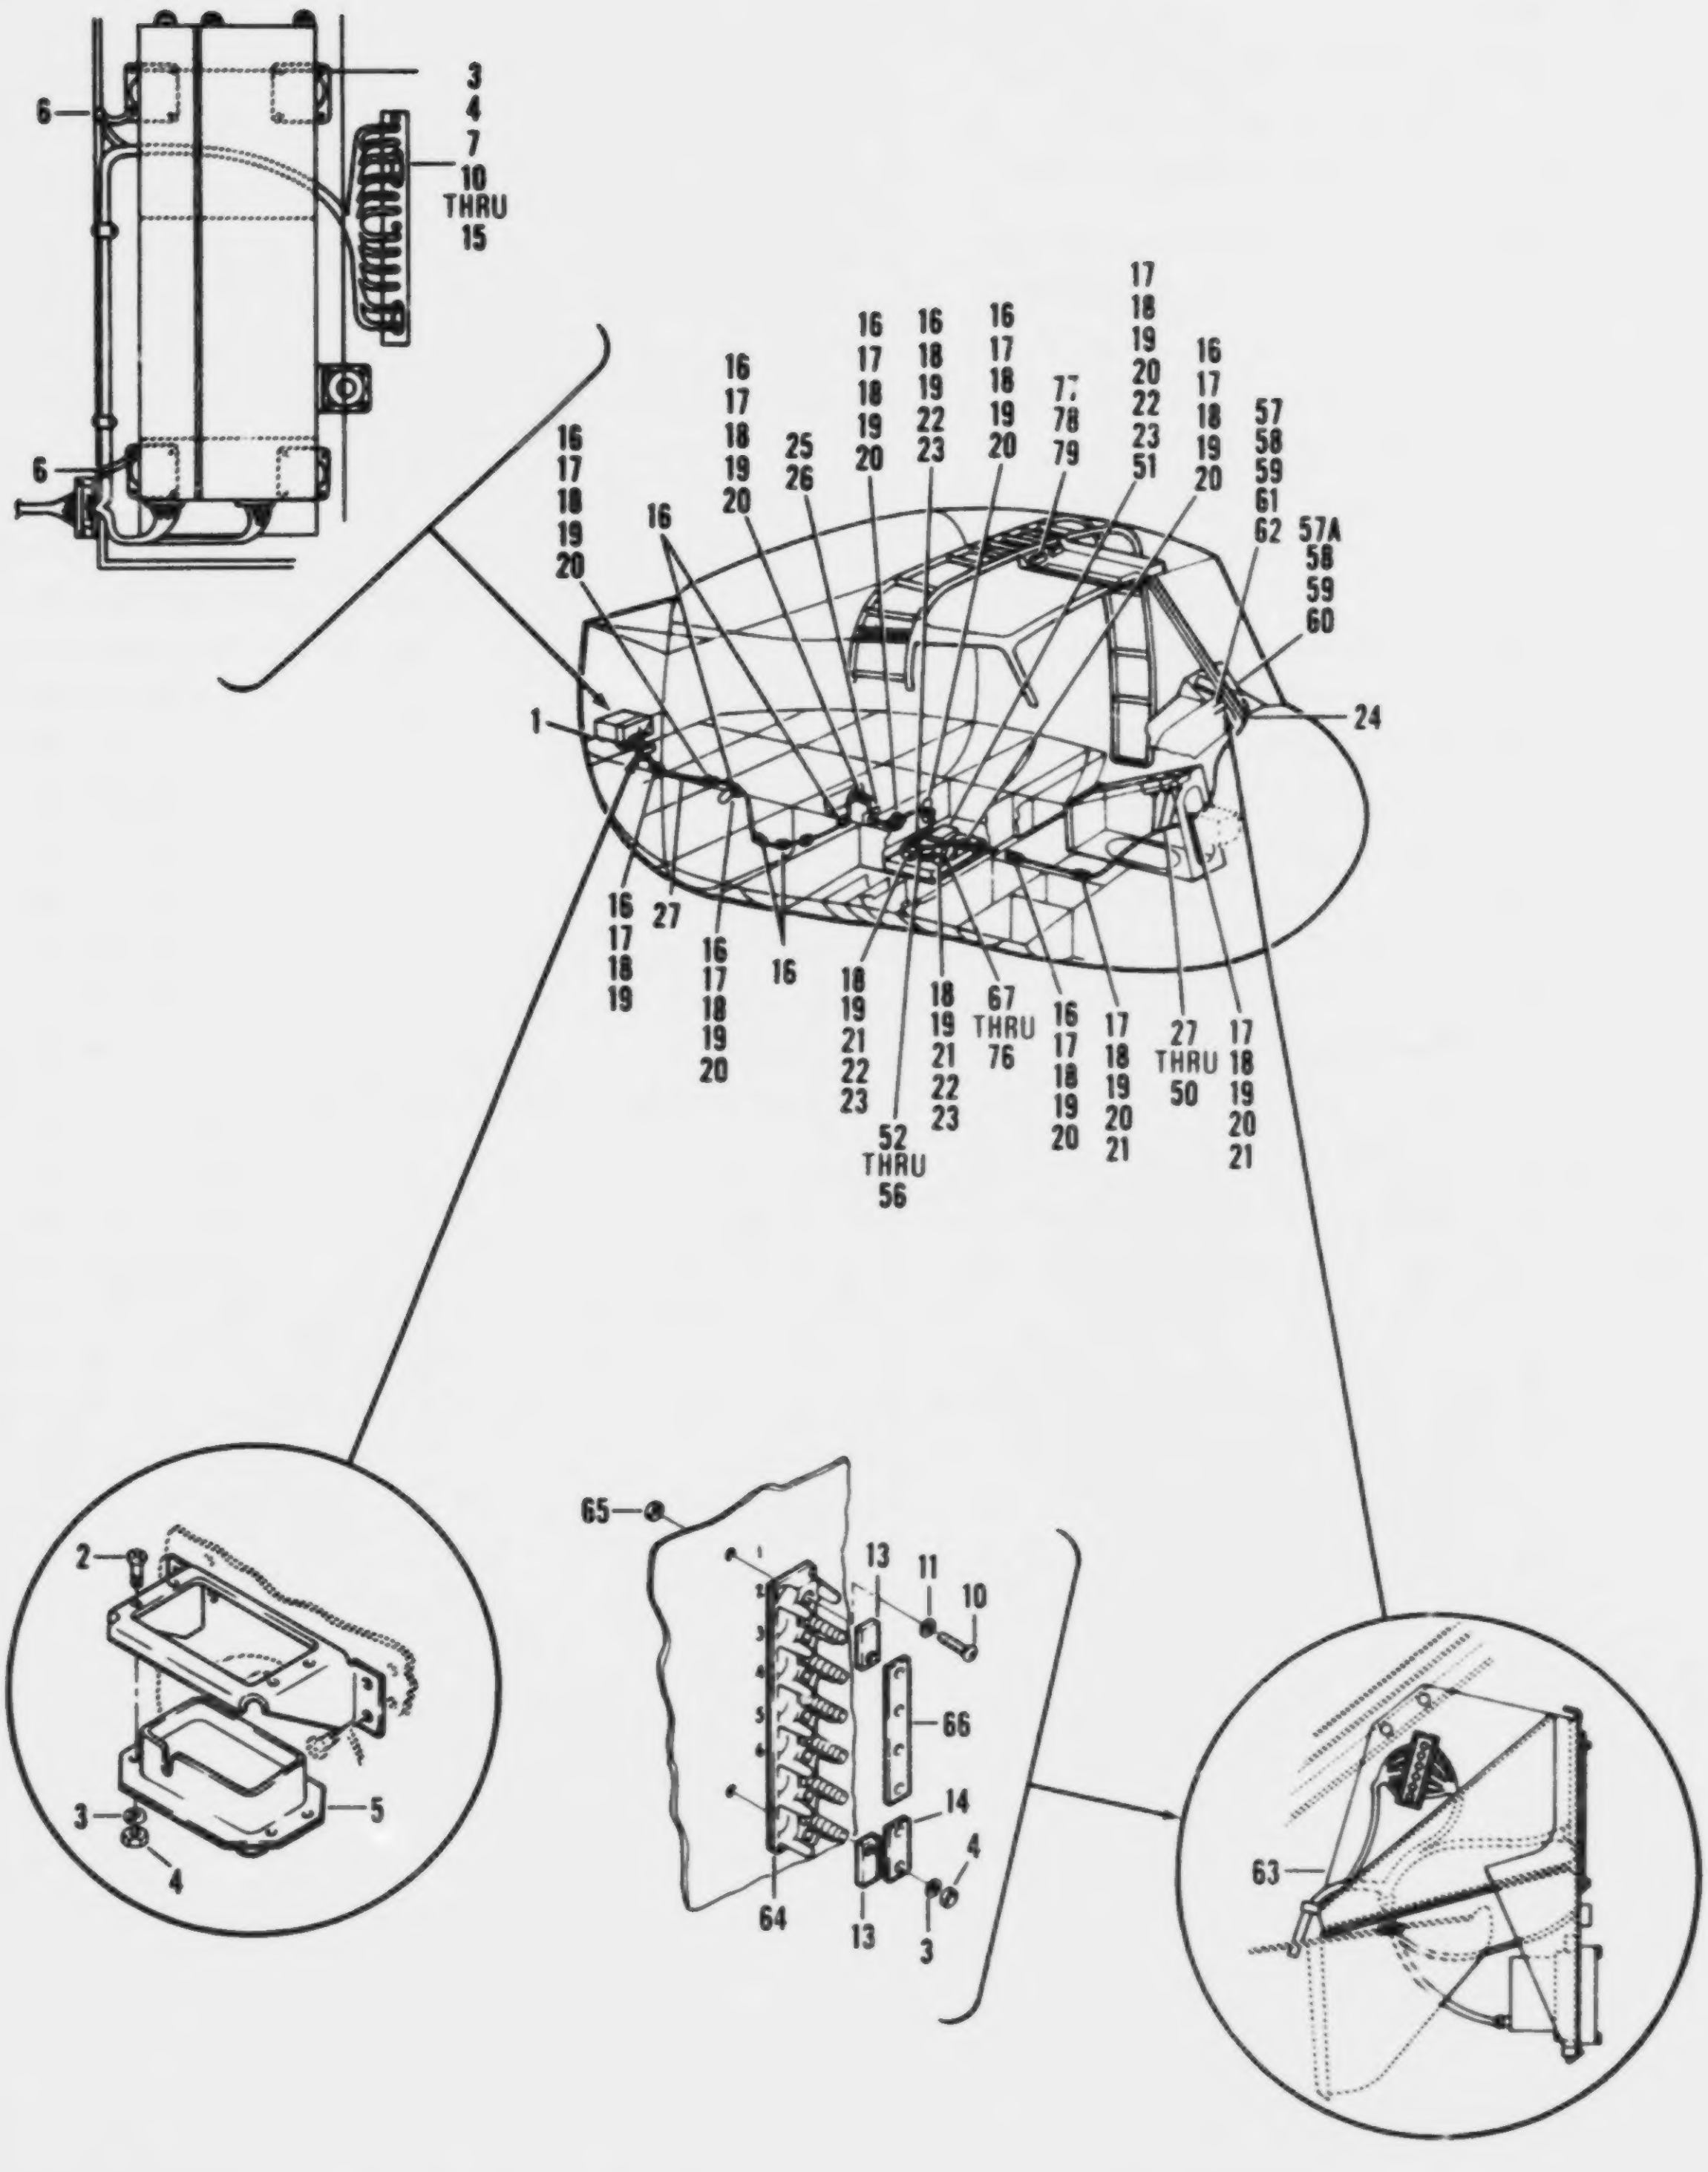
6
3
4
7
10
THRU
15
6
16
17
18
19
20
16
16
17
18
19
20
25
26
16
17
18
19
20
16
18
19
22
23
16
17
18
19
20
77
78
79
17
18
19
20
22
23
51
16
17
18
19
20
57
58
59
61
62
57A
58
59
60
1
24
16
17
18
19
27
16
17
18
19
20
16
18
19
21
22
23
52
THRU
56
18
19
21
22
23
67
THRU
76
16
17
18
19
20
17
18
19
20
21
27
THRU
50
17
18
19
20
21
2
3
4
5
65
13
11
10
66
14
4
13
3
64
63

Figure 230. Decca Navigation Subsystem Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
230		XCFZZ		97499	204-1676-1	DECCA NAVIGATION SY INSTALLATION USBL EFF 64-13492 & SUBSEQUENT	UHB,UHC,UHM	EA	1
230	1	XBOZZ		97499	204-031-136-13	.SUPPORT	UHB,UHC,UHM	EA	1
230	2	PAOZZ	5305-00-984-4983	96906	MS35206-226	.SCREW,MACHINE	UHB,UHC,UHM	EA	4
230	3	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHB,UHC,UHM	EA	22
230	4	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	22
230	5	XDOZZ		81312	XAC104SF2916	.CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
230	6	XDOZZ		96906	MS25083-2BB3	.LEAD,ELECTRICAL	UHB,UHC,UHM	EA	2
230	7	MOOZZ	5940-00-132-2763	96906	MS27212-1-12	.TERMINAL BOARD	UHB,UHC,UHM	EA	1
230	10	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE	UHB,UHC,UHM	EA	5
230	11	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHB,UHC,UHM	EA	5
230	12	PAOZZ	5970-00-963-6321	96906	MS25227-2A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	1
230	13	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	2
230	14	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR CONNECTING	UHB,UHC,UHM	EA	3
230	15	PAOZZ	5970-00-963-6321	96906	MS25227-2A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	1
230	16	PAOZZ	5340-00-989-4571	81996	EAB700014	.CLAMP,LOOP	UHB,UHC,UHM	EA	13
230	17	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHM	EA	23
230	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	14
230	19	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	32
230	20	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHB,UHC,UHM	EA	12
230	21	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP	UHB,UHC,UHM	EA	7
230	22	PAOZZ	5365-00-684-7923	80205	NAS43D03-20	.SPACER,SLEEVE	UHB,UHC,UHM	EA	4
230	23	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE	UHB,UHC,UHM	EA	4
230	24	PAOZZ	5340-00-995-8005	81996	EAB700022	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
230	25	PAOZZ	5325-00-270-8890	96906	MS35489-22	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	1
230	26	PAOZZ	5325-00-270-8891	96906	MS35489-21	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	1
230	27	AOOOO		97499	204-175-463-3	.CABLE ASSEMBLY	UHB,UHC,UHM	EA	1
230	28	PBOZZ	6145-00-578-6604	81349	M5086/2-14-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
230	29	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
230	30	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
230	31	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHB,UHC,UHM	EA	20
230	32	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG	UHB,UHC,UHM	EA	2
230	33	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG	UHB,UHC,UHM	EA	1
230	34	MOOZZ	5970-00-342-8309	97499	85T4-8-1	..TUBE	UHB,UHC,UHM	EA	2
230	35	MOOZZ		97499	85T4-12-1	..INSULATION TUBE	UHB,UHC,UHM	EA	104
230	36	MOOZZ		97499	85T4-875-66	..INSULATION TUBE	UHB,UHC,UHM	EA	1
230	37	PAOZZ	5999-00-768-0608	81312	100-1014S95	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	2
230	38	PAOZZ	5999-01-063-4563	81349	MS17804-16-16	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	1
230	39	PAOZZ	5999-00-052-2301	81312	100-1020S	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	101
230	40	PAOZZ	5970-00-954-1624	06090	RNF100-3-8BLACK	..INSULATION SLEEVING	UHB,UHC,UHM	EA	1
230	41	PAOZZ	5970-00-914-3118	81349	M23053/5-109-0	..INSULATION SLEEVING	UHB,UHC,UHM	FT	V
230	42	PAOZZ	5935-00-498-5785	81349	M24308/1-2	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
230	43	XDOZZ		71468	DBM25SC37A134	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
227	41	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON......UHB,UHC,UHM	EA	1
227	42	XDOOZ		96906	MS25010B11A327	..LIGHT,PANEL..........UHB,UHC,UHM	EA	2
227	43	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT..........UHB,UHC,UHM	EA	2
227	44	PAOZZ	6210-00-519-2653	96906	MS25010BT1A	...LIGHT,PANEL..........UHB,UHC,UHM	EA	2
227	45	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE..........UHB,UHC,UHM	EA	2
227	46	XDOZZ		97499	204-075-717-3	..GUARD,SWITCH..........UHB,UHC,UHM	EA	1
227	47	PBOZZ	5930-00-655-1514	96906	MS35058-22	..SWITCH,TOGGLE..........UHB,UHC,UHM	EA	1
227	48	XBOZZ	9905-00-412-1140	97499	204-075-289-139	.PLATE,IDENTIFICATIO RESCUE HOIST POWER..........UHB,UHC,UHM	EA	1
227	49	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER..........UHB,UHC,UHM	EA	1
227	50	XBOZZ	9905-00-412-1141	97499	204-075-289-141	.PLATE,IDENTIFICATIO RESCUE HOIST CONTROL........UHB,UHC,UHM	EA	1
227	51	PAOZZ	5925-00-937-5669	81349	MS22073-10	.CIRCUIT BREAKER..........UHB,UHC,UHM	EA	1
227	52	XBOZZ	9905-00-412-1142	97499	204-075-289-143	.PLATE,IDENTIFICATIO RESCUE HOIST CABLE CUTTER ....UHB,UHC,UHM	EA	1
227	53	PAOZZ	5925-00-985-8319	96906	MS22073-5	.CIPCUIT BREAKER..........UHB,UHC,UHM	EA	1
227		XCFZZ		97499	1560UH1-343-1	ELECTRICAL INSTL DOOR GUNNERS FOOT MIKE SWITCH ....UHB,UHC,UHM	EA	1
227		XCFZZ		97499	1560UH1-343-2	ELECTRICAL INSTL, DOOR GUNNERS FOOT MIKE SWITCH ....UHE,UHH,UHV,UHX	EA	1
227	54	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE..........UHB,UHC,UHM	EA	4
227	55	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
227	56	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK..........UHE,UHH,UHV,UHX	EA	4
227	57	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
227	58	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING, HEXAGON..........UHE,UHH,UHV,UHX	EA	4
227	59	PAOZZ	5965-00-484-3966	81996	1560UH1-343-3	.BRACKET,MICROPHONE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
227	60	PAOZZ	5305-00-958-0861	96906	MS35207-227	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
227	61	PAOZZ	5930-00-262-0889	96906	M8805/55-001	.SWITCH,PUSH..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
227	62	PAOZZ	5940-00-813-0698	96906	MS25036-101	.TERMINAL,LUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
227	63	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	.WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V

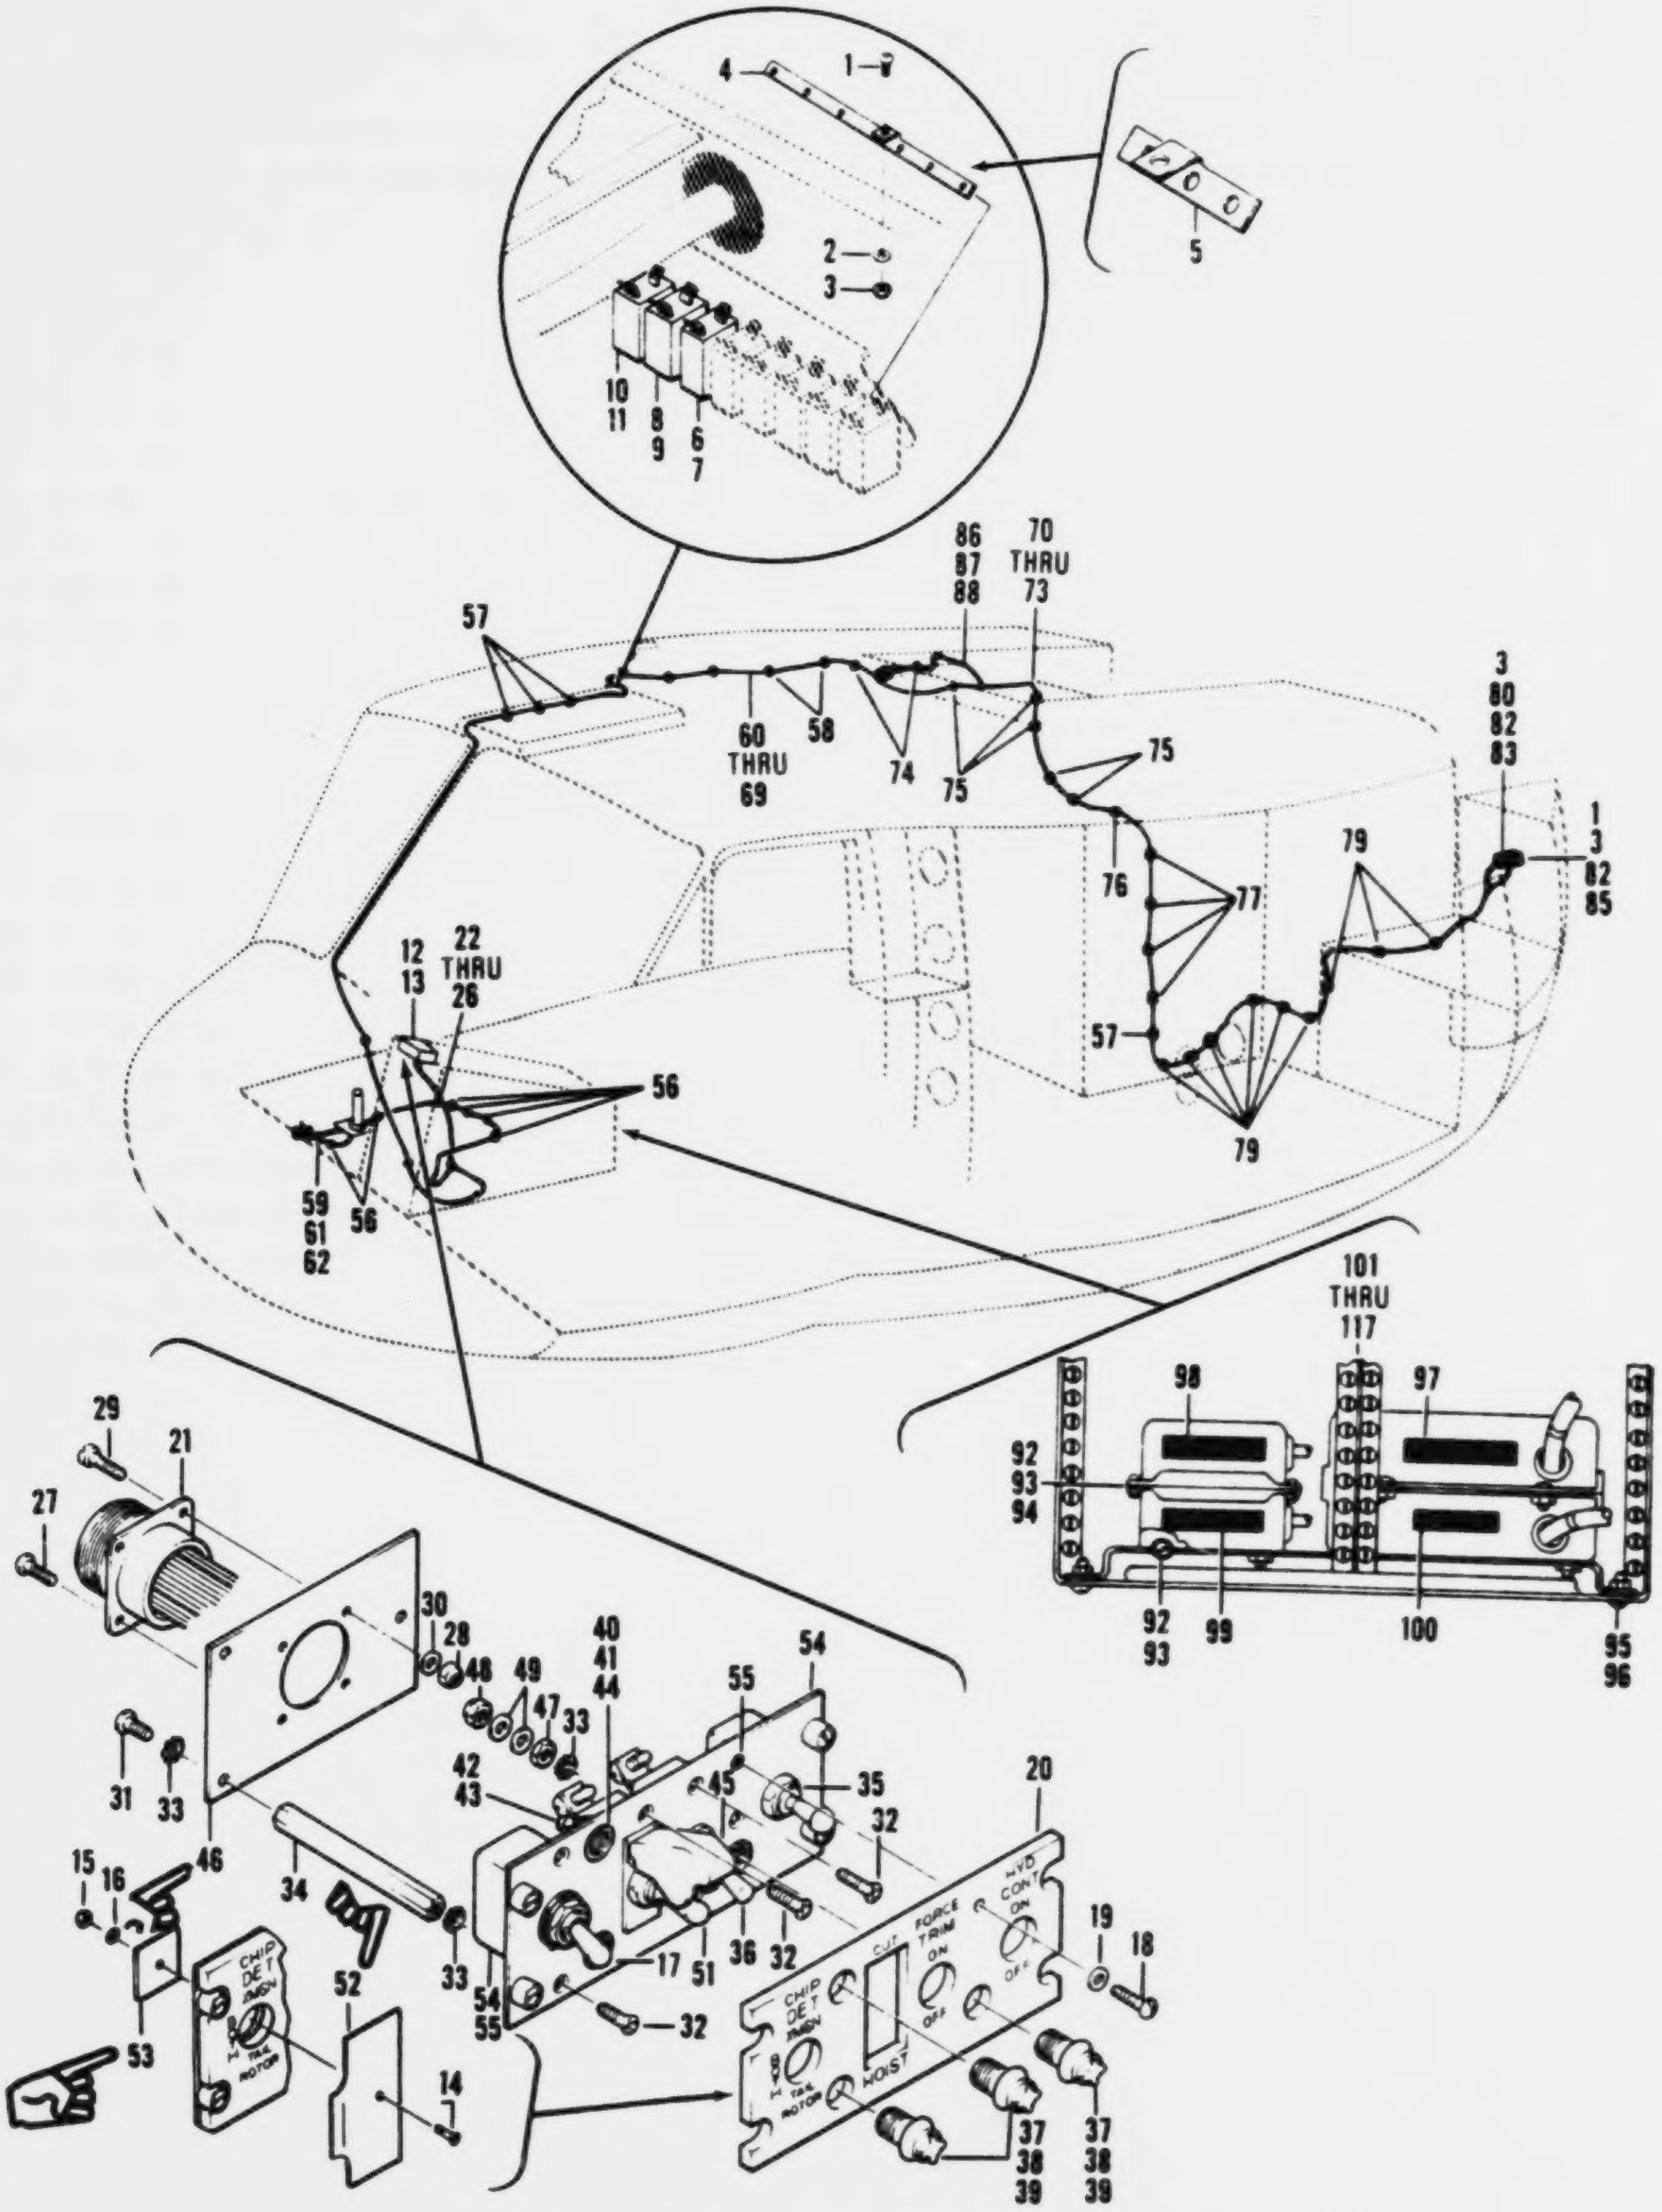
4
1
5
2
3
10
11
8
9
6
7
86
87
88
70
THRU
73
57
60
THRU
69
58
74
75
75
3
80
82
83
76
77
79
1
3
82
85
12
13
22
THRU
26
56
57
79
59
61
62
56
101
THRU
117
98
97
92
93
94
92
93
99
100
95
96
29
21
27
30
28
48
49
47
33
40
41
44
54
55
31
33
42
43
45
35
32
20
15
16
46
34
33
17
51
36
32
19
18
54
55
32
52
53
14
37
38
39
37
38
39
CHIP DET
PUSH
H TAIL ROTOR
CUT
HOIST
FORCE TRIM
ON
OFF
HYD CONT
ON
OFF

Figure 228. Electrical Installation, Rescue Hoist and Discrete Signal Discriminator

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
228		XCFZZ		97499	205-706-033-1	ELECTRICAL INSTL INTERNAL RESCUE HOIST USBL EFF 63-8739 THRU 65-12895 .... UHE,UHH,UHV,UHX	EA	1
228		XCFZZ		97499	205-706-033-3	ELECTRICAL INSTL, INTERNAL RESCUE HOIST USBL EFF 66-746 & SUBSEQUENT .... UHE,UHH,UHV,UHX	EA	1
228	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	3
228	2	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
228	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	3
228	4	PAOZZ	6150-00-225-0267	74992	0-077-8A2D	.BUS,CONDUCTOR U/O PN 205-706-033-1 .... UHE,UHH,UHV,UHX	EA	1
228	5	XDOZZ		97499	20-077-3A28	.BUS BAR U/O PN 205-706-033-3 .... UHE,UHH,UHV,UHX	EA	1
228	6	XBOZZ	9905-00-412-1140	97499	204-075-289-139	.PLATE,IDENTIFICATIO .... UHE,UHH,UHV,UHX	EA	1
228	7	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER .... UHE,UHH,UHV,UHX	EA	1
228	8	XBOZZ	9905-00-412-1141	97499	204-075-289-141	.PLATE,IDENTIFICATIO .... UHE,UHH,UHV,UHX	EA	1
228	9	PBOZZ	5925-00-681-4952	96906	MS25244-10	.CIRCUIT BREAKER .... UHE,UHH,UHV,UHX	EA	1
228	10	XBOZZ	9905-00-412-1142	97499	204-075-289-143	.PLATE,IDENTIFICATIO .... UHE,UHH,UHV,UHX	EA	1
228	11	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER .... UHE,UHH,UHV,UHX	EA	1
228	12	XBOOO		97499	205-075-210-1	.CONTROL PANEL ASSEMBLY,HYDRAULIC U/O PN 205-706-033-1 .... UHE,UHH,UHV,UHX	EA	1
228	13	PAOOO	1680-00-179-6009	97499	205-075-210-7	.CONTROL PANEL ASSEMBLY,HYDRAULIC .... UHE,UHH,UHV,UHX	EA	1
228	14	PAOZZ	5305-00-837-3343	96906	MS24693S28	..SCREW,MACHINE U/O PN 205-075-210-1 .... UHE,UHH,UHV,UHX	EA	1
228	15	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
228	16	PAOZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK U/O PN 205-075-210-1 .... UHE,UHH,UHV,UHX	EA	1
228	17	PBOZZ	5930-00-044-3518	96906	MS25201-6	..SWITCH,TOGGLE U/O PN 205-075-210-7 .... UHE,UHH,UHV,UHX	EA	1
228	18	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
228	19	PAOZZ	5310-00-167-0699	88044	AN960B6	..WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
228	20	XBOZZ	1680-00-131-4307	97499	205-075-238-1	..PANEL,EDGE LITE .... UHE,UHH,UHV,UHX	EA	1
228	21	AOOOZ	6150-00-955-9404	97499	205-075-438-3	..CABLE ASSY .... UHE,UHH,UHV,UHX	EA	1
228	22	PAOZZ	5935-01-048-0092	96906	MS3450W20-27P	...CONNECTOR,RECEPTACL .... UHH,UHV	EA	1
228	23	PAOZZ	5940-00-204-8966	96906	MS25036-102	...TERMINAL,LUG .... UHE,UHH,UHV,UHX	EA	8
228	24	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG .... UHE,UHH,UHV,UHX	EA	5
228	25	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG .... UHE,UHH,UHV,UHX	EA	4
228	26	PBOZZ	6145-00-851-8506	96906	MS25190B20	...WIRE,ELECTRICAL .... UHE,UHH,UHV,UHX	FT	V
228	27	PAOZZ	5305-00-889-2998	96906	MS35206-216	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	3
228	28	PAOZZ	5310-00-807-1471	96906	MS21042L04	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
228	29	PAOZZ	5305-00-543-5068	96906	MS35265-16	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
228	30	PAOZZ	5310-00-187-2397	88044	AN960PD4L	..WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
228	31	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	3
228	32	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	5
228	33	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK .... UHE,UHH,UHV,UHX	EA	8
228	34	XDOZZ	5340-00-896-6246	97499	204-075-242-3	..POST,ELECTRICAL- .... UHE,UHH,UHV,UHX	EA	3
228	35	PAOZZ	5930-00-781-7101	96906	MS24658-22G	..SWITCH,TOGGLE .... UHE,UHH,UHV,UHX	EA	1
228	36	PBOZZ	5930-00-687-1097	88044	AN3022-2	..SWITCH,TOGGLE .... UHE,UHH,UHV,UHX	EA	1
228	37	XDOOZ		96906	MS25010B11A327	..LIGHT,PANEL .... UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
228	38	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP, INCANDESCENT	UHE, UHH, UHV, UHX	EA	1
228	39	AOOOZ	6210-00-519-2653	96906	MS25010B11A	LIGHT, PANEL	UHE, UHH, UHV, UHX	EA	1
228	40	XDOZZ		96906	MS25082B21	....NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	1
228	41	PAOZZ	5310-00-905-5454	96906	MS35333-121	....WASHER, LOCK	UHE, UHH, UHV, UHX	EA	1
228	42	PAOZZ	5310-00-939-1061	96906	MS35333-104	....WASHER, LOCK	UHE, UHH, UHV, UHX	EA	1
228	43	PAOZZ	5305-00-637-5884	96906	MS35214-12	....SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
228	44	PAOZZ	6210-00-933-1405	96906	MS250108	....LIGHT, PANEL	UHE, UHH, UHV, UHX	EA	1
228	45	XDOZZ		97499	90-045-5	..GUARD, SWITCH	UHE, UHH, UHV, UHX	EA	1
228	46	MFOZZ	DELETED	97499	205-075-237-5	..PLATE ASSY	UHE, UHH, UHV, UHX	EA	1
228	47	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	1
228	48	PAOZZ	5310-00-934-9747	96906	MS35649-262	..NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	1
228	49	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER, FLAT	UHE, UHH, UHV, UHX	EA	2
228	51	PBOZZ	5930-00-655-1514	96906	MS35058-22	..SWITCH, TOGGLE	UHE, UHH, UHV, UHX	EA	1
228	52	MFOZZ	DELETED	97499	205-075-210-3	..PLATE, PANEL, CONTROL U/O PN 205-075-210-1	UHE, UHH, UHV, UHX	EA	1
228	53	MFOZZ	DELETED	97499	205-075-210-5	..PLATE, PANEL, CONTROL U/O PN 205-075-210-1	UHE, UHH, UHV, UHX	EA	1
228	54	XAOZZ		97499	205-075-237-1	..PLATE MOUNTING	UHE, UHH, UHV, UHX	EA	1
228	55	PAOZZ	5310-00-489-5009	46384	CL632-2	...NUT, PLAIN, CLINCH	UHE, UHH, UHV, UHX	EA	1
228	56	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	6
228	57	PAOZZ	5340-00-989-4572	81996	EAB700D15	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	4
228	58	XDOZZ	5340-00-989-4569	81996	EAB700D9	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	2
228	59	AOOOZ	1680-00-133-7083	97499	205-075-438-1	.CABLE ASSY, RESCUE U/O PN 205-706-033-1	UHE, UHH, UHV, UHX	EA	1
228	60	AOOOZ		97499	205-075-438-5	.CABLE ASSEMBLY, POWE	UHE, UHH, UHV, UHX	EA	1
228	61	PAOZZ	5930-00-912-3171	97151	65C49022	..SWITCH, TOGGLE U/O PN 205-075-438-1	UHE, UHH, UHV, UHX	EA	1
228	62	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE, ELECTRICAL	UHE, UHH, UHV, UHX	FT	V
228	63	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL, LUG U/O PN 205-070-438-5	UHE; UHH, UHV, UHX	EA	7
228	64	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL, LUG U/O PN 205-070-438-5	UHE, UHH, UHV, UHX	EA	2
228	65	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL, LUG U/O PN 205-075-438-5	UHE, UHH, UHV, UHX	EA	4
228	66	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL, LUG U/O PN 205-070-438-5	UHE, UHH, UHV, UHX	EA	3
228	67	PBOZZ	5940-00-557-4341	96906	MS25036-123	..TERMINAL, LUG U/O PN 205-070-438-5	UHE, UHH, UHV, UHX	EA	3
228	68	PAOZZ	6145-00-578-6596	81349	M5086/2-4-9	..WIRE, ELECTRICAL U/O PN 205-070-438-5	UHE, UHH, UHV, UHX	FT	V
228	69	PAOZZ	5935-00-837-6896	96906	MS3100R32-6S	..CONNECTOR, RECEPTACL CABIN ROOF DISC. U/O PN 205-070-438-5	UHE, UHH, UHV, UHX	EA	1
228	70	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	3
228	71	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
228	72	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	4
228	73	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT, SELF-LOCKING EXTENDED WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	4
228	74	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	2
228	75	PAOZZ	5935-01-016-2464	81348	WC596-6-1	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	5
228	76	PAOZZ	5340-00-548-7812	81996	EAB700-20	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	1
228	77	PAOZZ	5340-00-993-1470	81996	EAB700D18	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	4
228	79	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	9

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
228	80	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
228	82	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
228	83	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET RESCUE HOIST..........UHE,UHH,UHV,UHX	EA	1
228	85	PAOZZ	5925-00-954-3720	82647	D7235-1-125	.CONTACT SET,CIRCUIT..........UHE,UHH,UHV,UHX	EA	1
228	86	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
228	87	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	3
228	88	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
228		XCFZZ	1560-00-053-4144	81996	1560UH1-430-1	MODIFICATION KIT DISCRETE SIGNAL USE-AFT-CMPL-W MWO 55-1520-211-40/5..........UHB,UHC,UHM	EA	1
228		XCFZZ	1560-00-053-4142	81996	1560UH1-429-1	MODIFICATION KIT DISCRETE SIGNAL USE-AFT- CMPL-W MWO 55-1520-210-40/2 USBL EFF 63-8739 THRU 66-12895 ....UHE,UHH,UHV,UHX	EA	1
228		XCFZZ	1560-00-053-4141	81996	1560UH1-428-1	MODIFICATION KIT DISCRETE SIGNAL USE-AFT- CMPL-W MWO 55-1520-210-40/1 USBL EFF 66-746 THRU 67-17777 ....UHE,UHH,UHV,UHX	EA	1
228	92	PAOZZ	5305-00-543-5069	96906	MS35265-29	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	93	PAOZZ	5310-00-167-0832	88044	AN960-6L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	94	PAOZZ	5310-00-807-1465	96906	MS21042-06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	95	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
228	96	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
228	97	MDOZZ		81996	1560EG035-3	.LABEL,LEFT,CREW..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	98	MDOZZ		81996	1560EG035-4	.LABEL,RIGHT,CREW..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	99 •	MDOZZ		81996	1560EG035-2	.LABEL,CO-PILOT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	100	MDOZZ		81996	1560EG035-1	.LABEL,PILOT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	101	MFOZZ		81996	1560UH1-423-1	.PLATE..........UHB,UHC,UHM	EA	1
228	102	MFOZZ		81996	1560UH1-427-1	.CHANNEL..........UHB,UHC,UHM	EA	2
228	103	MFOZZ		81996	1560UH1-424-1	.COVER..........UHB,UHC,UHM	EA	1
228	104	MFOZZ		81996	1560UH1-425-1	.BRACKET U/O PN 1560UH1-429-1..........UHE,UHH,UHV,UHX	EA	1
228	105	MFOZZ		81996	1560UH1-426-1	.COVER U/O PN 1560UH1-429-1..........UHE,UHH,UHV,UHX	EA	1
228	106	MFOZZ		81996	1560UH1-431-1	.BRACKET U/O PN 1560UH1-428-1..........UHE,UHH,UHV,UHX	EA	1
228	107	PAOZZ	5940-00-813-0698	96906	MS25036-101	.TERMINAL,LUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	44
228	108	PAOZZ	5940-01-007-7875	81349	M7928/3-2	.SPLICE,CONDUCTOR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
228	109	PAOZZ	5940-00-686-7371	00779	323931	.FERRULE,METALLIC SH..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
228	110	PAOZZ	5970-00-812-2969	92194	FIT221 1-8BLACK	.INSULATION SLEEVING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	111	PAOZZ	5970-00-822-9217	80249	MP2282-2	.SLEEVING,TEXTILE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
228	112	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	.WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	113	PAOZZ	6145-00-608-5484	81349	M7078-3-22-1	.CABLE,SPECIAL PURPO..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
228	114	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
228	115	PAOZZ	5905-00-104-8345	81349	RCR20G560JS	.RESISTOR,FIXED COMPOSITION..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
228	116	PBOZZ	5905-00-114-5361	81349	RCR20G121JS	.RESISTOR,FIXED, COMPOSITION..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
228	117	PAOZZ	5905-00-110-0196	81349	RCR20G102JS	.RESISTOR,FIXED, COMPOSITION..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

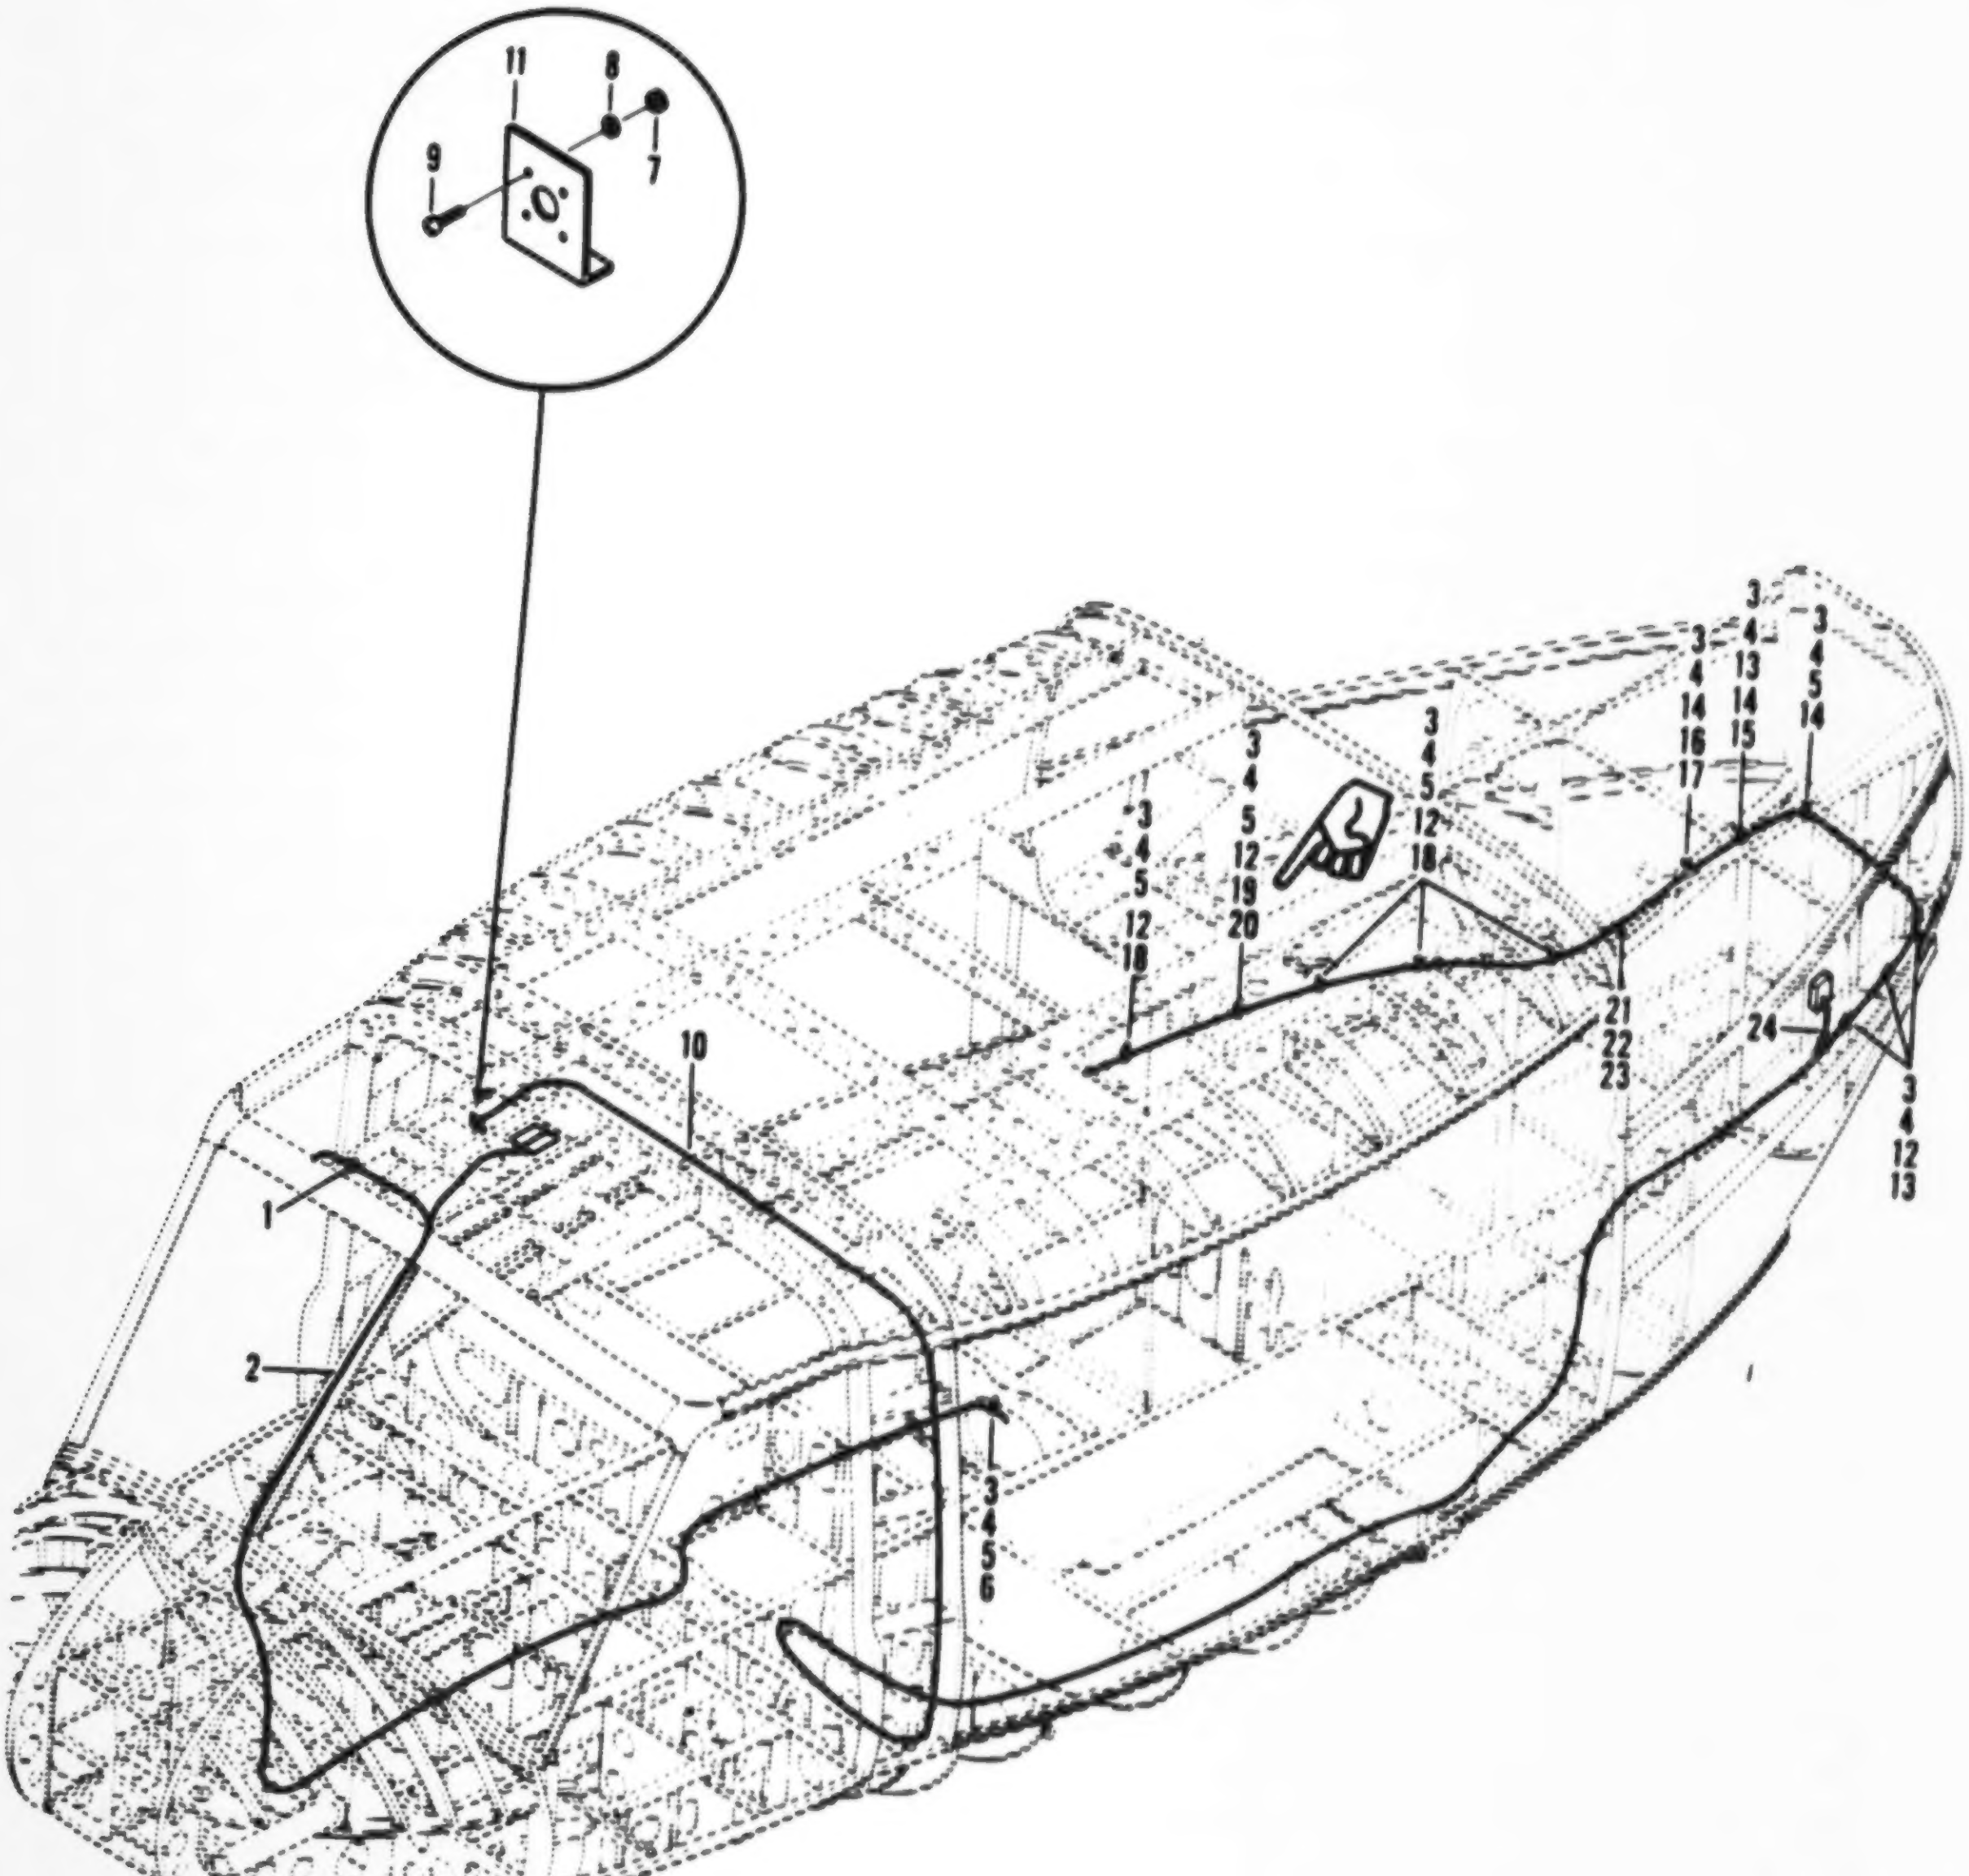
11
8
9
7
10
1
2
3 4 5 12 18
3 4 5 12 19 20
3 4 5 12 18
3 4 14 16 17
3 4 13 14 15
3 4 5 14
21 22 23
24
3 4 12 13
3 4 5 6

Figure 229. Electrical Installation, Smoke Generator

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
229		XCFZZ		97499	53E00-74A	ELECTRICAL INSTL SMOKE GENERATOR ... UHE,UHH,UHV,UHX	EA	1
229	1	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC ... UHE,UHH,UHV,UHX	EA	1
229	2	PBOZZ	1560-00-420-7868	99551	U6429	.WIRING HARNESS,BRAN ... UHE,UHH,UHV,UHX	EA	1
229	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ... UHE,UHH,UHV,UHX	EA	14
229	4	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	10
229	5	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	12
229	6	PAOZZ	5340-00-161-5997	96906	MS21122-4	.CLAMP,LOOP ... UHE,UHH,UHV,UHX	EA	1
229	7	PAOZZ	5310-00-982-4999	96906	MS21044C04	.NUT,SELF-LOCKING, HEXAGON ... UHE,UHH,UHV,UHX	EA	4
229	8	PAOZZ	5310-00-595-6211	96906	MS15795-803	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	4
229	9	PAOZZ	5305-00-054-5649	96906	MS51957-15	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	4
229	10	PBOZZ	1560-00-420-7870	99551	U6427	.WIRING HARNESS ... UHE,UHH,UHV,UHX	EA	1
229	11	MFOZZ		99551	U6390	.BRACKET ... UHE,UHH,UHV,UHX	EA	1
229	12	PAOZZ	5340-00-989-4559	81996	EAB70009	.CLAMP,LOOP ... UHE,UHH,UHV,UHX	EA	11
229	13	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	2
229	14	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP ... UHE,UHH,UHV,UHX	EA	3
229	15	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE ... UHE,UHH,UHV,UHX	EA	1
229	16	PAOZZ	5365-00-662-3100	80205	NAS43D03-64	.SPACER,SLEEVE ... UHE,UHH,UHV,UHX	EA	1
229	17	XDOZZ		03538	H80P16022C5	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1
229	18	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE ... UHE,UHH,UHV,UHX	EA	4
229	19	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE ... UHE,UHH,UHV,UHX	EA	1
229	20	PAOZZ	5340-00-993-6249	81996	EAB700020	.CLAMP,LOOP ... UHE,UHH,UHV,UHX	EA	1
229	21	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
229	22	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT ... UHE,UHH,UHV,UHX	EA	1
229	23	PBOZZ	5306-00-531-8979	88044	AN6-7A	.BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	1
229	24	PBOZZ	1560-00-420-7869	99551	U6426	.WIRING HARNESS ... UHE,UHH,UHV,UHX	EA	1

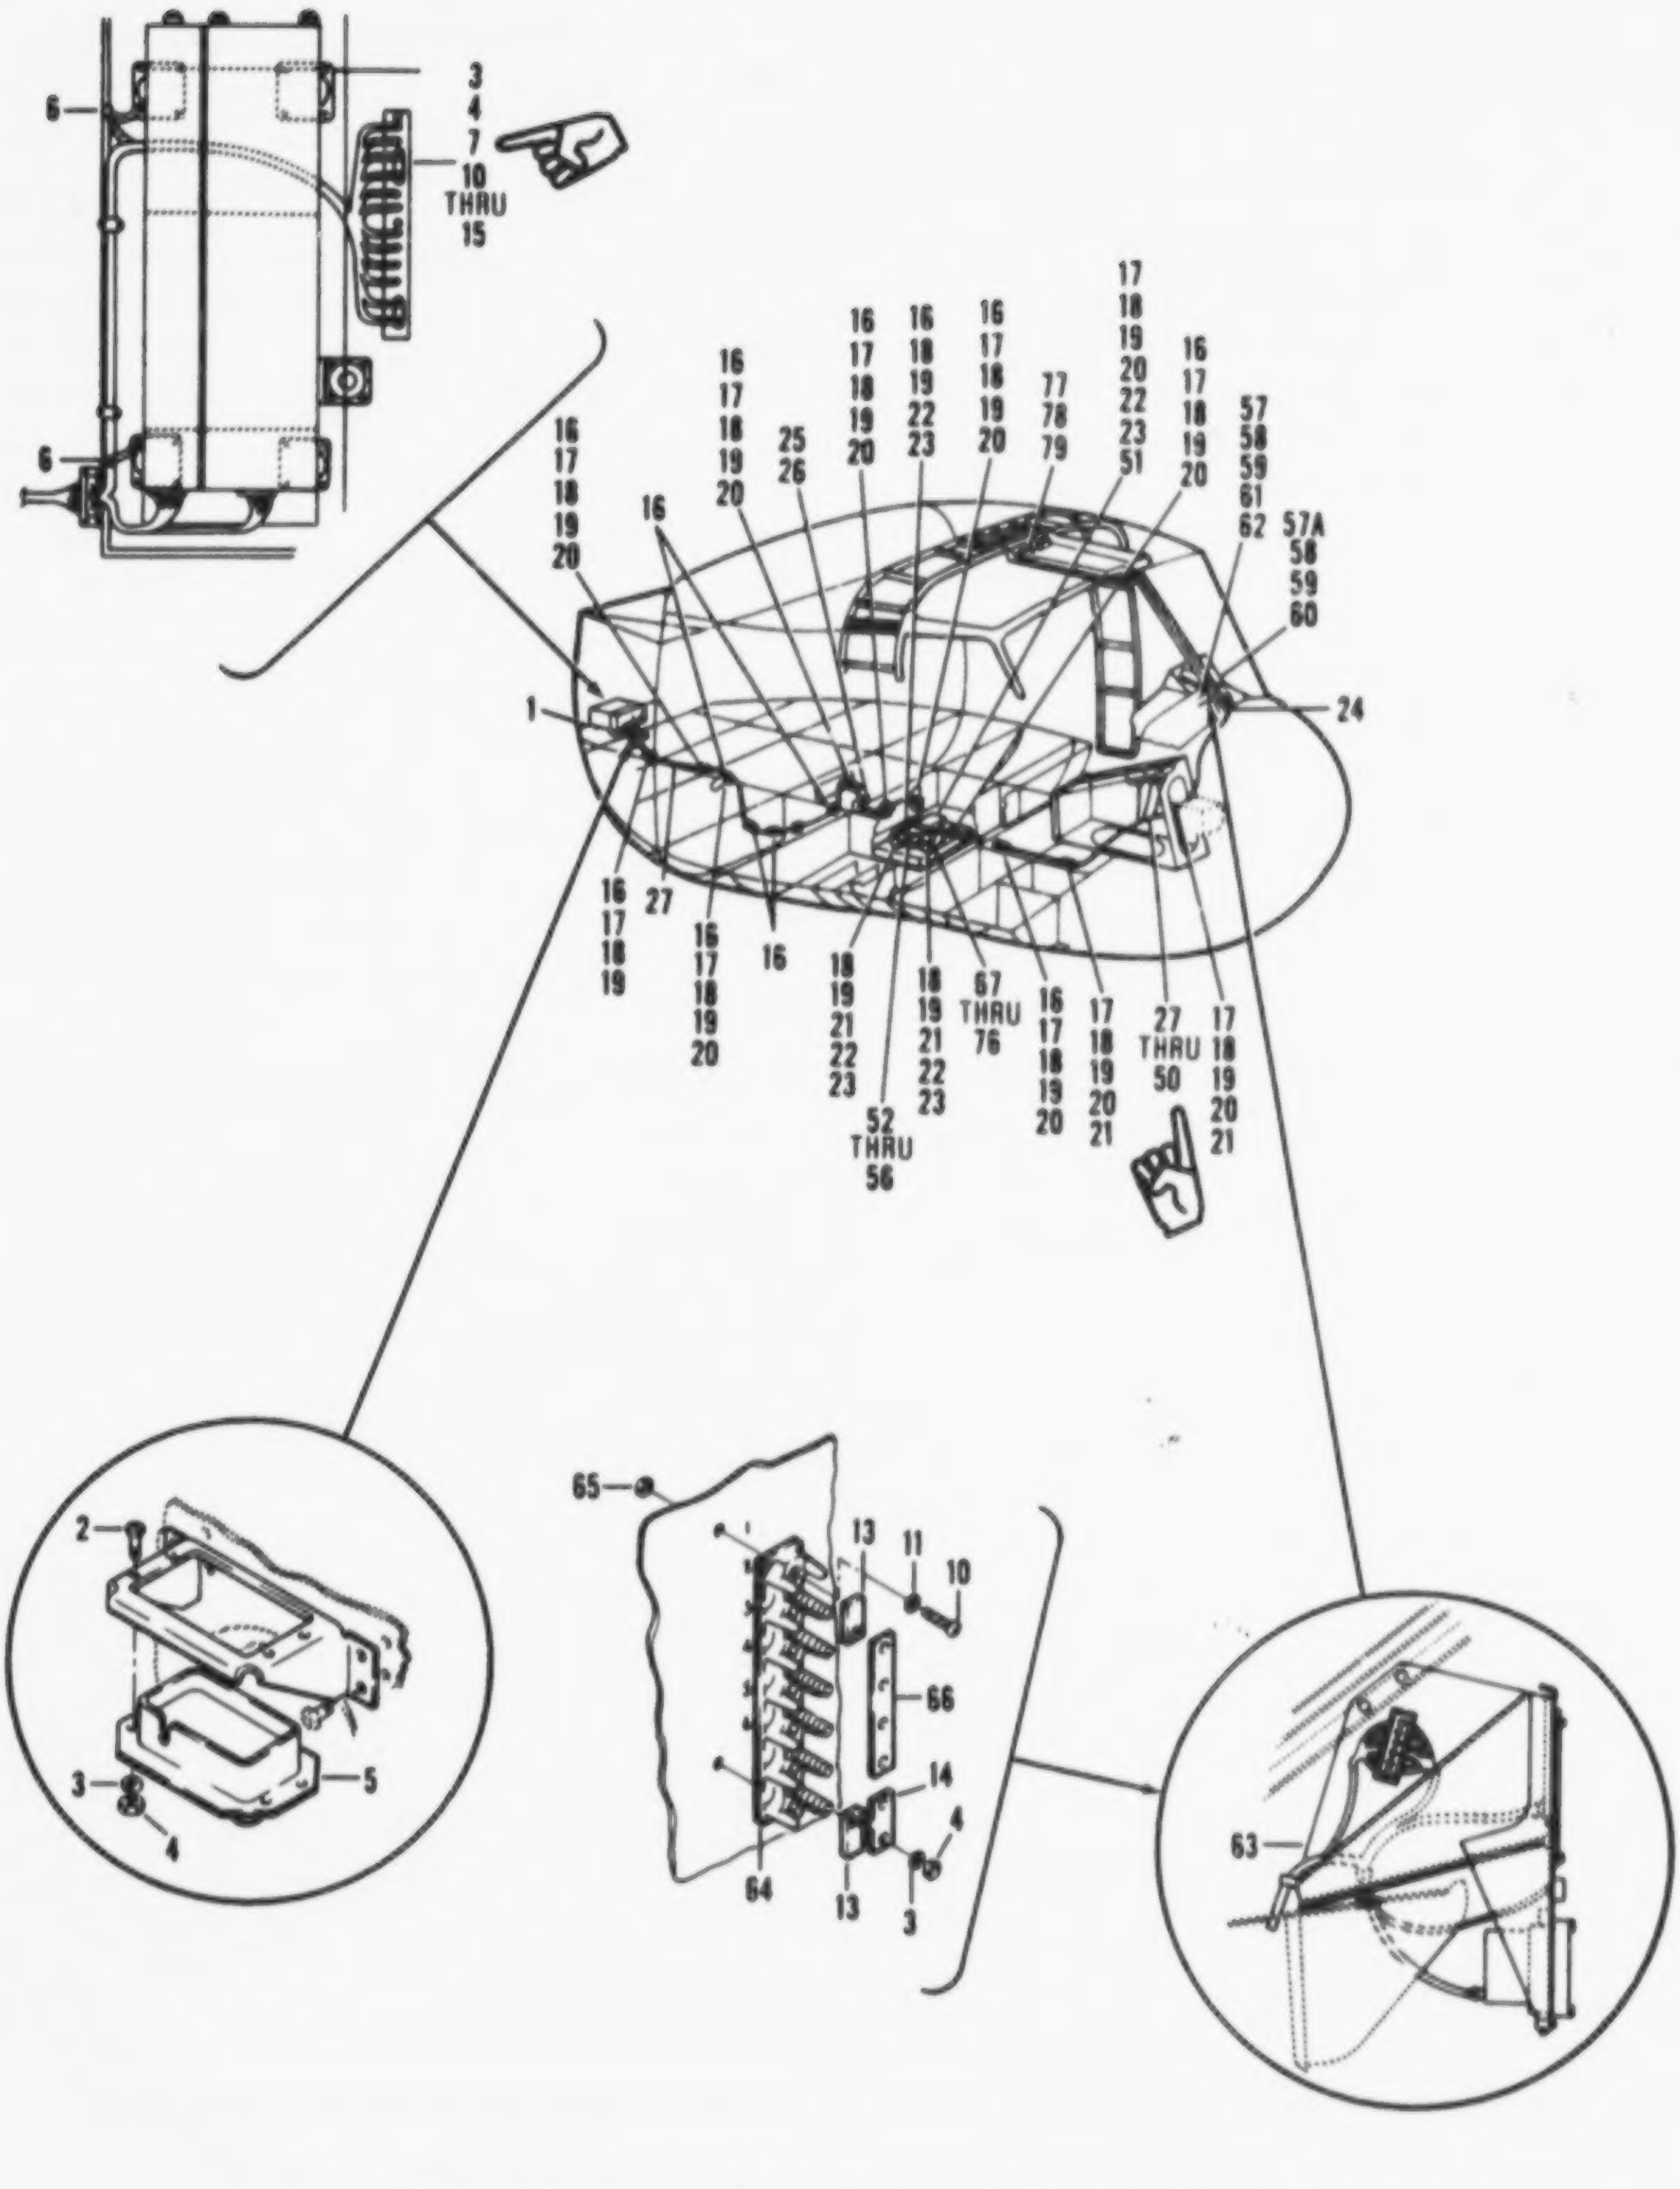
3
4
7
10 THRU 15
6
6
16 17 18 19 20
16
16 17 18 19 20
25 26
16 17 18 19 20
16 18 19 22 23
16 17 18 19 20
77 78 79
17 18 19 20 22 23 51
16 17 18 19 20
57 58 59 61 62
57A 58 59 60
1
24
16 17 18 19
27
16 17 18 19 20
16
18 19 21 22 23
18 19 21 22 23
52 THRU 56
67 THRU 76
16 17 18 19 20
17 18 19 20 21
27 THRU 50
17 18 19 20 21
2
3
4
5
65
13
11
10
66
14
4
3
13
64
63

Figure 230. Decca Navigation Subsystem Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
230		XCFZZ		97499	204-1676-1	DECCA NAVIGATION SY INSTALLATION USBL EFF 64-13492 & SUBSEQUENT	UHB,UHC,UHM	EA	1
230	1	XBOZZ		97499	204-031-136-13	.SUPPORT	UHB,UHC,UHM	EA	1
230	2	PAOZZ	5305-00-984-4983	96906	MS35206-226	.SCREW,MACHINE	UHB,UHC,UHM	EA	4
230	3	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHB,UHC,UHM	EA	22
230	4	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	22
230	5	XDOZZ		81312	XAC104SF2916	.CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
230	6	XDOZZ		96906	MS25083-2883	.LEAD,ELECTRICAL	UHB,UHC,UHM	EA	2
230	7	MDOZZ	DELETED	96906	MS27212-1-12	.TERMINAL BOARD	UHB,UHC,UHM	EA	1
230	10	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE	UHB,UHC,UHM	EA	5
230	11	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHB,UHC,UHM	EA	5
230	12	PAOZZ	5970-00-963-6321	96906	MS25227-2A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	1
230	13	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	2
230	14	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR CONNECTING	UHB,UHC,UHM	EA	3
230	15	PAOZZ	5970-00-963-6321	96906	MS25227-2A	INSULATOR,PLATE	UHB,UHC,UHM	EA	1
230	16	PAOZZ	5340-00-989-4571	81996	EAB700D14	.CLAMP,LOOP	UHB,UHC,UHM	EA	13
230	17	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHM	EA	23
230	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	14
230	19	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	32
230	20	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHB,UHC,UHM	EA	12
230	21	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP	UHB,UHC,UHM	EA	7
230	22	PAOZZ	5365-00-684-7923	80205	NAS43D03-20	.SPACER,SLEEVE	UHB,UHC,UHM	EA	4
230	23	PAOZZ	5305-00-995-3444	96906	MS35207-266	SCREW,MACHINE	UHB,UHC,UHM	EA	4
230	24	PAOZZ	5340-00-995-8005	81996	EAB700D22	CLAMP,LOOP	UHB,UHC,UHM	EA	1
230	25	PAOZZ	5325-00-270-8890	96906	MS35489-22	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	1
230	26	PAOZZ	5325-00-270-8891	96906	MS35489-21	GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	1
230	27	AOOOO		97499	204-175-463-3	.CABLE ASSEMBLY	UHB,UHC,UHM	EA	1
230	28	PBOZZ	6145-00-578-6604	81349	M5086/2-14-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
230	29	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
230	30	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	..WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
230	31	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHB,UHC,UHM	EA	20
230	32	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG	UHB,UHC,UHM	EA	2
230	33	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG	UHB,UHC,UHM	EA	1
230	34	MOOZZ	DELETED	97499	85T4-8-1	..TUBE	UHB,UHC,UHM	EA	2
230	35	MOOZZ		97499	85T4-12-1	..INSULATION TUBE	UHB,UHC,UHM	EA	104
230	36	MOOZZ		97499	85T4-875-66	..INSULATION TUBE	UHB,UHC,UHM	EA	1
230	37	PAOZZ	5999-00-768-0608	81312	100-1014S96	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	2
230	38	PAOZZ	5999-01-063-4563	81349	MS17804-16-16	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	1
230	39	PAOZZ	5999-00-052-2301	81312	100-1020S	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	101
230	40	PAOZZ	5970-00-954-1624	06090	RNF100-3-8BLACK	..INSULATION SLEEVING	UHB,UHC,UHM	EA	1
230	41	PAOZZ	5970-00-914-3118	81349	M23053/5-109-0	..INSULATION SLEEVING	UHB,UHC,UHM	FT	V
230	42	PAOZZ	5935-00-498-5785	81349	M24308/1-2	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
230	43	XDOZZ		71468	DBM25SC37A134	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
230	44	XDOZZ		71468	DCM37SC33	..CONNECTOR,RECEPTACL....UHB,UHC,UHM	EA	2
230	45	PAOZZ	5935-00-956-2935	00434	D20419	..SCREW LOCK,MALE....UHB,UHC,UHM	EA	1
230	46	PAOZZ	5935-00-805-2579	71468	DB19678-2	..SHIELD,ELECTRICAL....UHB,UHC,UHM	EA	1
230	47	PAOZZ	5935-00-583-8836	71468	DCJS19678-3	..SHIELD,ELECTRICAL....UHB,UHC,UHM	EA	2
230	48	PAOZZ	5935-00-924-0437	82598	273AB	..CONNECTOR,PLUG,ELEC....UHB,UHC,UHM	EA	4
230	49	XDOZZ		82598	730603	..PROTECTOR,ELECTRICA CONNECTOR....UHB,UHC,UHM	EA	1
230	50	PAOZZ		82598	PYE737910	..CONNECTOR,PLUG,E....UHB,UHC,UHM	EA	1
230	51	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
230	52	AOOOO		97499	204-175-463-1	.CABLE ASSEMBLY....UHB,UHC,UHM	EA	1
230	53	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHB,UHC,UHM	EA	2
230	54	PAOZZ	5970-00-815-1295	81349	M23053/5-106-0	..INSULATION SLEEVING....UHB,UHC,UHM	FT	V
230	55	PAOZZ	5935-00-924-0435	82598	L734P	..CONNECTOR,PLUG,ELEC....UHB,UHC,UHM	EA	1
230	56	PBOZZ	6145-00-643-0651	81349	MILW16878TYPEB18	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
230	57	AOOOO		97499	204-175-463-7	.CABLE ASSEMBLY....UHB,UHC,UHM	EA	1
230	57A	AOOOO		97499	204-175-463-9	.CABLE ASSEMBLY....UHB,UHC,UHM	EA	1
230	58	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
230	59	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG....UHB,UHC,UHM	EA	2
230	60	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-463-9....UHB,UHC,UHM	EA	2
230	61	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-463-7....UHB,UHC,UHM	EA	1
230	62	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR U/O PN 204-175-463-7....UHB,UHC,UHM	EA	1
230	63	XBOZZ		97499	204-031-136-3	.SUPPORT ASSEMBLY....UHB,UHC,UHM	EA	1
230	64	XDOZZ		96906	MS27212-1-6	.TERMINAL BOARD....UHB,UHC,UHM	EA	1
230	65	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON....UHB,UHC,UHM	EA	2
230	66	MOOZZ	6150-00-557-7660	96906	MS25226-2-4	.BUS,CONNECTOR....UHB,UHC,UHM	EA	1
230	67	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
230	68	PAOZZ	5365-00-580-3867	80205	NAS43DD3-30	.SPACER,SLEEVE....UHB,UHC,UHM	EA	1
230	69	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
230	70	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
230	71	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT....UHB,UHC,UHM	EA	1
230	72	PAOZZ	5310-00-261-8278	96906	MS35338-100	.WASHER,LOCK....UHB,UHC,UHM	EA	1
230	73	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON....UHB,UHC,UHM	EA	1
230	74	PAOZZ	5305-00-069-4553	96906	MS35190-238	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
230	75	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE....UHB,UHC,UHM	EA	4
230	76	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT....UHB,UHC,UHM	EA	4
230	77	PAOZZ	5925-00-686-3301	96906	MS25244-15	.CIRCUIT BREAKER....UHB,UHC,UHM	EA	1
230	78	PBOZZ	9905-00-915-8907	97499	204-075-289-341	.PLATE,DESIGNATION....UHB,UHC,UHM	EA	1
230	79	MFOZZ		97499	204-031-136-17	.PLATE,COVER....UHB,UHC,UHM	EA	1

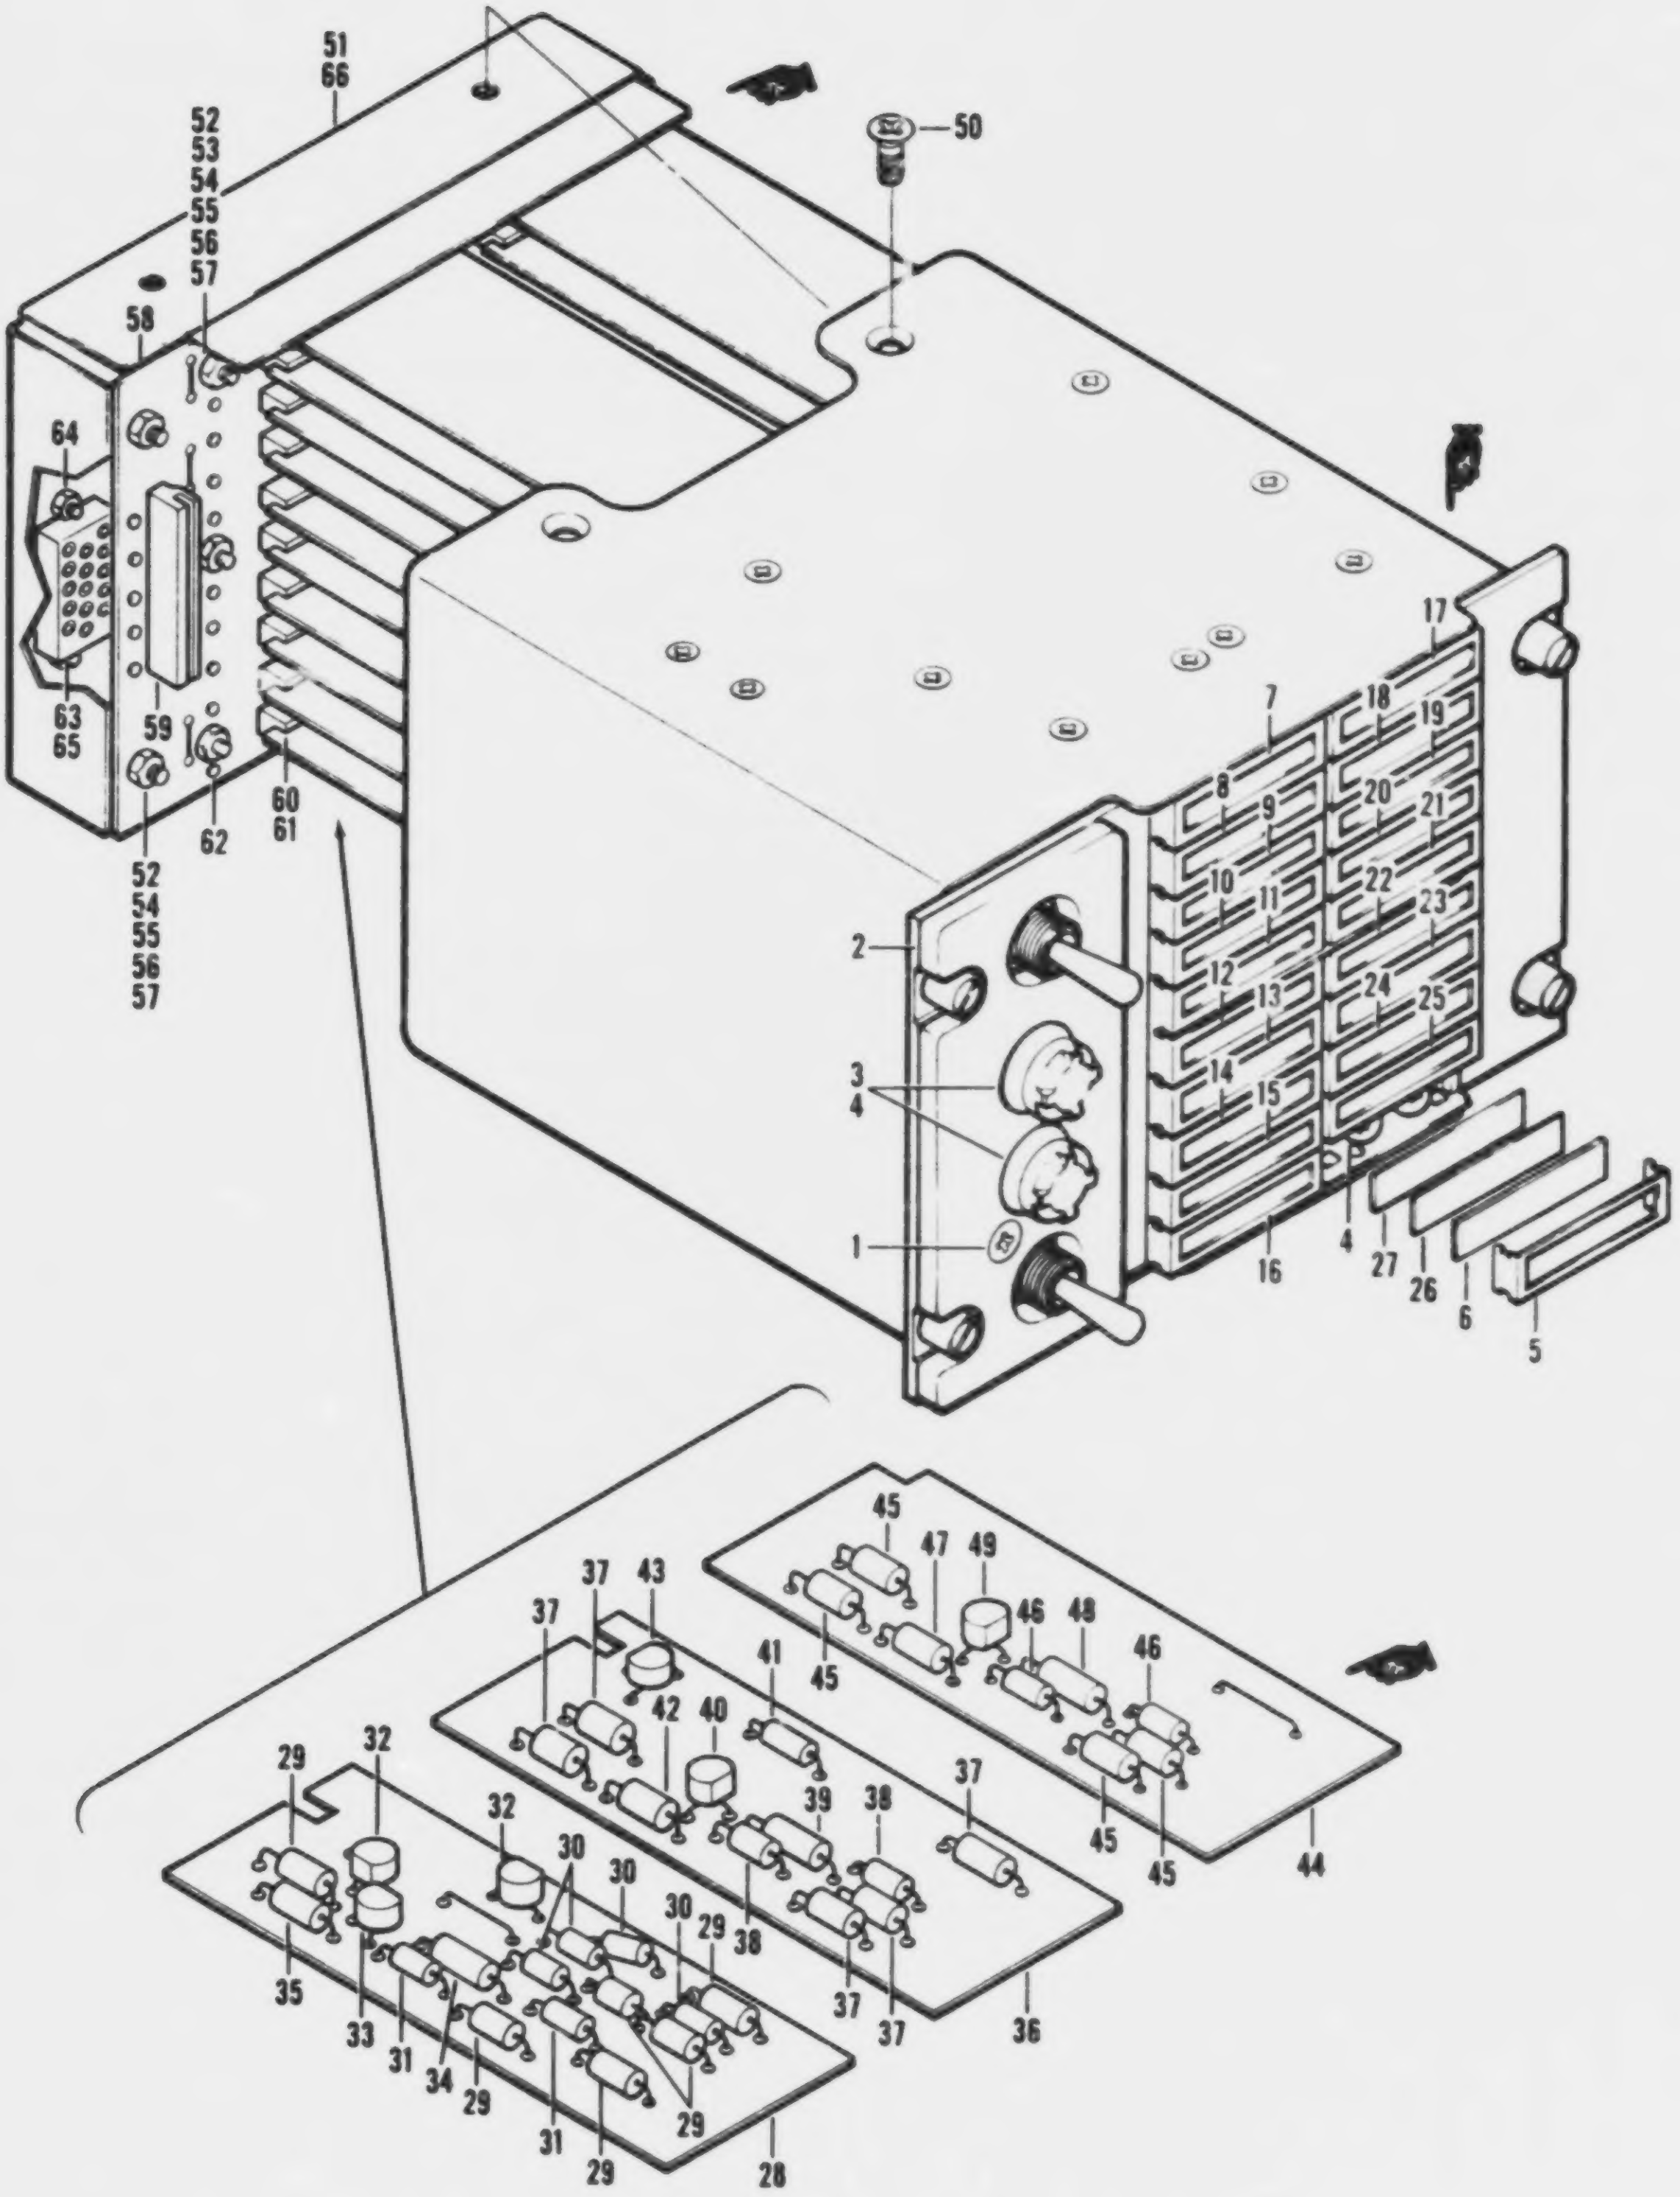
51
66
52
53
54
55
56
57
58
50
64
63
65
59
62
60
61
52
54
55
56
57
17
7
18
19
8
9
20
21
10
11
22
23
2
12
13
24
25
14
15
3
4
1
16
4
27
26
6
5
45
47
49
37
43
46
48
37
41
45
46
42
40
29
32
39
38
37
32
30
30
45
44
45
30
29
38
36
35
33
31
34
29
31
29
29
28
37
37

Figure 231. Panel Assembly, Master Caution (Sheet 1 of 2)

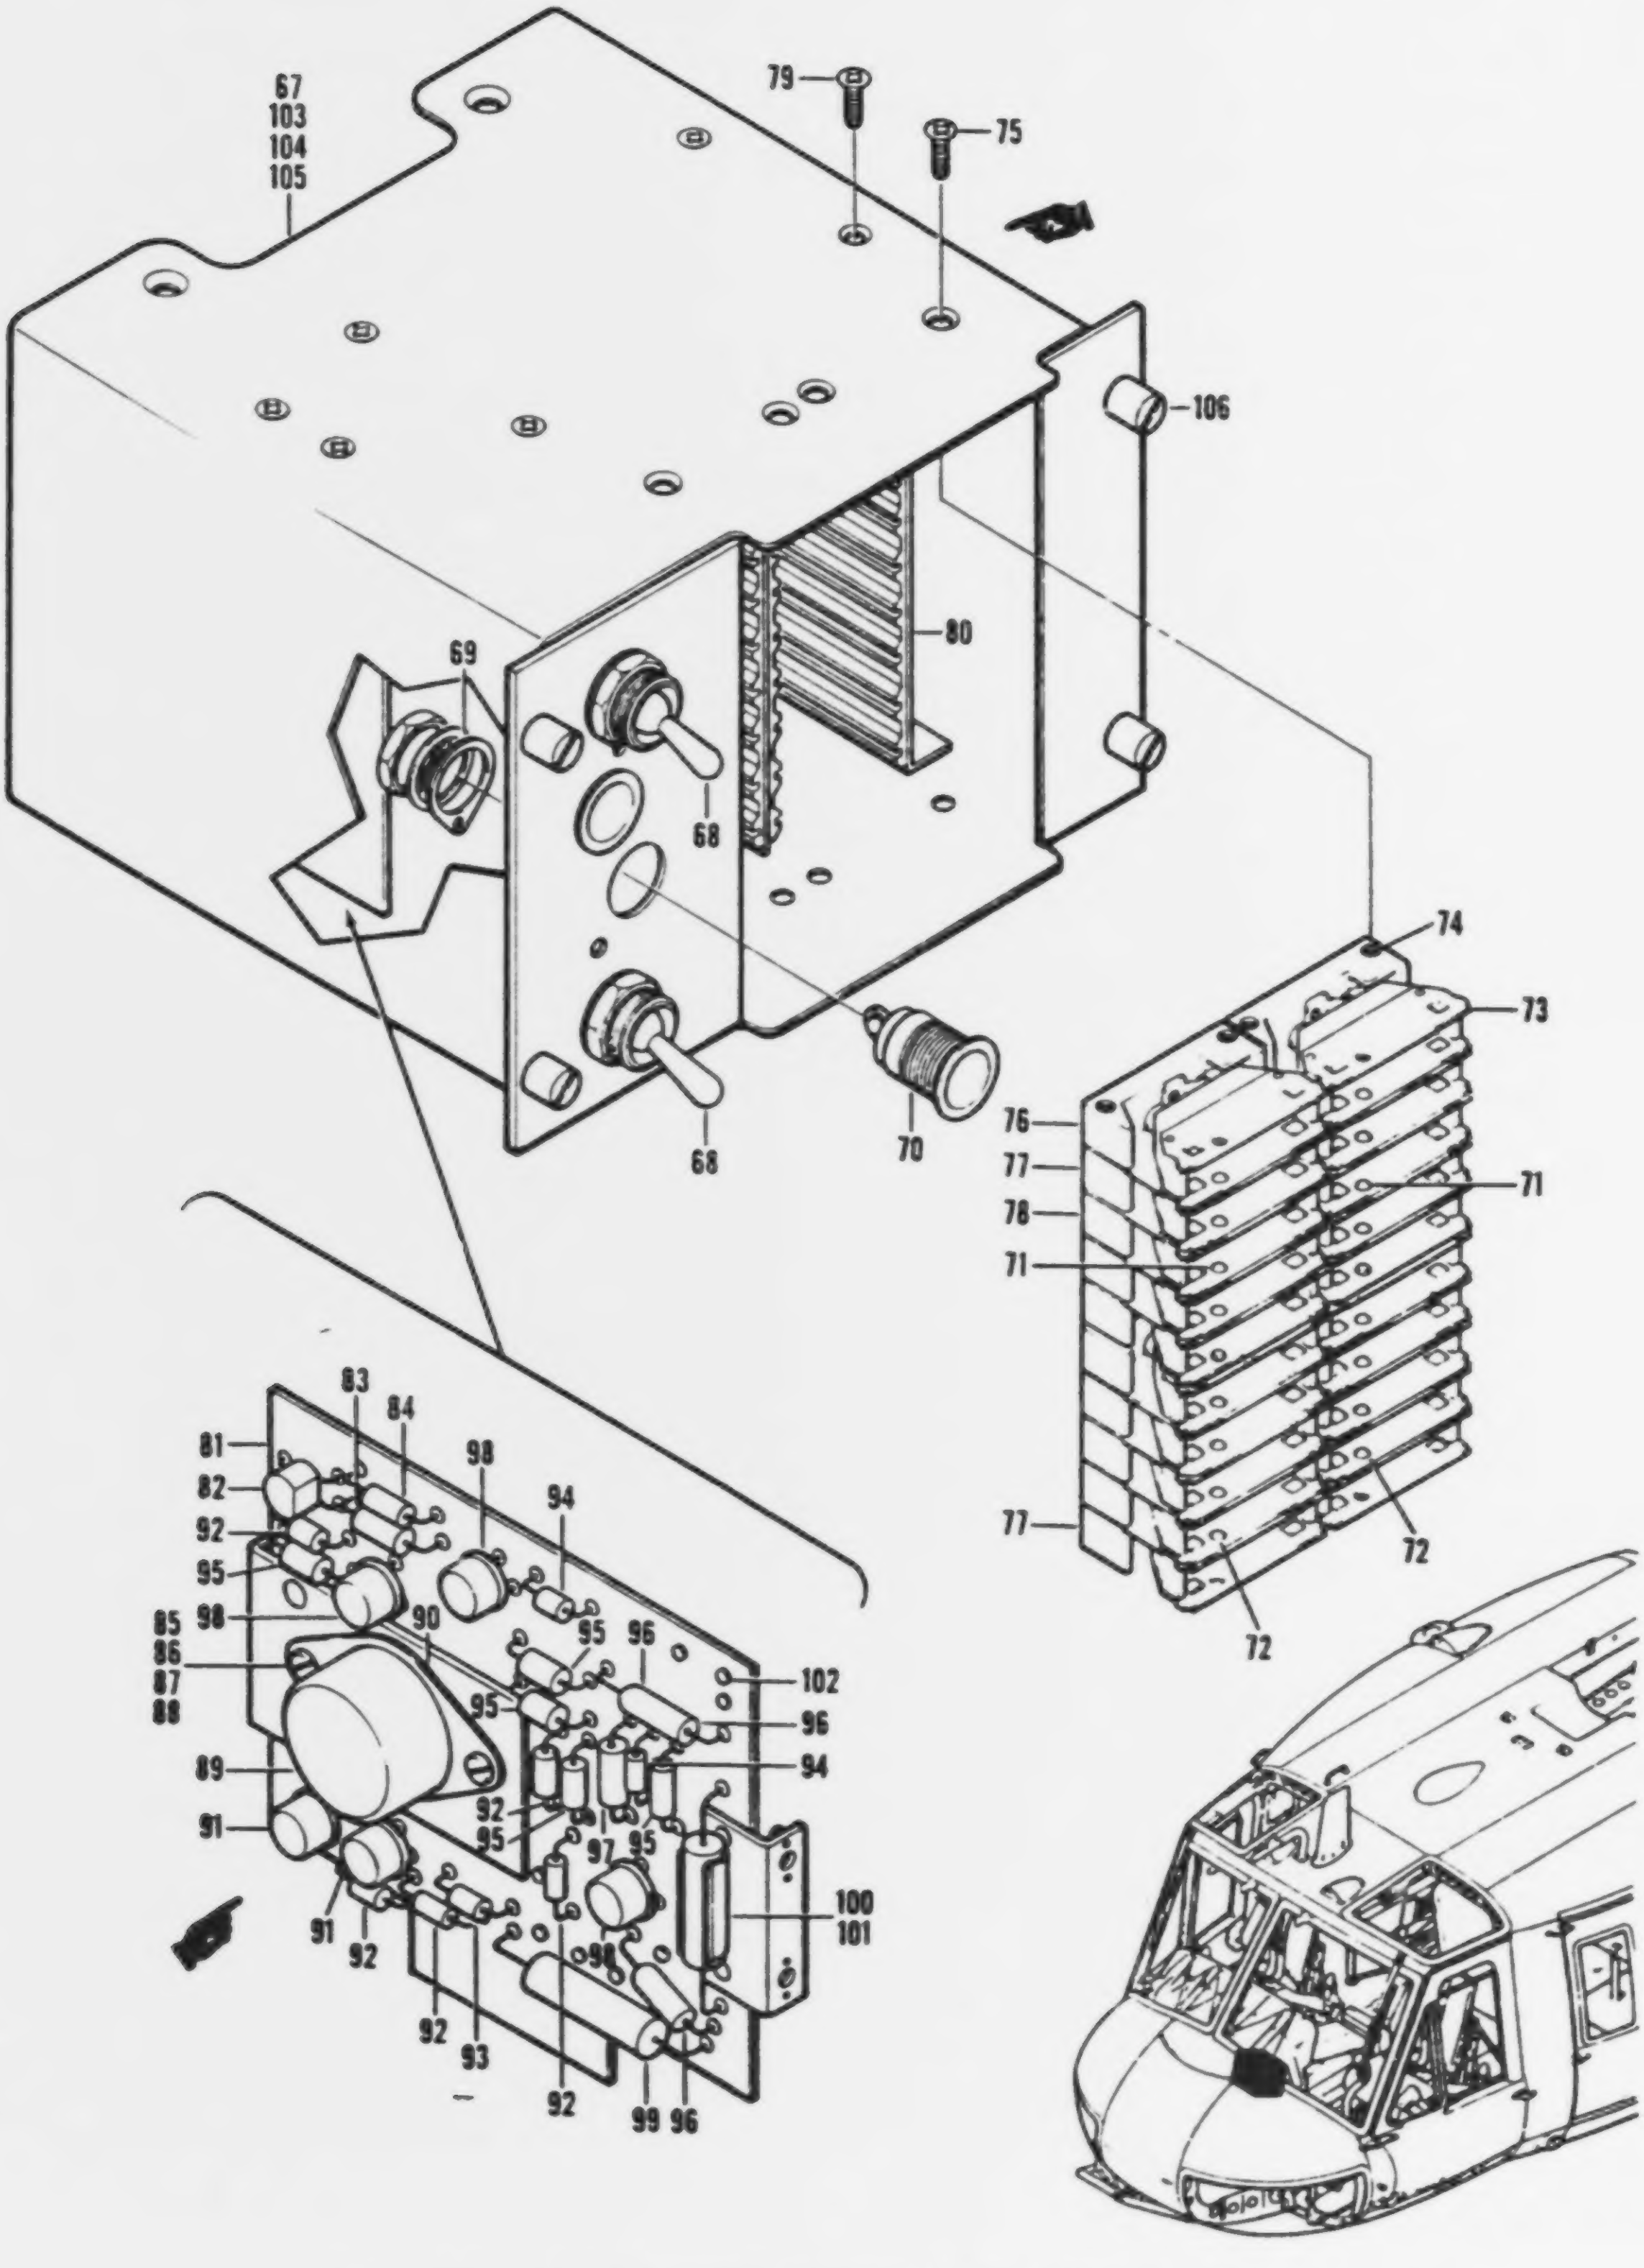
67
103
104
105
79
75
106
80
69
68
68
70
74
73
76
77
78
71
71
77
72
72
83
84
81
82
92
95
98
98
94
85
86
87
88
90
95
96
102
95
96
94
89
92
95
97
95
91
100
101
91
92
98
92
93
92
99
96

Figure 231. Panel Assembly, Master Caution (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
231		PAOFF	1680-00-456-0915	72914	80-0199-17	PANEL ASSEMBLY, MASTER CAUTION SEE FIG 225 FOR NHA. UHM	EA	1
231		PAOFF	1680-00-850-4361	72914	80-0199-1	PANEL ASSEMBLY, MASTER CAUTION SEE FIG 226 FOR NHA UHH,UHV	EA	1
231	1	PAOZZ	5305-00-957-7818	96906	MS24693S27	.SCREW,MACHINE UHM,UHH,UHV,UHE,UHX	EA	1
231	2	PAOZZ	5220-00-839-8651	72914	81-0335-1	.EDGE LIGHT PANEL UHM,UHH,UHV,UHE,UHX	EA	1
231	3	XDFZZ		72914	A-5181	.LAMP HOUSING UHM,UHH,UHV,UHE,UHX	EA	1
231	4	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP, INCANDESCENT UHM,UHH,UHV,UHE,UHX	EA	42
231	5	PAOZZ	1680-00-465-6299	72914	66-1868-1	.RETAINER,LENS UHM,UHH,UHV,UHE,UHX	EA	20
231	6	PAOZZ	6210-00-917-3822	72914	25-0260-11	.LENS,LIGHT USE BEFORE NIGHT VISION GOGGLES ARE INSTALLED UHM,UHH,UHV,UHE,UHX	EA	20
231	7	PAOZZ		72914	25-0259-11	.LENS UHM,UHH,UHV,UHE,UHX	EA	1
231	8	PAOZZ	6210-00-917-0647	72914	25-0259-12	.LENS,LIGHT U/O PN 80-0199-17 UHM	EA	1
231	8	XDOZZ		72914	25-0259-220	.LENS U/O PN 80-0199-1 UHE,UHX	EA	1
231	9	PAOZZ	6210-00-917-0690	72914	25-0259-13	LENS,LIGHT U/O PN 80-0199-17 UHM	EA	1
231	9	PAOZZ		72914	25-0259-30	LENS,LIGHT U/O PN 80-0199-1 UHE,UHX	EA	1
231	10	PAOZZ	6210-00-917-0853	72914	25-0259-34	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	11	XDOZZ		72914	25-0259-15	.LENS UHM,UHH,UHV,UHE,UHX	EA	1
231	12	PAOZZ	6210-00-917-0710	72914	25-0259-16	.LENS,LIGHT UHM,UHH,UHE,UHV,UHX	EA	1
231	13	PAOZZ	6210-00-917-0825	72914	25-0259-17	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	14	PAOZZ	6210-00-917-0829	72914	25-0259-18	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	15	PAOZZ	6210-00-917-0841	72914	25-0259-19	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	16	PAOZZ	6210-00-917-0859	72914	25-0259-31	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	17	PAOZZ	6210-00-917-0842	72914	25-0259-20	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	18	PAOZZ	6210-00-917-0851	72914	25-0259-21	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	19	PAOZZ	6210-00-917-0601	72914	25-0259-22	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	20	XDOZZ		72914	25-0259-28	LENS U/O PN 80-0199-17 UHM	EA	1
231	20	PAOZZ	6210-00-917-0602	72914	25-0259-23	.LENS,LIGHT U/O PN 80-0199-1 UHH,UHV,UHE,UHX	EA	1
231	21	PAOZZ	6210-00-917-0858	72914	25-0259-29	.LENS,LIGHT U/O PN 80-0199-17 UHM	EA	1
231	21	PAOZZ	6210-00-080-7808	72914	25-0259-39	.LENS,LIGHT U/O PN 80-0199-1 UHH,UHV,UHE,UHX	EA	1
231	22	PAOZZ	6210-00-917-0606	72914	25-0259-24	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	23	PAOZZ	6210-00-917-0608	72914	25-0259-25	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	24	PAOZZ	6210-00-917-0854	72914	25-0259-26	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	1
231	25	PAOZZ		72914	25-0259-27	.LENS UHM,UHH,UHV,UHE,UHX	EA	1
231	26	XDOZZ		72914	25-0259-33	.LENS U/O PN 80-0199-17 UHM	EA	1
231	26	PAOZZ	6210-00-689-6319	72914	25-0259-38	.LENS,LIGHT U/O PN 80-0199-1 UHH,UHV,UHE,UHX	EA	1
231	27	PAOZZ	6210-00-917-3821	72914	25-0260-7	.LENS,LIGHT UHM,UHH,UHV,UHE,UHX	EA	20
231	28	PAFFF	1680-00-494-7132	72914	81-0817-1	.CIRCUIT CARD ASSEMB UHM,UHH,UHV,UHE,UHX	EA	1
231	29	PAOZZ	5961-00-919-3530	72914	55-0018-4	..SEMICONDUCTOR DEVIC UHE,UHH,UHV,UHX	EA	6
231	30	PAOZZ		72914	55-0155-4721C	..RESISTOR,FIXED,CARB UHE,UHH,UHV,UHX	EA	4
231	31	PAOZZ	5905-01-005-1252	72914	55-0155-1021C	..RESISTOR,FIXED,CARB UHE,UHH,UHV,UHX	EA	2
231	32	PAOZZ	5961-00-233-4622	01295	2N3704	..TRANSISTOR UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
231	33	PAOZZ	5961-00-406-6238	01295	TIC45	..RECTIFIER............UHC,UHE,UHH,UHV,UHX	EA	1
231	34	PAOZZ		14752	112C1A103K	..CAPACITOR............UHC,UHE,UHH,UHV,UHX	EA	1
231	35	PAOZZ	5905-00-472-0607	72914	55-0155-2721D	..RESISTOR,FIXED,CARB............UHC,UHE,UHH,UHV,UHX	EA	1
231	36	PAFFF	1680-00-172-9059	72914	81-0819-1	.CIRCUIT CARD ASSEMB............UHC,UHM,UHH,UHV,UHE,UHX	EA	2
231	37	PAOZZ	5961-00-919-3530	72914	55-0018-4	..SEMICONDUCTOR,DEVIC............UHC,UHE,UHH,UHM,UHV,UHX	EA	4
231	38	PAOZZ	5905-01-005-1252	72914	55-0155-1021C	..RESISTOR,FIXED,CARB............UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	39	PAOZZ		14752	112C1A103K	..CAPACITOR............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	40	PAOZZ	5961-00-406-6238	01295	TIC45	..RECTIFIER............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	41	PAOZZ		72914	55-0155-4721C	..RESISTOR,FIXED,CARB............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	42	PAOZZ	5905-00-472-0607	72914	55-0155-2721D	..RESISTOR,FIXED,CARB............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	43	PAOZZ	5961-00-233-4622	01295	2N3704	..TRANSISTOR............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	44	PAFFF	1680-00-172-9060	72914	81-0821-1	.CIRCUIT CARD ASSEMB............UHC,UHM,UHH,UHV,UHE,UHX	EA	17
231	45	PAOZZ	5961-00-919-3530	72914	55-0018-4	..SEMICONDUCTOR DEVIC............UHC,UHE,UHH,UHM,UHV,UHX	EA	4
231	46	PAOZZ	5905-01-005-1252	72914	55-0155-1021C	..RESISTOR,FIXED,CARB............UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	47	PAOZZ	5905-00-472-0607	72914	55-0155-2721D	..RESISTOR,FIXED,CARB............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	48	PAOZZ		14752	112C1A103K	..CAPACITOR............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	49	PAOZZ	5961-00-406-6238	01295	TIC45	..RECTIFIER............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	50	PAOZZ	5305-00-081-6668	96906	MS24693S2	..SCREW,MACHINE............UHC,UHM,UHH,UHV,UHE,UHX	EA	4
231	51	PAOZZ	1680-00-175-4750	72914	81-0827-1	.BASE ASSY,CONTROL............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	52	PAOZZ	5305-00-889-3118	96906	MS35206-203	..SCREW,MACHINE............UHC,UHE,UHH,UHM,UHV,UHX	EA	10
231	53	PAOZZ	5970-01-146-2827	72914	16592	..INSULATOR............UHC,UHE,UHH,UHM,UHV,UHX	EA	6
231	54	PAOZZ	5305-00-959-2345	96906	MS35190-211	..SCREW,MACHINE............UHC,UHE,UHH,UHM,UHV,UHX	EA	10
231	55	PAOZZ		72914	15692-75	..ROD,CONNECTING............UHC,UHE,UHH,UHM,UHV,UHX	EA	10
231	56	PAOZZ		72914	61-0048-1	..INSULATOR,SLEEVE............UHC,UHE,UHH,UHM,UHV,UHX	EA	10
231	57	PAOZZ	5310-00-616-6822	80205	NAS620-6L	..WASHER............UHC,UHE,UHH,UHM,UHV,UHX	EA	10
231	58	PAOZZ		72914	81-0823-1	..CIRCUIT CARD ASSY............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	59	PAOZZ		72914	55-0299-3	...CONNECTOR,HOUSING............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	60	PAOZZ	5999-00-465-6359	72914	55-0298-1	...CONTACT............UHC,UHE,UHH,UHM,UHV,UHX	EA	149
231	61	PAOZZ	5935-00-003-5630	72914	55-0299-1	...CONNECTOR,HOUSING............UHC,UHE,UHH,UHM,UHV,UHX	EA	20
231	62	PAOZZ	5940-00-082-5094	86577	103-8B	...TERMINAL............UHC,UHE,UHH,UHM,UHV,UHX	EA	25
231	63	PAOZZ		09922	MRM20W-2	..CONTACT............UHC,UHE,UHH,UHM,UHV,UHX	EA	26
231	64	PAOZZ	5310-00-878-3292	80205	NAS1291C04	..NUT............UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	65	PAOZZ	5935-00-917-6164	09922	MS26P-68	..CONNECTOR............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	66	PAOZZ		72914	81-0813-1	..COVER,CONTROL PANEL............UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	67	PAFFF	1680-00-175-0359	72914	81-0825-1	.PANEL,FAULT-FUNCTIO............UHC,UHM,UHH,UHV,UHE,UHX	EA	1
231	68	XDFZZ	5930-00-646-4360	91929	13AT1T	..SWITCH,TOGGLE............UHC,UHM,UHH,UHV,UHE,UHX	EA	2
231	69	PAFZZ	5940-01-145-6765	72914	60-0353-1	..TERMINAL,LUG............UHC,UHM,UHH,UHV,UHE,UHX	EA	2
231	70	XDFZZ		72914	A-4996	..RETAINER............UHC,UHM,UHH,UHV,UHE,UHX	EA	2
231	71	XDFZZ		72914	66-0843-17	..SPACER............UHC,UHM,UHH,UHV,UHE,UHX	EA	6
231	72	PAFZZ	5340-00-764-9831	72914	66-0101-1	..SPACER ASSEMBLY............UHC,UHM,UHH,UHV,UHE,UHX	EA	12
231	73	PAFZZ	6210-00-434-7366	72914	66-1871-1	..REFLECTOR,INDICATOR LIGHT,ASSY.....UHC,UHM,UHH,UHV,UHE,UHX	EA	20
231	74	PAFZZ	1560-00-919-8779	72914	15692-49	..ROD,WARNING LIGHT P............UHC,UHM,UHH,UHV,UHE,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
231	75	PAFZZ	5305-00-959-2345	96906	MS35190-211	..SCREW,MACHINE	UHC,UHM,UHH,UHV,UHE,UHX	EA	8
231	76	XDFZZ		72914	66-1870-1	..BASE	UHC,UHM,UHH,UHV,UHE,UHX	EA	17
231	77	XDFZZ		72914	66-1870-3	..BASE	UHC,UHM,UHH,UHV,UHE,UHX	EA	2
231	78	XDFZZ		72914	66-1870-5	..BASE	UHC,UHM,UHH,UHV,UHE,UHX	EA	1
231	79	PAFZZ	5305-00-225-6400	96906	MS24693C3	..SCREW,MACHINE	UHC,UHM,UHH,UHV,UHE,UHX	EA	12
231	80	XDFZZ		72914	81-0812-1	..BRACKET	UHC,UHM,UHH,UHV,UHE,UHX	EA	2
231	81	XDFZZ		72914	81-0815-1	..CIRCUIT BOARD	UHC,UHM,UHH,UHV,UHE,UHX	EA	1
231	82	PAOZZ	5961-00-840-5316	01295	2N3703	...TRANSISTOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	83	PAOZZ	5905-00-472-0607	72914	55-0155-2721D	...RESISTOR,FIXED,CARB	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	84	PAOZZ	5905-00-482-5290	72914	55-0155-3321C	...RESISTOR,FIXED,CARB	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	85	PAOZZ	5305-00-958-4354	96906	MS35206-230	...SCREW,MACHINE	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	86	PAOZZ	5310-00-983-8483	96906	MS27183-5	...WASHER	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	87	PAOZZ	5310-00-045-4007	96906	MS35338-41	...WASHER,LOCK	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	88	PAOZZ	5310-00-999-4031	96906	MS20341-6S	...NUT	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	89	PAOZZ	5961-00-407-0189	04173	2N4905	...TRANSISTOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	90	PAOZZ	5999-00-113-5083	13103	43-03-1	...INSULATOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	91	PAOZZ		01295	2N1131	...TRANSISTOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	92	PAOZZ		72914	55-0155-4721C	...RESISTOR,FIXED,CARB	UHC,UHE,UHH,UHM,UHV,UHX	EA	5
231	93	PAOZZ	5961-00-914-6005	04713	1N4004	...SEMICONDUCTOR DEVIC E,DIODE	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	94	PAOZZ	5961-00-830-4888	04713	1N4734	...SEMICONDUCTOR DEVIC E,DIODE	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	95	PAOZZ	5961-00-919-3530	72914	55-0018-4	...SEMICONDUCTOR DEVIC E,DIODE	UHC,UHE,UHH,UHM,UHV,UHX	EA	5
231	96	PAOZZ	5910-00-107-2708	05397	K1C50K	...CAPACITOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
231	97	PAOZZ	5910-00-809-4701	05397	K6R8J35KS	...CAPACITOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	98	PAOZZ	5961-00-938-4917	15818	CS697	...TRANSISTOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	3
231	99	PAOZZ	5910-00-865-3610	14655	NLW35-50	...CAPACITOR	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	100	PAOZZ		72914	55-0225-33003F	...RESISTOR,FIXED,WIRE WOUND	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
321	101	PAOZZ		91506	6013-17A	...CLIP	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	102	PAOZZ	5940-00-082-5094	86577	1D3-88	...TERMINAL	UHC,UHE,UHH,UHM,UHV,UHX	EA	9
231	103	PAFZZ		81349	M1L-W-16878TXPEE 22BLACK	..WIRE	UHC,UHM,UHH,UHV,UHE,UHX	FT	V
231	104	PAFZZ		81349	M1L-W-16878TYPEE 22RED	..WIRE	UHC,UHM,UHH,UHV,UHE,UHX	FT	V
231	105	PAOZZ		72914	81-0826-1	..HOUSING,CONTROL PAN EL	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
231	106	PAOZZ	5325-00-419-4439	72794	PFCS3 1-2 388K	...STUD ASSEMBLY	UHC,UHE,UHH,UHM,UHV,UHX	EA	4

Fig. 232 NOT USED

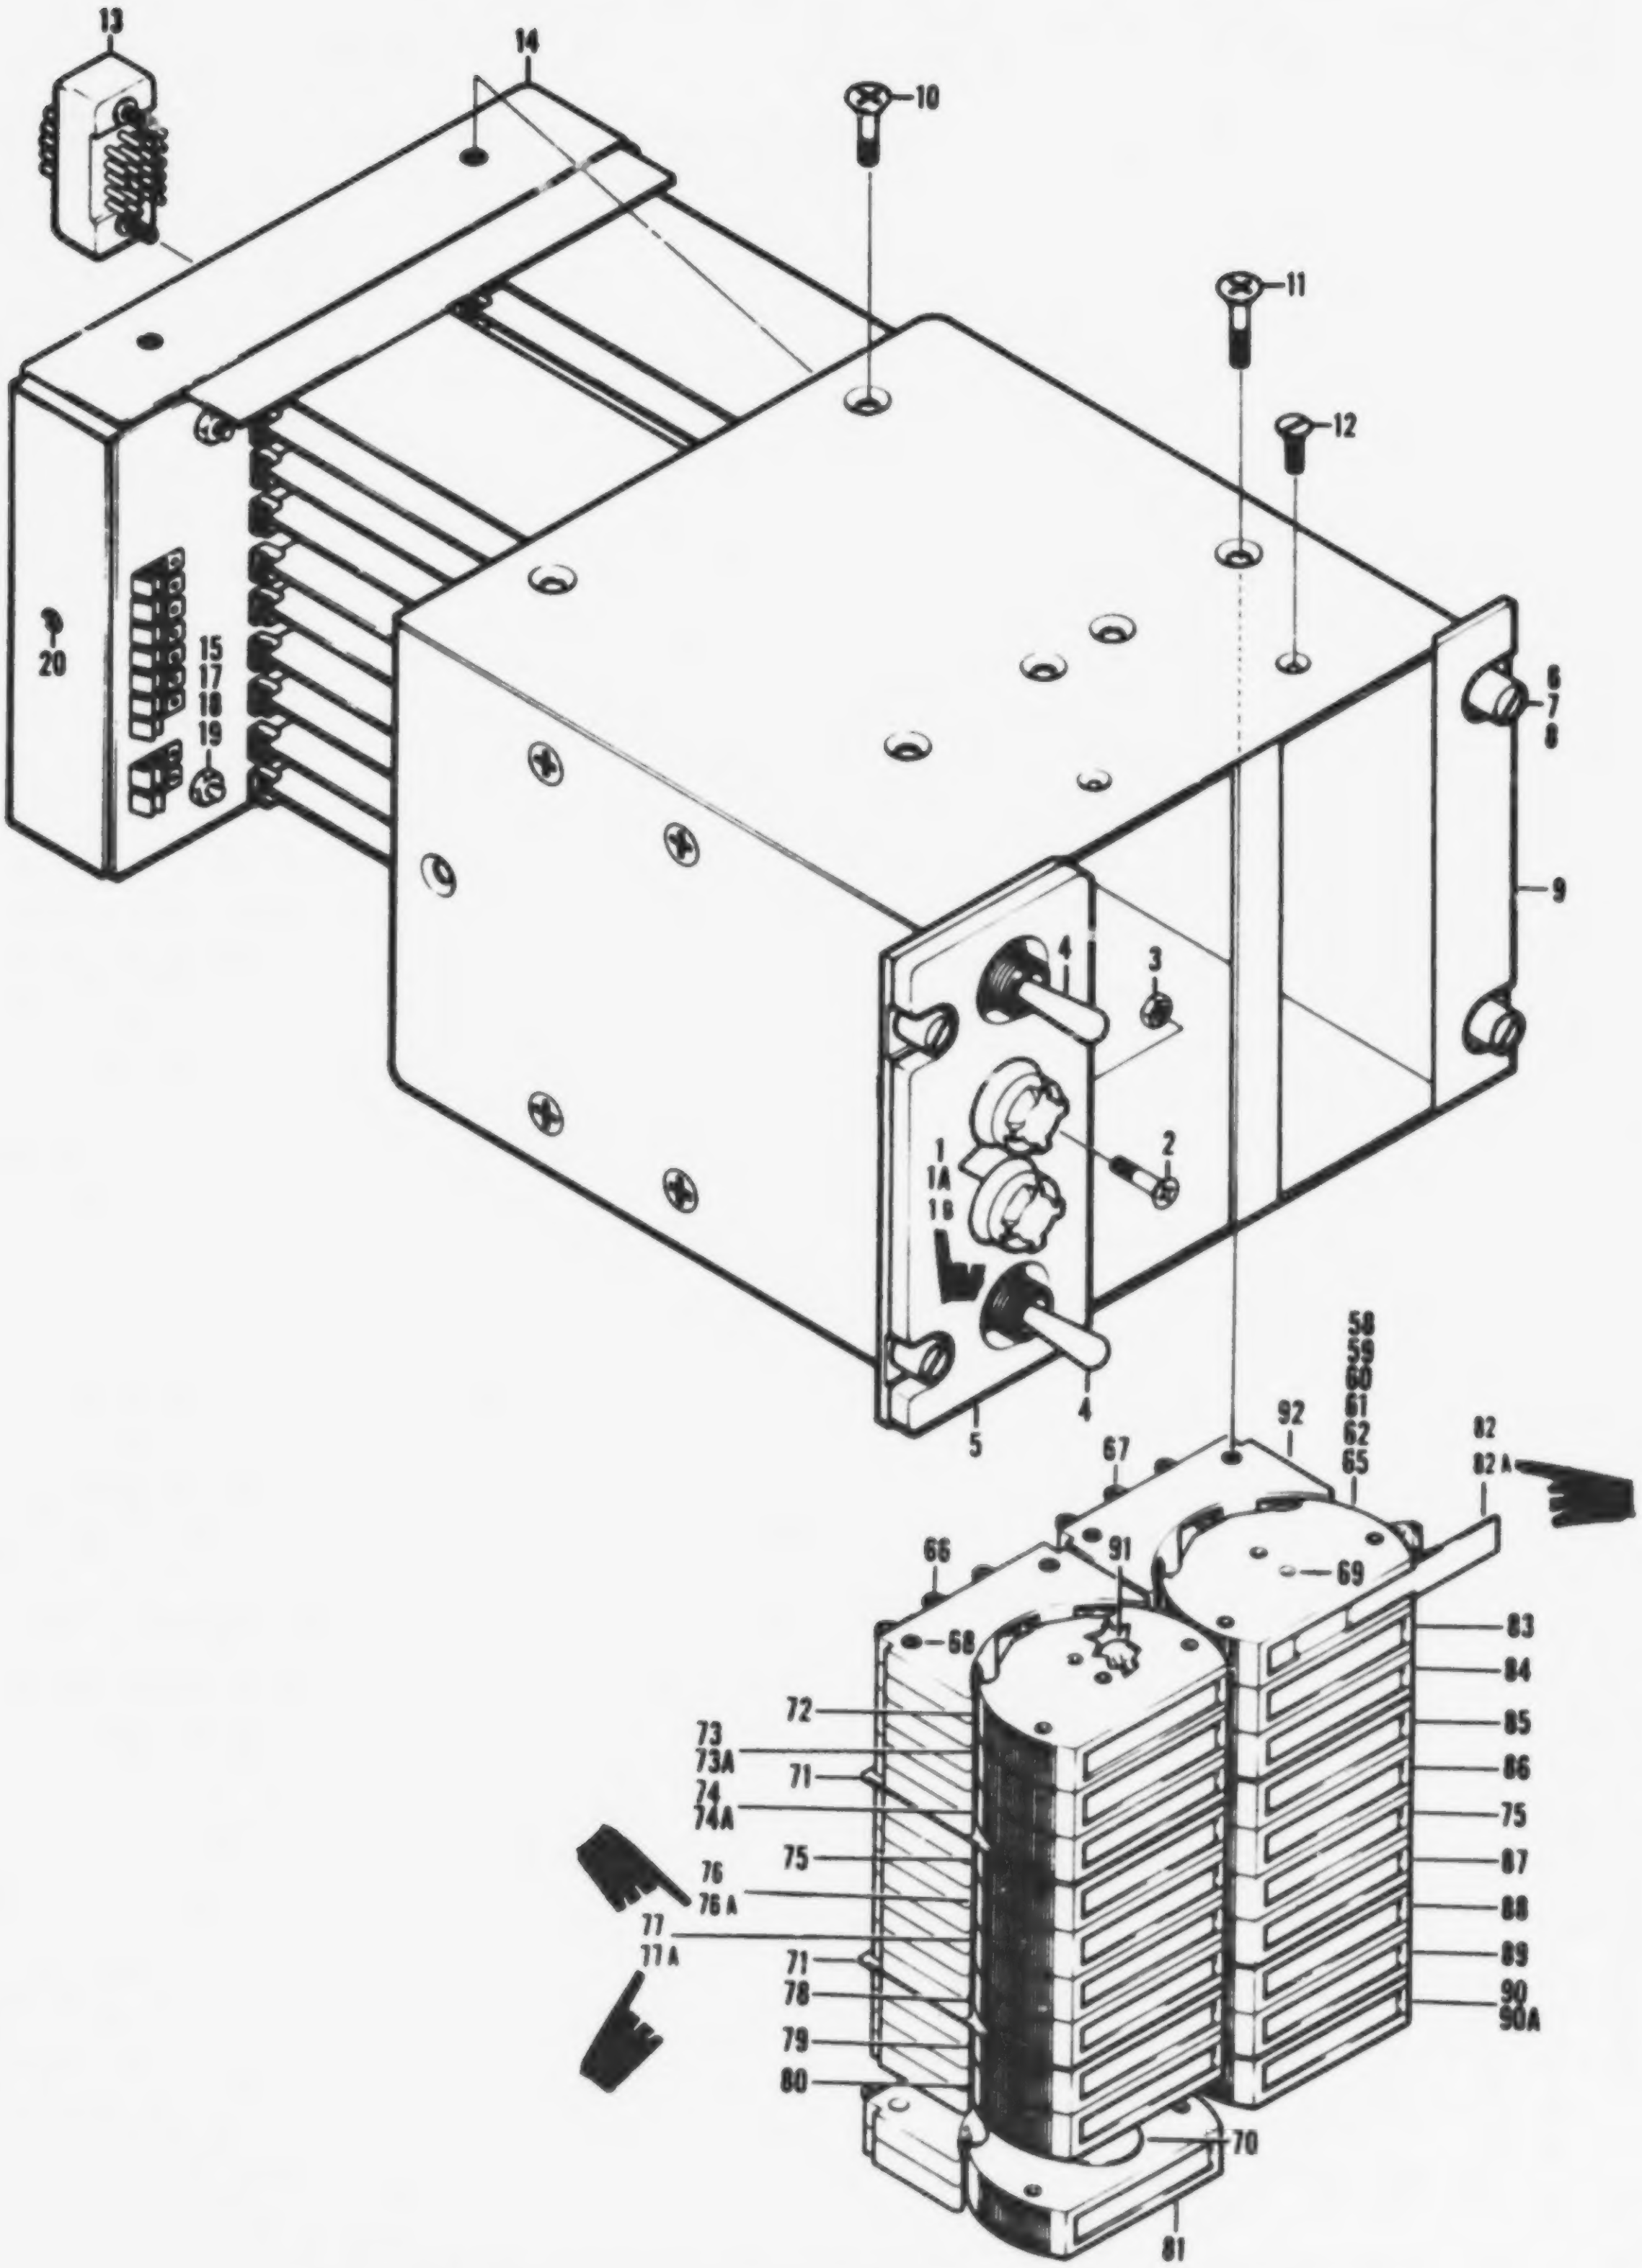
13
14
10
11
12
20
15
17
18
19
6
7
8
9
4
3
2
1
1A
1B
4
5
67
92
58
59
60
61
62
65
82
82A
66
91
69
68
72
73
73A
71
74
74A
75
76
76A
77
77A
71
78
79
80
83
84
85
86
75
87
88
89
90
90A
70
81

Figure 233. Panel Assembly, Word Caution Control (Sheet 1 of 2)

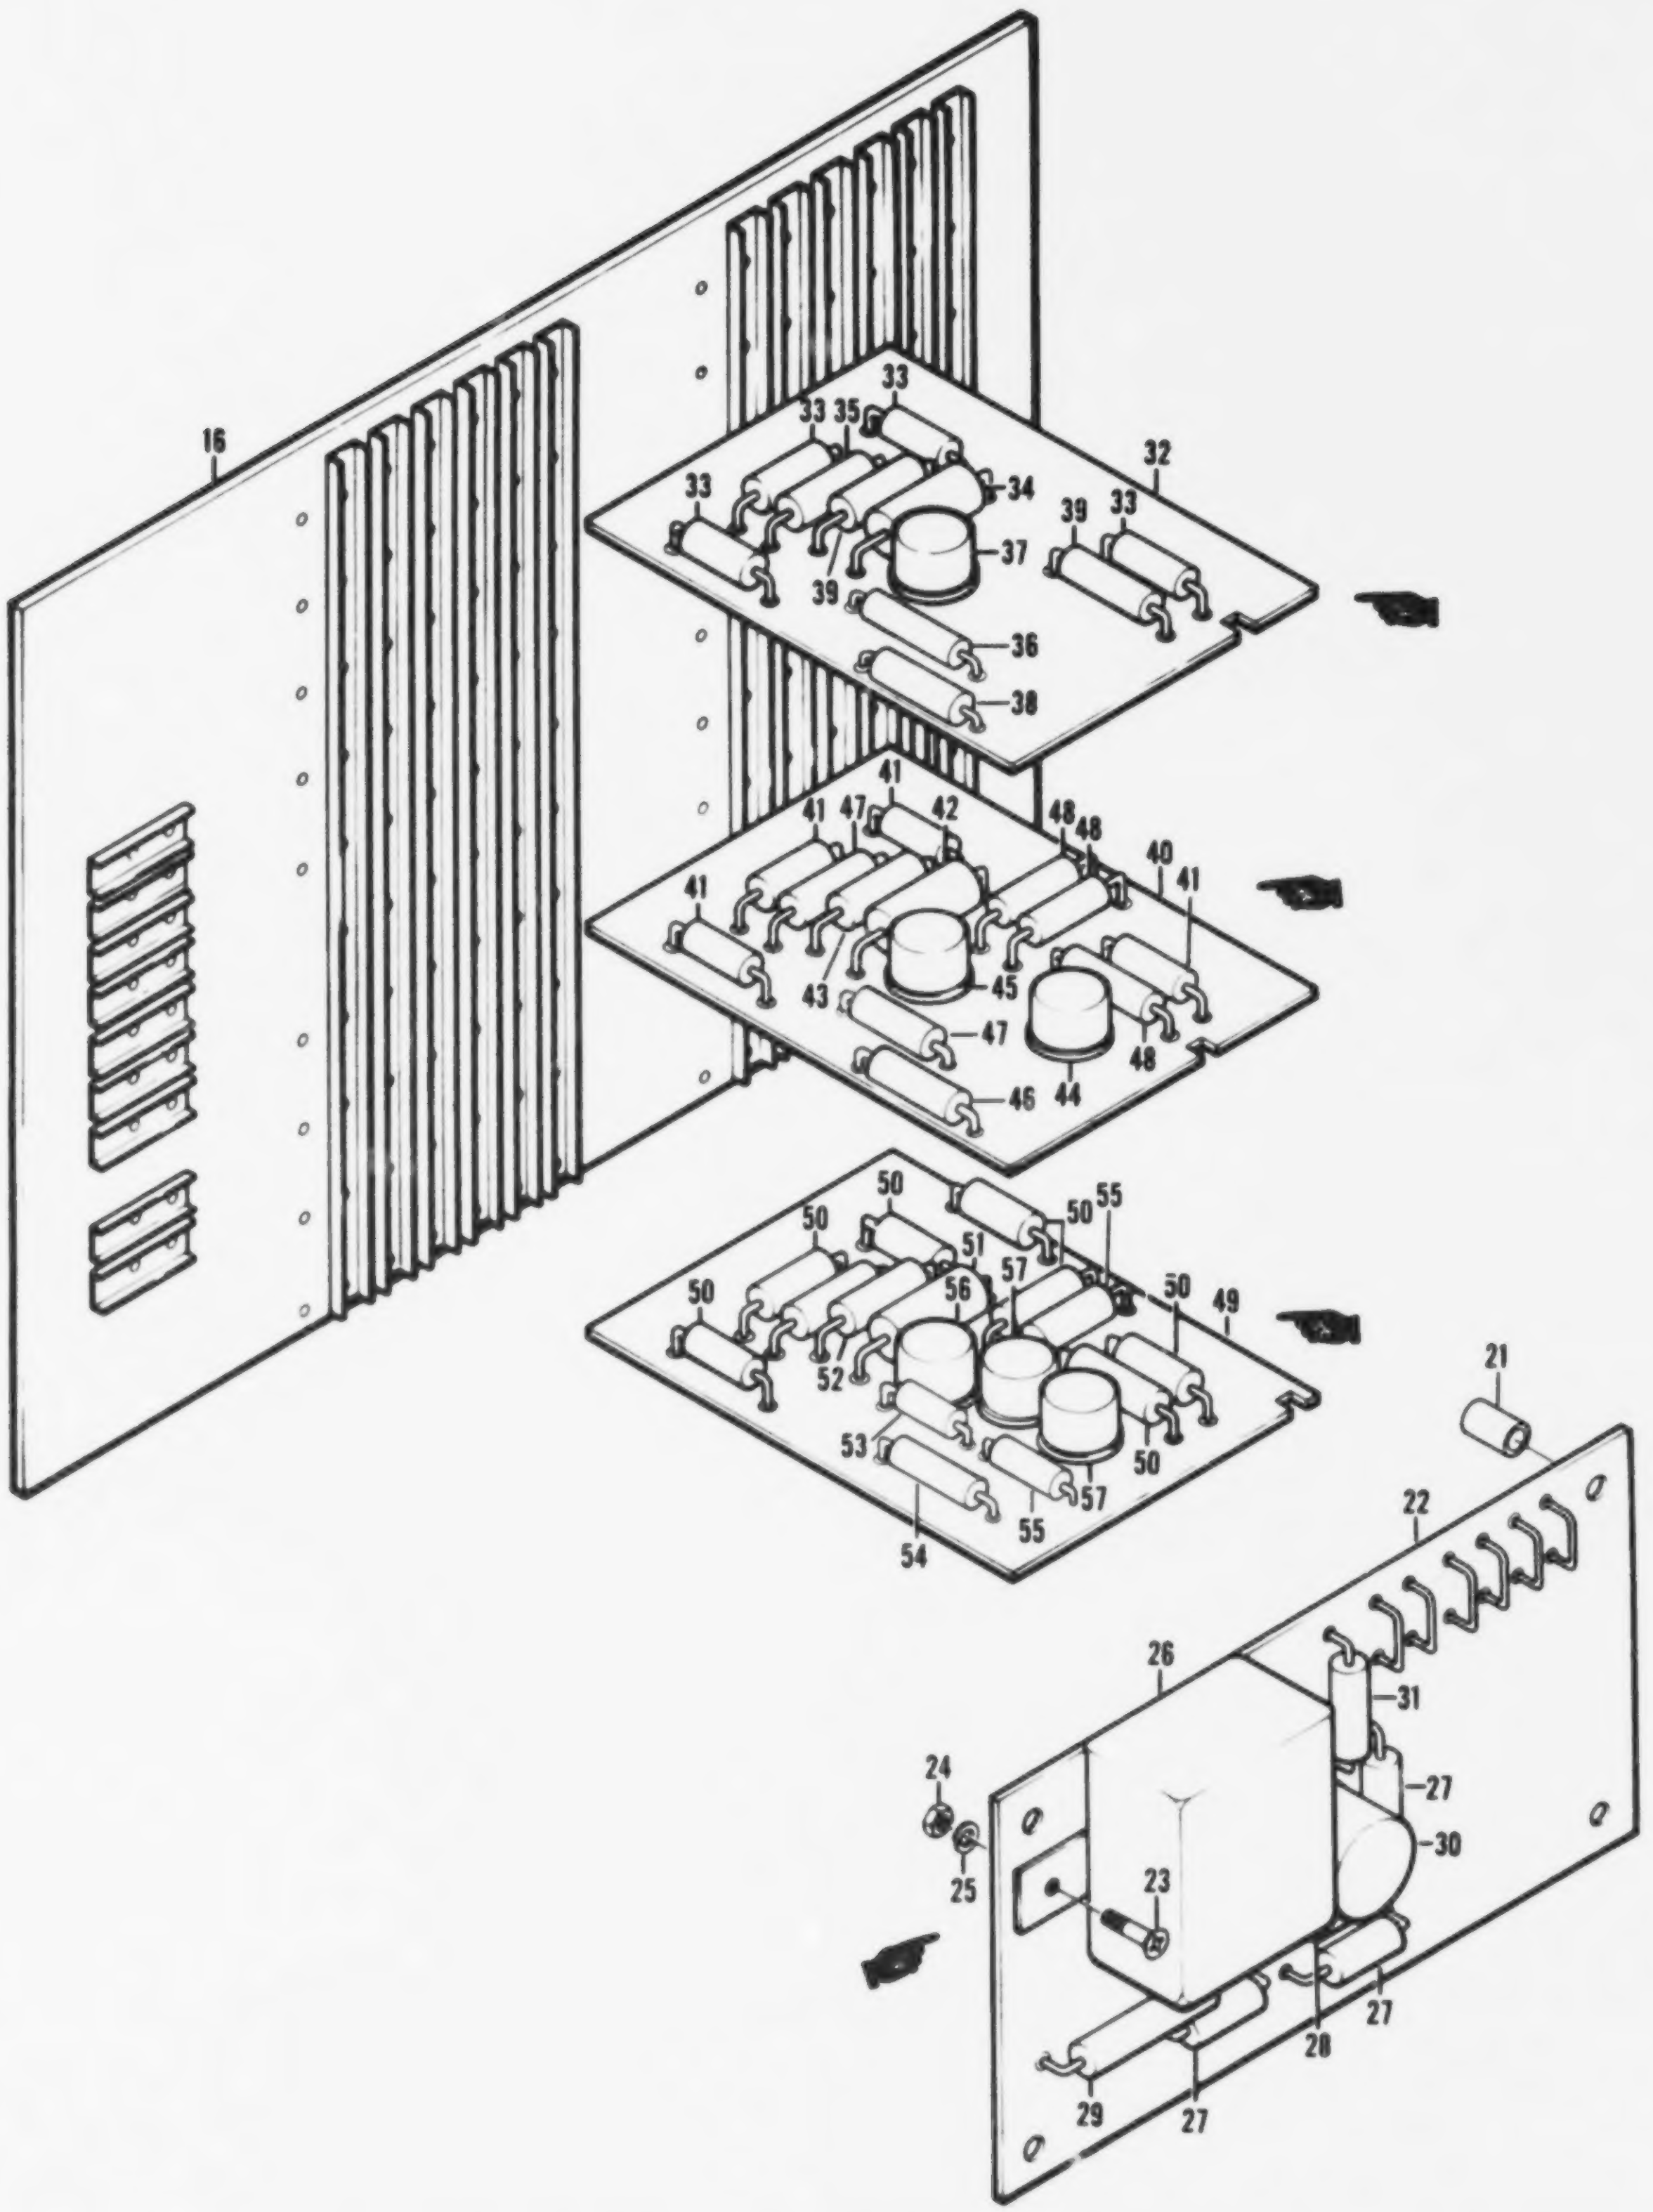
16
33
33 35
33
32
34
39 33
37
39
36
38
41
41 47
42
48 48
40
41
41
45
43
47
44
48
46
50
50
55
50
51
57
56
50
49
50
52
21
53
50
57
55
54
22
26
31
24
27
25
23
30
27
28
29
27

Figure 233. Panel Assembly, Word Caution Control (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
233		PAOFF	1680-00-930-5101	96182	4408-100-27	PANEL ASSEMBLY-WORD CAUTION CONTROL SEE FIG.225 FOR NHA ....UHM	EA	1
233		PAOFF	1680-00-759-8274	96182	4408-100-45	PANEL ASSEMBLY-WORD CAUTION CONTROL SEE FIG.226 FOR NHA ....UHE,UHM,UHV,UHX	EA	1
233		XAOFF		96182	143-17037-019	.PANEL ASSY MASTER CAUTION U/O PN 4408-100-19 ....UHE,UHH,UHV,UHX	EA	1
233		XAOFF		96182	143-17037-021	.PANEL ASSY MASTER CAUTION U/O PN 4408-100-21........UHM	EA	1
233		XAOFF		96182	143-17037-025	.PANEL ASSY MASTER CAUTION U/O PN 4408-100-25........UHM	EA	1
233		XAOFF		96182	143-17037-027	.PANEL ASSY MASTER CAUTION U/O PN 4408-100-27........UHM	EA	1
233		MFOZZ		20309	ES-C-221540	.PANEL ASSEMBLY WORD CAUTION CONTROL........UHX	EA	1
233	1	PAFZZ	5940-00-577-1613	79963	472	..TERMINAL,LUG........UHE,UHH,UHM,UHV,UHX	EA	2
233	1A	PAFZZ	6210-00-299-6656	96906	MS25010A11A327	..LIGHT,PANEL........UHE,UHH,UHM,UHV,UHX	EA	2
233	1B	PAFZZ	1680-01-230-0531	81996	EGD-0929-1	..LIGHT, INSERT FOR USE WITH NVG........UHE,UHH,UHV,UHX	EA	2
233	2	PAFZZ	5305-00-088-9665	96906	MS24693C29	..SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	1
233	3	PAFZZ	5310-00-083-1818	56878	50FP3-632	..NUT........UHE,UHM,UHM,UHV,UHX	EA	1
233	4	XDFZZ	5930-00-646-4360	91929	13AT1T	..SWITCH,TOGGLE........UHE,UHH,UHM,UHV,UHX	EA	2
233	5	XDFZZ	1680-00-342-8814	96182	4408-406	..PANEL,EDGE LITE........UHE,UHH,UHM,UHV,UHX	EA	1
233	6	XAFZZ		72794	PF3 1-2 38	..STUD,TURNLOCK........UHE,UHH,UHM,UHV,UHX	EA	4
233	7	XAFZZ		72794	PC3 1-2	..RETAINER,TURNLOCK........UHE,UHH,UHM,UHV,UHX	EA	4
233	8	XAFZZ		72794	PS3 1-2	..SPRING,HELICAL, COMPRESSION........UHE,UHH,UHM,UHV,UHX	EA	4
233	9	XDFZZ		96182	4408-405	..HOUSING........UHE,UHH,UHM,UHV,UHX	EA	1
233	10	PAFZZ	5305-00-056-9961	96906	MS24693C4	..SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	6
233	11	PAFZZ	5305-00-993-9189	96906	MS24693C2	..SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	8
233	12	PAFZZ	5305-00-908-2829	96906	MS24693C8	..SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	1
233	13	PAFZZ	5935-00-729-8935	95238	26-20PS	..CONNECTOR,PLUG,ELEC........UHE,UHH,UHM,UHV,UHX	EA	1
233	14	XDFFF		96182	4408-307	..COVER ASSEMBLY........UHE,UHH,UHM,UHV,UHX	EA	1
233	15	XDFZZ	5365-00-248-5202	96182	4408-412	...SPACER,SLEEVE........UHE,UHH,UHM,UHV,UHX	EA	5
233	16	PAFZZ	5940-00-898-9480	96182	4408-304	...TERMINAL BOARD........UHE,UHH,UHM,UHV,UHX	EA	1
233	17	PAFZZ	5310-00-810-7785	80205	NAS671-4	...NUT,PLAIN,HEXAGO........UHE,UHH,UHM,UHV,UHX	EA	5
233	18	PAFZZ	5310-00-543-2410	96906	MS35338-40	...WASHER,LOCK........UHE,UHH,UHM,UHV,UHX	EA	5
233	19	PAFZZ	5305-00-957-5032	96906	MS24693S11	...SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	5
233	20	PAFZZ	5310-00-453-6504	56878	53427-440-2	...NUT,SELF-LOCKING, CLINCH........UHE,UHH,UHM,UHV,UHX	EA	2
233	21	PAFZZ	5970-00-936-5545	96182	4408-422	..INSULATOR,BUSHING........UHE,UHH,UHM,UHV,UHX	EA	4
233	22	XDFFF	5999-00-342-8823	96182	123-13345-000	..ELECTRONIC COMPONEN CONTROL CIRCUIT ....UHE,UHH,UHM,UHV,UHX	EA	1
233	23	PAFZZ	5305-00-993-9189	96906	MS24693C2	...SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	2
233	24	PAFZZ	5310-00-934-9739	96906	MS35649-242	...NUT,PLAIN,HEXAGON........UHE,UHH,UHM,UHV,UHX	EA	2
233	25	PAFZZ	5310-00-543-2410	96906	MS35338-40	...WASHER,LOCK........UHE,UHH,UHM,UHV,UHX	EA	2
233	26	PAFZZ	5945-00-933-1389	96182	4408-421	...RELAY,ELECTROMAGNET DEVICE........UHE,UHH,UHM,UHV,UHX	EA	1
233	27	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC........UHE,UHH,UHM,UHV,UHX	EA	3
233	28	PAFZZ	5905-00-141-0591	81349	RCR20G103JS	...RESISTOR,FIXED COMP........UHE,UHH,UHM,UHV,UHX	EA	2
233	29	XDFZZ		81349	RW79U24R3F	...RESISTOR,FIXED WIRE WOUND........UHE,UHH,UHM,UHV,UHX	EA	1
233	30	PAFZZ	5961-00-102-0344	87771	80C20-10	...TRANSISTOR........UHE,UHH,UHM,UHV,UHX	EA	1
233	31	PAFZZ	5999-00-917-3454	19080	RCT05075-7	...RESISTOR,ELECTRICAL........UHE,UHH,UHM,UHV,UHX	EA	1
233	32	PAFFF	6110-00-168-8406	96182	173-13227-000	..PANEL ASSEMBLY,ELEC A1 CHANNEL SEE FIG.234 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	17

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
233	33	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR, DEVICE.........UHE,UHH,UHM,UHV,UHX	EA	4
233	34	PAFZZ	5910-00-933-1388	96182	4408-423	...CAPACITOR,FIXED.........UHE,UHH,UHM,UHV,UHX	EA	1
233	35	PAFZZ	5905-00-110-0196	81349	RCR20G102JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	2
233	36	PAFZZ	5905-00-141-0595	81349	RCR20G472JS	...RESISTOR,FIXED.COMP.........UHE,UHH,UHM,UHV,UHX	EA	2
233	37	PAFZZ	5961-00-148-6102	96182	954-90203-001	...SEMICONDUCTOR DEVIC DEVICE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	38	PAFZZ	5905-00-328-1502	81349	MILR39007-11	...RESISTOR,FIXED,WIRE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	39	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	3
233	40	PAFFF	1680-00-169-0949	96182	173-13285-000	..BOARD ASSY A3 CHANNEL.........UHE,UHH,UHM,UHV,UHX	EA	1
233	41	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR, DEVICE.........UHE,UHH,UHM,UHV,UHX	EA	4
233	42	PAFZZ	5910-00-933-1388	96182	4408-423	...CAPACITOR,FIXED.........UHE,UHH,UHM,UHV,UHX	EA	1
233	43	PAFZZ	5905-00-110-0196	81349	RCR20G102JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	1
233	44	PAFZZ	5961-00-179-3200	96182	4408-419	...TRANSISTGR.........UHE,UHH,UHM,UHV,UHX	EA	1
233	45	PAFZZ	5961-00-904-7358	96182	4408-418	...SEMICONDUCTOR, DEVICE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	46	PAFZZ	5905-00-328-1502	81349	MILR39007-11	...RESISTOR,FIXED,WIRE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	47	PAFZZ	5905-00-141-0595	81349	RCR20G472JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	2
233	48	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	3
233	49	PAFFF	1680-01-028-4416	96182	173-13286-000	..CIRCUIT CARD ASSEMB A3 CHANNEL SEE FIG.236 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1
233	50	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR, DEVICE.........UHE,UHH,UHM,UHV,UHX	EA	5
233	51	PAFZZ	5910-00-933-1388	96182	4408-423	...CAPACITOR,FIXED.........UHE,UHH,UHM,UHV,UHX	EA	1
233	52	PAFZZ	5905-00-110-0196	81349	RCR20G102JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	1
233	53	PAFZZ	5905-00-141-0595	81349	RCR20G472JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	3
233	54	PAFZZ	5905-00-328-1502	81349	MILR39007-11	...RESISTOR,FIXED,WIRE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	55	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP.........UHE,UHH,UHM,UHV,UHX	EA	3
233	56	PAFZZ	5961-00-148-6102	96182	954-90203-001	...SEMICONDUCTOR DEVIC DEVICE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	57	PAFZZ	5961-00-179-3200	96182	4408-419	...TRANSISTOR.........UHE,UHH,UHM,UHV,UHX	EA	2
233	58	AFFFF		96182	4408-309-19	..ROTO TELLITE ASSY U/O PN 4408-100-19.........UHE,UHH,UHV,UHX	EA	1
233	59	AFFFF		96182	4408-309-21	..ROTO TELLITE ASSY U/O PN 4408-100-21.........UHM	EA	1
233	60	AFFFF		96182	4408-309-25	..ROTO TELLITE ASSY U/O PN 4408-100-25.........UHM	EA	1
233	61	AFFFF		96182	4408-309-27	..ROTO TELLITE ASSY U/O PN 4408-100-27.........UHM	EA	1
233	62	AFFFF		96182	4408-309-29	..ROTO TELLITE ASSY U/O PN 4408-100-65.........UHE,UHH,UHV,UHX	EA	1
233	65	PAFZZ	6220-00-946-1116	96182	4277-304	...LAMP CAPSULE ASSY.........UHE,UHH,UHM,UHV,UHX	EA	20
233	66	PAFZZ	6220-00-932-3621	96182	4408-407	...NEGATIVE KEY,WARNIN.........UHE,UHH,UHM,UHV,UHX	EA	17
233	67	PAFZZ	6220-00-932-3622	96182	524-17047-000	...POSITIVE KEY,WARNIN.........UHE,UHH,UHM,UHV,UHX	EA	3
233	68	PAFZZ	6220-00-493-9470	96182	454-15833-000	...SHAFT,WARNING LIGHT.........UHE,UHH,UHM,UHV,UHX	EA	3
233	69	XDFZZ		96182	4369-408-002	...POST,ELECTRICAL-.........UHE,UHH,UHM,UHV,UHX	EA	4
233	70	XDFZZ		96182	474-17118-006	...SHIM.........UHE,UHH,UHM,UHV,UHX	EA	18
233	71	PAFZZ	5340-00-895-6385	96182	474-15993-000	...SPACER,ROTO-TELLITE.........UHE,UHH,UHM,UHV,UHX	EA	3
233	72	PAOZZ	6210-00-895-4430	96182	249-422-1	...LENS,LIGHT ENGINE OIL PRESSURE.........UHE,UHH,UHM,UHV,UHX	EA	1
233	73	PAOZZ	6210-00-936-5984	96182	249-422-2	...LENS,LIGHT ENGINE ICING.........UHE,UHH,UHM,UHV,UHX	EA	1
233	73A	PAOZZ	1680-01-156-7445	20309	ES-C-221541-4	..LENS,LIGHT AC/DC CONVERTER.........UHE,UHX	EA	1
233	74	PAOZZ	6210-00-895-4426	96182	249-422-3	...LENS,LIGHT ENGINE ICE DETECT.........UHE,UHH,UHM,UHV,UHX	EA	1
233	74A	PAOZZ	1680-01-156-0636	20309	ES-C-221541-2	..LENS,LIGHT AC ALTERNATOR.........UHE,UHX	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
233	75	PAOZZ	6210-00-849-4089	96182	249-422-17	...LENS,LIGHT SPARE..............................UHE,UHH,UHM,UHV,UHX	EA	2
233	76	PAOZZ	6210-00-895-4423	96182	249-422-4	...LENS,LIGHT LEFT FUEL BOOST....................UHE,UHH,UHM,UHV,UHX	EA	1
233	76A	PAOZZ	1680-01-156-0637	20309	ES-C-221541-3	..LENS,LIGHT FUEL BOOST..UHX	EA	1
233	77	PAOZZ	6210-00-895-4418	96182	249-422-5	...LENS,LIGHT RIGHT FUEL BOOST...................UHE,UHH,UHM,UHV,UHX	EA	1
233	77A	PAOZZ	1680-01-155-0639	20309	ES-C-221541-5	..LENS,LIGHT IN OP ALQ-144...................................UHE,UHX	EA	1
233	78	PAOZZ	6210-00-895-4413	96182	249-422-6	...LENS,LIGHT ENGINE FUEL PUMP...................UHE,UHH,UHM,UHV,UHX	EA	6
233	79	PAOZZ	6210-00-850-4399	96182	249-422-7	...LENS,LIGHT 20 MINUTE FUEL.....................UHE,UHH,UHM,UHV,UHX	EA	1
233	80	PAOZZ	6210-00-850-4398	96182	249-422-8	...LENS,LIGHT FUEL FILTER........................UHE,UHH,UHM,UHV,UHX	EA	1
233	81	PAOZZ	6210-00-849-4022	96182	249-422-24	...LENS,LIGHT GOVERNOR EMERGENCY.................UHE,UHH,UHM,UHV,UHX	EA	1
233	82	PAOZZ	6210-00-850-4369	96182	249-422-9	...LENS,LIGHT AUXILIARY FUEL PUMP................UHE,UHH,UHM,UHV,UHX	EA	1
233	82A	PAOZZ	1680-01-155-0638	20309	ES-C-221541-4	..LENS,LIGHT ECM ANTENNA...UHX	EA	1
233	83	PAOZZ	6210-00-850-4388	96182	249-422-10	...LENS,LIGHT XMSM OIL PRESSURE..................UHE,UHH,UHM,UHV,UHX	EA	1
233	84	XDOZZ		96182	249-422-11	...LENS,LIGHT TRANSMISSION OIL HOT ....UHE,UHH,UHM,UHV,UHX	EA	1
233	85	PAOZZ	6210-00-849-4085	96182	249-422-12	...LENS,LIGHT HYDRAULIC PRESSURE U/O PN 4408-309-19 & -29 ....UHE,UHH,UHV,UHX	EA	1
233	86	PAOZZ	6210-00-849-4025	96182	249-422-13	...LENS,LIGHT INSTRUMENT INVERTER................UHE,UHH,UHM,UHV,UHX	EA	1
233	87	PAOZZ	6210-00-849-4029	96182	249-422-14	...LENS,LIGHT DC GENERATOR.......................UHE,UHH,UHM,UHV,UHX	EA	1
233	88	PAOZZ	6210-00-849-4088	96182	249-422-15	...LENS,LIGHT EXTERNAL POWER.....................UHE,UHH,UHM,UHV,UHX	EA	1
233	89	PAOZZ	6210-00-849-4028	96182	249-422-18	...LENS,LIGHT CHIP DETECTOR......................UHE,UHH,UHM,UHV,UHX	EA	1
233	90	PAOZZ	6210-00-849-4027	96182	249-422-28	...LENS,LIGHT APX-681FF..........................UHE,UHH,UHM,UHV,UHX	EA	1
233	91	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT.............................UHE,UHH,UHM,UHV,UHX	EA	2
233	92	PAOZZ	1680-00-434-5808	96182	123-13435-000	...BASE ASSY,PANEL IND...........................UHE,UHH,UHM,UHV,UHX	EA	20

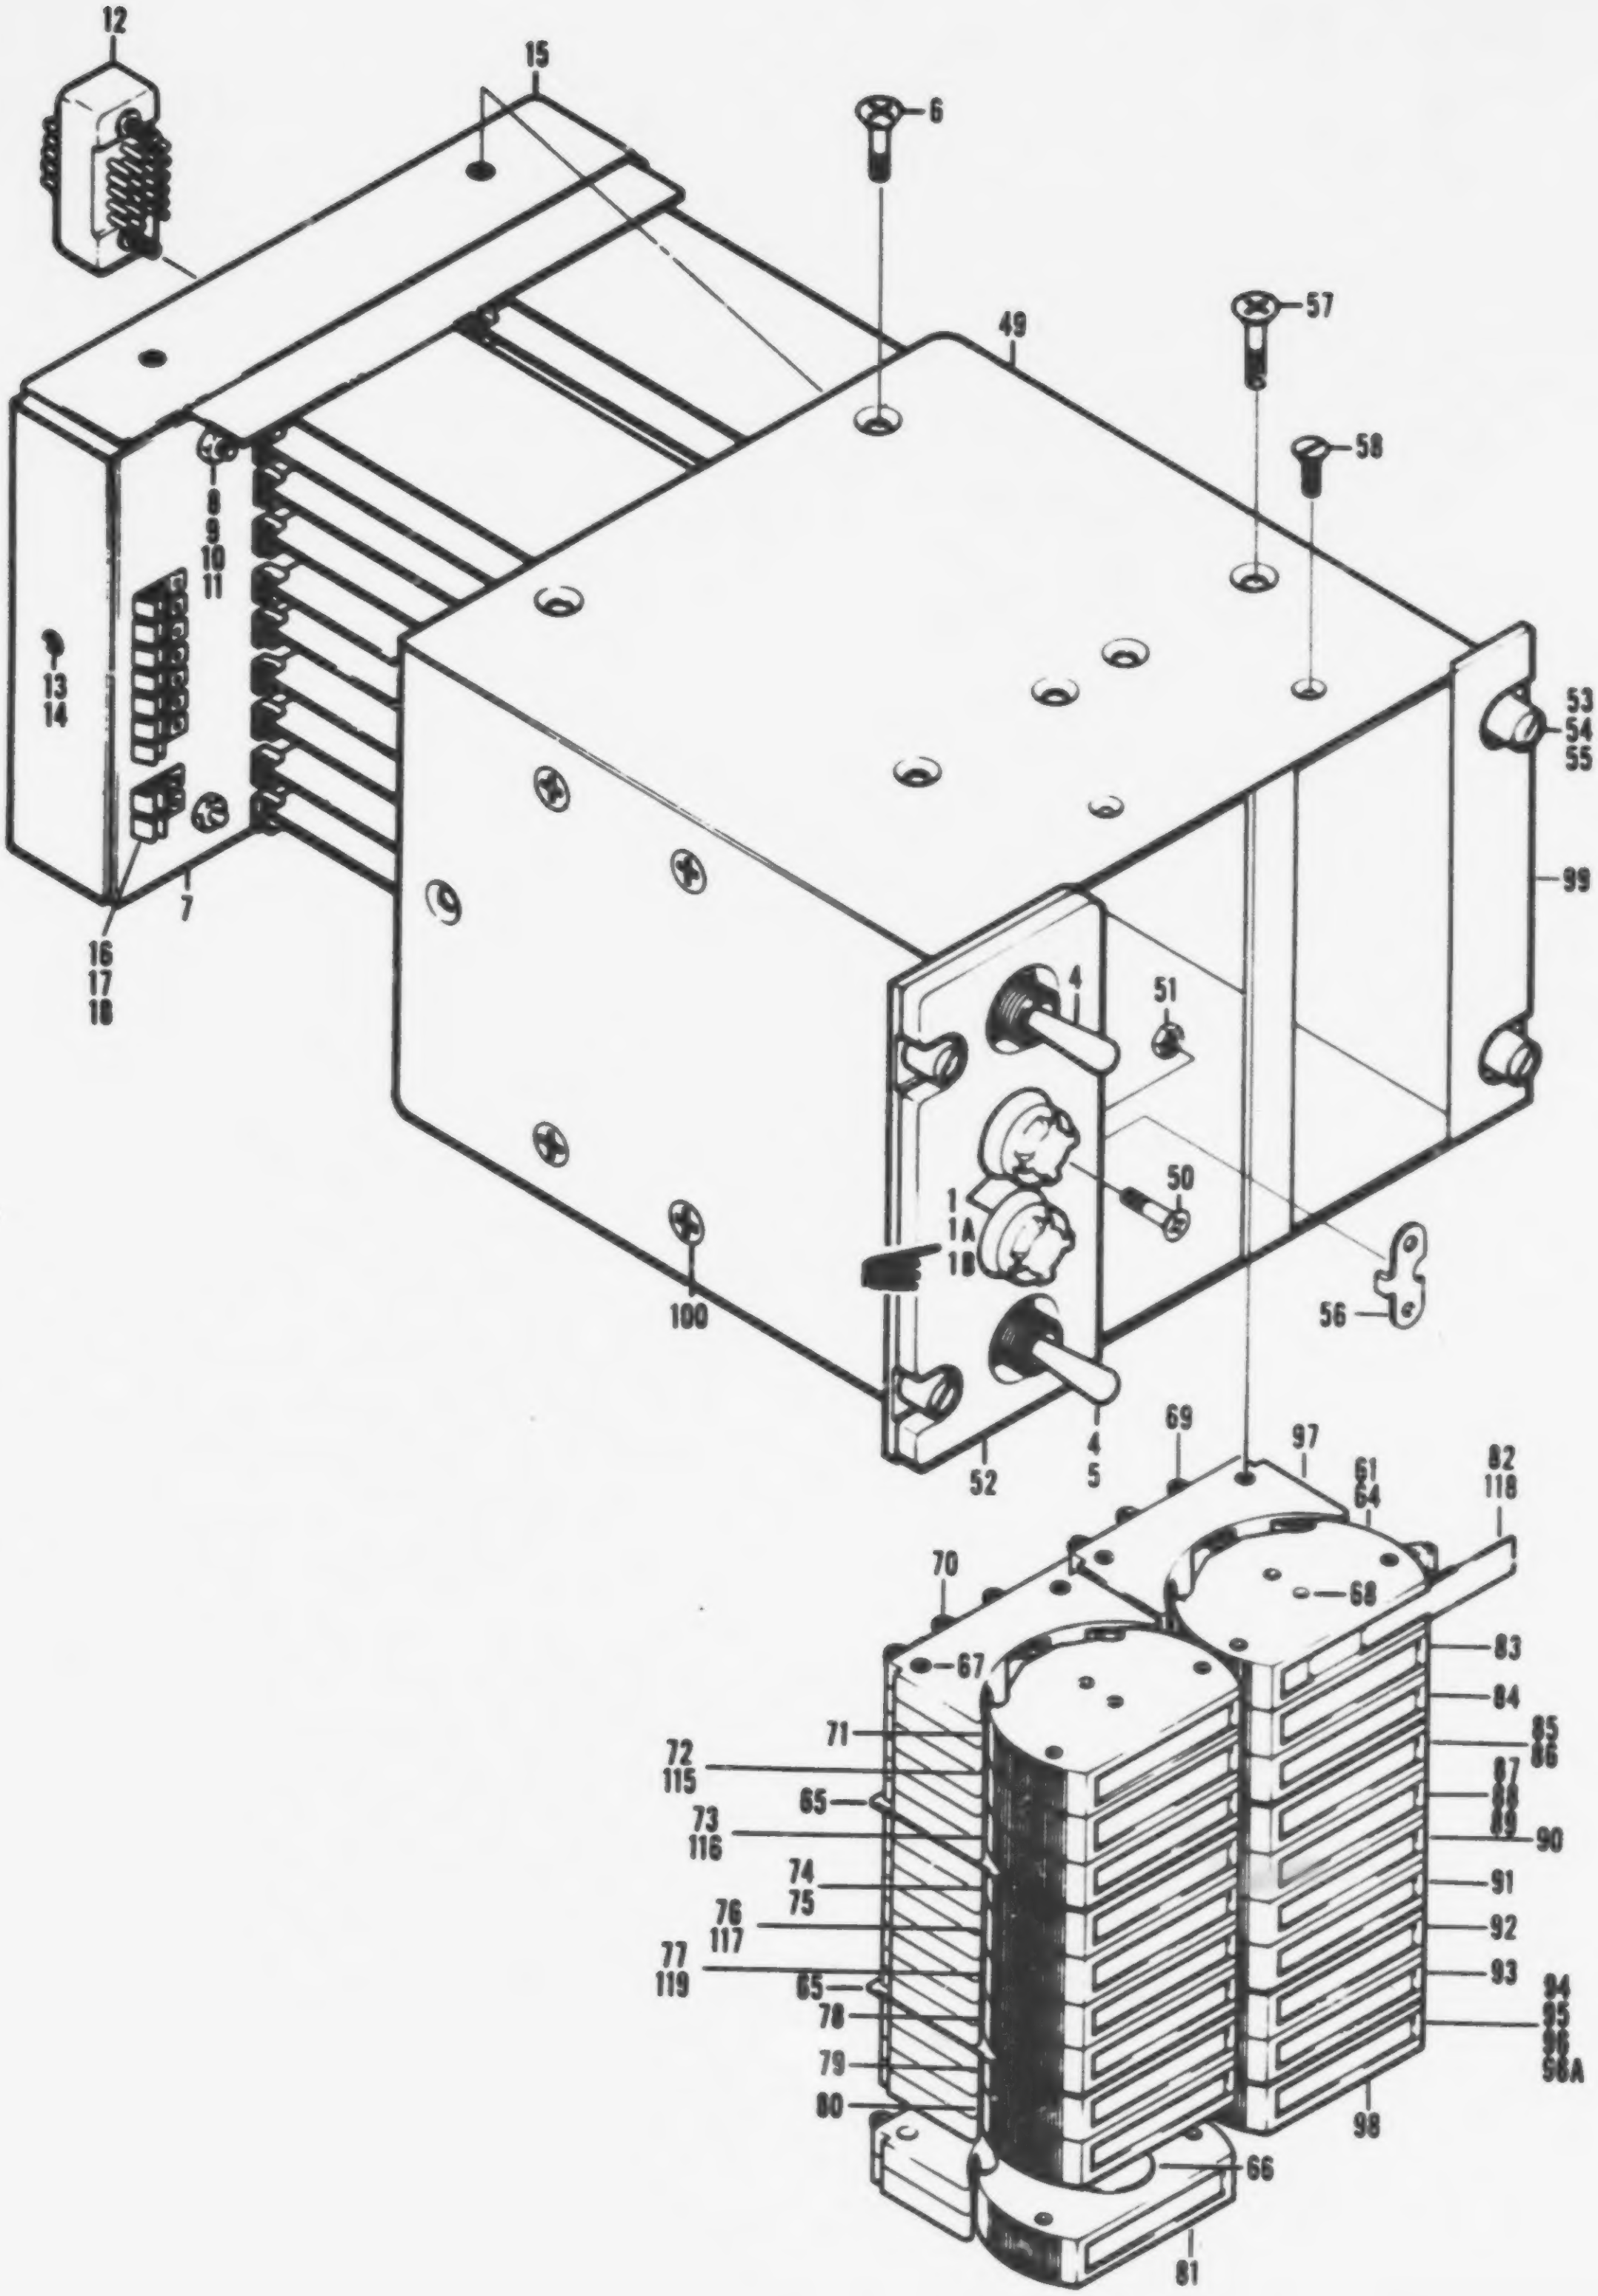
12
15
6
57
58
49
8
9
10
11
13
14
7
16
17
18
53
54
55
99
4
51
50
1
1A
1B
100
56
4
5
52
69
97
61
64
82
118
70
68
67
83
84
71
72
115
85
86
65
73
116
87
88
89
90
74
75
91
76
117
92
77
119
93
65
78
94
95
96
96A
79
80
98
66
81

Figure 234. Panel Assembly, Master Caution (Sheet 1 of 2)

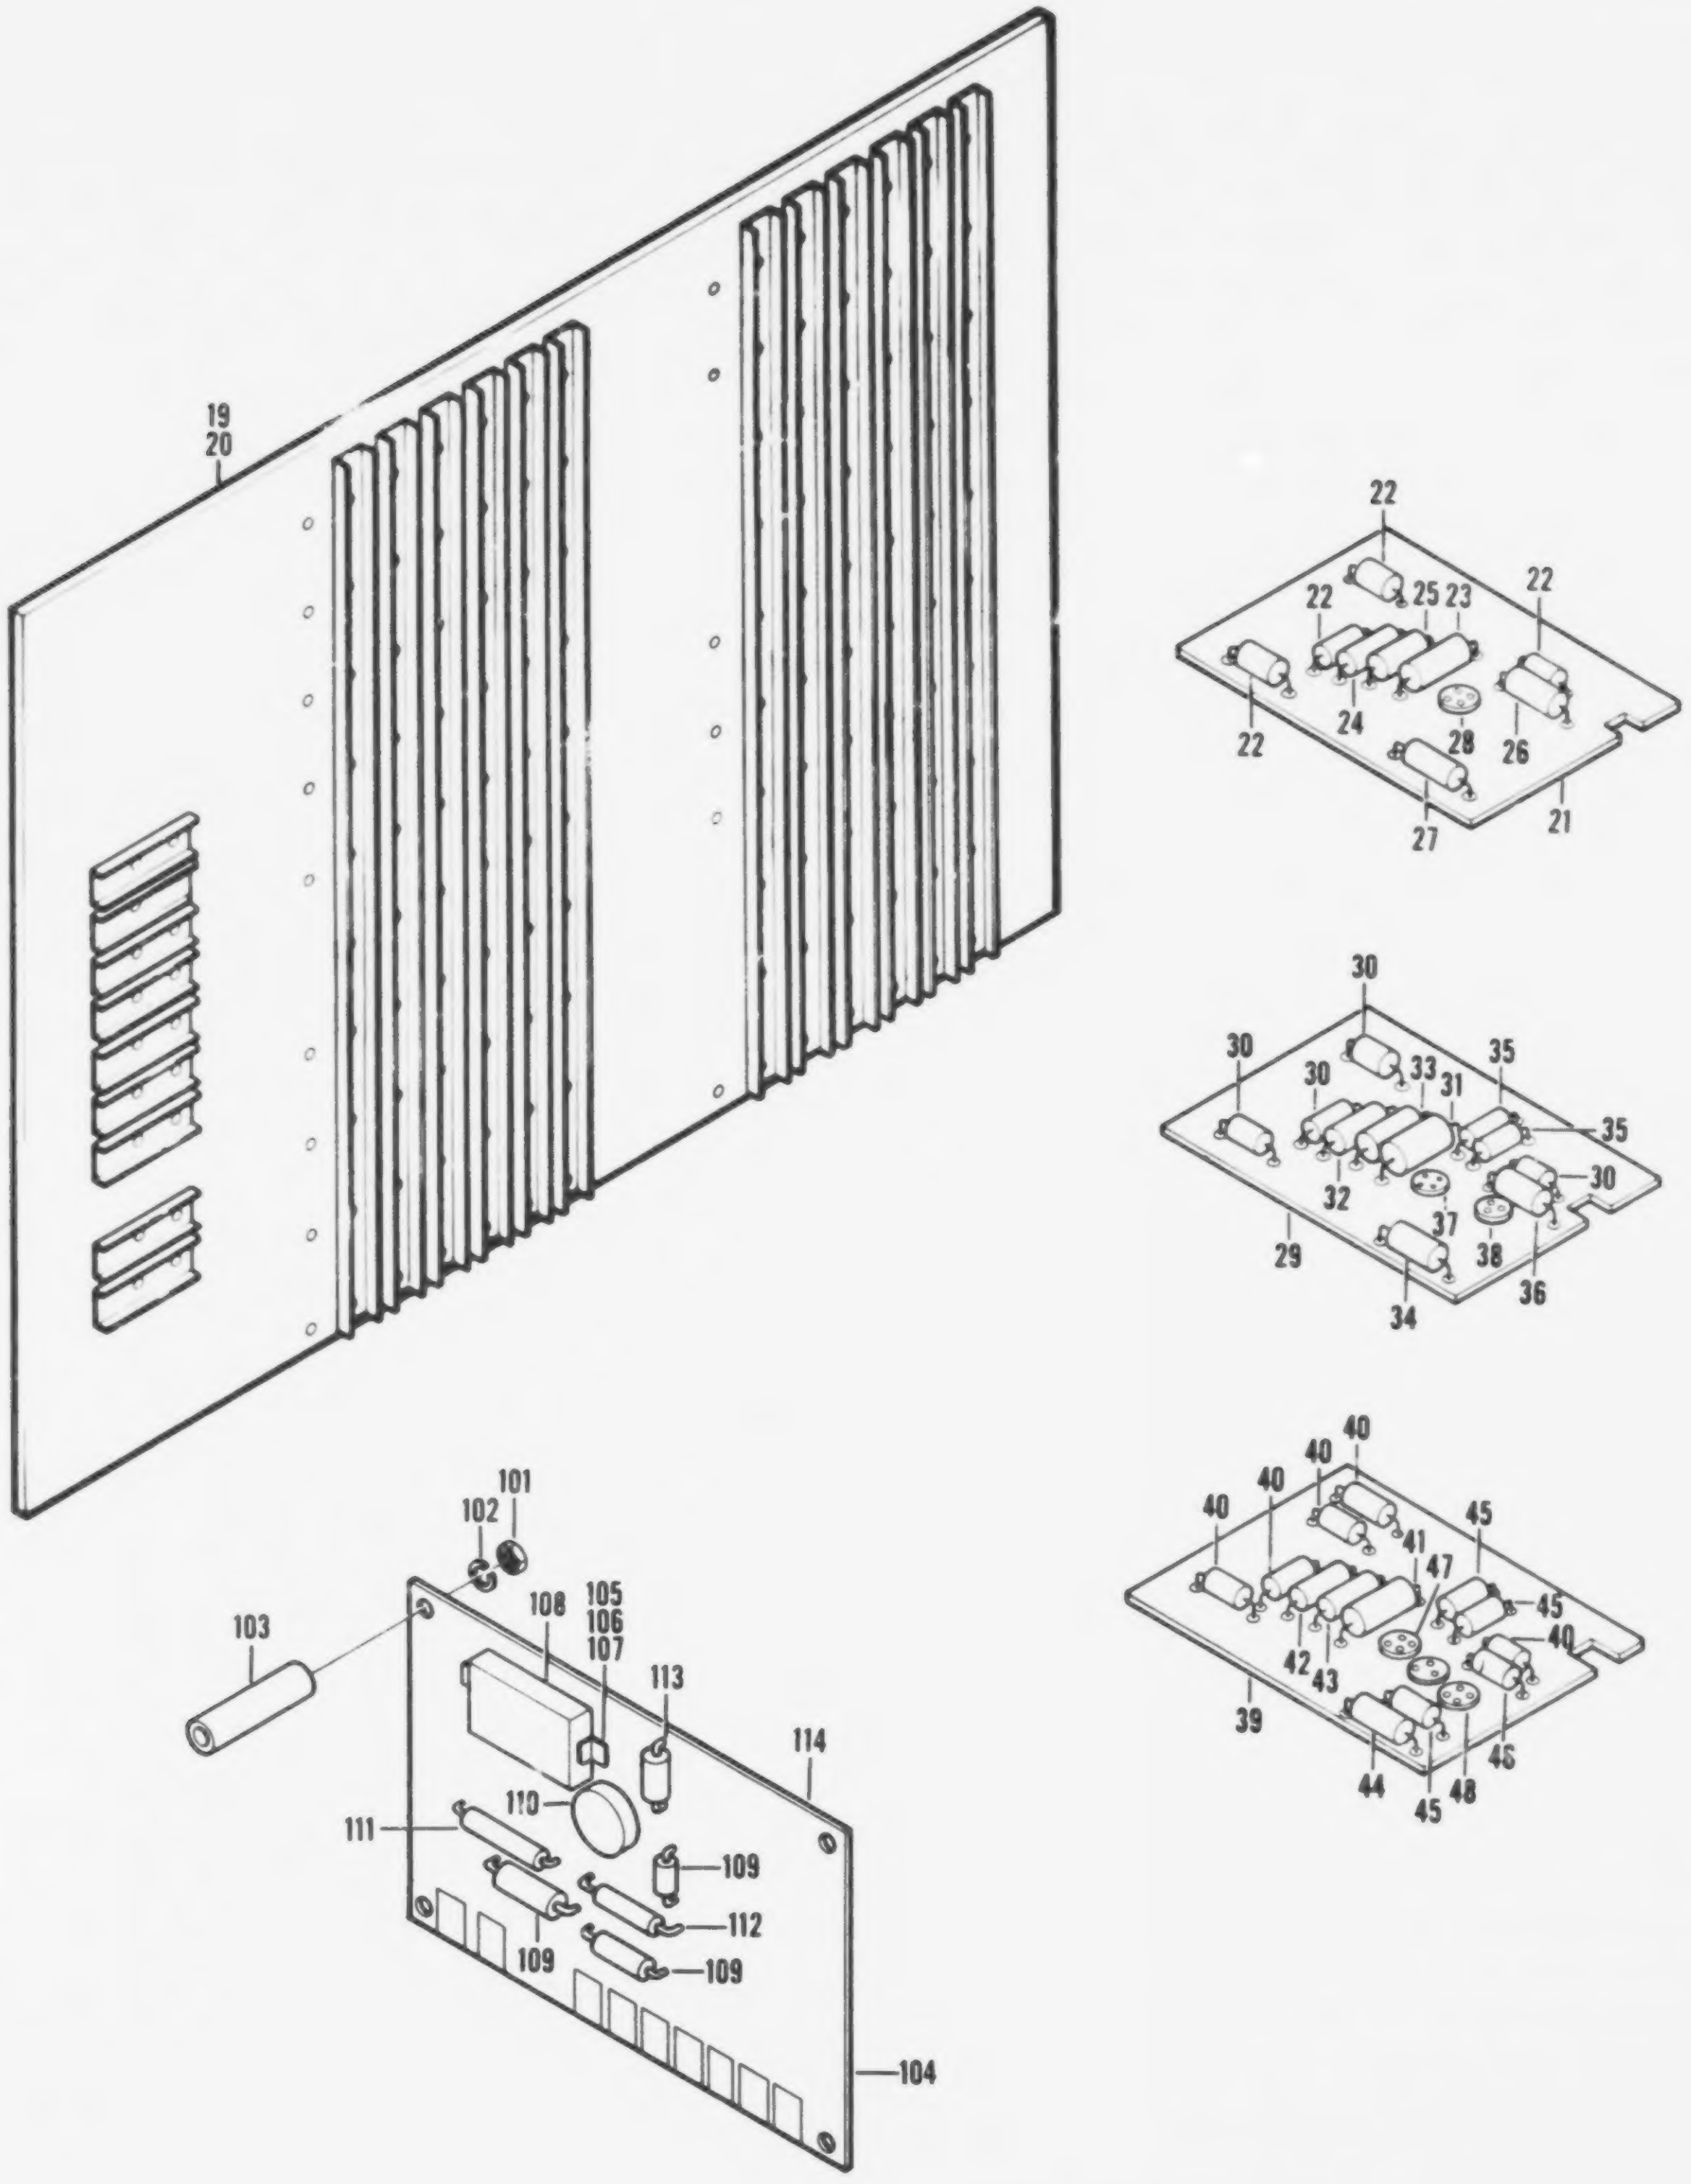
19
20
22
22
25
23
22
22
24
28
26
22
27
21
30
30
35
30
33
31
35
32
37
30
29
38
36
34
40
40
40
40
45
41
47
45
40
42
43
39
44
45
48
46
101
102
103
108
105
106
107
113
114
110
111
109
112
109
109
104

Figure 234. Panel Assembly, Master Caution (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS			
234		PAOFF	1680-00-759-8274	96182	141-10450-045	PANEL,FAULT-FUNCTIO CAUTION SEE FIG.226 FOR NHA	UHE,UHH,UHV,UHX	EA	1
234		XAOFF		96182	143-17037-045	.MASTER CAUTION ASSY U/O PN 141-10450-045	UHE,UHH,UHV,UHX	EA	1
234		PAOFF		97499	204-075-705-45	.PANEL,FAULT-FUNCTIO	UHX	EA	1
234	1	PAFZZ	6210-00-299-6656	96906	MS25010A11A327	..LIGHT,PANEL	UHE,UHH,UHM,UHV,UHX	EA	2
234	1A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	.LIGHT,INSERT,NVG	UHE,UHH,UHV,UHX	EA	2
234	1B	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	2
234	4	PAFZZ	5930-00-646-4360	91929	13AT1T	..SWITCH,TOGGLE	UHE,UHH,UHM,UHV,UHX	EA	2
234	6	PAFZZ	5305-00-056-9961	96906	MS24693C4	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	6
234	7	XDFFF		96182	253-13281-000	..COVER ASSEMBLY	UHE,UHH,UHM,UHV,UHX	EA	1
234	8	PAFZZ	5305-00-957-5032	96906	MS24693S11	...SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	5
234	9	PAFZZ	5310-00-810-7785	80205	NAS671-4	...NUT,PLAIN,HEXAGO	UHE,UHH,UHM,UHV,UHX	EA	5
234	10	PAFZZ	5310-00-543-2410	96906	MS35338-40	...WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	5
234	11	PAFZZ	5365-00-248-5202	96182	474-17225-000	...SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	5
234	12	PAFZZ	5935-00-811-1517	95238	26-20PGDS	...CONNECTOR,RECEPTACL	UHE,UHH,UHM,UHV,UHX	EA	1
234	13	PAFZZ	5310-00-168-2949	96182	514-90308-001	...NUT,SELF-LOCKING,CL -ALTERNATE-	UHE,UHH,UHM,UHV,UHX	EA	6
234	14	XDFZZ		80539	13681-40	...NUT,SELF-LOCKING	UHE,UHH,UHM,UHV,UHX	EA	6
234	15	XAFZZ		96182	254-13287-000	...COVER	UHE,UHH,UHM,UHV,UHX	EA	1
234	16	PBFZZ	6145-00-519-0123	81349	MILW16878TYPB24	...WIRE,ELECTRICAL	UHE,UHH,UHM,UHV,UHX	FT	V
234	17	PBFZA	6145-00-295-2804	03848	4-00234-024	...WIRE,ELECTRICAL	UHE,UHH,UHM,UHV,UHX	FT	V
234	18	XAFZZ		96182	494-17045-000	...TERMINAL,STUD	UHE,UHH,UHM,UHV,UHX	EA	49
234	19	PAFZZ	5940-00-898-9480	96182	183-13279-000	...TERMINAL BOARD	UHE,UHH,UHM,UHV,UHX	EA	1
234	20	PAFZZ	5970-00-936-5545	96182	4408-422	....INSULATOR,BUSHING	UHE,UHH,UHM,UHV,UHX	EA	149
234	21	PAFFF	6110-00-168-8406	96182	173-13227-000	..PANEL ASSEMBLY,ELEC SEE FIG.5B FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	17
234	22	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC DEVICE	UHE,UHH,UHM,UHV,UHX	EA	4
234	23	PAFZZ	5910-00-232-2914	96182	994-15832-000	...CAPACITOR,FIXED,PLA	UHE,UHH,UHM,UHV,UHX	EA	1
234	24	PAFZZ	5905-00-110-0196	81349	RCR20G102JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
234	25	PAFZZ	5905-00-141-0591	81349	RCR20G103JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
234	26	PAFZZ	5905-00-114-5417	81349	RCR20G302JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
234	27	XDFZZ		96182	884-90048-010	...RESISTOR,FIXED,WIRE	UHE,UHH,UHM,UHV,UHX	EA	1
234	28	PAFZZ	5961-00-148-6102	96182	954-90203-001	...SEMICONDUCTOR DEVIC DEVICE	UHE,UHH,UHM,UHV,UHX	EA	1
234	29	PAFFF	1680-00-169-0949	96182	173-13285-000	..CHANNEL BOARD ASSY DEVICE	UHE,UHH,UHM,UHV,UHX	EA	2
234	30	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC	UHE,UHH,UHM,UHV,UHX	EA	4
234	31	PAFZZ	5910-00-232-2914	96182	994-15832-000	...CAPACITOR,FIXED,PLA	UHE,UHH,UHM,UHV,UHX	EA	1
234	32	PAFZZ	5905-00-110-0196	81349	RCR20G102JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
234	33	PAFZZ	5905-00-141-0591	81349	RCR20G103JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
234	34	XDFZZ		96182	884-90048-010	...RESISTOR,FIXED,WIRE	UHE,UHH,UHM,UHV,UHX	EA	1
234	35	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	2
234	36	PAFZZ	5905-00-114-5417	81349	RCR20G302JS	...RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
234	37	PAFZZ	5961-00-148-6102	96182	954-90203-001	...SEMICONDUCTOR DEVIC DEVICE	UHE,UHH,UHM,UHV,UHX	EA	1
234	38	PAFZZ	5961-00-179-3200	96182	4408-419	...TRANSISTOR	UHE,UHH,UHM,UHV,UHX	EA	1
234	39	PAFFF	1680-01-028-4416	96182	173-13286-000	..CIRCUIT CARD ASSEMB SEE FIG.5B FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
234	40	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC DEVICE	UHE,UHH,UHM,UHV,UHX	EA	5

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
234	41	PAFZZ	5910-00-232-2914	96182	994-15832-000	...CAPACITOR,FIXED,PLA.......UHE,UHH,UHM,UHV,UHX	EA	1
234	42	PAFZZ	5905-00-110-0196	81349	RCR20G102JS	...RESISTOR,FIXED,COMP.......UHE,UHH,UHM,UHV,UHX	EA	1
234	43	PAFZZ	5905-00-141-0691	81349	RCR20G103JS	...RESISTOR,FIXED,COMP.......UHE,UHH,UHM,UHV,UHX	EA	1
234	44	XDFZZ		96182	884-90048-010	...RESISTOR,FIXED,WIRE.......UHE,UHH,UHM,UHV,UHX	EA	1
234	45	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP.......UHE,UHH,UHM,UHV,UHX	EA	3
234	46	PAFZZ	5905-00-114-5417	81349	RCR20G302JS	...RESISTOR,FIXED,COMP.......UHE,UHH,UHM,UHV,UHX	EA	1
234	47	PAFZZ	5961-00-148-6102	96182	954-90203-001	...SEMICONDUCTOR DEVIC DEVICE.......UHE,UHH,UHM,UHV,UHX	EA	1
234	48	PAFZZ	5961-00-179-3200	96182	4408-419	...TRANSISTOR.......UHE,UHH,UHM,UHV,UHX	EA	2
234	49	XDFFF		96182	293-17038-000	..HOUSING ASSEMBLY.......UHE,UHH,UHM,UHV,UHX	EA	1
234	50	PAFZZ	5305-00-637-5884	96906	MS35214-12	...SCREW,MACHINE.......UHE,UHH,UHM,UHV,UHX	EA	1
234	51	PAFZZ	5310-00-775-5063	46384	LK632-2	...NUT,SELF-LOCKING,CL CLINCH.......UHE,UHH,UHM,UHV,UHX	EA	1
234	52	XDFZZ	1680-00-342-8814	96182	444-15823-000	...PANEL,EDGE LITE.......UHE,UHH,UHM,UHV,UHX	EA	1
234	53	XDFZZ		96182	524-90096-001	...STUD,TURNLOCK, FASTENER.......UHE,UHH,UHM,UHV,UHX	EA	4
234	54	PBFZZ	5325-00-492-0630	96182	524-90096-003	...CUP,FASTENER.......UHE,UHH,UHM,UHV,UHX	EA	4
234	55	PBFZZ	5360-00-182-4581	96182	524-90096-002	...SPRING,HELICAL,COMP.......UHE,UHH,UHM,UHV,UHX	EA	4
234	56	PAFZZ	6150-00-730-8293	96182	444-16455	...BUS,CONDUCTOR.......UHE,UHH,UHM,UHV,UHX	EA	1
234	57	PAFZZ	5305-00-908-2829	96906	MS24693C8	...SCREW,MACHINE.......UHE,UHH,UHM,UHV,UHX	EA	8
234	58	PAFZZ	5305-00-206-5334	88044	AN510C1-3	...SCREW,MACHINE.......UHE,UHH,UHM,UHV,UHX	EA	4
234	61	AFFFF		96182	353-13283-025	...ROTO TELLITE ASSY U/O PN 143-17037-025.......UHM	EA	1
234	64	AFFFF		96182	353-13283-045	...ROTO TELLITE ASSY U/O PN 143-17037-045....UHE,UHH,UHV,UHX	EA	1
234	65	PAFZZ	5340-00-895-6385	96182	474-15993-000	....SPACER,ROTO-TELLITE.......UHE,UHH,UHM,UHV,UHX	EA	4
234	66	XDFZZ		96182	474-17118-006	....SHIM.......UHE,UHH,UHM,UHV,UHX	EA	18
234	67	XDFZZ		96182	454-15799-001	....TIE ROD,THREADED.......UHE,UHH,UHM,UHV,UHX	EA	4
234	68	PAFZZ	6220-00-493-9470	96182	454-15833-000	....SHAFT,WARNING LIGHT.......UHE,UHH,UHM,UHV,UHX	EA	2
234	69	PAFZZ	6220-00-932-3621	96182	524-15824-000	....NEGATIVE KEY,WARNIN.......UHE,UHH,UHM,UHV,UHX	EA	17
234	70	PAFZZ	6220-00-932-3622	96182	524-17047-000	....POSITIVE KEY,WARNIN.......UHE,UHH,UHM,UHV,UHX	EA	3
234	71	PBOZZ	6220-00-480-7706	96182	364-13289-001	....LENS,LIGHT OIL PRESSURE.......UHE,UHH,UHM,UHV,UHX	EA	1
234	72	PAOZZ	6220-00-493-9458	96182	364-13289-002	....LENS,LIGHT ENGINE ICING.......UHE,UHH,UHM,UHV,UHX	EA	1
234	73	PAOZZ	6220-00-493-945[illegible]	96182	364-13289-003	....LENS,LIGHT ENGINE ICE DETECTOR.......UHE,UHH,UHM,UHV,UHX	EA	1
234	74	PBOZZ	6220-00-480-7716	96182	364-13289-017	....LENS,LIGHT SPARE U/O PN 353-13283-019,-021,& -025 ....UHE,UHH,UHM,UHV,UHX	EA	1
234	75	PAOZZ	6220-00-493-9468	96182	364-13289-029	....LENS,LIGHT CHIP DETECTOR U/O PN 353-13283-027,-029,& -045.......UHE,UHH,UHM,UHV,UHX	EA	1
234	76	PAOZZ	6220-00-493-9460	96182	364-13289-004	....LENS,LIGHT LEFT FUEL BOOST.......UHE,UHH,UHM,UHV,UHX	EA	1
234	77	PAOZZ	6220-00-493-9461	96182	364-13289-005	....LENS,LIGHT RIGHT FUEL BOOST.......UHE,UHH,UHM,UHV,UHX	EA	1
234	78	PAOZZ	6220-00-480-7707	96182	364-13289-006	....LENS,LIGHT ENGINE FUEL PUMP.......UHE,UHH,UHM,UHV,UHX	EA	1
234	79	PAOZZ	6220-00-493-9462	96182	364-13289-007	....LENS,LIGHT 20 MINUTE FUEL.......UHE,UHH,UHM,UHV,UHX	EA	1
234	80	PAOZZ	6220-00-480-7708	96182	364-13289-008	....LENS,LIGHT FUEL FILTER.......UHE,UHH,UHM,UHV,UHX	EA	1
234	81	PAOZZ	6220-00-480-7720	96182	364-13289-024	....LENS,LIGHT GOVERNOR EMERGENCY.......UHE,UHH,UHM,UHV,UHX	EA	1
234	82	PAOZZ	6220-00-493-9463	96182	364-13289-009	....LENS,LIGHT AUXILIARY FUEL LOW.......UHE,UHH,UHM,UHV,UHX	EA	1
234	83	PBOZZ	6220-00-480-7710	96182	364-13289-010	....LENS,LIGHT TRANSMISSION OIL PRESSURE ....UHE,UHH,UHM,UHV,UHX	EA	1
234	84	PAOZZ	6220-00-480-7711	96182	364-13289-011	....LENS,LIGHT TRANSMISSION OIL HOT.......UHE,UHH,UHM,UHV,UHX	EA	1
234	85	PAOZZ	6220-00-493-9464	96182	364-13289-012	....LENS,LIGHT HYDRAULIC PRESSURE U/O PN 353-13283-019,-029,	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						& -045..UHE,UHH,UHM,UHV,UHX		
234	86	PAOZZ	6220-00-480-7718	96182	364-13289-022	....LENS,LIGHT HYDRAULIC PRESSURE NUMBER 1 U/O PN 353-13283-021,-025,& -027.....................UHE,UHH,UHM,UHV,UHX	EA	1
234	87	PBOZZ	6220-00-480-7719	96182	364-13289-023	....LENS,LIGHT HYDRAULIC PRESSURE NUMBER 2 U/O PN 353-13283-021,-025,& -027.....................UHE,UHH,UHM,UHV,UHX	EA	1
234	88	PBOZZ	6220-00-480-7716	96182	364-13289-017	....LENS,LIGHT SPARE U/O PN 353-13283-019 & -029 ....UHE,UHH,UHM,UHV,UHX	EA	1
234	89	PAOZZ	6220-00-480-7721	96182	364-13289-034	....LENS,LIGHT ENGINE INLET AIR U/O PN 353-13283-045 ....UHE,UHH,UHV,UHX	EA	1
234	90	PAOZZ	6220-00-493-9465	96182	364-13289-013	....LENS,LIGHT INSTRUMENT INVERTER.......UHE,UHH,UHM,UHV,UHX	EA	1
234	91	PAOZZ	6220-00-480-7713	96182	364-13289-014	....LENS,LIGHT DC GENERATOR.............UHE,UHH,UHM,UHV,UHX	EA	1
234	92	PAOZZ	6220-00-493-9466	96182	364-13289-015	....LENS,LIGHT EXTERNAL POWER............UHE,UHH,UHM,UHV,UHX	EA	1
234	93	PAOZZ	6220-00-480-7717	96182	364-13289-018	....LENS,LIGHT CHIP DETECTOR.............UHE,UHH,UHM,UHV,UHX	EA	1
234	94	PAOZZ	6220-00-493-9467	96182	364-13289-028	....LENS,LIGHT APX-68IFF U/O PN 353-13283-019,-025,-027,& -029.....................................UHE,UHH,UHM,UHV,UHX	EA	1
234	95	PAOZZ	6220-00-493-9469	96182	364-13289-031	....LENS,LIGHT IFF U/O PN 353-13283-045.....UHE,UHH,UHV,UHX	EA	1
234	96	PBOZZ	6220-00-480-7716	96182	364-13289-017	....LENS,LIGHT SPARE U/O PN 353-13283-021..............UHM	EA	1
234	97	PAFZZ	1680-00-434-5808	96182	123-13435-000	....BASE ASSY,PANEL IND..................UHE,UHH,UHM,UHV,UHX	EA	20
234	98	PAFZZ	6220-00-946-1116	96182	293-13188-000	....LAMP CAPSULE ASSY....................UHE,UHH,UHM,UHV,UHX	EA	20
234	99	XDFZZ		96182	294-15140-000	...HOUSING...............................UHE,UHH,UHM,UHV,UHX	EA	1
234	100	PAFZZ	5305-00-637-5964	88044	AN507C440-4	...SCREW,MACHINE.........................UHE,UHH,UHM,UHV,UHX	EA	4
234	101	PAFZZ	5310-00-810-7785	80205	NAS671-4	...NUT,PLAIN,HEXAGO......................UHE,UHH,UHM,UHV,UHX	EA	4
234	102	PAFZZ	5310-00-543-2410	96906	MS35338-40	...WASHER,LOCK...........................UHE,UHH,UHM,UHV,UHX	EA	4
234	103	PBFZZ	1680-00-434-5810	96182	474-15830-000	...STANDOFF,CAUTION PA...................UHE,UHH,UHM,UHV,UHX	EA	4
234	104	PBFFF	5999-00-342-8823	96182	123-13345-000	..ELECTRONIC COMPONEN....................UHE,UHH,UHM,UHV,UHX	EA	1
234	105	PAFZZ	5305-00-537-5964	88044	AN507C440-4	...SCREW,MACHINE.........................UHE,UHH,UHM,UHV,UHX	EA	2
234	106	PAFZZ	5310-00-934-9739	96906	MS35649-242	...NUT,PLAIN,HEXAGON.....................UHE,UHH,UHM,UHV,UHX	EA	2
234	107	PAFZZ	5310-00-926-5876	96906	MS35338-154	...WASHER,LOCK...........................UHE,UHH,UHM,UHV,UHX	EA	2
234	108	PAFZZ	5945-00-933-1389	96182	4408-421	...RELAY,ELECTROMAGNET...................UHE,UHH,UHM,UHV,UHX	EA	1
234	109	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC...................UHE,UHH,UHM,UHV,UHX	EA	3
234	110	PAFZZ	5961-00-102-0344	87771	80C20-10	...TRANSISTOR............................UHE,UHH,UHM,UHV,UHX	EA	1
234	111	XDFZZ		81349	RW79U24R3F	...RESISTOR,FIXED WIRE...................UHE,UHH,UHM,UHV,UHX	EA	1
234	112	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP...................UHE,UHH,UHM,UHV,UHX	EA	1
234	113	PAFZZ	5905-00-141-0591	81349	RCR20G103JS	...RESISTOR,FIXED,COMP...................UHE,UHH,UHM,UHV,UHX	EA	1
234	114	PAFZZ	5999-00-491-9760	96182	176-15144-000	...PRINTED WIRING BOAR BOARD.............UHE,UHH,UHM,UHV,UHX	EA	1
234		MFOZZ		20309	ES-C-221540	.PANEL,MASTER SEE FIG.5B FOR NHA..........................UHX	EA	1
234	115	PAOZZ	1680-01-156-7445	20309	ES-C-221541-1	..LENS,PANEL..UHX	EA	1
234	116	PAOZZ	1680-01-155-0636	20309	ES-C-221541-2	..LENS,PANEL..UHX	EA	1
234	117	PAOZZ	1680-01-155-0637	20309	ES-C-221541-3	..LENS,PANEL..UHX	EA	1
234	118	PAOZZ	1680-01-155-0638	20309	ES-C-221541-4	..LENS,PANEL..UHX	EA	1
234	119	PAOZZ	1680-01-155-0639	20309	ES-C-221541-5	..LENS,PANEL..UHX	EA	1

Fig. 235 NOT USED

Page 1009 Deleted

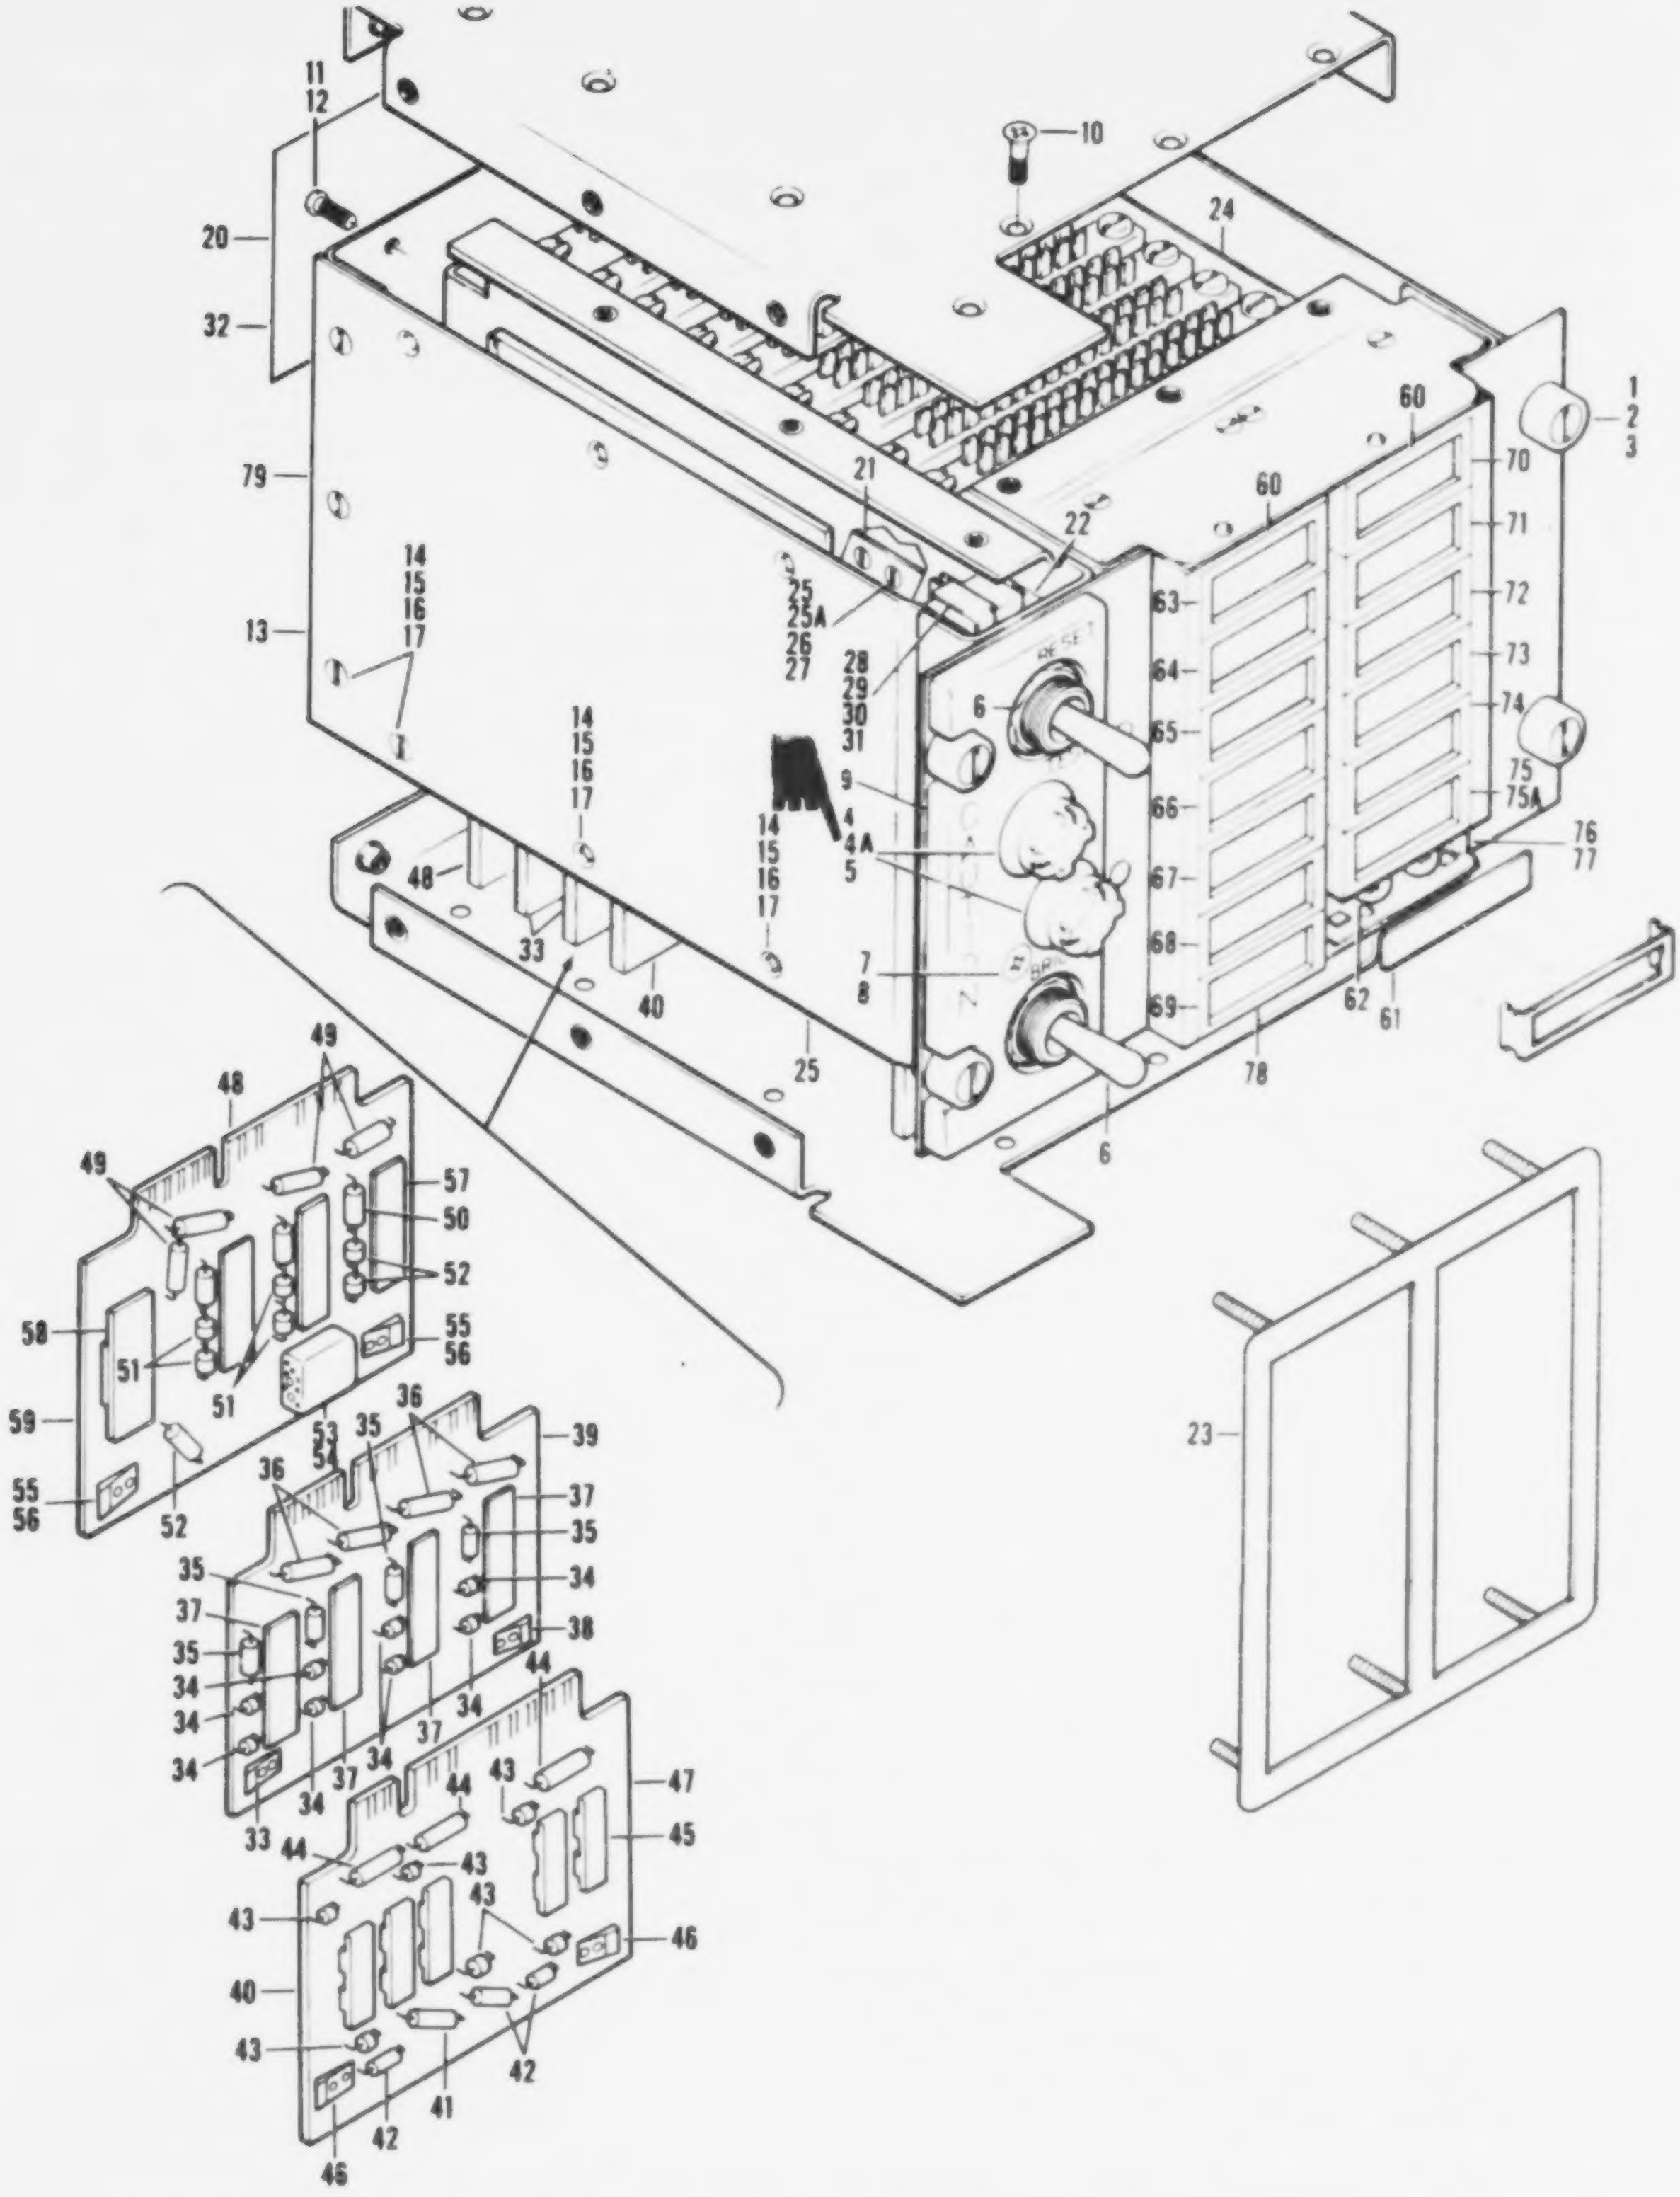
11
12
20
32
10
24
79
13
14
15
16
17
21
22
25
25A
26
27
28
29
30
31
9
4
4A
5
7
8
6
60
1
2
3
70
71
72
73
74
75
75A
76
77
63
64
65
66
67
68
69
62
61
78
48
33
40
49
57
50
52
55
56
58
51
53
54
59
36
35
39
37
34
38
44
43
47
45
46
41
42
23

Figure 236 Panel Assembly, Word Caution Control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
236		PAOFF	1680-00-894-6543	96182	792-100	PANEL ASSEMBLY WORD CAUTION CONTROL SEE FIG 225 & 226 FOR NHA UHE,UHH,UHV,UHX	EA	1
236		XAOFF		96182	792-300	.PANEL ASSY MASTER CAUTION UHE,UHH,UHV,UHX	EA	1
236	1	XAFZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	4
236	2	XAFZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP UHE,UHH,UHV,UHX	EA	4
236	3	XAFZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	4
236	4	PAFZZ	6210-00-299-6656	96906	MS25010A11A327	..LIGHT,PANEL UHE,UHH,UHV,UHX	EA	2
236	4A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	LIGHT, INSERT, NVG UHE,UHH,UHV,UHX	EA	2
236	5	PAFZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT UHE,UHH,UHV,UHX	EA	2
236	6	PAFZZ	5930-00-646-4360	91929	13AT1T	..SWITCH,TOGGLE UHE,UHH,UHV,UHX	EA	2
236	7	PAFZZ	5305-00-910-6871	96906	MS24693BB29	..SCREW,MACHINE UHE,UHH,UHV,UHX	EA	12
236	8	PAFZZ	5310-00-775-5063	46384	LK632-2	..NUT,SELF-LOCKING, CLINCH UHE,UHH,UHV,UHX	EA	1
236	9	XDFZZ		96182	681-407	..PANEL,PLASTIC UHE,UHH,UHV,UHX	EA	1
236	10	PAFZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE UHE,UHH,UHV,UHX	EA	12
236	11	PAFZZ	5325-00-449-3156	72794	A4-25	..STUD,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	3
236	12	PAFZZ	5325-00-281-4965	72794	GA4-250	..EYELET,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	3
236	13	PAFZZ	5325-00-285-3371	72794	S4-225	..LOCKSPRING,TURNLOCK UHE,UHH,UHV,UHX	EA	3
236	14	PAFZZ	5305-00-207-7463	96906	MS35214-15	..SCREW,MACHINE UHE,UHH,UHV,UHX	EA	8
236	15	PAFZZ	5310-00-934-9739	96906	MS35649-242	..NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	8
236	16	PAFZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK UHE,UHH,UHV,UHX	EA	15
236	17	PAFZZ	5935-00-927-0248	95238	K600-120-3XAGDF	..CONNECTOR,RECEPTACL CIRCUIT UHE,UHH,UHV,UHX	EA	1
236	20	PAFZZ	5935-00-729-8935	95238	26-20PS	..CONNECTOR,PLUG,ELEC UHE,UHH,UHV,UHX	EA	1
236	21	XDFZZ		96182	792-409	..BRACKET UHE,UHH,UHV,UHX	EA	1
236	22	XDFZZ	6340-00-064-0518	96182	681-415	..STIFFENER CONTROL PANEL UHE,UHH,UHV,UHX	EA	1
236	23	XDFZZ		96182	681-406	..PLATE UHE,UHH,UHV,UHX	EA	1
236	24	XDFZZ	1560-00-994-5838	96182	681-412	..RAIL,SUPPORT,PANEL UHE,UHH,UHV,UHX	EA	2
236	25	XDFZZ	5340-00-759-0791	96182	681-416	..RAIL,FLAT,SPACER UHE,UHH,UHV,UHX	EA	2
236	25A	PAFZZ	5305-00-637-5884	96906	MS35214-12	..SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
236	26	PAFZZ	5310-00-193-7577	88044	AN936A4	..WASHER,LOCK UHE,UHH,UHV,UHX	EA	2
236	27	PAFZZ	5310-00-934-9739	96906	MS35649-242	..NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	2
236	28	XDFZZ		96182	681-418	..CLAMP,LOOP UHE,UHH,UHV,UHX	EA	2
236	29	XDFZZ	5340-00-994-5839	96182	681-413-1	..BRACKET MASTER CAUTION PANEL UHE,UHH,UHV,UHX	EA	2
236	30	XDFZZ	5340-00-994-5840	96182	681-413-2	..BRACKET MASTER CAUTION PANEL UHE,UHH,UHV,UHX	EA	1
236	31	PAFZZ	6150-00-730-8293	96182	444-16455	..BUS,CONDUCTOR UHE,UHH,UHV,UHX	EA	1
236	32	XDFZZ	9905-00-778-8849	96182	792-410	..PLATE,IDENTIFICATIO UHE,UHH,UHV,UHX	EA	1
236	33	PAFFF	5999-00-758-1968	96182	681-310	..BOARD ASSEMBLY UHE,UHH,UHV,UHX	EA	2
236	34	PAFZZ	5961-00-924-6981	81349	1N4245	...SEMICONDUCTOR, DEVICE UHE,UHH,UHV,UHX	EA	8
236	35	PAFZZ	5905-00-328-1502	81349	RWR89S34R8FR	...RESISTOR,FIXED,WIRE UHE,UHH,UHV,UHX	EA	1
236	36	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR, DEVICE UHE,UHH,UHV,UHX	EA	4
236	37	PBFZZ	5325-00-584-9845	35536	L1Q240-2-5	...EYELET,METALLIC UHE,UHH,UHV,UHX	EA	4
236	38	PAFZZ	5310-00-850-8674	72962	F22A27M22-40	...NUT,SELF-LOCKING, PLATE UHE,UHH,UHV,UHX	EA	2
236	39	XAFZZ		96182	681-400	...BOARD UHE,UHH,UHV,UHX	EA	1
236	40	XDFFZ		96182	681-311	..CIRCUIT CARD ASSY UHE,UHH,UHV,UHX	EA	1
236	41	PAFZZ	5905-00-553-2071	91637	RS5X000B00500F	...RESISTOR,FIXED,WIRE WOUND UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
236	42	PAFZZ	5905-00-553-2071	91637	RS5X000B00500F	...RESISTOR,FIXED,WIRE WOUND	UHE,UHH,UHV,UHX	EA	1
236	43	PAFZZ	5961-00-867-5510	96182	249-426	...SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	4
236	44	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	4
235	45	PAFZZ	5950-00-758-1966	96182	681-401-1	...COIL,RADIO FREQUENC	UHE,UHH,UHV,UHX	EA	5
236	46	PAFZZ	5310-00-850-8674	72962	F22A27M22-40	...NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	2
236	47	XAFZZ		96182	681-402	...BOARD	UHE,UHH,UHV,UHX	EA	1
236	48	XDFFZ		96182	792-312	..CIRCUIT CARD ASSY	UHE,UHH,UHV,UHX	EA	1
236	49	PAFZZ	5961-00-682-8555	01281	PS010	...SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	4
236	50	PAFZZ	5905-00-328-1502	81349	RWR89S34R8FR	...RESISTOR,FIXED,WIRE WOUND	UHE,UHH,UHV,UHX	EA	1
236	51	PAFZZ	5961-00-924-6981	81349	JAN1N4245	...SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	6
236	52	XDFZZ		81349	RW79U24R3F	...RESISTOR,FIXED WIRE WOUND	UHE,UHH,UHV,UHX	EA	1
236	53	PAFZZ	5945-00-834-6969	82050	BR8-600C2-26V	...RELAY,ELECTROMAGNET	UHE,UHH,UHV,UHX	EA	1
236	54	PAFZZ	5310-00-088-0551	96906	MS21044N04	...NUT,SELF-LOCKING, HEXAGON	UHE,UHH,UHV,UHX	EA	2
236	55	PAFZZ	5310-00-850-8674	72962	F22A27M22-40	...NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	2
236	56	PBFZZ	5325-00-584-9845	36536	L1Q240-2-5	...EYELET,METALLIC	UHE,UHH,UHV,UHX	EA	4
236	57	PAFZZ	5950-00-758-1966	96182	681-401-1	...COIL,RADIO FREQUENC	UHE,UHH,UHV,UHX	EA	3
236	58	PAFZZ	5950-00-076-7685	96182	681-404	...COIL,ELECTRICAL	UHE,UHH,UHV,UHX	EA	1
236	59	XAFZZ		96182	792-400	...BOARD	UHE,UHH,UHV,UHX	EA	1
236	60	PAOOO	6340-00-867-1176	96182	792-301	..MASTER WARNING SYSTEM	UHE,UHH,UHV,UHX	EA	1
236	61	PAOZZ	6210-00-849-4088	96182	249-422-15	...LENS,LIGHT EXTERNAL POWER	UHE,UHH,UHV,UHX	EA	1
235	62	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	28
236	63	PAOZZ	6210-00-895-4430	96182	249-422-1	...LENS,LIGHT ENGINE OIL PRESSURE	UHE,UHH,UHV,UHX	EA	1
236	64	PAOZZ	6210-00-936-5984	96182	249-422-2	...LENS,LIGHT ENGINE ICING	UHE,UHH,UHV,UHX	EA	1
236	65	PAOZZ	6210-00-895-4426	96182	249-422-3	...LENS,LIGHT ENGINE ICE DETECTOR	UHE,UHH,UHV,UHX	EA	1
236	66	PAOZZ	6210-00-895-4423	96182	249-422-4	...LENS,LIGHT LEFT FUEL BOOST	UHE,UHH,UHV,UHX	EA	1
236	67	PAOZZ	6210-00-895-4418	96182	249-422-5	...LENS,LIGHT RIGHT FUEL BOOST	UHE,UHH,UHV,UHX	EA	1
236	68	PAOZZ	6210-00-895-4413	96182	249-422-6	...LENS,LIGHT ENGINE FUEL PUMP	UHE,UHH,UHV,UHX	EA	1
236	69	PAOZZ	6210-00-850-4399	96182	249-422-7	...LENS,LIGHT 20 MINUTE FUEL	UHE,UHH,UHV,UHX	EA	1
236	70	PAOZZ	6210-00-850-4369	96182	249-422-9	...LENS,LIGHT AUXILIARY FUEL LOW	UHE,UHH,UHV,UHX	EA	1
236	71	PAOZZ	6210-00-850-4388	96182	249-422-10	...LENS,LIGHT XMSN OIL PRESSURE	UHE,UHH,UHV,UHX	EA	1
236	72	XDOZZ		96182	249-422-11	...LENS,LIGHT XMSN OIL HOT	UHE,UHH,UHV,UHX	EA	1
236	73	PAOZZ	6210-00-849-4085	96182	249-422-12	...LENS,LIGHT HYDRAULIC PRESSURE	UHE,UHH,UHV,UHX	EA	1
236	74	PAOZZ	6210-00-849-4025	96182	249-422-13	...LENS,LIGHT INSTRUMENT INVERTER	UHE,UHH,UHV,UHX	EA	1
236	75	PAOZZ	6210-00-849-4029	96182	249-422-14	...LENS,LIGHT DC GENERATOR	UHE,UHH,UHV,UHX	EA	1
236	76	PAOZZ	5310-00-579-5554	96906	MS35333-35	...WASHER,LOCK	UHE,UHH,UHV,UHX	EA	14
236	77	PAOZZ	5340-00-895-6385	96182	474-15993-000	...SPACER,ROTO-TELLITE	UHE,UHH,UHV,UHX	EA	V
236	78	XAOZZ		96182	206-0303	...PLATE	UHE,UHH,UHV,UHX	EA	1
236	79	XBOZZ	1560-00-994-5841	96182	792-408	..COVER ASSY,PANEL	UHE,UHH,UHV,UHX	EA	1

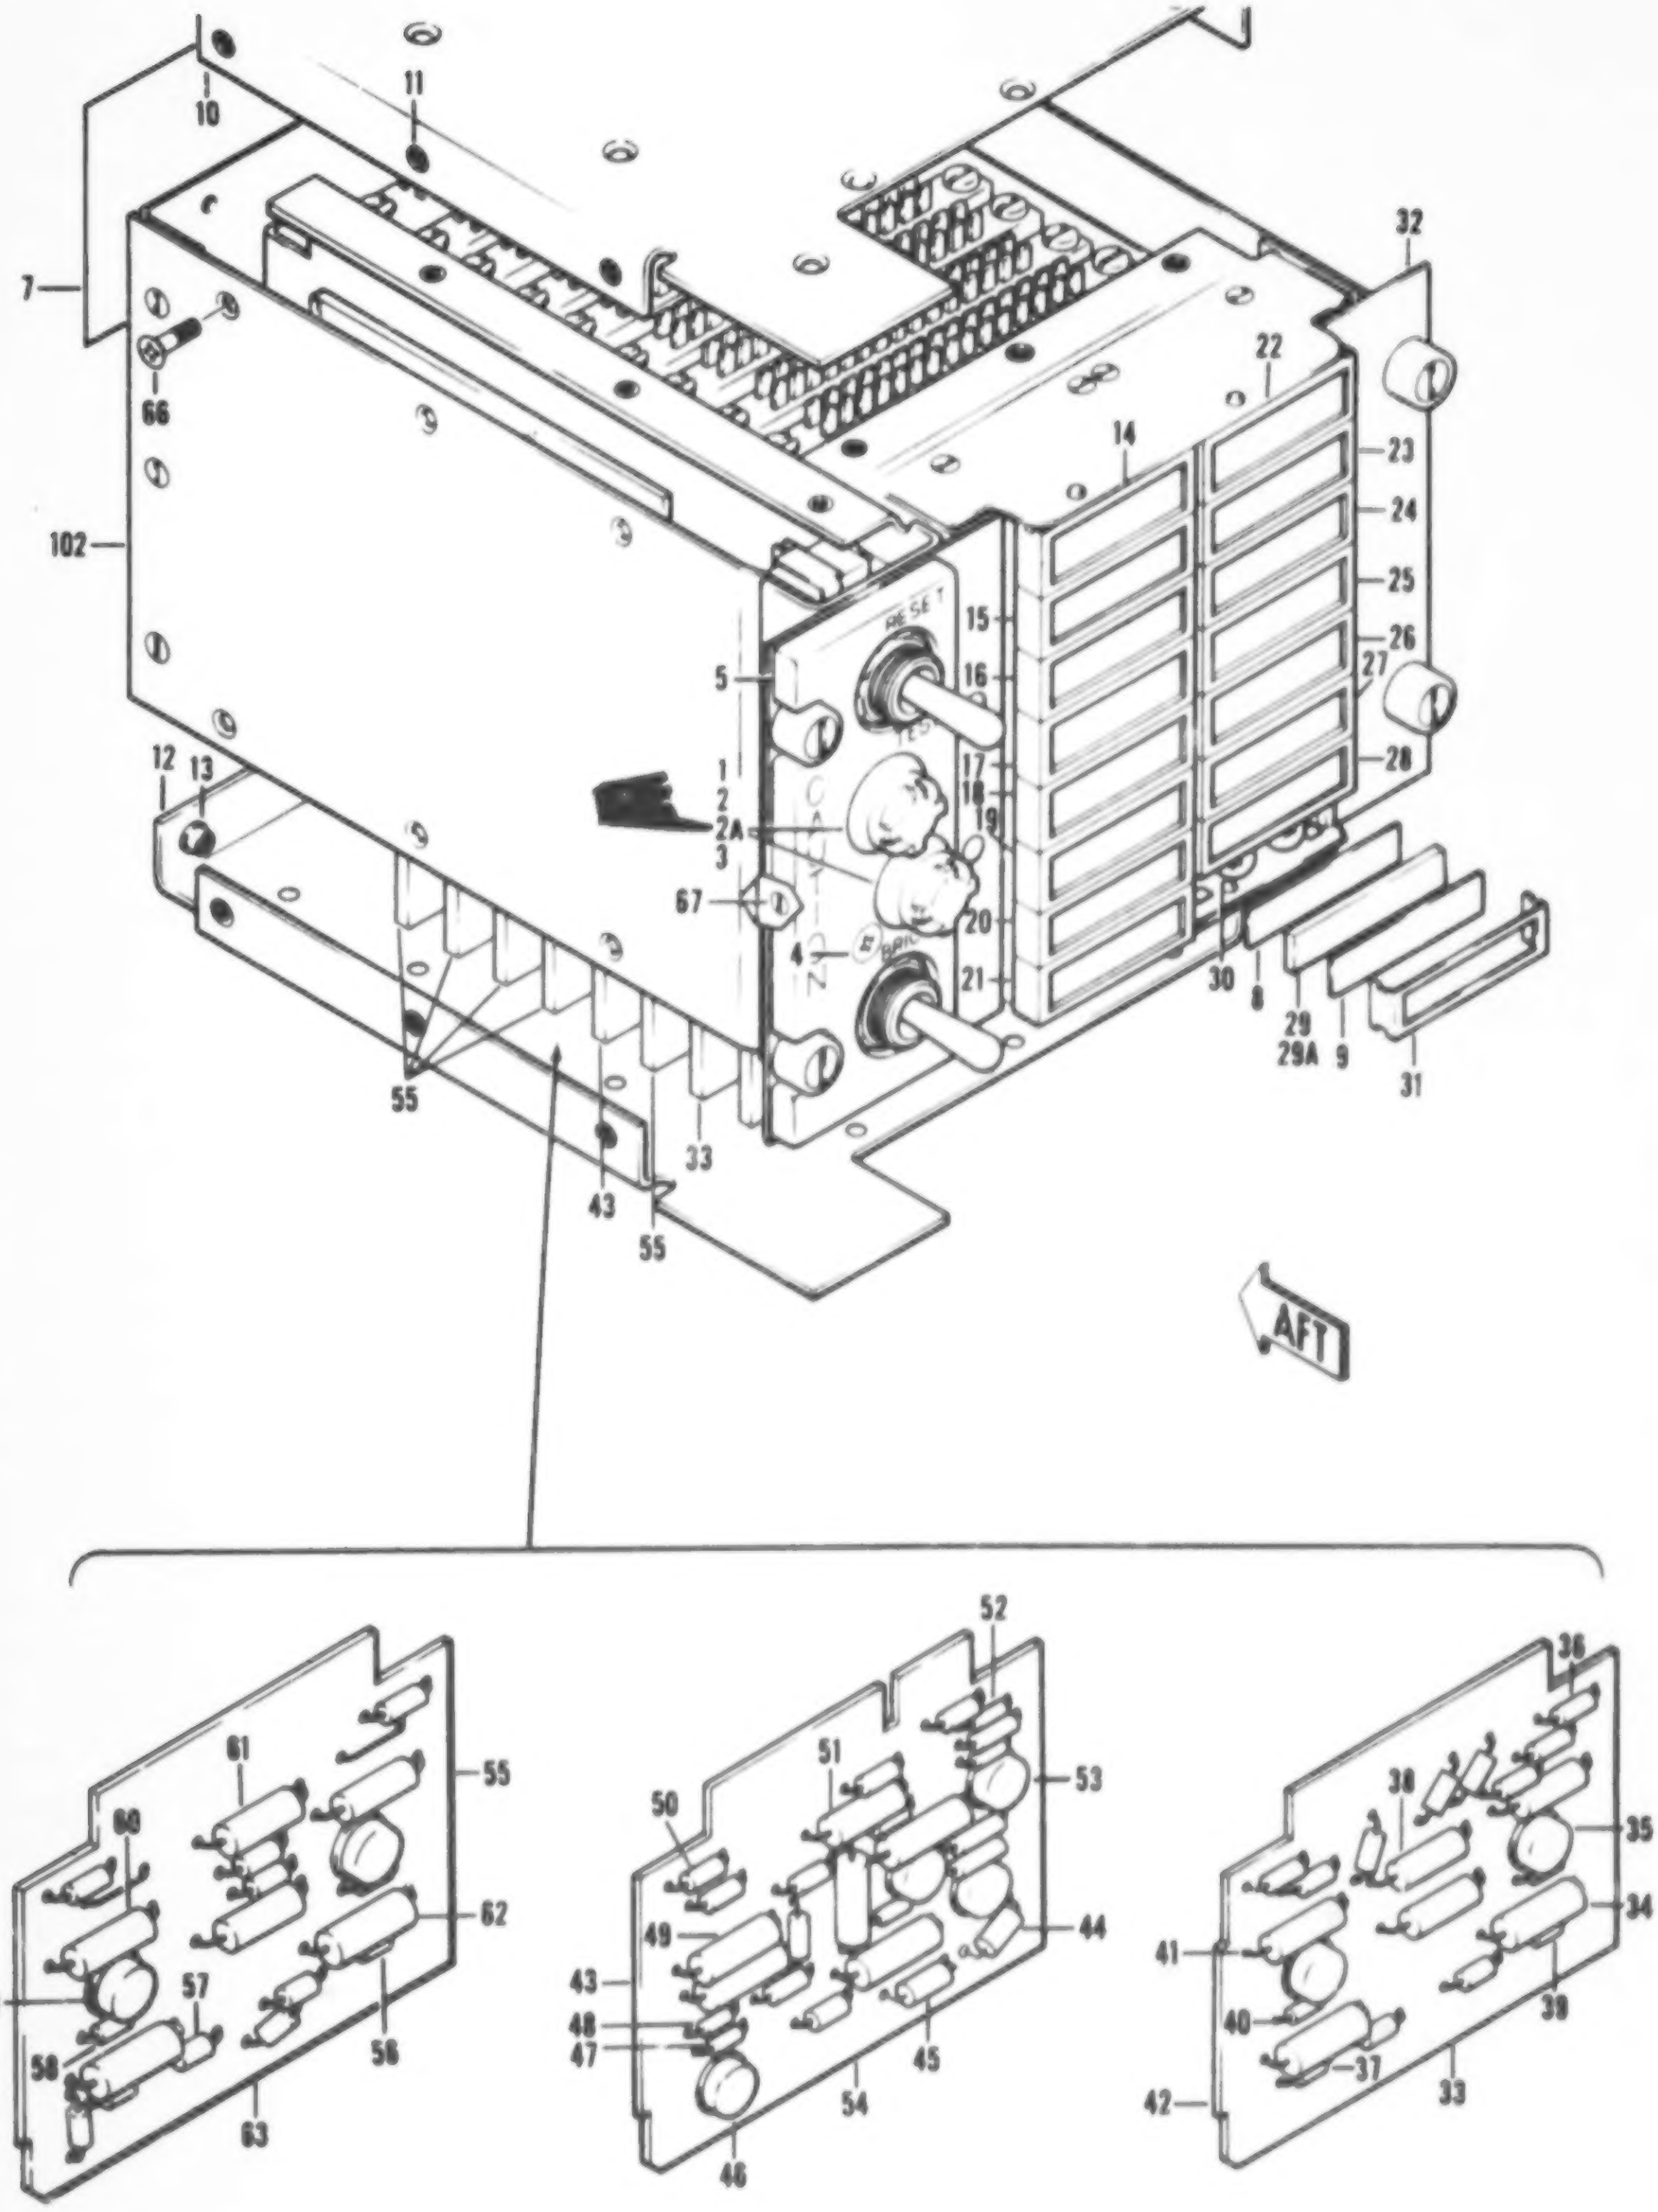
10
11
7
66
102
32
22
14
23
24
25
26
27
28
15
16
17
18
19
20
21
5
1
2
2A
3
67
4
RESET
12
13
30
8
29
29A
9
31
55
33
43
55
AFT
52
36
61
55
51
53
38
60
50
35
62
44
34
49
41
59
57
43
56
48
47
40
58
45
39
37
63
54
46
33
42

Figure 237. Panel, Fault-Function Indicator (Sheet 1 of 2)

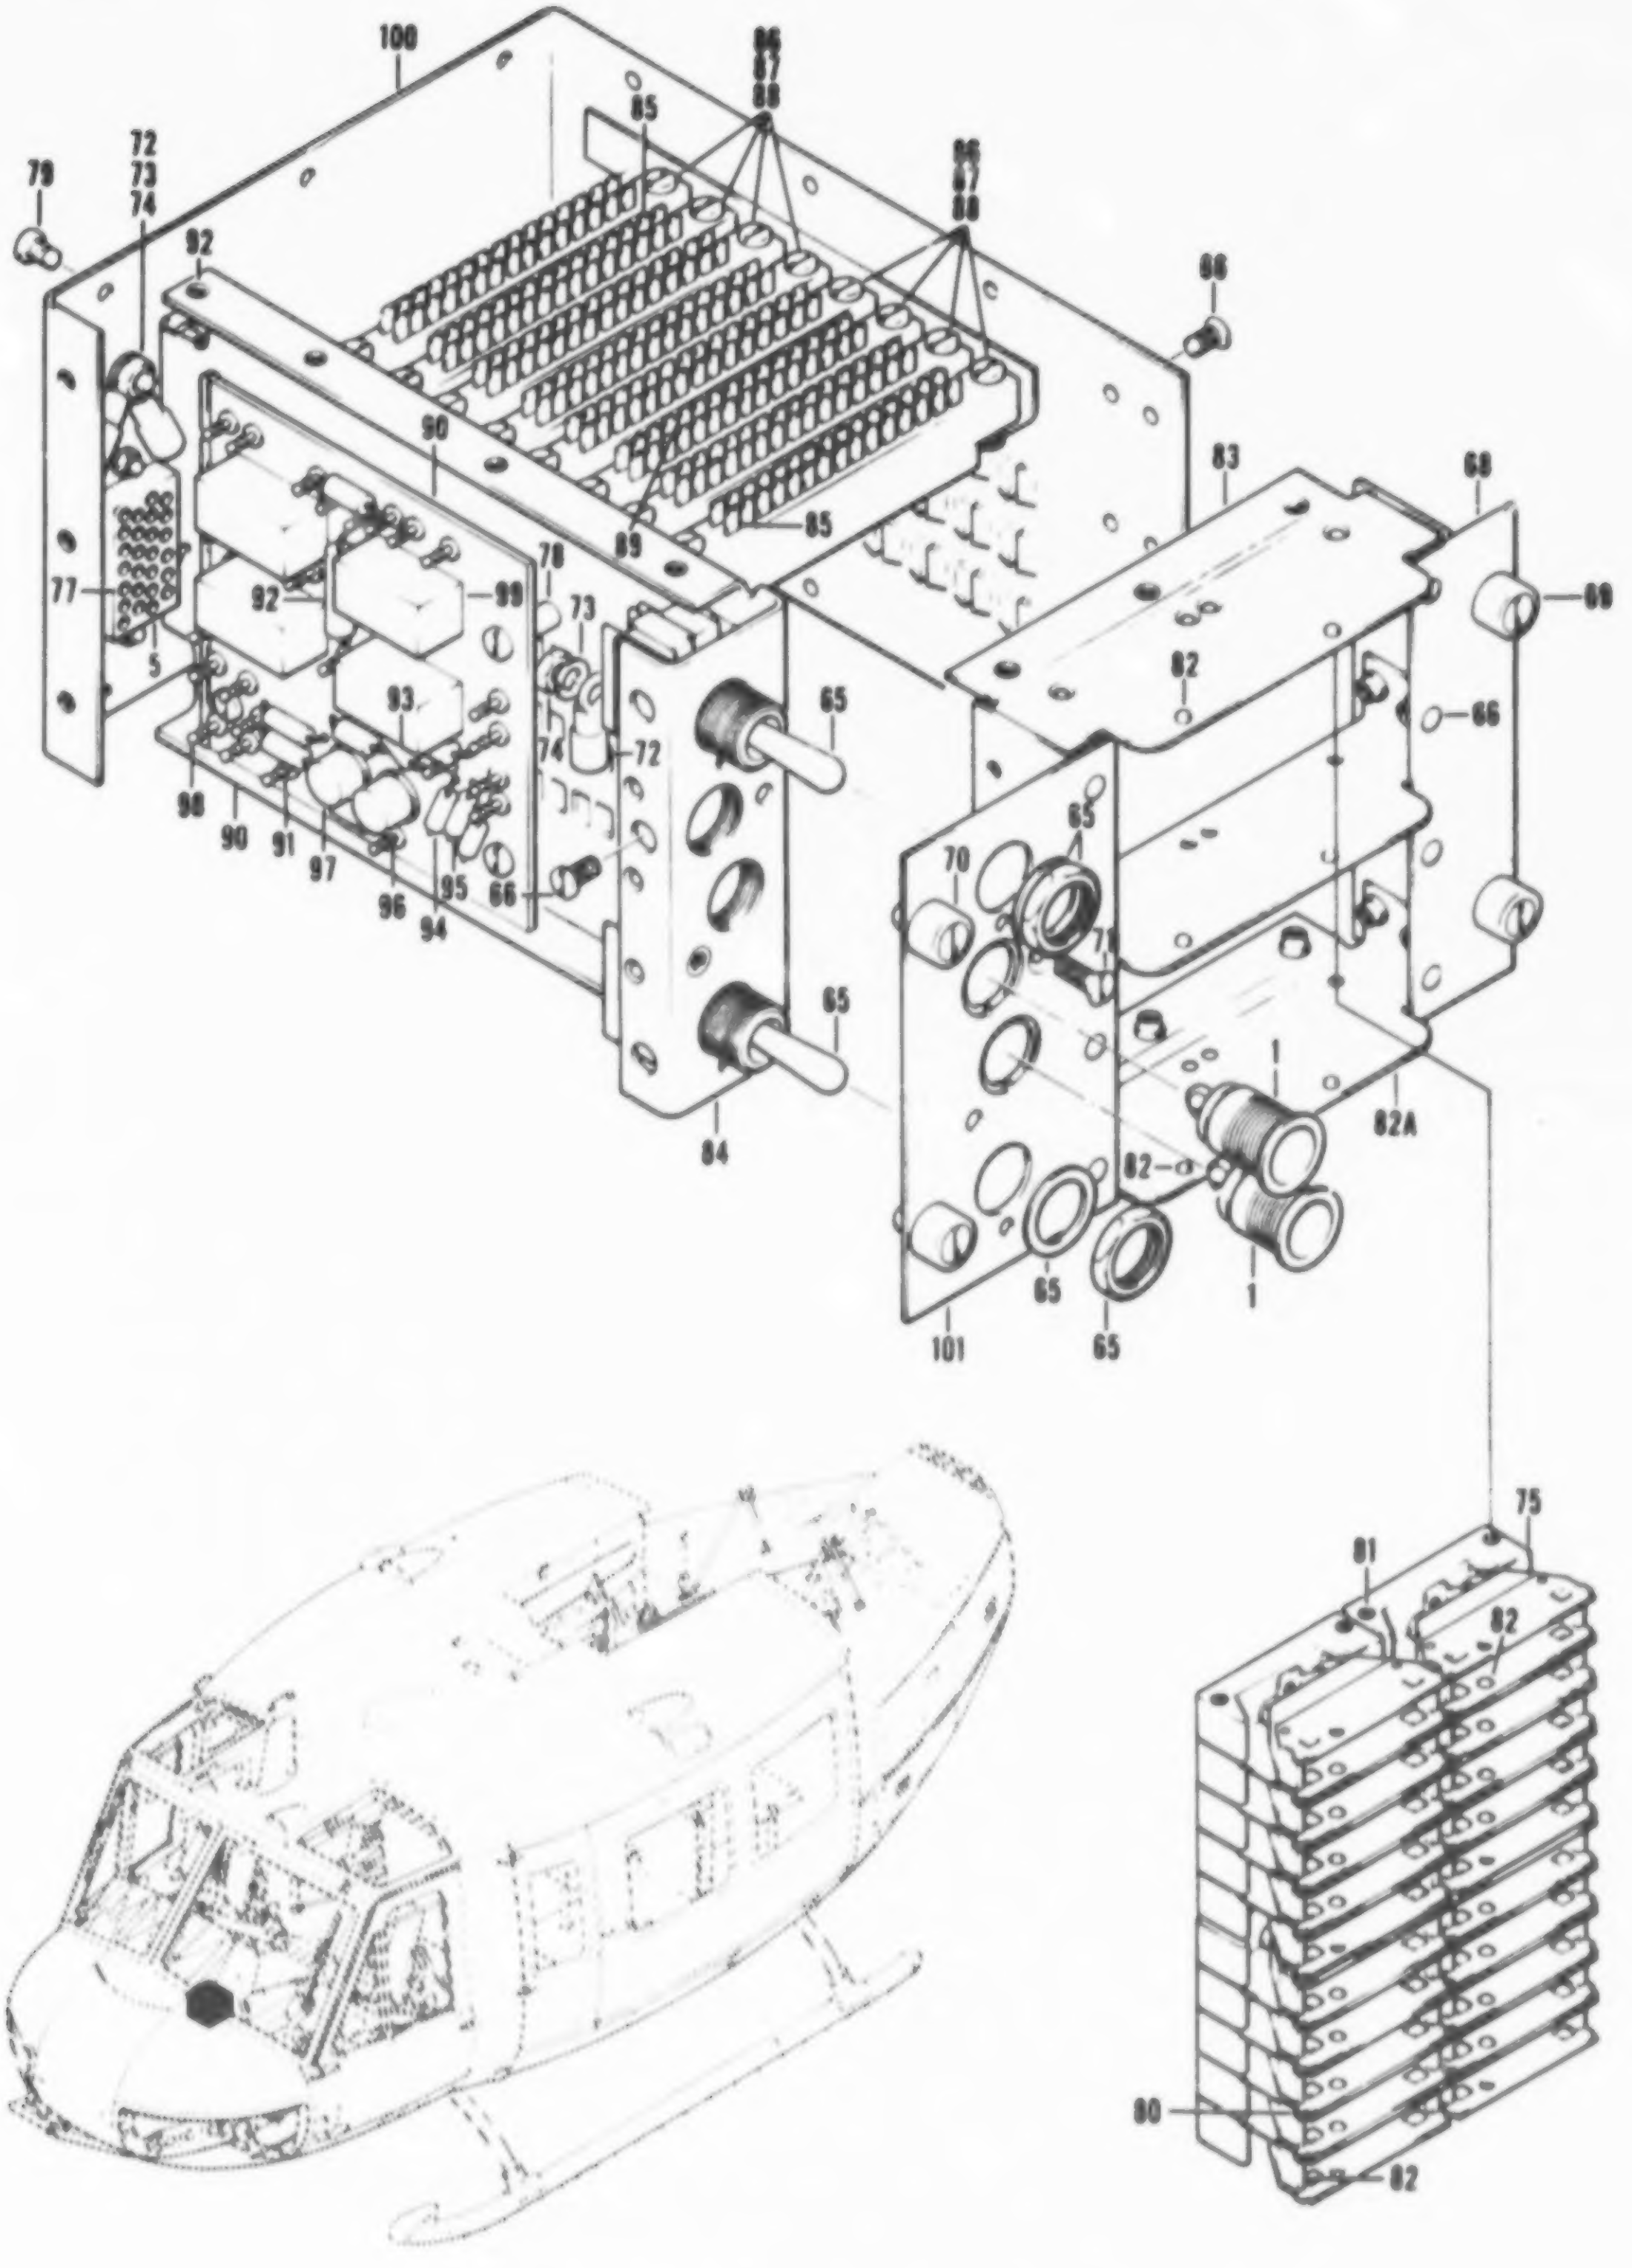
100
86
87
88
85
79
72
73
74
92
86
87
88
66
90
89
85
83
68
69
77
5
92
99
78
73
82
66
93
65
74
72
98
90
91
97
96
95
94
66
70
65
71
65
1
82A
84
82
65
65
1
101
65
75
81
82
80
82

Figure 237. Panel, Fault-Function Indicator (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
237		PAOFF	1680-00-143-8692	72914	80-0070-1	PANEL, FAULT-FUNCTIO INDICATOR SEE FIG. 225 & 226 FOR NHA UHE, UHH, UHV, UHX	EA	1
237	1	AOOOZ	6210-00-519-2853	96906	MS25010811A	.LIGHT, PANEL UHE, UHH, UHV, UHX	EA	2
237	2	PAOZZ	6210-00-548-0125	96906	MS25010-11A	.LENS, LIGHT UHE, UHH, UHV, UHX	EA	2
237	2A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	FILTER, LIGHT, NVG UHE, UHH, UHV, UHX	EA	2
237	3	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP, INCANDESCENT UHE, UHH, UHV, UHX	EA	2
237	4	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW, MACHINE UHE, UHH, UHV, UHX	EA	5
237	5	PAOZZ	6110-00-918-0370	72914	881-0336-1	.PANEL, MASTER CAUTIO UHE, UHH, UHV, UHX	EA	1
237	7	XDOZZ		72914	81-0314-1	.PLATE, IDENTIFICATIO UHE, UHH, UHV, UHX	EA	1
237	8	PAOZZ	6210-00-948-0402	72914	25-0037-7	.LENS, LIGHT UHE, UHH, UHV, UHX	EA	16
237	9	PAOZZ	6220-00-194-2989	72914	25-0037-11	.LENS, LIGHT UHE, UHH, UHV, UHX	EA	16
237	10	XDFFF		72914	81-0323-1	.COVER ASSY UHE, UHH, UHV, UHX	EA	1
237	11	PAFZZ	5310-00-824-9786	72962	22LHCFM1-40	..NUT, SELF-LOCKING, CLINCH UHE, UHH, UHV, UHX	EA	9
237	12	XDFFF		72914	81-0323-2	.COVER ASSY UHE, UHH, UHV, UHX	EA	1
237	13	PAFZZ	5310-00-824-9786	72962	22LHCFM1-40	..NUT, SELF-LOCKING, CLINCH UHE, UHH, UHV, UHX	EA	9
237	14	PAOZZ	6210-00-194-3002	72914	25-0021-387	.LENS, LIGHT ENGINE OIL PRESSURE UHE, UHH, UHV, UHX	EA	1
237	15	PAOZZ	6220-00-194-3004	72914	25-0021-173	.LENS, LIGHT ENGINE ICING UHE, UHH, UHV, UHX	EA	1
237	16	PAOZZ	6210-00-194-3008	72914	25-0021-388	.LENS, LIGHT ENGINE CHIP DETECTOR UHE, UHH, UHV, UHX	EA	1
237	17	PAOZZ	6210-00-194-3009	72914	25-0021-389	.LENS, LIGHT LEFT FUEL BOOST UHE, UHH, UHV, UHX	EA	1
237	18	PAOZZ	6210-00-194-3012	72914	25-0021-390	.LENS, LIGHT RIGHT FUEL BOOST UHE, UHH, UHV, UHX	EA	1
237	19	PAOZZ	6210-00-194-3015	72914	25-0021-391	.LENS, LIGHT ENGINE FUEL PUMP UHE, UHH, UHV, UHX	EA	1
237	20	PAOZZ	6210-00-194-3019	72914	25-0021-392	.LENS, LIGHT 20 MINUTE FUEL UHE, UHH, UHV, UHX	EA	1
237	21	PAOZZ	6210-00-194-3022	72914	25-0021-393	.LENS, LIGHT FUEL FILTER UHE, UHH, UHV, UHX	EA	1
237	22	PAOZZ	6210-00-194-3024	72914	25-0021-394	.LENS, LIGHT AUXILIARY FUEL LOW UHE, UHH, UHV, UHX	EA	1
237	23	PAOZZ	6210-00-194-3028	72914	25-0021-395	.LENS, LIGHT TRANSMISSION OIL PRESSURE UHE, UHH, UHV, UHX	EA	1
237	24	PAOZZ	6210-00-194-3029	72914	25-0021-396	.LENS, LIGHT TRANSMISSION OIL HOT UHE, UHH, UHV, UHX	EA	1
237	25	PAOZZ	6210-00-194-3031	72914	25-0021-397	.LENS, LIGHT HYDRAULIC PRESSURE UHE, UHH, UHV, UHX	EA	1
237	26	PAOZZ	6210-00-357-6149	72914	25-0021-398	.LENS, LIGHT INSTRUMENT INVERTER UHE, UHH, UHV, UHX	EA	1
237	27	PAOZZ	6210-00-194-3032	72914	25-0021-399	.LENS, LIGHT DC GENERATOR UHE, UHH, UHV, UHX	EA	1
237	28	PAOZZ	6210-00-194-3033	72914	25-0021-400	.LENS, LIGHT EXTERNAL POWER UHE, UHH, UHV, UHX	EA	1
237	29	PAOZZ	6210-00-194-3001	72914	25-0021-285	.LENS, LIGHT SPARE UHE, UHH, UHV, UHX	EA	1
237	30	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP, INCANDESCENT UHE, UHH, UHV, UHX	EA	32
237	31	PAFZZ	6210-00-943-7834	72914	66-0110-1	.LENS, LIGHT UHE, UHH, UHV, UHX	EA	16
237	32	XDFZZ		72914	81-0319-1	.FRAME UHE, UHH, UHV, UHX	EA	1
237	33	PAFFF	6220-00-179-9107	72914	81-0329-3	.CIRCUIT BOARD ASSY UHE, UHH, UHV, UHX	EA	1
237	34	PAFZZ	5910-00-835-2726	81349	MILC27287TYPECTM 473VAJ	..CAPACITOR, FIXED UHE, UHH, UHV, UHX	EA	2
237	35	PAFZZ	5961-00-888-4980	72914	55-0099-2	..SEMICONDUCTOR, DEVICE UHE, UHH, UHV, UHX	EA	2
237	36	PAFZZ	5961-00-919-3530	72914	55-0018-4	..SEMICONDUCTOR DEVICE UHE, UHH, UHV, UHX	EA	9
237	37	PAFZZ	5905-00-105-7764	81349	RCR07G222JS	..RESISTOR, FIXED, COMP UHE, UHH, UHV, UHX	EA	1
237	38	PAFZZ	5905-00-466-1498	81349	RWR89S3650FR	..RESISTOR, FIXED, WIRE UHE, UHH, UHV, UHX	EA	2
237	39	PAFZZ	5905-00-114-0710	81349	RCR07G331JS	..RESISTOR, FIXED, COMP UHE, UHH, UHV, UHX	EA	2
237	40	PAFZZ	5905-00-110-7620	81349	RCR07G102JS	..RESISTOR, FIXED, COMP UHE, UHH, UHV, UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
237	41	PAFZZ	5905-00-921-4826	81349	RW79U6980F	..RESISTOR,FIXED,WIRE UHB,UHE,UHH,UHV,UHX	EA	2
237	42	XAFZZ		72914	81-0326-1	..CIRCUIT BOARD,PRINT UHB,UHE,UHH,UHV,UHX	EA	1
237	43	XDFZZ	5999-00-837-2660	72914	81-0330-1	.CIRCUIT BOARD ASSY UHB,UHE,UHH,UHV,UHX	EA	1
237	44	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	..RESISTOR,FIXED,COMP UHB,UHE,UHH,UHV,UHX	EA	3
237	45	PAFZZ	5905-00-114-0710	81349	RCR07G331JS	..RESISTOR,FIXED,COMP UHB,UHE,UHH,UHV,UHX	EA	2
237	46	PAFZZ	5961-00-888-4980	72914	55-0099-2	..SEMICONDUCTOR, DEVICE UHB,UHE,UHH,UHV,UHX	EA	2
237	47	PAFZZ	5905-00-110-7620	81349	RCR07G102JS	..RESISTOR,FIXED,COMP UHB,UHE,UHH,UHV,UHX	EA	2
237	48	PAFZZ	5910-00-835-2726	81349	MILC27287TYPECTM 473VAJ	..CAPACITOR,FIXED UHB,UHE,UHH,UHV,UHX	EA	2
237	49	PAFZZ	5905-00-921-4826	81349	RW79U6980F	..RESISTOR,FIXED,WIRE UHB,UHE,UHH,UHV,UHX	EA	2
237	50	PAFZZ	5961-00-919-3530	72914	55-0018-4	..SEMICONDUCTOR, DEVICE UHB,UHE,UHH,UHV,UHX	EA	10
237	51	PAFZZ	5905-00-466-1498	81349	RWR89S3650FR	..RESISTOR,FIXED,WIRE UHB,UHE,UHH,UHV,UHX	EA	2
237	52	PAFZZ	5905-00-106-3666	81349	RCR07G103JS	..RESISTOR,FIXED,COMP UHE,UHH,UHV,UHX	EA	2
237	53	PAFZZ	5961-00-840-3561	81349	JAN2N696	..TRANSISTOR UHB,UHE,UHH,UHV,UHX	EA	2
237	54	XAFZZ		72914	81-0325-1	..CIRCUIT BOARD,PRINT UHB,UHE,UHH,UHV,UHX	EA	1
237	55	XDFZZ	6220-00-837-2664	72914	81-0333-1	.CIRCUIT BOARD ASSY UHB,UHE,UHH,UHV,UHX	EA	1
237	56	PAFZZ	5905-00-114-0710	81349	RCR07G331JS	..RESISTOR,FIXED,COMP UHB,UHE,UHH,UHV,UHX	EA	2
237	57	PAFZZ	5961-00-919-3530	72914	55-0018-4	..SEMICONDUCTOR, DEVICE UHB,UHE,UHH,UHV,UHX	EA	8
237	58	PAFZZ	5905-00-110-7620	81349	RCR07G102JS	..RESISTOR,FIXED,COMP UHB,UHE,UHH,UHV,UHX	EA	2
237	59	PAFZZ	5961-00-888-4980	72914	55-0099-2	..SEMICONDUCTOR, DEVICE UHB,UHE,UHH,UHV,UHX	EA	2
237	60	PAFZZ	5905-00-921-4826	81349	RW79U6980F	..RESISTOR,FIXED,WIRE UHB,UHE,UHH,UHV,UHX	EA	2
237	61	PAFZZ	5905-00-466-1498	81349	RWR89S3650FR	..RESISTOR,FIXED,WIRE UHB,UHE,UHH,UHV,UHX	EA	2
237	62	PAFZZ	5910-00-835-2726	81349	MILC27287TYPECTM 473VAJ	..CAPACITOR,FIXED UHB,UHE,UHH,UHV,UHX	EA	2
237	63	XAFZZ		72914	81-0327-1	..CIRCUIT BOARD,PRINT UHB,UHE,UHH,UHV,UHX	EA	1
237		XAFFF		72914	81-0332-1	.PANEL ASSEMBLY UHB,UHE,UHH,UHV,UHX	EA	1
237	65	XDFZZ	5930-00-646-4360	91929	13AT1T	..SWITCH,TOGGLE UHB,UHE,UHH,UHV,UHX	EA	2
237	66	PAFZZ	5305-00-958-5483	96906	MS35190-221	..SCREW,MACHINE UHB,UHE,UHH,UHV,UHX	EA	26
237	67	PAFZZ	5305-00-995-6653	96906	MS35190-222	..SCREW,MACHINE UHB,UHE,UHH,UHV,UHX	EA	4
237	68	XDFFF		72914	81-0321-1	..BRACKET ASSEMBLY UHB,UHE,UHH,UHV,UHX	EA	2
237	69	PBFZZ	5310-00-839-3587	72962	12LHCFM1-62	...NUT,SELF-LOCKING UHB,UHE,UHH,UHV,UHX	EA	2
237	70	PAFZZ	5310-00-824-9786	72962	22LHCFM1-40	...NUT,SELF-LOCKING, CLINCH UHB,UHE,UHH,UHV,UHX	EA	5
237	71	PAFZZ	5305-00-059-4550	96906	MS35190-235	..SCREW,MACHINE UHB,UHE,UHH,UHV,UHX	EA	1
237	72	PAFZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG UHB,UHE,UHH,UHV,UHX	EA	4
237	73	PAFZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK UHB,UHE,UHH,UHV,UHX	EA	2
237	74	PAFZZ	5310-00-934-9747	96906	MS35649-262	..NUT,PLAIN,HEXAGON UHB,UHE,UHH,UHV,UHX	EA	2
237	75	PAFZZ	6220-00-944-5560	72914	66-0124-1	..REFLECTOR,LIGHT UHB,UHE,UHH,UHV,UHX	EA	16
237	77	PAFZZ	5935-00-917-6164	09922	MS26P58	..CONNECTOR,PLUG UHB,UHE,UHH,UHV,UHX	EA	1
237	78	PBFZZ	5365-00-983-0145	72914	76-0064-1	..SPACER,SLEEVE UHB,UHE,UHH,UHV,UHX	EA	4
237	79	PAFZZ	5305-00-405-8960	96906	MS35223-13	..SCREW,MACHINE UHB,UHE,UHH,UHV,UHX	EA	2
237	80	PAFZZ	6250-00-882-6666	72914	66-1092-1	..LAMPHOLDER UHB,UHE,UHH,UHV,UHX	EA	16
237	81	PAFZZ	5340-00-182-9771	72914	15692-41	..POST,ELECTRICAL- UHB,UHE,UHH,UHV,UHX	EA	4
237	82	PAFZZ	5340-00-764-9831	72914	66-0101-1	..SPACER ASSEMBLY UHB,UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
237	82A	XDFZZ	1680-00-181-4934	72914	81-0322-1	..SUPPORT ASSY,PANEL	UHB,UHE,UHH,UHV,UHX	EA	1
237	83	XDFZZ	1680-00-181-4943	72914	81-0322-2	..SUPPORT ASSY,PANEL	UHB,UHE,UHH,UHV,UHX	EA	1
237	84	PBFZZ	1680-00-181-4938	72914	81-0318-1	..SUPPORT ASSY,PANEL	UHB,UHE,UHH,UHV,UHX	EA	1
237	85	PAFZZ	6110-00-824-5586	72914	81-0439-1	..INDEXING PIN	UHB,UHE,UHH,UHV,UHX	EA	1
237	86	PAFZZ	5305-00-889-3000	96906	MS35206-230	..SCREW,MACHINE	UHB,UHE,UHH,UHV,UHX	EA	16
237	87	PAFZZ	5310-00-081-8087	96906	MS21044N06	..NUT,SELF-LOCKING, HEXAGON	UHB,UHE,UHH,UHV,UHX	EA	16
237	88	PAFZZ	5935-00-973-2650	95354	SD615U	..CONNECTOR	UHB,UHE,UHH,UHV,UHX	EA	8
237	89	XDFZZ		95354	PKR6008	..KEYWAY,POLARIZING	UHB,UHE,UHH,UHV,UHX	EA	7
237	90	XDFFZ	5999-00-837-2656	72914	81-0331-1	..CIRCUIT CARD ASSY	UHB,UHE,UHH,UHV,UHX	EA	1
237	91	PAFZZ	5905-00-947-1972	81349	RN80B6980F	...RESISTOR,FIXED,FILM	UHB,UHE,UHH,UHV,UHX	EA	1
237	92	XDFZZ		81349	RWR89S2490FR	...RESISTOR	UHB,UHE,UHH,UHV,UHX	EA	1
237	93	PAFZZ	5961-00-919-3530	72914	55-0018-4	...SEMICONDUCTOR, DEVICE	UHB,UHE,UHH,UHV,UHX	EA	5
237	94	PAFZZ	5905-00-108-6922	81349	RCR20G151JS	...RESISTOR,FIXED,COMP	UHB,UHE,UHH,UHV,UHX	EA	2
237	95	PAFZZ	5905-00-141-1168	81349	RCR20G222JS	...RESISTOR,FIXED,COMP	UHB,UHE,UHH,UHV,UHX	EA	2
237	96	PAFZZ	5961-00-840-3561	81349	JAN2N696	...TRANSISTOR	UHB,UHE,UHH,UHV,UHX	EA	1
237	97	PAFZZ	5961-00-081-8365	81349	JAN2N1131	...TRANSISTOR	UHB,UHE,UHH,UHV,UHX	EA	1
237	98	PAFZZ	5940-00-901-2040	81349	SE12XC02	...TERMINAL,STUD	UHB,UHE,UHH,UHV,UHX	EA	27
237	99	PAFZZ	5945-00-917-3810	02289	2X2A126	...RELAY,ELECTRICAL	UHB,UHE,UHH,UHV,UHX	EA	4
237	100	XDFZZ		72914	81-0320-1	..HOUSING	UHB,UHE,UHH,UHV,UHX	EA	1
237	101	XDFZZ		72914	81-0316-1	..PLATE ASSY	UHB,UHE,UHH,UHV,UHX	EA	1
237	102	XDFZZ	1680-00-230-3890	72914	81-0324-1	..COVER,CONTROL	UHB,UHE,UHH,UHV,UHX	EA	1

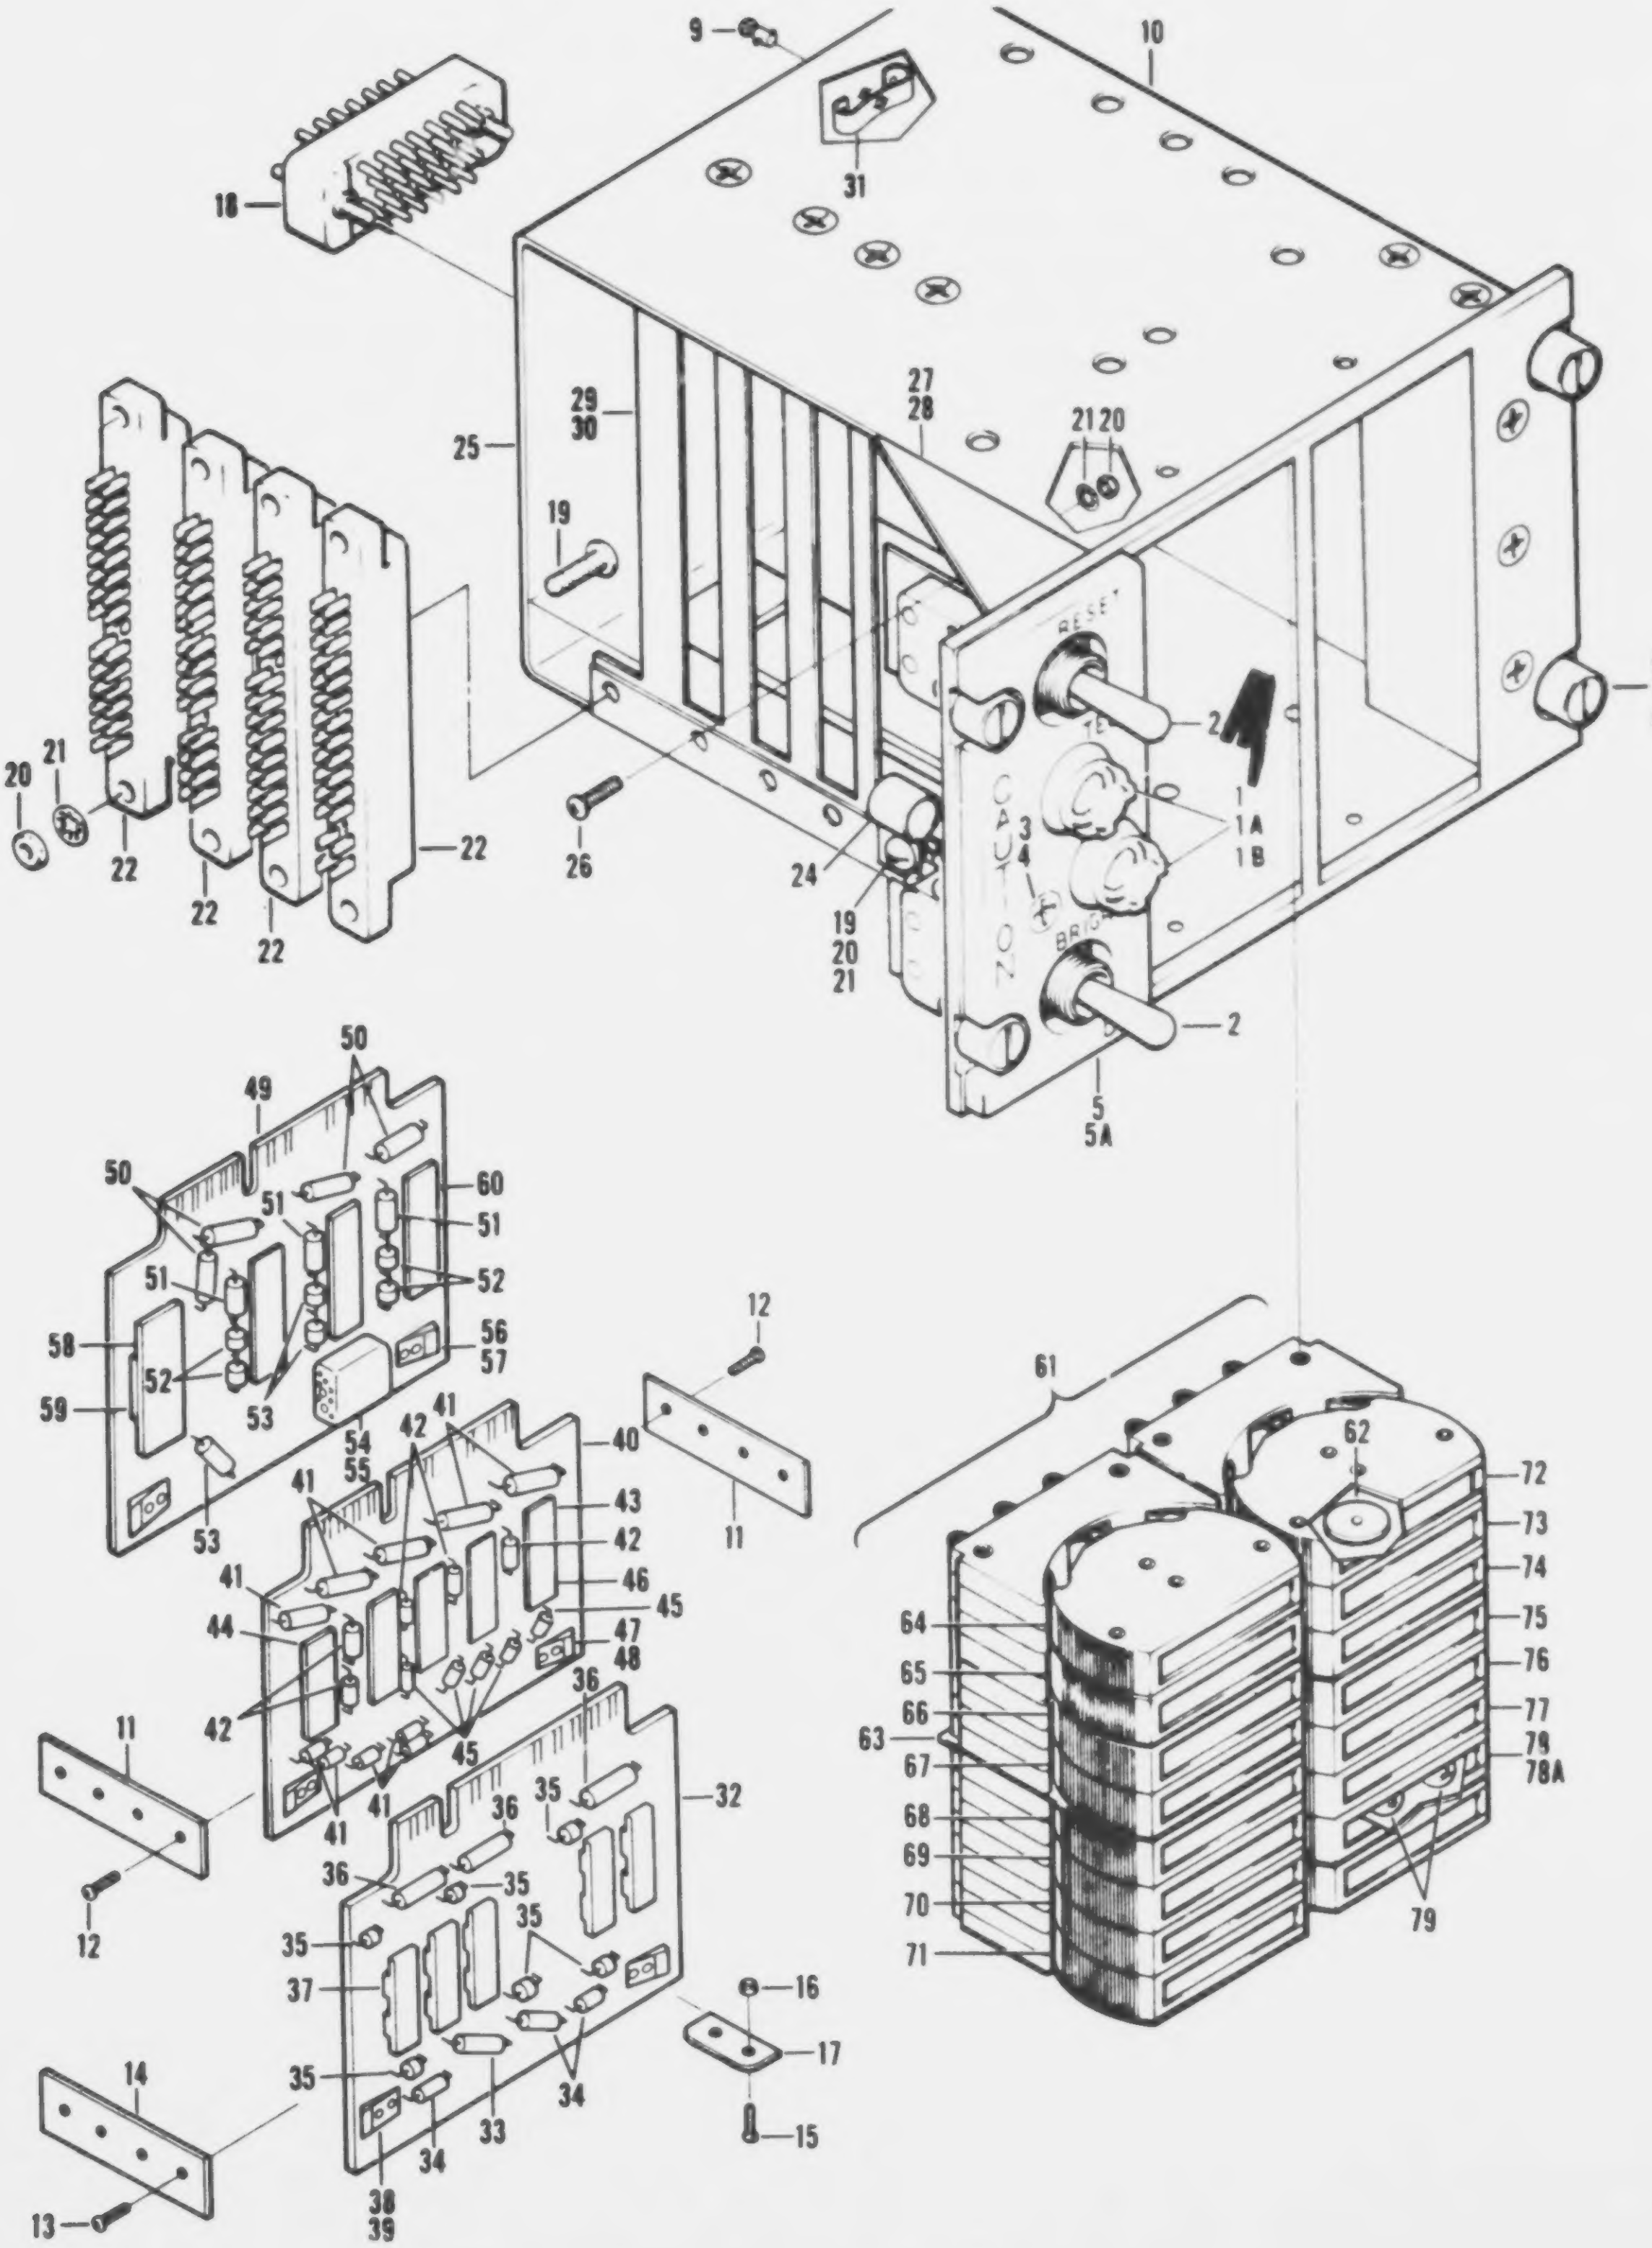
9
10
18
31
29
30
25
27
28
21 20
19
RESET
CAUTION
BRIGHT
6
7
8
2
1
1A
1B
3
4
20
21
22
22
22
22
22
26
24
19
20
21
2
5
5A
50
49
50
60
51
51
52
51
58
52
53
56
57
59
54
55
53
12
61
62
72
73
74
75
76
77
78
78A
79
41
42
40
43
42
46
45
41
44
47
48
42
45
41
41
11
11
12
36
35
36
32
36
35
35
35
37
34
33
35
34
38
39
14
13
16
17
15
64
65
66
63
67
68
69
70
71

Figure 238. Panel, Fault–Function Indicator

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.								
238		PAOFF	1680-00-285-7984	96182	249	PANEL,FAULT-FUNCTIO INDICATOR SEE FIG.226 FOR MHA	UHE,UHH,UHV,UHX	EA	1
238		XAOFF		96182	249-300	.PANEL ASSY MASTER CAUTION	UHE,UHH,UHV,UHX	EA	1
238	1	PAFZZ	6210-00-299-6656	96906	MS25010A11A327	..LIGHT,PANEL	UHE,UHH,UHV,UHX	EA	2
238	1A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	..FILTER,LIGHT,NVG	UHE,UHH,UHV,UHX	EA	2
238	1B	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	2
238	2	XDFZZ	5930-00-646-4360	91929	13AT1T	..SWITCH,TOGGLE	UHE,UHH,UHV,UHX	EA	2
238	3	PAFZZ	5305-00-910-6871	96906	MS24693BB29	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
238	4	PAFZZ	5310-00-775-5063	46384	LK632-2	..NUT,SELF-LOCKING, CLINCH	UHE,UHH,UHV,UHX	EA	1
238	5	XDFZZ		96182	681-407	..PANEL,PLASTIC	UHE,UHH,UHV,UHX	EA	1
238	5A	XDFZZ	1560-00-994-5842	96182	820-406	..PLATE,PANEL,CAUTION USBL EFF (UH-1H) 63-8739 THRU 64-13901	UHE,UHH,UHV,UHX	EA	1
238	6	XAFZZ		72794	PF3 1-2 38	..STUD,TURNLOCK	UHE,UHH,UHV,UHX	EA	4
238	7	XAFZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	4
238	8	XAFZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	4
238	9	PAFZZ	5325-00-281-4965	72794	GA4-250	..EYELET,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	3
238	10	XDFZZ	1560-00-994-5841	96182	792-408	..COVER ASSY,PANEL	UHE,UHH,UHV,UHX	EA	1
238	11	XDFZZ	5340-00-759-0791	96182	681-416	..RAIL,FLAT,SPACER	UHE,UHH,UHV,UHX	EA	2
238	12	PAFZZ	5305-00-901-5075	96906	MS24693BB1	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
238	13	PAFZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
238	14	XDFZZ	1560-00-994-5838	96182	681-412	..RAIL,SUPPORT,PANEL	UHE,UHH,UHV,UHX	EA	2
238	15	PAFZZ	5305-00-081-6668	96906	MS24693S2	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
238	16	PAFZZ	5310-00-818-6388	56878	32FP1-440	..NUT,SELF-LOCKING, CLINCH	UHE,UHH,UHV,UHX	EA	4
238	17	XDFZZ		96182	681-417	..STIFFENER	UHE,UHH,UHV,UHX	EA	1
238	18	PAFZZ	5935-00-729-8935	95238	26-20PS	..CONNECTOR,PLUG,ELEC	UHE,UHH,UHV,UHX	EA	1
238	19	PAFZZ	5305-00-207-7463	96906	MS35214-15	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	10
238	20	PAFZZ	5310-00-934-9739	96906	MS35649-242	..NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	19
238	21	PAFZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK	UHE,UHH,UHV,UHX	EA	14
238	22	PAFZZ	5935-00-927-0248	95238	K600-120-3XAGDF	..CONNECTOR,RECEPTACL	UHE,UHH,UHV,UHX	EA	2
238	24	XDFZZ		96182	681-418	..CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
238	25	XDFZZ	6340-00-998-3506	96182	820-405	..BRACKET MASTER CAUTION PANEL	UHE,UHH,UHV,UHX	EA	1
238	26	PAFZZ	5305-00-637-5884	96906	MS35214-12	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
238	27	XDFZZ	5340-00-994-5839	96182	681-413-1	..BRACKET MASTER CAUTION PANEL	UHE,UHH,UHV,UHX	EA	2
238	28	XDFZZ	5340-00-994-5840	96182	681-413-2	..BRACKET MASTER CAUTION PANEL	UHE,UHH,UHV,UHX	EA	1
238	29	PAFZZ	6150-00-730-8293	96182	444-16455	..BUS,CONDUCTOR	UHE,UHH,UHV,UHX	EA	1
238	30	XDFZZ	6340-00-064-0518	96182	681-415	..STIFFENER CONTROL PANEL	UHE,UHH,UHV,UHX	EA	1
238	31	PAFZZ	5325-00-285-3371	72794	S4-225	..LOCKSPRING,TURNLOCK	UHE,UHH,UHV,UHX	EA	3
238	32	XDFFZ		96182	681-311	..CIRCUIT CARD ASSY	UHE,UHH,UHV,UHX	EA	1
238	33	PAFFF	5905-00-553-2071	91637	RS5X000800500F	...RESISTOR,FIXED,WIRE WOUND	UHE,UHH,UHV,UHX	EA	1
238	34	PAFZZ	5905-00-328-1502	81349	RWR89S34R8FR	...RESISTOR,FIXED,WIRE	UHE,UHH,UHV,UHX	EA	4
238	35	PAFZZ	5961-00-867-5510	96182	249-426	...SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	4
238	36	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	4
238	37	PAFZZ	5950-00-758-1966	96182	681-401-1	...COIL,RADIO FREQUENC	UHE,UHH,UHV,UHX	EA	5
238	38	PAFZZ	5310-00-850-8674	72962	F22A27M22-40	...NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	2
238	39	PBFZZ	5325-00-684-9845	36536	LI0240-2-5	...EYELET,METALLIC	UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
238	40	XDFZZ	6340-00-061-1558	96182	249-310	..CIRCUIT CARD ASSY	UHE,UHH,UHV,UHX	EA	2
238	41	PAFZZ	5961-00-867-5510	96182	249-426	...SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	10
238	42	PAFZZ	5961-00-087-6047	81349	JAN1N645	...SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	5
238	43	PAFZZ	5950-00-758-1966	96182	681-401-1	...COIL,RADIO FREQUENC	UHE,UHH,UHV,UHX	EA	5
238	44	PAFZZ	5310-00-720-8078	80205	NAS620-3	...WASHER,FLAT	UHE,UHH,UHV,UHX	EA	12
238	45	PAFZZ	5905-00-328-1502	81349	RWR89S34R8FR	...RESISTOR,FIXED,WIRE	UHE,UHH,UHV,UHX	EA	1
238	46	PAFZZ	5930-00-938-6391	96182	249-421	...SWITCH,MAGNETIC	UHE,UHH,UHV,UHX	EA	5
238	47	PAFZZ	5310-00-850-8674	72962	F22A27M22-40	...NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	2
238	48	PBFZZ	5325-00-584-9845	36536	LIQ240-2-5	...EYELET,METALLIC	UHE,UHH,UHV,UHX	EA	4
238	49	XDFZZ		96182	792-312	..CIRCUIT CARD ASSY	UHE,UHH,UHV,UHX	EA	1
238	50	PAFZZ	5961-00-682-8555	01281	PS010	...SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	4
238	51	PAFZZ	5905-00-328-1502	81349	RWR89S34R8FR	...RESISTOR,FIXED,WIRE	UHE,UHH,UHV,UHX	EA	1
238	52	PAFZZ	5961-00-924-6981	81349	JAN1N4245	...SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	6
238	53	XDFZZ		81349	RW79U24R3F	...RESISTOR,FIXED WIRE	UHE,UHH,UHV,UHX	EA	1
238	54	PAFZZ	5945-00-834-6969	82050	BR8-600C2-26V	...RELAY,ELECTROMAGNET	UHE,UHH,UHV,UHX	EA	1
238	55	PAFZZ	5310-00-088-0551	96906	MS21044N04	...NUT,SELF-LOCKING, HEXAGON	UHE,UHH,UHV,UHX	EA	4
238	56	PAFZZ	5310-00-850-8674	72962	F22A27M22-40	...NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	2
238	57	PBFZZ	5325-00-584-9845	36536	LIQ240-2-5	...EYELET,METALLIC	UHE,UHH,UHV,UHX	EA	4
238	58	PAFZZ	5999-00-069-7209	50625	E5600-13	...CONTACT,ELECTRICAL	UHE,UHH,UHV,UHX	EA	4
238	59	PAFZZ	5950-00-076-7685	96182	681-404	...COIL,ELECTRICAL	UHE,UHH,UHV,UHX	EA	1
238	60	PAFZZ	5950-00-758-1966	96182	681-401-1	...COIL,RADIO FREQUENC	UHE,UHH,UHV,UHX	EA	3
238	61	PA000	6340-00-867-1177	96182	249-301	.MASTER WARNING SYSTEM	UHE,UHH,UHV,UHX	EA	1
238	62	XDOZZ		96182	474-17118-006	...SHIM	UHE,UHH,UHV,UHX	EA	12
238	63	PAOZZ	5340-00-895-6385	96182	474-15993-000	...SPACER,ROTO-TELLITE	UHE,UHH,UHV,UHX	EA	2
238	64	PAOZZ	6210-00-895-4430	96182	249-422-1	...LENS,LIGHT ENGINE OIL PRESSURE	UHE,UHH,UHV,UHX	EA	1
238	65	PAOZZ	6210-00-936-5984	96182	249-422-2	...LENS,LIGHT ENGINE ICING	UHE,UHH,UHV,UHX	EA	1
238	66	PAOZZ	6210-00-895-4426	96182	249-422-3	...LENS,LIGHT ENGINE ICE DETECTOR	UHE,UHH,UHV,UHX	EA	1
238	67	PAOZZ	6210-00-895-4423	96182	249-422-4	...LENS,LIGHT LEFT FUEL BOOST	UHE,UHH,UHV,UHX	EA	1
238	68	PAOZZ	6210-00-895-4418	96182	249-422-5	...LENS,LIGHT RIGHT FUEL BOOST	UHE,UHH,UHV,UHX	EA	1
238	69	PAOZZ	6210-00-895-4413	96182	249-422-6	...LENS,LIGHT ENGINE FUEL PUMP	UHE,UHH,UHV,UHX	EA	1
238	70	PAOZZ	6210-00-850-4399	96182	249-422-7	...LENS,LIGHT 20 MINUTE FUEL	UHE,UHH,UHV,UHX	EA	1
238	71	PAOZZ	6210-00-850-4398	96182	249-422-8	...LENS,LIGHT FUEL FILTER	UHE,UHH,UHV,UHX	EA	1
238	72	PAOZZ	6210-00-850-4369	96182	249-422-9	...LENS,LIGHT AUXILIARY FUEL LOW	UHE,UHH,UHV,UHX	EA	1
238	73	PAOZZ	6210-00-850-4388	96182	249-422-10	...LENS,LIGHT XMSM OIL PRESSURE	UHE,UHH,UHV,UHX	EA	1
238	74	XDOZZ		96182	249-422-11	...LENS,LIGHT XMSM OIL HOT	UHE,UHH,UHV,UHX	EA	1
238	75	PAOZZ	6210-00-849-4085	96182	249-422-12	...LENS,LIGHT HYDRAULIC PRESSURE	UHE,UHH,UHV,UHX	EA	1
238	76	PAOZZ	6210-00-849-4025	96182	249-422-13	...LENS,LIGHT INSTRUMENT INVERTER	UHE,UHH,UHV,UHX	EA	1
238	77	PAOZZ	6210-00-849-4029	96182	249-422-14	...LENS,LIGHT DC GENERATOR	UHE,UHH,UHV,UHX	EA	1
238	78	PAOZZ	6210-00-849-4088	96182	249-422-15	...LENS,LIGHT EXTERNAL POWER	UHE,UHH,UHV,UHX	EA	1
238	79	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT	UHE,UHH,UHV,UHX	EA	32

Fig. 239 NOT USED

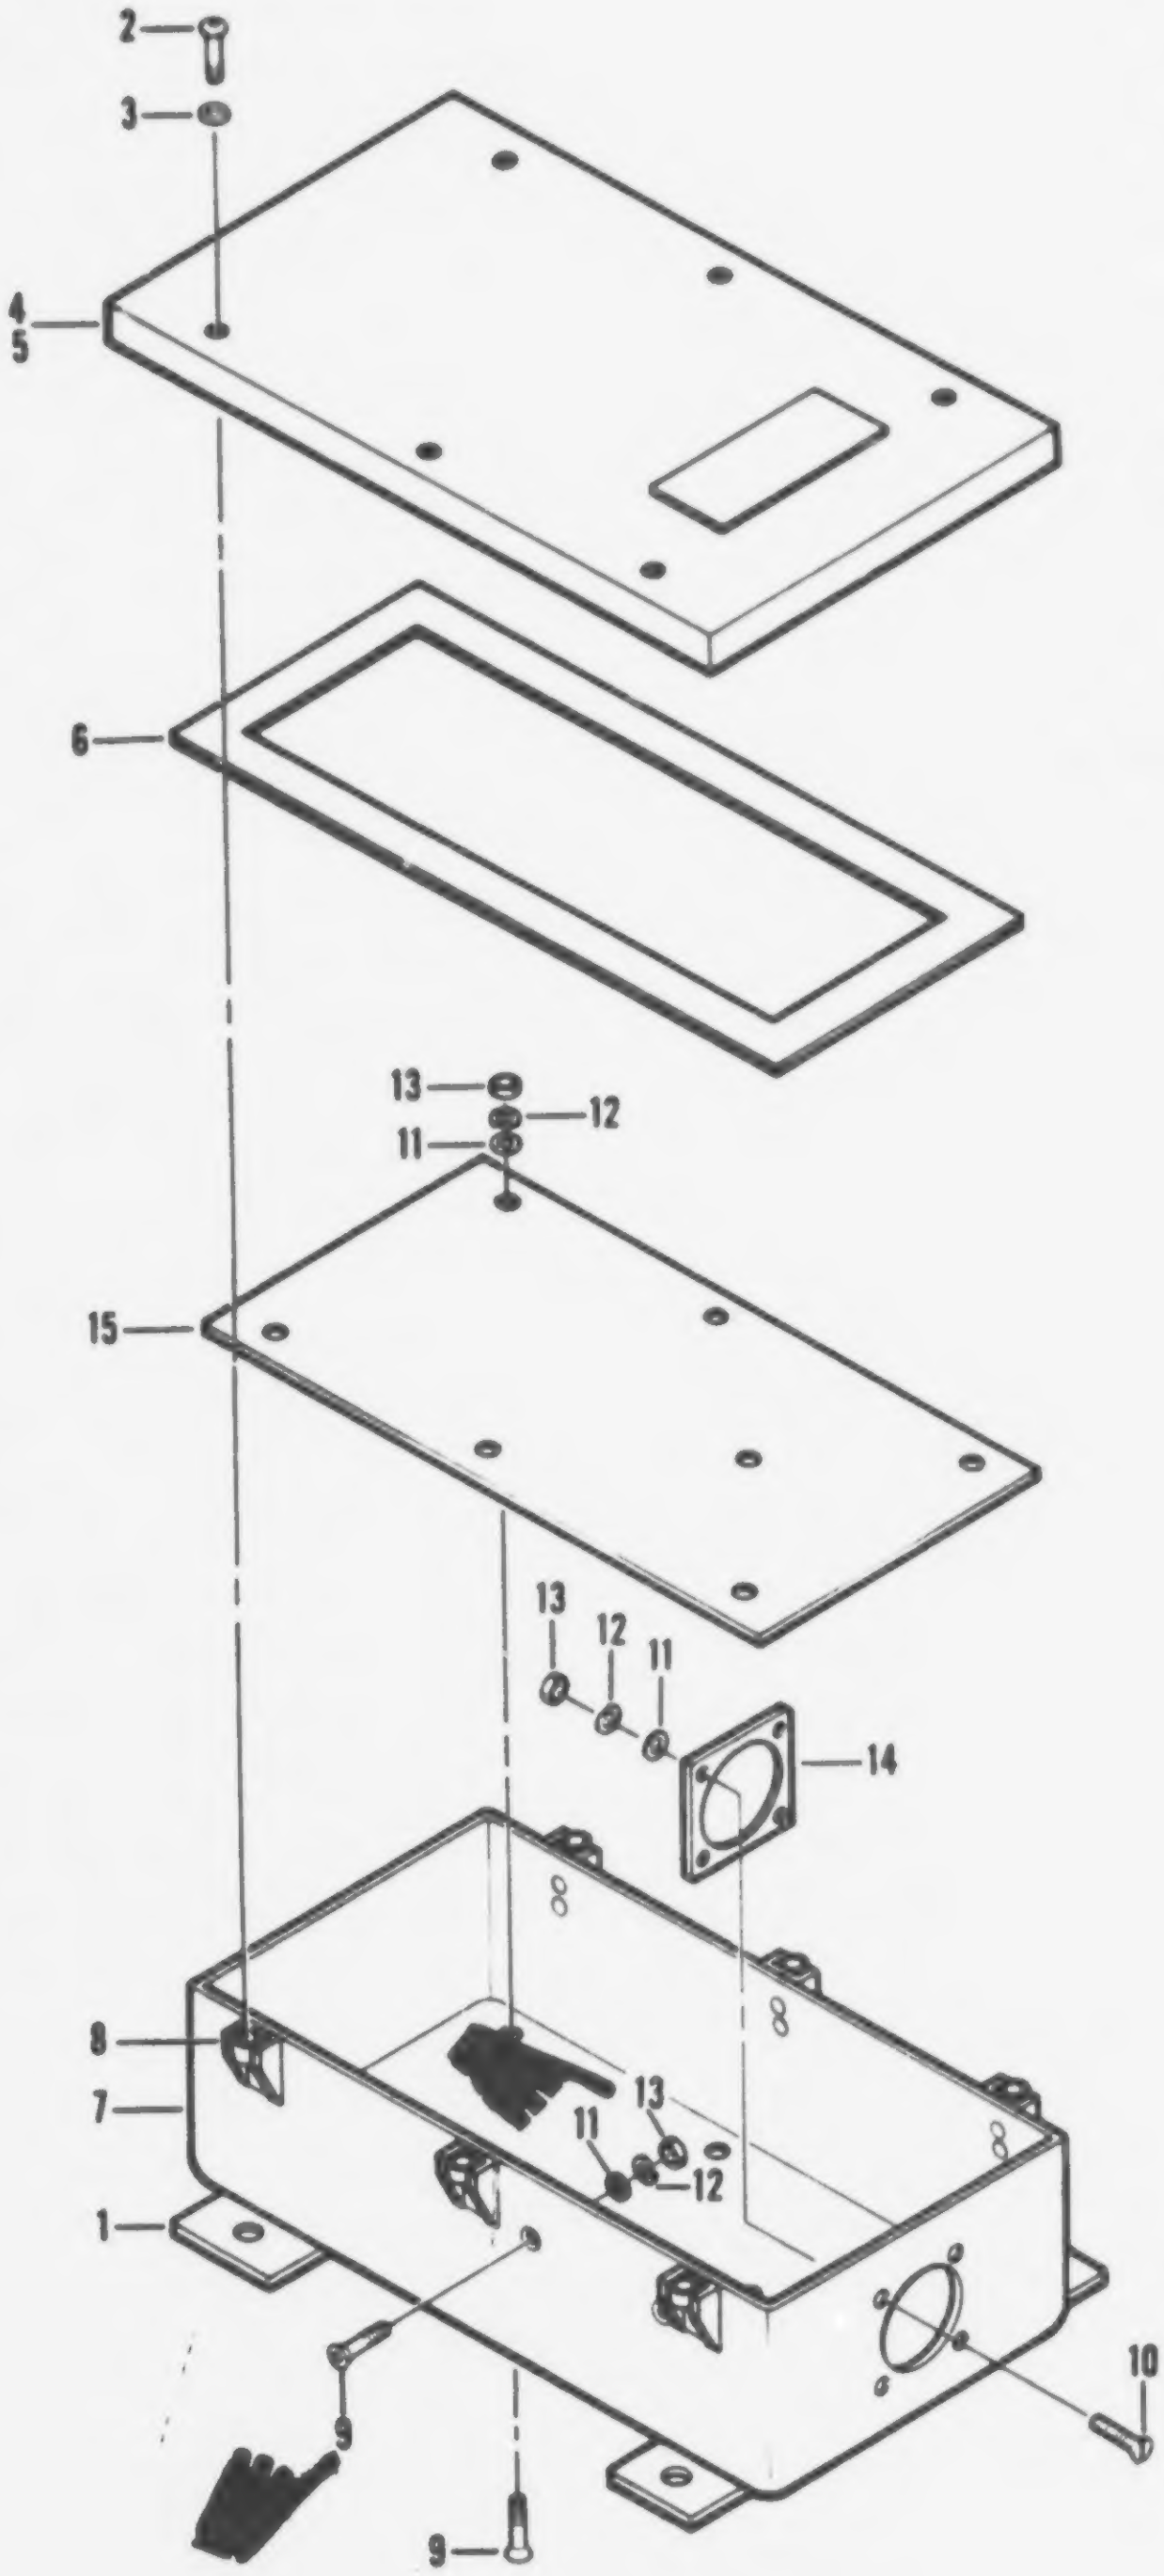
2
3
4
5
6
13
12
11
15
13
12
11
14
8
7
13
11
12
1
9
10
9

Figure 240. Box, RPM Warning Control

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
240		PADDD	6340-01-153-8073	97499	205-074-033-103	BOX,WARNING CONTROL SEE FIGS 225,226,241 AND 243 FOR NHA .... UHH,UHM,UHV,UHE,UHX	EA	REF
240	1	XDDZZ		97499	205-074-034-101	.CHASSIS ASSEMBLY........ UHH,UHM,UHV,UHE,UHX	EA	1
240	2	PAOZZ		96906	MS35206-227	..SCREW........ UHE,UHH,UHM,UHV,UHX	EA	6
240	3	PADZZ	5310-00-622-9531	80205	NAS620-6	..WASHER,FLAT........ UHH,UHM,UHV,UHE,UHX	EA	6
240	4	XDDDD		97499	205-074-034-105	..COVER ASSEMBLY........ UHH,UHM,UHV,UHE,UHX	EA	1
240	5	XDDZZ		97499	205-074-034-113	...COVER........ UHH,UHM,UHV,UHE,UHX	EA	1
240	6	PADZZ	5330-01-159-9702	97499	205-074-034-115	...GASKET........ UHH,UHM,UHV,UHE,UHX	EA	1
240	7	XDDDD		97499	205-074-034-103	..BOX ASSEMBLY........ UHH,UHM,UHV,UHE,UHX	EA	1
240	8	PBDZZ	5310-00-820-7154	72962	F22LHA27M22-62	...NUT,SELF-LOCKING,PL........ UHH,UHM,UHE,UHV,UHX	EA	5
240	9	PADZZ	5305-00-808-7834	96906	MS24693S6	.SCREW,MACHINE........ UHH,UHM,UHV,UHE,UHX	EA	9
240	10	PADZZ	5305-00-957-2383	96906	MS24693S3	.SCREW,MACHINE........ UHH,UHM,UHV,UHE,UHX	EA	4
240	11	PADZZ	5310-00-616-3648	80205	NAS620-4L	.WASHER,FLAT........ UHH,UHM,UHV,UHE,UHX	EA	13
240	12	PADZZ	5310-00-543-2410	96906	MS35338-40	.WASHER,LOCK........ UHH,UHM,UHV,UHE,UHX	EA	13
240	13	PADZZ	5310-00-810-7786	80205	NAS671-4	.NUT,PLAIN,HEXAGO........ UHH,UHM,UHV,UHE,UHX	EA	13
240	14	PADZZ	5330-00-099-7819	96906	MS90484-14-1	.GASKET........ UHH,UHM,UHV,UHE,UHX	EA	1
240	15	PADDD	5999-01-184-6250	97499	205-074-030-103	.CIRCUIT CARD ASSEMB SEE FIG.240A FOR DETAIL BREAKDOWN .... UHH,UHM,UHV,UHE,UHX	EA	1

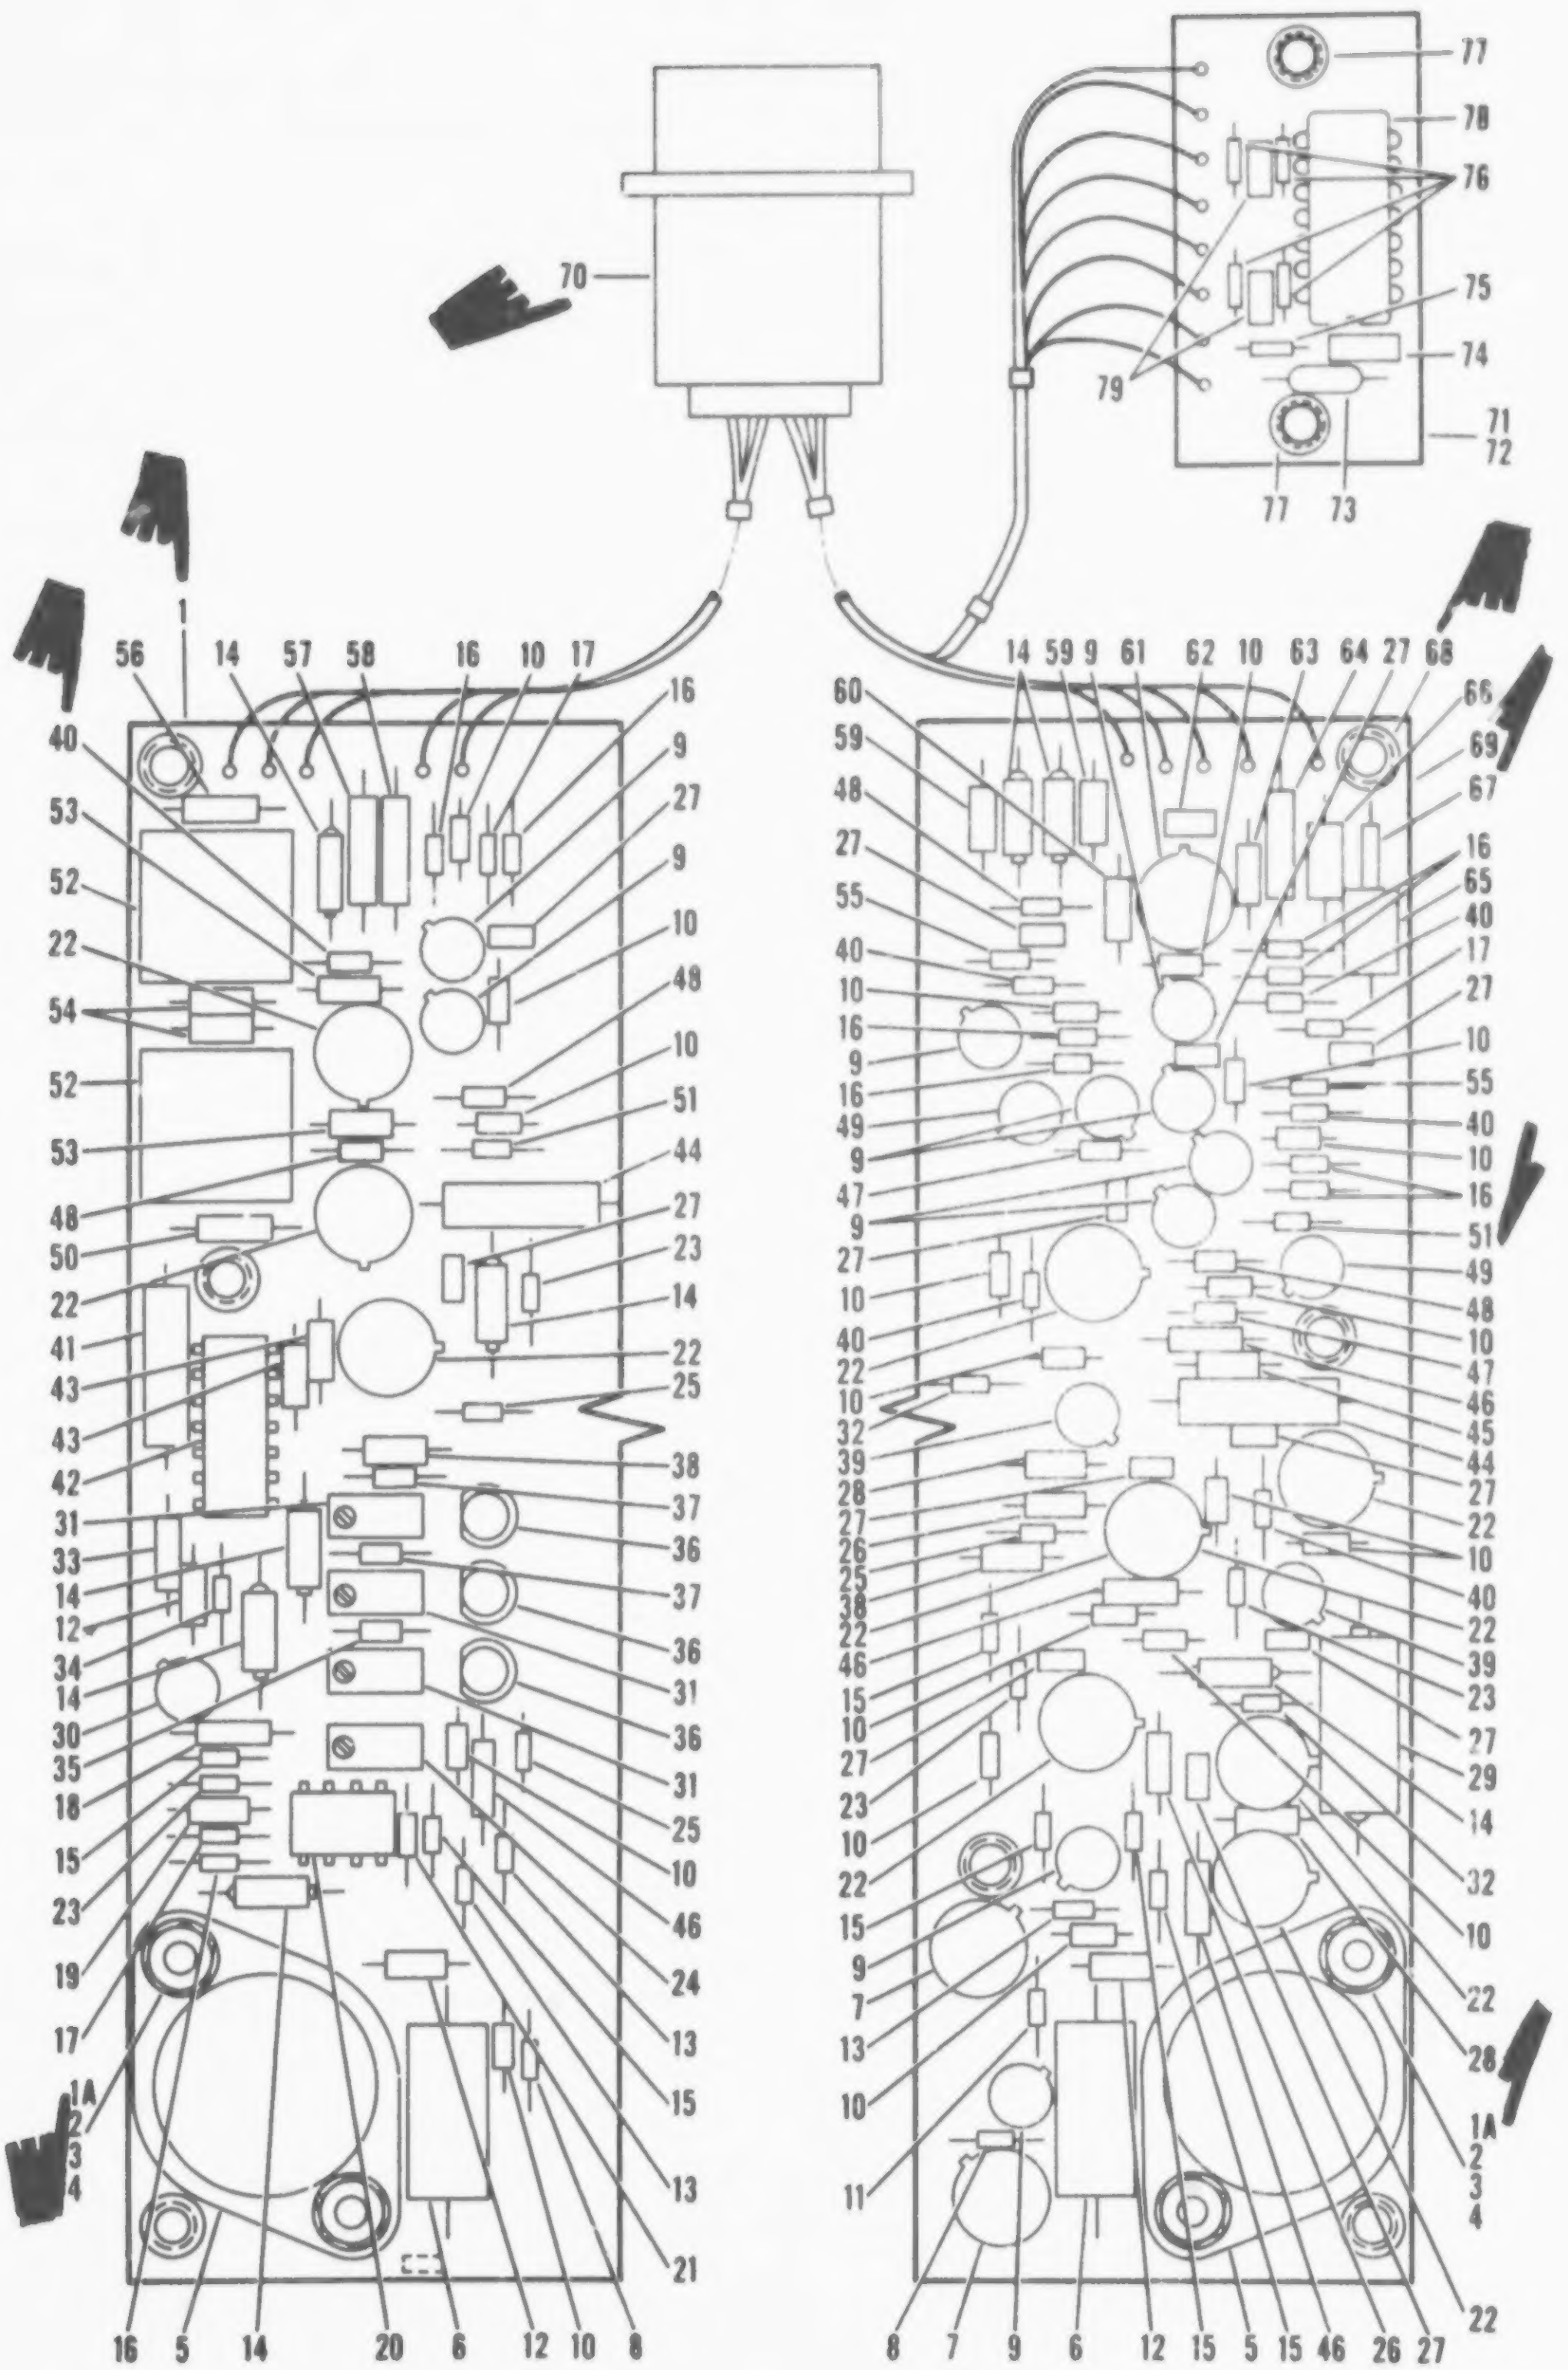
70
77
78
76
75
74
79
71
72
77
73
56
1
14
57
58
16
10
17
40
53
52
22
54
52
53
48
50
22
41
43
43
42
31
33
14
12
34
14
30
35
18
15
23
19
17
1A
2
3
4
16
9
27
9
10
48
10
51
44
27
23
14
22
25
38
37
36
37
36
31
36
31
25
10
46
24
13
15
13
21
16
5
14
20
6
12
10
8
14
59
9
61
62
10
63
64
27
68
60
59
48
27
55
40
10
16
9
16
49
9
47
9
27
10
40
22
10
32
39
28
27
26
25
38
22
46
15
10
27
23
10
22
15
9
7
13
10
11
66
69
67
16
65
40
17
27
10
55
40
10
16
51
49
48
10
47
46
45
44
27
22
10
40
22
39
23
27
29
14
32
10
22
28
1A
2
3
4
22
8
7
9
6
12
15
5
15
46
26
27

Figure 240A. Circuit, Card Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
240A		PADDD		97499	205-074-030-103	CIRCUIT CARD ASSEMB SEE FIG 240A .... UHE,UHH,UHM,UHV,UHX	EA	REF
240A	1	PADDD	5999-01-184-1853	97499	205-074-030-105	.PRINTED WIRING BOAR....... UHE,UHH,UHM,UHV,UHX	EA	1
240A	1A	PAOZZ		96906	MS35206-215	..SCREW,MACHINE....... UHE,UHH,UHM,UHV,UHX	EA	4
240A	2	PAOZZ		80205	NAS620-4L	..WASHER,FLAT....... UHE,UHH,UHM,UHV,UHX	EA	4
240A	3	PADZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK....... UHH,UHM,UHV,UHE,UHX	EA	4
240A	4	PADZZ	5310-00-810-7785	80205	NAS671-4	..NUT,PLAIN,HEXAGO....... UHH,UHM,UHV,UHE,UHX	EA	4
240A	5	PADZZ	5961-01-118-5823	81349	2N6226	..TRANSISTOR....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	6	PADZZ	5905-00-138-4927	81349	RCR42G102JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	7	PAOZZ		97499	130-017-5682	..TRANSISTOR....... UHE,UHH,UHM,UHV,UHX	EA	2
240A	8	PADZZ	5905-00-403-8837	81349	RCR05G223JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	9	PADZZ	5961-00-951-8757	81349	JAN2N2222A	..TRANSISTOR....... UHH,UHM,UHV,UHE,UHX	EA	10
240A	10	PADZZ		81349	JAN1N4148	..SEMICONDUCTOR DEVIC....... UHH,UHM,UHV,UHE,UHX	EA	18
240A	11	PADZZ		81349	RCR05G153JM	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	12	PADZZ	5905-00-106-3666	81349	RCR07G103JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	3
240A	13	PADZZ	5905-00-617-5091	81349	RCR05G472JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	3
240A	14	PADZZ	5910-00-495-0042	81349	M39003/01-3076	..CAPACITOR,FIXED,ELE....... UHH,UHM,UHV,UHE,UHX	EA	8
240A	15	PADZZ	5905-01-035-5066	81349	RCR05G103JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	6
240A	16	PADZZ	5905-00-413-1200	81349	RCR05G203JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	9
240A	17	PADZZ	5905-00-617-5093	81349	RCR05G473JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	3
240A	18	PADZZ	5961-00-847-5246	81349	JAN1N746A	..SEMICONDUCTOR DEVIC....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	19	PADZZ	5905-00-229-7698	81349	RNC55H1623FS	..RESISTOR,FIXED,FILM....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	20	PADZZ	5962-01-069-3045	81349	M38510/10901BPB	..MICROCIRCUIT,LINEAR....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	21	PADZZ	5905-00-421-2934	81349	RNC50H8251FS	..RESISTOR,FIXED,FILM....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	22	PADZZ	5962-00-167-6330	81349	M38510-10101BGC	..MICROCIRCUIT,LINEAR....... UHH,UHM,UHV,UHE,UHX	EA	9
240A	23	PADZZ	5905-00-195-4074	81349	RCR05G105JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	4
240A	24	PADZZ	5905-01-057-2648	81349	RJR24CW104P	..RESISTOR,VARIABLE,N....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	25	PADZZ	5905-00-401-7426	81349	RCRC05G272JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	3
240A	26	PAOZZ		81349	RNC55H3013FM	..RESISTOR,FIXED,FILM....... UHE,UHH,UHM,UHV,UHX	EA	2
240A	27	PADZZ		81349	M39014-01-1237	..CAPACITOR,FIXED,CER....... UHH,UHM,UHV,UHE,UHX	EA	11
240A	28	PADZZ	5905-00-112-1233	81349	RNC55H3011FS	..RESISTOR,FIXED,FILM....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	29	PADZZ	5910-00-144-4383	81349	M39003/01-3026	..CAPACITOR,FIXED,ELE....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	30	PADZZ	5961-00-925-3777	81349	JAN2N2907A	..TRANSISTOR....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	31	PADZZ	5905-01-054-3000	81349	RJ424CW502P	..RESISTOR,VARIABLE,N....... UHH,UHM,UHV,UHE,UHX	EA	3
240A	32	PADZZ	5905-00-458-9500	81349	RCR05G102JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	33	PADZZ	5961-00-833-3043	81349	JAN1N757A	..SEMICONDUCTOR DEVIC....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	34	PADZZ		81349	RCR05G754JM	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	35	PADZZ	5905-00-142-0955	81349	RNC50H3321FS	..RESISTOR,FIXED,FILM....... UHH,UHM,UHV,UHE,UHX	EA	1
240A	36	PADZZ	5961-01-119-8508	71744	CM4-73A	..LIGHT EMITTING DIOD....... UHH,UHM,UHV,UHE,UHX	EA	3
240A	37	PADZZ		81349	RNC50H2001FM	..RESISTOR,FIXED,FILM....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	38	PADZZ	5905-00-250-3328	81349	RNC55H2431FS	..RESISTOR,FIXED,FILM....... UHH,UHM,UHV,UHE,UHX	EA	2
240A	39	PAOZZ	5961-00-243-9159	81349	JAN2N4858	..TRANSISTOR....... UHE,UHH,UHM,UHV,UHX	EA	2
240A	40	PADZZ	5905-00-458-9346	81349	RCR05G104JS	..RESISTOR,FIXED,COMP....... UHH,UHM,UHV,UHE,UHX	EA	6

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
240A	41	PADZZ	5910-01-177-0533	12406	CSL683J-1	..CAPACITOR,FIXED,MET	UHH,UHM,UHV,UHE,UHX	EA	1
240A	42	PADZZ	5962-01-039-7303	26916	058-001537	..MICROCIRCUIT,LINEAR	UHH,UHM,UHV,UHE,UHX	EA	1
240A	43	PADZZ	5905-00-121-6327	81349	RNC55H4321FS	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	2
240A	44	PADZZ	5910-01-177-0532	12406	CSL104J-1	..CAPACITOR,FIXED,MET	UHH,UHM,UHV,UHE,UHX	EA	2
240A	45	PADZZ		81349	RCR07G392JM	..RESISTOR,FIXED,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
240A	46	PADZZ	5961-00-847-5247	81349	JAN1N748A	..SEMICONDUCTOR DEVIC	UHH,UHM,UHV,UHE,UHX	EA	4
240A	47	PADZZ		81349	RNC50H2102FM	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	2
240A	48	PADZZ		81349	RNC50H5622FM	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	4
240A	49	PADZZ	5961-00-954-4869	80131	2N3799	..TRANSISTOR	UHH,UHM,UHV,UHE,UHX	EA	2
240A	50	PADZZ		81349	JAN1N4969	..SEMICONDUCTOR DEVIC	UHH,UHM,UHV,UHE,UHX	EA	1
240A	51	PADZZ	5905-00-421-6186	81349	RNC50H5621FS	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	2
240A	52	PADZZ	5950-01-176-5079	70674	324-5M	..TRANSFORMER,AUDIO F	UHH,UHM,UHV,UHE,UHX	EA	2
240A	53	PADZZ	5905-00-480-5195	81349	RNC55H7151FS	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	2
240A	54	PADZZ	5905-00-126-6678	81349	RCR07G3R9JS	..RESISTOR,FIXED,COMP	UHH,UHM,UHV,UHE,UHX	EA	2
240A	55	PADZZ	5905-00-617-5096	81349	RCR05G682JS	..RESISTOR,FIXED,COMP	UHH,UHM,UHV,UHE,UHX	EA	2
240A	56	PADZZ	5961-00-427-0429	81345	JAN1N4961	..SEMICONDUCTOR DEVIC	UHH,UHM,UHV,UHE,UHX	EA	1
240A	57	PADZZ	5905-00-401-7456	81349	RWR80S2000FR	..RESISTOR,FIXED,WIRE	UHH,UHM,UHV,UHE,UHX	EA	1
240A	58	PADZZ	5905-00-422-0386	81349	RWR80S1000FR	..RESISTOR,FIXED,WIRE	UHH,UHM,UHE,UHV,UHX	EA	1
240A	59	PADZZ	5905-00-141-1183	81349	RCR07G101JS	..RESISTOR,FIXED,COMP	UHH,UHM,UHV,UHE,UHX	EA	2
240A	60	PADZZ	5905-00-223-2741	81349	RNC55H1002FS	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	1
240A	61	PADZZ	5962-00-197-3361	81349	M38510/10201B1C	..MICROCIRCUIT,LINEAR	UHH,UHM,UHV,UHE,UHX	EA	1
240A	62	PADZZ	5910-00-113-5445	81349	M39014-01-1219	..CAPACITOR,FIXED,CER	UHH,UHM,UHV,UHE,UHX	EA	1
240A	63	PADZZ	5905-00-432-0367	81349	RNC55H9531FS	..RESISTOR,FIXED,FILM	UHH,UHM,UHV,UHE,UHX	EA	1
240A	64	PADZZ		81349	RWR80S1210FM	..RESISTOR,FIXED,WIRE	UHE,UHH,UHM,UHV,UHX	EA	1
240A	65	PADZZ	5961-00-139-9812	81349	JAN1N5557	..SEMICONDUCTOR DEVIC	UHH,UHM,UHV,UHE,UHX	EA	1
240A	66	PADZZ		81349	JAN1N4964	..SEMICONDUCTOR DEVIC	UHH,UHM,UHV,UHE,UHX	EA	1
240A	67	MOOZZ		97499	130-006-7C2	..TUBING,INSUL	UHH,UHM,UHV,UHE,UHX	FT	V
240A	68	XDOZZ		04729	SU301-1D-6	..STANDOFF	UHH,UHM,UHV,UHE,UHX	EA	7
240A	69	XADZZ		97499	205-074-031-101	..PRINTED WIRING BOAR	UHH,UHM,UHV,UHE,UHX	EA	1
240A	70	PADZZ	5935-00-189-2530	96906	MS3470L14-19P	.CONNECTOR,RECEPTACL U/O PN 205-074-030-103	UHH,UHM,UHV,UHE,UHX	EA	1
240A	71	PAOOO	5999-01-184-1854	97499	205-074-030-107	.PRINTED WIRING BOAR	UHE,UHH,UHM,UHV,UHX	EA	1
240A	72	PADZZ	5999-01-187-8724	97499	205-074-037-101	..PRINTED WIRING BOAR U/O PN 205-074-030-107	UHE,UHH,UHM,UHV,UHX	EA	1
240A	73	PADZZ	5961-00-894-0684	81349	JAN1N756A	..SEMICONDUCTOR DEVIC U/O PN 205-074-030-107 FOR VR11	UHE,UHH,UHM,UHV,UHX	EA	1
240A	74	PADZZ	5910-00-010-8721	81349	M39014/02-1419	..CAPACITOR,FIXED,CER U/O PN 205-074-030-107 FOR C25	UHE,UHH,UHM,UHV,UHX	EA	1
240A	75	PADZZ	5905-00-403-8837	81349	RCR05G223JS	..RESISTOR,FIXED,COMP U/O PN 205-074-030-107 FOR R88	UHE,UHH,UHM,UHV,UHX	EA	1
240A	76	PADZZ	5905-00-470-1319	81349	RCR05G204JS	..RESISTOR,FIXED,COMP U/O PN 205-074-030-107 FOR R89,R90, R91,R92	UHE,UHH,UHM,UHV,UHX	EA	4
240A	77	XDOZZ		04729	SU301-1D-6	..STANDOFF U/O PN 205-074-030-107	UHE,UHH,UHM,UHV,UHX	EA	2
240A	78	PADZZ	5930-01-226-0619	27104	CD40106BF/3	..SWITCH,TRIGGER U/O PN 205-074-030-107 FOR Z13	UHE,UHH,UHM,UHV,UHX	EA	1
240A	79	PADZZ	5910-00-113-5445	81349	M39014-01-1219	..CAPACITOR,FIXED,CER	UHH,UHM,UHV,UHE,UHX	EA	2

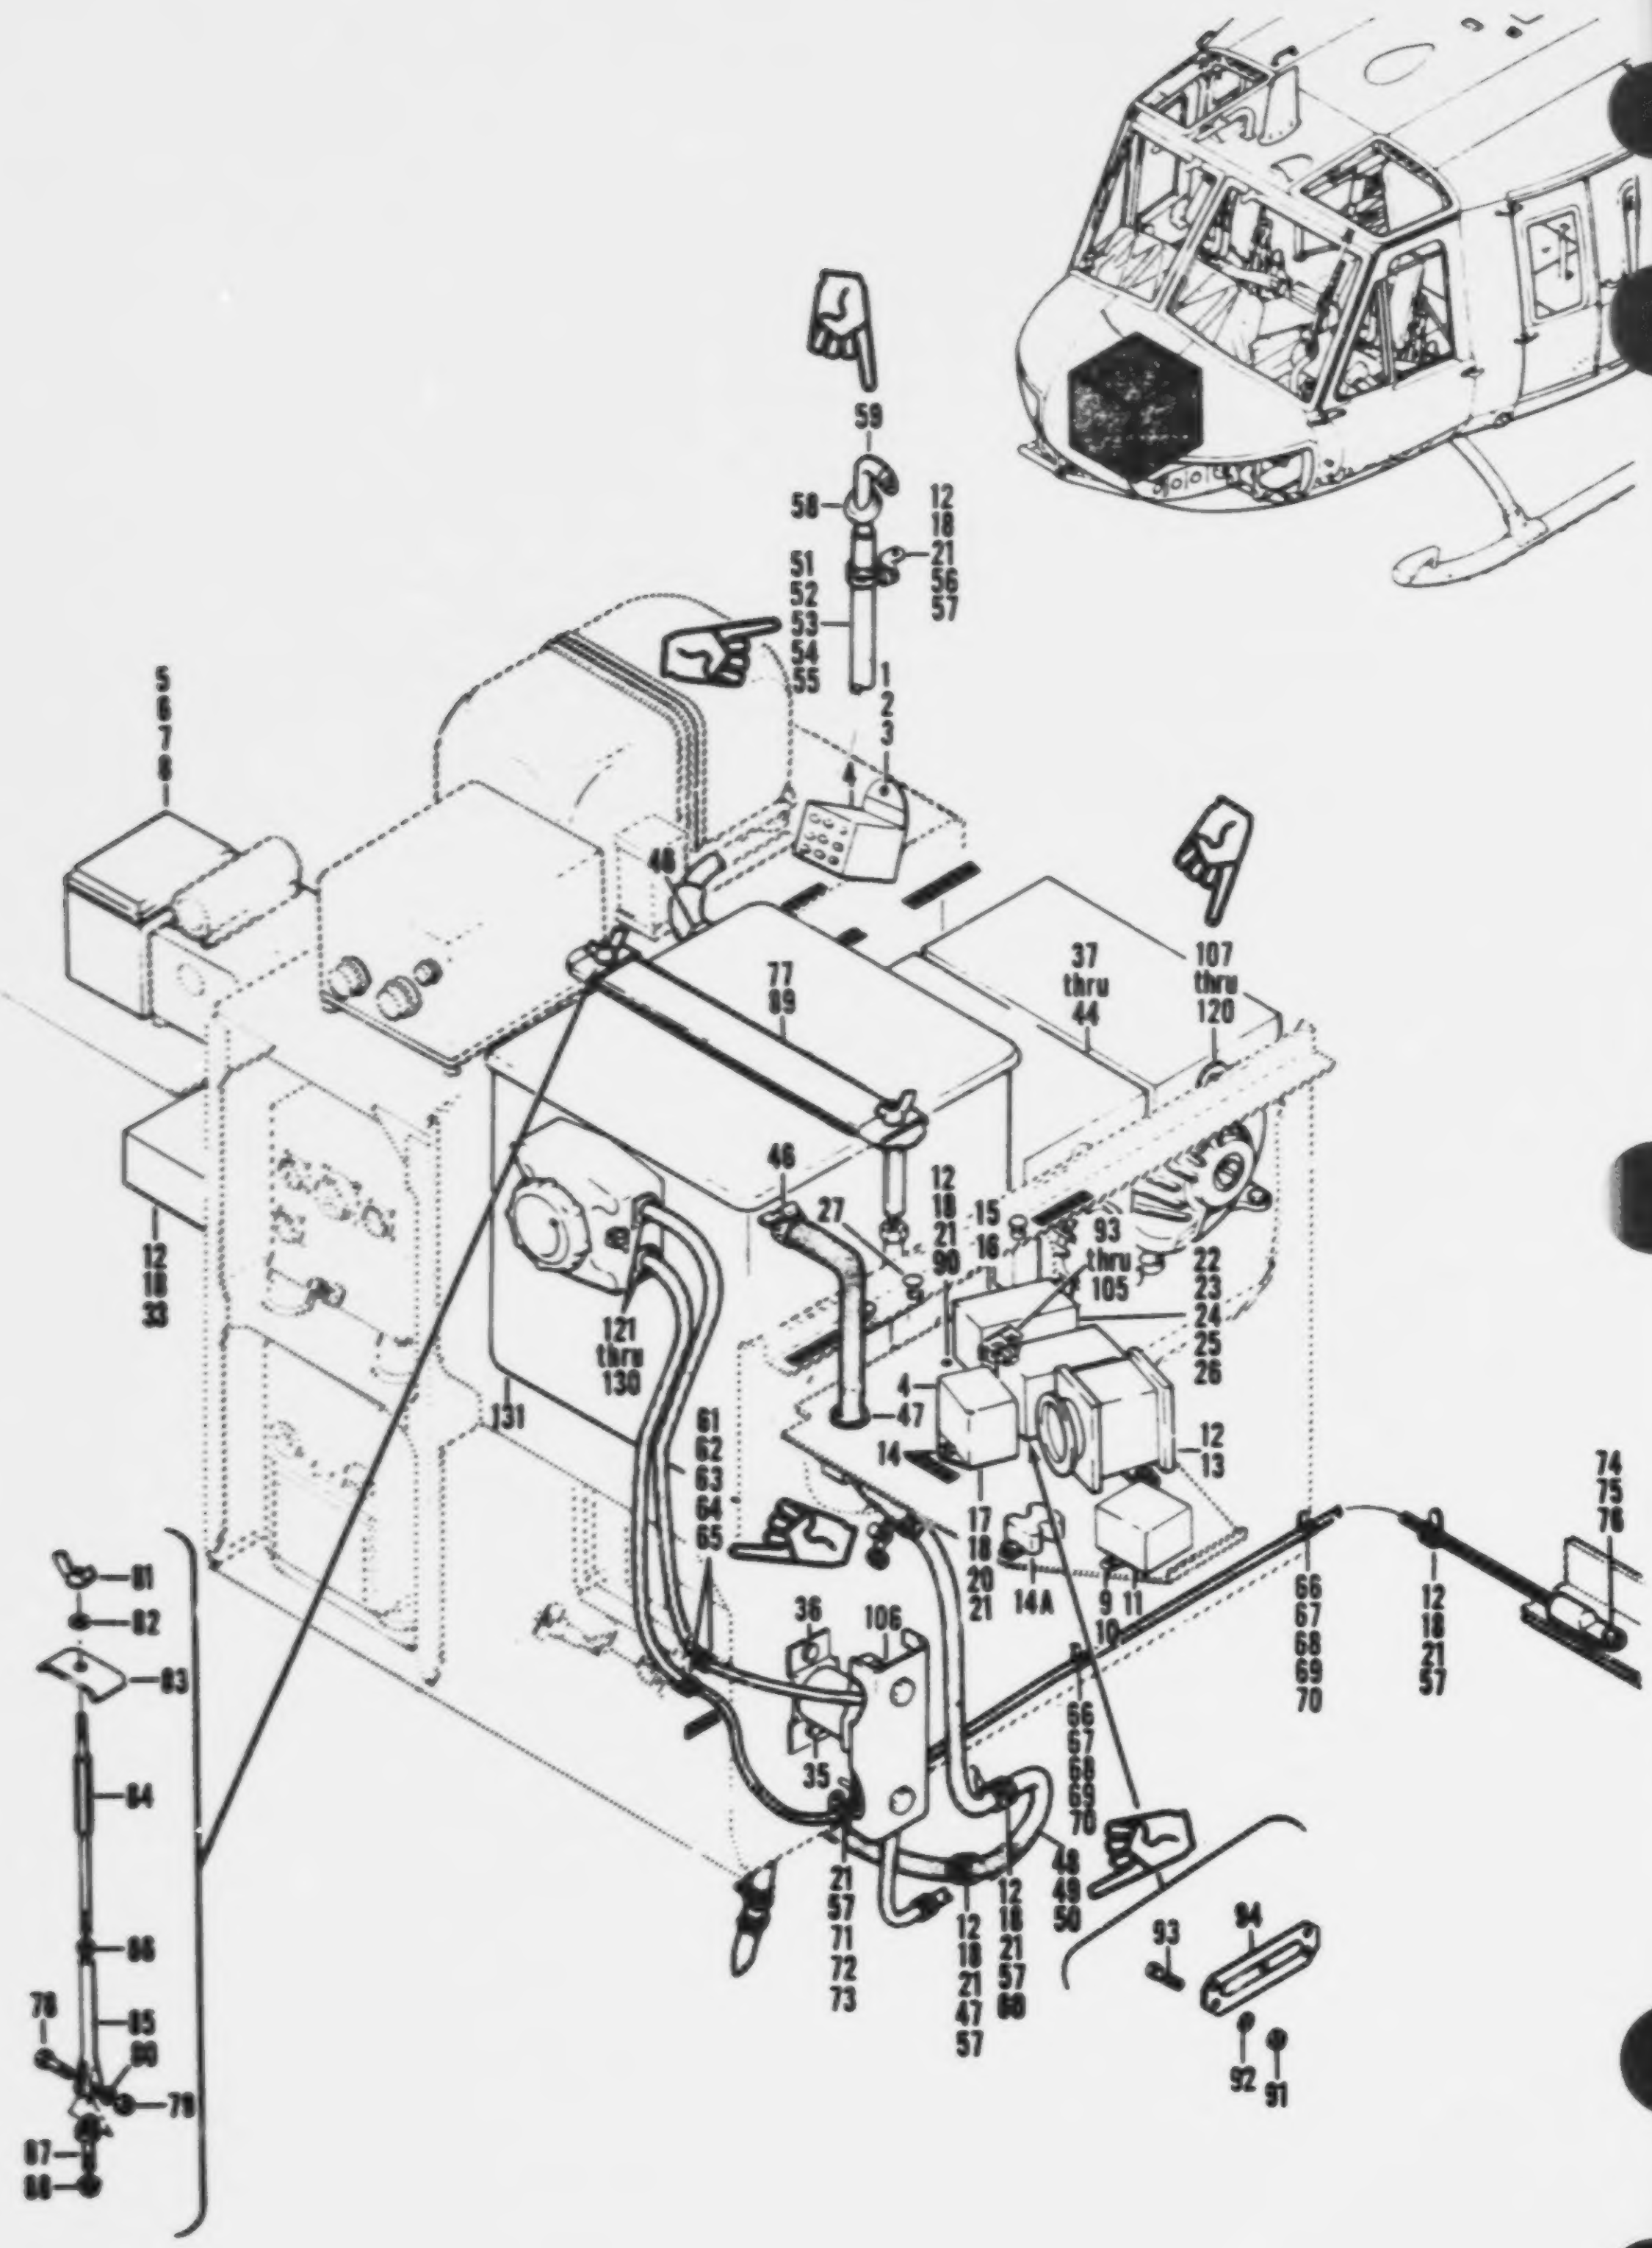
59
58
12
18
21
56
57
51
52
53
54
55
1
2
3
4
5
6
7
8
48
77
89
37
thru
44
107
thru
120
12
18
33
46
27
12
18
21
90
15
16
93
thru
105
22
23
24
25
26
121
thru
130
131
4
47
12
13
14
61
62
63
64
65
17
18
20
21
14A
9
10
11
66
67
68
69
70
74
75
76
12
18
21
57
81
82
83
84
86
85
78
80
79
87
88
36
106
35
66
67
68
69
70
48
49
50
21
57
71
72
73
12
18
21
47
57
12
18
21
57
60
93
94
92
91

Figure 241. Equipment Installation, Nose Compartment Electrical

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
241		XCFZZ		97499	205-075-334-3	EQUIPMENT INSTL NOSE COMPARTMENT ELECTRICAL USBL EFF 63-8739 THRU 63-13003 SEE FIG 226 FOR NHA UHE,UHH,UHV,UHX	EA	1
241		XCFZZ		97499	205-075-337-3	EQUIPMENT INSTL NOSE COMPARTMENT ELECTRICAL USBL EFF 64-13429 THRU 64-13661 SEE FIG 226 FOR NHA UHE,UHH,UHV,UHX	EA	1
241		XCFZZ		97499	205-075-337-7	EQUIPMENT INSTL NOSE COMPARTMENT ELECTRICAL USBL EFF 64-13662 THRU 64-13901 SEE FIG 226 FOR NHA UHE,UHH,UHV,UHX	EA	1
241		XCFZZ		97499	205-075-337-9	EQUIPMENT INSTL NOSE COMPARTMENT ELECTRICAL USBL EFF 65-9565 THRU 65-12895 SEE FIG 226 FOR NHA UHE,UHH,UHV,UHX	EA	1
241	1	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	2
241	2	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
241	3	PAOZZ	5305-00-984-6194	96906	MS35206-246	.SCREW,MACHINE UHE,UHH UHV,UHX	EA	2
241	4	PAOZZ	5945-00-225-8892	96906	MS24149D1	.RELAY,ELECTROMAGNET UHE,UHH,UHV,UHX	EA	2
241	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-075-334-3, 205-075-337-3,& -7 UHE,UHH,UHV,UHX	EA	4
241	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-334-3, 205-075-337-3,& -7 UHE,UHH,UHV,UHX	EA	4
241	7	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE U/O PN 205-075-334-3,& 205-075-337-3,& -7 UHE,UHH,UHV,UHX	EA	4
241	8	PBOOO	6610-00-066-9353	35351	136703-01-02	.AMPLIFIER,INDICATOR U/O PN 205-075-334-3, 205-075-337-3,& -7 UHE,UHH,UHV,UHX	EA	1
241	9	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	2
241	10	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	.SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	2
241	11	PAOZZ	5910-00-643-0845	81349	CP53B1KE105K1	.CAPACITOR,FIXED,PAP UHE,UHH,UHV,UHX	EA	1
241	12	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	A	V
241	13	PAOZZ	5950-00-648-7167	01526	9T39Y5	.TRANSFORMER,POWER UHE,UHH,UHV,UHX	EA	1
241	14	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	2
241	14A	PAOZZ	5905-00-985-6297	81349	RW20V911	.RESISTOR,FIXED,WIRE UHE,UHH,UHV,UHX	EA	1
241	15	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	4
241	16	PAOZZ	5945-00-686-6877	96909	MS24166-D1	.RELAY,ELECTROMAGNET UHE,UHH,UHV,UHX	EA	2
241	17	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
241	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	V
241	20	PAOZZ	5310-00-576-5752	96906	MS35333-39	.WASHER,LOCK UHE,UHH,UHV,UHX	EA	1
241	21	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	V
241	22	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-075-334-3 UHE,UHH,UHV,UHX	EA	1
241	23	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-334-3 UHE,UHH,UHV,UHX	EA	1
241	24	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE U/O PN 205-075-334-3 UHE,UHH,UHV,UHX	EA	1
241	25	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE U/O PN 205-075-334-3 UHE,UHH,UHV,UHX	EA	1
241	26	PAOZZ	5340-00-533-3513	81996	EAB700-6	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	1
241	27	PAOZZ	5925-00-045-9095	76374	MP1501C	.CIRCUIT BREAKER UHE,UHH,UHV,UHX	EA	3
241	33	PAOOO	6340-01-153-8073	97499	205-074-033-103	.BOX,WARNING CONTROL UHE,UHH,UHV,UHX	EA	1
241	35	PAOZZ	5306-00-182-2014	88044	AN4-3A	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	2
241	36	AOOOZ	5945-00-189-6391	97499	205-075-137-11	.RELAY ASSEMBLY SEE FIG.269 FOR BREAKDOWN UHE,UHH,UHV,UHX	EA	1
241	37	PAOZZ	5306-00-656-0358	88044	AN3-6A	.BOLT,MACHINE U/O PN 205-075-334-3 UHE,UHH,UHV,UHX	EA	8
241	38	PAOZZ	5306-00-656-0358	88044	AN3-6A	.BOLT,MACHINE U/O PN 205-075-337-3,-7,& -9 UHE,UHH,UHV,UHX	EA	2
241	39	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT,MACHINE U/O PN 205-075-337-3,-7,& -9	EA	6

best copy available

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						........UHE,UHH,UHV,UHX		
241	40	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-334-3........UHE,UHH,UHV,UHX	EA	2
241	41	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-337-3,-7,& -9....UHE,UHH,UHV,UHX	EA	8
241	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING EXTENDED WASHER,HEXAGON U/O PN 205-075-334-3........UHE,UHH,UHV,UHX	EA	2
241	43	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 205-075-337-3,-7,& -9........UHE,UHH,UHV,UHX	EA	2
241	44	PAOZZ	5935-00-280-2308	71468	025-0498-000	.COVER,ELECTRICAL........UHE,UHH,UHV,UHX	EA	2
241	46	PAOZZ	4730-00-278-9096	88044	AN737RM30	.CLAMP,HOSE........UHE,UHH,UHV,UHX	EA	2
241	47	PACZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET,NONMETALLIC........UHE,UHH,UHV,UHX	EA	1
241	48	AOOOZ	1560-00-226-1787	97499	205-075-135-17	.TUBE ASSY,VENT BATT........UHE,UHH,UHV,UHX	EA	1
241	49	MOOZZ	DELETED	97499	205-075-135-19	..TUBING,NONMETALLIC........UHE,UHH,UHV,UHX	EA	1
241	50	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER,BATTERY DRA........UHE,UHH,UHV,UHX	EA	1
241	51	AOOOZ	1560-00-226-5491	97499	204-075-173-33	.TUBE ASSY USBL EFF 62-2106 THRU 63-13002....UHE,UHH,UHV,UHX	EA	1
241	52	AOOOZ	1560-00-567-2994	97499	205-075-135-13	.TUBE ASSY USBL EFF 64-13492 THRU 66-12895 ....UHE,UHH,UHV,UHX	EA	1
241	53	MOOZZ	DELETED	97499	204-075-173-35	..TUBING,RUBBER U/O PN 204-075-173-33........UHE,UHH,UHV,UHX	EA	1
241	54	MOOZZ	DELETED	97499	205-075-135-15	..TUBING,RUBBER U/O PN 205-075-135-13........UHE,UHH,UHV,UHX	EA	1
241	55	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER,BATTERY DRA........UHE,UHH,UHV,UHX	EA	1
241	56	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE........UHE,UHH,UHV,UHX	EA	1
241	57	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
241	58	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC........UHE,UHH,UHV,UHX	EA	1
241	59	MOOZZ	DELETED	97499	205-075-134-1	.TUBE,VENT........UHE,UHH,UHV,UHX	EA	1
241	50	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
241	51	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 205-075-334-3 &205-075-337-3........UHE,UHH,UHV,UHX	EA	4
241	62	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-334-3 &205-075-337-3 ....UHE,UHH,UHV,UHX	EA	2
241	63	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE U/O PN 205-075-334-3 &205-075-337-3 ....UHE,UHH,UHV,UHX	EA	4
241	64	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP U/O PN 205-075-334-3 &205-075-337-3 ....UHE,UHH,UHV,UHX	EA	2
241	65	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE U/O PN 205-075-334-3 & 205-075-337-3 ....UHE,UHH,UHV,UHX	EA	2
241	36	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 205-075-334-3........UHE,UHH,UHV,UHX	EA	2
241	57	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE U/O PN 205-075-334-3........UHE,UHH,UHV,UHX	EA	3
241	68	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE U/O PN 205-075-337-3,-7,& -9 ....UHE,UHH,UHV,UHX	EA	2
241	69	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP U/O PN 205-075-334-3........UHE,UHH,UHV,UHX	EA	3
241	70	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP U/O PN 205-075-337-3,-7,& -9....UHE,UHH,UHV,UHX	EA	2
241	71	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-337-3,-7,& -9....UHE,UHH,UHV,UHX	EA	1
241	72	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	1
241	73	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE U/O PN 205-075-337-3,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
241	74	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	1
241	75	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	1
241	76	PAOZZ	5306-00-180-0238	88044	AN6-5A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
241	77	AOOOZ	1560-00-682-5193	97499	204-075-161-7	.ROD ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
241	78	PAOZZ	5306-00-292-8252	88044	AN4H7A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
241	79	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
241	80	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
241	81	PAOZZ	5310-00-080-8495	96906	MS35425-39	..NUT,PLAIN,WING	UHE,UHH,UHV,UHX	EA	1
241	82	PAOZZ	5310-00-531-9515	88044	AN960C416	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
241	83	PAOZZ	1560-00-994-5702	97499	204-075-567-11	..CHANNEL,TIE DOWN	UHE,UHH,UHV,UHX	EA	1
241	84	PAOZZ	5307-00-897-5187	97499	204-075-161-5	..STUD,SHOULDERED	UHE,UHH,UHV,UHX	EA	1
241	85	PAOZZ	1560-00-967-7669	97499	204-075-161-3	..ROD END,BATTERY CAS	UHE,UHH,UHV,UHX	EA	1
241	86	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
241	87	PAOZZ	5306-00-206-3869	88044	AN44-7	..BOLT,EYE	UHE,UHH,UHV,UHX	EA	1
241	88	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
241	89	PAOZZ	5365-00-807-7029	80205	NAS43DD5-36	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
241	90	PAOZZ	1560-00-887-1172	97499	204-075-134-1	.BRACKET,BATTERY TIE	UHE,UHH,UHV,UHX	EA	2
241	91	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	4
241	92	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	4
241	93	PAOZZ	5305-00-957-7811	96906	MS24693S272	.SCREW,MACHINE U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	4
241	94	PAOZZ	5935-01-035-8391	05593	EL-8-0037	.CONNECTOR BODY,RECE	UHE,UHH,UHV,UHX	EA	1
241	95	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
241	96	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	2
241	97	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	2
241	98	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	2
241	99	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	2
241	100	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	1
241	101	PAOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE U/O PN 205-075-337-9	UHE,UHH,UHV,UHX	EA	2
241	102	PAOZZ	5961-00-177-2969	97499	30-037-1	.SEMICONDUCTOR,DEVIC	UHE,UHH,UHV,UHX	EA	1
241	103	XAOZZ		96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	2
241	104	XAOZZ	5961-00-059-2904	81349	1N3613	..SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	1
241	105	XAOZZ		97499	85T4-3-2	..INSULATION TUBE	UHE,UHH,UHV,UHX	EA	1
241	106	PAOZZ	6110-00-247-0211	81872	5-401505-003	.COVER,VOLTAGE REGUL U/O PN 205-075-337-3,-7,& -9	UHE,UHH,UHV,UHX	EA	1
241	107	AOOOZ	1560-00-869-8149	97499	205-075-411-3	.CABLE ASSEMBLY,INVE	UHE,UHH,UHV,UHX	EA	1
241	108	PAOZZ	5935-00-603-6966	96906	MS3418-24N	..CLAMP	UHE,UHH,UHV,UHX	EA	2
241	110	PAOZZ	5935-00-586-6195	96906	MS3456W24-20S	..CONNECTOR,PLUG,ELEC	UHE,UHH,UHV,UHX	EA	2
241	111	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	112	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	113	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	114	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	115	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING	UHE,UHH,UHV,UHX	EA	1
241	116	MOOZZ	DELETED	97499	85T4-500-4	..INSULATION TUBE	UHE,UHH,UHV,UHX	EA	2
241	117	PBOZZ	6145-00-578-7514	04939	MIL5086AN12 TYP	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V

(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUSTRATION									
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
241	118	PBOZZ	6145-00-578-6605	81349	MILW5086-2	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
241	119	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
241	120	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR	UHE,UHH,UHV,UHX	EA	1
241	121	AOOOZ	1560-00-567-3011	97499	205-075-403-13	.CABLE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
241	122	PAOZZ	5935-00-686-0447	96906	MS25182-2	..CONNECTOR,PLUG,ELEC	UHE,UHH,UHV,UHX	EA	1
241	123	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	124	PAOZZ	5940-00-143-4773	96906	MS25036-105	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	125	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	126	XDOZZ		96906	MS25036-135	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
241	127	PAOZZ	5940-00-113-9835	96906	MS25036-136	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	2
241	128	PBOZZ	6145-00-578-6600	81349	M5086/2-02-9	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
241	129	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
241	130	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	1
241	131	PAOFF	6140-00-578-7525	96906	MS24498-1	.BATTERY ASSEMBLY	UHE,UHH,UHV,UHX	EA	1

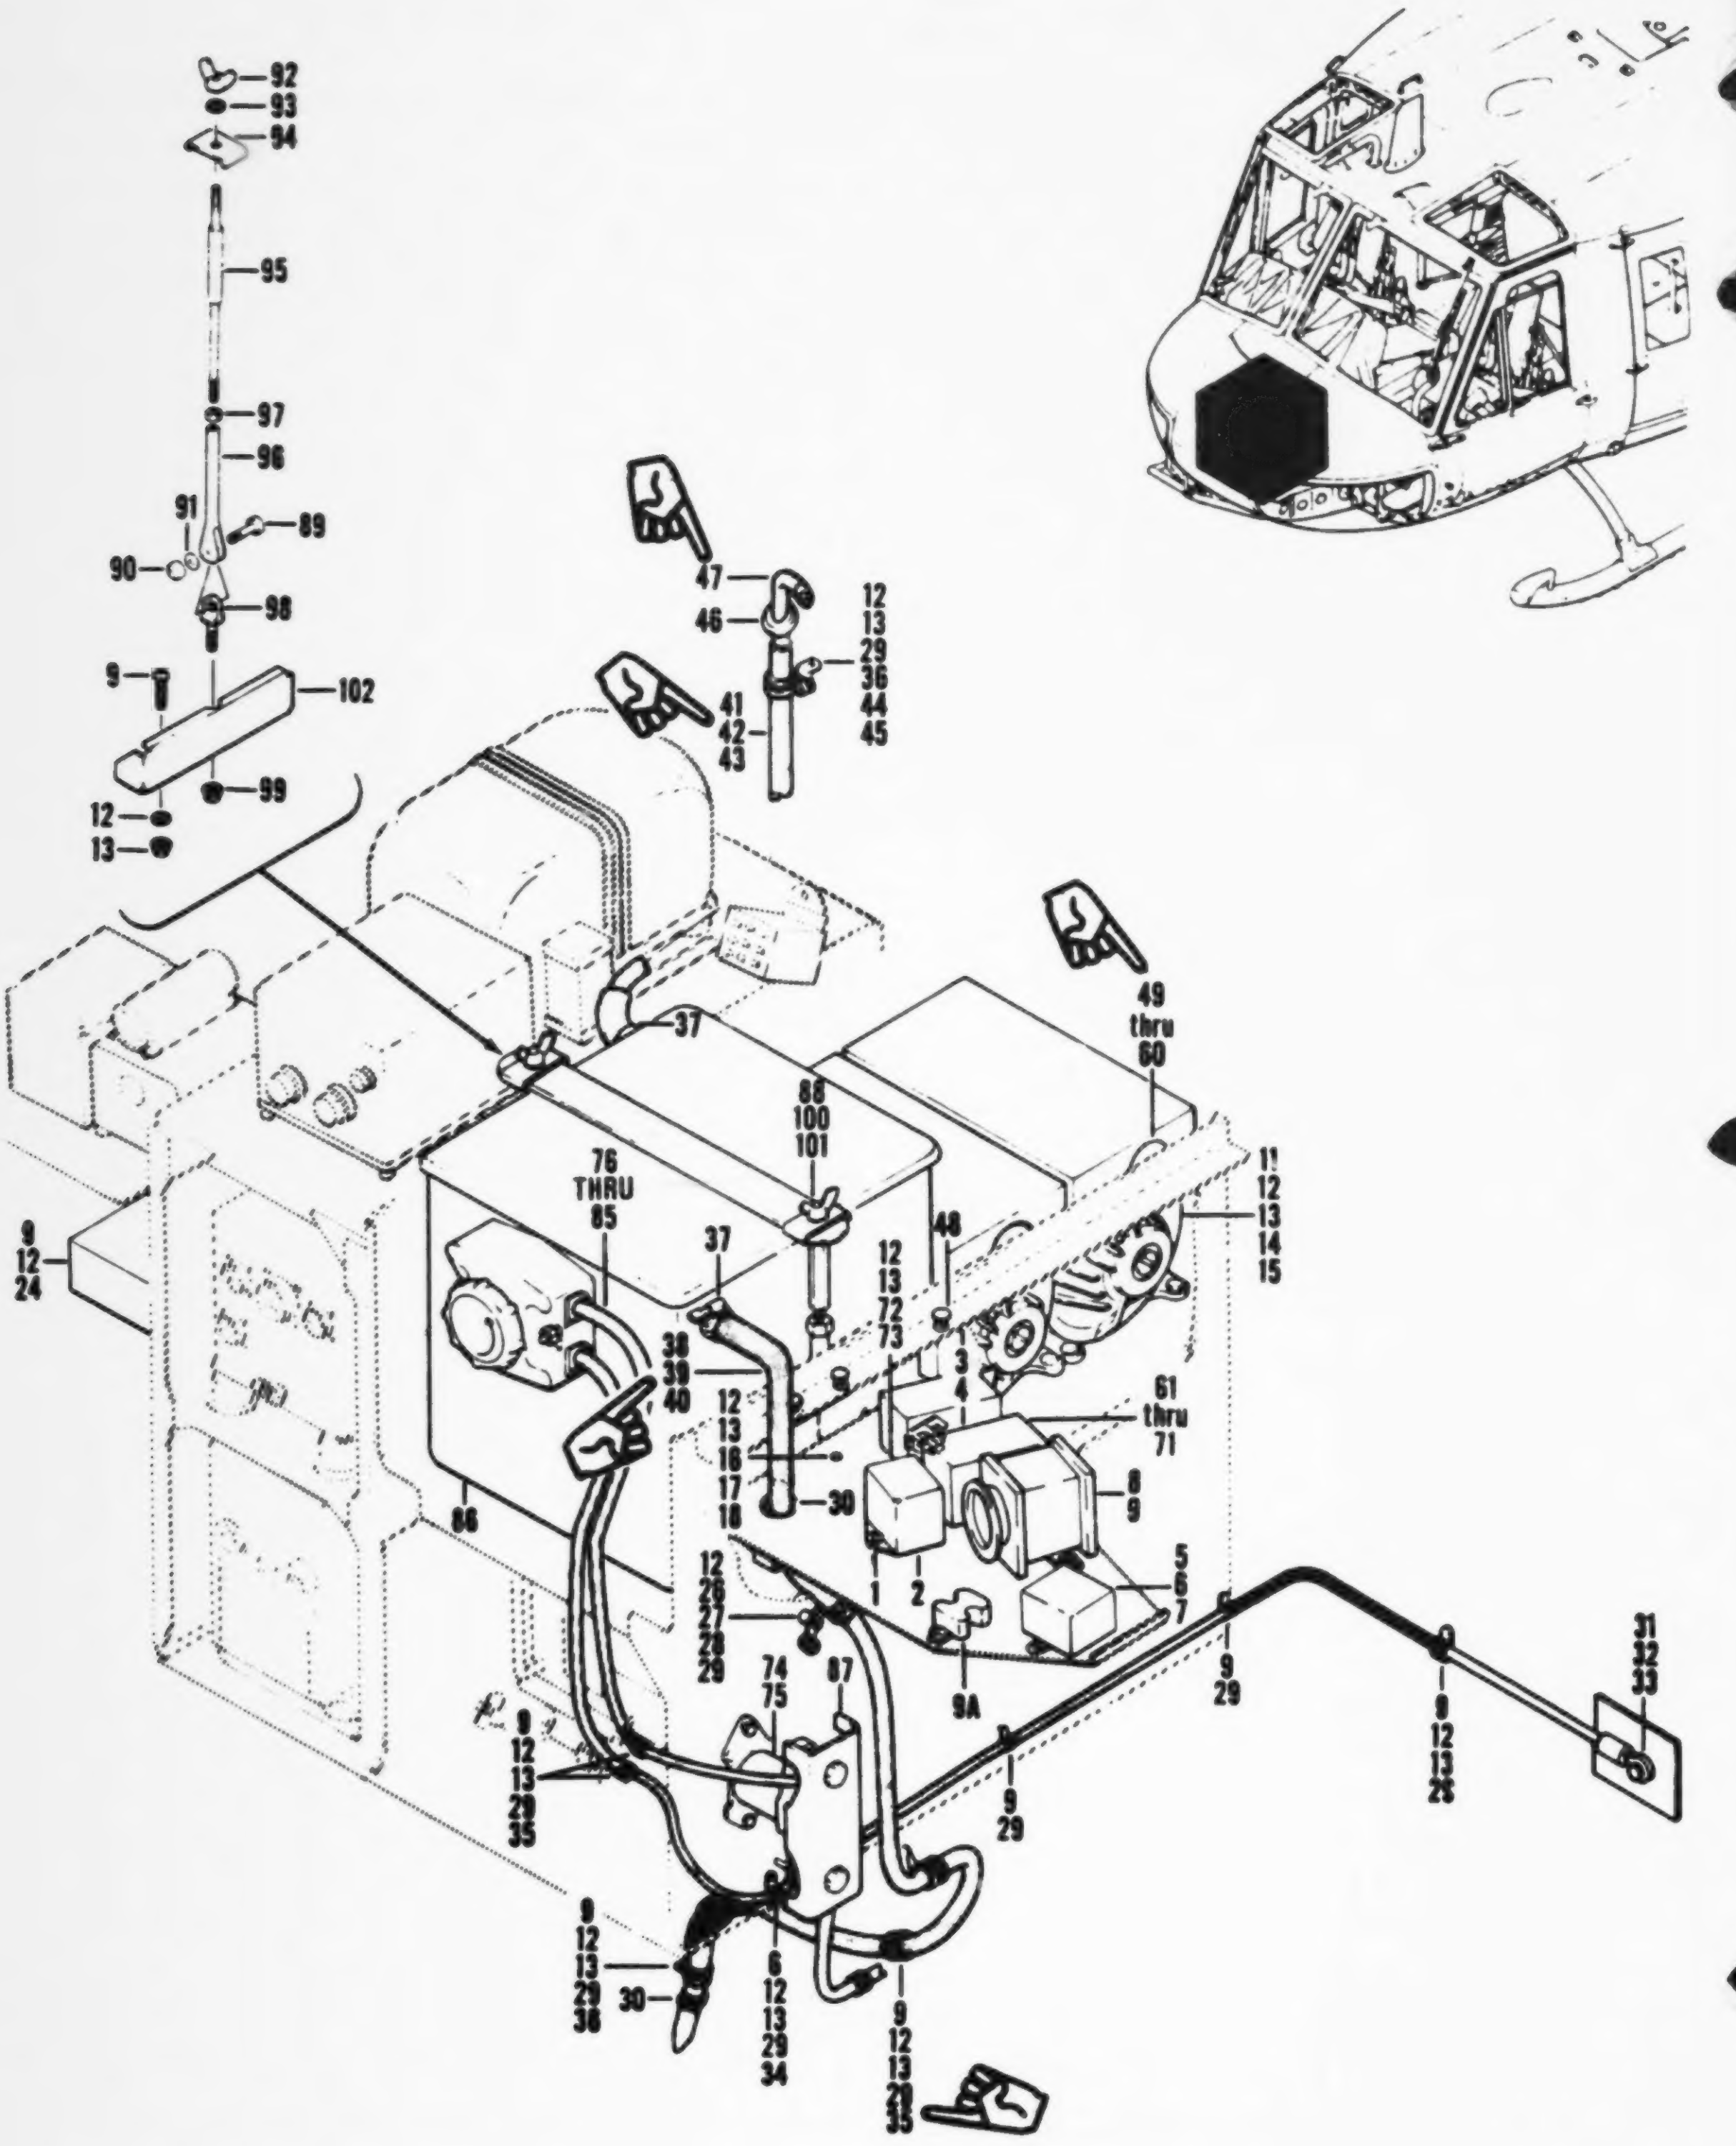
92
93
94
95
97
96
91
89
90
98
9
102
99
12
13
47
46
12
13
29
36
44
45
41
42
43
37
49
thru
60
88
100
101
76
THRU
85
37
48
11
12
13
14
15
9
12
24
12
13
72
73
3
4
38
39
40
61
thru
71
12
13
16
17
18
30
8
9
86
1
2
5
6
7
12
26
27
28
29
9A
74
75
87
9
29
31
32
33
8
12
13
26
9
12
13
29
35
9
29
9
12
13
29
36
30
6
12
13
29
34
9
12
13
29
35

Figure 242. Equipment Installation, Nose Compartment Electrical

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS			
242		XCFZZ		97499	205-075-500-3	EQUIPMENT INSTL NOSE COMPARTMENT, ELECTRICAL USBL EFF 66-746 THRU 66-16306 SEE FIG 226 FOR NHA	UHE, UHH, UHV, UHX	EA	1
242		XCFZZ		97499	205-075-507-3	EQUIPMENT INSTL NOSE COMPARTMENT, ELECTRICAL USBL EFF 66-16307 THRU 67-1777 SEE FIG.226 FOR NHA	UHE, UHH, UHV, UHX	EA	1
242	1	PAOZZ	5305-00-984-6194	96906	MS35206-246	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	2
242	2	PAOZZ	5945-00-225-8692	96906	MS24149D1	RELAY, ELECTROMAGNET	UHE, UHH, UHV, UHX	EA	1
242	3	PAOZZ	5306-00-150-9221	88044	AN3-3A	BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	4
242	4	PAOZZ	5945-00-686-6877	96906	MS24166-D1	.RELAY, ELECTROMAGNET	UHE, UHH, UHV, UHX	EA	2
242	5	PAOZZ	5305-00-995-3441	96905	MS35207-269	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	2
242	6	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	3
242	7	PAOZZ	5910-00-543-0845	81349	CP53B1KE105K1	CAPACITOR, FIXED, PAP PAPER	UHE, UHH, UHV, UHX	EA	2
242	8	PAOZZ	5950-00-648-7167	01526	9T39Y5	TRANSFORMER, POWER, F	UHE, UHH, UHV, UHX	EA	1
242	9	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	V
242	9A	PAOZZ	5905-00-985-6297	81349	RW20V911	.RESISTOR, FIXED, WIRE	UHE, UHH, UHV, UHX	EA	1
242	11	PAOZZ	5306-00-656-0358	88044	AN3-6A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	6
242	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	V
242	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	V
242	14	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	2
242	15	PAOZZ	5935-00-280-2308	71468	025-0498-000	.COVER, ELECTRICAL CO	UHE, UHH, UHV, UHX	EA	2
242	16	PAOZZ	5310-00-576-5752	96906	MS35333-39	.WASHER, LOCK	UHE, UHH, UHV, UHX	EA	1
242	17	PAOZZ	5310-00-905-8434	96906	MS21083B3	.NUT, SELF-LOCKING, HE	UHE, UHH, UHV, UHX	EA	1
242	18	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
242	24	PAODD		97499	205-074-033-103	BOX. WARNING CONTROL SEE FIG 240 FOR BREAKDOWN	UHE, UHH, UHV, UHX	EA	1
242	26	PAOZZ	5305-00-093-1851	96906	MS35207-267	.SCREW, MACHINE U/O PN 205-075-500-3	UHE, UHH, UHV, UHX	EA	1
242	27	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW, MACHINE U/O PN 205-075-507-3	UHE, UHH, UHV, UHX	EA	1
242	28	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	1
242	29	PAOZZ	5340-00-993-6244	81996	EA8700D10	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	1
242	30	PAOZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET, NONMETALLIC	UHE, UHH, UHV, UHX	EA	1
242	31	PAOZZ	5306-00-180-0238	88044	AN6-5A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	1
242	32	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
242	33	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	1
242	34	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
242	35	MFOZZ	DELETED	97499	20-032-1	.BRACKET, ENGINE	UHE, UHH, UHV, UHX	EA	2
242	36	PAOZZ	5340-00-721-8182	88044	AN743-13	.BRACKET, ANGLE U/O PN 205-075-500-3	UHE, UHH, UHV, UHX	EA	1
242	37	PAOZZ	4730-00-278-9096	88044	AN737RM30	.CLAMP, HOSE	UHE, UHH, UHV, UHX	EA	2
242	38	AOOOZ	1560-00-226-5491	97499	204-075-173-33	.TUBING ASSY, RUBBER	UHE, UHH, UHV, UHX	EA	1
242	39	MOOZZ	DELETED	97499	204-075-173-35	..TUBING, RUBBER	UHE, UHH, UHV, UHX	EA	1
242	40	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER, BATTERY DRA	UHE, UHH, UHV, UHX	EA	1
242	41	AOOOZ	1560-00-567-2994	97499	205-075-135-13	.TUBE ASSEMBLY	UHE, UHH, UHV, UHX	EA	1
242	42	MOOZZ	DELETED	97499	205-075-135-15	..TUBING, RUBBER	UHE, UHH, UHV, UHX	EA	1
242	43	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER, BATTERY DRA	UHE, UHH, UHV, UHX	EA	1
242	44	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW, MACHINE U/O PN 205-075-500-3	UHE, UHH, UHV, UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
242	46	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC....UHE,UHH,UHV,UHX	EA	1
242	47	MOOZZ	DELETED	97499	205-075-134-1	.TUBE,VENT....UHE,UHH,UHV,UHX	EA	1
242	48	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER....UHE,UHH,UHV,UHX	EA	3
242	49	AOOOZ	1560-00-869-8149	97499	205-075-411-3	.CABLE ASSY....UHE,UHH,UHV,UHX	EA	1
242	50	PAOZZ	5935-00-727-1971	96906	MS3106R24-20S	..CONNECTOR,PLUG ELECTRICAL....UHE,UHH,UHV,UHX	EA	2
242	51	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	6
242	52	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	2
242	53	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	4
242	54	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	5
242	55	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING....UHE,UHH,UHV,UHX	EA	1
242	56	MOOZZ	DELETED	97499	85T4-500-4	..INSULATION TUBE....UHE,UHH,UHV,UHX	EA	V
242	57	PBOZZ	6145-00-578-7514	04939	MILW5086AN12 TYP	..WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	V
242	58	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	V
242	59	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	V
242	60	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR....UHE,UHH,UHV,UHX	EA	1
242	61	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	2
242	62	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT....UHE,UHH,UHV,UHX	EA	2
242	63	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	2
242	64	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT....UHE,UHH,UHV,UHX	EA	2
242	65	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	2
242	66	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE....UHE,UHH,UHV,UHX	EA	2
242	67	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD....UHE,UHH,UHV,UHX	EA	1
242	68	PAOZZ	5961-00-177-2969	97499	30-037-1	.SEMICONDUCTOR DE....UHE,UHH,UHV,UHX	EA	1
242	69	XAOZZ		96906	MS25036-101	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	2
242	70	XAOZZ	5961-00-059-2904	81349	1N3613	..SEMICONDUCTOR DEVIC....UHE,UHH,UHV,UHX	EA	1
242	71	XAOZZ		97499	85T4-3-2	..INSULATION TUBE....UHE,UHH,UHV,UHX	EA	1
242	72	PAOZZ	5305-00-957-7811	96906	MS24693S272	.SCREW,MACHINE....UHE,UHH,UHV UHX	EA	4
242	73	PAOZZ	5935-01-035-8391	05593	EL8-0037	.CONNECTOR BODY,RECE....UHE,UHH,UHV,UHX	EA	1
242	74	AOOOZ	5945-00-189-6391	97499	205-075-137-11	.RELAY ASSEMBLY SEE FIG.269 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
242	75	PAOZZ	5306-00-182-2014	88044	AN4-3A	.BOLT,MACHINE....UHE,UHH,UHV,UHX	EA	2
242	76	AOOOZ	1560-00-567-3011	97499	205-075-403-13	.CABLE ASSEMBLY....UHE,UHH,UHV,UHX	EA	1
242	77	PAOZZ	5935-00-686-0447	96906	MS25182-2	..CONNECTOR,PLUG,ELEC....UHE,UHH,UHV,UHX	EA	1
242	78	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	1
242	79	PAOZZ	5940-00-143-4773	96906	MS25036-105	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	1
242	80	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	1
242	81	XDOZZ		96906	MS25036-135	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	1
242	82	PAOZZ	5940-00-113-9835	96906	MS25036-136	..TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	1
242	83	PBOZZ	6145-00-578-6600	81349	M5086/2-02-9	..WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	V
242	84	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	V
242	85	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	V
242	86	PAOFF		96906	MS24498-1	.BATTERY ASSEMBLY....UHE,UHH,UHV,UHX	EA	1
242	86	PAOFF	6140-01-046-1116	80058	BB-433A/A	.BATTERY,STORAGE....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
242	87	PAOZZ	6110-00-247-0211	81872	5-401505-003	.COVER,VOLTAGE REGUL	UHE,UHH,UHV,UHX	EA	1
242	88	AOOOZ	1560-00-682-5193	97499	204-075-161-7	.ROD ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
242	89	PAOZZ	5305-00-292-8252	88044	AN4H7A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
242	90	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
242	91	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
242	92	PAOZZ	5310-00-080-8495	96906	MS35425-39	..NUT,PLAIN,WING	UHE,UHH,UHV,UHX	EA	1
242	93	PAOZZ	5310-00-531-9515	88044	AN960C416	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
242	94	PAOZZ	1560-00-994-5702	97499	204-075-567-11	..CHANNEL,TIE DOWN	UHE,UHH,UHV,UHX	EA	1
242	95	PAOZZ	5307-00-897-5187	97499	204-075-161-5	..STUD,PLAIN	UHE,UHH,UHV,UHX	EA	1
242	96	PAOZZ	1560-00-967-7669	97499	204-075-161-3	..ROD END,BATTERY CAS	UHE,UHH,UHV,UHX	EA	1
242	97	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
242	98	PAOZZ	5306-00-206-3869	88044	AN44-7	..BOLT,EYE	UHE,UHH,UHV,UHX	EA	1
242	99	PAOZZ	5310-00-807-1469	96906	MS21042-5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
242	100	PAOZZ	5365-00-814-3874	80205	NAS43DD5-24	.SPACER,SLEEVE U/O PN 205-075-500-3	UHE,UHH,UHV,UHX	EA	2
242	101	PAOZZ	5365-00-807-7029	80205	NAS43DD5-36	.SPACER,SLEEVE U/O PN 205-075-507-3	UHE,UHH,UHV,UHX	EA	2
242	102	PAOZZ	1560-00-867-1172	97499	204-075-134-1	.BRACKET,BATTERY TIE	UHE,UHH,UHV,UHX	EA	2

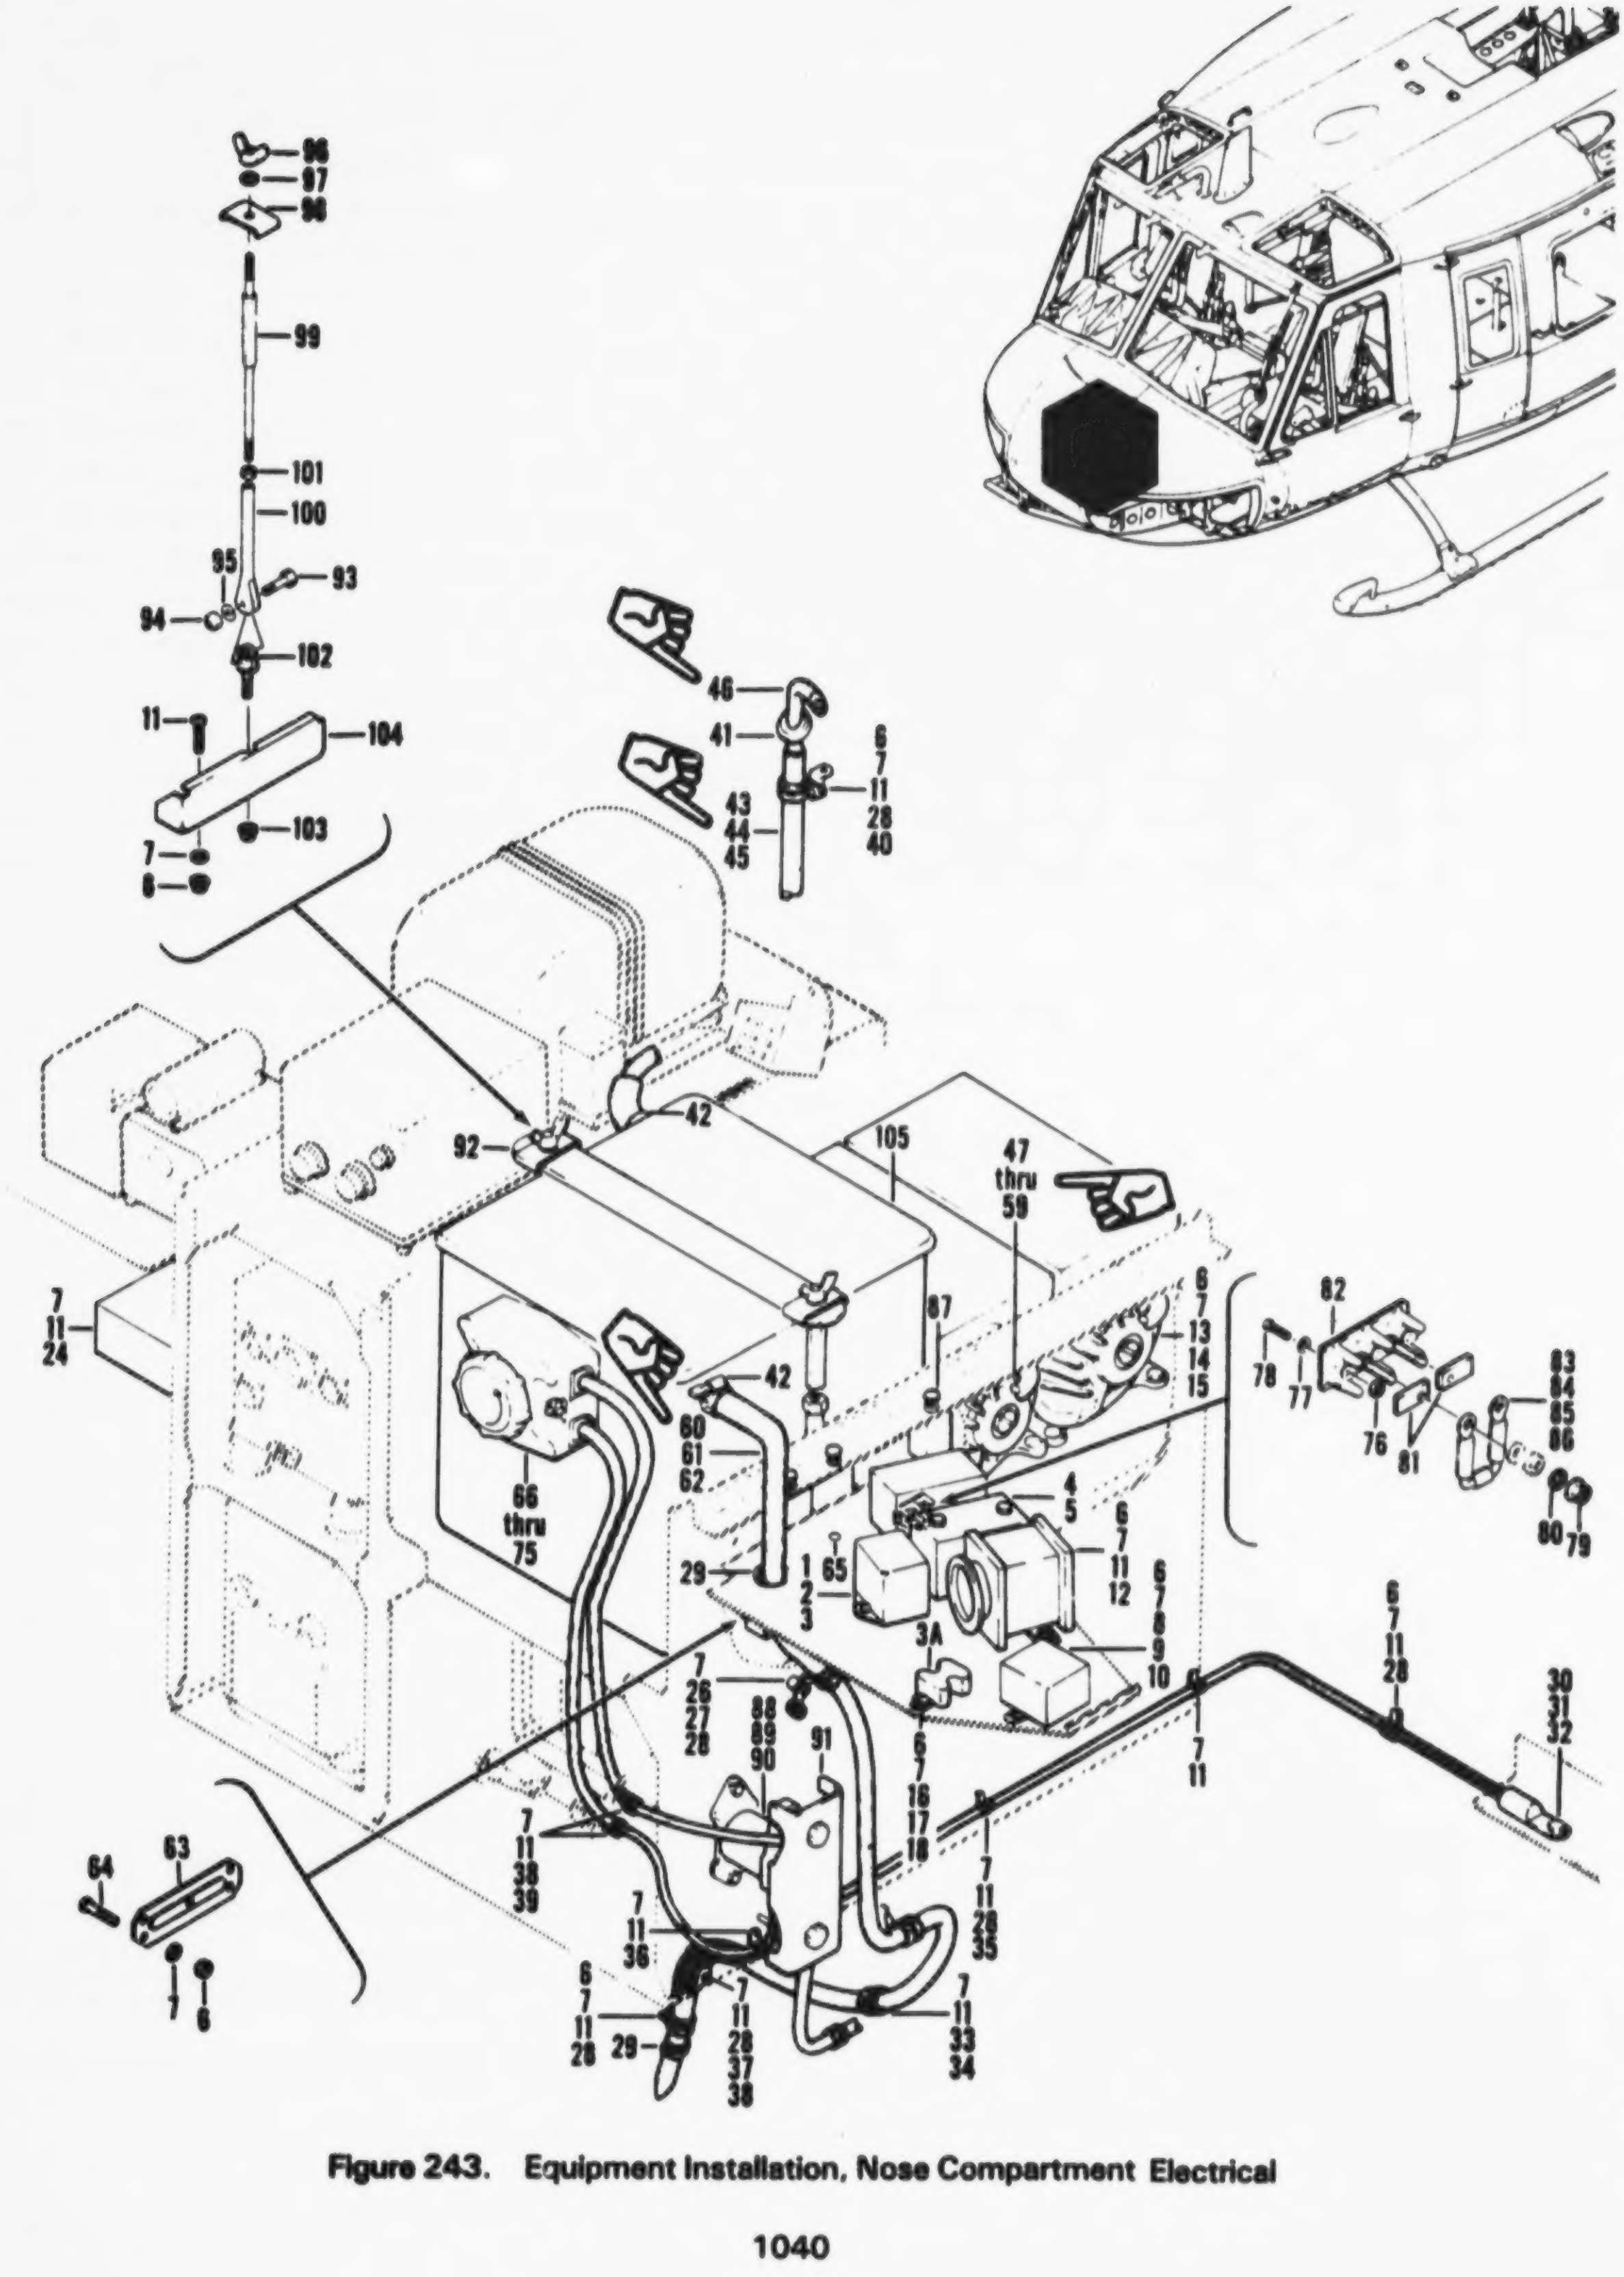
96
97
98
99
101
100
95
93
94
102
11
104
103
7
6
46
41
43
44
45
6
7
11
28
40
42
92
105
47
thru
59
7
11
24
87
6
7
13
14
15
82
78
77
76
81
83
84
85
86
80
79
42
60
61
62
66
thru
75
4
5
6
7
11
12
1
2
3
65
29
3A
6
7
8
9
10
7
26
27
28
88
89
90
91
6
7
16
17
18
7
11
6
7
11
28
30
31
32
7
11
38
39
7
11
36
7
11
29
35
64
63
7
6
6
7
11
28
29
7
11
28
37
38
7
11
33
34

Figure 243. Equipment Installation, Nose Compartment Electrical

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
243		XCFZZ		97499	205-075-513-3	EQUIPMENT INSTL NOSE COMPARTMENT, ELECTRICAL USBL EFF 67-17778 & SUBSEQUENT SEE FIG 226 FOR NHA	UHE, UHH, UHV, UHX	EA	1
243	1	PAOZZ	5945-00-225-8692	96906	MS24149D1	RELAY, ELECTROMAGNET	UHE, UHH, UHV, UHX	EA	1
243	2	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	2
243	3	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT, SELF-LOCKING	UHE, UHH, UHV, UHX	EA	2
243	3A	PAOZZ	5905-00-985-6297	81349	RW20V911	RESISTOR, FIXED, WIRE	UHE, UHH, UHV, UHX	EA	1
243	4	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	4
243	5	PAOZZ	5945-00-686-6877	96906	MS24166D1	RELAY, ELECTROMAGNET	UHE, UHH, UHV, UHX	EA	2
243	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT, SELF-LOCKING	UHE, UHH, UHV, UHX	EA	V
243	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	V
243	8	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	2
243	9	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	.SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	2
243	10	PAOZZ	5910-00-543-0845	81349	CP53B1KE105K1	.CAPACITOR, FIXED, PAP	UHE, UHH, UHV, UHX	EA	2
243	11	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	V
243	12	PAOZZ	5950-00-648-7167	01526	9T39Y5	.TRANSFORMER, POWER	UHE, UHH, UHV, UHX	EA	1
243	13	PAOZZ	5306-00-656-0358	88044	AN3-6A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	2
243	14	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	6
243	15	PAOZZ	5935-00-280-2308	71468	025-0498-000	.COVER, ELECTRICAL CO	UHE, UHH, UHV, UHX	EA	2
243	16	PAOZZ	5310-00-576-5752	96906	MS35333-39	.WASHER, LOCK	UHE, UHH, UHV, UHX	EA	1
243	17	PAOZZ	5310-00-905-8434	96906	MS21083B3	.NUT, SELF-LOCKING, HE	UHE, UHH, UHV, UHX	EA	1
243	18	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
243	24	PAODO	6340-01-153-8073	97499	205-074-033-103	.BOX, WARNING CONTROL SEE FIG 240 FOR BREAKDOWN	UHE, UHH, UHV, UHX	EA	1
243	26	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
243	27	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	1
243	28	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	V
243	29	PAOZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET, NONMETALLIC	UHE, UHH, UHV, UHX	EA	2
243	30	PAOZZ	5306-00-180-0238	88044	AN6-5A	.BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	1
243	31	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
243	32	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT, SELF-LOCKING	UHE, UHH, UHV, UHX	EA	1
243	33	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	2
243	34	PAOZZ	5310-00-084-9336	97499	90-002-2	.BRACKET ASSEMBLY	UHE, UHH, UHV, UHX	EA	1
243	35	PBOZZ	5310-00-020-4144	97499	90-002-1	.NUT, SELF-LOCKING PL	UHE, UHH, UHV, UHX	EA	1
243	36	PBOZZ	5310-00-435-0501	97499	90-002-3	.NUT, SELF-LOCKING, PL	UHE, UHH, UHV, UHX	EA	4
243	37	PAOZZ	5365-00-618-1792	80205	NAS42DD4-16	.SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	2
243	38	PBOZZ	5310-00-435-0501	97499	90-002-3	.NUT, SELF-LOCKING, PL	UHE, UHH, UHV, UHX	EA	3
243	39	XDOZZ	5340-00-989-4569	81996	EAB70009	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	2
243	40	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET, ANGLE	UHE, UHH, UHV, UHX	EA	1
243	41	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET, NONMETALLIC	UHE, UHH, UHV, UHX	EA	1
243	42	PAOZZ	4730-00-278-9096	88044	AN737RM30	.CLAMP, HOSE	UHE, UHH, UHV, UHX	EA	2
243	43	AOOOZ	1560-00-567-2994	97499	205-075-135-13	.TUBE ASSEMBLY	UHE, UHH, UHV, UHX	EA	1
243	44	MOOZZ	DELETED	97499	205-075-135-15	..TUBING, RUBBER	UHE, UHH, UHV, UHX	EA	1
243	45	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER, BATTERY DRA	UHE, UHH, UHV, UHX	EA	1
243	46	MOOZZ	DELETED	97499	205-075-134-1	.TUBE, VENT	UHE, UHH, UHV, UHX	EA	1

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
243	47	AOOOZ	1560-00-869-8149	97499	205-075-411-3	.CABLE ASSY	UHE,UHH,UHV,UHX	EA	1
243	48	PAOZZ	5935-00-727-1971	96906	MS3106R24-20S	..CONNECTOR,PLUG ELECTRICAL	UHE,UHH,UHV,UHX	EA	2
243	49	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	50	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	51	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	52	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	53	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	54	MOOZZ	DELETED	97499	85T4-6-2	..INSULATION TUBING	UHE,UHH,UHV,UHX	FT	1
243	55	MOOZZ	DELETED	97499	85T4-500-4	..INSULATION TUBE	UHE,UHH,UHV,UHX	EA	2
243	56	PBOZZ	6145-00-578-7514	04939	MILW5086AN12 TYP	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
243	57	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
243	58	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
243	59	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR	UHE,UHH,UHV,UHX	EA	1
243	60	AOOOZ	1560-00-226-5491	97499	204-075-173-33	.TUBING ASSY,RUBBER	UHE,UHH,UHV,UHX	EA	1
243	61	MOOZZ	DELETED	97499	204-075-173-35	.TUBING,RUBBER	UHE,UHH,UHV,UHX	EA	1
243	62	PAOZZ	1560-00-972-5317	97499	10-002-1	.ADAPTER,BATTERY DRA	UHE,UHH,UHV,UHX	EA	1
243	63	PAOZZ	5935-01-035-8391	05593	EL8-0037	.CONNECTOR BODY,RECE	UHE,UHH,UHV,UHX	EA	1
243	64	PAOZZ	5305-00-957-7811	96906	MS24693S272	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
243	65	PAOZZ	5365-00-113-8363	80205	NAS43DD5-25	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
243	66	AOOOZ	1560-00-567-3011	97499	205-075-403-13	.CABLE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
243	67	PAOZZ	5935-00-686-0447	96906	MS25182-2	..CONNECTOR,PLUG,ELEC	UHE,UHH,UHV,UHX	EA	1
243	68	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	69	PAOZZ	5940-00-143-4773	96906	MS25036-105	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	70	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	71	XDOZZ		96906	MS25036-135	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	72	PAOZZ	5940-00-113-9835	96906	MS25036-136	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	1
243	73	PBOZZ	6145-00-578-6600	81349	M5086/2-02-9	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
243	74	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
243	75	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
243	76	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
243	77	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
243	78	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
243	79	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
243	80	PAOZZ	5310-00-194-0534	88044	AN961-6	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
243	81	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE	UHE,UHH,UHV,UHX	EA	2
243	82	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD	UHE,UHH,UHV,UHX	EA	1
243	83	PAOZZ	5961-00-177-2969	97499	30-037-1	.SEMICONDUCTOR DE	UHE,UHH,UHV,UHX	EA	1
243	84	XAOZZ		96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	2
243	85	XAOZZ		81349	JAN1N3613	..SEMICONDUCTOR DEVIC	UHE,UHH,UHV,UHX	EA	1
243	86	XAOZZ		97499	85T4-3-2	..INSULATION TUBE	UHE,UHH,UHV,UHX	EA	1
243	87	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER	UHE,UHH,UHV,UHX	EA	3
243	88	PAOZZ	5306-00-182-2014	88044	AN4-3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	
243	89	AOOOZ	5945-00-189-6391	97499	205-075-137-11	RELAY AS
243	90	PBOZZ	5975-00-553-7077	96906	MS25171-4S	CABLE,NE
243	91	PAOZZ	6110-00-247-0211	81872	5-401505-003	COVER,VE
243	92	AOOOZ	1560-00-682-5193	97499	204-075-181-7	ROD ASSE
243	93	PAOZZ	5306-00-292-8252	88044	AN4H7A	. BOLT,MA
243	94	PAOZZ	5310-00-807-1475	96906	MS21042L4	. NUT,SEL
243	95	PAOZZ	5310-00-167-0835	88044	AN960-416L	. WASHER,
243	96	PAOZZ	5310-00-080-8495	96906	MS35425-38	. NUT,PLA
243	97	PAOZZ	5310-00-531-9515	88044	AN960C416	. WASHER,
243	98	PAOZZ	1560-00-994-5702	97499	204-075-587-11	. CHANNEL,
243	99	PAOZZ	5307-00-097-5187	97499	204-075-181-5	. STUD,SHO
243	100	PAOZZ	1560-00-967-7669	97499	204-075-181-3	. ROD END,
243	101	PAOZZ	5310-00-208-7589	88044	AN316-4R	. NUT,PLA
243	102	PAOZZ	5306-00-206-3869	88044	AN44-7	. BOLT,EYE
243	103	PAOZZ	5310-00-807-1469	96906	MS21042-5	. NUT,SELF
243	104	PAOZZ	1560-00-867-1172	97499	204-075-134-1	BRACKET,B
243	105	PAOFF		96906	MS24498-1	BATTERY A
243	105	PAOFF	6140-01-046-1116	80058	BB-433A/A	BATTERY,ST

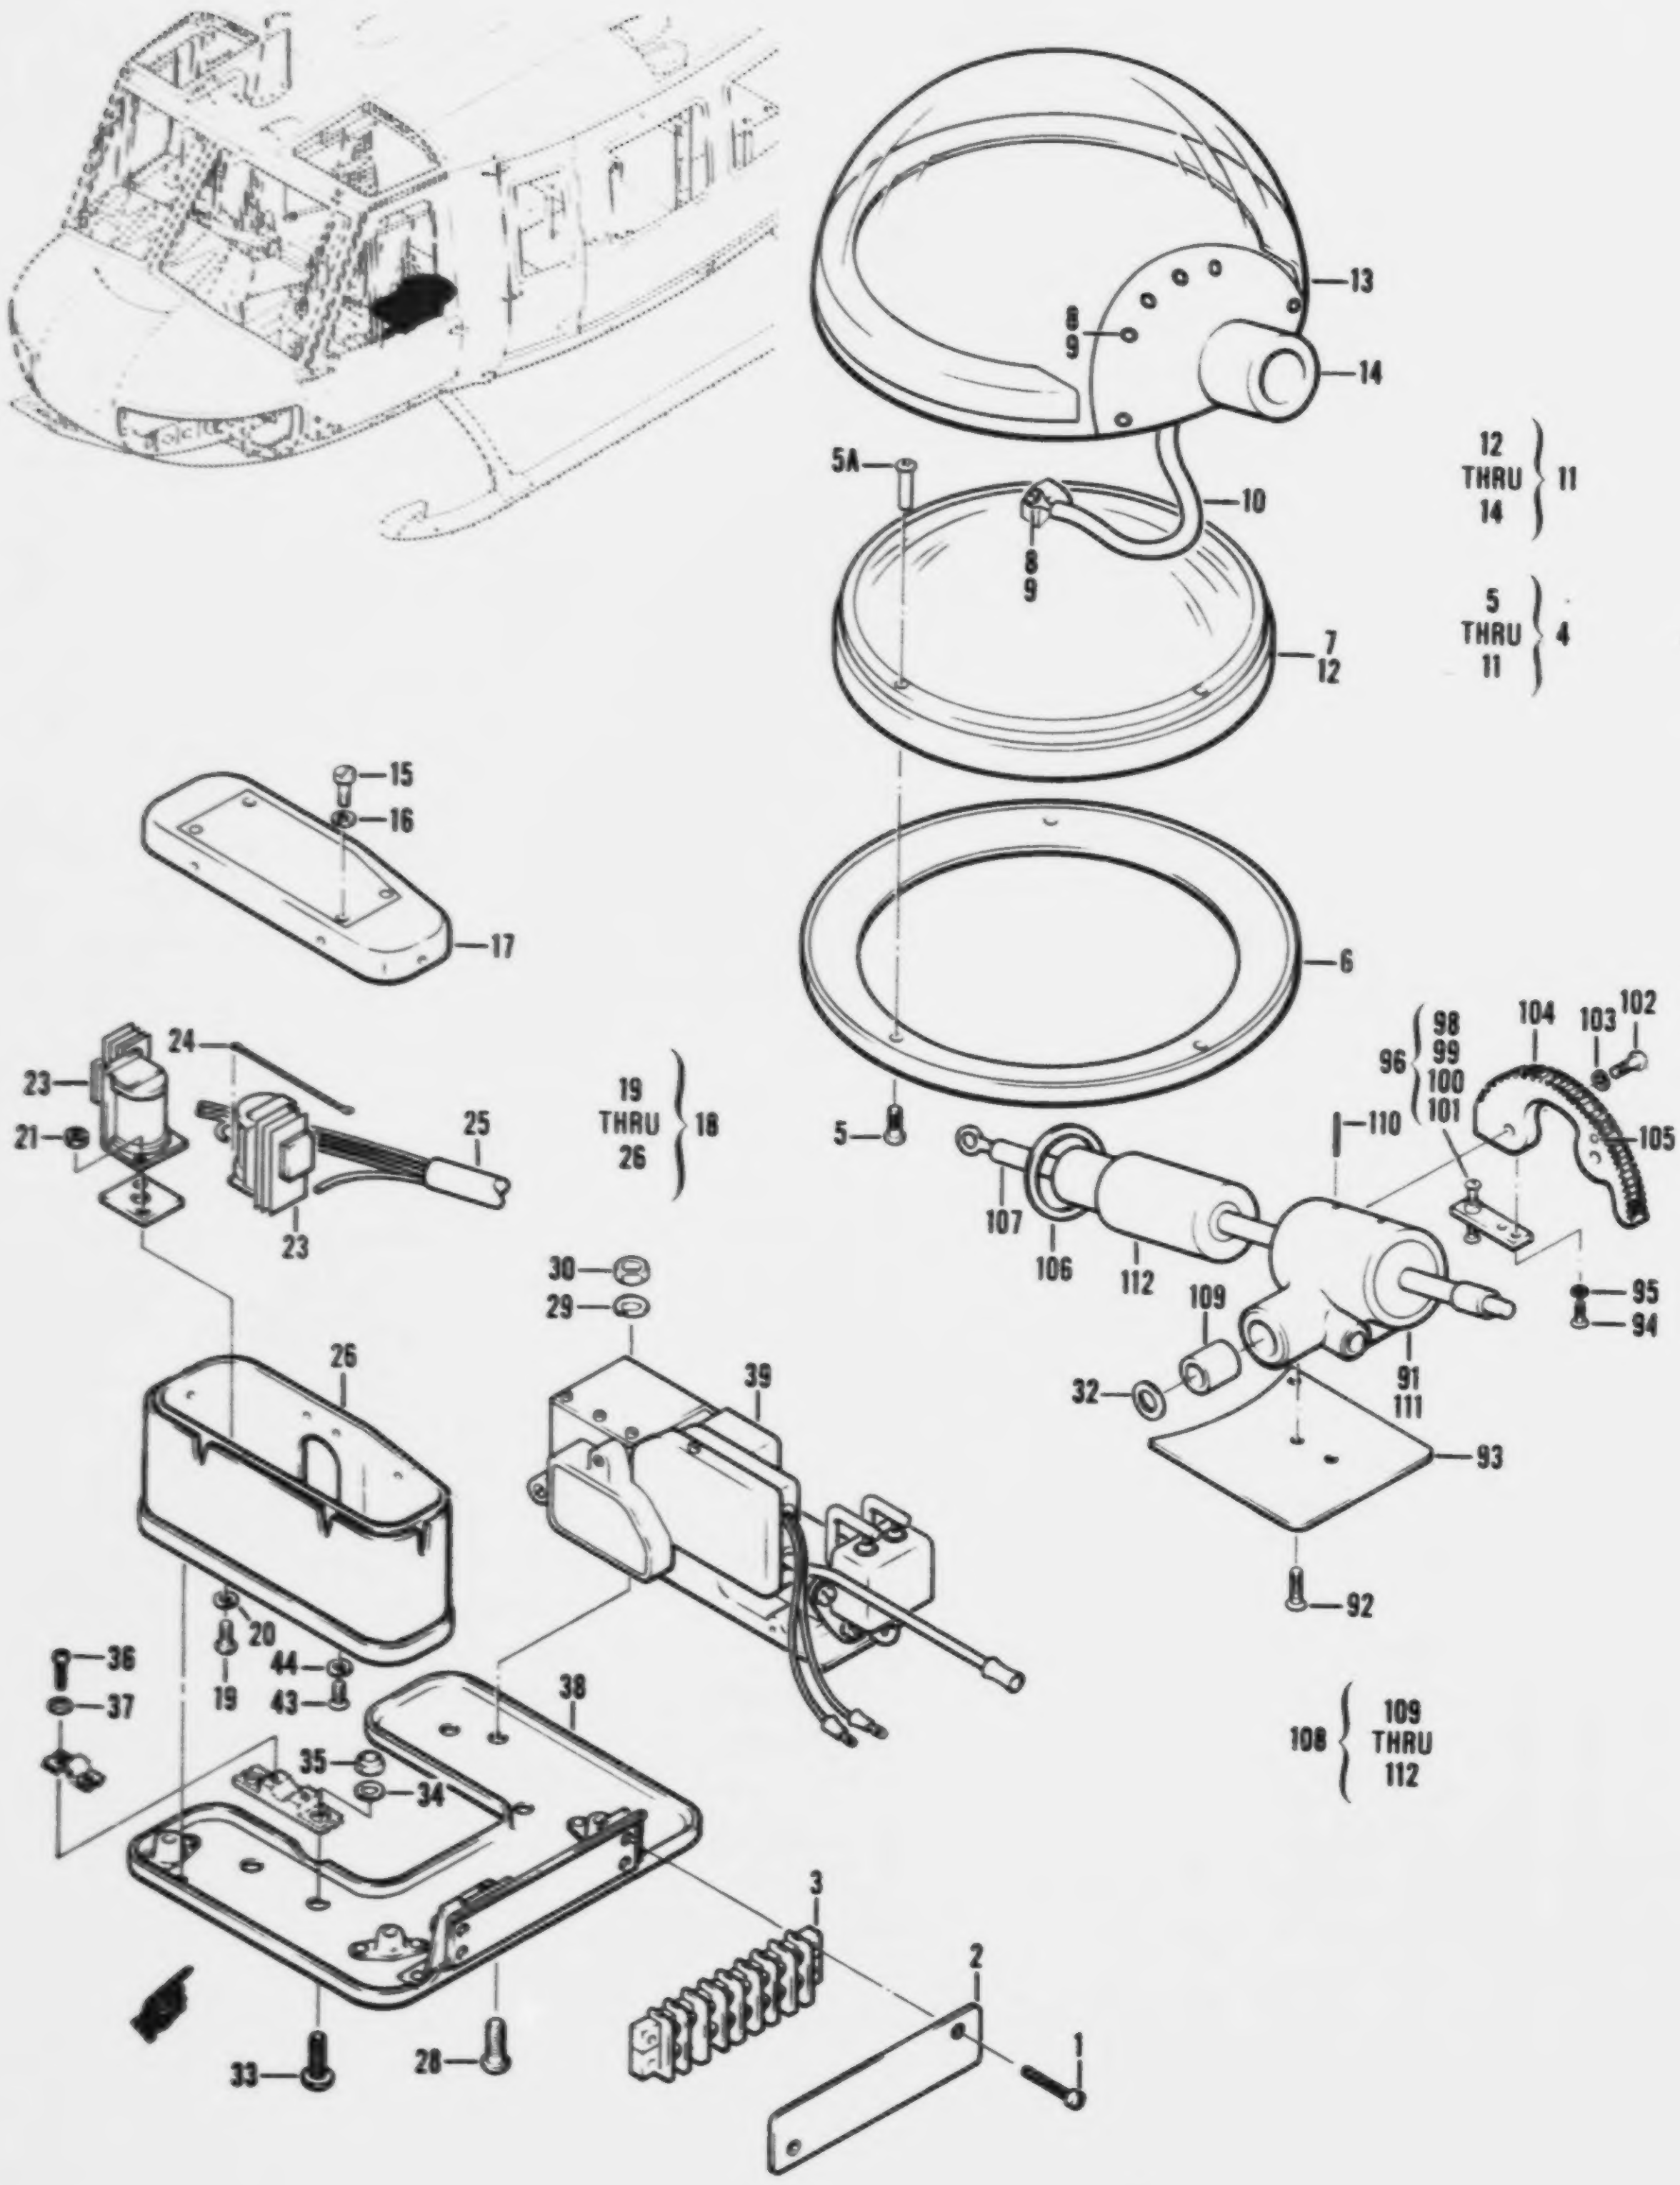
13
8
9
14
5A
10
8
9
12
THRU
14
11
5
THRU
11
4
7
12
15
16
17
6
98
99
100
101
96
104
103
102
24
23
21
25
19
THRU
26
18
5
110
105
107
106
112
23
95
94
109
30
29
26
39
32
91
111
93
92
36
20
37
19
44
43
38
108
109
THRU
112
35
34
3
2
1
33
28

Figure 244. Light, Landing (Sheet 1 of 2)

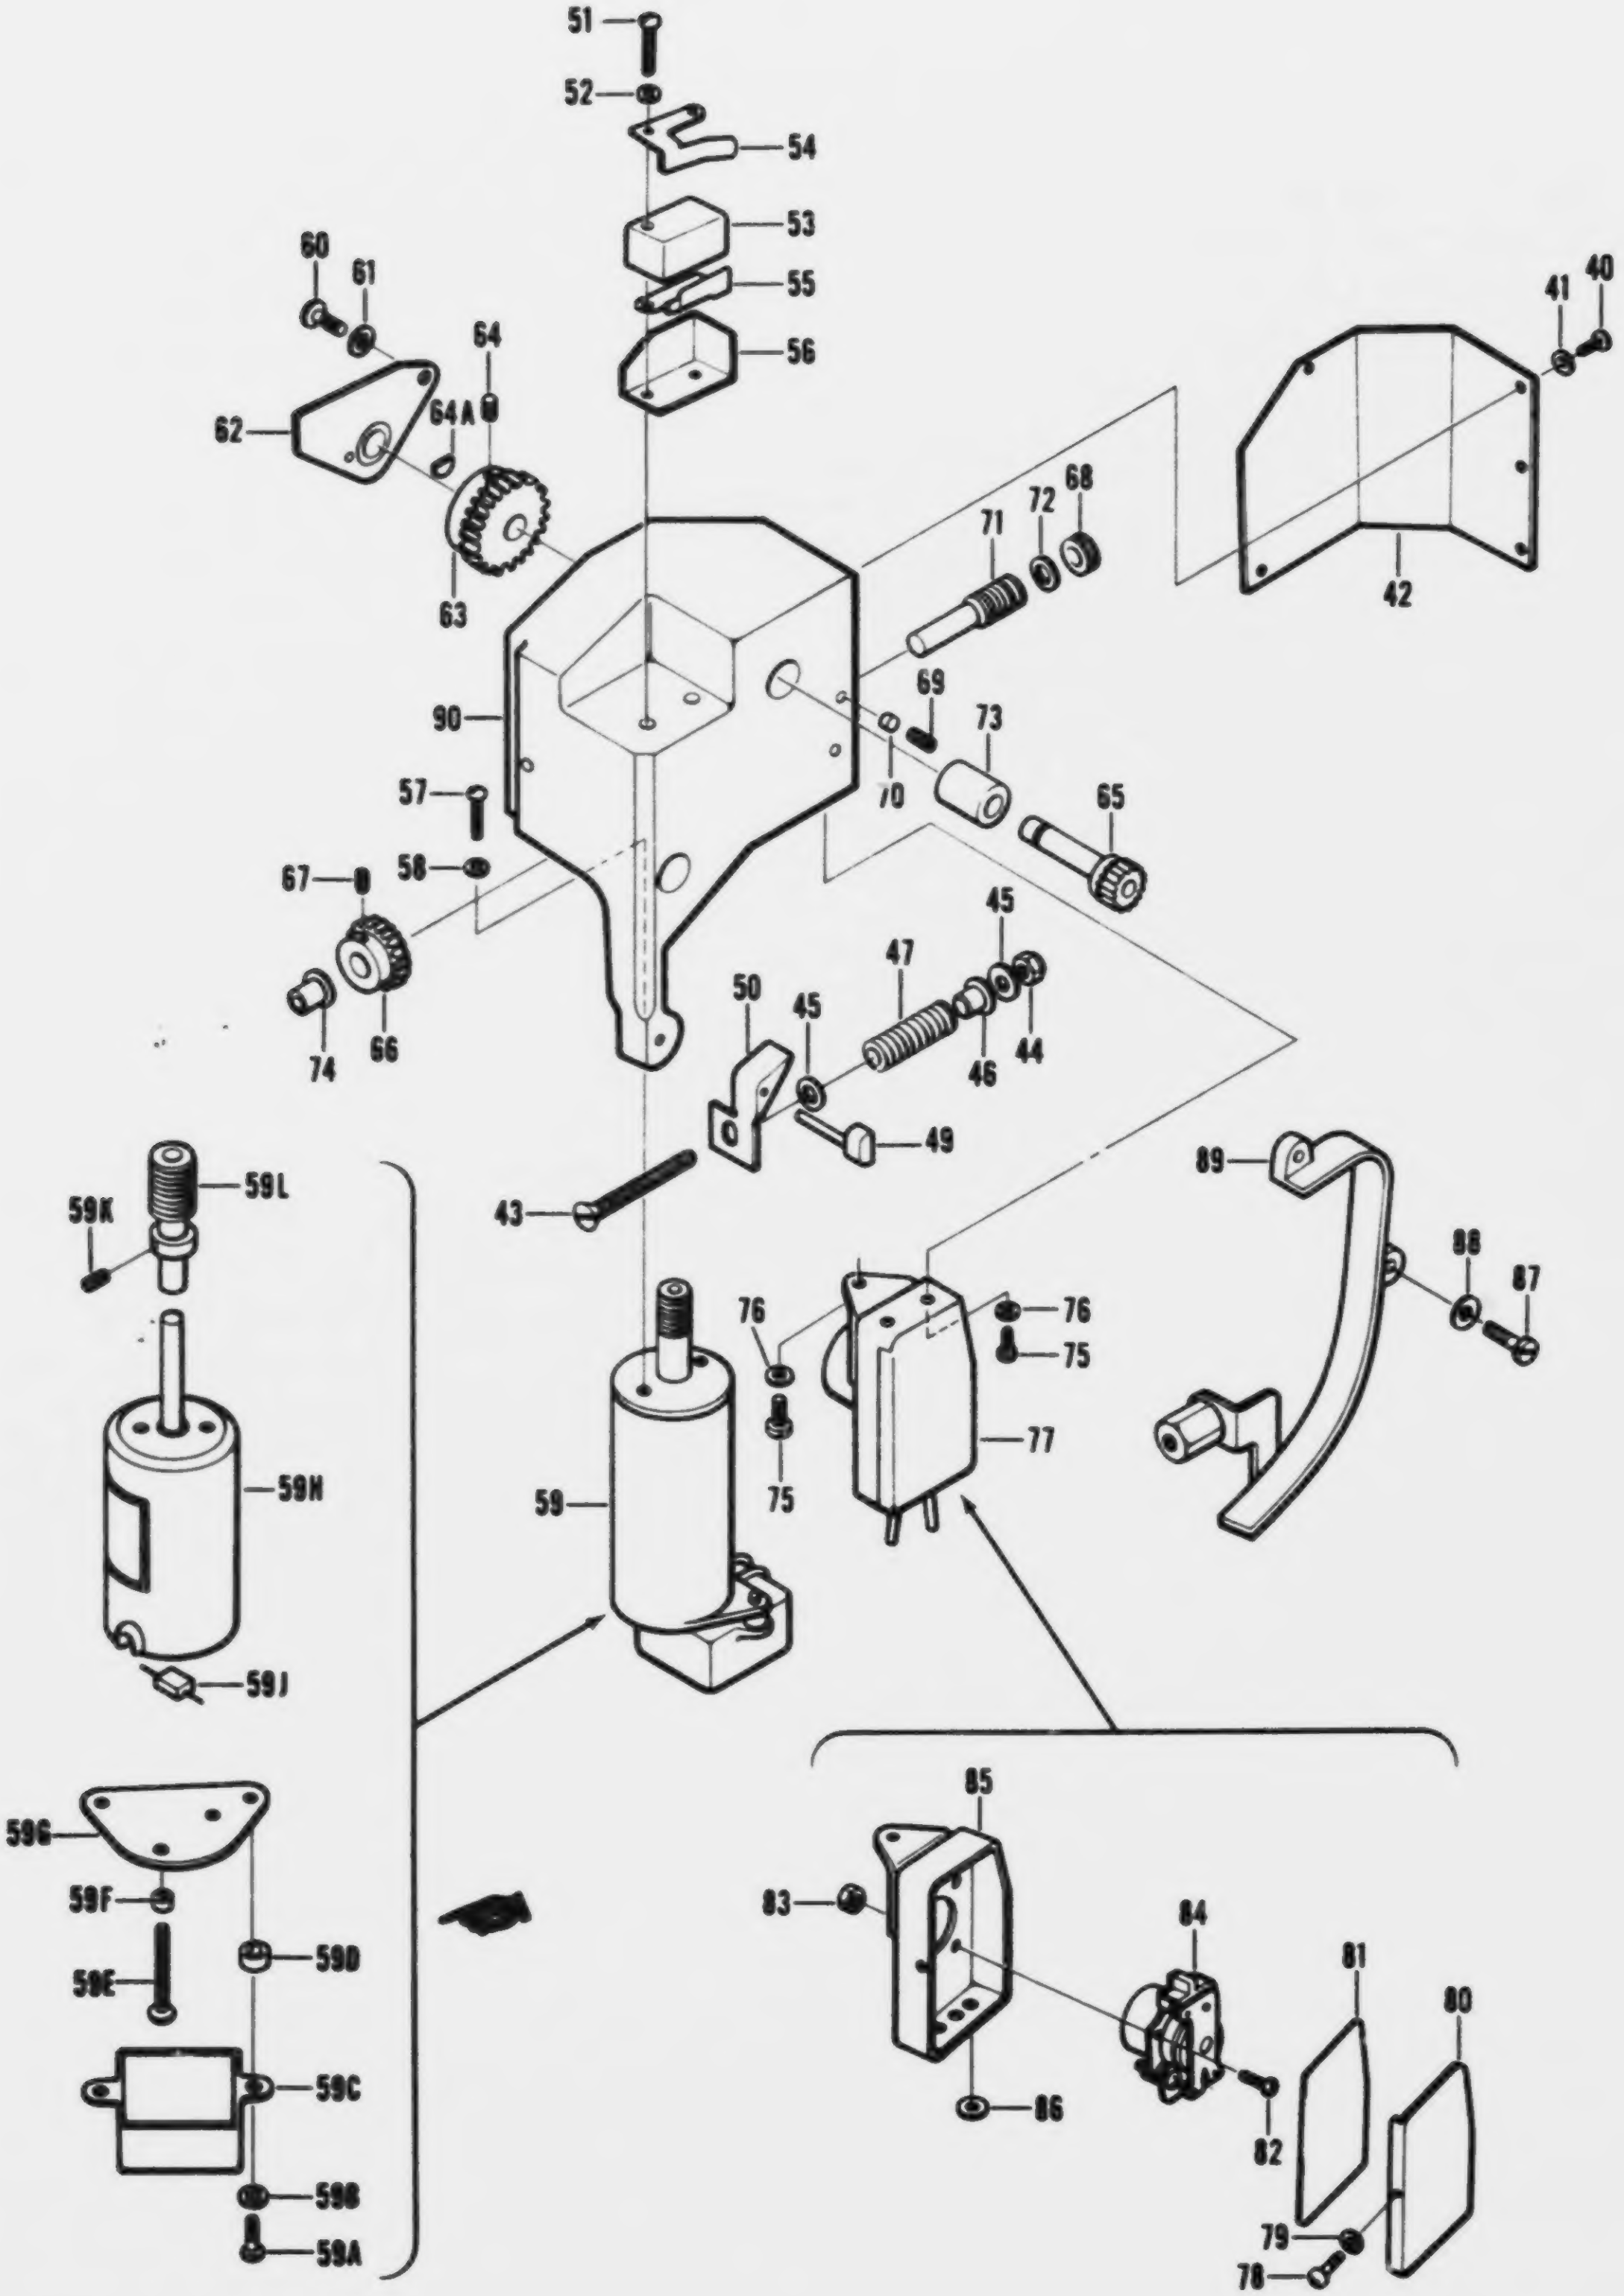
51
52
54
53
55
56
60
61
64
64A
62
63
40
41
42
71
72
68
90
69
73
70
65
57
58
67
66
74
45
47
50
45
46
44
49
89
88
87
59L
59K
43
76
76
75
75
77
59H
59
59J
85
59G
59F
59D
59E
83
84
81
80
59C
86
82
59B
59A
79
78

Figure 244. Light, Landing (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
244		PAOFF	6220-00-075-1989	72914	G8385-1	LIGHT,LANDING,AIRCR	UHE,UHH,UHM,UHV,UHX	EA	1
244	1	PBFZZ	5305-00-151-0382	88044	AN500A6-18	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
244	2	PAFZZ	5940-00-672-1607	72914	A-6881	.COVER,TERMINAL BOAR	UHE,UHH,UHM,UHV,UHX	EA	1
244	3	PAFZZ	5940-00-446-2856	72914	A6906	.TERMINAL BOARD	UHE,UHH,UHM,UHV,UHX	EA	1
244	4	PAFZZ	6220-00-506-1301	72914	D6924	.CANOPY AND LAMP ASS	UHE,UHH,UHM,UHV,UHX	EA	1
244	5	PAFZZ	5305-00-957-7820	96906	MS24693S31	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
244	5A	PAOZZ	5310-00-059-0849	21450	590849	..NUT,SELF-LOCKING	UHE,UHH,UHM,UHV,UHX	EA	3
244	6	PAFZZ	6220-00-524-6444	72914	B-6702	..RING,RETAINING,LAMP	UHE,UHH,UHM,UHV,UHX	EA	1
244	7	PAFZZ	6240-00-557-3065	96906	MS25241-4581	..LAMP, INCANDESCENT	UHE,UHH,UHM,UHV,UHX	EA	1
244	8	PAOZZ	5305-00-984-6226	96906	MS35206-240	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
244	9	PAFZZ	5310-00-559-0070	96906	MS35333-38	..WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	2
244	10	PBFZZ	6220-00-448-9597	72914	A6910	..LEAD,ELECTRICAL	UHE,UHH,UHM,UHV,UHX	EA	1
244	11	XDFFF		72914	D6923	..CANOPY,LIGHT	UHE,UHH,UHM,UHV,UHX	EA	1
244	12	XAFZZ		72914	B6701	...RING	UHE,UHH,UHM,UHV,UHX	EA	1
244	13	XAFZZ		72914	D6703	...CANOPY	UHE,UHH,UHM,UHV,UHX	EA	1
244	14	XAFZZ		72914	D6902	...SUPPORT	UHE,UHH,UHM,UHV,UHX	EA	1
244	15	PAFZZ	5305-00-984-4983	96906	MS35206-226	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
244	16	PAFZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	2
244	17	XDFZZ	6220-00-448-9599	72914	B6535-4	.RELAY BOX ASSEMBLY	UHE,UHH,UHM,UHV,UHX	EA	1
244	18	AFFZZ	5945-00-488-7540	72914	20164	.RELAY AND BASE	UHE,UHH,UHM,UHV,UHX	EA	1
244	19	PAFZZ	5305-00-543-2023	96906	MS35265-25	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
244	20	PAFZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	4
244	21	XBFZZ	5310-00-043-2499	72914	A6929	..NUT,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	2
244	23	PAFZZ	5945-00-642-2955	72914	A-6887-1	..RELAY,ELECTROMAGNET	UHE,UHH,UHM,UHV,UHX	EA	2
244	24	PAFZZ	6220-00-536-1266	72914	A-3969	..CONNECTOR STRAP	UHE,UHH,UHM,UHV,UHX	EA	2
244	25	PAFZZ	6220-00-226-1794	72914	20117	..WIRE ASSEMBLY,LD	UHE,UHH,UHM,UHV,UHX	EA	1
244	26	XBFZZ	6220-00-448-9600	72914	B6905	..MOUNTING PLATE,RELA	UHE,UHH,UHM,UHV,UHX	EA	1
244	28	PAFZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
244	29	PAFZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	1
244	30	PAFZZ	5310-00-934-9747	96906	MS35649-262	.NUT,PLAIN,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	1
244	32	PAFZZ	5310-00-799-6288	72914	A6926	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	2
244	33	PAFZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
244	34	PAFZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	2
244	35	PAFZZ	5310-00-934-9747	96906	MS35649-262	.NUT,PLAIN,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	2
244	36	PAFZZ	5305-00-889-3116	96906	MS35206-213	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
244	37	PAFZZ	5310-00-543-2410	96906	MS35338-40	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	2
244	38	XBFZZ	6220-00-524-6446	72914	D6542	.PLATE ASSY,LANDI	UHE,UHH,UHM,UHV,UHX	EA	1
244	39	PAFFF	6220-00-524-6447	72914	D6890-1	.GEAR BOX,ASSEMBLY	UHE,UHH,UHM,UHV,UHX	EA	1
244	40	PAFZZ	5305-00-889-3118	96906	MS35206-203	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	4
244	41	PAFZZ	5310-00-579-5554	96906	MS35333-35	..WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	4
244	42	PAFZZ	6220-00-506-1300	72914	B-6938	..COVER,LANDING,LIGHT	UHE,UHH,UHM,UHV,UHX	EA	1
244	43	PAFZZ	5305-00-930-1577	96906	MS24693S34	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
244	44	PAFZZ	5310-00-081-8087	96906	MS21044N06	..NUT,SELF-LOCKING,HE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	45	PAFZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	46	PAFZZ	5325-00-015-3035	01881	E3462	..EYELET,METALLIC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	47	PAFZZ	6220-00-830-4685	72914	A6946	..SPRING,BUMPER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	49	PAFZZ	6220-00-980-7296	72914	A6933	..SHAFT,BUMPER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	50	PAFZZ	6220-00-980-7297	72914	A6934	..BUMPER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	51	PAFZZ	5305-00-959-1713	96906	MS35206-209	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	52	PAFZZ	5310-00-579-5554	96906	MS35333-35	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	53	PAFZZ	5930-00-646-4619	96906	MS25085-1	..SWITCH,SENSITIVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	54	PBFZZ	5930-00-536-0783	72914	A6948	..ADAPTER,SWITCH ACTU	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	55	PAFZZ	5930-00-536-0782	72914	A6947	..ADAPTER,SWITCH ACTU	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	56	PAFZZ	5970-00-980-7295	72914	A-6932	..INSULATOR,SWITCH	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	57	PAFZZ	5305-00-889-2998	96906	MS35206-216	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	58	PAFZZ	5310-00-193-7577	96906	MS35333-36	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	59	PAFZZ	6105-00-226-1827	72914	B6529-1	..MOTOR,ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	59A	PAFZZ	5305-00-993-0190	96906	MS35206-214	...SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	59B	PAFZZ	5310-00-579-0079	96906	MS35333-37	...WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	59C	PBFZZ	5915-00-503-3873	72914	A6907	...FILTER,RADIO FREQUE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	59D	PBFZZ	5365-00-043-0248	72914	A5991	...SPACER,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	59E	PAFZZ	5305-00-984-4977	96906	MS35206-220	...SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	59F	PAFZZ	5970-00-892-0970	72914	A6872	...INSULATION SLEEVING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	59G	PAFZZ	6625-00-017-2642	72914	A9116-2	...ABSORBER,RADIO FREQ	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	59H	PBFZZ	6105-00-635-5878	72914	A6532	...MOTOR,DIRECT CURREN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	59J	PBFZZ	5910-00-717-0169	81349	CM15FD101G03	....CAPACITOR,FIXED,MIC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	59K	PAFZZ	5305-00-717-6950	96906	MS51963-9	...SETSCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	59L	PAFZZ	3020-00-141-8184	72914	A6577	...GEAR,WORM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	60	PAFZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	61	PAFZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	62	PAFZZ	3130-00-326-5591	72914	A6954	..BEARING AND BRID	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	63	PAFZZ	3020-00-141-8514	72914	A6580	..GEAR,WORM WHEEL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	64	PAFZZ	5305-00-719-5339	96906	MS51963-22	..SETSCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	64A	PAFZZ	5315-00-616-5519	96906	MS35756-1	..KEY,WOODRUFF	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	65	PAFZZ	6220-00-326-5587	72914	A6573	..PINION GEAR AND SHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	66	PAFZZ	3020-00-204-2804	72914	A6582	..GEAR,WORM WHEEL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	67	PAFZZ	5305-00-719-5330	96906	MS51963-21	..SETSCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	68	PAFZZ	3110-00-446-2889	72914	A7798	..BEARING AND END THR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	69	PAFZZ	5305-00-719-5330	96906	MS51963-21	..SETSCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	70	PAFZZ	6220-00-758-9785	72914	A8552A2	..INSERT,NYLON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	71	PAFZZ	6220-00-830-4688	72914	A6585A	..WORM AND SHAFT ASSE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	72	PAFZZ	3110-00-155-9137	05469	FT01-088	..BEARING,BALL,THRUST	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	73	PAFZZ	3120-00-286-1221	72914	A6944-1	..BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	74	PAFZZ	3120-00-826-8641	72914	A6873	..BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
244	75	PAFZZ	5305-00-984-4983	96906	MS35206-226	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
244	76	PAFZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
244	77	PAFZZ	6220-00-326-5594	72914	B6880	..ELECTRONIC COMPONEN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	78	PAFZZ	5305-00-762-7482	96906	MS35206-202	...SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	79	PAFZZ	5310-00-579-5554	96906	MS35333-35	...WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	80	XBFZZ	6220-00-860-9425	72914	A6878	...COVER,LAMP RELAY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	81	XDFZZ		72914	A6877	...INSULATOR,PLATE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	82	PAFZZ	5305-00-889-2997	96906	MS35206-215	...SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	83	PAFZZ	5310-00-088-0551	96906	MS21044N04	...NUT,SELF-LOCKING,HE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	84	PAFZZ	6220-00-830-4687	72914	A-6870	...RELAY,ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	85	XDFZZ		72914	A6879	...HOUSING,LAMP REL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	86	PAFZZ	5325-00-185-0017	96906	MS35489-33	...GROMMET,NONMETALLIC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	87	PAFZZ	5305-00-064-6652	96906	MS51957-28	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	88	PAFZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	89	XDFZZ		72914	A9106-1	..GEAR COVER ASSEM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	90	XDFZZ		72914	D6903-1	..GEAR BOX,LIGHT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	91	AFFZZ	6220-00-886-1791	72914	20721	.CASTING ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	92	PAFZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	93	MFFZZ	6220-00-620-2602	72914	A6915	..COVER,LANDING LIGHT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	94	PAFZZ	5305-00-889-3116	96906	MS35206-213	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	95	PAFZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	96	PAFZZ	6220-00-520-2600	72914	A6540	..ACTUATOR ASSEMBLY,L	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	98	XDFZZ		72914	A6539	...BUTTON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	99	MFFZZ	5305-00-944-2570	72914	A6541	...SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	100	PBFZZ	5310-00-995-0395	10001	59A5A176-2	...NUT,SELF-LOCKING,CL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	101	XDFZZ		72914	A6538	...PLATE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	102	PAFZZ	5305-00-837-3343	96906	MS24693S28	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	103	PAFZZ	5310-00-550-0284	96906	MS35336-9	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
244	104	PAFZZ	6220-00-326-5595	72914	B6921	..SECTOR GEAR,CONT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	105	PAOZZ	6220-00-066-9575	72914	A-6922	...BUTTON,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	106	PAFZZ	5310-00-663-6880	72914	A6920	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	107	XDFZZ		72914	10161	..WIRE ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	108	XBFZZ	6220-00-488-7539	72914	20163	..CASTING ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	109	PAFZZ	3120-00-896-6319	72914	A2728-3	...BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	110	PAFZZ	5315-00-068-9698	96906	MS171433	...PIN,SPRING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	111	XBFZZ	6220-00-110-8921	72914	20121	...MAIN CASTING,RETRAC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
244	112	XBFZZ	1680-00-413-2517	72914	10162	...ADAPTOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

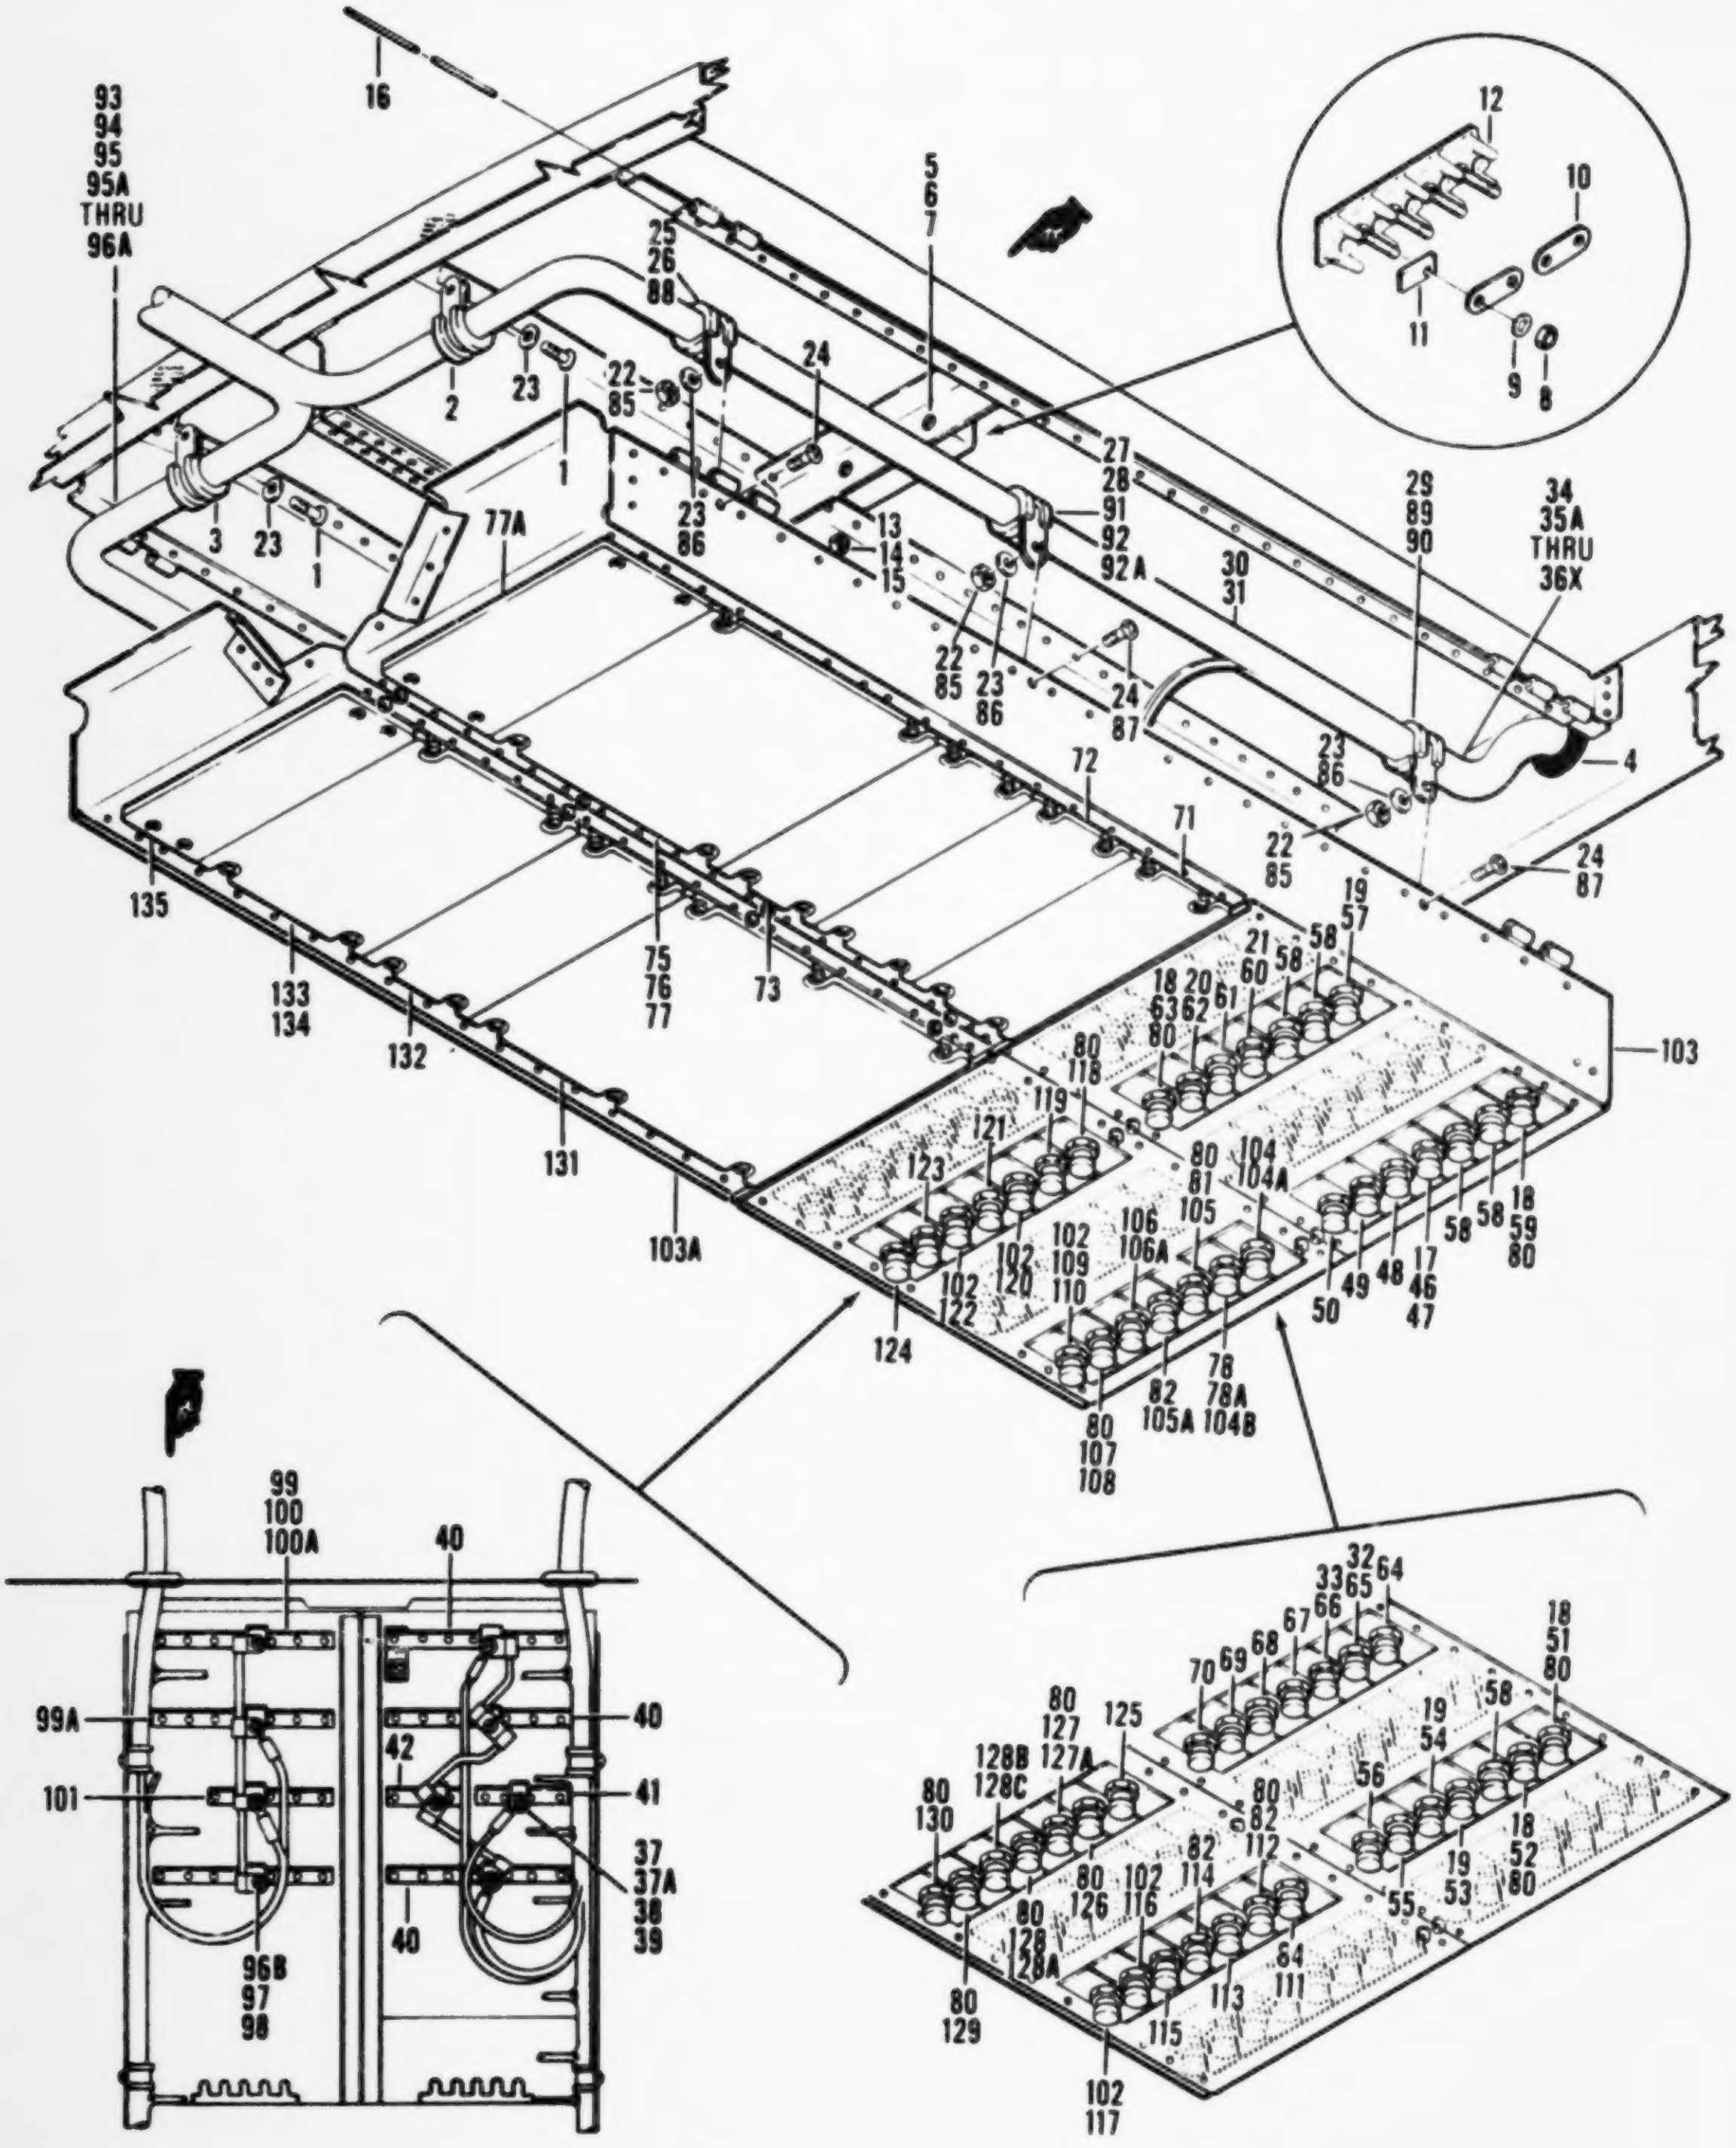
16
93
94
95
95A
THRU
96A
5
6
7
12
10
11
9
8
25
26
88
2
23
1
22
85
24
3
23
1
77A
23
86
13
14
15
27
28
91
92
92A
30
31
29
89
90
34
35A
THRU
36X
22
85
23
86
24
87
4
72
71
23
86
22
85
24
87
135
133
134
132
131
103A
75
76
77
73
19
57
58
21
60
18
63
20
62
61
58
80
80
118
119
121
123
103
80
81
105
104
104A
106
106A
102
109
110
102
120
102
122
18
59
80
58
58
17
46
47
48
49
50
124
78
78A
104B
82
105A
80
107
108
99
100
100A
40
99A
40
101
42
41
37
37A
38
39
40
96B
97
98
32
33
65
64
66
67
68
69
70
18
51
80
80
127
127A
125
128B
128C
80
130
19
54
58
56
80
82
112
80
126
102
116
82
114
80
128
128A
18
52
80
19
53
55
64
111
113
115
80
129
102
117

Figure 245. Console Installation, Electrical Overhead

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
245		XCFZZ		97499	204-075-113-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 60-3546 THRU 60-3619 SEE FIG 225 FOR NHA .... UHB	EA	1
245		XCFZZ		97499	204-075-113-7	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 61-686 THRU 61-803 SEE FIG 225 FOR NHA .... UHB	EA	1
245		XCFZZ		97499	204-075-113-13	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 62-1872 THRU 62-12555 SEE FIG. 225 FOR NHA .... UHB	EA	1
245		XCFZZ		97499	205-075-141-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 62-2106 THRU 62-12372 SEE FIG 226 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
245	1	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE .... UHB,UHE,UHH,UHV,UHX	EA	2
245	2	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP .... UHB,UHE,UHH,UHV,UHX	EA	1
245	3	PAOZZ	5340-00-954-6826	81996	EAB700D8	.CLAMP,LOOP .... UHB,UHE,UHH,UHV,UHX	EA	2
245	4	PAOZZ	5325-00-276-6343	96906	MS35489-23	.GROMMET,NONMETALLIC .... UHB,UHE,UHH,UHV,UHX	EA	2
245	5	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHE,UHH,UHV,UHX	EA	4
245	6	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT .... UHB,UHE,UHH,UHV,UHX	EA	4
245	7	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE .... UHB,UHE,UHH,UHV,UHX	EA	4
245	8	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE .... UHB,UHE,UHH,UHV,UHX	EA	8
245	9	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT .... UHB,UHE,UHH,UHV,UHX	EA	8
245	10	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR .... UHB,UHE,UHH,UHV,UHX	EA	4
245	11	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE .... UHB,UHE,UHH,UHV,UHX	EA	4
245	12	XDOZZ		96906	MS27212-1-4	.TERMINAL BOARD .... UHB,UHE,UHH,UHV,UHX	EA	2
245	13	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE .... UHB,UHE,UHH,UHV,UHX	EA	1
245	14	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHE,UHH,UHV,UHX	EA	3
245	15	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHB,UHE,UHH,UHV,UHX	EA	1
245	16	XDOZZ		96906	MS20253-2-245	.PIN,STRAIGHT,HEA .... UHB,UHE,UHH,UHV,UHX	EA	2
245		XCFZZ		97499	204-075-113-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-113-1 SEE FIG 247 FOR BALANCE OF BREAKDOWN .... UHB	EA	1
245		XCFZZ		97499	204-075-113-17	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-113-7 SEE FIG 247 FOR BALANCE OF BREAKDOWN .... UHB	EA	1
245		XCFZZ		97499	204-075-113-15	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-113-13 SEE FIG.247 FOR BALANCE OF BREAKDOWN .... UHB	EA	1
245		XCFZZ		97499	205-075-141-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-141-1 SEE FIG.247 FOR BALANCE OF BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
245	17	PBOZZ	5925-00-686-3297	96906	MS25244-5	..CIRCUIT BREAKER .... UHB,UHE,UHH,UHV,UHX	EA	V
245	18	PBOZZ	5925-00-681-4952	96906	MS25244-10	..CIRCUIT BREAKER .... UHB,UHE,UHH,UHV,UHX	EA	4
245	19	PAOZZ	5925-00-805-2833	96906	MS25244-25	..CIRCUIT BREAKER .... UHB,UHE,UHH,UHV,UHX	EA	3
245	20	PAOZZ	5925-00-686-3299	96906	MS25244-35	..CIRCUIT BREAKER .... UHB,UHE,UHH,UHV,UHX	EA	1
245	21	PAOZZ	5925-00-045-9095	76374	MP1501C	..CIRCUIT BREAKER .... UHB,UHE,UHH,UHV,UHX	EA	1
245	22	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING,HE .... UHB,UHE,UHH,UHV,UHX	EA	3
245	23	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT .... UHB,UHE,UHH,UHV,UHX	EA	3
245	24	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE .... UHB,UHE,UHH,UHV,UHX	EA	3
245	25	PAOZZ	5340-00-187-6023	96906	MS21122-6	..CLAMP,LOOP U/O PN 205-075-141-3 .... UHE,UHH,UHV,UHX	EA	1
245	26	PBOZZ	5340-00-145-8339	96906	MS21122C10	..CLAMP,LOOP U/O PN 204-075-113-3,-15,-17 .... UHB	EA	1
245	27	PAOZZ	5340-00-954-6826	81996	EAB700D8	..CLAMP,LOOP U/O PN 205-075-141-3 .... UHE,UHH,UHV,UHX	EA	1
245	28	PAOZZ	5340-00-993-5478	81996	EAB700D12	..CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	1
245	29	PAOZZ	5340-00-989-4573	81996	EAB700D16	..CLAMP,LOOP U/O PN 204-075-113-3,-15,-17 .... UHB	EA	1
245	30	AOOOZ	1560-00-731-8996	97499	204-075-423-1	..CABLE ASSY OVERHEAD CONSOLE AFT U/O PN 204-075-113-3 & -17 .... UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
245	31	AOOOZ	1560-00-987-1394	97499	204-075-447-5	..CABLE ASSY,OVERHEAD CONSOLE AFT U/O PN 204-075-113-15 ....UHB	EA	1
245	32	AOOOO		97499	205-075-434-13	..CABLE ASSY,ENGINE AIR. SEE FIG.100 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
245	33	AOOOZ	6150-00-916-2602	97499	205-075-434-9	..CABLE ASSY,ENGINE AIR FILTER. SEE FIG.99 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
245	34	AOOOZ	1560-00-567-2968	97499	205-075-406-11	..CABLE ASSY, WINDSHIELD WIPER-PILOT U/O PN 205-075-141-3 ....UHE,UHH,UHV,UHX	EA	1
245	35A	PAOZZ	5365-00-598-5282	96906	MS3420-4	...BUSHING,RUBBER U/O PN 204-075-406-11......UHE,UHH,UHV,UHX	EA	2
245	35B	PAOZZ	5365-00-820-4535	88044	AN3420-6	...BUSHING,RUBBER U/O PN 204-075-406-11......UHE,UHH,UHV,UHX	EA	1
245	35C	PAOZZ	5365-00-141-6944	88044	AN3420-8	...BUSHING,RUBBER U/O PN 204-075-406-11......UHE,UHH,UHV,UHX	EA	1
245	35D	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG..........UHB	EA	29
245	35E	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-406-11........UHE,UHH,UHV,UHX	EA	26
245	35F	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG U/O PN (UH-1B) PN 204-075-447-5 U/O PN 205-075-406-11 & 205-075-434-9..........UHB,UHE,UHH,UHV,UHX	EA	3
245	35G	PAOZZ	5940-00-204-8990	96906	MS25036-111	...TERMINAL,LUG..........UHB	EA	4
245	35H	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG..........UHB	EA	2
245	35I	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 205-075-406-11........UHE,UHH,UHV,UHX	EA	3
245	35J	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG..........UHB	EA	2
245	35K	PAOZZ	5940-00-113-8190	96906	MS25036-122	...TERMINAL,LUG..........UHB	PG	2
245	35L	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG..........UHB	EA	1
245	35M	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG..........UHB	EA	6
245	35N	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O PN 205-075-406-11........UHE,UHH,UHV,UHX	EA	16
245	35P	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG..........UHB	EA	3
245	35Q	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O PN 205-075-406-11. ......UHE,UHH,UHV,UHX	EA	23
245	35R	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG U/O PN 204-075-423-1..........UHB	EA	V
245	35S	PAOZZ	5940-00-143-5284	96906	MS25036-115	...TERMINAL,LUG..........UHB	EA	1
245	35T	PAOZZ	5940-00-557-4345	96906	MS25036-118	...TERMINAL,LUG..........UHB	EA	1
245	35U	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG..........UHB	EA	2
245	35V	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG U/O PN 205-075-406-11........UHE,UHH,UHV,UHX	EA	1
245	35W	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG U/O PN 204-075-447-5..........UHB	EA	1
245	35X	XDOZZ	5940-00-828-2809	96906	MS25189-7	...TERMINAL,LUG U/O PN 205-075-423-15........UHE,UHH,UHV,UHX	EA	1
245	35Y	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 205-075-434-9 ....UHB,UHE,UHH,UHV,UHX	EA	23
245	35Z	PAOZZ	5940-01-007-7876	81349	M7928/3-3	...SPLICE,CONDUCTOR..........UHB	EA	1
245	36	PAOZZ	5940-01-007-7877	81349	M7928/3-4	...SPLICE, CONDUCTO..........UHB	EA	1
245	36A	PBOZZ	5940-00-688-6005	96906	MS25036-143	...TERMINAL,LUG U/O PN 205-075-406-11....UHB,UHE,UHH,UHV,UHX	EA	1
245	36B	XDOZZ		97499	85T4-7-2	...INSULATION TUBE U/O (UH-1B) PN 204-075-423-1 ....UHB,UHE,UHH,UHV,UHX	FT	2
245	36C	MOOZZ		97499	85T4-375-46	...INSULATION TUBE U/O PN 204-075-423-1..........UHB	EA	1
245	36D	MOOZZ	5970-00-195-9548	97499	130-005-6-4	...INSULATION SLEEVING U/O PN 205-076-406-11 ....UHB,UHE,UHH,UHV,UHX	EA	1
245	36E	PAOZZ	5935-00-240-0173	96906	MS3057-4A	...CLAMP,CABLE,ELEC U/O PN 205-075-406-11....UHE,UHH,UHV,UHX	EA	1
245	36F	PAOZZ	6210-00-939-7609	96906	MS25041-4-327	...LIGHT,INDICATOR U/O PN 205-075-434-9 ....UHB,UHE,UHH,UHV,UHX	EA	1
245	36G	PAOZZ	5935-00-280-2195	96906	MS3057-6A	...CLAMP,CABLE,ELECTRI U/O PN 205-075-406-11 ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
245	36H	PAOZZ	5935-00-557-1863	96906	MS25183A10SL3S	...CONNECTOR,PLUG,ELEC ELECTRICAL U/O PN 205-075-434-9 & -13 ....UHB,UHE,UHH,UHV,UHX	EA	1
245	36J	PAOZZ	6145-00-845-5203	81349	M7078-5-20-1	...CABLE,SPECIAL PURPO USE-AFT-CMPL-W MWO 55-1520-211-30/35 ....UHB	FT	1
245	36K	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	...CONNECTOR,PLUG ELECTRICAL U/O PN 205-075-406-11 ....UHE,UHH,UHV,UHX	EA	1
245	36L	PBOZZ	5935-00-805-4991	96906	MS3106R14S7S	...CONNECTOR,PLUG,ELEC U/O PN 205-075-406-11 ....UHE,UHH,UHV,UHX	EA	1
245	36M	PBOZZ	5935-00-819-6056	96906	MS3106R16S8S	...CONNECTOR,PLUG,ELEC U/O PN 205-075-406-11 ....UHE,UHH,UHV,UHX	EA	1
245	36N	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	...CONNECTOR,PLUG,E U/O PN 205-075-406-11....UHE,UHH,UHV,UHX	EA	1
245	36P	PAOZZ	5935-00-087-0053	96906	MS3110E8-4S	...CONNECTOR,RECEPT U/O PN 205-075-406-11....UHE,UHH,UHV,UHX	EA	1
245	36Q	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	...WIRE,ELECTRICAL U/O PN 205-075-406-11 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	36R	PBOZZ	6145-00-284-0657	96906	MS25190B8	...WIRE,ELECTRICAL U/O PN 205-075-406-11 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	36S	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	...WIRE,ELECTRICAL U/O PN 205-075-406-11 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	36T	PBOZZ	6145-00-578-6604	81349	M5086/2-14-9	...WIRE,ELECTRICAL........UHB	FT	V
245	36U	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	...WIRE,ELECTRICAL U/O PN 205-075-406-11 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	36V	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	...WIRE,ELECTRICAL U/O PN 205-075-406-11 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	36W	PBOZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL U/O PN 205-075-406-11 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	36X	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	...WIRE,ELECTRICAL........UHB	FT	V
245	37	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT........UHB,UHE,UHH,UHV,UHX	EA	5
245	37A	PAOZZ	5305-00-989-7435	96906	MS35207-264	..SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	5
245	38	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE........UHB	EA	5
245	39	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHE,UHH,UHV,UHX	EA	5
245	40	XDOZZ		97499	204-075-264-1	..BUS BAR........UHB,UHE,UHH,UHV,UHX	EA	3
245	41	XBOZZ	6150-00-897-5980	97499	204-075-264-7	..BUS,CONDUCTOR........UHB,UHE,UHH,UHV,UHX	EA	1
245	42	MDOZZ	6150-00-846-1669	97499	204-075-264-9	..BUS,CONDUCTOR........UHB,UHE,UHH,UHV,UHX	EA	1
245	46	XBOZZ	1560-00-922-8261	97499	204-075-289-5	..PLATE,IDENTIFICATIO MARKER BEACON U/O 204-075-113-3....UHB	EA	1
245	47	PAOZZ	9905-00-939-8197	97499	204-075-289-137	..PLATE,IDENTIFICATIO MARKER BEACON U/O PN 204-075-113-17,-15 & 204-075-141-3........UHB,UHE,UHH,UHV,UHX	EA	1
245	48	XBOZZ		97499	204-075-289-7	..NAMEPLATE-OMNI ARN........UHB,UHE,UHH,UHV,UHX	EA	1
245	49	XBOZZ	9905-00-241-9721	97499	204-075-289-9	..PLATE,IDENTIFICATIO RADIO COMPASS........UHB	EA	1
245	50	XBOZZ		97499	204-075-289-11	..NAMEPLATE-INTERCOM........UHB,UHE,UHH,UHV,UHX	EA	1
245	51	XBOZZ		97499	204-075-289-19	..NAMEPLATE-WINDSHIED WIPER........UHB,UHE,UHH,UHV,UHX	EA	1
245	52	PBOZZ	1560-00-872-7907	97499	204-075-289-67	..PLATE,IDENTICATION PITOT TUBE HEATER ....UHB,UHE,UHH,UHV,UHX	EA	1
245	53	XBOZZ	1560-00-128-6663	97499	204-075-289-21	..PLATE,IDENTIFICATIO SEARCHLIGHT POWER ....UHB,UHE,UHH,UHV,UHX	EA	1
245	54	XBOZZ	1560-00-128-6665	97499	204-075-289-23	..PLATE,IDENTIFICATIO LANDING LIGHT POWER ....UHB,UHE,UHH,UHV,UHX	EA	1
245	55	XBOZZ	1560-00-128-6669	97499	204-075-289-25	..PLATE,IDENTIFICATIO LANDING & SEARCH LIGHT CONTROL ....UHB,UHE,UHH,UHV,UHX	EA	1
245	56	XBOZZ	9905-00-851-9084	97499	204-075-289-27	..PLATE,IDENTIFICATIO ANTI-COLLISION LIGHT ....UHB,UHE,UHH,UHV,UHX	EA	1
245	57	XBOZZ		97499	204-075-289-43	..NAMEPLATE-HEATED BLANKET........UHB,UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
245	58	PAOZZ	9905-00-944-1740	97499	204-075-289-1	..PLATE,MARKING,BLANK.........UHB,UHE,UHH,UHV,UHX	EA	V
245	59	PAOZZ	9905-00-939-7692	97499	204-075-289-361	..PLATE,IDENTIFICATIO ENGINE AIR FILTER CONTROL ....UHB,UHE,UHH,UHV,UHX	EA	1
245	60	XBOZZ	1560-00-128-6689	97499	204-075-289-45	..PLATE,IDENTIFICATIO VOLTMETER NON ESSENTIAL BUS ....UHB,UHE,UHH,UHV,UHX	EA	1
245	61	XBOZZ	9905-00-903-3527	97499	204-075-289-47	..PLATE,INSTRUCTION BLEED AIR HEATING...UHB,UHE,UHH,UHV,UHX	EA	1
245	62	XBOZZ	9905-00-903-5808	97499	204-075-289-49	..PLATE,IDENTIFICATIO CABIN HEATER POWER ....UHB,UHE,UHH,UHV,UHX	EA	1
245	63	XBOZZ	1560-00-128-6690	97499	204-075-289-51	..PLATE,IDENTIFICATIO HEATER CONTROL.....UHB,UHE,UHH,UHV,UHX	EA	1
245	64	XBOZZ	1560-00-128-6693	97499	204-075-289-69	..PLATE,IDENTIFICATIO FORCE TRIM.......UHB,UHE,UHH,UHV,UHX	EA	1
245	65	XBOZZ	1560-00-128-6695	97499	204-075-289-71	..PLATE,IDENTIFICATIO HYDRAULIC CONTROL ....UHB,UHE,UHH,UHV,UHX	EA	1
245	66	XBOZZ	9905-00-128-6697	97499	204-075-289-73	..PLATE,IDENTIFICATIO TURN & SLIP INDICATOR ....UHB,UHE,UHH,UHV,UHX	EA	1
245	67	XBOZZ		97499	204-075-289-75	..NAMEPLATE-J2 COMPAS INDICATOR.........UHB,UHE,UHH,UHV,UHX	EA	1
245	68	XBOZZ	1560-00-128-6699	97499	204-075-289-77	..PLATE,IDENTIFICATIO FIRE DETECTOR.....UHB,UHE,UHH,UHV,UHX	EA	1
245	69	XBOZZ	1560-00-128-6701	97499	204-075-289-79	..PLATE,IDENTIFICATIO TEMPERATURE INDICATOR, ENGINE & TRANSMISSION.........UHB,UHE,UHH,UHV,UHX	EA	1
245	70	XBOZZ	1560-00-128-6703	97499	204-075-289-81	..PLATE,IDENTIFICATIO ENGINE ANTI-ICE....UHB,UHE,UHH,UHV,UHX	EA	1
245	71	XBOOO	1680-00-854-2249	97499	204-075-702-1	..PANEL ASSY,DOME LIGHT SEE FIG.247 FOR BREAKDOWN ....UHB,UHE,UHH,UHV,UHX	EA	1
245	72	XBOOO	1680-00-133-6834	97499	204-075-220-1	..PANEL ASSY,EXTERIOR LIGHT U/O (UH-1B) PN 204-075-113-3,-15,-17 SEE FIG.247 FOR BREAKDOWN.........UHB,UHE,UHH,UHV,UHX	EA	1
245	73	PBOOO	6110-00-868-4851	97499	204-075-209-9	..PANEL ASSY, MISCELLANEOUS CONTROL U/O (UH-1B) PN 204-075-113-3,-15,-17 SEE FIG.247 FOR BREAKDOWN ....UHB,UHE,UHH,UHV,UHX	EA	1
245	75	XBOOO		97499	204-075-703-1	.CONTROL ASSY HEATING U/O PN 204-075-113-3 & -17 SEE FIG. 249 FOR BREAKDOWN.........UHB	EA	1
245	76	PBOOO	1560-00-867-1186	97499	205-075-201-3	..CONTROL ASSY, HEATING U/O (UH-1B) PN 204-075-113-15....UHB	EA	1
245	77	PBOOO	1560-00-915-5968	97499	205-075-201-1	..PANEL ASSY,HEATING CONTROL U/O PN 205-075-141-3 SEE FIG 250 FOR BREAKDOWN.........UHE,UHH,UHV,UHX	EA	1
245	77A	PAOOO	5905-00-052-2255	97499	204-075-704-1	..RESISTER ASSY, WINDSHIELD WIPER AND NAVIGATION LIGHT U/O (UH-1B) PN 204-075-113-3,-15,-17 U/O PN 205-075-141-3 SEE FIG.249 FOR BREAKDOWN IG.249 FOR BREAKDOWN ....UHB,UHE,UHH,UHV,UHX	EA	1
245		XCFZZ		97499	204-075-113-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-113-1 SEE FIG.253 FOR BALANCE OF BREAKDOWN.........UHB	EA	1
245		XCFZZ		97499	204-075-113-11	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-113-7 SEE FIG.253 FOR BALANCE OF BREAKDOWN.........UHB	EA	1
245		XCFZZ		97499	204-075-113-19	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-113-13 SEE FIG.253 FOR BALANCE OF BREAKDOWN.........UHB	EA	1
245		XCFZZ		97499	205-075-141-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-141-1.........UHE,UHH,UHV,UHX	EA	1
245	78	PBOZZ	5925-00-686-3297	96906	MS25244-5	..CIRCUIT BREAKER U/O PN 204-075-113-5 &-11 ....UHB,UHE,UHH,UHV,UHX	EA	13
245	78A	PBOZZ	5925-00-686-3297	96906	MS25244-5	..CIRCUIT BREAKER U/O PN 204-075-113-19 & 205-075-141-5 ....UHE,UHH,UHV,UHX	EA	12
245	80	PAOZZ	5925-00-681-4952	96906	MS25244-10	..CIRCUIT BREAKER RESCUE HOIST.........UHE,UHH,UHV,UHX	EA	9
245	81	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER USE-AFT-CMPL-W MWO 55-1520-210-30/5 ....UHE,UHH,UHV,UHX	EA	1
245	82	PAOZZ	5925-00-805-2833	96906	MS25244-25	..CIRCUIT BREAKER.........UHB,UHE,UHH,UHV,UHX	EA	3
245	84	PAOZZ	5925-00-686-3301	96906	MS25244-15	..CIRCUIT BREAKER.........UHB,UHE,UHH,UHV,UHX	EA	1
245	85	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
245	86	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.............UHB,UHE,UHH UHV,UHX	EA	3
245	87	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE.............UHB,UHE,UHH,UHV,UHX	EA	3
245	88	PAOZZ	5340-00-954-6826	81996	EAB70008	..CLAMP,LOOP U/O PN 204-075-113-5 & -11, 205-075-141-5 ....UHB,UHE,UHH,UHV,UHX	EA	1
245	89	XDOZZ	5340-00-989-4569	81996	EAB70009	..CLAMP,LOOP U/O PN 205-075-141-5.............UHE,UHH,UHV,UHX	EA	1
245	90	PAOZZ	5340-00-993-5478	81996	EAB700012	..CLAMP,LOOP U/O PN 204-075-113-5,-11 & -19.............UHB	EA	1
245	91	PBOZZ	5340-00-145-8339	96906	MS21122C10	..CLAMP,LOOP U/O PN 204-075-113-19,205-075-141-5 ....UHE,UHH,UHV,UHX	EA	1
245	92	PAOZZ	5340-00-993-6247	81996	EAB700011	..CLAMP,LOOP U/O PN 204-075-113-5 &-11.............UHB	EA	1
245	92A	PAOZZ	5340-00-286-9424	96906	MS21919WDG14	..CLAMP,LOOP U/O PN 204-075-113-19.............UHE,UHH,UHV,UHX	EA	1
245	93	AOOOZ	1560-00-731-8992	97499	204-075-422-1	..CABLE ASSY, U/O PN 204-075-113-5,-11.............UHB	EA	1
245	94	AOOOZ	1560-00-987-1396	97499	204-075-900-1	..CABLE ASSY, U/O PN 204-075-113-19.............UHB	EA	1
245	95	AOOOZ	1560-00-299-0994	97499	205-075-410-3	..CABLE ASSY, U/O PN 205-075-141-5.............UHE,UHH,UHV,UHX	EA	1
245	95A	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 204-075-422-1.............UHB	EA	12
245	95B	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 204-075-900-1.............UHB	EA	20
245	95C	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-410-3.............UHE,UHH,UHV,UHX	EA	15
245	95D	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG U/O UH-1B PN 204-075-422-1.............UHB	EA	2
245	95E	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG.............UHB,UHE,UHH,UHV,UHX	EA	2
245	95F	XBOZZ	5940-00-143-4780	96906	MS25036-108	...TERMINAL,LUG.............UHB	EA	2
245	95G	XBOZZ	5940-00-143-4780	96906	MS25036-108	...TERMINAL,LUG.............UHE,UHH,UHV,UHX	EA	1
245	95H	PAOZZ	5940-00-143-4793	96906	MS25036-110	...TERMINAL,LUG.............UHE,UHH,UHV,UHX	EA	1
245	95I	PAOZZ	5940-00-143-4793	96906	MS25036-110	...TERMINAL,LUG.............UHB	EA	2
245	95J	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG.............UHB	EA	2
245	95K	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG.............UHE,UHH,UHV,UHX	EA	3
245	95L	PAOZZ	5940-00-113-8190	96906	MS25036-122	...TERMINAL,LUG.............UHB,UHE,UHH,UHV,UHX	PG	3
245	95M	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG.............UHB	EA	13
245	95N	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG.............UHE,UHH,UHV,UHX	EA	20
245	95P	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG.............UHB,UHE,UHH,UHV,UHX	EA	5
245	95Q	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O PN 205-075-410-3.....UHB,UHE,UHH,UHV,UHX	EA	2
245	95R	PAOZZ	5940-00-143-4777	96906	MS25036-157	...TERMINAL,LUG U/O UH-1B PN 204-075-422-1.............UHB	EA	2
245	95S	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR.............UHB	EA	4
245	95T	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR.............UHE,UHH,UHV,UHX	EA	20
245	95U	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 205-075-410-3.....UHB,UHE,UHH,UHV,UHX	EA	2
245	95V	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	...CONNECTOR,PLUG ELECTRICAL U/O PN 204-075-422-1........UHB	EA	1
245	95W	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	...WIRE,ELECTRICAL.............UHB,UHE,UHH,UHV,UHX	FT	V
245	95X	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	...WIRE,ELECTRICAL U/O PN 205-075-410-3 ....UHB,UHE,UHH,UHV,UHX	FT	V
245	95Y	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	...WIRE,ELECTRICAL.............UHB,UHE,UHH,UHV,UHX	FT	V
245	95Z	PBOZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL.............UHB,UHE,UHH,UHV,UHX	FT	V
245	96	MOOZZ	5970-00-195-9548	97499	130-005-6-4	...INSULATION SLEEVING.............UHE,UHH,UHV,UHX	EA	2
245	96A	PAOZZ	5940-00-113-3144	96906	MS20659-126	...TERMINAL,LUG U/O PN 205-075-437-1.........UHE,UHH,UHV,UHX	EA	1
245	96B	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.....UHB,UHE,UHH,UHV,UHX	EA	3
245	97	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT.............UHB,UHE,UHH,UHV,UHX	EA	8
245	98	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE.............UHB,UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
245	99	XDOZZ		97499	204-075-264-1	..BUS BAR QTY 3 U/O PN 204-075-113-5,-11,-19. QTY 2 U/O PN 205-075-141-5. USE-BEFORE-CMPL-W MWO 55-1520-210-30/5 ....UHB,UHE,UHH,UHV,UHX	EA	3
245	99A	XDOZZ		97499	204-075-264-1	..BUS BAR U/O PN 205-075-141-5. USE-BEFORE-CMPL-W MWO 55-1520-210-30/5..........UHE,UHH,UHV,UHX	EA	2
245	100	XDOZZ		97499	204-075-264-3	..BUS,BAR U/O PN 205-075-141-5. USE-BEFORE-CMPL-W MWO 55-1520-210-30/5..........UHB	EA	1
245	100A	PAOZZ	6150-00-225-0267	97499	20-077-8A2D	..BUS,CONDUCTOR USE-AFT-COMPL-W MWO 55-1520-210-30/5 ....UHE,UHH,UHV,UHX	EA	3
245	101	XDOZZ		97499	204-075-264-5	..BUS BAR..........UHB,UHE,UHH,UHV,UHX	EA	1
245	102	PAOZZ	5325-00-253-6632	96906	MS35489-6	..GROMMET,NONMETALLIC..........UHE,UHH,UHV,UHX	EA	5
245	103	XBOZZ		97499	204-075-215-23	..FRAME ASSEMBLY-LH..........UHB,UHE,UHH,UHV,UHX	EA	1
245	103A	XBOZZ	1560-00-925-3666	97499	204-075-215-24	..FRAME ASSY,RH..........UHB,UHE,UHH,UHV,UHX	EA	1
245	104	XBOZZ		97499	204-075-289-101	..NAMEPLATE-FM RECEIV ARR-46 U/O PN 204-075-113-5 &-11 ....UHB	EA	1
245	104A	PAOZZ	9905-00-944-1740	97499	204-075-289-1	..PLATE,MARKING,BLANK..........UHE,UHH,UHV,UHX	EA	1
245	104B	XBOZZ	9905-00-488-7640	97499	204-075-289-13	..NAMEPLATE ARA-31..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
245	105	XBOZZ	9905-00-412-1143	97499	204-075-289-15	..NAMEPLATE-FM ARC-44 U/O PN 205-075-141-5 ....UHB,UHE,UHH,UHV,UHX	EA	1
245	105A	XBOZZ	9905-00-169-6959	97499	204-075-289-17	..PLATE,IDENTIFICATIO VHF ARC-55 U/O PN 205-075-141-5 ....UHB,UHE,UHH,UHV,UHX	EA	1
245	106	XBOZZ	1560-00-789-1556	97499	204-075-289-103	..PLATE,IDENTIFICATIO VHF TRANSMITTER T-366. USE-BEFORE-CMPL-W MWO 55-1520-210-30/5..........UHB,UHE,UHH,UHV,UHX	EA	1
245	106A	XBOZZ	9905-00-412-1140	97499	204-075-289-139	..PLATE,IDENTIFICATIO N,RESCUE HOIST,POWER. USE-AFT-CMPL-W MWO 55-1520-210-30/5..........UHE,UHH,UHV,UHX	EA	1
245	107	XBOZZ	9905-00-126-4280	97499	204-075-289-97	..PLATE,IDENTIFICATIO VHF TRANSMITTER ARC-73. USE-BEFORE-CMPL-W MWO 55-1520-210-30/5..........UHB,UHE,UHH,UHV,UHX	EA	1
245	108	XBOZZ	9905-00-412-1141	97499	204-075-289-141	..PLATE,IDENTIFICATIO RESCUE HOIST CONTROL. USE-AFT-CMPL-W MWO 55-1520-210-30/5..........UHE,UHH,UHV,UHX	EA	1
245	109	XBOZZ	9905-00-134-3553	97499	204-075-289-99	..PLATE,IDENTIFICATIO VHF RECEIVER ARC-73. USE-BEFORE-CMPL-W MWO 55-1520-210-30/5..........UHB,UHE,UHH,UHV,UHX	EA	1
245	110	XBOZZ	9905-00-412-1142	97499	204-075-289-143	..PLATE,IDENTIFICATIO RESCUE HOIST CABLE CUTTER. USE-AFT-CMPL-W MWO 55-1520-210-30/5..........UHE,UHH,UHV,UHX	EA	1
245	111	XDOZZ	9905-00-126-4282	97499	204-075-289-29	..PLATE,IDENTIFICATIO NAVIGATIONAL LIGHTS ....UHB,UHE,UHH,UHV,UHX	EA	1
245	112	XBOZZ	9905-00-126-4279	97499	204-075-289-31	..PLATE,IDENTIFICATIO DOME LIGHTS..........UHB,UHE,UHH,UHV,UHX	EA	1
245	113	XBOZZ	9905-00-052-0687	97499	204-075-289-33	..PLATE,IDENTIFICATIO COCKPIT LIGHTS.....UHB,UHE,UHH,UHV,UHX	EA	1
245	114	PBOZZ	9905-00-052-0678	97499	204-075-289-35	..PLATE,IDENTIFICATIO CAUTION LIGHTS.....UHB,UHE,UHH,UHV,UHX	EA	1
245	115	PAOZZ	9905-00-052-0686	97499	204-075-289-37	..PLATE,IDENTIFICATIO CONSOLE PEDESTAL LIGHTS ....UHB,UHE,UHH,UHV,UHX	EA	1
245	116	XBOZZ	9905-00-126-4175	97499	204-075-289-39	..PLATE,IDENTIFICATIO INSTRUMENT LIGHTS ....UHB,UHE,UHH,UHV,UHX	EA	1
245	117	XBOZZ	9905-00-126-4181	97499	204-075-289-41	..PLATE,IDENTIFICATIO INSTRUMENT SECTION LIGHTS ....UHB,UHE,UHH,UHV,UHX	EA	1
245	118	PBOZZ	9905-00-111-6894	97499	204-075-289-53	..PLATE,IDENTIFICATIO SPARE CARGO HOOK RELEASE ....UHB,UHE,UHH,UHV,UHX	EA	1
245	119	PBOZZ	9905-00-903-3526	97499	204-075-289-55	..PLATE,DESIGNATION SPARE INVERTER POWER ....UHB,UHE,UHH,UHV,UHX	EA	1
245	120	PBOZZ	9905-00-903-3528	97499	204-075-289-57	..PLATE,DESIGNATION INVERTER CONTROL.....UHB,UHE,UHH,UHV,UHX	EA	1
245	121	XBOZZ	9905-00-903-3529	97499	204-075-289-59	..PLATE,DESIGNATION MAIN INVERTER POWER ....UHB,UHE,UHH,UHV,UHX	EA	1
245	122	XBOZZ	9905-00-903-3530	97499	204-075-289-61	..PLATE,DESIGNATION GENERATOR & BUS RESET ....UHB,UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	
245	123	XBOZZ	9905-00-128-4230	97499	204-075-289-63	..PLATE,
245	124	PBOZZ	9905-00-128-4244	97499	204-075-289-65	..PLATE,
245	125	XBOZZ	9905-00-128-4253	97499	204-075-289-63	..PLATE,
245	126	XBOZZ	9905-00-128-4264	97499	204-075-289-65	..PLATE,
245	127	PBOZZ	9905-00-241-9728	97499	204-075-289-67	..PLATE,
245	127A	XBOZZ	9905-00-128-8887	97499	204-075-289-249	..PLATE, 075-101-
245	128	XBOZZ	9905-00-178-4785	97499	204-075-289-95	..PLATE, 6,-11 &
245	128A	XBOZZ	9905-00-128-8881	97499	204-075-289-109	..PLATE, 161-6
245	128B	XBOZZ	1560-00-939-8203	97499	204-075-289-99	..PLATE, 113-6,-1
245	128C	PAOZZ	9905-00-939-8198	97499	204-075-289-109	..PLATE,
245	129	PAOZZ	9905-00-128-4287	97499	204-075-289-81	..PLATE,
245	130	XDOZZ		97499	204-075-289-83	..PLATE,
245	131	PBOOO	6110-00-868-4850	97499	204-075-707-1	..PANEL BREAKDOWN
245	132	XBOZZ	1680-00-168-6094	97499	204-075-208-1	..CONTROL
245	133	PBOOO	1680-00-128-1989	97499	204-075-700-1	..PANEL 250 FOR
245	134	PBOOO	1680-00-181-3382	97499	204-075-700-3	..PANEL
245	135	PAOOO	1560-00-916-2536	97499	204-075-288-33	..PANEL,

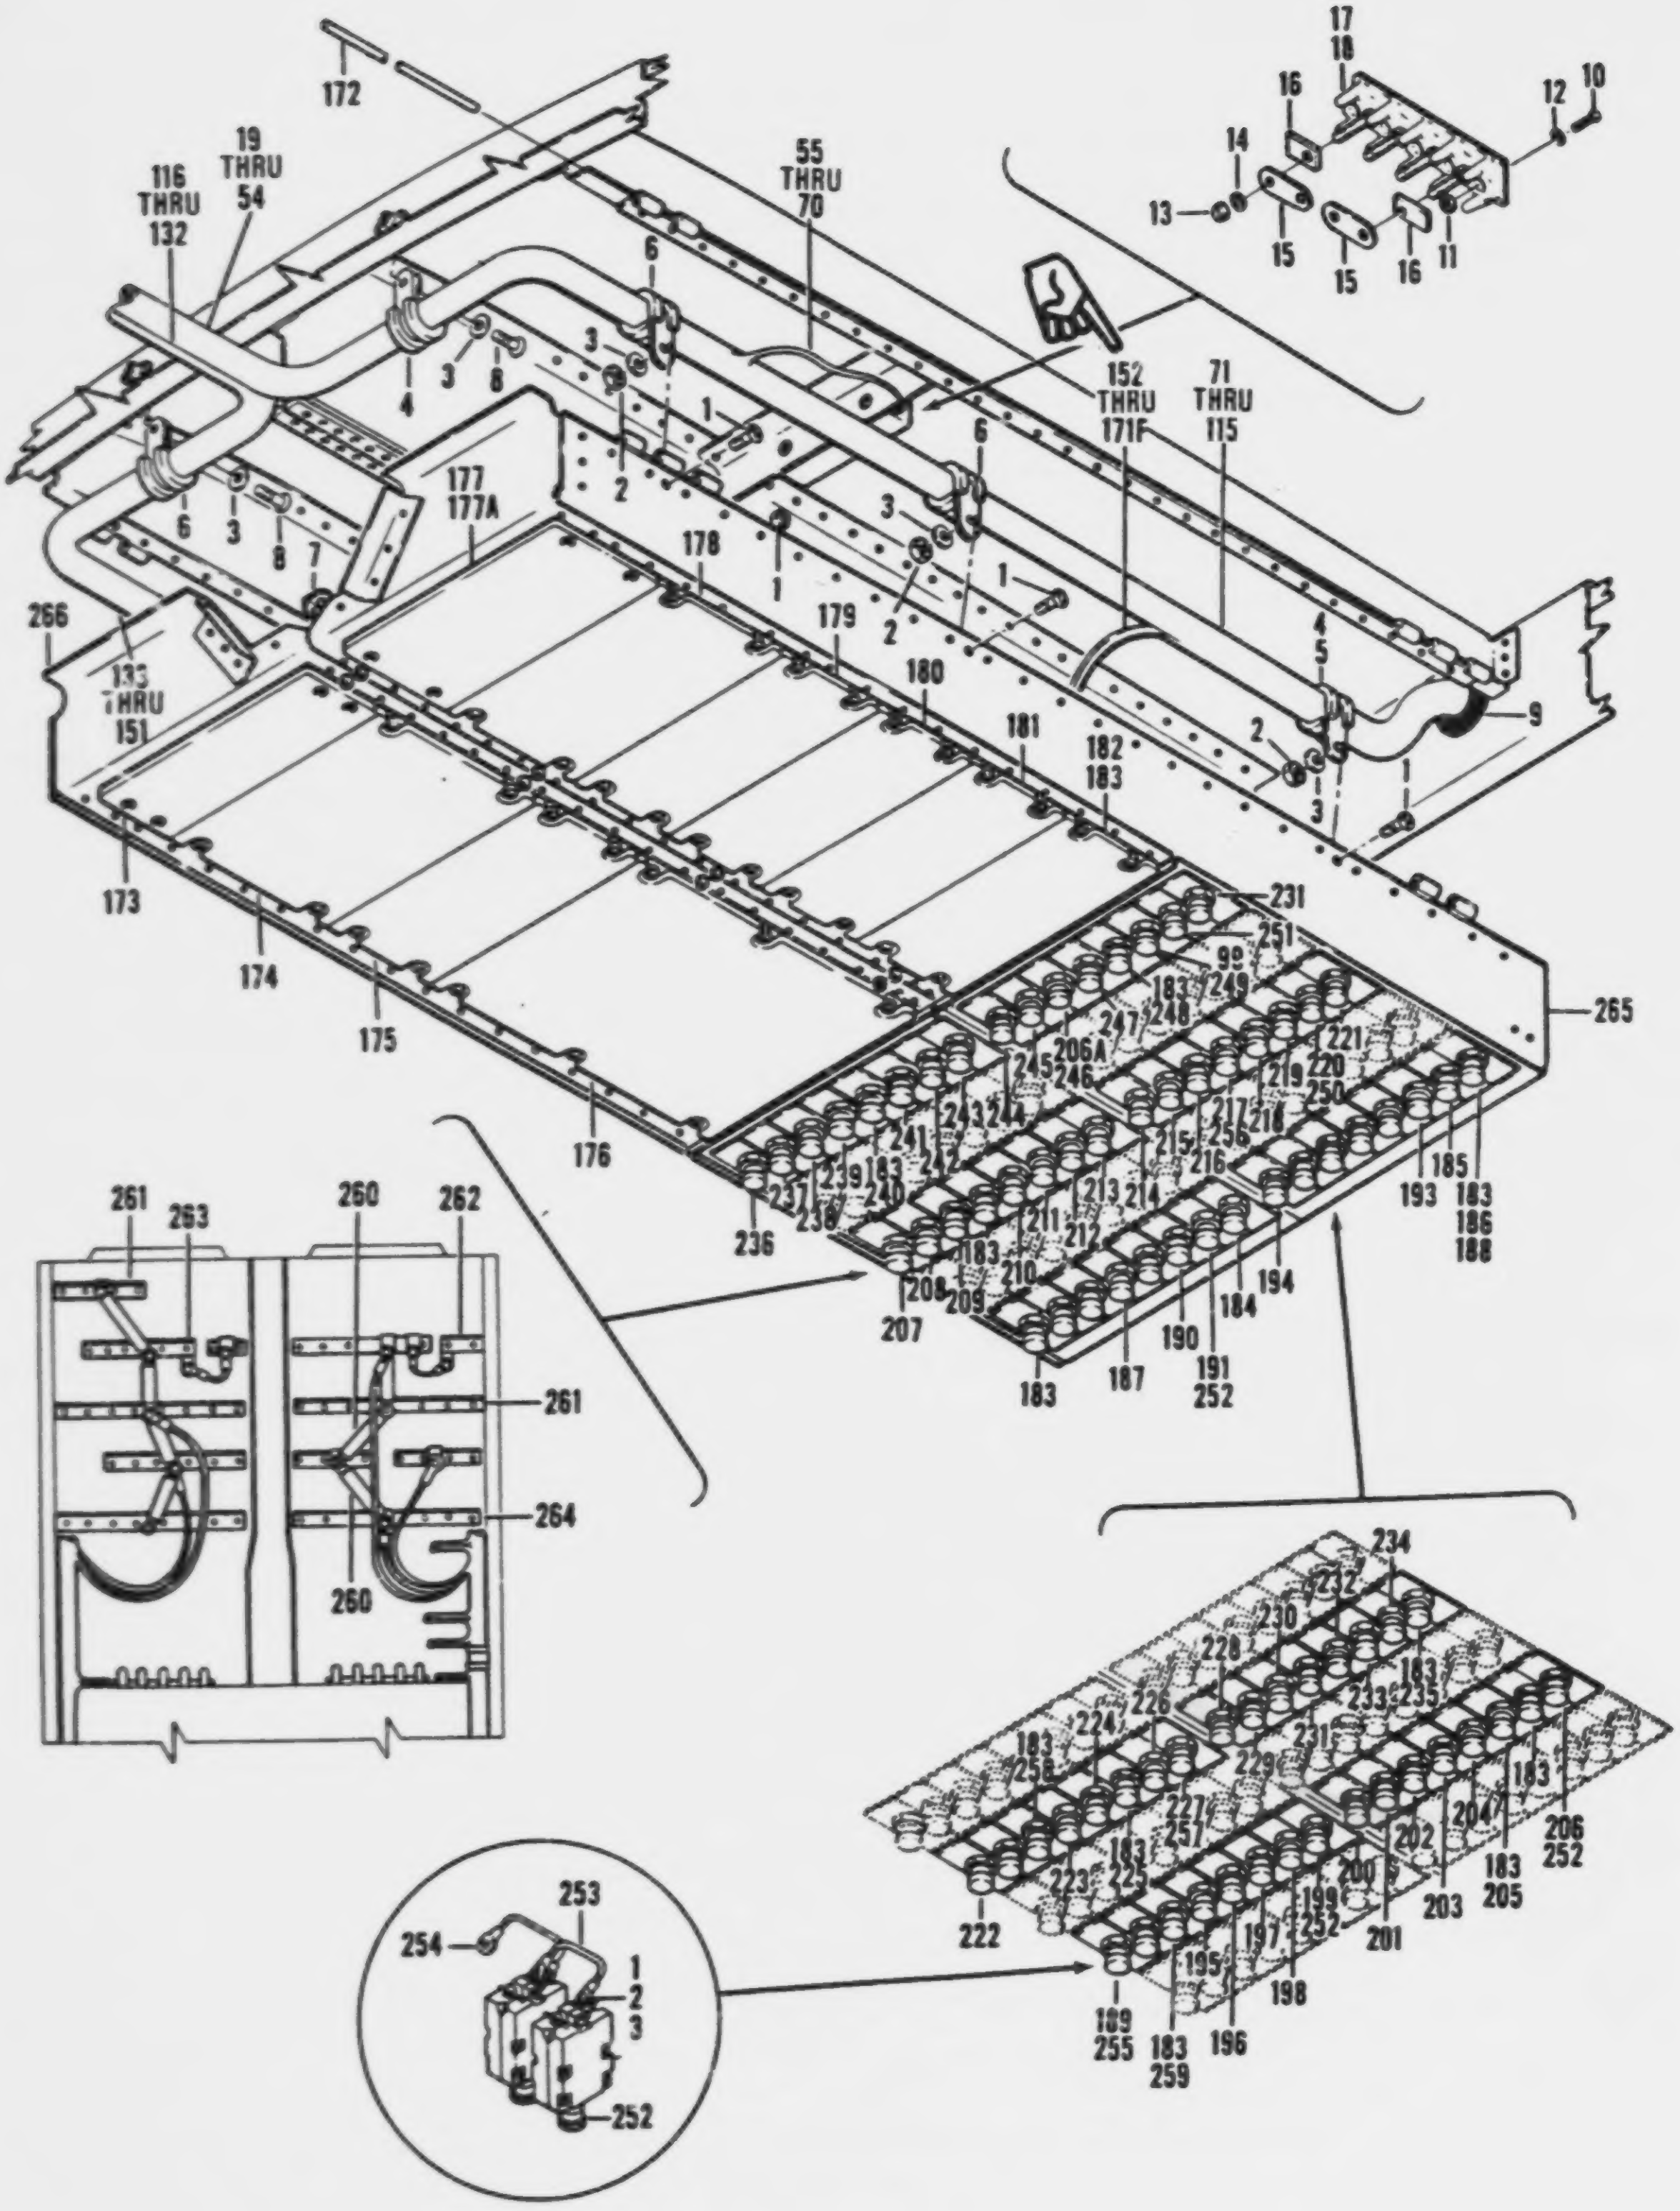
172
17
18
16
12
10
14
13
15
15
16
11
55
THRU
70
19
THRU
54
116
THRU
132
6
3
4
3
8
152
THRU
171F
71
THRU
115
1
2
6
3
6
3
8
7
177
177A
178
1
179
2
1
266
133
THRU
151
180
181
182
183
4
5
9
2
1
3
173
174
175
176
231
251
98
249
183
248
247
206A
245
246
221
220
250
219
217
218
256
215
216
214
213
212
211
210
209
208
207
183
241
243
244
242
239
183
240
237
238
236
265
193
185
183
186
188
194
184
190
191
252
187
183
261
263
260
262
261
264
260
234
232
230
228
226
224
183
258
183
233
235
231
229
227
257
183
225
223
222
200
199
252
201
202
204
183
206
252
203
183
205
197
195
198
196
189
255
183
259
253
254
1
2
3
252

Figure 246. Console Installation, Electrical Overhead

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
246		XCFZZ		97499	204-075-602-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 63-8500 THRU 63-8658 SEE FIG.225 FOR NHA ....UHB	EA	1
246		XCFZZ		97499	204-075-602-9	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 63-8659 THRU 63-12952 SEE FIG.225 FOR NHA ....UHB	EA	1
246		XCFZZ		97499	204-075-610-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 64-13902 & SUBSEQUENT SEE FIG.225 FOR NHA ....UHB	EA	1
246		XCFZZ		97499	204-075-610-7	CONSOLE INSTL, ELECTRICAL OVERHEAD USBL EFF 64-14101 THRU 64-14191 SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-1	CONSOLE INSTL, ELECTRICAL OVERHEAD USBL EFF 65-9416 THRU 65-12772 SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-7	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-492 THRU 66-601 SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-11	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-602 THRU 66-15022 SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-17	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-15023 THRU 66-15105 SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-27	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-15106 THRU 66-15147 SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-23	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-15148 & SUBSEQUENT SEE FIG.225 FOR NHA ....UHC,UHM	EA	1
246		XCFZZ		97499	205-075-143-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 63-8739 THRU 63-8803 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-143-7	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 63-8804 THRU 63-8859 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-143-11	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 63-12956 THRU 63-13002 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 64-13492 THRU 64-13901 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-7	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 65-9565 THRU 65-9810 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-17	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 65-9811 THRU 65-12895 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-13	CONSOLE INSTL, ELECTRICAL OVERHEAD USBL EFF 66-746 THRU 66-16033 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-23	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-16034 THRU 66-16306 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-41	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-16307 THRU 66-16448 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-33	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-16449 THRU 66-16867 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-37	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-45	CONSOLE INSTL, ELECTRICAL OVERHEAD USBL EFF 67-17145 THRU 67-17312 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-51	CONSOLE INSTL, ELECTRICAL OVERHEAD USBL EFF 67-17313 THRU 67-17777 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-59	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 67-17778 THRU 67-19537 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-156-1	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 68-15214 THRU 69-15291 SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-156-25	CONSOLE INSTL ELECTRICAL OVERHEAD USBL EFF 69-15292 & SUBSEQUENT SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246		XCOZZ		97499	205-075-156-45	CONSOLE INSTL ELECTRICAL OVERHEAD SEE FIG.226 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
246	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
246	2	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
246	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
246	4	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	5	PAOZZ	5340-00-993-1470	81996	EAB700D18	.CLAMP,LOOP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	6	PAOZZ	5340-00-989-4572	81996	EAB700D15	.CLAMP,LOOP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	7	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	8	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	9	PAOZZ	5325-00-276-5343	96906	MS35489-23	.GROMMET,NONMETALLIC..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	10	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
246	11	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
246	12	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
246	13	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
246	14	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
246	15	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE..........UHE,UHH,UHV,UHX	EA	2
246	16	PBOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR..........UHE,UHH,UHV,UHX	EA	2
246	17	PBOZZ	5940-00-411-7735	96906	MS18029-1S4	.COVER,TERMINAL BOAR..........UHE,UHH,UHV,UHX	EA	1
246	18	XDOZZ		96906	MS27212-1-4	.TERMINAL BOARD..........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	204-075-602-3	.PANEL ASSEMBLY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-602-1 & -9 SEE FIG.247 FOR BALANCE OF BREAKDOWN.......UHB	EA	1
246		XCFZZ		97499	204-075-610-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-610-1 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHB	EA	1
246		XCFZZ		97499	204-075-610-9	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-610-7 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-611-1 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-9	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-611-7 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-13	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-611-11 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-19	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-611-17 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-25	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 204-075-611-23 SEE FIG.247 FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
246		XCFZZ		97499	205-075-143-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-143-1 & -7 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-1 SEE FIG.247 FOR BALANCE OF BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-9	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-7 SEE FIG.247 FOR BALANCE OF BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-19	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTIUN U/O PN 205-075-111-17 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-15	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-13 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-25	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-23 & -41 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-35	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-33 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
246		XCFZZ		97499	205-075-111-39	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-37,-45,& -51 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-61	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-111-59 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-156-3	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-156-1 SEE FIG.247 FOR BALANCE OF BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-156-27	.PANEL ASSY,ELEC OVERHEAD CONSOLE-LH SECTION U/O PN 205-075-156-25 SEE FIG.247 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	204-075-602-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-602-1........UHB	EA	1
246		XCFZZ		97499	204-075-602-7	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-602-9........UHB	EA	1
246		XCFZZ		97499	204-075-610-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-610-1........UHB	EA	1
246		XCFZZ		97499	204-075-610-11	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-610-7........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-611-1 & -7........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-15	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-611-11........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-21	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-611-17 & -23........UHC,UHM	EA	1
246		XCFZZ		97499	204-075-611-31	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 204-075-611-23 & -27........UHC,UHM	EA	1
246		XCFZZ		97499	205-075-143-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-143-1........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-143-9	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-143-7........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-143-15	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-143-11........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-1........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-11	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-7 & -17........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-21	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-13........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-27	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-23,-33,& -37........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-43	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-33,-37,& -41........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-47	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-45........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-111-49	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-111-51 & -59........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-156-5	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-156-1........UHE,UHH,UHV,UHX	EA	1
246		XCFZZ		97499	205-075-156-29	.PANEL ASSY,ELEC OVERHEAD CONSOLE-RH SECTION U/O PN 205-075-156-25........UHE,UHH,UHV,UHX	EA	1
246	19	AOOOZ	1560-00-731-8994	97499	204-075-422-5	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 204-075-602-3, 204-075-610-3........UHB	EA	1
246	19	AOOOZ	6150-00-924-0410	97499	204-075-422-11	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 204-075-610-9........UHC,UHM	EA	1
246	19	AOOOZ	6150-00-924-0427	97499	204-175-426-7	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 204-075-611-3,-9, & -13........UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
246	19	A000Z	1560-00-299-1007	97499	205-075-421-3	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 205-075-143-3..........UHE,UHH,UHV,UHX	EA	1
246	19	A000Z	1560-00-869-8146	97499	205-075-421-5	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 205-075-111-3..........UHE,UHH,UHV,UHX	EA	1
246	19	A000Z	6150-00-924-0411	97499	205-075-432-7	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 205-075-111-9,-19..........UHE,UHH,UHV,UHX	EA	1
246	19	A000Z	6150-00-965-9459	97499	205-075-482-3	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 205-075-111-15, -25,& -35..........UHE,UHH,UHV,UHX	EA	1
246	19	A000Z	6150-00-989-0014	97499	205-075-482-5	..CABLE ASSY,OVERHEAD CONSOLE-LH FORWARD U/O PN 205-075-111-39,61, & 205-075-156-3..........UHE,UHH,UHV,UHX	EA	1
246	20	PAOZZ	5935-00-201-8072	88044	AN3115-1	...CONNECTOR,PLUG,ELEC U/O (UH-1B) PN 204-075-422-5,U/O (UH-1C) PN 204-075-422-11,U/O PN 205-075-421-1,-3,-5, & PN 205-075-482-3..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	21	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	...CONNECTOR,PLUG, ELECTRICAL U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	22	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	...CONNECTOR,PLUG, ELECTRICAL U/O PN 204-175-426-7..........UHC,UHM	EA	2
246	23	PBOZZ	5935-00-805-3286	96906	MS3108R14S5S	...CONNECTOR,PLUG, ELECTRICAL U/O PN 205-075-421-5,205-075-432-7,205-075-482-3,&-5..........UHE,UHH,UHV,UHX	EA	1
246	24	PAOZZ	5935-00-263-0213	97499	30-051R12S3S	...CONNECTOR,PLUG,ELEC U/O PN 205-075-421-3..........UHE,UHH,UHV,UHX	EA	1
246	25	PAOZZ	5935-00-240-0173	96906	MS3057-4A	...CLAMP,CABLE,ELEC U/O (UH-1C) PN 204-075-422-11,U/O PN 205-075-421-3 & -5 -5........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	26	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O UH-1C PN 204-075-422-11..........UHB,UHC,UHM	EA	6
246	26A	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 204-175-426-7............UHC,UHM	EA	4
246	26B	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 205-075-421-3 & -5..........UHE,UHH,UHV,UHX	EA	2
246	26C	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 205-075-432-7, 205-075-482-3,& -5..........UHE,UHH,UHV,UHX	EA	1
246	27	PAOZZ	5940-01-007-7876	81349	M7928/3-3	...SPLICE,CONDUCTOR U/O PN 204-075-422-11............UHC,UHM	EA	1
246	28	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG..........UHB,UHC,UHM	EA	17
246	28A	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 204-175-426-7..........UHC,UHM	EA	43
246	28B	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-421-3 & -5....UHE,UHH,UHV,UHX	EA	26
246	28C	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-482-3.........UHE,UHH,UHV,UHX	EA	18
246	28D	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-482-5.........UHE,UHH,UHV,UHX	EA	16
246	29	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG U/O (UH-1C) PN 204-075-422-11,U/O PN 205-075-432-7,& PN 205-075-482-3..........UHC,UHE,UHH,UHM,UHV,UHX	EA	3
246	29A	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG U/O PN 205-075-421-3 & -5....UHE,UHH,UHV,UHX	EA	6
246	30	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG U/O (UH-1C) PN 204-075-422-11 U/O PN 205-075-421-3 & -5..........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	30A	PAOZZ	5940-00-204-8990	96906	MS25036-111	...TERMINAL,LUG U/O PN 204-075-422-5..........UHC,UHM	EA	4
246	32	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 204-075-422-5..........UHC,UHM	EA	2
246	33	PAOZZ	5940-00-143-5284	96906	MS25036-115	...TERMINAL,LUG U/O PN 204-075-422-5..........UHC,UHM	EA	1
246	34	PAOZZ	5940-00-557-4345	96906	MS25036-118	...TERMINAL,LUG U/O PN 204-075-422-5..........UHC,JHM	EA	1
246	35	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG..........UHC,UHM	EA	2
246	36	PAOZZ	5940-00-113-8190	96906	MS25036-122	...TERMINAL,LUG U/O PN 204-075-422-5..........UHC,UHM	PG	2
246	37	PBOZZ	5940-00-688-6005	96906	MS25036-143	...TERMINAL,LUG U/O PN 204-075-422-5..........UHC,UHM	EA	1
246	38	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG U/O PN 205-075-422-5..........UHC,UHM	EA	1
246	39	PAOZZ	5940-00-577-3807	96906	MS25036-145	...TERMINAL,LUG U/O PN 205-075-482-5.........UHE,UHH,UHV,UHX	EA	8
246	40	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O UH-1C PN 204-075-422-11........UHC,UHM	EA	5

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
246	40A	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O PN 204-175-426-7..................UHC,UHM	EA	5
246	41	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG U/O PN 204-075-422-11............UHB,UHC,UHM	EA	1
246	42	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O UH-1C PN 204-075-422-11....UHB,UHC,UHM	EA	1
246	42A	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O PN 204-075-422-5..................UHC,UHM	EA	3
246	43	MOOZZ	5970-00-195-9548	97499	130-005-6-4	...INSULATION SLEEVING U/O PN 204-075-422-5..........UHC,UHM	EA	2
246	43A	MOOZZ		97499	130-0U5-2-2	...INSULATION SLEEVING.........................UHE,UHH,UHV,UHX	EA	2
246	44	PAOZZ	5940-00-583-2603	09922	YAEV10T7	...TERMINAL,LUG U/O PN 205-075-432-7, 205-075-482-3,& -5 ....UHE,UHH,UHV,UHX	EA	2
246	45	PAOZZ	5365-00-598-5282	96906	MS3420-4	...BUSHING,RUBBER U/O PN 205-075-421-5.......UHE,UHH,UHV,UHX	EA	1
246	46	PAOZZ	5365-00-820-4535	88044	AN3420-6	...BUSHING,RUBBER U/O PN 205-075-421-5.......UHE,UHH,UHV,UHX	EA	1
246	47	PAOZZ	5935-00-820-0555	96906	MS3106R14S5S	...CONNECTOR,PLUG,ELEC............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	48	PAOZZ	5935-00-280-2195	96906	MS3057-6A	...CLAMP,CABLE,ELEC U/O (UH-1C) PN 204-075-422-11 U/O PN 205-075-421-3 & -5................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	49	PBOZZ	6145-00-284-0657	96906	MS25190B8	...WIRE,ELECTRICAL U/O PN 204-075-422-11.............UHC,UHM	FT	V
246	50	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	...WIRE,ELECTRICAL U/O (UH-1C) PN 204-175-426-7 U/O PN 205-075-432-7 & 205-075-482-3,& -5........UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	51	PBOZZ	6145-00-578-6604	81349	M5086/2-14-9	...WIRE,ELECTRICAL U/O (UH-1C) PN 204-075-422-11 U/O PN 205-075-421-3,-5...........................UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	52	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	...WIRE,ELECTRICAL U/O PN 204-075-422-11.............UHC,UHM	FT	V
246	53	PAOZZ	6145-00-578-6602	96906	MS25190B18	...WIRE,ELECTRICAL U/O PN 205-075-421-3,-5& 205-075-432-7 ....UHE,UHH,UHV,UHX	FT	V
246	54	PBOZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL................UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	55	AOOOZ	6150-00-924-0410	81349	M5086/2-18-9	..CABLE ASSY OVERHEAD CONSOLE-LH INTERNAL U/O PN 204-075-610-3...UHB	EA	1
246	55	AOOOZ	1560-00-869-8152	97499	204-175-414-1	..WIRING ASSY,OVERHEA CONSOLE-LH INTERNAL U/O (UH-1B) PN 204-075-610-3 U/O (UH-1C) PN 204-075-610-9........UHB,UHC,UHM	EA	1
246	55	AOOOZ	6150-00-924-0424	97499	204-175-427-1	..CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 204-075-611-3..UHC,UHM	EA	1
246	55	AOOOZ	6150-00-927-3832	97499	204-175-427-9	..CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 204-075-611-9,-13, -19,& -25...............................UHC,UHM	EA	1
246	55	AOOOZ	1560-00-987-5278	97499	205-075-400-9	..WIRING ASSY,OVERHEA CONSOLE-LH INTERNAL U/O PN 205-075-143-3...UHE,UHH,UHV,UHX	EA	1
246	55	AOOOZ	1560-00-908-1633	97499	205-075-400-13	..WIRING ASSY,OVERHEA CONSOLE-LH INTERNAL U/O PN 205-075-143-13..UHE,UHH,UHV,UHX	EA	1
246	55	AOOOZ	1560-00-869-8148	97499	205-075-430-1	..CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-075-111-3...UHE,UHH,UHV,UHX	EA	1
246	55	AOOOZ	6150-00-924-0425	97499	205-075-432-5	..CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-075-111-9,-19...UHE,UHH,UHV,UHX	EA	1
246	55	AOOOZ	1560-00-931-1075	97499	205-075-432-15	..CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-075-111-15, -25,-29,-35,-39-61,& 205-075-156-3....UHE,UHH,UHV,UHX	EA	1
246	55	AOOOO		97499	205-075-432-21	..CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-075-156-27..UHE,UHH,UHV,UHX	EA	1
246	56	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-400-9,-13,205-075-430-1,205-075-432-5,& -15....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	48
246	56A	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-432-21........UHE,UHH,UHV,UHX	EA	36
246	57	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG U/O PN 204-175-427-1 & -9............UHC,UHM	EA	3
246	58	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG U/O PN 205-075-400-9,-13 & PN 205-075-432-5, & -15.............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
246	58A	PAOZZ	5940-00-113-9828	36906	MS25036-148	...TERMINAL,LUG U/O PN 205-075-432-21........UHE,UHH,UHV,UHX	EA	14
246	59	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	11
246	60	PBOZZ	5940-00-888-6005	96906	MS25036-143	...TERMINAL,LUG U/O PN 205-075-400-9,-13 & PN 205-075-430-1	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....................................UHB,UHC,UHE,UHH,UHM,UHV,UHX		
246	61	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG U/O PN 204-175-427-1 & -9............UHC,UHM	EA	2
246	61A	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG U/O PN 205-075-400-9,-13,PN 205-075-430-1,PN 205-075-432-5 &-15..............................UHE,UHH,UHV,UHX	EA	6
246	62	XDOZZ	5940-00-828-2809	96906	MS25189-7	...TERMINAL,LUG U/O UH-1D PN 205-075-400-9,-13, 205-075-430-1, 205-075-432-5,& -15........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
246	63	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	...WIRE,ELECTRICAL................UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	64	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	...WIRE,ELECTRICAL................UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	65	PBOZZ	6145-00-851-8505	96906	MS25190820	...WIRE,ELECTRICAL................UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	66	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	...WIRE,ELECTRICAL U/O PN 204-175-427-1 & -9.........UHC,UHM	FT	V
246	67	PAOZZ	5935-00-201-8072	88044	AN3115-1	...CONNECTOR,PLUG ELECTRICAL U/O PN 204-175-427-1....UHC,UHM	EA	1
246	68	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 204-175-427-1 & -9........UHC,UHM	EA	3
246	69	XDOZZ		97499	85T4-7-2	...INSULATION TUBE U/O PN 204-175-427-1..............UHC,UHM	FT	2
246	70	MOOZZ	5970-00-342-8362	97499	85T4-10-2	...INSULATION SLEEVING U/O PN 204-175-427-1 & -9.....UHC,UHM	EA	6
246	71	AOOOZ	1560-00-987-1394	97499	204-075-447-5	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 204-075-602-3 ....UHB	EA	1
246	71	AOOOZ	1560-00-869-8151	97499	204-175-414-3	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 204-075-610-3 ....UHB	EA	1
246	71	AOOOZ	1560-00-871-8680	97499	204-175-414-5	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 204-075-610-9 ....UHC,UHM	EA	1
246	71	AOOOZ	6150-00-924-0427	97499	204-175-426-7	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 204-075-611-3,-9, & -13...UHC,UHM	EA	1
246	71	AOOOZ	1560-00-299-1008	97499	205-075-422-1	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 205-075-143-3 ....UHE,UHH,UHV,UHX	EA	1
246	71	AOOOZ	6110-00-928-6303	97499	204-175-426-11	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 204-075-611-19 ....UHC,UHM	EA	1
246	71	AOOOO		97499	204-175-426-13	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 204-075-611-25 ....UHC,UHM	EA	1
246	71	AOOOZ	1560-00-869-8154	97499	205-075-431-1	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 205-075-111-3 ....UHE,UHH,UHV,UHX	EA	1
246	71	AOOOZ	6150-00-924-0426	97499	205-075-431-7	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 205-075-111-9,-15, & -19.....................................UHE,UHH,UHV,UHX	EA	1
246	71	AOOOZ	6150-00-989-0054	97499	205-075-900-1	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 205-075-111-25 ....UHE,UHH,UHV,UHX	EA	1
246	71	AOOOO		97499	205-075-900-3	..CABLE ASSY,OVERHEAD CONSOLE-LH AFT U/O PN 205-075-111-5,-35,-39, -61,& 205-075-156-3...................UHE,UHH,UHV,UHX	EA	1
246	72	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 204-075-447-5.................UHB	EA	1
246	72A	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 204-175-414-3 & -5....UHB,UHC,UHM	EA	21
246	72B	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 204-175-426-11 & -13......UHC,UHM	EA	4
246	73	PAOZZ	5940-01-007-7876	81349	M7928/3-3	...SPLICE,CONDUCTOR U/O UH-1C PN 204-175-414-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	74	PAOZZ	5940-01-007-7877	81349	M7928/3-4	...SPLICE, CONDUCTO U/O UH-1C PN 204-175-414-5 ....UHB,UHC,UHM	EA	1
246	75	MOOZZ	5970-00-195-9548	97499	130-005-6-4	...INSULATION SLEEVING U/O PN 204-175-414-5..............UHB	EA	V
246	76	XDOZZ		97499	85T4-7-2	...INSULATION TUBE U/O PN 204-175-414-3..................UHB	FT	1
246	76A	XDOZZ		97499	85T4-7-2	...INSULATION TUBE U/O PN 204-175-414-5..............UHC,UHM	FT	6
246	77	PAOZZ	5365-00-820-4535	88044	AN3420-6	...BUSHING,RUBBER U/O PN 205-075-431-1.......UHE,UHH,UHV,UHX	EA	1
246	78	PAOZZ	5935-00-087-0053	96906	MS3110E8-4S	...CONNECTOR,RECEPT...........................UHE,UHH,UHV,UHX	EA	1
246	79	PBOZZ	5935-00-805-4991	96906	MS3106R14S7S	...CONNECTOR,PLUG,ELEC U/O PN 205-075-422-1 ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
246	80	PBOZZ	5935-00-819-6056	96906	MS3106R16S8S	...CONNECTOR,PLUG,ELEC U/O PN 205-075-422-1 & 205-075-431-1 ....UHE,UHH,UHV,UHX	EA	1
246	81	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	...CONNECTOR,PLUG,E U/O PN 205-075-422-1 & 205-075-431-1 ....UHE,UHH,UHV,UHX	EA	1
246	82	PAOZZ	5935-00-990-3791	77820	10-214614-7S	...CONNECTOR,PLUG,ELEC U/O PN 205-075-431-1 ....UHE,UHH,UHV,UHX	EA	1
246	83	PAOZZ	5935-00-546-5080	96906	MS3456W16S8S	...CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
246	84	PAOZZ	5365-00-141-6944	88044	AN3420-8	...BUSHING,RUBBER U/O PN 205-075-431-1.......UHE,UHH,UHV,UHX	EA	1
246	85	PAOZZ	5935-00-240-0173	96906	MS3057-4A	...CLAMP,CABLE,ELEC U/O PN 204-175-414-3 & 205-075-422-1 ....UHB,UHE,UHH,UHV,UHX	EA	1
246	86	PAOZZ	5935-00-240-0173	96906	MS3057-4A	...CLAMP,CABLE,ELEC U/O PN 204-175-414-5.............UHC,UHM	EA	2
246	87	PAOZZ	5935-00-280-2195	96906	MS3057-6A	...CLAMP,CABLE,ELECTRI U/O PN 205-075-422-1 & 205-075-431-1 ....UHE,UHH,UHV,UHX	EA	1
246	88	PBOZZ	5935-00-688-4026	96906	MS3057-8A	...CLAMP,CABLE,ELECTRI U/O PN 205-075-422-1 & 205-075-431-1 ....UHE,UHH,UHV,UHX	EA	1
246	90	PAOZZ	5940-00-204-8966	96906	MS25036-102	...TERMINAL,LUG U/O PN 205-075-422-1 & 205-075-431-1 ....UHB,UHE,UHH,UHV,UHX	EA	1
246	90A	PAOZZ	5940-00-204-8966	96906	MS25036-102	...TERMINAL,LUG U/O PN 204-175-426-11 & -13..........UHC,UHM	EA	43
246	90B	PAOZZ	5940-00-204-8966	96906	MS25036-102	...TERMINAL,LUG U/O PN 205-075-431-7 & 205-075-900-1,& -3 ....UHE,UHH,UHV,UHX	EA	33
246	91	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG..........UHB,UHE,UHH,UHV,UHX	EA	1
246	91A	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG U/O PN 204-175-414-5.................UHC,UHM	EA	3
246	91B	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG..........UHC,UHM	EA	2
246	92	PAOZZ	5940-00-113-8179	96906	MS25036-107	...TERMINAL,LUG..........UHB,UHC,UHM	EA	1
246	93	PAOZZ	5940-00-204-8990	96906	MS25036-111	...TERMINAL,LUG..........UHB	EA	1
246	93A	PAOZZ	5940-00-204-8990	96906	MS25036-111	...TERMINAL,LUG U/O PN 204-175-414-5, 204-175-426-11,-13 ....UHC,UHM	EA	4
246	93B	PAOZZ	5940-00-204-8990	96906	MS25036-111	...TERMINAL,LUG U/O PN 204-175-426-7...............UHC,UHM	EA	3
246	93C	PAOZZ	5940-00-204-8990	96906	MS25036-111	...TERMINAL,LUG U/O PN 205-075-431-1,-7......UHE,UHH,UHV,UHX	EA	20
246	94	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 205-075-422-1.....UHB,UHE,UHH,UHV,UHX	EA	1
246	94A	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG..........UHC,UHM	EA	2
246	94B	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 205-075-431-7.........UHE,UHH,UHV,UHX	EA	22
246	94C	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 205-075-900-1 & -3....UHE,UHH,UHV,UHX	EA	6
246	95	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG U/O PN 205-075-422-1 & 205-075-431-1 ....UHB,UHE,UHH,UHV,UHX	EA	1
246	95A	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG U/O PN 205-075-431-7 & 205-075-900-1, &-3 ....UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	96	PAOZZ	5940-00-113-8190	96906	MS25036-122	...TERMINAL,LUG U/O PN 205-075-422-1.....UHB,UHE,UHH,UHV,UHX	PG	1
246	96A	PAOZZ	5940-00-113-8190	96906	MS25036-122	...TERMINAL,LUG U/O PN 205-075-431-7 & 205-075-900-1, &-3 ....UHC,UHE,UHH,UHM,UHV,UHX	PG	2
246	97	PBOZZ	5940-00-688-6005	96906	MS25036-143	...TERMINAL,LUG U/O UH-1B PN 204-075-447-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	98	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	99	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O PN 205-075-422-1 & 205-075-431-1 ....UHB,UHE,UHH,UHV,UHX	EA	1
246	99A	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O (UH-1C) PN 204-175-426-7 & U/O PN 205-075-431-7..........UHC,UHE,UHH,UHM,UHV,UHX	EA	5
246	99B	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O (UH-1C) PN 204-175-426-11 & U/O PN 205-075-900-1..........UHC,UHE,UHH,UHM,UHV,UHX	EA	3
246	99C	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O (UH-1C) PN 204-175-426-13 & U/O PN 205-075-900-1..........UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNI
246	100	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O PN 205-075-422-1 & PN 205-075-431-1 ....UHB,UHE,UHH,UHV,UHX	EA	1
246	100A	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O (UH-1C) PN 204-175-414-5 & U/O PN 205-075-431-7,205-075-431-7,205-075-900-1,& -3 ....UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	100B	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O PN 204-175-426-7,-11,& -13.......UHC,UHM	EA	3
246	101	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG U/O PN 204-175-426-7, -11,& -13......UHC,UHM	EA	1
246	102	PAOZZ	5940-00-143-5284	96906	MS25036-115	...TERMINAL,LUG U/O UH-1C PN 204-175-414-5, 204-175-426-11,& -13..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	103	PAOZZ	5940-00-143-5284	96906	MS25036-115	...TERMINAL,LUG U/O PN 204-175-426-7................UHC,UHM	EA	2
246	104	PAOZZ	5940-00-557-4345	96906	MS25036-118	...TERMINAL,LUG U/O UH-1C PN 204-175-414-5, 204-175-426-11,& -13..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	104A	PAOZZ	5940-00-557-4345	81349	M5086/2-14-9	...TERMINAL,LUG U/O PN 204-175-426-7................UHC,UHM	EA	2
246	105	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG...........................UHB,UHE,UHH,UHV,UHX	EA	1
246	105A	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG.......................................UHC,UHM	EA	2
246	106	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	...WIRE,ELECTRICAL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	107	PBOZZ	6145-00-284-0657	96906	MS2519088	...WIRE,ELECTRICAL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	108	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	...WIRE,ELECTRICAL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	109	PBOZZ	6145-00-578-6604	96906	MS25190814	...WIRE,ELECTRICAL U/O UH-1C PN 204-175-414-5 ....UHB,UHC,UHM	FT	V
246	110	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	...WIRE,ELECTRICAL U/O UH-1C PN 204-175-414-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	111	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	...WIRE,ELECTRICAL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	112	PBOZZ	6145-00-851-8505	96906	MS25190820	...WIRE,ELECTRICAL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	113	PBOZZ	6145-00-819-0061	81349	MILW16878TYPEB20	...WIRE,ELECTRICAL.............................UHB,UHC,UHM	FT	V
246	114	PBOZZ	6145-00-578-7513	96906	MS25190810	...WIRE,ELECTRICAL U/O PN 205-075-431-7, 205-075-900-1,& -3 ....UHE,UHH,UHV,UHX	FT	V
246	115	PAOZZ	5910-00-236-8766	81349	M39003/01-3094	...CAPACITOR,FIXED,ELE U/O PN 205-075-431-1 ....UHE,UHH,UHV,UHX	EA	1
246	116	AOOOZ	1560-00-299-1012	97499	204-075-949-3	..CABLE ASSY,OVERHEAD CONSOLE-RH FORWARD U/O (UH-1B) PN 204-075-602-5,-7 & 204-075-610-11..................UHB,UHC,UHM	EA	1
246	116	AOOOZ	1560-00-299-1004	97499	205-075-419-3	..CABLE ASSY,OVERHEAD CONSOLE-RH FORWARD U/O PN 205-075-143-5,-9, -15,& 205-075-111-5....................UHE,UHH,UHV,UHX	EA	1
246	116	AOOOZ	1560-00-924-7708	97499	205-075-437-3	..CABLE ASSY,OVERHEAD CONSOLE-RH FORWARD U/O PN 205-075-111-11, -21,-27-47,-49,& 205-075-156-5............UHE,UHH,UHV,UHX	EA	1
246	117	PAOZZ	5935-00-849-7188	96906	MS3110E16-26S	...CONNECTOR,RECEPT ELECTRICAL..............UHE,UHH,UHV,UHX	EA	1
246	118	PAOZZ	5340-00-984-2123	77820	10-101033-11	...PLUG,PROTECTIVE,DUS DUST U/O PN 204-075-949-3 ....UHB,UHC,UHM	EA	1
246	118	PAOZZ	5340-00-984-2123	77820	10-101033-11	...PLUG,PROTECTIVE,DUS DUST..................UHE,UHH,UHV,UHX	EA	14
246	119	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG..UHB,UHC,UHM	EA	10
246	119	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG...................................UHE,UHH,UHV,UHX	EA	23
246	120	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG..UHB,UHC,UHM	EA	2
246	120	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG...................................UHE,UHH,UHV,UHX	EA	3
246	121	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG...................................UHE,UHH,UHV,UHX	EA	15
246	121	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG..UHB,UHC,UHM	EA	18
246	122	PBOZZ	5940-00-688-6005	96906	MS25036-143	...TERMINAL,LUG.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	123	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR..................................UHB,UHC,UHM	EA	15
246	123	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR...........................UHE,UHH,UHV,UHX	EA	1
246	124	XDOZZ		97499	85T4-7-2	...INSULATION TUBE.............................UHE,UHH,UHV,UHX	FT	16

(1) ILLUSTRATION (A) FIG NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
246	125	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	..WIRE,ELECTRICAL U/O PN 205-075-419-3 ..... UHE,UHH,UHV,UHX	FT	V
246	126	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O PN 205-075-419-3 ... UHE,UHH,UHV,UHX	FT	V
246	127	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O PN 205-075-419-3 ... UHE,UHH,UHV,UHX	FT	V
246	128	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	129	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL U/O PN 205-075-437-3 ..... UHE,UHH,UHV,UHX	FT	V
246	130	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG U/O PN 205-075-419-3 ... UHE,UHH,UHV,UHX	EA	2
246	131	PAOZZ	5940-00-143-4775	96906	MS25036-156	...TERMINAL,LUG U/O PN 205-075-419-3 .... UHE,UHH,UHV,UHX	EA	2
246	132	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	...CONNECTOR,PLUG,ELEC OVERHEAD U/O PN 205-075-437-3 .... UHE,UHH,UHV,UHX	EA	1
246	133	AOOOZ	1560-00-299-0986	97499	204-075-421-11	..WIRING ASSEMBLY CONSOLE-RH INTERNAL U/O (UH-1B) PN 204-075-602-5,-7,& 204-075-610-5 U/O (UH-1C) PN 204-075-610-11 .... UHB,UHC,UHM	EA	1
246	134	AOOOZ	6150-00-924-0432	97499	204-175-429-3	..WIRING ASSEMBLY OVERHEAD CONSOLE-RH INTERNAL U/O PN 204-075-611-5 & -15 .... UHC,UHM	EA	1
246	135	AOOOZ	6110-00-928-6302	97499	204-175-429-7	..WIRING ASSY,OVERHEA CONSOLE-RH INTERNAL U/O PN 204-075-611-21 .... UHC,UHM	EA	1
246	136	AOOOZ	1560-00-299-1005	97499	205-075-419-5	..WIRING ASSEMBLY OVERHEAD CONSOLE-RH INTERNAL U/O PN 204-075-143-5,-9 & -15 &205-075-111-5 .... UHE,UHH,UHV,UHX	EA	1
246	137	AOOOZ	6150-00-924-0433	97499	205-075-419-7	..WIRING ASSY,OVERHEA CONSOLE-RH INTERNAL U/O PN 205-075-111-11 .... UHE,UHH,UHV,UHX	EA	1
246	138	A0000		97499	205-075-924-1	..CABLE ASSY,OVERHEAD CONSOLE-RH INTERNAL U/O PN 205-075-111-49, 205-075-156-5 .... UHE,UHH,UHV,UHX	EA	1
246	139	A0000		97499	205-075-924-5	..CABLE ASSY,OVERHEAD CONSOLE-RH INTERNAL U/O PN 205-075-156-29 .... UHE,UHH,UHV,UHX	EA	1
246	140	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 204-075-421-11 .... UHB,UHC,UHM	EA	24
246	140	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-419-5 & 205-075-924-5 .... UHE,UHH,UHV,UHX	EA	27
246	141	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-419-7 .... UHE,UHH,UHV,UHX	EA	25
246	142	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	143	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
246	144	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O PN 204-075-421-11 .... UHB,UHC,UHM	EA	26
246	144A	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O (UH-1C) PN 204-175-429-3 U/O PN 205-075-419-5 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	30
246	144B	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-429-7 .... UHC,UHM	EA	28
246	144C	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O PN 205-075-419-7 .... UHE,UHH,UHV,UHX	EA	27
246	144D	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG U/O PN 205-075-924-1 & -5 .... UHE,UHH,UHV,UHX	EA	25
246	145	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG U/O UH-1D PN 205-075-419-5 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
246	145A	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG .... UHE,UHH,UHV,UHX	EA	1
246	145B	XDOZZ	5940-00-828-2809	96906	MS25189-7	...TERMINAL,LUG U/O PN 204-075-421-11 & 205-075-924-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
246	146	PAOZZ	5935-00-807-7999	96906	MS3106R28-21P	...CONNECTOR,PLUG,ELEC .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	147	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	...WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
246	148	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	149	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	...WIRE,ELECTRICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	150	PBOZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	151	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR U/O PN 204-175-429-3 & -7 .... UHC,UHM	EA	1
246	152	AOOOZ	1560-00-299-1009	97499	204-075-900-13	..CABLE ASSY,OVERHEAD CONSOLE-RH AFT U/O (UH-1B) PN 204-075-602-5,-7,& 204-075-610-5 U/O (UH-1C) PN 204-075-610-11 .... UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
246	152	A000Z	6150-00-924-0428	97499	204-175-428-5	..CABLE ASSY,OVERHEAD CONSOLE-RH AFT U/O PN 205-075-611-5,-15, & -21..........UHC,UHM	EA	1
246	152	A000Z	1560-00-299-1003	97499	205-075-419-1	..CABLE ASSY,OVERHEAD CONSOLE-RH AFT U/O PN 205-075-143-5,9, 15,& 204-075-111-5 & -11..........UHE,UHH,UHV,UHX	EA	1
246	152	A000Z	1560-00-924-7709	97499	205-075-437-1	..CABLE ASSY,OVERHEAD CONSOLE-RH AFT U/O PN 205-075-111-11, -21,-27,-43,47,& 49..........UHE,UHH,UHV,UHX	EA	1
246	152	A0000		97499	205-075-437-13	..CABLE ASSY,OVERHEAD CONSOLE-RH AFT U/O PN 205-075-156-5 ....UHE,UHH,UHV,UHX	EA	1
246	153	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG..........UHB,UHC,UHM	EA	20
246	153A	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG U/O PN 205-075-437-1..........UHE,UHH,UHV,UHX	EA	14
246	154	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG..........UHC,UHM	EA	2
246	155	PAOZZ	5940-00-283-5280	96906	MS25036-106	...TERMINAL,LUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	156	XBOZZ	5940-00-143-4780	96906	MS25036-108	...TERMINAL,LUG..........UHB,UHC,UHM	EA	2
246	156	XBOZZ	5940-00-143-4780	96906	MS25036-108	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
246	157	PAOZZ	5940-00-143-4793	96906	MS25036-110	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
246	157	PAOZZ	5940-00-143-4793	96906	MS25036-110	...TERMINAL,LUG..........UHB,UHC,UHM	EA	2
246	158	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG..........UHB,UHC,UHM	EA	2
246	158	PAOZZ	5940-00-114-1310	96906	MS25036-119	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
246	159	PAOZZ	5940-00-113-8190	96906	MS25036-122	...TERMINAL,LUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	PG	3
246	160	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG..........UHB,UHC,UHM	EA	13
246	160	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	20
246	161	PAOZZ	5940-00-143-4774	96906	MS25036-153	...TERMINAL,LUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
246	162	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR..........UHB,UHC,UHM	EA	4
246	162	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR..........UHE,UHH,UHV,UHX	EA	20
246	163	PAOZZ	5940-01-007-7876	81349	M7928/3-3	...SPLICE,CONDUCTOR..........UHC,UHM	EA	1
246	164	PAOZZ	5940-00-143-4794	96906	MS25036-112	...TERMINAL,LUG..........UHB,UHC,UHM	EA	2
246	165	PBOZZ	6145-00-578-6694	81349	M5086/2-6-9	...WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	166	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	...WIRE,ELECTRICAL..........UHB,UHC,UHM	FT	V
246	167	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	...WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	168	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	...WIRE,ELECTRICAL..........UHC,UHM	FT	V
246	169	PBOZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
246	170	MOOZZ	5970-00-195-9548	97499	130-005-6-4	...INSULATION SLEEVING..........UHE,UHH,UHV,UHX	EA	2
246	171	PAOZZ	DELETED	96906	MS20659-126	...TERMINAL,LUG U/O PN 205-075-437-1..........UHE,UHH,UHV,UHX	EA	1
246	171A	A0000		97499	204-075-964-21	..CABLE ASSEMBLY..........UHC,UHM	EA	1
246	171B	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG..........UHC,UHM	EA	1
246	171C	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG..........UHC,UHM	EA	1
246	171D	PROZZ	6145-00-851-8505	96906	MS25190B20	...WIRE,ELECTRICAL..........UHC,UHM	FT	V
246	171E	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR..........UHC,UHM	EA	2
246	171F	PAOZZ	5935-00-557-1973	96906	MS25183A10SL4S	...CONNECTOR,PLUG,ELEC..........UHC,UHM	EA	1
246	172	MFOZZ	5340-00-589-4977	96906	MS20253-2-2450	..PIN,STRAIGHT..........UHE,UHH,UHV,UHX	EA	2
246	173	PAOZZ	1560-00-916-5921	97499	204-075-256-33	..PANEL,BLANK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	174	PB000	1680-00-126-1989	97499	204-075-700-1	..PANEL ASSY, DC POWER CONTROL U/O PN 205-075-143-5,-9,-15 & 205-075-111-5 & -11 SEE FIG.255 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	174	PB000	1680-00-181-3382	97499	204-075-700-3	..PANEL ASSY, DC POWER CONTROL U/O PN 205-075-111-21,-27,-43,-47,-49,& 205-075-156-5 SEE FIG.256 FOR BREAKDOWN	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
246	175	XBOOZ	1680-00-168-6094	97499	204-075-206-1	..CONTROL PANEL,ASSY AC POWER SEE FIG.255 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	176	PBOOO	6110-00-868-4850	97499	204-075-707-1	..PANEL ASSY INSTRUMENT LIGHT CONTROL SEE FIG.253 FOR BREAKDOWN.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	177	PAOZZ	1560-00-939-7622	97499	204-075-266-1	..PANEL,BLANK......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	177A	PAOZZ	5925-00-914-3505	96906	MS22073-2	.CIRCUIT BREAKER USE-AFT-CMPL-W MWO 55-1520-210-30-48....UHV	EA	1
246	178	PAOZZ	1560-00-915-5870	97499	204-075-266-9	..PANEL,BLANK......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	179	PBOOO	1560-00-867-1186	97499	205-075-201-3	..CONTROL ASSY, HEATING U/O PN 204-075-602-3 & 204-075-610-3 & -9 SEE FIG.249 FOR BREAKDOWN....................UHB,UHC,UHM	EA	1
246	179	XDOOO	1680-00-922-8250	97499	204-075-826-1	..PANEL ASSY,HEATING CONTROL U/O PN 204-075-611-3,-9,-13,-19,& -35 SEE FIG.251 FOR BREAKDOWN....................UHC,UHM	EA	1
246	179	PBOOO	1560-00-915-5958	97499	205-075-201-1	..PANEL ASSY,HEATING CONTROL U/O PN 205-075-143-3,-13 & 205-075-111-3 SEE FIG.250 FOR BREAKDOWN...........UHE,UHH,UHV,UHX	EA	1
246	179	PBOOO	1560-00-915-5959	97499	204-075-826-3	..CONTROL ASSY, HEATING PANEL U/O PN 205-075-111-9,-15,-19,-25,& -35 SEE FIG.251 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
246	179	XDOOZ	1680-00-157-6472	97499	205-075-801-1	..CONTROL PANEL,ASSY HEATING U/O PN 205-075-111-39,-61,& 205-075-156-3 SEE FIG.252 FOR BREAKDOWN.......UHE,UHH,UHV,UHX	EA	1
246	180	XBOOO	6110-00-868-4851	97499	204-075-209-9	..PANEL ASSY, MISCELLANEOUS CONTROL U/O (UH-1B) PN 204-075-602-3 U/O PN 205-075-143-3 & -13 SEE FIG.247 FOR BREAKDOWN ....UHB,UHE,UHH,UHV,UHX	EA	1
246	180	XDOOZ		97499	204-075-819-1	..PANEL ASSY, MISCELLANEOUS CONTROL U/O (UH-1B) PN 204-075-610-3 U/O PN 205-075-111-3,-9,-15,-19,-25,-35,-39,-61 & 205-075-156-3 SEE FIG.247 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	181	PBOOO	1560-00-867-1240	97499	204-075-811-1	..CONTROL PANEL,ASSY EXTERIOR LIGHTS SEE FIG.247 FOR BREAKDOWN.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	182	XBOOO	1680-00-854-2249	97499	204-075-702-1	..PANEL ASSY,DOME LIGHT U/O (UH-1C) PN 204-075-611-3,-9,-13 U/O PN 205-075-143-3,-13 & 205-075-111-3,-9,-15 & -19 SEE FIG.247 FOR BREAKDOWN FIG.247 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	182	XBOOO	1680-00-148-9116	97499	204-075-589-1	..CONTROL ASSY,DOME LIGHT U/O (UH-1C) PN 204-075-611-19 & -25 U/O PN 205-075-111-25,-35,-39,-61 & PN 205-075-156-3 SEE FIG.247 FOR BREAKDOWN FOR BREAKDOWN ....UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	183	PAOZZ	9905-00-944-1740	97499	204-075-289-1	..PLATE,MARKING,BLANK............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
246	184	XBOZZ	9905-00-939-8223	97499	204-075-289-125	..PLATE,IDENTIFICATIO MISSILE POWER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	185	XBOZZ	9905-00-182-6117	97499	204-075-289-149	..PLATE,IDENTIFICATIO MISSILE JETTISON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	186	XBOZZ	9905-00-182-6118	97499	204-075-289-151	..PLATE,IDENTIFICATIO YAW STABILIZER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	187	PBOZZ	9905-00-939-8204	97499	204-075-289-271	..PLATE,IDENTIFICATIO GUN FIRE CONTROL.......UHE,UHH,UHV,UHX	EA	1
246	188	XBOZZ		97499	204-075-289-531	..PLATE,IDENTIFICATIO CONSOLE U/O PN 205-075-111-41 ....UHE,UHH,UHV,UHX	EA	1
246	189	XBOZZ		97499	204-075-289-383	..NAMEPLATE-IFF APX..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	190	XBOZZ	9905-00-923-4343	97499	204-075-289-273	..PLATE,IDENTIFICATIO CONTROL...............UHE,UHH,UHV,UHX	EA	1
246	191	XBOZZ	9905-00-939-8273	97499	204-075-289-275	..PLATE,IDENTIFICATIO GUN POWER.............UHE,UHH,UHV,UHX	EA	1
246	193	XBOZZ		97499	204-075-289-383	..NAMEPLATE-IFF APX..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	193	PBOZZ	9905-00-939-8243	97499	204-075-289-283	..PLATE,IDENTIFICATIO ROCKET JETTISON........UHE,UHH,UHV,UHX	EA	1
246	194	XBOZZ	9905-00-939-8206	97499	204-075-289-287	..PLATE,IDENTIFICATIO MARK VIII SIGHT POWER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	195	PAOZZ	9905-00-939-8197	97499	204-075-289-137	..PLATE,IDENTIFICATIO MARKER BEACON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	196	XBOZZ		97499	204-075-289-405	..PLATE,IDENTIFICATIO VHF NAVIGATION OMNI INDICATOR	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNI'
						..............UHB,UHC,UHE,UHH,UHM,UHV,UHX		
246	197	XBOZZ		97499	204-075-289-403	..PLATE,IDENTIFICATIO LF NAV ADF ....UHB,UHC,UHE,UHH,UHM,UHV UHX	EA	1
246	198	PBOZZ	9905-00-939-8258	97499	204-075-289-351	..PLATE,IDENTIFICATIO COPILOTS AND CREWS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	199	XBOZZ	9905-00-923-4330	97499	204-075-289-265	..PLATE,IDENTIFICATIO INTERCOM..........UHE,UHH,UHV,UHX	EA	1
246	200	XBOZZ		97499	204-075-289-461	..PLATE,IDENTIFICATIO STATIC INVERTER ARC-102 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	201	XBOZZ		97499	204-075-289-509	..PLATE,IDENTIFICATIO ANTENNA COUPLER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	202	PAOZZ	9905-00-915-6038	97499	204-075-289-313	..PLATE,DESIGNATION HF TRANSCEIVER ARC-102 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	203	PAOZZ	9905-00-915-6037	97499	204-075-289-315	..PLATE,DESIGNATION FM TRANSCEIVER ARC-54 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	204	PAOZZ	9905-00-939-8199	97499	204-075-289-269	..PLATE,IDENTIFICATIO VHF ARC-51 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	205	XBOZZ	1560-00-789-1556	97499	204-075-289-103	..PLATE,DESIGNATION- VHF TRANSMITTER.........UHE,UHH,UHV,UHX	EA	1
246	206	XBOZZ	9905-00-128-6683	97499	204-075-289-381	..PLATE,IDENTIFICATIO VHF TRANSCEIVER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	206A	XBOZZ	9905-00-134-3553	97499	204-075-289-99	..PLATE,DESIGNATION- VHF REC.................UHE,UHH,UHV,UHX	EA	1
246	207	XBOZZ		97499	204-075-289-19	..NAMEPLATE-WINDSHIEL WIPER.................UHE,UHH,UHV,UHX	EA	1
246	208	PBOZZ	9905-00-923-4331	97499	204-075-289-175	..PLATE,IDENTIFICATIO PILOT WINDSHIELD WIPER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	209	XBOZZ	9905-01-016-1393	97499	204-075-289-507	..PLATE,IDENTIFICATIO VOICE SECURITY.........UHE,UHH,UHV,UHX	EA	1
246	210	XBOZZ	1560-00-128-6663	97499	204-075-289-21	..PLATE,IDENTIFICATIO SEARCH LIGHT POWER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	211	XBOZZ	1560-00-128-6665	97499	204-075-289-23	..PLATE,IDENTIFICATIO LANDING LIGHT POWER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	212	XBOZZ	1560-00-128-6669	97499	204-075-289-25	..PLATE,IDENTIFICATIO LANDING & SEARCH LIGHT CONTROL ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	213	XBOZZ	9905-00-851-9084	97499	204-075-289-27	..PLATE,IDENTIFICATIO ANTI-COLLISION LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	214	XBOZZ	9905-00-939-8202	97499	204-075-289-353	..PLATE,IDENTIFICATIO FUSE LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	215	XDOZZ	9905-00-126-4282	97499	204-075-289-29	..PLATE,IDENTIFICATIO NAVIGATIONAL LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	216	XBOZZ	9905-00-126-4279	97499	204-075-289-31	..PLATE,IDENTIFICATIO DOME LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	217	XBOZZ	9905-00-052-0687	97499	204-075-289-33	..PLATE,IDENTIFICATIO COCKPIT LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	218	PBOZZ	9905-00-052-0678	97499	204-075-289-35	..PLATE,IDENTIFICATIO CAUTION LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	219	PAOZZ	9905-00-052-0686	97499	204-075-289-37	..PLATE,IDENTIFICATIO CONSOLE PEDESTAL LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	220	XBOZZ	9905-00-126-4175	97499	204-075-289-39	..PLATE,IDENTIFICATIO INSTRUMENT PANEL LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	221	XBOZZ	9905-00-126-4181	97499	204-075-289-41	..PLATE,IDENTIFICATIO INSTRUMENT SECTION LIGHTS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	222	XBOZZ		97499	204-075-289-43	..NAMEPLATE-HEATED BL BLANKET....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	223	XBOZZ	1560-00-128-6689	97499	204-075-289-45	..PLATE,IDENTIFICATIO VOLTMETER NON ESSENTIAL BUS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	224	PBOZZ	1560-00-872-7907	97499	204-075-289-67	..PLATE,DESIGNATION,- PILOT TUBE HEATER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	225	XBOZZ	9905-00-903-3527	97499	204-075-289-47	..PLATE,DESIGNATION,- BLEED AIR HEATING......UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	
245	226	XBOZZ	9905-01-062-6319	97499	204-075-289-499	..NAMEPLATE-C
246	227	XBOZZ		97499	204-075-289-453	..NAMEPLATE-C
246	228	PBOZZ	9905-00-111-6894	97499	204-075-289-53	..PLATE, IDENT
246	229	XBOZZ	9905-00-939-8201	97499	204-075-289-129	..PLATE, IDENT
246	230	PBOZZ	9905-00-903-3526	97499	204-075-289-55	..PLATE, DESIGN
246	231	PBOZZ	9905-00-903-3528	97499	204-075-289-57	..PLATE, DESIGN
245	232	XBOZZ	9905-00-903-3529	97499	204-075-289-59	..PLATE, DESIGN
246	233	XBOZZ	9905-00-903-3530	97499	204-075-289-61	..PLATE, DESIGN
245	234	XBOZZ	9905-00-126-4230	97499	204-075-289-63	..PLATE, IDENT
246	235	PBOZZ	9905-00-126-4244	97499	204-075-289-65	..PLATE, IDENT
246	236	XBOZZ	9905-00-912-7550	97499	204-075-289-283	..PLATE, IDENT
246	237	XBOZZ	1560-00-128-6703	97499	204-075-289-81	..PLATE, IDENT
246	238	XBOZZ	1560-00-128-6696	97499	204-075-289-77	..PLATE, IDENTIF
246	238	PAOZZ	9905-00-463-4773	97499	204-075-289-511	..PLATE, IDENTIF 28
245	239	PAOZZ	9905-00-463-4774	97499	204-075-289-553	..PLATE, IDENTIF 27
246	240	PAOZZ	9905-00-128-6697	97499	204-075-289-73	..PLATE, IDENTIF
246	241	XBOZZ	1560-00-128-6701	97499	204-075-289-75	..PLATE, IDENTIF [illegible]
246	242	XBOZZ	1560-00-128-6695	97499	204-075-289-71	..PLATE, IDENTIF
246	243	XBOZZ	1560-00-128-6683	97499	204-075-289-69	..PLATE, IDENTIF
246	244	XBOZZ	9905-00-126-4253	97499	204-075-289-83	..PLATE, DESIGN
246	245	XBOZZ	9905-00-126-4254	97499	204-075-289-85	..PLATE, IDENTIF
246	246	XBOZZ	9905-00-128-6587	97499	204-075-289-249	..NAMEPLATE-FUE [illegible]
246	246	XBOZZ		97499	205-075-289-901	..PLATE, DESIGN [illegible]
246	247	XBOZZ	9905-00-128-6681	97499	204-075-289-106	..PLATE, IDENTIF
246	248	XBOZZ		97499	204-075-289-107	..NAMEPLATE-RO
245	249	PAOZZ	9905-00-939-8195	97499	204-075-289-105	..PLATE, IDENTIFIC
246	250	PAOZZ	9905-00-126-4287	97499	204-075-289-91	..PLATE, IDENTIFIC
246	251	XDOZZ		97499	204-075-289-93	..PLATE, IDENTIFIC
246	252	PBOZZ	5925-00-681-4962	96906	MS25244-10	..CIRCUIT BREAK

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
246	253	MOOZZ		99551	U6444	..WIRE ASSY....................................UHE,UHH,UHV,UHX	EA	1
246	254	MOOZZ		99551	U6437	..WIRE ASSY....................................UHE,UHH,UHV,UHX	EA	1
246	255	PBOZZ	5925-00-686-3297	96906	MS25244-5	..CIRCUIT BREAKER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	27
246	256	PAOZZ	5925-00-805-2833	96906	MS25244-25	..CIRCUIT BREAKER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	257	PAOZZ	5925-00-686-3299	96906	MS25244-35	..CIRCUIT BREAKER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	258	PAOZZ	5925-00-686-3301	96906	MS25244-15	..CIRCUIT BREAKER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	259	PAOZZ	5925-00-807-7687	79405	105-250-101	..CIRCUIT BREAKER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	260	PAOZZ	6150-00-156-4021	97499	205-075-635-5	..INSULATED BUS BAR U/O PN 205-075-156-27,-29 ....UHE,UHH,UHV,UHX	EA	2
246	260	PAOZZ	6150-00-156-4023	97499	205-075-635-9	..INSULATED BUS BAR U/O PN 205-075-156-29....UHE,UHH,UHV,UHX	EA	2
246	260	PAOZZ	6150-00-156-4022	97499	205-075-635-17	..INSULATED BUS BAR U/O PN 205-075-156-27,-29 ....UHE,UHH,UHV,UHX	EA	1
246	260	PAOZZ	6150-00-225-0267	97499	20-077-8A2D	..BUS,CONDUCTOR....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
246	261	MOOZZ	6150-00-225-0270	97499	20-077-4A2B	..BUS,CONDUCTOR....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
246	262	PAOZZ	6150-00-828-3094	97499	20-077-2A2A	..BUS,CONDUCTOR....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	263	PAOZZ	6150-00-225-0269	97499	20-077-5A2B	..BUS,CONDUCTOR....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	264	PAOZZ	6150-00-225-0267	97499	20-077-8A2D	..BUS,CONDUCTOR....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	265	PAOZZ	1560-00-867-1242	97499	204-075-813-1	..FRAME ASSY,-LH..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
246	266	PAOZZ	1560-00-867-1236	97499	204-075-813-2	..FRAME ASSY,-RH..................................UHE,UHH,UHV,UHX	EA	1
246	267	PAOZZ	5925-00-686-3298	96906	MS25244-7 1/2	CIRCUIT BREAKER ....UHH,UHV,UHM	EA	1

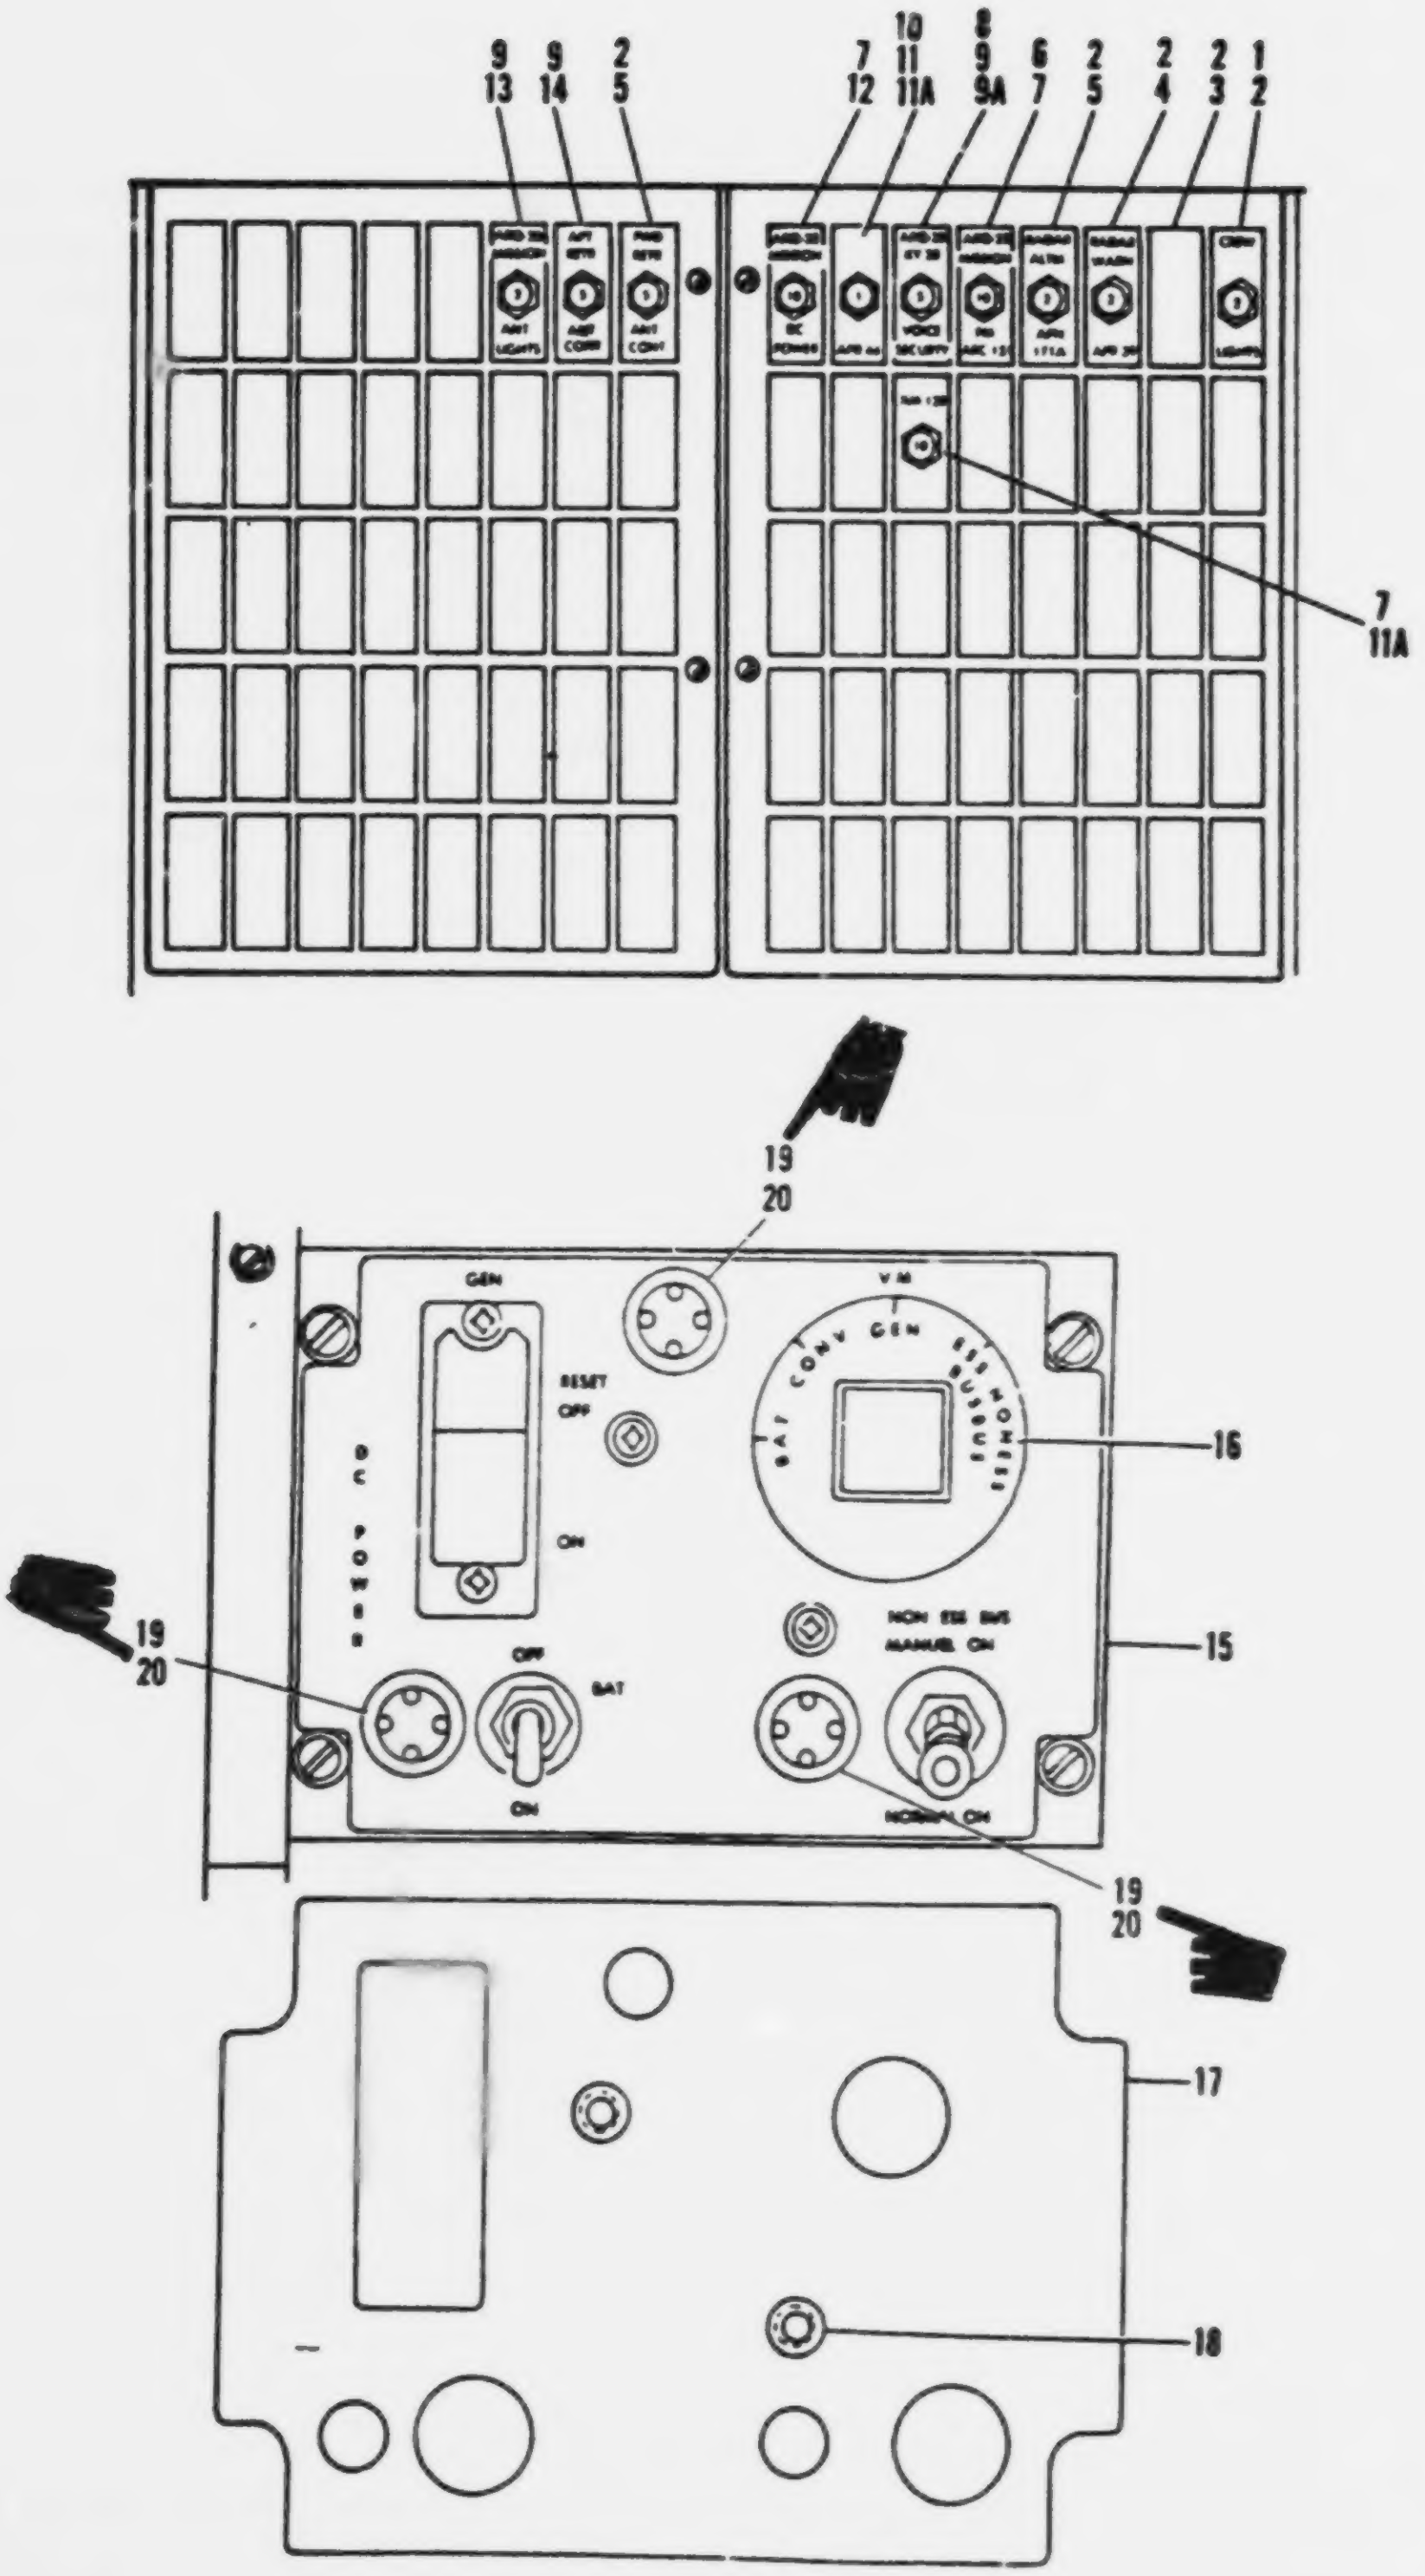
9
13
9
14
2
5
7
12
10
11
11A
8
9
9A
6
7
2
5
2
4
2
3
1
2
7
11A
19
20
GEN
RESET
OFF
ON
D C POWER
VM
BAT CONV GEN ESS BUS NONESS BUS
16
NON ESS BUS
MANUAL ON
15
19
20
OFF
BAT
ON
NORMAL ON
19
20
17
18

Figure 246A. Console Installation, Overhead

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
246A		XCFZZ		20309	ES-F-212989	CONSOLE INSTL, OVERHEAD (PHASE 1A) SEE FIG.5A FOR NHA....UHE	EA	1
246A		XCFZZ		20309	ES-F-221240	CONSOLE OVERHEAD (PHASE 1B) SEE FIG.5A FOR NHA...........UHE	EA	1
246A		XCFZZ		20309	ES-F-221505	OVERHEAD CONSOLE INSTL.SEE FIG.5R FOR NHA,SEE FIG.246B FOR BREAKDOWN................................UHX	EA	1
246A	1	PBOZZ	9905-01-069-1314	20309	ES-C-212982-11	.PLATE, IDENTIFICATIO..............................UHE	EA	1
246A	2	PAOZZ	5925-00-914-3505	96906	MS22073-2	.CIRCUIT BREAKER..............................UHE	EA	3
246A	3	PBOZZ	9905-01-137-4783	20309	ES-C-212982-1	.PLATE U/O PN ES-F-212989..............................UHE	EA	1
246A	4	PBOZZ	9905-01-137-7479	20309	ES-C-212982-6	.PLATE, INSTRUCTION..............................UHE	EA	1
246A	5	PBOZZ	9905-01-137-7477	20309	ES-C-212982-4	.PLATE, INSTRUCTION..............................UHE	EA	1
246A	6	PBOZZ	9905-01-137-7480	20309	ES-C-212982-7	.PLATE, INSTRUCTION..............................UHE	EA	1
246A	7	PAOZZ	5925-00-681-4952	96906	MS25244-10	.CIRCUIT BREAKER..............................UHE	EA	3
246A	8	PAOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER..............................UHE	EA	4
246A	9	PBOZZ	9905-01-137-7475	20309	ES-C-212982-2	.PLATE, INSTRUCTION U/O PN ES-F-212989..............................UHE	EA	1
246A	9A	PBOZZ	9905-01-137-7478	20309	ES-C-212982-5	.PLATE, INSTRUCTION U/O PN ES-F-221240..............................UHE	EA	1
246A	10	PAOZZ	5925-00-686-3301	96906	MS25244-15	.CIRCUIT BREAKER U/O PN ES-F-212989..............................UHE	EA	1
246A	11	PBOZZ	9905-01-137-7476	20309	ES-C-212982-3	.PLATE, INSTRUCTION..............................UHE	EA	1
246A	11A	PBOZZ	9905-01-225-3922	20309	ES-C-221231	.PLATE, IDENTIFICATIO U/O PN ES-F-221240..............................UHE	EA	1
246A	12	PBOZZ		20309	ES-C-212982-9	.PLATE, INSTRUCTION..............................UHE	EA	1
246A	13	PBOZZ		20309	ES-C-212982-10	.PLATE..............................UHE	EA	1
246A	14	PBOZZ	9905-01-137-7481	20309	ES-C-212982-8	.PLATE, INSTRUCTION..............................UHE	EA	1
246A	15	AOOOO		20309	ES-D-221446	.CONTROL PANEL..............................UHE	EA	1
246A	16	MFOZZ		20309	ES-B-221428	..KNOB..............................UHE	EA	1
246A	17	MFOZZ		20309	ES-D-221448	..PANEL ASSEMBLY..............................UHE	EA	1
246A	18	PAOZZ	5325-00-817-0510	96906	MS25381-1	...GROMMET, METALLIC..............................UHE	EA	2
246A	19	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	..FILTER,LIGHT,NVG..............................UHE,UHX	EA	3
246A	20	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT..............................UHE,UHX	EA	3

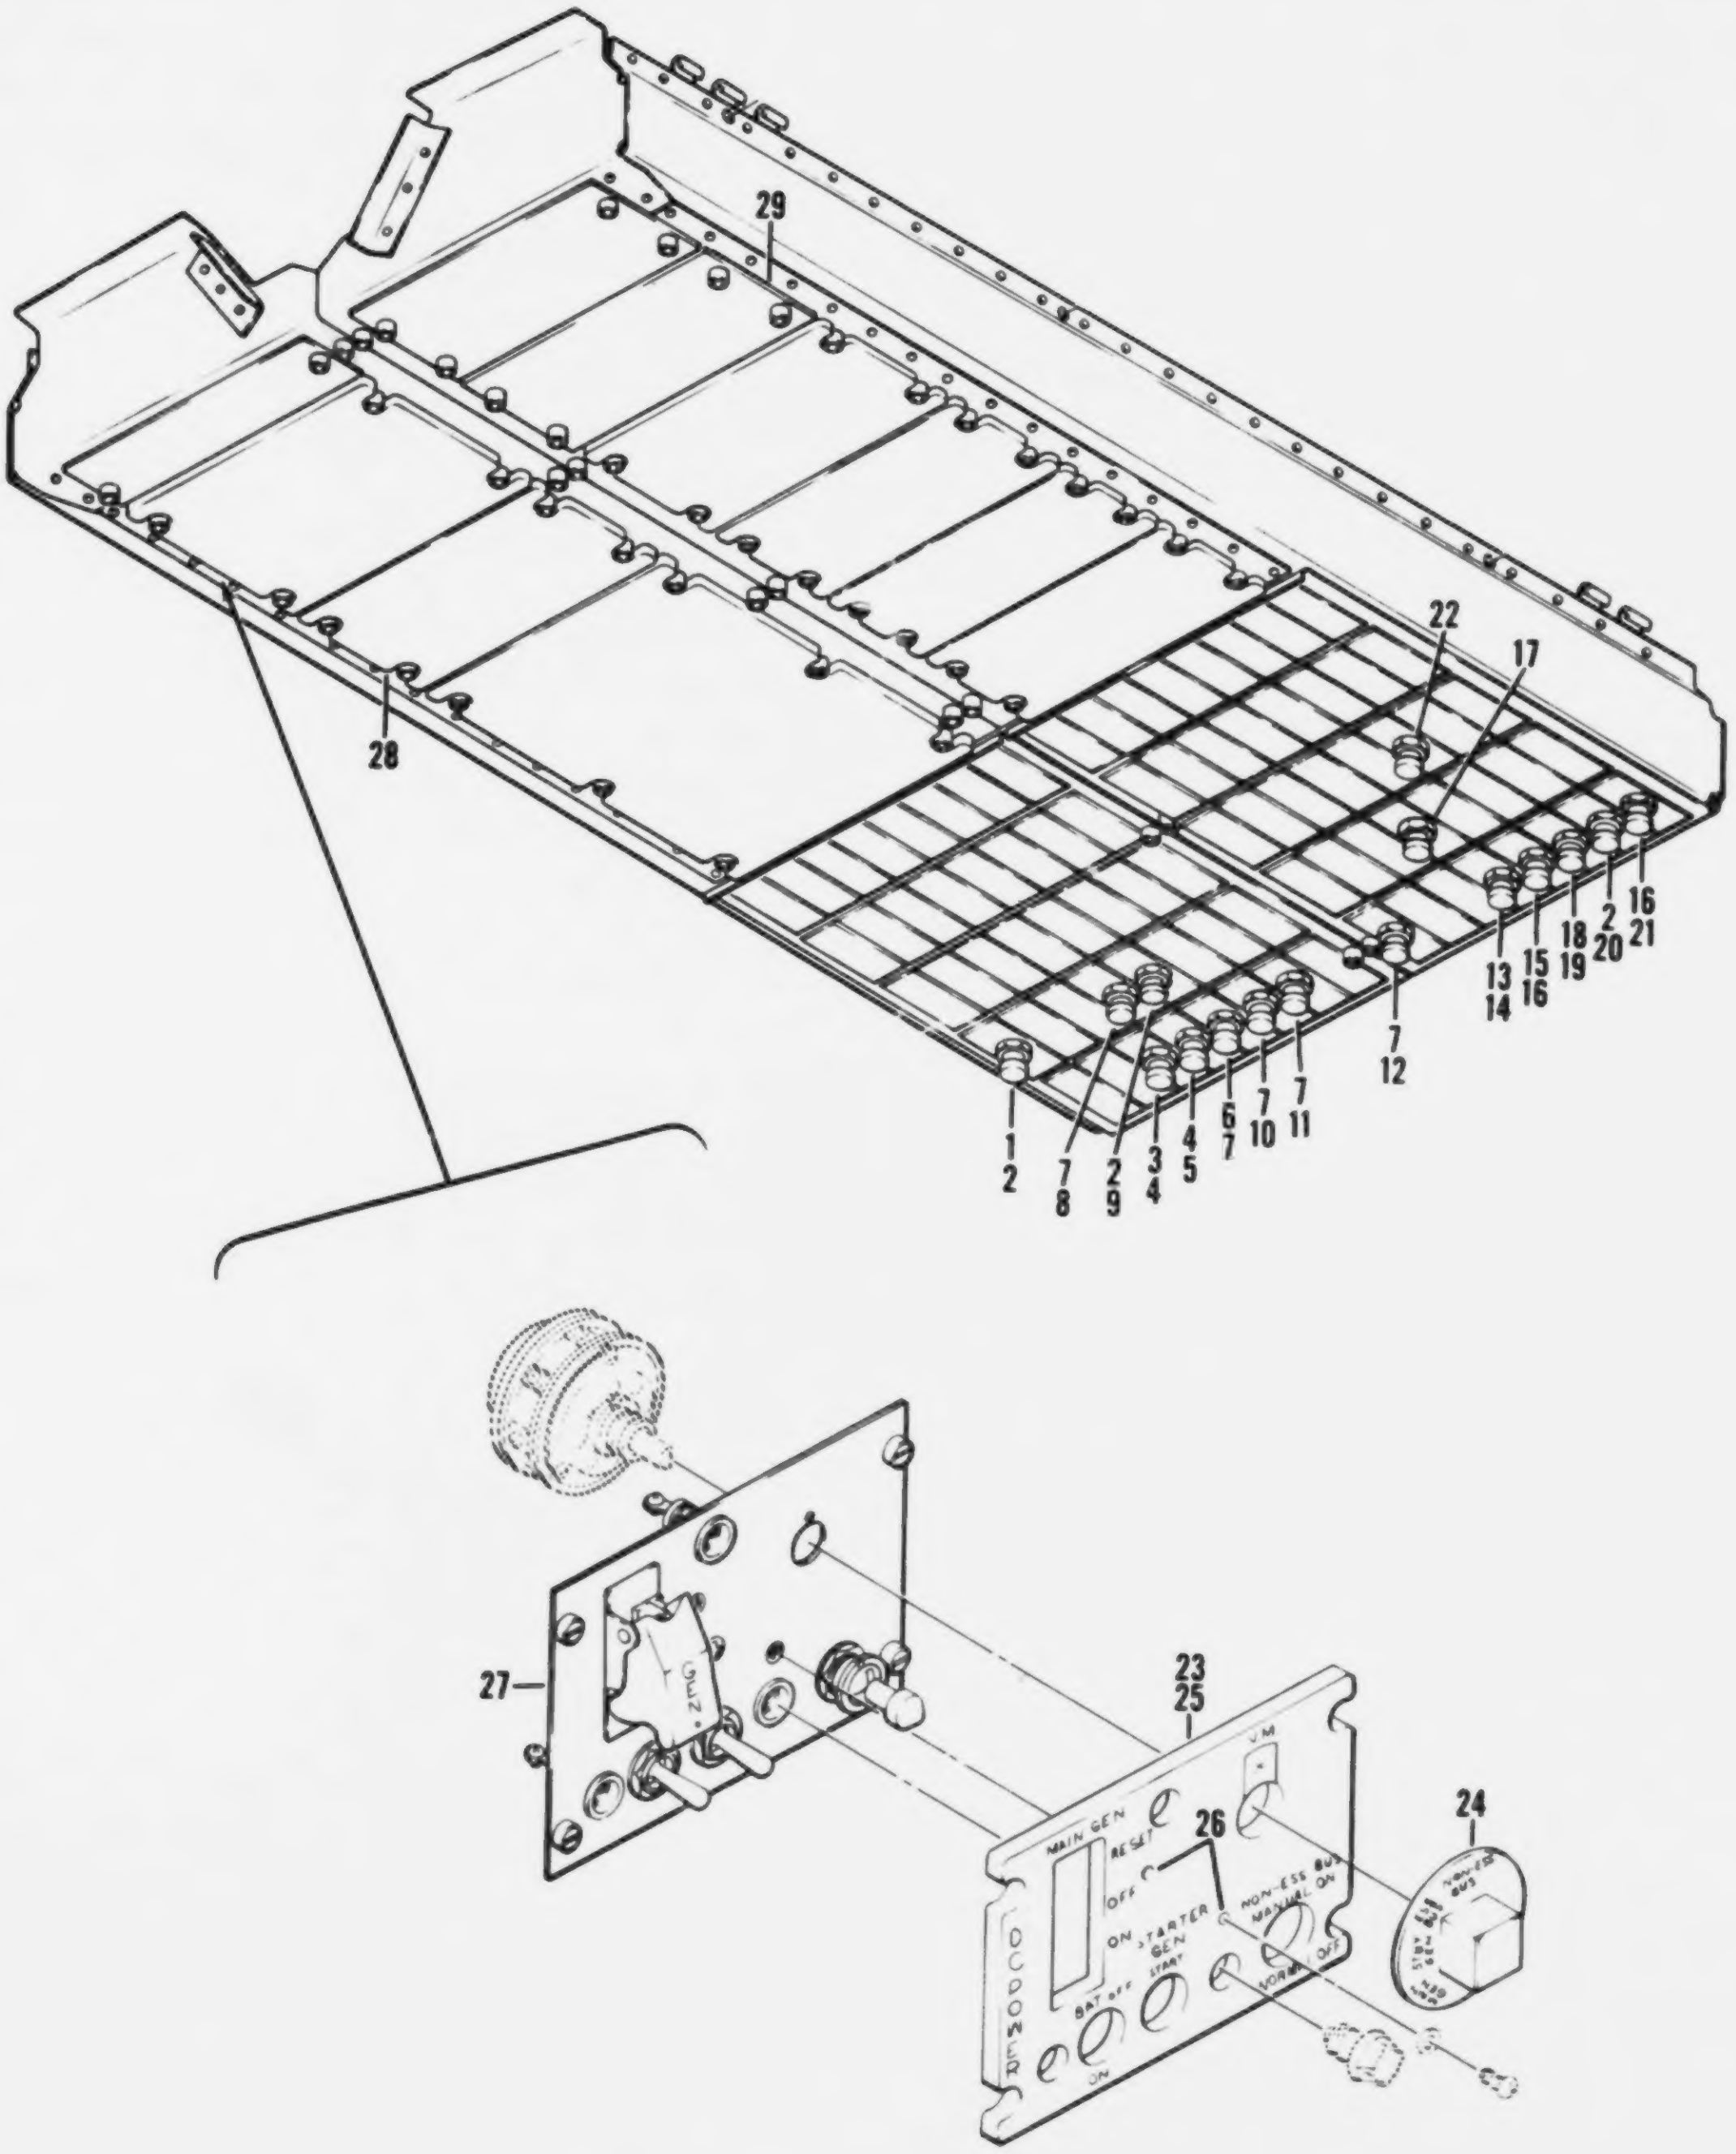
29
28
22
17
16
21
2
20
18
19
15
16
13
14
7
12
1
2
7
8
2
9
3
4
4
5
6
7
7
10
7
11
27
23
25
26
24
MAIN GEN
RESET
OFF
ON
STARTER GEN
START
BAT OFF
ON
VM
NON-ESS BUS
MANUAL ON
NORMAL
OFF
DC POWER
NON-ESS BUS

Figure 246B. Console, Overhead, Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS			
246B		XCFZZ		20309	ES-F-221505	OVERHEAD CONSOLE SEE FIG.5B FOR NHA	UHX	EA	1
246B	1	PAOZZ	9905-01-152-2204	20309	ES-D-221568-7	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	2	PAOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER	UHX	EA	3
246B	3	PAOZZ	9905-01-150-9871	20309	ES-D-221568-3	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	4	PAOZZ	5925-00-776-5062	96906	MS22073-2 1/2	.CIRCUIT BREAKER	UHX	EA	2
246B	5	PAOZZ	9905-01-150-9872	20309	ES-D-221568-4	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	6	PAOZZ	9905-01-150-9879	20309	ES-D-221568-15	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	7	PAOZZ	5925-00-985-8319	96906	MS22073-5	.CIRCUIT BREAKER	UHX	EA	5
246B	8	PAOZZ	9905-01-150-9868	20309	ES-D-221568-8	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	9	PAOZZ	9905-01-201-7903	20309	ES-D-221568-6	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	10	PAOZZ	9905-01-150-9877	20309	ES-D-221568-13	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	11	PAOZZ	9905-01-150-9878	20309	ES-D-221568-14	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	12	PAOZZ	9905-01-150-9876	20309	ES-D-221568-12	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	13	PAOZZ	9905-01-150-9873	20309	ES-D-221568-2	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	14	PAOZZ	5925-00-914-3505	96906	MS22073-2	.CIRCUIT BREAKER	UHX	EA	1
246B	15	PAOZZ	9905-01-150-9875	20309	ES-D-221568-9	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	16	PAOZZ	5925-00-929-7716	96906	MS26574-1	.CIRCUIT BREAKER	UHX	EA	2
246B	17	PAOZZ	9905-01-150-9870	20309	ES-D-221568-1	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	18	PAOZZ	9905-01-150-9874	20309	ES-D-221568-17	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	19	PAOZZ	5925-00-681-4952	96906	MS25244-10	.CIRCUIT BREAKER	UHX	EA	1
246B	20	PAOZZ		20309	ES-D-221568-16	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	21	PAOZZ	9905-01-150-9869	20309	ES-D-221568-5	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	22	PAOZZ		20309	ES-D-221568-18	.PLATE,IDENTIFICATIO	UHX	EA	1
246B	23	AOOOO		20309	ES-D-221446	.PANEL ASSY,DC POWER	UHX	EA	1
246B	24	MFOZZ		20309	ES-B-221428	..KNOB ASSY,INDICATOR	UHX	EA	1
246B	25	PBOOZ	1680-01-150-3116	20309	ES-D-221448	..PANEL,INDICATING,LI	UHX	EA	1
246B	26	PAOZZ	5325-00-817-0510	96906	MS25381-1	...GROMMET,METALLIC	UHX	EA	2
246B	27	PBOOO	1680-00-181-3382	97499	204-075-700-3	..PANEL,CONTROL,ELECT SEE FIG.255 FOR BREAKDOWN	UHX	EA	1
246B	28	AOOOO		20309	ES-D-221441	.PANEL ASSY,AC POWER SEE FIG. 255 FOR BREAKDOWN	UHX	EA	1
246B	29	AOOOO		20309	ES-C-221501	.SWITCH ASSY MISSION SEE FIG.255 FOR BREAKDOWN	UHX	EA	1

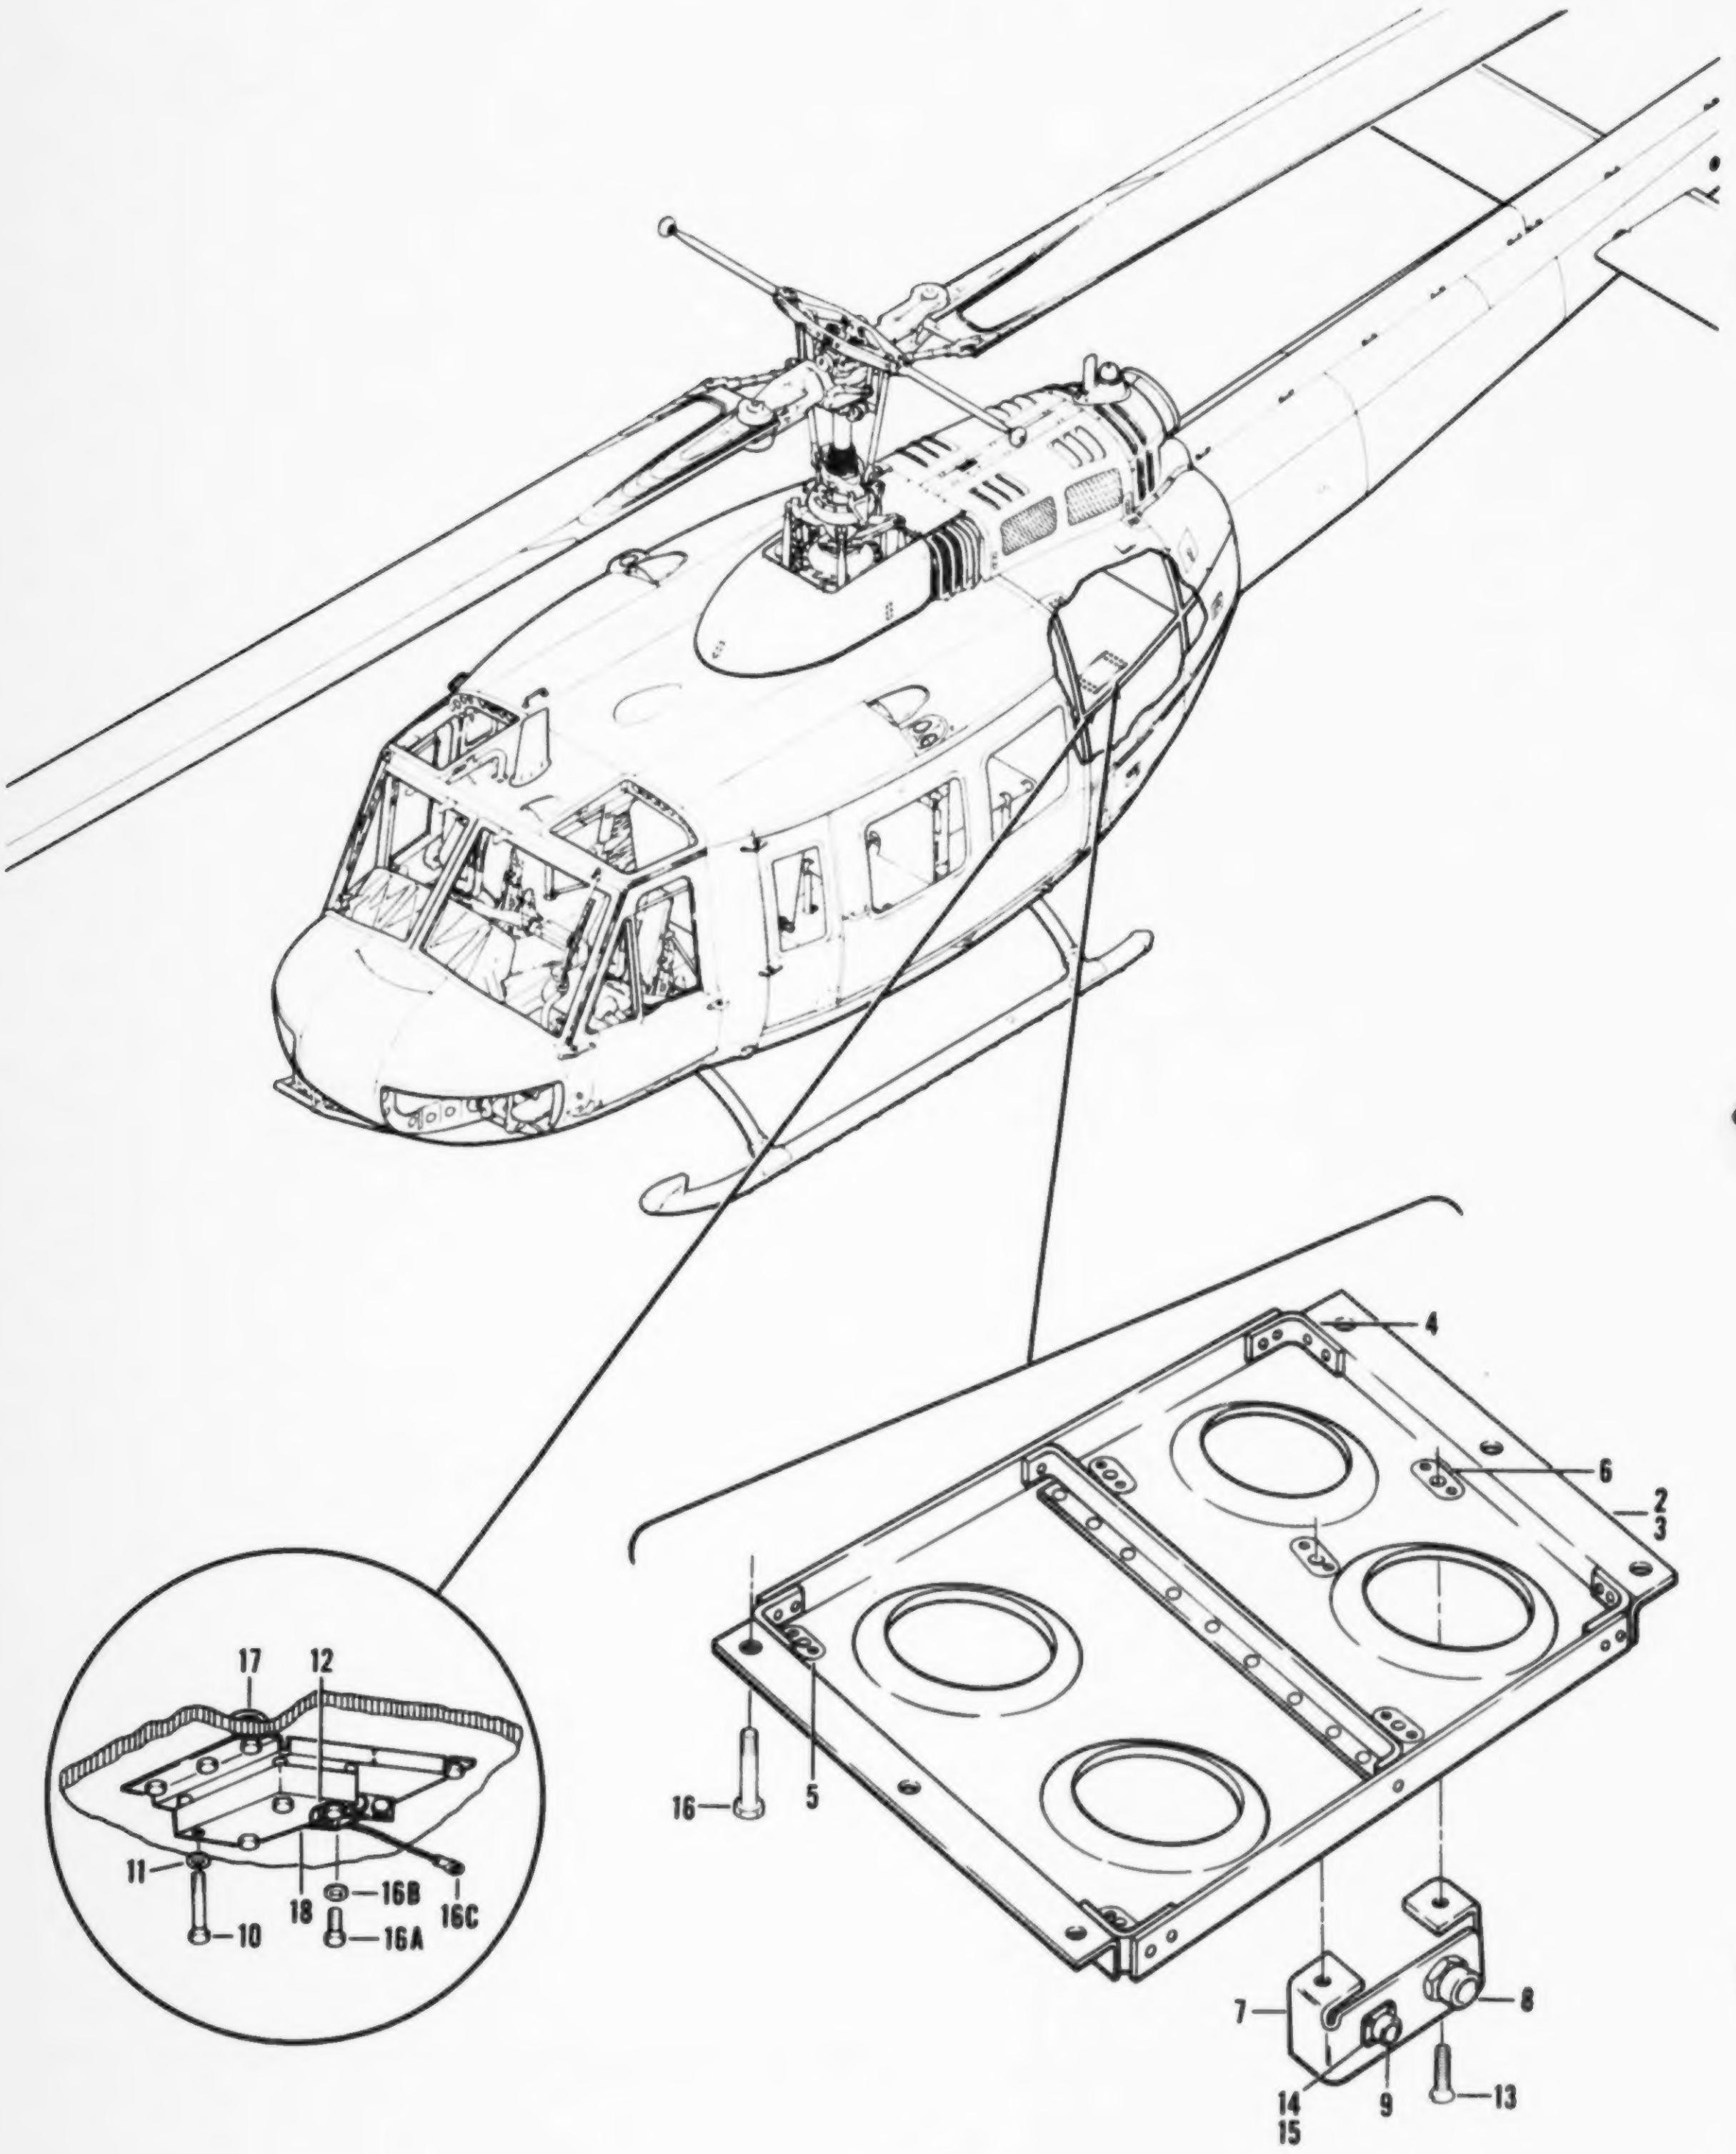
4
6
2
3
16
5
7
8
14
15
9
13
17
12
11
18
16B
16C
10
16A

Figure 246C Chaff and Flare, XM-130 (Sheet 1 of 4)

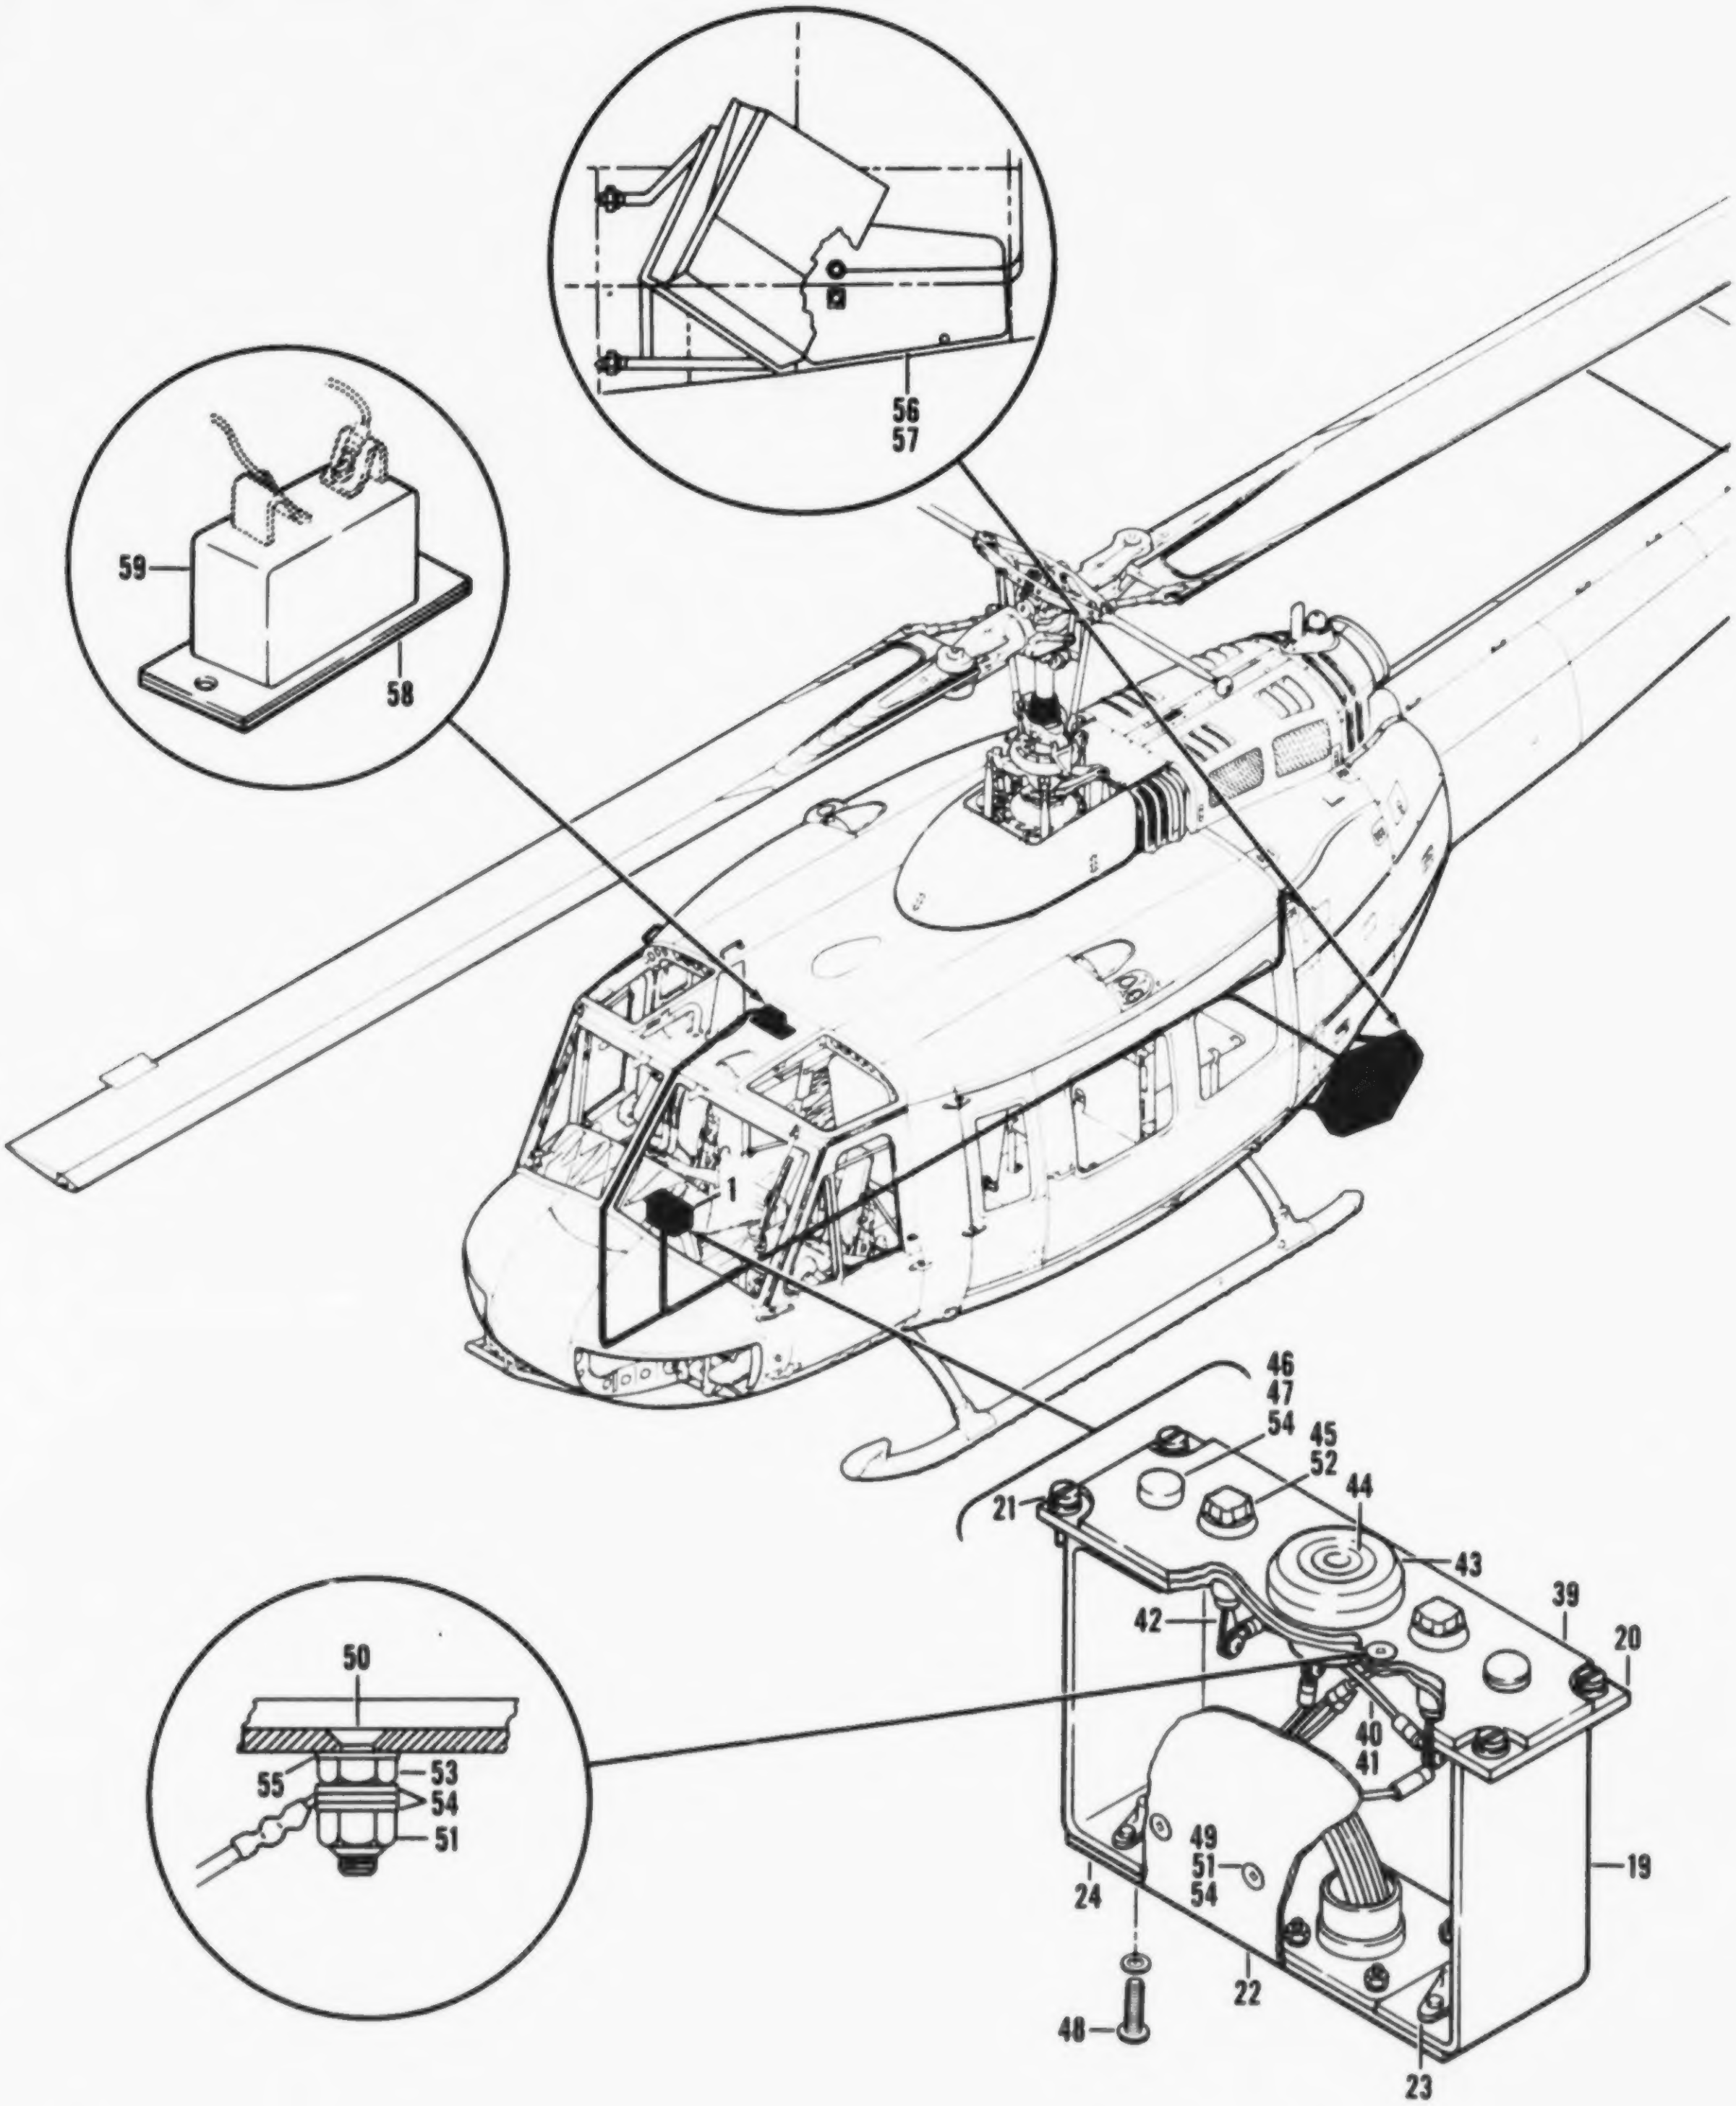
56
57
59
58
1
46
47
54
45
52
21
44
43
42
39
20
50
40
41
53
55
54
51
49
51
54
19
24
22
48
23

Figure 246C. Chaff and Flare, XM-130 (Sheet 2 of 4)

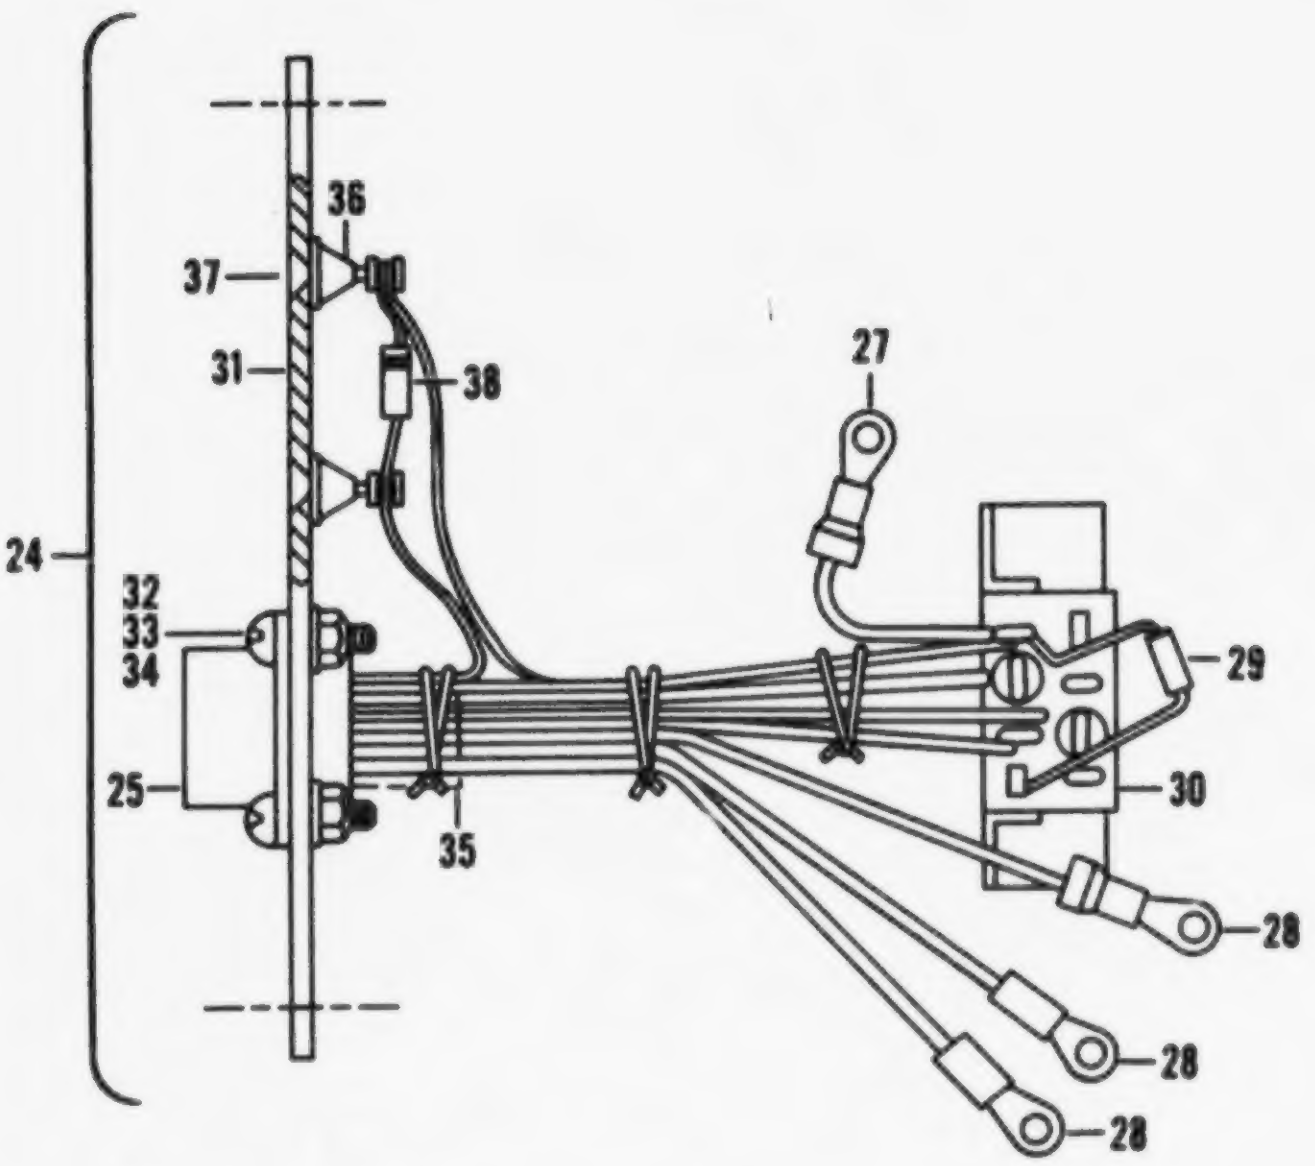
36
37
31
38
27
24
32
33
34
29
25
30
35
28
28
28

CABLE ASSEMBLY

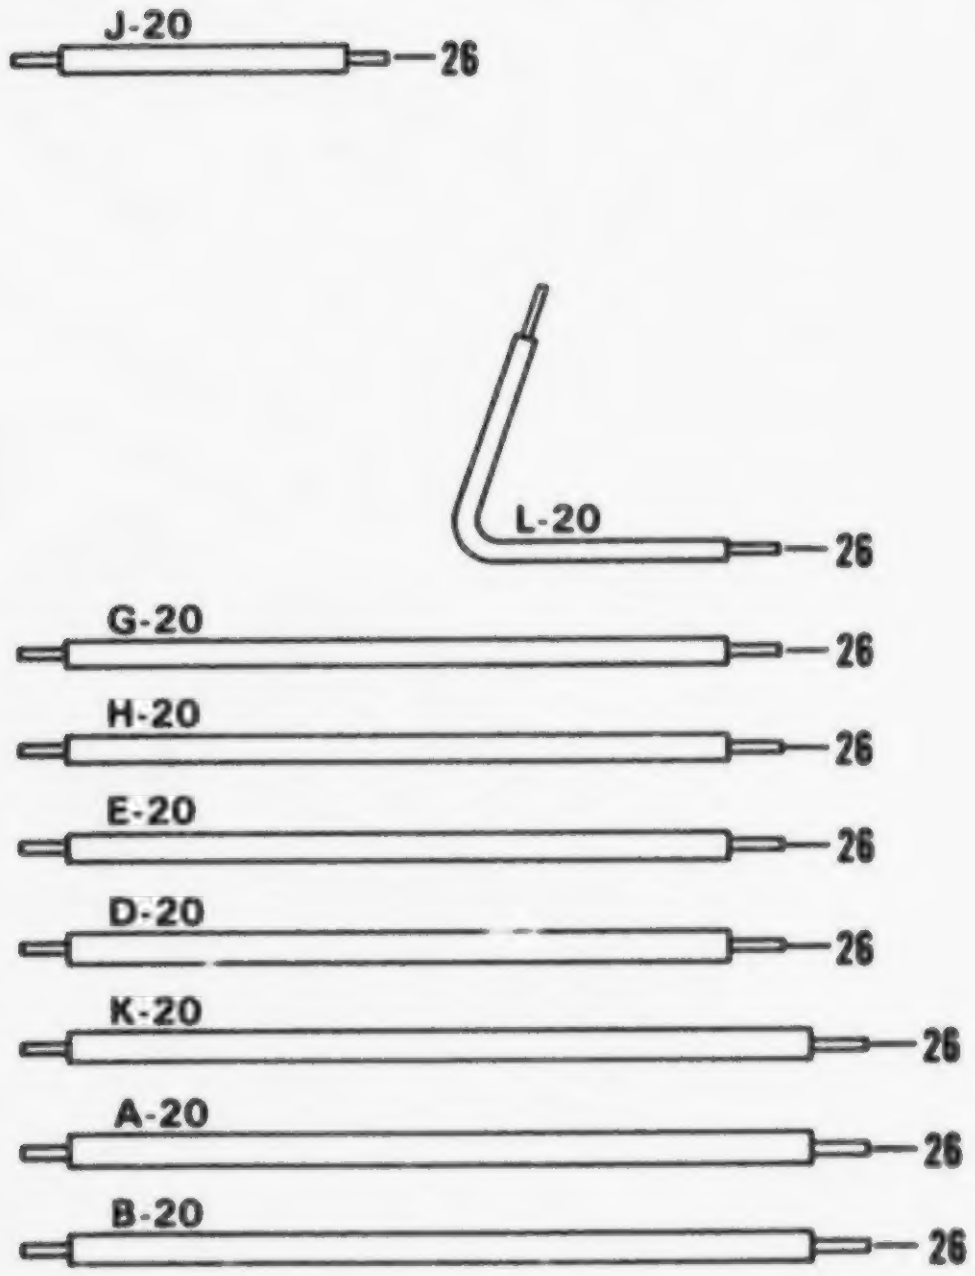
J-20
26
L-20
26
G-20
26
H-20
26
E-20
26
D-20
26
K-20
26
A-20
26
B-20
26

Figure 246C. Chaff and Flare, XM-130 (Sheet 3 of 4)

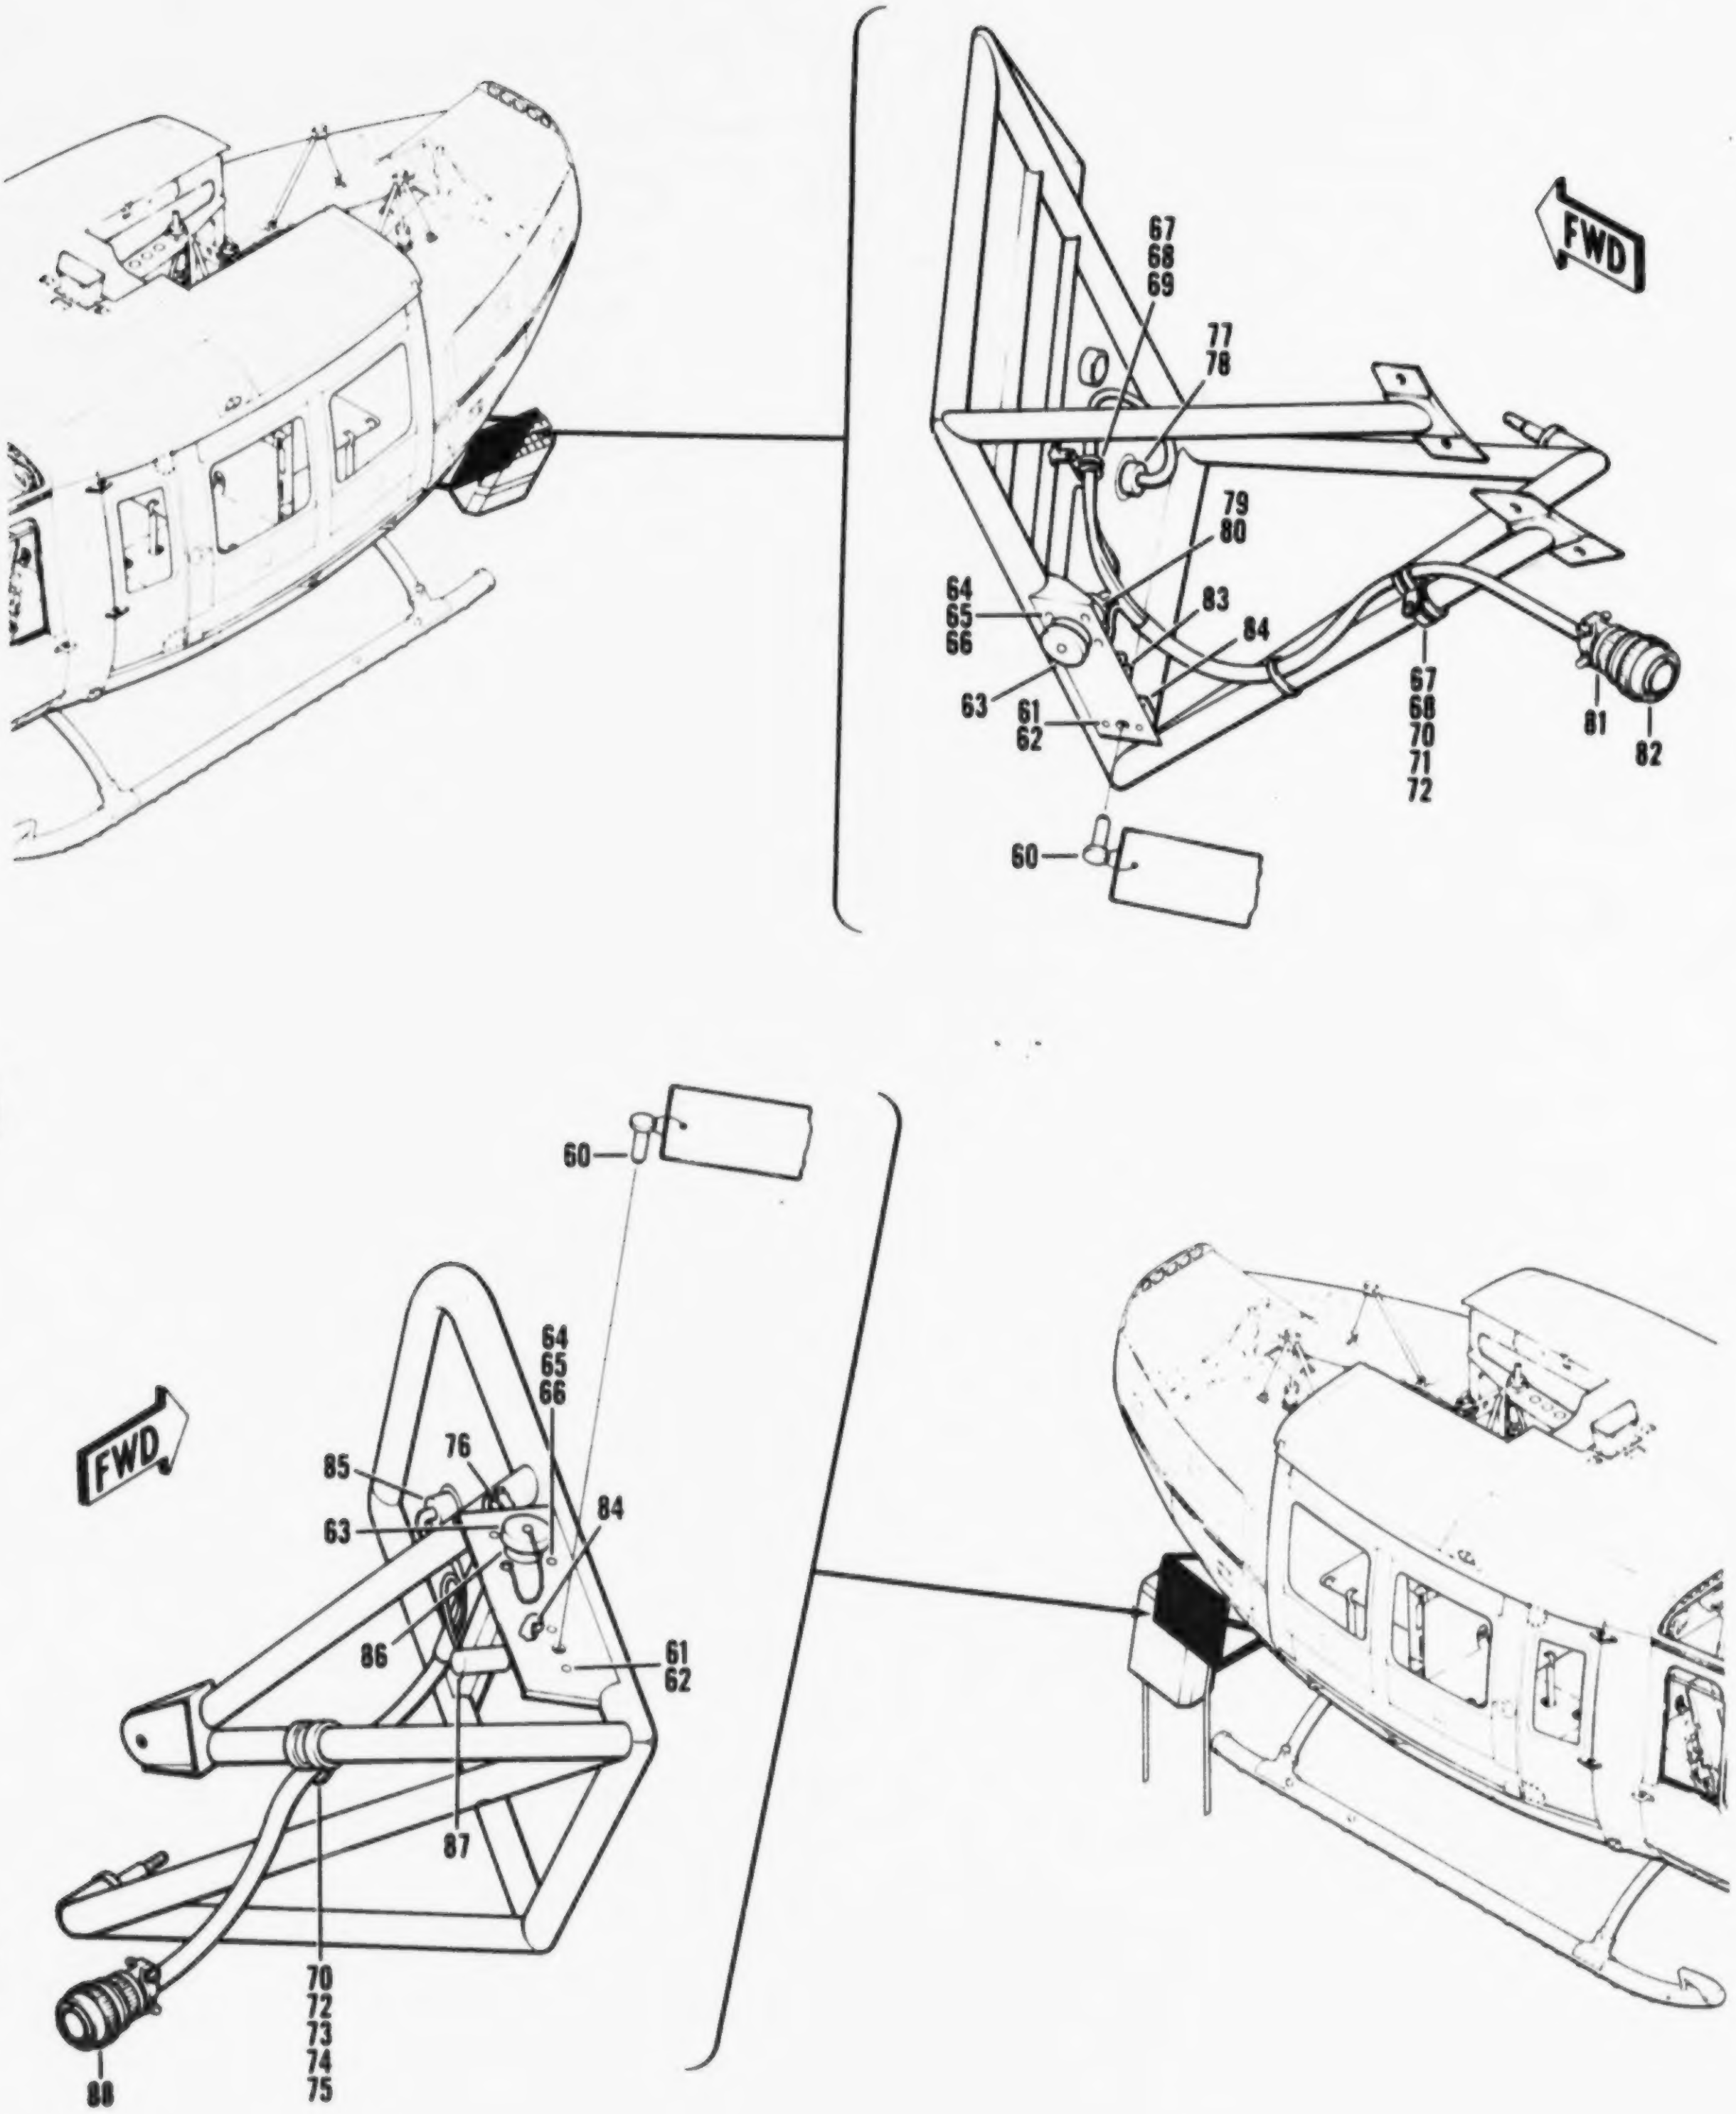
FWD
67
68
69
77
78
79
80
64
65
66
83
84
63
61
62
67
68
70
71
72
81
82
60
60
FWD
64
65
66
85
76
63
84
86
61
62
87
70
72
73
74
75
88

Figure 246C. Chaff and Flare, XM-130 (Sheet 4 of 4)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
246C		XCFZZ		20309	ES-F-221169-1	XM-130 CHAFF/FLARE INSTL SEE FIG.5A FOR NHA.............UHE	EA	1
246C		XCFZZ		20309	ES-F-221312	M-130 CHAFF/FLARE INSTL SEE FIG.5B FOR NHA..............UHX	EA	1
246C	1	XCFZZ		20309	ES-F-221169-2	.CONTROL PANEL DISPENSER CHAFF U/O PN ES-F-221169-1......UHE	EA	1
246C		XCFZZ		20309	ES-F-221170	.MODULE INSTALLATION ELECTRONICS,XM-130.............UHE,UHX	EA	1
246C	2	XD000		20309	ES-D-221171	..SUPPORT M/30 MODULE,ELECTRONIC....................UHE,UHX	EA	1
246C	3	XAOZZ		20309	ES-D-221171-1	...SUPPORT...UHE,UHX	EA	1
246C	4	MFOZZ		20309	ES-D-221171-2	...CLIP..UHE,UHX	EA	4
246C	5	PAOZZ	5310-00-784-8145	96906	MS21075L4	...NUT,SELF-LOCKING,PL.............................UHE,UHX	EA	4
246C	6	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING,PL.............................UHE,UHX	EA	2
246C	7	MFOZZ		20309	ES-C-221172	..BRACKET..UHE,UHX	EA	1
246C	8	PAOZZ	5935-00-891-8477	96906	MS3124F14-19S	..CONNECTOR,RECEPTACL..............................UHE,UHX	EA	1
246C	9	XDOZZ		96906	MS27508E10B35P	..CONNECTOR,RECEPTACL..............................UHE,UHX	EA	1
246C	10	PAOZZ	5306-01-101-2510	80205	NAS6204-62	..BOLT,SHEAR.......................................UHE,UHX	EA	4
246C	12	PAOZZ	5340-00-775-5259	96906	MS9350-08	CLAMP,LOOP...UHE,UHX	EA	1
246C	13	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE.. ....UHE,UHX	EA	2
246C	14	PAOZZ	5305-00-054-5649	96906	MS51957-15	..SCREW,MACHINE....................................UHE,UHX	EA	4
246C	15	PAOZZ	5310-00-982-5000	96906	MS21045C04	..NUT,SELF-LOCKING,HE..............................UHE,UHX	EA	4
246C	16	PAOZZ		80205	NAS6203-1H	..BOLT,SHEAR.......................................UHE,UHX	EA	5
246C	16A	PAOZZ	5306-01-183-3321	80205	NAS6203-3H	..BOLT,SHEAR.......................................UHE,UHX	EA	1
246C	16B	PAOZZ		88044	AN960C10L	..WASHER,FLAT..UHX	EA	2
246C	16C	PAOZZ		96906	MS25083-2BC7	..CABLE ASSY...UHX	EA	1
246C	17	PAOZZ	5340-01-092-0463	29372	604D3-48-60	..FASTENER,PANEL...................................UHE,UHX	EA	6
246C	18	PAOZZ		19200	9311431	..MODULE,ELECTRONICS XM-130........................UHE,UHX	EA	1
246C	19	XD000		20309	ES-D-221176	.CONTROL BOX ASSEMBL FLARE DISPENSE U/O PN ES-F-221169-1 AND ES-F-221281 (SEE FIG 5B FOR NHA) ....UHE,UHX	EA	1
246C	20	XD000		20309	ES-C-221149	..PANEL ASSY.......................................UHE,UHX	EA	1
246C	21	PAOZZ	5325-00-886-3733	97499	50-018-1	...STUD ASSEMBLY,TURNL.............................UHE,UHX	EA	4
246C	22	XAOZZ		20309	ES-C-221151	..BOX ASSEMBLY....... ....UHE,UHX	EA	1
246C	23	PBOZZ	5310-00-781-9493	96906	MS21075L06	...NUT,SELF-LOCKING,PL.............................UHE,UHX	EA	4
246C	24	A0000		20309	ES-D-221187	..WIRING HARNESS...................................UHE,UHX	EA	1
246C	25	PAOZZ	5935-00-826-1007	96906	MS3112E12-10P	...CONNECTOR,RECEPTACL.............................UHE,UHX	EA	1
346C	26	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	...WIRE,ELECTRICAL.................................UHE,UHX	FT	V
246C	27	PAOZZ	5940-00-204-8966	96906	MS25036-102	...TERMINAL,LUG....................................UHE,UHX	EA	1
246C	28	PAOZZ	5940-00-113-9828	96906	MS25036-148	...TERMINAL,LUG....................................UHE,UHX	EA	3
245C	29	PAOZZ	5905-00-111-4742	81349	RCR20G391JS	...RESISTOR,FIXED,COMP.............................UHE,UHX	EA	1
246C	30	PBOZZ	5945-00-933-1392	70898	50-380048-1	...RELAY,ELECTROMAGNET.............................UHE,UHX	EA	1
246C	31	MFOZZ		20309	ES-C-221152	...COVER...UHE,UHX	EA	1
246C	32	PAOZZ	5305-00-054-5649	96906	MS51957-15	...SCREW,MACHINE...................................UHE,UHX	EA	4
246C	33	PAOZZ	5310-00-088-0551	96906	MS21044N04	...NUT,SELF-LOCKING,HE.............................UHE,UHX	EA	4
246C	34	PAOZZ	5310-00-951-4679	96906	MS27183-3	...WASHER,FLAT.....................................UHE,UHX	EA	4
246C	35	PAOZZ	5970-00-812-2968	81349	M23053/5-102-0	...INSULATION SLEEVING.............................UHE,UHX	EA	V
246C	36	PAOZZ	5940-00-082-4652	81349	SE20XD01	...TERMINAL,STUD...................................UHE,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
246C	37	PAOZZ	5305-00-088-9158	96906	MS24693S1	...SCREW,MACHINE	UHE,UHX	EA	2
246C	38	PAOZZ	5961-00-064-2379	81349	JAN1N649	...SEMICONDUCTOR DEVIC	UHE,UHX	EA	1
246C	39	MFOZZ		20309	ES-C-221153	..PANE,INDICATOR,	UHE,UHX	EA	1
246C	40	A0000		20309	ES-B-221186	..JUMPER WIRE	UHE,UHX	EA	1
246C	41	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	...WIRE,ELECTRICAL	UHE,UHX	FT	V
246C	42	PAOZZ		96906	MS25036-148	...LUG,TERMINAL	UHE,UHX	EA	2
246C	43	XDOZZ		20309	ES-D-221176-1	..SHIELD	UHE,UHX	EA	1
246C	44	PBOZZ	5930-00-615-8895	96906	MS25089-3FR	..SWITCH,PUSH	UHE,UHX	EA	1
246C	45	PAOZZ	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL	UHE,UHX	EA	2
246C	46	PAOZZ	5325-00-817-0510	96906	MS25381-1	..GROMMET,METALLIC	UHE,UHX	EA	2
246C	47	PAOZZ	5305-00-701-5050	96906	MS51958-32	..SCREW,MACHINE	UHE,UHX	EA	2
246C	48	PAOZZ	5305-00-057-0526	96906	MS51958-30	..SCREW,MACHINE	UHE,UHX	EA	2
246C	49	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE	UHE,UHX	EA	2
246C	50	PAOZZ	5305-00-808-7832	96906	MS24693S29	..SCREW,MACHINE	UHE,UHX	EA	1
246C	51	PAOZZ	5310-00-081-8087	96906	MS21044N06	..NUT,SELF-LOCKING,HE	UHE,UHX	EA	3
246C	52	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT	UHE,UHX	EA	2
246C	53	PAOZZ	5310-00-934-9761	96906	MS35649-264	..NUT,PLAIN,HEXAGON	UHE,UHX	EA	1
246C	54	PAOZZ	5310-00-983-8483	96906	MS27183-5	..WASHER,FLAT	UHE	EA	8
246C	55	PAOZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK	UHE	EA	1
246C	56	MFOZZ		20309	ES-D-221175-1	.PANEL,FLARE U/O PN ES-F-221169-1	UHE	EA	1
246C	57	MFOZZ		20309	ES-D-221175-2	.PANEL,CHAFF U/O PN ES-F-221169-1	UHE	EA	1
246C	58	PBOZZ	9905-01-225-3922	20309	ES-C-221231	.PLATE,IDENTIFICATIO U/O PN ES-F-221169-1	UHE	EA	1
246C	59	PAOZZ	5925-00-681-4952	96906	MS25244-10	.CIRCUIT BREAKER U/O PN ES-F-221169-1	UHE	EA	1
246C	60			19200	9311511	.SAFETY PIN AND FLAG U/O PN ES-F-221312. ARMCOM MAINT SUPPORTED ITEM	UHX	EA	2
246C		XCFZZ		20309	ES-F-221806	.SUPPORT ASSEMBLY,LH CHAFF/FLARE	UHE,UHX	EA	1
246C		XCFZZ		20309	ES-F-221174	.SUPPORT ASSEMBLY M-130 CHAFF/FLARE,RH	UHE,UHX	EA	1
246C	61	PAOZZ	5305-01-143-6520	80205	NAS1190-06P7	..SCREW,SELF-LOCKING	UHE,UHX	EA	2
246C	62	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER,FLAT	UHE,UHX	EA	2
246C	63	PAOZZ	5935-00-238-6419	96906	MS25043-12D	..COVER,ELECTRICAL CO	UHE,UHX	EA	1
246C	64	PAOZZ	5310-00-807-1471	96906	MS21042L04	..NUT,SELF-LOCKING,EX	UHE,UHX	EA	8
246C	65	PAOZZ	5310-00-187-2397	88044	AN960PD4L	..WASHER,FLAT	UHE,UHX	EA	4
246C	66	PAOZZ	5305-00-889-2998	96906	MS35206-216	..SCREW,MACHINE	UHE,UHX	EA	4
246C	67	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE U/O PN ES-F-221806	UHE,UHX	EA	2
246C	68	PAOZZ		88044	AN960PD10L	..WASHER U/O PN ES-F-221806	UHE,UHX	EA	2
246C	69	PAOZZ	5340-00-052-9552	96906	MS21919DG3	..CLAMP,LOOP U/O PN ES-F-221806	UHE,UHX	EA	1
246C	71	PAOZZ	5340-00-200-8560	96906	MS21919WDG5	..CLAMP,LOOP U/O PN ES-F-221806	UHE,UHX	EA	1
246C	72	XDOZZ	5340-00-682-1617	96906	MS21919DG12	..CLAMP,LOOP	UHE,UHX	EA	1
246C	73	PAOZZ	5310-00-167-0801	88044	AN960C10	..WASHER,FLAT U/O PN ES-F-221174	UHE,UHX	EA	2
246C	74	PAOZZ	5340-00-200-8559	96906	MS21919WDG7	..CLAMP,LOOP U/O PN ES-F-221174	UHE,UHX	EA	1
246C	75	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE U/O PN ES-F-221174	UHE,UHX	EA	1
246C	76	PAOZZ		77820	10-457996-107	..CONNECTOR,DUMMY U/O PN ES-F-221174	UHE,UHX	EA	1
246C		A0000		97499	205-075-177-105	CABLE ASSEMBLY U/O PN ES-F-221806	UHE,UHX	EA	1

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	
248C	77	PAOZZ	5625-00-622-1280	96906	MS27508E10-2	..CLAMP,
248C	78	PAOZZ		96906	MS27473T10B35S	..CONNECTOR
248C	79	PAOZZ	5935-01-068-9780	96906	MS3417-12C	..CLAMP,
248C	80	PAOZZ	5935-00-540-0980	96906	MS3450W12S-3S	..CONNECTOR
248C	81	PAOZZ	5935-01-030-5212	96906	MS3417-14C	..CLAMP,
248C	82	PAOZZ	5935-01-100-4483	96906	MS3476W14-19P	..CONNECTOR,
248C	83	PAOZZ	5930-00-972-3314	96906	MS27240-1	..SWITCH,
248C	84	PAOZZ	5930-01-157-0864	07485	208-375-455-101	..HOUSING,
248C		AOOOO		20304	ES-P-221100	.CABLE ASSEMBLY
248C	85	PAOZZ	5935-00-378-1208	96906	MS27473E10B35S	..CONNECTOR,
248C	86	PAOZZ	5935-00-686-6539	96906	MS3102R12S3S	..CONNECTOR,
248C	87	PAOZZ	5930-00-972-3314	96906	MS27240-1	..SWITCH,
248C	88	PAOZZ		96906	MS3120F14-19S	..CONNECTOR,

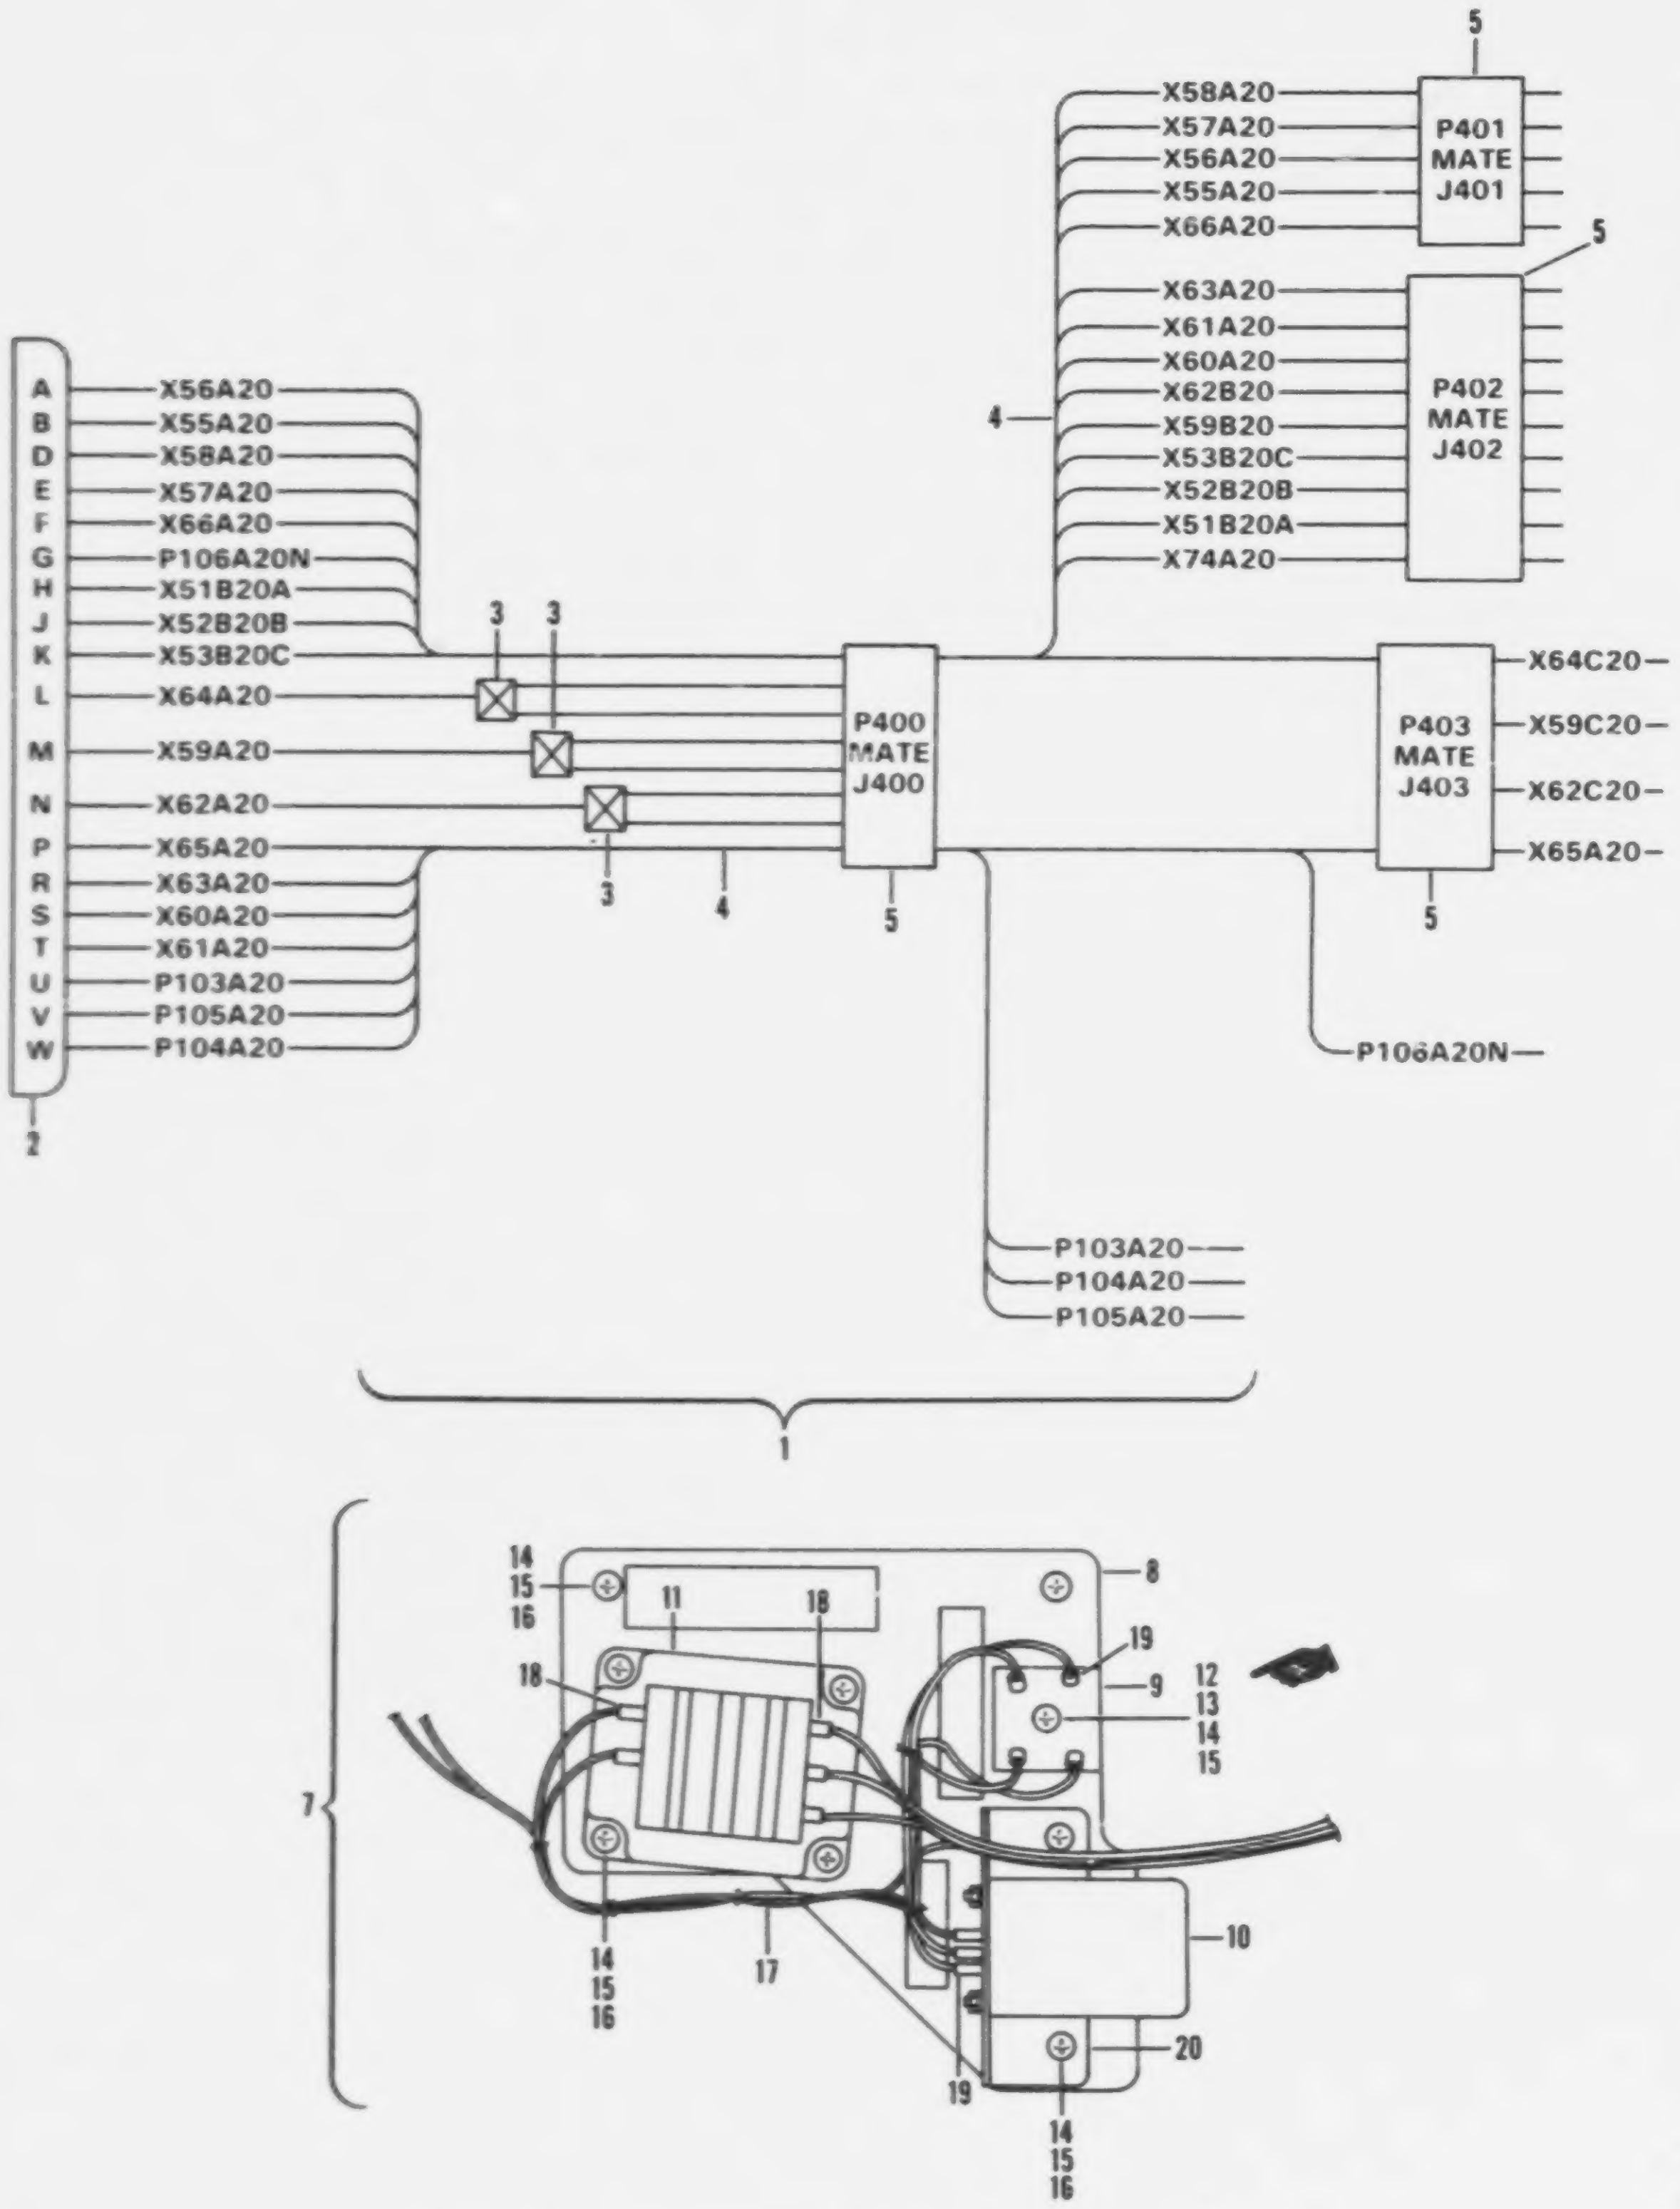
5
X58A20
X57A20
X56A20
X55A20
X66A20
P401
MATE
J401
5
X63A20
X61A20
X60A20
X62B20
X59B20
X53B20C
X52B20B
X51B20A
X74A20
P402
MATE
J402
4
A
B
D
E
F
G
H
J
K
L
M
N
P
R
S
T
U
V
W
X56A20
X55A20
X58A20
X57A20
X66A20
P106A20N
X51B20A
X52B20B
X53B20C
X64A20
X59A20
X62A20
X65A20
X63A20
X60A20
X61A20
P103A20
P105A20
P104A20
2
3
3
3
4
P400
MATE
J400
5
P403
MATE
J403
5
X64C20
X59C20
X62C20
X65A20
P106A20N
P103A20
P104A20
P105A20
1
7
8
9
10
11
12
13
14
15
16
17
18
19
20

Figure 246D. AC Power Installation (Sheet 1 of 10)

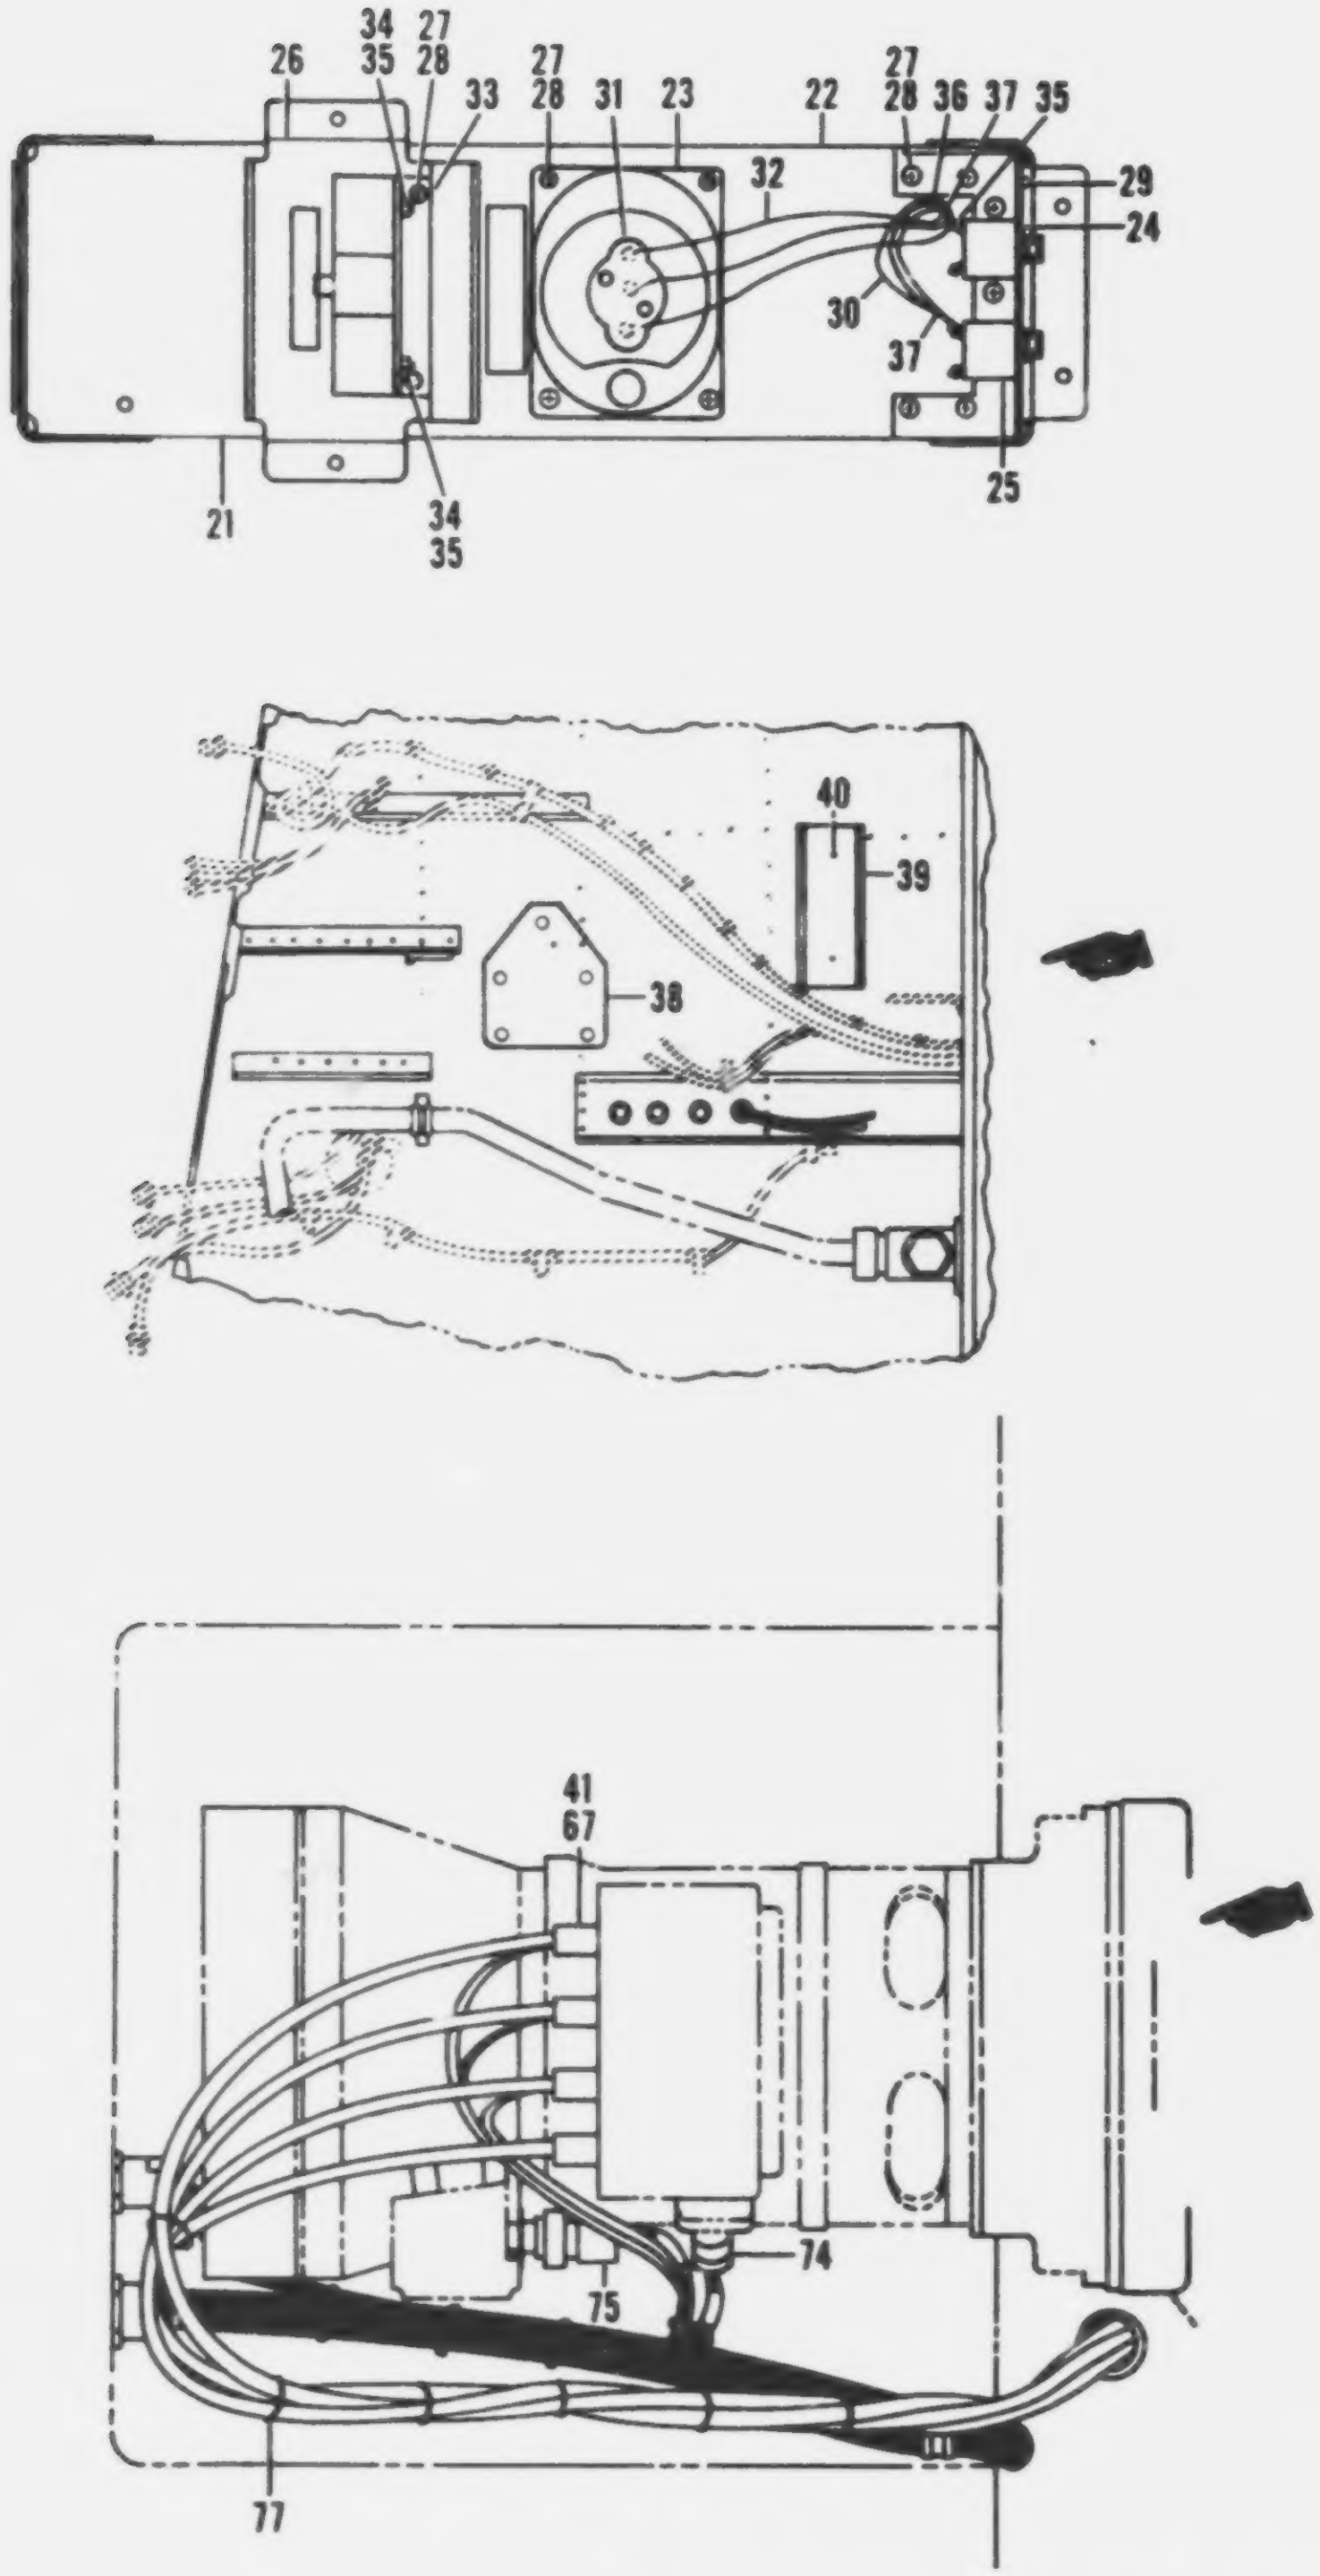
34
35
27
28
26
33
27
28
31
23
22
27
28
36
37
35
32
29
24
30
37
25
21
34
35
40
39
38
41
67
74
75
77

Figure 246D. AC Power Installation (Sheet 2 of 10)

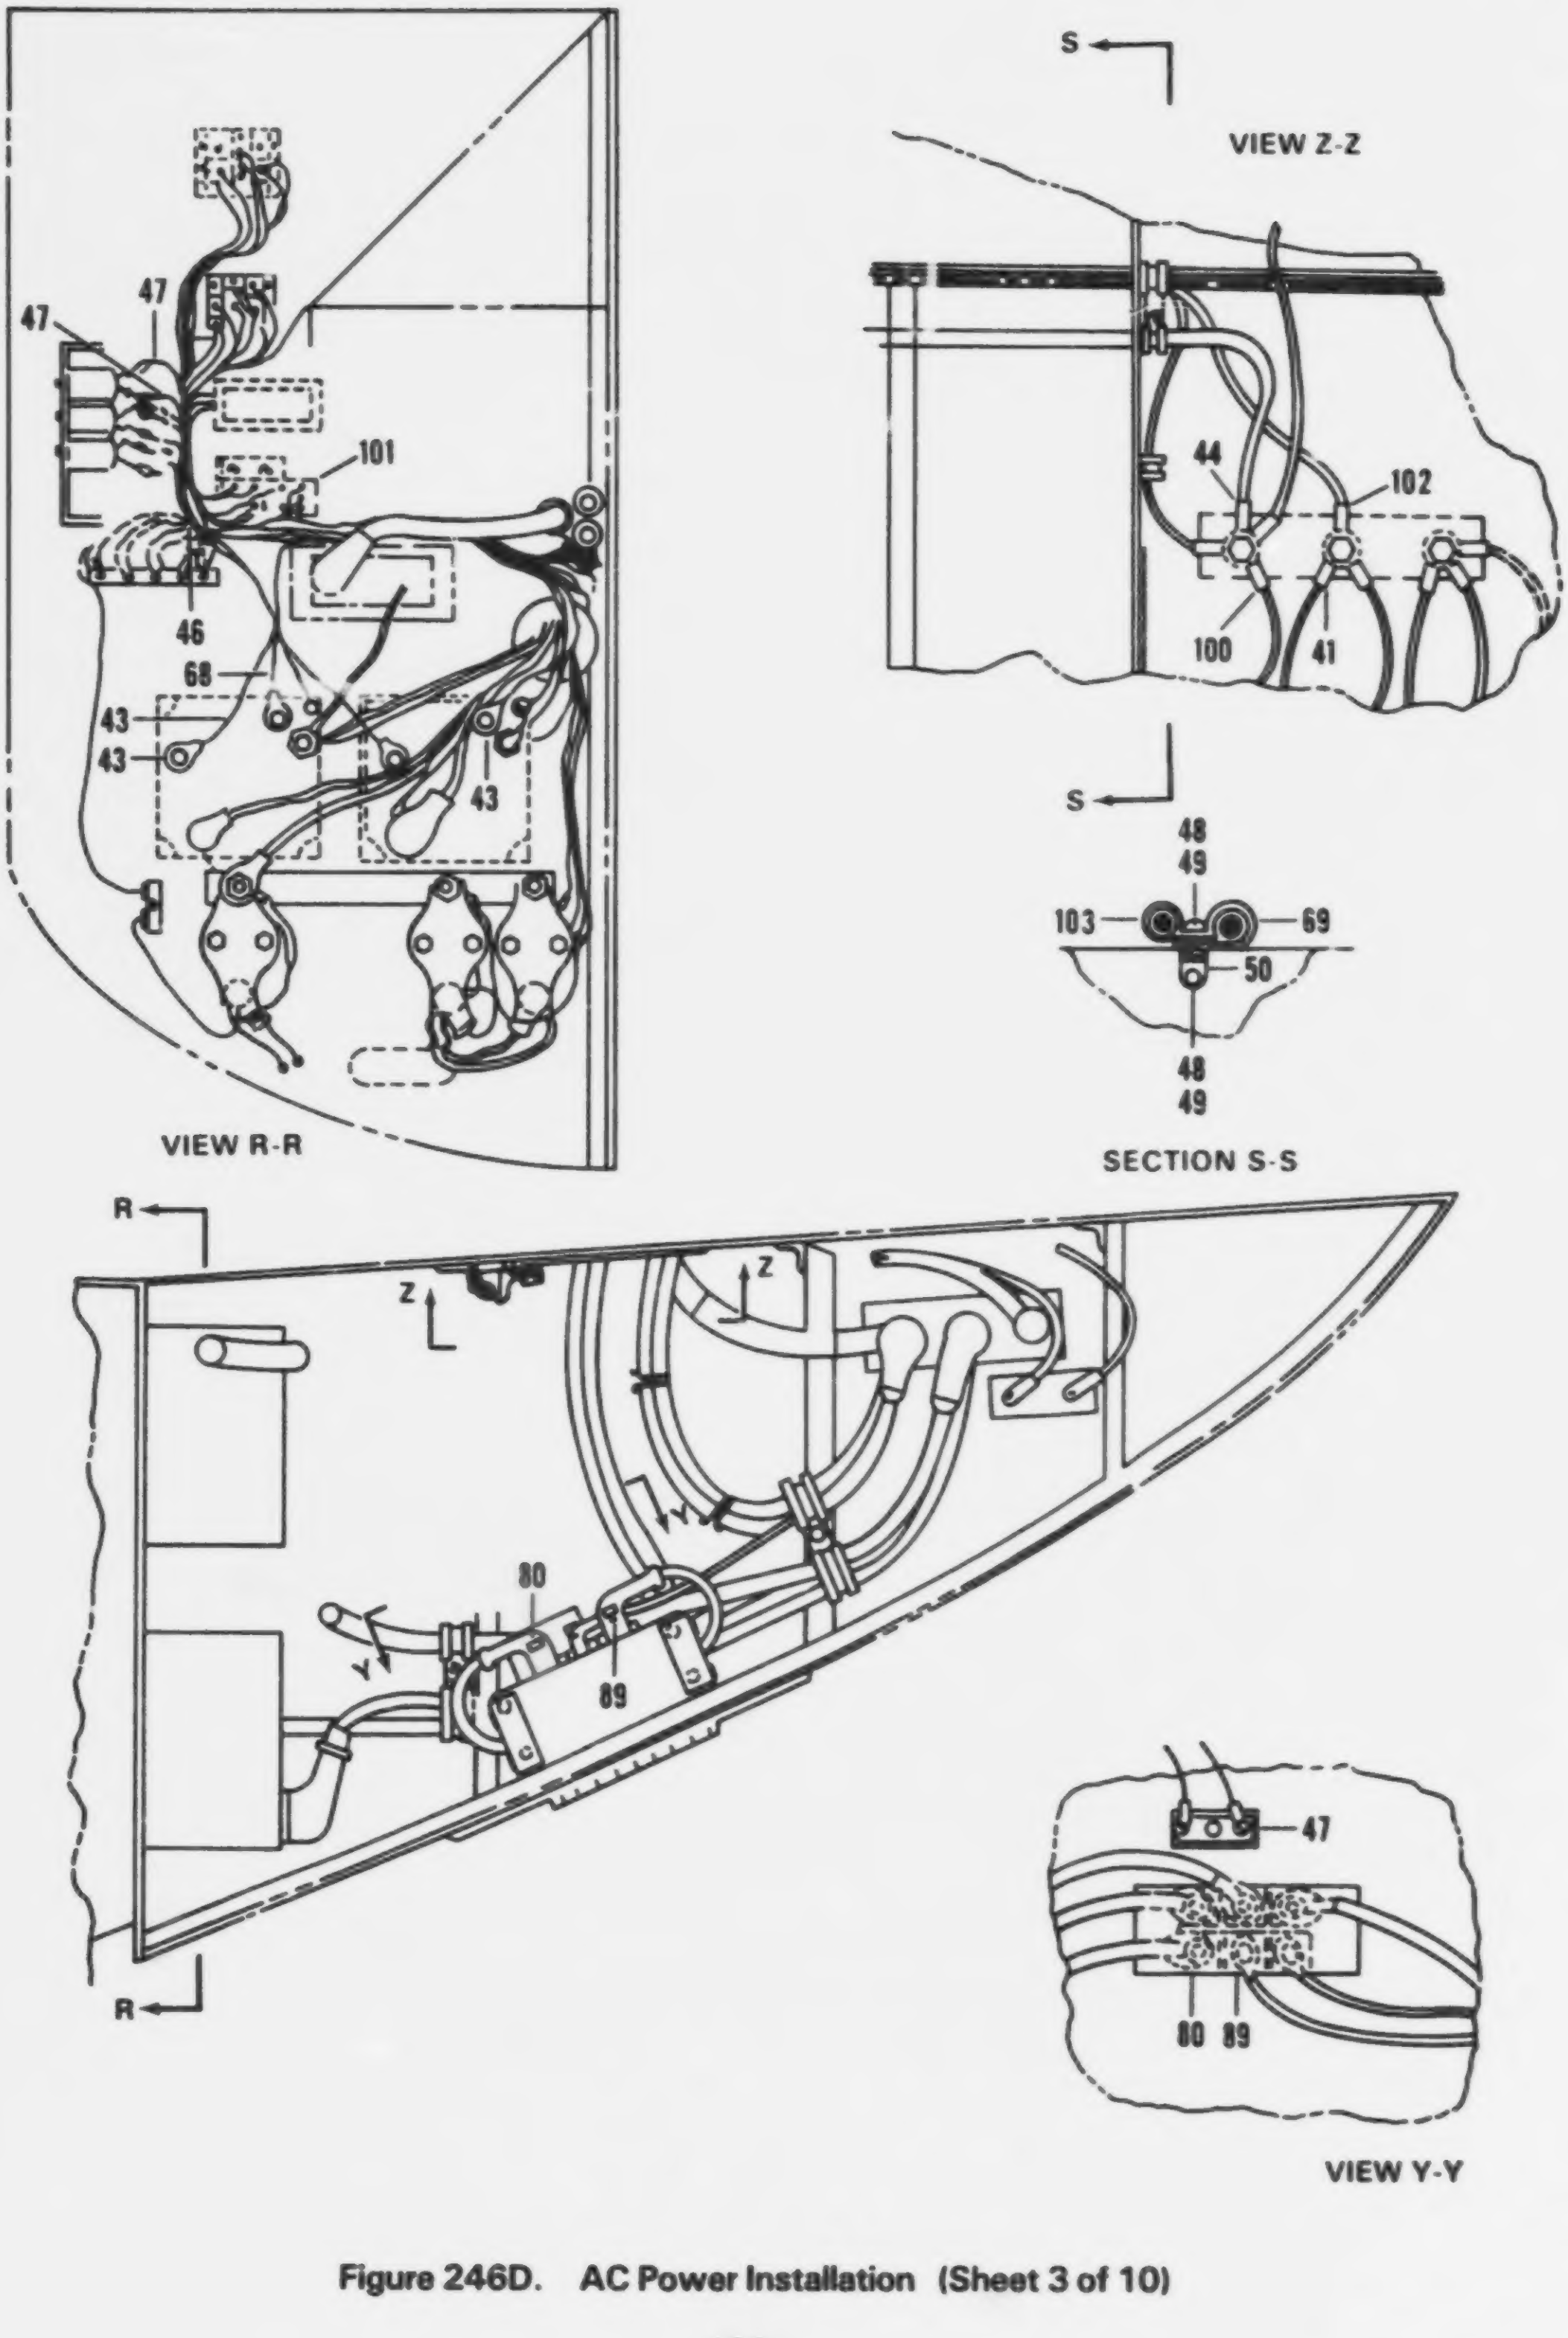
47
47
101
46
68
43
43
43
VIEW R-R
S
VIEW Z-Z
44
102
100
41
S
48
49
103
69
50
48
49
SECTION S-S
R
Z
Z
Y
Y
80
89
R
47
80
89
VIEW Y-Y

Figure 246D. AC Power Installation (Sheet 3 of 10)

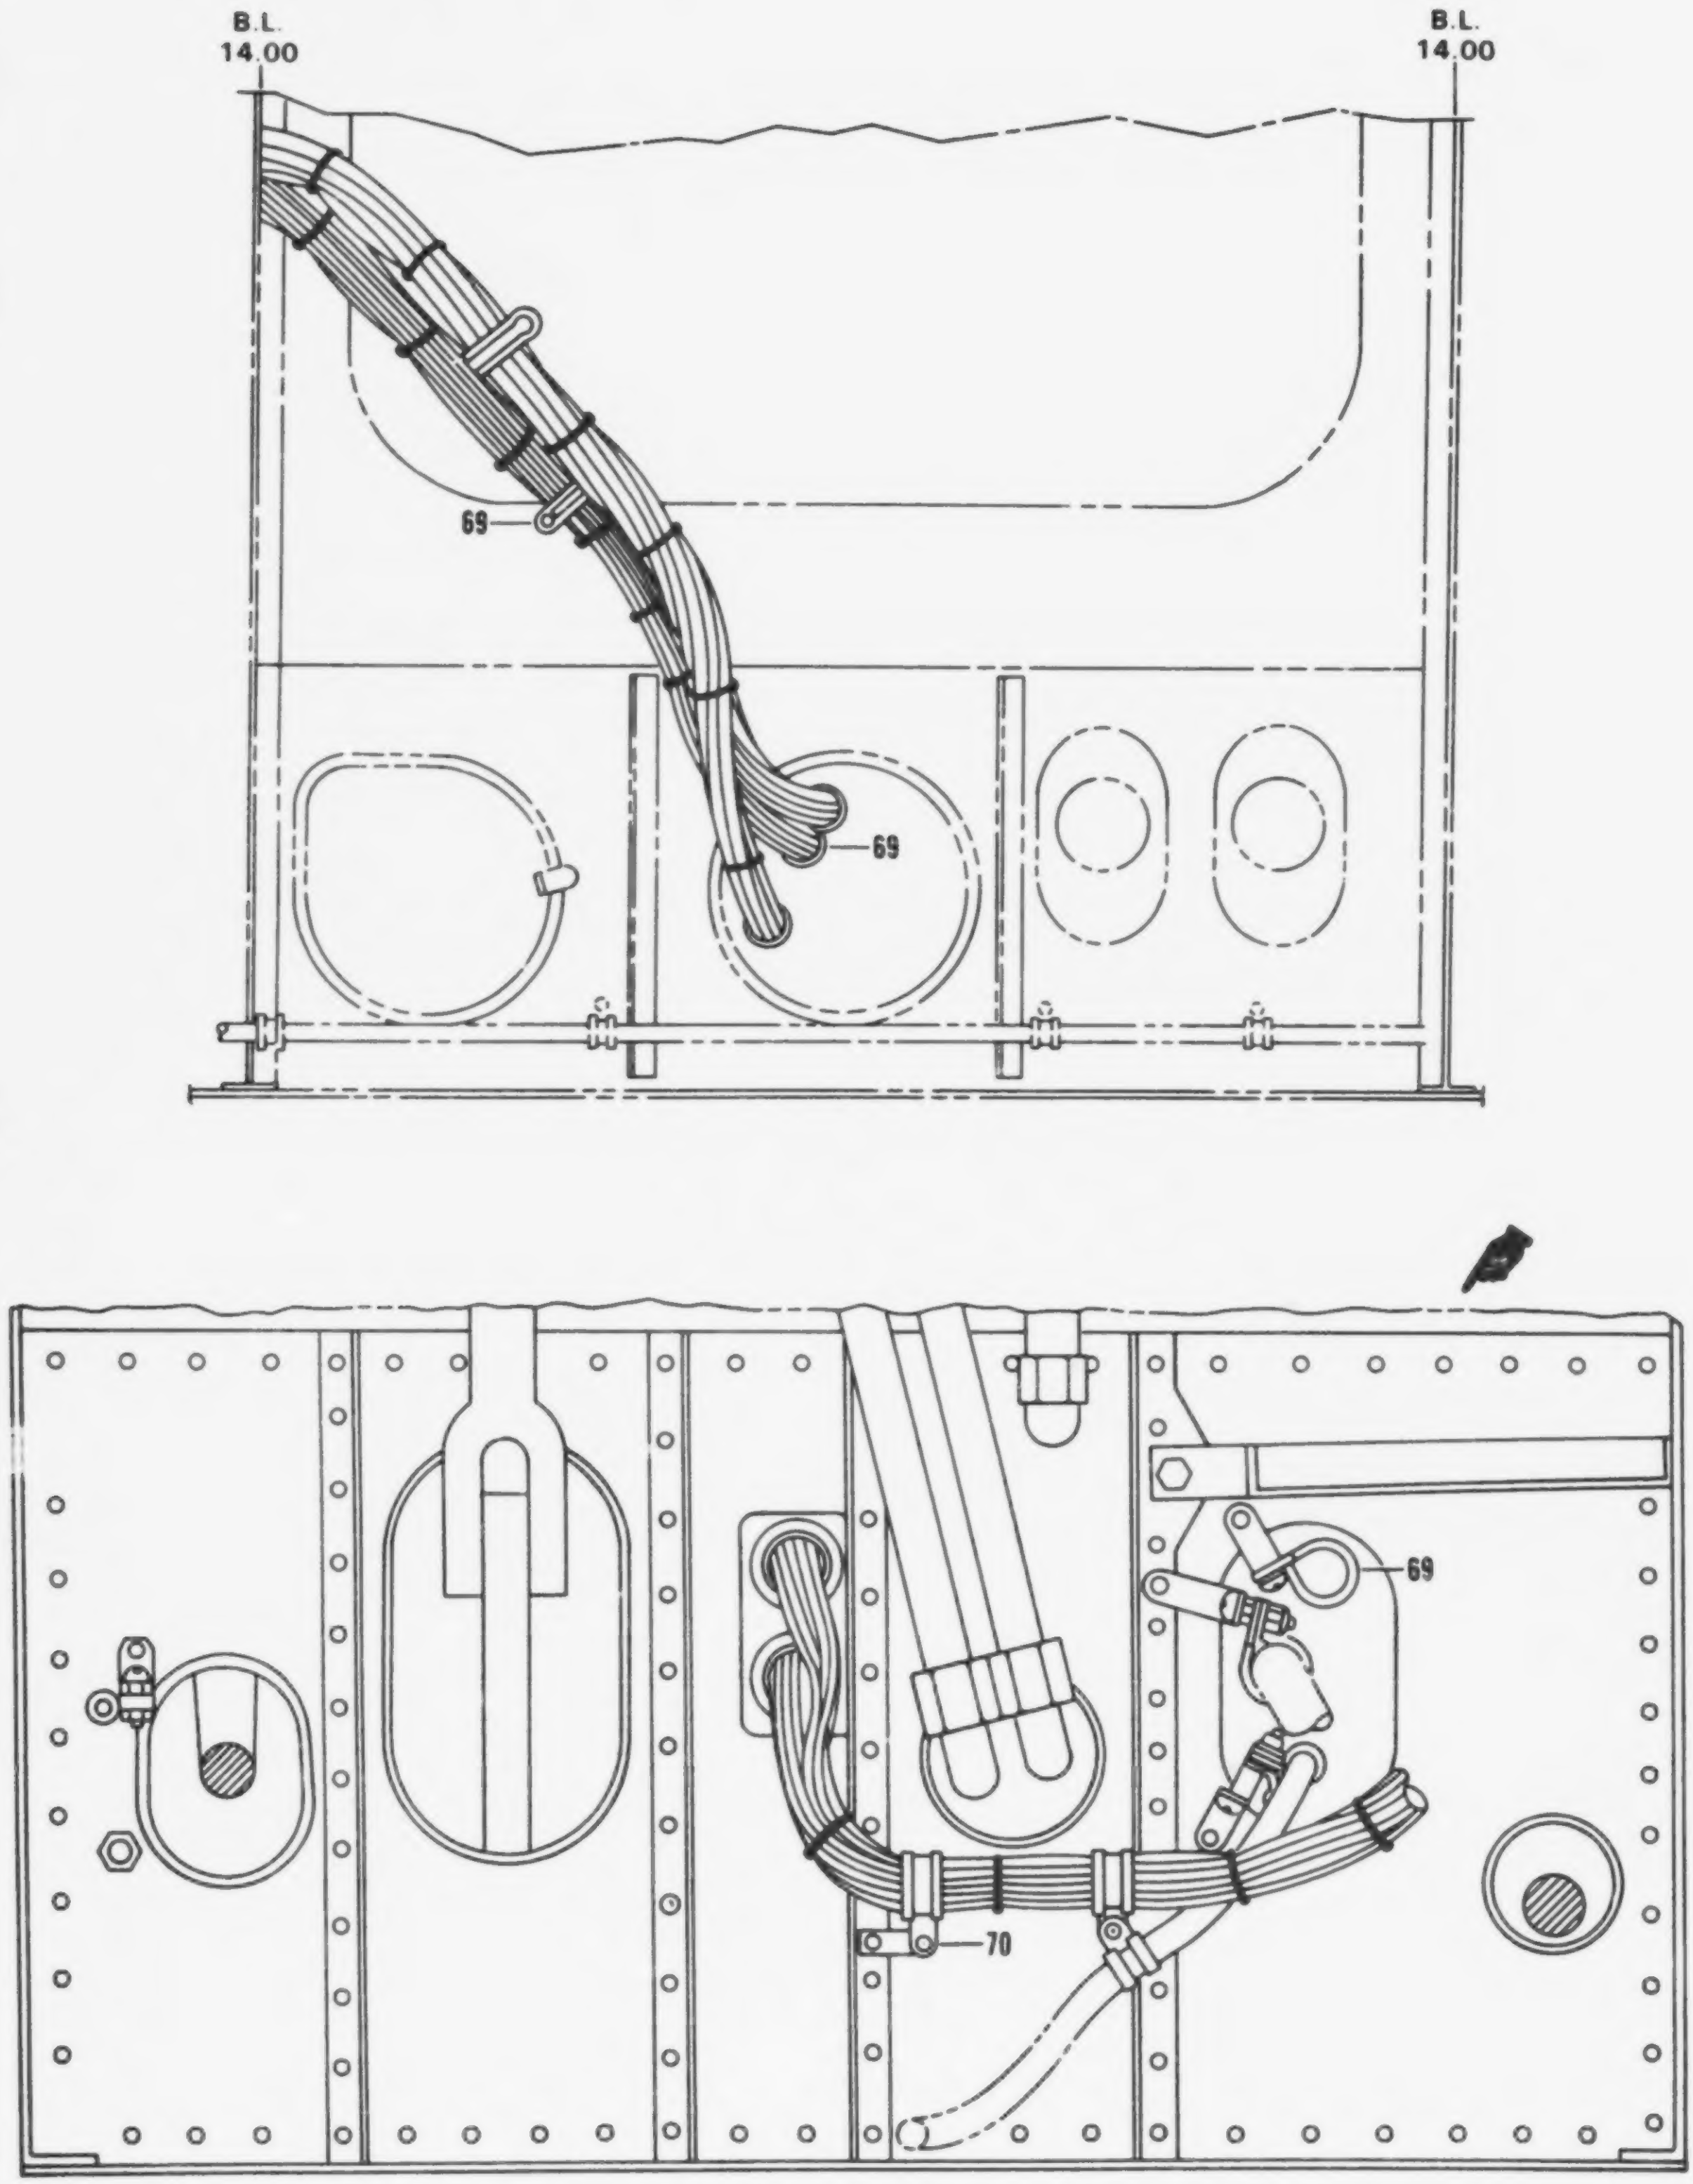
B.L.
14.00
B.L.
14.00
69
69
69
70

Figure 246D. AC Power Installation (Sheet 4 of 10)

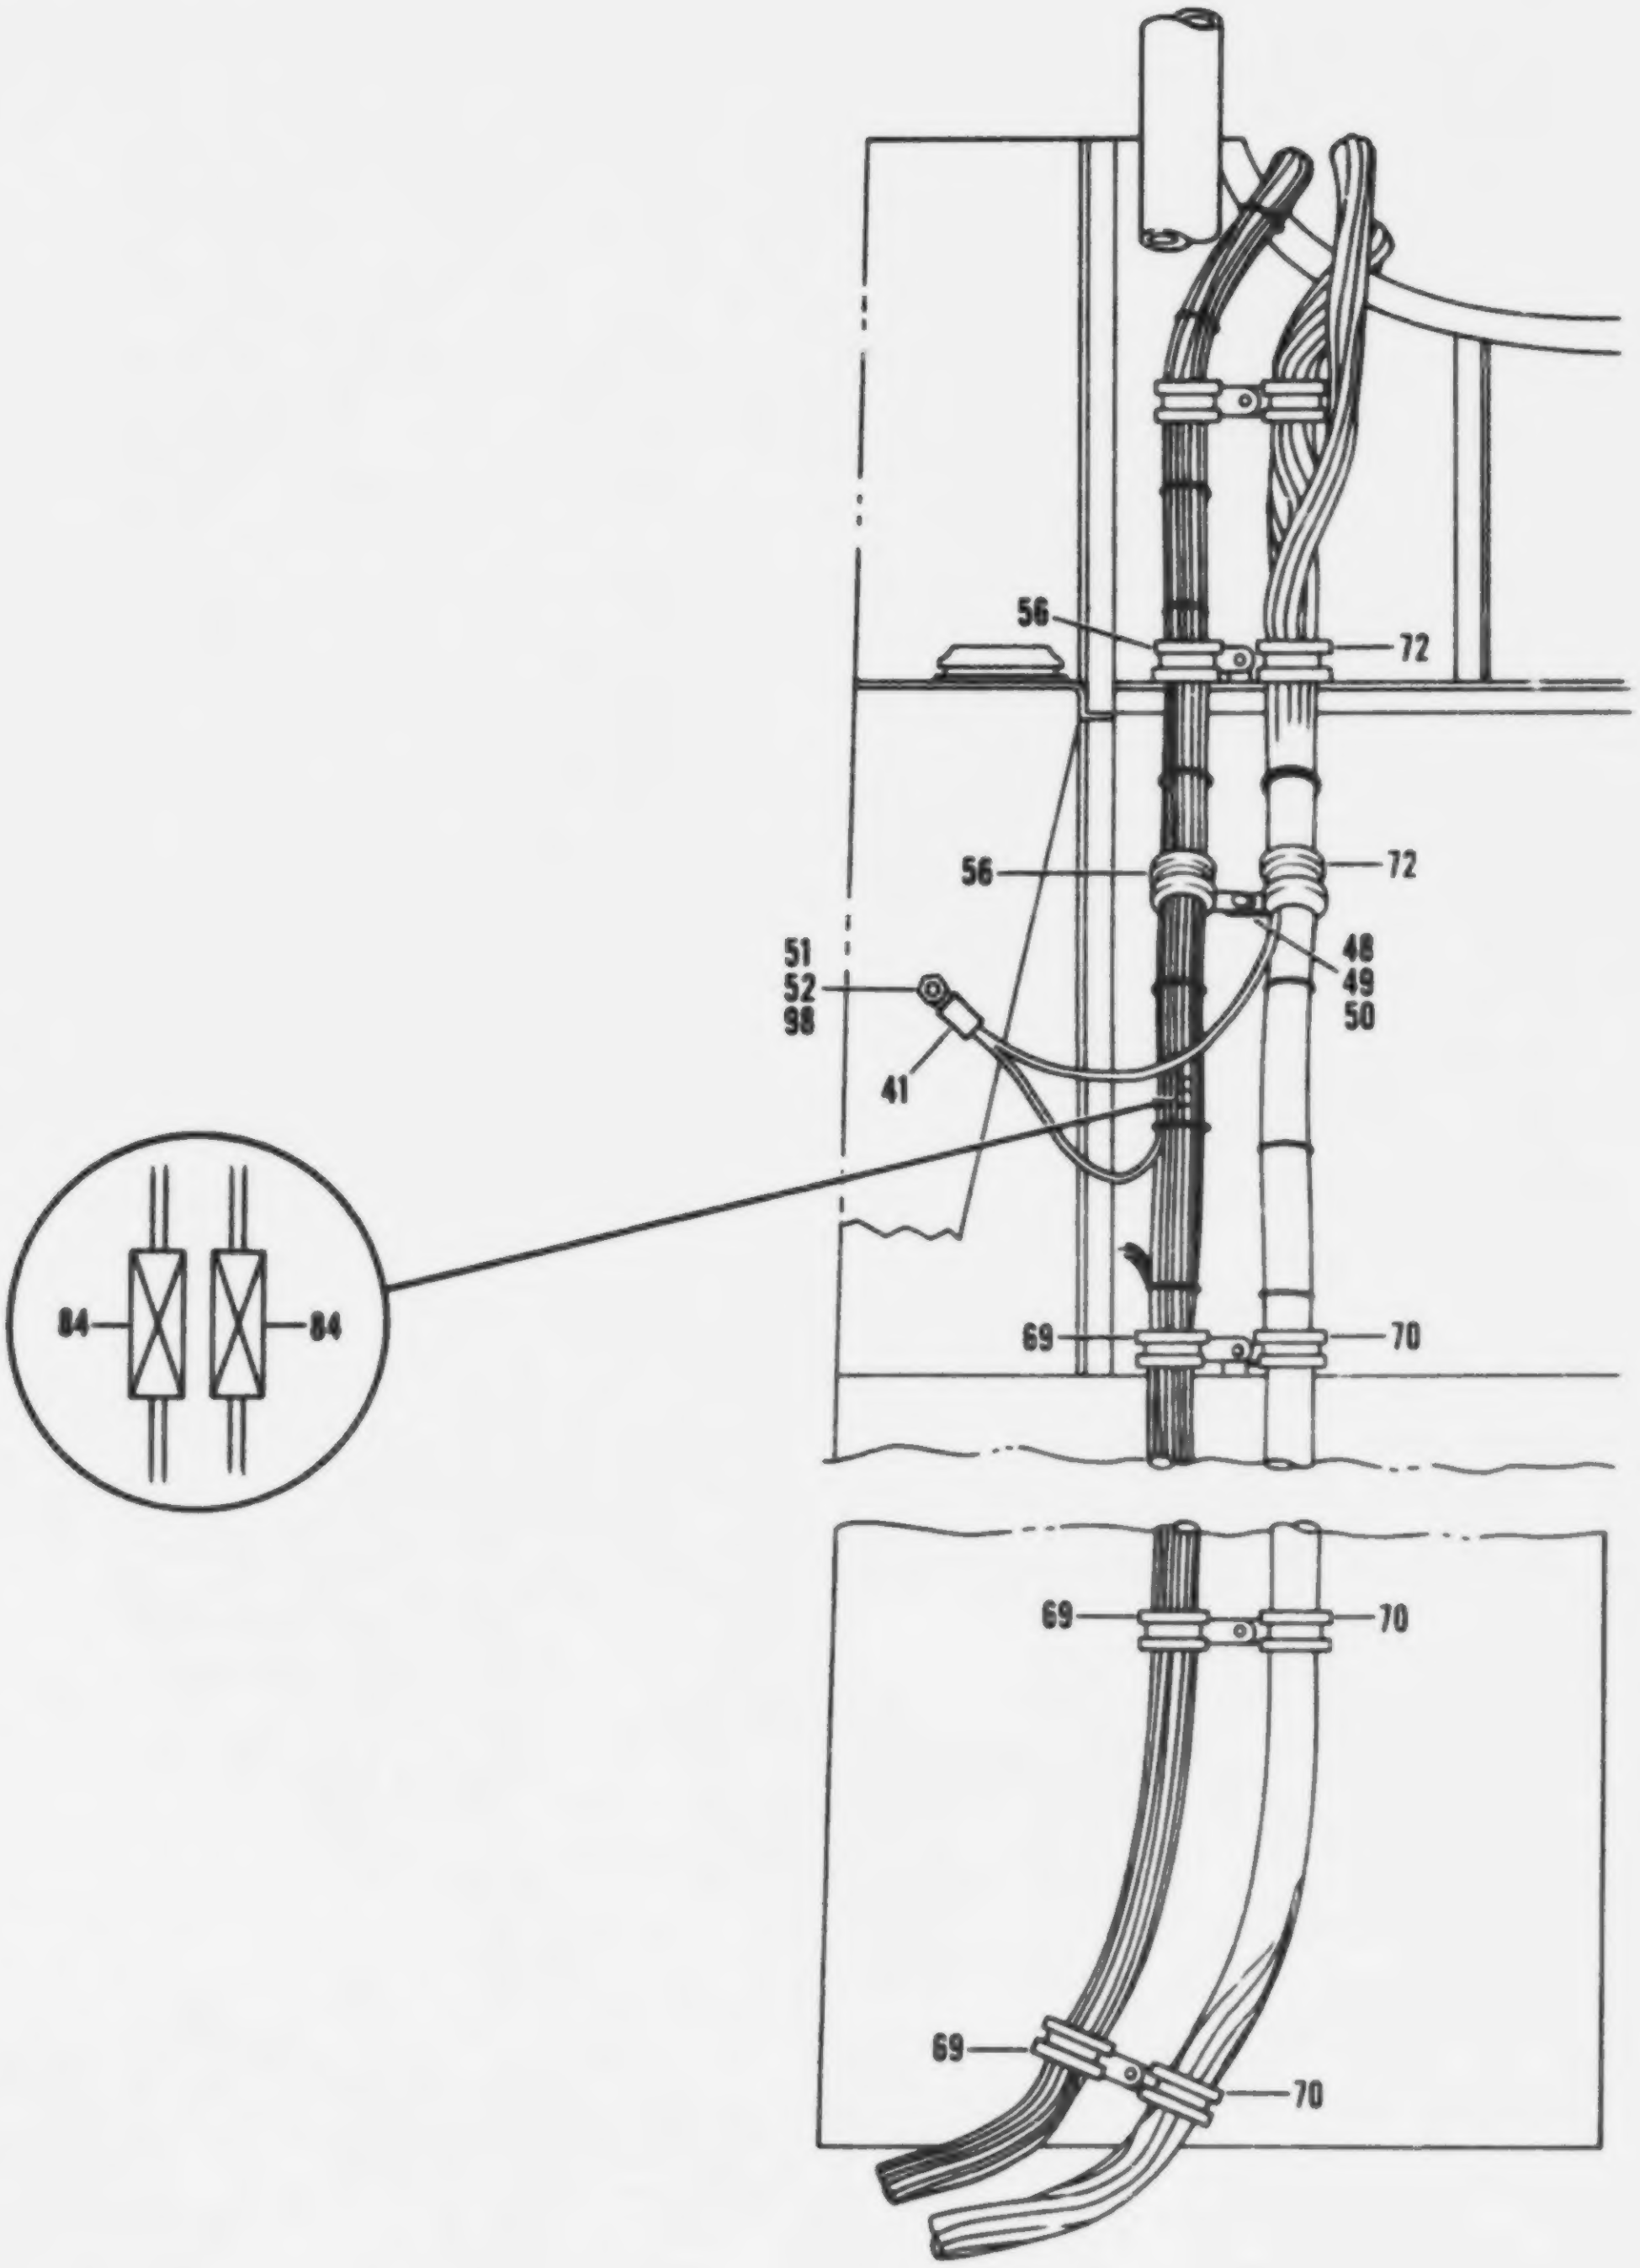
56
72
56
72
51
52
98
41
48
49
50
84
84
69
70
69
70
69
70

Figure 246D. AC Power Installation (Sheet 5 of 10)

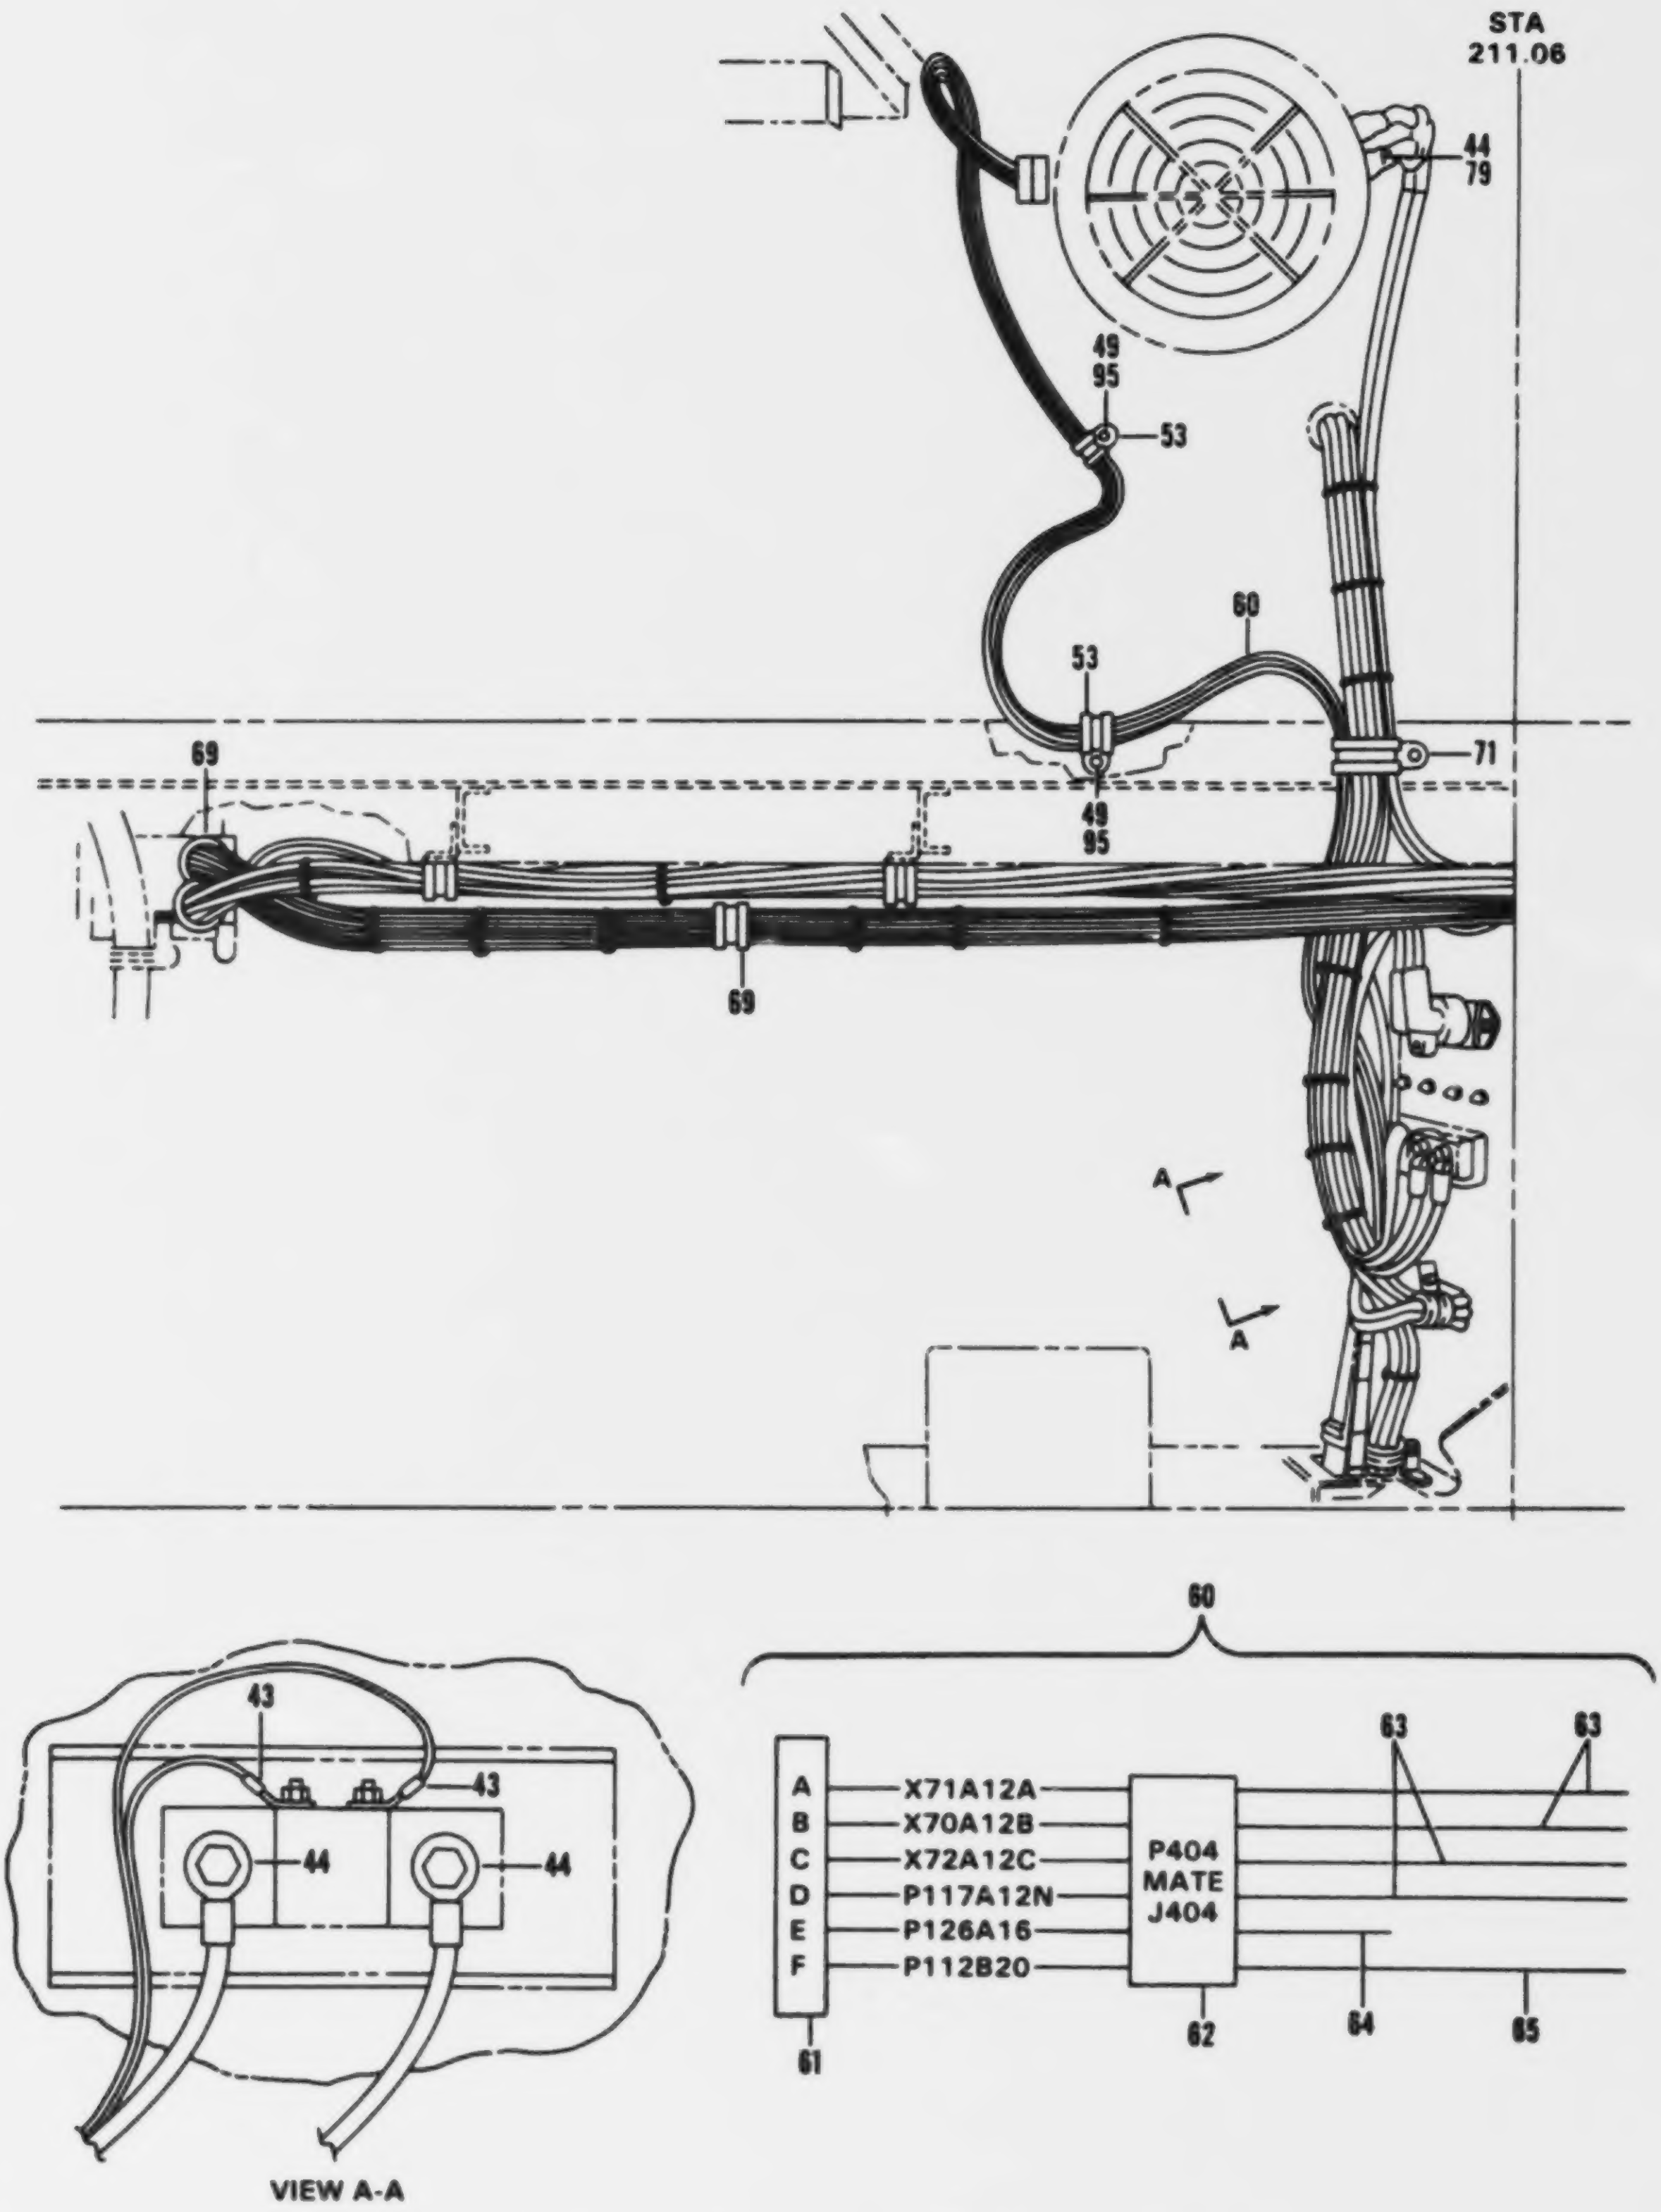
STA
211.06
44
79
49
95
53
60
53
71
69
49
95
69
A
A
43
43
44
44
VIEW A-A
60
63
63
A
B
C
D
E
F
X71A12A
X70A12B
X72A12C
P117A12N
P126A16
P112B20
P404
MATE
J404
61
62
64
65

Figure 246D. AC Power Installation (Sheet 6 of 10)

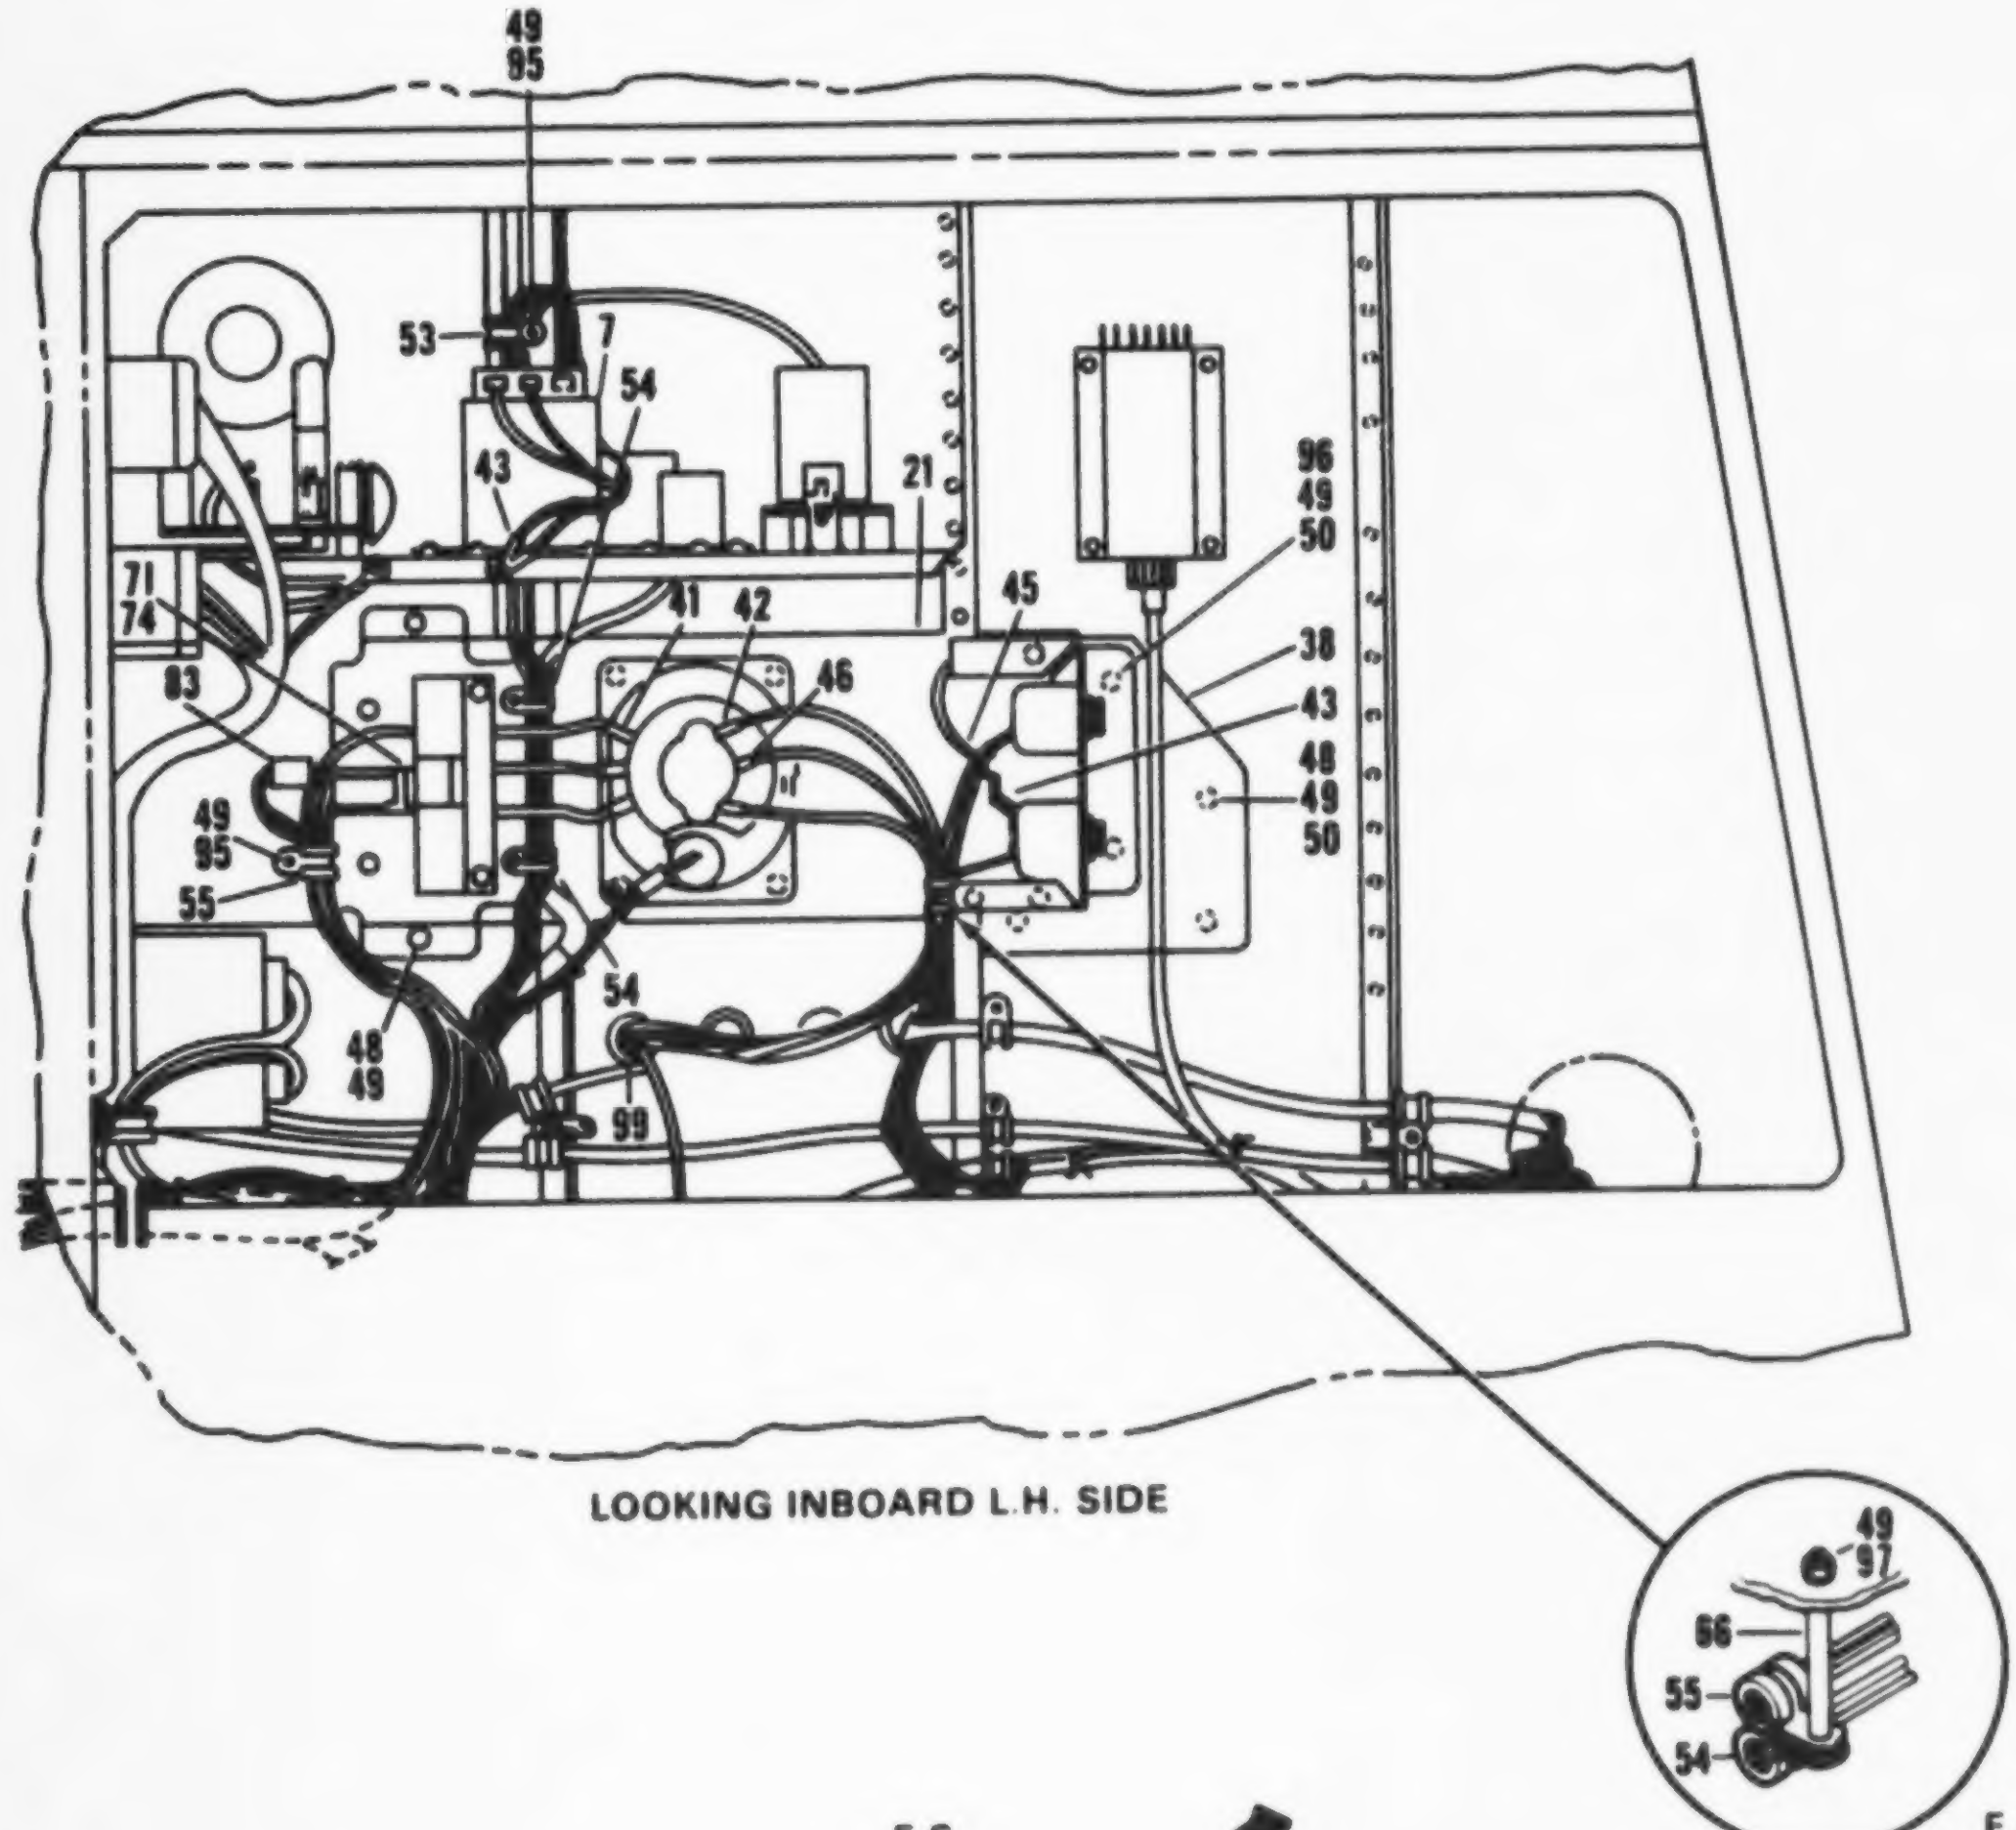
49
95
53
7
54
43
21
96
49
50
71
74
41
42
46
45
38
43
48
49
50
83
49
95
55
54
48
49
99
49
97
66
55
54

LOOKING INBOARD L.H. SIDE

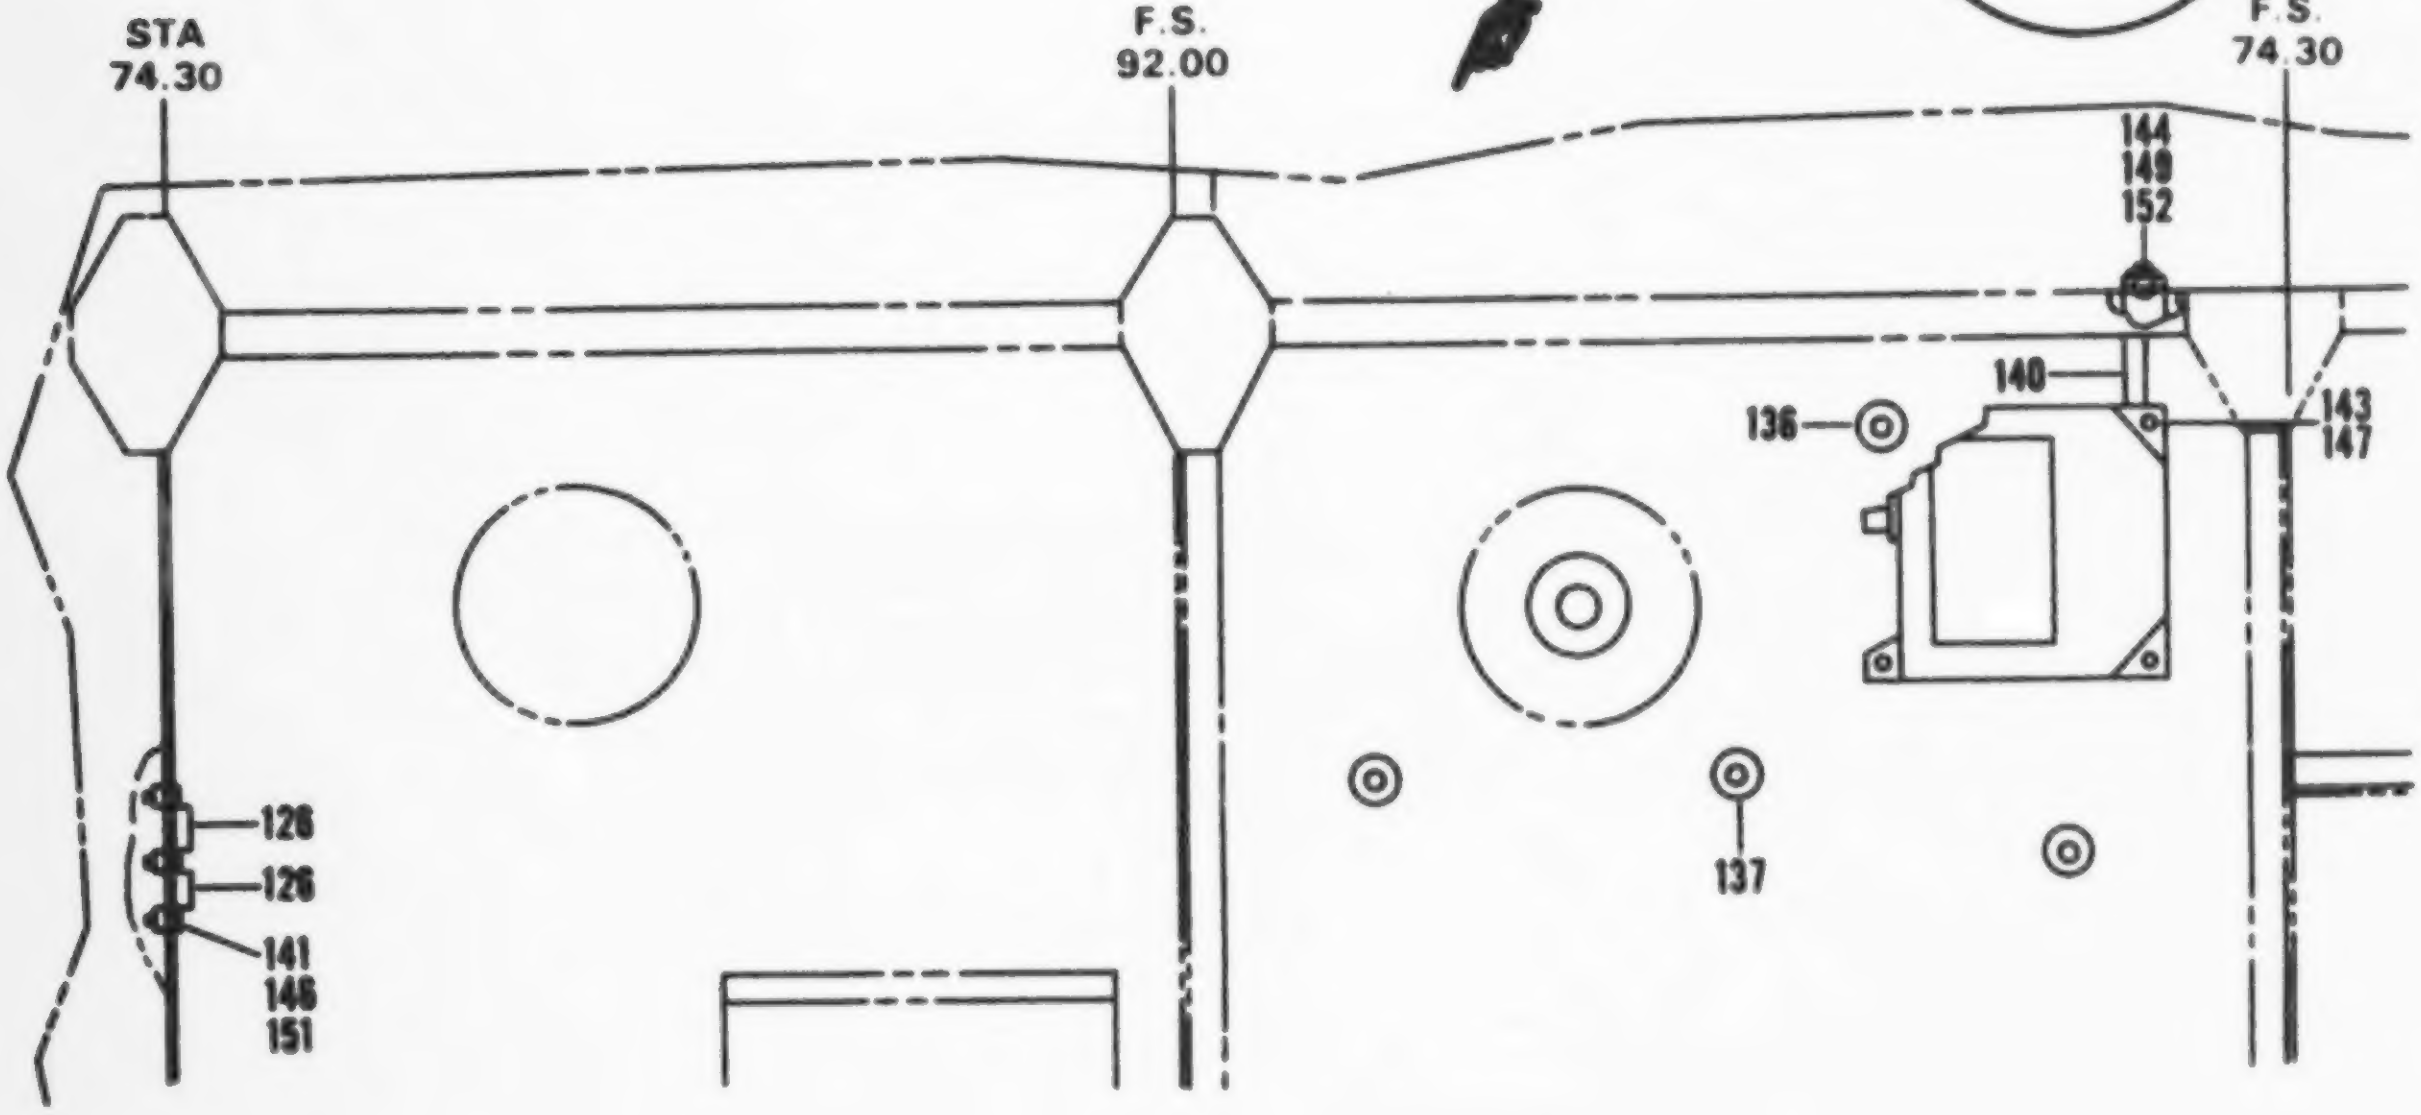
STA
74.30
F.S.
92.00
F.S.
74.30
144
149
152
140
136
143
147
126
126
141
146
151
137

Figure 246D. AC Power Installation (Sheet 7 of 10)

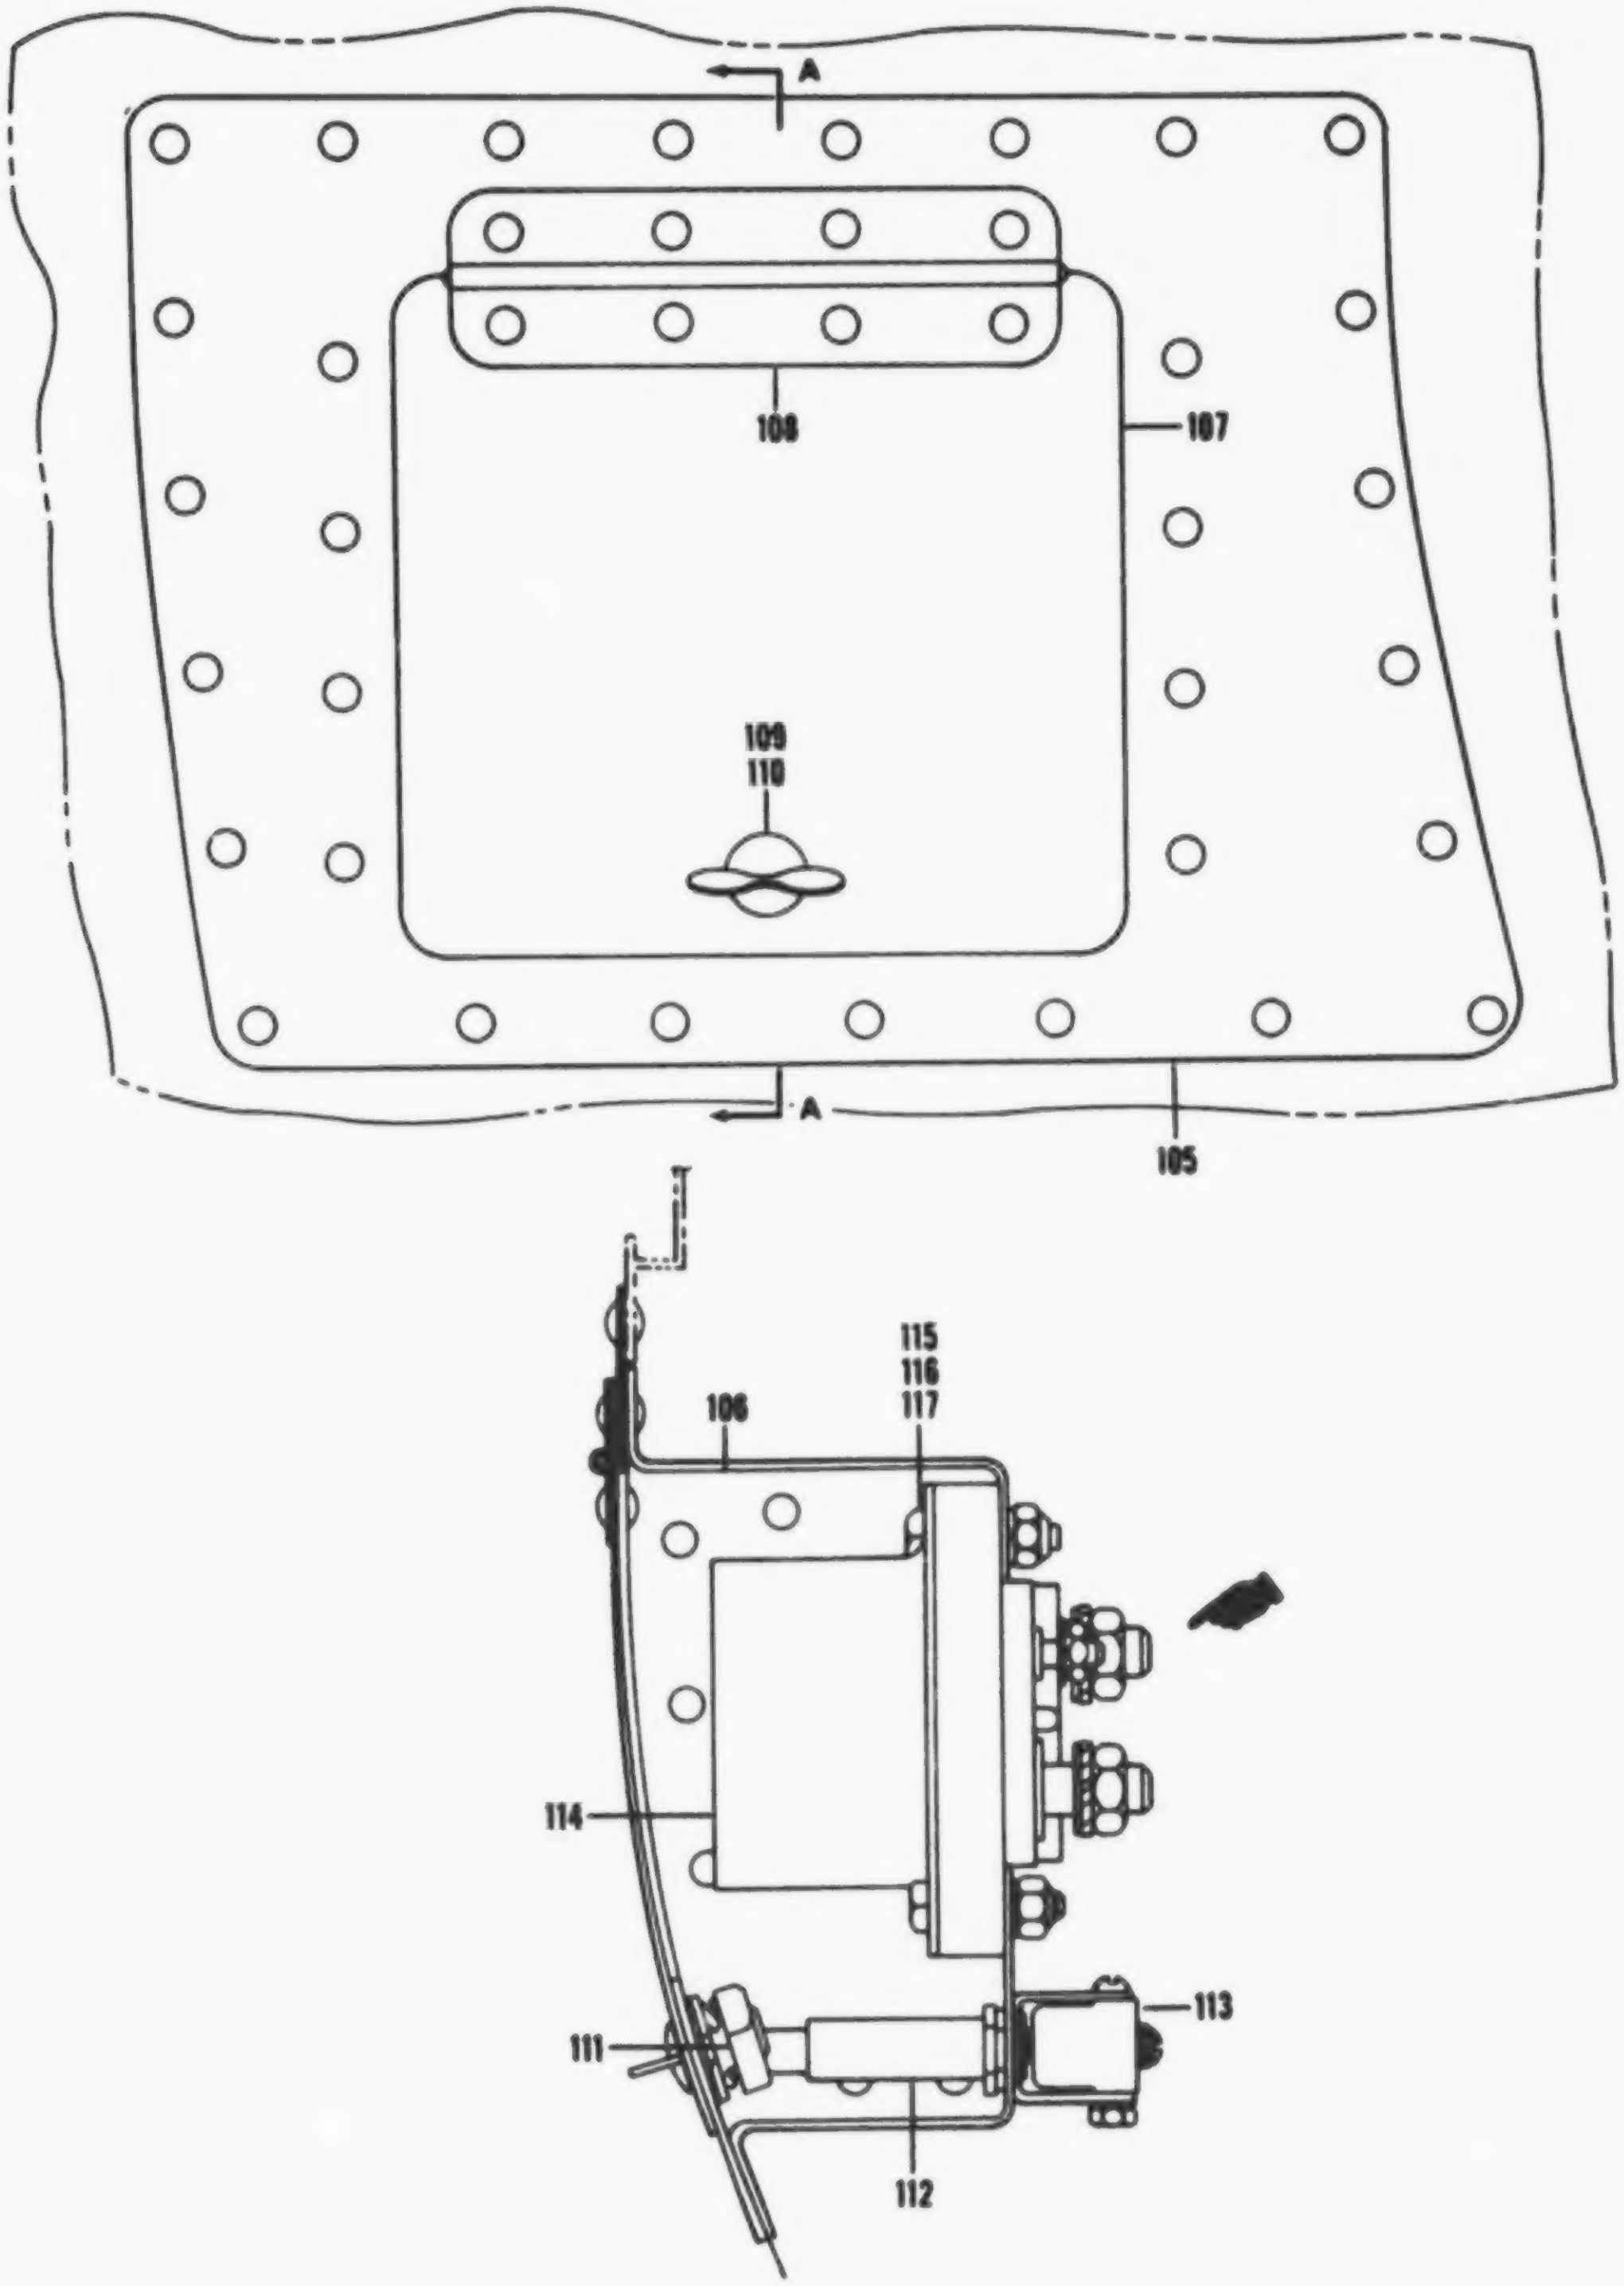
A
108
107
109
110
A
105
106
115
116
117
114
113
111
112

SECTION A-A

Figure 246D. AC Power Installation (Sheet 8 of 10)

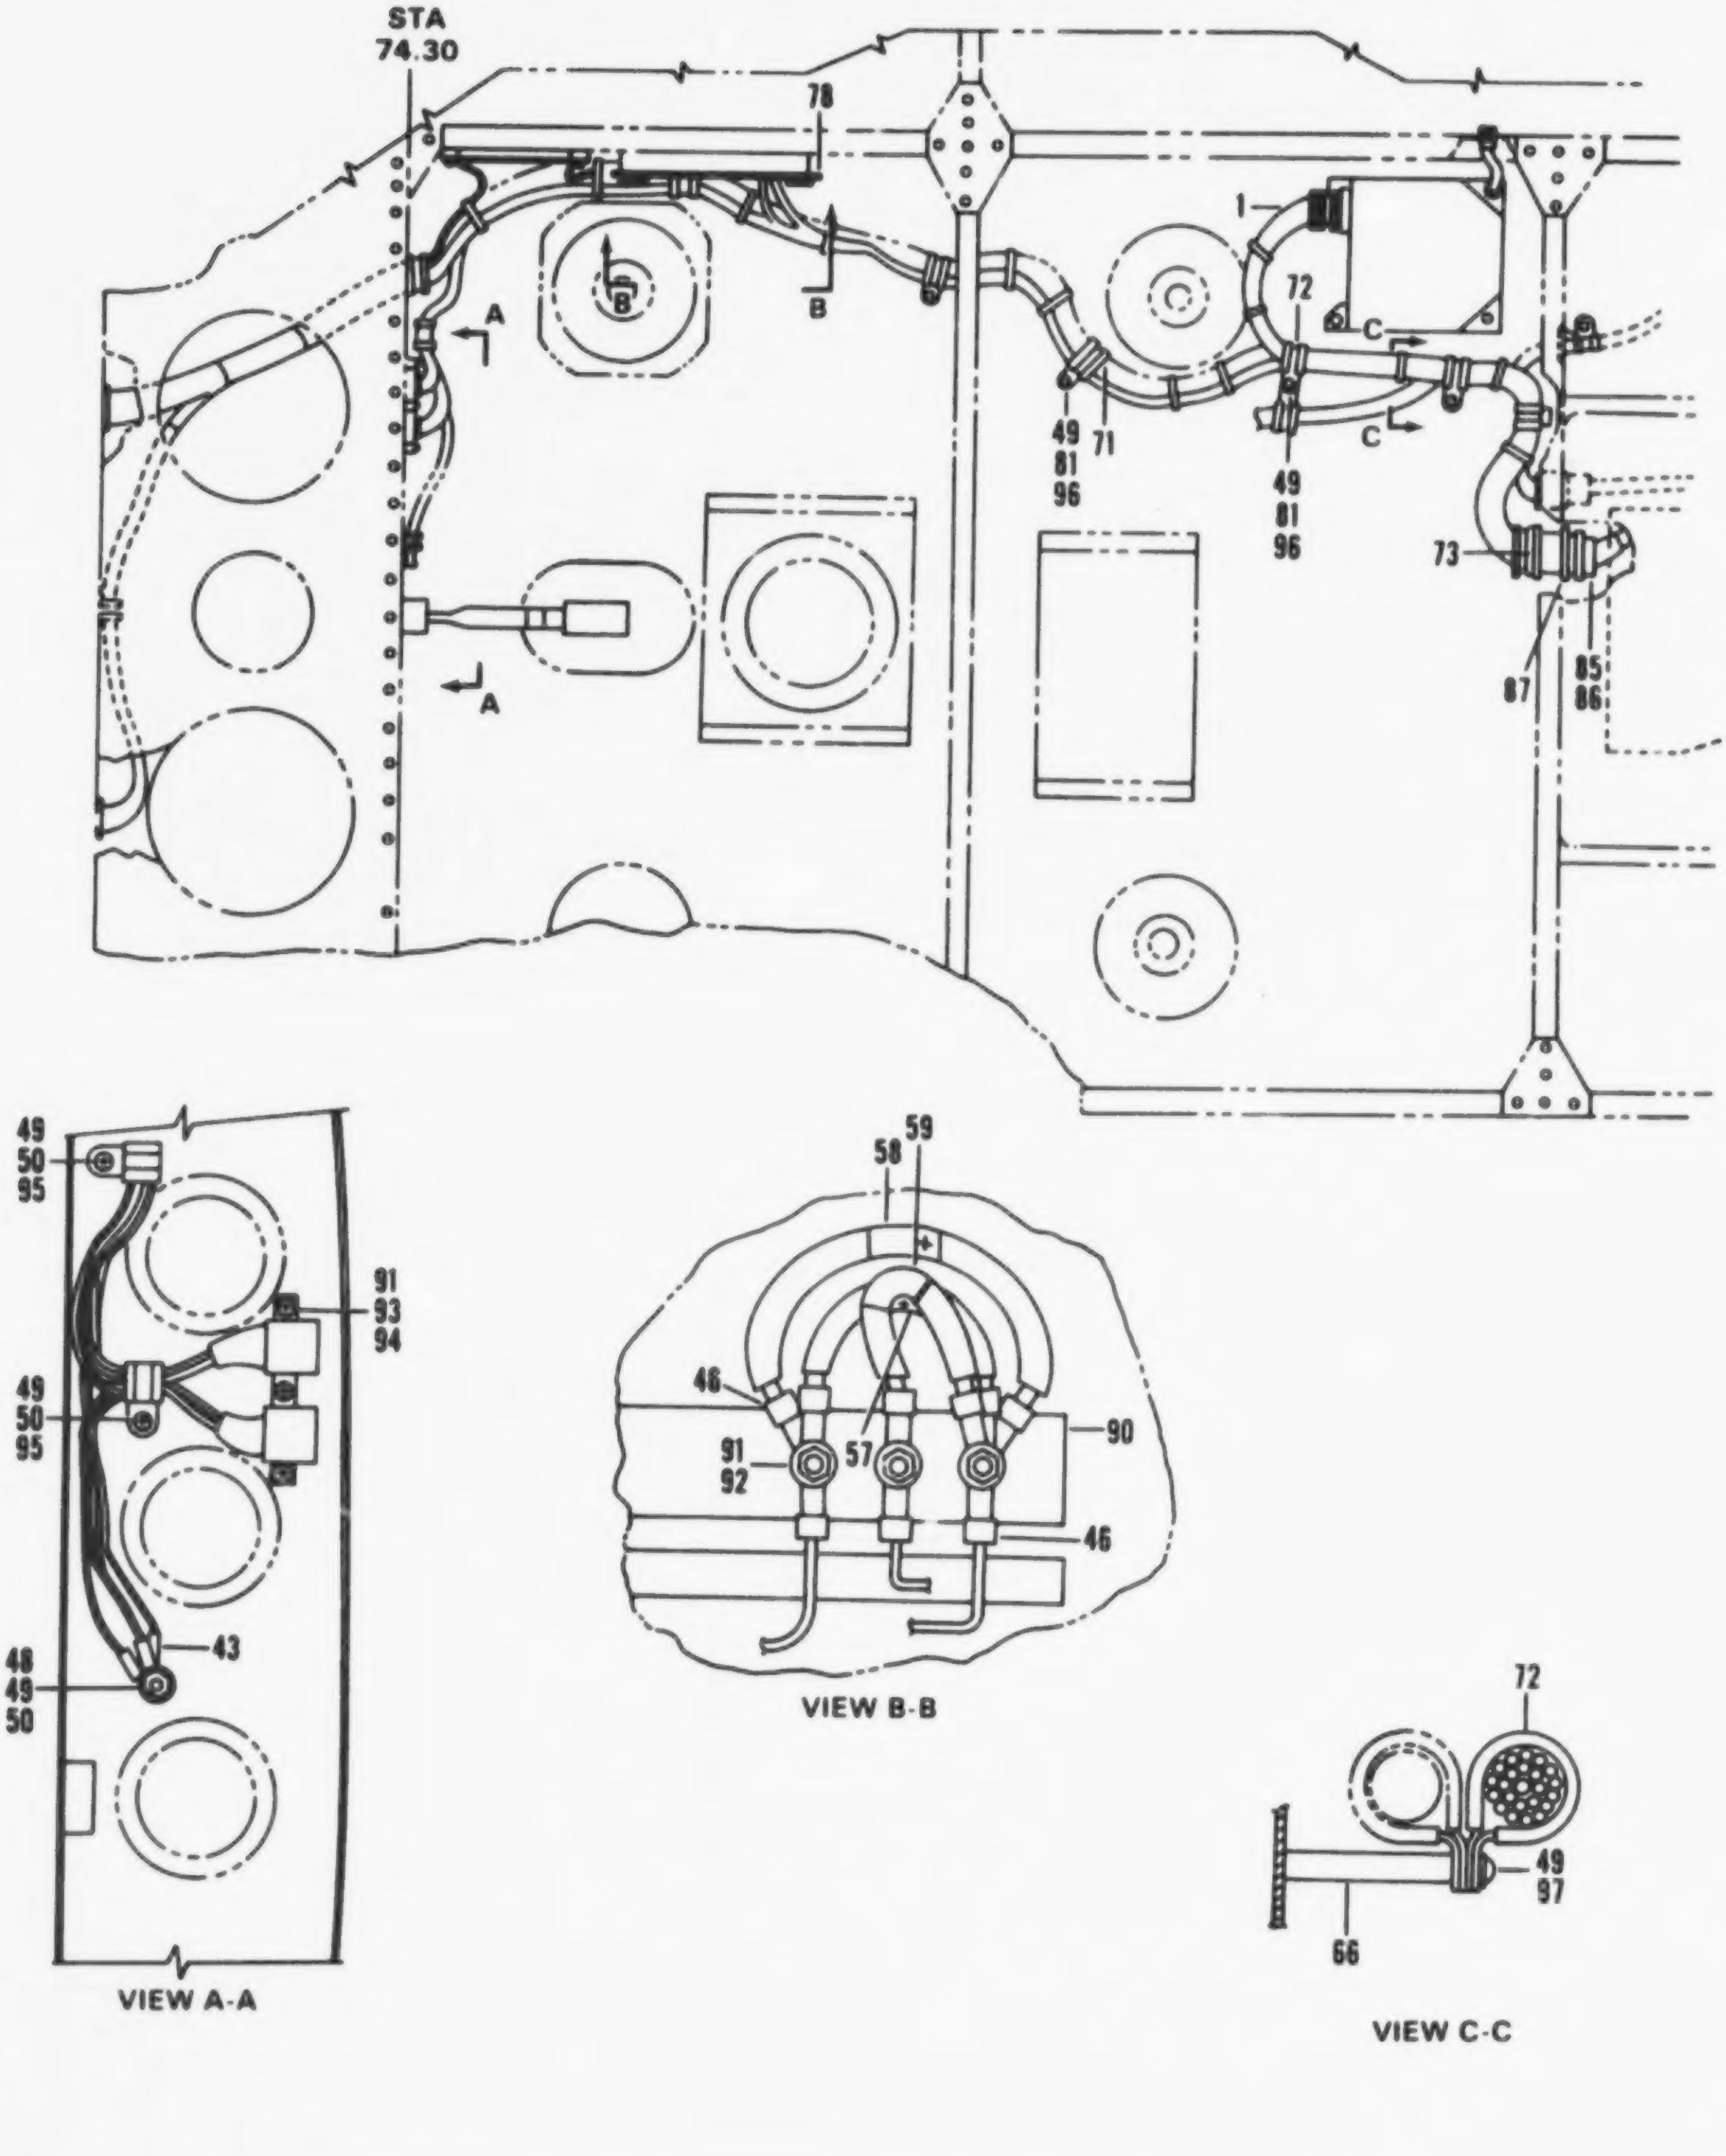
STA
74.30
78
A
B
B
1
72
C
C
49
81
96
71
49
81
96
73
87
85
86
A
49
50
95
91
93
94
49
50
95
48
49
50
43
VIEW A-A
58
59
46
91
92
57
90
46
VIEW B-B
72
49
97
66
VIEW C-C

Figure 246D. AC Power Installation (Sheet 9 of 10)

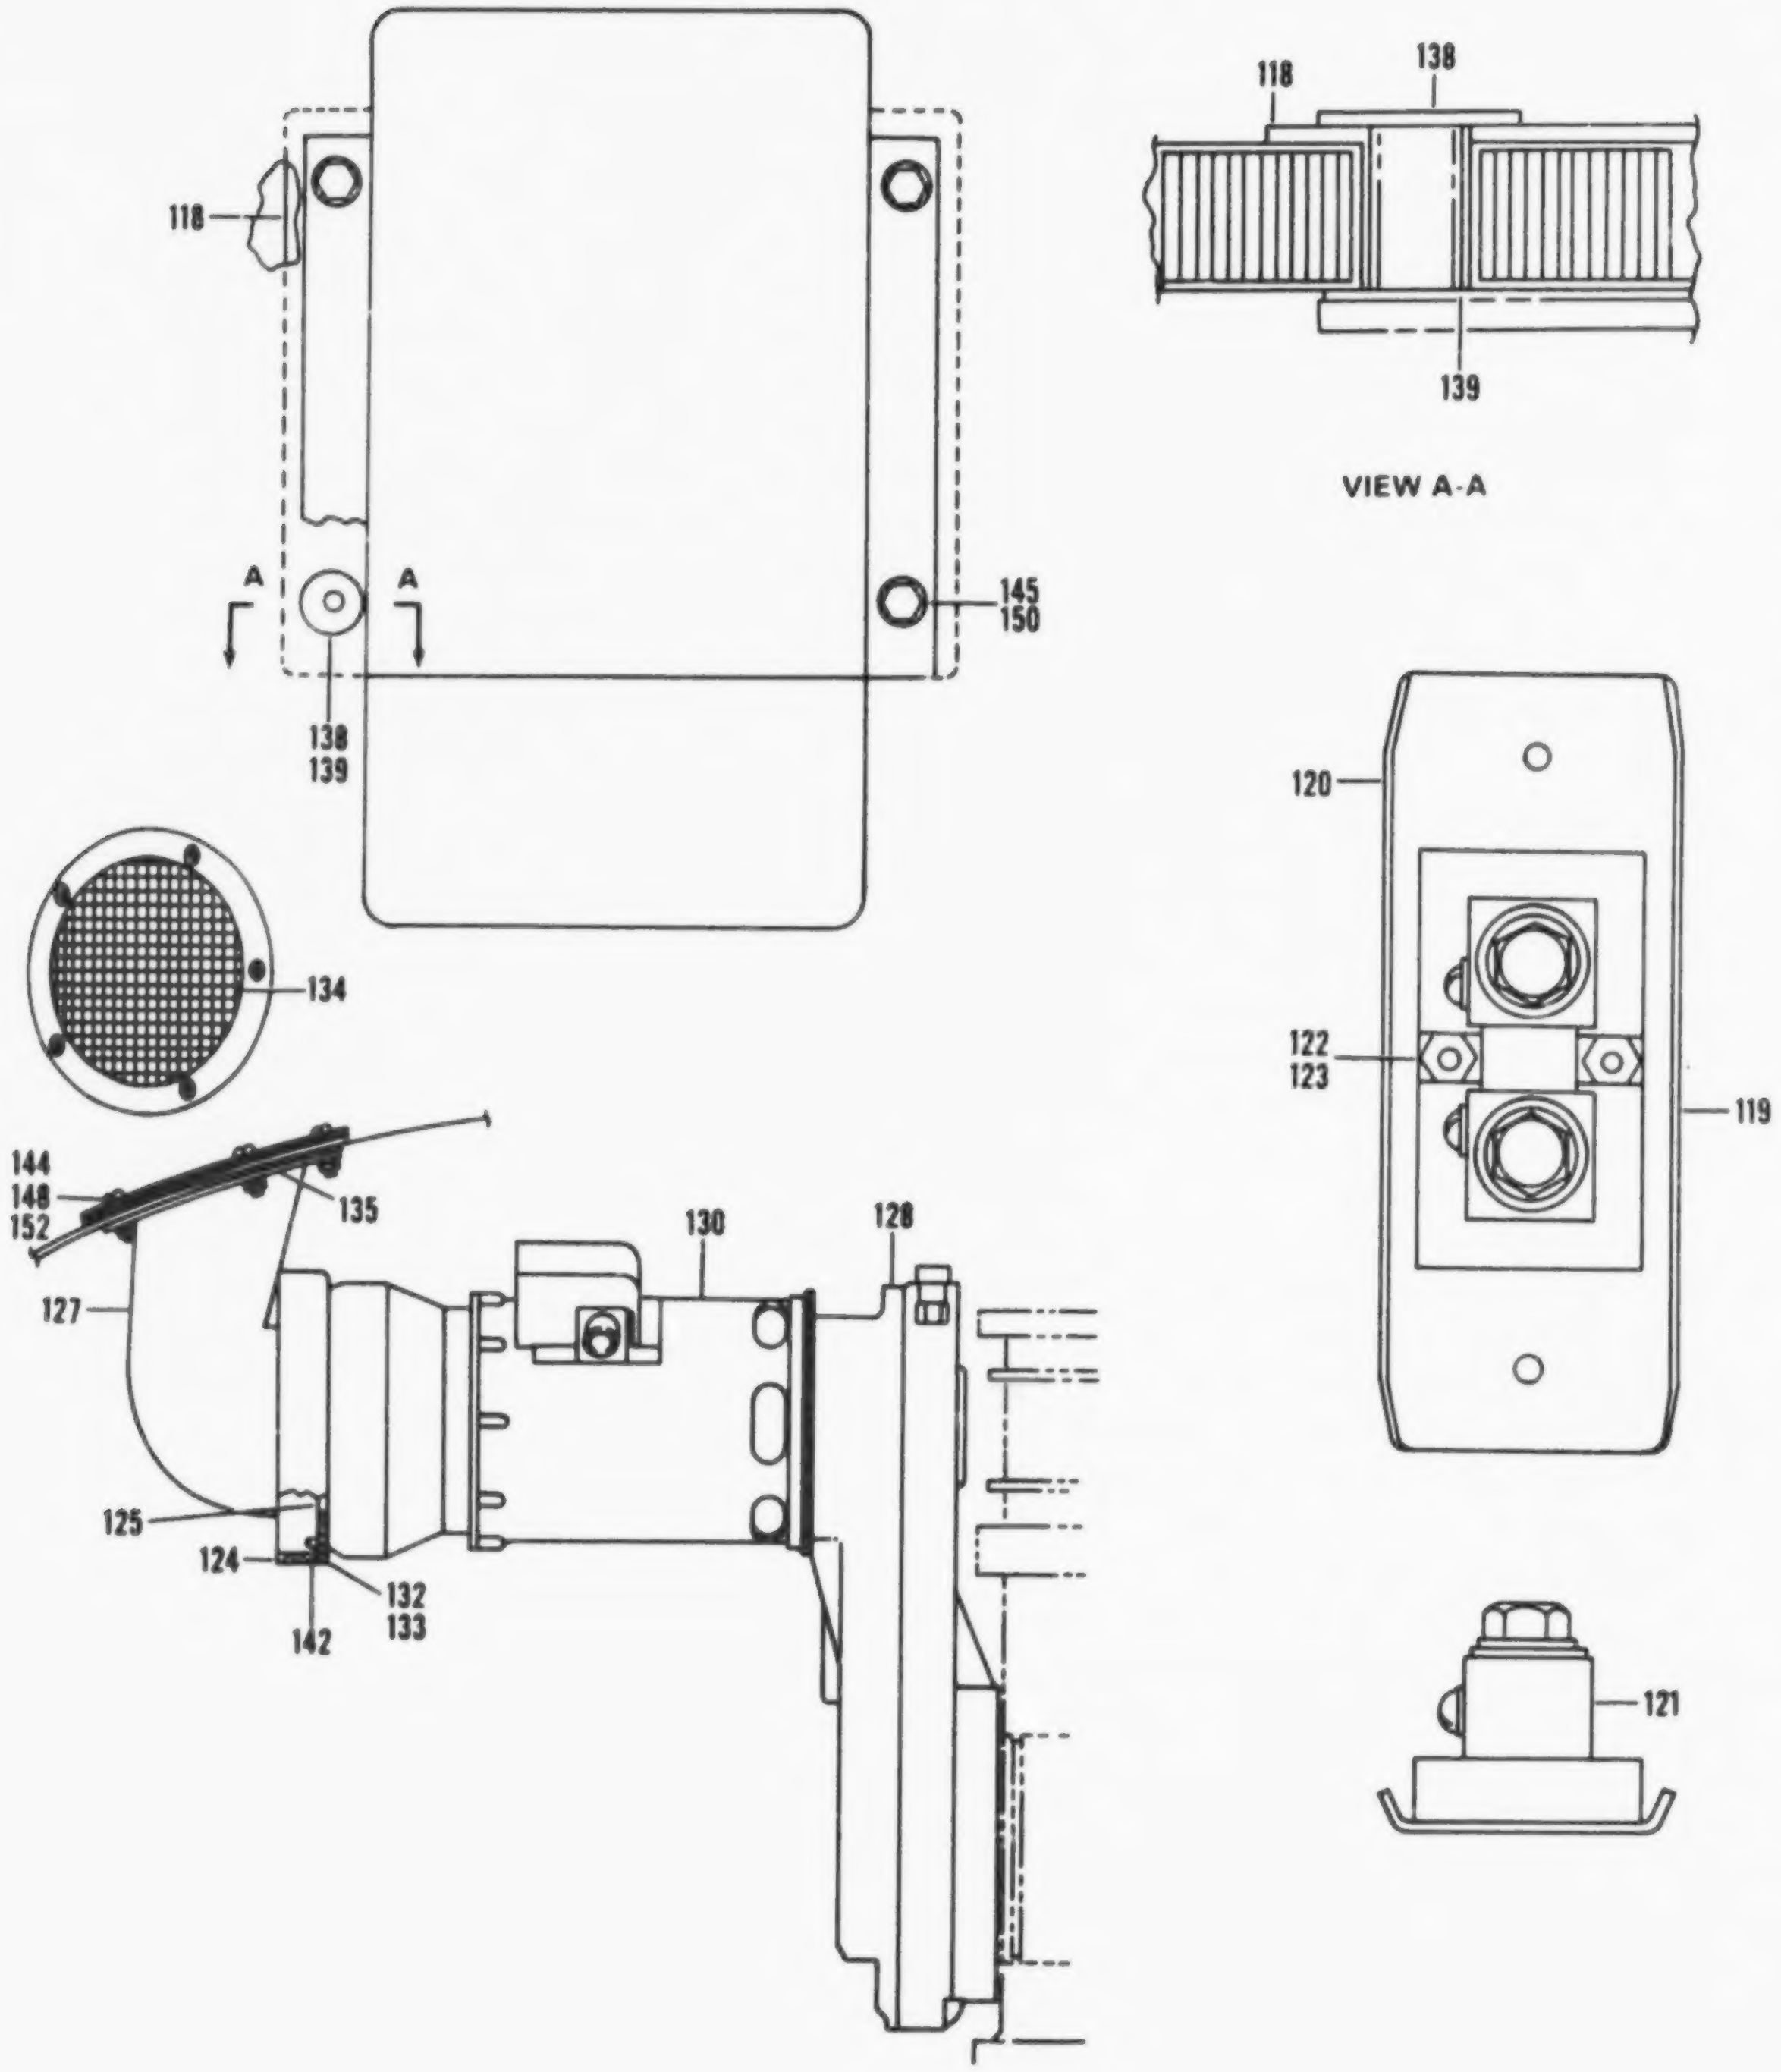
118
A
A
138
139
145
150
138
118
139
120
122
123
119
134
144
148
152
135
130
128
127
125
124
142
132
133
121

VIEW A-A

Figure 246D. AC Power Installation (Sheet 10 of 10)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
246D		XCFZZ		20309	ES-F-221400	ELECTRICAL INSTL, AC SEE FIG.5A AND 5B FOR NHA.......UHE,UHX	EA	1
246D		XCFZZ		20309	ES-F-221385	.CABLE INSTALLATION,.......UHE,UHX	EA	1
246D	1	A0000		20309	ES-D-221422	..HARNESS,WIRE ALTERNATOR.......UHE,UHX	EA	1
246D	2	PAOZZ	5935-00-518-3576	96906	MS3476L18-32S	...CONNECTOR,PLUG,ELEC.......UHE,UHX	EA	1
246D	3	PAOZZ	5940-01-135-7077	81349	M83519/1-3	...SPLICE,CONDUCTOR.......UHE,UHX	EA	3
246D	4	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	...WIRE,ELECTRICAL.......UHE,UHX	FT	V
246D	5	PAOZZ	5970-00-082-3948	81349	M23053/5-108-9	...INSULATION SLEEVING.......UHE,UHX	FT	V
246D	6	PAODD	6110-01-092-3909	97499	205-075-085-1	...CONTROL BOX,GENERATOR.......UHE,UHX	EA	1
246D	7	A0000		20309	ES-D-221401	..PHASE SENSING ASSY.......UHE,UHX	EA	1
246D	8	MFOZZ		20309	ES-C-221411	...PLATE.......UHE,UHX	EA	1
246D	9	PAOZZ	5961-00-170-9878	81349	JANSPA25	...RECTIFIER,SEMICONDU.......UHE,UHX	EA	1
246D	10	PBOZZ	5950-00-721-1978	95266	7233	...TRANSFORMER,POWER.......UHE,UHX	EA	1
246D	11	PAOZZ	5945-00-321-0871	74063	AVR-869	...RELAY,ELECTROMAGNET.......UHE,UHX	EA	1
246D	12	PAOZZ	5305-00-995-3444	96906	MS35207-266	...SCREW,MACHINE.......UHE,UHX	EA	1
246D	13	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT.......UHE,UHX	EA	1
246D	14	PAOZZ	5310-00-877-5797	96906	MS21044N3	...NUT,SELF-LOCKING,HE.......UHE,UHX	EA	7
246D	15	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.......UHE,UHX	EA	13
246D	16	PAOZZ	5305-00-989-7434	96906	MS35207-263	...SCREW,MACHINE.......UHE,UHX	EA	6
246D	17	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	...WIRE,ELECTRICAL.......UHE,UHX	FT	V
246D	18	PAOZZ	5940-00-143-4771	96906	MS25036-103	...TERMINAL,LUG.......UHE,UHX	EA	5
246D	19	PAOZZ	5970-00-812-2974	81349	M23053/5-103-0	...INSULATION SLEEVING.......UHE,UHX	EA	V
246D	20	MFOZZ		20309	ES-B-221412	...BRACKET.......UHE,UHX	EA	1
246D	21	A0000		20309	ES-F-221386	..AC PWR DISTR ASSY.......UHE,UHX	EA	1
246D	22	XB000		20309	ES-D-221360	...CHASSIS ASSEMBLY.......UHE,UHX	EA	1
246D	23	PAOZZ	5945-00-905-7288	74063	DH31A	...RELAY,ELECTROMAGNET.......UHE,UHX	EA	1
246D	24	PBOZZ	5925-01-077-1032	82647	9TC14-20	...CIRCUIT BREAKER 20 AMP.......UHE,UHX	EA	1
246D	25	PBOZZ	5925-00-261-7702	82647	9TC14-1	...CIRCUIT BREAKER 1 AMP.......UHE,UHX	EA	1
246D	26	PBOZZ	5950-01-074-8720	81349	M21480-16-5	...TRANSFORMER,CURRENT.......UHE,UHX	EA	1
246D	27	PAOZZ	5305-00-989-7434	96906	MS35207-263	...SCREW,MACHINE.......UHE,UHX	EA	13
246D	28	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.......UHE,UHX	EA	13
246D	29	XDOZZ		20309	ES-C-221350	...BRACKET.......UHE,UHX	EA	1
246D	30	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	...WIRE,ELECTRICAL.......UHE,UHX	FT	V
246D	31	PAOZZ	5940-00-143-4777	96906	MS25036-157	...TERMINAL,LUG.......UHE,UHX	EA	3
246D	32	PAOZZ	6145-00-578-7521	81349	M5086/1-12-9	...WIRE,ELECTRICAL.......UHE,UHX	FT	V
246D	33	MFOZZ		20309	ES-C-221387	...BRACKET.......UHE,UHX	EA	1
246D	34	PAOZZ	5310-00-187-2398	88044	AN960PD6L	...WASHER,FLAT.......UHE,UHX	EA	4
246D	35	PAOZZ	5310-00-807-1472	96906	MS21042L06	...NUT,SELF-LOCKING,EX.......UHE,UHX	EA	4
246D	36	PAOZZ	5940-00-143-4776	96906	MS25036-156	...TERMINAL,LUG.......UHE,UHX	EA	3
246D	37	PAOZZ	5940-00-557-1629	96906	MS25036-149	...TERMINAL,LUG.......UHE,UHX	EA	6
246D	38	MFOZZ		20309	ES-C-212822	..PLATE.......UHE,UHX	EA	2
246D	39	MFOZZ		20309	ES-C-221125	..STIFFENER.......UHE,UHX	EA	1
246D	40	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING,PL.......UHE,UHX	EA	2
246D	41	PAOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG.......UHE,UHX	EA	5

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
246D	42	PAOZZ	5940-00-113-8183	96906	MS25036-113	..TERMINAL,LUG	UHE,UHX	EA	3
246D	43	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG	UHE,UHX	EA	13
246D	44	PAOZZ	5940-00-115-5007	96906	MS25036-130	..TERMINAL,LUG	UHE,UHX	EA	2
246D	45	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG	UHE,UHX	EA	6
246D	46	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG	UHE,UHX	EA	18
246D	47	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG	UHE,UHX	EA	8
246D	48	PAOZZ	5305-00-993-1848	96906	MS35207-265	..SCREW,MACHINE	UHE,UHX	EA	7
246D	49	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHE,UHX	EA	16
246D	50	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING,HE	UHE,UHX	EA	9
246D	51	PAOZZ	5305-00-225-3839	96906	MS90725-8	..SCREW,CAP,HEXAGON H	UHE,UHX	EA	1
246D	52	PAOZZ	5310-00-938-3387	96906	MS9549-10	..WASHER,FLAT	UHE,UHX	EA	2
246D	53	PAOZZ	5340-00-187-6023	96906	MS21122-6	..CLAMP,LOOP	UHE,UHX	EA	3
246D	54	PAOZZ	5340-00-151-5998	96906	MS21122-8	..CLAMP,LOOP	UHE,UHX	EA	3
246D	55	PAOZZ	5340-00-151-5999	96906	MS21122-12	..CLAMP,LOOP	UHE,UHX	EA	1
246D	56	PAOZZ	5340-00-151-6001	96906	MS21122-13	..CLAMP,LOOP	UHE,UHX	EA	2
246D	57	PBFZZ	5910-00-879-0123	56289	TE-1307	..CAPACITOR,FIXED,ELE	UHE,UHX	EA	1
246D	58	PBFZZ	5910-00-163-4071	56289	TE-1305-5	..CAPACITOR,FIXED,ELE	UHE,UHX	EA	1
246D	59	PBFZZ	5961-00-891-8478	81483	1N2071	..SEMICONDUCTOR DEVIC	UHE,UHX	EA	1
246D	60	AOOOO		20309	ES-D-221421	..WIRE HARNESS	UHE,UHX	EA	1
246D	61	PAOZZ	5935-00-814-9780	96906	MS3106R20-17S	...CONNECTOR,PLUG,ELEC	UHE,UHX	EA	1
246D	62	PAOZZ	5970-00-812-1360	81349	M23053/5-109-9	...INSULATION SLEEVING	UHE,UHX	FT	V
246D	63	PAOZZ	6145-00-578-7521	81349	M5086/1-12-9	...WIRE,ELECTRICAL	UHE,UHX	FT	V
246D	64	XDOZZ	6145-00-578-7517	81349	M5086-1-16-9	...WIRE,ELECTRICAL	UHE,UHX	FT	V
246D	65	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	...WIRE,ELECTRICAL	UHE,UHX	EA	V
246D	66	PAOZZ	5365-00-337-8737	80205	NAS43DD3-80	..SPACER,SLEEVE	UHE,UHX	EA	2
246D	67	PAOZZ	5940-00-504-4703	96906	MS25036-104	..TERMINAL,LUG	UHE,UHX	EA	3
246D	68	PAOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG	UHE,UHX	EA	1
246D	69	PAOZZ	5340-00-256-7342	96906	MS21122-14	..CLAMP,LOOP	UHE,UHX	EA	9
246D	70	PAOZZ	5340-00-989-4574	81996	EAB700D17	..CLAMP,LOOP	UHE,UHX	EA	4
246D	71	PAOZZ	5340-00-993-1470	81996	EAB700D18	..CLAMP,LOOP	UHE,UHX	EA	2
246D	72	PAOZZ	5340-01-061-2297	96906	MS21122-19	..CLAMP,LOOP	UHE,UHX	EA	4
246D	73	PAOZZ	5975-00-284-6109	88044	AN3064-12	..CHASE NIPPLE,CONDUI	UHE,UHX	EA	1
246D	74	PAOZZ	5935-00-410-0197	96906	MS3476L10-6P	..CONNECTOR,PLUG,ELEC	UHE,UHX	EA	2
246D	75	XDOZZ	5935-00-444-6522	96906	MS3476L10-6PW	..CONNECTOR,PLUG,ELEC	UHE,UHX	EA	1
246D	77	PAOZZ	5975-00-156-3253	96906	MS3367-2-9	..STRAP,TIEDOWN,ELECT	UHE,UHX	FT	V
246D	78	MOOZZ		96906	MS18029-1S-10	..COVER ASSY	UHE,UHX	EA	1
246D	79	PAOZZ	5975-00-250-6571	96906	MS25171-3S	..CABLE NIPPLE,ELECTR	UHE,UHX	EA	2
246D	80	PAOZZ	5975-00-553-7151	96906	MS25171-2S	..CABLE NIPPLE,ELE	UHE,UHX	EA	4
246D	81	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	..SPACER,SLEEVE	UHE,UHX	EA	3
246D	83	PAOZZ	5940-01-135-7077	81349	M83519/1-3	..SPLICE,CONDUCTOR	UHE,UHX	EA	2
246D	84	PAOZZ	5940-01-135-7076	81349	M83519/1-1	..SPLICE,CONDUCTOR	UHE,UHX	EA	3
246D	85	PAOZZ	5935-01-137-2305	81349	M85049/41-16A	..CLAMP,CABLE,ELECTRI	UHE,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7)	(8) QTY INC IN UNIT
246D	86	PAOZZ	5975-00-177-2283	88044	AN3420-16	..BUSHING,ELECTRICAL	UHE,UHX	EA	1
246D	87	PAOZZ	5975-00-240-2646	88044	AN3066-16	..LOCKNUT, ELECTRI	UHE,UHX	EA	1
246D	89	PAOZZ	5975-00-553-6995	96906	MS25171-1S	..CABLE NIPPLE,ELECTR	UHE,UHX	EA	2
246D	90	PBFZZ	7510-01-078-5679	97499	31-034-1-7	..TAPE,IDENTIFICATION	UHE,UHX	EA	1
246D	91	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX	UHE,UHX	EA	3
246D	92	PAOZZ	5310-00-638-9857	88044	AN960C6L	..WASHER,FLAT	UHE,UHX	EA	3
246D	93	PAOZZ	5305-00-889-3000	96906	MS35206-230	..SCREW,MACHINE	UHE,UHX	EA	3
246D	94	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT	UHE,UHX	EA	3
246D	95	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE	UHE,UHX	EA	4
246D	96	PAOZZ	5305-00-993-1851	96906	MS35207-267	..SCREW,MACHINE	UHE,UHX	EA	14
246D	97	PAOZZ	5305-00-995-3441	96906	MS35207-269	..SCREW,MACHINE	UHE,UHX	EA	2
246D	98	PAOZZ	5310-00-855-1102	96906	MS35649-2255	..NUT,PLAIN,HEXAGON	UHE,UHX	EA	3
246D	99	PAOZZ	5325-00-276-7797	96906	MS35489-29	..GROMMET,NONMETALLIC	UHE,UHX	EA	1
246D	100	PAOZZ	5940-00-143-4773	96906	MS25036-105	..TERMINAL,LUG	UHE,UHX	EA	1
246D	101	PAOZZ	5940-00-113-8179	96906	MS25036-107	..TERMINAL,LUG	UHE,UHX	EA	1
246D	102	PAOZZ	5940-00-113-9826	96906	MS25036-114	..TERMINAL,LUG	UHE,UHX	EA	1
246D	103	XDOZZ	5340-00-990-9301	81996	EAB700D7	..CLAMP,LOOP	UHE,UHX	EA	1
246D		XCFZZ		20309	ES-F-221394	.EXTERNAL POWER RECEPTACLE INSTL	UHE,UHX	EA	1
246D	105	MFOZZ		20309	ES-D-221396	..PLATE	UHE,UHX	EA	1
246D	106	MDOZZ		20309	ES-D-221397	..BOX ASSEMBLY	UHE,UHX	EA	1
246D	107	MFOZZ		20309	ES-D-221398	..COVER ASSEMBLY	UHE,UHX	EA	1
246D	108	PBOZZ	5340-01-055-4201	96906	MS35821-9C	...HINGE,BUTT	UHE,UHX	EA	1
246D	109	PAOZZ	5325-01-098-6303	72794	AW5T11	...STUD,TURNLOCK FASTE	UHE,UHX	EA	1
246D	110	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS	UHE,UHX	EA	1
246D	111	PAOZZ	5325-00-298-7026	72794	R5	..RECEPTACLE,TURNL	UHE,UHX	EA	1
246D	112	PAOZZ	5930-00-243-2381	88044	AN3167-1	..ADAPTER,SWITCH ACTU	UHE,UHX	EA	1
246D	113	PAOZZ	5930-00-835-0340	81349	M8805-1-028	..SWITCH,SENSITIVE	UHE,UHX	EA	1
246D	114	PBOZZ	5935-00-255-3375	96906	MS90362-1	..CONNECTOR,RECEPTACL	UHE,UHX	EA	1
246D	115	PAOZZ	5305-00-993-1851	96906	MS35207-267	..SCREW,MACHINE	UHE,UHX	EA	6
246D	116	PAOZZ	5310-00-857-4945	96906	MS21045L3	..NUT,SELF-LOCKING,HE	UHE,UHX	EA	6
246D	117	PAOZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,LOCK	UHE,UHX	EA	6
246D	118	MFOZZ		20309	ES-C-221407	.PLATE,CONVERTER	UHE,UHX	EA	1
246D	119	AOOOO		20309	ES-C-221408	.SHUNT ASSY	UHE,UHX	EA	1
246D	120	MFOZZ		20309	ES-C-221409	..BRACKET,SHUNT	UHE,UHX	EA	1
246D	121	PAOZZ	6625-00-166-1013	96906	MS91587-2	..SHUNT,INSTRUMENT	UHE,UHX	EA	1
246D	122	PAOZZ	5305-00-959-4158	96906	MS24693C273	..SCREW,MACHINE	UHE,UHX	EA	2
246D	123	PAOZZ	5310-00-877-5797	96906	MS20365-1032	..NUT,SELF-LOCKING,HE	UHE,UHX	EA	2
246D	124	PAOZZ	1615-01-140-2748	20309	ES-C-221438	.SEAL,ELECTRICAL INS	UHE,UHX	EA	1
246D	125	MFOZZ		20309	ES-C-221439	.RING	UHE,UHX	EA	2
246D	126	PAOZZ	5945-00-140-4094	97499	209-075-323-3	.RELAY,ELECTROMAGNET	UHE,UHX	EA	2
246D	127	PAOZZ	1615-01-092-7722	97499	205-060-887-101	.DUCT,AIR INLET,GENE	UHE,UHX	EA	1
246D	128	PAOOO	1615-01-080-2057	97499	205-040-205-1	.QUILL ASSEMBLY,TRAN	UHE,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	
2480	130	PAOOO	6115-01-286-7627	97486	204-276-004-1	ALTERNATOR, ENGINE
2480	132	MFOFF		20309	ES-C-221471	SPACER RING
2480	133	PAFZZ	1680-01-151-0210	97153	SL37909-050-14	. SPACER
2480	134	MOOZZ	1680-01-141-7645	20309	ES-C-221472	SCREW ASSEMBLY,
2480	135	MFZZZ		20309	ES-C-221473	DOUBLER, DUCT
2480	136	PAOZZ	5340-01-032-8890	97393	L2052.3-4-1	INSERT, SCREW THR
2480	137	PAOZZ	5340-01-092-8890	97393	L2052.3-4-1	INSERT, SCREW THR
2480	138	PAOZZ	5325-00-827-4645	20275	S18FP420-10	FASTENER, PANEL
2480	139	PAOZZ	5325-00-860-5733	20275	P18F25-X	FASTENER PLUG
2480	140	PAOZZ	5160-00-160-1230	97486	120-880-11-12	BUS, CONNECTOR
2480	141	PAOZZ	5306-00-984-4080	96906	MS35206-230	SCREW, MACHINE
2480	142	PAOZZ	5305-00-616-0124	96906	MS35206-30	SCREW, MACHINE
2480	143	PAOZZ	5305-00-984-0153	96906	MS35206-240	SCREW, MACHINE
2480	144	PAOZZ	5305-00-989-7434	96906	MS35207-260	SCREW, MACHINE
2480	145	PAOZZ	5306-00-151-1405	88044	AN4-6A	BOLT, MACHINE
2480	146	PAOZZ	5310-00-167-0822	88044	AN960-6L	WASHER, FLAT
2480	147	PAOZZ	5310-00-167-0823	88044	AN960-8L	WASHER, FLAT
2480	148	PAOZZ	5310-00-167-0824	88044	AN960-10L	WASHER, FLAT
2480	149	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT
2480	150	PAOZZ	5310-00-167-0838	88044	AN960-416L	WASHER, FLAT
2480	151	PAOZZ	5310-00-081-4087	96906	MS21044N08	NUT, SELF-LOCKING,
2480	152	PAOZZ	5310-00-877-5797	96906	MS21044N3	NUT, SELF-LOCKING,

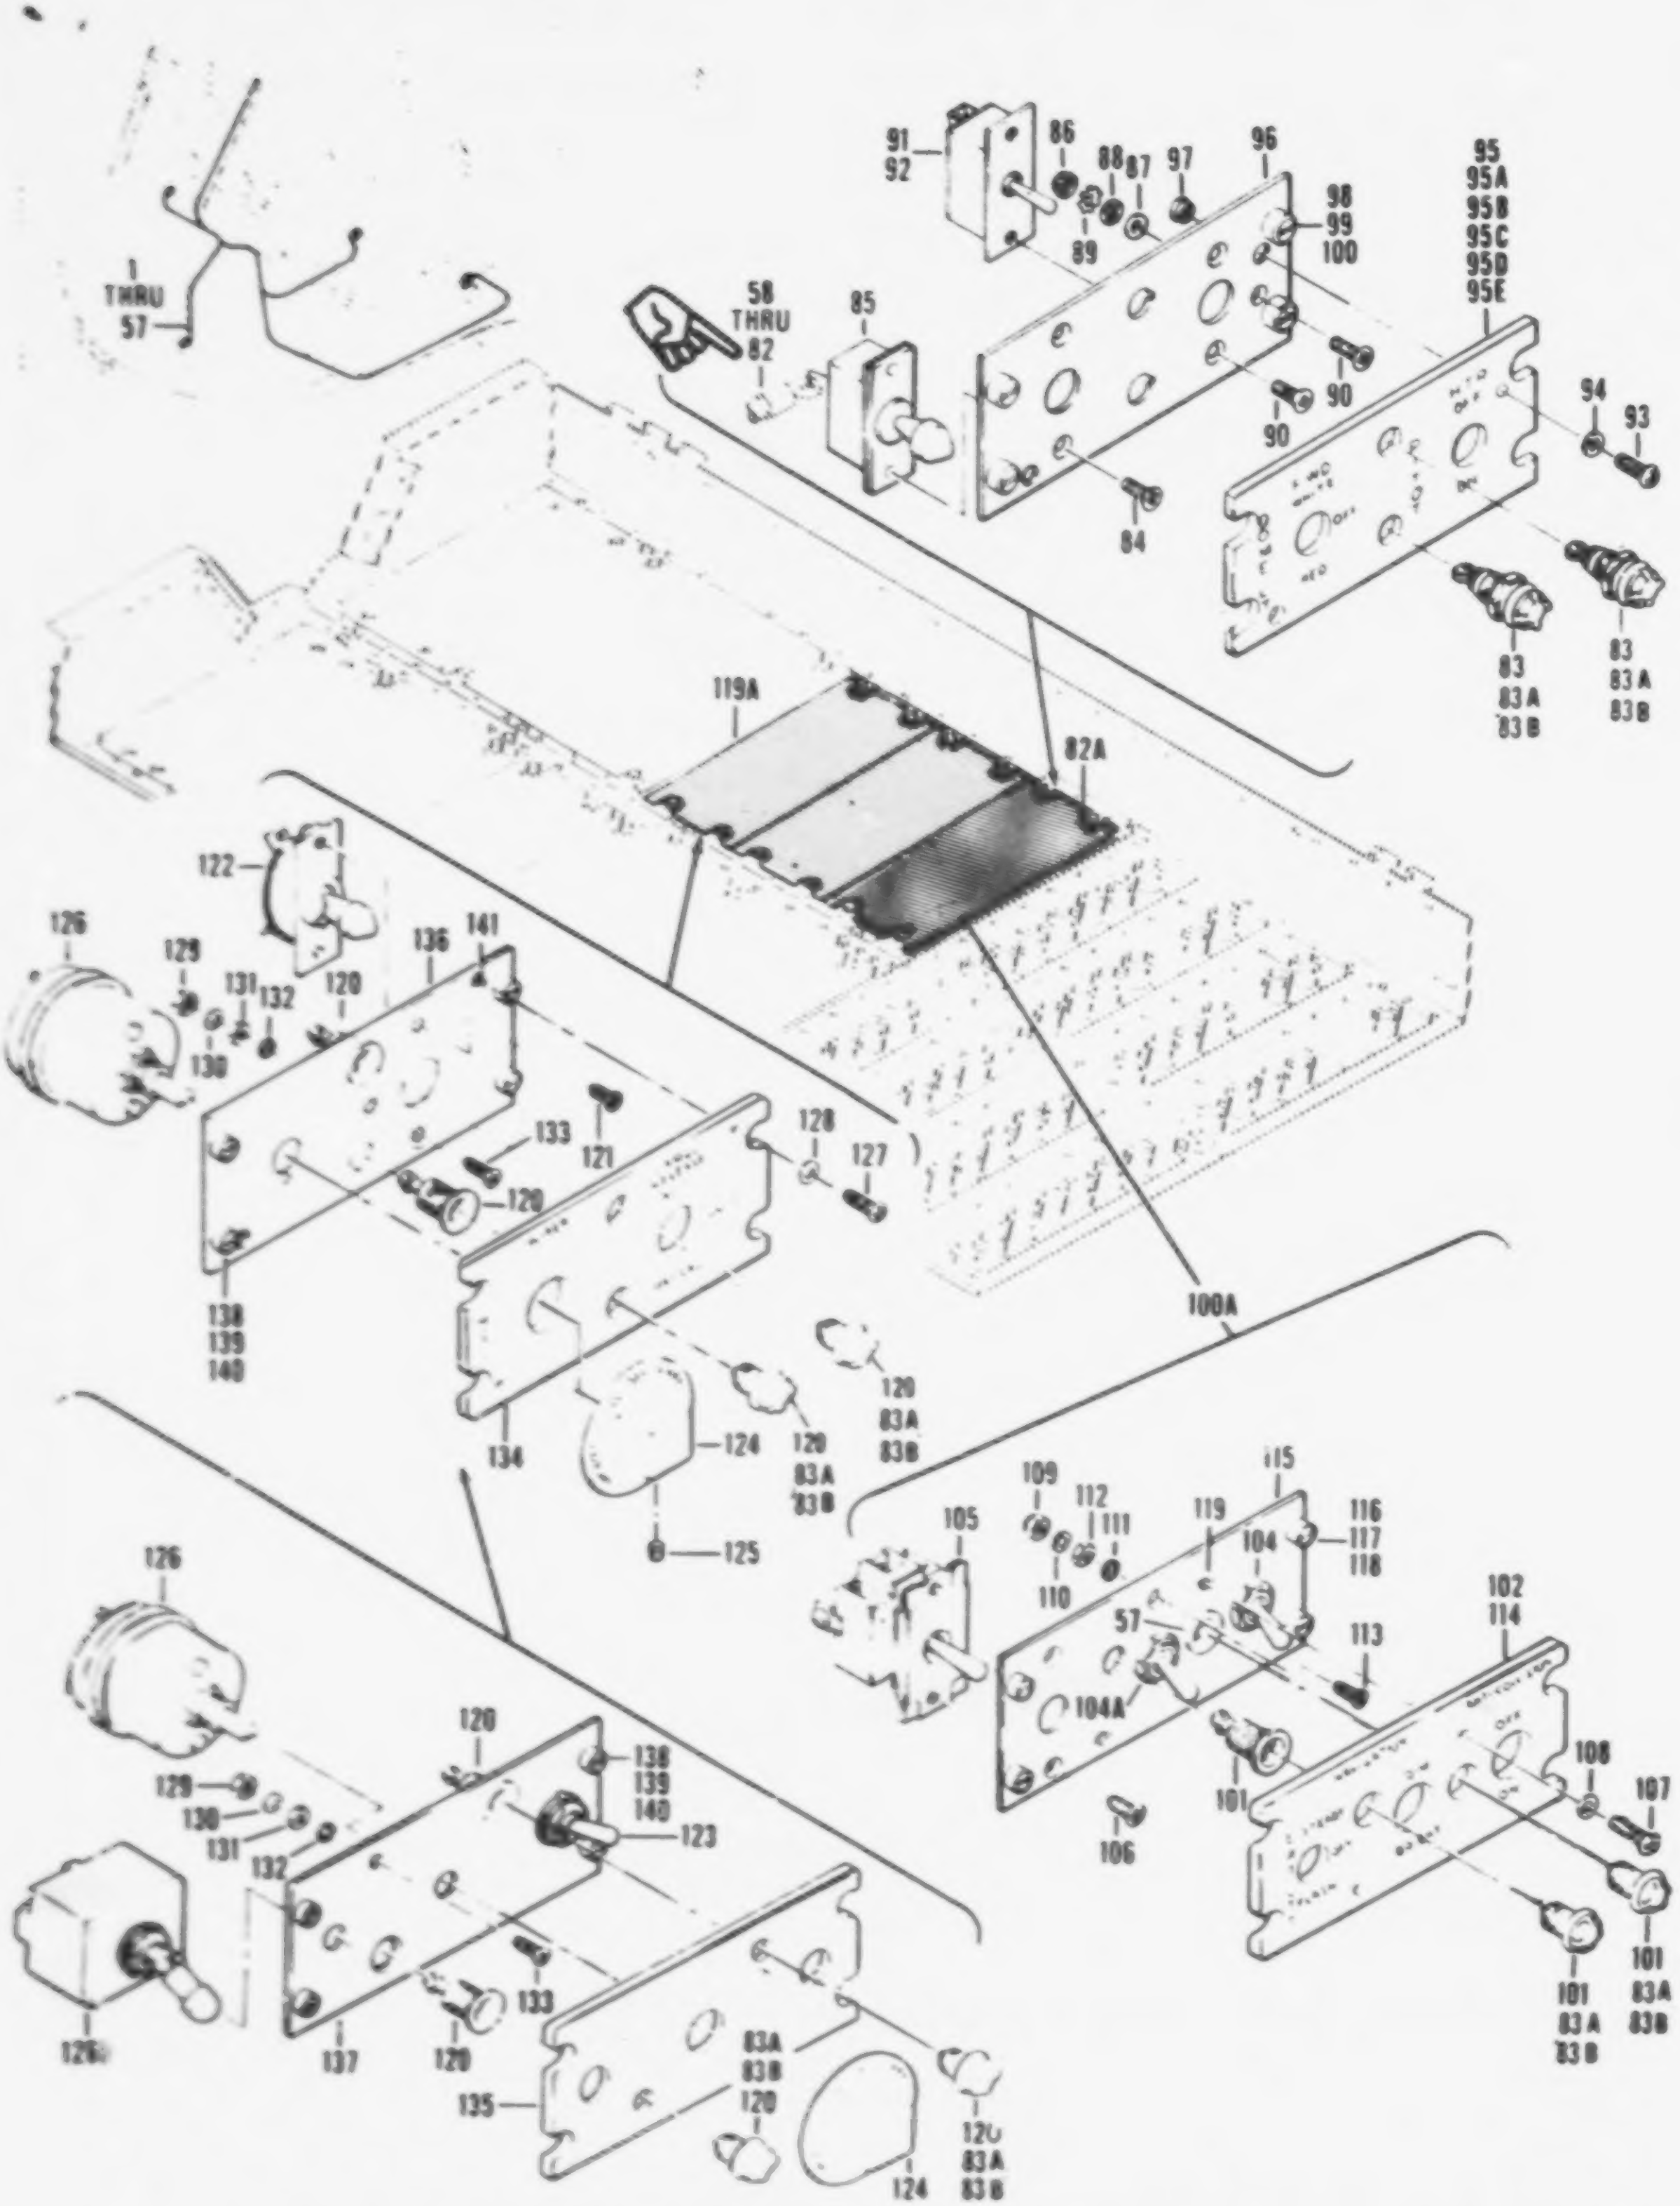
91
92
86
88
87
97
96
89
98
99
100
95
95A
95B
95C
95D
95E
1
THRU
57
58
THRU
82
85
90
90
94
93
84
83
83A
83B
83
83A
83B
119A
82A
122
126
129
131
132
120
136
141
130
133
121
120
128
127
138
139
140
100A
120
83A
83B
134
124
120
83A
83B
125
109
112
111
115
116
117
118
105
110
119
104
57
113
102
114
104A
101
108
107
106
126
120
138
139
140
129
130
131
132
123
133
126
137
120
83A
83B
120
135
124
120
83A
83B
101
83A
83B
101
83A
83B

Figure 247. Panel Assembly, Electrical Overhead Console, Left-Hand Forward Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
247		XCFZZ		97499	204-075-113-3	PANEL ASSEMBLY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 60-3546 THRU 60-3619 SEE FIG.245 FOR BALANCE OF BREAKDOWN ....UHB	EA	1
247		XCFZZ		97499	204-075-113-17	PANEL ASSEMBLY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 61-686 THRU 61-803 SEE FIG.245 FOR BALANCE OF BREAKDOWN ....UHB	EA	1
247		XCFZZ		97499	204-075-113-15	PANEL ASSEMBLY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 62-1872 THRU 62-12555 SEE FIG.245 FOR BALANCE OF BREAKDOWN..........UHB	EA	1
247		XCFZZ		97499	204-075-602-3	PANEL ASSEMBLY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 63-8500 THRU 63-12952 SEE FIG.246 FOR BALANCE OF BREAKDOWN..........UHB	EA	1
247		XCFZZ		97499	204-075-610-3	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 64-13902 THRU 64-14100 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHB	EA	1
247		XCFZZ		97499	204-075-610-9	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHC,UHM	EA	1
247		XCFZZ		97499	204-075-611-3	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 65-9416 THRU 65-12772 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHC,UHM	EA	1
247		XCFZZ		97499	204-075-611-9	PANEL ASSY,ELEC SEE FIG.246 FOR BALANCE OF BREAKDOWN 01 SEE FIG.24L FOR BALANCE OF BREAKDOWN..........UHC,UHM	EA	1
247		XCFZZ		97499	204-075-611-13	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 66-602 THRU 66-15022 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHC,UHM	EA	1
247		XCFZZ		97499	204-075-611-19	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 66-15023 THRU 66-15147 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHC,UHM	EA	1
247		XCFZZ		97499	204-075-611-25	PANEL ASSY,ELEC OVERHEAD CONSOLE USBL EFF 66-15148 & SUBSEQUENT SEE FIG.246 FOR BALANCE OF BREAKDOWN......UHC,UHM	EA	1
247		XCFZZ		97499	205-075-141-3	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 62-2106 THRU 62-12372 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-143-3	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 63-8739 THRU 63-8859 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-143-13	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 63-12956 THRU 63-13002 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-3	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 64-13492 THRU 64-13901 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-9	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 65-9565 THRU 65-9810 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-19	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 65-9811 THRU 65-12895 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-15	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 66-746 THRU 66-16033 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-25	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 66-16034 THRU 66-16448 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-35	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 66-16449 THRU 66-16867 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-39	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 66-16868 & SUBSEQUENT SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-111-61	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 67-17778 THRU 67-19537 SEE FIG.246 FOR BALANCE OF BREAKDOWN	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						..........UHE,UHH,UHV,UHX		
247		XCFZZ		97499	205-075-156-3	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 68-15214 THRU 69-15291 SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		XCFZZ		97499	205-075-156-27	PANEL ASSY,ELEC OVERHEAD CONSOLE-LH FORWARD SECTION USBL EFF 69-15292 & SUBSEQUENT SEE FIG.246 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
247		AOOOZ	1560-00-731-8994	97499	204-075-422-5	.CABLE ASSY, U/O PN 204-075-113-3,-17, -15, 204-075-602-3,& 204-075-610-3..........UHB	EA	1
247		AOOOZ	1560-00-869-8151	97499	204-175-414-3	.CABLE ASSY, U/O PN 204-075-610-3..........UHB	EA	1
247		AOOOZ	6150-00-924-0410	97499	204-075-422-11	.CABLE ASSY, U/O PN 204-075-610-9..........UHC,UHM	EA	1
247		AOOOZ	1560-00-871-8680	97499	204-175-414-5	.CABLE ASSY, U/O PN 204-075-610-9..........UHC,UHM	EA	1
247		AOOOZ	6150-00-924-0427	97499	204-175-426-7	.CABLE ASSY, U/O PN 204-075-611-3 & -13..........UHC,UHM	EA	1
247		AOOOZ	1560-00-987-5277	97499	205-075-400-7	.CABLE ASSY, U/O PN 205-075-141-3..........UHE,UHH,UHV,UHX	EA	1
247		AOOOZ	1560-00-299-1007	97499	205-075-421-3	.CABLE ASSY, U/O PN 205-075-143-3,&:-13......UHE,UHH,UHV,UHX	EA	1
247		AOOOZ	1560-00-869-8146	97499	205-075-421-5	.CABLE ASSY, U/O PN 205-075-111-3..........UHE,UHH,UHV,UHX	EA	1
247		AOOOZ	6150-00-924-0411	97499	205-075-432-7	.CABLE ASSY, U/O PN 205-075-111-9 & -19......UHE,UHH,UHV,UHX	EA	1
247		AOOOZ	6150-00-955-9459	97499	205-075-482-3	.CABLE ASSY, U/O PN 205-075-111-15,-25 & -35 ....UHE,UHH,UHV,UHX	EA	1
247		AOOOZ	6150-00-989-0014	97499	205-075-482-5	.CABLE ASSY, U/O PN 205-075-111-39, 205-075-156-3,& -27 ....UHE,UHH,UHV,UHX	EA	1
247	1	PBFZZ	5935-00-201-8072	88044	AN3115-1	..CONNECTOR,PLUG,ELEC U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11 U/O PN 205-075-400-7,205-075-421-3,-5, -7 & 205-075-482-3..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	2	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	3	PAOZZ	5935-00-341-1258	96906	MS3456L12S3S	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
247	4	PBOZZ	5935-00-805-3286	96906	MS3108R14S5S	..CONNECTOR,PLUG,E U/O PN 205-075-421-5, 205-075-432-7, 205-075-482-3 & -5..........UHE,UHH,UHV,UHX	EA	1
247	5	PAOZZ	5935-00-263-0213	96906	MS3406R12S3S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-421-3 ....UHE,UHH,UHV,UHX	EA	1
247	6	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC CONNECTOR U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11 U/O PN 205-075-400-7,205-075-421-3,& -5..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	7	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC U/O UH-1B PN 204-075-414-3 U/O UH-1C PN 204-175-414-5..........UHB,UHC,UHM	EA	2
247	8	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-5..........UHB,UHC,UHM	EA	6
247	9	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5..........UHB,UHC,UHM	EA	23
247	10	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O (UH-1C) PN 204-175-426-7 U/O PN 205-075-400-7..........UHC,UHE,UHH,UHM,UHV,UHX	EA	4
247	11	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 205-075-421-3 & -5 ....UHE,UHH,UHV,UHX	EA	2
247	12	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 205-075-432-7, 205-075-482-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
247	13	PAOZZ	5940-01-079-1375	81349	M7928/5-4	..SPLICE,CONDUCTOR..........UHB,UHC,UHM	EA	1
247	14	PAOZZ	5940-01-007-7877	81349	M7928/3-4	..SPLICE, CONDUCTO U/O (UH-1B) PN 204-175-414-3 U/O PN (UH-1C) PN 204-175-414-5..........UHB,UHC,UHM	EA	1
247	15	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11..........UHB,UHC,UHM	EA	17
247	16	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-414-3..........UHB	EA	64
247	17	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-414-5..........UHC,UHM	EA	64

(1) ILLUSTRATION (A) G. .O.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
247	18	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-426-7 .... UHC,UHM	EA	43
247	19	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-400-7, 205-075-421-3,& -5 .... UHE,UHH,UHV,UHX	EA	26
47	20	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-432-1 & 205-075-482-3 .... UHE,UHH,UHV,UHX	EA	18
247	21	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-482-5 .... UHE,UHH,UHV,UHX	EA	16
247	22	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5,204-175-426-7 .... UHB,UHC,UHM	EA	2
247	23	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O (UH-1C) PN 204-075-422-11 U/O PN 205-075-432-7,205-075-482-3 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	3
247	24	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-400-7, 205-075-421-3,& -5 .... UHE,UHH,UHV,UHX	EA	5
247	25	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O (UH-1C) PN 204-075-422-11,204-175-414-5 U/O PN 205-075-400-7 & 205-075-421-3,& -5 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	26	PAOZZ	5940-00-204-8990	96906	MS25036-111	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7 .... UHB,UHC,UHM	EA	4
247	27	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-426-7 .... UHB,UHC,UHM	EA	2
247	28	PAOZZ	5940-00-143-5284	96906	MS25036-115	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-426-7 .... UHB,UHC,UHM	EA	1
247	29	PAOZZ	5940-00-557-4345	96906	MS25036-118	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7 .... UHB,UHC,UHM	EA	1
247	30	PAOZZ	5940-00-114-1310	96906	MS25036-119	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7 .... UHB,UHC,UHM	EA	2
247	31	PAOZZ	5940-00-113-8190	96906	MS25036-122	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7 .... UHB,UHC,UHM	PG	2
47	32	PBOZZ	5940-00-688-6005	96906	MS25036-143	..TERMINAL,LUG U/O PN 204-175-414-5 .... UHC,UHM	EA	3
247	33	PBOZZ	5940-00-688-6005	96906	MS25036-143	..TERMINAL,LUG U/O PN 204-175-426-7 .... UHC,UHM	EA	1
247	34	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7 .... UHB,UHC,UHM	EA	1
247	35	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11 .... UHB,UHC,UHM	EA	11
247	36	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
247	37	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-426-7 .... UHC,UHM	EA	5
247	38	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG U/O UH-1B PN 204-075-422-5 U/O UH-1C PN 204-075-422-11 & 204-175-414-5 .... UHB,UHC,UHM	EA	1
247	39	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	40	PAOZZ	5940-00-143-4775	96906	MS25036-156	..TERMINAL,LUG U/O UH-1B PN 204-075-422-5 U/O UH-1C 204-075-422-11 .... UHB,UHC,UHM	EA	1
247	41	PAOZZ	5940-00-143-4775	96906	MS25036-156	..TERMINAL,LUG U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5 & 204-175-426-7 .... UHB,UHC,UHM	EA	3
247	42	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5 & 204-175-426-7 .... UHB,UHC,UHM	EA	3
247	43	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING U/O PN 204-175-426-7 .... UHC,UHM	EA	2
247	44	PAOZZ	5940-00-583-2603	09922	YAEV10T7	..TERMINAL,LUG U/O PN 205-075-432-7, 205-075-482-3 & -5 .... UHE,UHH,UHV,UHX	EA	2
247	45	XDOZZ		97499	85T4-7-2	..INSULATION TUBE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	4
247	46	PAOZZ	5365-00-598-5282	96906	MS3420-4	..BUSHING,RUBBER U/O PN 205-075-400-7 .... UHE,UHH,UHV,UHX	EA	1
247	47	PAOZZ	5365-00-598-5282	96906	MS3420-4	..BUSHING,RUBBER U/O PN 205-075-421-5 .... UHE,UHH,UHV,UHX	EA	1
247	48	PAOZZ	5365-00-820-4535	88044	AN3420-6	..BUSHING,RUBBER U/O PN 205-075-400-7, 205-075-421-5 .... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
247	49	PAOZZ	5935-00-820-0555	96906	MS3106R14S5S	..CONNECTOR,PLUG,ELEC..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	50	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE,ELECTRI U/O UH-1B PN 205-075-422-5 U/O UH-1C PN 204-075-422-11 U/O UH-1C PN 204-175-414-5,204-175-426-7..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	51	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	..WIRE,ELECTRICAL U/O UH-1B PN 204-175-414-3 ....UHB,UHC,UHM	FT	V
247	52	PBOZZ	6145-00-284-0657	96906	MS25190B8	..WIRE,ELECTRICAL U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7..............UHB,UHC,UHM	FT	V
247	53	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL U/O UH-1B PN 204-175-414-3 U/O UH-1C PN 204-175-414-5, 204-175-426-7 U/O PN 205-075-432-7,205-075-482-3 & -5..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	54	PBOZZ	6145-00-578-6604	96906	MS25190B14	..WIRE,ELECTRICAL U/O (UH-1C) PN 204-075-422-11,204-175-414-5 U/O PN 205-075-400-7,205-075-421-3 & -5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	55	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O UH-1C PN 204-075-422-11 & 204-175-414-5..............UHB,UHC,UHM	FT	V
247	56	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O PN 205-075-400-7,205-075-421-3,-5 & 205-075-432-7..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	57	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	58	AOOOZ	1560-00-731-8993	97499	204-075-422-3	.CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 204-075-113-3,-15 & -17..............UHB	EA	1
247	59	AOOOZ	1560-00-299-0987	97499	204-075-422-9	.CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 204-075-610-3..............UHB	EA	1
247	60	AOOOZ	1560-00-869-8152	97499	204-175-414-1	.WIRING ASSY,OVERHEA CONSOLE-LH INTERNAL U/O UH-1B PN 204-075-610-3 U/O UH-1C PN 204-075-610-9..............UHB,UHC,UHM	EA	1
247	61	AOOOZ	6150-00-924-0424	97499	204-175-427-1	.CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 204-075-611-3..............UHC,UHM	EA	1
247	62	AOOOZ	6150-00-927-3632	97499	204-175-427-9	.CABLE ASSY,OVERHEAD CONSOLE INTERNAL U/O PN 204-075-611-9,-13, -19,&-25..............UHC,UHM	EA	1
247	63	AOOOZ	1560-00-987-5278	97499	205-075-400-9	.WIRING ASSY,OVERHEA CONSOLE INTERNAL U/O PN 205-075-141-3, 205-075-143-3..............UHE,UHH,UHV,UHX	EA	1
247	64	AOOOZ	1560-00-908-1633	97499	205-075-400-13	.WIRING ASSY,OVERHEA CONSOLE INTERNAL U/O PN 205-075-143-13 ....UHE,UHH,UHV,UHX	EA	1
247	65	AOOOZ	1560-00-869-8148	97499	205-075-430-1	.CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-075-111-3..............UHE,UHH,UHV,UHX	EA	1
247	66	AOOOZ	6150-00-924-0425	97499	205-075-432-5	.CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-075-111-9 & -19..............UHE,UHH,UHV,UHX	EA	1
247	67	AOOOZ	1560-00-931-1075	97499	205-075-432-15	.CABLE ASSY,OVERHEAD CONSOLE-LH INTERNAL U/O PN 205-070-111-15,-25, -35,-39,-55,& -61..............UHE,UHH,UHV,UHX	EA	1
247	68	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	48
247	69	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-427-1 & -9..............UHC,UHM	EA	3
247	70	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
247	71	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	11
247	72	PBOZZ	5940-00-688-6005	96906	MS25036-143	..TERMINAL,LUG U/O PN 205-075-400-9,-13 & 205-075-430-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	73	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG U/O PN 204-175-427-1 & -9..............UHC,UHM	EA	2
247	74	XDOZZ	5940-00-828-2809	96906	MS25189-7	..TERMINAL,LUG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
247	75	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	..WIRE,ELECTRICAL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	76	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	77	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	V
247	78	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O PN 204-175-427-1 & -9..............UHC,UHM	FT	V
247	79	PAOZZ	5935-00-201-8072	86044	AN3115-1	..CONNECTOR,PLUG,ELEC U/O PN 204-175-427-1..............UHC,UHM	EA	1
247	80	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-427-1 & -9..............UHC,UHM	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
247	81	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-175-427-1 .... UHM	FT	2
247	82	MOOZZ	DELETED	97499	85T4-10-2	..INSULATION SLEEVING U/O PN 204-175-427-1 & -9 ..... UHM	EA	6
247	82A	PAOOO	1680-00-854-2249	97499	204-075-702-1	.PANEL ASSY,DOME LIGHT U/O PN 205-075-141-3,205-075-143-3,-13,205-075-111-3,-9,-15 & -19 SEE FIG 245 & 246 FOR NHA ..... UHE,UHH,UHM,UHV,UHX	EA	1
247	82A	XBOOO	1680-00-148-9116	97499	204-075-589-1	.CONTROL PANEL ASSY, DOME LIGHT U/O PN 205-075-111-25, -35,& -39 SEE FIG 246 FOR NHA .... UHE,UHH,UHM,UHV,UHX	EA	1
247	83	PAOZZ	6210-00-519-2853	96906	MS25010B11A	..LIGHT,PANEL .... UHE,UHH,UHM,UHV,UHX	EA	2
247	83A	PAOZZ	1680-01-230-0531	81996	EGD 0929-1	FILTER LIGHT NVG UHE UHH UHE UHX	EA	8
247	83B	PAOZZ	6240-00-155-7836	96906	MS25237-327	LAMP INCANDESCENT UHE UHH UHM UHV UHX	EA	8
247	84	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	2
247	85	PAOZZ	5930-00-501-4966	96906	MS25028-2	..SWITCH,TOGGLE .... UHE,UHH,UHM,UHV,UHX	EA	1
247	86	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING,HE .... UHE,UHH,UHM,UHV,UHX	EA	1
247	87	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT .... UHE,UHH,UHM,UHV,UHX	EA	1
247	88	PAOZZ	5310-00-934-9763	96906	MS35649-265	..NUT,PLAIN,HEXAGON .... UHE,UHH,UHM,UHV,UHX	EA	1
247	89	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK .... UHE,UHH,UHM,UHV,UHX	EA	1
247	90	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	2
247	91	PBOOO	5930-00-687-1097	96906	MS25102-22	..SWITCH,TOGGLE .... UHE,UHH,UHM,UHV,UHX	EA	1
247	92	PAOZZ	5930-00-892-8962	96906	MS24319-2	...BOOT,DUST AND MOIST .... UHE,UHH,UHM,UHV,UHX	EA	1
247	93	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	2
247	94	PAOZZ	5310-00-194-0634	88044	AN961-6	..WASHER,FLAT .... UHE,UHH,UHM,UHV,UHX	EA	2
247	95	PAOZZ	1560-00-075-9367	97499	204-075-290-1	..PANEL,DOME LIGHT .... UHE,UHH,UHM,UHV,UHX	EA	1
247	95	XBOZZ		97499	204-075-587-1	..EDGELIT PANEL U/O PN 204-075-589-1 .... UHE,UHH,UHM,UHV,UHX	EA	1
247	95A	PAOZZ	5930-00-042-7036	96906	MS24660-23G	..SWITCH,TOGGLE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED .... UHH,UHV	EA	1
247	95B	MFOZZ		12757	82SDSCC-D-0151	..SWITCH PLATE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED .... UHH,UHV	EA	1
247	95C	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING,HE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED .... UHH,UHV	EA	2
247	95D	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE USE AFTER NIGHT VISION GOGGLES ARE INSTALLED .... UHH,UHV	EA	2
247	95E	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER,FLAT USE AFTER NIGHT VISION GOGGLES ARE INSTALLED .... UHH,UHV	EA	26
247	96	XAOOZ		97499	204-075-244-1	..PLATE ASSY, ... UHE,UHH,UHM,UHV,UHX	EA	1
247	97	PAOZZ	5310-00-489-6009	46384	CL632-2	...NUT,PLAIN,CLINCH .... UHE,UHH,UHM,UHV,UHX	EA	2
247	98	XAOZZ		72794	PS3 1-2	...SPRING,HELICAL,COMP .... UHE,UHH,UHM,UHV,UHX	EA	4
247	99	XAOZZ		72794	PF3 1-2 38	...STUD,TURNLOCK FASTENER .... UHE,UHH,UHM,UHV,UHX	EA	4
247	100	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOC FASTENER ..... UHE,UHH,UHM,UHV,UHX	EA	4
247	100A	XBOOZ	1680-00-133-6834	97499	204-075-220-1	.PANEL ASSY,EXTERIOR LIGHT U/O PN 205-075-141-3 SEE FIG.245 FOR NHA .... UHE,UHH,UHM,UHV,UHX	EA	1
247	100A	PBOOO	1560-00-867-1240	97499	204-075-811-1	.CONTROL PANEL,LIGHT U/O PN 205-075-143-3,-13, 205-075-111-3,-9,-15,-19,-25,-35,-39 & -61 SEE FIG.246 FOR NHA .... UHE,UHH,UHM,UHV,UHX	EA	1
247	101	AOOOZ	6210-00-519-2853	96906	MS25010B11A	..LIGHT,PANEL .... UHE,UHH,UHM,UHV,UHX	EA	2
247	102	PAOZZ	1560-00-239-3639	97499	204-075-797-1	..PANEL,EDGE LIT U/O PN 204-075-811-1 .... UHE,UHH,UHM,UHV,UHX	EA	1
247	104	PBOZZ	5930-00-655-1515	96906	MS35058-23	..SWITCH,TOGGLE .... UHE,UHH,UHM,UHV,UHX	EA	1
247	104A	PBOZZ	5930-00-665-4241	96906	MS24524-23	..SWITCH,TOGGLE .... UHH,UHX,UHV,UHB,UHE	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
247	105	PAOZZ	5930-00-615-7885	96906	MS25105-21	..SWITCH,TOGGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	106	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	107	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	108	PAOZZ	5310-00-194-0634	88044	AN961-6	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	109	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING,HE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	110	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	111	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	112	PAOZZ	5310-00-934-9763	96906	MS35649-265	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	113	PAOZZ	5305-00-837-3343	96906	MS24693S28	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	114	PAOZZ	6110-00-867-9023	97499	204-075-275-1	..PANEL,EDGE LIT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	115	XAOOZ		97499	204-075-796-1	..PLATE ASSY,MOUNTING U/O PN 204-075-811-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	116	XAOZZ		72794	PC3 1-2	...RETAINER,TURNLOC FASTENER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
247	117	XAOZZ		72794	PS3 1-2	...SPRING,HELICAL,COMP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
247	118	XAOZZ		72794	PF3 1-2 38	...STUD,TURNLOCK FASTENER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
247	119	PAOZZ	5310-00-489-5009	46384	CL632-2	...NUT,PLAIN,CLINCH..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	119A	PBOOO	6110-00-868-4851	97499	204-075-209-9	.PANEL ASSY, MISCELLANEOUS CONTROL U/O (UH-1B) PN 204-075-113-3,-15,-17,204-075-602-3 U/O PN 205-075-141-3, 205-075-143-3,& -13 SEE FIG.245 & 246 FOR NHA....UHB,UHE,UHH,UHV,UHX	EA	1
247	119A	XDOOZ		97499	204-075-819-1	.PANEL ASSEMBLY,CONT MISCELLANEOUS CONTROL U/O (UH-1B) PN 204-075-610-3 U/O PN 205-075-111-3,-9,-15,-19,-25,-39,& -61 SEE FIG.246 FOR NHA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	120	AOOOZ	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	121	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	122	PAOZZ	5930-00-501-4963	96906	MS25028-3	..SWITCH,TOGGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	123	PAOZZ	5930-00-781-7101	96906	MS24658-22G	..SWITCH,TOGGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	124	PAOOO	1560-00-773-8069	97499	204-075-254-11	..KNOB ASSY, WINDSHIELD WIPER SWITCH INDICATOR ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	125	PBOZZ	5305-00-719-5339	96906	MS51963-22	...SETSCREW..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	126	PAOZZ	5930-00-050-8622	97499	204-070-907-9	..SWITCH,ROTARY..........UHB,UHE,UHH,UHV,UHX	EA	1
247	126A	PAOZZ	5930-00-044-3511	96906	MS25201-4	..SWITCH,TOGGLE..........UHB,UHC,UHH,UHM,UHV,UHE,UHX	EA	1
247	127	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	128	PAOZZ	5310-00-194-0634	88044	AN961-6	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	129	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING,HE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
247	130	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	131	PAOZZ	5310-00-934-9763	96906	MS35649-265	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	132	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	133	PAOZZ	5305-00-958-5451	96906	MS35190-239	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	134	PBOOO	6110-00-769-5368	97499	204-075-235-1	..PANEL,EDGELIT U/O PN 204-075-209-9....UHB,UHE,UHH,UHV,UHX	EA	1
247	135	XBOZZ	6110-00-869-6336	97499	204-075-833-1	..PANEL,EDGE LIT U/O PN 204-075-819-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	136	XAOOO		97499	204-075-256-1	..PLATE ASSEMBLY U/O PN 204-075-209-9....UHB,UHE,UHH,UHV,UHX	EA	1
247	137	XAOOZ		97499	204-075-834-1	..PLATE,MOUNTING ASSY U/O PN 204-075-819-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
247	138	XAOZZ		72794	PC3 1-2	...RETAINER,TURNLOCK FASTENER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
247	139	XAOZZ		72794	PF3 1-2 38	...STUD,TURNLOCK FASTENER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
247	140	XAOZZ		72794	PS3 1-2	...SPRING,HELICAL,COMP............	UHE,UHH,UHM,UHV,UHX	EA	4
247	141	PAOZZ	5310-00-489-5009	46384	CL632-2	...NUT,PLAIN,CLINCH...............	UHE,UHH,UHM,UHV,UHX	EA	2

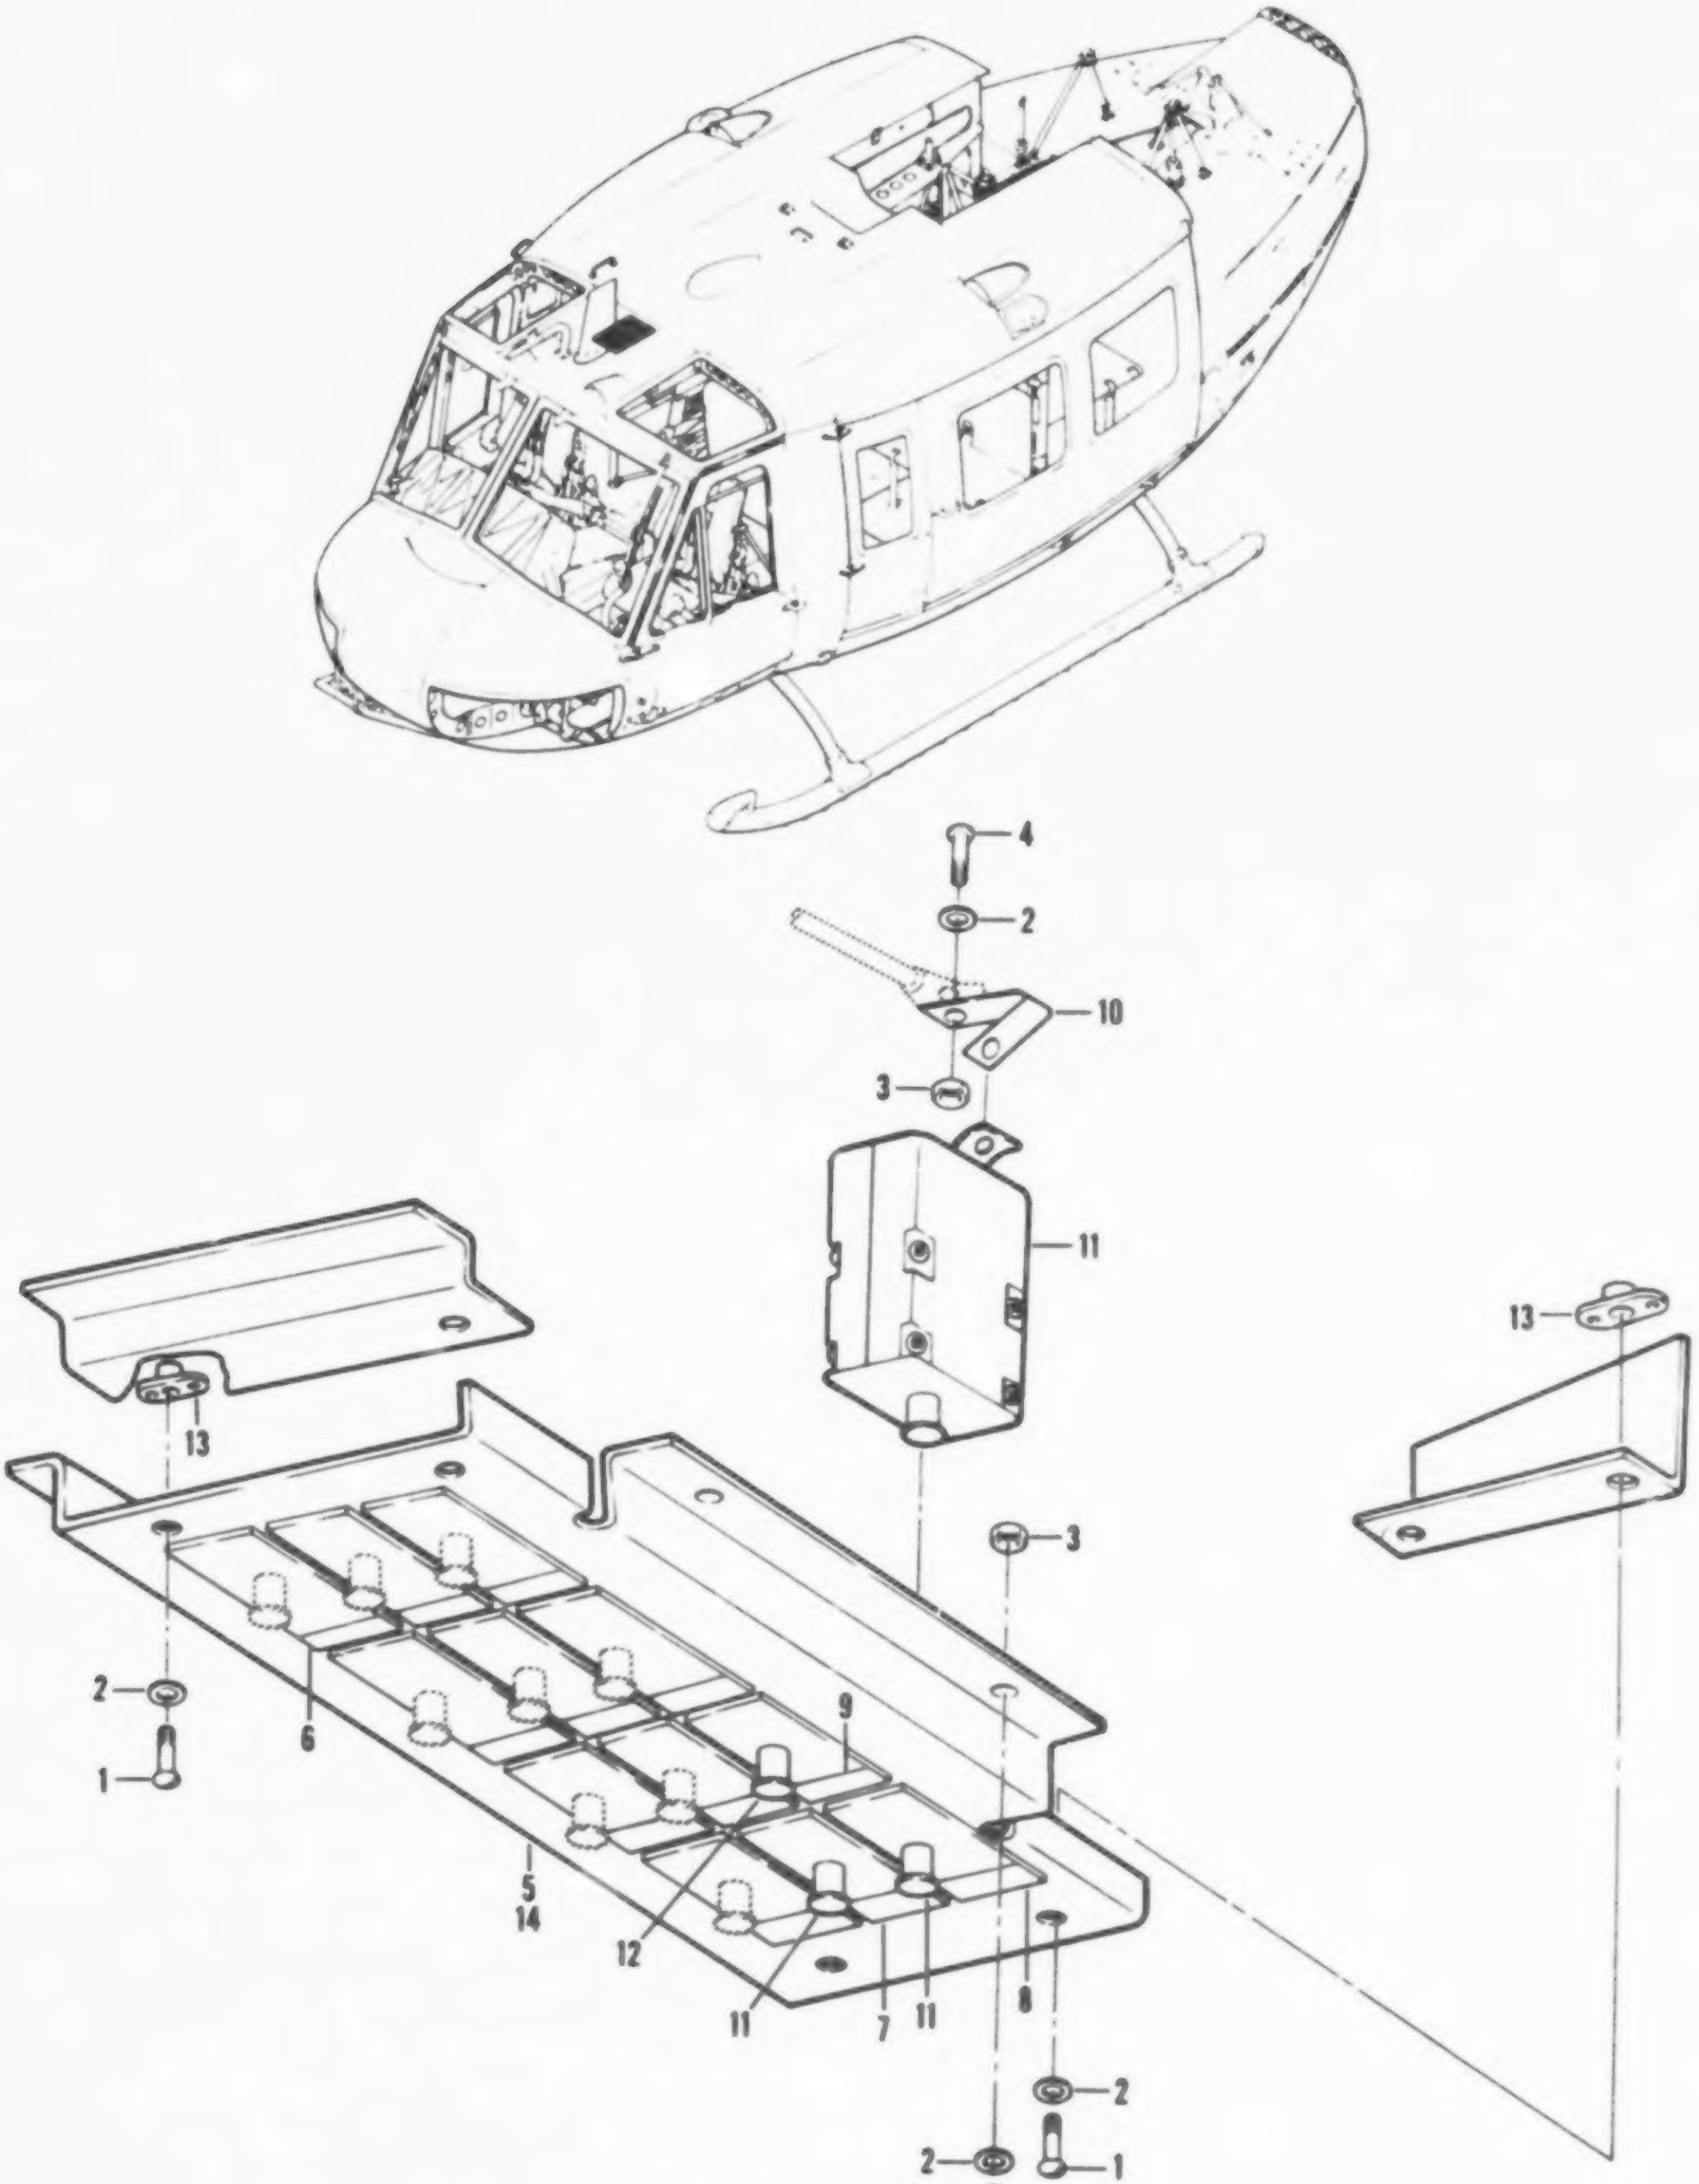
4
2
10
3
11
13
13
3
9
2
1
6
5
14
12
11
7
11
8
2
2
1
1

Figure 248. Panel Installation, Circuit Breakers, External Stores

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
248		XCFZZ		97499	204-075-177-1	PANEL INSTL CIRCUIT BREAKER,EXTERNAL STORES USBL EFF 60-3546 THRU 62-1996SEE FIG.225 FOR NHA UHB	EA	1
248		XCFZZ		97499	204-075-177-15	PANEL INSTL CIRCUIT BREAKER,EXTERNAL STORES USBL EFF 62-2106 THRU 62-12372 SEE FIG.226 FOR NHA UHE,UHH,UHV,UHX	EA	1
248	1	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE UHB,UHE,UHH,UHV,UHX	EA	6
248	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHB,UHE,UHH,UHV,UHX	EA	7
248	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHB,UHE,UHH,UHV,UHX	EA	3
248	4	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHB	EA	1
248	5	XBOOO		97499	204-075-177-3	.PANEL ASSEMBLY UHB	EA	1
248	5	XBOOO		97499	204-075-177-17	.PANEL ASSEMBLY UHE,UHH,UHV,UHX	EA	1
248	6	PAOZZ	9905-00-944-1740	97499	204-075-289-1	..PLATE,MARKING,BLANK UHB,UHE,UHH,UHV,UHX	EA	10
248	7	XBOZZ		97499	204-075-289-127	..PLATE,IDENTIFICATIO EXTERNAL FUEL SYSTEM UHB	EA	1
248	8	XBOZZ	9905-00-939-8201	97499	204-075-289-129	..PLATE,IDENTIFICATIO EXTERNAL STORES JETTISON UHB,UHE,UHH,UHV,UHX	EA	1
248	9	XBOZZ	9905-00-912-7550	97499	204-075-289-263	..PLATE,IDENTIFICATIO WARNING SYSTEM UHE,UHH,UHV,UHX	EA	1
248	10	MOOZZ	6150-00-846-1669	97499	204-075-264-9	..BUS,CONDUCTOR UHB	EA	1
248	11	PBOZZ	5925-00-681-4952	96906	MS25244-10	..CIRCUIT BREAKER 10 AMP RATING UHB	EA	2
248	11	PBOZZ	5925-00-681-4952	96906	MS25244-10	..CIRCUIT BREAKER 10 AMP RATING UHE,UHH,UHV,UHX	EA	1
248	12	PAOZZ	5925-00-045-9095	76374	MP1501C	..CIRCUIT BREAKER 1 AMP RATING UHE,UHH,UHV,UHX	EA	1
248	13	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL UHB,UHE,UHH,UHV,UHX	EA	4
248	14	MFOZZ		97499	204-075-177-13	..PANEL U/O PN 204-075-177-3 UHB	EA	1

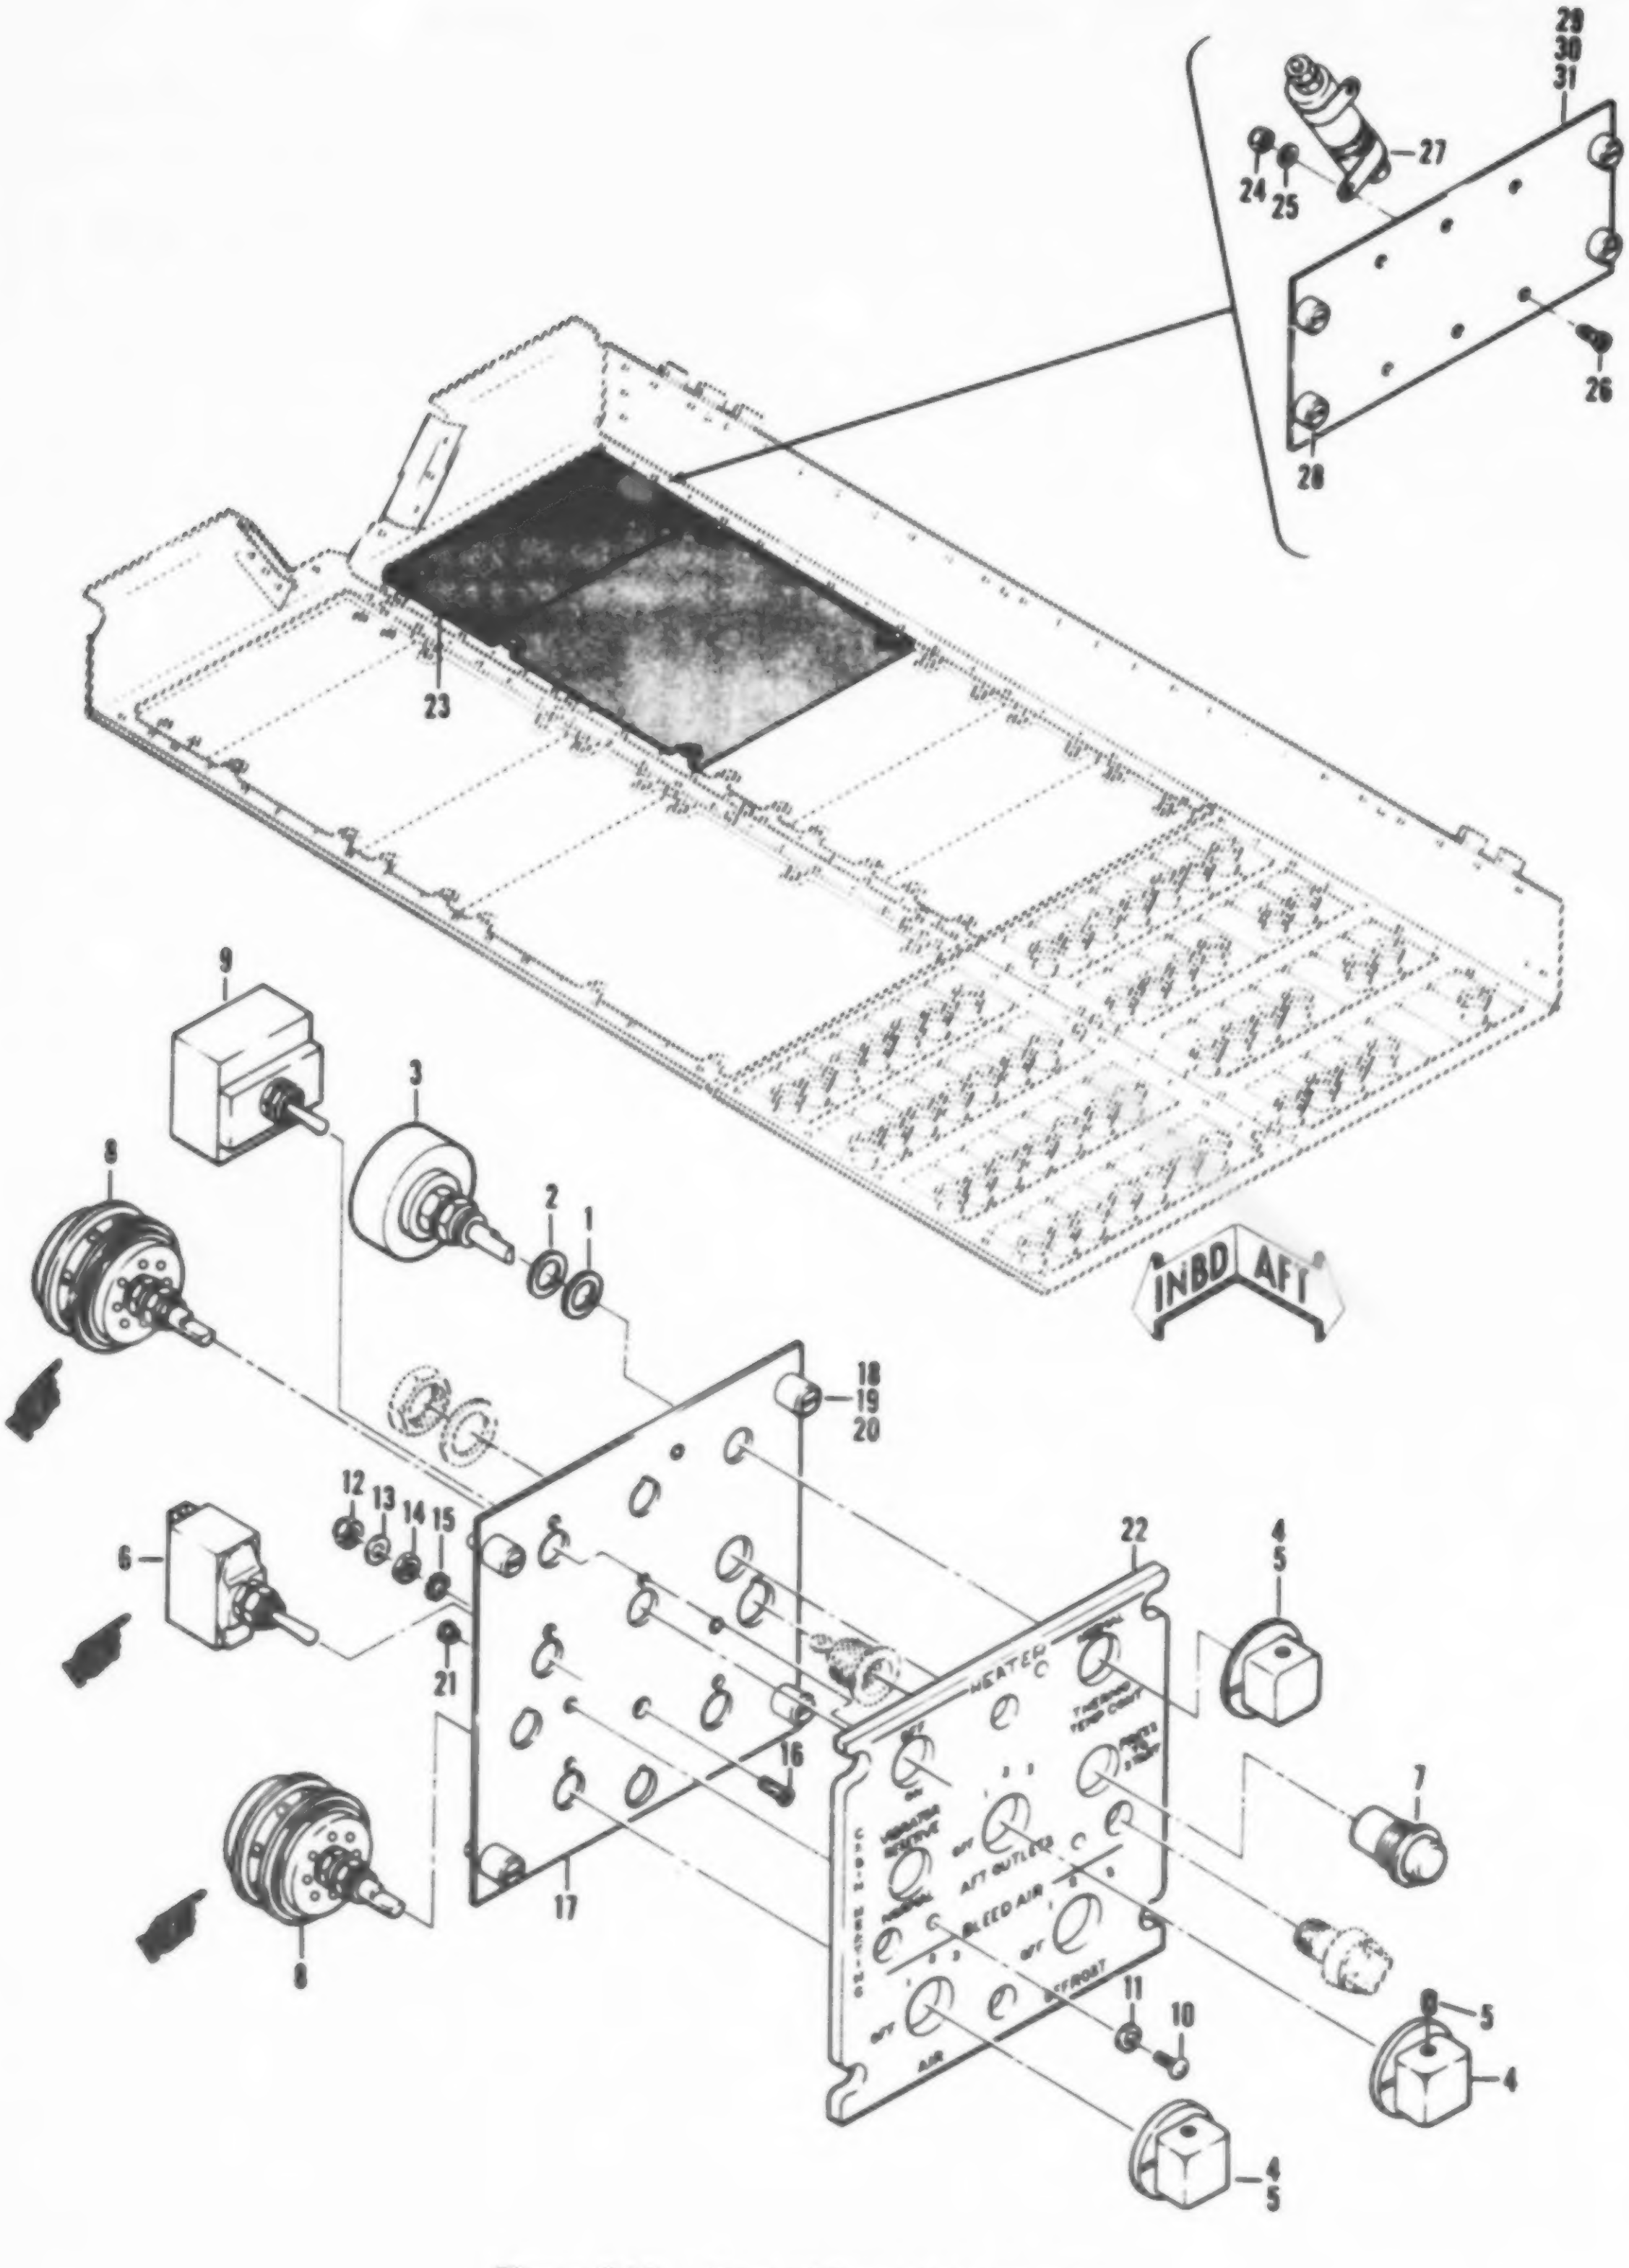
29
30
31
27
24
25
26
28
23
INBD
AFT
9
3
2
1
8
18
19
20
12
13
14
15
6
21
22
4
5
HEATER
THERMO TEMP CONT
16
7
17
AFT OUTLETS
BLEED AIR
DEFROST
AIR
OFF
11
10
8
4
5

Figure 249. Control Assembly, Heating

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
249		PB000	1560-00-867-1186	97499	205-075-201-3	CONTROL ASSEMBLY, CABIN HEAT USBL EFF (UH-1B) 62-1872 & SUBSEQUENT USBL EFF (UH-1C) 64-14101 THRU 64-14191 SEE FIG 246 FOR NHA....UHB,UHC,UHM	EA	1
249	1	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT....UHB,UHC,UHM	EA	1
249	2	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT....UHB,UHC,UHM	EA	1
249	3	PAOZZ	5905-00-577-3973	81349	RA20HASD251A	.RESISTOR,VARIABLE....UHB	EA	1
249	4	PAOOZ	1560-00-772-1877	97499	204-075-254-15	.KNOB ASSY,....UHB,UHC,UHM	EA	4
249	5	PAOZZ	5305-00-719-5339	96906	MS51963-22	..SETSCREW....UHB,UHC,UHM	EA	1
249	5	PAOZZ	5305-00-854-8455	80205	NAS1081-0604H	..SETSCREW....UHB,UHC,UHM	EA	1
249	6	PBOZZ	5930-00-655-1515	96906	MS35058-23	.SWITCH,TOGGLE....UHB,UHC,UHM	EA	1
249	7	PAOZZ	5930-00-504-6223	96906	MS25089-4C	.SWITCH,PUSH....UHB,UHC,UHM	EA	1
249	8	PBOZZ	5930-00-538-5508	96906	MS25002-1	.SWITCH,ROTARY....UHB,UHC,UHM	EA	3
249	9	PAOZZ	5930-00-655-1581	96906	MS25068-23	.SWITCH,TOGGLE....UHB,UHC,UHM	EA	1
249	10	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE....UHB,UHC,UHM	EA	3
249	11	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT....UHB,UHC,UHM	EA	3
249	12	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE....UHB,UHC,UHM	EA	1
249	13	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT....UHB,UHC,UHM	EA	1
249	14	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON....UHB,UHC,UHM	EA	1
249	15	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK....UHB,UHC,UHM	EA	1
249	16	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
249	17	XA000		97499	204-075-737-1	.PANEL ASSEMBLY....UHB,UHC,UHM	EA	1
249	18	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK....UHB,UHC,UHM	EA	4
249	19	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK....UHB,UHC,UHM	EA	4
249	20	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP....UHB,UHC,UHM	EA	4
249	21	PAOZZ	5310-00-489-5009	46384	CL632-2	..NUT,PLAIN,CLINCH....UHB,UHC,UHM	EA	2
249	22	PAOZZ	1680-00-075-9370	97499	204-075-736-1	.PANEL,CABIN HEATING....UHB,UHC,UHM	EA	1
249	23	PA000	5905-00-052-2255	97499	204-075-704-1	.RESISTOR ASSEMBLY WINDSHIELD WIPER & NAVIGATION LIGHT USBL EFF UH-1B 60-3546 THRU 63-12952 SEE FIG 245 FOR NHA....UHB,UHC,UHM	EA	1
249	24	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING, HEXAGON....UHB,UHC,UHM	EA	6
249	25	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT....UHB,UHC,UHM	EA	6
249	26	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE....UHB,UHC,UHM	EA	6
249	27	PAOZZ	5905-00-513-2360	81349	RER75F1R00R	.RESISTOR,FIXED,WIRE....UHB,UHC,UHM	EA	3
249	28	XAOZZ		97499	204-075-293-1	.PANEL ASSEMBLY....UHB,UHC,UHM	EA	1
249	29	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER....UHB,UHC,UHM	EA	4
249	30	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER....UHB,UHC,UHM	EA	4
249	31	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP....UHB,UHC,UHM	EA	4

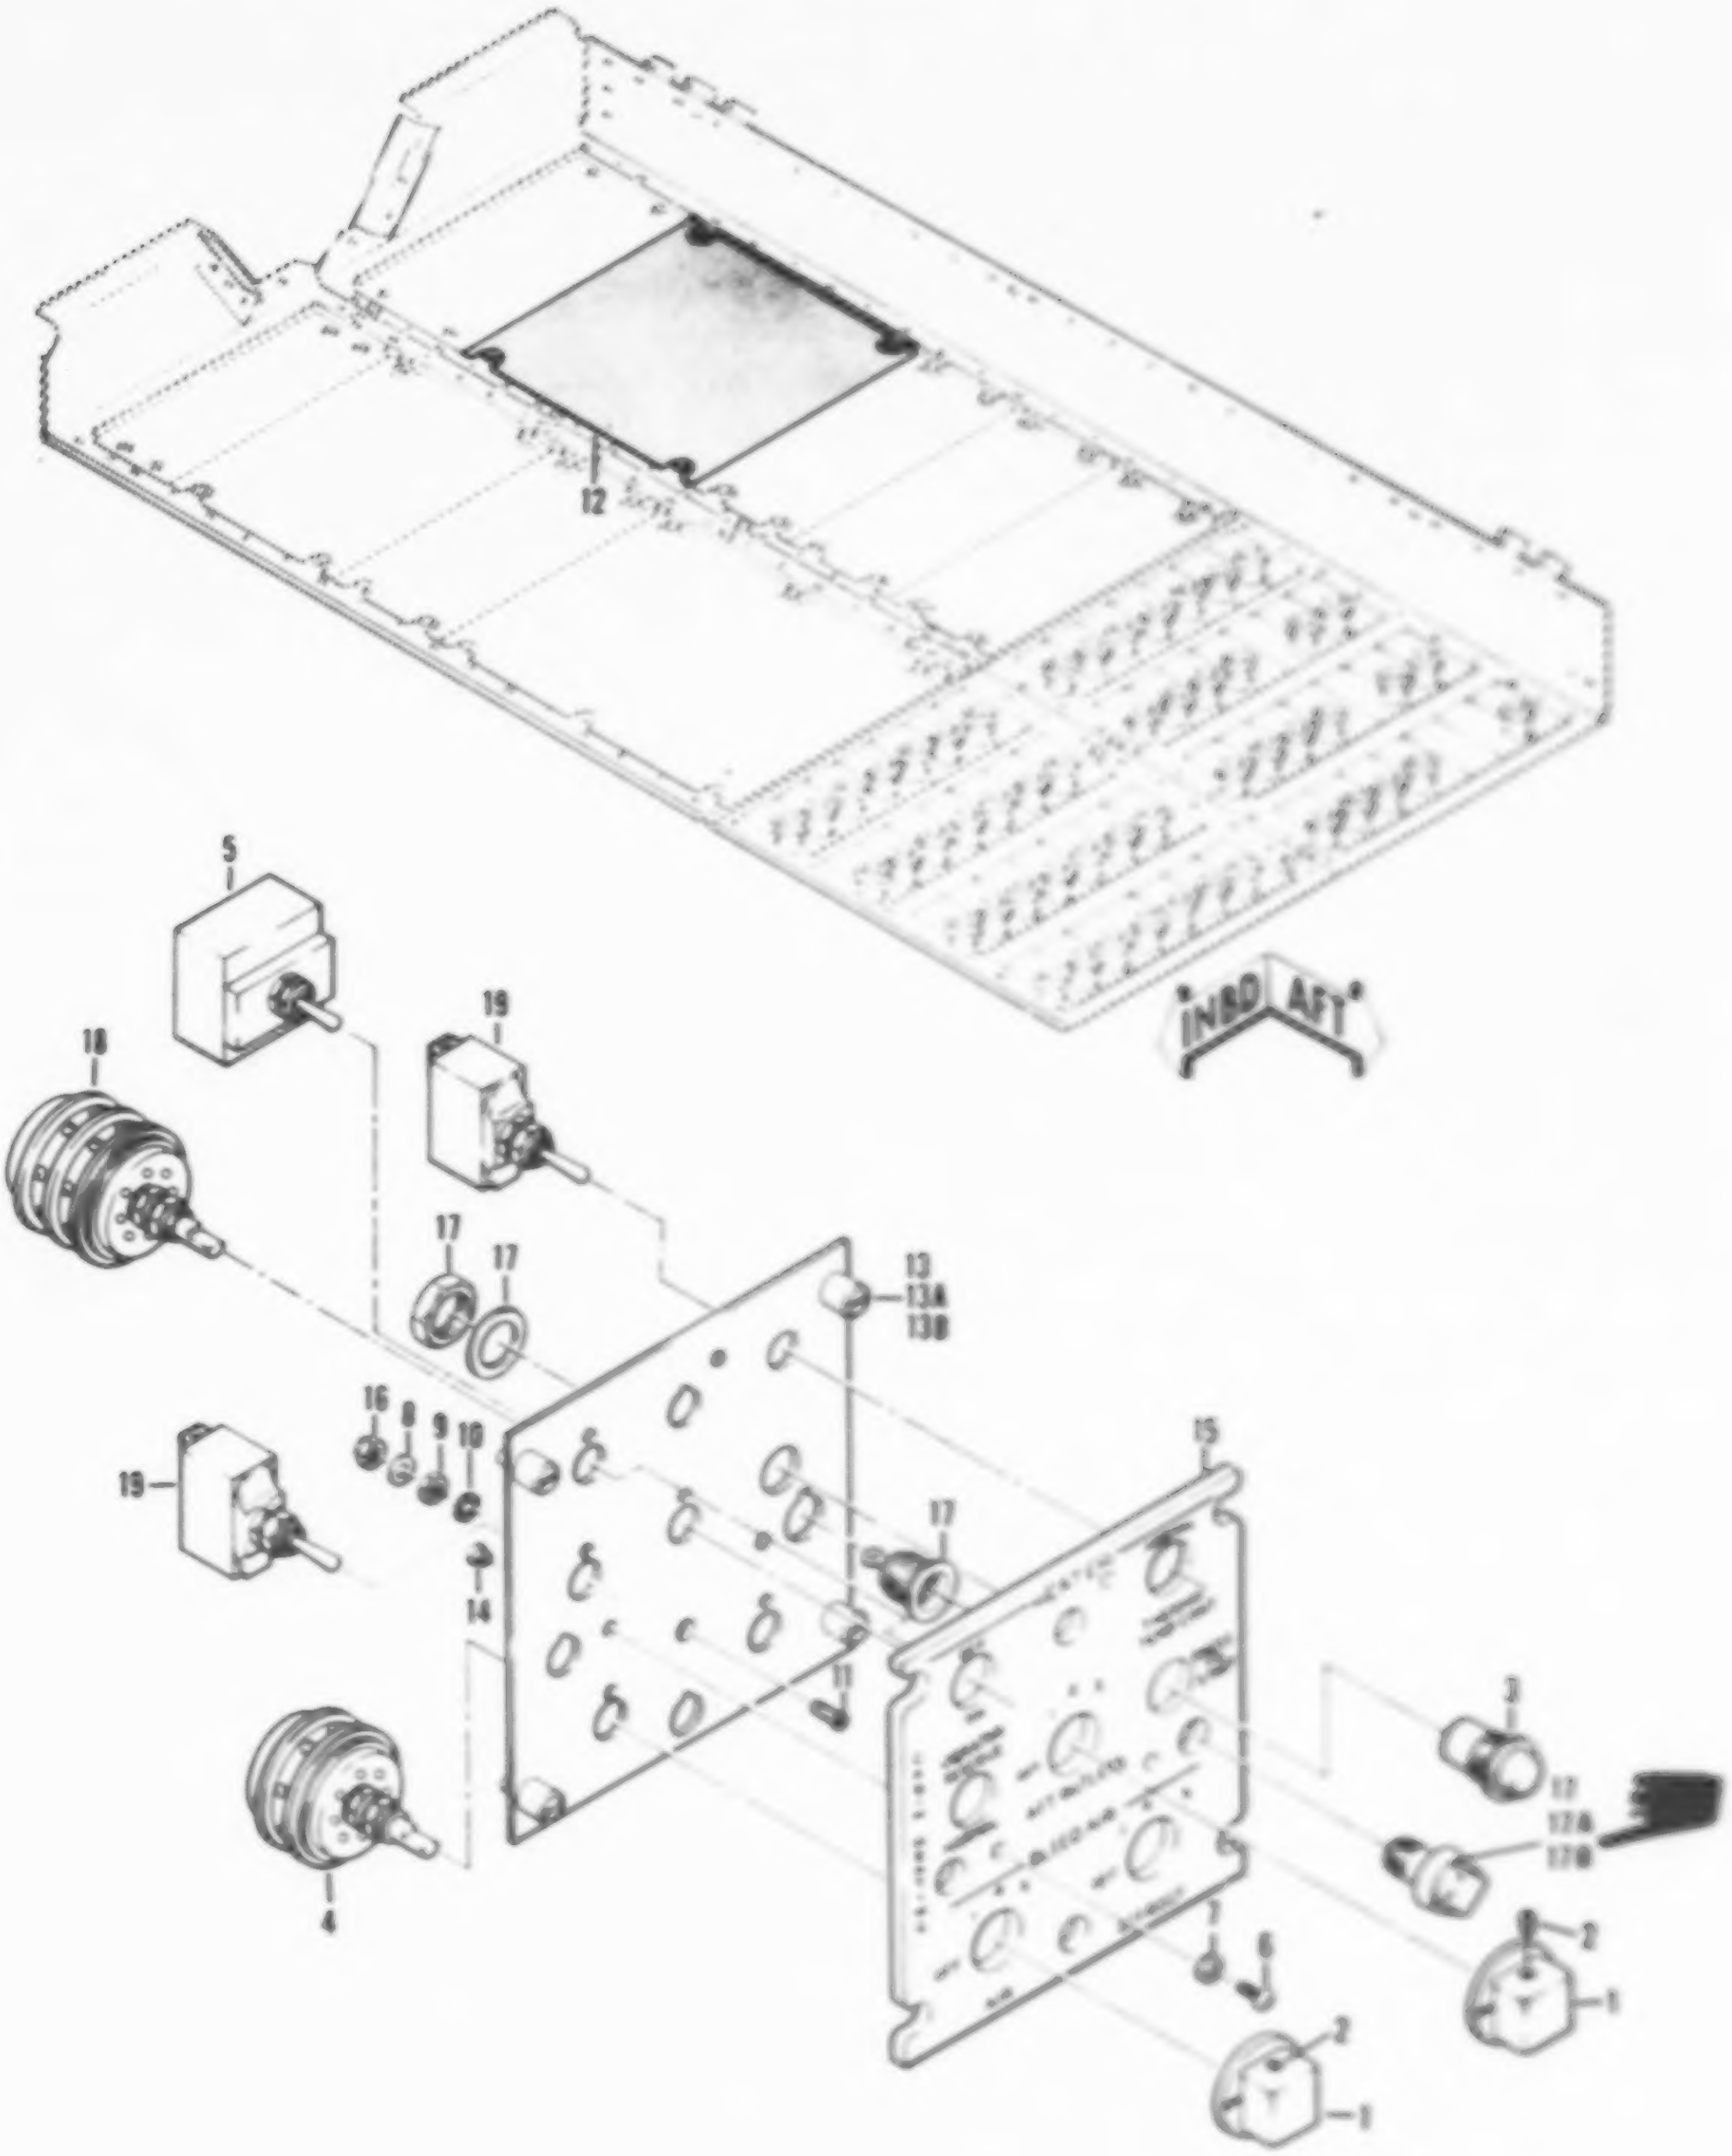
12
5
19
18
17
17
13
13A
13B
16
8
9
10
19
14
17
15
11
3
17
17A
17B
2
1
7
6
2
1
4
INBD
AFT

Figure 250. Control Assembly, Heating

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) GROUP
250		PA000	1560-00-[illegible]	07485	235-070-231-1	PANEL, CENTER, CABIN, [illegible] SEE FIG. 245 & 246 FOR [illegible]
250	1	PAOOZ	1560-00-772-1877	07485	234-070-254-15	HARN ASSY
250	2	PAOZZ	5365-00-[illegible]	96906	[illegible]	[illegible]
250	3	PAOZZ	5930-00-[illegible]	96906	MS25089-4[illegible]	SWITCH, PUSH
250	4	PAOZZ	5930-00-[illegible]	96906	MS[illegible]-1	SWITCH, ROTARY
250	5	PAOZZ	5930-00-655-1[illegible]	96906	MS35058-23	SWITCH, TOGGLE
250	6	PAOZZ	5305-00-206-2716	96906	MS35214-25	SCREW, MACHINE
250	7	PAOZZ	5310-00-[illegible]	88044	AN960-6	WASHER, FLAT
250	8	PAOZZ	5310-00-[illegible]	88044	AN960PD6	WASHER, FLAT
250	9	PAOZZ	5310-00-[illegible]	96906	MS35649-[illegible]	NUT, PLAIN, HEXAGON
250	10	PAOZZ	5310-00-045-4007	96906	MS35338-41	WASHER, LOCK
250	11	PAOZZ	5305-00-[illegible]	96906	MS24693C[illegible]	SCREW, MACHINE
250	12	XAOOO		07485	234-070-[illegible]-1	PANEL, ASSEMBLY
250	13	XAOZZ		72794	PC1-1-2	RETAINER, THREADED
250	13A	XAOZZ		72794	PP1-1-2.38	STUD, THREADED
250	13B	XAOZZ		72794	PC1-1-2	SPRING, HELICAL, COMP
250	14	PAOZZ	5310-00-[illegible]	46384	CLA[illegible]-2	NUT, PLAIN, CLINCH
250	15	PAOZZ	1560-00-[illegible]	07485	234-070-736-1	PANEL, CABIN HEATING
250	16	PAOZZ	5310-00-807-1472	96906	MS21043L06	NUT, SELF-LOCKING, EXTEN[illegible]
250	17	[illegible]	6210-00-[illegible]	96906	MS25[illegible]	LIGHT, PANEL
250	17A	PAOZZ	[illegible]	[illegible]	[illegible]	FILTER, LIGHT [illegible]
250	17B	PAOZZ	6240-00-155-7836	[illegible]	[illegible]	LAMP, INCANDESCENT
250	18	PAOZZ	5930-00-[illegible]	96906	MS[illegible]-22	SWITCH, ROTARY
250	19	PAOZZ	5930-00-655-1515	96906	MS35058-23	SWITCH, TOGGLE

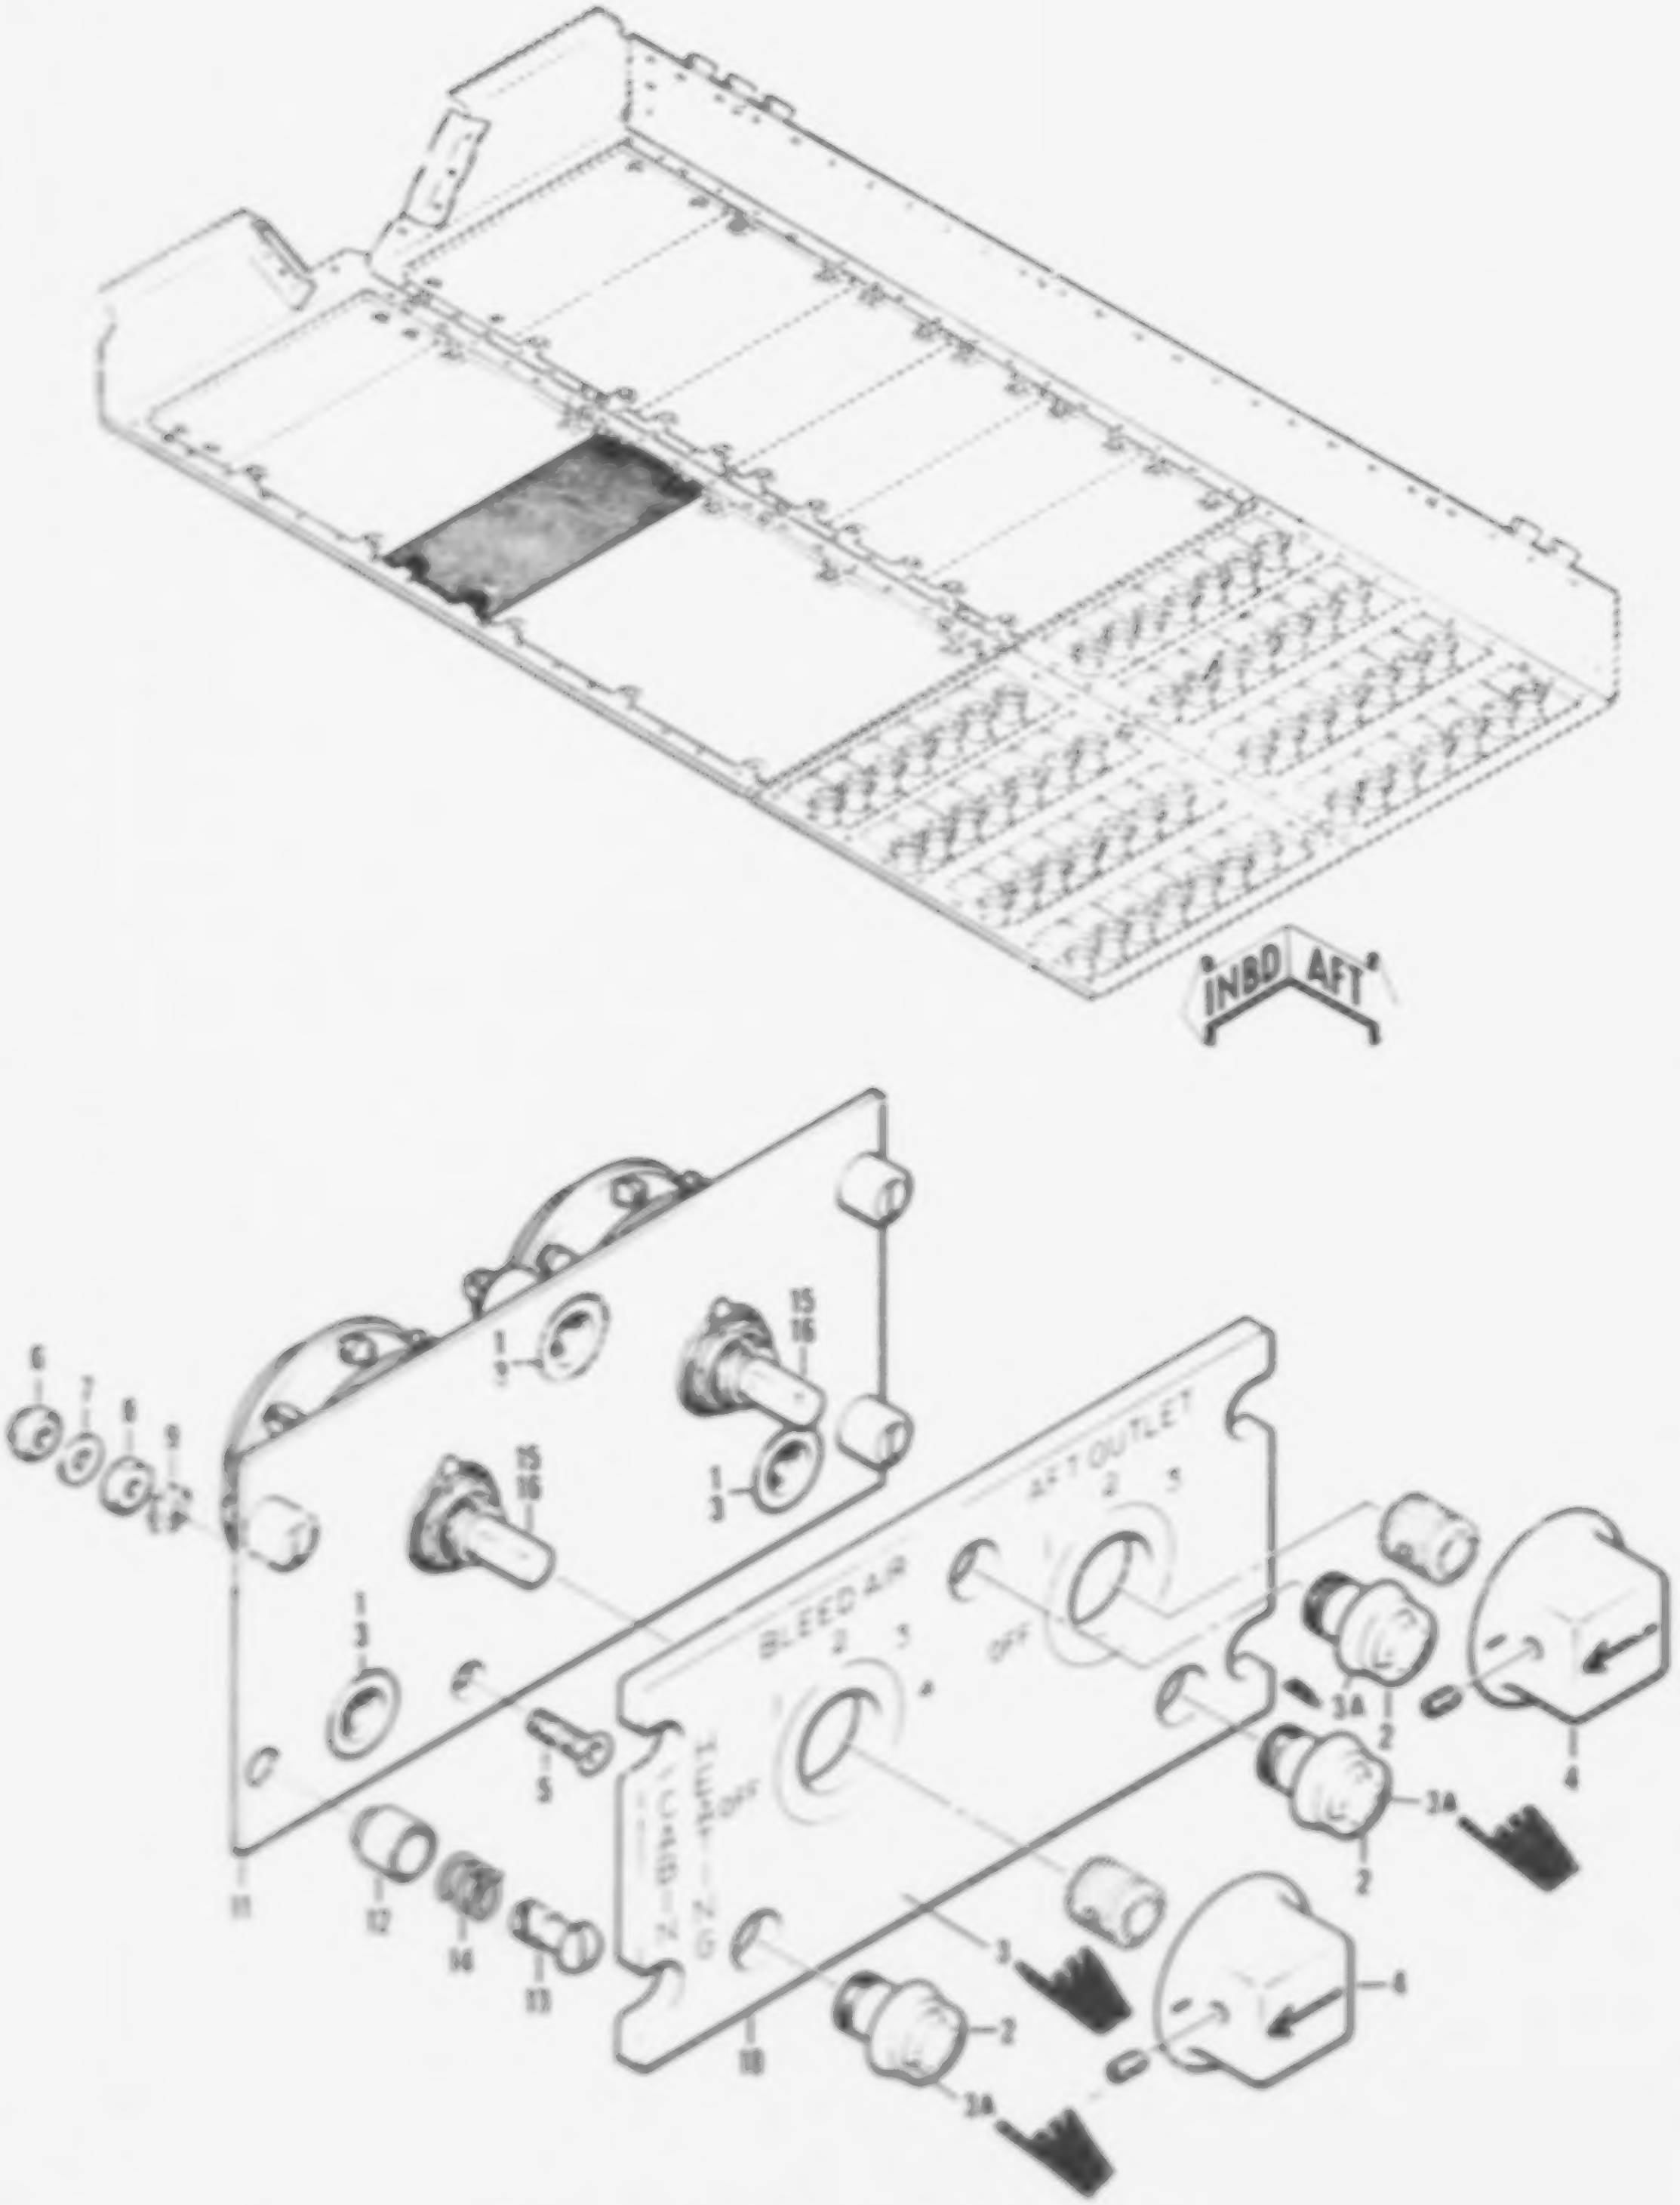
INBD
AFT
6
7
8
9
1
9
15
16
1
3
BLEED AIR
AFT OUTLET
OFF
2
3
4
5
10
11
12
13
14
3A

Figure 251. Panel Assembly, Heating Control

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
251		XDOOO	1680-00-922-8250	97499	204-075-826-1	PANEL ASSEMBLY, HEATING CONTROL USBL EFF 65-9416 & SUBSEQUENT SEE FIG.246 FOR NHA.......................... UHM	EA	1
251		PBOOO	1560-00-915-5959	97499	204-075-826-3	PANEL ASSEMBLY, HEATING CONTROL USBL EFF 65-9565 THRU 66-16867 SEE FIG. 246 FOR NHA.....................UHE,UHH,UHV,UHX	EA	1
251	1	XDOOZ		96906	MS25010B11A327	.LIGHT,PANEL.......................... UHE,UHH,UHM,UHV,UHX	EA	3
251	2	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT.................. UHE,UHH,UHM,UHV,UHX	EA	1
251	3	AOOOZ	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL........................ UHE,UHH,UHM,UHV,UHX	EA	1
251	3A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	.FILTER,LIGHT,NVG.......................... UHE,UHH,UHV,UHX	EA	3
251	4	PAOZZ	1560-00-772-1877	97499	204-075-254-15	.KNOB ASSY.......................... UHE,UHH,UHM,UHV,UHX	EA	2
251	5	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE...................... UHE,UHH,UHM,UHV,UHX	EA	1
251	6	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHM,UHV,UHX	EA	1
251	7	PAOZZ	5310-00-209-0788	96906	MS35335-30	.WASHER,LOCK......................... UHE,UHH,UHM,UHV,UHX	EA	1
251	8	PAOZZ	5310-00-934-9747	96906	MS35649-262	.NUT,PLAIN,HEXAGON.................. UHE,UHH,UHM,UHV,UHX	EA	1
251	9	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT......................... UHE,UHH,UHM,UHV,UHX	EA	1
251	10	PAOZZ	1680-00-922-8241	97499	204-075-847-1	.PANEL,AIRCRAFT...................... UHE,UHH,UHM,UHV,UHX	EA	1
251	11	XAOOZ		97499	204-075-845-1	.PLATE ASSY,MOUNTING................ UHE,UHH,UHM,UHV,UHX	EA	1
251	12	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK................. UHE,UHH,UHM,UHV,UHX	EA	4
251	13	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK...................... UHE,UHH,UHM,UHV,UHX	EA	4
251	14	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP................ UHE,UHH,UHM,UHV,UHX	EA	4
251	15	PAOZZ	5930-00-259-4646	96906	MS25002-2	.SWITCH,ROTARY U/O PN 204-075-826-3..........UHE,UHH,UHV,UHX	EA	1
251	16	PBOZZ	5930-00-538-5508	96906	MS25002-1	.SWITCH,ROTARY U/O PN 204-075-826-1................. UHM	EA	1

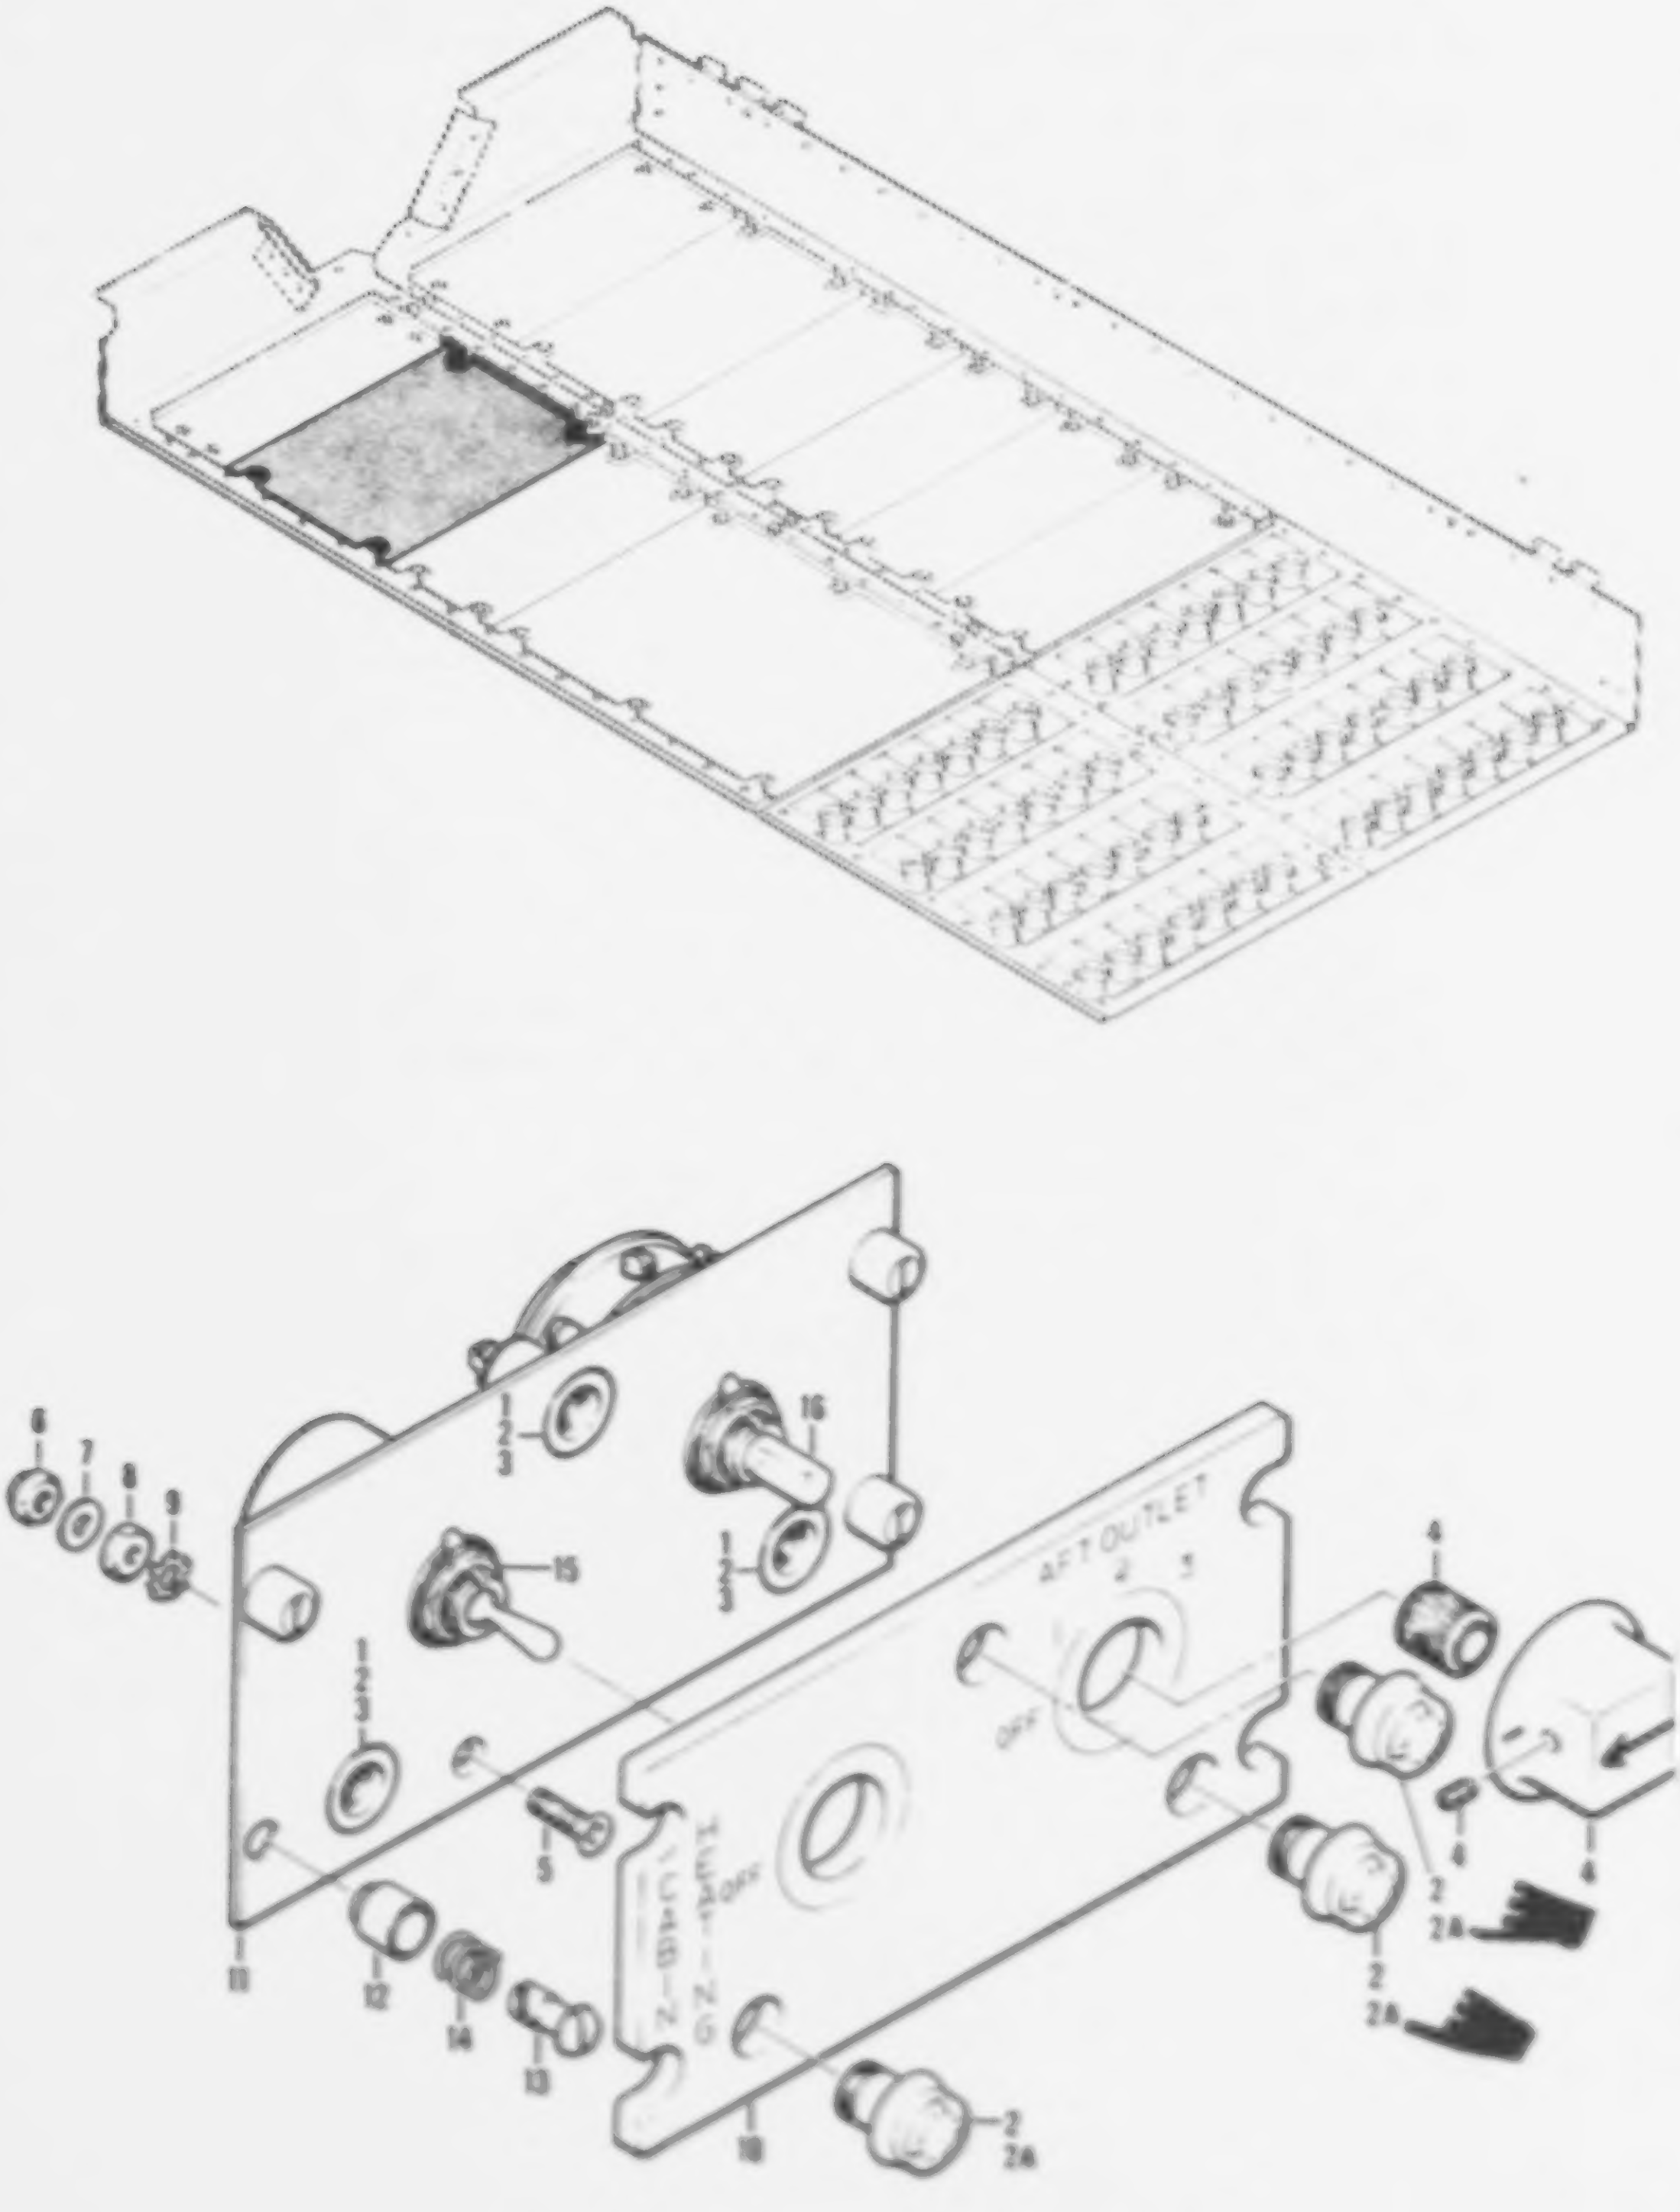
6
7
8
9
1
2
3
16
1
2
3
15
1
2
3
5
11
12
14
13
AFT OUTLET
1
2
3
OFF
HEATING
CABIN
OFF
10
4
2
2A
4
4
2
2A
2
2A

Figure 252. Panel Assembly, Heating Control

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
252		XDOOZ	1680-00-157-6472	97499	205-075-801-1	PANEL ASSY, HEATING CONTROL USBL EFF 66-16868 & SUBSEQUENT SEE FIG 246 FOR NHA	UHE, UHH, UHV, UHX	EA	1
252	1	XDOOZ		96906	MS25010B11A327	. LIGHT, PANEL	UHE, UHH, UHV, UHX	EA	3
252	2	PAOZZ	6240-00-155-7836	96906	MS25237-327	. . LAMP, INCANDESCENT	UHE, UHH, UHV, UHX	EA	3
252	2A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	. FILTER, LIGHT, NVG	UHE, UHH, UHV, UHX	EA	3
252	3	AOOOZ	6210-00-519-2653	96906	MS25010B11A	. . LIGHT, PANEL	UHE, UHH, UHV, UHX	EA	1
252	4	PAOZZ	1550-00-772-1877	97499	204-075-254-15	. KNOB ASSY	UHE, UHH, UHV, UHX	EA	1
252	5	PAOZZ	5305-00-837-3343	96906	MS24693S28	. SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
252	6	PAOZZ	5310-00-807-1472	96906	MS21042L06	. NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	1
252	7	PAOZZ	5310-00-209-0788	96906	MS35335-30	. WASHER, LOCK	UHE, UHH, UHV, UHX	EA	1
252	8	PAOZZ	5310-00-934-9747	96906	MS35649-262	. NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	1
252	9	PAOZZ	5310-00-188-7721	88044	AN960PD6	. WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
252	10	XBOOZ	1680-00-102-8788	97499	205-075-800-1	. CONTROL PANEL ASSY	UHE, UHH, UHV, UHX	EA	1
252	11	XAOOZ		97499	204-075-846-1	. PLATE ASSY, MOUNTING	UHE, UHH, UHV, UHX	EA	1
252	12	XAOZZ		72794	PC3 1-2	. . RETAINER, TURNLOCK	UHE, UHH, UHV, UHX	EA	4
252	13	XAOZZ		72794	PF3 1-2 38	. . STUD, TURNLOCK	UHE, UHH, UHV, UHX	EA	4
252	14	XAOZZ		72794	PS3 1-2	. . SPRING, HELICAL, COMP	UHE, UHH, UHV, UHX	EA	4
252	15	PBOZZ	5930-00-655-4241	96906	MS24524-23	. SWITCH, TOGGLE	UHE, UHH, UHV, UHX	EA	1
252	16	PAOZZ	5930-00-259-4816	96906	MS25002-2	. SWITCH, ROTARY	UHE, UHH, UHV, UHX	EA	1

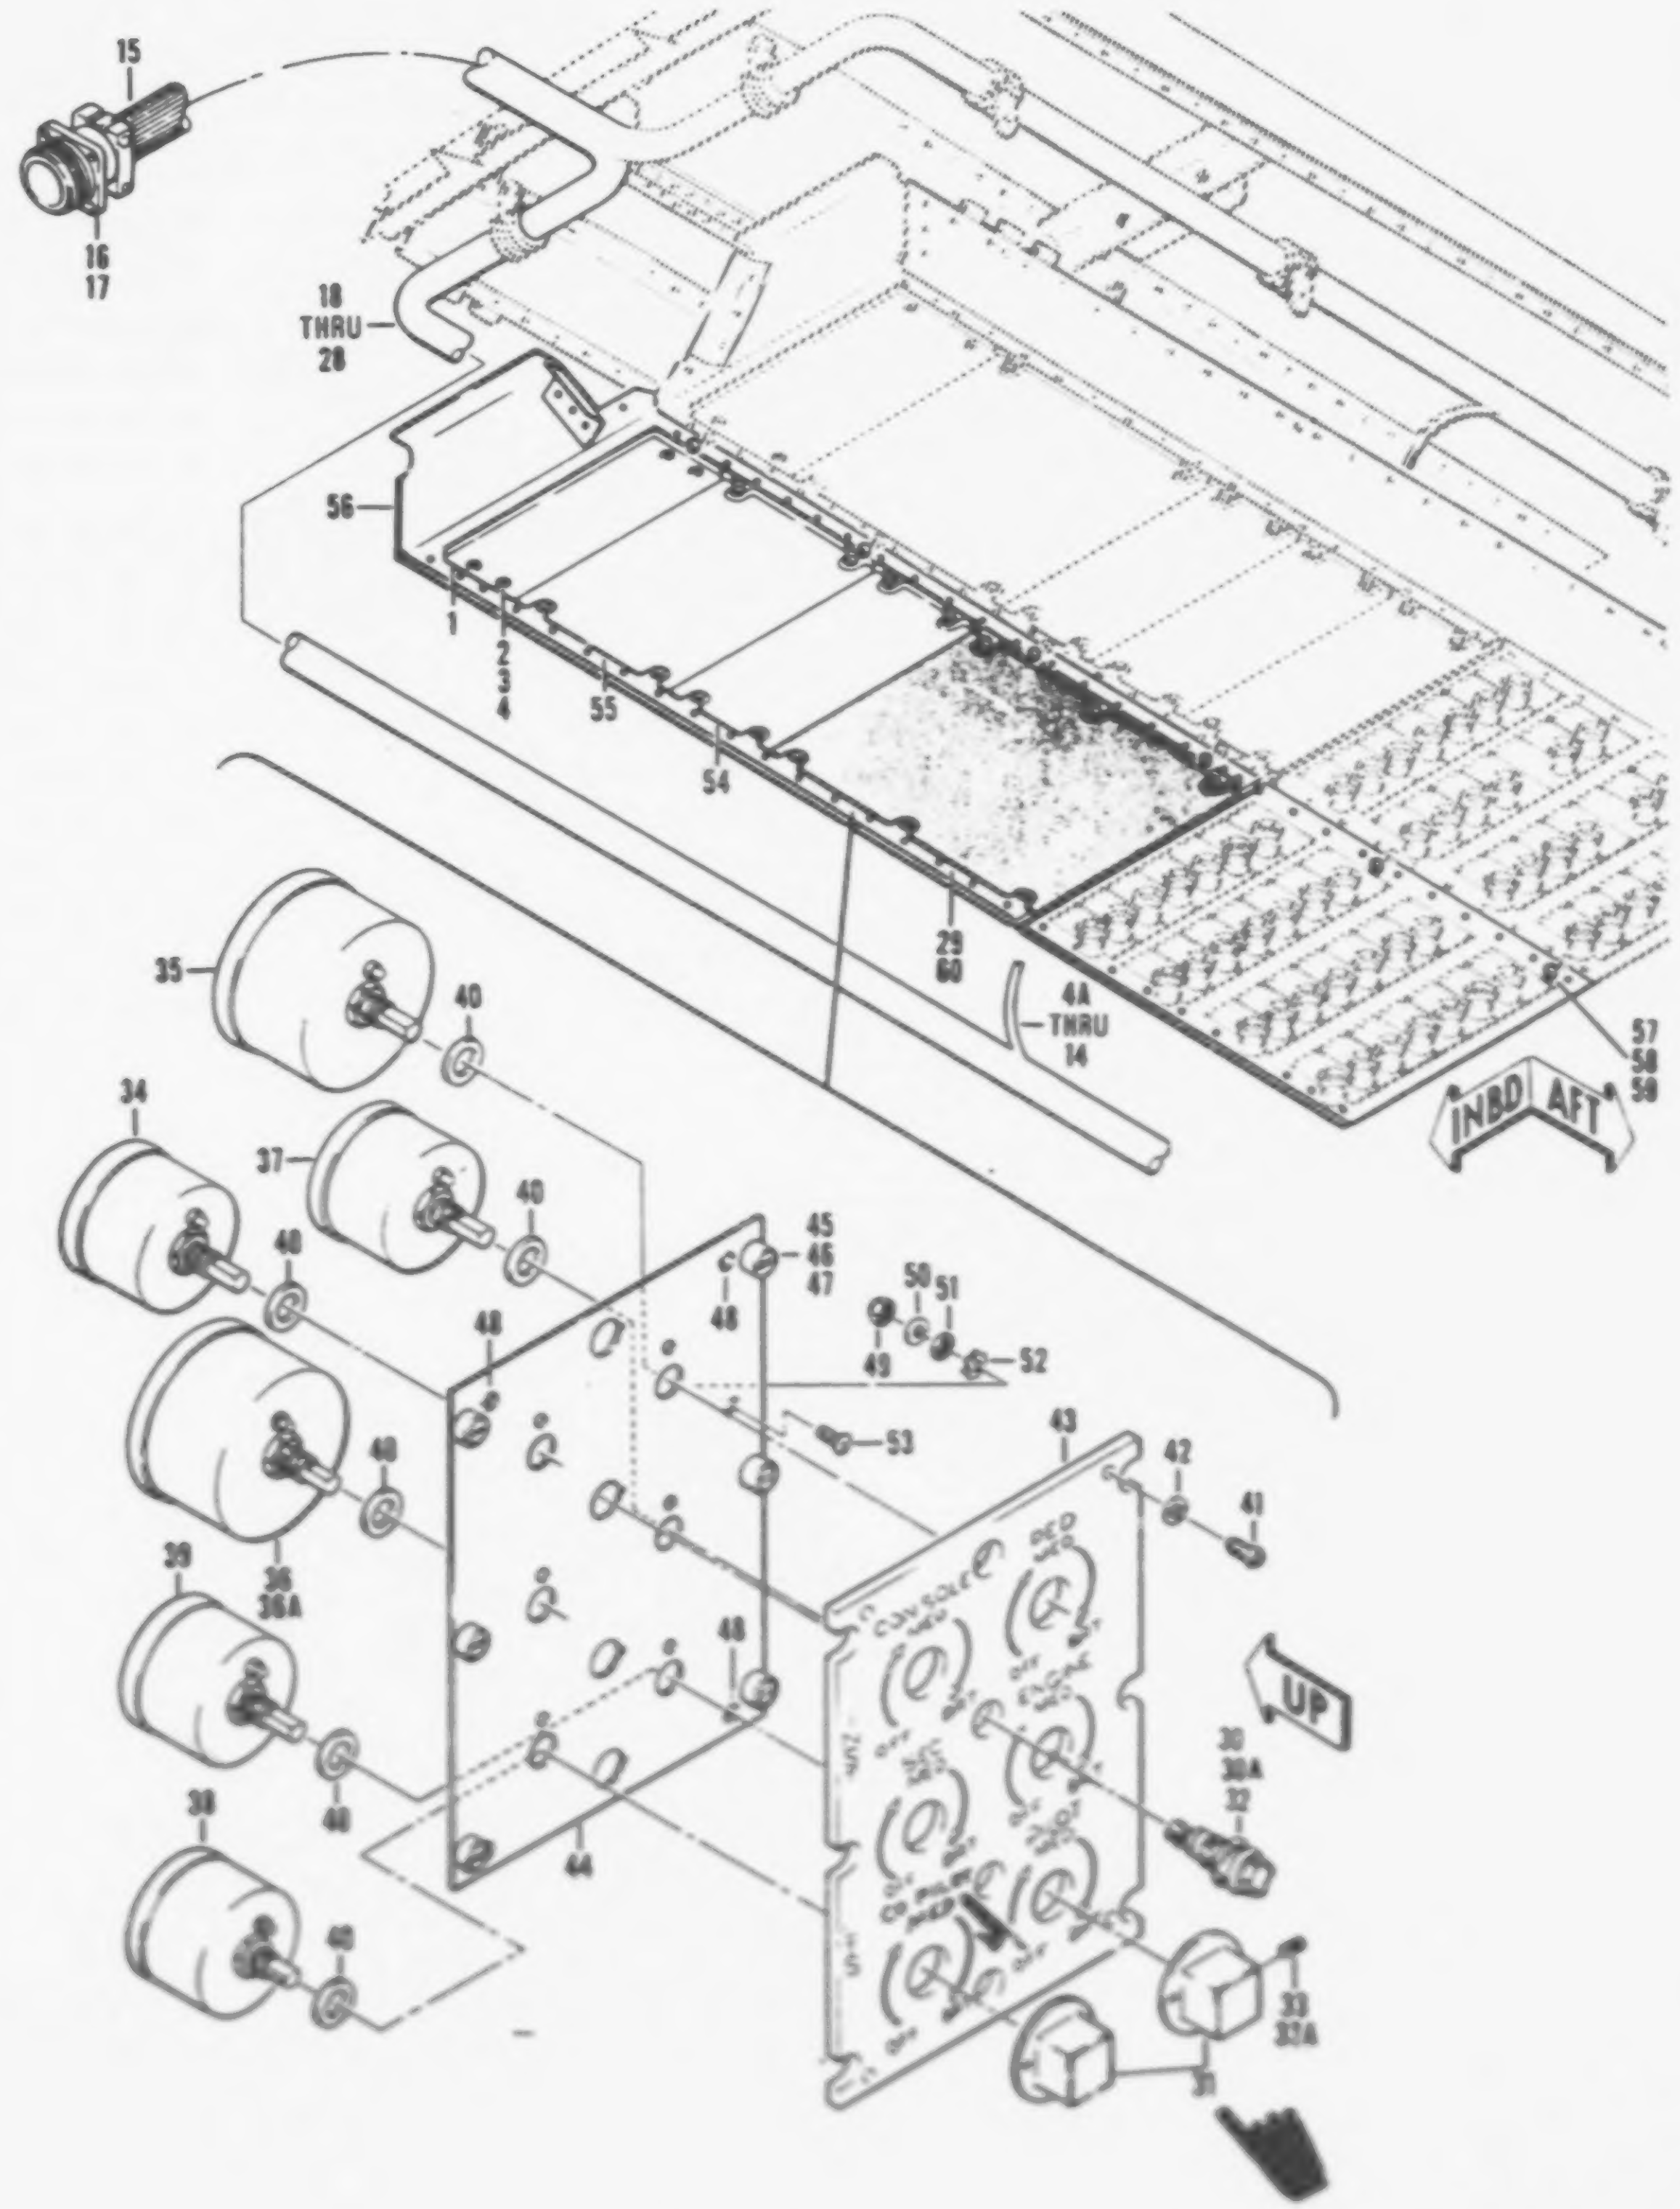
15
16
17
18
THRU
28
56
1
2
3
4
55
54
29
60
4A
THRU
14
57
58
59
INBD
AFT
35
40
34
37
40
40
45
46
47
48
48
50
51
49
52
53
40
36
36A
43
42
41
39
48
UP
30
30A
32
40
44
38
40
33
33A
31

Figure 253. Panel Assembly, Right-Hand, Forward Section

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
253		XCFZZ		97499	204-075-113-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 60-3546 THRU 60-3619 SEE FIG 245 FOR NHA ....UHB	EA	1
253		XCFZZ		97499	204-075-113-11	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 61-686 THRU 61-803 SEE FIG 245 FOR NHA ....UHB	EA	1
253		XCFZZ		97499	204-075-113-19	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 62-1872 THRU 62-12555 SEE FIG.245 FOR NHA ....UHB	EA	1
253		XCFZZ		97499	204-075-602-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 63-8500 THRU 63-8658 SEE FIG.246 FOR NHA ....UHB	EA	1
253		XCFZZ		97499	204-075-602-7	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 63-8659 THRU 63-12952 SEE FIG.246 FOR NHA ....UHB	EA	1
253		XCFZZ		97499	204-075-610-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 64-13902 THRU 64-14100 SEE FIG.246 FOR NHA ....UHB	EA	1
253		XCFZZ		97499	204-075-610-11	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.246 FOR NHA ....UHC,UHM	EA	1
253		XCFZZ		97499	204-075-611-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 65-9416 THRU 66-601 SEE FIG.246 FOR NHA ....UHC,UHM	EA	1
253		XCFZZ		97499	204-075-611-15	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 66-602 THRU 66-15022 SEE FIG.246 FOR NHA ....UHC,UHM	EA	1
253		XCFZZ		97499	204-075-611-21	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 66-15023 & SUBSEQUENT SEE FIG.246 FOR NHA ....UHC,UHM	EA	1
253		XCFZZ		97499	205-075-141-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 62-2106 THRU 62-12372 SEE FIG.245 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-143-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 63-8739 THRU 63-8803 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-143-9	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 63-8804 THRU 63-8859 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-143-15	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 63-12956 THRU 63-13002 SEE FIG 246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-5	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 64-13492 THRU 64-13901 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-11	PANEL ASSY CONSOLE-RH,FORWARD SECTION USBL EFF 65-9565 THRU 65-10135 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-21	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 66-746 THRU 66-16033 SEE FIG 246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-27	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 66-16034 THRU 66-16867 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-43	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 66-16868 THRU 66-17143 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-47	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 67-17145 THRU 67-17312 SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253		XCFZZ		97499	205-075-111-49	PANEL ASSY,OVERHEAD CONSOLE-RH,FORWARD SECTION USBL EFF 67-17313 AND SUBSEQUENT SEE FIG.246 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
253	1	PAODD	1560-00-916-2536	97499	204-075-286-25	.PANEL,BLANK U/O PN 204-075-113-5,-11, & 205-075-141-5 ....UHB	EA	1
253	1	PAODD	1560-00-916-2536	97499	204-075-286-25	.PANEL,BLANK U/O PN 204-075-113-5,-11, & 205-075-141-5 ....UHB,UHE,UHH,UHV,UHX	EA	2
253	1	PAOZZ	1560-00-915-5821	97499	204-075-286-33	.PANEL,BLANK U/O PN 204-075-602-5,-7, 204-075-610-5, 205-075-111-5, 205-075-143-5,-9,& -15 ....UHB,UHE,UHH,UHV,UHX	EA	1
253	2	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP ....UHB,UHE,UHH,UHV,UHX	EA	4
253	3	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER ....UHB,UHE,UHH,UHV,UHX	EA	4
253	4	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER ....UHB,UHE,UHH,UHV,UHX	EA	4
253	44	AFDDZ	1560-00-731-8990	97499	204-075-421-5	.CABLE ASSY,OVERHEAD CONSOLE PANEL,INTERNAL U/O PN 204-075-113-5,-11,& -19 ....UHB	EA	1
253	44	AODDZ	1560-00-299-0886	81486	204-075-421-11	.WIRING ASSY, U/O UH-1B PN 204-075-602-5,-7,& 204-075-610-5 U/O UH-1C PN 204-075-610-11 ....UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
253	4A	A000Z	6150-00-924-0432	97499	204-175-429-3	.CABLE ASSY, U/O PN 204-075-611-5 & -15..............UHC,UHM	EA	1
253	4A	A000Z	6110-00-928-830	97499	204-175-429-7	.CABLE ASSY, U/O PN 204-075-611-21..................UHC,UHM	EA	1
253	4A	A000Z	1560-00-299-100	97499	205-075-415-3	.WIRING ASSY, U/O PN 205-075-141-5..........UHE,UHH,UHY,UHX	EA	1
253	4A	A000Z	1560-00-299-100	97499	205-075-419-5	.WIRING ASSY U/O PN 205-075-143,-5,-9, -15 & PN 205-075-111-5..........UHE,UHH,UHY,UHX	EA	1
253	4A	A000Z	6150-00-924-043	97499	205-075-419-7	.WIRING ASSY U/O PN 205-075-111-11..........UHE,UHH,UHY,UHX	EA	1
253	4A	A000Z	6150-00-837-1682	97499	205-075-419-9	.CABLY ASSY,POWER U/O PN 204-075-111-27 & -43..........UHE,UHH,UHY,UHX	EA	1
253	4A	A0000		97499	205-075-924-1	.CABLE ASSY, U/O PN 205-075-111-49..........UHE,UHH,UHY,UHX	EA	1
253	5	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-075-421-5 & -11........UHB,UHC,UHM	EA	24
253	6	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-415-3,205-075-419-5,-9,-11 & 205-075-924-1 924-1...............UHC,UHE,UHH,UHM,UHY,UHX	EA	27
253	6A	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-419-7..........UHE,UHH,UHY,UHX	EA	25
253	7	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG....................UHB,UHC,UHE,UHH,UHM,UHY,UHX	EA	1
253	8	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG....................UHB,UHC,UHE,UHH,UHM,UHY,UHX	EA	15
253	9	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-421-5 & -11........UHB,UHC,UHM	EA	26
253	9A	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O (UH-1C) PN 204-175-429-3 U/O PN 205-075-415-3,205-075-419-5..............UHC,UHE,UHH,UHM,UHY,UHX	EA	30
253	9B	PAOZZ	5940-00-557-1629	6906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-429-7..............UHC,UHM	EA	28
253	9C	PAOZZ	5940-00-557-1629	6906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-419-7 & -11....UHE,UHH,UHY,UHX	EA	27
253	9D	PAOZZ	5940-00-557-1629	6906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-419-9 & 205-075-924-1..........UHE,UHH,UHY,UHX	EA	25
253	10	PAOZZ	5940-00-143-4774	6906	MS25036-153	..TERMINAL,LUG U/O UH-1D PN 205-075-415-3 & 205-075-419-5..........UHB,UHC,UHE,UHH,UHM,UHY,UHX	EA	3
253	10	PAOZZ	5940-00-143-4774	6906	MS25036-153	..TERMINAL,LUG U/O PN 205-075-419-7,-9,-11,& 205-075-924-1..........UHE,UHH,UHY,UHX	EA	1
253	11	XDOZZ	5940-00-828-2809	6906	MS25180-7	..TERMINAL,LUG U/O (UH-1C) PN 204-075-421-11 U/O PN 205-075-924-1..........UHB,UHC,UHM	EA	6
253	12	PBOZZ	6145-00-578-6594	0349	M5086/2-6-9	..WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHY,UHX	FT	V
253	12A	PBOZZ	6145-00-578-6605	0349	M5086/2-16-9	..WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHY,UHX	FT	V
253	12B	PAOZZ	6145-00-578-6602	0349	M5086/2-18-9	..WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHY,UHX	FT	V
253	12C	PBOZZ	6145-00-851-8505	6906	MS25190B20	..WIRE,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHY,UHX	FT	V
253	13	PAOZZ	5940-00-143-4771	6906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-415-3..........UHE,UHH,UHY,UHX	EA	1
253	14	PAOZZ	5940-01-007-7875	8349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-429-3 & -7..........UHC,UHM	EA	1
253	15	AOOOZ	1560-00-731-8881	9199	204-075-421-7	.CABLE ASSY,OVERHEAD CONSOLE FORWARD U/O PN 204-075-113-5..........UHB	EA	1
253	15	AOOOZ	1560-00-858-0017	9199	204-075-421-9	.CABLE ASSY,OVERHEAD CONSOLE FORWARD U/O PN 204-075-113-11 & -19..........UHB	EA	1
253	15	AOOOZ	1560-00-299-1012	9199	204-075-949-3	.CABLE ASSY,OVERHEAD CONSOLE FORWARD U/O UH-1B PN 204-075-602-5,-7,& 204-075-610-5 U/O UH-1C PN 204-075-610-11..........UHB,UHC,UHM	EA	1
253	15	AOOOZ	1560-00-299-1001	9799	205-075-415-1	.CABLE ASSEMBLY U/O PN 205-075-141-5..........UHE,UHH,UHY,UHX	EA	1
253	15	AOOOZ	1560-00-299-1004	9799	205-075-419-3	.CABLE ASSEMBLY U/O PN 205-075-143-5,-9, -15 & 205-075-111-5..........UHE,UHH,UHY,UHX	EA	1
253	15	AOOOZ	1560-00-924-7708	9799	205-075-437-3	.CABLE ASSEMBLY,ELEC U/O PN 205-075-111-11,-21, -27, & -43..........UHE,UHH,UHY,UHX	EA	1
253	16	PAOZZ	5935-00-849-7180	6906	MS3110E16-26S	..CONNECTOR,RECEPTACL INST PNL DISC......UHB,UHE,UHH,UHY,UHX	EA	1
253	17	PAOZZ	5310-00-984-2123	7710	10-101033-11	..PLUG,PROTECTIVE, DUST & MOISTURE SEAL U/O PN 204-075-421-7 & -9..........UHB	EA	6
253	17	PAOZZ	5340-00-984-2123	7710	10-101033-11	..PLUG,PROTECTIVE, DUST & MOISTURE SEAL U/O PN 204-075-	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						949-3.................................UHM		
253	17	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE, DUST & MOISTURE SEAL ....UHE,UHH,UHV,UHX	EA	14
253	18	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHM	EA	V
253	19	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	23
253	20	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........UHM	EA	2
253	20	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
253	21	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	15
253	21	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..........UHM	EA	18
253	22	PBOZZ	5940-00-688-6005	96906	MS25036-143	..TERMINAL,LUG.......... UHE,UHH,UHM,UHV,UHX	EA	2
253	23	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR..........UHM	EA	19
253	23	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR..........UHE,UHH,UHY,UHX	EA	6
253	24	MOOZZ		97499	85T4-375-12	..TUBE,INSULATION U/O PN 205-075-415-1.......UHE,UHH,UHV,UHX	EA	1
253	25	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	16
253	26	PBOZZ	6145-00-578-6594	81349	M5086/2-6-9	..WIRE,ELECTRICAL U/O PN 205-075-419-3.......UHE,UHH,UHV,UHX	FT	V
253	26A	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O PN 205-075-419-3.......UHE,UHH,UHV,UHX	FT	V
253	26B	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O PN 205-075-415-1.205-075-419-3 .... UHE,UHH,UHM,UHV,UHX	FT	V
253	26C	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL U/O PN 205-075-415-1 & 205-075-437-3.......... UHE,UHH,UHM,UHV,UHX	FT	V
253	26D	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL U/O PN 205-075-437-3.......UHE,UHH,UHV,UHX	FT	V
253	27	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG U/O PN 205-075-419-3..........UHE,UHH,UHV,UHX	EA	2
253	27A	PAOZZ	5940-00-143-4775	96906	MS25036-156	..TERMINAL,LUG U/O PN 205-075-419-3..........UHE,UHH,UHV,UHX	EA	2
253	28	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	..CONNECTOR,PLUG,ELEC HI-LOW RPM PANEL.......UHE,UHH,UHV,UHX	EA	1
253	29	PBOOO	6110-00-868-4850	97499	204-075-707-1	.PANEL ACSY, INSTRUMENT LIGHT CONTROL SEE FIG.245 & 246 FOR UHA.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	30	AOOOZ	6210-00-519-2563	96906	MS25010811A	..LIGHT,PANEL.......... UHE,UHH,UHM,UHV,UHX	EA	[illegible]
253	30A	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP, INCANDESCENT.......... UHE,UHH,UHM,UHV,UHX	EA	4
253	31	PAOOZ	1680-00-772-1877	97499	204-075-254-15	..KNOB ASSY.......... UHE,UHH,UHM,UHV,UHX	EA	6
253	32	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	..FILTER,LAMP,NVG..........UHE,UHH,UHV,UHX	EA	4
253	33	PBOZZ	5305-00-719-5339	96906	MS51963-22	...SETSCREW.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	33A	PAOZZ	5305-00-854-8455	80205	NAS1081-0604N	...SETSCREW.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	34	PBOZZ	5905-00-295-3761	81349	AN3155-25-50	..RESISTOR,VARIABLE.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	35	PBOZZ	5905-00-295-3760	88044	AN3155-50-25	..RESISTOR,VARIABLE.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	36	PBOZZ	5905-00-295-3808	12697	CM816	..RESISTOR,VARIABLE.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	36A	PAOZZ	5905-00-695-9547	88044	AN3155-25-100	..RHEOSTAT USE AFTER NIGHT VISION GOGGLES ARE INSTALLED ....UHH,UHV	EA	1
253	37	PAOZZ	5905-00-283-6850	12697	CM808	..RESISTOR,VARIABLE.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	38	PAOZZ	5905-00-695-9547	81349	AN3155-25-100	..RHEOSTAT.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	39	PAOZZ	5905-00-895-9560	12697	CM35654	..RESISTOR,VARIABLE.......... UHE,UHH,UHM,UHV,UHX	EA	1
253	40	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT.......... UHE,UHH,UHM,UHV,UHX	EA	6
253	41	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE.......... UHE,UHH,UHM,UHV,UHX	EA	4
253	42	PAOZZ	5310-00-194-0834	88044	AN961-6	..WASHER,FLAT.......... UHE,UHH,UHM,UHV,UHX	EA	4
253	43	PAOZZ	1680-00-075-8372	97499	204-075-297-1	..PANEL, INSTRUMENT, LIGHT CONTROL, EDGE LIT .... UHE,UHH,UHM,UHV,UHX	EA	1
253	44	XAOOZ		97499	204-075-296-1	..PLATE ASSY.......... UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
253	45	XAOZZ		72794	PS3 1-2	...SPRING,HELICAL,COMP............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
253	46	XAOZZ		72794	PC3 1-2	...RETAINER,TURNLOCK FASTENER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
253	47	XAOZZ		72794	PF3 1-2 38	...STUD,TURNLOCK FASTENER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
253	48	PAOZZ	5310-00-469-6009	46384	CL632-2	...NUT,PLAIN,CLINCH..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
253	49	PAOZZ	5310-00-867-5560	96906	MS21045L06	..NUT,SELF-LOCKING, HEXAGON......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	50	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	51	PAOZZ	5310-00-934-9763	96906	MS35649-265	..NUT,PLAIN,HEXAGON..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	52	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	53	PAOZZ	5305-00-837-3343	96906	MS24693S28	..SCREW,MACHINE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	54	XBOOZ	1680-00-168-6094	97499	204-075-206-1	.CONTROL PANEL,ASSY A-C POWER SEE FIG.255 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	55	PBOOO	1680-00-126-1989	97499	204-075-700-1	.PANEL ASSY,D-C 204-075-611-5,-15,-21 U/D PN 205-075-141-5, 205-075-143-6,-9,-15, 205-075-111-5,-11,-21 SEE FIG.255 FOR BREAKDOWN 43-6,-9,-15, 205-075-111-5,-11,-21 SEE FIG. 255 FOR BREAKDOWN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	56	PBOOO	1680-00-181-3382	97499	204-075-700-3	.PANEL ASSY,D-C POWER CONTROL U/O PN 205-075-111-21,-27,-43, -47,& -49 SEE FIG.255 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
253	56	PAOOO	1560-00-867-1236	97499	204-075-813-2	.FRAME ASSY,RH U/O PN 204-075-602,-5,-7, 204-075-610-5, 205-075-111-5, 205-075-143-5,-9,& -15 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
253	57	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
253	58	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
253	59	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
253	60	XDOZZ		97499	20-077-3A28	.BUS BAR U/O PN 205-075-111-5..................UHE,UHH,UHV,UHX	EA	1

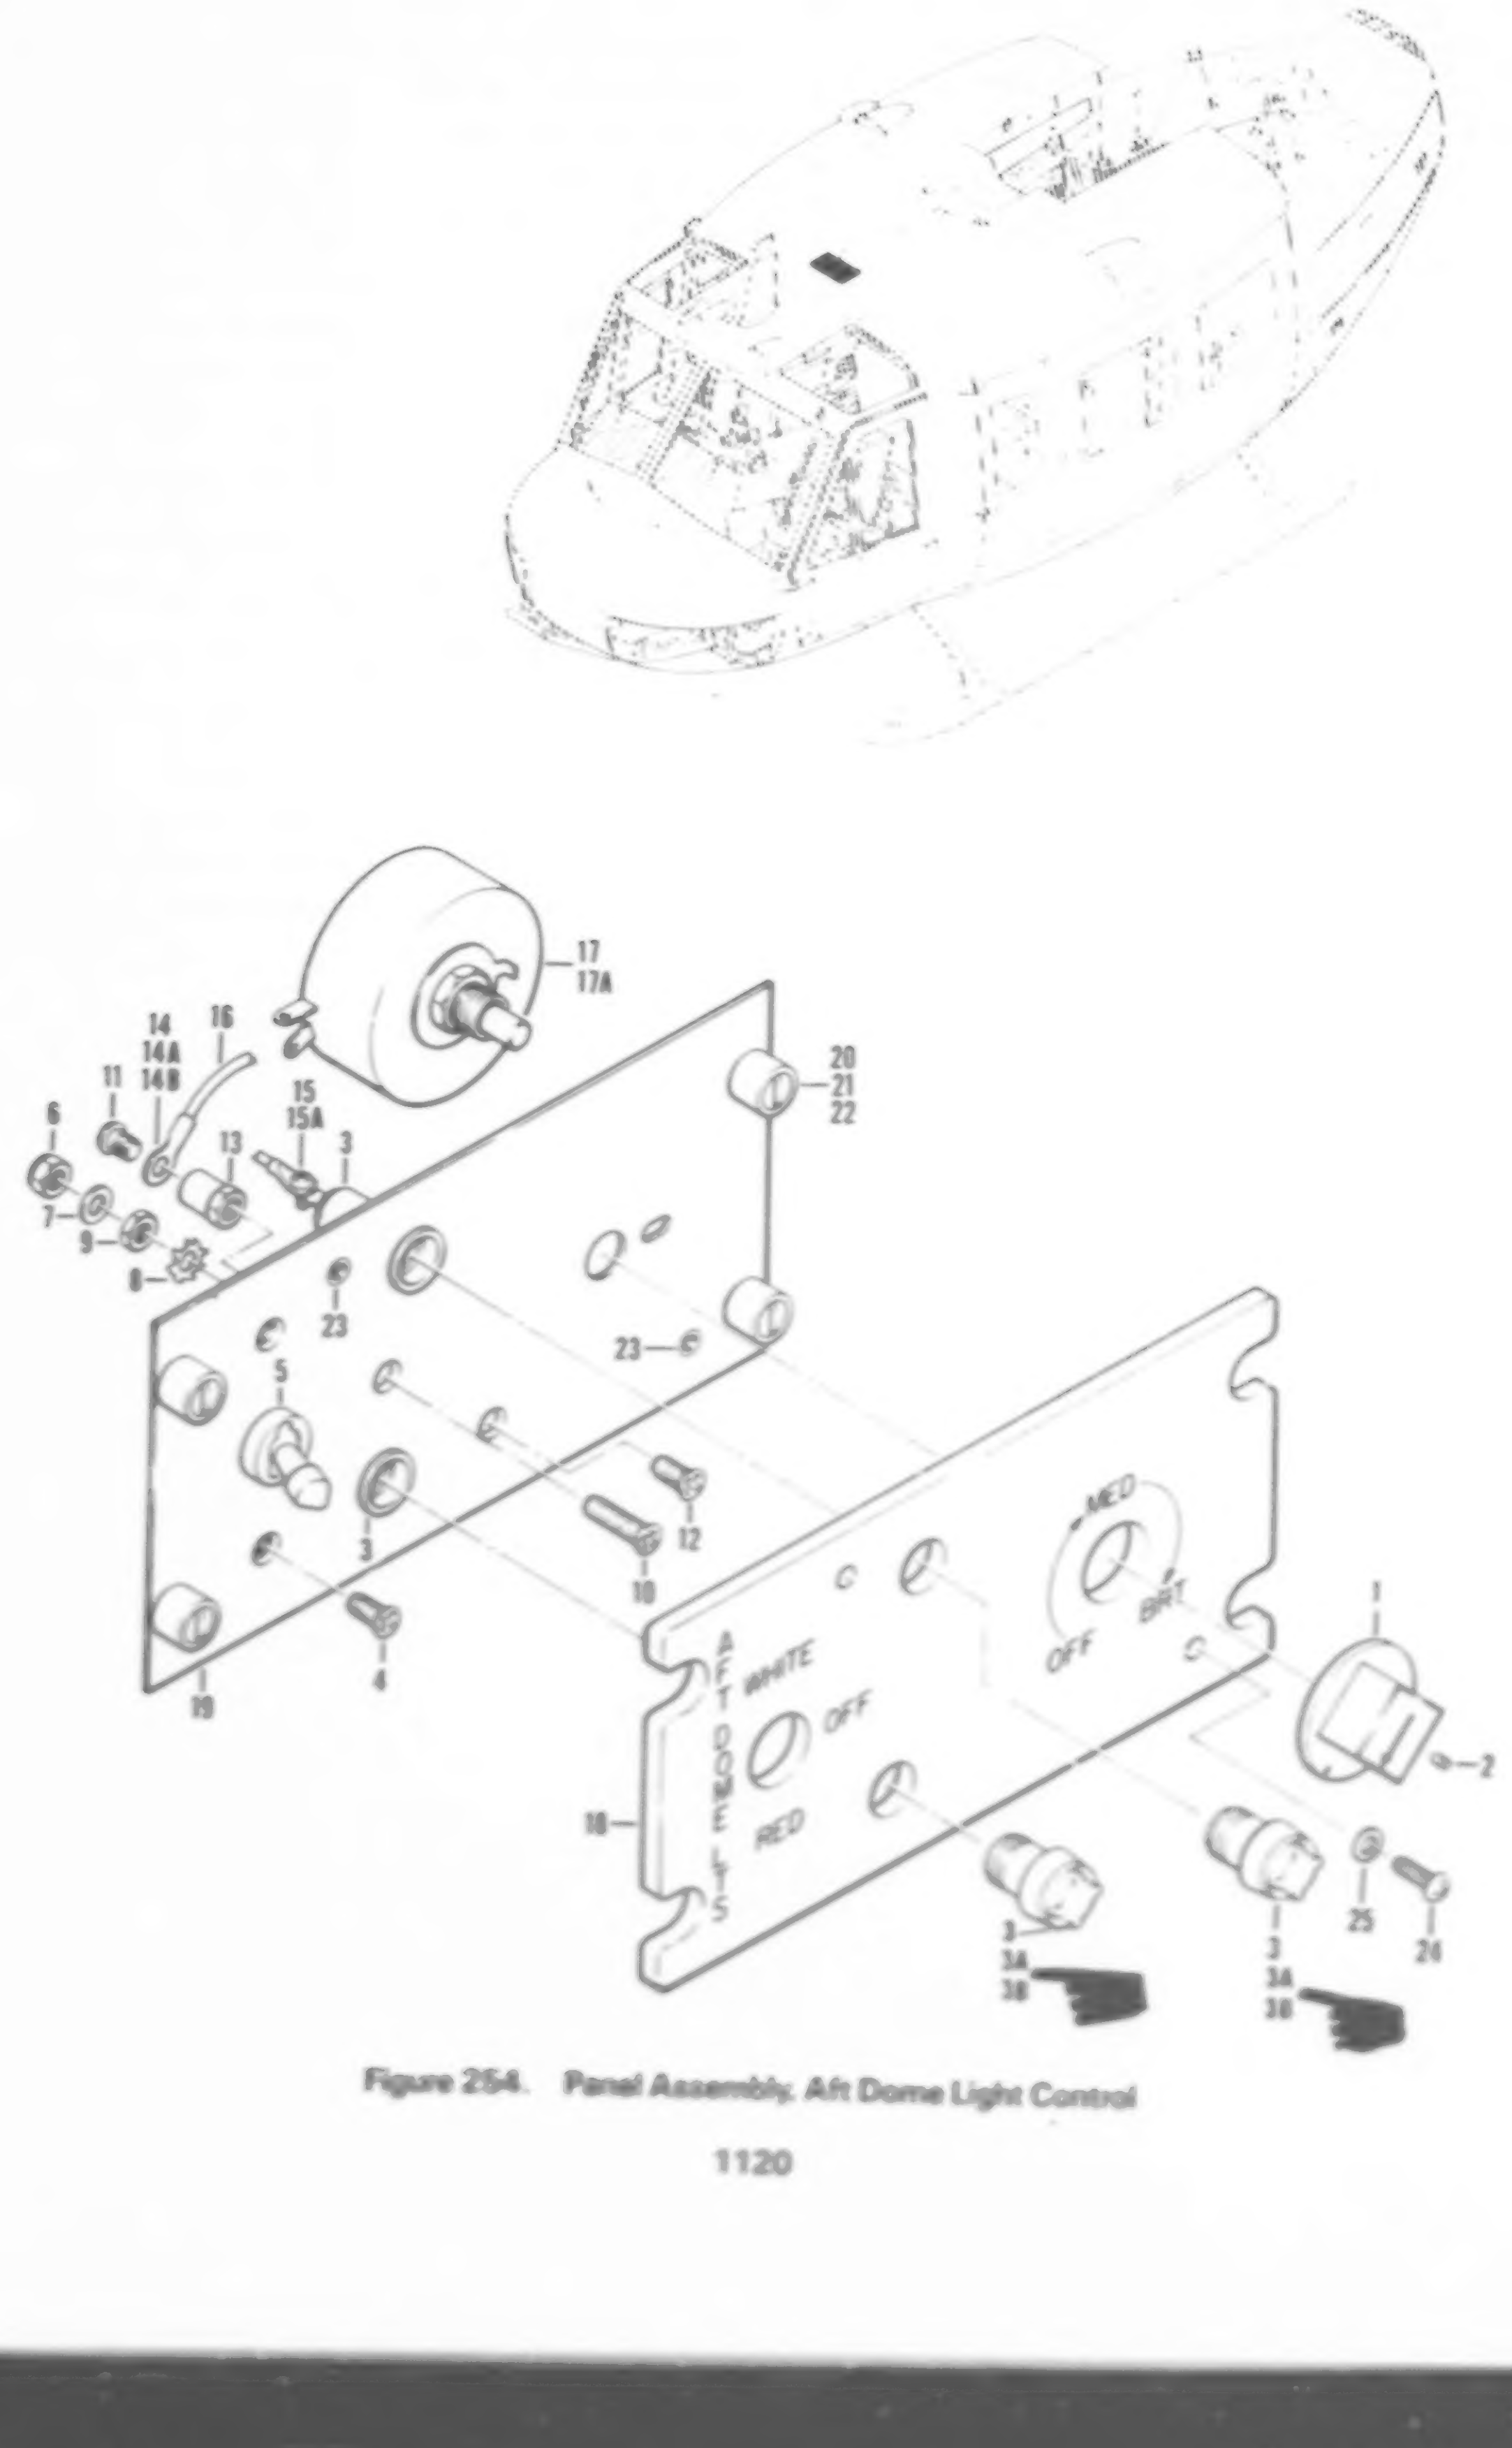
17
17A
14
14A
14B
16
11
15
15A
3
6
13
20
21
22
7
9
8
23
23
5
12
10
3
4
19
18
AFT DOME LTS
WHITE
OFF
RED
MED
OFF
BRT
1
2
3
3A
3B
3
3A
3B
25
24

Figure 254. Panel Assembly, Aft Dome Light Control

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
254		XBOOO	1680-00-133-6837	97499	204-075-225-1	PANEL ASSY,AFT DOME LIGHT CONTROL SEE FIG.225 FOR NHA ....UHB,UHC,UHM	EA	1
254		PAOOO	1560-00-014-9524	97499	205-075-202-1	CONTROL PANEL ASSY SEE FIG.226 FOR NHA........UHE,UHH,UHV,UHX	EA	1
254	1	AOOZZ	1560-00-894-6541	97499	204-075-254-23	.KNOB ASSY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	2	PBOZZ	5305-00-719-5339	96906	MS51963-22	..SETSCREW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	3	AOOOZ	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
254	4	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
254	5	PBOZZ	5930-00-501-4966	27193	8272K3	.SWITCH,TOGGLE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	6	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	7	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	8	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	9	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	10	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	11	PAOZZ	5305-00-984-4983	96906	MS35206-226	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	12	PAOZZ	5305-00-957-7816	96906	MS24693S24	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	13	PAOZZ	5970-00-686-7991	81312	861	.INSULATOR,STANDOFF........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	14	AOOOZ	1560-00-731-8967	97499	204-075-414-7	.CABLE ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	14A	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
254	14B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	15	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
254	15A	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	16	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	2
254	17	PAOZZ	5905-00-708-3660	12697	CM23544	.RHEOSTAT,POWER........UHB,UHC,UHM	EA	1
254	17A	PAOZZ	5905-00-583-5485	81349	M22-05-00102FD	.RESISTOR,VARIABLE........UHE,UHH,UHV,UHX	EA	1
254	18	PAOZZ	1680-00-076-0428	97499	204-075-283-1	.PANEL,LIGHT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	19	XAOOZ		97499	204-075-284-1	.PLATE ASSY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
254	20	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
254	21	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
254	22	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
254	23	PAOZZ	5310-00-489-5009	46384	CL632-2	..NUT,PLAIN,CLINCH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
254	24	PBOZZ	5305-00-206-3716	96906	MS35214-25	..SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
254	25	PAOZZ	5310-00-194-0634	88044	AN961-6	..WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

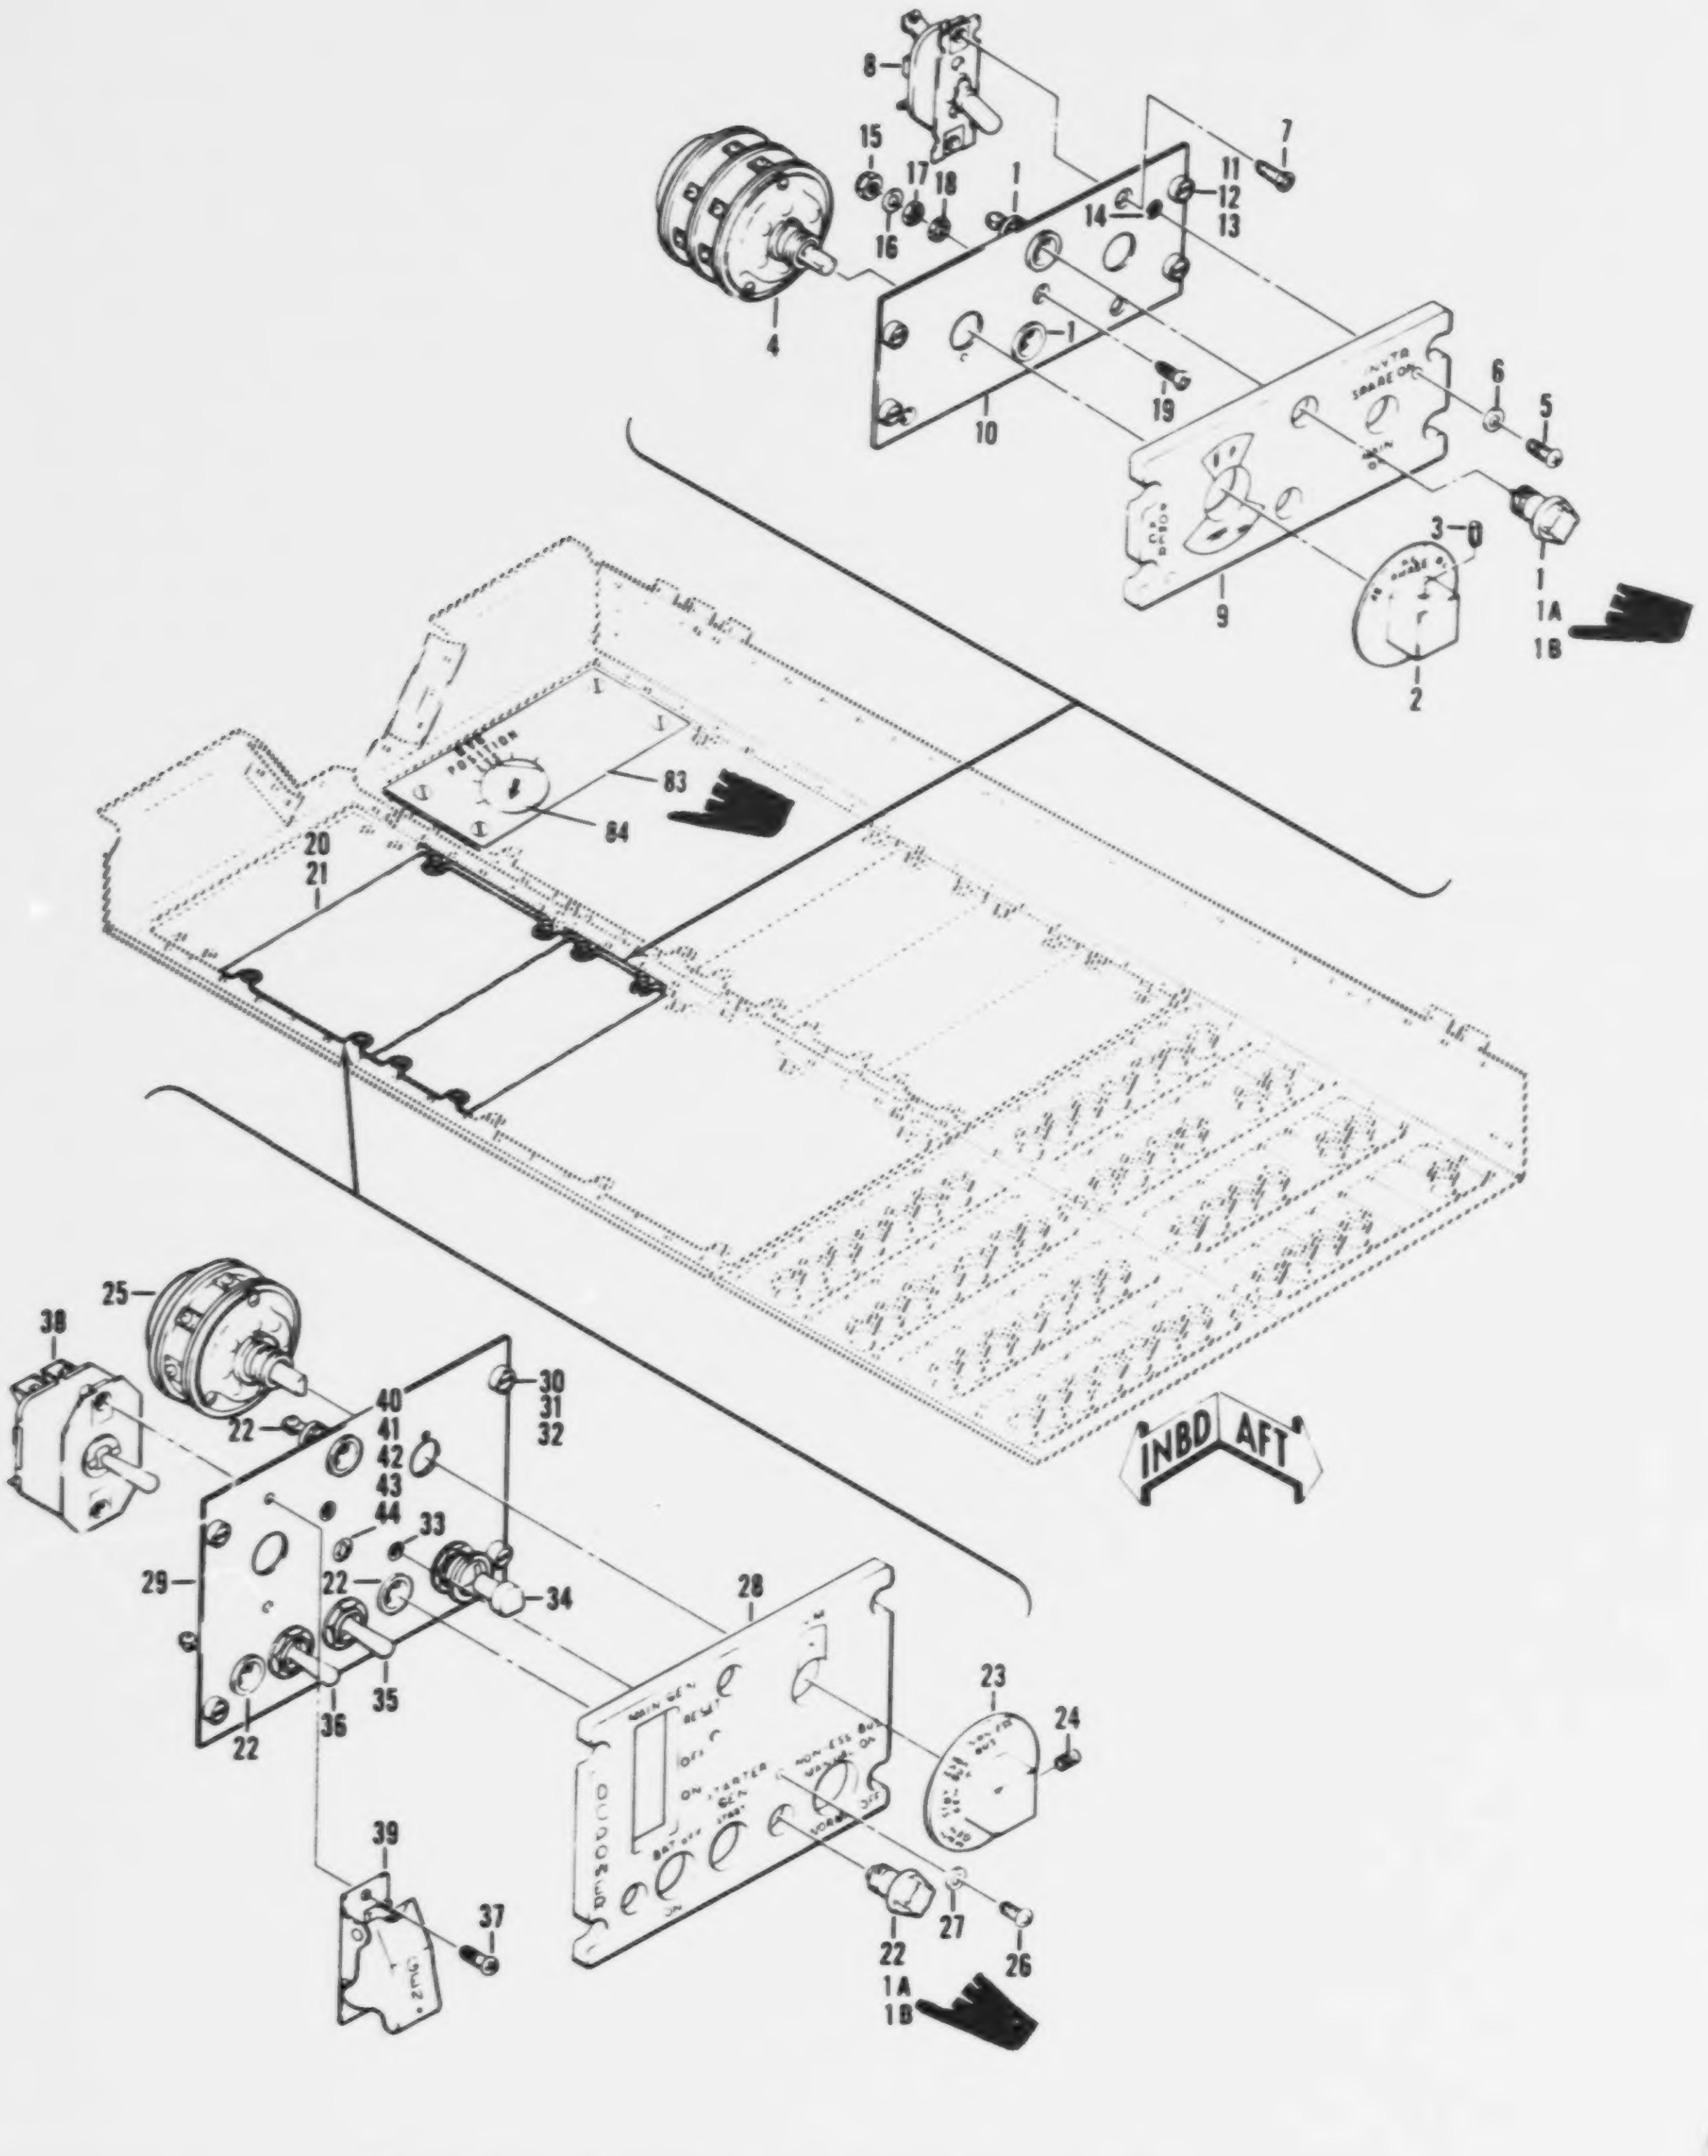
8
15
17
18
1
7
11
12
13
14
16
4
1
19
10
6
5
9
3
1
1A
1B
2
83
84
20
21
25
38
40
41
42
43
44
30
31
32
22
33
29
22
34
28
36
35
22
23
24
39
37
22
27
26
1A
1B
INBD
AFT

Figure 255. Control Panel Assembly, AC and DC Power

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
255		XBOOZ	1680-00-168-6094	97499	204-075-206-1	CONTROL PANEL ASSY, AC POWER SEE FIG.245,246 & 253 FOR NHA ....UHE,UHH,UHM,UHV,UHX	EA	1
255	1	AOOOZ	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL..........UHE,UHH,UHM,UHV,UHX	EA	2
255	1A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	..FILTER,LIGHT,NVG..........UHE,UHH,UHV,UHX	EA	2
255	1B	PAOZZ	6240-00-155-7836	96906	MS25327-327	..LAMP,INCANDESCENT..........UHE,UHH,UHV,UHM,UHX	EA	2
255	2	PAOOO	1560-00-771-2502	97499	204-075-254-7	.KNOB ASSY..........UHE,UHH,UHM,UHV,UHX	EA	1
255	3	PBOZZ	5930-00-503-1700	96906	AN3022-1	..SETSCREW..........UHE,UHH,UHM,UHV,UHX	EA	1
255	4	PAOZZ	5930-00-259-4646	96906	MS25002-2	.SWITCH,ROTARY..........UHE,UHH,UHM,UHV,UHX	EA	1
255	5	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
255	6	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	2
255	7	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
255	8	PAOZZ	5930-00-814-7218	96906	MS25102-21	.SWITCH,TOGGLE..........UHE,UHH,UHM,UHV,UHX	EA	1
255	9	PAOZZ	1680-00-857-1245	97499	204-075-232-3	.PANEL,INDICATING,LI..........UHE,UHH,UHM,UHV,UHX	EA	1
255	10	XAOOZ		97499	204-075-252-1	.MOUNTING PLATE ASSY..........UHE,UHH,UHM,UHV,UHX	EA	1
255	11	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER..........UHE,UHH,UHM,UHV,UHX	EA	4
255	12	XACZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP..........UHE,UHH,UHM,UHV,UHX	EA	4
255	13	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER..........UHE,UHH,UHM,UHV,UHX	EA	4
255	14	PAOZZ	5310-00-489-5009	46384	CL632-2	..NUT,PLAIN,CLINCH..........UHE,UHH,UHM,UHV,UHX	EA	2
255	15	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	1
255	16	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	1
255	17	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	1
255	18	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK..........UHE,UHH,UHM,UHV,UHX	EA	1
255	19	PAOZZ	5306-00-837-3343	96906	MS24693S28	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	1
255	20	PBOOO	1680-00-126-1969	97499	204-075-700-1	PANEL ASSY, DC POWER CONTROL USBL EFF 65-10135 THRU 12895 SEE FIG.245,246,& 253 FOR NHA..........UHE,UHH,UHM,UHV,UHX	EA	1
255	21	PBOOO	1680-00-181-3382	97499	204-075-700-3	PANEL ASSY, DC POWER CONTROL USBL EFF 66-7461 & SUBSEQUENT SEE FIG.245,246 & 253 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
255	22	AOOOZ	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL..........UHE,UHH,UHM,UHV,UHX	EA	3
255	23	PAOOO	1560-00-771-5401	97499	204-075-254-27	.KNOB ASSY,INDICATOR..........UHE,UHH,UHM,UHV,UHX	EA	1
255	24	PBOZZ	5305-00-719-5339	96906	MS51963-22	..SETSCREW..........UHE,UHH,UHM,UHV,UHX	EA	1
255	25	PBOZZ	5930-00-538-5508	96906	MS25002-1	.SWITCH,ROTARY..........UHE,UHH,UHM,UHV,UHX	EA	1
255	26	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
255	27	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	2
255	28	PAOZZ	1680-00-806-4829	97499	204-075-285-1	.PANEL,LIGHT..........UHE,UHH,UHM,UHV,UHX	EA	1
255	29	XAOOZ		97499	204-075-286-1	.PLATE,MOUNTING..........UHE,UHH,UHM,UHV,UHX	EA	1
255	30	XACZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER..........UHE,UHH,UHM,UHV,UHX	EA	4
255	31	XACZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP..........UHE,UHH,UHM,UHV,UHX	EA	4
255	32	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER..........UHE,UHH,UHM,UHV,UHX	EA	4
255	33	PAOZZ	1680-01-230-0533	46384	CL632-2	..NUT,PLAIN,CLINCH..........UHE,UHH,UHM,UHV,UHX	EA	2
255	34	PBOZZ	5930-00-615-8412	96906	MS25125-C3	.SWITCH,TOGGLE..........UHE,UHH,UHM,UHV,UHX	EA	1
255	35	PBOZA	5930-00-655-1582	96906	MS35059-23	.SWITCH,TOGGLE..........UHE,UHH,UHM,UHV,UHX	EA	1
255	36	PBOZA	5930-00-655-1615	96906	MS35058-23	.SWITCH,TOGGLE U/W PN 204-075-700-1......UHE,UHH,UHM,UHV,UHX	EA	1
255	36	PAOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE U/W PN 204-075-700-3..........UHE,UHH,UHX	EA	1
255	37	PBOZZ	5305-00-206-3716	95906	MS35214-25	.SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
255	38	PBOZZ	5930-00-655-1512	96906	MS25103-31	.SWITCH,TOGGLE..........UHE,UHH,UHM,UHV,UHX	EA	1

best copy available

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
255	39	PAOZZ	1560-00-732-1893	97499	204-075-207-3	.GUARD,PANEL ASSY	UHE,UHH,UHM,UHY,UHX	EA	1
255	40	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON	UHE,UHH,UHM,UHY,UHX	EA	1
255	41	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT	UHE,UHH,UHM,UHY,UHX	EA	1
255	42	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON	UHE,UHH,UHM,UHY,UHX	EA	1
255	43	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHE,UHH,UHM,UHY,UHX	EA	1
255	44	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE	UHE,UHH,UHM,UHY,UHX	EA	1
255		AOOOO		20309	ES-C-221501	SWITCH ASSY MISSION SEE FIG.246B FOR NHA	UHX	EA	1
255	45	PAOZZ	5305-00-206-1288	96906	MS35214-27	.SCREW,MACHINE	UHX	EA	4
255	46	PAOZZ	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL	UHX	EA	2
255	47	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP,INCANDESCENT	UHX	EA	2
255	48	PBOOO	1680-01-154-3121	20309	ES-C-221502	.PANEL,INDICATING,LI	UHX	EA	1
255	49	PAOZZ	5325-00-817-0610	96906	MS25381-1	..GROMMET,METALLIC	UHX	EA	4
255	50	PBOOO	1680-01-150-3085	20309	ES-C-221503	.PANEL ASSEMBLY	UHX	EA	1
255	51	PBOZZ	5325-00-886-3733	97499	50-018-1	..STUD ASSEMBLY,TURNL	UHX	EA	4
255	52	PAOZZ	5310-00-763-7885	96906	MS21074L06	..NUT,SELF-LOCKING,PL	UHX	EA	4
255	53	PAOZZ	5310-00-777-5785	96906	MS21059L06	..NUT,SELF-LOCKING,PL	UHX	EA	2
255	54	PAOZZ	5305-00-638-0502	96906	MS35214-28	.SCREW,MACHINE	UHX	EA	2
255	55	PAOZZ	5310-00-436-7144	88044	AN960XC6	.WASHER,FLAT	UHX	EA	6
255	56	PAOZZ	5930-00-250-5852	96906	MS25214-1	.GUARD,SWITCH	UHX	EA	1
255	57	PAOZZ	5930-00-683-1628	96906	MS24523-22	.SWITCH,TOGGLE	UHX	EA	1
255	58	PAOZZ	5310-00-982-6813	96906	MS21044C06	.NUT,SELF-LOCKING,HE	UHX	EA	1
255	59	PAOZZ	5310-00-983-8483	96906	MS27183-5	.WASHER,FLAT	UHX	EA	2
255	60	PAOZZ	5310-00-934-9761	96906	MS35649-264	.NUT,PLAIN,HEXAGON	UHX	EA	1
255	61	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK	UHX	EA	1
255	62	PAOZZ	5305-00-808-7832	96906	MS24693S29	.SCREW,MACHINE	UHX	EA	1
255	63	AOOOO		20309	ES-B-221504	.CABLE ASSY,SPECIAL	UHX	EA	1
255		AOOOO		20309	ES-D-221441	PANEL ASSY,AC POWER SEE FIG.246B FOR NHA	UHX	EA	1
255	64	PBOOO	1680-01-150-3086	20309	ES-D-221442	.PANEL ASSEMBLY	UHX	EA	1
255	65	PAOZZ	5310-00-763-7885	96906	MS21074L06	..NUT,SELF-LOCKING,PL	UHX	EA	3
255	66	PBOZZ	5325-00-886-3733	97499	50-018-1	..STUD ASSEMBLY,TURNL	UHX	EA	4
255	67	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE	UHX	EA	3
255	68	PBOOO	1680-01-150-3115	20309	ES-D-221443	.PANEL,INDICATING,LI	UHX	EA	1
255	69	PAOZZ	5325-00-817-0610	96906	MS25381-1	..GROMMET,METALLIC	UHX	EA	3
255	70	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE	UHX	EA	1
255	71	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHX	EA	1
255	72	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON	UHX	EA	1
255	73	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT	UHX	EA	1
255	74	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE	UHX	EA	1
255	75	MFOZZ		20309	ES-B-221427	.KNOB ASSY INDICATOR	UHX	EA	1
255	76	PAOZZ	5930-00-259-4646	96906	MS25002-2	.SWITCH,ROTARY	UHX	EA	1
255	77	PAOZZ	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL	UHX	EA	2
255	78	PAOZZ	6240-00-155-7836	96906	MS25237-327	.LAMP,INCANDESCENT	UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
255	79	PAOZZ	5930-00-617-9718	96906	MS25224-3	.GUARD,SWITCH.......................................UHX	EA	1
255	80	PAOZZ	5930-00-655-4247	96906	MS24524-22	.SWITCH,TOGGLE.......................................UHX	EA	1
255	81	PAOZZ	5306-00-958-2918	96906	MS24693C25	.SCREW,MACHINE.......................................UHX	EA	2
255	82	PAOZZ	5930-00-814-7218	96906	MS25102-21	.SWITCH,TOGGLE.......................................UHX	EA	1
255	83	PAOZZ	1680-01-230-0534	81996	EGD-0936-1	PANEL,NVG POSITION LIGHTS.......... UHE,UHH,UHV,UHX	EA	1
255	84	PAOZZ	5930-00-538-5508	96906	MS25002-1	SWITCH ROTARY.......... UHE,UHH,UHV,UHX	EA	1

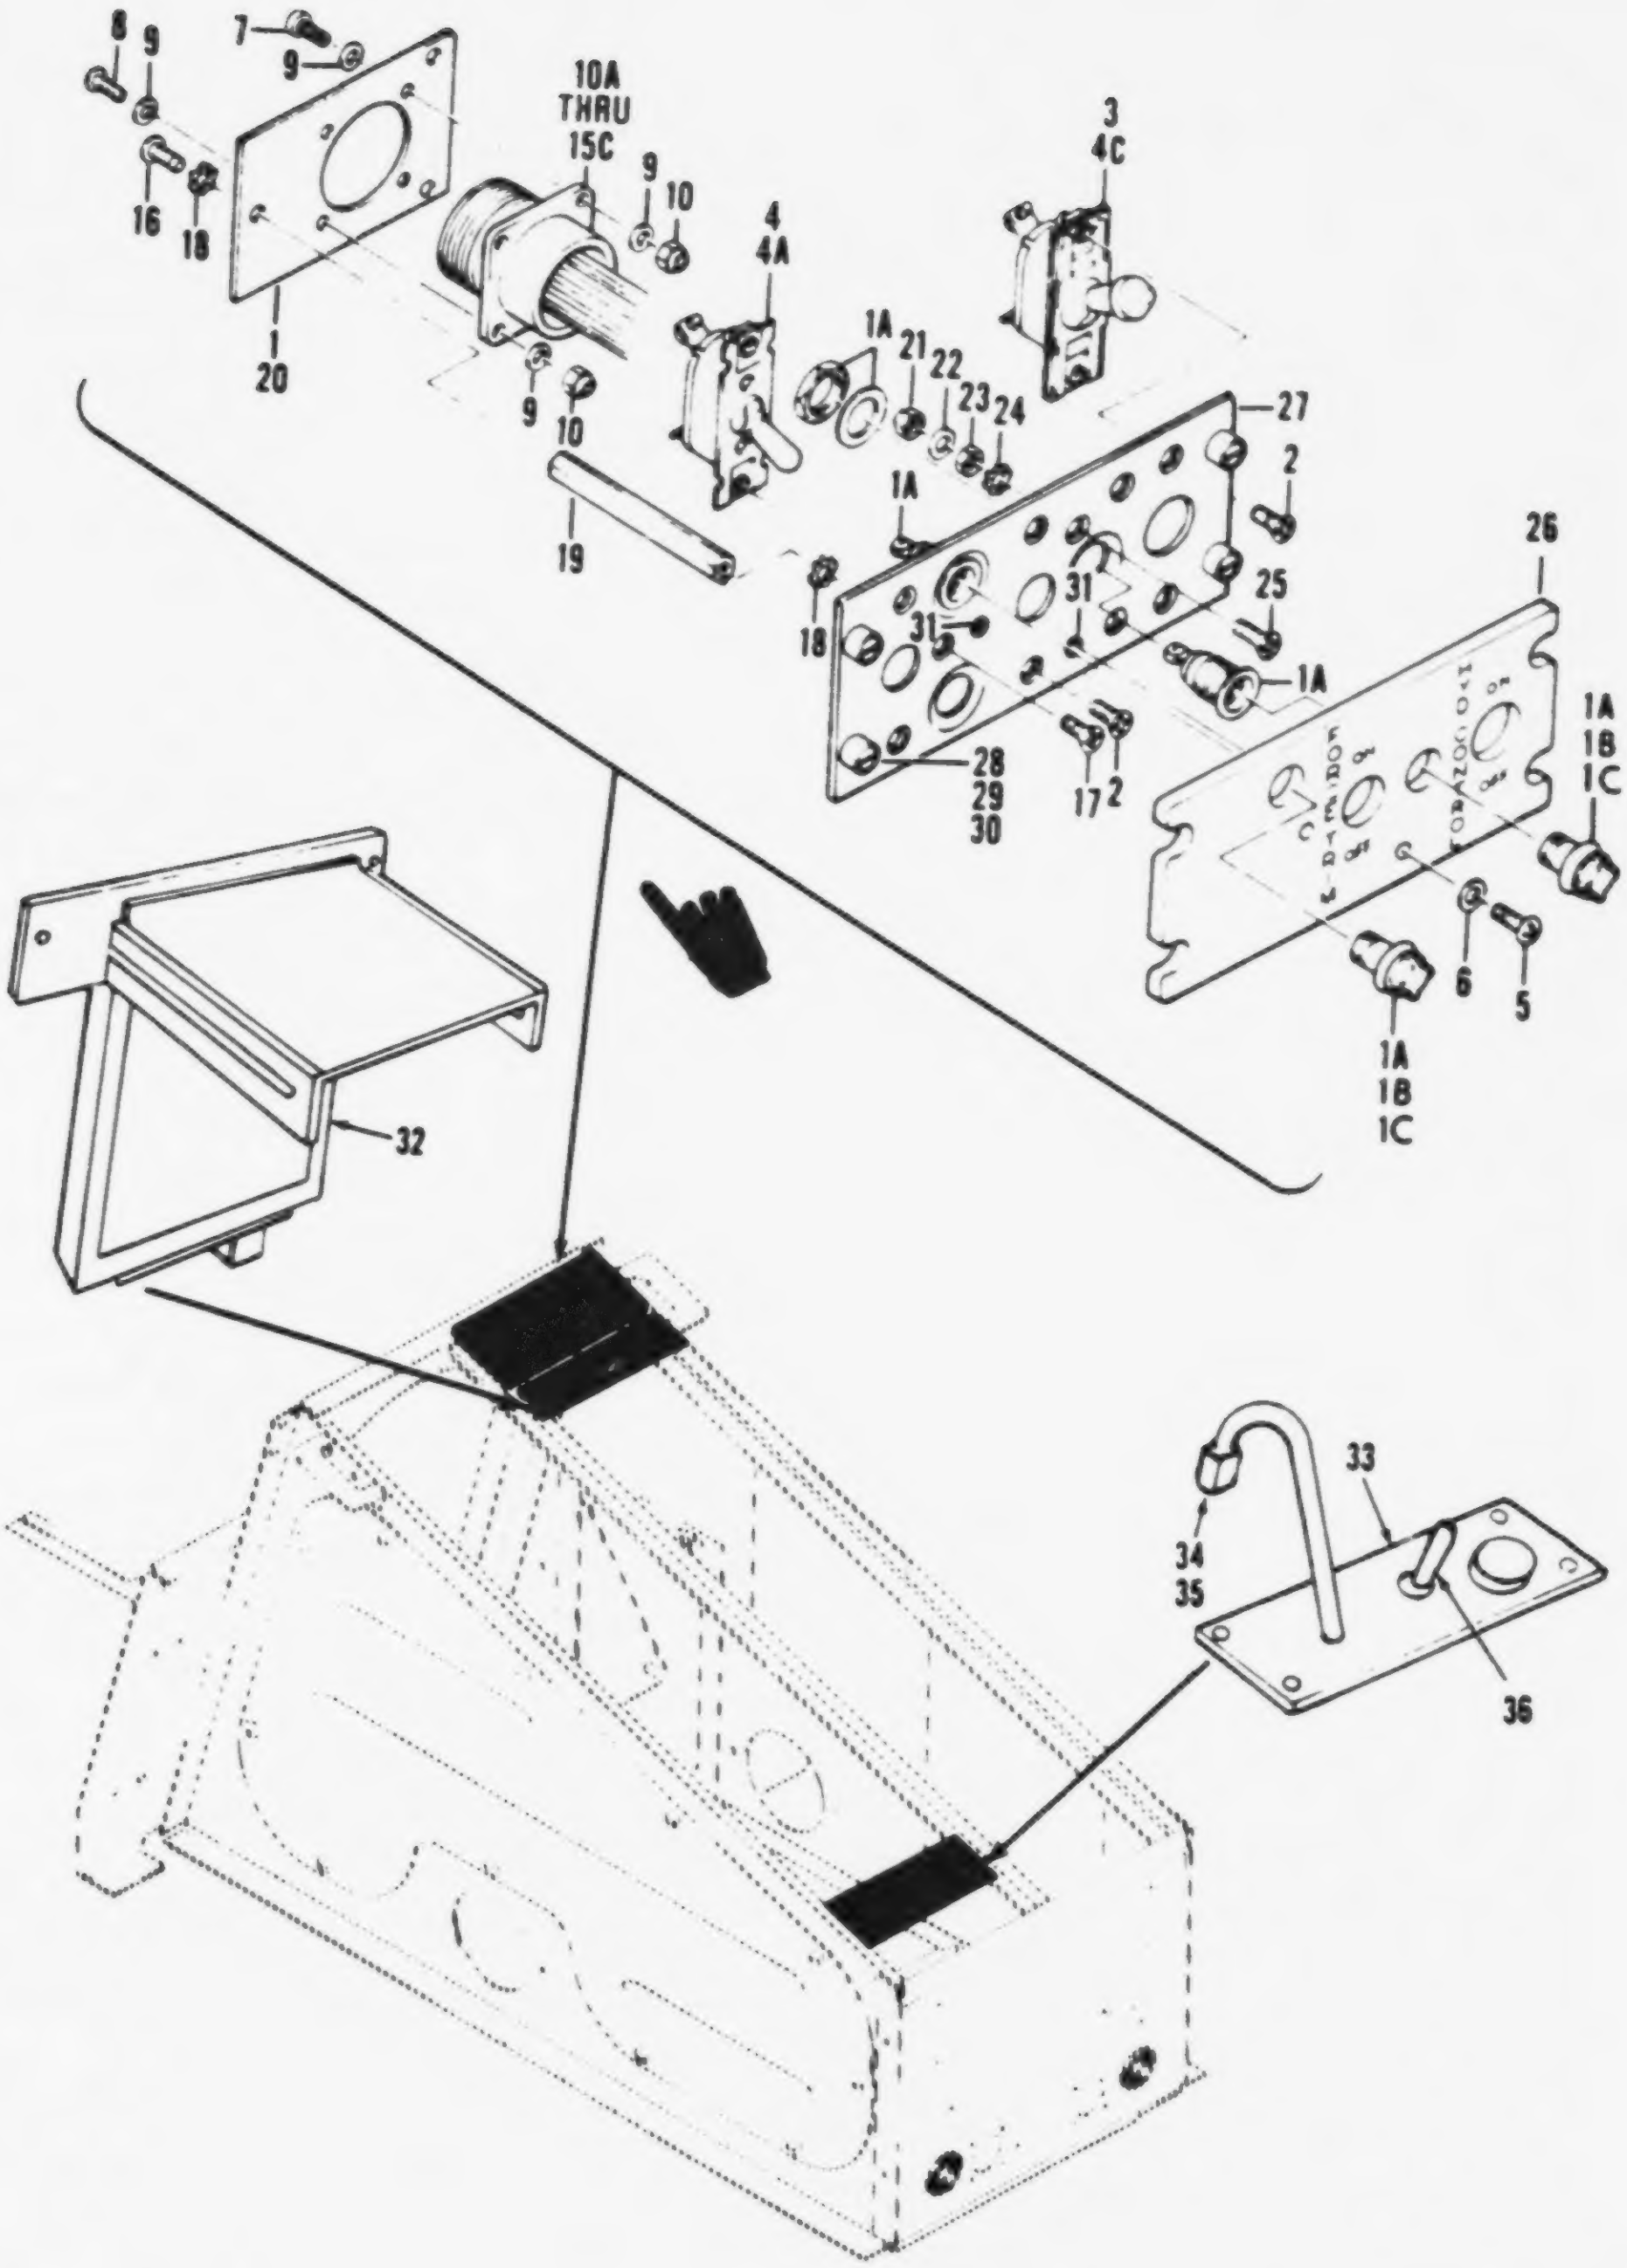
8
9
7
9
10A
THRU
15C
9
10
16
18
20
9
10
4
4A
3
4C
1A
21
22
23
24
27
2
1A
19
31
31
18
25
1A
26
28
29
30
17
2
1A
1B
1C
6
5
1A
1B
1C
32
33
34
35
36

Figure 256. Panel Assembly, Hydraulic Boost Control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
256		PA000	1680-00-179-6009	97499	205-075-210-7	PANEL ASSY, HYDRAULIC CONTROL USBL EFF 66-746 THRU 67-17312 & 69-15292 & SUBSEQUENT SEE FIG.226 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
256		PA000	1680-00-168-5672	97499	204-075-827-3	PANEL ASSY, HYDRAULIC CONTROL USBL EFF 67-17313 THRU 69-15291 SEE FIG.226 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
256	1	MFOZZ	DELETED	97499	205-075-237-5	.PLATE,PANEL ASSY U/O PN 205-075-210-7 .... UHE,UHH,UHV,UHX	EA	1
256	1A	AOOOZ	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL .... UHE,UHH,UHM,UHV,UHX	EA	2
256	1B	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	FILTER, LIGHT, NVG .... UHE,UHH,UHV,UHX	EA	2
256	1C	PAOZZ	6240-00-155-7836	96906	MS25237-327	LAMP, INCANDESCENT .... UHE,UHH,UHM,UHV,UHX	EA	2
256	2	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	4
256	3	XDOZZ		97499	90-045-5	GUARD,SWITCH .... UHE,UHH,UHV,UHX	EA	1
256	4	PB000	5930-00-687-1097	96906	MS25102-22	SWITCH,TOGGLE .... UHE,UHH,UHM,UHV,UHX	EA	1
256	4A	PAOZZ	5930-00-892-8962	96906	MS24319-2	..BOOT,DUST AND MOIST .... UHE,UHH,UHM,UHV,UHX	EA	1
256	4C	PBOZZ	5930-00-044-3518	96906	MS25201-6	.SWITCH,TOGGLE .... UHE,UHH,UHM,UHV,UHX	EA	1
256	5	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	2
256	6	PAOZZ	5310-00-194-0534	88044	AN961-6	.WASHER,FLAT .... UHE,UHH,UHM,UHV,UHX	EA	2
256	7	PAOZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	1
256	8	PBOZZ	5305-00-889-2997	96906	MS35206-245	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	3
256	9	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT .... UHE,UHH,UHM,UHV,UHX	EA	8
256	10	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING, HEXAGON ...... UHE,UHH,UHM,UHV,UHX	EA	4
256	10A	AOOOZ	1560-00-871-8664	97499	204-075-410-9	.CABLE ASSEMBLY U/O PN 204-075-561-1 .... UHM	EA	1
256	10A	AO000		97499	204-175-428-7	.CABLE ASSEMBLY U/O PN 204-075-827-3 .... UHE,UHH,UHV,UHX	EA	1
256	10A	AOOOZ	6150-00-955-9404	97499	205-075-438-3	.CABLE ASSEMBLY U/O PN 205-075-210-7 .... UHE,UHH,UHV,UHX	EA	1
256	11	PBOZZ	5935-00-902-6863	96906	MS3103-20-27P	..CONNECTOR,RECEPTACL ELECTRICAL .... UHM	EA	1
256	12	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG .... UHE,UHH,UHM,UHV,UHX	EA	V
256	13	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG .... UHE,UHH,UHM,UHV,UHX	EA	5
256	14	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG .... UHE,UHH,UHM,UHV,UHX	EA	4
256	15	XDOZZ		97499	85T4-7-2	..INSULATION TUBE .... UHE,UHH,UHM,UHV,UHX	FT	6
256	15A	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-175-428-7 .... UHE,UHH,UHV,UHX	FT	9
256	15B	PBOZZ	6145-00-578-6606	81349	M5086/2-1[illegible]-9	..WIRE,ELECTRICAL .... UHE,UHH,UHM,UHV,UHX	FT	V
256	15C	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL .... UHE,UHH,UHM,UHV,UHX	FT	V
256	16	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	3
256	17	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	3
256	18	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK .... UHE,UHH,UHM,UHV,UHX	EA	6
256	19	XDOZZ	5340-00-896-6246	97499	204-075-242-3	.POST,ELECTRICAL- MECHANICAL .... UHE,UHH,UHM,UHV,UHX	EA	3
256	20	MFOZZ	1560-00-732-1695	97499	204-075-243-1	.PLATE,PANEL ASSY U/O PN 204-075-827-3 .... UHE,UHH,UHM,UHV,UHX	EA	1
256	21	PAOZZ	5310-00-357-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE .... UHE,UHH,UHM,UHV,UHX	EA	1
256	22	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT .... UHE,UHH,UHM,UHV,UHX	EA	1
256	23	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHM,UHV,UHX	EA	1
256	24	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK .... UHE,UHH,UHM,UHV,UHX	EA	1
256	25	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE .... UHE,UHH,UHM,UHV,UHX	EA	1
256	26	PBOZZ	1680-00-866-6846	97499	204-075-280-3	.PANEL,LIGHT U/O PN 204-075-222-1 .... UHE,UHH,UHV,UHX	EA	1
256	26	XBOZZ	1680-00-922-8253	97499	204-075-562-1	.PANEL,LIGHT U/O PN 204-075-561-1 .... UHM	EA	1
256	26	XBOZZ		97499	204-075-848-3	.PANEL,LIGHT U/O PN 204-075-827-3 .... UHE,UHH,UHV,UHX	EA	1
256	26	XBOZZ	1680-00-131-4307	97499	205-075-238-1	.PANEL,LIGHT U/O PN 205-075-210-7 .... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
256	26	PBOZZ	1680-00-915-5927	97499	205-075-146-1	.PANEL,LIGHT U/O PN 205-075-207-1............UHE,UHH,UHV,UHX	EA	1
256	27	XA000		97499	204-075-563-9	.PLATE ASSEMBLY U/O PN 204-075-827-3.........UHE,UHH,UHV,UHX	EA	1
256	28	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER..... UHE,UHH,UHM,UHV,UHX	EA	4
256	29	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP............ UHE,UHH,UHM,UHV,UHX	EA	4
256	30	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER........ UHE,UHH,UHM,UHV,UHX	EA	4
256	31	PAOZZ	5310-00-489-5009	46384	CL632-2	..NUT,PLAIN,CLINCH................ UHE,UHH,UHM,UHV,UHX	EA	2
256	32	PAOZZ	1680-01-230-0532	81996	EGD-09455-1	.FILTER, SLIDE, NVG................................ UHE UHH,UHV,UHX	EA	1
256	33	PAOOO		81996	EGD-0935-1	.LIGHT, UTILITY, NVG......................................UHH,UHV	EA	1
256	34	PAOZZ	1680-01-129-5416	81996	6210-EG-002-10	..LENS, FILTER ....UHH,UHV	EA	1
256	35	PAOZZ	6240-00-155-8714	96906	MS25231-313	..LAMP, INCANDESCENT ....UHH,UHV	EA	1
256	36	PAOZZ	5930-00-847-2599	96906	MS24660-23	..SWITCH..UHH,UHV	EA	1

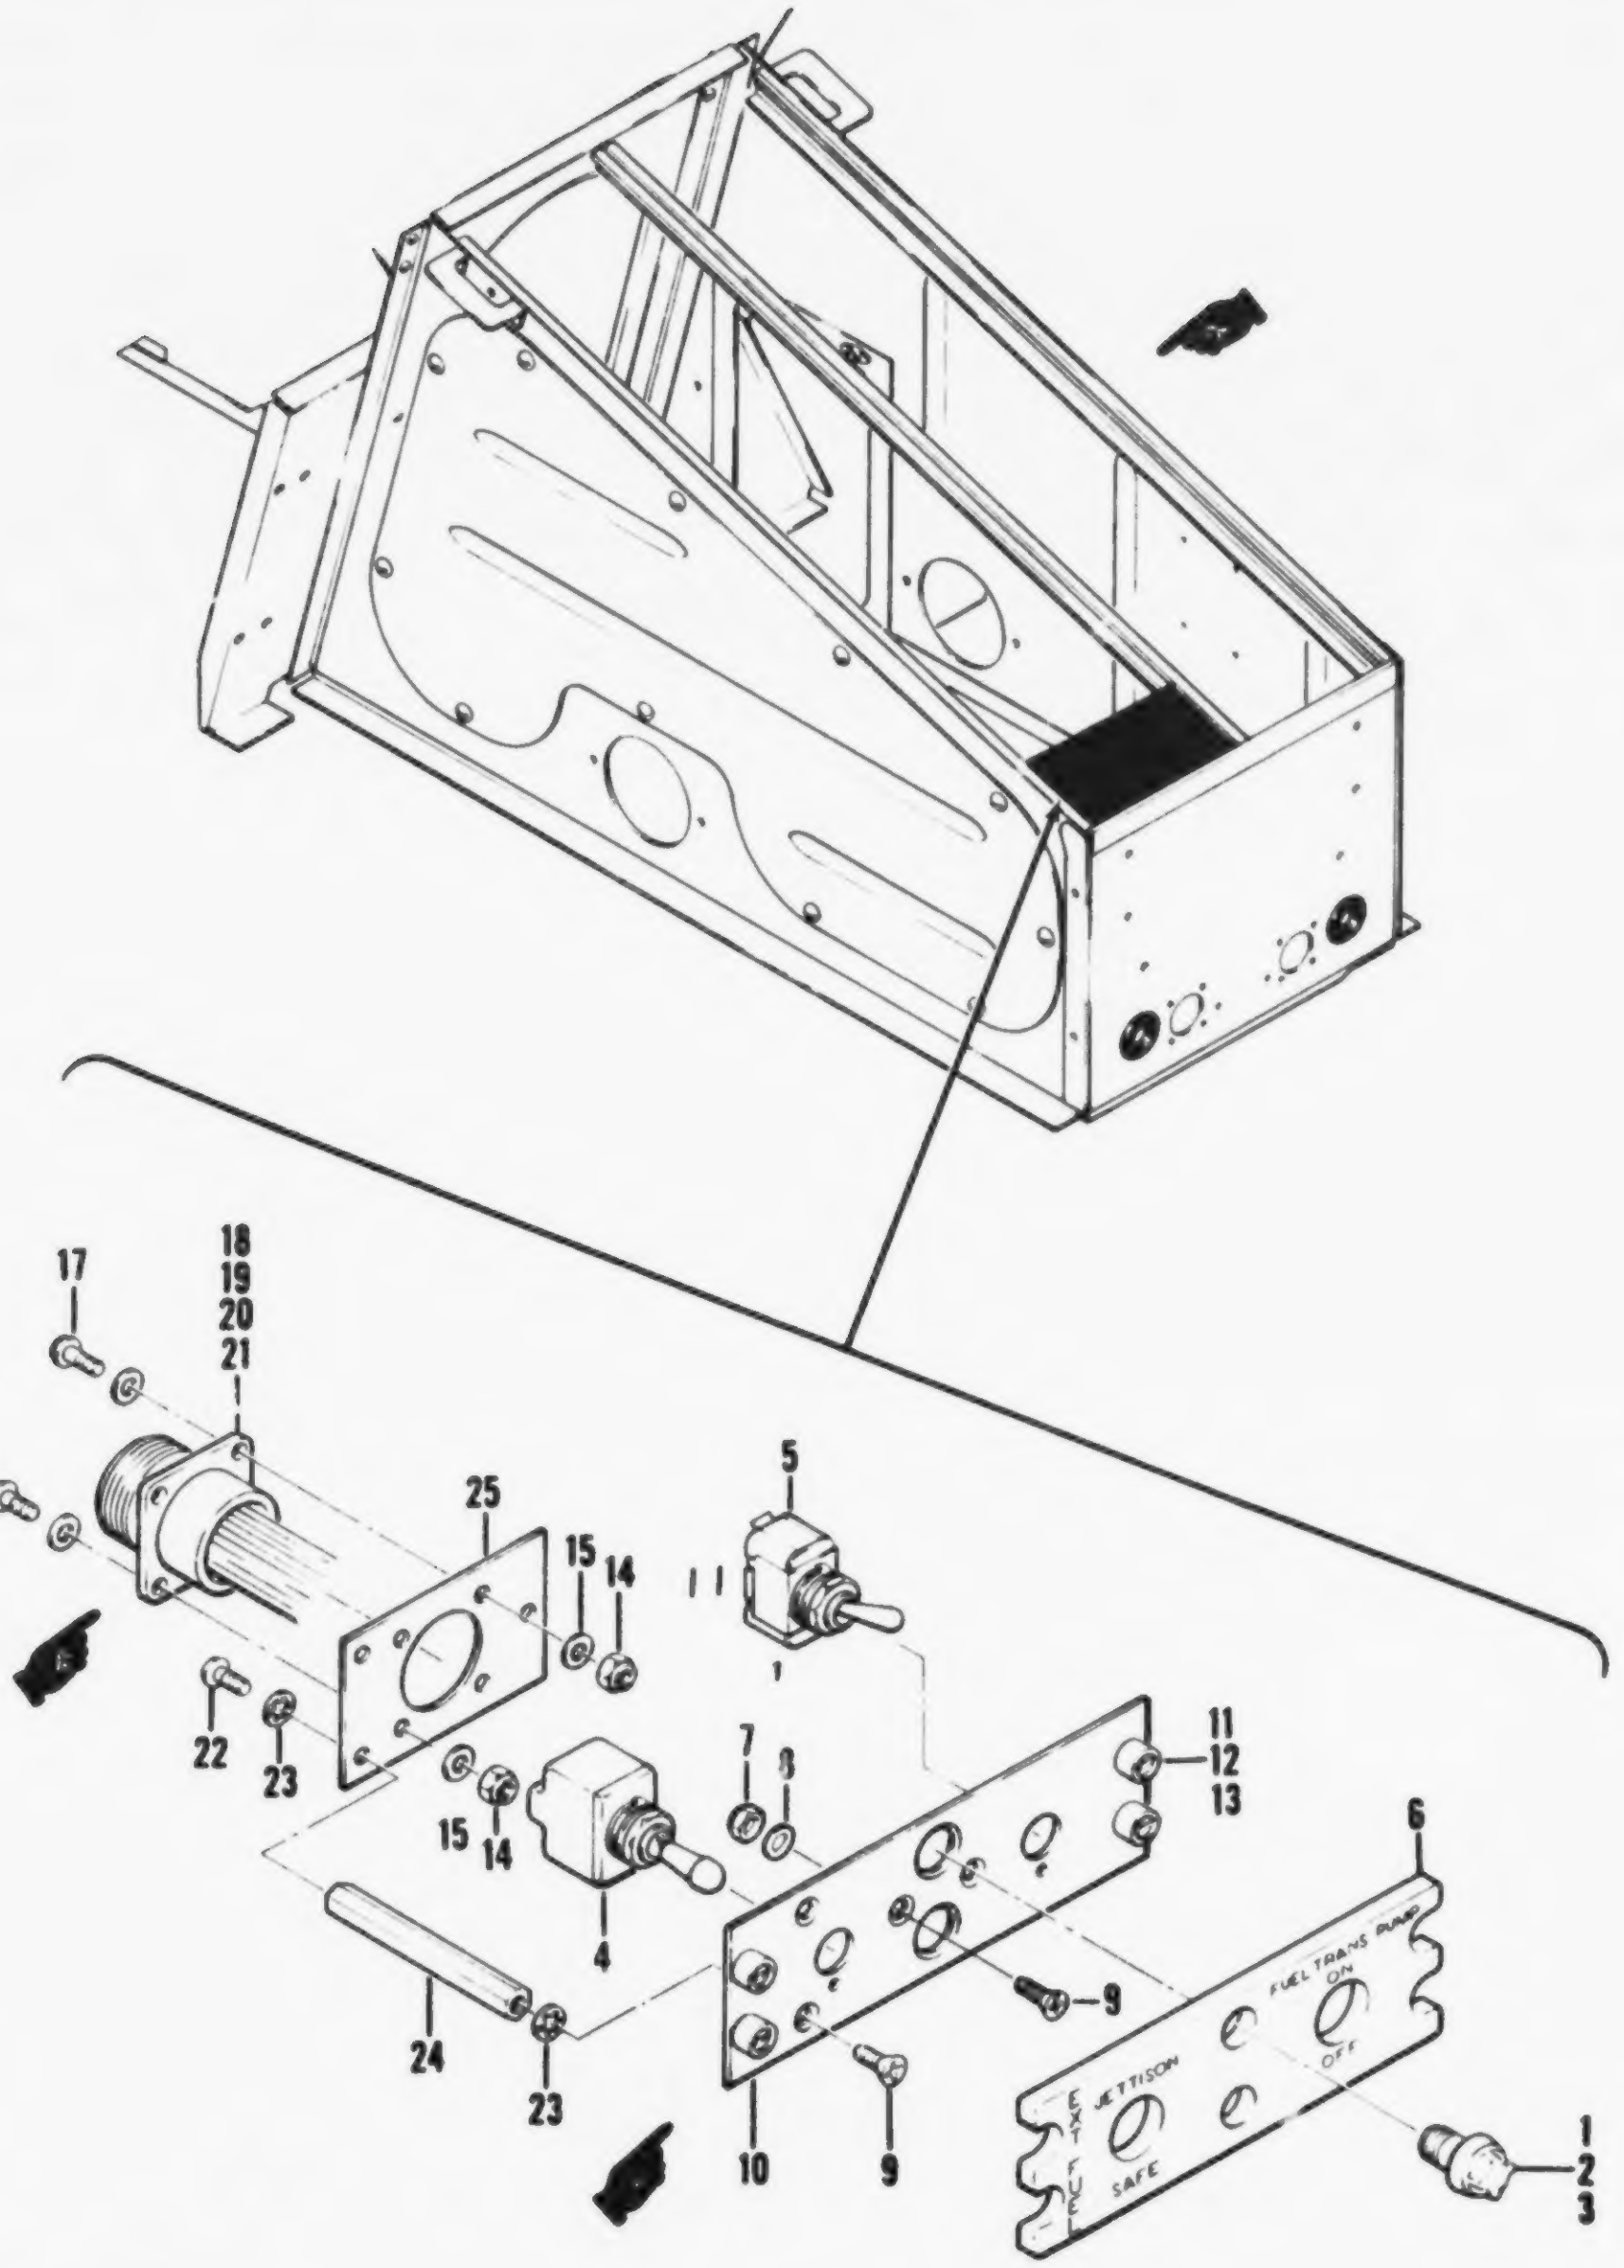
17
18
19
20
21
16
25
15
14
5
22
23
11
12
13
7
8
15
14
4
6
FUEL TRANS PUMP
ON
OFF
JETTISON
SAFE
EXT FUEL
9
24
23
10
9
1
2
3

Figure 257. Control Panel Assembly, External Fuel

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
[illegible]	(B) ITEM NO.							
257		XBOOZ	1560-00-867-1239	97499	204-075-809-1	CONTROL PANEL,ASSY EXTERNAL FUEL SEE FIG.342 FOR NHA ....UHB,UHC,UHM	EA	1
`	1	XDOOZ		96906	MS25010B11A327	.LIGHT,PANEL..........UHB,UHC,UHM	EA	2
/	2	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT..........UHB,UHC,UHM	EA	1
257	3	AOOOZ	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL..........UHB,UHC,UHM	EA	1
257	4	PAOZZ	5930-00-961-7984	96906	MS24658-23G	.SWITCH,TOGGLE..........UHB,UHC,UHM	EA	1
257	5	PBOZZ	5930-00-655-1514	96906	MS35058-22	.SWITCH,TOGGLE..........UHB,UHC,UHM	EA	1
257	6	XBOZZ		97499	204-075-792-1	.PANEL..........UHB,UHC,UHM	EA	1
257	7	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHB,UHC,UHM	EA	1
257	8	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT..........UHB,UHC,UHM	EA	1
257	9	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE..........UHB,UHC,UHM	EA	4
257	10	XAOOZ		97499	204-075-791-1	.PLATE ASSY..........UHB,UHC,UHM	EA	1
257	11	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER..........UHB,UHC,UHM	EA	4
257	12	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP..........UHB,UHC,UHM	EA	4
257	13	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER..........UHB,UHC,UHM	EA	4
257	14	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHB,UHC,UHM	EA	4
257	15	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
257	16	PAOZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
257	17	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE..........UHB,UHC,UHM	EA	3
257	18	AOOOZ	1560-00-018-0103	97499	204-075-929-9	.WIRING ASSEMBLY..........UHB,UHC,UHM	EA	1
57	19	PAOOO	5935-00-721-0490	96906	MS3102R18-1P	..CONNECTOR RECEPTAC..........UHB,UHC,UHM	EA	1
/	20	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHB,UHC,UHM	EA	1
257	21	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG..........UHB,UHC,UHM	EA	1
257	22	PAOZZ	[illegible]5-00-984-4988	96906	MS35206-228	.SCREW,MACHINE..........UHB,UHC,UHM	EA	3
257	23	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK..........UHB,UHC,UHM	EA	6
257	24	XDOZZ	5340-00-896-6246	97499	204-075-242-3	.POST,ELECTRICAL-..........UHB,UHC,UHM	EA	3
257	25	MFOZZ	1560-00-018-0100	97499	204-075-793-1	.BRACKET,RECEPTACLE..........UHB,UHC,UHM	EA	1

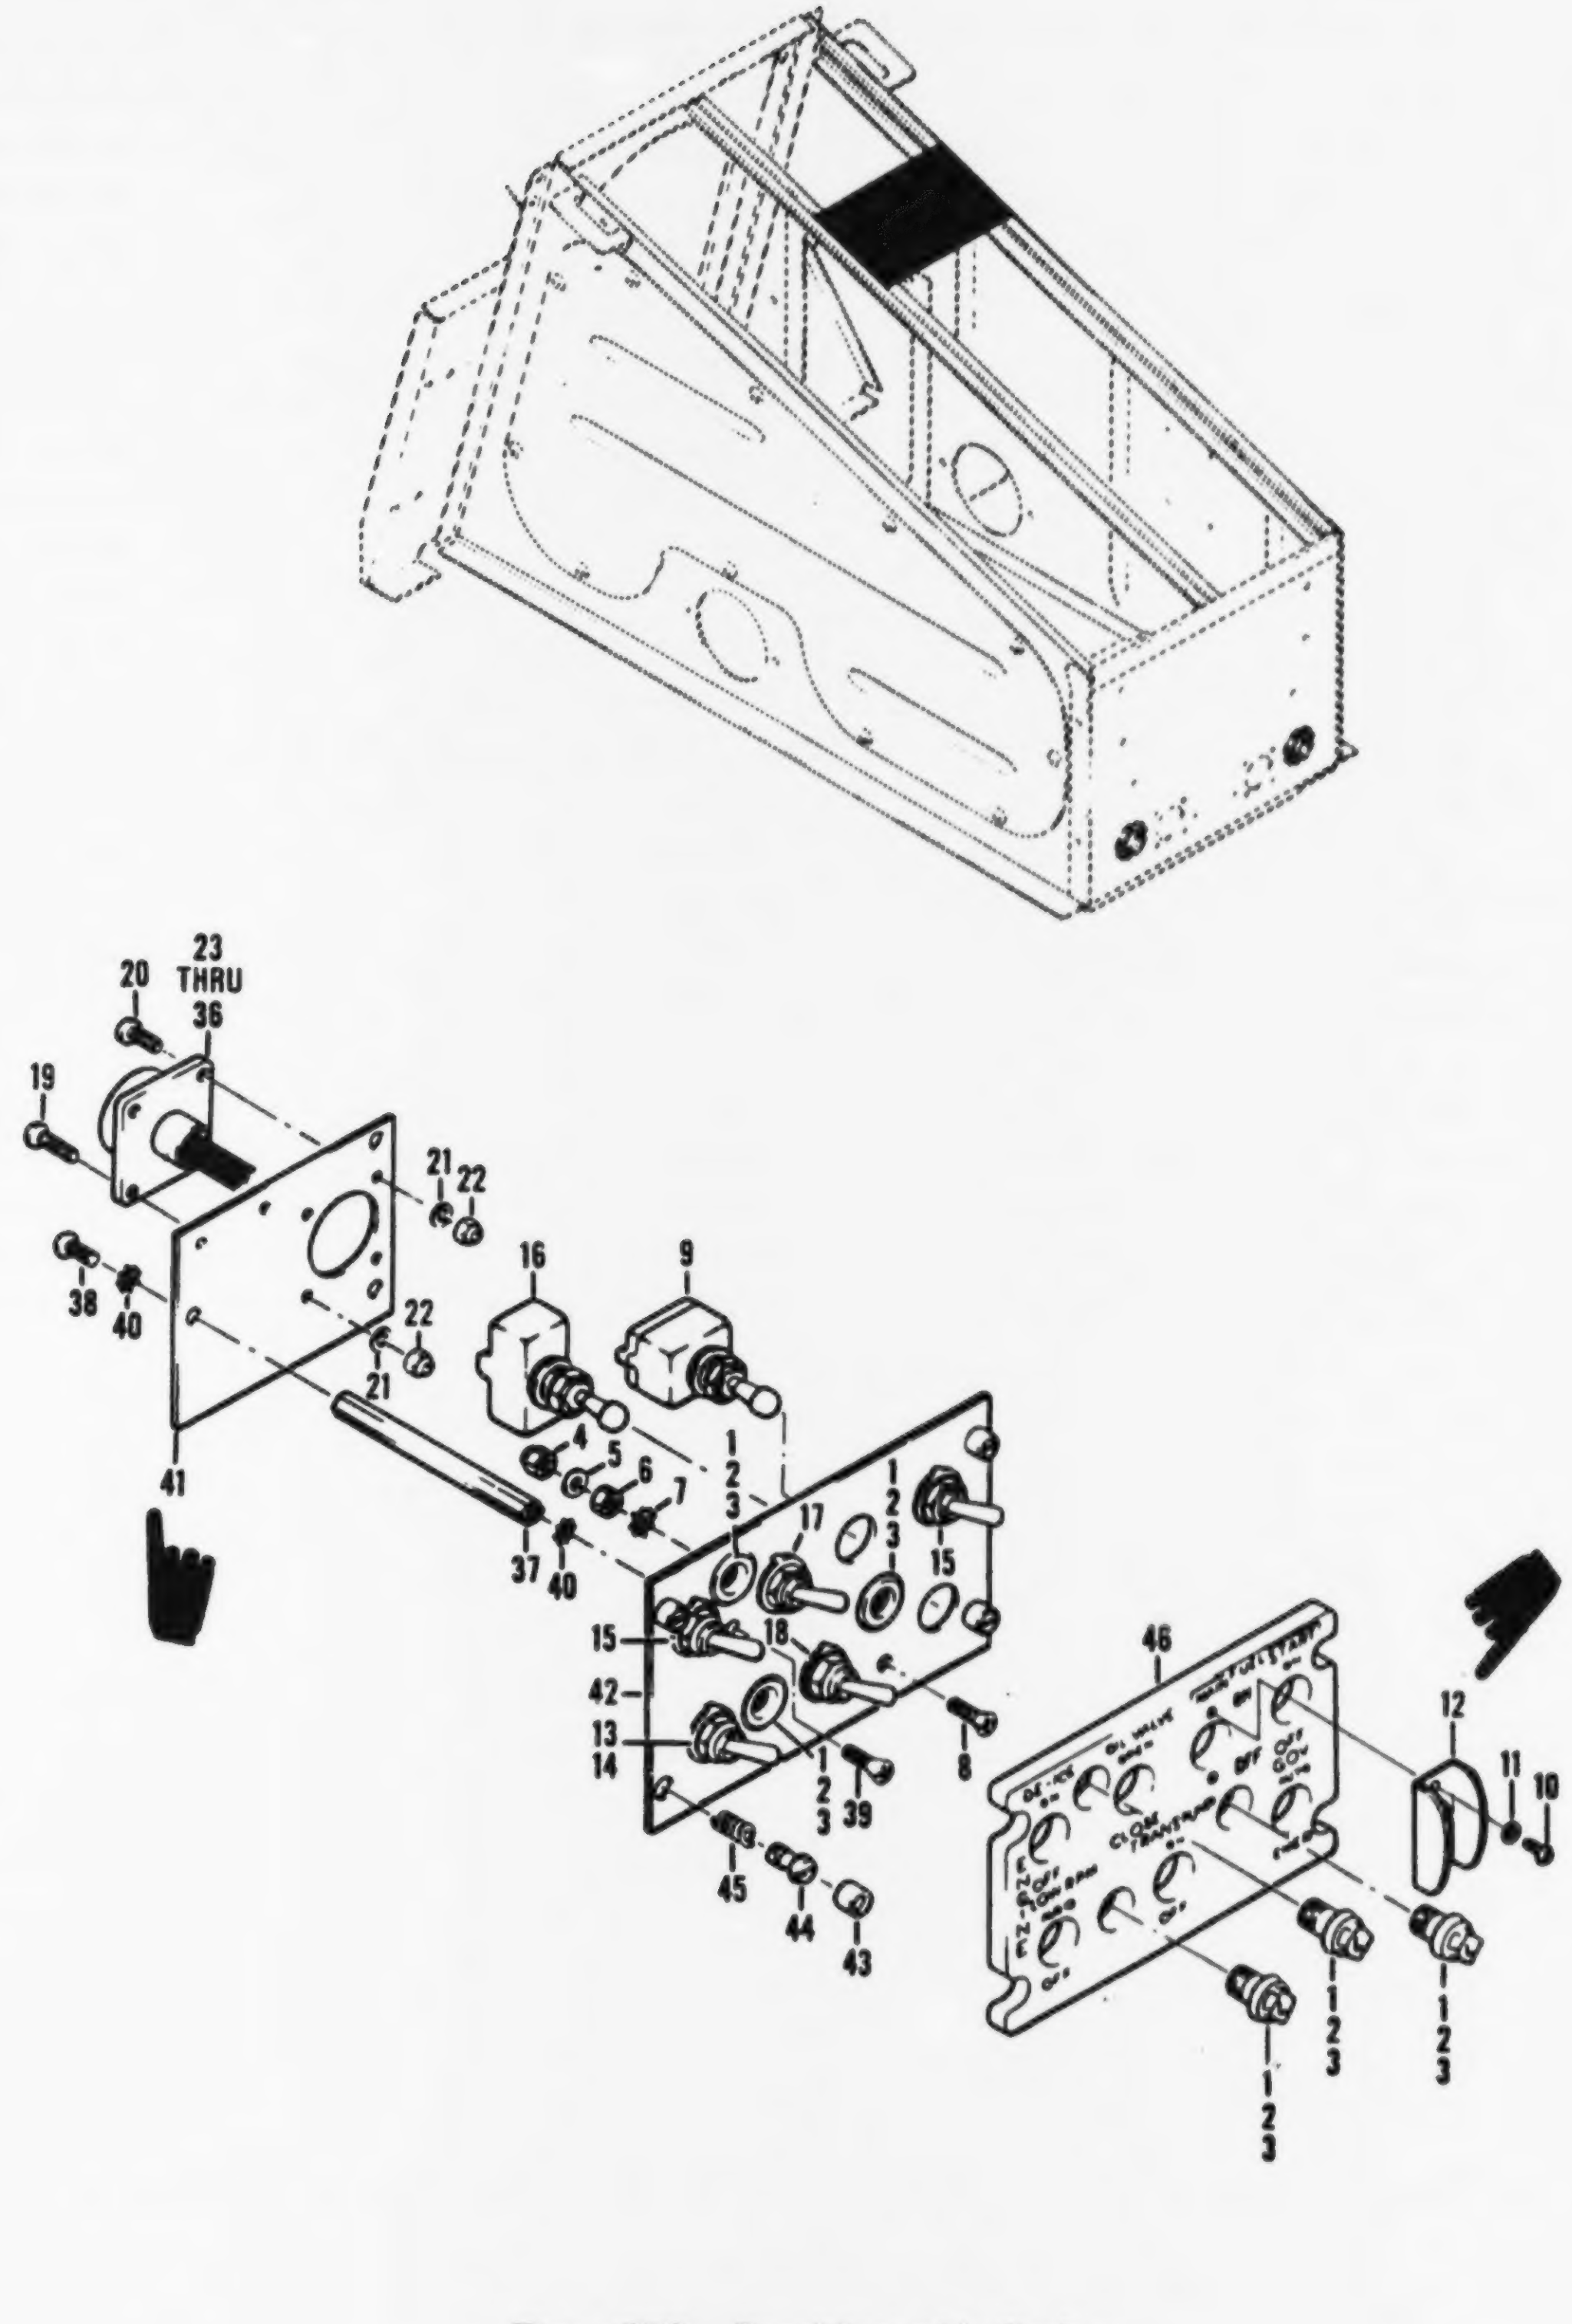
23
THRU
36
20
19
21
22
38
40
22
21
41
16
9
4
5
6
7
1
2
3
17
1
2
3
15
37
40
15
18
42
13
14
1
2
3
39
8
45
44
43
46
12
11
10
1
2
3
1
2
3
1
2
3

Figure 258. Panel Assembly, Engine

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
258		PAOOO	1680-00-867-1241	97499	204-075-812-1	PANEL ASSEMBLY, ENGINE CONTROL SEE FIG 225 FOR NHA ...... UHB	EA	1
258		PBOOO	1680-00-915-5925	97499	204-075-812-7	PANEL ASSEMBLY, ENGINE CONTROL USBL EFF 64-14101 THRU 65-12772 SEE FIG 225 FOR NHA ...... UHC,UHM	EA	1
258		XBOOZ	6110-00-420-4298	97499	204-075-812-13	PANEL ASSEMBLY ENGINE CONTROL USBL EFF 66-492 THRU 66-15022 SEE FIG 225 FOR NHA ...... UHC,UHM	EA	1
258	1	XDOOZ		96906	MS25010B11A327	.LIGHT,PANEL ...... UHB,UHC,UHM	EA	3
258	2	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT ...... UHB,UHC,UHM	EA	1
258	3	AOOOZ	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL ...... UHB,UHC,UHM	EA	1
258	4	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ...... UHB,UHC,UHM	EA	1
258	5	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT ...... UHB,UHC,UHM	EA	1
258	6	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON ...... UHB,UHC,UHM	EA	1
258	7	PAOZZ	5310-00-184-8977	88044	AN935B6	WASHER,LOCK ...... UHB,UHC,UHM	EA	1
258	8	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE ...... UHB,UHC,UHM	EA	1
258	9	PAOZZ	5930-00-042-7036	96906	MS24660-23G	.SWITCH,TOGGLE ...... UHB,UHC,UHM	EA	1
258	10	PAOZZ	5305-00-207-7468	96906	MS35214-16	.SCREW,MACHINE U/W PN MS24660-23G ...... UHB,UHC,UHM	EA	2
258	11	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT U/W PN MS24660-23G ...... UHB,UHC,UHM	EA	2
258	12	MOOZZ	DELETED	97499	90-047-1	.GUARD,SWITCH U/W PN MS24660-23G ...... UHB,UHC,UHM	EA	1
258	13	PAOZZ	5930-00-539-5889	97499	212-075-266-3	.SWITCH,TOGGLE ...... UHB,UHC,UHM	EA	1
258	14	PAOZZ	5310-00-616-2973	96906	MS25082-8	.NUT,PLAIN,HEXAGON ...... UHB,UHC,UHM	EA	2
258	15	PBOZZ	5930-00-655-1515	96906	MS35058-23	.SWITCH,TOGGLE ...... UHC,UHM	EA	2
258	16	PAOZZ	5930-00-961-7984	96906	MS24658-23G	.SWITCH,TOGGLE U/O PN 204-075-812-1,-7 ...... UHB,UHC,UHM	EA	1
258	16	PAOZZ	5930-00-965-0581	91929	1TL144-3G	.SWITCH,TOGGLE U/O PN 204-075-812-13 ...... UHC,UHM	EA	1
258	17	PBOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE U/O PN 204-075-812-1 ...... UHB,UHC,UHM	EA	1
258	18	PBOZZ	5930-00-655-1582	96906	MS35059-23	.SWITCH,TOGGLE ...... UHB,UHC,UHM	EA	1
258	19	PAOZZ	5305-00-631-0298	96906	MS35265-15	.SCREW,MACHINE ...... UHB,UHC,UHM	EA	1
258	20	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE ...... UHB,UHC,UHM	EA	3
258	21	PAOZZ	5310-00-550-6009	96906	MS15795-704	.WASHER,FLAT ...... UHB,UHC,UHM	EA	4
258	22	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ...... UHB,UHC,UHM	EA	4
258	23	AOOOZ	1560-00-872-1110	97499	204-075-909-5	.CABLE ASSEMBLY ...... UHB	EA	1
258	23	AOOOZ	1560-00-299-1010	97499	204-075-946-5	.WIRING ASSEMBLY U/O PN 204-075-812-1 ...... UHB	EA	1
258	23	AOOOZ	6150-00-924-0429	97499	204-175-430-1	.CABLE ASSEMBLY U/O PN 204-075-812-7 ...... UHC,UHM	EA	1
258	23	AOOOZ	6150-00-965-9406	97499	204-175-430-7	.CABLE ASSEMBLY U/O PN 204-075-812-13 ...... UHC,UHM	EA	1
258	24	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-075-946-5 ...... UHB	EA	26
258	24B	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-430-1 ...... UHC,UHM	EA	18
258	24C	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-430-1 ...... UHC,UHM	EA	22
258	24D	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-430-9 ...... UHC,UHM	EA	20
258	25	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-075-909-5 ...... UHB	EA	5
258	25	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG ...... UHB,UHC,UHM	EA	2
258	26	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG ...... UHB,UHC,UHM	EA	5
258	27	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-946-5 ...... UHB	EA	3
258	27	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-430-1 & -7 ...... UHC,UHM	EA	4
258	27	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-075-909-5 ...... UHB	EA	1
258	28	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-075-909-5 ...... UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
258	29	PBOZZ	5935-00-884-1621	96906	MS25251-20	..PLUG,END SEAL........................UHC,UHM	EA	1
258	30	PBOZZ	5935-00-908-3542	96906	MS3126E14-19S	..CONNECTOR,PLUG,ELEC U/D PN 204-075-909-5..............UHB	EA	1
258	31	PBOZZ	5935-00-725-4446	96906	MS3122E20-39P	..CONNECTOR,RECEPTACL........................UHB,UHC,UHM	EA	1
258	32	MOOZZ	5970-00-195-9548	97499	130-005-5-4	..INSULATION SLEEVING........................UHB	EA	2
258	33	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........................UHB	FT	V
258	34	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL........................UHB,UHC,UHM	FT	V
258	35	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL........................UHB,UHC,UHM	FT	V
258	36	PBOZZ	5961-00-059-2904	81349	JAN1N3613	..SEMICONDUCTOR DEVICE........................UHB	EA	1
258	37	PAOZZ	5340-00-226-0303	97499	204-075-242-7	.POST,ELECTRICAL........................UHB,UHC,UHM	EA	3
258	38	PAOZZ	5305-00-957-7817	96906	MS24693S25	.SCREW,MACHINE........................UHB,UHC,UHM	EA	3
258	39	PAOZZ	5305-00-534-4988	96906	MS35206-228	.SCREW,MACHINE........................UHB,UHC,UHM	EA	3
258	40	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK........................UHB,UHC,UHM	EA	6
258	41	MFOZZ	DELETED	97499	205-075-229-1	.PLATE,MOUNTING........................UHB,UHC,UHM	EA	1
258	42	XAOOO		97499	204-075-798-1	.PLATE ASSEMBLY........................UHB,UHC,UHM	EA	1
258	43	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER........................UHB,UHC,UHM	EA	4
258	44	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER........................UHB,UHC,UHM	EA	4
258	45	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP........................UHB,UHC,UHM	EA	4
258	46	PBOZZ	1680-00-367-1933	97499	204-075-799-1	.PANEL,INDICATING........................UHB	EA	1
258	46	PAOZZ	1680-00-916-6692	97499	204-075-835-1	.PANEL,INDICATING........................UHC,UHM	EA	1

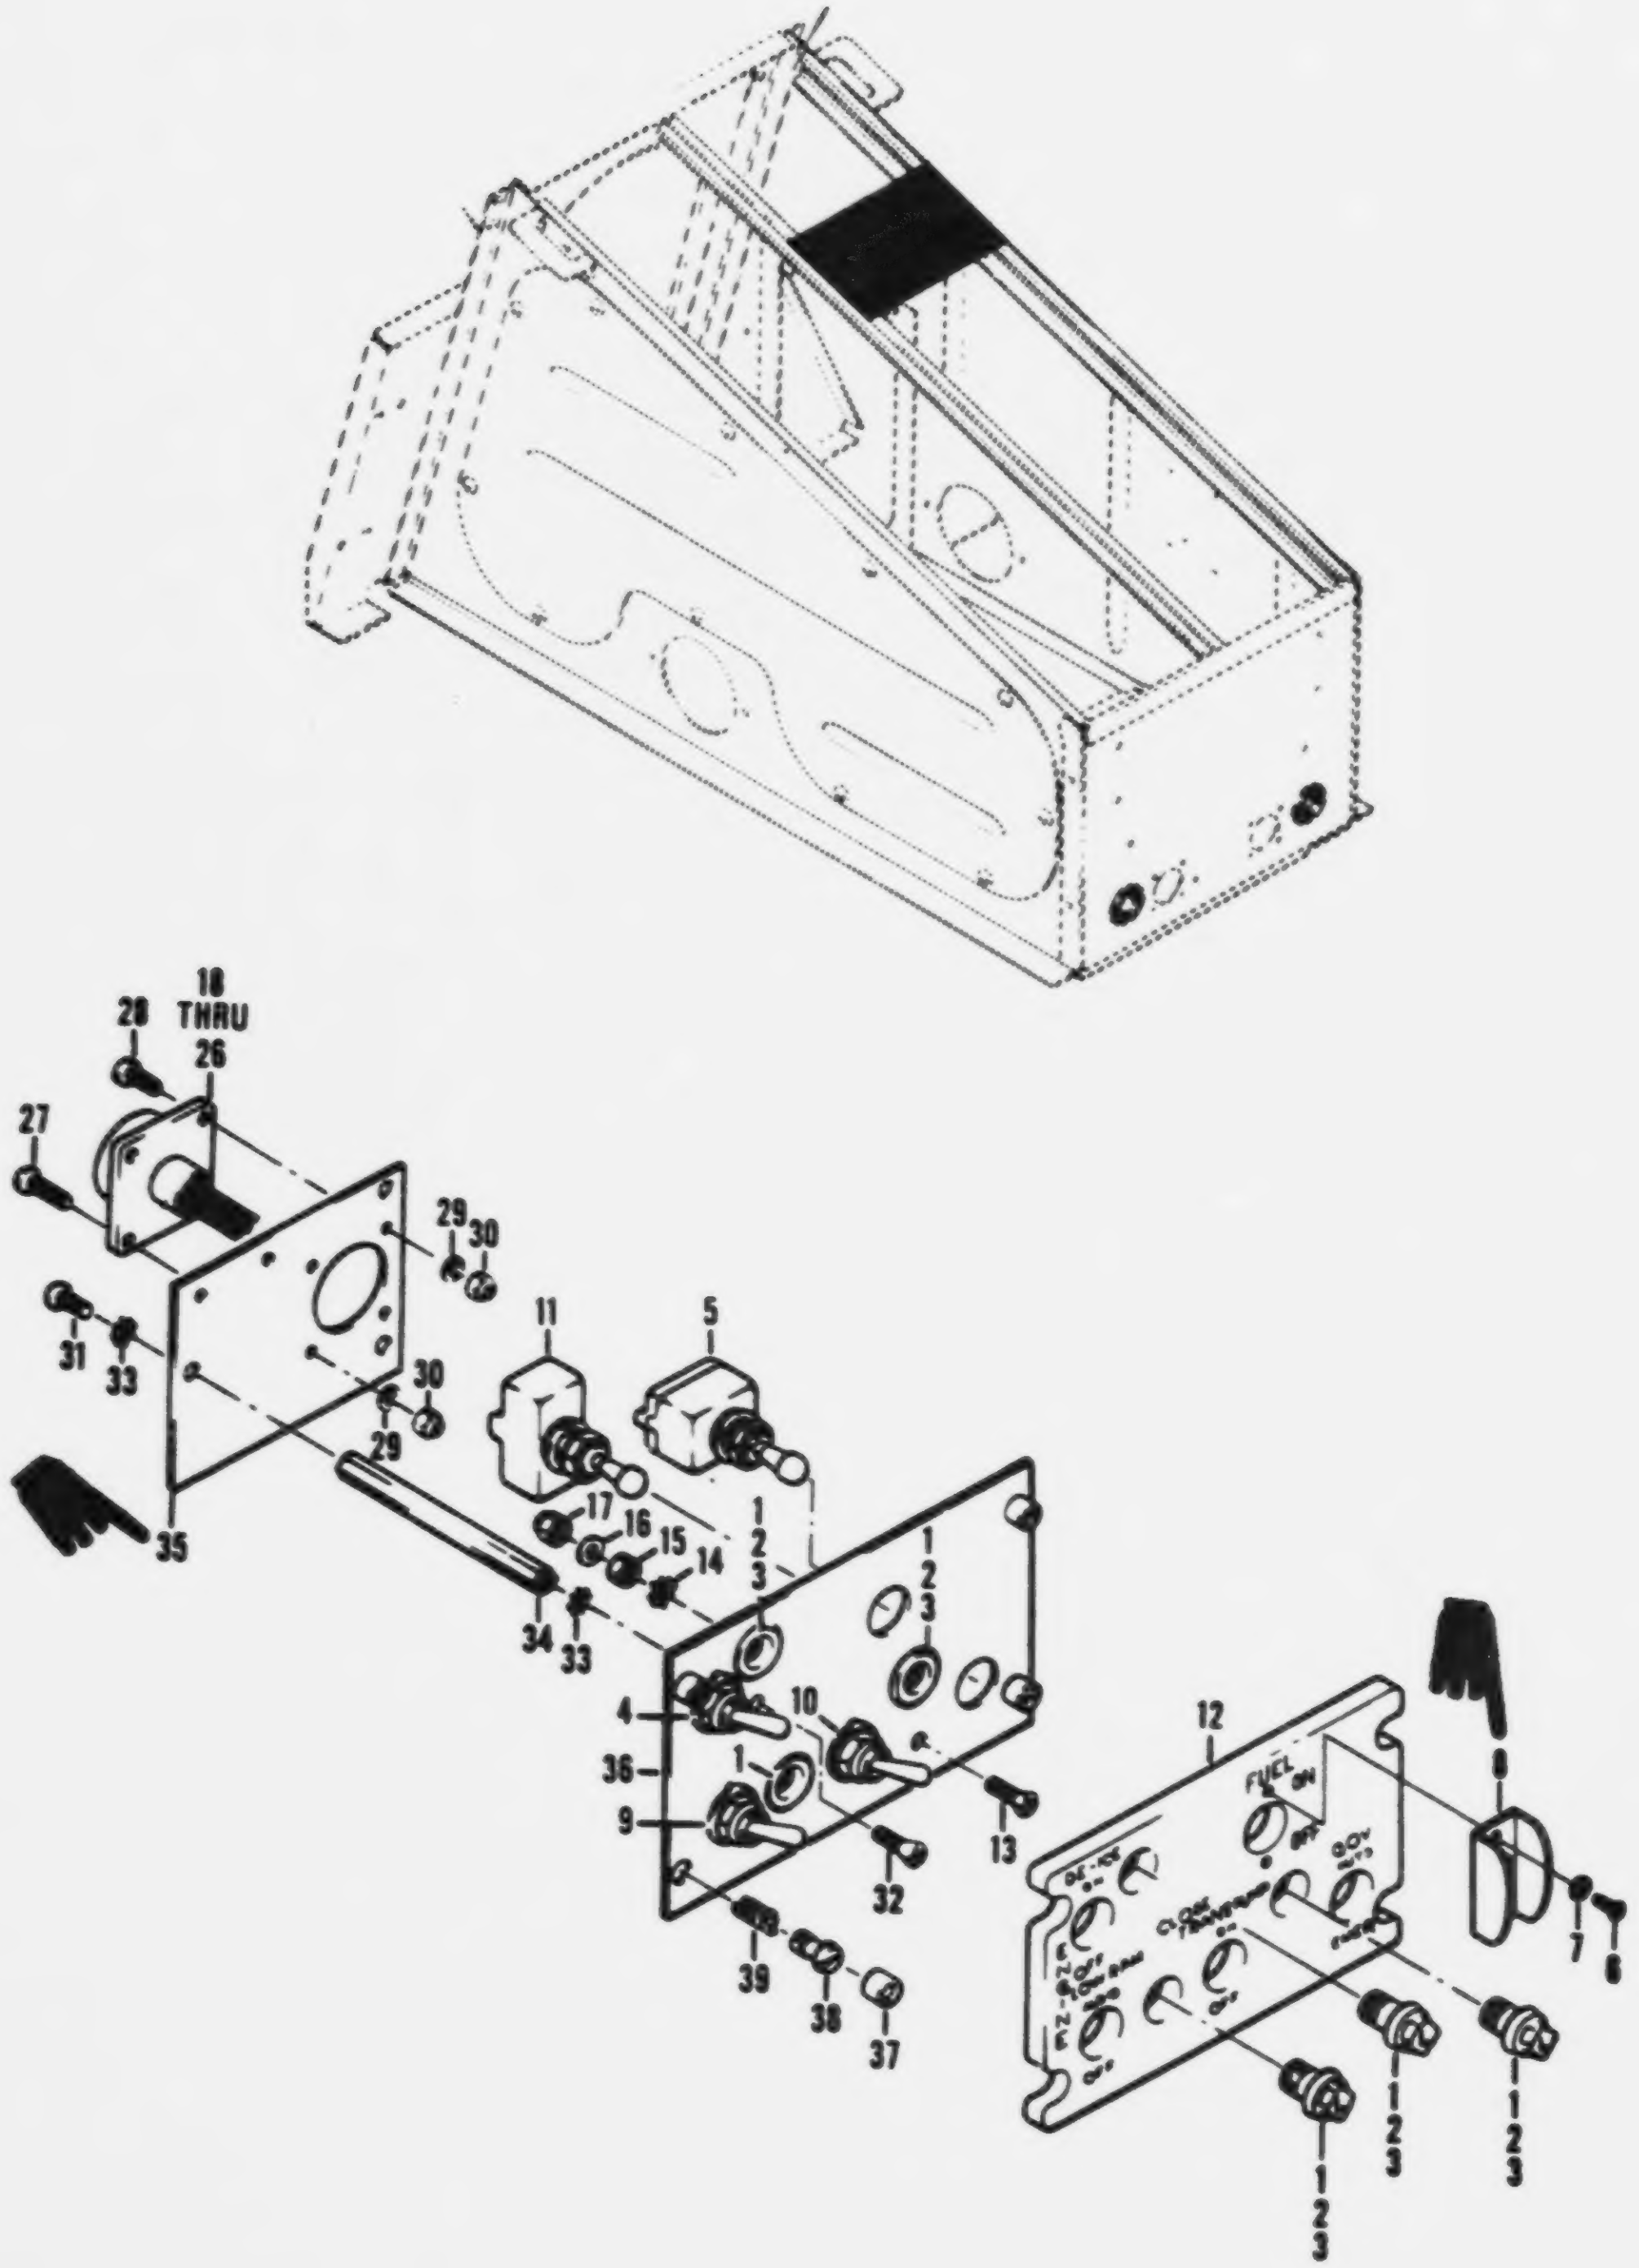
18 THRU 26
28
27
29
30
31
33
30
29
35
11
5
17
16
15
14
1 2 3
1 2 3
34
33
4
10
36
1
9
13
32
39
38
37
12
FUEL
ON
OFF
GOV
AUTO
DE-ICE
8
7
6
1 2 3
1 2 3
1 2 3

Figure 259. Panel Assembly, Engine Control

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
259		XBOOZ	6110-00-168-3724	97499	204-075-586-1	PANEL ASSY,ENGINE CONTROL USBL EFF 66-15023 & SUBSEQUENT SEE FIG 225 FOR NHA .... UHC,UHM	EA	1
259	1	XDOOZ		96906	MS25010B11A327	.LIGHT,PANEL .... UHC,UHM	EA	3
259	2	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT .... UHC,UHM	EA	1
259	3	AOOOZ	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL .... UHC,UHM	EA	1
259	4	PBOZZ	5930-00-655-1515	96906	MS35058-23	.SWITCH,TOGGLE .... UHC,UHM	EA	1
259	5	PAOZZ	5930-00-042-7036	96906	MS24660-23G	.SWITCH,TOGGLE .... UHC,UHM	EA	1
259	6	PAOZZ	5305-00-207-7468	96906	MS35214-16	.SCREW,MACHINE U/W PN MS24660-23G .... UHC	EA	2
259	7	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT U/W PN MS24660-23G .... UHC	EA	2
259	8	MOOZZ	DELETED	97499	90-047-1	.GUARD,SWITCH U/W PN MS24660-23G .... UHC	EA	1
259	9	PAOZZ	5930-00-539-5889	97499	212-075-266-3	.SWITCH,TOGGLE .... UHC,UHM	EA	1
259	10	PBOZZ	5930-00-655-1582	96096	MS35059-23	.SWITCH,TOGGLE .... UHC,UHM	EA	1
259	11	PAOZZ	5930-00-955-0581	91929	1TL144-3G	.SWITCH,TOGGLE .... UHC,UHM	EA	1
259	12	XBOZZ		97499	204-075-585-1	.EDGELIT PANEL .... UHC,UHM	EA	1
259	13	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE .... UHC,UHM	EA	1
259	14	PAOZZ	5310-00-184-8977	96906	MS35338-98	.WASHER,LOCK .... UHC,UHM	EA	1
259	15	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON .... UHC,UHM	EA	1
259	16	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT .... UHC,UHM	EA	1
259	17	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHC,UHM	EA	1
259	18	AOOOZ	6110-00-928-6301	97499	204-175-430-9	.CABLE ASSY .... UHC,UHM	EA	1
259	19	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG .... UHC,UHM	EA	20
259	20	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG .... UHC,UHM	EA	2
259	21	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG .... UHC,UHM	EA	5
259	22	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG .... UHC,UHM	EA	4
259	23	PBOZZ	5935-00-884-1621	96906	MS25251-20	..PLUG,END SEAL .... UHC,UHM	EA	1
259	24	PBOZZ	5935-00-725-4446	96906	MS3122E20-39P	..CONNECTOR,RECEPTACL .... UHC,UHM	EA	1
259	25	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL .... UHC,UHM	FT	V
259	26	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL .... UHC,UHM	FT	V
259	27	PAOZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE .... UHC,UHM	EA	1
259	28	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE .... UHC,UHM	EA	3
259	29	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT .... UHC,UHM	EA	4
259	30	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHC,UHM	EA	4
259	31	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE .... UHC,UHM	EA	3
259	32	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE .... UHC,UHM	EA	3
259	33	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK .... UHC,UHM	EA	6
259	34	PAOZZ	5340-00-225-0303	97499	204-075-242-7	.POST,ELECTRICAL .... UHC,UHM	EA	1
259	35	MFOZZ	DELETED	97499	205-075-229-1	.PLATE,MOUNTING .... UHC,UHM	EA	1
259	36	XBOOO		97499	204-075-584-1	.PLATE ASSEMBLY .... UHC,UHM	EA	1
259	37	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER .... UHC,UHM	EA	4
259	38	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER .... UHC,UHM	EA	4
259	39	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP .... UHC,UHM	EA	4

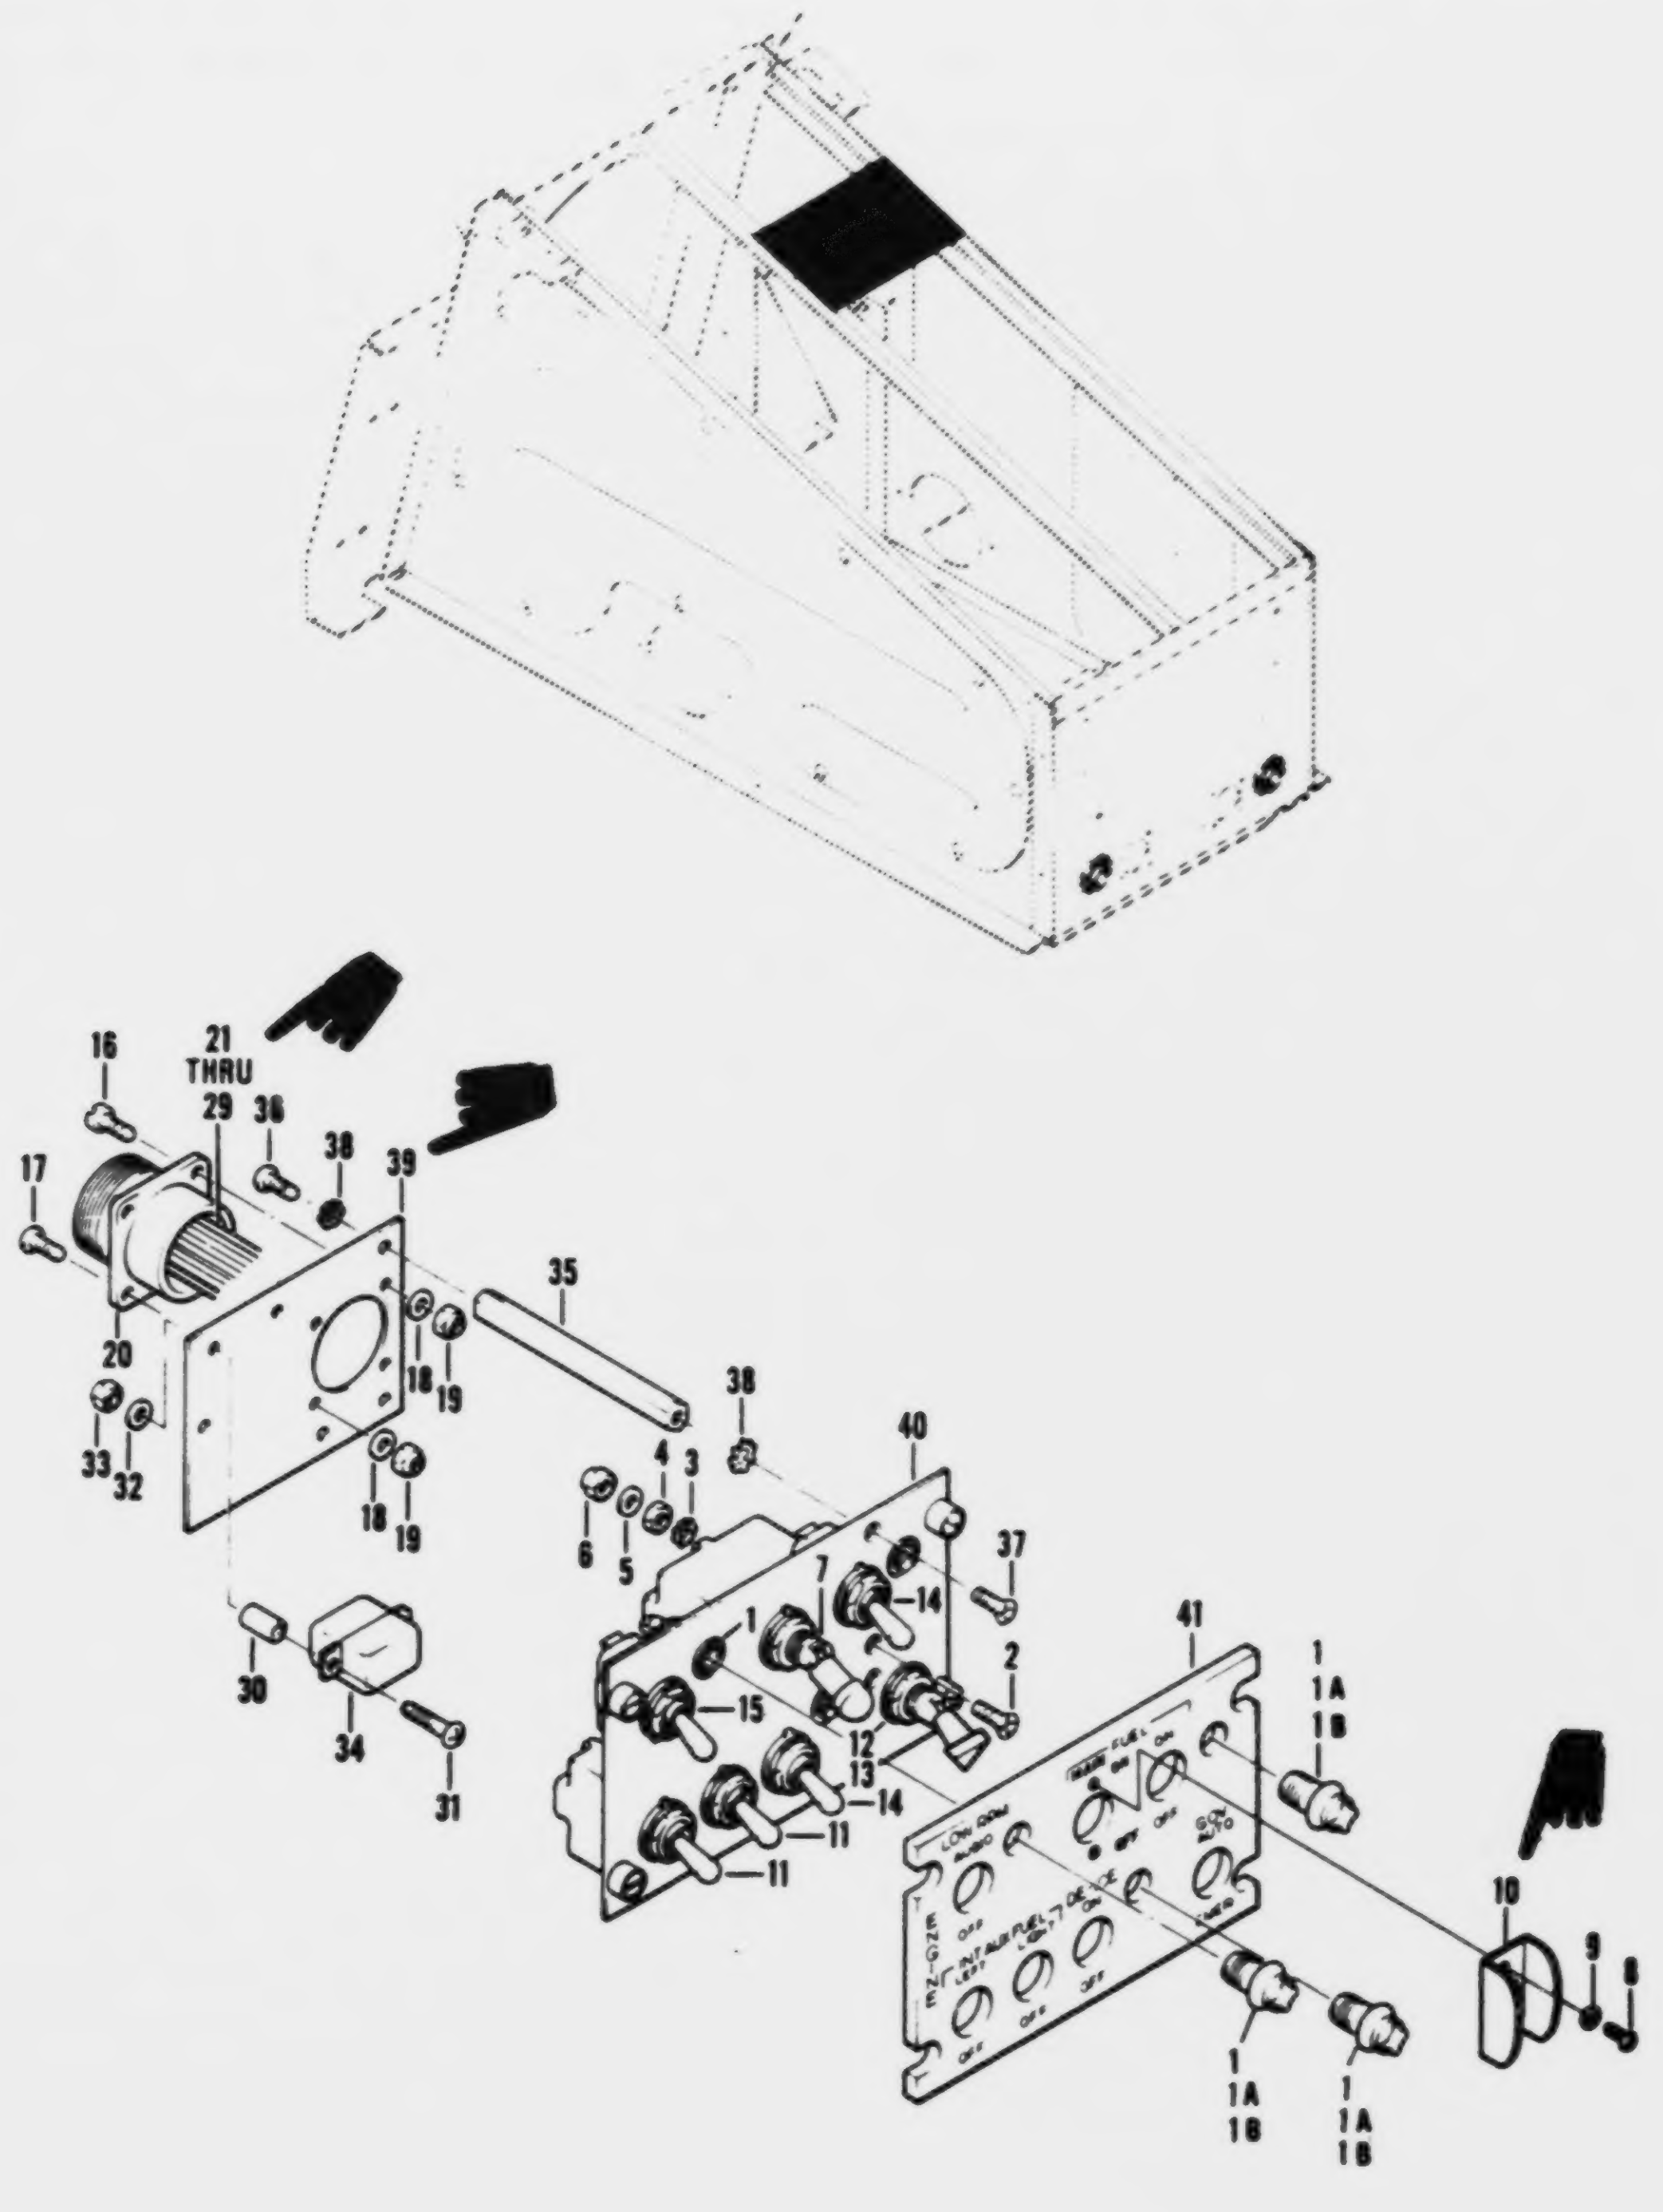
16
21
THRU
29
36
38
39
17
20
33
32
18
19
18
19
35
38
40
4
3
6
5
37
7
14
1
2
15
12
13
14
11
11
41
1
1A
1B
30
34
31
LOW RPM
AUDIO
OFF
MAIN
FUEL
ON
OFF
GOV
AUTO
EMER
ENGINE
INT AUX FUEL
LEFT
RIGHT
DE-ICE
ON
OFF
10
9
8
1
1A
1B
1
1A
1B

Figure 260. Panel Assembly, Engine Control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
260		PB000	6110-00-916-2559	97499	205-075-205-5	PANEL ASSEMBLY ENGINE CONTROL USBL EFF 64-13492 THRU 65-12895 SEE FIG.226 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
260		PB000	6110-00-105-6255	97499	205-075-205-7	PANEL ASSEMBLY ENGINE CONTROL USBL EFF 66-746 THRU 66-16033 SEE FIG.226 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
260	1	A0000	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL..........UHE,UHH,UHV,UHX	EA	3
260	1A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	.FILTER,LIGHT,NVG..........UHE,UHH,UHV,UHX	EA	3
260	1B	PAOZZ	6240-00-155-7836	96906	MS25237-327	LAMP,INCANDESCENT..........UHE,UHH,UHV,UHX	EA	3
260	2	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
260	3	PAOZZ	5310-00-184-8977	96906	MS35338-98	.WASHER,LOCK..........UHE,UHH,UHV,UHX	EA	1
260	4	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
260	5	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
260	6	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
260	7	PAOZZ	5930-00-042-7036	96906	MS24660-23G	.SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
260	8	PAOZZ	5305-00-207-7468	96906	MS35214-16	.SCREW,MACHINE U/W PN MS24660-23G..........UHE,UHH,UHV,UHX	EA	2
260	9	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT U/W PN MS24660-23G..........UHE,UHH,UHV,UHX	EA	2
260	10	MOOZZ	DELETED	97499	90-047-1	.GUARD,SWITCH U/W PN MS24660-23G..........UHE,UHH,UHV,UHX	EA	1
260	11	PBOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE U/O PN 205-075-205-5,& -7.....UHE,UHH,UHV,UHX	EA	2
260	12	PAOZZ	5930-00-961-7984	96906	MS24658-23G	.SWITCH,TOGGLE U/O PN 205-075-205-5..........UHE,UHH,UHV,UHX	EA	1
260	13	PAOZZ	5930-00-955-0581	91929	1TL144-3G	.SWITCH,TOGGLE U/O PN 205-075-205-7..........UHE,UHH,UHV,UHX	EA	1
260	14	PBOZZ	5930-00-655-1515	96906	MS35058-23	.SWITCH,TOGGLE U/O PN 205-075-205-5..........UHE,UHH,UHV,UHX	EA	2
260	15	PAOZZ	5930-00-539-5889	97499	212-075-266-3	.SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
260	16	PAOZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
260	17	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
260	18	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
260	19	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
260	20	AOOZZ	6150-00-916-2588	97499	205-075-412-3	.CABLE ASSY,POWER U/O PN 205-075-205-5......UHE,UHH,UHV,UHX	EA	1
260	20	AOOOZ	6150-00-955-9411	97499	205-075-412-5	.CABLE ASSY,POWER U/O PN 205-075-205-7......UHE,UHH,UHV,UHX	EA	1
260	21	PAOOO	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-412-3..........UHE,UHH,UHV,UHX	EA	26
260	21	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-412-5..........UHE,UHH,UHV,UHX	EA	25
260	22	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	2
260	23	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG U/O PN 205-075-412-3..........UHE,UHH,UHV,UHX	EA	5
260	23	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG U/O PN 205-075-412-5..........UHE,UHH,UHV,UHX	EA	10
260	24	PBOZZ	5935-00-725-4446	96906	MS3122E20-39P	..CONNECTOR,RECEPTACL..........UHE,UHH,UHV,UHX	EA	1
260	25	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	2
260	26	MOOZZ	DELETED	97499	85T4-10-1	..NIPPLE U/O PN 205-075-412-3..........UHE,UHH,UHV,UHX	EA	34
260	26	MOOZZ	DELETED	97499	85T4-10-1	..NIPPLE U/O PN 205-075-412-5..........UHE,UHH,UHV,UHX	EA	36
260	27	MOOZZ	DELETED	97499	85T4-10-2	..INSULATION SLEEVING..........UHE,UHH,UHV,UHX	EA	25
260	28	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	8
260	29	PBOZZ	6145-00-851-8505	96906	MS25190820	..WIRE,ELECTRICAL..........UHE,UHH,UHV,UHX	FT	9
260	30	PAOZZ	5365-00-684-5983	80205	NAS43DD0-28	.SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
260	31	PAOZZ	5305-00-984-4976	96906	MS35206-219	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
260	32	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
260	33	PACZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
260	34	PAOZZ	5945-00-177-3675	97499	209-075-323-1	.RELAY,ARMATURE..........UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
260	35	PAOZZ	5340-00-225-0303	97499	204-075-242-7	.POST,ELECTRICAL..............................UHE,UHH,UHV,UHX	EA	3
260	36	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	3
260	37	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	3
260	38	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK..................................UHE,UHH,UHV,UHX	EA	3
260	39	MFOZZ	DELETED	97499	205-075-229-1	.PLATE,MOUNTING...............................UHE,UHH,UHV,UHX	EA	1
260	40	XAOZZ		97499	205-075-232-1	.PLATE,MOUNTING U/O PN 205-075-205-5, & -7 ....UHE,UHH,UHV,UHX	EA	1
260	41	PAOZZ	6110-00-869-6337	97499	205-075-233-1	.PANEL,EDGE LIT...............................UHE,UHH,UHV,UHX	EA	1

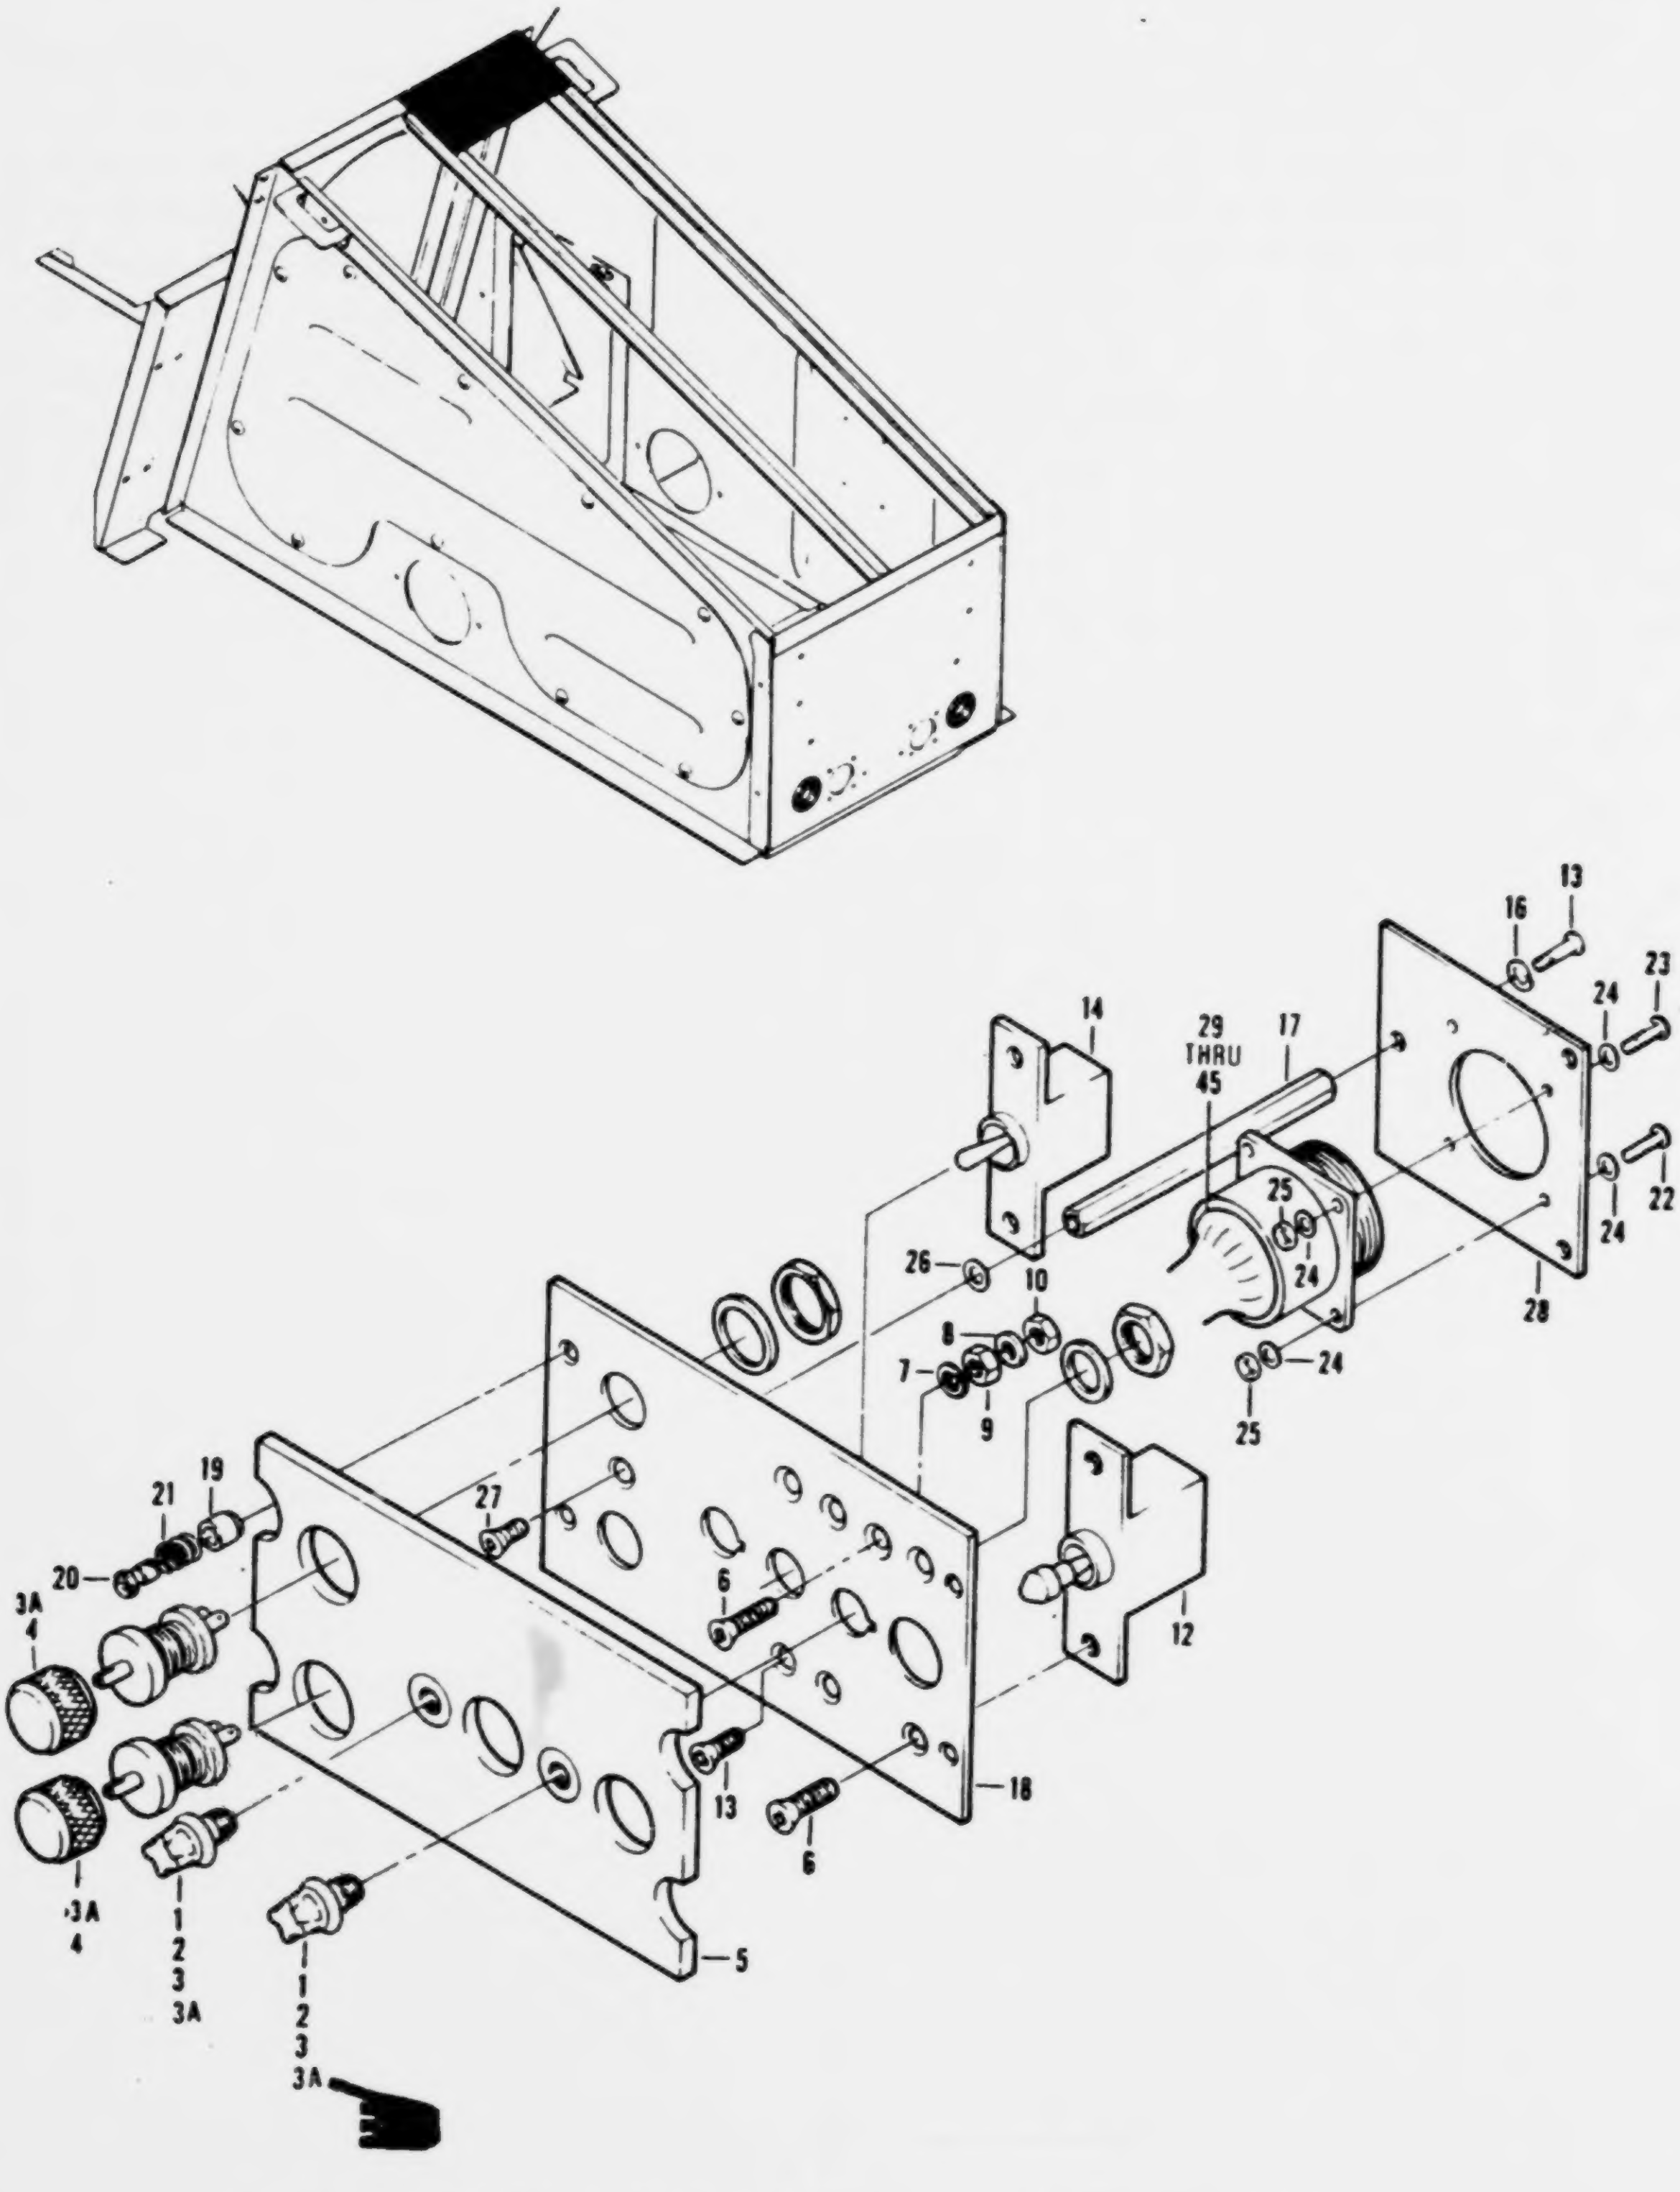
13
16
23
24
14
29
THRU
45
17
25
24
24
22
24
26
10
8
7
9
24
25
28
21
19
27
20
3A
4
6
12
13
18
6
3A
4
1
2
3
3A
5
1
2
3
3A

Figure 261. Panel Assembly, Force Trim, Hydraulic Control and Chip Detector

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
261		PA000	1680-00-829-8060	97499	204-075-578-1	PANEL ASSY,FORCE TRIM HYDRAULIC CONTROL AND CHIP DETECTOR UHE,UHH,UHM,UHV,UHX	EA	1
261	1	XD00Z		96906	MS25010B11A327	.LIGHT,PANEL UHE,UHH,UHM,UHV,UHX	EA	1
261	2	PA0ZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT UHE,UHH,UHM,UHV,UHX	EA	1
261	3	A000Z	6210-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL UHE,UHH,UHM,UHV,UHX	EA	1
261	3A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	..FILTER,LAMP,NVG UHE,UHH,UHV,UHX	EA	2
261	4	PA0ZZ	6210-00-284-0289	96906	MS25041-4	.LIGHT,INDICATOR UHE,UHH,UHM,UHV,UHX	EA	2
261	5	PA0ZZ	1680-00-829-8064	97499	204-075-580-1	.PANEL,INDICATING, LIGHT UHE,UHH,UHM,UHV,UHX	EA	1
261	6	PA0ZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	3
261	7	PA0ZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK UHE,UHH,UHM,UHV,UHX	EA	1
261	8	PA0ZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	1
261	9	PA0ZZ	5310-00-934-9747	96906	MS35649-262	.NUT,PLAIN,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	1
261	10	PA0ZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	1
261	12	PA0ZZ	5930-00-501-4963	96906	MS25028-3	.SWITCH,TOGGLE UHE,UHH,UHM,UHV,UHX	EA	1
261	13	PA0ZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	5
261	14	PB0ZZ	5930-00-687-1097	88044	AN3022-2	.SWITCH,TOGGLE UHE,UHH,UHM,UHV,UHX	EA	1
261	16	PA0ZZ	5310-00-209-0788	96906	MS35335-30	.WASHER,LOCK UHE,UHH,UHM,UHV,UHX	EA	3
261	17	XD0ZZ	5340-00-896-6246	97499	204-075-242-3	.POST,ELECTRICAL- UHE,UHH,UHM,UHV,UHX	EA	3
261	18	XB000		97499	204-075-579-1	.PLATE ASSEMBLY UHE,UHH,UHM,UHV,UHX	EA	1
261	19	XA0ZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER UHE,UHH,UHM,UHV,UHX	EA	4
261	20	XA0ZZ		72794	PF3 1-2 36	..STUD,TURNLOCK FASTENER UHE,UHH,UHM,UHV,UHX	EA	4
261	21	XA0ZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP UHE,UHH,UHM,UHV,UHX	EA	4
261	22	PA0ZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	1
261	23	PB0ZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	3
261	24	PA0ZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	8
261	25	PA0ZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	4
261	26	PA0ZZ	5310-00-209-0788	88044	AN935B6	.WASHER,LOCK UHM	EA	3
261	27	PA0ZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	3
261	28	MF0ZZ	1560-00-732-1695	97499	204-075-243-1	.RECEPTACLE UHE,UHH,UHM,UHV,UHX	EA	1
261	29	A0000		97499	204-175-441-1	.CABLE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
261	30	A0000		97499	204-175-441-3	.CABLE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
261	31	A0000		97499	204-175-441-5	.CABLE ASSEMBLY UHE,UHH,UHM,UHV,UHX	EA	1
261	32	A0000		97499	204-175-441-7	.CABLE ASSEMBLY UHE,UHH,UHM,UHV,UHX	EA	1
261	33	A0000		97499	204-175-441-9	.CABLE ASSEMBLY UHM	EA	1
261	34	PA0ZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-441-1 & -5 UHE,UHH,UHM,UHV,UHX	EA	3
261	35	PA0ZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-441-7 UHE,UHH,UHM,UHV,UHX	EA	5
261	36	PA0ZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG U/O PN 204-175-441-1 UHE,UHH,UHV,UHX	EA	3
261	37	PA0ZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-441-1 UHE,UHH,UHM,UHV,UHX	EA	10
261	38	PA0ZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-441-3 UHE,UHH,UHM,UHV,UHX	EA	10
261	39	PB0ZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHE,UHH,UHM,UHV,UHX	FT	V
261	40	PA0ZZ	5935-01-048-0092	96906	MS3450W20-27P	..CONNECTOR,RECEPTACL UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
261	41	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-175-441-1	UHE,UHH,UHM,UHV,UHX	FT	V
261	42	PBOZZ	5935-00-715-2756	96906	MS3126F10-6S	..CONNECTOR,PLUG,ELEC U/O PN 204-175-441-1 & -9	UHE,UHH,UHM,UHV,UHX	EA	1
261	43	PAOZZ	5975-00-553-6995	96906	MS25171-1S	..CABLE NIPPLE U/O PN 204-175-441-5	UHE,UHH,UHM,UHV,UHX	EA	3
261	44	PAOZZ	5935-00-988-6210	96906	MS3120E10-6P	..CONNECTOR,RECEPTACL TAIL BOOM DISC. U/O PN 204-175-441-5	UHE,UHH,UHM,UHV,UHX	EA	1
261	45	PAOZZ	5975-00-553-7151	96906	MS25171-2S	..CABLE NIPPLE....................	UHE,UHH,UHM,UHV,UHX	EA	1

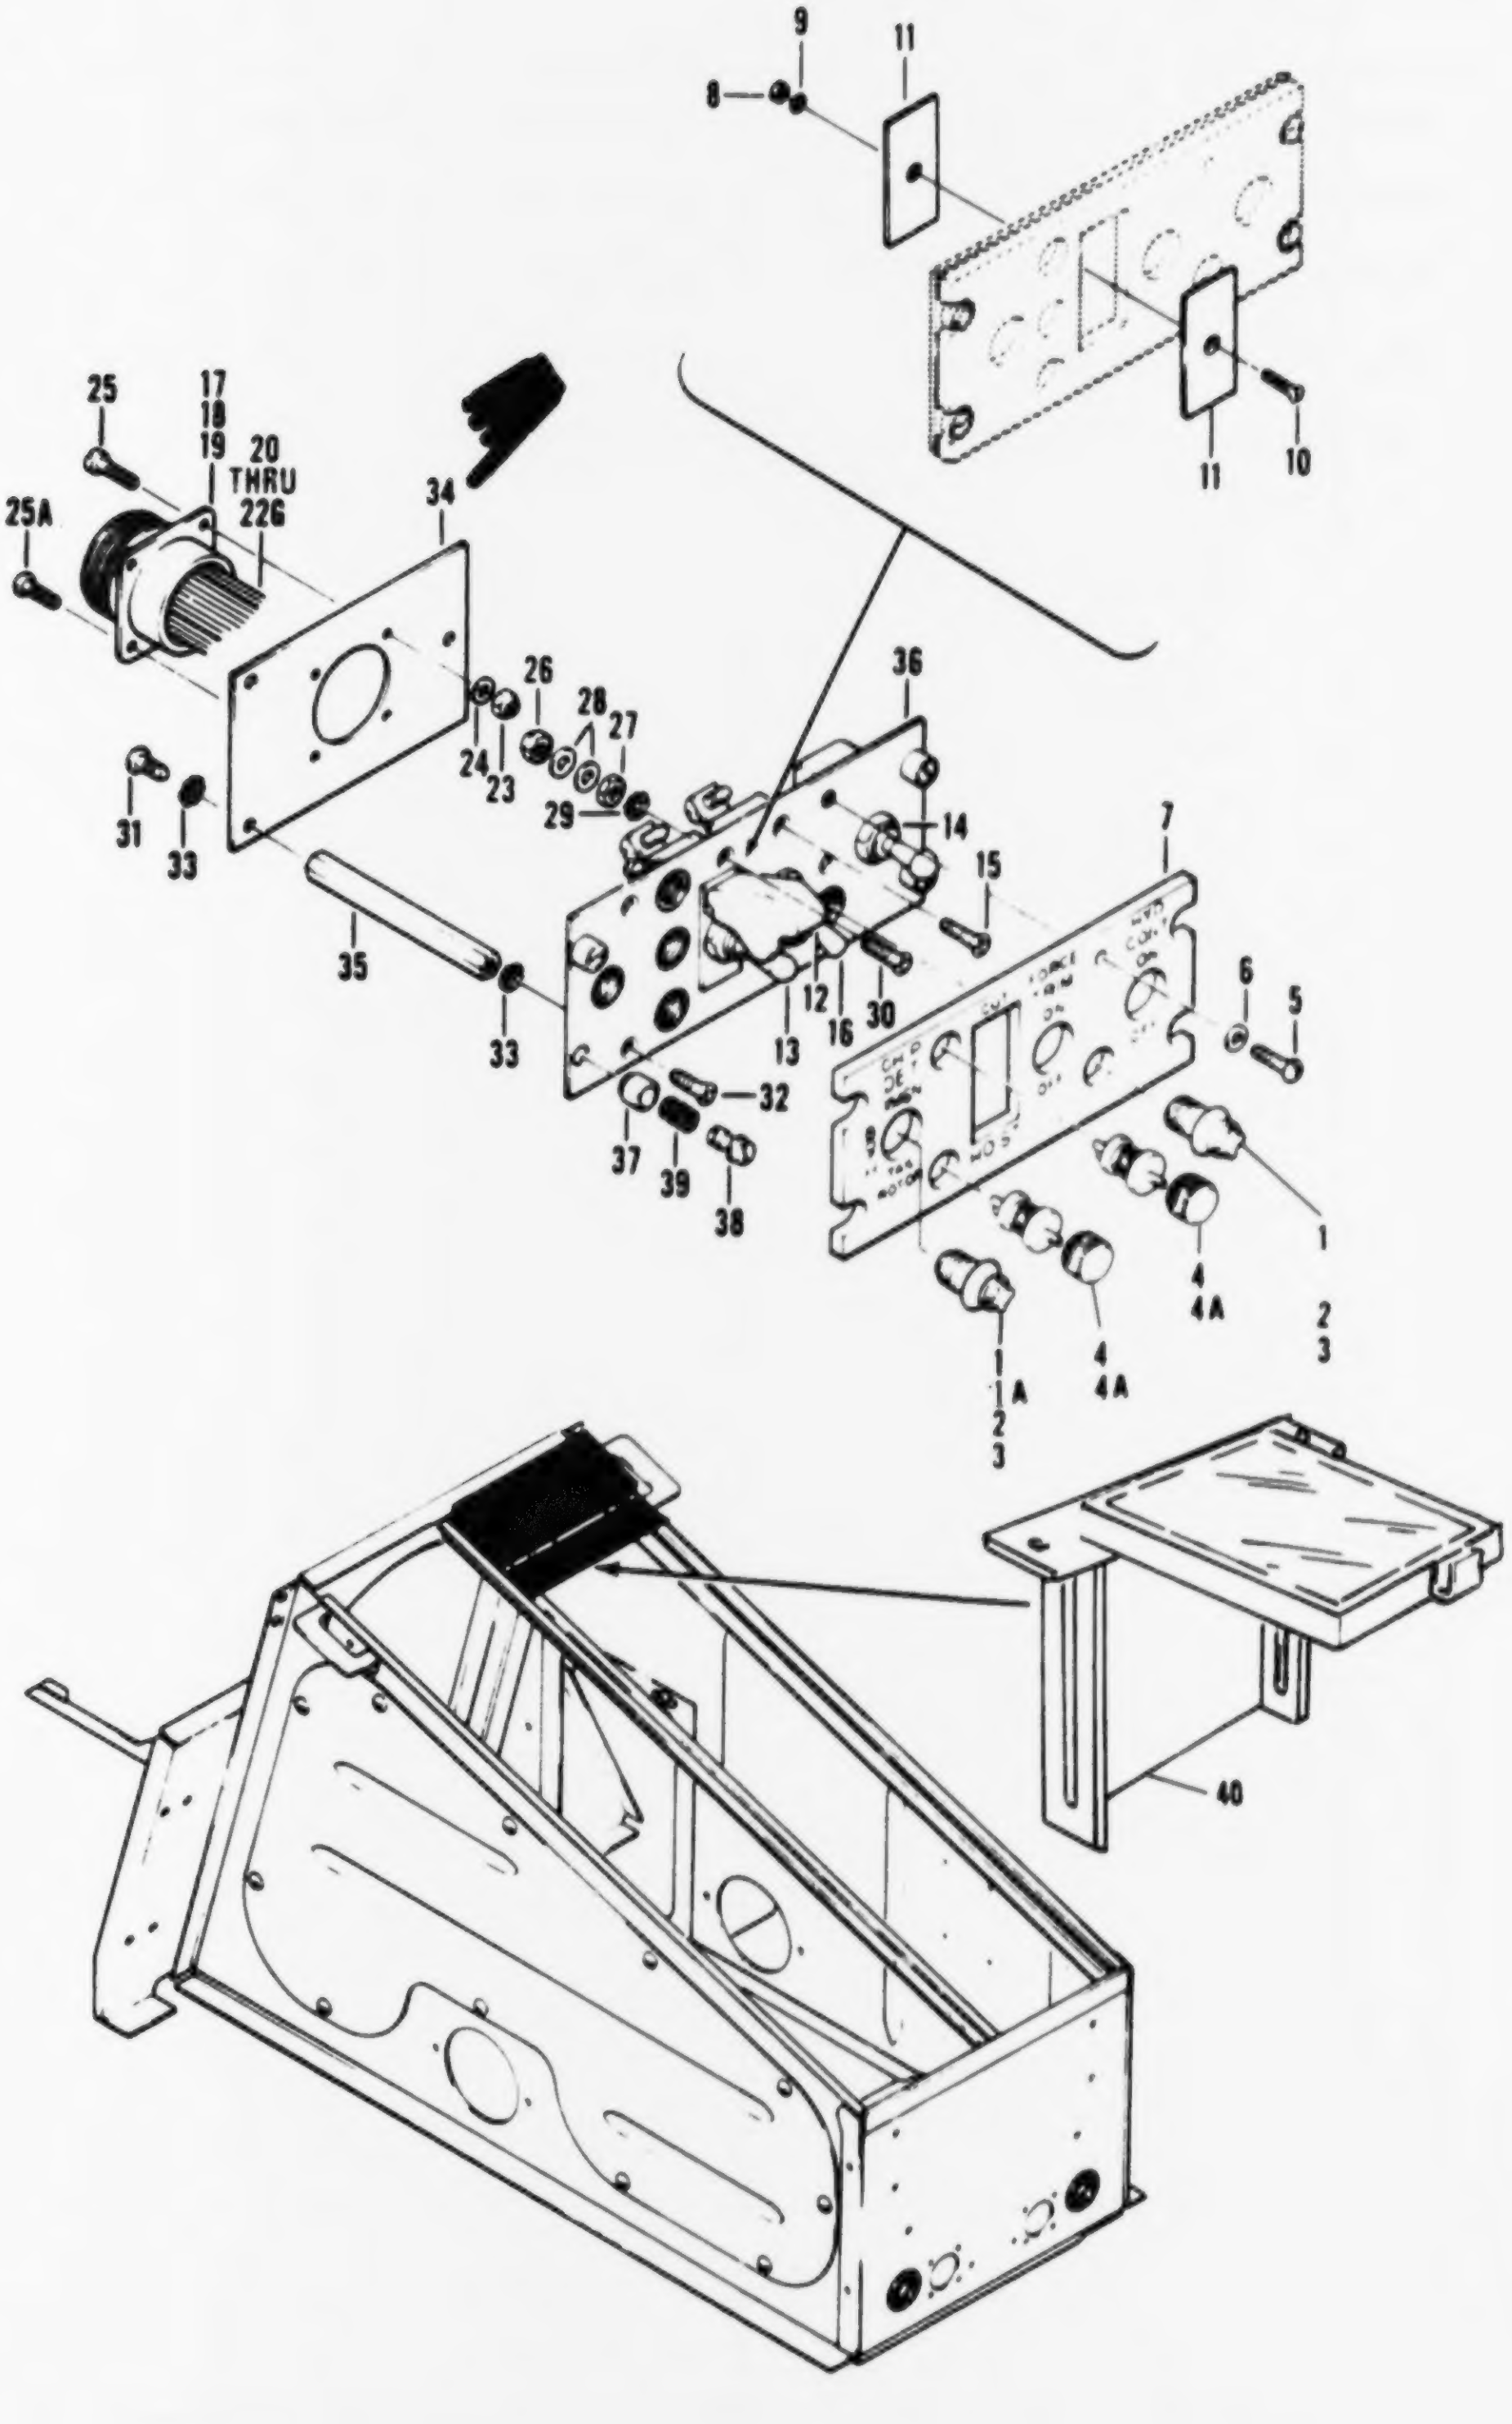
9
11
8
11
10
25
17
18
19
20
THRU
22G
25A
34
26
28
27
24
23
29
36
14
15
7
31
33
35
33
12
16
30
13
32
6
5
37
39
38
1
4
4A
2
3
1
1A
2
3
4
4A
40

Figure 262. Control Panel Assembly, Hoist, Force Trim and Hydraulic Control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
262		A0000		81996	1560UH1-520-1	CONTROL PANEL ASSY USBL EFF UH-1D 62-2106 THRU 65-12895	UHE,UHH,UHV,UHX	EA	1
262		A0000		81996	1560UH1-520-3	CONTROL PANEL,ASSY	UHM	EA	1
262		A0000		81996	1560UH1-520-5	CONTROL PANEL,ASSY	UHE,UHH,UHV,UHX	EA	1
262		A000C		81996	1560UH1-520-7	CONTROL PANEL ASSY	UHM	EA	1
262	1	XD00Z		96906	MS25010B11A327	.LIGHT,PANEL	UHE,UHH,UHM,UHV,UHX	EA	2
262	1A	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	.FILTER,LIGHT,NVG	UHE,UHH,UHV,UHX	EA	1
262	2	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT	UHE,UHH,UHM,UHV,UHX	EA	1
262	3	A000Z	6210-00-519-2653	96906	MS25010B11A	.LIGHT,PANEL	UHE,UHH,UHM,UHV,UHX	EA	1
262	4	PAOZZ	6210-00-284-0289	96906	MS25041-4	.LIGHT,INDICATOR	UHE,UHH,UHM,UHV,UHX	EA	3
262	4A	PAOZZ	1680-01-230-0535	81996	EGD-0932-1	..CAP,NVG	UHE,UHH,UHV,UHX	EA	3
262	5	PBOZZ	5305-00-206-3716	96906	MS35214-25	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
262	6	PAOZZ	5310-00-167-0699	88044	AN960B5	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
262	7	PAOZZ	1680-00-407-2826	81996	1560UH1-522-1	.PANEL,INDICATING, LIGHT U/O PN 1560UH1-520-1,-5	UHE,UHH,UHV,UHX	EA	1
262	7	PAOZZ	1680-00-407-2827	81996	1560UH1-522-3	.PANEL,INDICATING, LIGHT U/O PN 1560UH1-520-1,-3	UHM	EA	1
262	8	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 1560UH1-520-1,-3	UHE,UHH,UHM,UHV	EA	1
262	9	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK U/O PN 1560UH1-520-1,-3	UHE,UHH,UHM,UHV,UHX	EA	1
262	10	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE U/O PN 1560UH1-520-1,-3	UHE,UHH,UHM,UHV,UHX	EA	1
262	11	MFOZZ		81996	1560UH1-520-9	.PLATE U/O PN 1560UH1-520-1,-3	UHE,UHH,UHM,UHV,UHX	EA	2
262	12	XDOZZ		97499	90-045-5	.GUARD,SWITCH U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV,UHX	EA	1
262	13	PBOZZ	5930-00-655-1514	96906	MS35058-22	.SWITCH,TOGGLE U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV,UHX	EA	1
262	14	PAOZZ	5930-00-781-7101	96906	MS24658-22G	.SWITCH,TOGGLE U/O PN 1560UH1-520-1,-5	UHE,UHH,UHV,UHX	EA	1
262	14	PBOZZ	5930-00-845-0177	96906	MS24658-27E	.SWITCH,TOGGLE U/O PN 1560UH1-520-3,-7	UHM	EA	1
262	15	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
262	16	PBOZZ	5930-00-687-1097	96906	MS25102-22	.SWITCH,TOGGLE	UHE,UHH,UHM,UHV,UHX	EA	1
262	17	A0000		81996	1560UH1-523-1	.CABLE ASSEMBLY U/O PN 1560UH1-520-1	UHE,UHH,UHV,UHX	EA	1
262	17	A0000		81996	1560UH1-523-11	.CABLE ASSEMBLY U/O PN 1560UH1-520-3	UHM	EA	1
262	17	A0000		81996	1560UH1-523-13	.CABLE ASSEMBLY U/O PN 1560UH1-520-5	UHE,UHH,UHV,UHX	EA	1
262	17	A0000		81996	1560UH1-523-15	.CABLE ASSEMBLY U/O PN 1560UH1-520-7	UHM	EA	1
262	18	PAOZZ	5935-01-048-0092	96906	MS3450W20-27P	..CONNECTOR RECEPTACL	UHE,UHH,UHM,UHV,UHX	EA	1
262	19	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG	UHE,UHH,UHM,UHV,UHX	EA	2
262	20	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL	UHE,UHH,UHM,UHV,UHX	FT	V
262	21	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHM,UHV,UHX	EA	4
262	21	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 1560UH1-523-1,-11	UHE,UHH,UHM,UHV,UHX	EA	5
262	21A	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 1560UH1-523-13	UHE,UHH,UHV,UHX	EA	6
262	21A	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 1560UH1-523-15	UHM	EA	7
262	22	A0000		81996	1560UH1-523-3	.CABLE ASSEMBLY U/O PN 1560UH1-520-1	UHE,UHH,UHV,UHX	EA	1
262	22	A0000		81996	1560UH1-523-5	.CABLE ASSEMBLY U/O PN 1560UH1-520-1	UHE,UHH,UHV,UHX	EA	1
262	22	A0000		81996	1560UH1-523-7	.CABLE ASSEMBLY U/O PN 1560UH1-520-1	UHE,UHH,UHV,UHX	EA	1
262	22	A0000		81996	1560UH1-523-9	.CABLE ASSEMBLY U/O PN 1560UH1-520-1	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
262	22	AOOOO		81996	1560UH1-523-17	.CABLE ASSEMBLY U/O PN 1560UH1-520-5	UHE,UHH,UHV,UHX	EA	1
262	22	AOOOO		81996	1560UH1-523-19	.CABLE ASSEMBLY U/W PN 1560UH1-520-7	UHM	EA	1
262	22	PBOZZ	5935-00-715-2756	96906	MS3126F10-6S	..CONNECTOR,PLUG,ELEC U/O PN 1560UH1-523-3,-9,-17,& -19	UHE,UHH,UHM,UHV,UHX	EA	1
262	22A	PAOZZ	5935-00-988-6210	96906	MS3120E10-6P	..CONNECTOR,RECEPTACL U/O PN 1560UH1-523-5	UHE,UHH,UHV,UHX	EA	1
262	22B	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL	UHE,UHH,UHM,UHV,UHX	FT	V
262	22C	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 1560UH1-523-3,-9	UHE,UHH,UHV,UHX	EA	1
262	22D	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 1560UH1-523-17,-19	UHE,UHH,UHM,UHV,UHX	EA	2
262	22E	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 1560UH1-523-5	UHE,UHH,UHV,UHX	EA	3
262	22F	PAOZZ	5975-00-553-6995	96906	MS25171-1S	..CABLE NIPPLE,ELEC U/O PN 1560UH1-523-5,-17,& -19	UHE,UHH,UHM,UHV,UHX	EA	3
262	22G	PAOZZ	5975-00-553-7451	96906	MS25171-2S	..CABLE NIPPLE,ELEC U/O PN 1560UH1-523-7	UHE,UHH,UHV,UHX	EA	1
262	23	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	4
262	24	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	4
262	25	PAOZZ	5305-00-889-2998	96906	MS35206-216	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
262	25A	PAOZZ	5305-00-543-5058	96906	MS35265-16	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
262	26	PAOZZ	5310-00-807-1472	96905	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV	EA	1
262	27	PAOZZ	5310-00-934-9747	96906	MS35649-262	.NUT,PLAIN,HEXAGON U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV,UHX	EA	1
262	28	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV,UHX	EA	2
262	29	PAOZZ	5310-00-209-0788	96906	MS35335-30	.WASHER,LOCK U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV,UHX	EA	1
262	30	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE U/O PN 1560UH1-520-5,-7	UHE,UHH,UHM,UHV,UHX	EA	1
262	31	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
262	32	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
262	33	PAOZZ	5310-00-209-0788	96906	MS35335-30	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	6
262	34	MFOZZ	DELETED	97499	205-075-237-5	.PLATE,PANEL ASSY	UHE,UHH,UHM,UHV,UHX	EA	1
262	35	XDOZZ	5340-00-896-6246	97499	204-075-242-3	.POST,ELECTRICAL-	UHE,UHH,UHM,UHV,UHX	EA	3
262	36	MFOZZ		81996	1560UH1-521-1	.PLATE	UHE,UHH,UHM,UHV,UHX	EA	1
262	37	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER	UHE,UHH,UHM,UHV,UHX	EA	4
262	38	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER	UHE,UHH,UHM,UHV,UHX	EA	4
262	39	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP	UHE,UHH,UHM,UHV,UHX	EA	4
262	40	PAOZZ	1660-01-230-0532	81996	EGD 0945 1	FILTER ASSY SLIDE NVG	UHE,UHH,UHV,UHX	EA	1

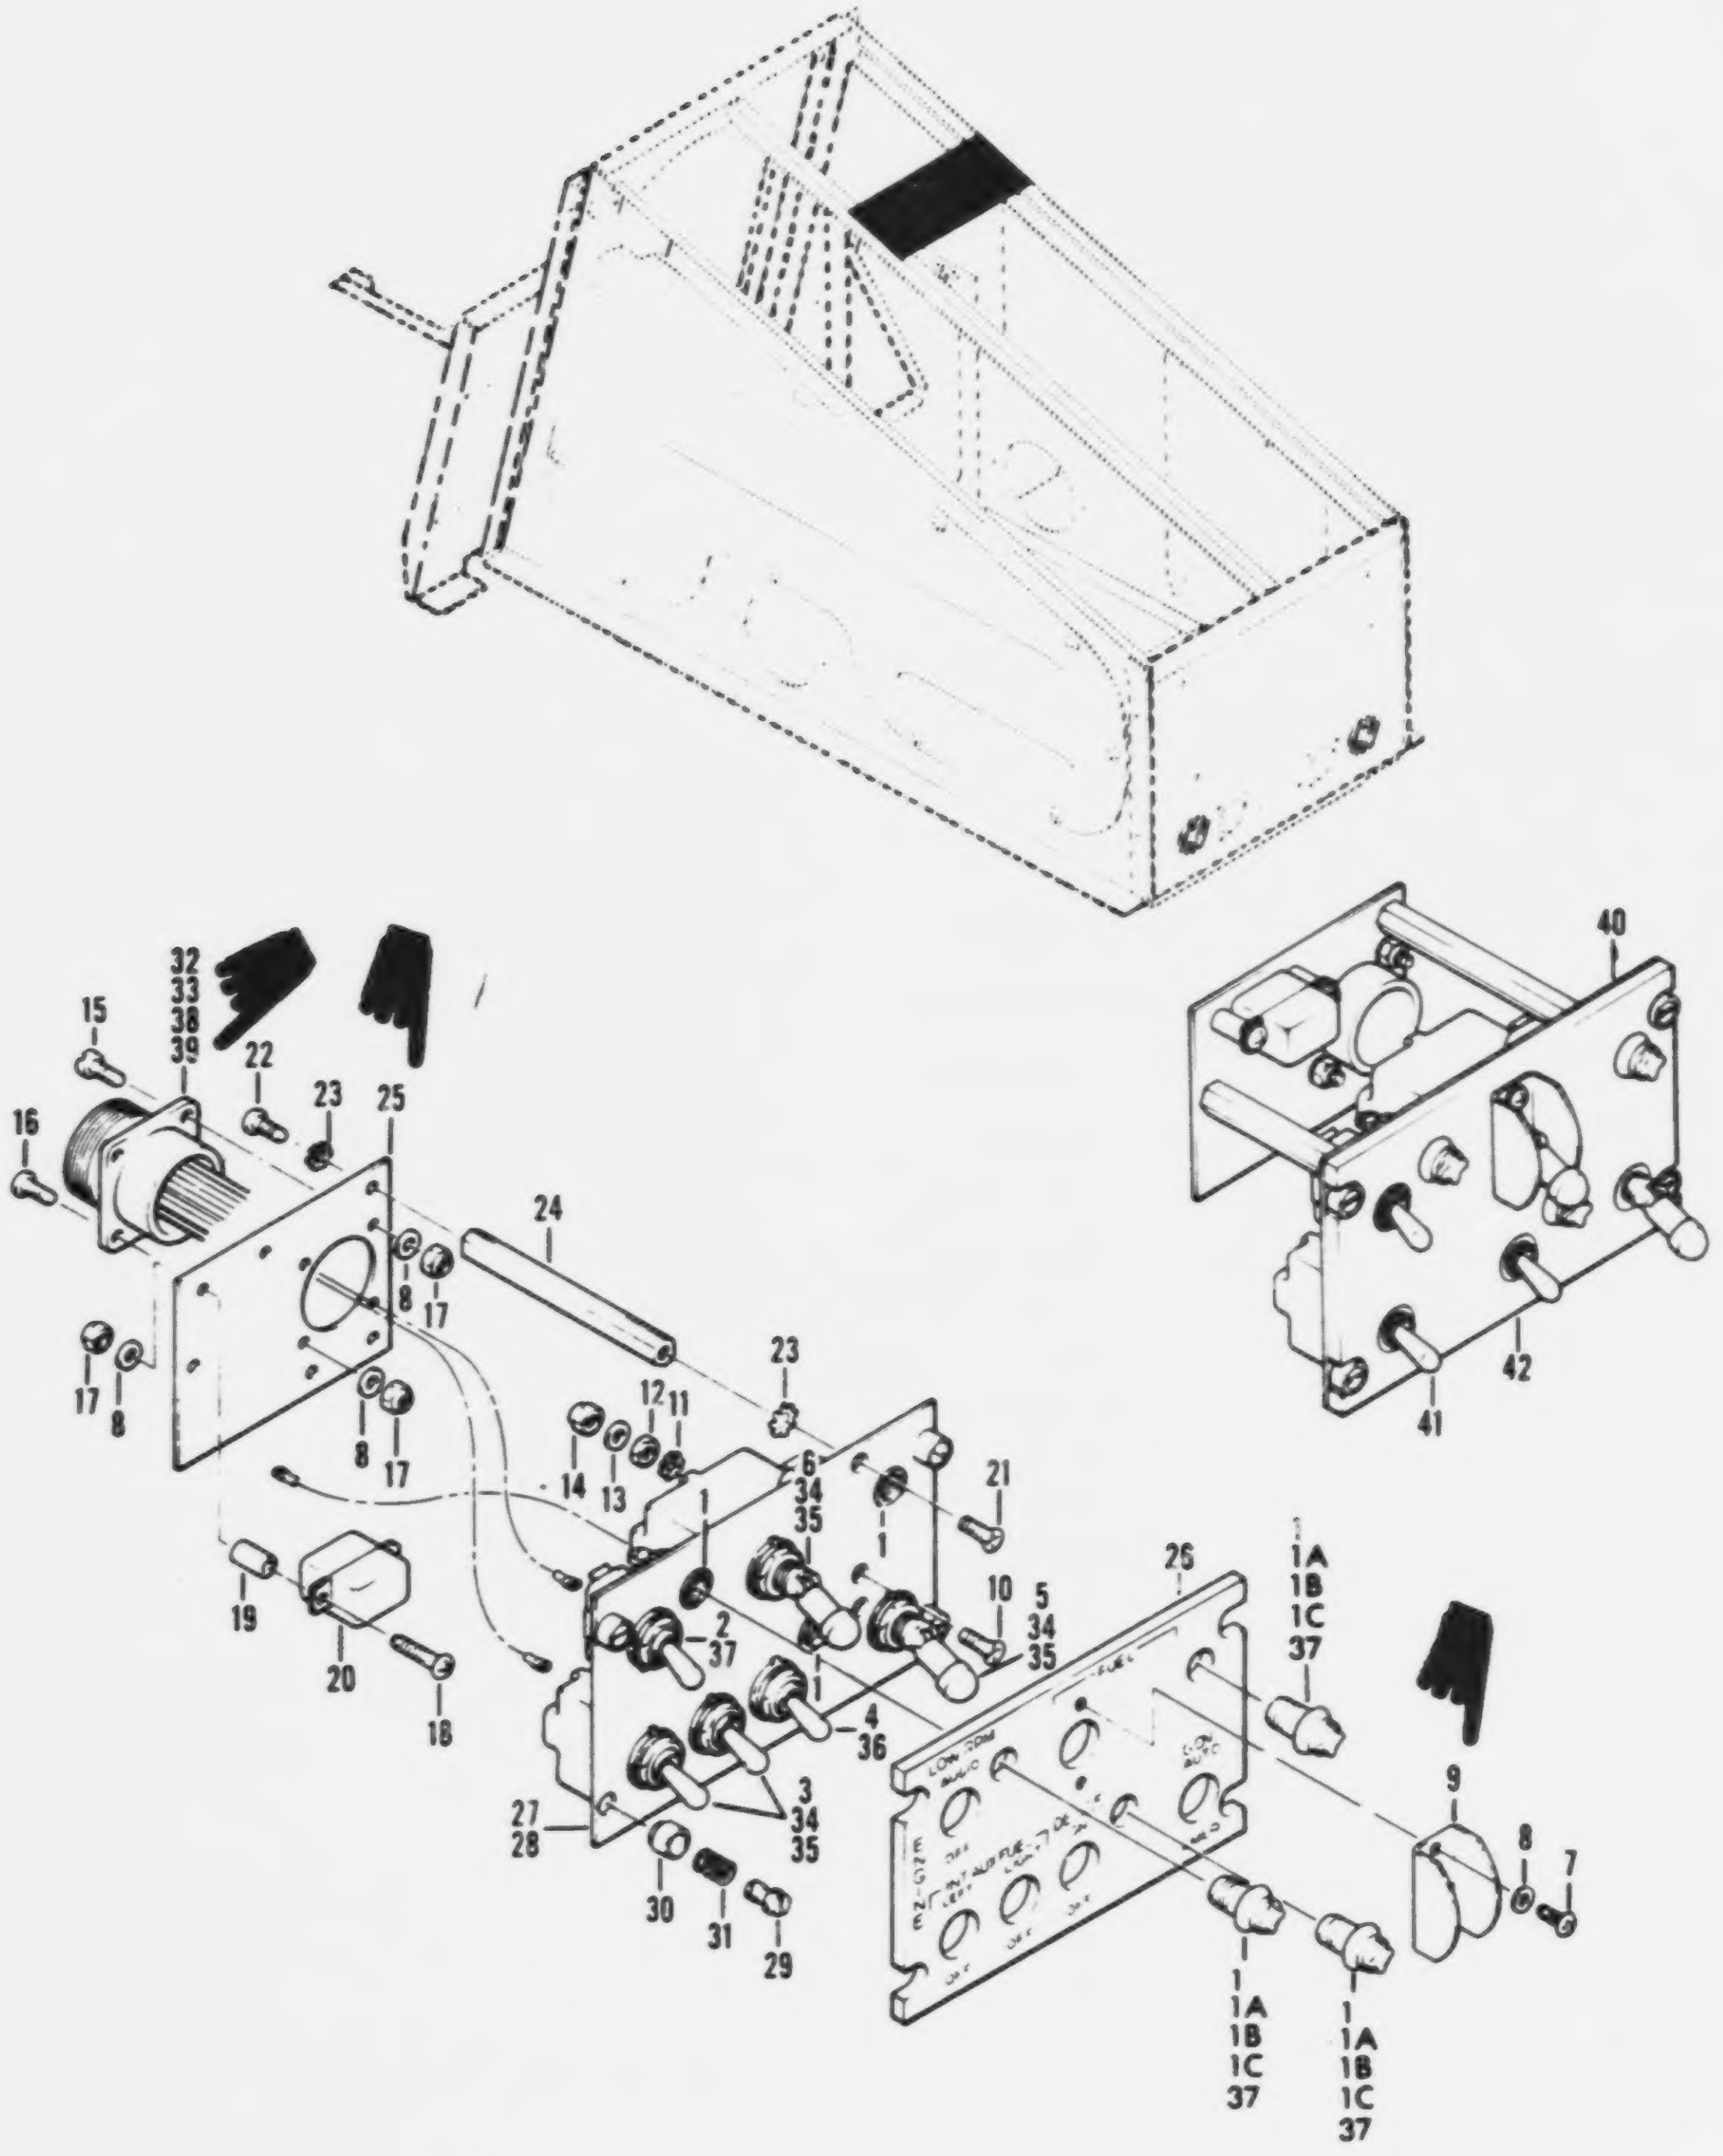
32
33
38
39
15
22
23
25
16
24
8
17
17
8
8
17
23
12
11
14
13
6
34
35
1
21
1
10
5
34
35
19
20
18
2
37
4
36
1
3
34
35
27
28
30
31
29
26
1
1A
1B
1C
37
9
8
7
1
1A
1B
1C
37
1
1A
1B
1C
37
40
41
42

Figure 263. Panel Assembly, Control, Engine

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
263		PA000	6110-00-168-3607	97499	205-075-251-1	PANEL ASSY,CONTROL ENGINE USBL EFF 66-16034 THRU 69-15291 SEE FIG.226 FOR NHA..........UHE,UHH,UHV	EA	1
263		XB00Z	6110-00-168-8605	97499	205-075-251-5	PANEL,ASSY,CONTROL ENGINE USBL EFF 69-15292 & SUBSEQUENT SEE FIG.226 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
263	1	XD00Z		96906	MS25010B11A327	.LIGHT,PANEL..........UHE,UHH,UHV,UHX	EA	3
263	1A	PAOZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT..........UHE,UHH,UHV,UHX	EA	3
263	1B	PAOZZ	621C-00-519-2653	96906	MS25010B11A	..LIGHT,PANEL..........UHE,UHH,UHV,UHX	EA	3
263	1C	PAOZZ	1680-01-230-0531	81996	EGD-0929-1	FILTER,LIGHT NVG..........UHE,UHH,UHV,UHX	EA	3
263	2	PAOZZ	5930-00-539-5889	97499	212-075-266-3	.SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
263	3	PBOZZ	5930-00-655-4241	96906	MS24524-23	.SWITCH,TOGGLE..........UHE,UHH,UHV	EA	2
263	4	PBOZZ	5930-00-655-1515	96906	MS35058-23	.SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
263	5	PAOZZ		97499	212-075-264-1	.SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
263	6	PAOZZ	5930-00-042-7036	96906	MS24660-23G	.SWITCH,TOGGLE..........UHE,UHH,UHV,UHX	EA	1
263	7	PAOZZ	5305-00-207-7468	96906	MS35214-16	.SCREW,MACHINE U/O 205-075-251-5 & U/W PN MS24660-23G ....UHE,UHH,UHV,UHX	EA	2
263	8	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT QTY OF 8 U/O PN 205-075-251-5. U/W MS24660-23G ....UHE,UHH,UHV,UHX	EA	6
263	9	MOOZZ	DELETED	97499	90-047-1	.GUARD,SWITCH U/O 205-075-251-5 & U/W PN MS24660-23G ....UHE,UHH,UHV,UHX	EA	1
263	10	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
263	11	PAOZZ	5310-00-184-8977	96906	MS35338-98	.WASHER,LOCK..........UHE,UHH,UHV,UHX	EA	1
263	12	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
263	13	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
263	14	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
263	15	PAOZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
263	16	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
263	17	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	4
263	18	PAOZZ	5305-00-984-4976	96906	MS35206-219	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
263	19	PAOZZ	5365-00-684-5983	80205	NAS43DD0-28	.SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
263	20	PAOZZ	5945-00-177-3675	97499	209-075-323-3	.RELAY,ARMATURE..........UHE,UHH,UHV,UHX	EA	2
263	21	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
263	22	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
263	23	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK..........UHE,UHH,UHV,UHX	EA	6
263	24	PAOZZ	5340-00-225-0303	97499	204-075-242-7	.POST,ELECTRICAL..........UHE,UHH,UHV,UHX	EA	3
263	24	PAOZZ		06540	8240A0632-16	.POST,ELECTRICAL..........UHE,UHH,UHV,UHX	EA	3
263	25	MFOZZ	DELETED	97499	205-075-229-1	.PLATE,MOUNTING..........UHE,UHH,UHV,UHX	EA	1
263	26	PAOZZ	6110-01-148-8914	97499	205-075-249-3	.PANEL,CONTROL..........UHE,UHH,UHV	EA	1
263	27	XAOZZ		97499	205-075-232-1	.PLATE,MOUNTING U/O PN 205-075-251-1..........UHE,UHH,UHV	EA	1
263	28	XA000		97499	205-075-232-5	.PLATE,MOUNTING U/O PN 205-075-251-5..........UHE,UHH,UHV,UHX	EA	1
263	29	XAOZZ		72794	PF3 1-2 38	..STUD,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	4
263	30	XAOZZ		72794	PC3 1-2	..RETAINER,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	4
263	31	XAOZZ		72794	PS3 1-2	..SPRING,HELICAL,COMP..........UHE,UHH,UHV,UHX	EA	4
263	32	AOOOO		97499	205-075-412-7	.CABLE ASSY,POWER U/O 205-075-251-1..........UHE,UHH,UHV	EA	1
263	33	A0000		97499	205-075-412-19	.WIRING ASSEMBLY U/O PN 205-075-251-5..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
263	34	PAOZZ		96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-412-7..............UHE,UHH,UHV	EA	23
263	35	PAOZZ		96906	MS25036-102	..TERMINAL,LUG U/O PN 205-075-412-19.........UHE,UHH,UHV,UHX	EA	25
263	36	PAOZZ		96906	MS25036-107	..TERMINAL,LUG...................................UHE,UHH,UHV,UHX	EA	2
263	37	PAOZZ	5940-00-113-9828	96906	MS25036-148	..TERMINAL,LUG...................................UHE,UHH,UHV,UHX	EA	10
263	38	PBOZZ	5935-00-725-4446	96906	MS3122E20-39P	..CONNECTOR,RECEPTACL...........................UHE,UHH,UHV,UHX	EA	1
263	39	MOOZZ	DELETED	97499	85T4-10-1	..NIPPLE..UHE,UHH,UHV,UHX	EA	8
263	40	AOOOO		20309	ES-C-221542	PANEL ASSEMBLY SEE FIG.68 FOR NHA.............................UHX	EA	1
263	41	PAOZZ	5930-00-488-4691	96906	MS27407-6	.SWITCH,TOGGLE...UHX	EA	1
263	42	MFOZZ		20309	ES-C-221569	.PANEL..UHX	EA	1
263		XBOOZ	6110-00-168-8605	97499	205-075-251-5	.PANEL ASSY.CONTROL REFER TO BREAKDOWN ABOVE FOR DETAILS ....UHX	EA	REF

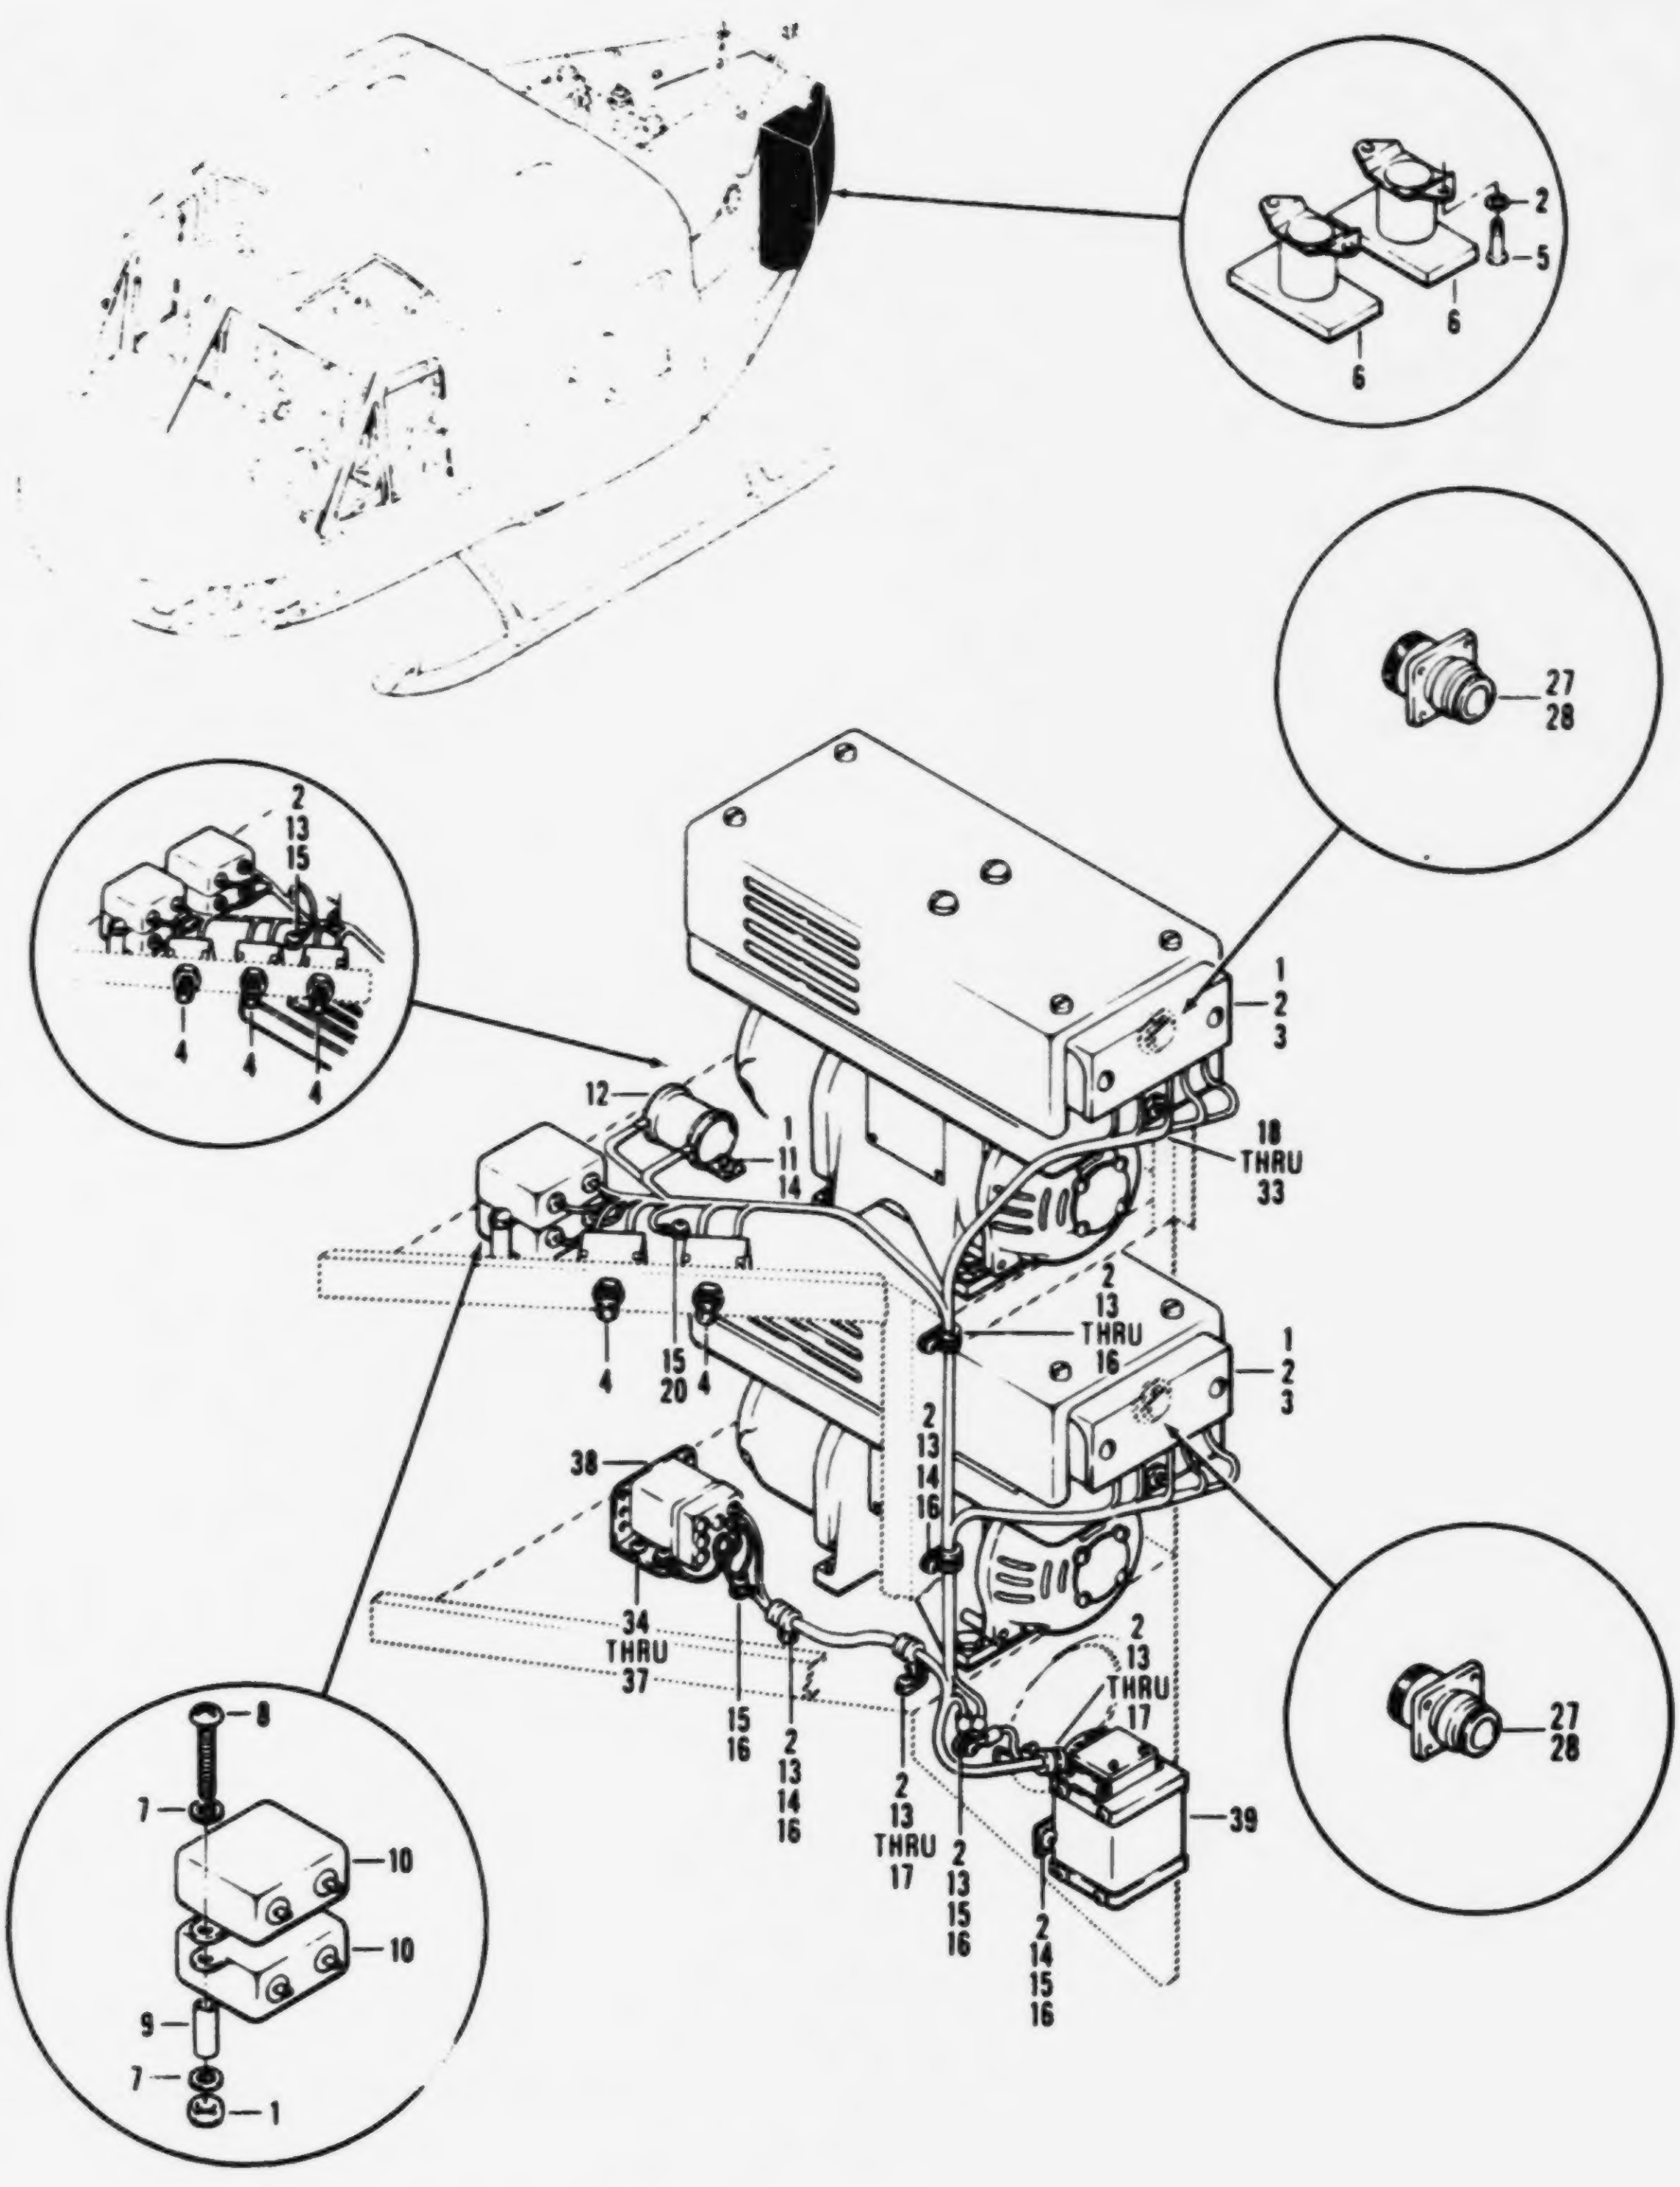
2
5
6
6
27
28
2
13
15
4
4
4
1
2
3
12
1
11
14
18
THRU
33
2
13
THRU
16
1
2
3
4
15
20
4
2
13
14
16
38
34
THRU
37
15
16
2
13
14
16
2
13
THRU
17
2
13
THRU
17
2
13
15
16
39
2
14
15
16
27
28
8
7
10
10
9
7
1

Figure 264. Inverter Installation, Main and Spare

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
264		XCFZZ		97499	204-075-106-7	INVERTER INSTL MAIN AND SPARE USBL EFF 60-3546 THRU 61-803 SEE FIG.225 FOR NHA....UHB	EA	1
264		XCFZZ		97499	204-075-120-1	INVERTER INSTL MAIN AND SPARE USBL EFF (UH-1B) 62-1872 & SUBSEQUENT SEE FIG.225 FOR NHA....UHB,UHC,UHM	EA	1
264	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	8
264	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHB,UHC,UHM	EA	16
264	3	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE....UHB,UHC,UHM	EA	8
264	3	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE U/O PN 204-075-120-1....UHB,UHC,UHM	EA	8
264	4	PAOZZ	5925-00-045-9095	76374	MP1501C	.CIRCUIT BREAKER....UHB,UHC,UHM	EA	2
264	5	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE U/O PN 204-075-120-1....UHB,UHC,UHM	EA	4
264	6	PAOZZ	5945-00-686-6877	96906	MS24166-D1	.RELAY,ELECTROMAGNET U/O PN 204-075-120-1....UHB,UHC,UHM	EA	2
264	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHB,UHC,UHM	EA	4
264	8	PAOZZ	5305-00-995-344[illegible]	96906	MS35207-269	.SCREW,MACHINE....UHB,UHC,UHM	EA	2
264	9	PAOZZ	5365-00-662-3100	80205	NAS43D03-64	.SPACER,SLEEVE....UHB,UHC,UHM	EA	2
264	10	PAOZZ	5910-00-543-0845	81349	CP53B1KE105K1	.CAPACITOR,FIXED....UHB,UHC,UHM	EA	2
264	11	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE....UHB,UHC,UHM	EA	2
264	12	PAOZZ	5905-00-985-6297	81349	RW20V911	.RESISTOR,FIXED,WIRE....UHB,UHC,UHM	EA	1
264	13	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE....UHB,UHC,UHM	EA	12
264	14	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE....UHB,UHC,UHM	EA	2
264	15	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP....UHB,UHC,UHM	EA	3
264	16	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
264	17	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
264	18	AOOOZ	1560-00-731-9004	97499	204-075-427-3	.CABLE ASSEMBLY U/O PN 204-075-106-7....UHB	EA	1
264	19	AOOOZ	1560-00-987-1397	97499	204-075-900-3	.WIRING ASSY U/O PN 204-075-120-1....UHB,UHC,UHM	EA	1
264	20	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG....UHB,UHC,UHM	EA	9
264	21	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHB,UHC,UHM	EA	9
264	22	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG....UHB,UHC,UHM	EA	2
264	23	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG....UHB,UHC,UHM	EA	5
264	25	PAOZZ	5940-00-143-4777	96906	MS25036-157	..TERMINAL,LUG U/O UH-1B PN 204-075-427-3....UHB	EA	2
264	26	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 204-075-900-3....UHB,UHC,UHM	EA	2
264	27	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER,CABLE CLAMP CONNECTOR U/O PN 204-075-900-3 ....UHB,UHC,UHM	EA	2
264	28	PAOZZ	5935-00-727-1971	96906	MS3106R24-20S	..CONNECTOR,PLUG,ELEC U/O PN 204-075-900-3....UHB,UHC,UHM	EA	2
264	29	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-900-3....UHB,UHC,UHM	FT	14
264	30	PBOZZ	6145-00-578-7514	81349	M5086/2-12-9	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
264	31	PBOZZ	6145-00-851-8506	96906	MS25190820	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
264	32	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL....UHB,UHC,UHM	FT	V
264	33	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING....UHB,UHC,UHM	EA	6
264	34	PAOZZ	5310-00-167-0831	88044	AN960-4L	.WASHER,FLAT....UHB	EA	10
264	35	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE....UHB,UHC,UHM	EA	2
264	36	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT....UHB,UHC,UHM	EA	2
264	37	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	2
264	38	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET U/O PN 204-075-106-7 & 204-075-120-1 ....UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
264	39	PAOZZ	5950-00-648-7167	01526	9T39Y5	. TRANSFORMER, POWER .... UHB, UHC, UHM	EA	1

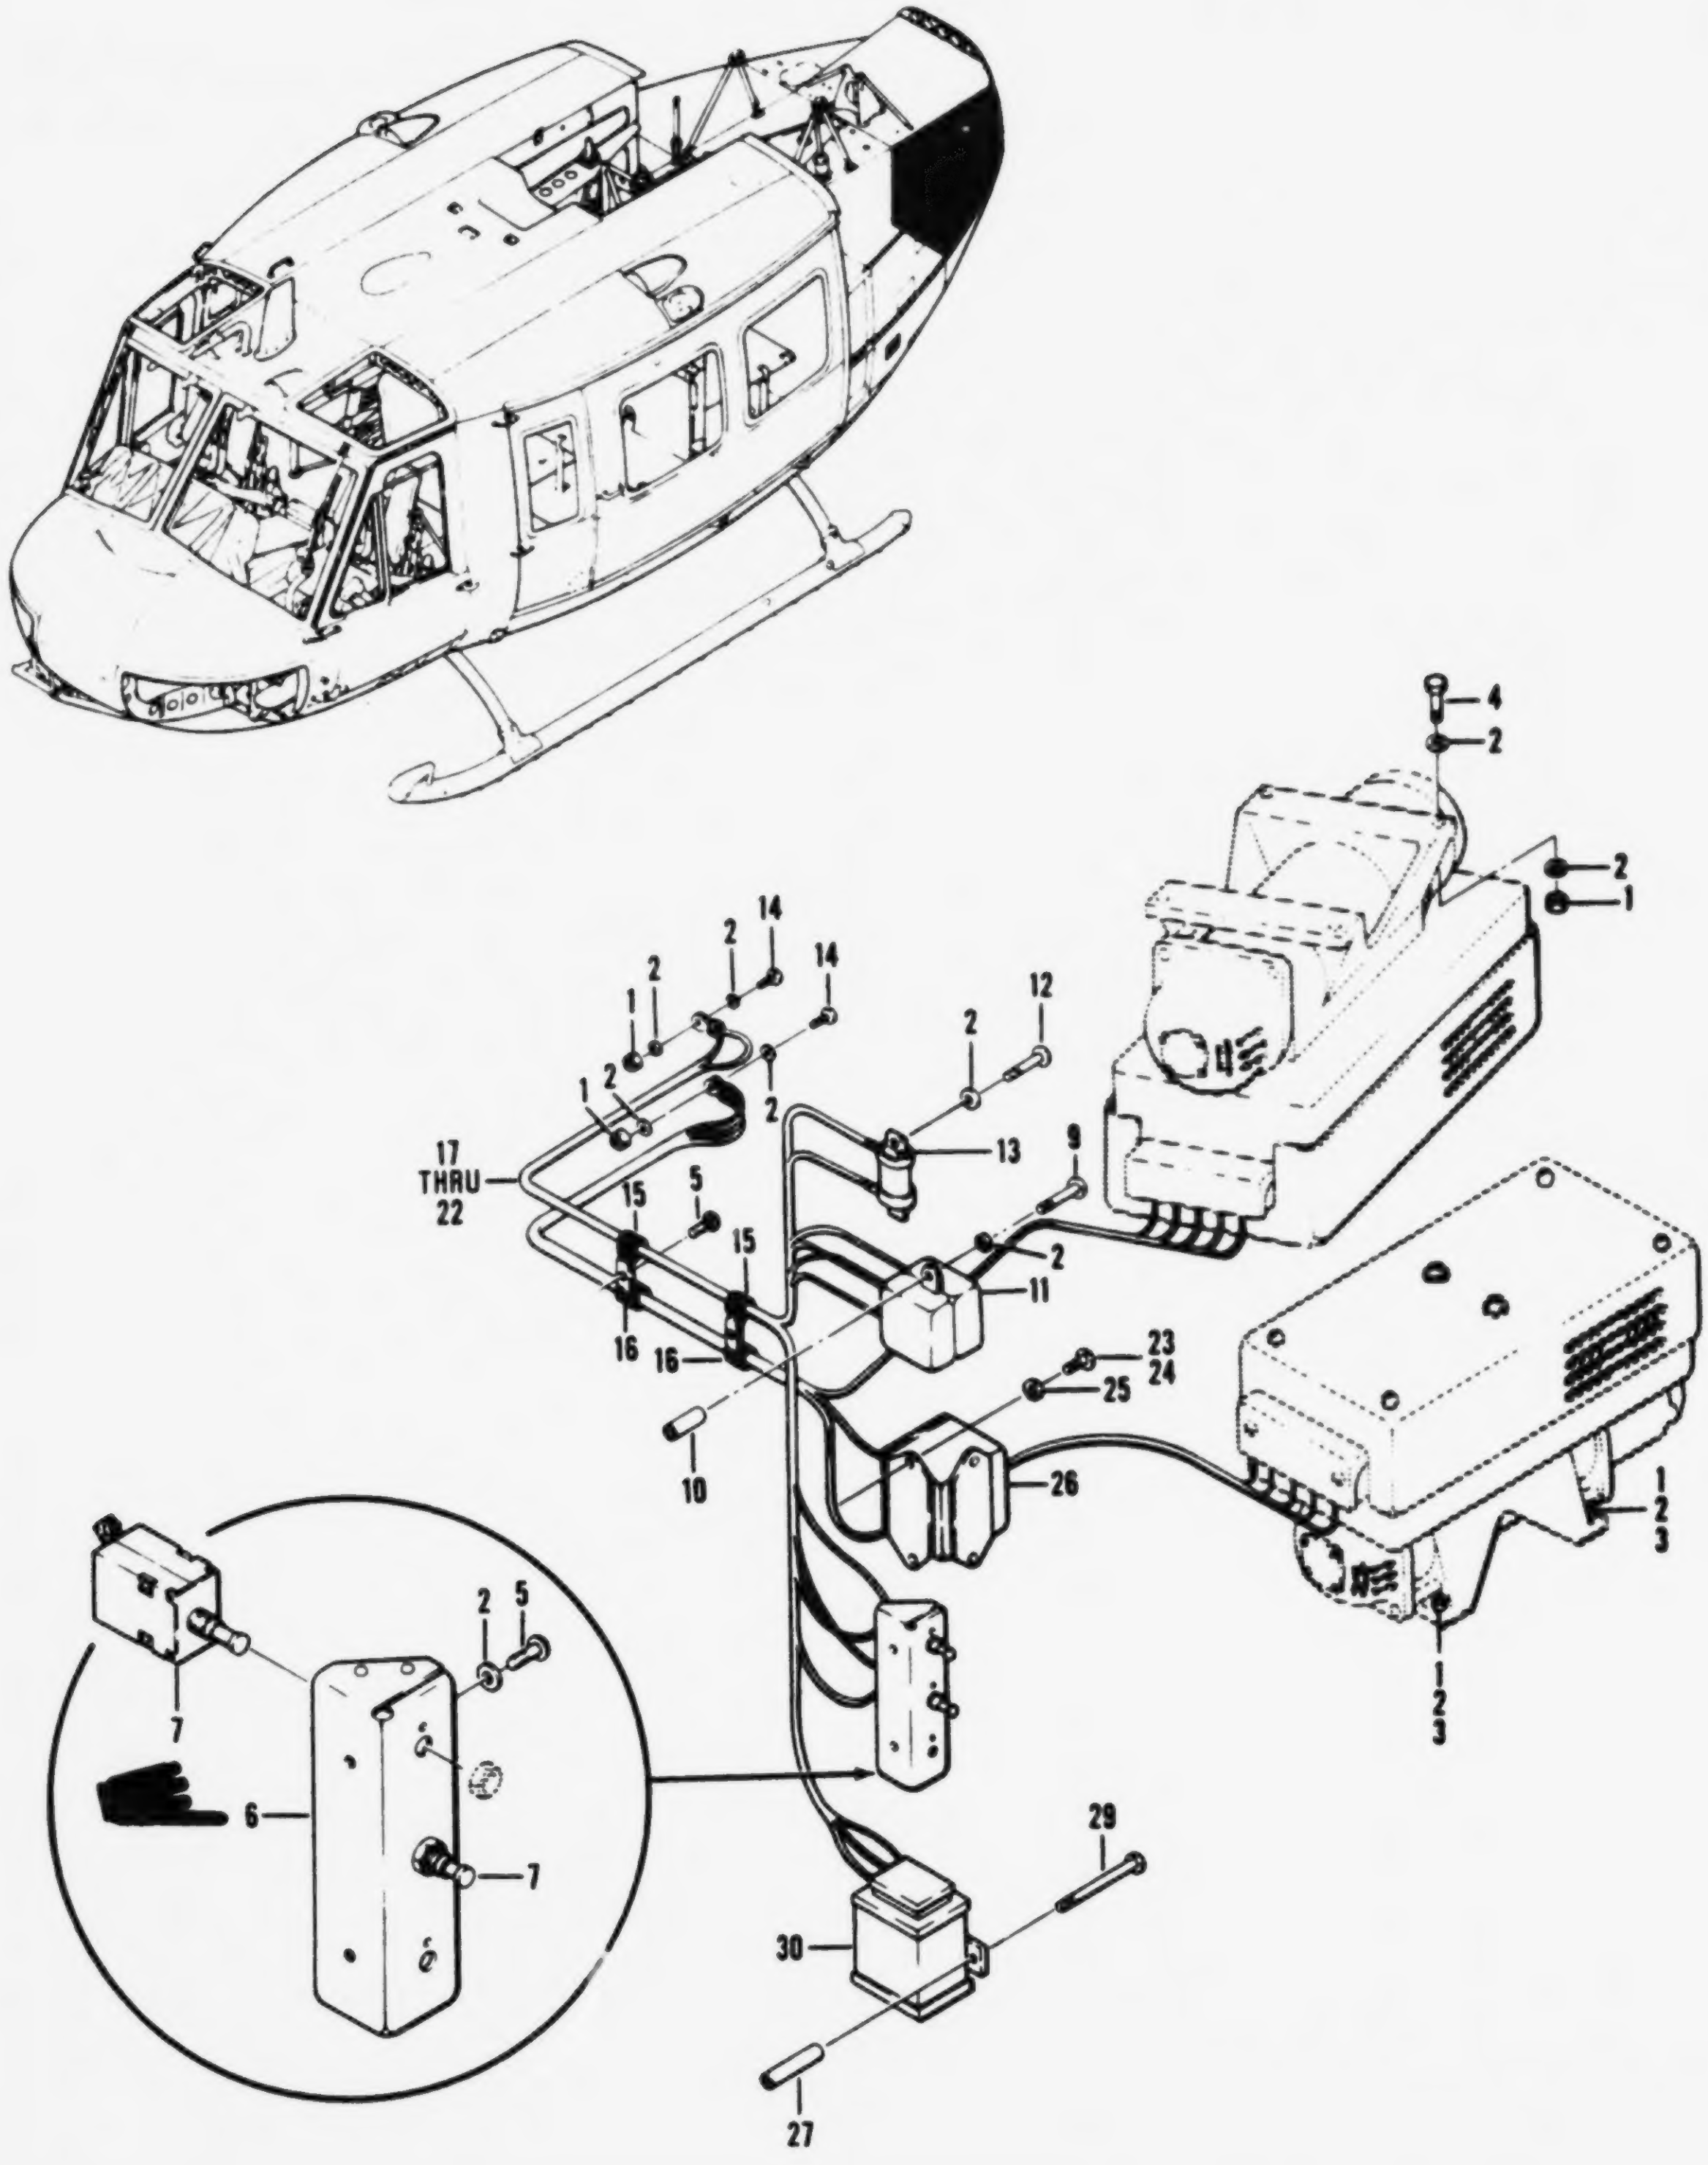
4
2
2
1
14
2
2
14
1
2
12
2
1
2
2
13
17
THRU
22
9
15
5
15
2
11
16
16
23
24
25
10
26
1
2
3
2
5
7
1
2
3
6
7
29
30
27

Figure 265. Inverter Installation, Main and Spare

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
266		XCFZZ		97499	205-075-140-1	INVERTER INSTL MAIN AND SPARE USBL EFF 62-2106 THRU 62-12372 SEE FIG.226 FOR NHA........UHE,UHH,UHV,UHX	EA	1
266	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	8
266	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	24
266	3	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	4
266	4	PAOZZ	5306-00-182-2061	88044	AN3H10A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	4
266	5	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
266	6	MFOZZ	DELETED	97499	205-075-126-1	.SUPPORT ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
266	7	PAOZZ	5925-00-045-9095	76374	MF1501C	.CIRCUIT BREAKER........UHE,UHH,UHV,UHX	EA	2
266	9	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
266	10	PAOZZ	5365-00-662-3100	80205	NAS43003-64	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	2
266	11	PAOZZ	5910-00-543-0845	81349	CP5381KE105K1	.CAPACITOR,FIXED, PAPER........UHE,UHH,UHV,UHX	EA	2
266	12	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
266	13	PAOZZ	5905-00-985-6297	81349	RW20V911	.RESISTOR,FIXED,WIRE........UHE,UHH,UHV,UHX	EA	1
266	14	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	10
266	15	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	2
266	16	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
266	17	AOOOZ	1560-00-299-0995	97499	205-075-411-1	.CABLE ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
266	18	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	11
266	19	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	10
266	20	PAOZZ	5940-00-143-4794	96906	MS25036-112	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	2
266	21	PAOZZ	5940-00-143-4777	96906	MS25036-157	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	2
266	22	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	9
266	23	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
266	24	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
266	25	PAOZZ	5310-00-184-8965	88044	AN960PD8	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	4
266	26	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET........UHE,UHH,UHV,UHX	EA	1
266	27	PAOZZ	5365-00-586-3624	80205	NAS43003-112	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	1
266	29	PAOZZ	5305-00-995-6311	96906	MS35207-271	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
266	30	PAOZZ	5950-00-848-7167	01526	9T39Y5	.TRANSFORMER,POWER........UHE,UHH,UHV,UHX	EA	1

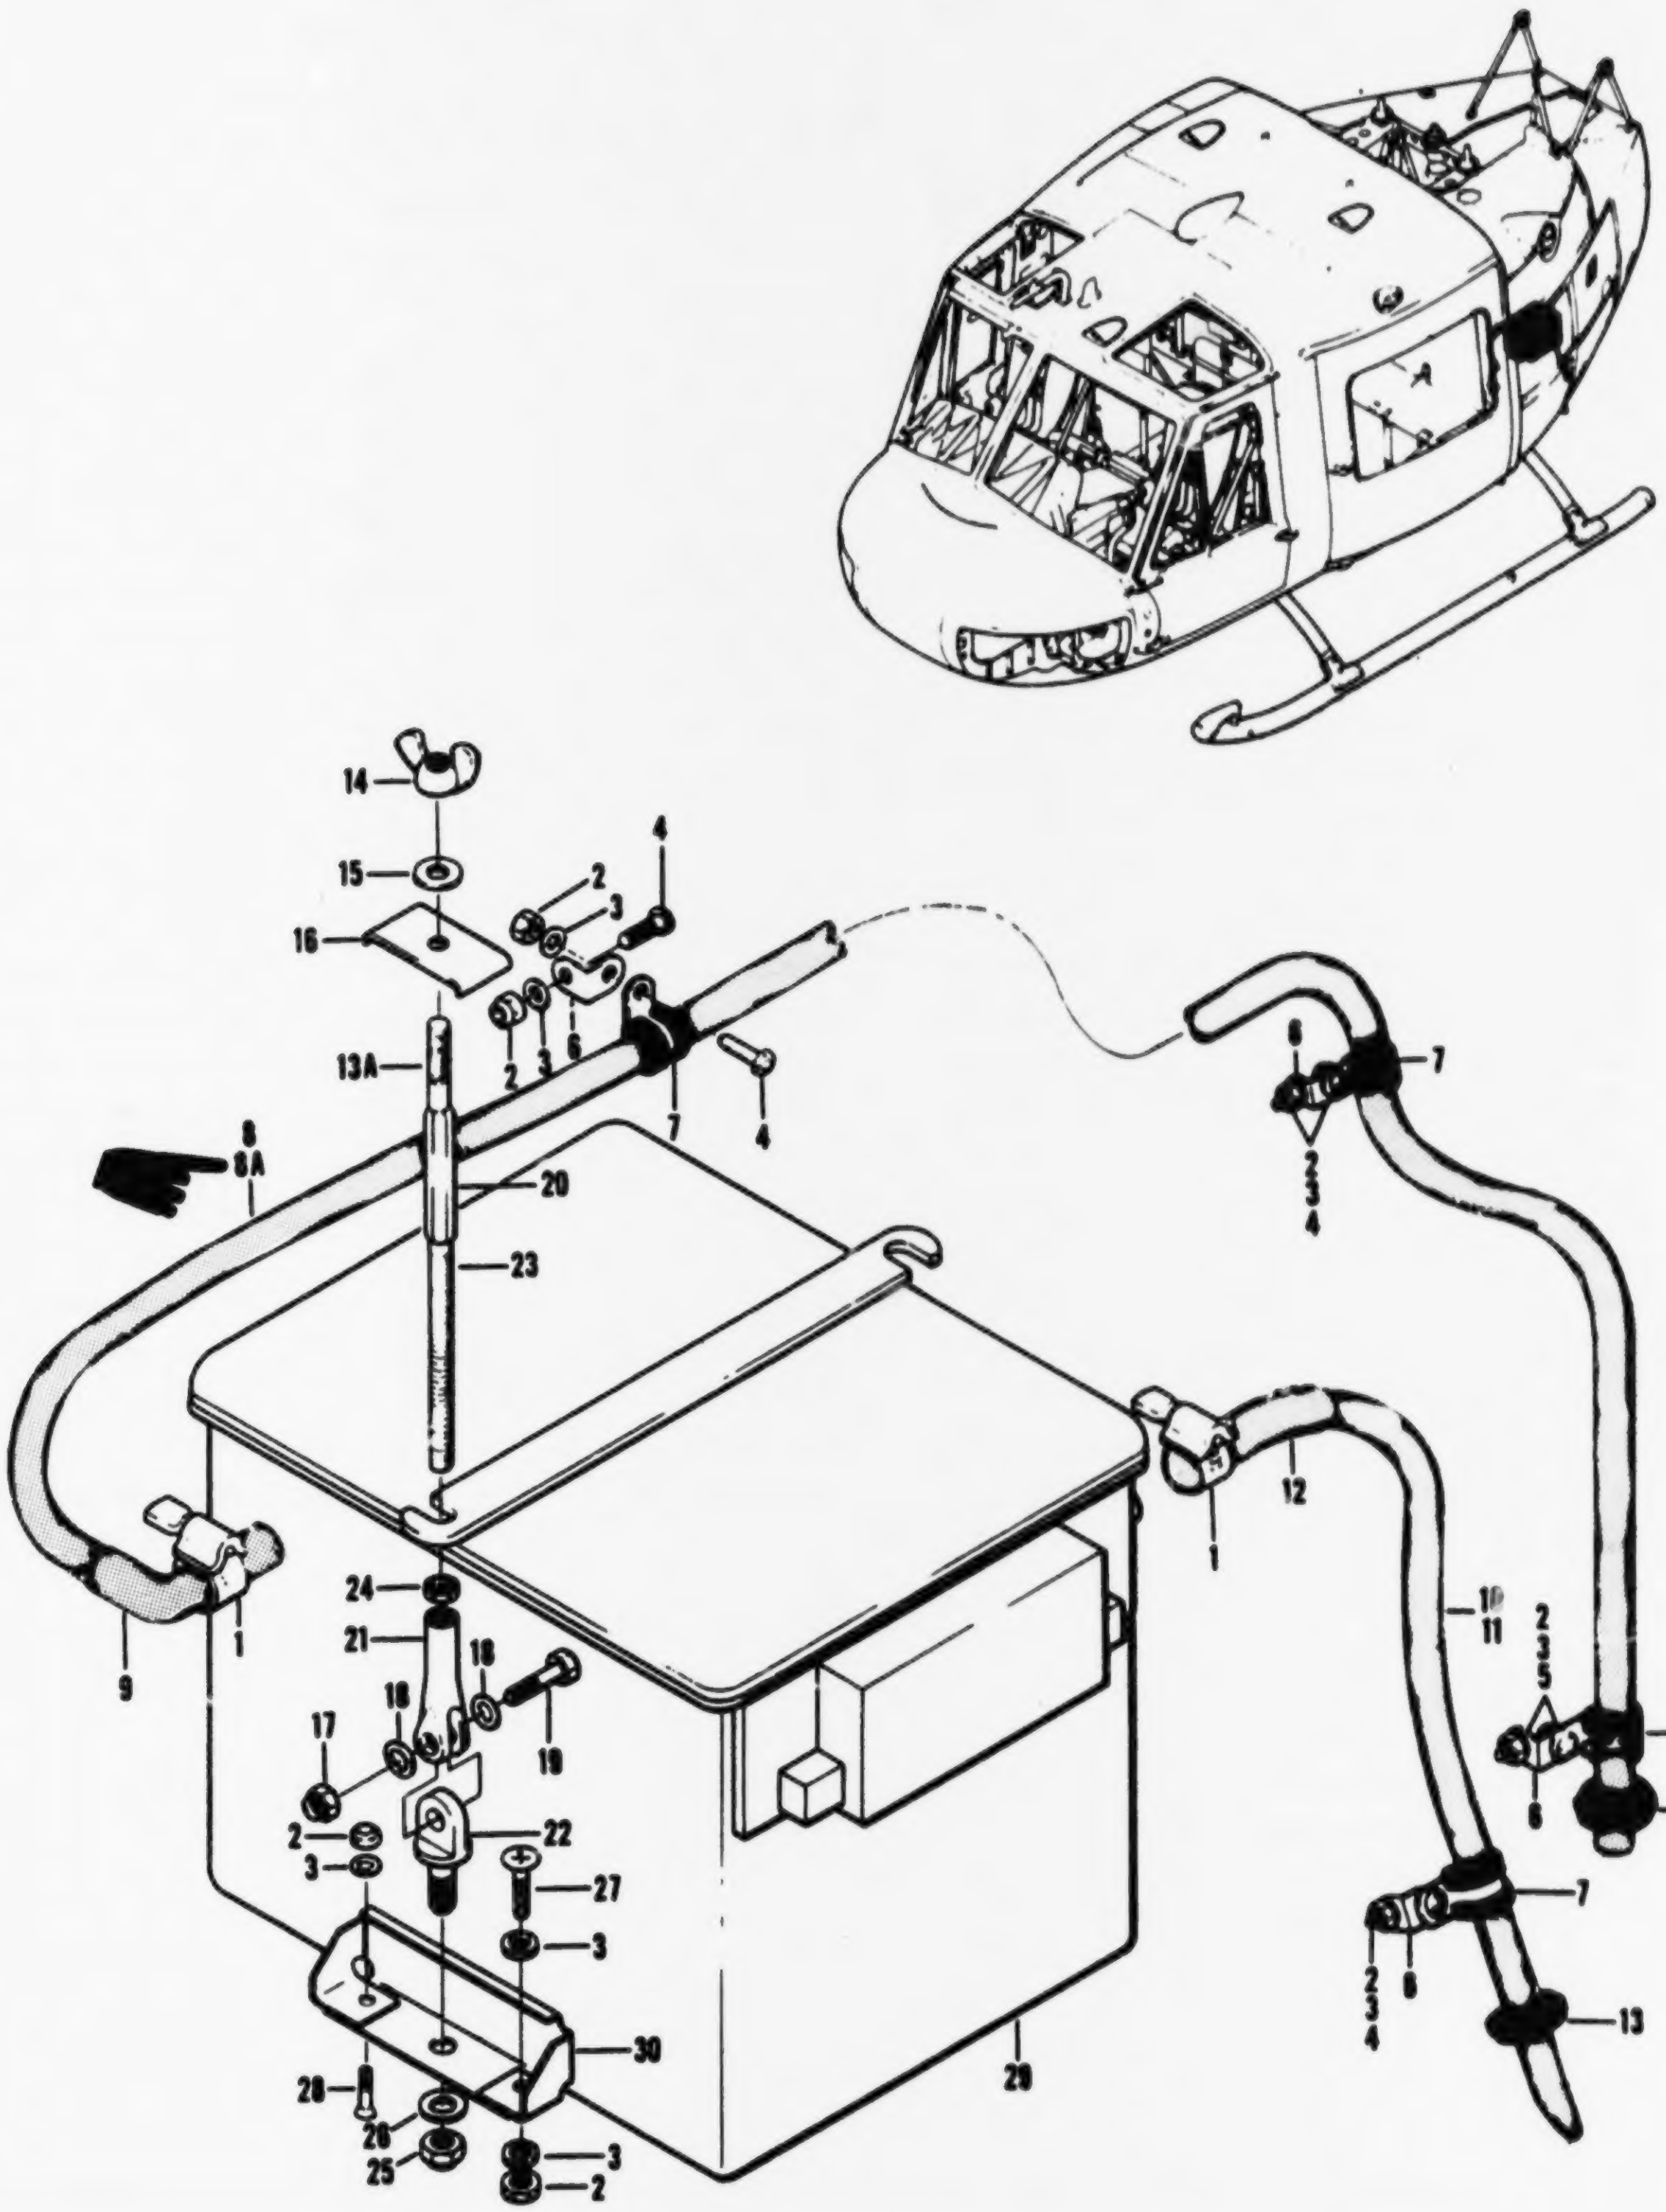
14
15
16
2
3
4
6
2
3
13A
7
4
8
8A
20
23
6
7
2
3
4
12
1
9
1
24
21
18
18
19
17
22
2
3
27
3
30
28
26
25
3
2
29
10
11
2
3
5
7
6
13
7
6
2
3
4
13

Figure 266. Battery Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	UM	QTY INC IN UNIT
266		XCFZZ		97499	204-075-107-5	BATTERY INSTL USBL EFF 60-3546 THRU 60-3619 SEE FIG.225 FOR NHA.......UHB	EA	1
266		XCFZZ		97499	204-075-115-1	BATTERY INSTL USBL EFF 61-686 THRU 61-803 SEE FIG.225 FOR NHA.......UHB	EA	1
266		XCFZZ		97499	204-075-115-3	BATTERY INSTL USBL EFF 62-1872 & SUBSEQUENT SEE FIG.225 FOR NHA.......UHB	EA	1
266		XCFZZ		97499	204-075-801-3	BATTERY INSTL USBL EFF 64-14101 & SUBSEQUENT SEE FIG.225 FOR NHA.......UHC,UHM	EA	1
266	1	PAOZZ	4730-00-278-9097	88044	AN737RM26	.CLAMP,HOSE.......UHB,UHC,UHM	EA	2
266	2	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHB,UHC,UHM	EA	10
266	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......UHB,UHC,UHM	EA	13
266	4	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE.......UHB,UHC,UHM	EA	6
266	5	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT.......UHB,UHC,UHM	EA	2
266	6	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE.......UHB,UHC,UHM	EA	3
266	7	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP,LOOP.......UHB,UHC,UHM	EA	4
266	8	AOOOZ	1560-00-226-5491	97499	204-075-173-33	.TUBING ASSY,DRAIN.......UHB,UHC,UHM	EA	1
266	8A	MOOZZ	DELETED	97499	204-075-173-35	..TUBING,RUBBER.......UHB,UHC,UHM	EA	1
266	9	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER,BATTERY DRA.......UHB,UHC,UHM	EA	1
266	10	AOOOZ	1560-00-923-8262	97499	204-075-173-21	.TUBE ASSY,DRAIN -ALTERNATE-.......UHB,UHC,UHM	EA	1
266	10	AOOOZ	1560-00-858-0011	97499	204-075-173-5	.TUBE ASSY,DRAIN.......UHB,UHC,UHM	EA	1
266	11	MOOZZ		97499	204-075-173-7	..TUBE U/O PN 204-075-173-5.......UHB,UHC,UHM	EA	1
266	11	MOOZZ		97499	204-075-173-23	..TUBE U/O PN 204-075-173-21.......UHB,UHC,UHM	EA	1
266	12	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER,BATTERY DRA.......UHB,UHC,UHM	EA	1
266	13	PAOZZ	5325-00-276-6100	96906	MS35489-14	.GROMMET,NONMETALLIC -ALTERNATE-.......UHB,UHC,UHM	EA	2
266	13	PAOZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET,NONMETALLIC.......UHB,UHC,UHM	EA	2
266	13A	PAOOO	1560-00-775-7759	97499	204-075-161-1	.TIE DOWN ROD ASSY.......UHB,UHC,UHM	EA	2
266	14	PAOZZ	5310-00-080-8495	96906	MS35425-39	..NUT,PLAIN,WING.......UHB,UHC,UHM	EA	1
266	15	PAOZZ	5310-00-531-9515	88044	AN960C416	..WASHER,FLAT.......UHB,UHC,UHM	EA	1
266	16	PAOZZ	1560-00-994-5702	97499	204-075-567-11	..CHANNEL,TIE DOWN.......UHB,UHC,UHM	EA	1
266	17	PAOZZ	5310-00-857-6557	96906	MS21045L4	..NUT,SELF-LOCKING,HE.......UHB,UHC,UHM	EA	1
266	18	PAOZZ	5310-00-167-0836	88044	AN960-416L	..WASHER,FLAT.......UHB,UHC,UHM	EA	2
266	19	PAOZZ	5306-00-292-8252	88044	AN4H7A	..BOLT,MACHINE.......UHB,UHC,UHM	EA	1
266	20	PAOZZ	5340-00-530-5357	88044	AN665-34R	..CLEVIS,ROD END.......UHB,UHC,UHM	EA	1
266	21	PAOZZ	1560-00-957-7669	97499	204-075-161-3	..ROD END,BATTERY CAS.......UHB,UHC,UHM	EA	1
266	22	PAOZZ	5306-00-206-3869	88044	AN44-7	..BOLT,EYE.......UHB,UHC,UHM	EA	1
266	23	PAOZZ	5307-00-897-5187	97499	204-075-161-5	..STUD,SHOULDERED.......UHB,UHC,UHM	EA	1
266	24	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON.......UHB,UHC,UHM	EA	1
266	25	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHB,UHC,UHM	EA	2
266	26	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT.......UHB,UHC,UHM	EA	2
266	27	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE.......UHB,UHC,UHM	EA	3
266	28	PAOZZ	5305-00-965-5879	96906	MS24693S275	.SCREW,MACHINE.......UHB,UHC,UHM	EA	1
266	29	PAOFF	6140-01-046-1116	80058	BB-433A/A	.BATTERY,STORAGE.......UHB,UHC,UHM	EA	1
266	30	PAOOZ	1560-00-867-1172	97499	204-075-134-1	.BRACKET,BATTERY TIE.......UHB,UHC,UHM	EA	2

Fig. 267 NOT USED

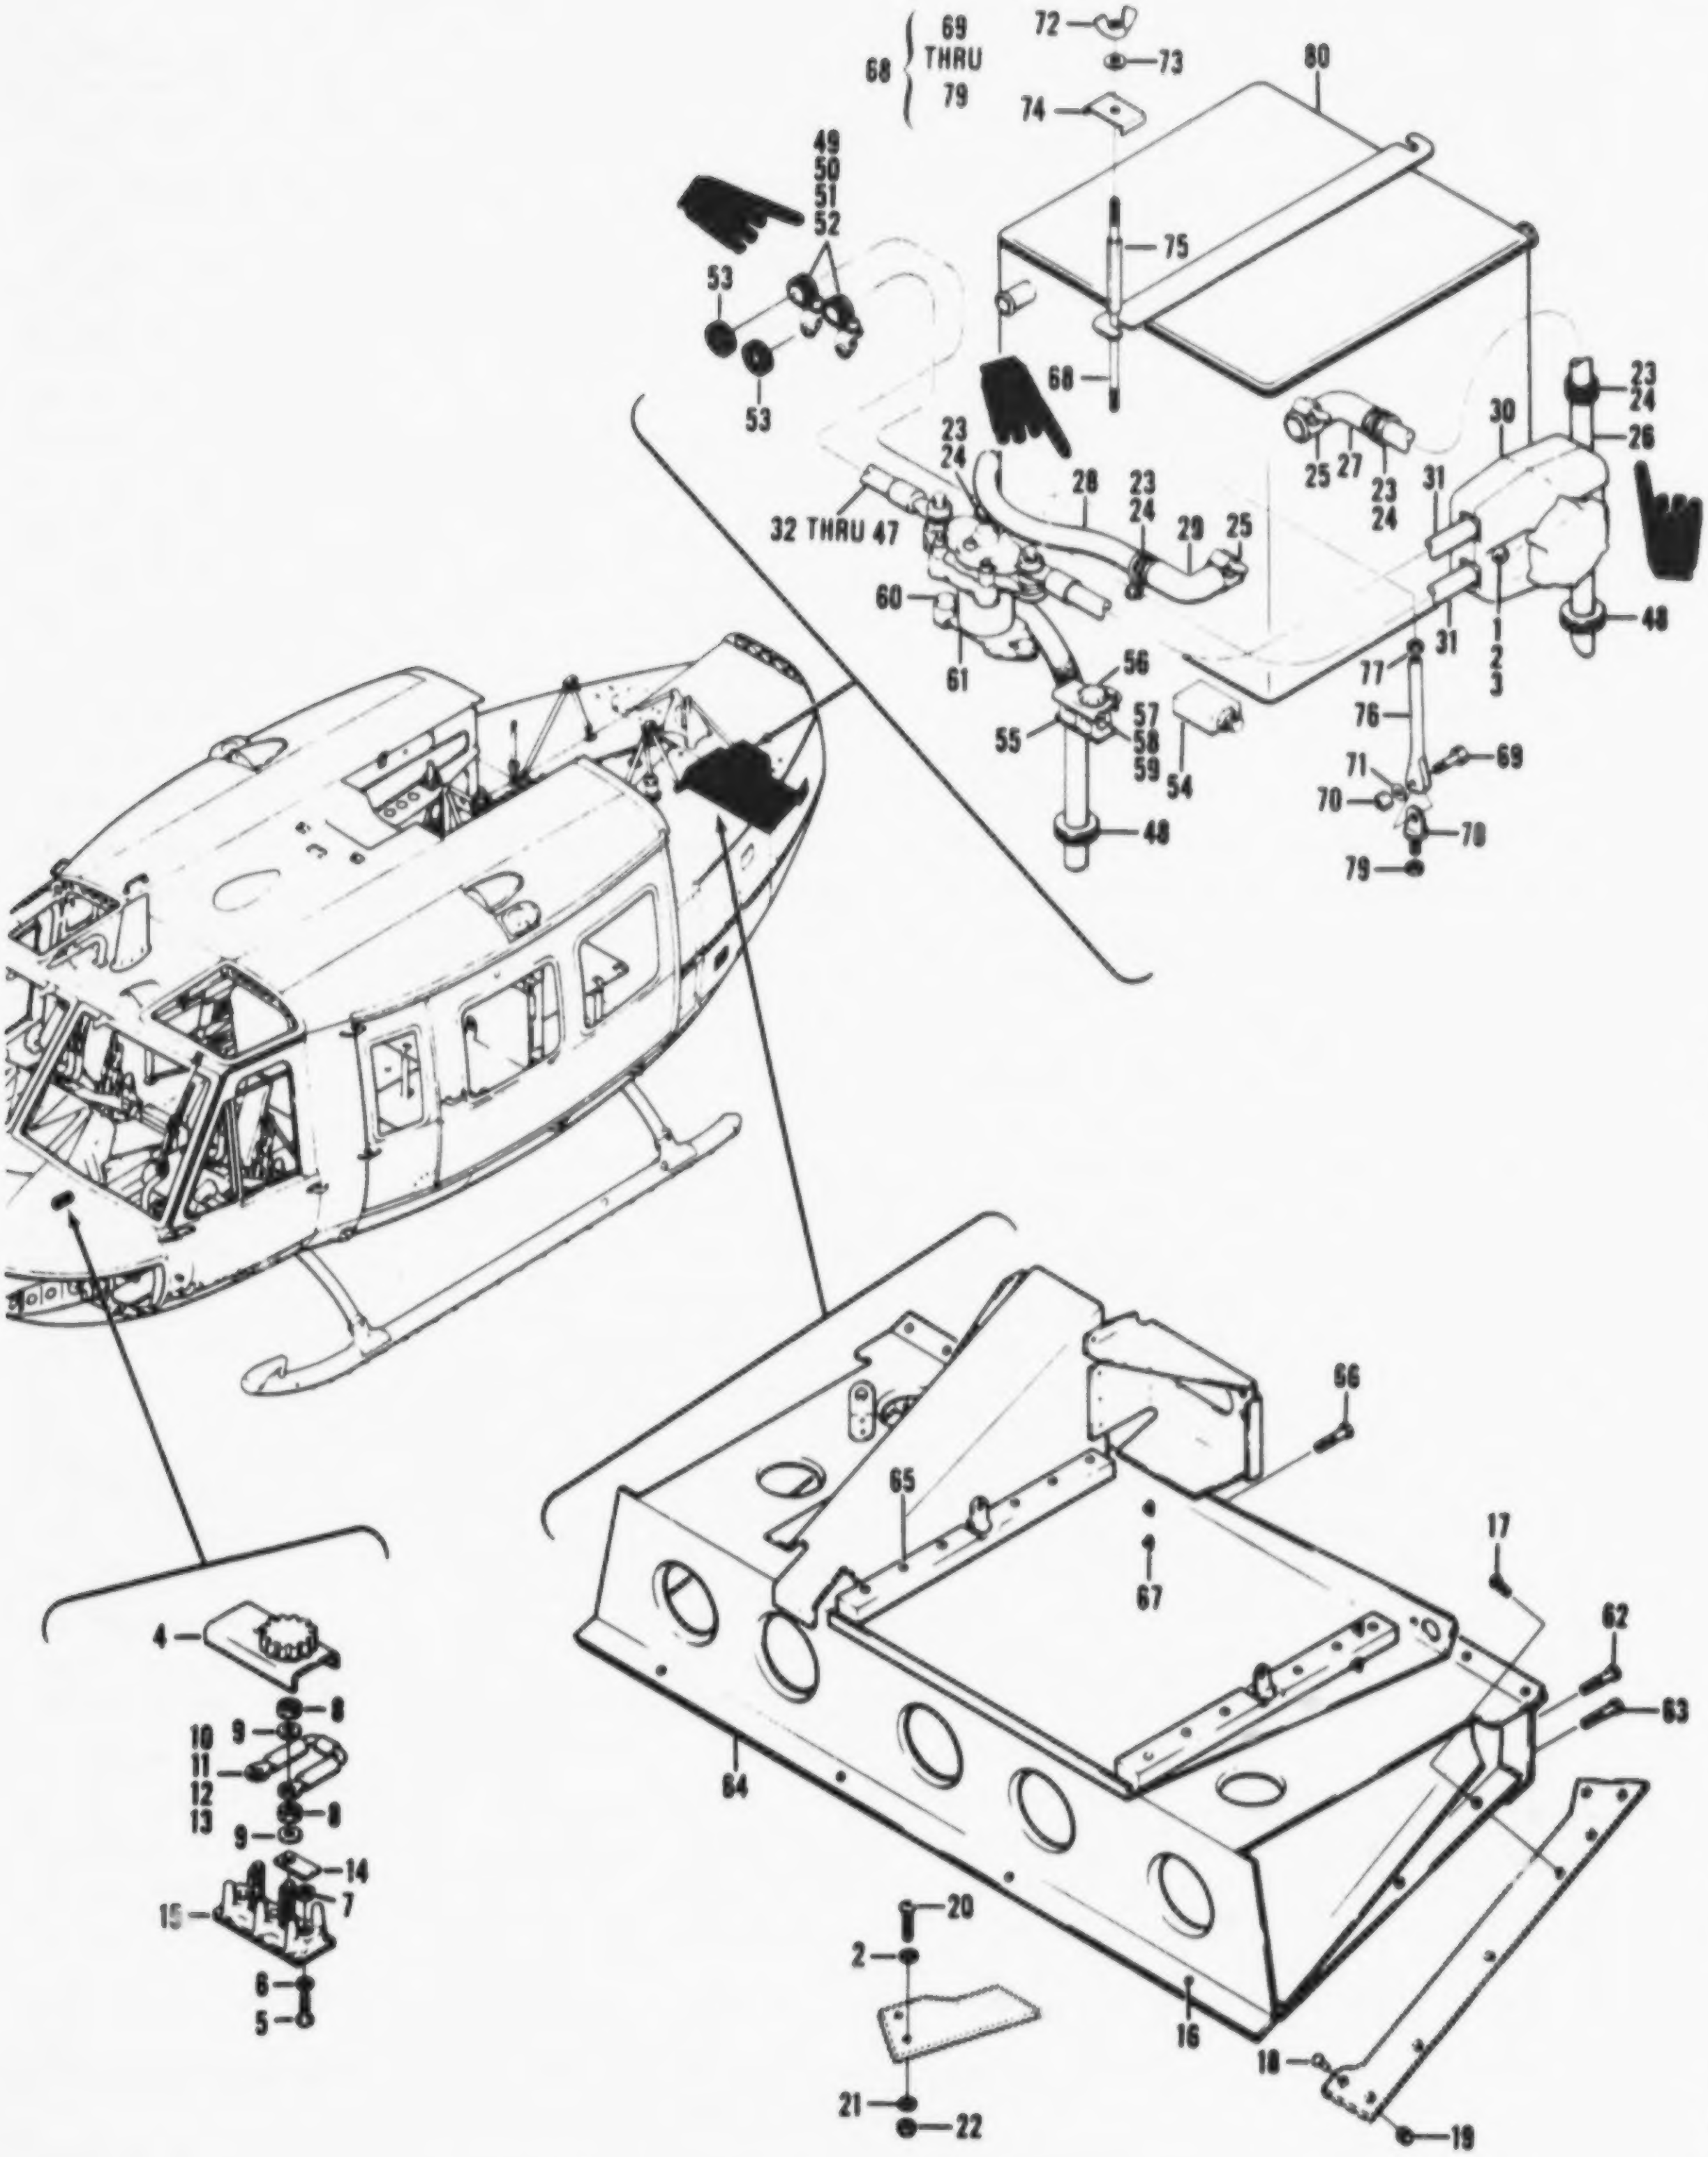
68 69 THRU 79
72
73
80
74
49
50
51
52
53
53
75
68
23
24
26
30
23
24
28
23
24
25
27
23
24
31
32 THRU 47
29
25
60
31
1
2
3
48
56
77
61
57
58
59
76
55
54
69
71
70
78
48
79
66
65
67
17
62
63
4
8
10
11
12
13
9
9
8
14
7
15
6
5
64
20
2
16
18
21
22
19

Figure 268. Shelf Assembly, Battery, Aft Compartment

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
268		PBFFF	1560-00-919-7294	97499	205-075-114-1	SHELF ASSY,BATTERY, AFT COMPARTMENT USBL EFF 62-2106 THRU 64-13901 UHE,UHH,UHV,UHX	EA	1
268	1	PAOZZ	5305-00-957-7811	96906	MS24693S272	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	4
268	2	MOOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
268	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	4
268	4	MFOZZ	5940-00-411-7734	96906	MS18029-1S2	.COVER TERMINAL, BOARD UHE,UHH,UHV,UHX	EA	1
268	5	PAOZZ	5305-00-993-0190	96906	MS35206-214	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	2
268	6	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
268	7	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	2
268	8	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	2
268	9	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
268	10	PAOZZ	5961-00-177-2969	97499	30-037-1	.SEMICONDUCTOR, DEVICE UHE,UHH,UHV,UHX	EA	1
268	11	XAOZZ		96906	MS25036-101	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	2
268	12	XAOZZ		81349	JAN1N3613	..SEMICONDUCTOR, DEVICE UHE,UHH,UHV,UHX	EA	1
268	13	XAOZZ		97499	85T4-3-2	..INSULATING TUBE UHE,UHH,UHV,UHX	EA	1
268	14	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE UHE,UHH,UHV,UHX	EA	2
268	15	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD UHE,UHH,UHV,UHX	EA	1
268	16	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	4
268	17	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	6
268	18	PBOZZ	5320-00-869-1486	73197	HL20PB6-8	.PIN-RIVET,THREADED UHE,UHH,UHV,UHX	EA	5
268	19	PAOZZ	5320-01-219-7101	73197	HL86PBW6	.COLLAR,PIN-RIVET UHE,UHH,UHV,UHX	EA	5
268	20	PAOZZ	5306-00-812-2305	80205	NAS1303-8H	.BOLT,SHEAR UHE,UHH,UHV,UHX	EA	5
268	21	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	5
268	22	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE USE IF PIN AND COLLAR ARE UNAVAILABLE UHE,UHH,UHV,UHX	EA	5
268	23	PBOZZ	5340-00-145-8339	96906	MS21122C10	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	2
268	24	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	2
268	25	PAOZZ	4730-00-278-9096	88044	AN737RM30	.CLAMP,HOSE UHE,UHH,UHV,UHX	EA	2
268	26	MOOZZ	DELETED	97499	205-075-142-9	.TUBE ASSY UHE,UHH,UHV,UHX	EA	1
268	27	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER,BATTERY DRA UHE,UHH,UHV,UHX	EA	1
268	28	MOOZZ	DELETED	97499	205-075-142-5	.TUBE ASSY UHE,UHH,UHV,UHX	EA	1
268	29	PAOZZ	1560-00-972-5317	97499	10-002-1	..ADAPTER,BATTERY UHE,UHH,UHV,UHX	EA	1
268	30	PAOZZ	5935-01-035-8391	05593	EL-8-0037	.CONNECTOR BODY,RECE UHE,UHH,UHV,UHX	EA	1
268	31	AOOOZ	1560-00-923-1840	97499	205-075-435-1	.CABLE ASSY,ELEC UHE,UHH,UHV,UHX	EA	1
268	32	AOOOO		97499	205-075-435-3	.CABLE ASSY,ELEC UHE,UHH,UHV,UHX	EA	1
268	33	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHE,UHH,UHV,UHX	FT	V
268	34	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	8
268	35	PAOZZ	5940-00-143-4773	96906	MS25036-106	..TERMINAL,LUG UHE,UHH,UHV,UHX	EA	1
268	36	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-435-1 UHE,UHH,UHV,UHX	EA	2
268	37	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-435-3 UHE,UHH,UHV,UHX	EA	1
268	38	XDOZZ		96906	MS25036-135	..TERMINAL,LUG U/O PN 205-075-435-1 UHE,UHH,UHV,UHX	EA	3
268	39	PAOZZ	5940-00-113-9835	96906	MS25036-136	..TERMINAL,LUG U/O PN 205-075-435-1 UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
268	40	PAOZZ	5935-00-686-0447	96906	MS25182-2	..CONNECTOR,PLUG,ELEC BATTERY PLUG. U/O PN 205-075-435-1	UHE,UHH,UHV,UHX	EA	1
268	41	PBOZZ	5975-00-553-7077	96906	MS25171-4S	..CABLE,NIPPLE U/O PN 205-075-435-1	UHE,UHH,UHV,UHX	EA	2
268	42	PAOZZ	5325-00-276-6091	96906	MS35489-19	..GROMMET,NONMETALLIC U/O PN 205-075-435-1	UHE,UHH,UHV,UHX	EA	2
268	43	PBOZZ	6145-00-578-6600	81349	M5086/2-02-9	..WIRE,ELECTRICAL U/O PN 205-075-435-1	UHE,UHH,UHV,UHX	FT	V
268	44	PBOZZ	6145-00-284-0657	96906	MS25190B8	..WIRE,ELECTRICAL U/O PN 205-075-435-3	UHE,UHH,UHV,UHX	FT	V
268	45	PAOZZ	5940-00-557-4345	96906	MS25036-118	..TERMINAL,LUG U/O PN 205-075-435-3	UHE,UHH,UHV,UHX	EA	2
268	46	PAOZZ	5975-00-250-6871	96906	MS25171-3S	..CABLE NIPPLE U/O PN 205-075-435-3	UHE,UHH,UHV,UHX	EA	1
268	47	MOOZZ		97499	85T4-4-48	..INSULATION TUBE U/O PN 205-075-435-3	UHE,UHH,UHV,UHX	EA	1
268	48	PAOZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET,NONMETALLIC	UHE,UHH,UHV,UHX	EA	2
268	49	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	2
268	50	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	1
268	51	XDOZZ	5340-00-989-4569	81996	EAB70009	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
268	52	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE	UHE,UHH,UHV,UHX	EA	2
268	53	PAOZZ	5325-00-276-6091	96906	MS35489-19	.GROMMET,NONMETALLIC	UHE,UHH,UHV,UHX	EA	2
268	54	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER	UHE,UHH,UHV,UHX	EA	1
268	55	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD	UHE,UHH,UHV,UHX	EA	1
268	56	MFOZZ	5940-00-411-7734	96906	MS18029-1S2	.COVER,TERMINAL BOAR	UHE,UHH,UHV,UHX	EA	1
268	57	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
268	58	PAOZZ	5310-00-855-5865	80205	NAS697A04	.NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	2
268	59	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE	UHE,UHH,UHV,UHX	EA	2
268	60	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
268	61	AOOZZ	5945-00-189-6391	97499	205-075-137-11	.RELAY ASSEMBLY SEE FIG.269 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
268	62	PAOZZ	5306-00-206-4931	88044	AN4-3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
268	63	PAOZZ	5306-00-151-1426	88044	AN4-6A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
268	64	PAFFF	1560-00-220-5314	97499	205-030-036-27	.SHELF ASSY	UHE,UHH,UHV,UHX	EA	1
268	65	PAFZZ	5305-00-180-3326	88044	AN525-10R16	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	12
268	66	PAFZZ	5306-00-150-9221	88044	AN3-3A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
268	67	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING, PLATE	UHE,UHH,UHV,UHX	EA	4
268	68	AOOZZ	1560-00-682-6193	97499	204-075-161-7	..ROD ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
268	69	PAOZZ	5306-00-292-8252	88044	AN4H7A	...BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
268	70	PAOZZ	5310-00-807-1475	96906	MS21042L4	...NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
268	71	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
268	72	PAOZZ	5310-00-080-8496	96906	MS35425-39	...NUT,PLAIN,WING	UHE,UHH,UHV,UHX	EA	1
268	73	PAOZZ	5310-00-531-9516	88044	AN960C416	...WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
268	74	PAOZZ	1560-00-994-6702	97499	204-075-567-11	...CHANNEL,TIE DOWN	UHE,UHH,UHV,UHX	EA	1
268	75	PAOZZ	5307-00-397-6187	97499	204-075-161-5	...STUD,SHOULDERED	UHE,UHH,UHV,UHX	EA	1
268	76	PAOZZ	1560-00-967-7669	97499	204-075-161-3	...ROD END BATTERY CASE	UHE,UHH,UHV,UHX	EA	1
268	77	PAOZZ	5310-00-208-7589	88044	AN316-4R	...NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
268	78	PAOZZ	5306-00-206-3869	88044	AN44-7	...BOLT,EYE	UHE,UHH,UHV,UHX	EA	1
268	79	PAOZZ	5310-00-807-1469	96906	MS21042-5	...NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
268	80	PAOFF	6140-01-046-1115	80058	BB-433A/A	.BATTERY,STORAGE	UHE,UHH,UHV,UHX	EA	1

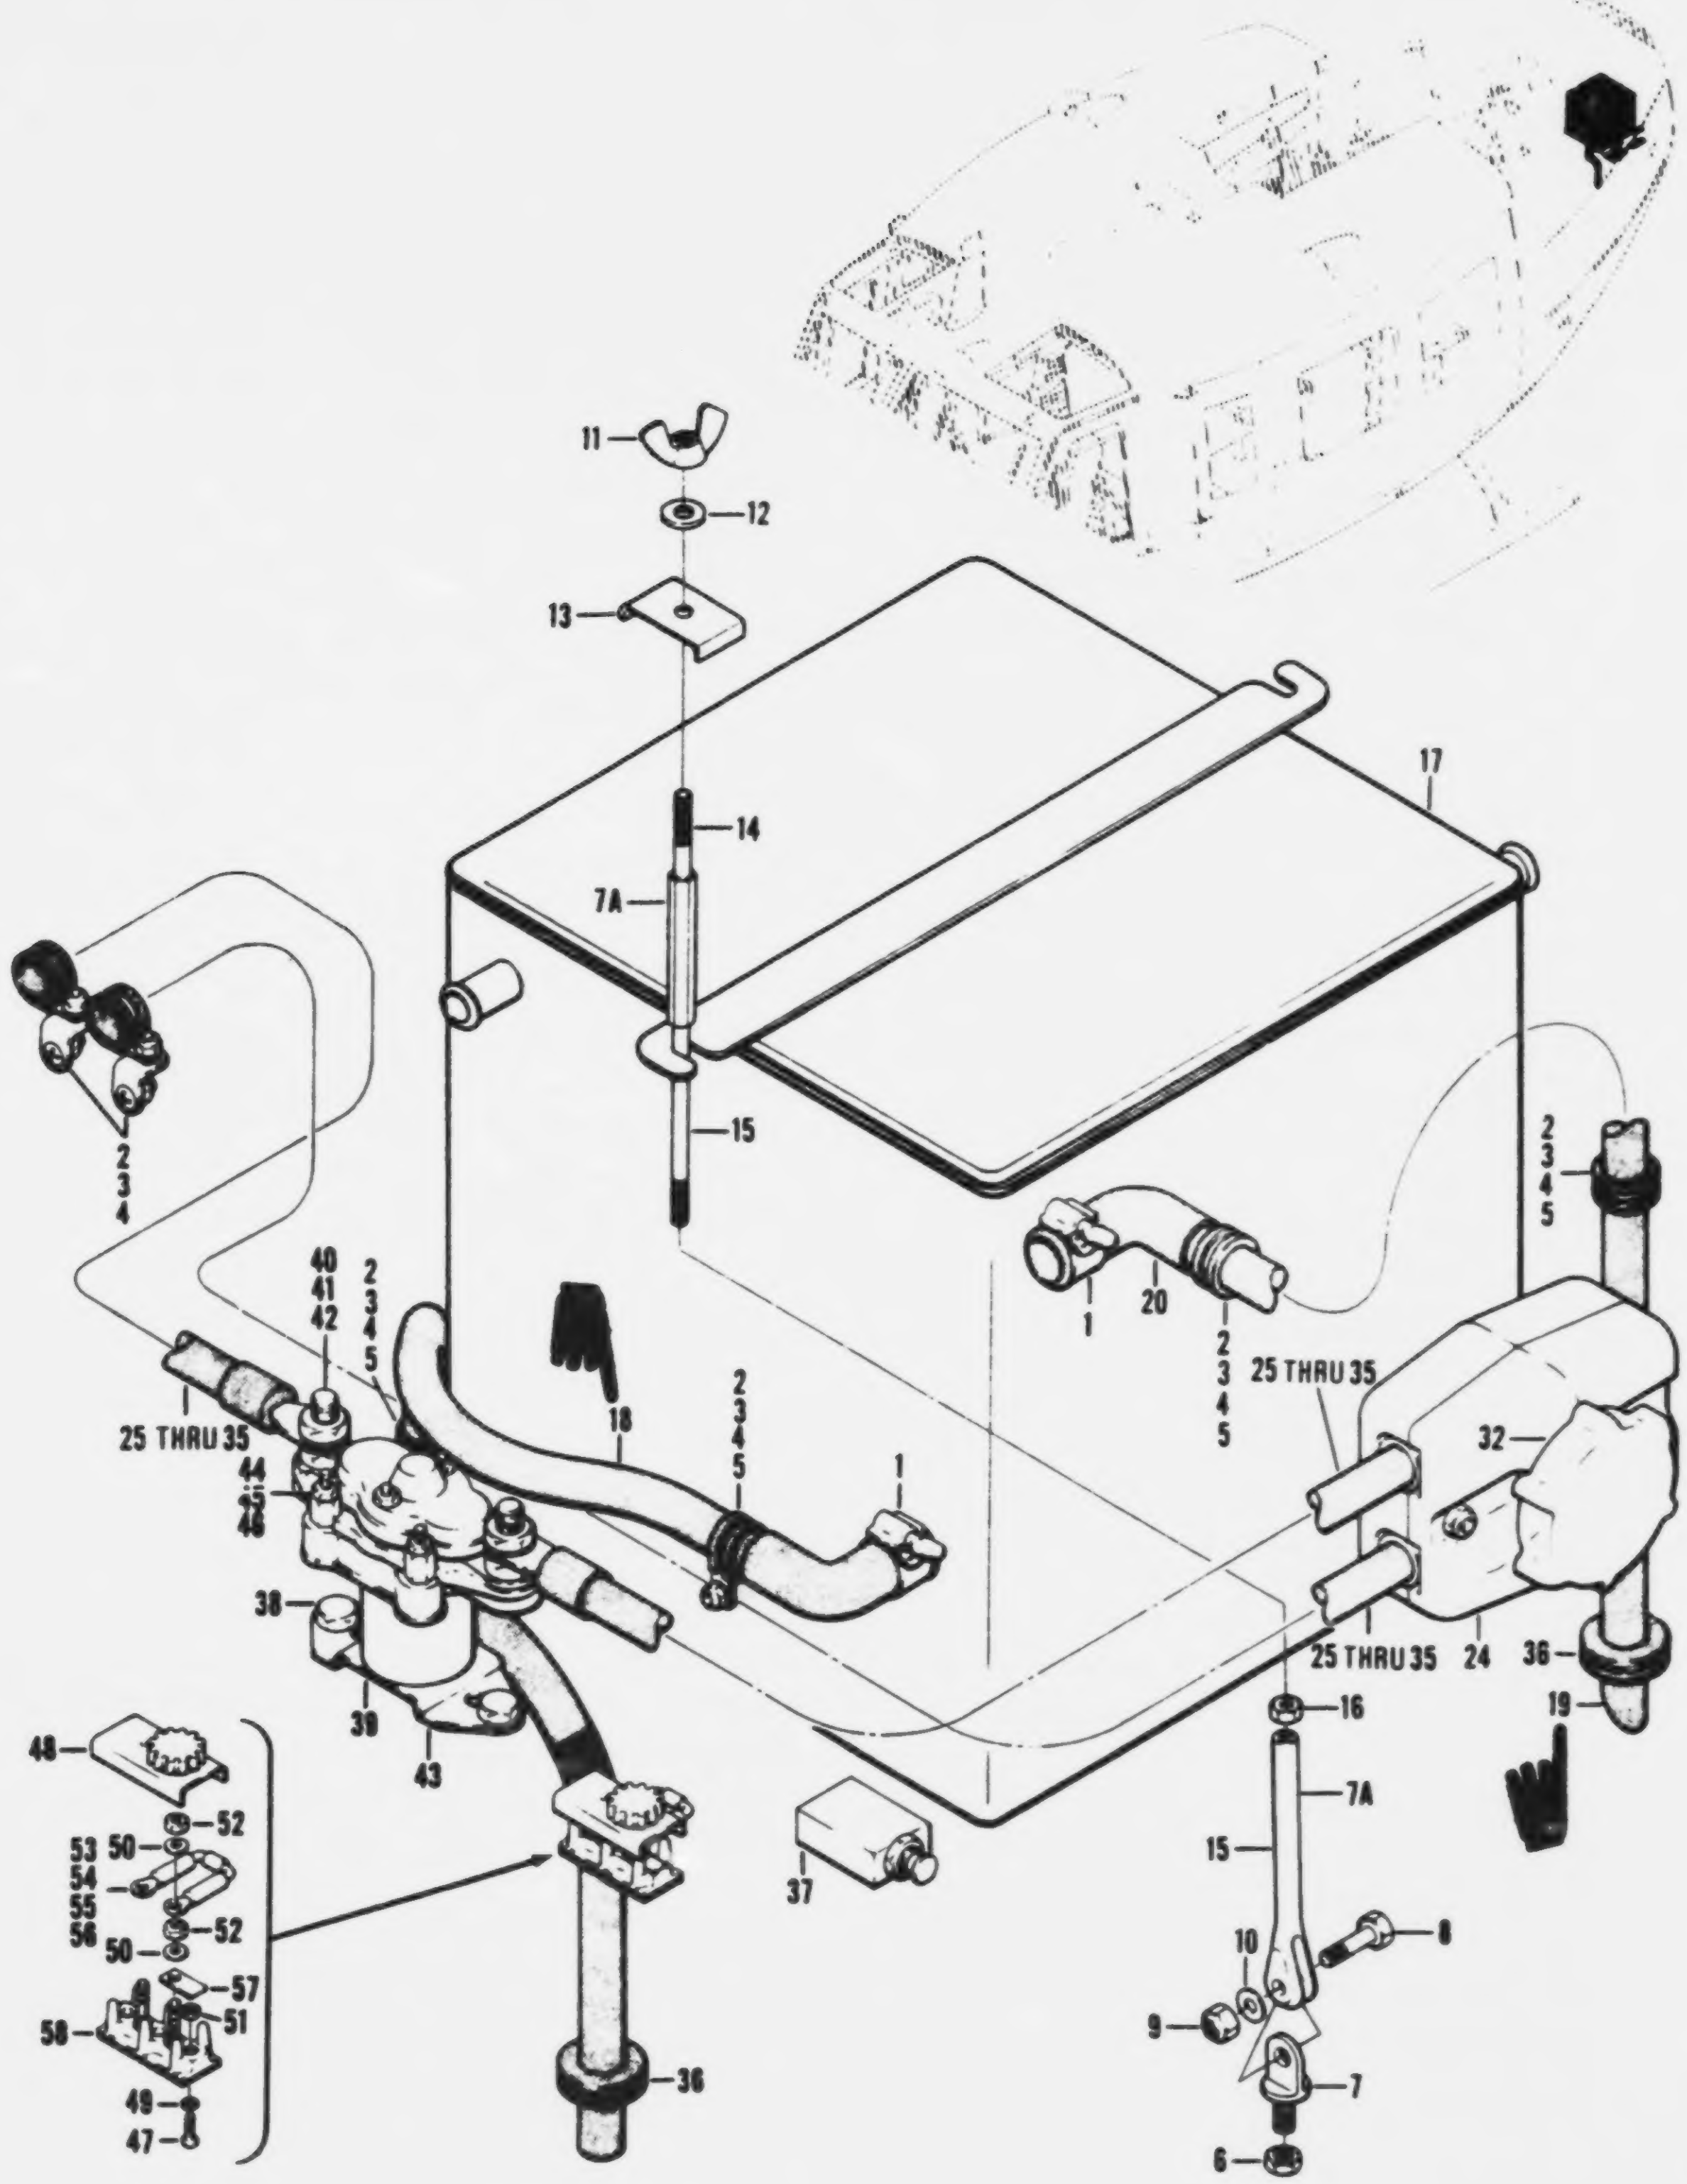
11
12
13
14
7A
15
17
2
3
4
40
41
42
2
3
4
5
25 THRU 35
44
45
46
18
2
3
4
5
1
1
20
2
3
4
5
25 THRU 35
32
2
3
4
5
38
39
43
25 THRU 35
24
36
19
16
7A
15
48
52
53
54
55
56
50
52
50
57
51
58
49
47
36
37
8
10
9
7
6

Figure 2[illegible]. Battery Installation, Aft Compartment

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
269		XCFZZ		97499	205-075-115-1	BATTERY INSTL, AFT COMPARTMENT USBL EFF 65-9565 AND SUBSEQUENT SEE FIG 226 FOR NHA	UHE, UHH, UHV, UHX	EA	.
269	1	PAOZZ	4730-00-278-9096	88044	AN737RM30	CLAMP, HOSE	UHE, UHH, UHV, UHX	EA	2
269	2	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	8
269	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	6
269	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	6
269	5	PBOZZ	5340-00-145-8339	96906	MS21122C10	CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	4
269	6	PAOZZ	5310-00-807-1469	96906	MS21042-5	NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	2
269	7	PAOZZ	5306-00-206-3869	88044	AN44-7	BOLT, EYE	UHE, UHH, UHV, UHX	EA	2
269	7A	AOOOZ	1560-00-682-5193	97499	204-075-161-7	ROD ASSEMBLY	UHE, UHH, UHV, UHX	EA	2
269	8	PAOZZ	5306-00-292-8252	88044	AN4H7A	. BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	1
269	9	PAOZZ	5310-00-807-1475	96906	MS21042L4	. NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHE, UHH, UHV, UHX	EA	1
269	10	PAOZZ	5310-00-167-0835	88044	AN960-416L	. WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
269	11	PAOZZ	5310-00-080-8495	96906	MS35425-39	. NUT, PLAIN, WING	UHE, UHH, UHV, UHX	EA	1
269	12	PAOZZ	5310-00-531-9515	88044	AN960C416	. WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
269	13	PAOZZ	1560-00-994-5702	97499	204-075-567-11	. CHANNEL, TIE DOWN	UHE, UHH, UHV, UHX	EA	1
269	14	PAOZZ	5307-00-897-5187	97499	204-075-161-5	. STUD, SHOULDERED	UHE, UHH, UHV, UHX	EA	1
269	15	PAOZZ	1560-00-967-7669	97499	204-075-161-3	. ROD END, BATTERY CASE	UHE, UHH, UHV, UHX	EA	1
269	16	PAOZZ	5310-00-208-7589	88044	AN316-4R	. NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	1
269	17	PAOFF	6140-01-046-1116	80058	BB-433A/A	BATTERY, STORAGE	UHE, UHH, UHV, UHX	EA	1
269	18	MOOZZ	DELETED	97499	205-075-142-5	TUBE ASSY	UHE, UHH, UHV, UHX	EA	1
269	19	MOOZZ	DELETED	97499	205-075-142-9	TUBE ASSY	UHE, UHH, UHV, UHX	EA	1
269	20	PAOZZ	1560-00-972-5317	97499	10-002-1	. ADAPTER, BATTERY	UHE, UHH, UHV, UHX	EA	1
269	24	PAOZZ	5935-01-035-8391	06593	EL-8-0037	CONNECTOR BODY, RECE	UHE, UHH, UHV, UHX	EA	1
269	25	AOOOZ	1560-00-923-1840	97499	205-075-435-1	CABLE ASSY, ELEC	UHE, UHH, UHV, UHX	EA	1
269	26	PBOZZ	6145-00-851-8505	96906	MS25190820	. WIRE, ELECTRICAL	UHE, UHH, UHV, UHX	FT	V
269	27	PAOZZ	5940-00-813-0698	96906	MS25036-101	. TERMINAL, LUG	UHE, UHH, UHV, UHX	EA	8
269	28	PAOZZ	5940-00-143-4773	96906	MS25036-106	. TERMINAL, LUG	UHE, UHH, UHV, UHX	EA	1
269	29	PAOZZ	5940-00-557-1629	96906	MS25036-149	. TERMINAL, LUG	UHE, UHH, UHV, UHX	EA	2
269	30	XDOZZ		96906	MS25036-135	. TERMINAL, LUG	UHE, UHH, UHV, UHX	EA	3
269	31	PAOZZ	5940-00-113-9835	96906	MS25036-136	. TERMINAL, LUG	UHE, UHH, UHV, UHX	EA	3
269	32	PAOZZ	5935-00-686-0447	96906	MS25182-2	. CONNECTOR, PLUG, ELEC BATTERY PLUG	UHE, UHH, UHV, UHX	EA	1
269	33	PBOZZ	5975-00-553-7077	96906	MS25171-4S	. CABLE, NIPPLE	UHE, UHH, UHV, UHX	EA	2
269	34	PAOZZ	5325-00-276-6091	96906	MS35489-19	. GROMMET, NONMETALLIC	UHE, UHH, UHV, UHX	EA	2
269	35	PBOZZ	6145-00-578-6600	81349	M5086/2-02-9	. WIRE, ELECTRICAL	UHE, UHH, UHV, UHX	FT	V
269	36	PAOZZ	5325-00-281-1557	96906	MS35489-17	GROMMET, NONMETALLIC	UHE, UHH, UHV, UHX	EA	2
269	37	PAOZZ	5925-00-912-8343	96906	MS22073-1	CIRCUIT BREAKER	UHE, UHH, UHV, UHX	EA	1
269	38	PAOZZ	5306-00-182-2014	88044	AN4-3A	BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	2
269	39	AOOOZ	5945-00-189-6391	97499	205-075-137-11	RELAY ASSEMBLY SEE FIG. 268 FOR NHA	UHE, UHH, UHV, UHX	EA	1
269	40	PAOZZ	5306-00-819-5120	80205	NAS457-5-32	. BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
269	41	PAOZZ	5310-00-229-4677	96906	MS25440-6	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
269	42	PAOZZ	5310-00-411-0687	96906	MS35650-3386T	..NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
269	43	PAOZZ	5945-00-660-9315	96906	MS24171-D1	..RELAY,ELECTROMAGNET	UHE,UHH,UHV,UHX	EA	1
269	44	PAOZZ	5310-00-411-0687	96906	MS35650-3386T	...NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
269	45	PAOZZ	5310-00-184-8971	96906	MS35338-103	...WASHER,LOCK	UHE,UHH,UHV,UHX	EA	2
269	46	PAOZZ	5310-00-136-1472	88044	AN961-6T	...WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
269	47	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
269	48	MOOZZ	5940-00-411-7734	96906	MS18029-1S2	.COVER,TERMINAL BOARD	UHE,UHH,UHV,UHX	EA	1
269	49	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
269	50	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
269	51	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
269	52	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
269	53	PAOZZ	5961-00-177-2989	97499	30-037-1	.SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	1
269	54	XAOZZ		96906	MS25036-101	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	2
269	55	XAOZZ		81349	JAN1N3613	..SEMICONDUCTOR, DEVICE	UHE,UHH,UHV,UHX	EA	1
269	56	XAOZZ		97499	85T4-3-2	..INSULATING TUBE	UHE,UHH,UHV,UHX	EA	1
269	57	XBOZZ	5970-00-928-2844	96906	MS25227-1A	.INSULATOR,PLATE	UHE,UHH,UHV,UHX	EA	2
269	58	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD	UHE,UHH,UHV,UHX	EA	1

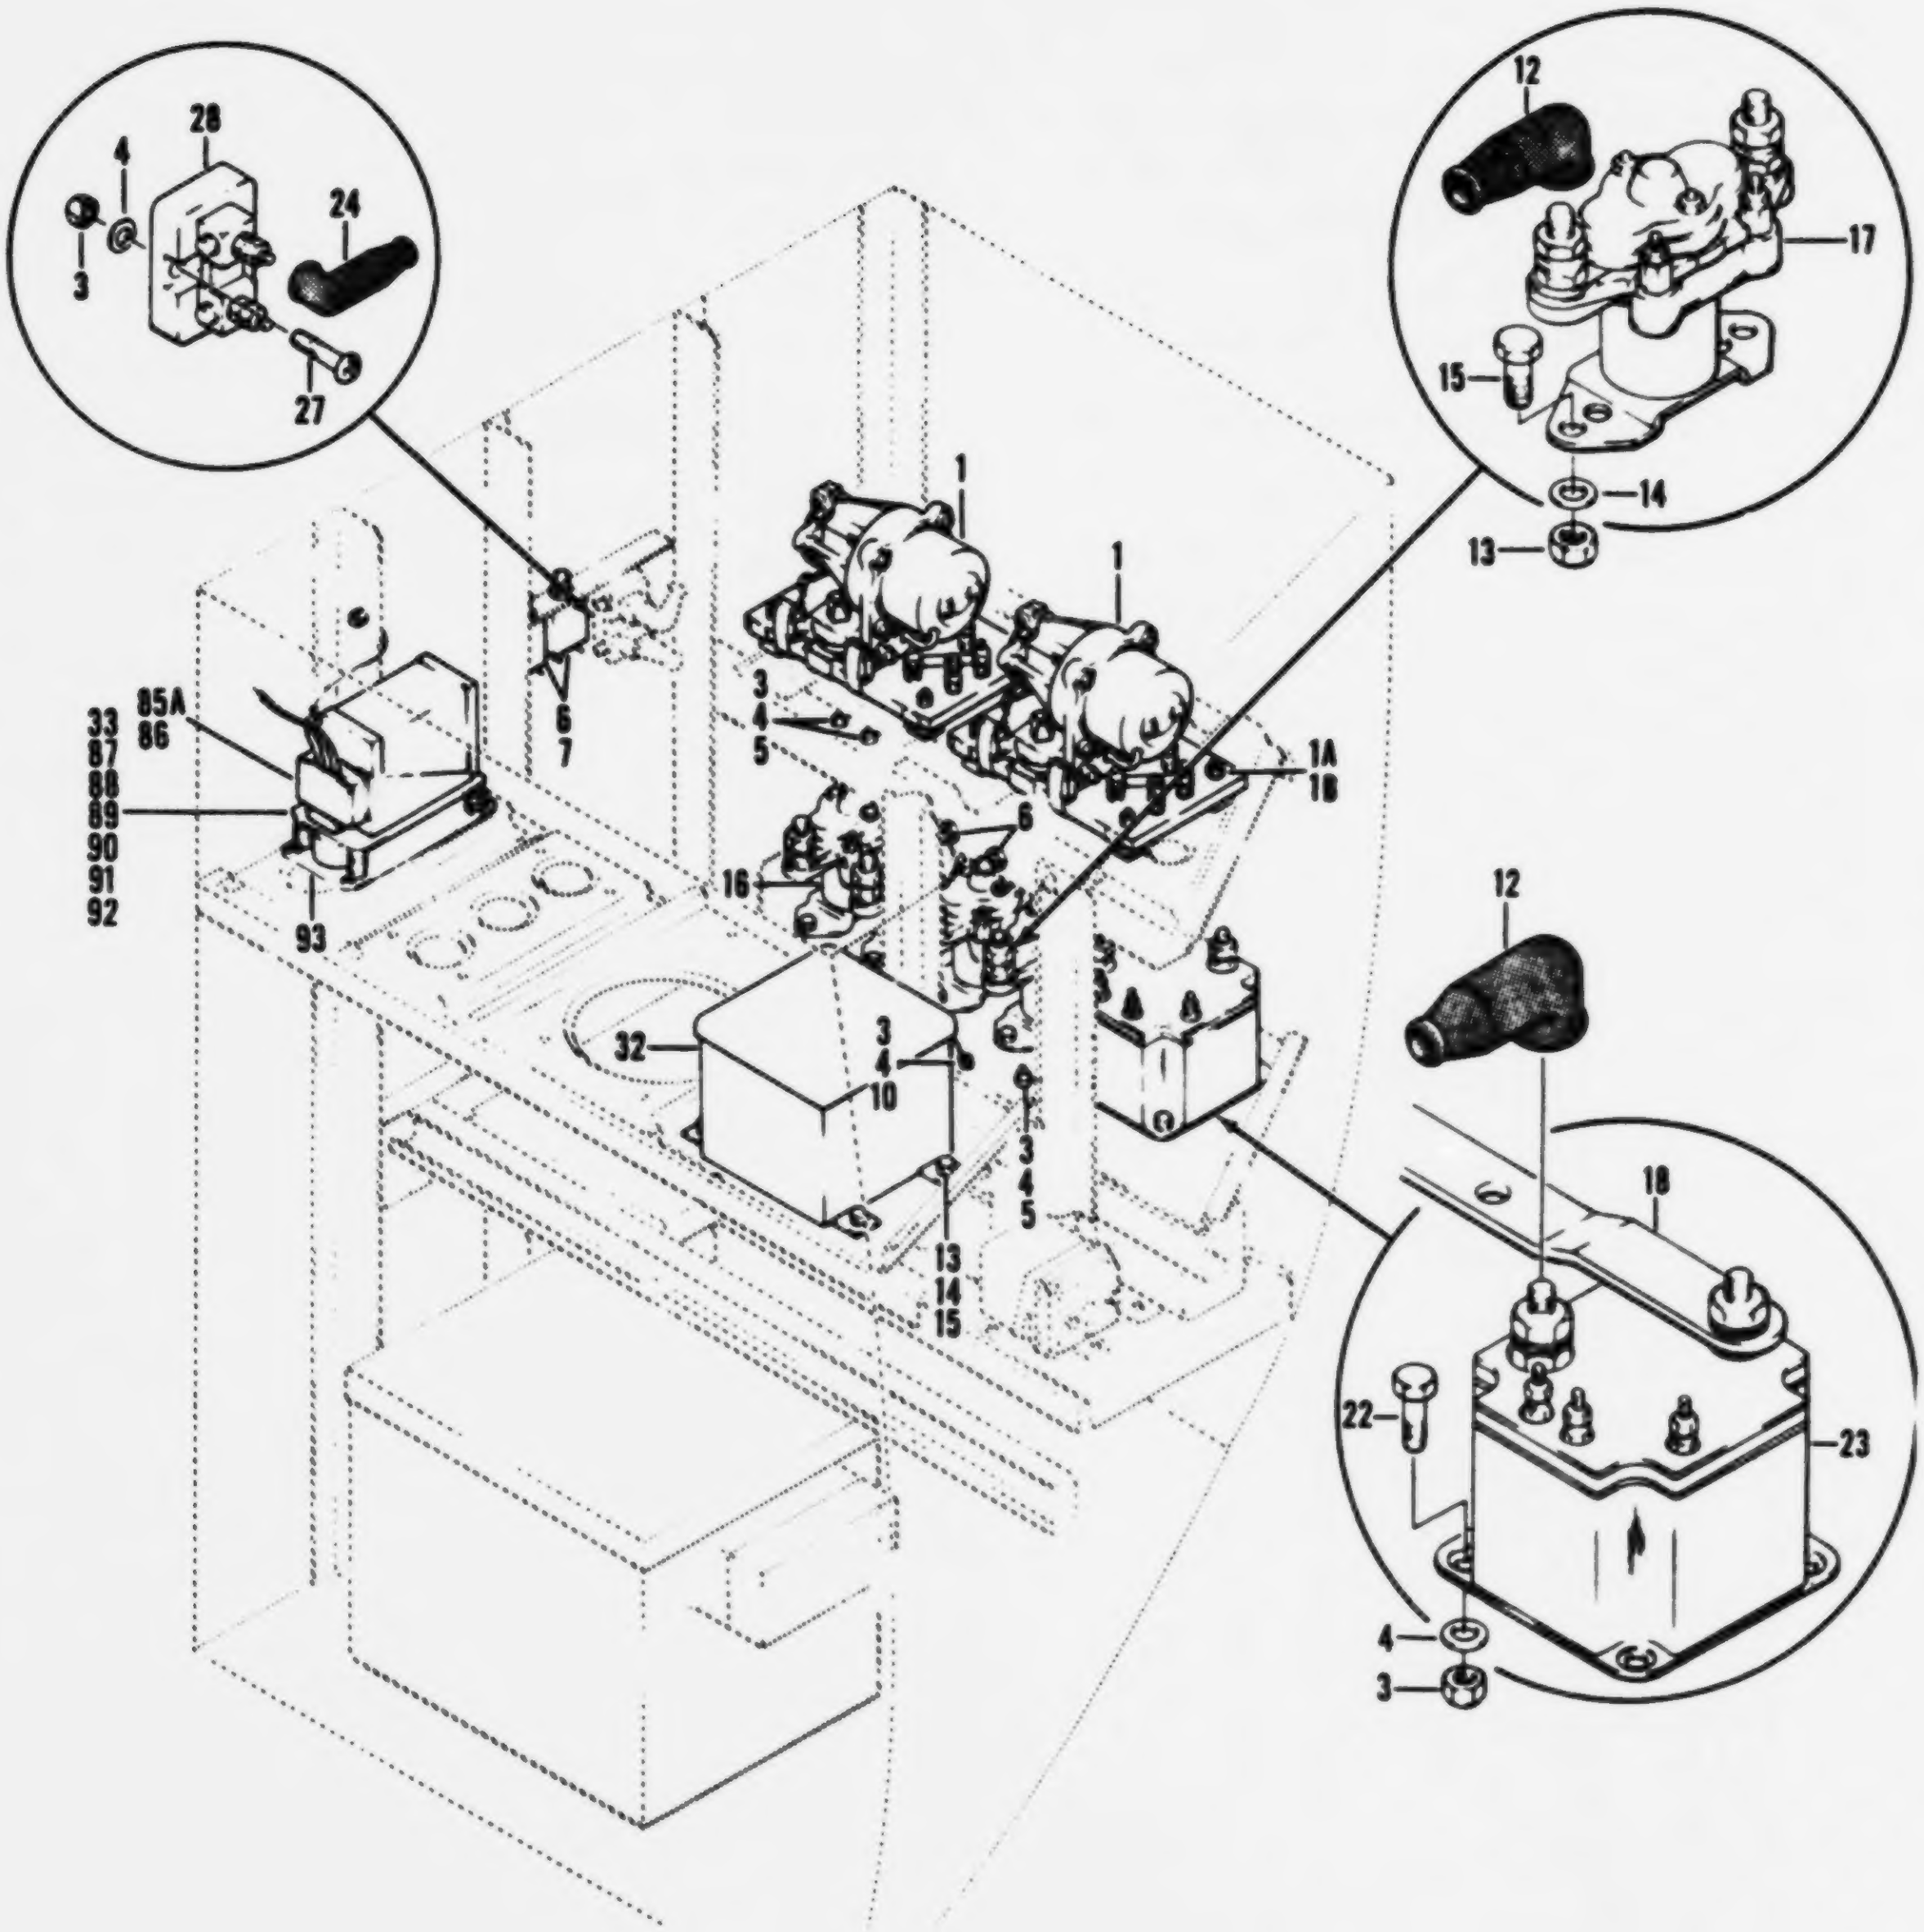
28
4
24
3
27
12
17
15
14
13
1
1
3
4
5
1A
1B
85A
86
33
87
88
89
90
91
92
93
6
7
6
16
32
3
4
10
3
4
5
13
14
15
12
18
22
23
4
3

Figure 270. Electrical Equipment Installation, Radio Compartment (Sheet 1 of 2)

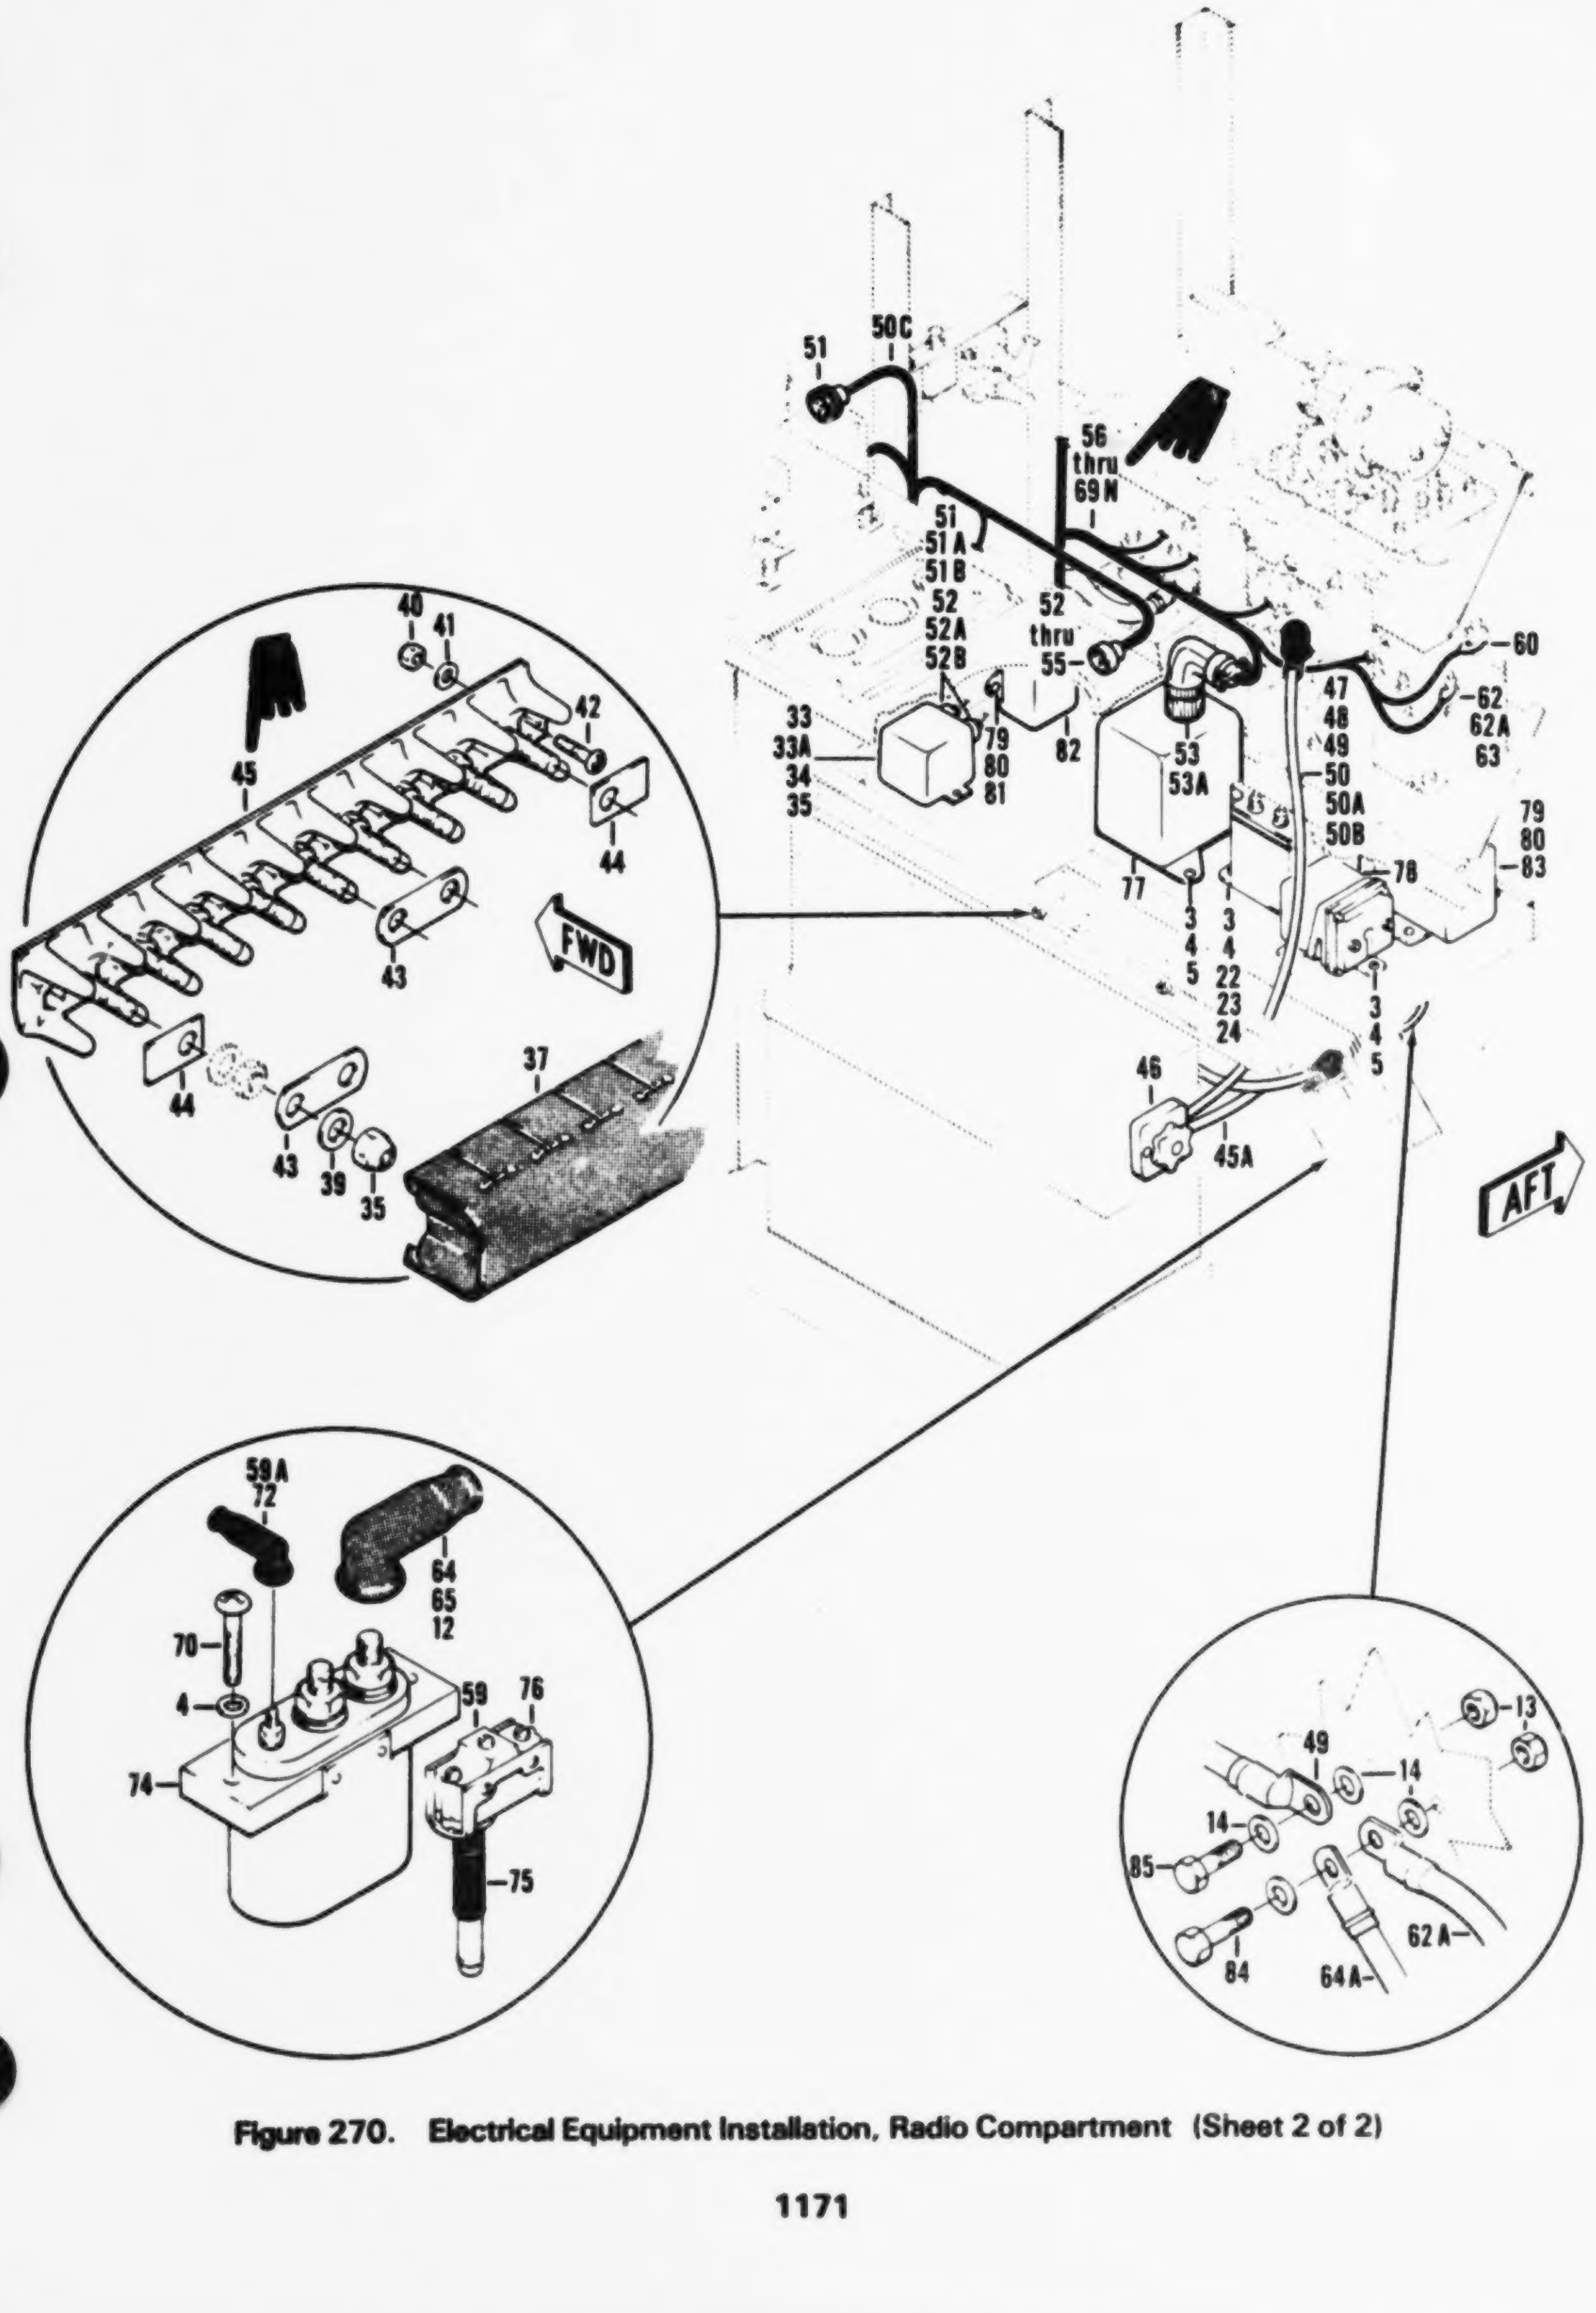
51
50C
56
thru
69N
51
51A
51B
52
52A
52B
52
thru
55
60
47
48
49
50
50A
50B
62
62A
63
33
33A
34
35
79
80
81
82
53
53A
79
80
83
78
77
3
4
5
3
4
22
23
24
3
4
5
46
45A
AFT
40
41
42
45
44
43
FWD
44
43
39
35
37
59A
72
64
65
12
70
4
59
76
74
75
49
13
14
14
85
84
64A
62A

Figure 270. Electrical Equipment Installation, Radio Compartment (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
270		XCFZZ		97499	204-075-111-7	EQUIPMENT INSTL ELECTRICAL,RADIO COMPARTMENT USBL EFF 60-3546 THRU 62-12555 SEE FIG.225 FOR NHA....................UHB	EA	1
270		XCFZZ		97499	204-075-603-1	EQUIPMENT INSTL ELECTRICAL,RADIO COMPARTMENT SECTION USBL EFF 63-8500 THRU 63-12952 SEE FIG.225 FOR NHA............UHB	EA	1
270		XCFZZ		97499	204-075-603-5	EQUIPMENT INSTL ELECTRICAL,RADIO COMPARTMENT SECTION USBL EFF 64-13902 THRU 64-14100 SEE FIG.225 FOR NHA...........UHB	EA	
270		XCFZZ		97499	204-075-603-7	EQUIPMENT INSTL ELECTRICAL,RADIO COMPARTMENT SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.225 FOR NHA.......UHC,UHM	EA	1
270		XCFZZ		97499	204-075-612-1	EQUIPMENT INSTL ELECTRICAL,RADIO COMPARTMENT SECTION USBL EFF 65-9416 THRU 65-12772 SEE FIG.225 FOR NHA........UHC,UHM	EA	1
270		XCFZZ		97499	204-075-612-5	ELECTRICAL EQUIPMEN ELECTRICAL,RADIO COMPARTMENT SECTION USBL EFF 66-492 THRU 66-15147 SEE FIG.225 FOR NHA....UHC,UHM	EA	1
270		XCFZZ		97499	204-075-612-9	EQUIPMENT INSTL ELECTRICAL,RADIO COMPARTMENT SECTION USBL EFF 66-15148 AND SUBSEQUENT SEE FIG.225 FOR NHA......UHC,UHM	EA	1
270	1	PAODO	6110-00-598-2567	96906	MS18071-12	.REGULATOR,VOLTAGE INTRCH.........................UHB,UHC,UHM	EA	2
270	1	PAODO	6110-01-066-3716	07639	CSV1152-12AB	.REGULATOR,VOLTAGE................................UHB,UHC,UHM	EA	2
270	1A	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	4
270	1B	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT......................................UHB,UHC,UHM	EA	4
270	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	2
270	4	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......................................UHB,UHC,UHM	EA	V
270	5	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	10
270	6	PAOZZ	5925-00-045-9095	76374	MP1501C	.CIRCUIT BREAKER..................................UHB,UHC,UHM	EA	2
270	7	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER..................................UHB,UHC,UHM	EA	2
270	10	PAOZZ	5961-00-850-8449	81349	JAN1N1124A	.SEMICONDUCTOR, DEVICE............................UHB,UHC,UHM	EA	1
270	12	PAOZZ	5975-00-250-6871	96906	MS25171-3S	.CABLE,NIPPLE.....................................UHB,UHC,UHM	EA	
270	13	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING, HEXAGON........................UHB,UHC,UHM	EA	V
270	14	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT......................................UHB,UHC,UHM	EA	V
270	15	PAOZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE.....................................UHB,UHC,UHM	EA	12
270	16	PBOZZ	5945-00-257-0316	96906	MS24172D1	.RELAY,ELECTROMAGNET..............................UHB,UHC,UHM	EA	1
270	17	PAOZZ	5945-00-660-9316	96906	MS24171D1	.RELAY,ELECTROMAGNET..............................UHB,UHC,UHM	EA	3
270	18	PAOZZ	6150-00-690-6562	97499	204-075-146-1	.BUS,CONDUCTOR....................................UHB,UHC,UHM	EA	1
270	22	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.....................................UHB,UHC,UHM	EA	8
270	23	PAODZ	2925-00-655-5349	88044	AN3025-300	.CUTOUT RELAY,ENGINE GENERATOR....................UHB,UHC,UHM	EA	2
270	24	PBOZZ	5975-00-563-7077	96906	MS25171-4S	.CABLE,NIPPLE.....................................UHB,UHC,UHM	EA	4
270	27	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	2
270	28	PAOZZ	6625-00-166-1013	96906	MS91587-2	.SHUNT,INSTRUMENT.................................UHB,UHC,UHM	EA	1
270	32	XDOZZ	5945-00-913-2683	96906	MS25205-2	.FLASHER,AIRCRAFT U/O UH-1C PN 204-075-603-7 ....UHB,UHC,UHM	EA	1
270	32	PAOZZ	5945-00-752-5599	96906	MS24577-2A	.FLASHER,AIRCRAFT U/C PN 204-075-612-1,-5 & -9......UHC,UHM	EA	1
270	33	PAOZZ	5945-00-736-1465	97499	204-075-383-1	.RELAY,ELECTROMAGNET..............................UHB,UHC,UHM	EA	1
270	33A	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	12
270	34	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT......................................UHB,UHC,UHM	EA	4
270	36	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON........................UHB,UHC,UHM	EA	13
270	37	MOOZZ		96906	MS18029-1S9	.COVER,TERMINAL BOARD.............................UHB,UHC,UHM	EA	
270	37	MOOZZ		96906	MS18029-11S9	.COVER,TERMINAL BOARD U/O PN 204-075-612-1......UHB,UHC,UHM	EA	
270	39	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT......................................UHB,UHC,UHM	EA	9

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
270	40	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING, HEXAGON....................UHB,UHC,UHM	EA	2
270	41	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT....................UHB,UHC,UHM	EA	2
270	42	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE....................UHB,UHC,UHM	EA	2
270	43	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR....................UHB,UHC,UHM	EA	2
270	44	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE....................UHB,UHC,UHM	EA	2
270	45	MOOZZ	DELETED	96906	MS27212-1-9	TERMINAL BOARD ASSY....................UHB,UHC,UHM	EA	1
270	45A	AOOOZ	1560-00-019-8002	97499	204-075-404-11	.CABLE ASSEMBLY....................UHB,UHC,UHM	EA	1
270	46	PAOZZ	5935-00-686-0447	96906	MS25182-2	..CONNECTOR,PLUG,ELEC....................UHB,UHC,UHM	EA	1
270	47	PAOZZ	5940-00-204-8966	96906	MS25036-102	. TERMINAL,LUG....................UHB,UHC,UHM	EA	1
270	48	PAOZZ	5940-00-143-4773	96906	MS25036-106	.TERMINAL,LUG....................UHB,UHC,UHM	EA	1
270	49	PBOZZ	5940-00-557-4339	96906	MS25036-126	..TERMINAL,LUG....................UHB,UHC,UHM	EA	1
270	50	PAOZZ	5940-00-113-8191	96906	MS25036-127	. TERMINAL,LUG U/O PN 204-075-404-11..........UHB,UHC,UHM	EA	1
270	50A	PBOZZ	6145-00-578-6596	81349	M5086/2-2-9	..WIRE,ELECTRICAL....................UHB,UHC,UHM	FT	V
270	50B	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL....................UHB,UHC,UHM	FT	V
270	50C	AOOOZ	1560-00-731-9003	97499	204-075-427-1	.CABLE ASSEMBLY U/O PN 204-075-111-7 & 204-075-603-1.....UHB	EA	1
270	50C	AOOOZ	1560-00-872-7896	97499	204-075-427-15	.CABLE ASSEMBLY U/O PN 204-075-603-5....................UHB	EA	1
270	50C	AOOOZ	1560-00-869-6324	97499	204-075-427-13	.CABLE ASSEMBLY U/O PN 204-075-603-7..............UHC,UHM	EA	1
270	50C	AOOOZ	6150-00-924-0421	97499	204-175-425-1	.CABLE ASSEMBLY U/O PN 204-075-612-1,-5,& -9.........UHC,UHM	EA	1
270	50C	AOOOZ	6150-00-924-0423	97499	204-175-425-3	.CABLE ASSEMBLY U/O PN 204-075-612-1,-5,& -9.........UHC,UHM	EA	1
270	50C	AOOOZ	6150-00-924-0422	97499	204-175-425-5	.CABLE ASSEMBLY U/O PN 204-075-612-1,-5,& -9.........UHC,UHM	EA	1
270	50C	AOOOZ	6150-00-924-0420	97499	204-175-425-7	.CABLE ASSEMBLY U/O PN 204-075-612-1,-5,& -9.........UHC,UHM	EA	1
270	50C	AOOOZ	6150-00-924-0431	97499	204-175-424-1	.CABLE ASSEMBLY U/O PN 204-075-612-1,-5,& -9.........UHC,UHM	EA	1
270	51	XDOZZ		97499	30-051R16S8S	..CONNECTOR U/O PN 204-175-424-1....................UHC,UHM	EA	1
270	51A	PAOZZ	5935-00-546-5080	96906	MS3456W16S8S	..CONNECTOR,PLUG,ELEC....................UHC,UHM	EA	1
270	51B	PAOZZ	5935-00-878-3609	96906	MS3106R14S2SX	..CONNECTOR,PLUG,ELEC ICE INTERPRETER. U/O PN 204-075-427-1 ....UHB	EA	1
270	52	PBOZZ	5935-00-819-6056	96906	MS3106R16S8S	..CONNECTOR,PLUG,ELEC NAV LTS FLASH PLUG. U/O UH-1C PN 204-075-427-13....................UHB,UHC,UHM	EA	1
270	52A	PAOZZ	5935-00-062-0231	97499	30-051R14S2S	..CONNECTOR,PLUG,ELEC U/O UH-1C PN 204-075-427-13,204-175-425-7....................UHB,UHC,UHM	EA	1
270	52B	PAOZZ	5935-00-822-2831	96906	MS3456W14S2S	..CONNECTOR,PLUG,ELEC....................UHB,UHC,UHM	EA	1
270	53	PBOZZ	5935-00-846-8101	96906	MS3108R24-7SC	. CONNECTOR,PLUG,ELEC FIELD RELAY CONN. U/O UH-1C PN 204-075-427-13....................UHB,UHC,UHM	EA	1
270	53A	PBOZZ	5935-00-893-7952	96906	MS3112E14-5S	..CONNECTOR,RECEPTACL....................UHB,UHC,UHM	EA	1
270	54	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE U/O UH-1C PN 204-075-427-13......UHB,UHC,UHM	EA	2
270	54A	PBOZZ	5935-00-688-4026	96906	MS3057-8A	..CLAMP,CABLE U/O (UH-1C PN 204-075-427-13..............UHB	EA	1
270	55	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER,CABLE TO CONNECTOR U/O UH-1C PN 204-075-427-13 ....UHB,UHC,UHM	EA	1
270	56	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O UH-1B PN 204-075-427-1..............UHB	EA	3
270	57	PAOZZ	5940-00-813-0698	96906	MS25036-101	. TERMINAL,LUG U/O UH-1B PN 204-075-427-15 U/O UH-1C PN 204-075-427-13....................UHB,UHC,UHM	EA	25
270	58	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 204-175-425-1..................UHC,UHM	EA	2
270	58A	PAOZZ	5940-00-204-8966	96906	MS25036-102	. TERMINAL,LUG U/O UH-1B PN 204-075-427-1 U/O UH-1C PN 204-075-427-13....................UHB,UHC,UHM	EA	22
270	58B	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-425-1..................UHC,UHM	EA	19
270	59	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG U/O PN 204-175-425-5, 204-175-425-7,& 204-	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						175-424-1 .... UHC,UHM		
270	59A	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13..... UHB,UHC,UHM	EA	15
270	59B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-425-1........ UHC,UHM	EA	10
270	59C	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-425-3,-5,-7,........ UHC,UHM	EA	2
270	59D	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 204-175-424-1........ UHC,UHM	EA	1
270	60	PAOZZ	5940-00-143-4773	96906	MS25036-105	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13, 204-175-425-1 .... UHB,UHC,UHM	EA	1
270	61	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O PN 204-075-427-13........ UHC,UHM	EA	2
270	61A	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG U/O PN 204-175-425-1,3........ UHC,UHM	EA	1
270	61B	PAOZZ	5940-00-113-8179	96906	MS25036-107	..TERMINAL,LUG........ UHB	EA	2
270	62	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O UH-1C PN 204-175-425-3........ UHC,UHM	EA	2
270	62A	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U-O UH-1C PN 204-075-427-13..... UHB,UHC,UHM	EA	3
270	62B	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG U/O PN 204-075-425-1........ UHC,UHM	EA	1
270	63	PBOZZ	5940-00-557-4341	96906	MS25036-123	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13, 204-175-425-5, & -7........ UHB,UHC,UHM	EA	V
270	64	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13,204-175-425-5 & -7........ UHB,UHC,UHM	EA	3
270	64A	PBOZZ	5940-00-557-4339	96906	MS25036-126	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13, 204-175-425-5, & -7........ UHB,UHC,UHM	EA	1
270	65	PAOZZ	5940-00-113-8191	96906	MS25036-127	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13 & 204-175-425-1 .... UHB,UHC,UHM	EA	7
270	65A	PAOZZ	5940-00-113-8191	96906	MS25036-127	..TERMINAL,LUG U/O PN 204-175-425-5........ UHC,UHM	EA	4
270	65B	PAOZZ	5940-00-113-8191	96906	MS25036-127	..TERMINAL,LUG U/O PN 204-175-425-5,-7........ UHC,UHM	EA	3
270	66	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O UH-1C PN 204-075-427-13 & 204-175-425-1 .... UHB,UHC,UHM	EA	4
270	66A	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 204-175-424-1........ UHC,UHM	EA	2
270	67	PBOZZ	5940-00-688-6005	96906	MS25036-143	..TERMINAL,LUG U/O UH-1B PN 204-075-427-15 U/O UH-1C PN 204-075-427-13, 204-175-425-1........ UHB,UHC,UHM	EA	1
270	68	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 204-175-425-3........ UHC,UHM	EA	1
270	68A	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR U/O PN 204-075-427-13, 204-175-425-3 .... UHB,UHC,UHM	EA	1
270	69	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........ UHB	FT	23
270	69A	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-075-427-13........ UHC,UHM	FT	20
270	69B	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 204-175-425-1........ UHC,UHM	FT	1
270	69C	PBOZZ	6145-00-578-6696	81349	M5086/2-2-9	..WIRE,ELECTRICAL U/O UH-1C PN 204-075-427-13 204-175-425-1,5,& -7........ UHB,UHC,UHM	FT	V
270	69D	PAOZZ	6145-00-578-6695	81349	M5086/2-4-9	..WIRE,ELECTRICAL U/O UH-1C PN 204-075-427-13,204-175-425-5,& -7........ UHB,UHC,UHM	FT	V
270	69E	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL U/O UH-1C PN 204-075-427-13 204-175-425-1,& -3........ UHB,UHC,UHM	FT	V
270	69F	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL U/O UH-1C PN 204-075-427-13,204-175-422-5,& 204-175-425-7........ UHB,UHC,UHM	FT	V
270	69G	PBOZZ	6145-00-881-8505	96906	MS25190B20	..WIRE,ELECTRICAL........ UHB,UHC,UHM	FT	V
270	69H	PBOZZ	5910-00-236-8766	81349	M39003-01-3094	..CAPACITOR,FIXED,ELE RPLS-- 5910-00-754-7081 & 5910-00-068-3884........ UHB,UHC,UHM	EA	1
270	69J	PAOZZ	5935-00-965-0573	96261	S01023-7123	..SOCKET,PLUG-IN ELEC U/O PN 204-175-425-3........ UHC,UHM	EA	1
270	69K	MDOZZ	DELETED	97499	130-005-6-4	..INSULATION SLEEVING U/O PN 204-175-424-1........ UHC,UHM	EA	2
270	69K	MDOZZ	5970-00-342-8362	97499	85T4-10-2	..INSULATION SLEEVING U/O PN 204-175-425-3........ UHC,UHM	EA	8
270	69L	PBOZZ	5935-00-910-3487	96906	MS25458-1	..SOCKET,PLUG-IN ELEC U/O PN 204-175-425-3........ UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
270	69M	PAOZZ	5970-00-815-1295	81349	M23053/5-106-0	..INSULATION SLEEVING U/O UH-1C PN 204-075-427-13 ......UHB,UHC,UHM	FT	V
270	69N	PAOZZ	5961-00-850-8449	81349	JAN1N1124A	..SEMICONDUCTOR, DEVICE......UHC,UHM	EA	1
270	70	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE......UHB,UHC,UHM	EA	2
270	72	PAOZZ	5975-00-553-6995	96906	MS25171-1S	.CABLE NIPPLE......UHB,UHC,UHM	EA	1
270	74	PBOZZ	5935-01-050-7485	96906	MS3506-1	.CONNECTOR,RECEPTACL EXT PWR......UHB,UHC,UHM	EA	1
270	75	PBOZZ	5930-00-243-2381	88044	AN3167-1	ADAPTER,SWITCH ACTU ACTUATOR......UHB,UHC,UHM	EA	1
270	76	PBOZZ	5930-00-835-0340	96906	MS25026-1	.SWITCH,SENSITIVE......UHB,UHC,UHM	EA	1
270	77	PAOZZ	5945-00-295-6765	84955	PR9502AC	.RELAY,ELECTROMAGNET U/O UH-1B PN 204-075-111-1,-5,-7, 204-075-603-1,-5, UH-1C PN 204-075-603-7......UHB,UHC,UHM	EA	1
270	77	PAOZZ	5945-00-903-2411	96906	MS25457D1	.RELAY,ELECTROMAGNET GENERATOR FIELD U/O PN 204-075-612-1,-5,-9......UHC,UHM	EA	1
270	78	PAOZZ	5945-00-542-9596	81349	M26126/2-1	.RELAY,ELECTROMAGNET......UHB,UHC,UHM	EA	1
270	79	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON......UHB,UHC,UHM	EA	4
270	80	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT......UHB,UHC,UHM	EA	6
270	81	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE......UHB,UHC,UHM	EA	2
270	82	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET......UHB,UHC,UHM	EA	1
270	83	PAOZZ	5945-00-681-9716	96906	MS24568D1	.RELAY,ELECTROMAGNET......UHB,UHC,UHM	EA	1
270	84	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE......UHB,UHC,UHM	EA	1
270	85	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE......UHB,UHC,UHM	EA	1
270	85A	PAOZZ	5365-00-684-5976	80205	NAS43DD1-7	.SPACER,SLEEVE......UHB,UHC,UHM	EA	2
270	86	PAOZZ	6340-00-627-9180	80099	227-02851	.CONTROL,ALARM......UHB,UHC,UHM	EA	1
270	87	PAOZZ	6340-00-794-5887	19500	41531	.MOUNT......UHB,UHC,UHM	EA	1
270	88	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON U/O (UH-1B) PN 204-075-111-7 ......UHB	EA	4
270	89	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O UH-1B PN 204-075-603-1 & -5......UHB,UHC,UHM	EA	4
270	90	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT U/O PN 204-075-111-7......UHB	EA	4
270	91	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT U/O PN 204-075-603-1,&-5......UHB,UHC,UHM	EA	4
270	92	PAOZZ	5905-00-779-3979	14140	41260-1000	.RESISTOR,FIXED,FILM......UHB,UHC,UHM	EA	1
270	93	PAOZZ	6340-00-794-5887	19500	41531	.MOUNT,SHOCK......UHB,UHC,UHM	EA	1

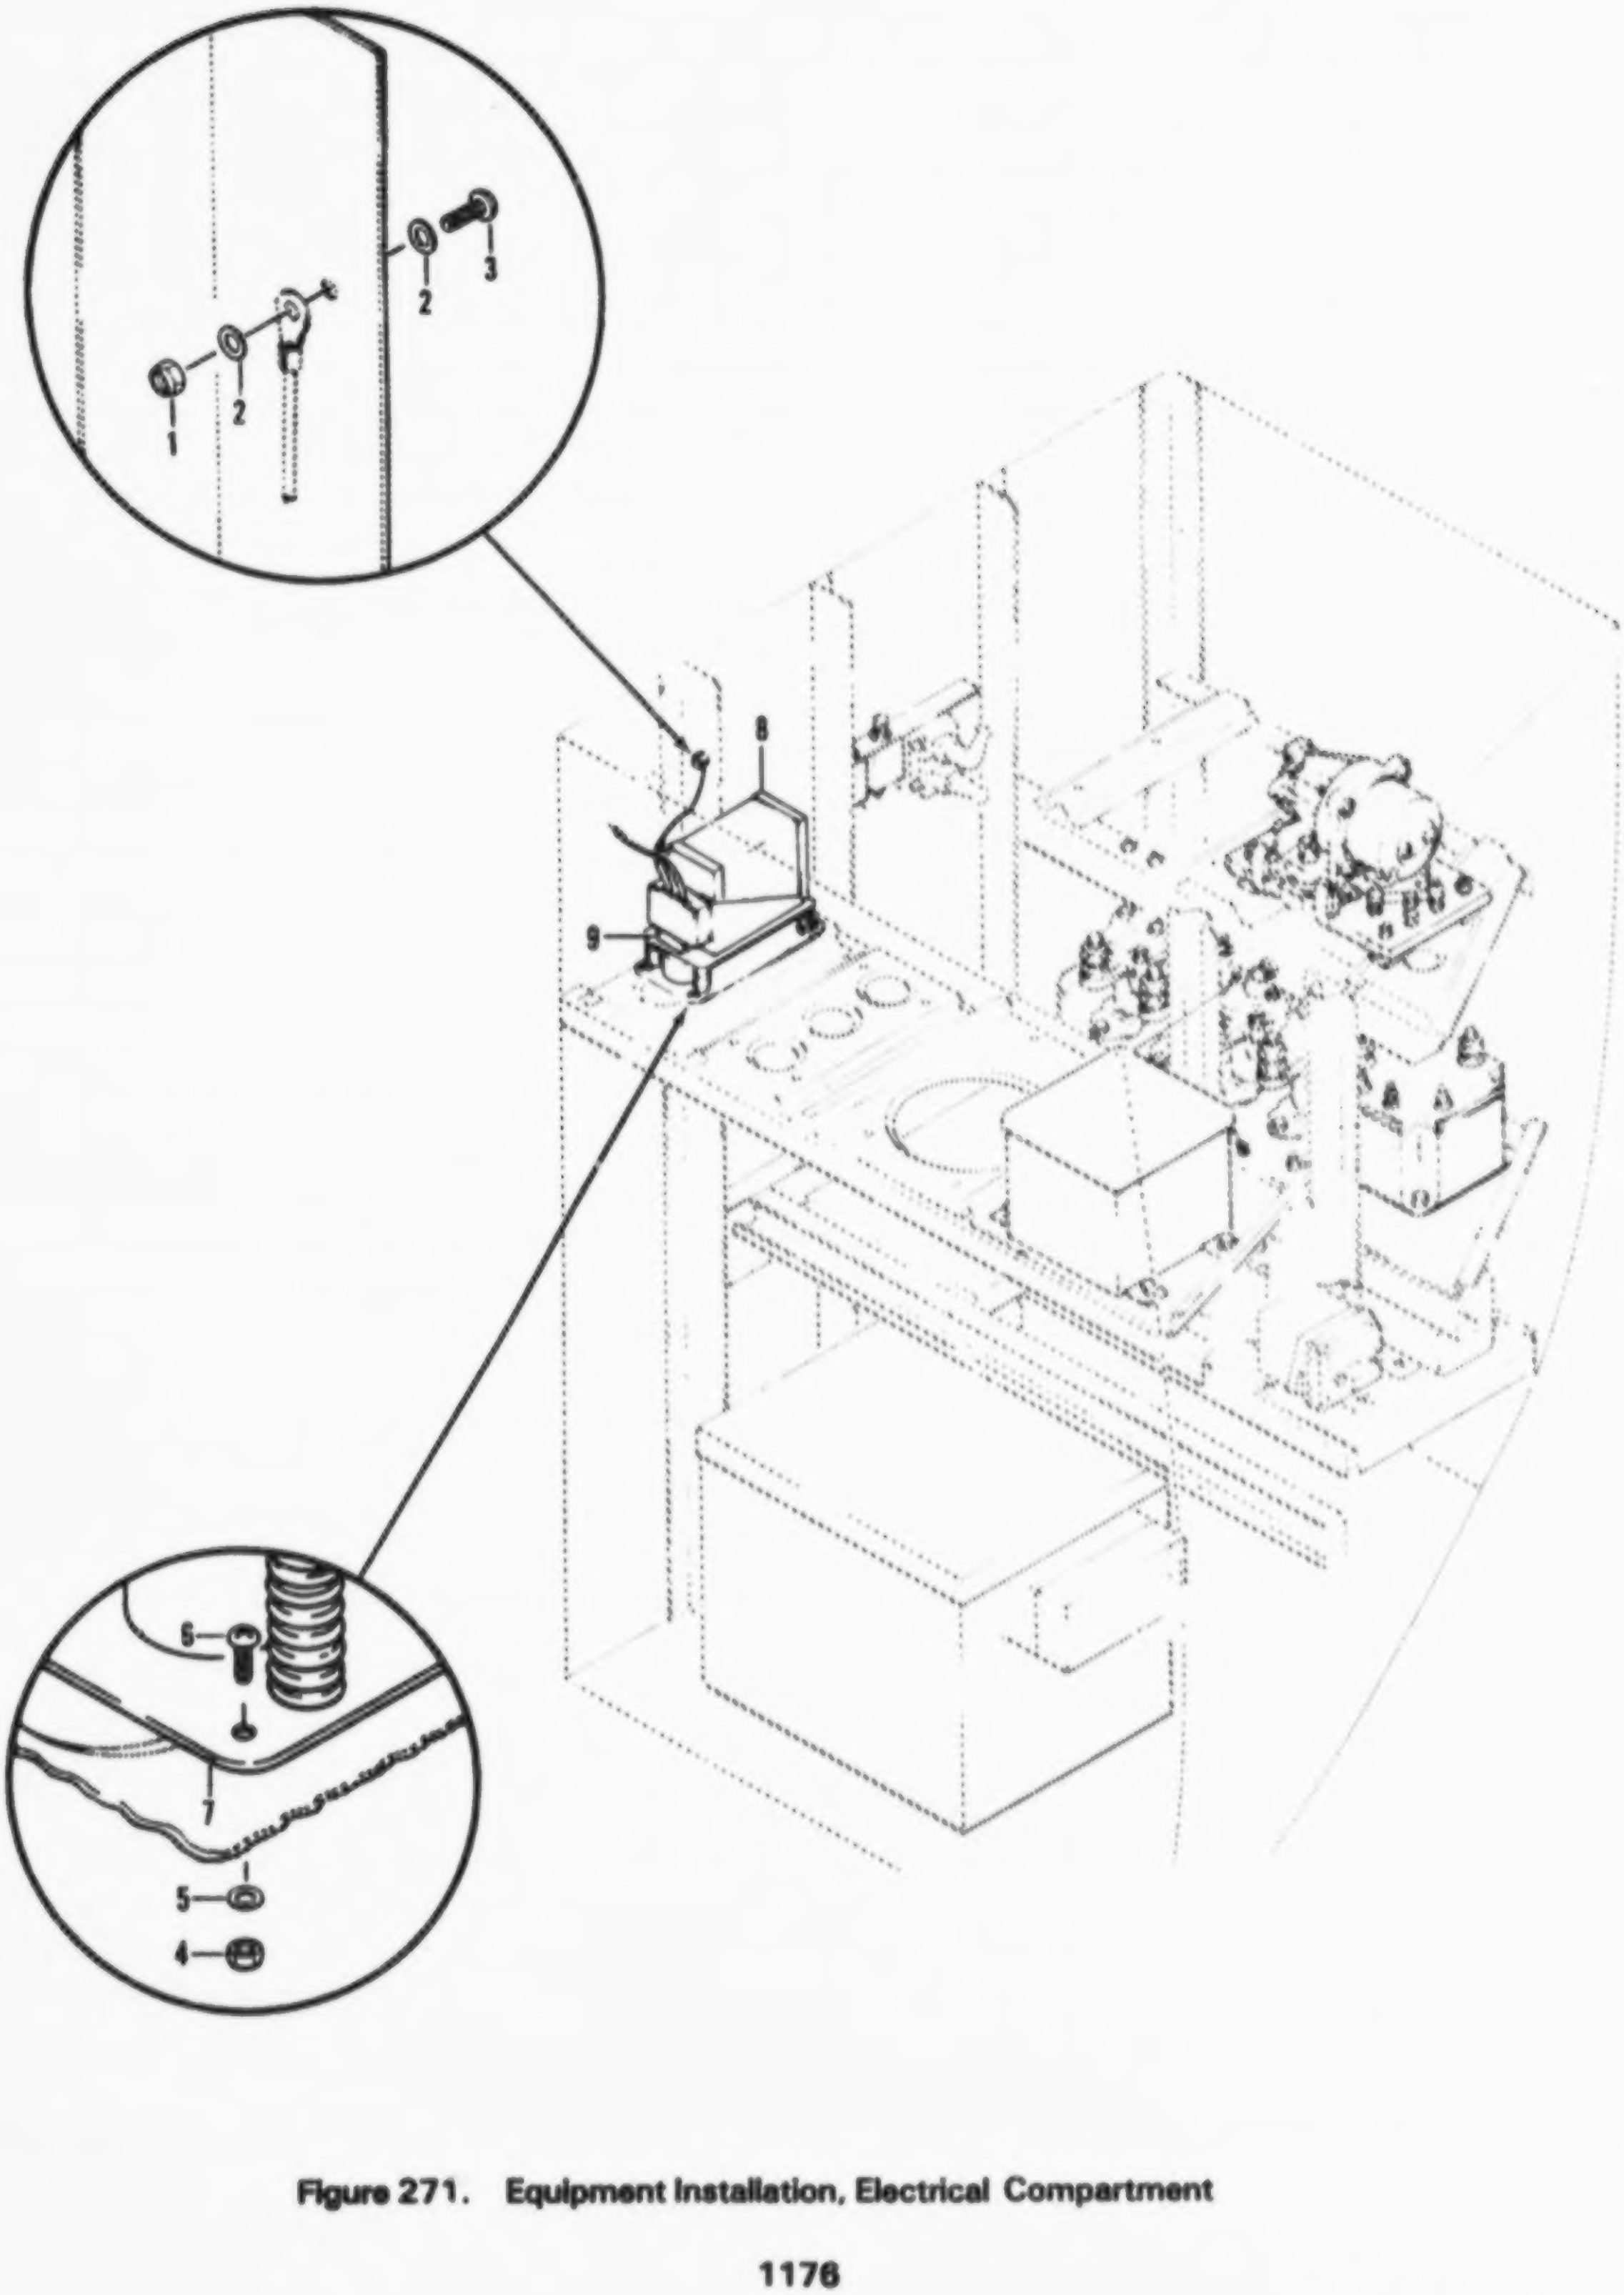
1
2
2
3
8
9
6
7
5
4

Figure 271. Equipment Installation, Electrical Compartment

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
271		XCFZZ		97499	204-075-111-7	EQUIPMENT INSTL ELECTRICAL SEE FIG.225 FOR NHA..........	UHB	EA	1
271	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON..............	UHB	EA	1
271	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................................	UHB	EA	2
271	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..................................	UHB	EA	4
271	4	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON.......................	UHB	EA	1
271	5	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT....................................	UHB	EA	4
271	6	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE..................................	UHB	EA	1
271	7	PAOZZ	6340-00-794-5887	19500	41531	.MOUNT..	UHB	EA	1
271	8	PAOZZ	6340-00-627-9180	80099	227-02851	.CONTROL,ALARM..................................	UHB	EA	1
271	9	PAOZZ	5905-00-779-3979	14140	41250-1000	.RESISTOR,FIXED,FILM............................	UHB	EA	1

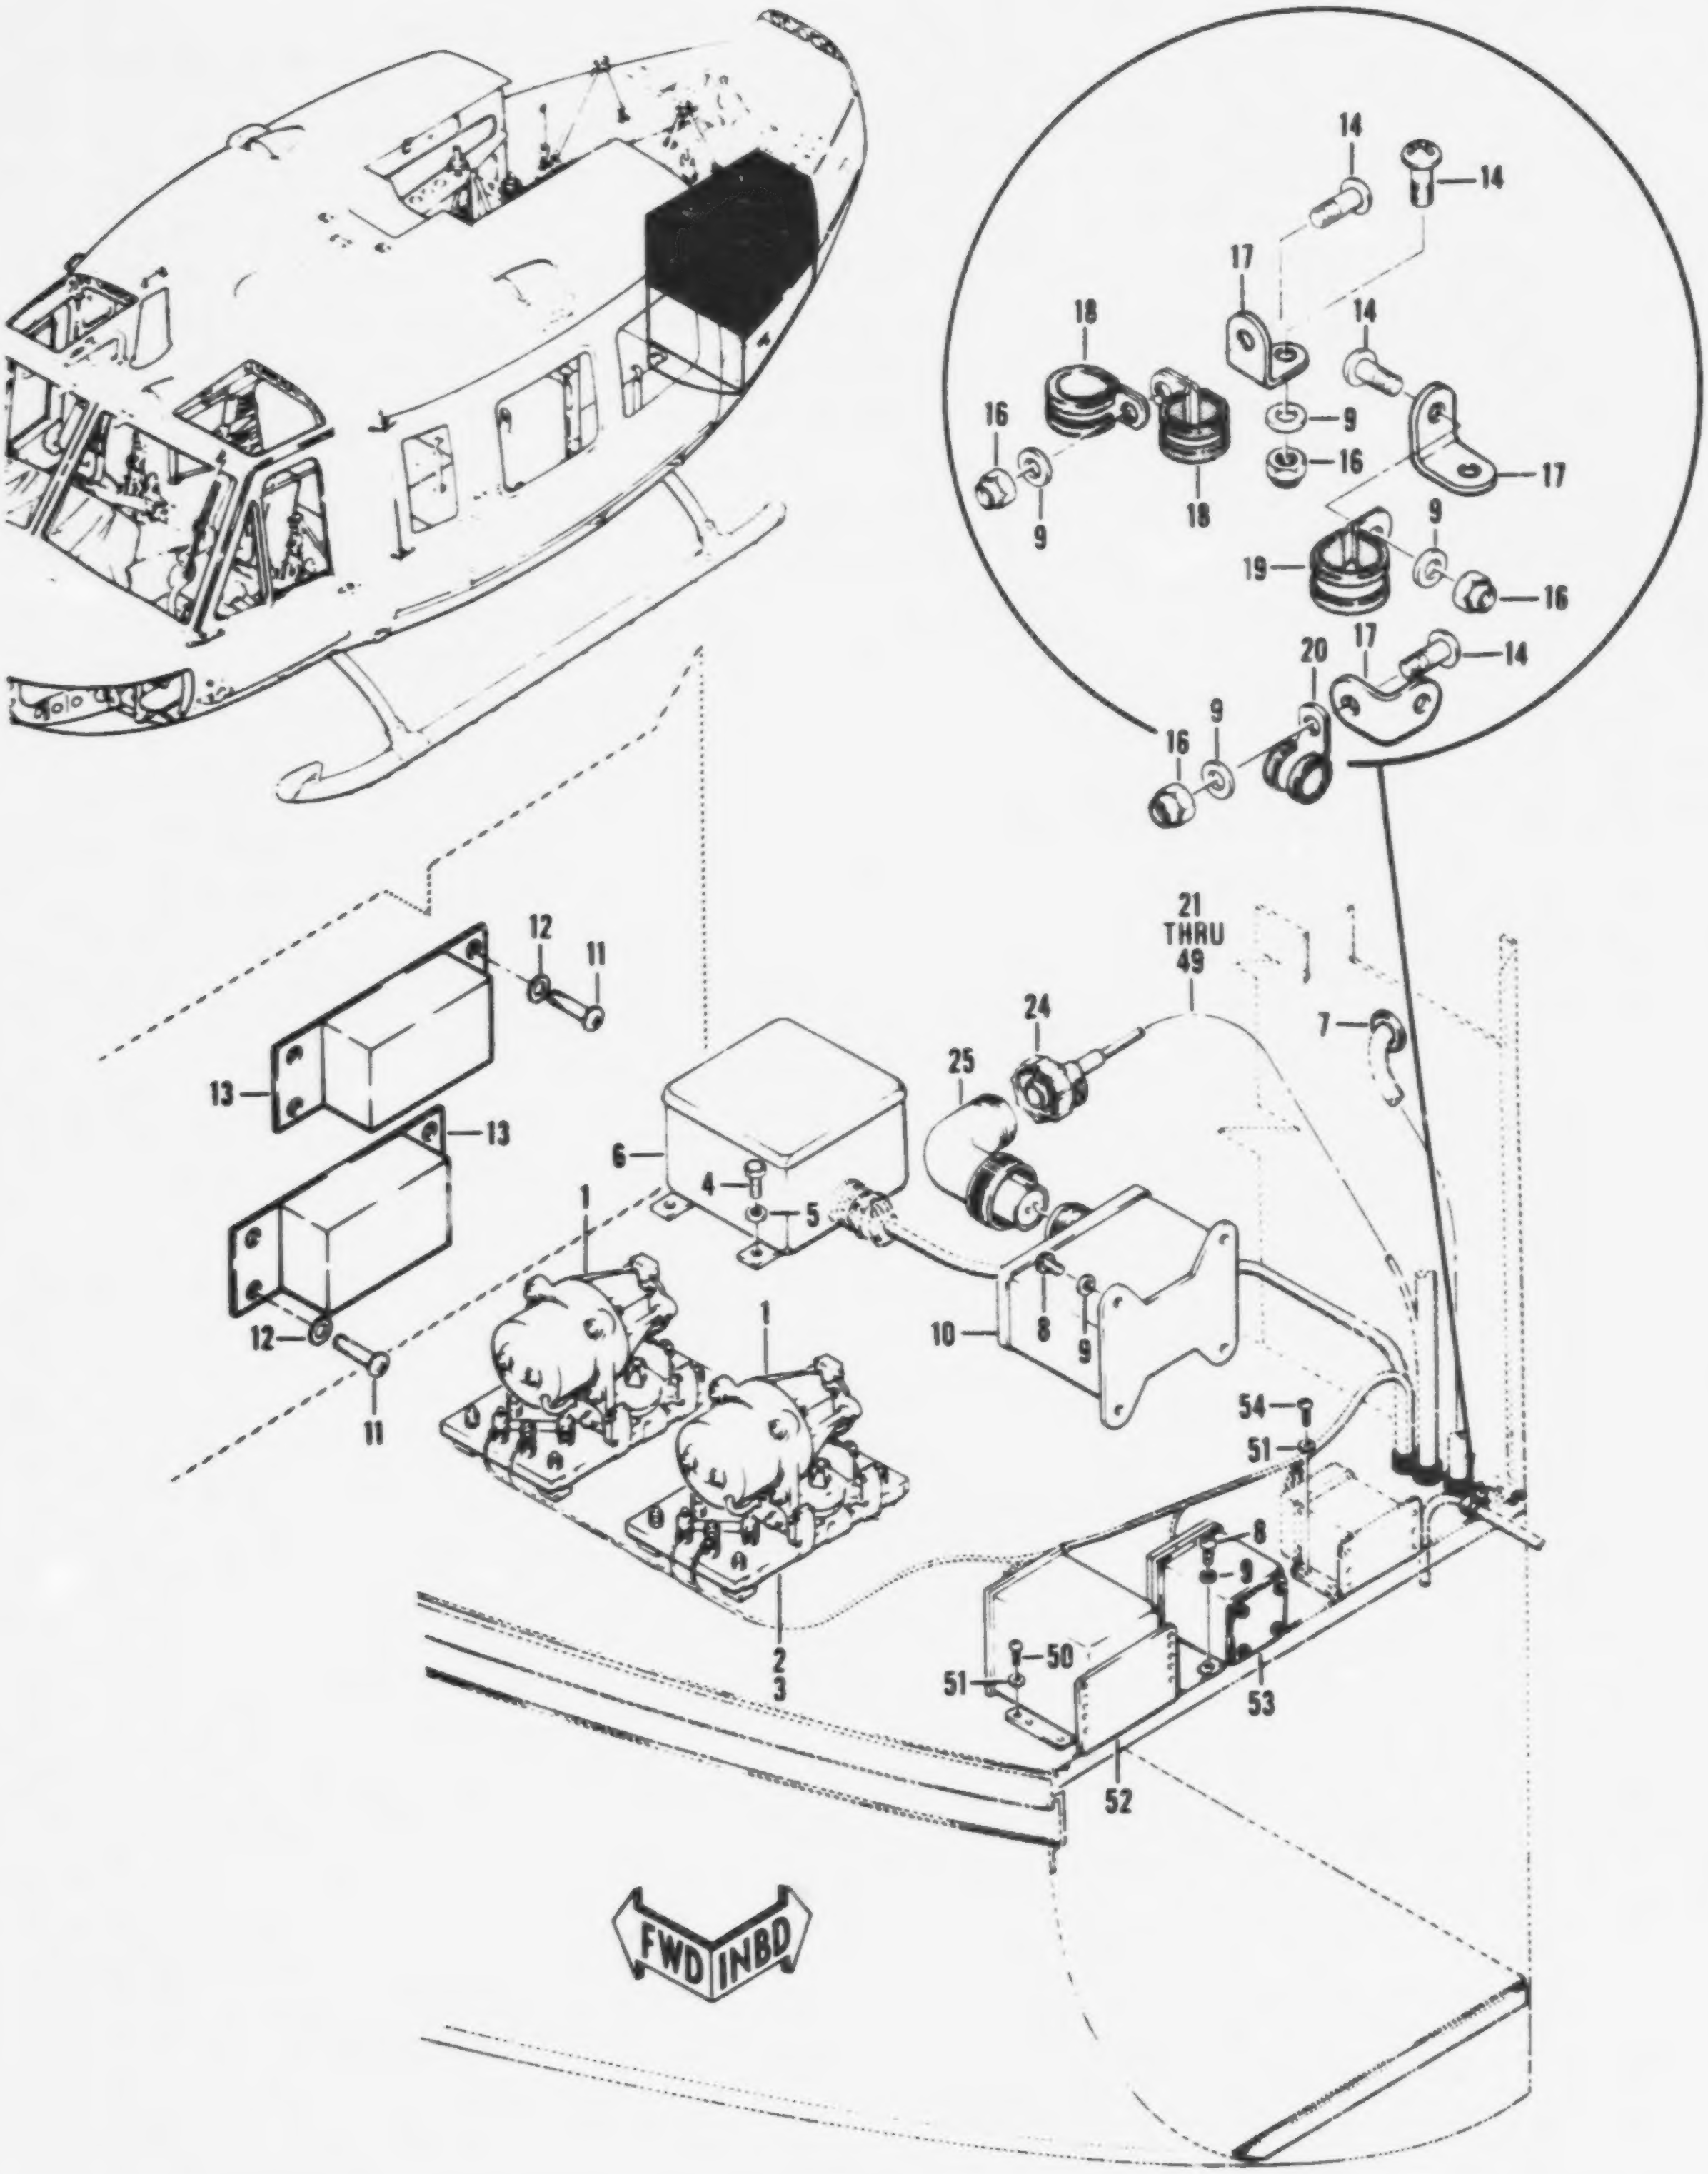
14
14
17
18
14
16
9
9
16
18
17
9
19
16
20
17
14
9
16
21 THRU 49
24
7
25
12
11
13
13
6
4
5
1
1
10
8
9
12
11
54
51
8
9
50
51
2
3
53
52
FWD
INBD

Figure 272. Equipment Installation, Upper Radio

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
272		XCFZZ		97499	205-075-108-1	EQUIPMENT INSTL ELECTRICAL USBL EFF 62-2106 THRU 62-12372 SEE FIG.226 FOR NHA SEE FIG.273 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
272		XCFZZ		97499	205-075-109-1	EQUIPMENT INSTL ELECTRICAL USBL EFF 63-8739 THRU 64-13901 SEE FIG.226 FOR NHA SEE FIG.273 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
272	1	PAODD	6110-00-598-2567	96906	MS18071-12	.REGULATOR,VOLTAGE INTRCH..........UHE,UHH,UHV,UHX	EA	2
272	1	PAODD	6110-01-065-3716	07639	CSV1152-12AB	.REGULATOR,VOLTAGE..........UHE,UHH,UHV,UHX	EA	2
272	2	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	4
272	3	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
272	4	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	4
272	5	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
272	6	XDOZZ		96906	MS25205-2	.FLASHER,AIRCRAFT NA USBL EFF 62-2106 THRU 64-13901 ....UHE,UHH,UHV,UHX	EA	1
272	6	PAOZZ	5945-00-752-5599	96906	MS24577-2	.FLASHER,THERMAL USBL EFF 65-9565 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
272	7	PAOZZ	5325-00-276-6343	96906	MS35489-23	.GROMMET,NONMETALLIC..........UHE,UHH,UHV,UHX	EA	1
272	8	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
272	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
272	10	PAOZZ	5945-00-295-6765	84955	PR9502AC	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
272	11	PAOZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE U/O PN 205-075-109-1..........UHE,UHH,UHV,UHX	EA	8
272	12	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT U/O PN 205-075-109-1..........UHE,UHH,UHV,UHX	EA	8
272	13	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
272	14	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	6
272	16	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	6
272	17	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	3
272	18	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	2
272	19	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
272	20	XDOZZ	5340-00-990-9301	81996	EAB700D7	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
272	21	AOOOO		97499	205-075-403-11	.WIRING ASSEMBLY U/O PN 205-075-108-1..........UHE,UHH,UHV,UHX	EA	1
272	22	AOOOO		97499	205-075-421-1	.WIRING ASSEMBLY U/O PN 205-075-109-1..........UHE,UHH,UHV,UHX	EA	1
272	23	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	23
272	24	PBOZZ	5935-00-846-8101	96906	MS3108R24-7SC	..CONNECTOR,PLUG,ELEC FIELD RELAY CONN. U/O PN 205-075-403-11 & 205-075-421-7..........UHE,UHH,UHV,UHX	EA	1
272	25	PAOZZ	5935-00-280-2353	96906	MS3057-16A	..ADAPTER,CABLE TO CONNECTOR..........UHE,UHH,UHV,UHX	EA	1
272	26	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	29
272	27	PAOZZ	5940-00-143-4793	96906	MS25036-110	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
272	28	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
272	28A	PBOZZ	5940-00-557-4341	96906	MS25036-123	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
272	29	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	3
272	30	PBOZZ	5940-00-557-4339	96906	MS25036-126	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	1
272	31	PAOZZ	5940-00-113-8191	96906	MS25036-127	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	7
272	32	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	15
272	33	PAOZZ	5940-00-115-5007	96906	MS25036-130	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
272	34	PBOZZ	5940-00-688-6005	96906	MS25036-143	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	1
272	35	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	4
272	36	PACZZ	5940-00-143-4773	96906	MS25036-105	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	1
272	37	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	2
272	38	PAOZZ	5940-00-230-0515	96906	MS25036-154	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	1
272	39	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	3
272	40	XBOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG..............................UHE,UHH,UHV,UHX	EA	5
272	41	PAOZZ	5940-01-079-1375	81349	M7928/5-4	..SPLICE,CONDUCTOR..........................UHE,UHH,UHV,UHX	EA	1
272	42	PBOZZ	6145-00-578-6597	81349	MIL-W-5087/2	..WIRE,ELECTRICAL U/O 205-075-421-1.........UHE,UHH,UHV,UHX	FT	V
272	43	PBOZZ	6145-00-578-6598	81349	M5086/2-2-9	..WIRE,ELECTRICAL...........................UHE,UHH,UHV,UHX	FT	V
272	44	PAOZZ	6145-00-578-6595	81349	M5086/2-4-9	..WIRE,ELECTRICAL...........................UHE,UHH,UHV,UHX	FT	V
272	45	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL...........................UHE,UHH,UHV,UHX	FT	V
272	46	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	..WIRE,ELECTRICAL...........................UHE,UHH,UHV,UHX	FT	V
272	47	PBOZZ	6145-00-284-0657	96906	MS2519088	..WIRE,ELECTRICAL...........................UHE,UHH,UHV,UHX	FT	V
272	48	PAOZZ	5945-00-060-1342	81349	MILR5757TYPERY4L A3B3L01	..RELAY,ELECTROMAGNET U/O PN 205-075-421-1 ....UHE,UHH,UHV,UHX	EA	1
272	49	PAOZZ	5975-00-177-2283	88044	AN3420-16	..BUSHING,RUBBER U/O PN 205-075-421-1.......UHE,UHH,UHV,UHX	EA	1
272	50	PAOZZ	5305-00-984-6191	96906	MS35206-243	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	4
272	51	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	4
272	52	PAOZZ	5945-00-881-9716	96906	MS24568D1	.RELAY,ELECTROMAGNET........................UHE,UHH,UHV,UHX	EA	1
272	53	PAOZZ	5945-00-542-9596	81349	M25125/2-1	.RELAY,ARMATURE.............................UHE,UHH,UHV,UHX	EA	1
272	54	PAOZZ	5305-00-984-6191	96906	MS35206-243	.SCREW,MACHINE U/O PN 205-075-105-1.........UHE,UHH,UHV,UHX	EA	6

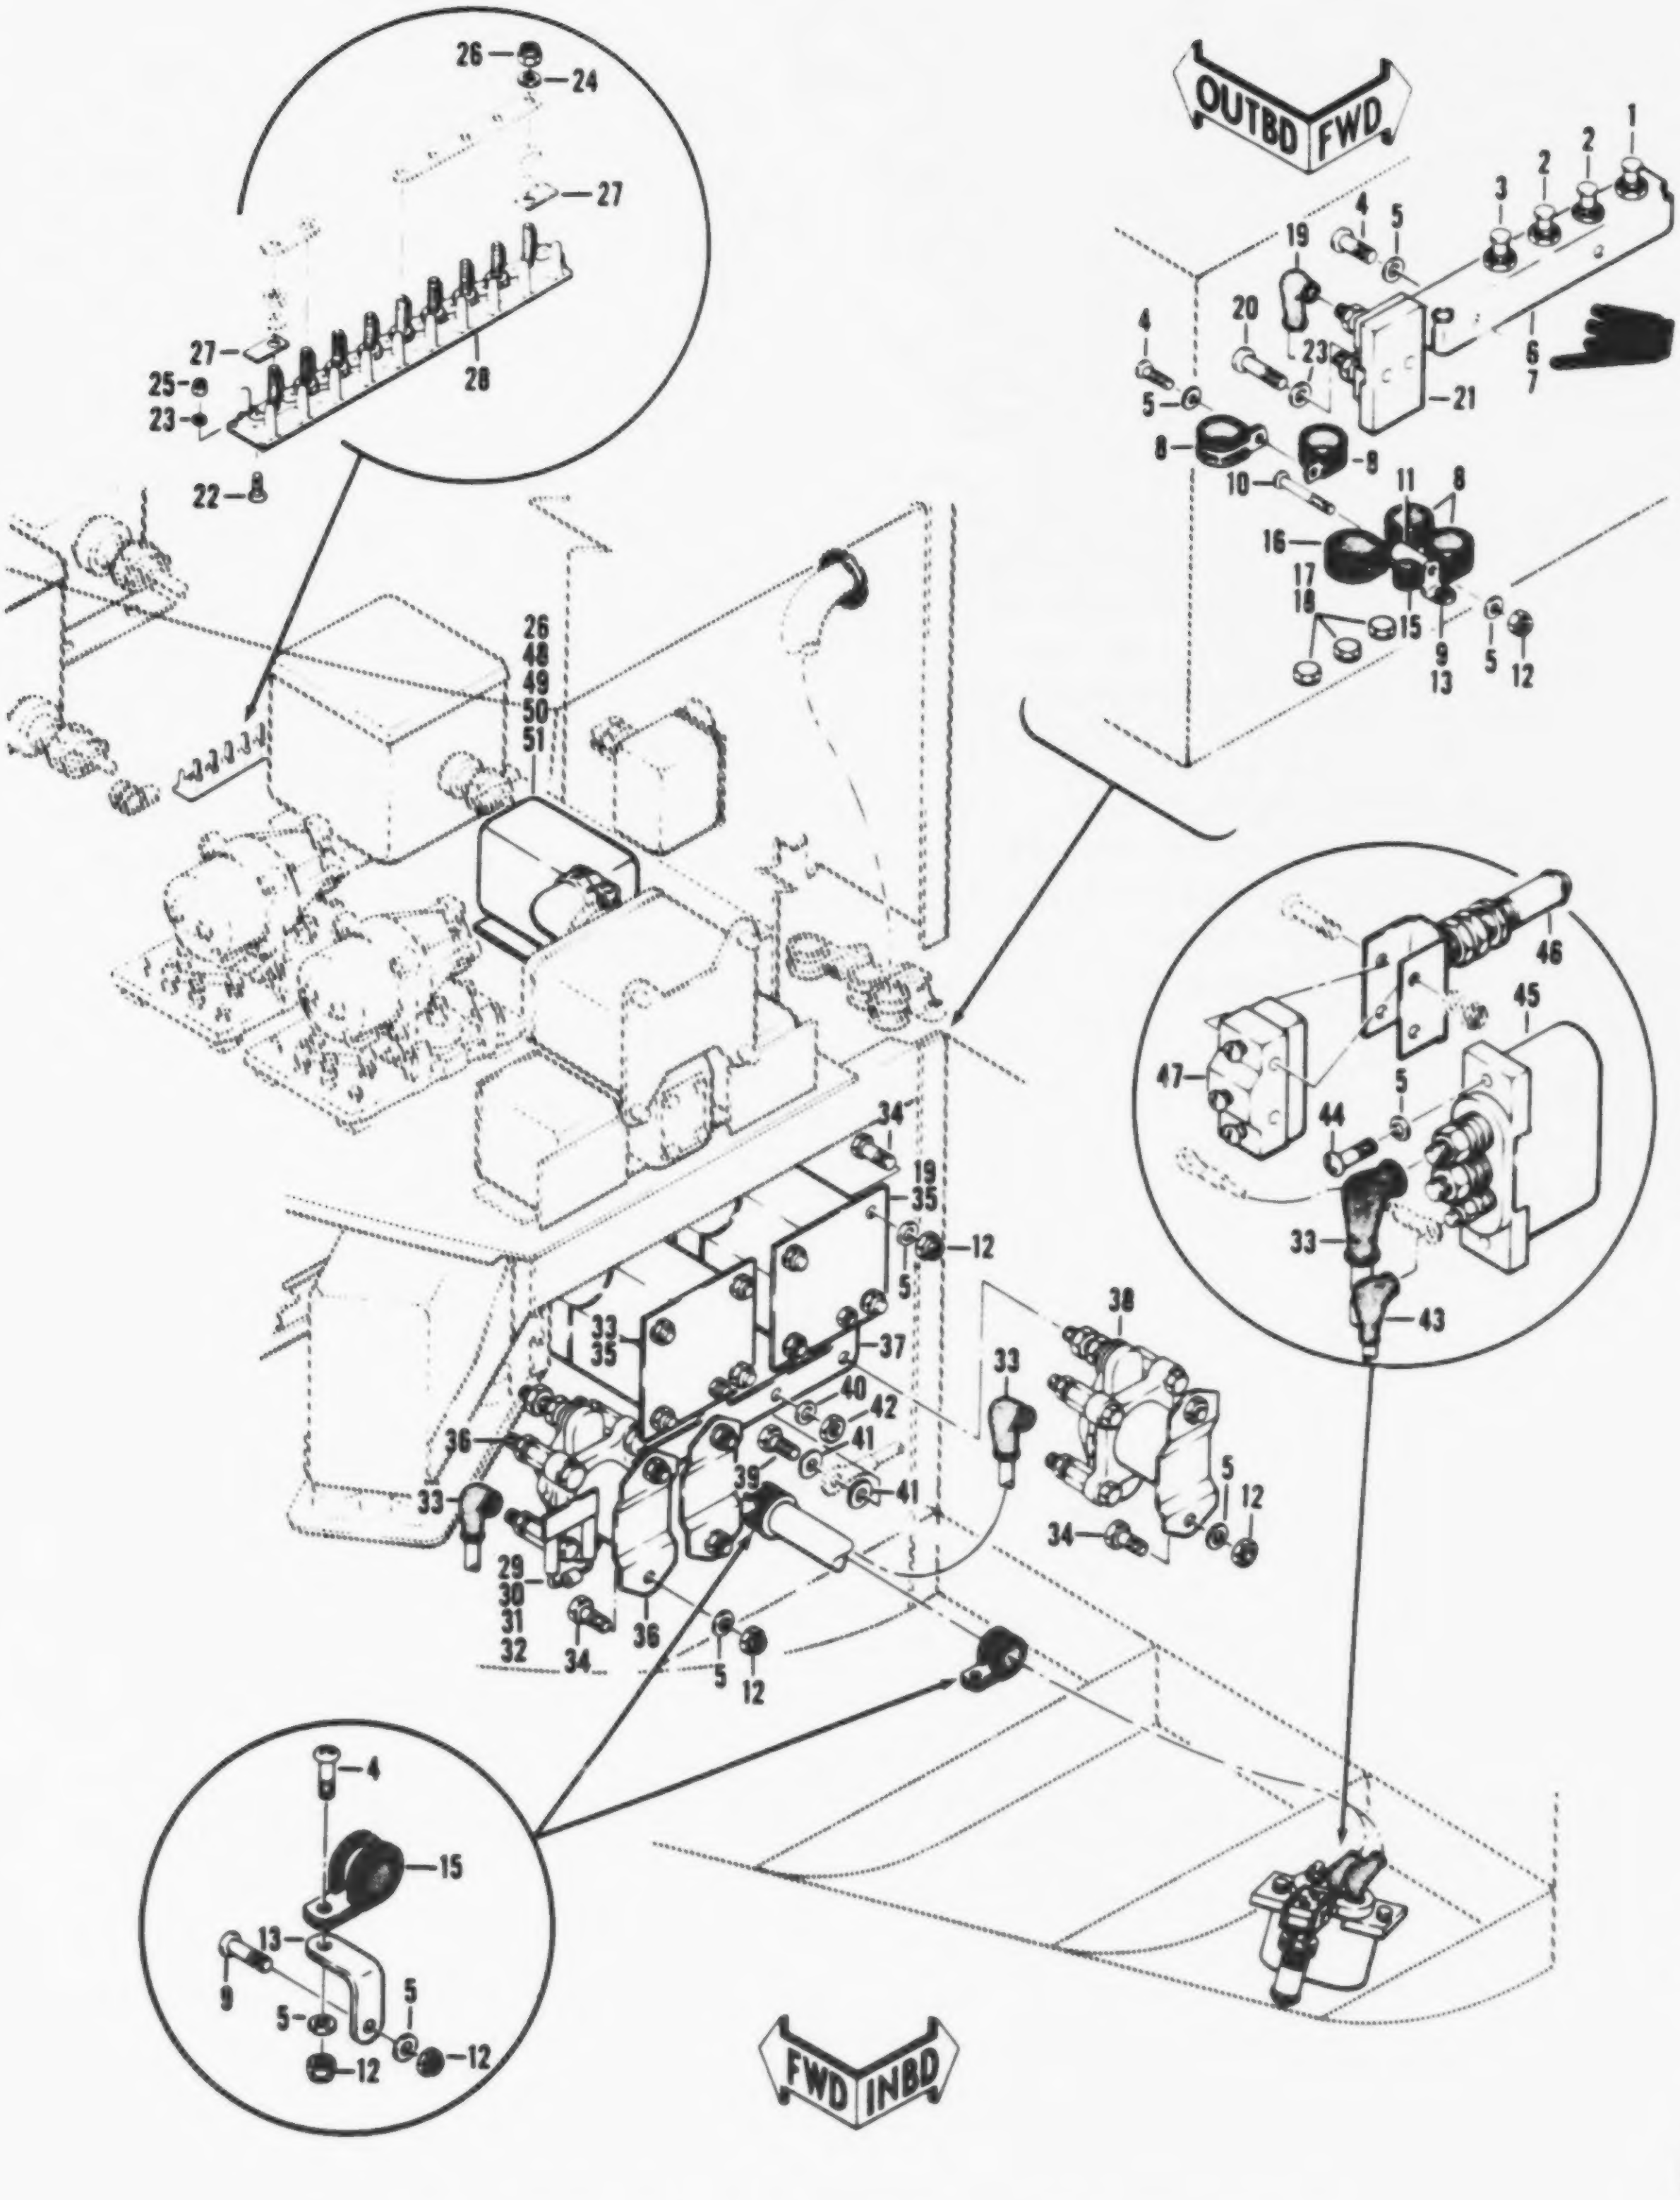
OUTBD
FWD
1
2
2
3
4
5
19
20
23
6
7
21
4
5
8
9
10
11
8
16
17
18
15
9
13
5
12
26
24
27
27
25
23
28
22
26
48
49
50
51
34
19
35
12
5
33
35
37
38
33
40
42
41
41
36
33
39
5
12
34
29
30
31
32
34
36
5
12
46
45
47
5
44
33
43
4
15
13
9
5
5
12
12
FWD
INBD

Figure 273. Equipment Installation, Electrical (Sheet 1 of 2)

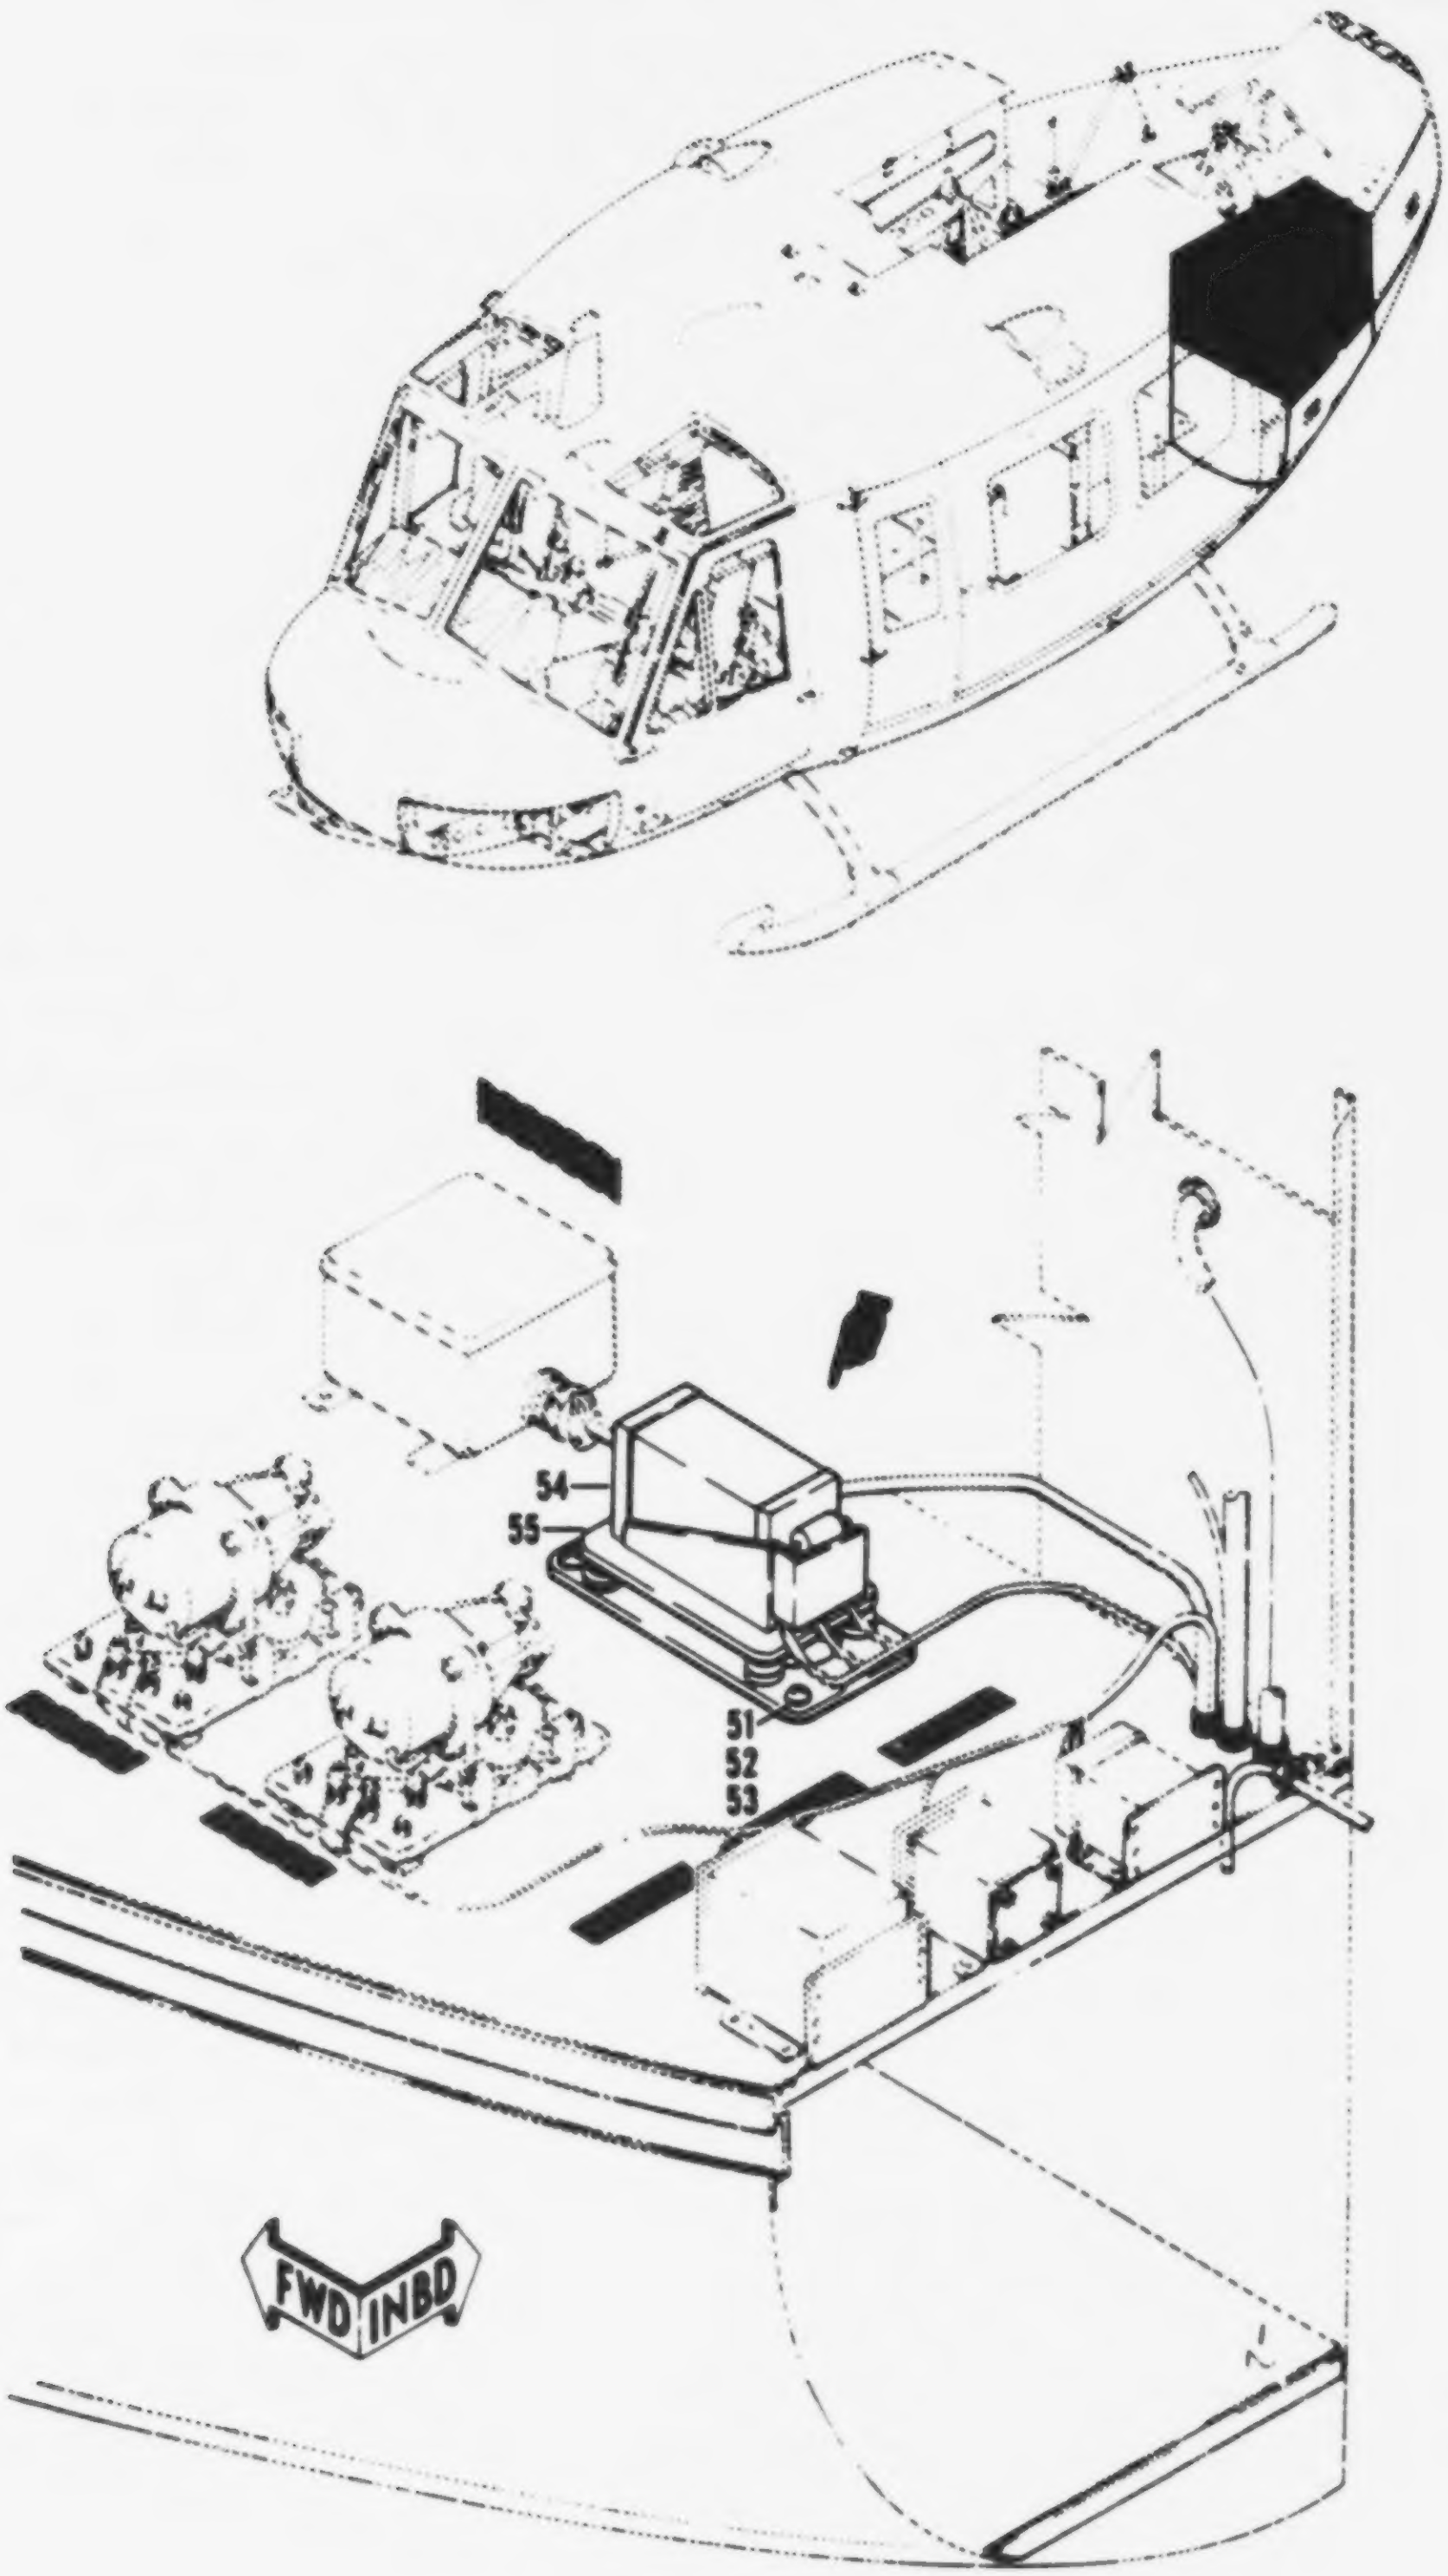
54
55
51
52
53
FWD
INBD

Figure 273. Equipment Installation, Electrical (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
273		XCFZZ		97499	205-075-108-1	EQUIPMENT INSTL ELECTRICAL USBL EFF 62-2106 THRU 62-12372 SEE FIG.226 FOR NHA SEE FIG.272 FOR BALANCE OF BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
273		XCFZZ		97499	205-075-109-1	EQUIPMENT INSTL ELECTRICAL USBL EFF 63-8739 THRU 64-13901 SEE FIG.226 FOR NHA SEE FIG.272 FOR BALANCE OF BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
273	1	PAOZZ	5925-00-682-4015	96906	MS25244-20	.CIRCUIT BREAKER........ UHE,UHH,UHV,UHX	EA	1
273	2	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER........ UHE,UHH,UHV,UHX	EA	2
273	3	PAOZZ	5925-00-045-9095	76374	MP1501C	.CIRCUIT BREAKER........ UHE,UHH,UHV,UHX	EA	1
273	4	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE........ UHE,UHH,UHV,UHX	EA	V
273	5	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........ UHE,UHH,UHV,UHX	EA	V
273	6	MFOZZ	1560-00-987-5235	97499	205-075-126-9	.SUPPORT U/O PN 205-075-108-1........ UHE,UHH,UHV,UHX	EA	1
273	7	MFOZZ	1560-00-299-0992	97499	205-075-126-13	.SUPPORT U/O PN 205-075-109-1 & 205-075-112-1 .... UHE,UHH,UHV,UHX	EA	1
273		XCFZZ		97499	205-075-112-1	EQUIPMENT INSTL ELECTRICAL COMPARTMENT SEE FIG.226 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
273	8	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP........ UHE,UHH,UHV,UHX	EA	4
273	9	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........ UHE,UHH,UHV,UHX	EA	2
273	10	PAOZZ	5305-00-995-3440	96906	MS35207-270	.SCREW,MACHINE........ UHE,UHH,UHV,UHX	EA	1
273	11	PAOZZ	5365-00-662-3100	80205	NAS43D03-64	.SPACER,SLEEVE........ UHE,UHH,UHV,UHX	EA	1
273	12	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
273	13	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE........ UHE,UHH,UHV,UHX	EA	1
273	15	PAOZZ	5340-00-151-6997	96906	MS21122-4	.CLAMP,LOOP........ UHE,UHH,UHV,UHX	EA	2
273	16	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP........ UHE,UHH,UHV,UHX	EA	1
273	17	PAOZZ	5306-00-182-1961	88044	AN4H13A	.BOLT,MACHINE........ UHE,UHH,UHV,UHX	EA	3
273	18	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT........ UHE,UHH,UHV,UHX	EA	6
273	19	PBOZZ	5975-00-553-7077	96906	MS25171-4S	.CABLE,NIPPLE........ UHE,UHH,UHV,UHX	EA	3
273	20	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE........ UHE,UHH,UHV,UHX	EA	2
273	21	PAOZZ	6625-00-166-1013	96906	MS91587-2	.SHUNT,INSTRUMENT........ UHE,UHH,UHV,UHX	EA	1
273	22	PAOZZ	5305-00-984-4977	96906	MS35206-220	.SCREW,MACHINE........ UHE,UHH,UHV,UHX	EA	2
273	23	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT........ UHE,UHH,UHV,UHX	EA	2
273	24	PAOZZ	5310-00-194-0534	88044	AN961-6	.WASHER,FLAT........ UHE,UHH,UHV,UHX	EA	2
273	25	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
273	26	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	6
273	27	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE........ UHE,UHH,UHV,UHX	EA	2
273	28	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD........ UHE,UHH,UHV,UHX	EA	1
273	29	PAOZZ	5961-00-177-2969	97499	30-037-1	.SEMICONDUCTOR, DEVICE........ UHE,UHH,UHV,UHX	EA	1
273	30	XAOZZ		81349	JAN1N3613	..SEMICONDUCTOR, DEVICE........ UHE,UHH,UHV,UHX	EA	1
273	31	XAOZZ		96906	MS25036-101	..TERMINAL,LUG........ UHE,UHH,UHV,UHX	EA	2
273	32	XAOZZ		97499	86T4-3-2	..INSULATING TUBE........ UHE,UHH,UHV,UHX	EA	1
273	33	PAOZZ	5975-00-250-6871	96906	MS25171-3S	.CABLE,NIPPLE........ UHE,UHH,UHV,UHX	EA	5
273	34	PAOZZ	5306-00-182-2080	88044	AN3H7A	.BOLT,MACHINE........ UHE,UHH,UHV,UHX	EA	12
273	35	PAOZZ	2925-00-555-5349	88044	AN3025-300	.CUTOUT RELAY,ENGINE GENERATOR........ UHE,UHH,UHV,UHX	EA	2
273	36	PAOZZ	5945-00-660-9316	96906	MS24171-D1	.RELAY,ELECTROMAGNET........ UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
273	37	PAOZZ	6150-00-987-5350	97499	205-075-127-1	.BUS,CONDUCTOR............UHE,UHH,UHV,UHX	EA	1
273	38	PBOZZ	5945-00-257-0316	96906	MS24172D1	.RELAY,ELECTROMAGNET............UHE,UHH,UHV,UHX	EA	1
273	39	PAOZZ	5306-00-281-9995	88044	AN6H12	.BOLT,MACHINE............UHE,UHH,UHV,UHX	EA	1
273	40	PAOZZ	5310-00-184-8971	96906	MS35338-103	.WASHER,LOCK............UHE,UHH,UHV,UHX	EA	1
273	41	PAOZZ	5310-00-229-4677	96906	MS25440-6	.WASHER,FLAT............UHE,UHH,UHV,UHX	EA	2
273	42	PAOZZ	5310-00-167-1300	88044	AN316-6R	.NUT,PLAIN,HEXAGON............UHE,UHH,UHV,UHX	EA	1
273	43	PAOZZ	5975-00-553-6995	96906	MS25171-1S	.CABLE,NIPPLE............UHE,UHH,UHV,UHX	EA	1
273	44	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	2
273	45	PBOZZ	5935-01-050-7485	96906	MS3506-1	.CONNECTOR,RECEPTACL EXT POWER............UHE,UHH,UHV,UHX	EA	1
273	46	PBOZZ	5930-00-835-0340	96906	MS25026-1	.SWITCH,SENSITIVE............UHE,UHH,UHV,UHX	EA	1
273	47	PBOZZ	5930-00-243-2381	88044	AN3167-1	.ADAPTER,SWITCH ACTU............UHE,UHH,UHV,UHX	EA	1
273	48	PAOZZ		14140	227-02851	.CONTROL,ALARM............UHE,UHH,UHV,UHX	EA	1
273	49	PAOZZ	6340-00-794-5887	19500	41531	.MOUNT............UHE,UHH,UHV,UHX	EA	1
273	50	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	4
273	51	PAOZZ	5905-00-779-3979	14140	41250-1000	.RESISTOR,FIXED,FILM............UHE,UHH,UHV,UHX	EA	1
273	52	PAOZZ	5305-00-889-3001	96906	MS35206-231	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	4
273	53	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT............UHE,UHH,UHV,UHX	EA	8
273	54	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	8
273	54	PAOZZ		14140	227-02851	.CONTROL,ALARM............UHE,UHH,UHV,UHX	EA	1
273	55	PAOZZ	6340-00-794-5887	19500	41531	.MOUNT............UHE,UHH,UHV,UHX	EA	1

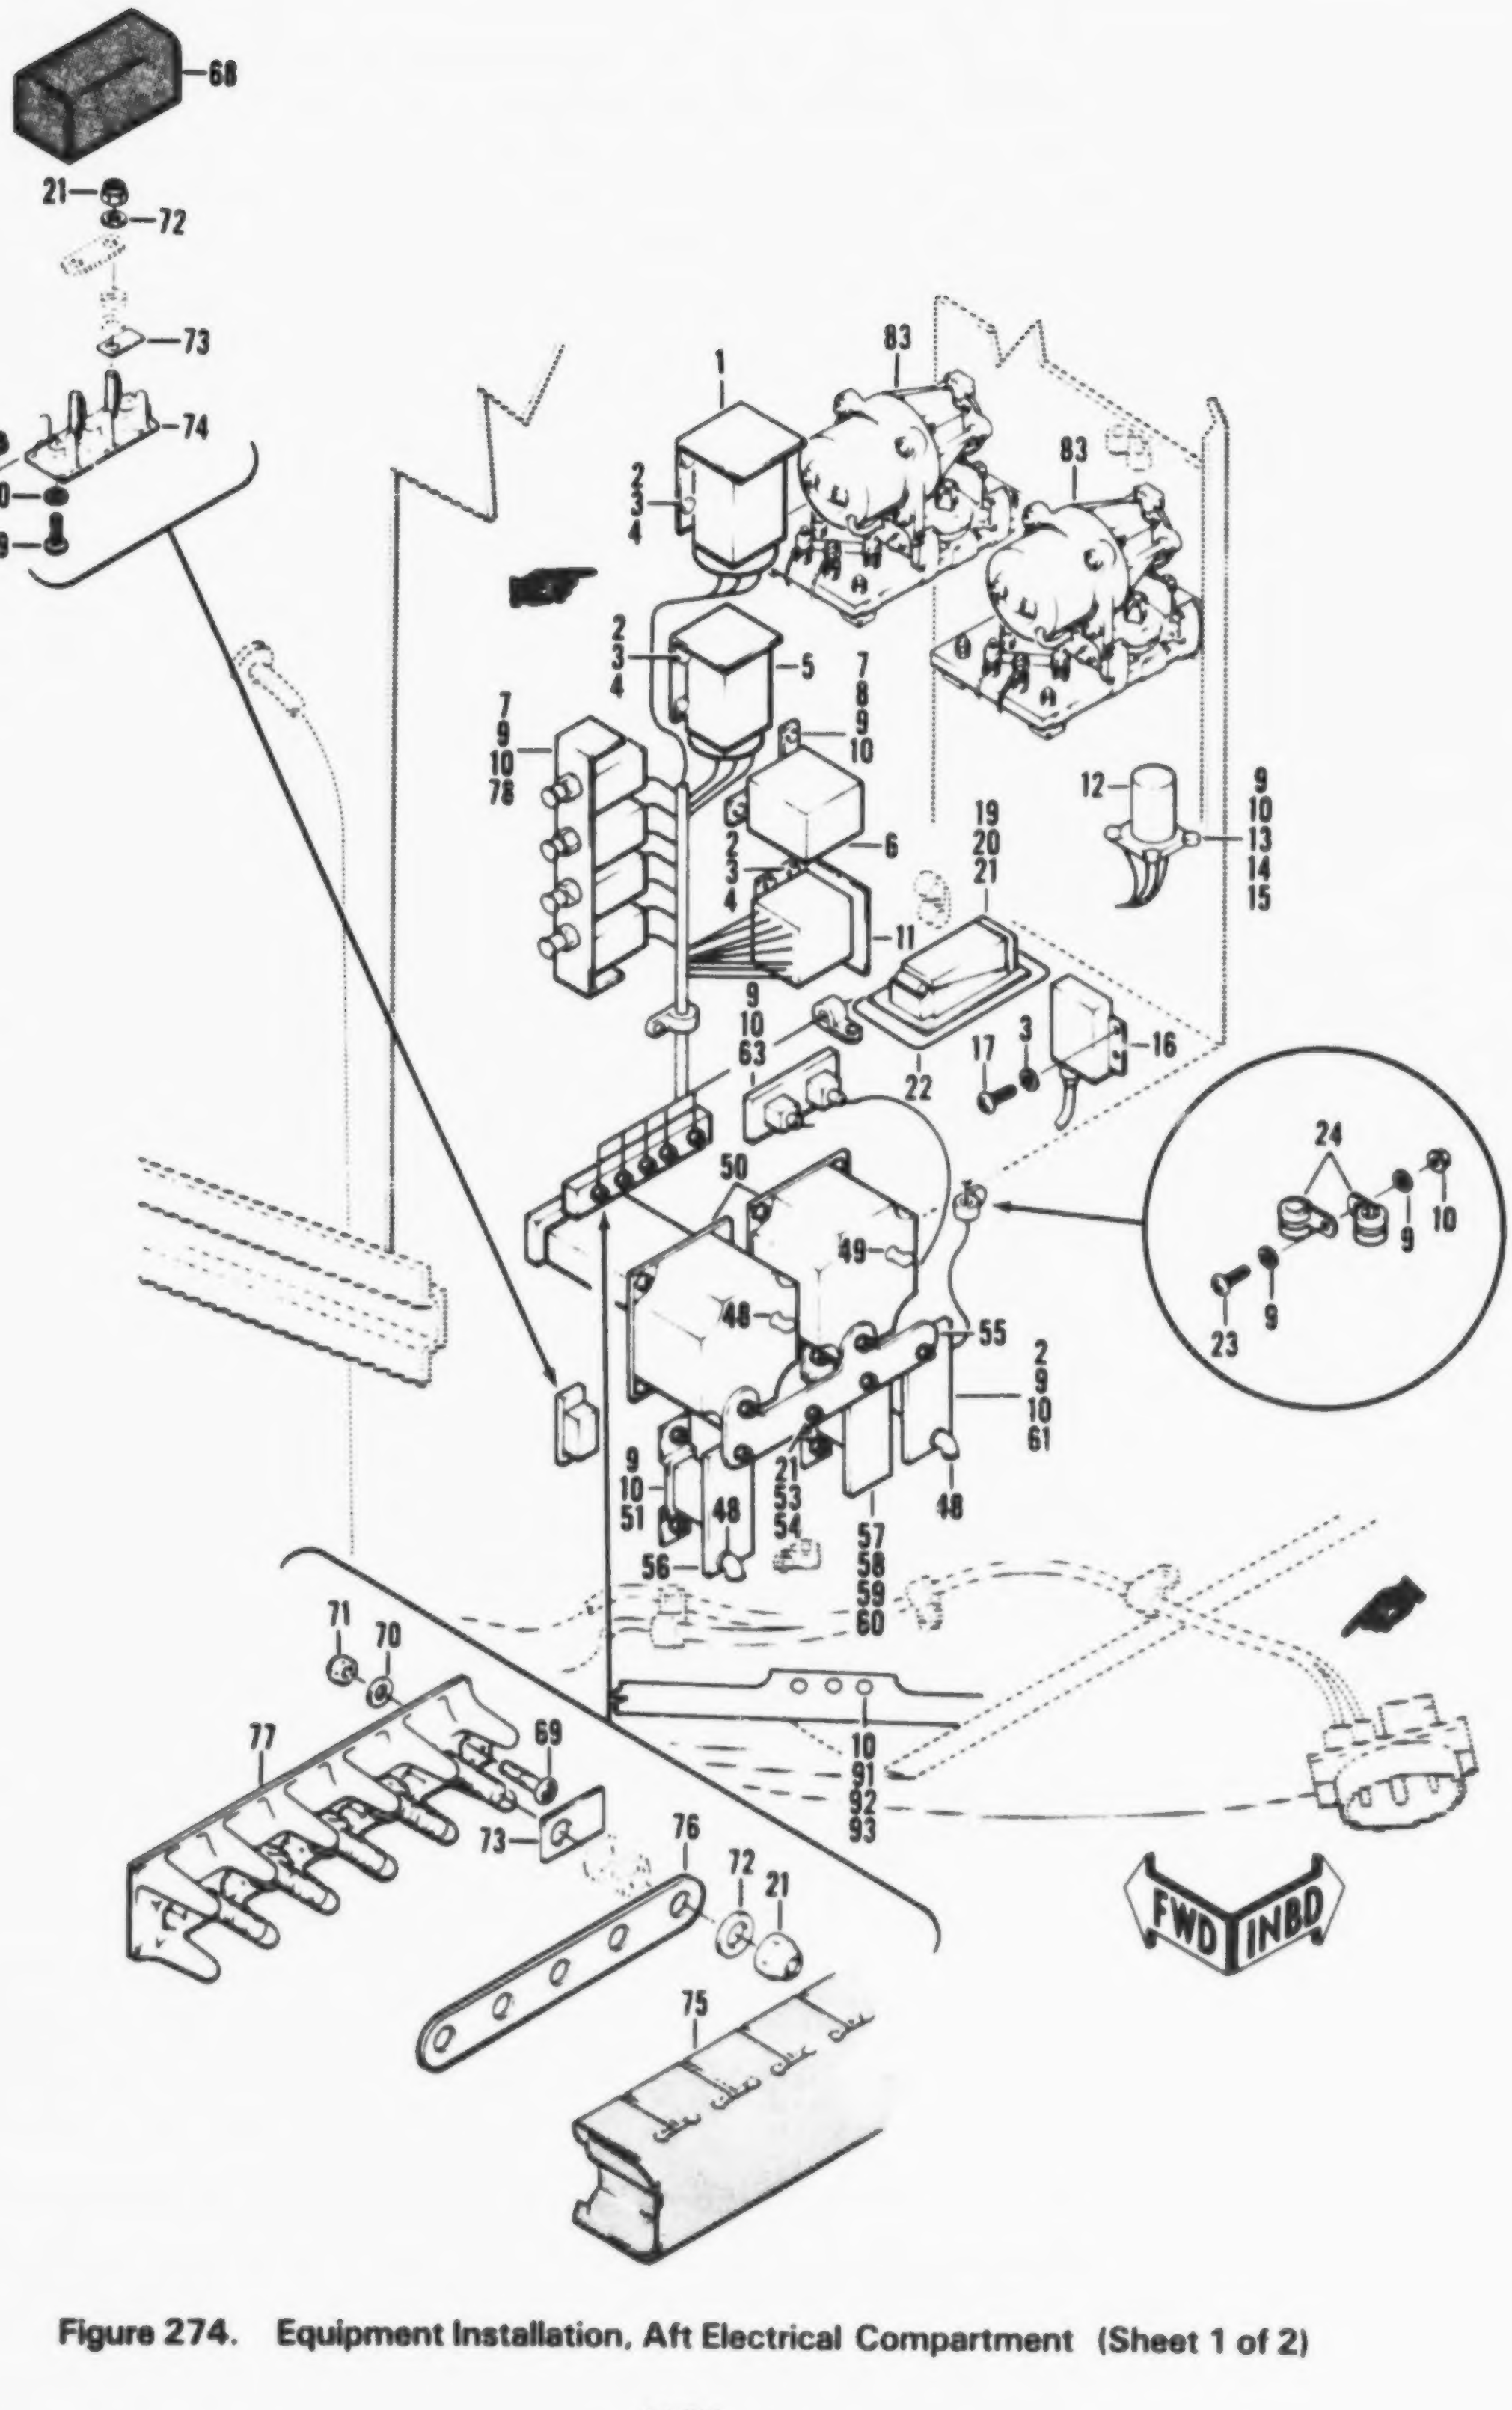
68
21
72
73
74
71
70
69
1
83
83
2
3
4
2
3
4
5
7
8
9
10
7
9
10
78
12
9
10
13
14
15
19
20
21
6
2
3
4
11
9
10
63
22
17
3
16
24
9
10
23
9
50
49
48
55
2
9
10
61
9
10
51
48
21
53
54
57
58
59
60
48
56
71
70
77
69
73
76
72
21
10
91
92
93
75
FWD
INBD

Figure 274. Equipment Installation, Aft Electrical Compartment (Sheet 1 of 2)

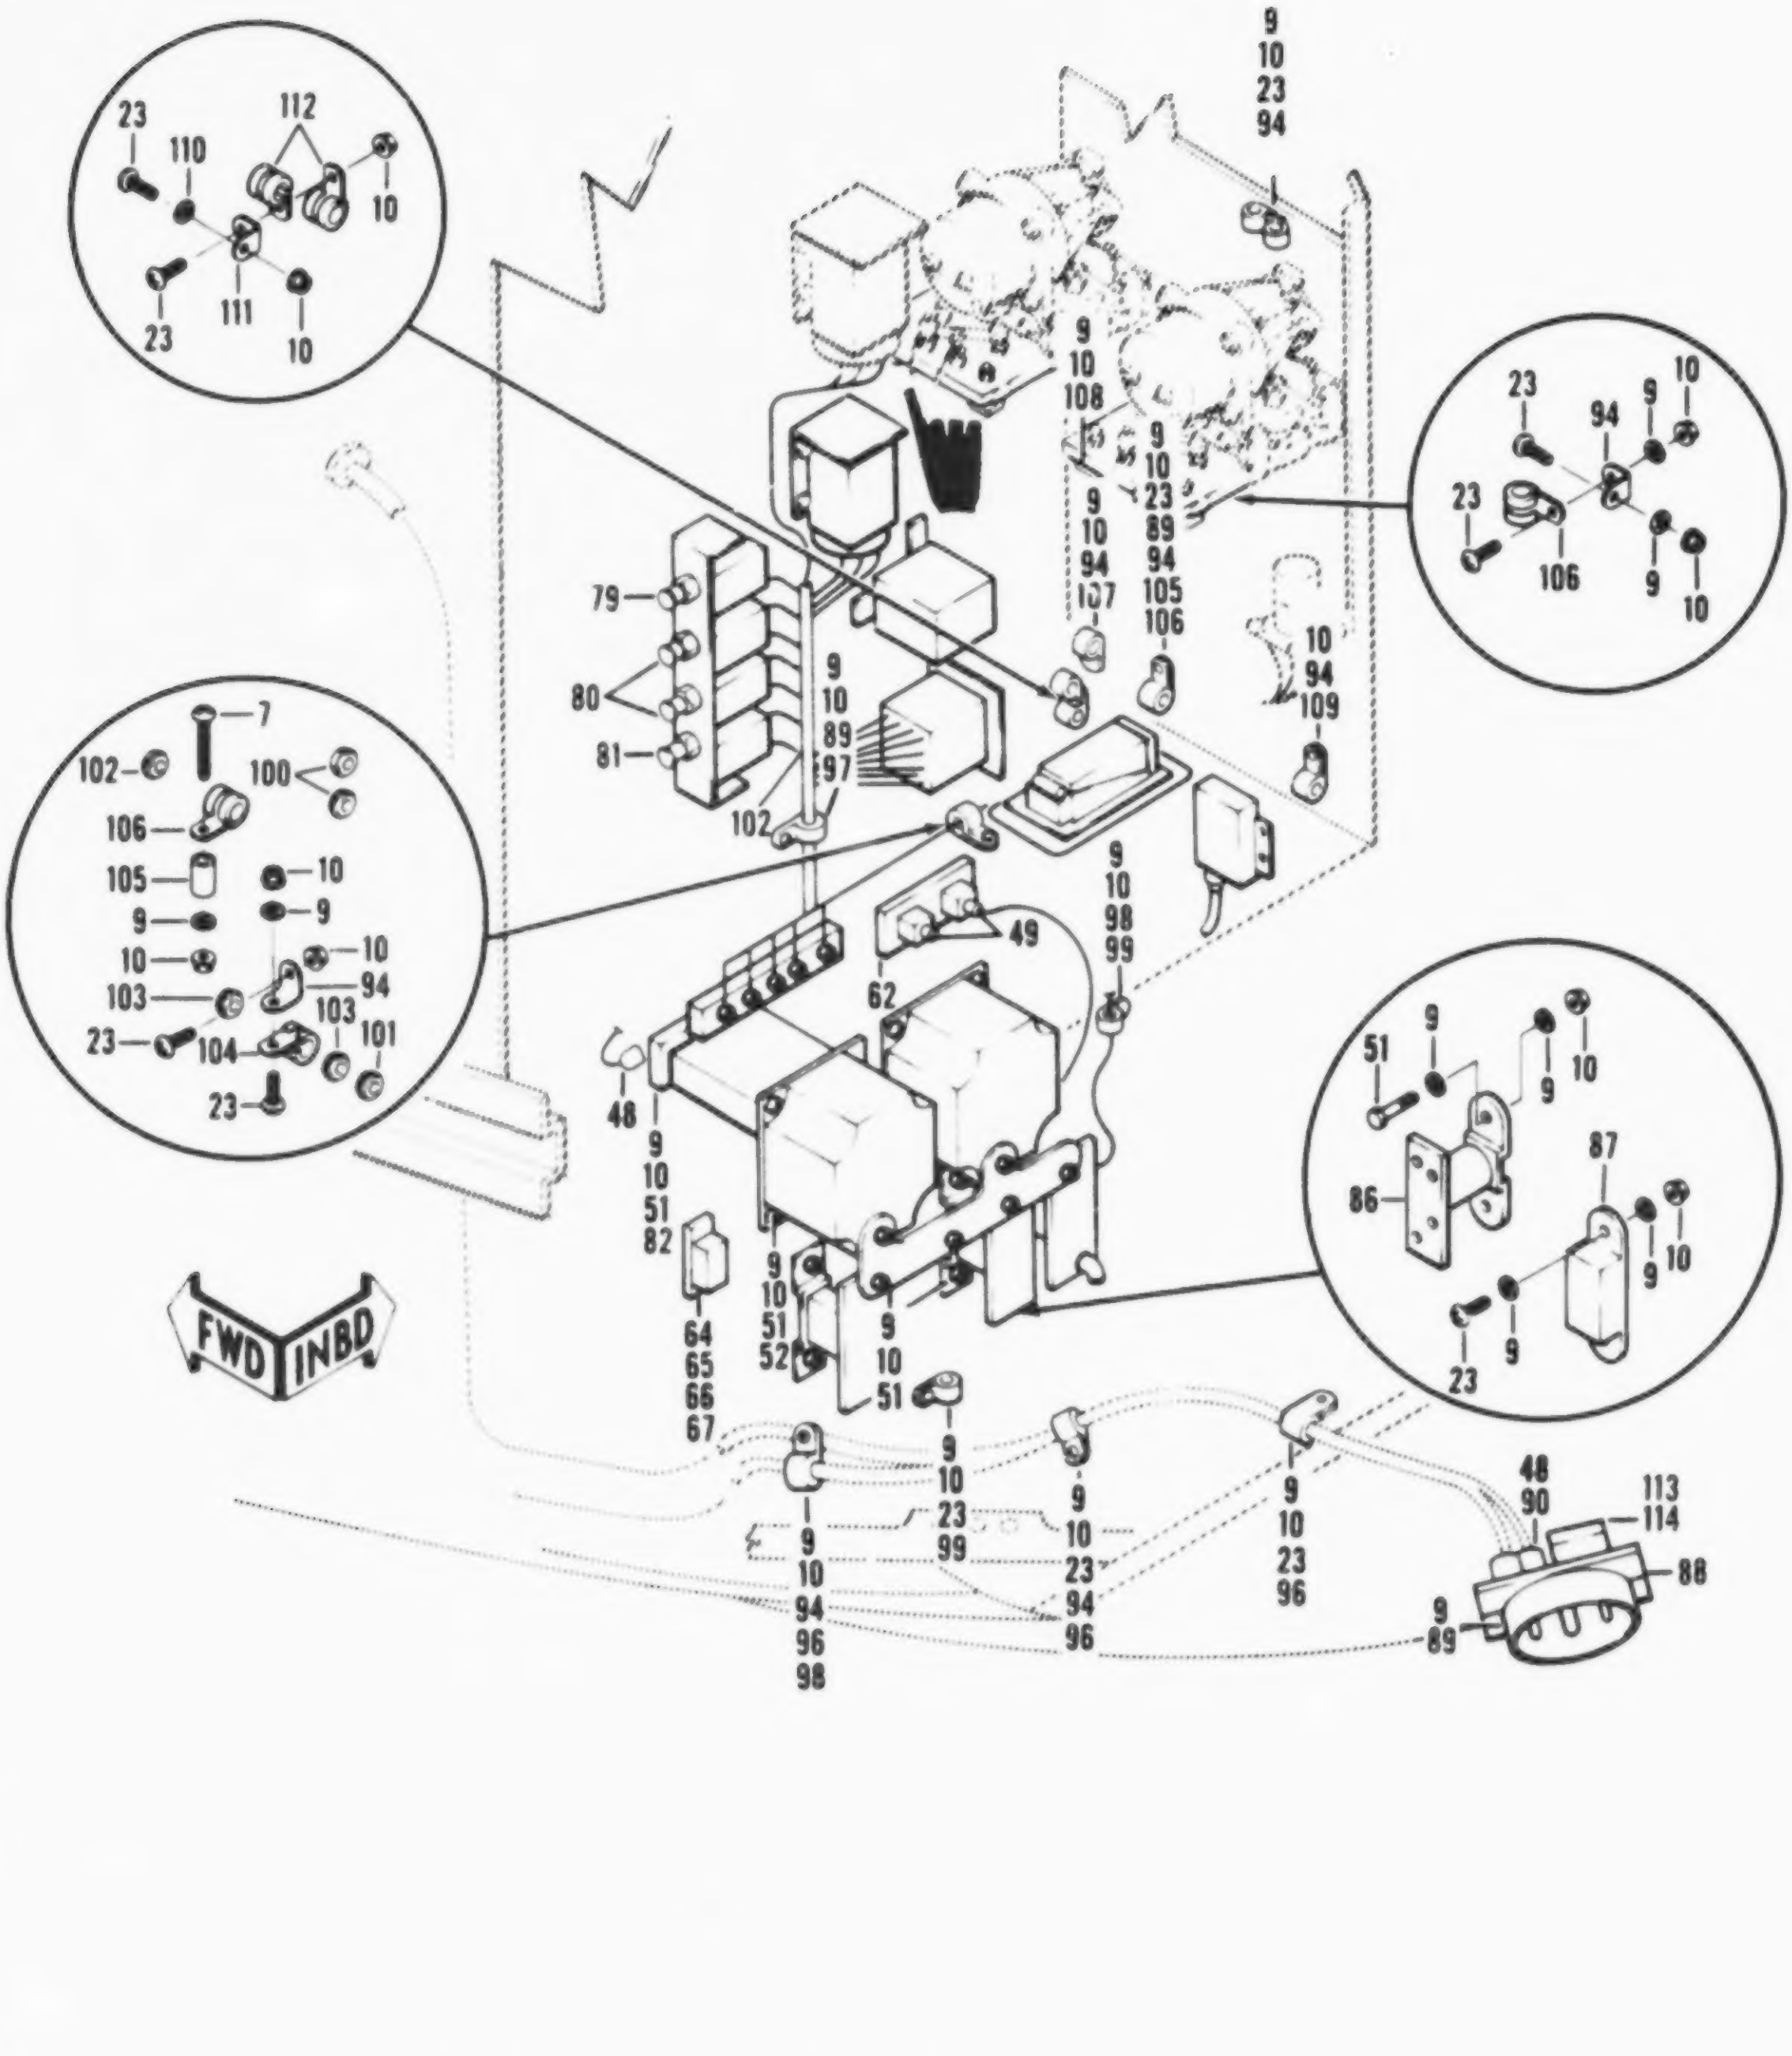
9
10
23
94
23
112
110
10
10
23
111
10
9
10
108
9
10
23
89
94
105
106
9
10
94
107
23
94
9
10
10
23
106
9
10
79
80
81
9
10
89
97
102
10
94
109
7
102
100
106
105
10
9
9
10
10
94
103
103
101
23
104
23
9
10
98
99
62
49
48
9
10
51
82
51
9
9
10
86
87
9
10
9
23
9
FWD
INBD
64
65
66
67
9
10
51
52
9
10
51
9
10
23
99
9
10
94
96
98
9
10
23
94
96
9
10
23
96
48
90
113
114
88
9
89

Figure 274. Equipment Installation, Aft Electrical Compartment (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
274		XCFZZ		97499	205-075-112-1	EQUIPMENT INSTL,AFT ELECTRICAL COMPARTMENT USBL EFF 65-9565 THRU 65-12895 SEE FIG.226 FOR NHA............UHE,UHH,UHV,UHX	EA	1
274		XCFZZ		97499	205-075-112-3	EQUIPMENT INSTL,AFT ELECTRICAL COMPARTMENT USBL EFF 66-146 THRU 66-16867 SEE FIG.226 FOR NHA............UHE,UHH,UHV,UHX	EA	1
274		XCFZZ		97499	205-075-112-7	EQUIPMENT INSTL,AFT ELECTRICAL COMPARTMENT USBL EFF 66-16868 THRU 66-17143 SEE FIG.226 FOR NHA......UHE,UHH,UHV,UHX	EA	1
274		XCFZZ		97499	205-075-112-9	EQUIPMENT INSTL,AFT ELECTRICAL COMPARTMENT USBL EFF 67-17145 THRU 67-17312 SEE FIG.226 FOR NHA......UHE,UHH,UHV,UHX	EA	1
274		XCFZZ		97499	205-075-112-11	EQUIPMENT INSTL,AFT ELECTRICAL COMPARTMENT USBL EFF 67-17313 & SUBSEQUENT SEE FIG.226 FOR NHA......UHE,UHH,UHV,UHX	EA	1
274	1	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET GENERATOR U/O PN 205-075-112-3 ....UHE,UHH,UHV,UHX	EA	1
274	2	PAOZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	16
274	3	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	20
274	4	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	13
274	5	PAOZZ	5945-00-225-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET TRANSFER..........UHE,UHH,UHV,UHX	EA	1
274	6	PAOZZ	5945-00-542-9596	81349	M26126/2-1	.RELAY,ARMATURE..........UHE,UHH,UHV,UHX	EA	1
274	7	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	6
274	8	PAOZZ	5365-00-684-5976	80205	NAS43DD1-7	.SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
274	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	64
274	10	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	48
274	11	PAOZZ	5945-00-681-9716	96906	MS24568D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
274	12	PAOZZ	5945-00-903-2411	96906	MS25457D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
274	13	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
274	14	PAOZZ	5310-00-543-2410	96906	MS35338-40	.WASHER,LOCK..........UHE,UHH,UHV,UHX	EA	2
274	15	PAOZZ	5305-00-910-5363	96906	MS25332-1	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
274	16	PAOZZ	5945-00-752-5599	96906	MS24577-2A	.FLASHER,AIRCRAFT..........UHE,UHH,UHV,UHX	EA	1
274	17	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
274	19	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	8
274	20	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	8
274	21	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	12
274	22	PAOZZ	6340-00-794-5887	19500	41531	.MOUNT..........UHE,UHH,UHV,UHX	EA	1
274	23	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	19
274	24	PAOZZ	5340-00-993-1471	81996	EAB700019	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	2
274	48	PAOZZ	5975-00-250-6871	96906	MS25171-3S	.CABLE NIPPLE..........UHE,UHH,UHV,UHX	EA	7
274	49	PBOZZ	5975-00-553-7077	96906	MS25171-4S	.CABLE,NIPPLE..........UHE,UHH,UHV,UHX	EA	1
274	50	PAOZZ	2925-00-555-5349	88044	AN3025-300	.CUTOUT RELAY,ENGINE..........UHE,UHH,UHV,UHX	EA	2
274	51	PAOZZ	5306-00-151-0785	88044	AN3-7A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	14
274	52	PAOZZ	5310-00-187-2413	88044	AN961-616	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	V
274	53	PAOZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
274	54	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
274	55	PAOZZ	6150-00-987-5350	97499	205-075-127-1	.BUS,CONDUCTOR..........UHE,UHH,UHV,UHX	EA	1
274	56	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
274	57	AOOOZ	5945-00-249-3344	97499	205-075-137-5	.RELAY ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
274	58	PAOZZ	5306-00-819-5120	80205	NAS467-6-32	..BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
274	59	PAOZZ	5310-00-229-4677	96906	MS25440-6	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
274	60	PAOZZ	5945-00-660-9315	96906	MS24171-D1	..RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	2
274	61	PBOZZ	5945-00-257-0316	96906	MS24172D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
274	62	PAOZZ	6625-00-166-1013	96906	MS91587-2	.SHUNT,INSTRUMENT..........UHE,UHH,UHV,UHX	EA	1
274	63	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
274	64	PAOZZ	5961-00-177-2969	97499	30-037-1	.SEMICONDUCTOR, DEVICE..........UHE,UHH,UHV,UHX	EA	1
274	65	XAOZZ		81349	JAN1N3613	.SEMICONDUCTOR, DEVICE..........UHE,UHH,UHV,UHX	EA	1
274	66	XAOZZ		96906	MS25036-101	..TERMINAL,LUG..........UHE,UHH,UHV,UHX	EA	2
274	67	XAOZZ		97499	85T4-3-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	EA	1
274	68	MOOZZ	5940-00-411-7734	96906	MS18029-152	.COVER,TERMINAL BOARD..........UHE,UHH,UHV,UHX	EA	1
274	69	PAOZZ	5305-00-984-4977	96906	MS35206-220	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
274	70	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
274	71	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	4
274	72	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
274	73	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE..........UHE,UHH,UHV,UHX	EA	4
274	74	MOOZZ	5940-00-132-2767	96906	MS27212-1-2	.TERMINAL BOARD..........UHE,UHH,UHV,UHX	EA	1
274	75	MOOZZ	5940-00-411-7736	96906	MS18029-1120	.COVER,TERMINAL BOAR..........UHE,UHH,UHV,UHX	EA	1
274	76	XDOZZ		96906	MS25226-2-5	.LINK,TERMINAL CO..........UHE,UHH,UHV,UHX	EA	1
274	77	MOOZZ	5940-00-269-5359	96906	MS27212-1-5	.TERMINAL BOARD..........UHE,UHH,UHV,UHX	EA	1
274	78	MFOZZ	1560-00-299-0992	97499	205-075-126-13	.SUPPORT,CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	1
274	79	PAOZZ	5925-00-912-8343	96906	MS22073-1	.CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	1
274	80	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	2
274	81	PAOZZ	5925-00-682-4015	96906	MS25244-20	.CIRCUIT BREAKER..........UHE,UHH,UHV,UHX	EA	1
274	82	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET U/O PN 205-075-112-3,-7 & -9 ....UHE,UHH,UHV,UHX	EA	1
274	83	PAOOO	6110-00-598-2567	96906	MS18071-12	.REGULATOR,VOLTAGE..........UHE,UHH,UHV,UHX	EA	2
274	83	PAOOO	6110-01-066-3716	07639	CSV1152-12AB	.REGULATOR,VOLTAGE..........UHE,UHH,UHV,UHX	EA	2
274	86	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET..........UHE,UHH,UHV,UHX	EA	1
274	87	PAOZZ	5925-00-954-3720	82647	D7235-1-125	.CONTACT SET,CIRCUIT U/O PN 205-075-112-3,7,& -9 ....UHE,UHH,UHV,UHX	EA	1
274	88	PBOZZ	5935-01-050-7485	96906	MS3506-1	.CONNECTOR,RECEPTACL EXT PWR..........UHE,UHH,UHV,UHX	EA	1
274	89	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
274	90	PAOZZ	5975-00-653-6995	96906	MS25171-1S	.CABLE NIPPLE..........UHE,UHH,UHV,UHX	EA	1
274	91	PAOZZ	5306-00-151-1426	88044	AN4-6A	.BOLT,MACHINE U/O PN 205-075-112-3,-7 & -9 ....UHE,UHH,UHV,UHX	EA	2
274	92	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
274	93	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT U/O PN 205-075-112-3,-7 & -9....UHE,UHH,UHV,UHX	EA	3
274	94	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	9
274	95	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
274	96	PAOZZ	5340-00-151-6001	96906	MS21122-13	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	3
274	97	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP,LOOP.....UHE,UHH,UHV,UHX	EA	1
274	98	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
274	99	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP.........................UHE,UHH,UHV,UHX	EA	2
274	100	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC....................UHE,UHH,UHV,UHX	EA	2
274	101	PAOZZ	5325-00-276-6089	96906	MS35489-16	.GROMMET,NONMETALLIC....................UHE,UHH,UHV,UHX	EA	1
274	102	PAOZZ	5325-00-276-6100	96906	MS35489-14	.GROMMET,NONMETALLIC....................UHE,UHH,UHV,UHX	EA	1
274	103	PAOZZ	5325-00-290-1960	96906	MS35489-27	.GROMMET,NONMETALLIC....................UHE,UHH,UHV,UHX	EA	1
274	104	PAOZZ	5340-00-664-8177	96906	MS21919WDG23	.CLAMP,LOOP.........................UHE,UHH,UHV,UHX	EA	1
274	105	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE.......................UHE,UHH,UHV,UHX	EA	2
274	106	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP.........................UHE,UHH,UHV,UHX	EA	3
274	107	PAOZZ	5340-00-989-4569	81996	EAB700U9	.CLAMP,LOOP.........................UHE,UHH,UHV,UHX	EA	1
274	108	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE.......................UHE,UHH,UHV,UHX	EA	4
274	109	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE U/O PN 205-075-112-7,& -9.....UHE,UHH,UHV,UHX	EA	2
274	110	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-112-7, & -9......UHE,UHH,UHV,UHX	EA	1
274	111	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE U/O PN 205-075-112-3,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
274	112	PAOZZ	5340-00-989-4574	81996	EAB700D17	.CLAMP,LOOP U/O PN 205-075-112-3,-7 & -9.....UHE,UHH,UHV,UHX	EA	1
274	113	PBOZZ	5930-00-835-0340	96906	MS25025-1	.SWITCH,SENSITIVE.....................UHE,UHH,UHV,UHX	EA	1
274	114	PBOZZ	5930-00-243-2381	88044	AN3167-1	.ADAPTER,SWITCH......................UHE,UHH,UHV,UHX	EA	1

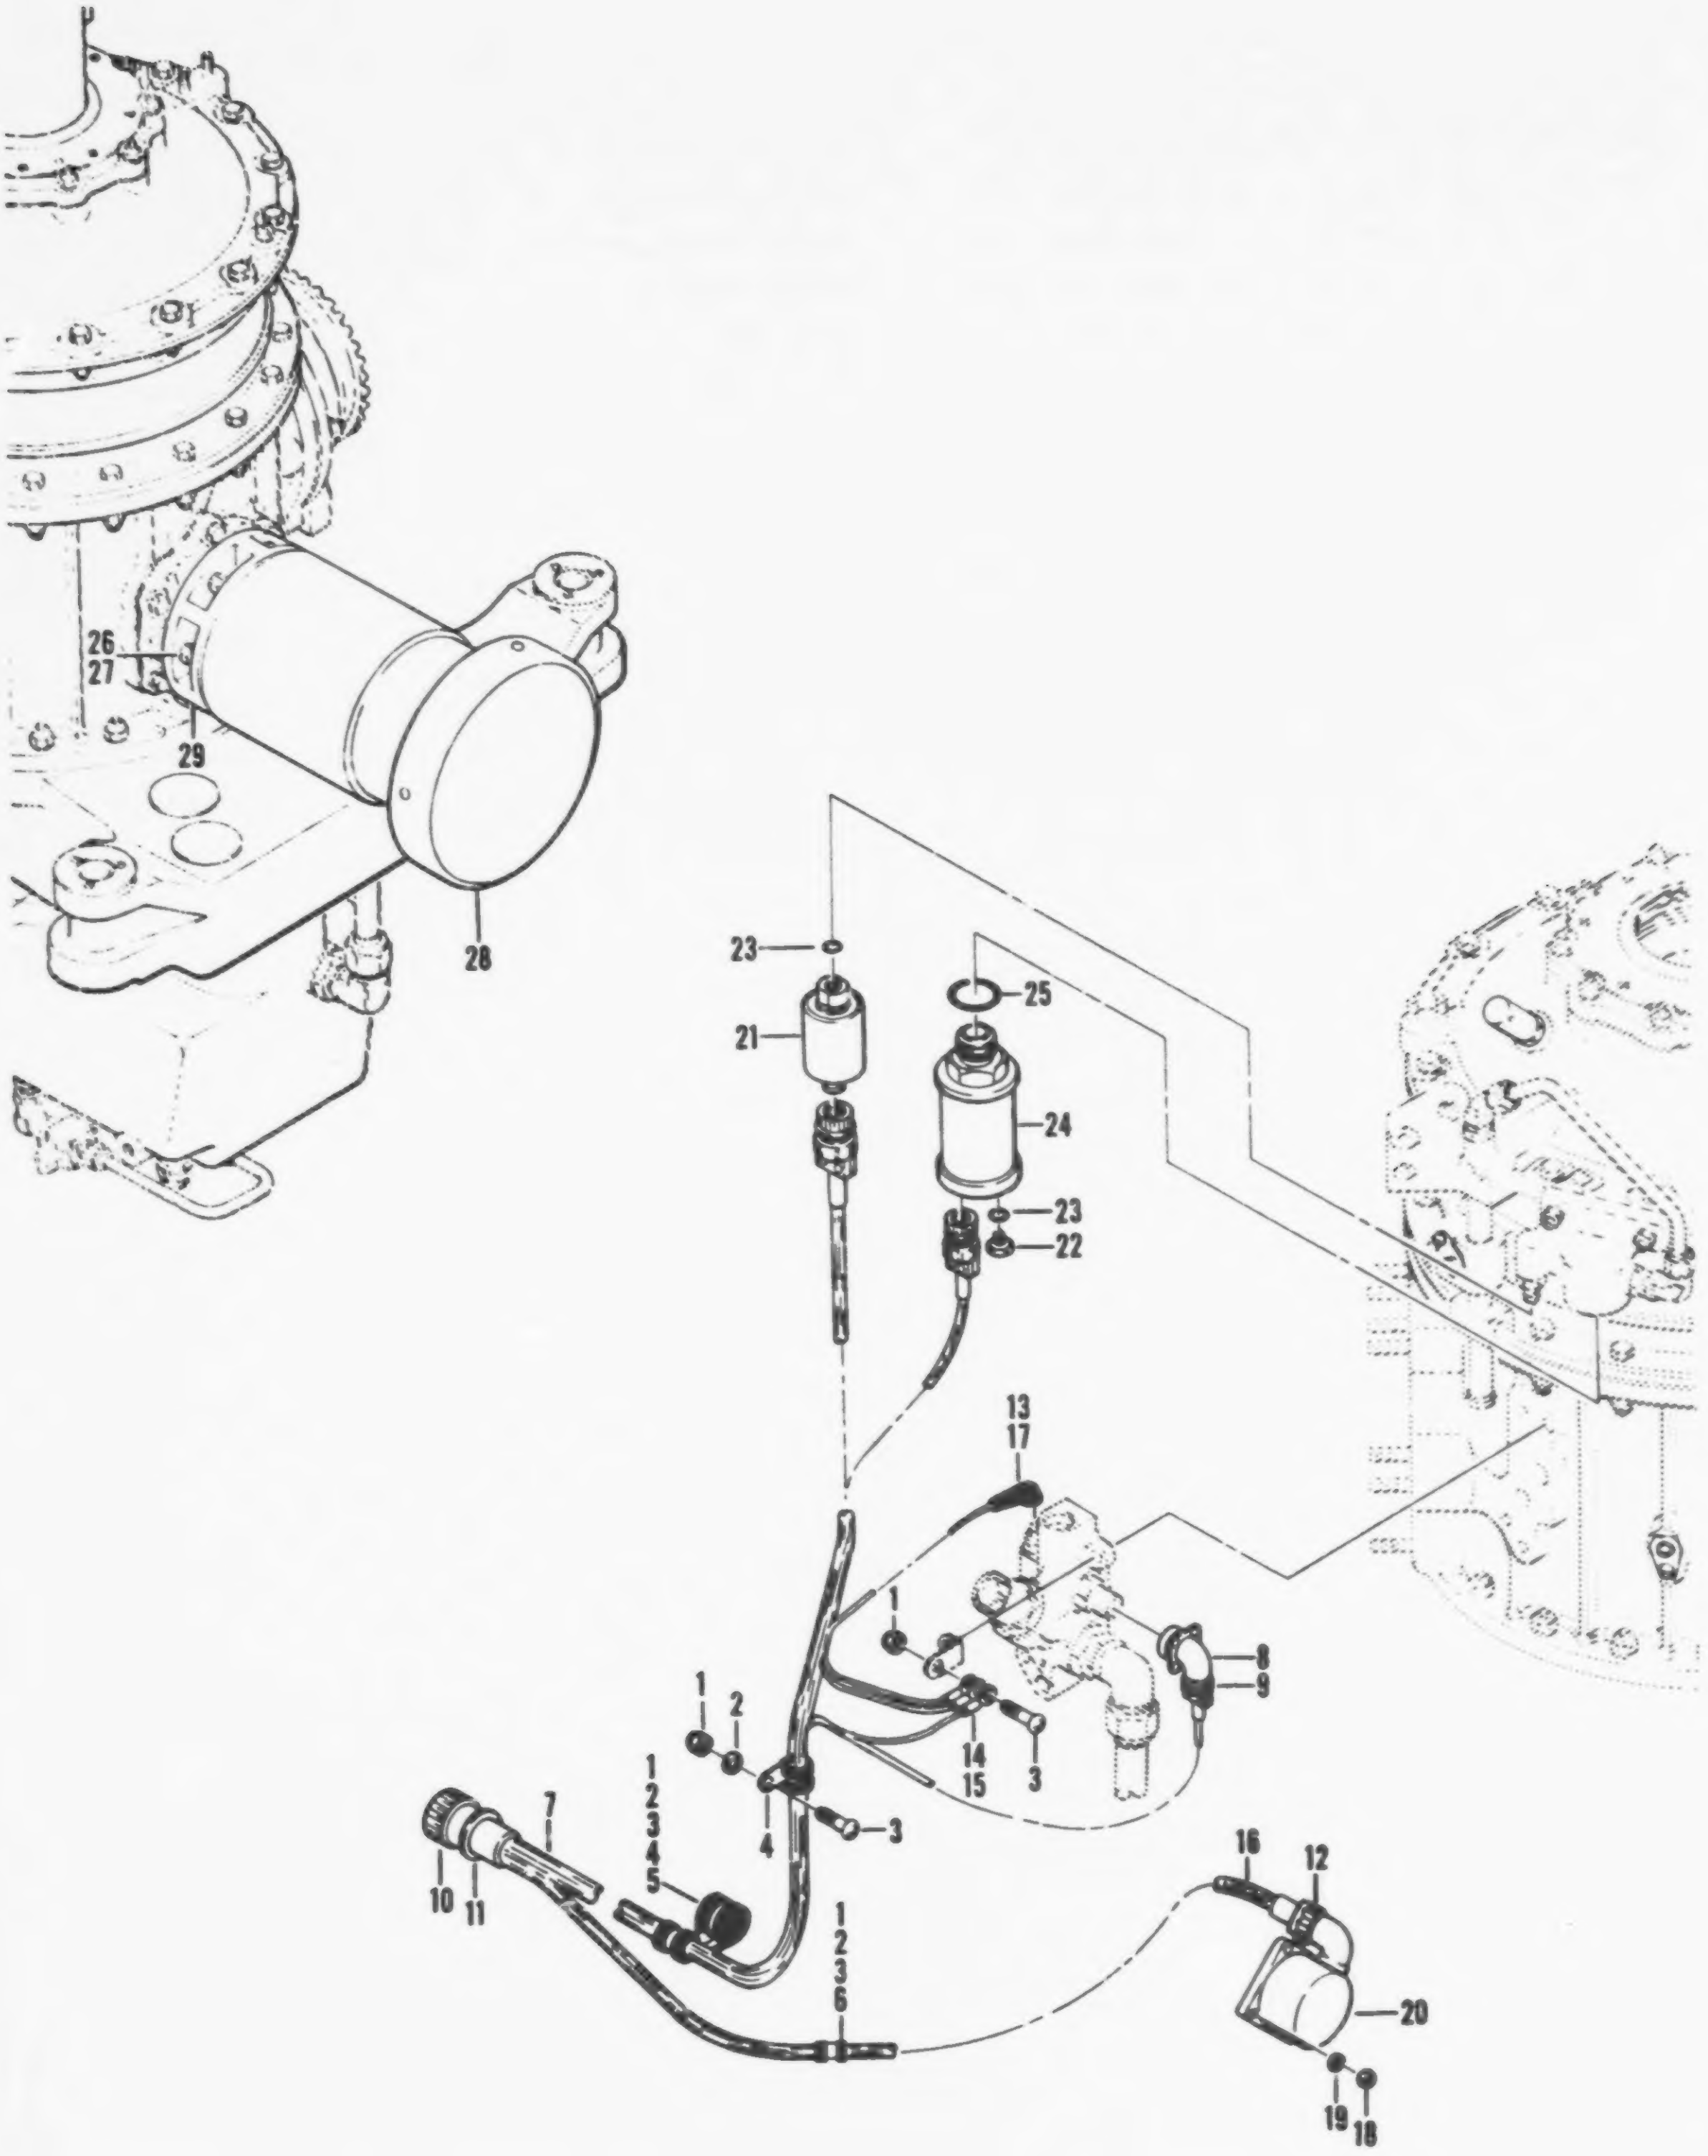
26
27
29
28
23
25
21
24
23
22
13
17
1
8
9
1
2
14
15
3
1
2
3
4
5
7
4
3
10
11
16
12
1
2
3
6
20
19
18

Figure 275. Electrical Installation, Pylon

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
275		XCFZZ		97499	204-075-019-1	ELECTRICAL INSTL PYLON USBL EFF 60-3546 & SUBSEQUENT SEE FIG.128 FOR NHA....UHB	EA	1
275		XCFZZ		97499	204-075-019-9	ELECTRICAL INSTL PYLON USBL EFF 64-14101 THRU 64-14191 SEE FIG.130 FOR NHA....UHC,UHM	EA	1
275		XCFZZ		97499	204-075-019-7	ELECTRICAL INSTL PYLON USBL EFF 65-9416 & SUBSEQUENT SEE FIG.130 FOR NHA....UHC,UHM	EA	1
275	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON....UHB,UHC,UHM	EA	4
275	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHB,UHC,UHM	EA	3
275	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE....UHB,UHC,UHM	EA	4
275	4	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP....UHB,UHC,UHM	EA	2
275	5	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
275	6	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
275	7	AOOOZ	1560-00-083-0420	97499	204-075-421-3	.CABLE ASSY,ELEC U/O PN 204-075-019-1....UHB	EA	1
275	7	AOOOZ	6680-00-918-5490	97499	204-075-421-13	.CABLE ASSY,ELEC U/O PN 204-075-019-9....UHC,UHM	EA	1
275	7	AOOOZ	6150-00-943-0829	97499	204-175-429-1	.CABLE ASSY,ELEC U/O PN 204-075-019-7....UHC,UHM	EA	1
275	8	PBOZZ	5935-00-805-4989	96906	MS3108R12S3S	..CONNECTOR,PLUG,ELEC ROTOR TACH GEN. U/O PN 204-075-421-3....UHB,UHM	EA	1
275	9	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC U/O PN 204-075-421-3....UHB,UHM	EA	4
275	10	PAOZZ	5935-00-988-4350	96906	MS3126E14-19P	..CONNECTOR,PLUG,ELEC AMPLIFIER ATT IND....UHB,UHC,UHM	EA	1
275	11	PAOZZ	5340-00-984-2123	77820	10-101033-11	..PLUG,PROTECTIVE,DUS MOISTURE SEAL U/O PN 204-075-421-3....UHB,UHM	EA	1
275	12	PAOZZ	5935-00-725-4538	96906	MS3106R12S-3S	..CONNECTOR,PLUG,ELEC XMSN OIL PRESS SW. U/O PN 204-075-421-13....UHC,UHM	EA	1
275	13	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O UH-1C PN 204-175-429-1....UHB,UHC,UHM	EA	1
275	14	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG....UHC,UHM	EA	1
275	15	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHB	EA	1
275	15	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG....UHC,UHM	EA	3
275	16	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-421-3 & -13....UHB	FT	V
275	17	PAOZZ	5975-00-553-6995	96906	MS25171-1S	.CABLE NIPPLE....UHB,UHC,UHM	EA	1
275	18	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON....UHB,UHC,UHM	EA	4
275	19	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT....UHB,UHC,UHM	EA	4
275	20	PAOZZ	6620-00-585-1503	81349	MILG26611	.GENERATOR,TACHOMETE....UHB,UHC,UHM	EA	1
275	21	PAOZZ	5930-00-179-4546	97499	204-040-376-3	.SWITCH,PRESSURE....UHB,UHC,UHM	EA	1
275	22	PAOZZ	1560-00-716-8554	97499	100-016-1	.PLUG,VENTILLATION....UHB,UHC,UHM	EA	1
275	23	PAOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED....UHB,UHC,UHM	EA	2
275	24	PAOZZ	6620-00-067-4946	81349	MIL-T-58097	.TRANSMITTER,PRESSUR....UHB,UHC,UHM	EA	1
275	25	PAOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED....UHB,UHC,UHM	EA	1
275	26	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON....UHB,UHC,UHM	EA	6
275	27	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT....UHB,UHC,UHM	EA	6
275	28	PAOFF	6115-00-901-1818	07878	GEU5A	.GENERATOR,DIRECT CURRENT....UHB,UHC,UHM	EA	1
275	28	PAOFF	6115-00-725-1790	31435	30010-000	.GENERATOR,DIRECT SEE FIG.277 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
275	28	PAOFF	6115-00-942-2094	83298	30837-37	.GENERATOR,DIRECT CURRENT SEE FIG.277 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
275	29	PCOZZ	5330-00-023-7626	96906	MS9136-01	.GASKET....UHB,UHC,UHM	EA	1

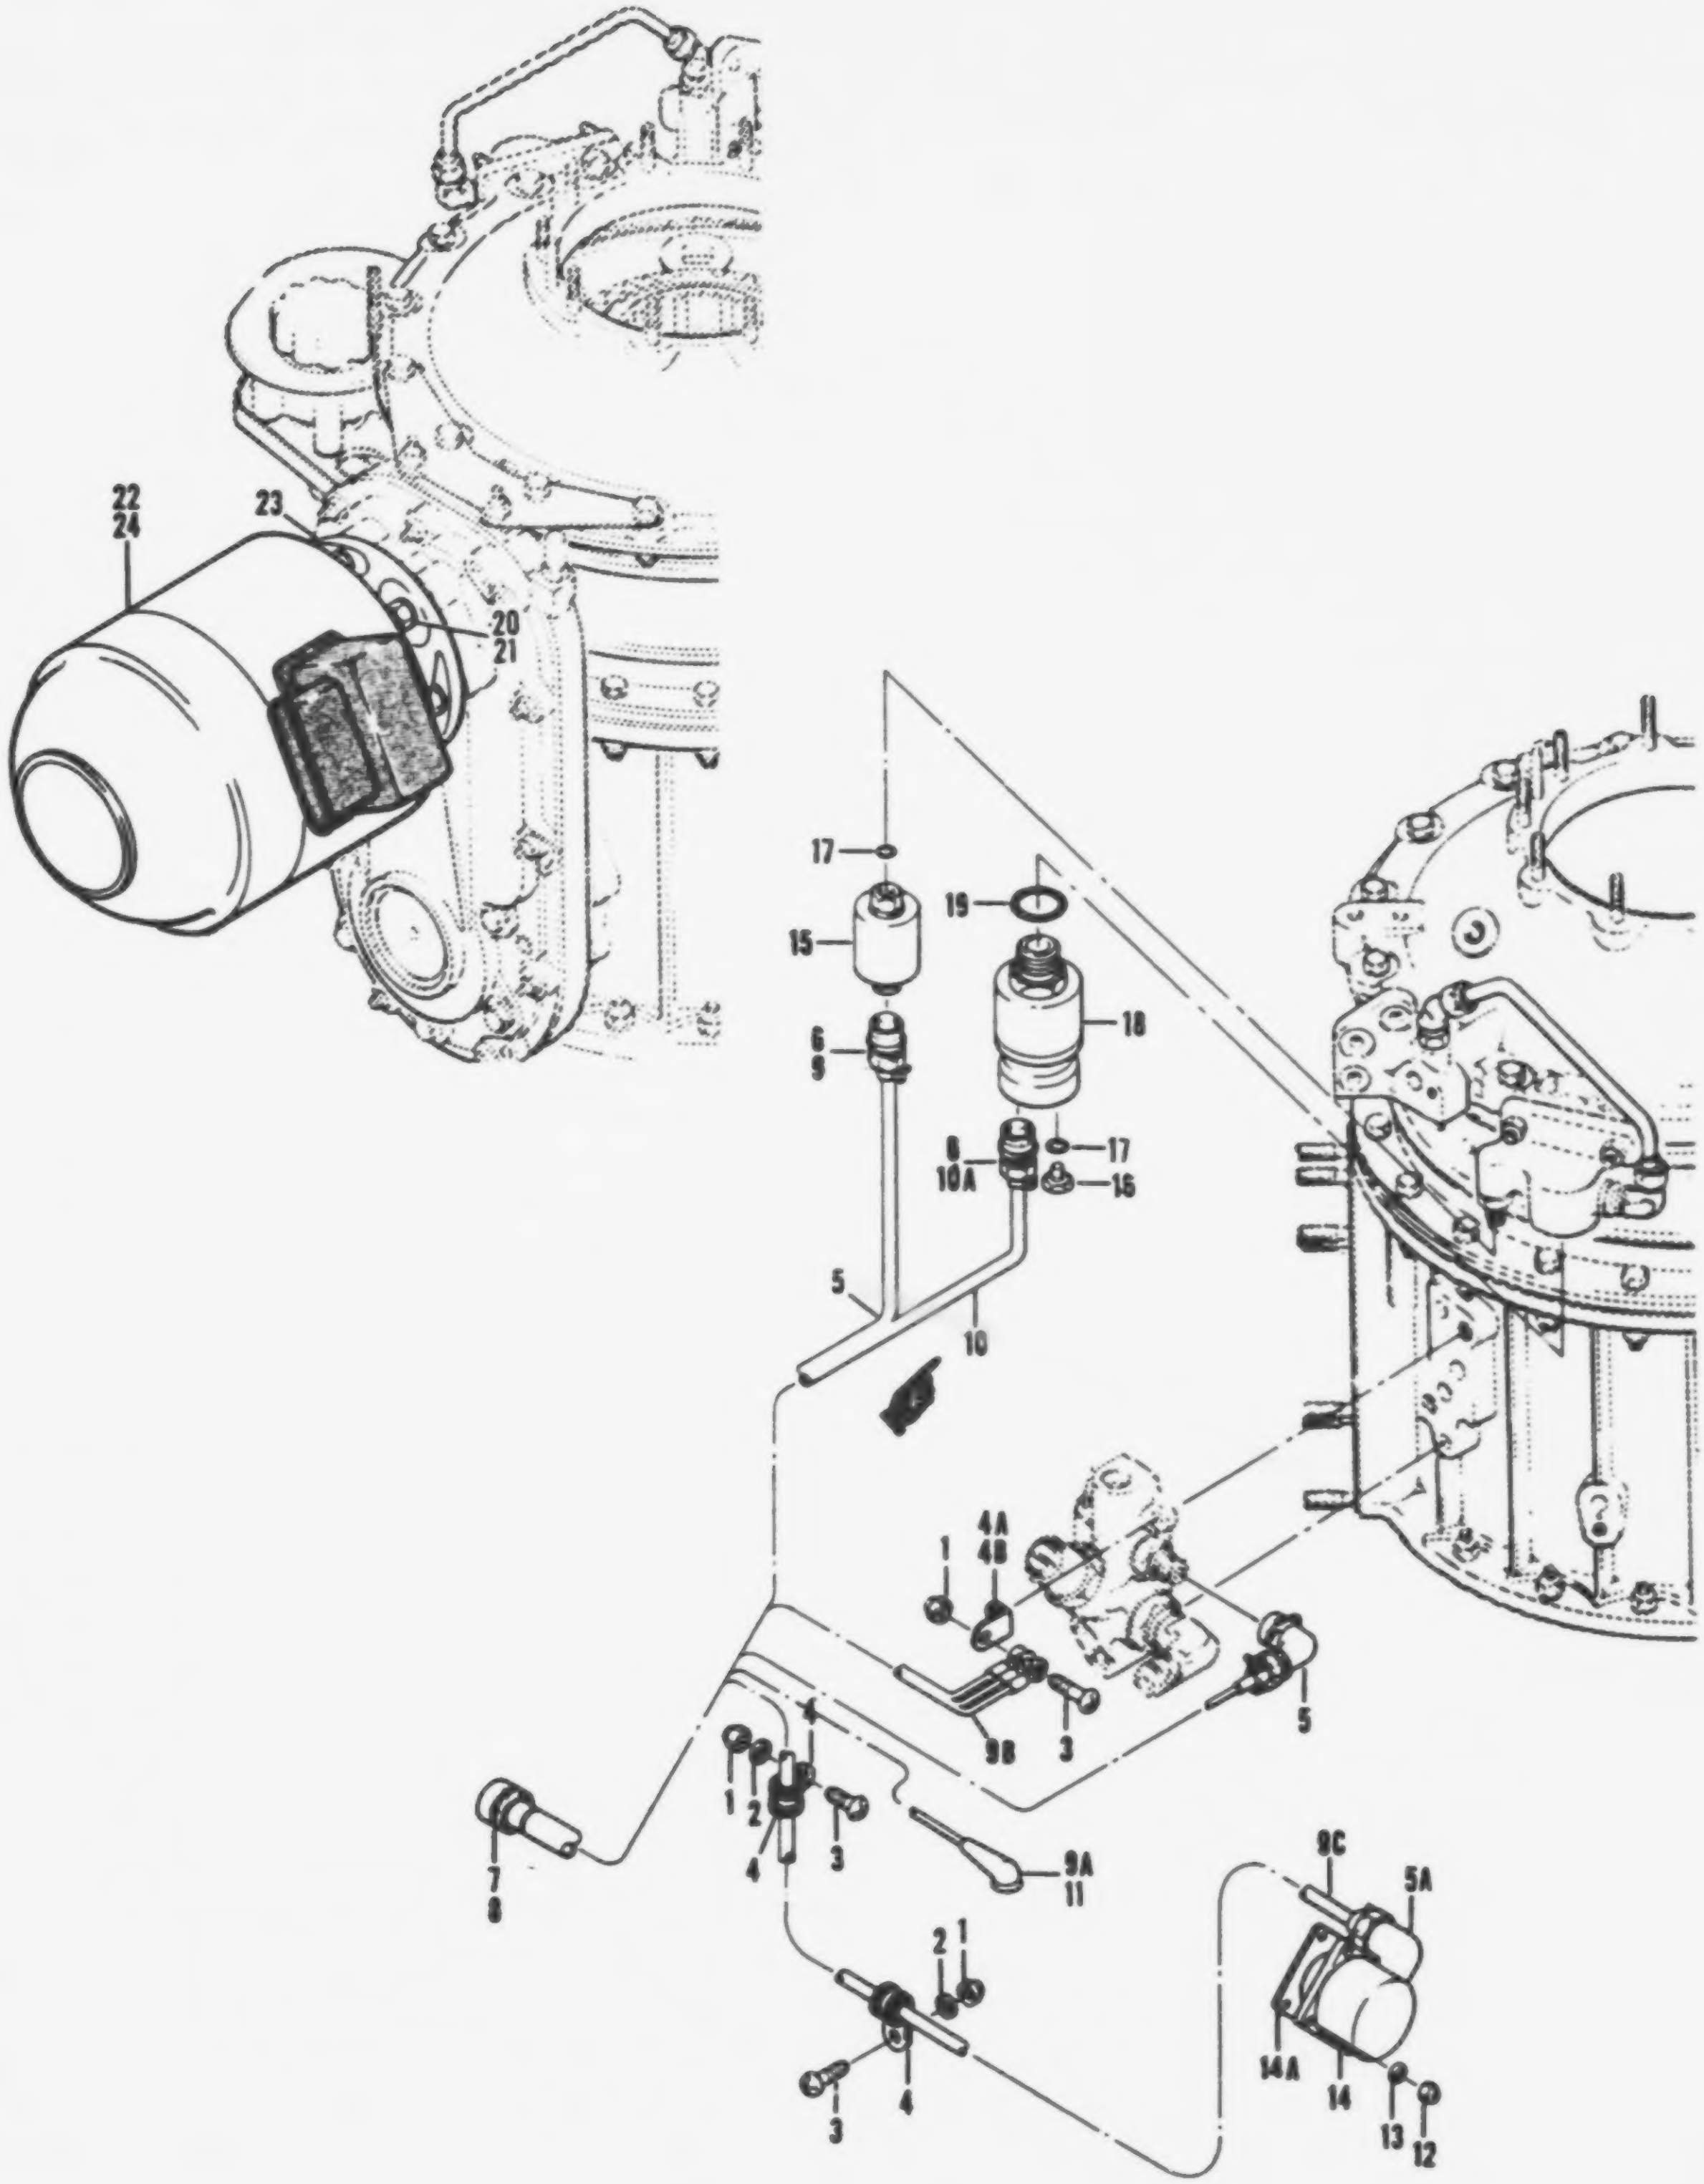
22
24
23
20
21
17
19
15
18
6
9
8
10A
17
16
5
10
4A
4B
1
5
9B
3
4
1
2
3
4
7
8
9A
11
9C
5A
2
1
14A
14
13
12
3
4

Figure 276. Electrical Installation, Pylon

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE		QTY INC IN UNIT
276		XCFZZ		97499	205-075-003-3	ELECTRICAL INSTL PYLON USBL EFF 62-2106 THRU 64-13901 SEE FIG 128 FOR NHA	UHE,UHH,UHV,UHX	EA	1
276		XCFZZ		97499	205-075-003-5	ELECTRICAL INSTL PYLON USBL EFF 65-9565 & SUBSEQUENT SEE FIG 128 FOR NHA	UHE,UHH,UHV,UHX	EA	1
276	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
276	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
276	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
276	4	PAOZZ	5340-00-533-3510	81996	EAB700-2	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
276	4A	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
276	4B	PAOZZ	5340-00-533-3512	81996	EAB700-5	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
276	5	AOOOZ	1560-00-978-2173	97499	205-075-401-1	CABLE ASSEMBLY U/O PN 205-075-003-3	UHE,UHH,UHV,UHX	EA	1
276	5	AOOOZ	6150-00-924-0447	97499	205-075-433-9	CABLE ASSEMBLY U/O PN 205-075-003-5	UHE,UHH,UHV,UHX	EA	1
276	5A	PAOZZ	5935-00-543-0207	96906	MS3456W12S3S	CONNECTOR,PLUG,ELEC XMSN OIL PRESS	UHE,UHH,UHV,UHX	EA	2
276	6	PAOZZ	5935-00-240-0173	96906	MS3057-4A	CLAMP,CABLE,ELEC U/O PN 205-075-401-1	UHE,UHH,UHV,UHX	EA	1
276	7	PAOZZ	5935-00-988-4350	96906	MS3126E14-19P	CONNECTOR,PLUG,ELEC	UHE,UHH,UHV,UHX	EA	1
276	8	PAOZZ	5340-00-984-2123	77820	10-101033-11	PLUG,PROTECTIVE,DUS MOISTURE SEAL U/O PN 205-075-401-1	UHE,UHH,UHV,UHX	EA	1
276	9	PAOZZ	5935-00-341-1258	96906	MS3456L12S3S	CONNECTOR,PLUG,ELEC XMSN OIL TEMP BULB	UHE,UHH,UHV,UHX	EA	1
276	9A	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG U/O PN 205-075-401-1	UHE,UHH,UHV,UHX	EA	1
276	9A	PAOZZ	5940-00-204-8966	96906	MS25036-102	TERMINAL,LUG U/O PN 205-075-433-9	UHE,UHH,UHV,UHX	EA	2
276	9B	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG U/O PN 205-075-433-9	UHE,UHH,UHV,UHX	EA	3
276	9B	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHE UHH,UHV,UHX	EA	1
276	9C	XDOZZ		97499	85T4-7-2	INSULATION TUBE U/O PN 205-075-401-1	UHE,UHH,UHV,UHX	FT	9
276	10	PBOZZ	6145-00-851-8505	96906	MS25190B20	WIRE,ELECTRICAL	UHE,UHH,UHV,UHX	FT	V
276	10A	PAOZZ	5935-00-813-4716	96906	MS3106R10SL3S	CONNECTOR,PLUG,ELEC XMSN OIL PRESS XMTR	UHE,UHH,UHV,UHX	EA	1
276	11	PAOZZ	5975-00-553-7151	96906	MS25171-2S	CABLE NIPPLE	UHE,UHH,UHV,UHX	EA	1
276	12	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
276	13	PAOZZ	5310-00-141-1795	88044	AN960-416	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
276	14	PAOZZ	6620-00-585-1503	81349	MILG26611	GENERATOR,TACHOMETE	UHE,UHH,UHV,UHX	EA	1
276	14A	PAOZZ	5330-00-023-7623	96906	MS9134-01	GASKET	UHE,UHH,UHV,UHX	EA	1
276	15	PAOZZ	5930-00-179-4546	97499	204-040-376-3	SWITCH,PRESSURE	UHE,UHH,UHV,UHX	EA	1
276	16	PAOZZ	1560-00-716-8554	97499	100-016-1	PLUG,VENTILLATION	UHE,UHH,UHV,UHX	EA	1
276	17	PAOZZ	5330-00-531-2070	80205	NAS617-4	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
276	18	PAOZZ	DELETED	81349	MIL-T-58097	TRANSMITTER,PRESSUR	UHE,UHH,UHV,UHX	EA	1
276	19	PAOZZ	5330-00-835-8974	96906	MS29561-119	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
276	20	PAOZZ	5310-00-807-1477	96906	MS21042L6	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	6
276	21	PAOZZ	5310-00-167-0821	88044	AN960-616	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
276	22	PAOFF	6115-00-901-1818	07878	GEU5A	GENERATOR,DIRECT CURRENT	UHE,UHH,UHV,UHX	EA	1
276	22	PAOFF	6115-00-725-1790	31435	30010-000	GENERATOR,DIRECT CURRENT SEE FIG 277 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
276	22	PAOFF	6115-00-942-2094	83298	30837-37	GENERATOR,DIRECT CURRENT SEE FIG 276 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
276	23	PCOZZ	5330-00-023-7626	96906	MS9136-01	GASKET	UHE,UHH,UHV,UHX	EA	1
276	24	PAOOO	6115-01-086-7607	97499	205-075-084-1	GENERATOR,ALTERNATI	UHE,UHX	EA	1

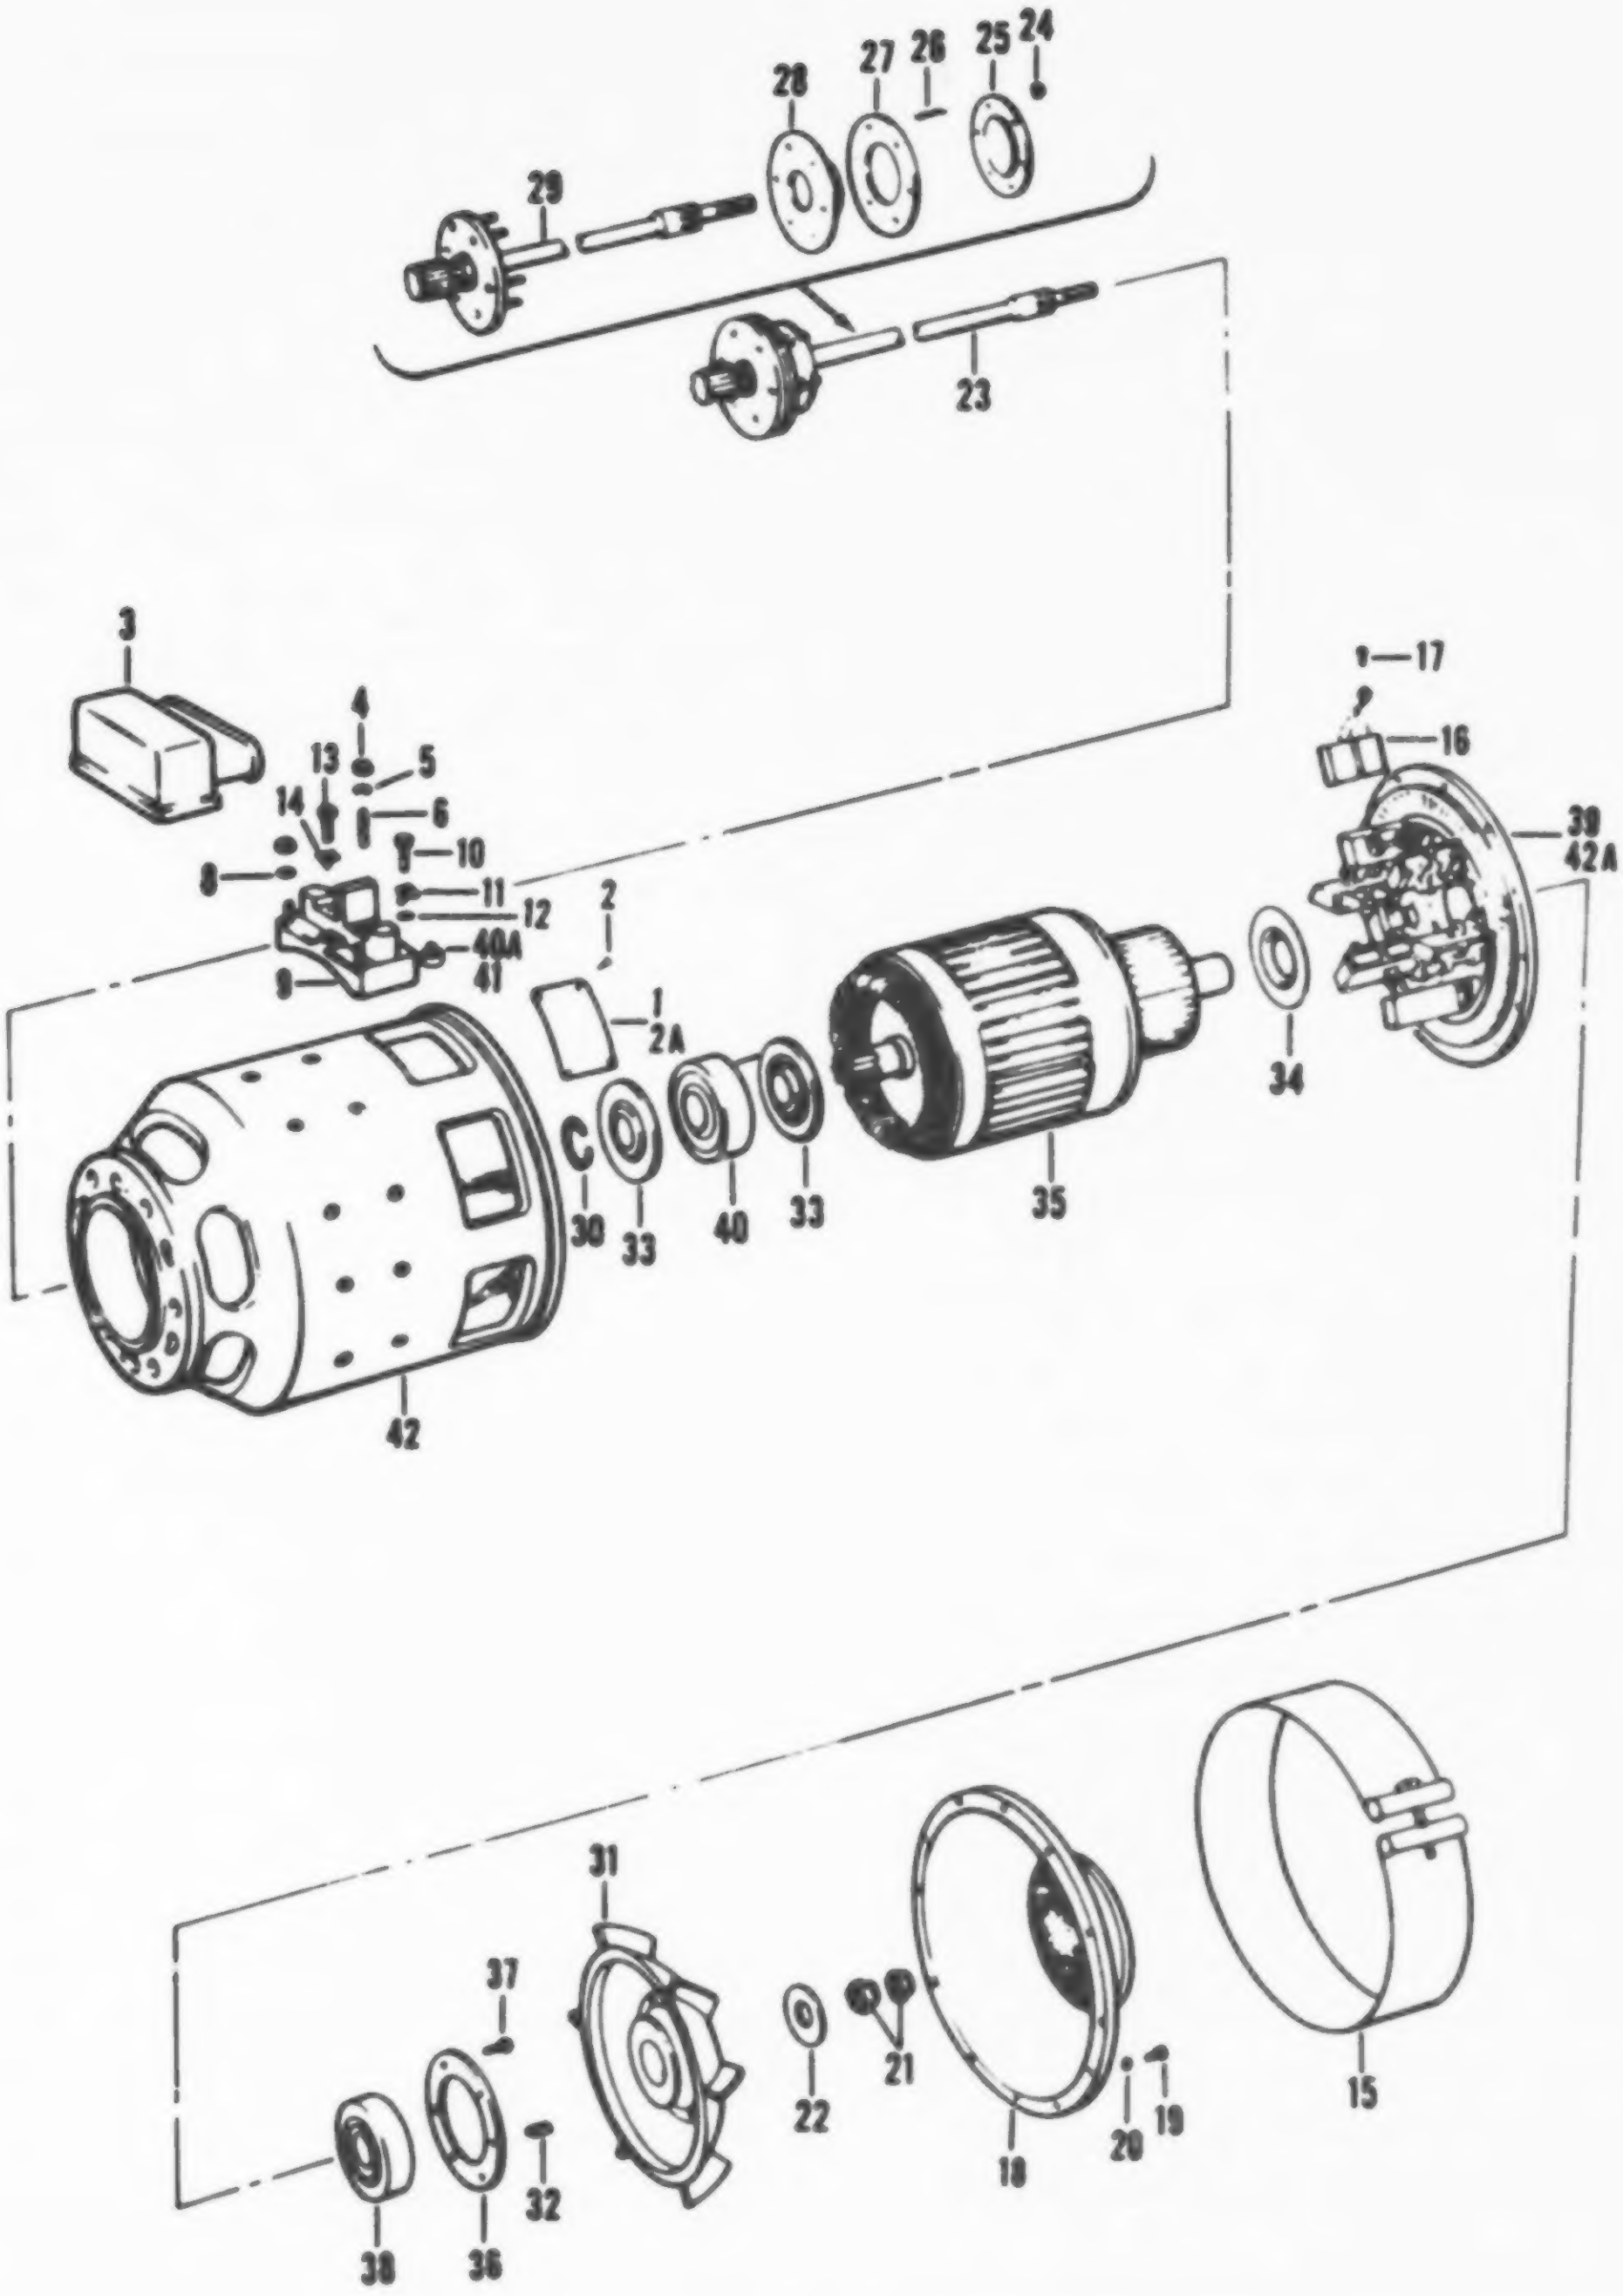
24
25
26
27
28
29
23
3
4
5
13
14
6
10
8
11
12
40A
9
41
2
1
2A
17
16
39
42A
34
35
30
33
40
33
42
31
37
22
21
20
19
18
15
38
36
32

Figure 277. Generator, Direct Current (Sheet 1 of 2)

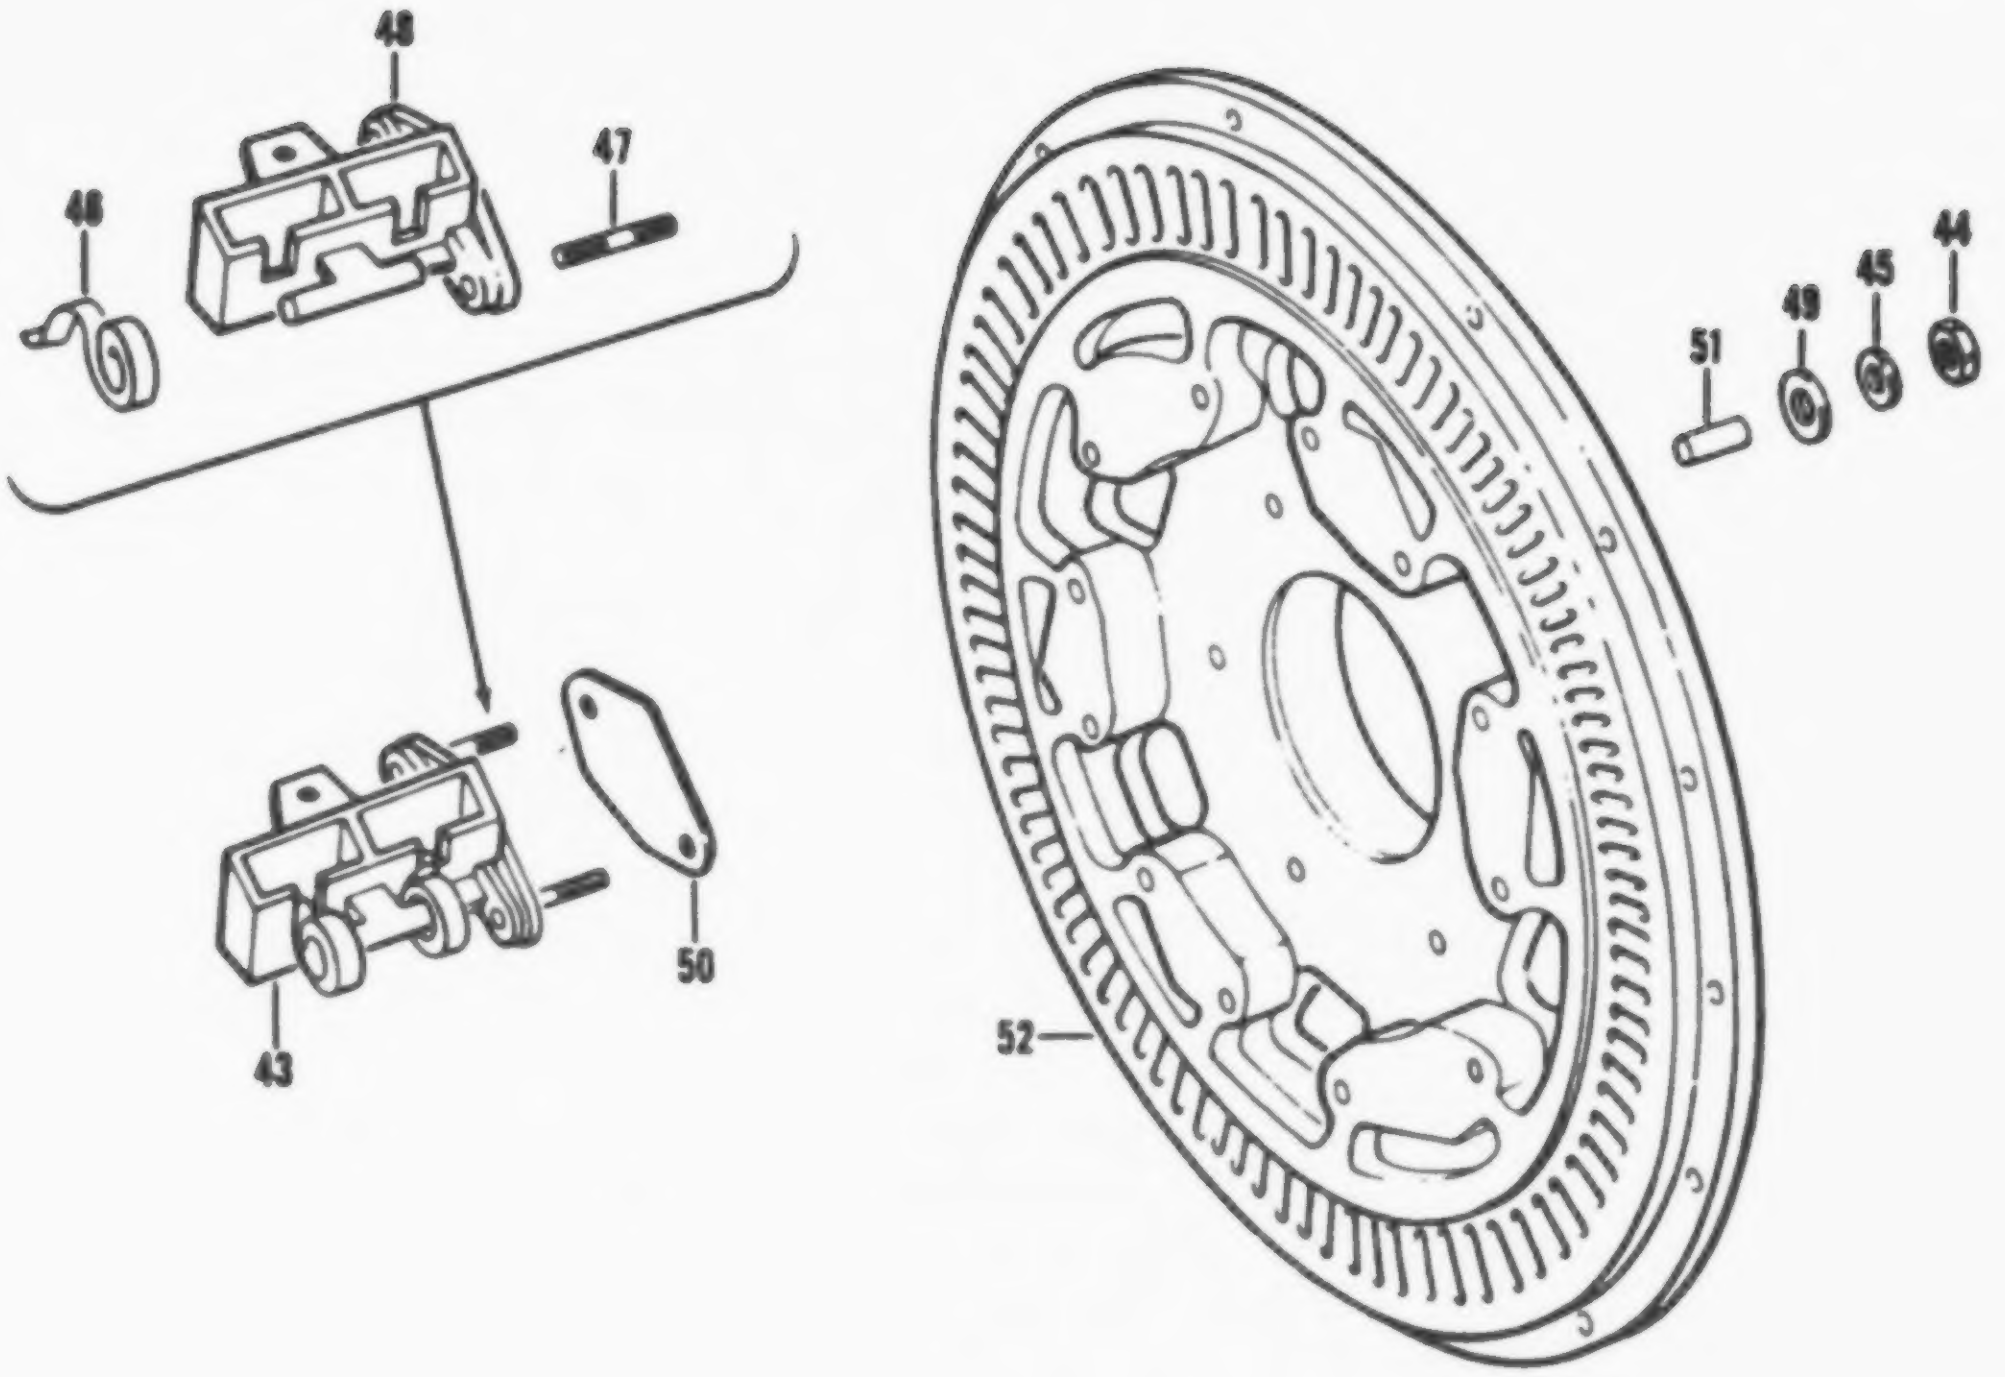
48
47
46
44
45
49
51
50
43
52

Figure 277. Generator, Direct Current (Sheet 2 of 2)

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO.	(b) ITEM NO							
277		PAOFF	6115-00-725-1790	31435	30010-000	GENERATOR,DIRECT CU SEE FIG 275 FOR NHA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	1	XBFZZ	5115-00-953-5057	31435	06-119617	.PLATE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	2	XDFZZ	5305-00-253-5503	96906	MS21318-1	.SCREW,DRIVE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
277	2A	PAFZZ	6115-00-874-8756	31435	06-209140	.PLATE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	3	PAOZZ	6115-00-716-2006	31435	30300-1109	.COVER,TERMINAL B UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	4	PAOZZ	5310-00-857-4948	96906	MS21045L6	.NUT,SELF-LOCKING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	5	PAOZZ	5310-00-004-5033	96906	MS35338-46	.WASHER,LOCK UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	6	PAFZZ	5307-00-632-4686	31435	05-360065	.STUD,PLAIN UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	8	PAOZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	9	PAFZZ	5940-00-630-9335	31435	30029-1030	.TERMINAL BOARD UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	10	PAOZZ	5306-00-182-2060	88044	AN3H7A	.BOLT,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	11	PAOZZ	5310-00-834-4716	31435	G25-157	WASHER,KEY UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	12	PAFZZ	5970-00-534-7664	31435	G25-171	.INSULATOR,PLATE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	13	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	14	PAOZZ	5310-00-638-6005	31435	G25-158	.WASHER,KEY UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	15	PAOZZ	6115-00-813-2501	31435	30010-1035	.COVER,ACCESS UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	16	PAFZZ	5977-00-874-8761	31435	30010-1026	.BRUSH,ELECTRICAL CO UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
277	17	PAOZZ	5305-00-143-3289	31435	05-340201	.SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
277	18	PAOZZ	6115-00-806-4743	31435	30010-1011	.COVER,ELECTRICAL UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	19	PAOZZ	5305-00-550-9704	31435	05-341007	.SCREW,CAP,SOCKET HE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
277	20	PBOZZ	5310-00-530-4114	06840	P24532	WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
277	21	XDFZZ		31435	05-322503	.LOCKNUT,HEAGON UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	22	PAFZZ	5310-00-834-4724	31435	G32-103	WASHER,RECESSED UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	23	PAFZZ	6115-00-874-8765	31435	30010-302	.SHAFT ASSEMBLY UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	24	PAFZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	25	PAFZZ	5330-00-202-2696	31435	G26-137	..RETAINER,PACKING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	26	PAFZZ	5360-00-484-1280	31435	G26-138	..SPRING,HELICAL COMP UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
277	27	XDFZZ		31435	30010-1031	..PLATE,DAMPENER P UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	28	PAFZZ	6115-00-510-4427	31435	G300-280	..PLATE DAMPENER GENE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	29	XAFZZ		31435	30010-1029	..SHAFT AND PLATE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	30	PAFZZ	5365-00-685-6745	79136	5101-118S	.RING,RETAINING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	31	PAFZZ	6150-00-813-1420	31435	30010-1003	.IMPELLER,FAN,AXIAL UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	32	PAFZZ	5315-00-729-8570	96906	MS20066-33	.KEY,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	33	PAFZZ	6115-00-874-8766	31435	30022-1033	.DISC UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	34	PAFZZ	5310-00-570-2757	31435	G22-144	.WASHER,SHOULDERED A UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	35	PAFZZ	6115-00-807-9235	31435	30010-1020	.ARMATURE,GENERATOR UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	36	XBFZZ	5340-00-321-6095	31435	G22=133	.RING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	37	PAFZZ	5305-00-939-9189	96906	MS35275-264	.SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
277	38	PAFZZ	3110-01-028-0080	31435	JH203-35	.BEARING,BALL,ANNULA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	39	XDFZZ		31435	30010-300	.SUPPORT ASSEMBLY SEE FIG 285 SHEET 2 OF 2 FOR BREAKDOWN UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	40	PAFZZ	3110-01-028-0080	31435	JH203-35	.BEARING,BALL,ANNULA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
277	40A	XDFZZ		31435	30010-1063	.STATOR,GENERATOR .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	41	PAFZZ	5325-00-370-9416	31435	G300-256	..GROMMET,NONMETALLIC .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	42	XBFZZ	6115-00-874-8759	31435	30010-1012	..HOUSING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	42A	XDFZZ		31435	30010-300	.SUPPORT ASSEMBLY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	43	PAFZZ	5977-00-874-8764	31435	30010-301	..HOLDER ASSEMBLY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
277	44	PAFZZ	5310-00-263-2862	96906	MS21045C3	...NUT,SELF-LOCKING,HE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
277	45	PAFZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
277	46	PAFZZ	5977-00-999-6158	31435	30010-1039	...SPRING,BRUSH .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
277	47	XAFZZ		31435	05-360009	...STUD,PLAIN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
277	48	PAFZZ	5977-00-819-8775	31435	30010-1025	...HOLDER,ELECTRICAL C .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
277	49	PAFZZ	5310-00-599-7037	31435	05-374036	..WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
277	50	PAFZZ	5970-00-370-9411	31435	G300-199	..INSULATOR,PLATE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
277	51	XDFZZ		31435	05-631120	..INSULATOR,BUSHING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
277	52	XDFZZ		31435	30010-1009	..END BELL,ELECTRI .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

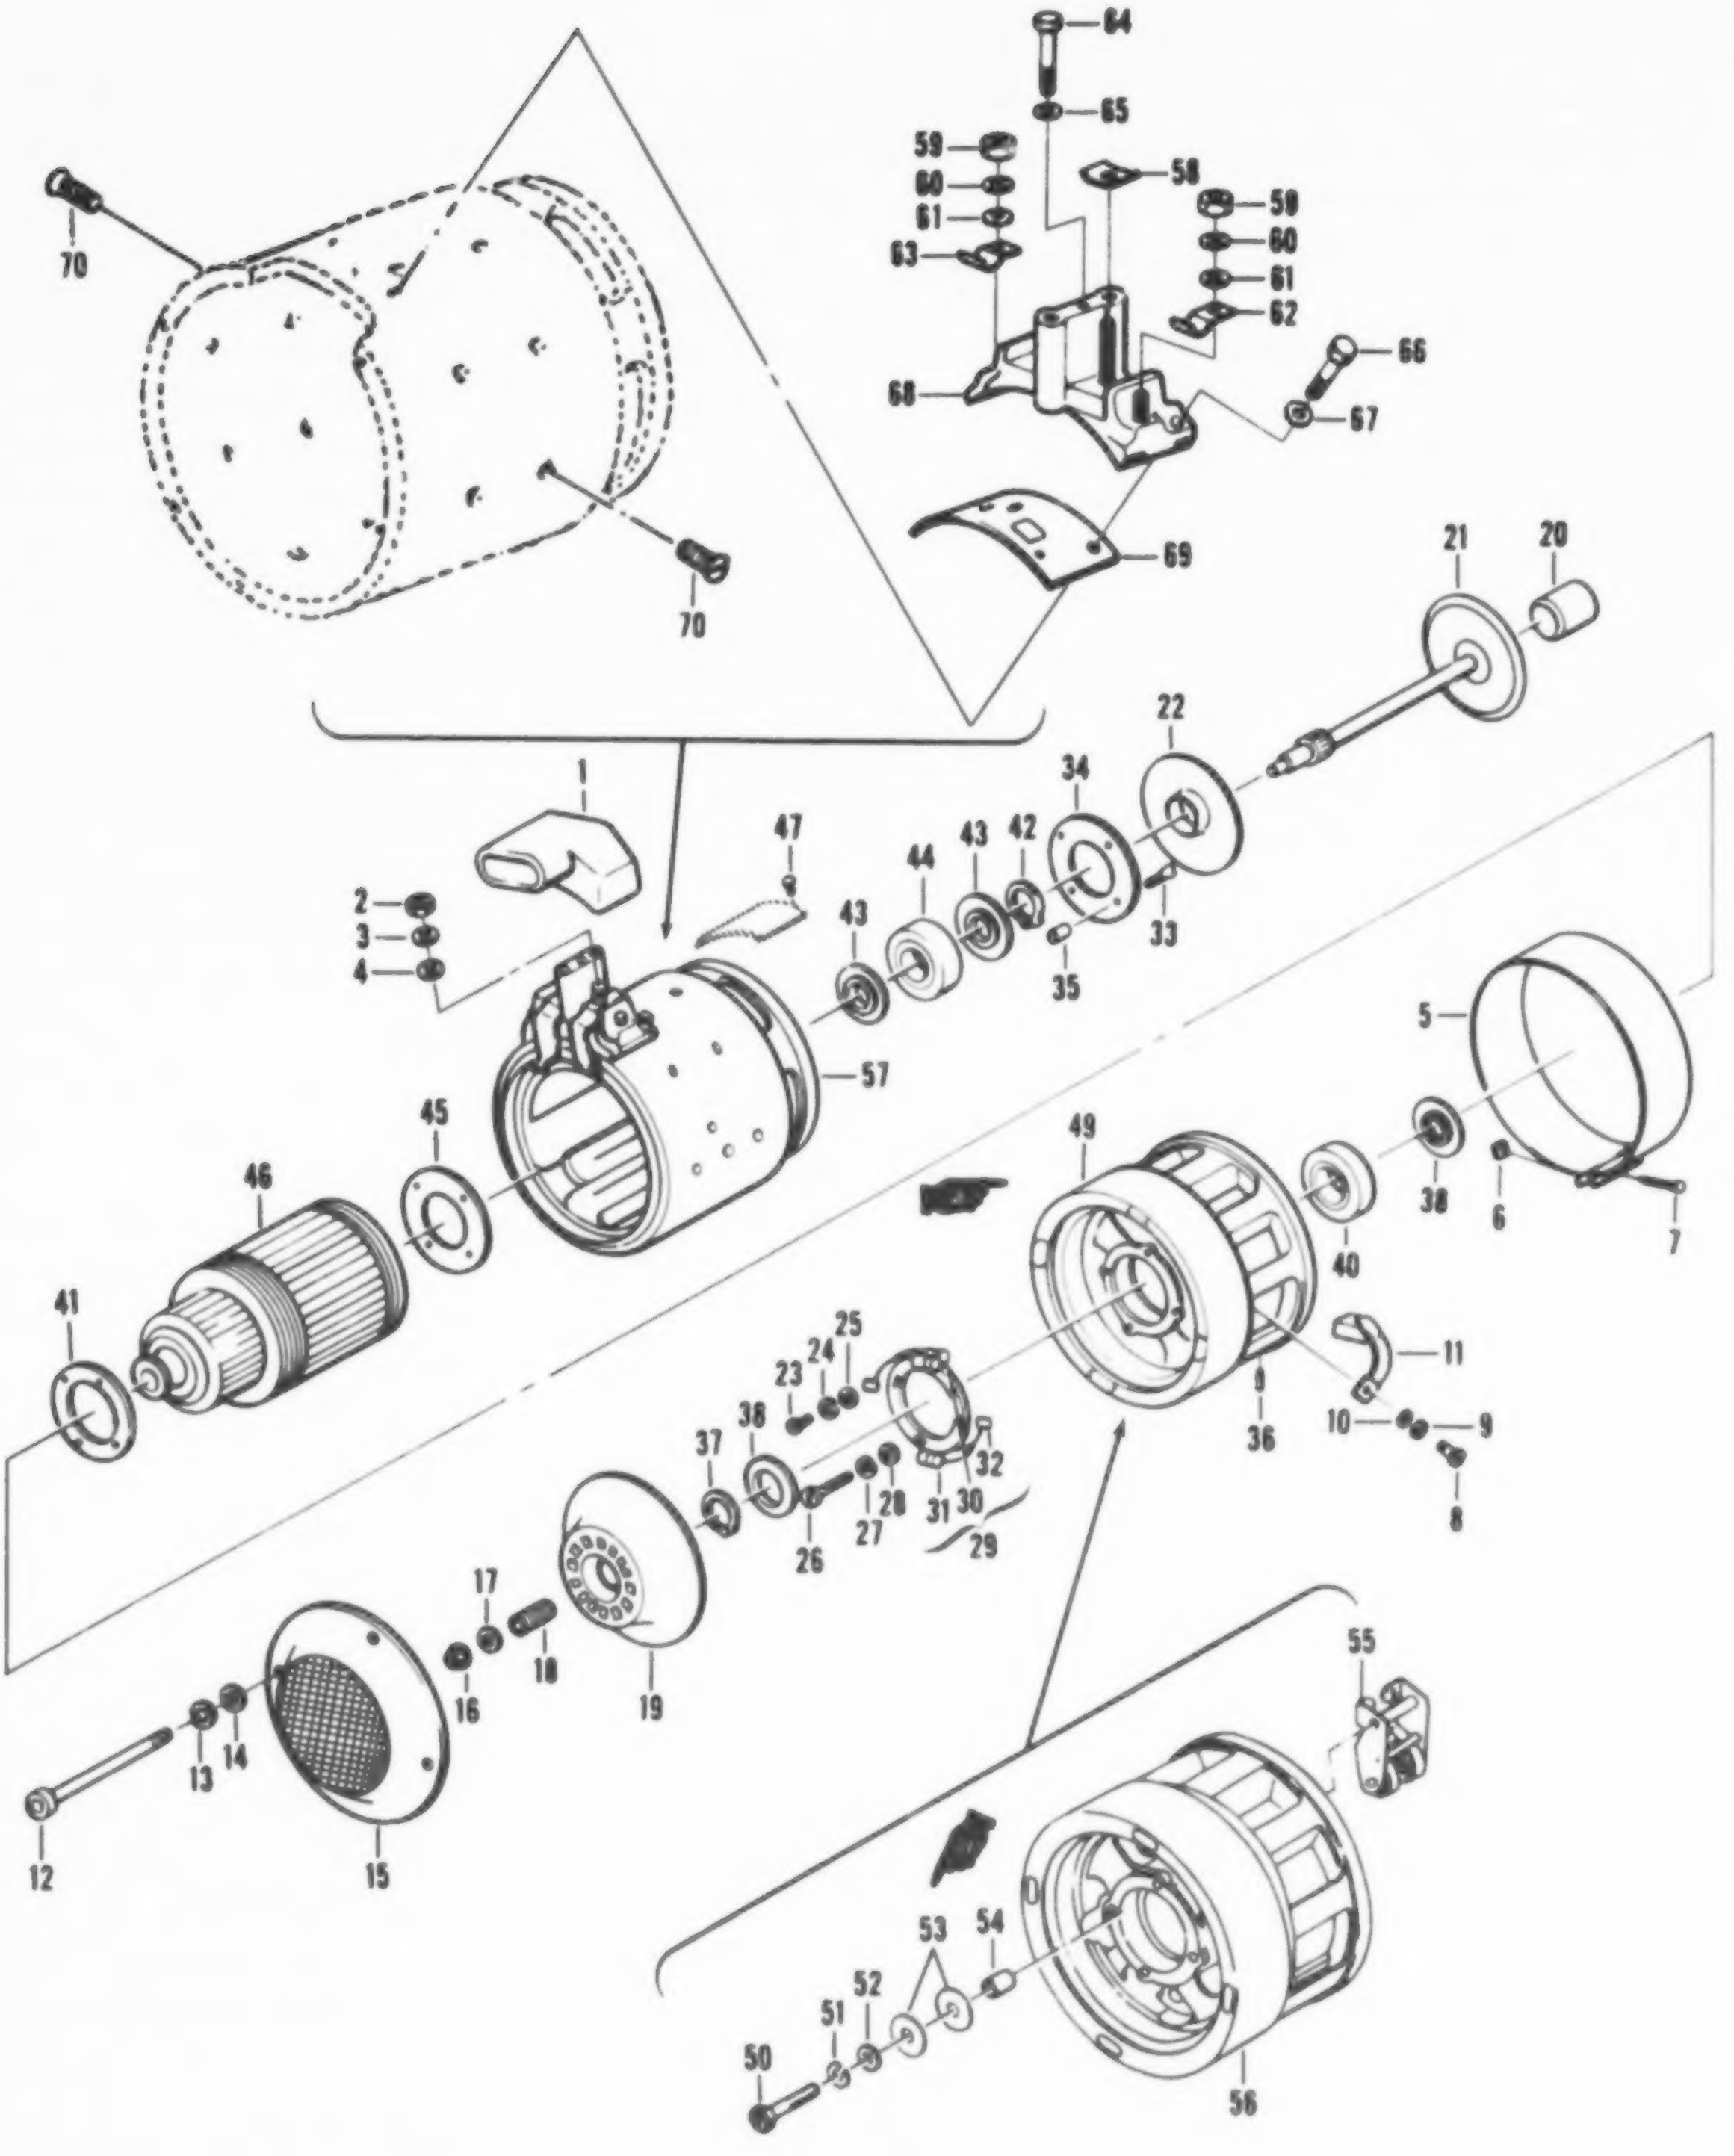
64
65
59
60
61
63
58
59
60
61
62
70
66
68
67
69
70
21
20
22
1
34
47
44
43
42
2
3
4
43
33
35
5
57
45
49
46
38
6
7
40
41
25
24
23
11
38
37
32
36
10
9
31
30
28
26
27
29
8
17
18
16
19
55
13
14
12
15
53
54
52
51
50
56

Figure 278. Generator, Direct Current

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
278		PAOFF	6115-00-942-2094	83298	30837-37A	GENERATOR,DIRECT CU SEE FIG.276 FOR NHA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	1	PAFZZ	6115-00-897-8809	83298	1111055	.COVER,TERMINAL B .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	2	PAFZZ	5310-00-950-0039	96906	MS21044N6	.NUT,SELF-LOCKING,HE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	3	PAFZZ	5310-00-004-5033	96906	MS35338-46	.WASHER,LOCK .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	4	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	5	PAFZZ	2925-00-850-3653	83298	1532119	.COVER,ACCESS .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	6	PAFZZ	5310-00-439-4711	19315	833656	..NUT,PLAIN,SQUARE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	7	PAOZZ	5305-00-150-9206	88044	AN502-10-20	..SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	8	PAOZZ	5306-00-523-8866	19315	890065-2	.BOLT,INTERNAL WRENC .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
278	9	PAOZZ	5310-00-582-5965	96906	MS35338-44	.WASHER,LOCK .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
278	10	PAFZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
278	11	PAFZZ	5977-00-897-5979	83298	1108139	.BRUSH SET,ELECTRICA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	12	XDFZZ		83298	1546947-121	.BOLT,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	13	PAFZZ	5310-00-933-8121	96906	MS35338-139	.WASHER,LOCK .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	14	PAFZZ	5310-00-205-8924	88044	AN960C416L	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	15	PAFZZ	6105-00-136-4520	83298	1544572	.END BELL,ELECTRICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	16	PAFZZ	5310-00-823-8835	96906	MS21045C5	.NUT,SELF-LOCKING,HE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	17	PAFZZ	5310-00-596-0124	19315	1320032	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	18	PAFZZ	5360-00-664-9698	19315	1320031	.SPRING,HELICAL,COMP .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	19	PAFZZ	6115-00-846-9294	83298	1107926	.IMPELLER,FAN,AXIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	20	XBFZZ	5340-00-404-4717	83298	1549704-1	.CAP,PROTECTIVE,D .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	21	PAFZZ	6115-00-976-8887	83298	1544668	.SHAFT ASSEMBLY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	22	PAFZZ	2925-00-731-4906	83298	1111791	.PLATE,RETAINING,SHA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	23	PAFZZ	5305-00-940-9488	96906	MS35275-226	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	24	PAFZZ	5310-00-933-8119	83298	819001-016	.WASHER,LOCK .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	25	PAFZZ	5310-00-531-9514	88044	AN960C6	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	26	PAFZZ	5305-00-943-5918	96906	MS35275-249	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	27	PAFZZ	5310-00-045-3299	96906	MS35338-42	.WASHER,LOCK .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	28	PAFZZ	5310-00-668-5207	88044	AN960C8L	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	29	PAFZZ	5910-00-253-1740	83298	1546898-1	.CAPACITOR ASSEMBLY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	30	XAFZZ		83298	19437	..TERMINAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	31	PAFZZ	5910-00-884-8119	83298	1111235	..CABLE,NIPPING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	32	XAFZZ		83298	1113897	..CAPACITOR SUB-ASSY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	33	PAFZZ	5305-00-638-3499	83298	1322944	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	34	PAFZZ	3110-00-698-0569	19315	1322942	.PLATE,RETAINING,BEA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	35	PBFZZ	3120-00-585-9604	83298	1325794-3	.BUSHING,SLEEVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	36	PAFZZ	5315-01-116-5789	96906	MS171434	.PIN,SPRING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	37	PAFZZ	5365-00-804-2025	96906	MS16624-1098	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	38	PAFZZ	6115-00-512-6759	83298	844923	.DEFLECTOR,DIRT AND .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	40	PAFZZ	3110-01-037-8864	21335	M205NPP	.BEARING,BALL,ANNULA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	41	PAFZZ	3110-00-326-5049	19315	1329018	.PLATE,RETAINING, ... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	42	PAFZZ	5365-00-804-2025	96906	MS16624-1098	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
278	43	PAFZZ	6115-00-512-6759	83298	844923	DEFLECTOR,DIRT AND LIQUID	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	44	PAFZZ	3110-01-037-6864	21335	M205HPP	.BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	45	PAFZZ	3110-00-328-5049	19315	1329018	.PLATE,RETAINING,	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	46	PAFZZ	6115-00-974-7209	83298	1544645	.ARMATURE,GENERATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	47	PAFZZ	5305-00-053-1111	96906	MS24621-7	.SCREW,TAPPING,THREA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	49	XAFZZ		83298	1544529	.END BELL ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	50	PAFZZ	5306-00-435-3321	83298	1543503	..SCREW,SPECIAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	51	PAFZZ	5310-00-407-9566	96906	MS35338-45	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	52	PAFZZ	5310-00-205-8986	19315	867491	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	53	PAFZZ	5970-00-435-5674	83298	1543622	..INSULATOR,WASHER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	16
278	54	PAFZZ	5970-00-846-1664	83298	1328928	..INSULATOR,BUSHING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
278	55	PAFZZ	5977-00-937-1504	83298	1544527	..HOLDER,ELECTRICAL C	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	56	PBFZZ	6115-00-254-6576	83298	1544432-1	..END BELL,ELECTRICAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	57	PAFZZ	6115-00-974-7211	83298	1544612	.STATOR,GENERATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	58	PAFZZ	5940-00-730-7916	83298	1109458	..TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	59	PAFZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING,HE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	60	PAFZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	61	PAFZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	62	PAFZZ	5940-00-897-4890	83298	1101570	..TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	63	XDFZZ		83298	1101569	..TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	64	XDFZZ		83298	890662-23	..BOLT,SELF-LOCKING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	65	PAFZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	66	PAFZZ	5306-00-917-2166	83298	890662-5	..BOLT,SELF-LOCKING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	67	PAFZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
278	68	PAFZZ	5940-00-518-9983	83298	1109452	..TERMINAL BOARD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	69	PAFZZ	5940-00-584-1050	06840	1109589	..INSULATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
278	70	XDFZZ		06840	828998-4	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

Fig. 279 & 280 NOT USED

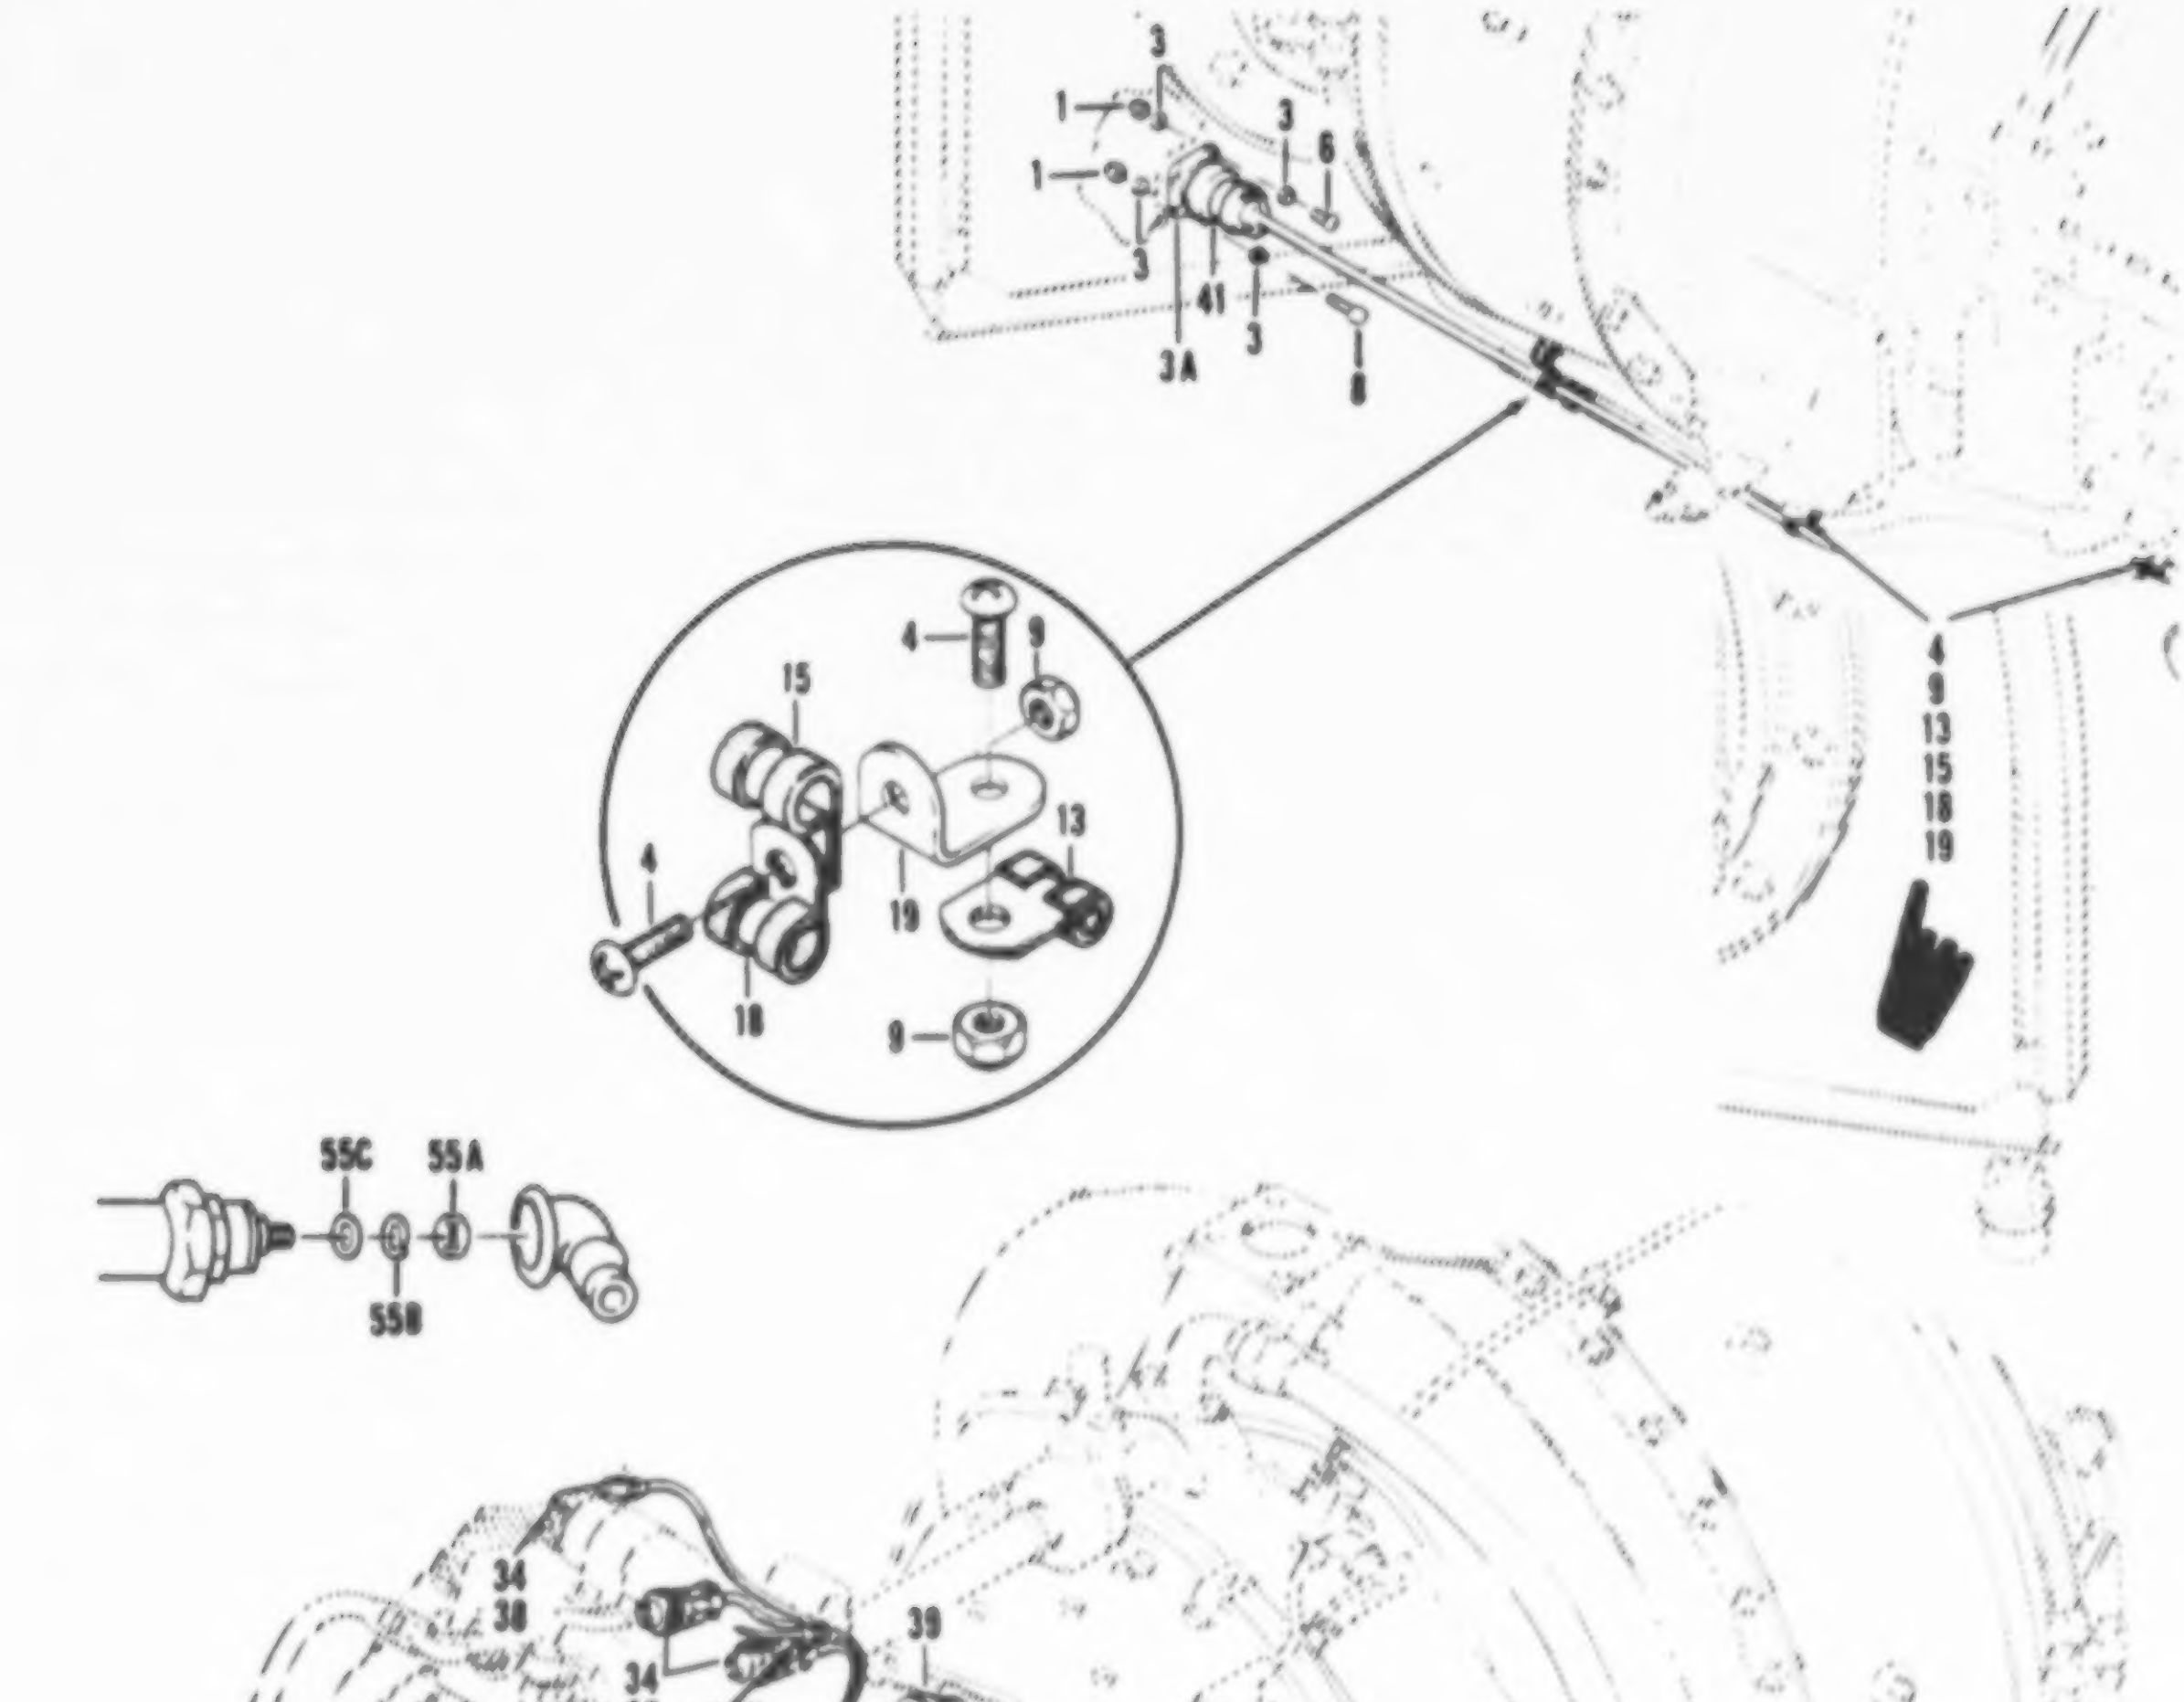
3
1
1
3
6
3
41
3A
3
3
8
4
9
15
4
19
18
13
9
4
9
13
15
18
19
55C
55A
55B
34
38
34
35
39
34
38
17
18
18
18
13
31
32
33
4
11
2
12
9
2
2
9
4
28
thru
48
27
7
18
4
9
18
4
9
14
16
19
26
50
52
53
54
55
23
17
2
5
12
42
37
51
24
20
21
22
25
26

Figure 281. Electrical Installation, Power Plant

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
281		XCFZZ		97499	205-075-004-1	ELECTRICAL INSTL POWER PLANT USBL EFF 62-2106 THRU 62-12372 SEE FIG.98 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
281		XCFZZ		97499	205-075-010-1	ELECTRICAL INSTL POWER PLANT USBL EFF 63-8739 THRU 65-9810 SEE FIG.98 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
281		XCFZZ		97499	205-075-010-3	ELECTRICAL INSTL POWER PLANT USBL EFF 65-9811 THRU 66-15867 SEE FIG.98 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
281		XCFZZ		97499	205-075-010-5	ELECTRICAL INSTL POWER PLANT USBL EFF 66-15868 THRU 70-16518 SEE FIG.98 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
281		XCFZZ		97499	205-075-010-7	ELECTRICAL INSTL POWER PLANT USBL EFF 71-20000 AND SUBSEQUENT SEE FIG.98 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
281	1	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
281	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
281	3	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	8
281	3A	PAOZZ	5935-00-949-8236	77820	TBF1255 1PS	.ADAPTER,CONNECTOR .... UHE,UHH,UHV,UHX	EA	1
281	4	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	15
281	5	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
281	6	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	3
281	7	PAOZZ	5306-00-182-2040	88044	AN3CH4	.BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	1
281	8	PAOZZ	5305-00-558-4887	96905	MS35265-14	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
281	9	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	13
281	11	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHE,UHH,UHV,UHX	EA	1
281	12	PAOZZ	5340-00-533-3510	81996	EAB700-2	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	1
281	13	PAOZZ	5340-00-533-3505	81996	EAB700-3	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	6
281	14	PAOZZ	5340-00-533-3511	81996	EAB700-4	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
281	15	XDOZZ		81996	EAB700-6	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	3
281	16	PAOZZ	5340-00-533-3516	81996	EAB700-9	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
281	17	PBOZZ	5340-00-533-3558	81996	EAB700-11	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
281	17	PAOZZ	5340-00-533-3600	81996	EAB700-12	.CLAMP,LOOP U/O PN 205-075-010-1 & -3 .... UHE,UHH,UHV,UHX	EA	1
281	18	PAOZZ	5340-00-533-3512	81996	EAB700-5	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	11
281	19	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE .... UHE,UHH,UHV,UHX	EA	2
281	20	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE U/O PN 205-075- 0-5 .... UHE,UHH,UHV,UHX	EA	1
281	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-075-010-5 .... UHE,UHH,UHV,UHX	EA	1
281	22	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
281	23	XDOZZ	5340-00-964-5826	81996	EAB70008	.CLAMP,LOOP U/O PN 205-075-010-5 .... UHE,UHH,UHV,UHX	EA	1
281	24	XDOZZ		81996	EAB700015	.CLAMP,LOOP U/O PN 205-075-010-5 .... UHE,UHH,UHV,UHX	EA	1
281	25	PBOZZ	5935-00-660-3720	96906	MS25042-14C	.COVER,ELECTRICAL CO U/O PN 205-075-010-5 ... UHE,UHH,UHV,UHX	EA	1
281	26	PAOZZ	5975-00-653-6996	96906	MS25171-1S	.CABLE NIPPLE .... UHE,UHH,UHV,UHX	EA	1
281	27	PAOZZ	5975-00-250-6871	96906	MS25171-3S	.CABLE NIPPLE,ELECTR .... UHE,UHH,UHV,UHX	EA	3
281	28	AOOOO		97499	205-075-402-1	.CABLE ASSY,DECK DISCONNECT TO ENGINE U/O PN 205-075-004-1 .... UHE,UHH,UHV,UHX	EA	1
281	28	AOOOO		97499	205-075-402-11	.CABLE ASSY,DECK DISCONNECT TO ENGINE U/O PN 205-075-010-1 .... UHE,UHH,UHV,UHX	EA	1
281	29	AOOOO		97499	205-075-402-13	.CABLE ASSY,DECK DISCONNECT TO ENGINE U/O 205-075-010-3 .... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
281	30	AOOOO		97499	205-075-402-15	.CABLE ASSY,DECK DISCONNECT TO ENGINE U/O PN 205-075-010-5 ....UHE,UHH,UHV,UHX	EA	1
281	30	AOOOO		97499	205-075-402-19	.CABLE ASSEMBLY-DECK DISCONNECT TO ENGINE U/O PN 205-075-010-7........UHE,UHH,UHV,UHX	EA	1
281	31	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	1
281	32	PAOZZ	5940-00-143-4780	96906	MS25036-108	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	1
281	33	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-402-13 & -15 ....UHE,UHH,UHV,UHX	EA	1
281	34	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC CONNECTOR........UHE,UHH,UHV,UHX	EA	5
281	35	PBOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC ENG OIL PRESS XMTR, TORQUE PRESS XMTR ....UHE,UHH,UHV,UHX	EA	2
281	36	PBOZZ	5935-00-835-4338	96906	MS3108R14S6S	..CONNECTOR,PLUG,ELEC BLEED AIR VALVE........UHE,UHH,UHV,UHX	EA	1
281	37	PAOZZ	5935-00-988-3546	96906	MS3126E10-6S	..CONNECTOR,PLUG,ELEC U/O PN 205-075-402-11, -13 & -15 ....UHE,UHH,UHV,UHX	EA	1
281	38	PBOZZ	5935-00-611-4343	96906	MS3108R12S3S	..CONNECTOR,PLUG,ELEC ENG OIL PRESS SW, FUEL DIFF PRESS SW ....UHE,UHH,UHV,UHX	EA	2
281	39	PBOZZ	5935-00-814-9781	96906	MS3106R22-14S	..CONNECTOR,PLUG,ELEC ENGINE CONNECTOR........UHE,UHH,UHV,UHX	EA	1
281	41	PAOZZ	5935-00-439-8900	97499	CS3100A12S51P	..CONNECTOR,PLUG,ELEC THERMOCOUPLE DISC. U/O PN 205-075-402-1 & -11........UHE,UHH,UHV,UHX	EA	1
281	41	PAOZZ	5935-00-869-2852	77820	CS3106A12S51P	..CONNECTOR,PLUG,ELEC THERMOCOUPLE DISC. U/O PN 205-075-402-13,-15 & -19........UHE,UHH,UHV,UHX	EA	1
281	42	PAOZZ	5935-00-928-2021	71468	CA38426-2865	..CONNECTOR,PLUG,ELEC ENG FW DISC........UHE,UHH,UHV,UHX	EA	2
281	43A	PAOZZ	5935-00-648-1528	96906	MS3456W22-14S	..CONNECTOR,PLUG,ELEC BLEED AIR VALVE........UHE,UHH,UHV,UHX	EA	1
281	44	XDOZZ		97499	85T4-7-2	..INSULATION TUBE........UHE,UHH,UHV,UHX	FT	37
281	45	MOOZZ	5970-00-342-8352	97499	85T4-1-2	..INSULATION TUBE........UHE,UHH,UHV,UHX	EA	2
281	46	PAOZZ	6145-00-643-0252	81349	MILW5846TY2CLA	..CABLE........UHE,UHH,UHV,UHX	FT	V
281	47	MOOZZ		97499	85T4-3-6	..INSULATION,TUBE........UHE,UHH,UHV,UHX	EA	2
281	48	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG U/O PN 205-075-402-13 & -15 ....UHE,UHH,UHV,UHX	EA	1
281	50	AOOOO		97499	205-075-402-3	.CABLE ASSY,DECK DISCONNECT STARTER GENERATOR ....UHE,UHH,UHV,UHX	EA	1
281	51	PAOZZ	5935-00-849-7173	96906	MS3106R36-6P	..CONNECTOR,PLUG,ELEC STBY GEN DISC........UHE,UHH,UHV,UHX	EA	1
281	52	PBOZZ	6145-00-174-4462	81349	MILW7139TYRM1	..WIRE,ELECTRICAL........UHE,UHH,UHV,UHX	FT	V
281	53	PAOZZ	5999-00-806-5620	09922	CYW10	..CAP,ELECTRICAL........UHE,UHH,UHV,UHX	EA	V
281	54	PBOZZ	5940-00-557-4338	96906	MS25036-125	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	4
281	55	PAOZZ	5940-00-115-6007	96906	MS25036-130	..TERMINAL,LUG........UHE,UHH,UHV,UHX	EA	1
281	55A	PAOZZ	5310-00-934-9757	96906	MS35649-282	.NUT,PLAIN,HEXAGON USED ON CHIP DETECTOR.....UHE,UHH,UHV,UHX	EA	1
281	55B	PAOZZ	5310-00-559-0070	96906	MS35333-38	.WASHER,LOCK USED ON CHIP DETECTOR........UHE,UHH,UHV,UHX	EA	1
281	55C	PAOZZ	5310-00-167-0833	88044	AN960-8L	.WASHER,FLAT USED ON CHIP DETECTOR........UHE,UHH,UHV,UHX	EA	1

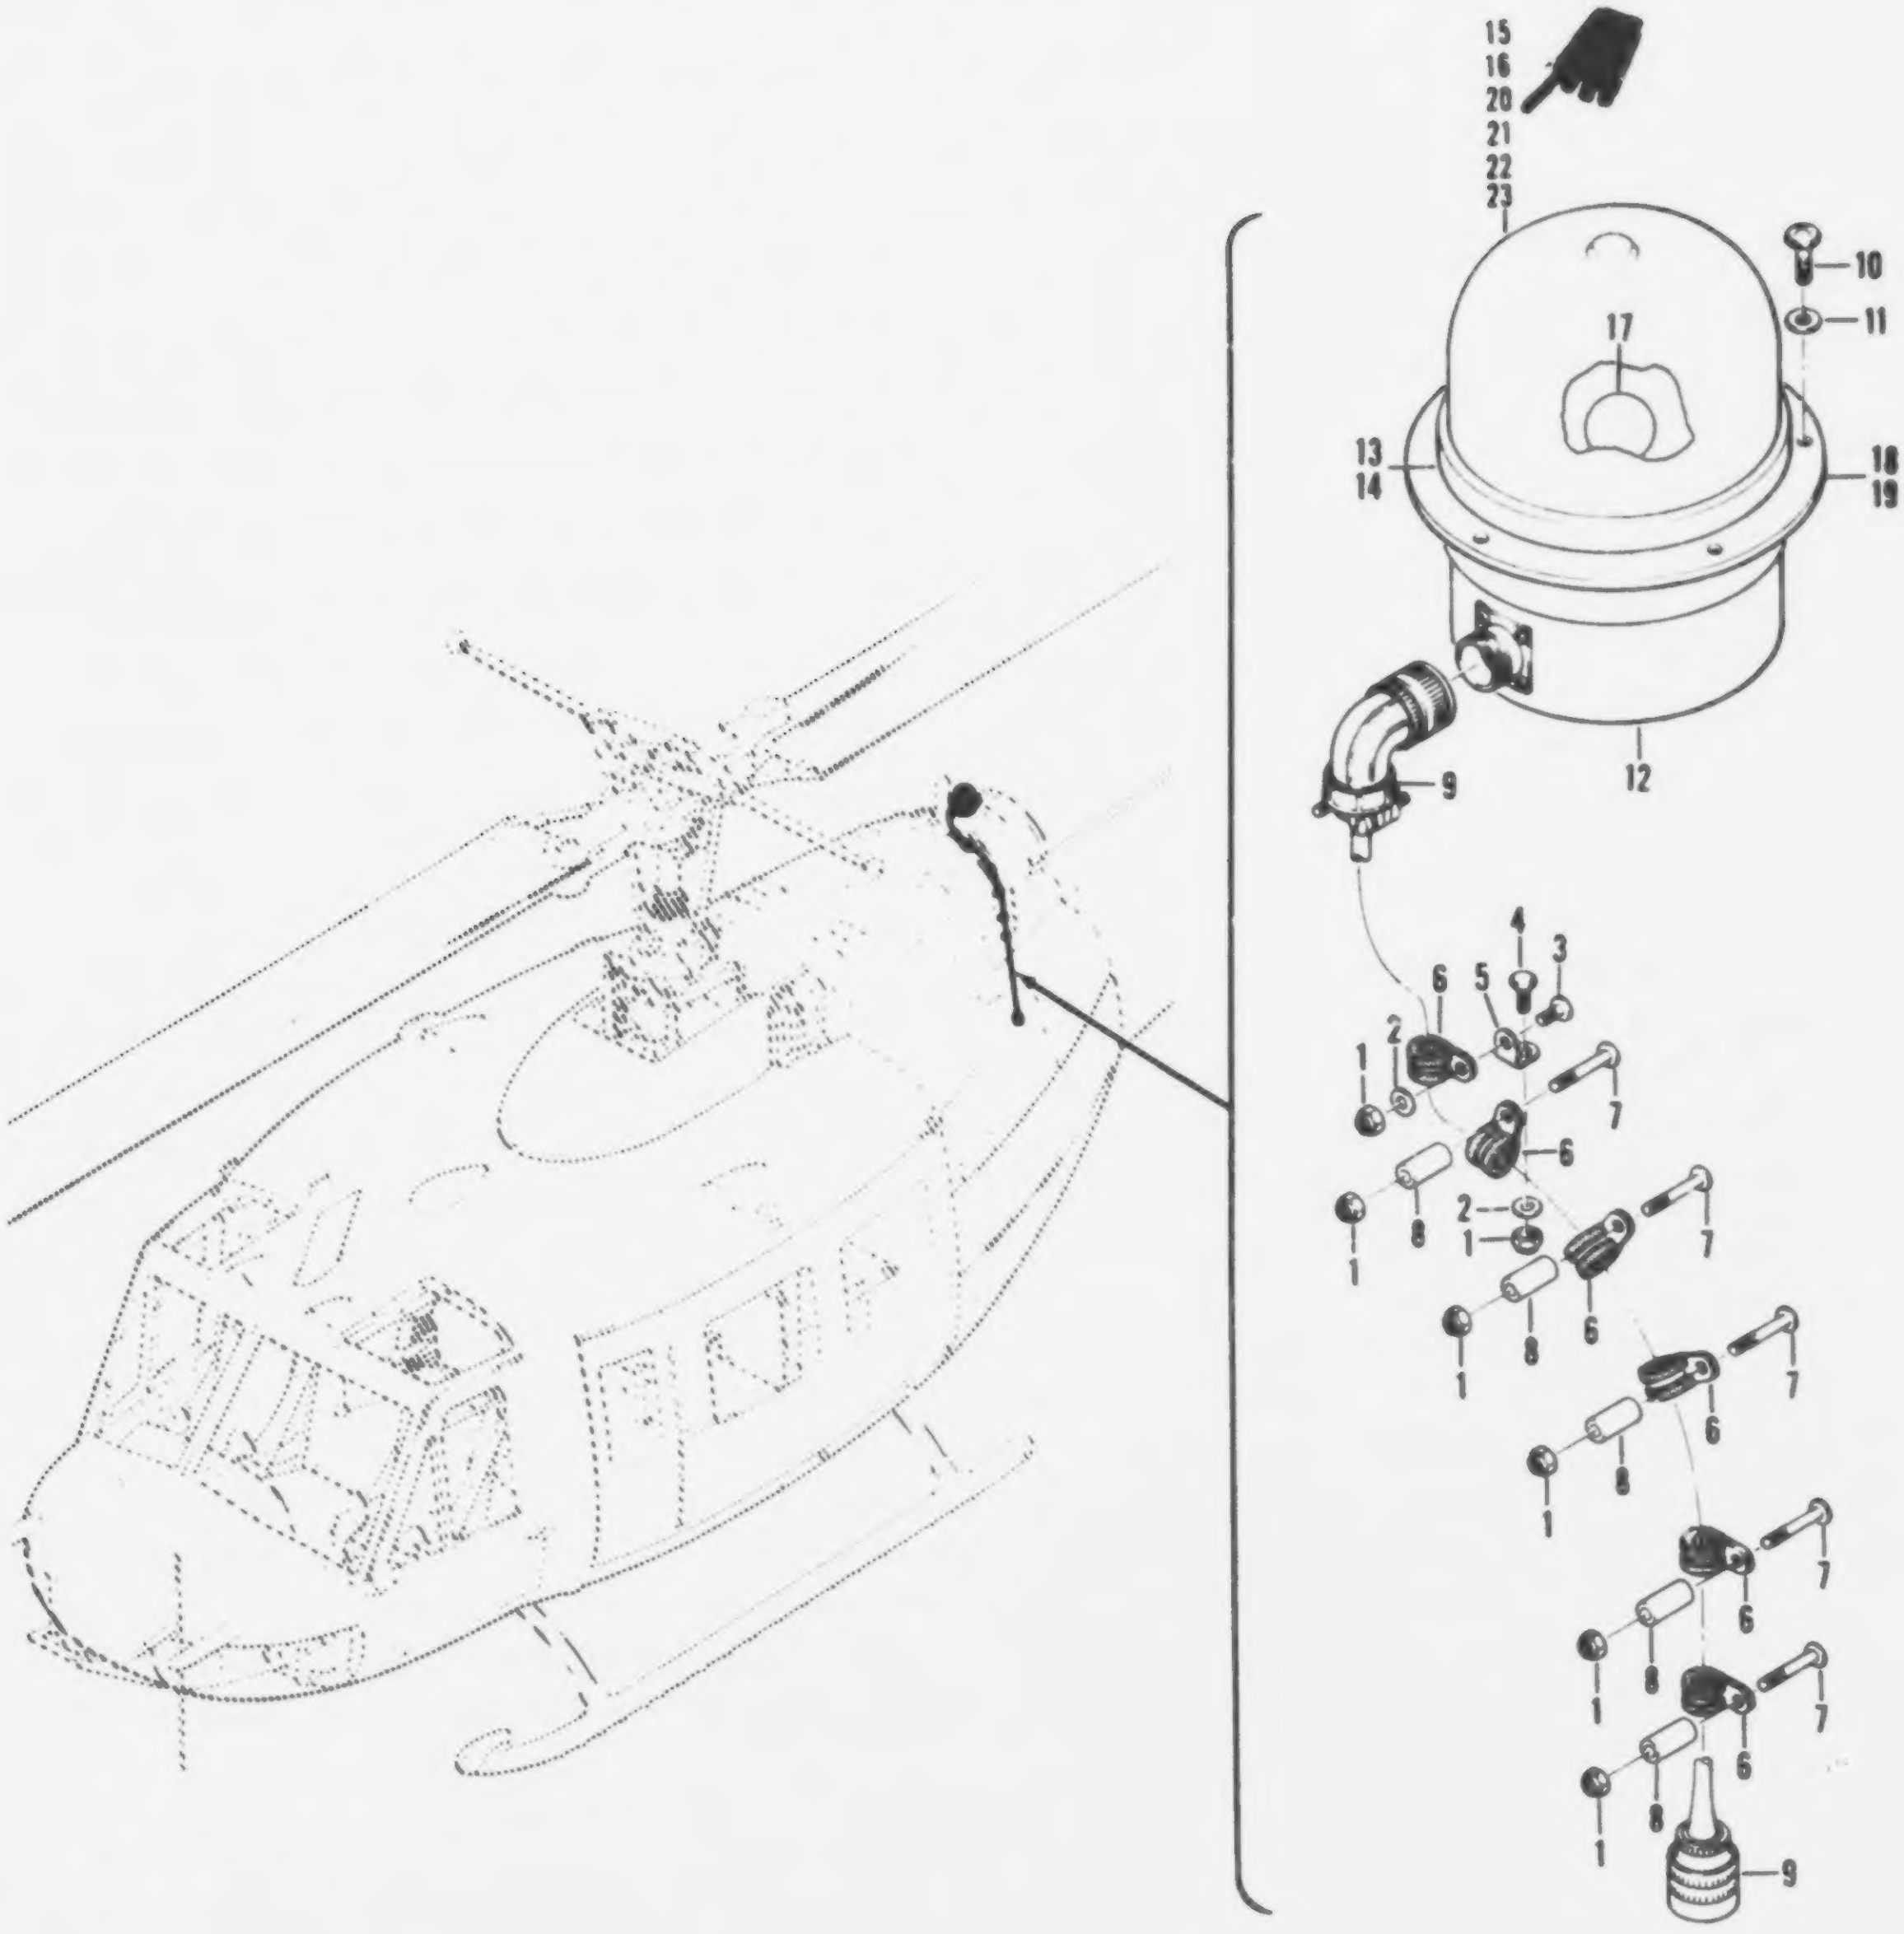
15
16
20
21
22
23
10
11
17
13
14
18
19
12
9
4
3
6
5
2
1
7
6
8
1
2
1
7
1
8
6
7
6
8
1
7
6
1
8
7
6
1
8
1
9

Figure 282. Electrical Installation, Upper Tailpipe Fairing

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
282		XCFZZ		97499	205-075-105-5	ELECTRICAL INSTL SEE FIG.85 FOR NHA	UHE,UHH,UHV,UHX	EA	1
282	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	V
282	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
282	3	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
282	4	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
282	5	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	1
282	6	PAOZZ	5340-00-533-3505	81996	EAB700-3	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	V
282	7	PAOZZ	5305-00-688-2342	03538	N80P1601866	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	5
282	8	PAOZZ	5365-00-662-8788	80205	NAS43DD3-36	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	5
282	9	PAOZZ	1560-00-980-9474	97499	205-075-402-5	.CABLE ASSY	UHE,UHH,UHV,UHX	EA	1
282	10	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	5
282	11	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	5
282	12	PAOOO	6220-00-159-1762	81349	M58085-3	.LIGHT,NAVIGATIONAL, AIRCRAFT RPLS-- 6220-00-475-0217,6220-00-711-1959, 6220-00-783-6178, & 6220-00-882-1647 INTRCH PN 40-0210-5 & D1485, NSN 6220-00-159-1762 6220-00-500-0736 PN G7740-24 (72914) INTRCH PN D1485 & 40-0210-5 NSN 6220-00-159-1762	UHE,UHH,UHV,UHX	EA	1
282	12	PAOOO	6220-00-159-1762	72914	40-0210-5	LIGHT,NAVIGATIONAL,	UHE,UHH,UHV,UHX	EA	REF
282	12	PAOOO	6220-00-159-1762	08553	D1485	LIGHT,NAVIGATIONAL,	UHE,UHH,UHV,UHX	EA	REF
282	13	PAOZZ	6220-00-064-6299	10402	WRM25	..CLAMP U/O PN WRM24 & 40-0057-1	UHE,UHH,UHV,UHX	EA	1
282	14	PAOZZ	5340-00-790-5203	72914	A7635A	..CLAMP,LOOP U/O PN G7740-24, G8400A24 & 40-0110-1	UHE,UHH,UHV,UHX	EA	1
282	15	PAOZZ	6220-00-064-6300	10402	WRM-10	..LENS,LIGHT U/O PN WRM24 & 40-0057-1	UHE,UHH,UHV,UHX	EA	1
282	16	PAOZZ	6220-00-572-3788	72914	A-7942	..LENS,LIGHT U/O PN G7740-24, G8400A24 & 40-0110-1	UHE,UHH,UHV,UHX	EA	1
282	17	PAOZZ	6240-00-564-1084	96906	MS25338-7079	..LAMP,INCANDESCENT U/O PN G8400A24 & G7740-24	UHE,UHH,UHV,UHX	EA	1
282	17	PAOZZ	6240-00-225-5128	10402	WRM45KA	..LAMP U/O PN WRM24	UHE,UHH,UHV,UHX	EA	1
282	17	PAOZZ	6240-00-141-6143	08804	1939	..LAMP U/O PN 40-0057-1,40-0110-1 & 40-0210-5	UHE,UHH,UHV,UHX	EA	1
282	17	PAOZZ	6240-00-155-7924	96906	MS25235-311	..LAMP,INCANDESCENT U/O PN D1485	UHE,UHH,UHV,UHX	EA	1
282	18	PAOZZ	5330-00-064-6298	10402	WRM30	..GASKET U/O PN WRM24 & 40-0057-1	UHE,UHH,UHV,UHX	EA	1
282	19	PAOZZ	5330-00-572-3787	72914	A7632	..GASKET U/O PN G7740-24, G8400A24 & 40-0110-1	UHE,UHH,UHV,UHX	EA	1
282	20	PAOZZ	6220-01-058-3457	08553	D14856	.LENS,LIGHT U/O PN D1485	UHE,UHH,UHV,UHX	EA	1
282	21	PAOZZ	6220-00-141-6145	72914	41-0704-1	.LENS,LIGHT U/O PN 40-0210-5	UHE,UHH,UHV,UHX	EA	1
282	22	PAOZZ	6240-00-361-1411	08108	1939X	.LAMP	UHE,UHH,UHV,UHX	EA	1
282	23	PAOZZ	5330-00-141-6144	72914	41-0578-1	.GASKET U/O PN 40-0210-5	UHE,UHH,UHV,UHX	EA	1

Fig 283 NOT USED

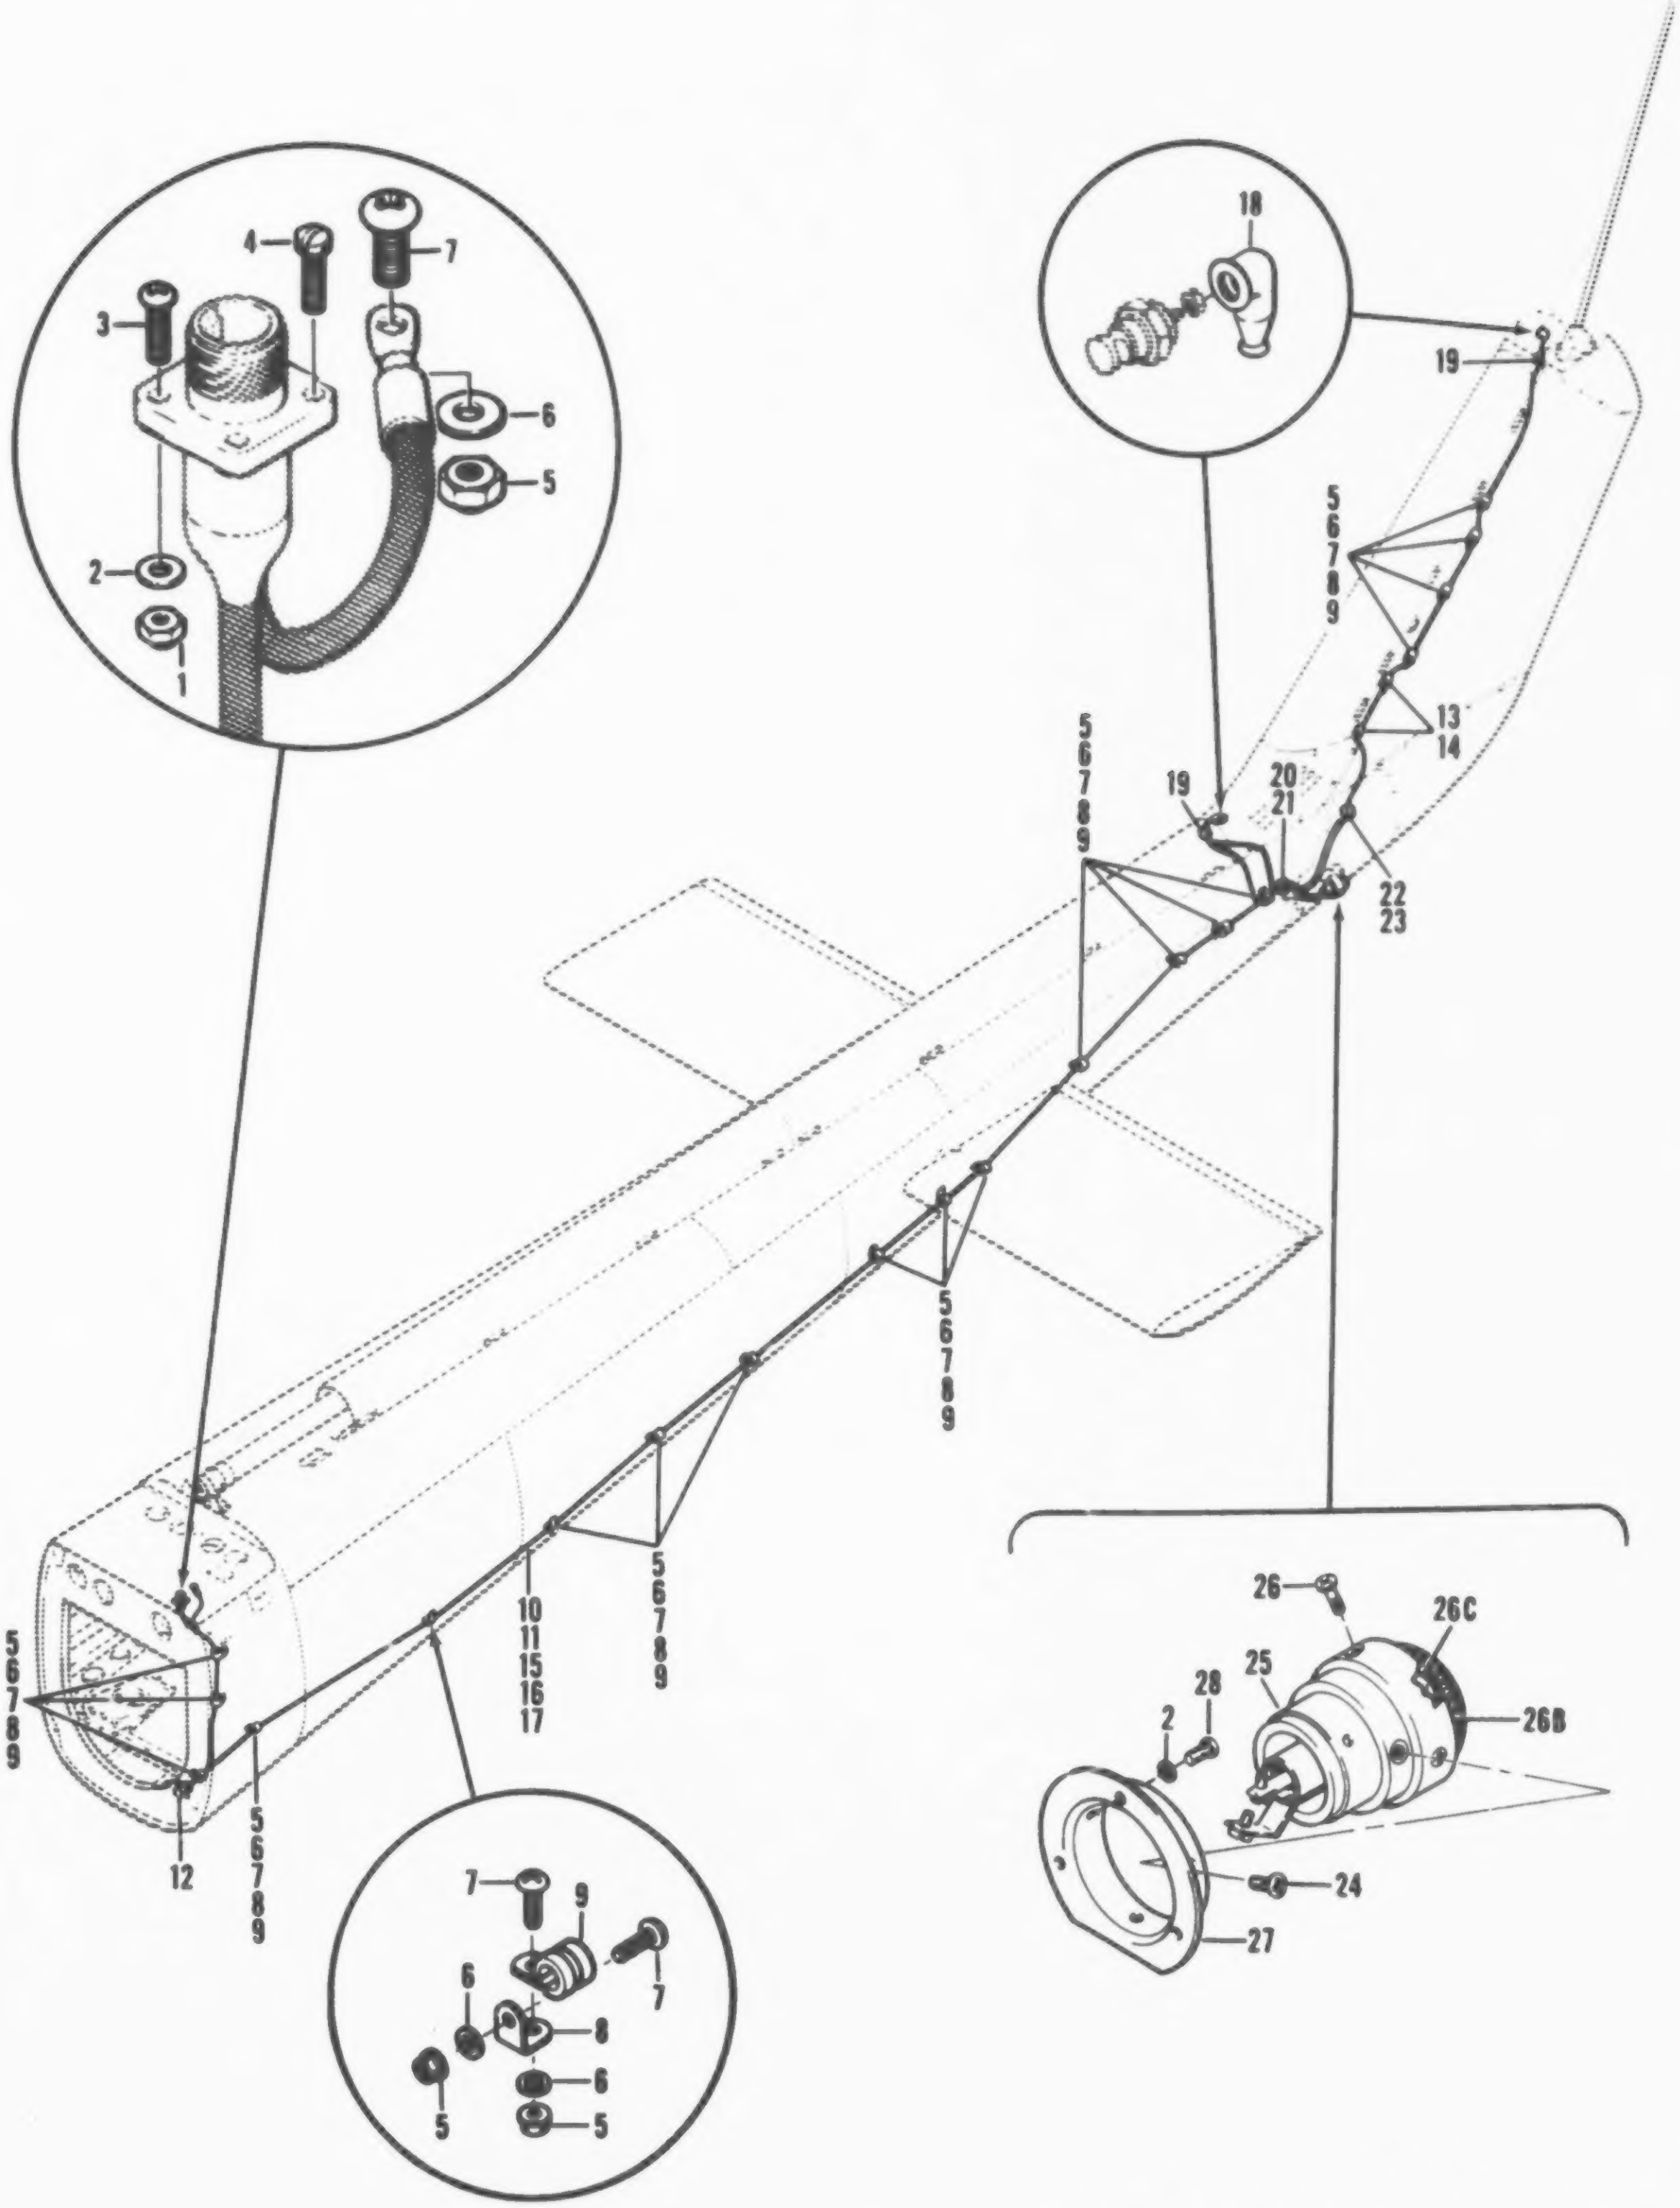
4
7
3
6
5
2
1
18
19
5
6
7
8
9
13
14
5
6
7
8
9
19
20
21
22
23
5
6
7
8
9
5
6
7
8
9
10
11
15
16
17
5
6
7
8
9
12
5
6
7
8
9
26
26C
25
28
2
26B
24
27
7
9
7
6
8
6
5
5

Figure 284. Electrical Installation, Aft Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
284		XCFZZ		97499	204-075-062-5	ELECTRICAL INSTL AFT SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.8 FOR NHA .... UHC,UHM	EA	1
284		XCFZZ		97499	204-075-077-1	ELECTRICAL INSTL AFT SECTION USBL EFF 65-9416 & SUBSEQUENT SEE FIG.8 FOR NHA .... UHC,UHM	EA	1
284	1	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHC,UHM	EA	8
284	2	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT .... UHC,UHM	EA	14
284	3	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE .... UHC,UHM	EA	6
284	4	XDOZZ		88044	AN500A4-8	.SCREW,MACHINE .... UHC,UHM	EA	2
284	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHC,UHM	EA	V
284	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHC,UHM	EA	V
284	7	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHC,UHM	EA	V
284	8	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHC,UHM	EA	15
284	9	PAOZZ	5340-00-990-9297	81996	EAB70002	.CLAMP,LOOP .... UHC,UHM	EA	17
284	10	AOOOZ	1560-00-911-9987	97499	204-175-430-5	.CABLE ASSY, TAIL LIGHT U/O PN 204-075-062-5 .... UHC,UHM	EA	1
284	11	AOOOZ	1560-00-912-1165	97499	204-175-426-3	.CABLE ASSY, TAIL LIGHT U/O PN 204-075-077-1 .... UHC,UHM	EA	1
284	12	PAOZZ	5935-00-052-6853	96906	MS3100R10SL4P	..CONNECTOR,RECEPT ELECTRICAL,TAIL & ANTI COLL LT DISC .... UHC,UHM	EA	2
284	13	PAOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC .... UHC,UHM	EA	2
284	14	PAOZZ	5365-00-598-5282	96906	MS3420-4	..BUSHING,RUBBER .... UHC,UHM	EA	2
284	15	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHC,UHM	EA	2
284	16	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG .... UHC,UHM	EA	9
284	17	MOOZZ	5970-00-195-9548	97499	130-005-6-4	..INSULATION SLEEVING .... UHC,UHM	EA	8
284	18	PAOZZ	5975-00-553-6995	96906	MS25171-1S	.CABLE NIPPLE .... UHC,UHM	EA	2
284	19	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC .... UHC,UHM	EA	2
284	20	PAOZZ	5325-00-174-5316	96906	MS35489-2	.GROMMET,NONMETALLIC .... UHC,UHM	EA	1
284	21	MOOZZ		97499	85T4-6-16	.TUBE INSULATION U/O PN 204-075-077-1 .... UHC,UHM	EA	1
284	22	PAOZZ	5325-00-174-5314	96906	MS35489-5	.GROMMET,NONMETALLIC .... UHC,UHM	EA	2
284	23	PAOZZ	5325-00-286-6047	96906	MS35489-1	.GROMMET,NONMETALLIC U/O PN 204-075-077-1 .... UHC,UHM	EA	1
284	24	PAOZZ	5305-00-958-2918	96906	MS24693C26	.SCREW,MACHINE .... UHC,UHM	EA	6
284	25	PAOOO	6220-00-828-4209	72914	30-0158-7	.TAILLIGHT ASSEMBLY .... UHC,UHM	EA	2
284	26	PAOZZ	5305-00-958-2918	96906	MS24693C26	..SCREW,MACHINE .... UHC,UHM	EA	3
284	26B	PAOZZ	6220-00-003-5311	72914	12738-123	..COVER ASSY .... UHC,UHM	EA	1
284	26C	PAOZZ	6240-00-044-6914	96906	MS25232-1683	..LAMP,INCANDESCENT .... UHC,UHM	EA	1
284	27	PAOZZ	6250-00-912-8358	97499	204-075-633-1	.ADAPTER,LAMPHOLDER .... UHC,UHM	EA	2
284	28	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE .... UHC,UHM	EA	6

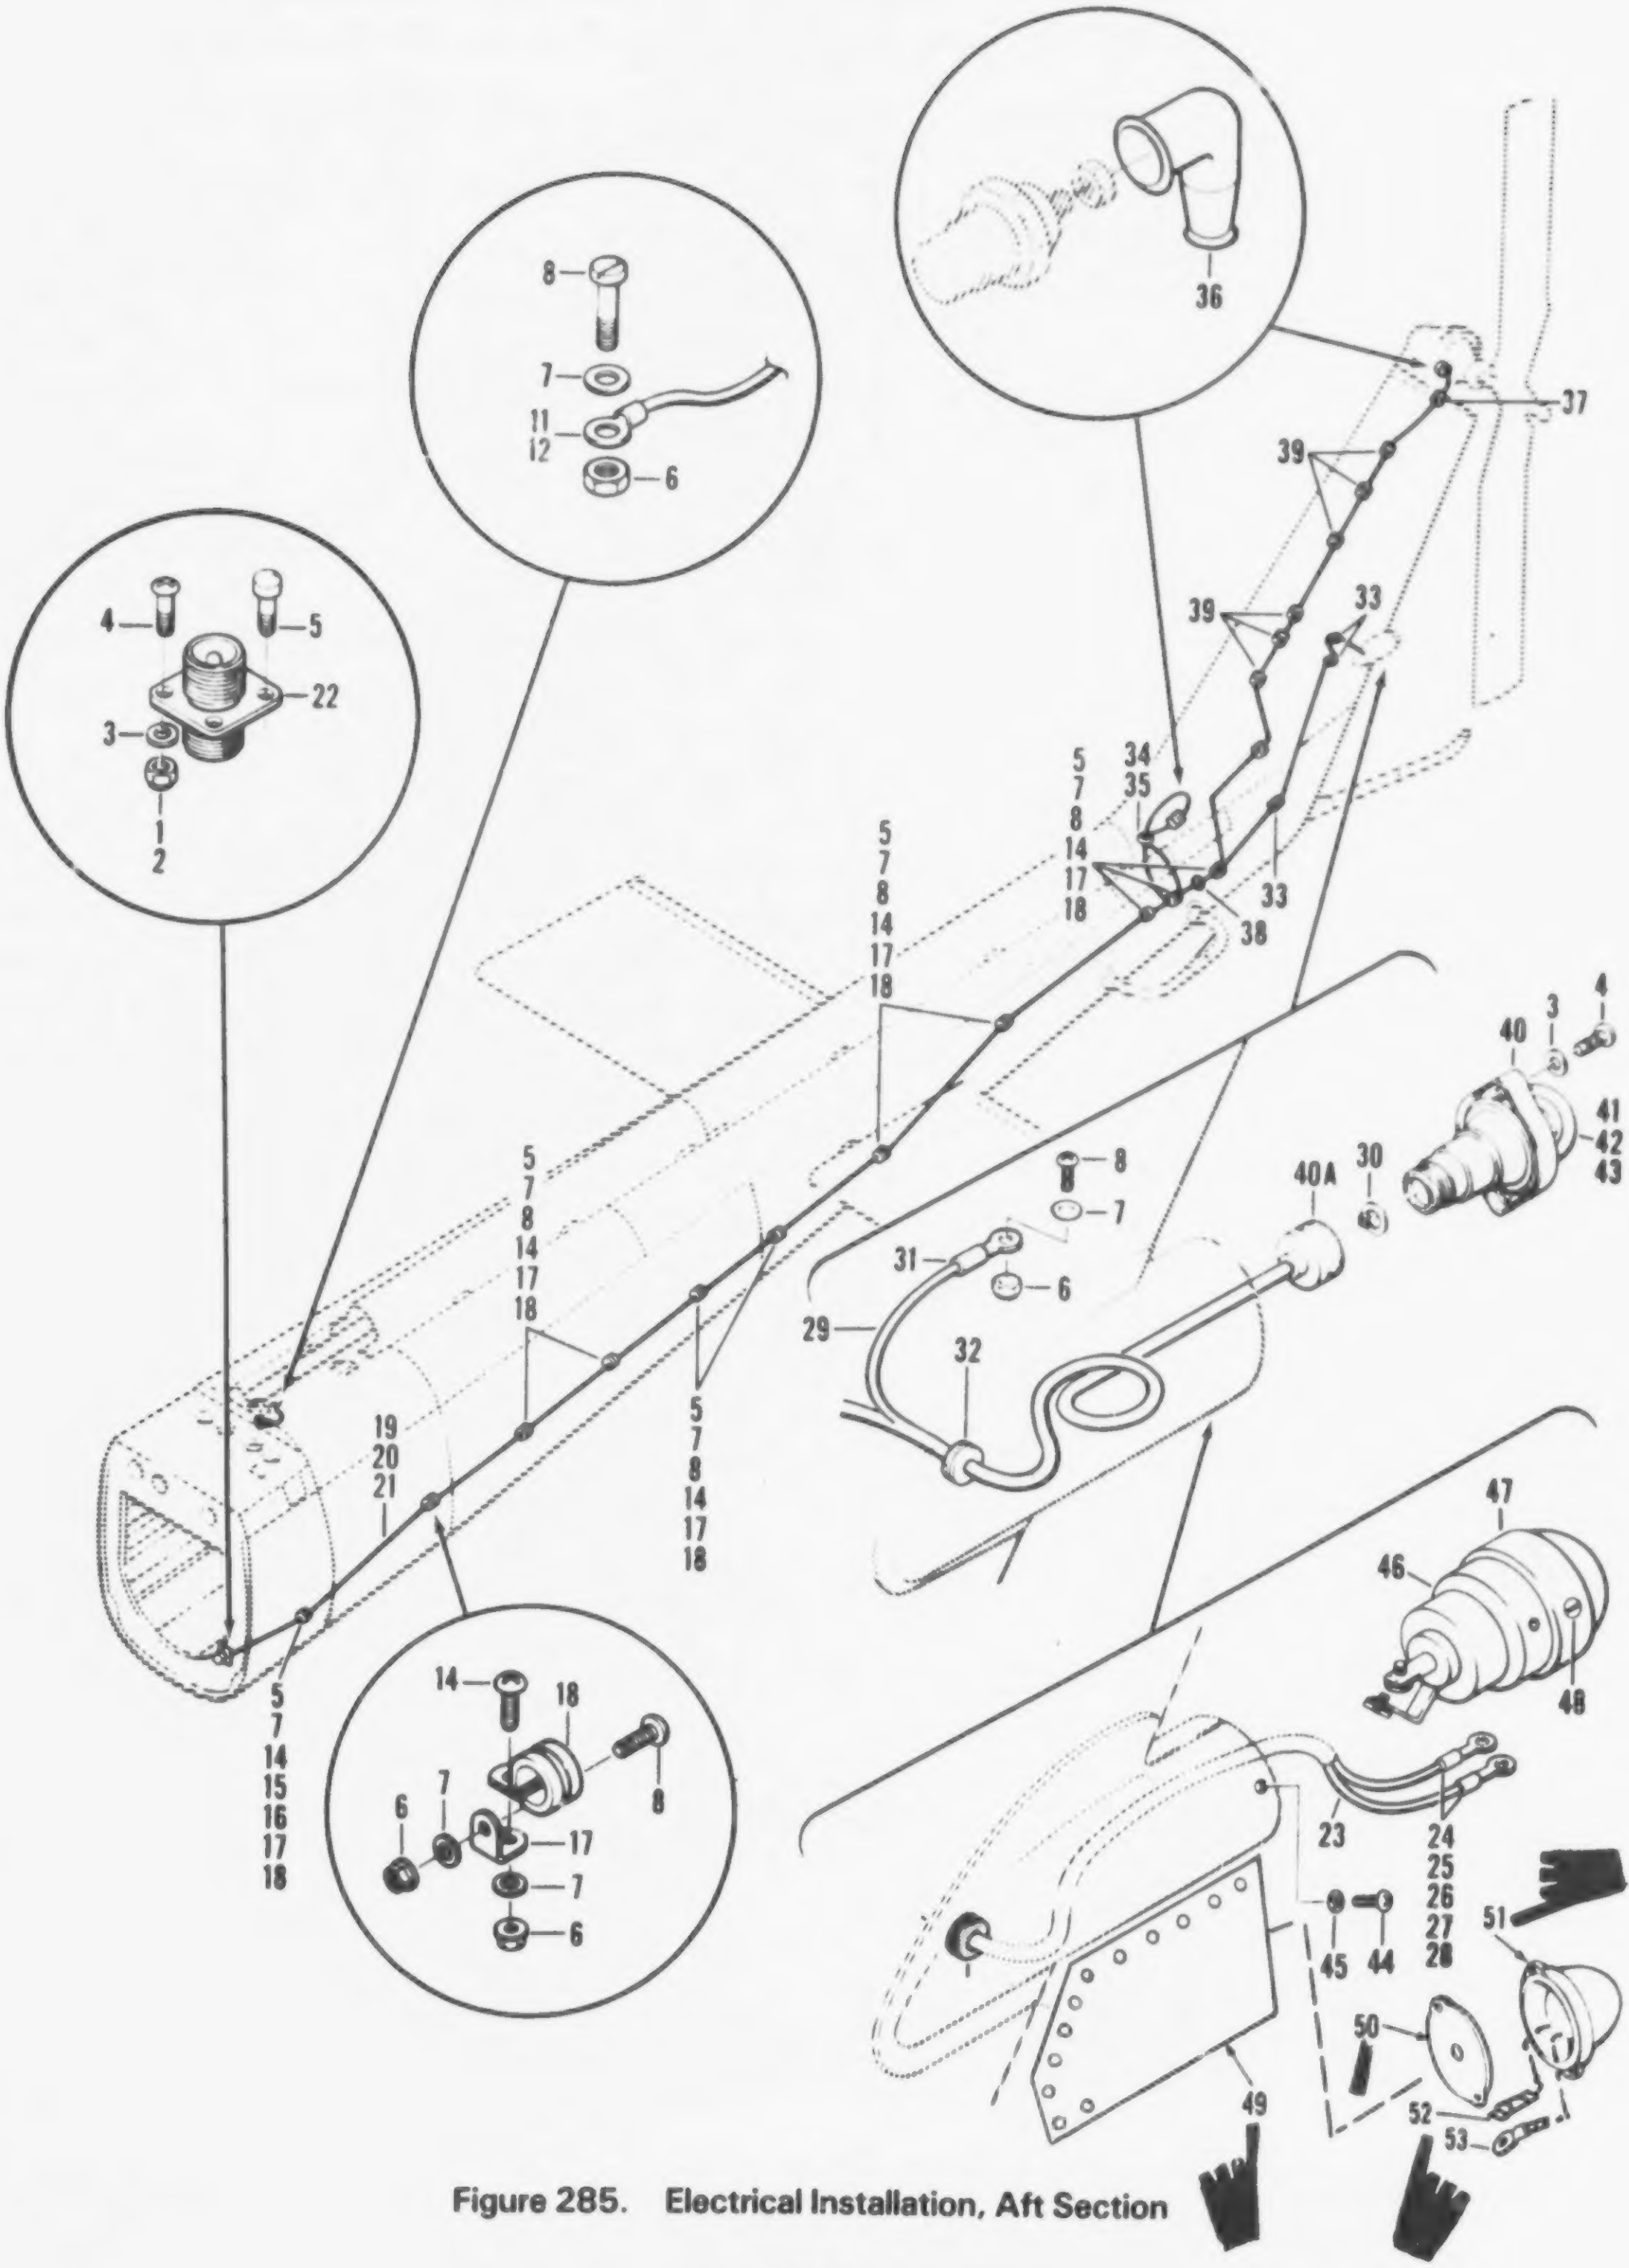
8
7
11
12
6
36
37
39
39
33
4
5
22
3
1
2
5
7
8
14
17
18
34
35
5
7
8
14
17
18
33
38
5
7
8
14
17
18
40
3
4
41
42
43
8
7
40A
30
31
6
29
32
19
20
21
5
7
8
14
17
18
47
46
48
5
7
14
15
16
17
18
14
18
8
6
7
17
7
6
23
24
25
26
27
28
45
44
51
50
49
52
53

Figure 285. Electrical Installation, Aft Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
285		XCFZZ		97499	205-075-005-1	ELECTRICAL INSTL AFT SECTION USBL EFF 62-2106 THRU 63-8859 SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
285		XCFZZ		97499	205-075-029-1	ELECTRICAL INSTL AFT SECTION USBL EFF 63-12956 THRU 63-13002 SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
285		XCFZZ		97499	205-075-015-1	ELECTRICAL INSTL AFT SECTION USBL EFF 64-13492 THRU 64-13901 SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
285		XCFZZ		97499	205-075-020-1	ELECTRICAL INSTL AFT SECTION USBL EFF 65-9565 THRU 66-17143 SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
285		XCFZZ		97499	205-075-020-13	ELECTRICAL INSTL AFT SECTION USBL EFF 67-17145 & SUBSEQUENT SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
285	1	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE HEXAGON .... UHE,UHH,UHV,UHX	EA	4
285	2	PAOZZ	5310-00-818-1654	19315	100-0SS	.NUT,PLAIN,HEXAGON U/O PN 205-075-029-1...... UHE,UHH,UHV,UHX	EA	1
285	3	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	V
285	4	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	3
285	5	PBOZZ	5305-00-614-0261	96906	MS35265-19	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
285	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	V
285	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	24
285	8	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	3
285	11	XDOZZ		96906	MS25083-2BB5	.LEAD,ELECTRICAL U/O PN 205-075-015-1........ UHE,UHH,UHV,UHX	EA	1
285	12	PAOZZ	6150-00-928-6244	97499	120-050-10	LEAD,ELECTRICAL U/O PN 205-075-015-1........ UHE,UHH,UHV,UHX	EA	1
285	14	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	8
285	15	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
285	16	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
285	17	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHE,UHH,UHV,UHX	EA	15
285	18	PAOZZ	5340-00-990-9297	81996	EAB700D2	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	17
285	19	AOOOZ	1560-00-981-3099	97499	205-075-400-1	.CABLE ASSY, TAILLIGHT DISCONNECT U/O PN 205-075-005-1 .... UHE,UHH,UHV,UHX	EA	1
285	20	AOOOZ	6145-00-756-5508	97499	205-075-422-3	.CABLE ASSY, TAILLIGHT DISCONNECT U/O PN 205-075-029-1 & 205-075-015-1.............................. UHE,UHH,UHV,UHX	EA	1
285	21	AOOOZ	6150-00-924-0456	97499	205-075-432-11	.CABLE ASSY, TAILLIGHT DISCONNECT U/O PN 205-075-020-1 & -13 .... UHE,UHH,UHV,UHX	EA	1
285	22	PAOZZ	5935-00-814-6724	96906	MS3100R10SL3P	..CONNECTOR,RECEPTACL ELECTRICAL,TAIL LIGHT DISC .... UHE,UHH,UHV,UHX	EA	1
285	23	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR U/O PN 205-075-400-1...... UHE,UHH,UHV,UHX	EA	1
285	24	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-422-3.......... UHE,UHH,UHV,UHX	EA	1
285	25	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG U/O PN 205-075-432-11......... UHE,UHH,UHV,UHX	EA	2
285	26	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-432-11......... UHE,UHH,UHV,UHX	EA	2
285	27	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG U/O PN 205-075-422-3.......... UHE,UHH,UHV,UHX	EA	1
285	28	XDOZZ		97499	85T4-7-2	..INSULATION TUBE U/O PN 205-075-422-3....... UHE,UHH,UHV,UHX	FT	1
285	29	AOOOZ	1560-00-981-3093	97499	205-075-400-3	.CABLE ASSY, TAILLIGHT U/O PN 205-075-005-1 .... UHE,UHH,UHV,UHX	EA	1
285	30	PBOZZ	5975-00-212-6246	88044	AN3111-2	..RING,ELECTRICAL BONDING.................... UHE,UHH,UHV,UHX	EA	1
285	31	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG............................... UHE,UHH,UHV,UHX	EA	1
285	32	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC......................... UHE,UHH,UHV,UHX	EA	1
285	33	PAOZZ	5325-00-641-2792	96906	MS35489-60	.GROMMET,NONMETALLIC......................... UHE,UHH,UHV,UHX	EA	3
285	34	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC......................... UHE,UHH,UHV,UHX	EA	1
285	35	MOOZZ		97499	130-005-6-12	.INSULATION SLEEVING USBL EFF 67-17145 & SUBSEQUENT	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						.........:...UHE,UHH,UHV,UHX		
285	36	PAOZZ	5975-00-553-6995	96906	MS25171-1S	.CABLE NIPPLE.................................UHE,UHH,UHV,UHX	EA	2
285	37	PAOZZ	5325-00-286-6047	96906	MS35489-1	.GROMMET,NONMETALLIC.........................UHE,UHH,UHV,UHX	EA	2
285	38	PAOZZ	5325-00-276-6228	96906	MS35489-9	.GROMMET,NONMETALLIC.........................UHE,UHH,UHV,UHX	EA	1
285	39	PAOZZ	5340-00-990-9297	81996	EAB700D2	.CLAMP,LOOP.......................................UHE,UHH,UHV,UHX	EA	6
285	40	PAOOO	6220-00-548-0313	96906	MS25219-11	.LIGHT,NAVIGATION U/O PN 205-075-006-1.......UHE,UHH,UHV,UHX	EA	1
285	40A	PAOZZ	5975-00-578-3497	88044	AN3054-5	..NUT,COUPLING,ELEC CONDUIT.................UHE,UHH,UHV,UHX	EA	1
285	41	PAOZZ	6220-00-504-2021	96906	MS23006-2	..LENS,AIRCRAFT NAVIGATIONAL LIGHT..........UHE,UHH,UHV,UHX	EA	1
285	42	PAOZZ	5330-00-820-5600	88044	AN3119-2	..GASKET...UHE,UHH,UHV,UHX	EA	1
285	43	PAOZZ	6240-00-044-6914	96906	MS25232-1683	..LAMP,INCANDESCENT..........................UHE,UHH,UHV,UHX	EA	1
285	44	PAOZZ	5306-00-889-3000	96906	MS35206-230	.SCREW,MACHINE.................................UHE,UHH,UHV,UHX	EA	3
285	45	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT.......................................UHE,UHH,UHV,UHX	EA	3
285	46	PAOOO	6220-00-828-4209	72914	30-0158-7	.TAILLIGHT ASSEMBLY U/O PN 205-075-029-1, 205-075-015-1,& 205-075-020-1.................................UHE,UHH,UHV,UHX	EA	2
285	47	PAOZZ	6220-00-003-5311	72914	12738-123	..COVER,ASSY.......................................UHE,UHH,UHV,UHX	EA	1
285	48	PAOZZ	5306-00-958-2918	96906	MS24693C26	..SCREW,MACHINE.................................UHE,UHH,UHV,UHX	EA	3
285	49	PBOZZ	1680-01-230-0536	81996	EGD-0947-3	LIGHT,MOUNT,IR.....................................UHE,UHH,UHV,UHX	EA	1
285	50	PAOZZ	1680-01-230-0528	81996	EGD-0963-1	GASKET...UHE,UHH,UHV,UHX	EA	1
285	51	PAOZZ	1680-01-230-0527	81996	EGD-0930-3	LIGHT,NAV.,IR,NVG.................................UHE,UHH,UHV,HUX	EA	1
285	52	PAOZZ	5940-01-079-1547	96906	M7928/5-3	SPLICE,CONDUCTOR...............................UHE,UHH,UHV,UHX	EA	1
285	53	PAOZZ	5940-00-143-4771	96906	MS25036-103	LUG,TERMINAL.......................................UHE,UHH,UHV,HUX	EA	1

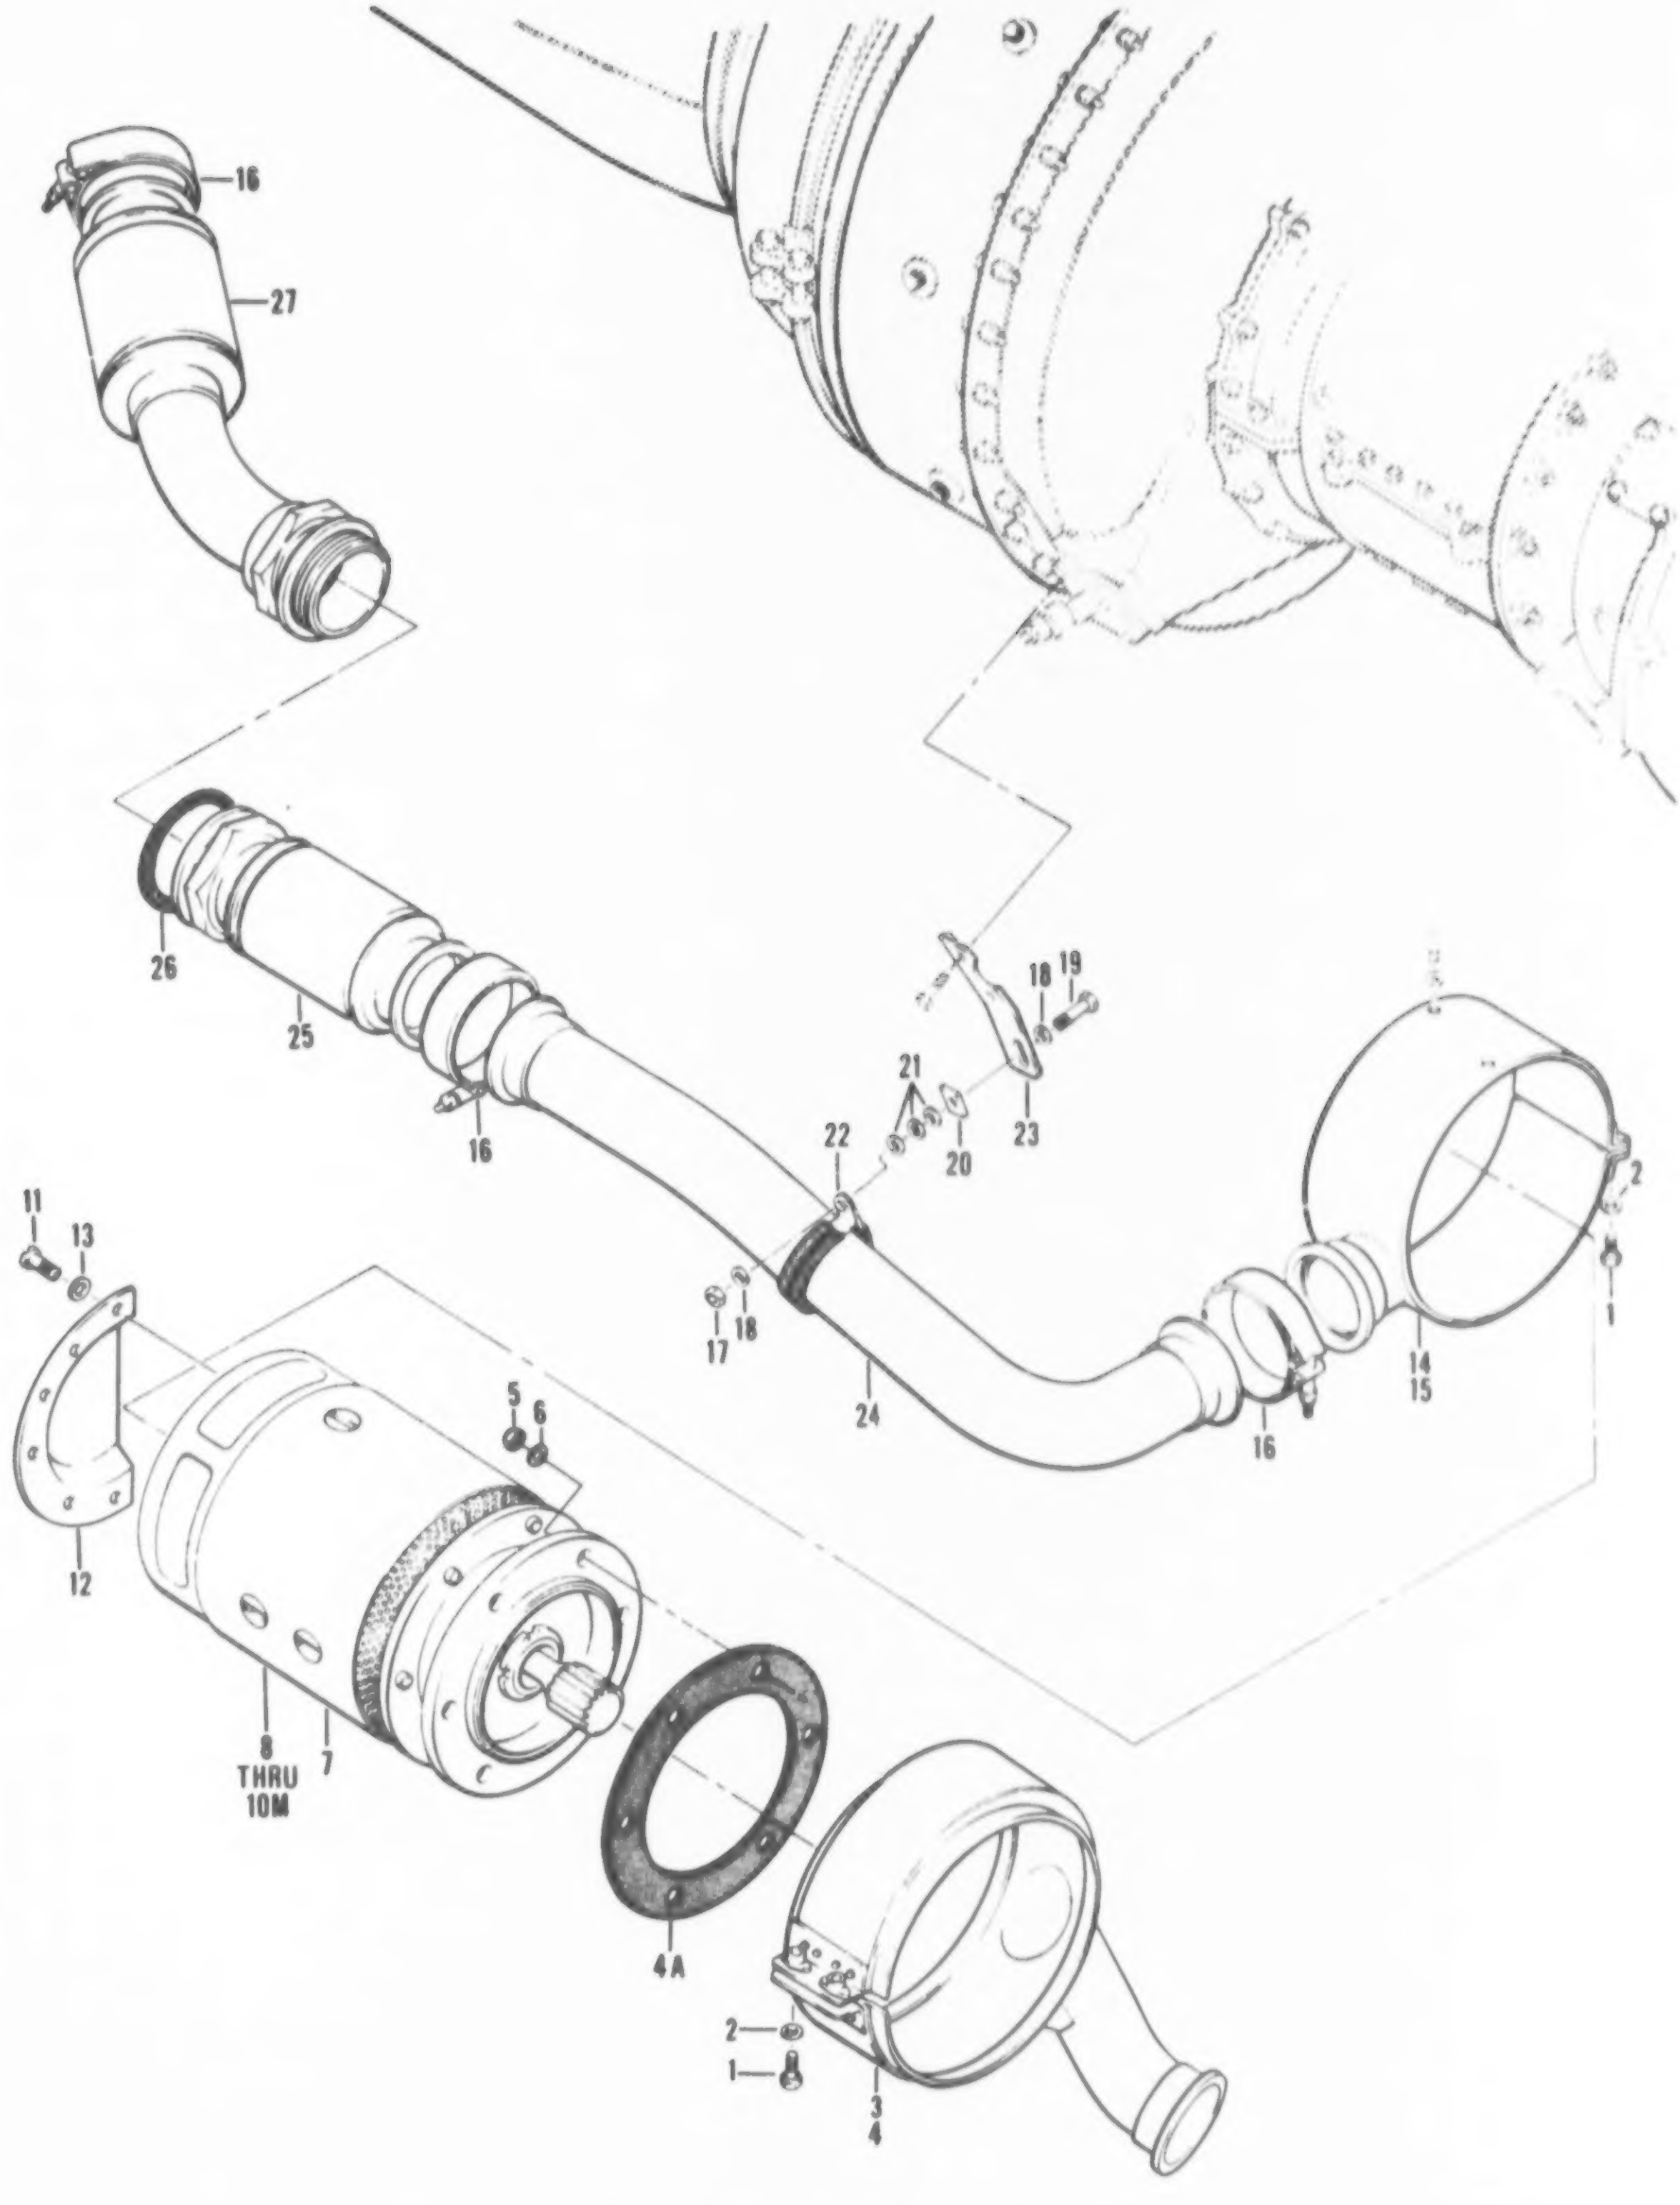
16
27
26
25
16
18
19
21
22
20
23
11
13
2
1
17
18
24
14
15
16
5
6
12
8
THRU
10M
7
4A
2
1
3
4

Figure 286. Starter Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
286		XCFZZ		97499	204-060-457-1	STARTER INSTL USBL EFF UH-1C 64-14101 THRU 64-14191 SEE FIG.97 FOR NHA .... UHB,UHC,UHM	EA	1
286		XCFZZ		97499	204-060-457-5	STARTER INSTL USBL EFF 65-9416 THRU 65-12772 SEE FIG.97 FOR NHA .... UHC,UHM	EA	1
286		XCFZZ		97499	204-060-457-9	STARTER INSTL USBL EFF 66-492 & SUBSEQUENT SEE FIG.97 FOR NHA .... UHC,UHM	EA	1
286	1	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE U/O PN 206-060-457-1,-5 ONLY ...... UHB,UHC,UHM	EA	V
286	2	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT U/O PN 204-060-457-1,-5 ONLY ...... UHB,UHC,UHM	EA	2
286	3	PAOZZ	1560-00-831-1452	97499	204-060-468-1	.SHROUD ASSY U/O PN 204-060-457-1,-5 ONLY ...... UHB,UHC,UHM	EA	1
286	4	PAOZZ	6115-00-927-7360	97499	204-060-200-7	.ADAPTER,GENERATOR U/W 300 AMP STARTER GENERATOR ONLY .... UHC,UHM	EA	1
286	4A	PAOZZ	5330-00-654-8932	91547	1-080-026-01	.GASKET .... UHB,UHC,UHM	EA	1
286	5	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ...... UHB,UHC,UHM	EA	6
286	6	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT .... UHB,UHC,UHM	EA	6
286	7	PAODD	2925-00-585-9861	81349	STU6A	.STARTER,GENERATOR ENGINE U/O PN 204-060-457-1,-5 ONLY .... UHB,UHC	EA	1
286	7	PAODD	2925-00-684-2655	08484	VG700	.STARTER,GENERATOR ENGINE SEE TM55-2925-221-40 FOR BREAKDOWN .... UHB,UHC	EA	1
286	7	PAODD	2925-00-690-5980	31435	23031-004	.STARTER,GENERATOR ENGINE .... UHB,UHC	EA	1
286	7	PAOFF	2925-00-878-1136	97499	204-060-200-1	.STARTER,GENERATOR ENGINE U/O PN 204-060-457-9 ...... UHC,UHM	EA	1
286	7	PAOFF	2925-00-878-0788	31435	23064-001	.STARTER,GENERATOR ENGINE SEE TM55-2925-240-40 FOR BREAKDOWN .... UHC,UHM	EA	1
286	7	PAOFF	2925-00-878-1136	83298	30E20-61A	.STARTER,GENERATOR ENGINE SEE TM55-2925-240-40 FOR BREAKDOWN .... UHC,UHM	EA	1
286	8	PAOZZ	5310-00-167-0821	88044	AN960-616	..WASHER,FLAT .... UHB,UHC,UHM	EA	3
286	9	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ..... UHB,UHC,UHM	EA	2
286	10	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT .... UHB,UHC,UHM	EA	2
286	10A	PBFZZ	2925-00-763-0863	31435	23064-1150	..COVER,ACCESS U/O PN 23064-001 .... UHB,UHC,UHM	EA	1
286	10B	PAFZZ	5305-00-150-9209	88044	AN502-10-14	..SCREW,MACHINE U/O PN 23064-001 .... UHB,UHC,UHM	EA	1
286	10C	PAFZZ	5977-00-143-6774	31435	30300-1282	..BRUSH,ELECTRICAL U/O PN 23064-001 .... UHB,UHC,UHM	EA	4
286	10D	PAFZZ	5305-00-143-3289	31435	05-340201	..SCREW,MACHINE U/O PN 23064-001 .... UHB,UHC,UHM	EA	4
286	10E	PAOZZ	5305-00-988-7601	96906	MS16995-25	..SCREW,MACHINE U/O PN 23064-001 .... UHC,UHM	EA	8
286	10F	PBFZZ	9999-00-247-0215	83298	1544776	..COVER,ACCESS U/O PN 30E20-61A .... UHB,UHC,UHM	EA	1
286	10G	PAFZZ	5305-00-912-4832	96906	MS35276-268	..SCREW,MACHINE U/O PN 30E20-61A .... UHB,UHC,UHM	EA	1
286	10H	PAFZZ	5310-00-439-4711	06840	833656	..NUT,PLAIN,SQUARE U/O PN 30E20-61A .... UHB,UHC,UHM	EA	1
286	10J	PAFZZ	5977-00-681-1431	83298	1110489	..BRUSH,ELECTRICAL CO U/O PN 30E20-61A .... UHB,UHC,UHM	EA	8
286	10K	PAFZZ	5306-00-523-8866	06840	890066-2	..BOLT,INTERNAL WRENC U/O PN 30E20-61A .... UHB,UHC,UHM	EA	8
286	10L	PAFZZ	5310-00-582-5965	96906	MS35338-44	..WASHER,LOCK U/O PN 30E20-61A .... UHB,UHC,UHM	EA	8
286	10M	PAOZZ	5305-00-959-2689	96906	MS35191-279	..SCREW,MACHINE U/O PN 30E20-61A .... UHC,UHM	EA	6
286	11	PAOZZ	5305-00-271-5230	88044	AN502-10-4	.SCREW,MACHINE U/O PN 204-060-457-1,5 ONLY ...... UHB,UHC,UHM	EA	6
286	12	PAOZZ	2925-00-739-2613	97499	204-060-472-1	.COVER,ASSY U/O PN 204-060-457-1,5 ONLY .... UHB,UHC,UHM	EA	1
286	13	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-060-457-1,5 ONLY .... UHB,UHC,UHM	EA	6
286	14	PAOZZ	1560-00-873-2274	97499	204-060-419-1	.SHROUD ASSY U/O PN 204-060-457-1,5 ONLY .... UHB,UHC,UHM	EA	1
286	15	PAOZZ	2925-00-927-7358	97499	204-061-413-1	.SHROUD ASSY U/W 300 AMP STARTER GENERATOR ONLY ...... UHC,UHM	EA	1
286	16	PAOZZ	5340-00-810-1360	98625	24540-200	.COUPLING,CLAMP .... UHB,UHC,UHM	EA	3
286	17	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ...... UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
286	18	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT....UHB,UHC,UHM	EA	2
286	19	PAOZZ	5306-00-182-2069	88044	AN3H6A	.BOLT,MACHINE....UHB,UHC,UHM	EA	1
286	20	PAOZZ	1560-00-731-8970	97499	204-060-467-1	.SPACER....UHB,UHC,UHM	EA	1
286	21	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT....UHB,UHC,UHM	EA	3
286	22	PAOZZ	5340-00-548-8035	81996	EAB700-32	.CLAMP,SUPPORT....UHB,UHC,UHM	EA	1
286	23	PAOZZ	1560-00-731-8969	97499	204-060-464-1	.BRACKET....UHB,UHC,UHM	EA	1
286	24	PAOZZ	4710-00-831-1451	97499	204-060-461-1	.DUCT ASSEMBLY....UHB,UHC,UHM	EA	1
286	25	PAOZZ	1560-00-831-1449	97499	204-060-459-1	.TUBE ASSY....UHB,UHC,UHM	EA	1
286	26	PAOZZ	5330-00-839-8268	97499	204-060-463-1	.GASKET....UHB,UHC,UHM	EA	1
286	27	PAOZZ	1560-00-831-1450	97499	204-060-460-1	.TUBE ASSY....UHB,UHC,UHM	EA	1
286		PADZZ	2925-00-709-8749	08484	VG1163	PARTS KIT,OVERHAUL U/D PN VG700 SEE FUNCTIONAL GROUP 50 FOR COMPONENTS....UHB,UHC,UHM	EA	1

Fig. 287 NOT USED

best copy available

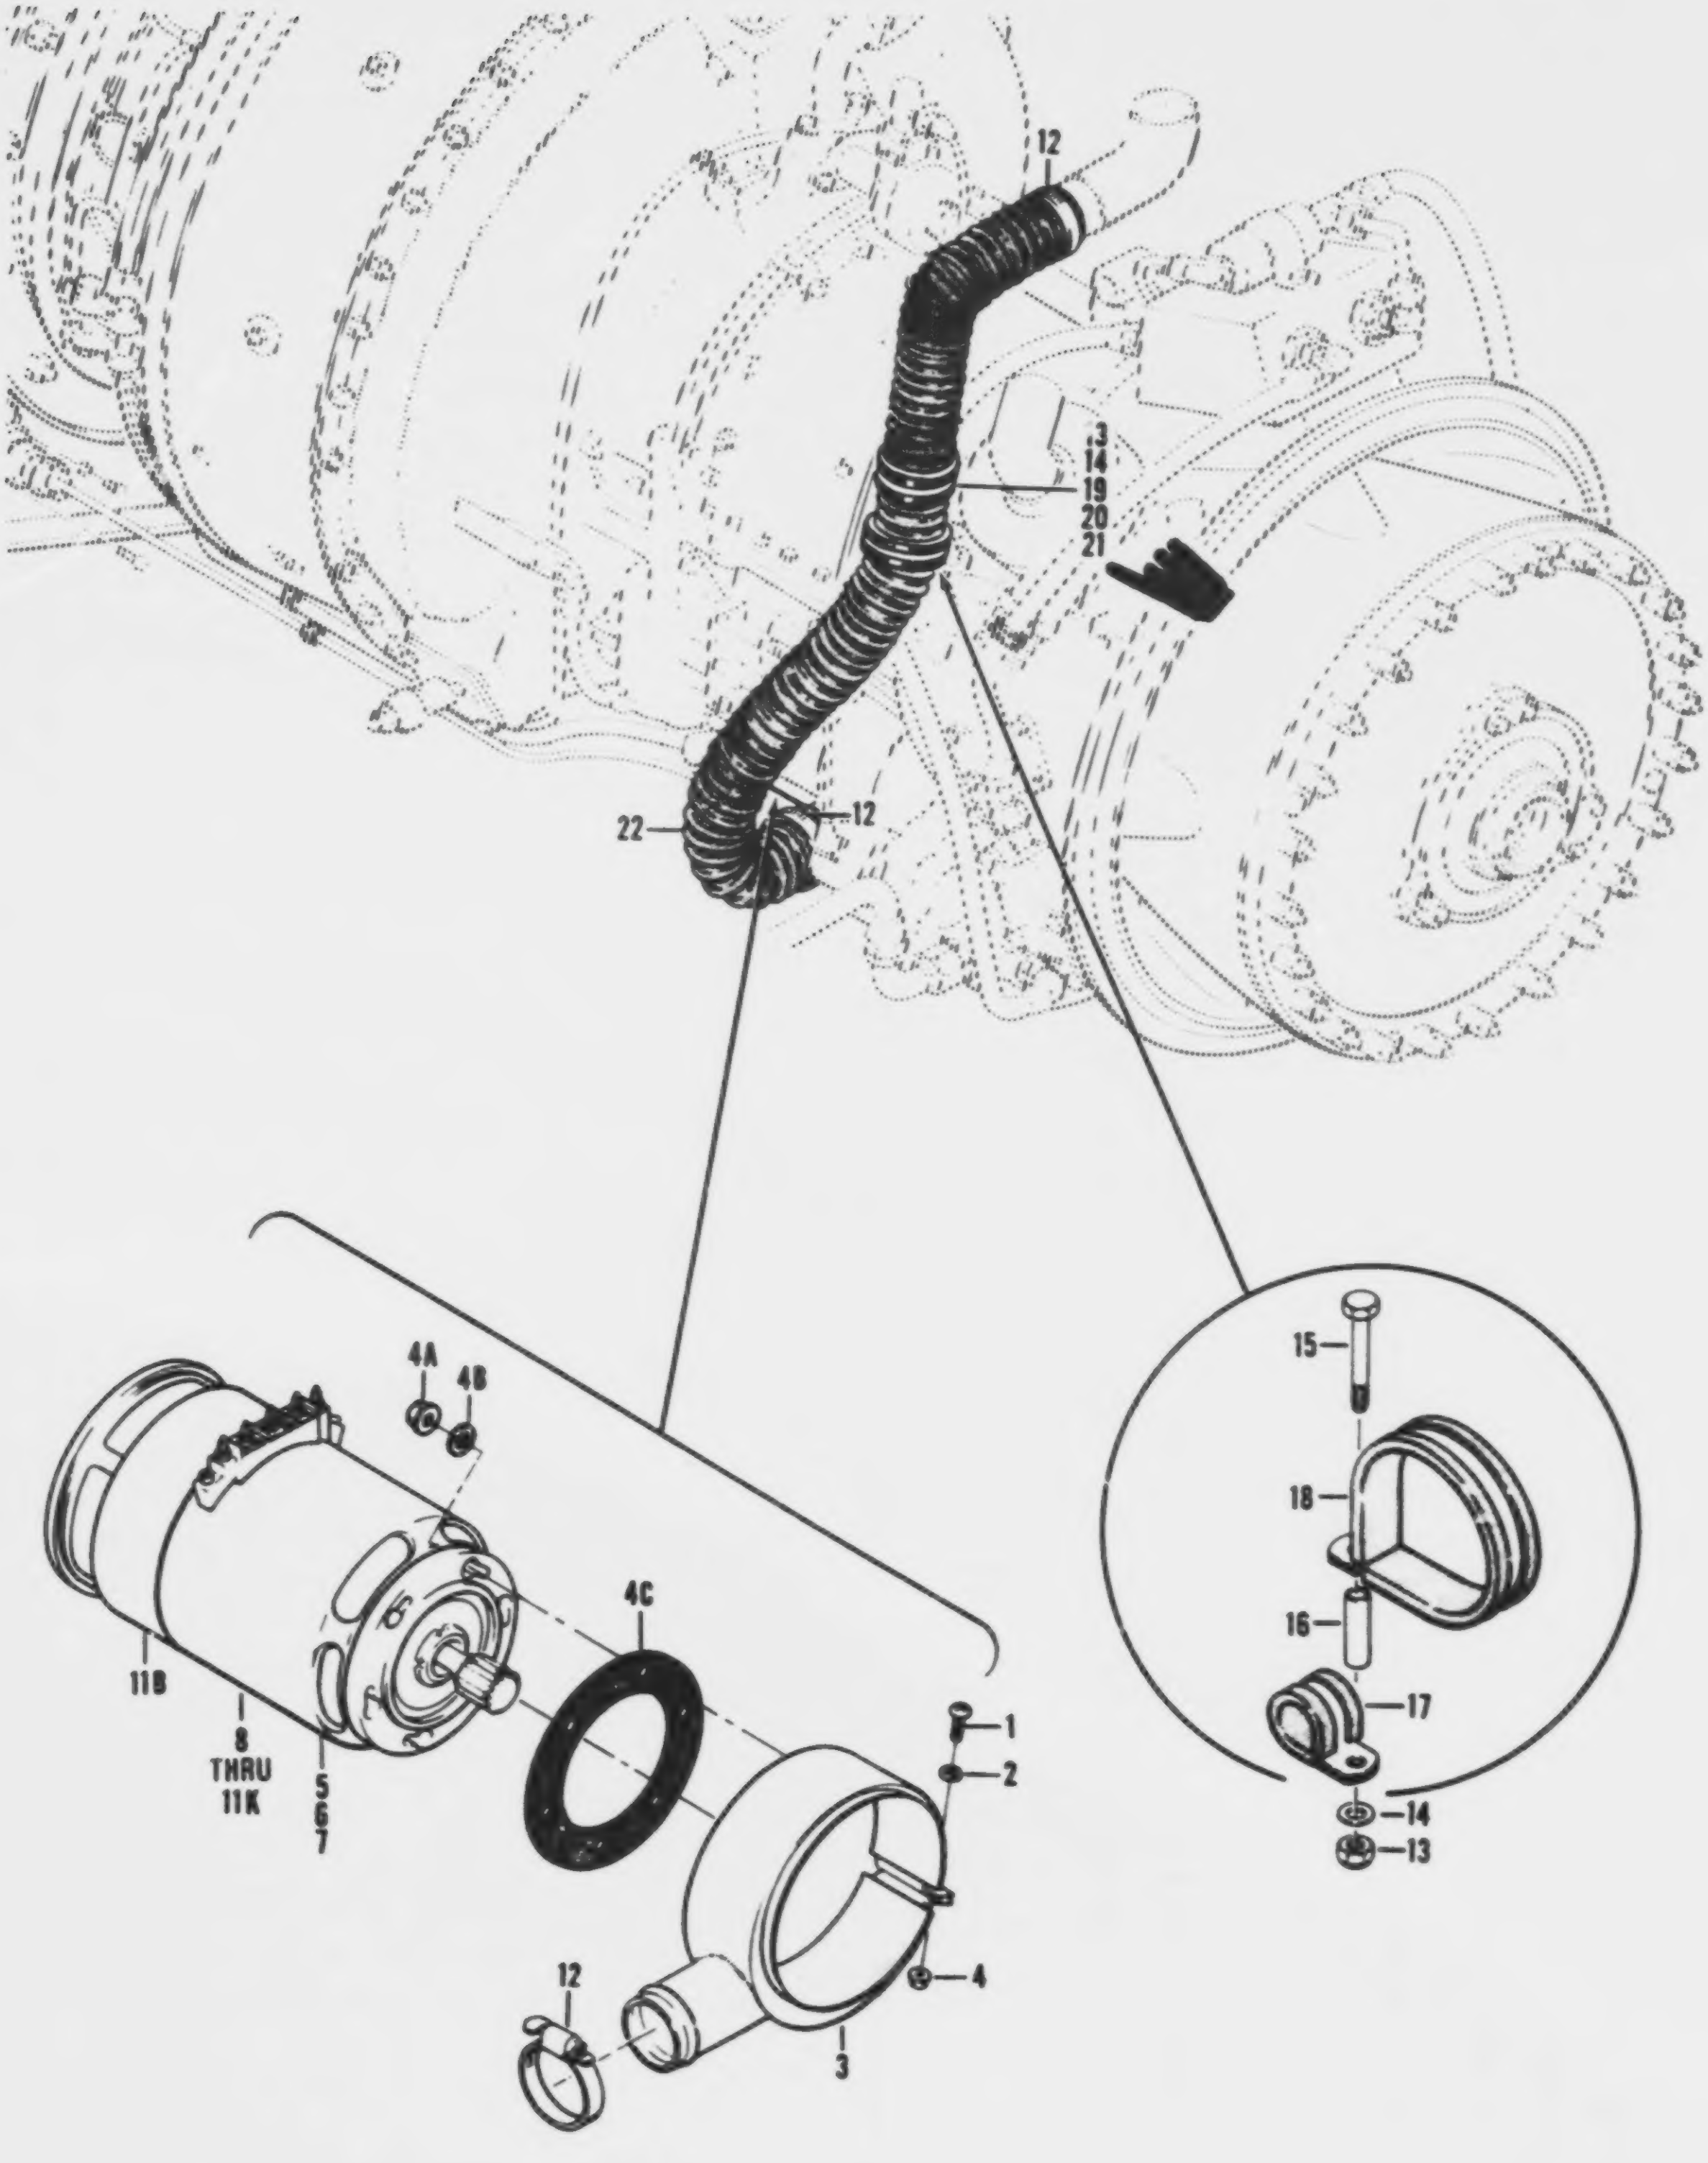
12
13
14
19
20
21
22
12
4A
4B
4C
11B
8
THRU
11K
5
6
7
1
2
4
12
3
15
18
16
17
14
13

Figure 288. Starter Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
288		XCFZZ		97499	205-060-401-11	STARTER INSTL USBL EFF 67-17492 & SUBSEQUENT SEE FIG 98 FOR NHA........UHE,UHH,UHV,UHX	EA	1
288	1	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	2
288	2	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	2
288	3	PAOOO	6115-00-927-7359	97499	205-060-419-19	.ADAPTER,GENERATOR DUCT........UHE,UHH,UHV,UHX	EA	1
288	4	PAOZZ	5310-00-728-7723	96906	MS21069L3K	..NUT,SELF-LOCKING, PLATE WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	2
288	4A	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	6
288	4B	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	6
288	4C	PAOZZ	5330-00-654-8932	91547	1-080-026-01	.GASKET........UHE,UHH,UHV,UHX	EA	1
288	5	PAOFF	2925-00-878-1136	97499	204-060-200-1	.STARTER,GENERATOR ENGINE U/W T-53-L-13 ENGINE-300 AMP ....UHE,UHH,UHV,UHX	EA	1
288	6	PAOFF	2925-00-878-1136	31435	23064-001	.STARTER,GENERATOR ENGINE SEE TM55-2925-240-40 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
288	7	PAOFF	2925-00-878-1136	83298	30E20-61A	.STARTER,GENERATOR ENGINE SEE TM55-2925-236-40 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
288	8	PAOZZ	5310-00-926-1852	96906	MS21083N6	..NUT,SELF-LOCKING,HE........UHE,UHH,UHV,UHX	EA	3
288	9	PAOZZ	5310-00-167-0821	88044	AN960-616	..WASHER,FLAT........UHE,UHH,UHV,UHX	EA	3
288	10	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	2
288	11	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT........UHE,UHH,UHV,UHX	EA	2
288	11A	PAOZZ	5305-00-988-7601	96906	MS16995-25	..SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	8
288	11B	PBFZZ	2925-00-763-0863	31435	23064-1150	..COVER,ACCESS U/O PN 23064-001........UHE,UHH,UHV,UHX	EA	1
288	11C	PAFZZ	5977-00-143-6774	31435	30300-1282	..BRUSH,ELECTRICAL U/O PN 23064-001........UHE,UHH,UHV,UHX	EA	4
288	11BA	PAFZZ	5305-00-150-9209	88044	AN502-10-14	..SCREW,MACHINE U/O PN 23064-001........UHE,UHH,UHV,UHX	EA	1
288	11D	PAFZZ	5305-00-143-3289	31435	05-340201	..SCREW,MACHINE U/O PN 23064-001........UHE,UHH,UHV,UHX	EA	4
288	11F	PBFZZ	9999-00-247-0215	83298	1544776	..COVER,ACCESS U/O PN 30E20-61A........UHE,UHH,UHV,UHX	EA	1
288	11G	PAFZZ	5305-00-912-4832	96906	MS35275-268	..SCREW,MACHINE U/O PN 30E20-61A........UHE,UHH,UHV,UHX	EA	1
288	11GA	PAFZZ	5310-00-439-4711	06840	833656	..NUT,PLAIN,SQUARE U/O PN 30E20-61A........UHE,UHH,UHV,UHX	EA	1
288	11H	PAFZZ	5977-00-681-1431	83298	1110489	..BRUSH,ELECTRICAL CO U/O PN 30E20-61A........UHE,UHH,UHV,UHX	EA	8
288	11J	PAFZZ	5306-00-523-8866	06840	890065-2	..BOLT,INTERNAL WRENC U/O PN 30E20-61A........UHE,UHH,UHV,UHX	EA	8
288	11K	PAFZZ	5310-00-582-5965	96906	MS35338-44	..WASHER,LOCK U/O PN 30E20-61A........UHE,UHH,UHV,UHX	EA	8
288	12	PAOZZ	4730-00-278-3102	88044	AN737RM74	.CLAMP,HOSE........UHE,UHH,UHV,UHX	EA	2
288	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	1
288	14	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	1
288	15	PAOZZ	5306-00-182-2005	88044	AN3H14A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	2
288	16	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	2
288	17	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
288	18	PAOZZ	5340-00-993-5475	81996	EAB700D34	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
288	19	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	1
288	20	PAOZZ	5340-00-993-5475	81996	EAB700D34	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
288	21	MFOZZ	DELETED	97499	205-061-412-1	.BRACKET SPECIAL........UHE,UHH,UHV,UHX	EA	1
288	22	PAOZZ	4720-00-134-8933	80205	NAS1376A08CF164	.HOSE,AIR DUCT........UHE,UHH,UHV,UHX	EA	1

Fig. 289 & 290 NOT USED

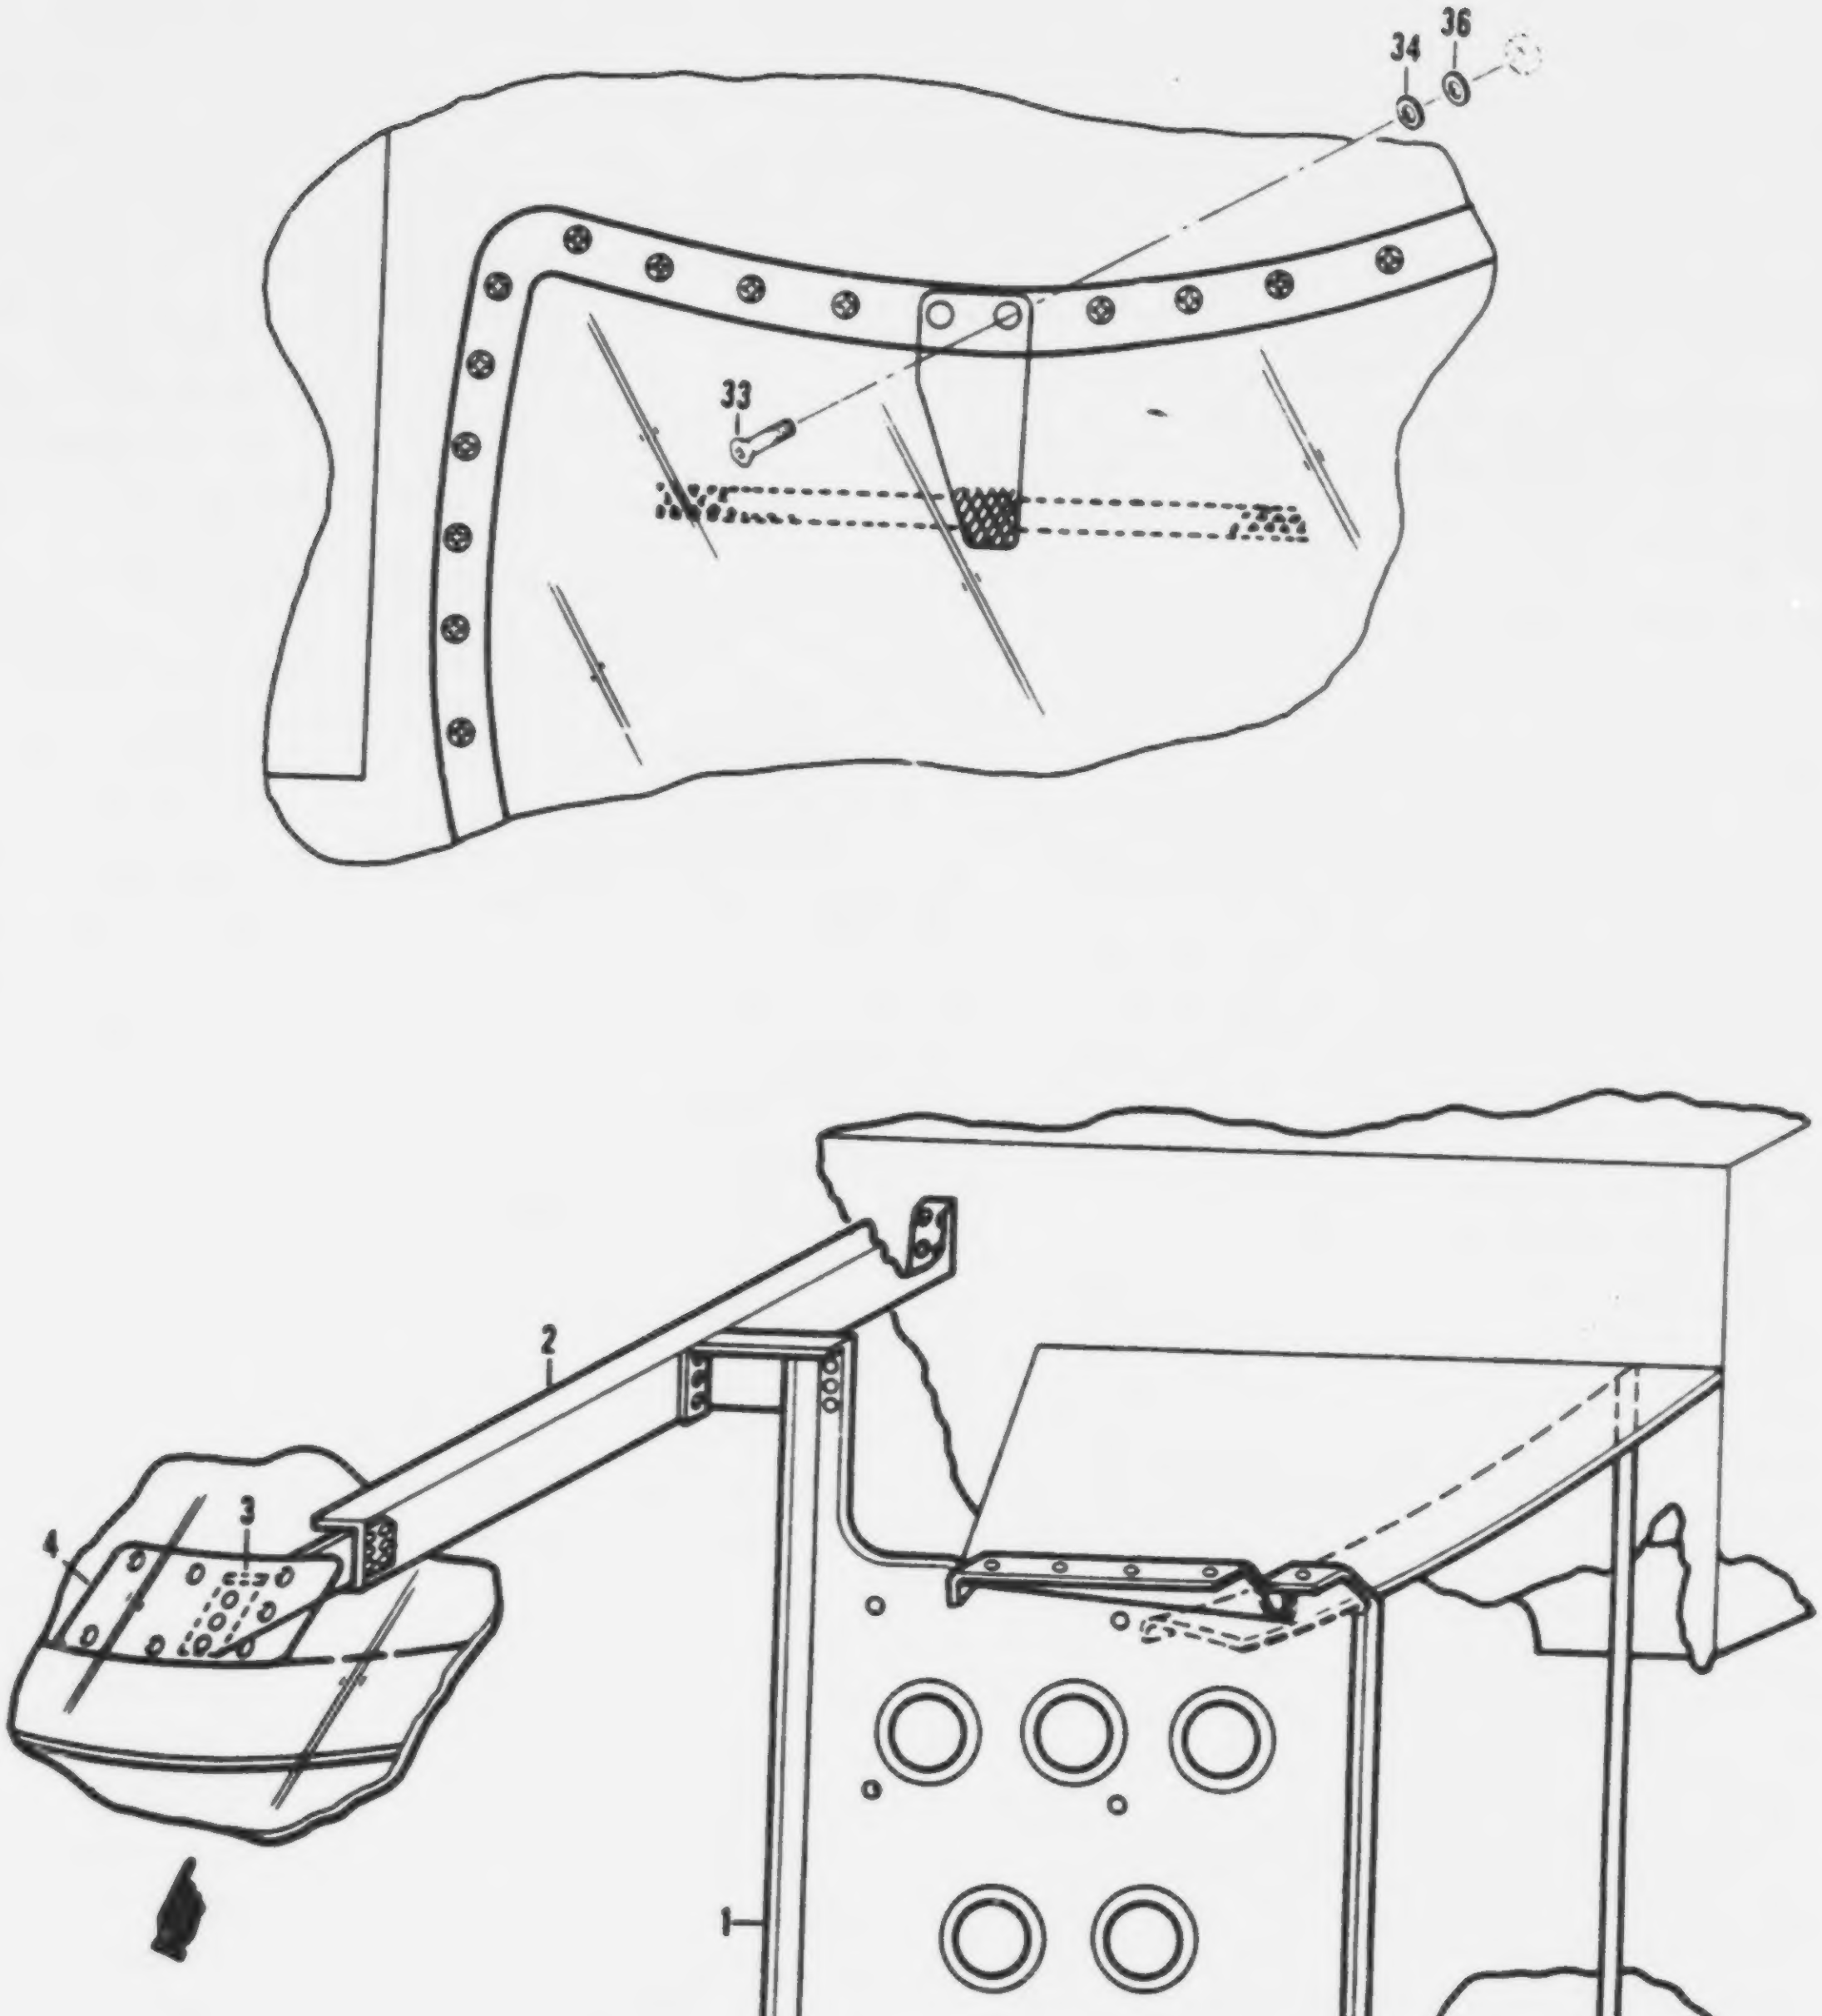

Figure 290A. Electrical Installation Glidescope/Marker Beacon Radio Receiver, R-1963/ARN (Sheet 1 of 3)

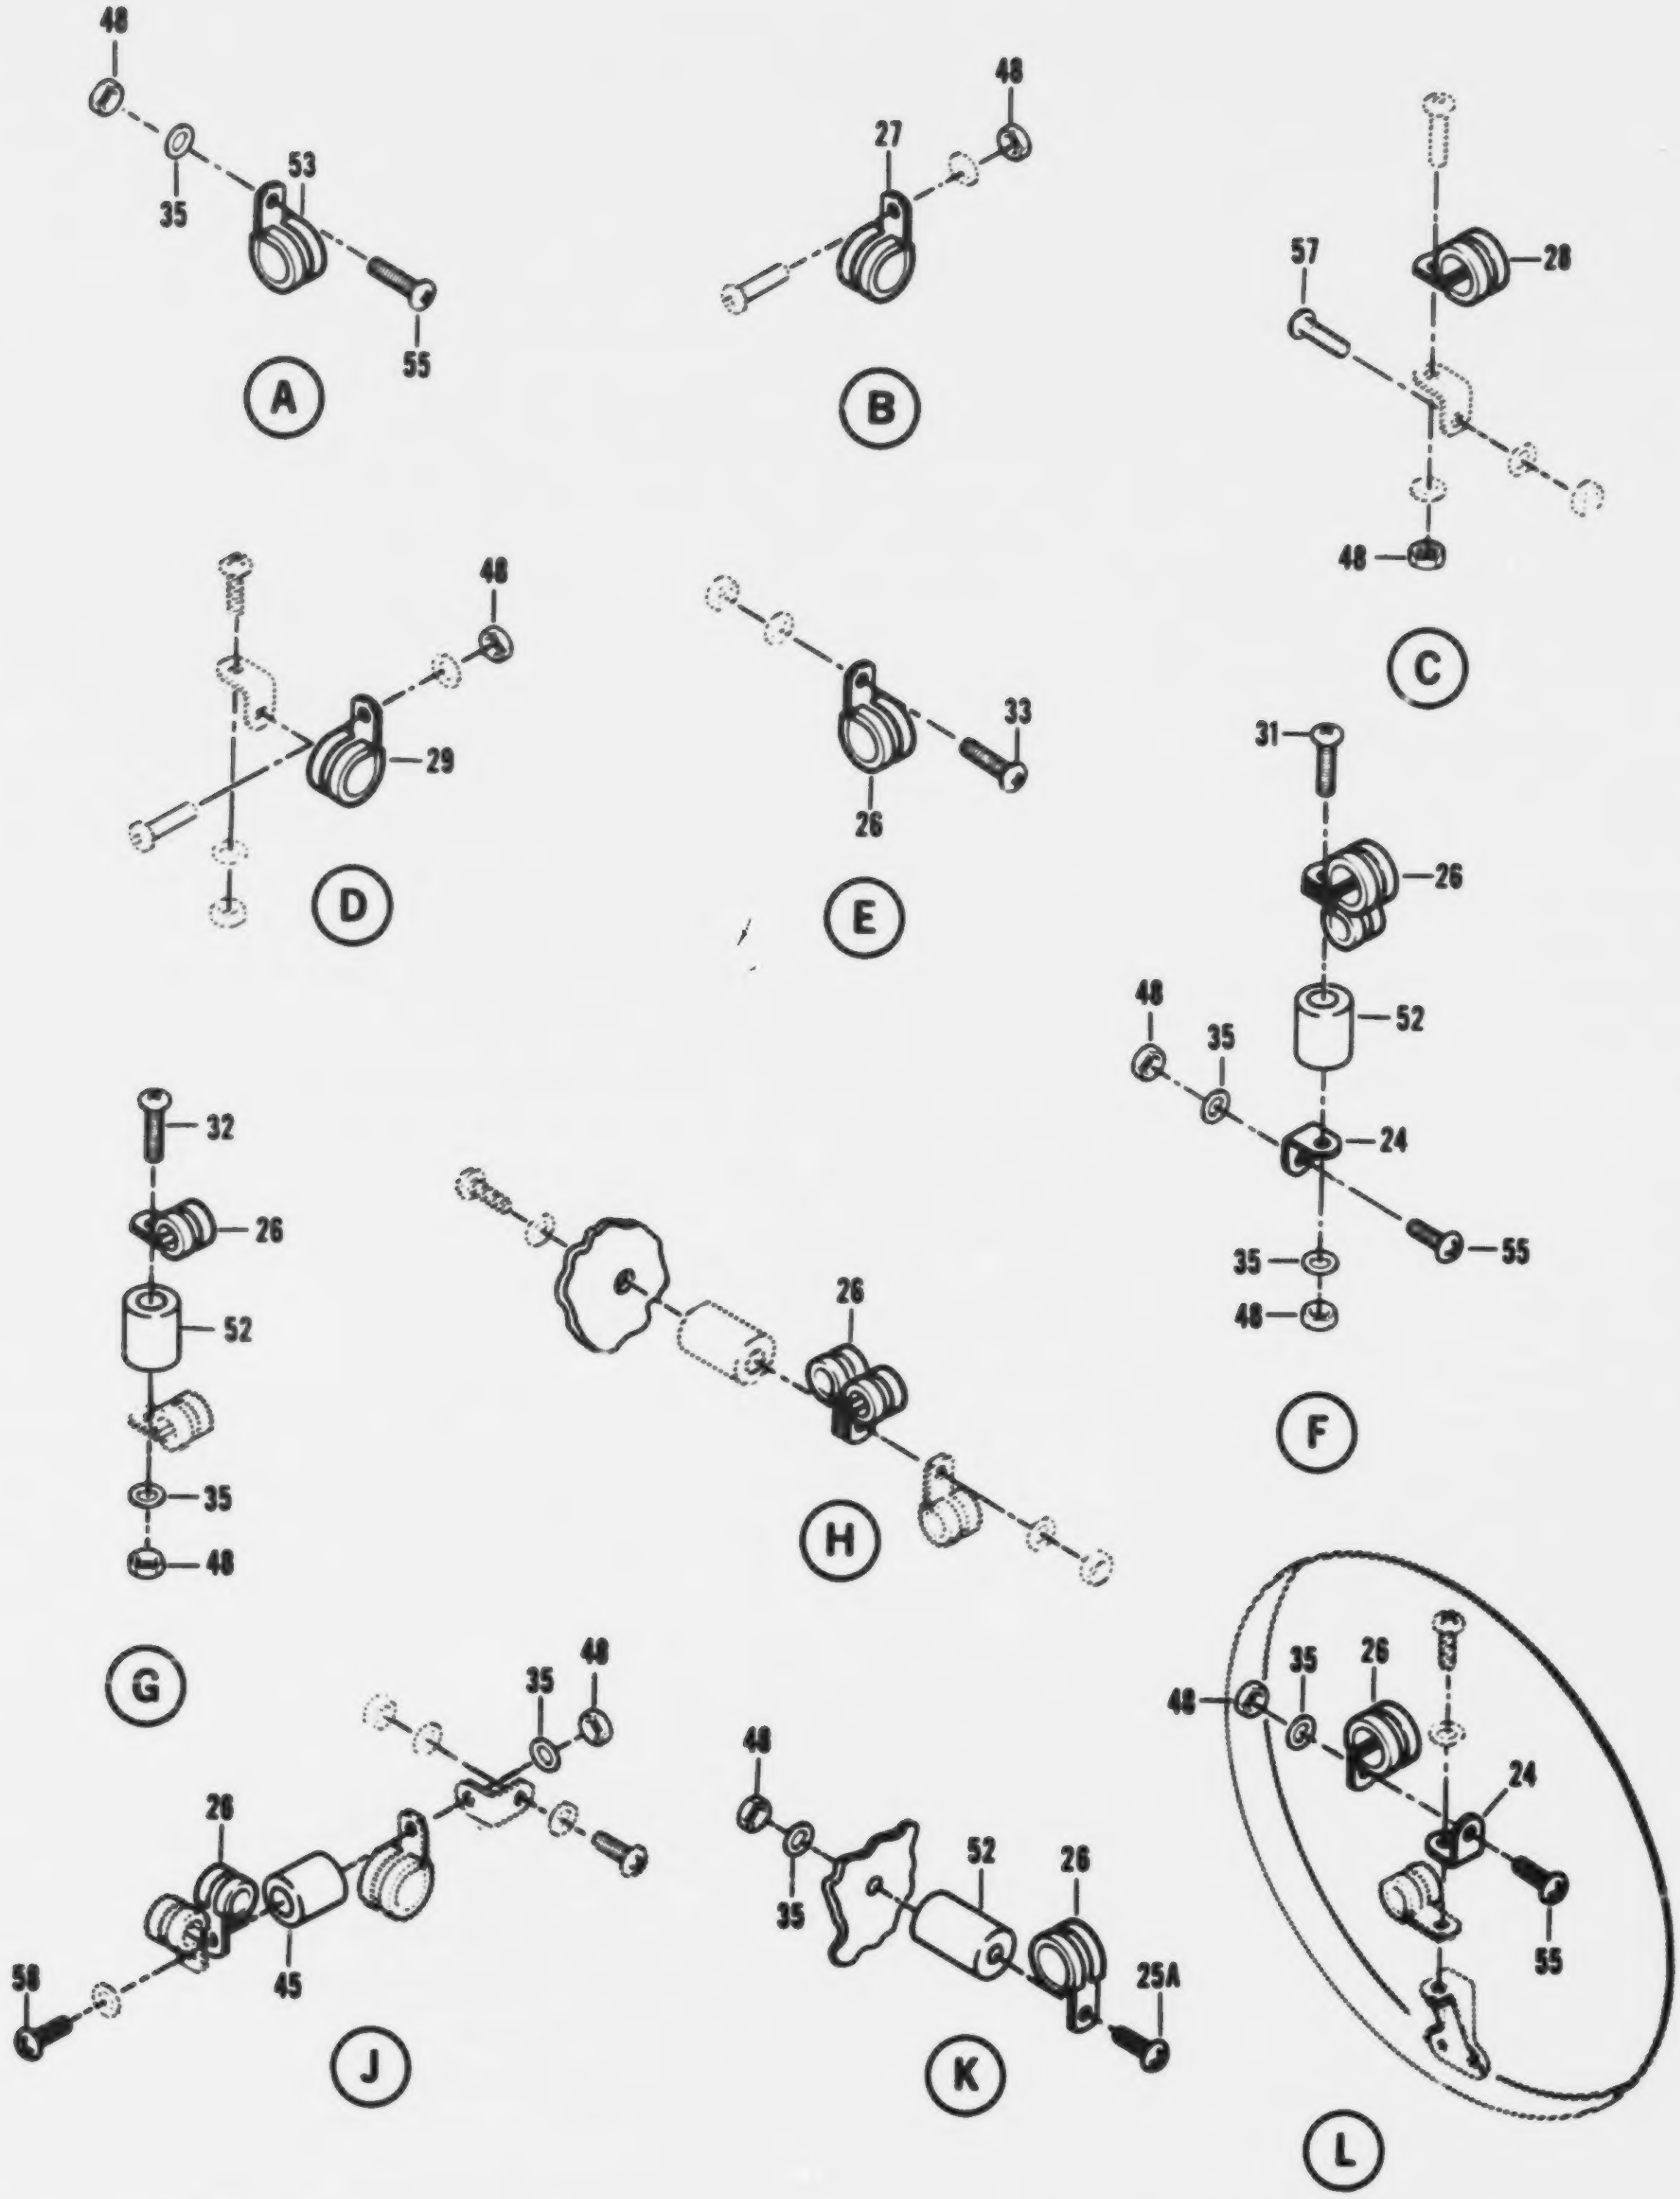
48
35
53
55
A
48
27
B
28
57
48
C
48
29
D
33
26
E
31
26
52
48
35
24
55
35
48
F
32
26
52
35
48
G
26
H
35
48
28
58
45
J
48
35
52
26
25A
K
48
35
26
24
55
L

Figure 290A. Electrical Installation Glidescope/Marker Beacon Radio Receiver, R-1963/ARN (Sheet 2 of 3)

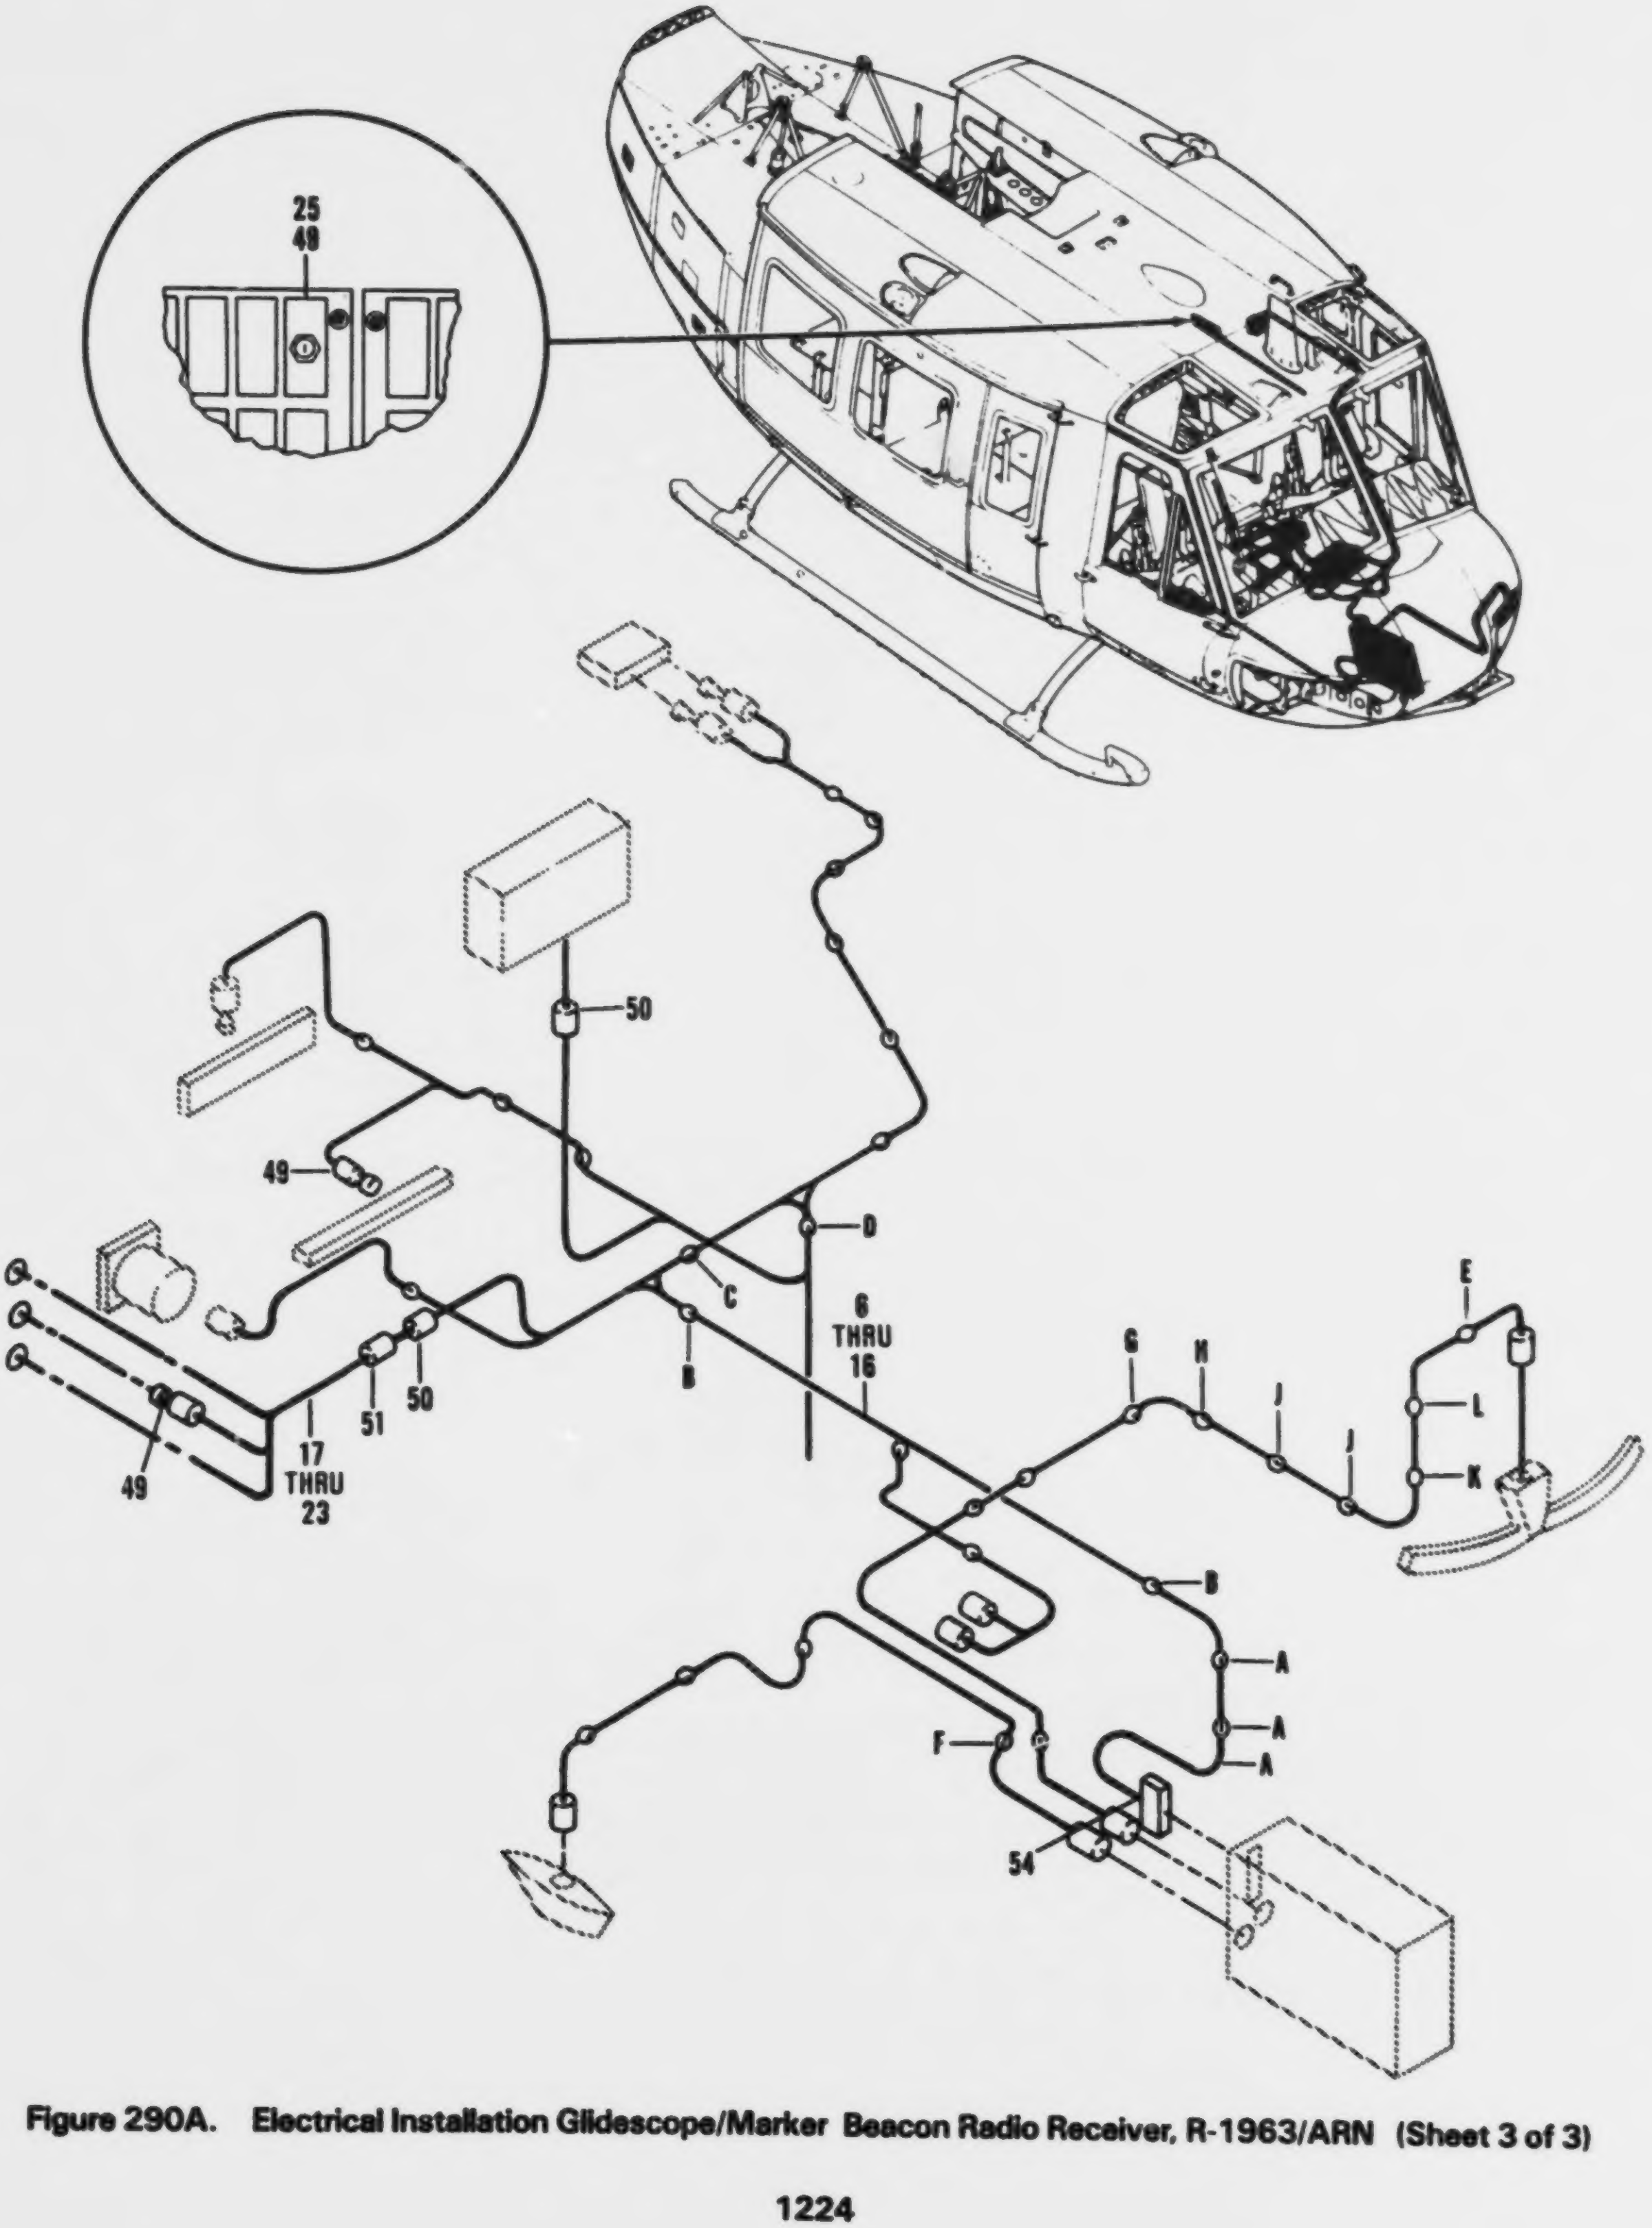
25
49
50
49
D
C
B
6
THRU
16
17
THRU
23
51
50
49
G
H
J
J
E
L
K
B
A
A
A
F
54

Figure 290A. Electrical Installation Glidescope/Marker Beacon Radio Receiver, R-1963/ARN (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
290A		XCFZZ		81996	1560UH1-806-1	RADIO INSTALLATION RECEIVER R-1963/A USE-AFT-CMPL-W MWO 55-1520-210-30-45	UHH,UHV	EA	1
290A	1	XDOZZ		81996	1560UH1-786	.BRACKET,MOUNTING	UHH,UHV	EA	1
290A	2	XDOZZ		81996	1560UH1-780	.CROSS BRACE	UHH,UHV	EA	1
290A	3	MFOZZ		81996	1560UH1-791	.CROSS BRACE	UHH,UHV	EA	1
290A	4	MFOZZ		81996	1560UH1-781	.DOUBLER PLATE	UHH,UHV	EA	1
290A	6	AOOOO		81996	1560UH1-789-1	.CABLE HARNESS	UHH,UHV	EA	1
290A	7	PAOZZ	5935-00-724-7159	70117	588D205-12	..SCREWLOCK,ELECTRICA	UHH,UHV	EA	2
290A	8	PAOZZ	5935-00-991-0125	71468	DC24660	..SHIELD,ELECTRICAL C	UHH,UHV	EA	1
290A	9	PAOZZ	5940-01-010-1571	06090	D142-51	..SPLICE,CONDUCTOR	UHH,UHV	EA	2
290A	10	PAOZZ	5940-01-010-1572	06090	D142-52	..SPLICE,CONDUCTOR	UHH,UHV	EA	1
290A	11	PAOZZ	5999-00-239-3338	81349	M24308-10-1	..CONTACT,ELECTRICAL	UHH,UHV	EA	27
290A	12	PAOZZ	5935-00-976-5425	81349	M24308-2-4	..CONNECTOR,RECEPTACL	UHH,UHV	EA	1
290A	13	PAOZZ	6145-01-004-7663	81349	M7078-3-22-2	..CABLE,SPECIAL PURPO	UHH,UHV	FT	V
290A	14	PAOZZ	5970-00-994-1329	08795	RNF100TY11/2DIA	..INSULATION SLEEVING	UHH,UHV	FT	V
290A	15	PAOZZ	6145-00-578-7520	81349	M5086/1-22-9	..WIRE,ELECTRICAL	UHH,UHV	FT	V
290A	16	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	..WIRE,ELECTRICAL	UHH,UHV	FT	V
290A	17	AOOOO		81996	1560UH1-789-2	.CABLE ASSEMBLY	UHH,UHV	EA	1
290A	18	PAOZZ	5940-01-010-1572	06090	D142-52	..SPLICE,CONDUCTOR	UHH,UHV	EA	2
290A	20	PAOZZ	5970-00-994-1329	08795	RNF100TY11/2D1A	..INSULATION,SLEEVING	UHH	FT	V
290A	21	PAOZZ	6145-01-004-7663	81349	M7078-3-22-2	..CABLE,SPECIAL PURPO	UHH,UHV	FT	V
290A	22	PAOZZ	6145-00-578-7520	81349	M5086-1-22-9	..WIRE,ELECTRICAL	UHH,UHV	FT	V
290A	23	PAOZZ	6145-00-578-7519	81349	M5086-1-20-9	..WIRE,ELECTRICAL	UHH,UHV	FT	V
290A	24	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHH,UHV	EA	3
290A	25	PAOZZ	5925-00-929-7716	96906	MS26574-1	.CIRCUIT BREAKER USE-AFT-CMPL-W MWO 55-1520-210-30-45	UHH,UHV	EA	1
290A	25A	PAOZZ	5305-00-059-3662	96906	MS51958-66	.SCREW,MACHINE	UHH,UHV	EA	2
290A	26	PAOZZ	5340-00-990-9298	81996	EAB700D3	.CLAMP,LOOP	UHH,UHV	EA	10
290A	27	PAOZZ	5340-00-598-0597	96906	MS21919DG8	.CLAMP,LOOP	UHM	EA	2
290A	28	PAOZZ	5340-00-598-4195	96906	MS21919DG16	.CLAMP,LOOP	UHH,UHV	EA	1
290A	29	PAOZZ	5340-00-247-6221	81996	EAB700D26	.CLAMP,LOOP	UHH,UHV	EA	1
290A	31	PAOZZ	5305-00-059-3665	96906	MS51958-69	.SCREW,MACHINE	UHH,UHV	EA	2
290A	32	PAOZZ	5305-00-059-3666	96906	MS51958-70	.SCREW,MACHINE	UHH,UHV	EA	2
290A	33	PAOZZ	5305-00-576-7810	88044	AN525D10R10	.SCREW,MACHINE	UHH,UHV	EA	4
290A	34	PAOZZ	5310-00-894-4876	95987	NW10-4373	.WASHER,FLAT	UHH,UHV	EA	3
290A	35	PAOZZ	5310-00-619-1148	96906	MS15795-808	.WASHER,FLAT	UHH,UHV	EA	33
290A	36	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHH,UHV	EA	3
290A	45	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE	UHH,UHV	EA	3
290A	48	PAOZZ	5310-00-208-9255	96906	MS21044C3	.NUT,SELF-LOCKING,HE	UHH,UHV	EA	37
290A	49	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL,LUG	UHH,UHV	EA	5
290A	50	PAOZZ	5999-00-812-2082	96906	MS24255-20S	.CONTACT,ELECTRICAL	UHH,UHV	EA	25
290A	51	PAOZZ		96906	MS24254-20P	.CONTACT	UHH,UHV	EA	10
290A	52	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE	UHH,UHV	EA	6

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
290A	53	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP....UHH,UHV	EA	3
290A	54	PAOZZ	5940-00-143-4771	96906	MS25036-103	.TERMINAL,LUG....UHH,UHV	EA	3
290A	55	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE....UHH,UHV	EA	6
290A	57	PAOZZ	5305-00-059-3660	96906	MS51958-64	.SCREW,MACHINE....UHH,UHV	EA	22
290A	58	PAOZZ	5305-00-059-3661	96906	MS51958-65	.SCREW,MACHINE....UHH,UHV	EA	3

Fig. 290B NOT USED

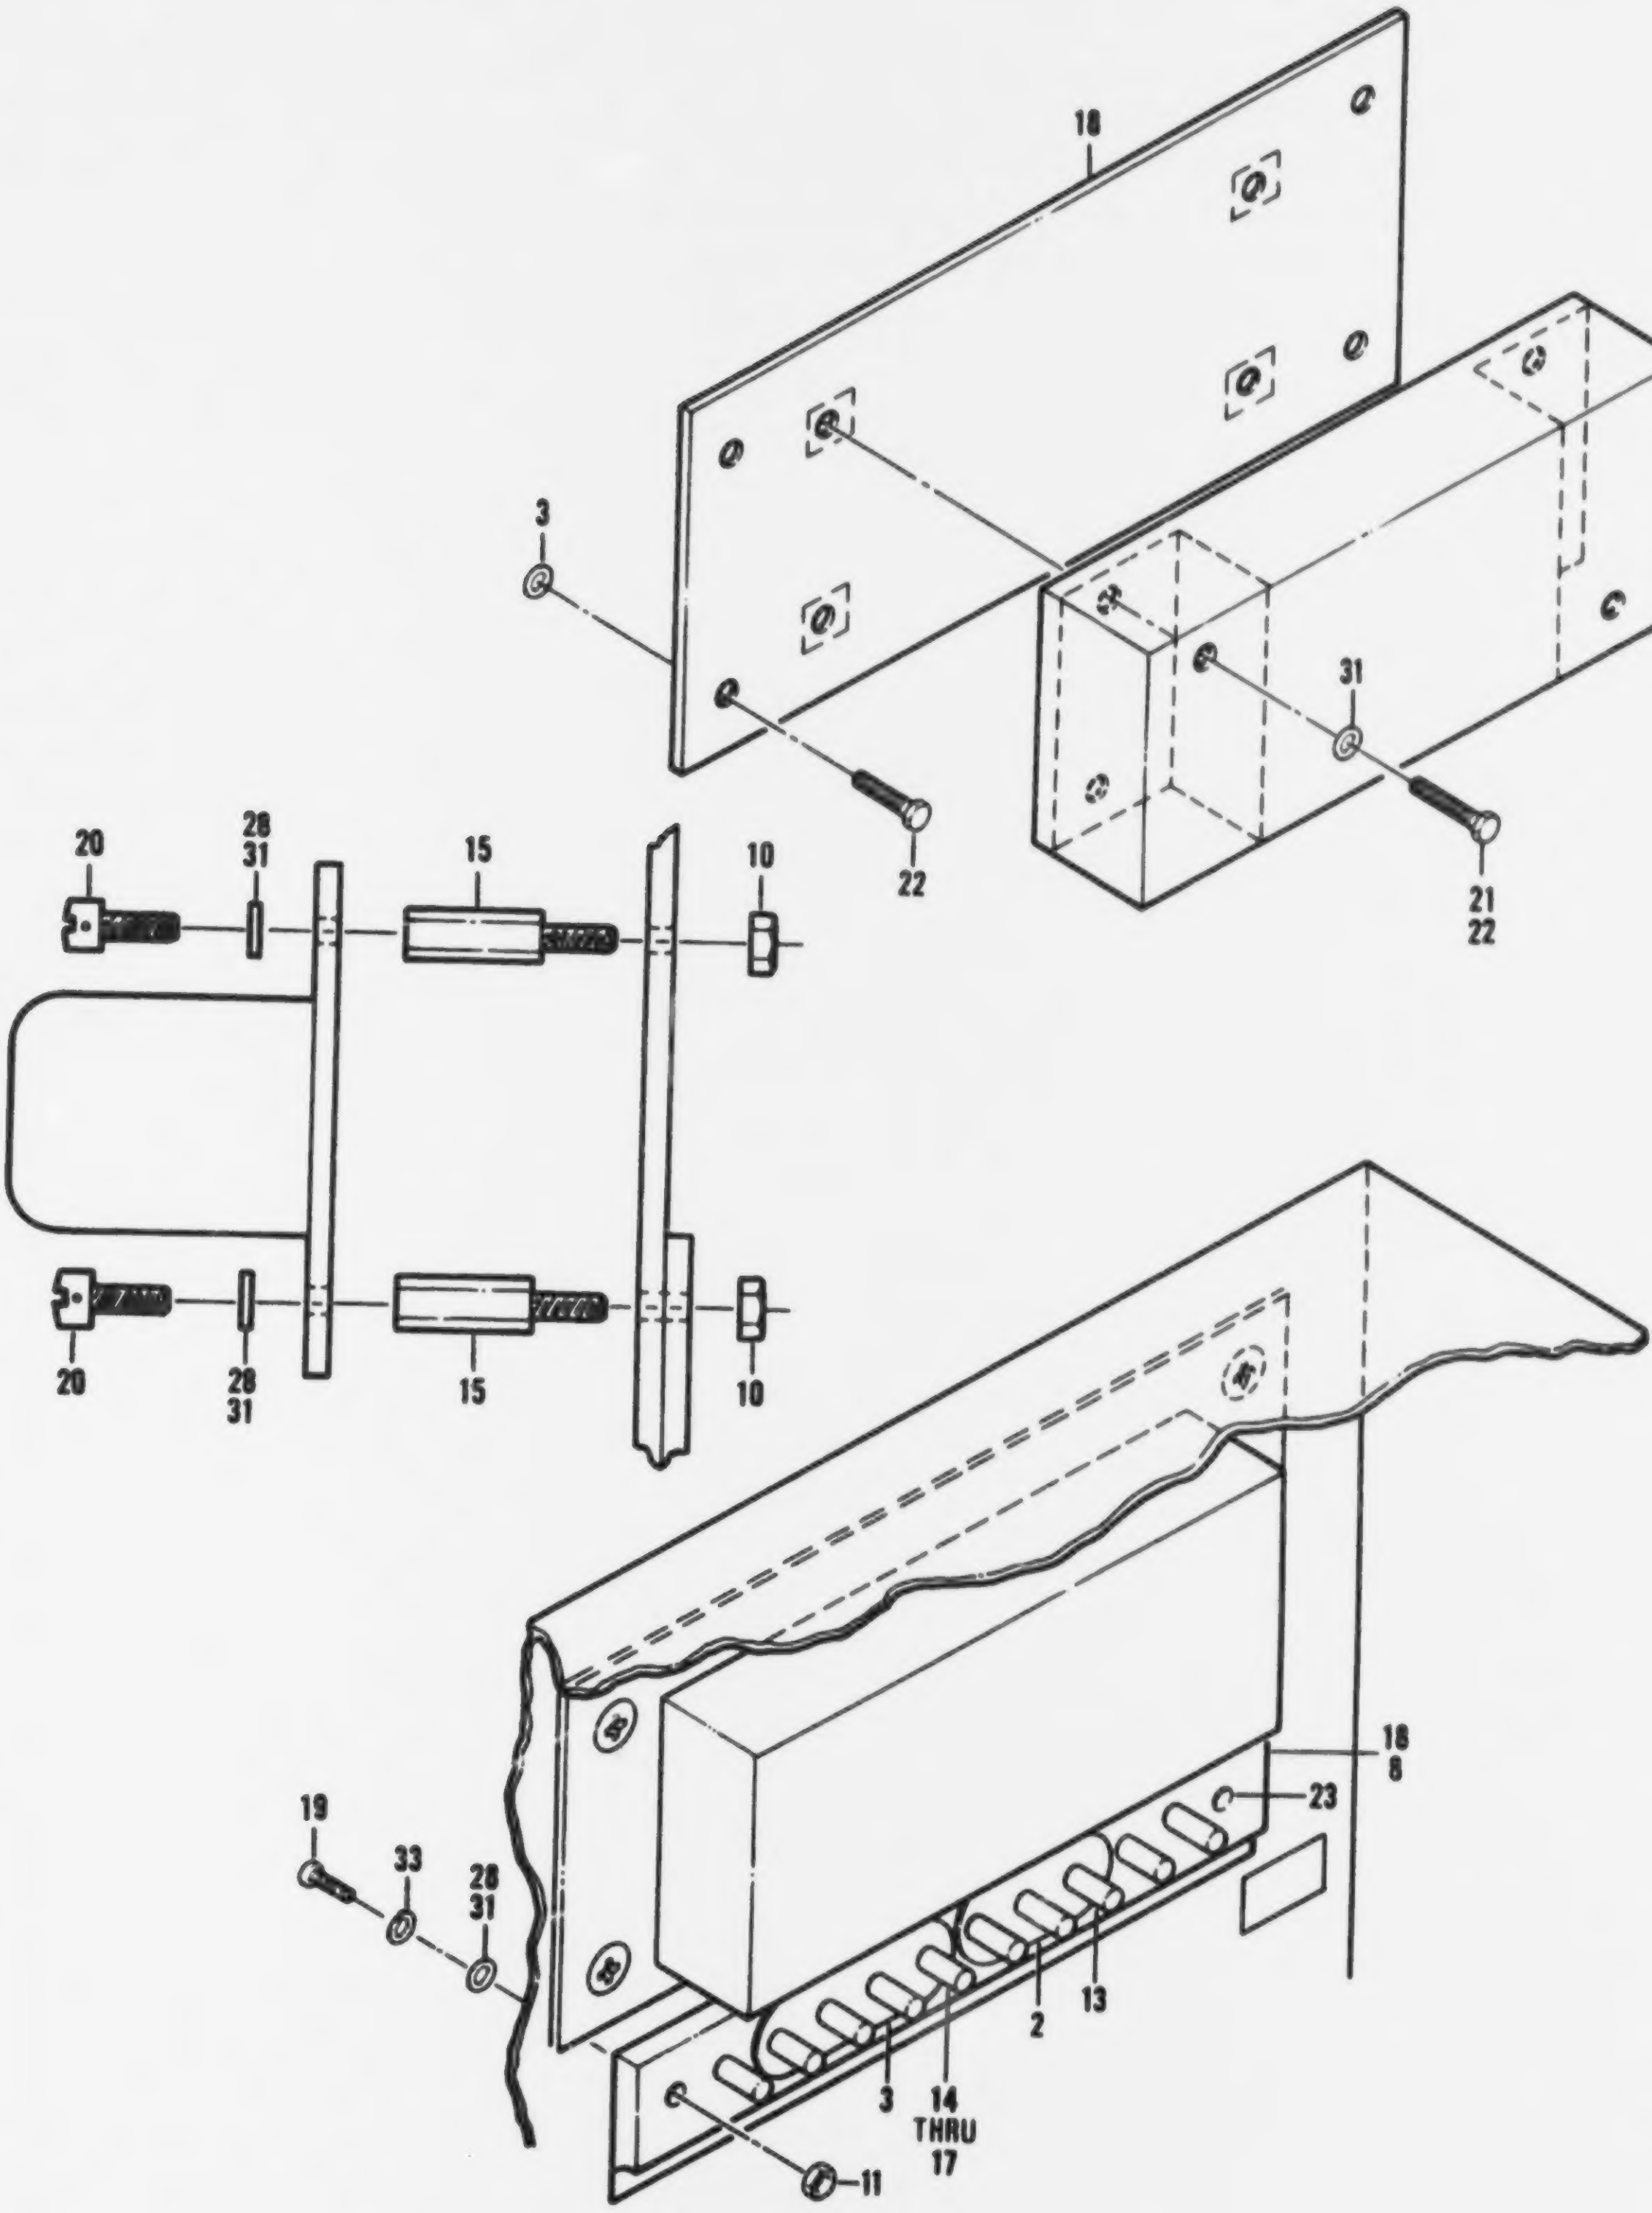
18
3
31
22
21
22
20
28
31
15
10
20
28
31
15
10
19
33
28
31
18
8
23
13
2
3
14
THRU
17
11

Figure 290C. Lighting Installation, 5 Volts (Sheet 1 of 2)

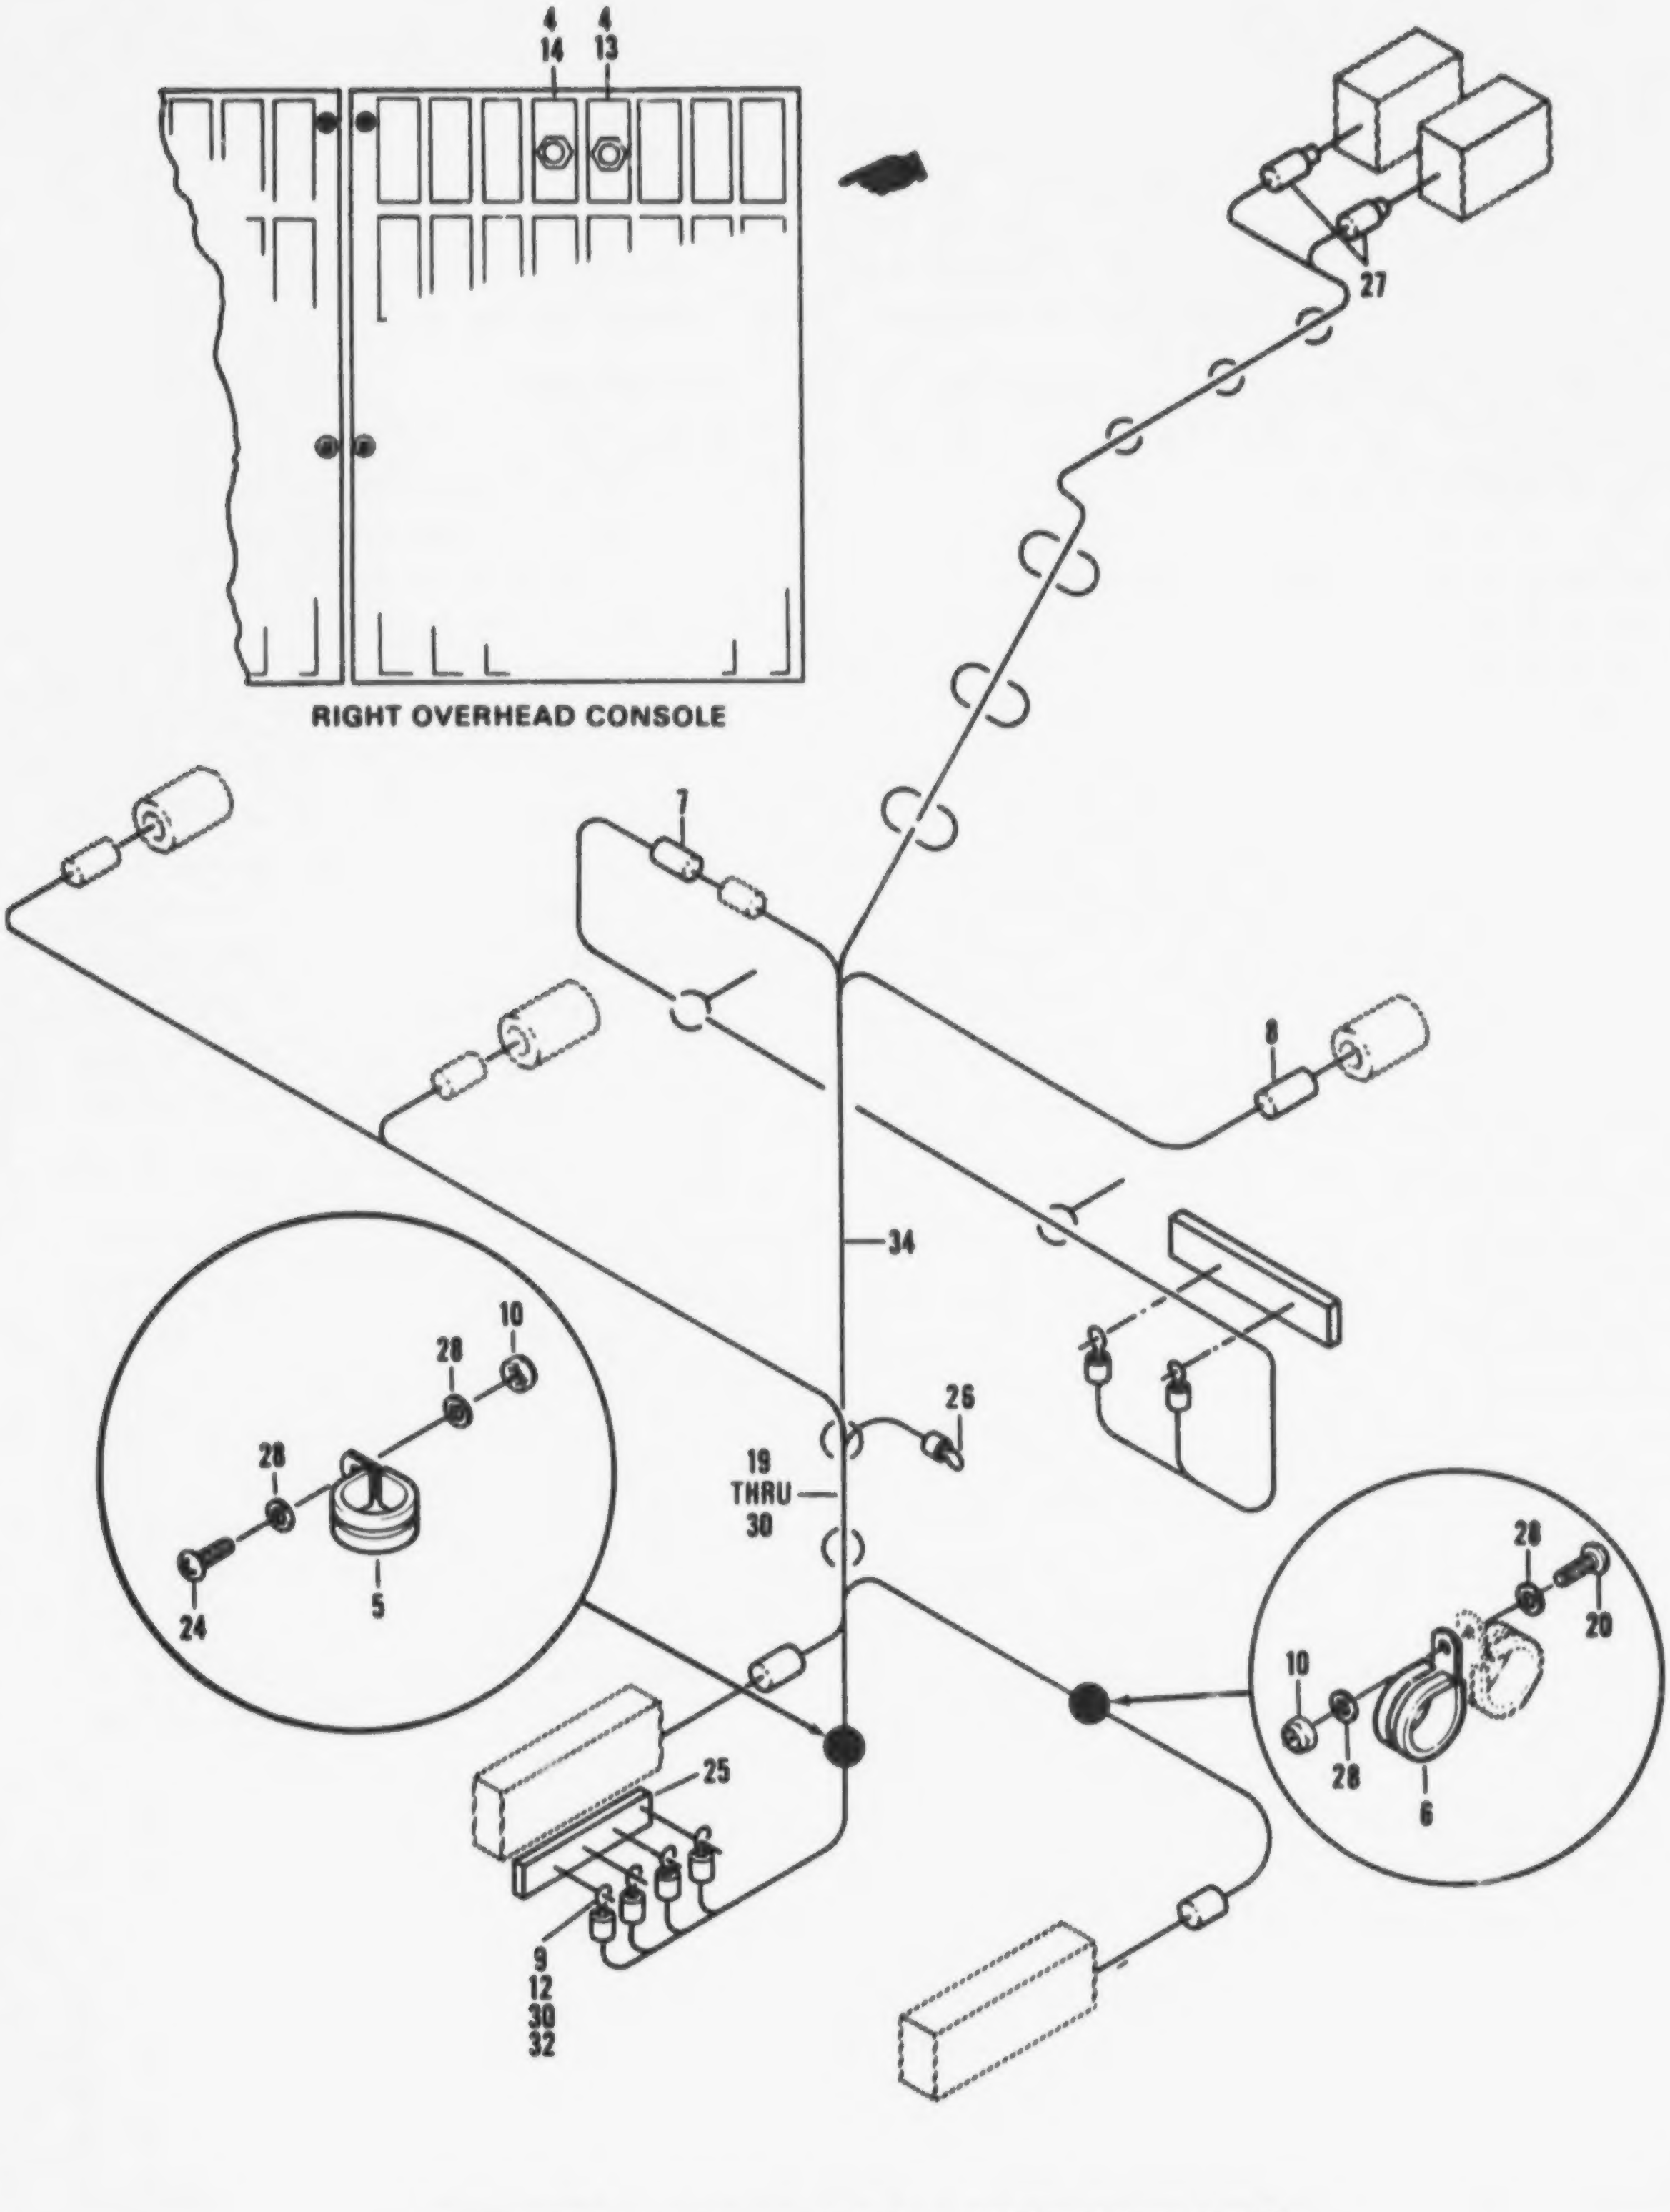
4
14
4
13
RIGHT OVERHEAD CONSOLE
27
7
8
34
10
28
28
24
5
26
19
THRU
30
28
20
10
28
6
25
9
12
30
32

Figure 290C. Lighting Installation, 5 Volts (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
290C		XCFZZ		81996	1560-UH1-864	LIGHTING INSTL, 5 VOLT USE-AFT-CMPL-W MWO 55-1500-219-30-8 ....UHC,UHH,UHM,UHV	EA	1
290C	2	XDOZZ	6150-00-600-6259	96906	MS25226-2-3	.BUS,CONNECTOR........UHC,UHH,UHM,UHV	EA	1
290C	3	PAOZZ	6150-00-557-7660	96906	MS25226-2-4	.LINK,TERMINAL CO CONNECTING........UHC,UHH,UHM,UHV	EA	1
290C	4	PAOZZ	5925-00-776-5062	96906	MS22073-2 1-2	.CIRCUIT BREAKER USE-AFT-CMPL-W-MWO 55-1500-219-30-8 ....UHC,UHH,UHM,UHV	EA	2
290C	5	XDOZZ		96906	MS21104D6	.CLAMP,LOOP........UHC,UHH,UHM,UHV	EA	1
290C	6	PAOZZ	5340-00-062-9552	96906	MS21919DG3	.CLAMP,LOOP........UHC,UHH,UHM,UHV	EA	1
290C	7	PAOZZ	5990-00-901-3237	81349	MIL-C-39029/31	.CONTACT........UHC,UHH,UHM,UHV	EA	4
290C	8	PAOZZ	5999-00-812-2082	96906	MS24255-20S	.CONTACT,ELECTRICAL........UHC	EA	6
290C	9	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER HEXAGON........UHC,UHH,UHM,UHV	EA	10
290C	10	PAOZZ	5310-00-208-9255	96906	MS21044C3	.NUT,SELF-LOCKING,HE........UHC,UHH,UHM,UHV	EA	10
290C	11	PAOZZ	5310-00-088-0551	96906	MS21044N04	.NUT,SELF-LOCKING,HE........UHC,UHH,UHM,UHV	EA	2
290C	12	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL,LUG........UHC,UHH,UHM,UHV	EA	13
290C	13	XDOZZ		81996	1560-UH1-873-1	.PLACARD........UHC,UHH,UHM,UHV	EA	1
290C	14	XDOZZ		81996	1560-UH1-873-2	.PLACARD........UHC,UHH,UHM,UHV	EA	1
290C	15	PAOZZ	5307-01-096-0612	06540	9754-SS-1032	.STUD,EXTENSION........UHC,UHH,UHM,UHV	EA	8
290C	17	PAOZZ	5975-00-074-2072	96906	MS3367-1-9	.STRAP,TIEDOWN ELECT........UHC,UHH,UHM,UHV	EA	25
290C	18	XDOZZ		81996	1560-UH1-838	.PLATE,MOUNTING........UHC,UHH,UHM,UHV	EA	2
290C	19	PAOZZ	5305-00-054-5649	96906	MS51957-15	.SCREW,MACHINE........UHC,UHH,UHM,UHV	EA	2
290C	20	PAOZZ	5305-00-543-2753	96906	MS35266-61	.SCREW,MACHINE........UHC,UHH,UHM,UHV	EA	8
290C	21	PAOZZ	5306-00-182-1946	88044	AN3CH20A	.SCREW,MACHINE USED WITH TWO HOLE POWER SUPPLY CONFIGURATION ....UHC,UHH,UHM,UHV	EA	3
290C	22	PAOZZ	5306-00-180-2769	88044	AN3CH3A	.BOLT USED WITH FOUR HOLE POWER SUPPLY CONFIGURATION ....UHC,UHH,UHM,UHV	EA	8
290C	23	MOOZZ		96906	MS27212-1-10	.TERMINAL BOARD........UHC,UHH,UHM,UHV	EA	1
290C	24	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE........UHC,UHH,UHM,UHV	EA	1
290C	25	MOOZZ		96906	MS18029-11S10	.COVER........UHC,UHH,UHM,UHV	EA	1
290C	26	PAOZZ	5940-00-143-4771	96906	MS25036-103	.TERMINAL,LUG........UHC,UHH,UHM,UHV	EA	1
290C	27	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL,LUG........UHV	EA	5
290C	28	PAOZZ	5310-00-619-1148	96906	MS15795-808	.WASHER,FLAT........UHC,UHH,UHM,UHV	EA	16
290C	30	PAOZZ	5310-00-638-9857	88044	AN960C6L	.WASHER,FLAT........UHC,UHH,UHM,UHV	EA	20
290C	31	PAOZZ	5310-00-595-6211	96906	MS15795-803	.WASHER,FLAT........UHC,UHH,UHM,UHV	EA	2
290C	32	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK........UHC,UHH,UHM,UHV	EA	10
290C	33	PAOZZ	5310-00-933-8118	9C906	MS35338-135	.WASHER,LOCK........UHC,UHH,UHM,UHV	EA	2
290C	34	AOOOO		81996	1560-UH1-865	.WIRE HARNESS........UHC,UHH,UHM,UHV	EA	1

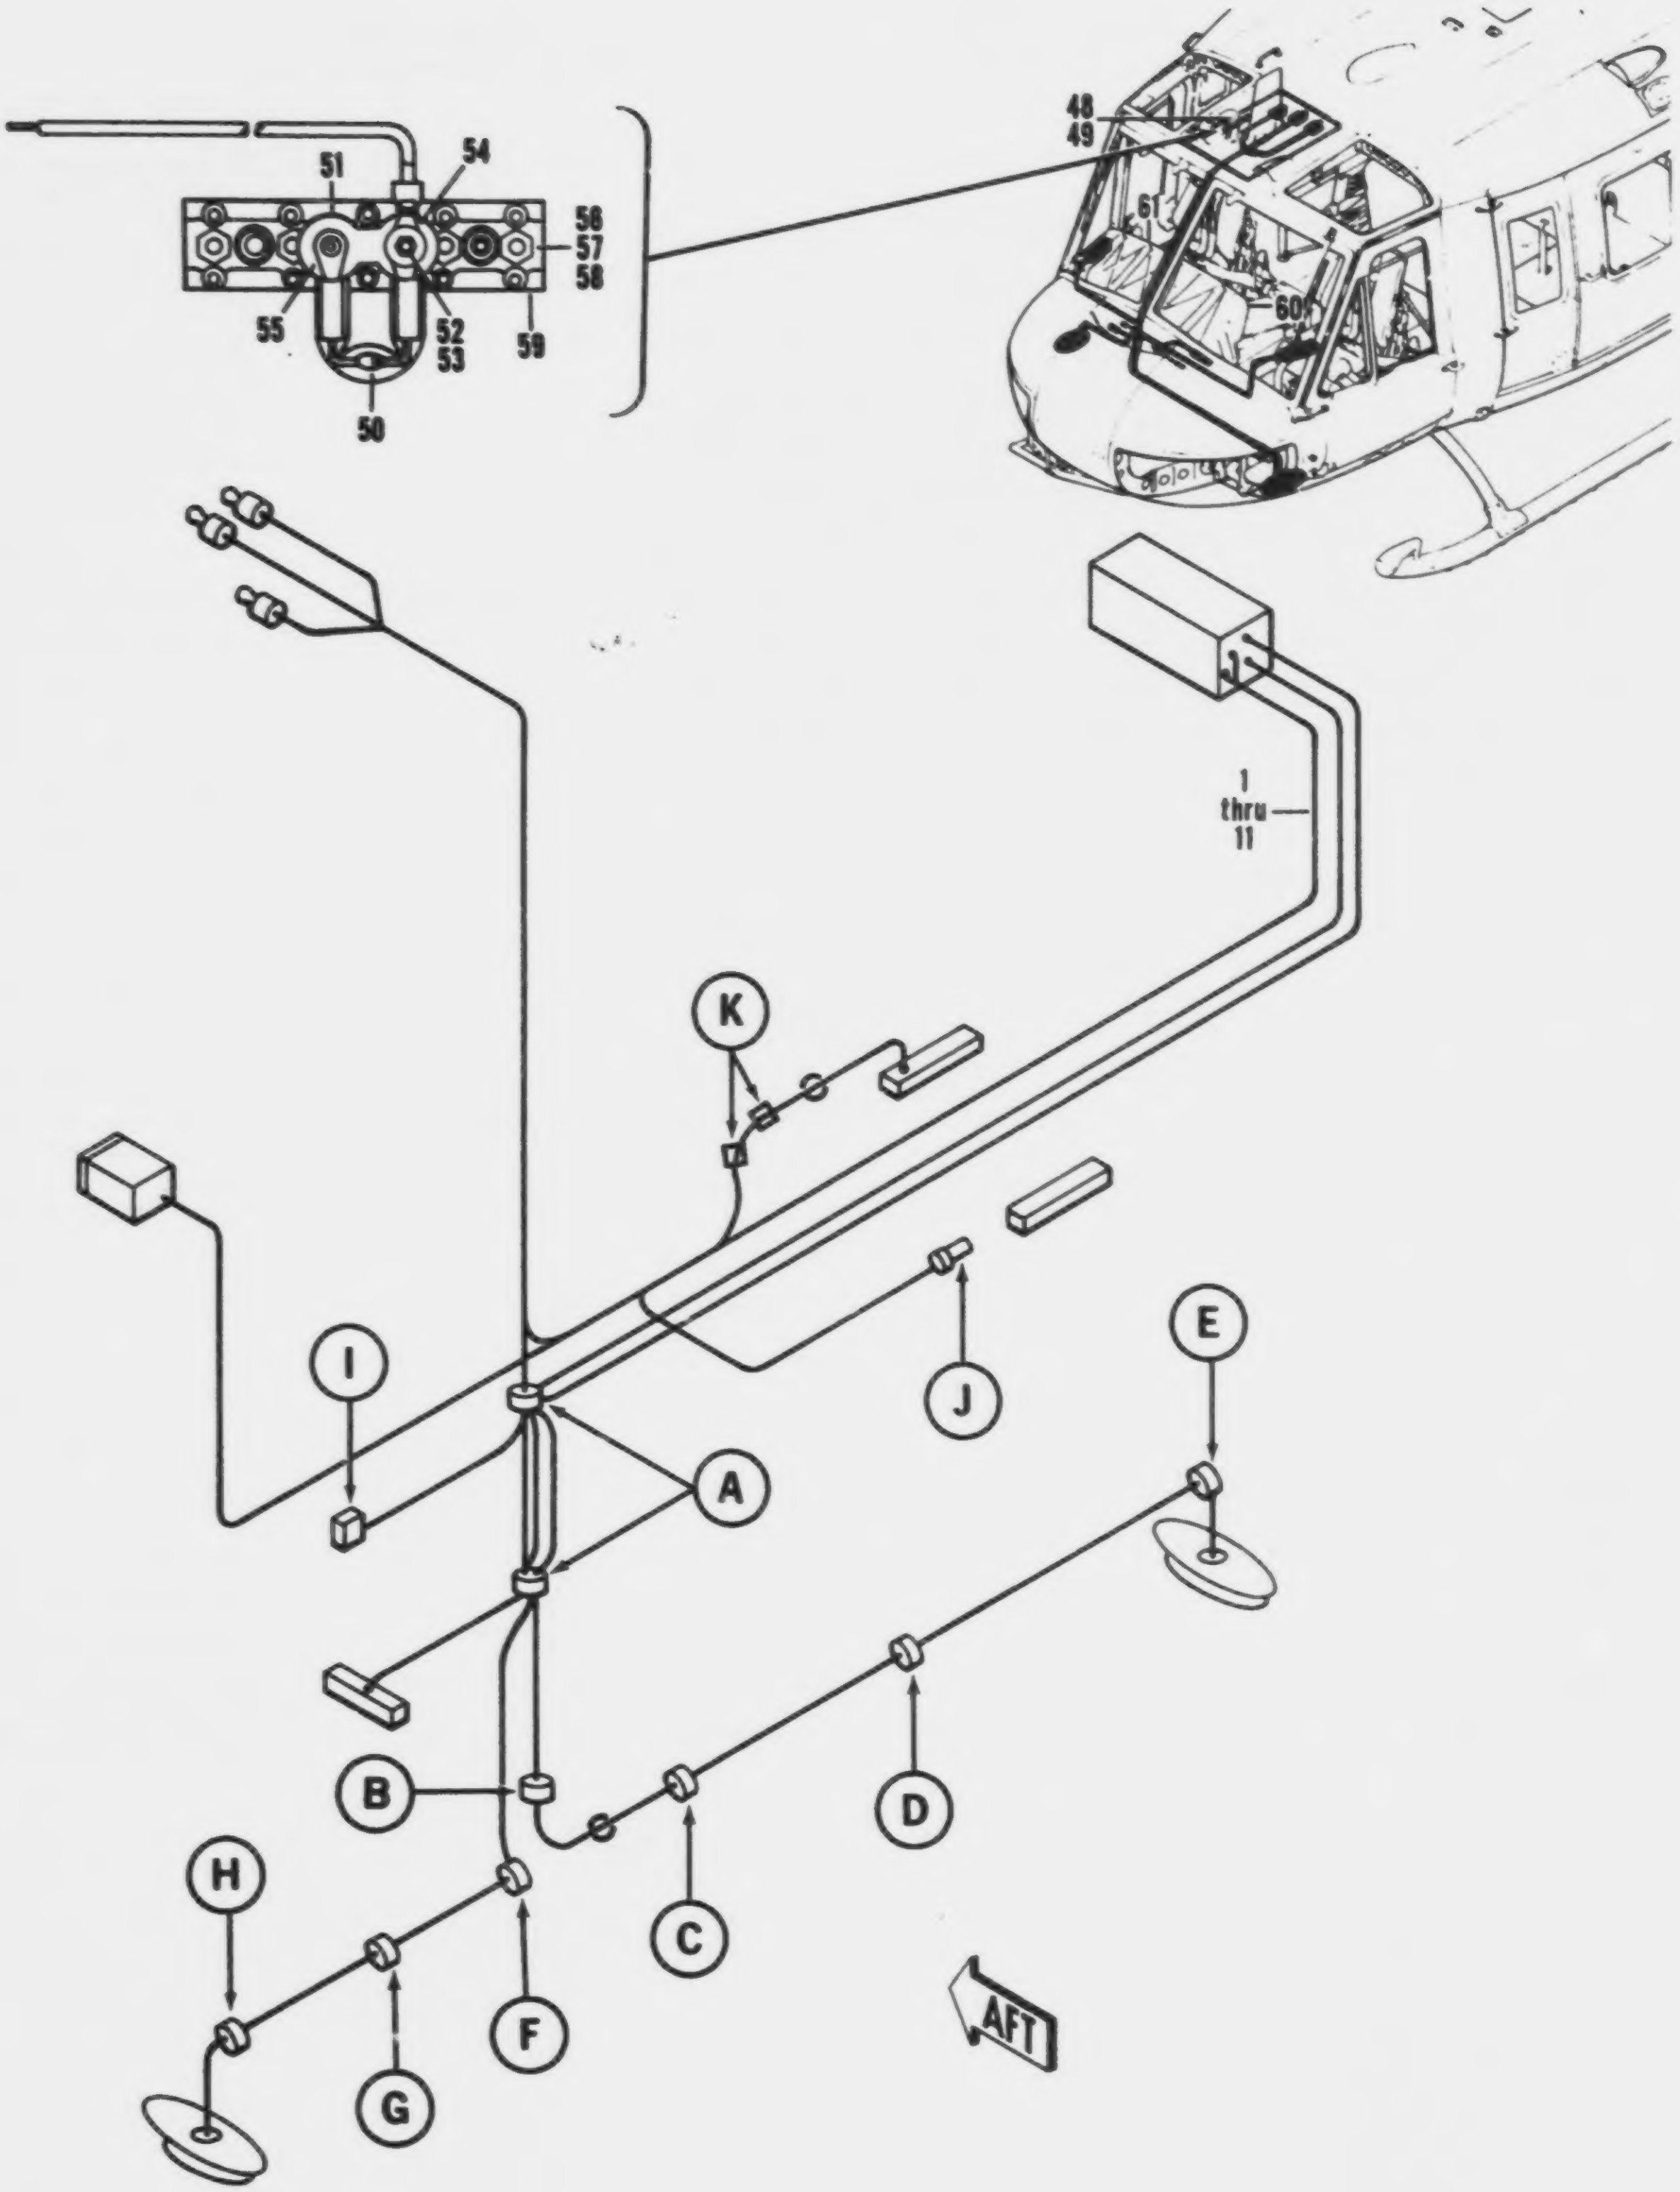
48
49
51
54
56
57
58
55
52
53
59
50
61
60
1
thru
11
K
I
J
E
A
B
D
C
H
F
G
AFT

Figure 290D. Installation, Altimeter Set Electronic, AN/APN-209(V) (Sheet 1 of 3)

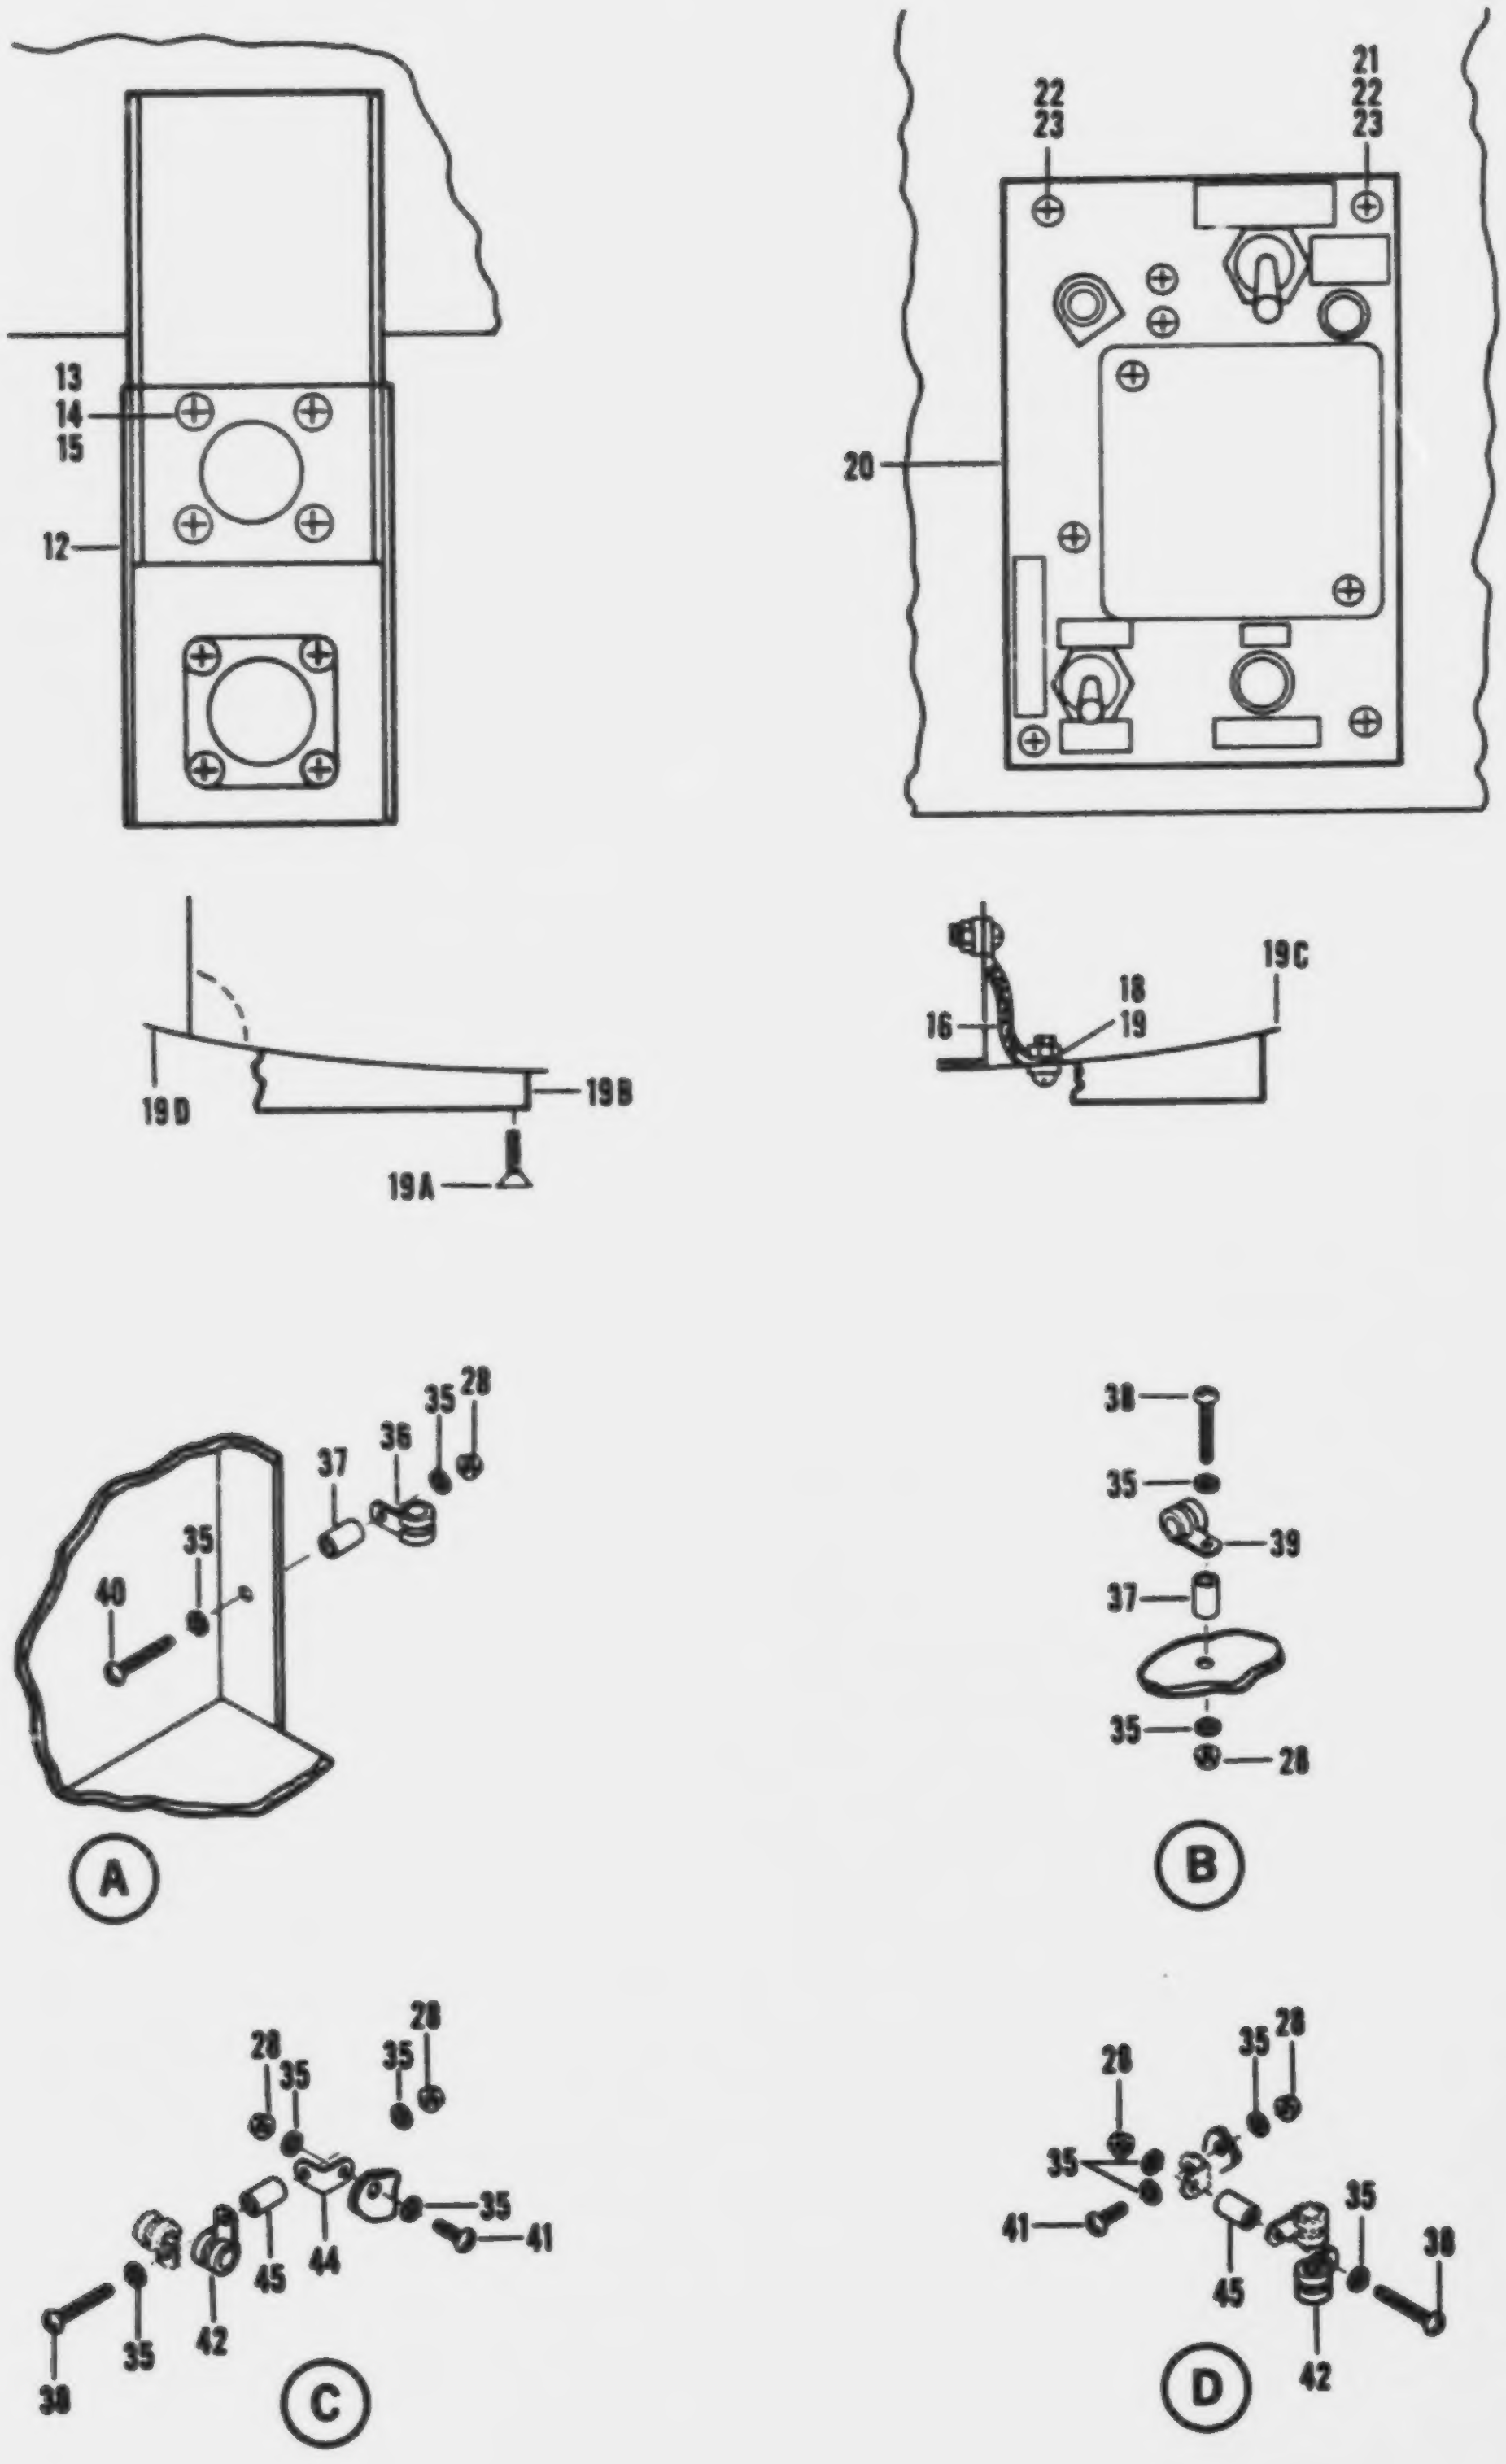
13
14
15
12
22
23
21
22
23
20
16
18
19
19C
19D
19B
19A
35
28
37
36
35
40
A
38
35
39
37
35
28
B
28
35
28
35
35
41
45
44
42
38
35
C
28
35
28
35
41
45
35
38
42
D

Figure 290D. Installation, Altimeter Set Electronic, AN/APN-209(V) (Sheet 2 of 3)

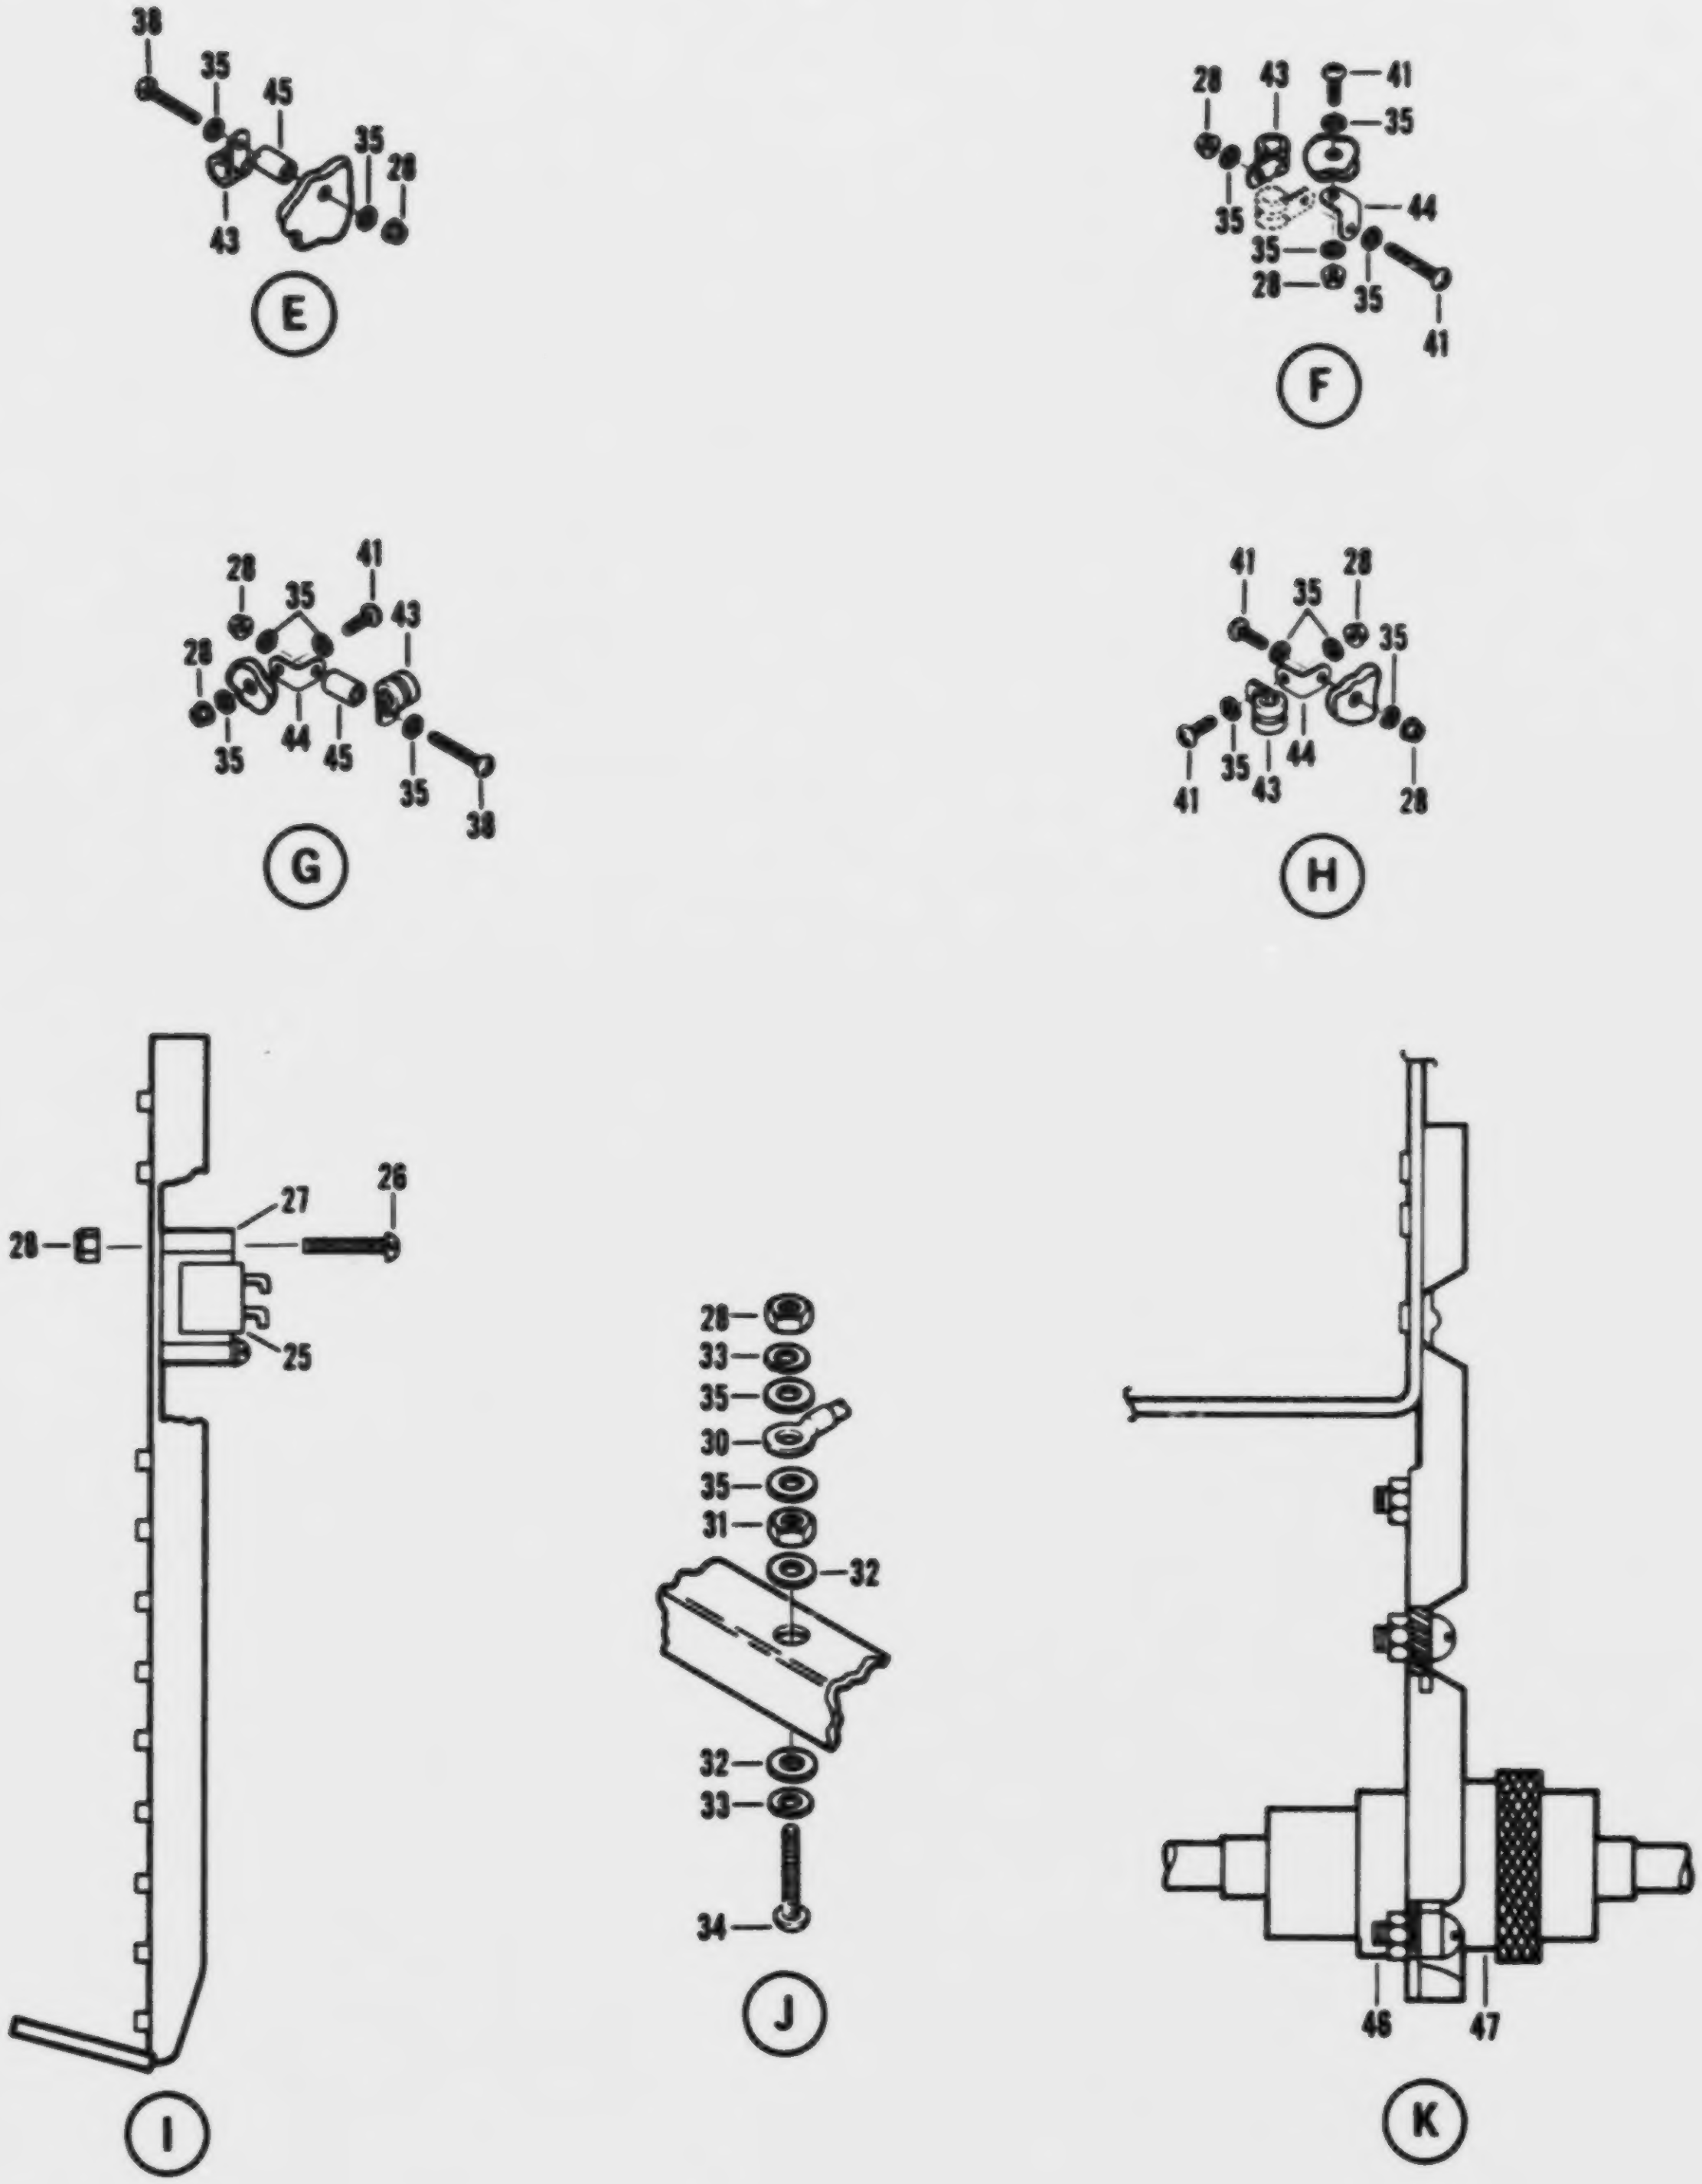
38
35
45
35
28
43
E
28
43
41
35
35
44
35
28
35
41
F
41
28
35
43
28
35
44
45
35
38
G
41
28
35
35
41
35
43
44
28
H
26
27
28
25
I
28
33
35
30
35
31
32
32
33
34
J
46
47
K

Figure 290D. Installation, Altimeter Set Electronic, AN/APN-209(V) (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
2900		XCFZZ		81996	1560-UH1-897	INSTL,RADAR ALTIMETER AN/APN-209 USE-AFT-CMP-W MWO 55-1520-210-30-48 USBL EFF 66-746 THRU 66-1210 & 66-16000 THRU 66-1713 .... UHV	EA	1
2900	1	AOOZZ		81996	1560-UH1-895	.WIRE HARNESS ASSY .... UHV	EA	1
2900	2	PAOZZ	5935-00-430-6306	96906	MS27507-B-12	..ADAPTER,CABLE CLAMP .... UHV	EA	1
2900	3	PAOZZ	5935-00-365-9160	96906	MS27507B10	..ADAPTER,CABLE CLAMP .... UHV	EA	2
2900	4	PBOZZ	6145-00-608-5484	81349	M7078-3-22-1	..CABLE,SPECIAL PURPO .... UHV	FT	V
2900	5	PBOZZ	5935-00-368-0449	96906	MS27473T12B35S	..CONNECTOR,PLUG,ELEC .... UHV	EA	1
2900	6	PBOZZ	5940-01-010-1571	06090	D142-51	..SPLICE,CONDUCTOR .... UHV	EA	7
2900	7	PBOZZ	6145-01-004-7663	81349	M7078-3-22-2	..CABLE,SPECIAL PURP .... UHV	FT	V
2900	7A	PAOZZ	5940-00-460-1733	06090	D142-50	..SPLICE,CONDUCTOR .... UHV	EA	2
2900	8	PBOZZ	6145-00-754-8057	81349	MILW16878TYPEE22	..WIRE,ELECTRICAL .... UHV	EA	1
2900	9	PBOZZ	5935-00-443-9313	96906	MS27473T10B35SA	..CONNECTOR,PLUG,ELEC .... UHV	EA	2
2900	10	PAOZZ	594C-00-557-1629	96906	MS25036-149	..TERMINAL,LUG .... UHV	EA	6
2900	11	PBOZZ	5935-00-261-6872	96906	MS27473T10B35S	..CONNECTOR,PLUG,ELEC .... UHV	EA	1
2900	12	XDOZZ		81996	1560-UH1-904	.BRACKET EXTENSION .... UHV	EA	1
2900	13	PAOZZ	5305-00-054-5648	96906	MS51957-14	.SCREW,MACHINE .... UHV	EA	4
2900	14	PAOZZ	5310-00-782-1349	96906	MS15795-804	.WASHER,FLAT .... UHV	EA	4
2900	15	PAOZZ	5310-00-982-4999	96906	MS21044C04	.NUT,SELF-LOCKING,HE .... UHV	EA	4
2900	16	PBOZZ	1560-01-173-7188	81996	1560-UH1-910	.CABLE ASSEMBLY,SPEC .... UHV	EA	2
2900	18	PAOZZ	5310-00-880-5978	96906	MS15795-807	.WASHER,FLAT .... UHV	EA	4
2900	19	PAOZZ	5310-00-176-6333	96906	MS17830-08C	.NUT,SELF-LOCKING,HE .... UHV	EA	4
2900	19A	PAOZZ	5305-00-889-2991	96906	MS24693C48	.SCREW,MACHINE .... UHV	EA	24
2900	19B	PBOZZ		81996	1560-UH1-909	.GASKET .... UHV	EA	2
2900	19C	AOOZZ		81996	1560-UH1-892-2	.COVER ASSEMBLY,LT .... UHV	EA	1
2900	19D	AOOZZ		81996	1560-UH1-892-1	.COVER ASSEMBLY,RT .... UHV	EA	1
2900	20	XDOZZ		81996	1560-UH1-888	.DOUBLER PLATE .... UHV	EA	1
2900	21	PAOZZ	5305-00-519-5590	96906	MS51957-126	.SCREW,MACHINE .... UHV	EA	4
2900	22	PAOZZ	5310-00-809-8546	96906	MS27183-8	.WASHER,FLAT .... UHV	EA	6
2900	23	PAOZZ	5310-00-982-6814	96906	MS21044C08	.NUT,SELF-LOCKING,HE .... UHV	EA	8
2900	25	PAOZZ	5945-00-226-5241	96906	MS27401-1	.RELAY,ELECTROMAGNET .... UHV	EA	1
2900	26	PAOZZ	5305-00-054-6676	96906	MS51957-51	.SCREW,MACHINE .... UHV	EA	2
2900	27	PAOZZ		81996	1560-UH1-907	.SPACER .... UHV	EA	2
2900	28	PAOZZ	5310-00-208-9255	96906	MS21044C3	.NUT .... UHV	EA	15
2900	30	PAOZZ	5940-00-143-4771	96906	MS25036-103	.TERMINAL,LUG .... UHV	EA	5
2900	31	PAOZZ	5310-00-410-3025	96906	MS35650-305T	.NUT,PLAIN,HEXAGON .... UHV	EA	1
2900	32	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT .... UHV	EA	1
2900	33	PAOZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK .... UHV	EA	2
2900	34	PAOZZ	5305-00-059-3663	96906	MS51958-67	.SCREW,MACHINE .... UHV	EA	1
2900	35	PAOZZ	5310-00-619-1148	96906	MS15795-808	.WASHER,FLAT .... UHV	EA	32
2900	36	PAOZZ	5340-00-424-0790	96906	MS21122-18	.CLAMP,LOOP .... UHV	EA	2
2900	37	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	.SPACER,SLEEVE .... UHV	EA	3
2900	38	PAOZZ	5305-00-059-3664	96906	MS51958-68	.SCREW,MACHINE .... UHV	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
2900	39	XDOZZ		96906	MS21122-17	.CLAMP,LOOP....................UHV	EA	1
2900	40	PAOZZ	5305-00-059-3666	96906	MS51958-70	.SCREW,MACHINE....................UHV	EA	2
2900	41	PAOZZ	5305-00-059-3661	96906	MS51958-65	.SCREW,MACHINE....................UHV	EA	10
2900	42	PAOZZ	5340-00-205-6302	96906	MS21919DG5	.CLAMP,LOOP....................UHV	EA	2
2900	43	PAOZZ	5340-00-052-9552	96906	MS21919DG3	.CLAMP,LOOP....................UHV	EA	4
2900	44	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE....................UHV	EA	3
2900	45	PAOZZ	5365-00-684-3303	80205	NAS43DD3-34	.SPACER,SLEEVE....................UHV	EA	1
2900	46	PAOZZ	5999-00-901-3229	96906	MS24254-20P	.CONTACT....................UHV	EA	4
2900	47	PAOZZ	5999-00-812-2082	96906	MS24255-20S	.CONTACT,ELECTRICAL....................UHV	EA	4
2900	48	MOOZZ		96906	MS18029-1S4	.COVER,TERMINAL....................UHV	EA	1
2900	49	AOOOO		19544	1560-UH1-914	.TERMINAL BOARD....................UHV	EA	1
2900	50	PAFZZ	5961-01-037-0111	81349	JAN1N647-1	..SEMICONDUCTOR DEVIC....................UHV	EA	1
2900	51	PAFZZ	5970-00-431-3695	96906	MS3373-B1	..INSULATOR,PLATE....................UHV	EA	1
2900	52	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX....................UHV	EA	1
2900	53	PAOZZ	5310-00-722-5998	96906	MS15795-805	..WASHER,FLAT....................UHV	EA	1
2900	54	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG....................UHV	EA	1
2900	55	PAOZZ	5940-00-577-3807	96906	MS25036-145	..TERMINAL,LUG....................UHV	EA	2
2900	56	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX....................UHV	EA	1
2900	57	PAOZZ	5310-00-595-6211	96906	MS15795-803	..WASHER,FLAT....................UHV	EA	2
2900	58	PAOZZ	5305-00-054-5649	96906	MS51957-15	..SCREW,MACHINE....................UHV	EA	2
2900	59	PAFZZ		96906	MS27212-1-4	..TERMINAL BOARD....................UHV	EA	1
2900	60	PBOZZ	5365-01-180-3921	81996	1560-UH1-887	.SPACER INSTRUMENT....................UHV	EA	1
2900	61	PAOZZ	5365-01-179-9741	81996	1560-UH1-886	.SPACER,INSTRUMENT....................UHV	EA	1

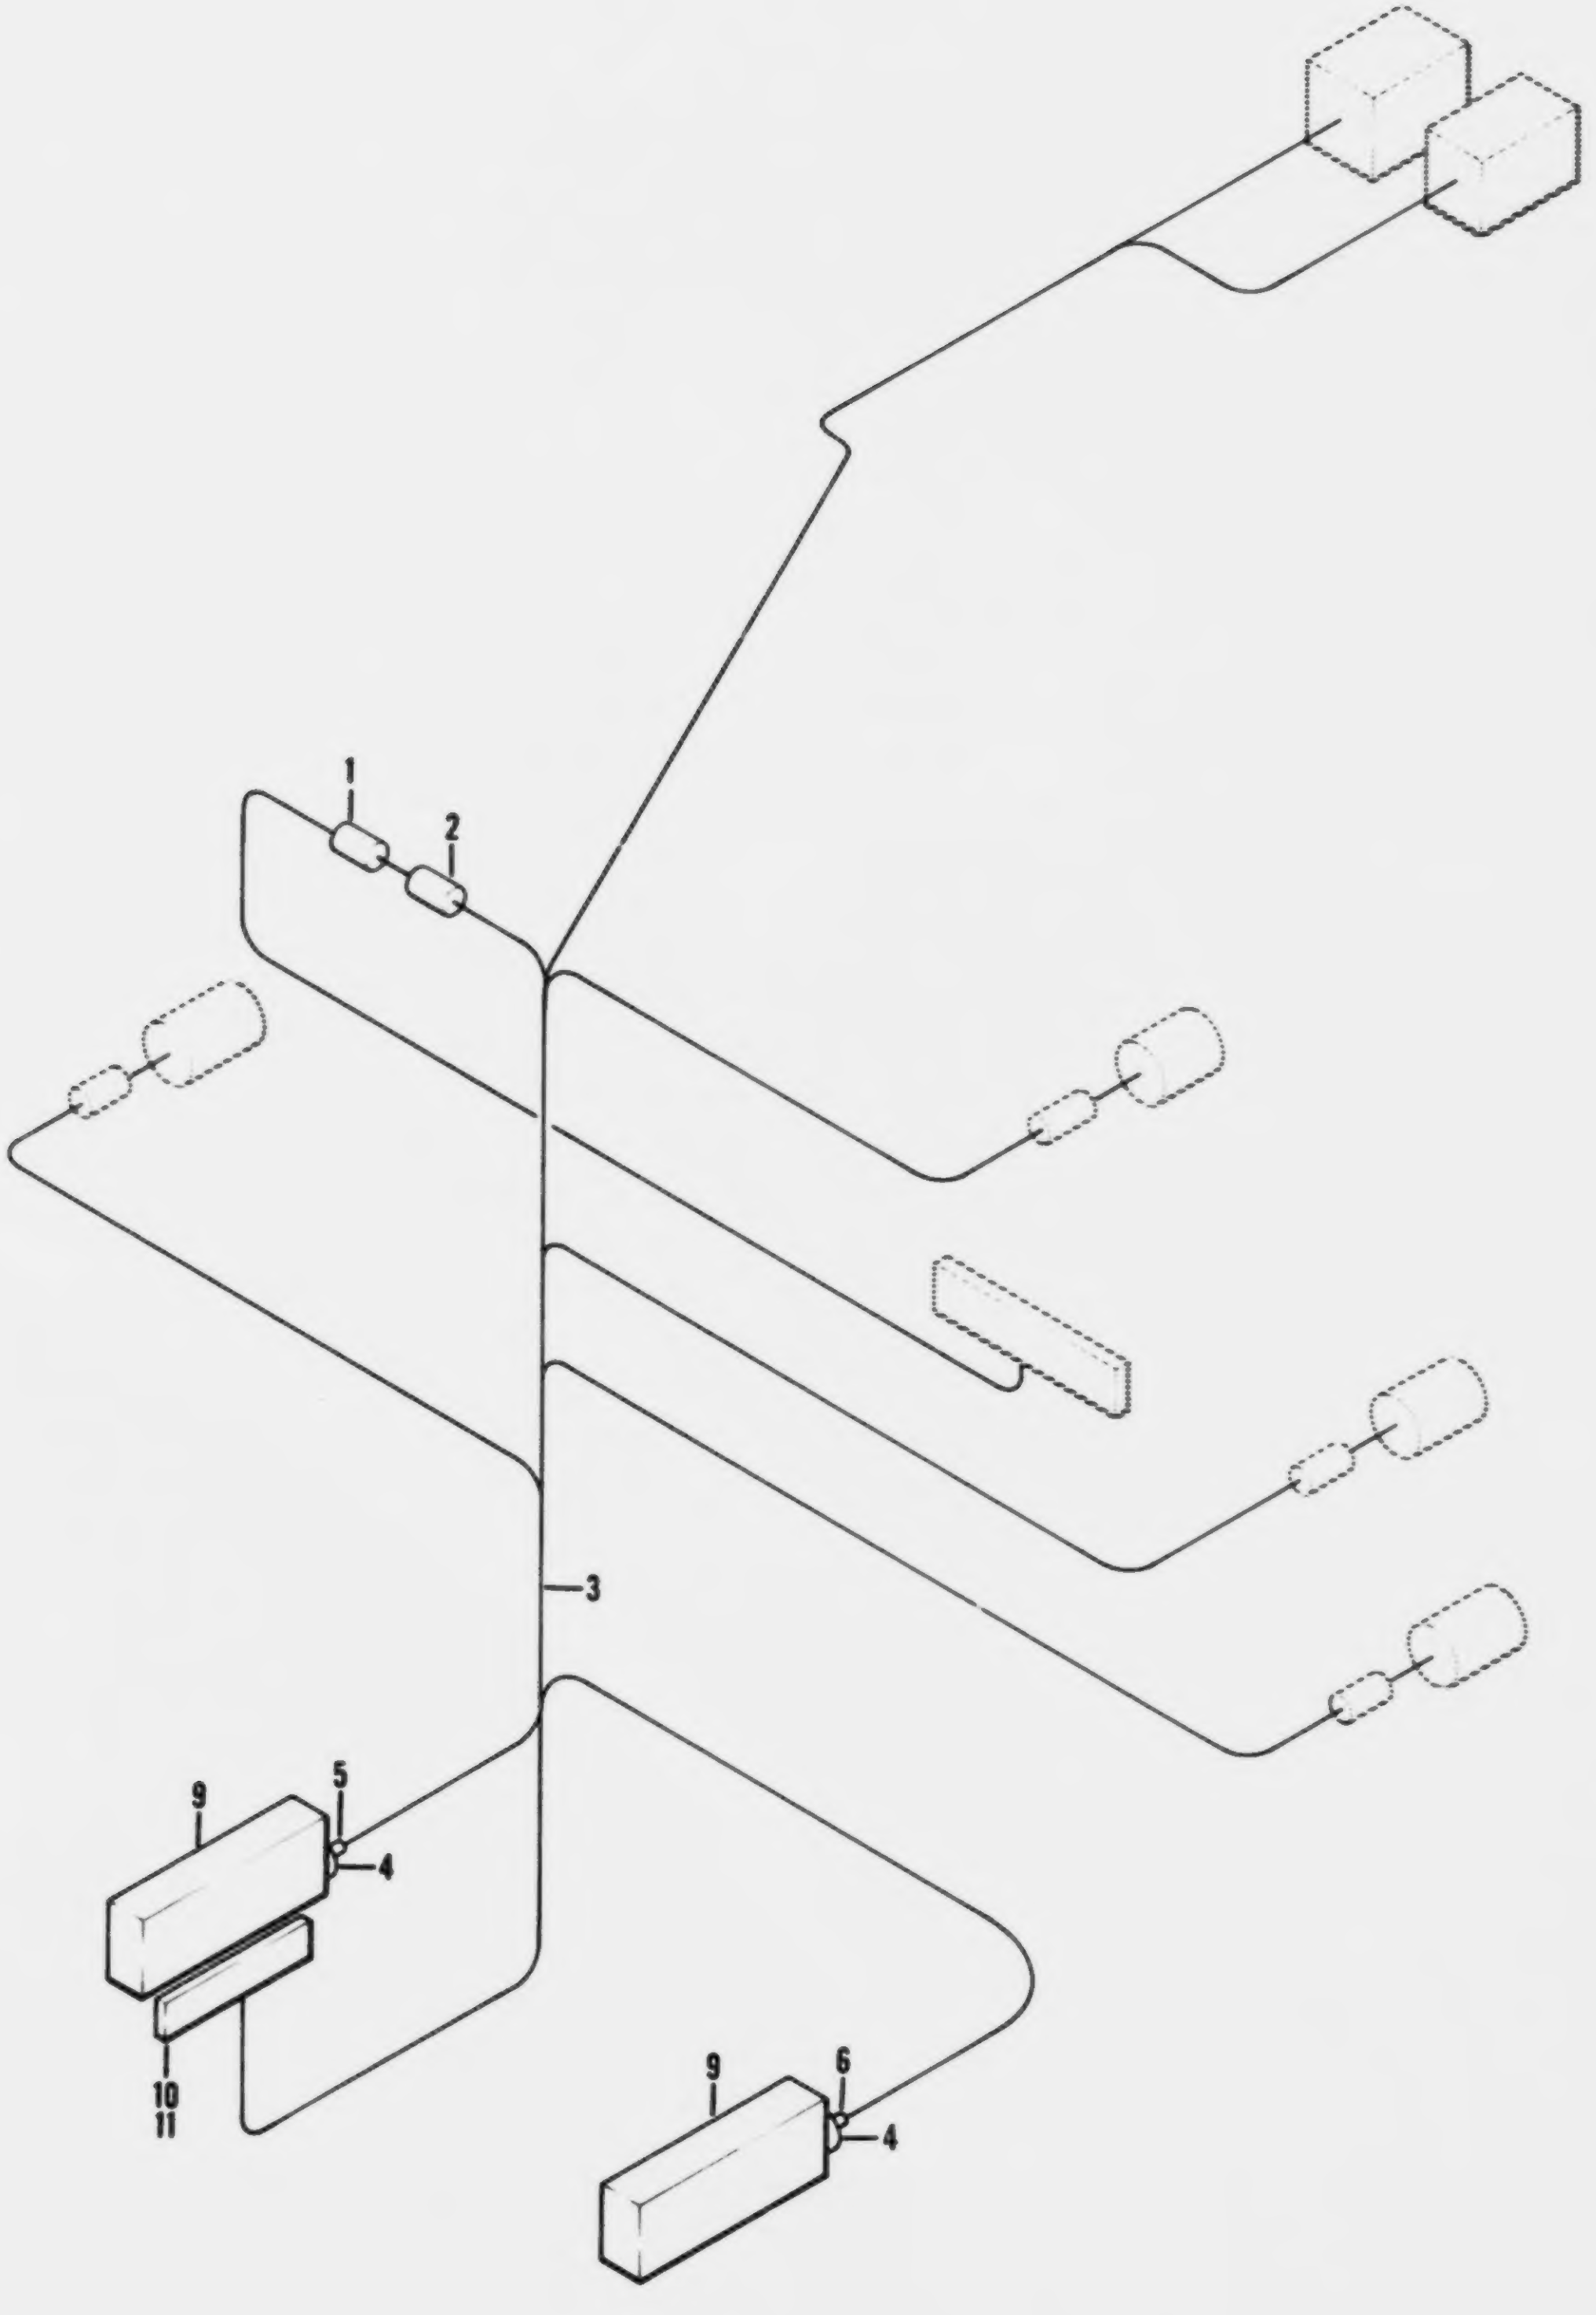
1
2
3
5
9
4
10
11
9
6
4

Figure 290E. Power Supply, 5 Volt (Sheet 1 of 2)

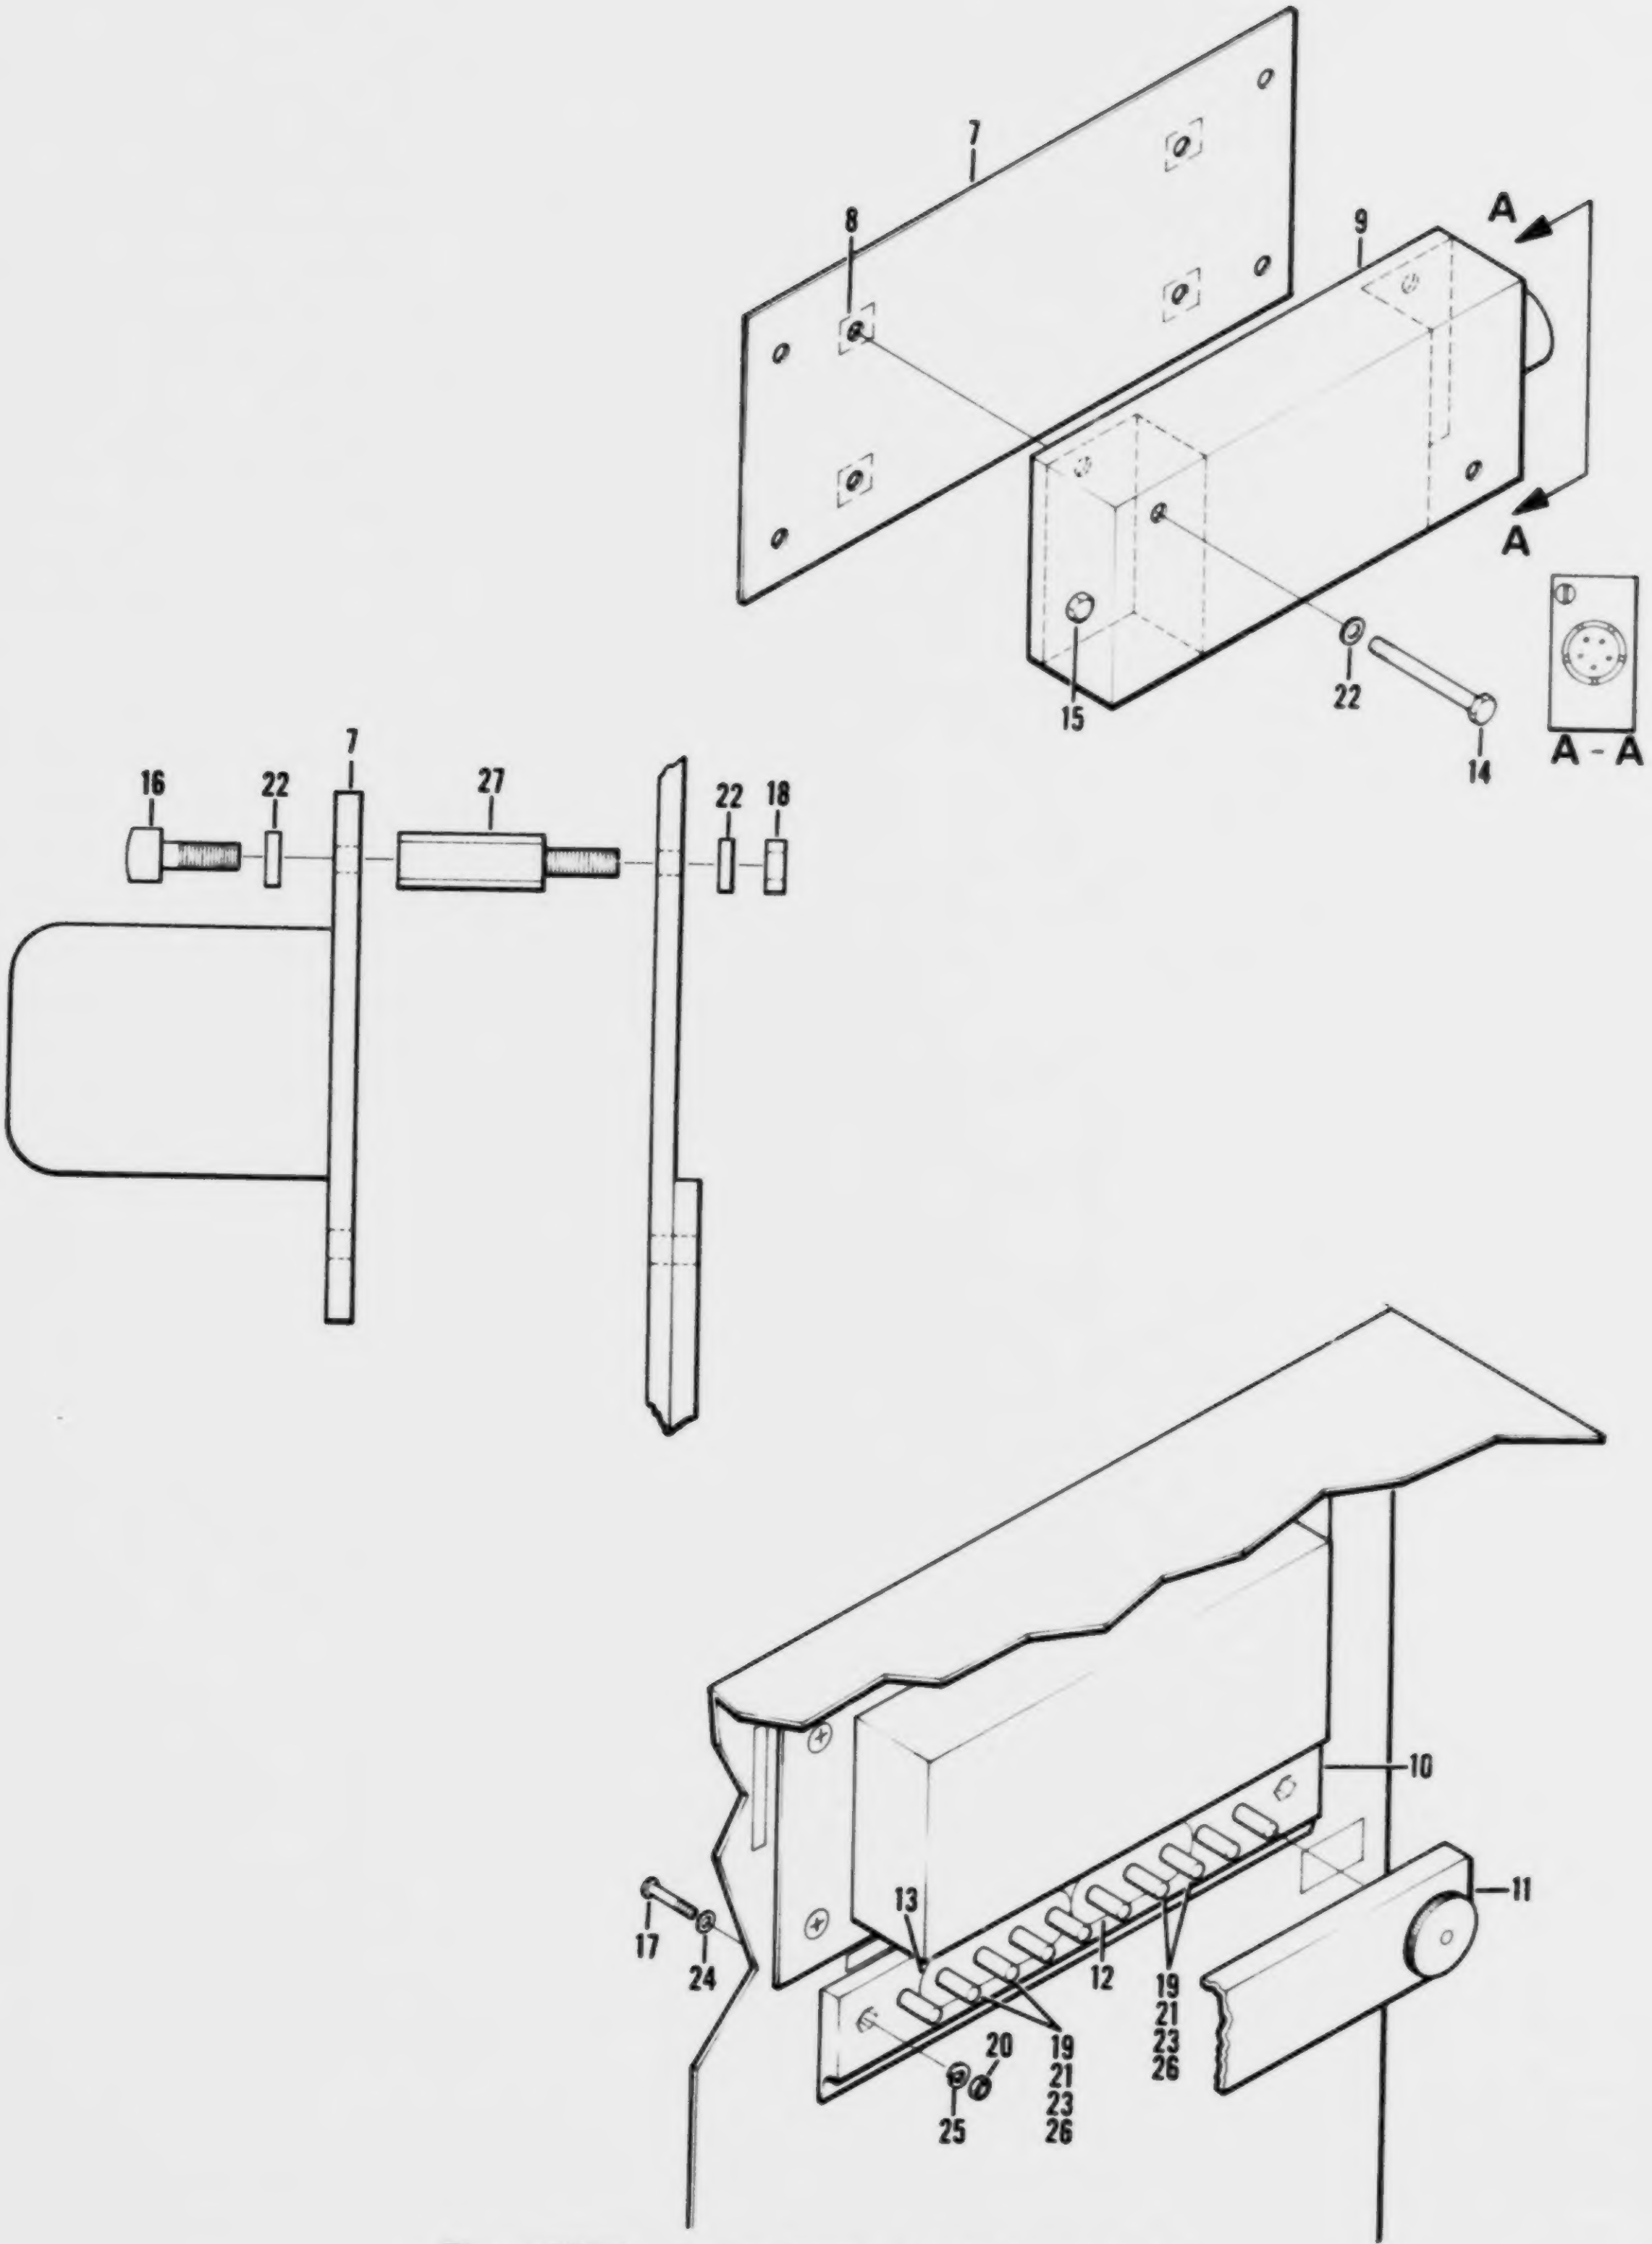
7
8
9
A
A
22
15
14
A - A
16
22
7
27
22
18
7
10
11
13
17
24
12
19
21
23
26
20
25
19
21
23
26

Figure 290E. Power Supply, 5 Volt (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
290E		XCFZZ		20309	ES-D-221534	5 VOLT SUPPLY INSTL SEE FIG 5B FOR NHA..................UHX	EA	1
290E		XCFZZ		20309	ES-F-221650	.WIRING HARNESS AND CABLE INSTL,5 VOLT POWER............UHX	EA	1
290E	1	PAOZA	5999-00-901-3239	96906	M39029/31-241	..CONTACT,ELECTRICAL..................................UHX	EA	1
290E	2	PAOZA	5999-00-812-2082	96906	MS24255-20S	..CONTACT,ELECTRICAL..................................UHX	EA	1
290E	3	A0000		20309	ES-F-221659	..WIRE HARNESS ASSY...................................UHX	EA	1
290E	4	PAOZZ	5935-00-761-3885	96906	MS3126F14-5S	...CONNECTOR,PLUG,ELEC................................UHX	EA	2
290E	5	PAOZZ		81996	1560-UH1-869-5	...MARKER BAND,CABLE..................................UHX	EA	1
290E	6	PAOZZ	9905-01-170-1226	81996	1560-UH1-869-6	...MARKER BAND,CABLE..................................UHX	EA	1
290E	7	XD000		81996	1560-UH1-838	.PLATE MOUNTING ASSY..................................UHX	EA	1
290E	8	PAOZZ	5310-00-764-2391	96906	MS21075-3	..NUT,SELF-LOCKING,PL.................................UHX	EA	4
290E	9	PAOZZ	6130-01-150-3096	81996	1560-UH1-872	.POWER SUPPLY...UHX	EA	2
290E	10	PAOZZ	5940-00-950-1610	96906	MS27212-1-20	.TERMINAL BOARD.......................................UHX	EA	1
290E	11	PAOZZ	5940-00-082-4642	96906	MS18029-11S20	.COVER,TERMINAL BOAR..................................UHX	EA	1
290E	12	PAOZZ		96906	MS25226-2-3	.BUS BAR..UHX	EA	1
290E	13	PAOZZ	6150-00-557-7660	96906	MS25226-2-4	.LINK,TERMINAL CO.....................................UHX	EA	1
290E	14	PAOZZ	5306-00-182-1946	88044	AN3CH20A	.BOLT,MACHINE...UHX	EA	8
290E	15	PAOZZ	5306-00-180-2769	88044	AN3CH3A	.BOLT,MACHINE...UHX	EA	8
290E	16	PAOZZ	5305-00-543-2753	96906	MS35266-61	.SCREW,MACHINE..UHX	EA	8
290E	17	PAOZZ	5305-00-064-5651	96906	MS51957-17	.SCREW,MACHINE..UHX	EA	2
290E	18	PAOZZ	5310-00-208-9255	96906	MS21044C3	.NUT,SELF-LOCKING,HE..................................UHX	EA	8
290E	19	PAOZZ	5310-00-982-6813	96906	MS21044C06	.NUT,SELF-LOCKING,HE..................................UHX	EA	4
290E	20	PAOZZ	5310-00-088-0551	96906	MS21044-N04	.NUT,SELF-LOCKING,HE..................................UHX	EA	2
290E	21	PAOZZ	5310-00-807-1472	96906	MS21042-L06	.NUT,SELF-LOCKING,EX..................................UHX	EA	8
290E	22	PAOZZ	5310-00-619-1148	96906	MS15795-808	.WASHER,FLAT..UHX	EA	V
290E	23	PAOZZ	5310-00-638-9857	88044	AN960C6L	.WASHER,FLAT..UHX	EA	4
290E	24	PAOZZ	5310-00-595-6211	96906	MS15795-803	.WASHER,FLAT..UHX	EA	2
290E	25	PAOZZ	5310-00-933-8118	96906	MS35338-135	.WASHER,LOCK..UHX	EA	2
290E	26	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK..UHX	EA	4
290E	27	PAOZZ	5307-01-096-0512	06540	9754-SS-1032	.STUD,EXTENSION.......................................UHX	EA	8

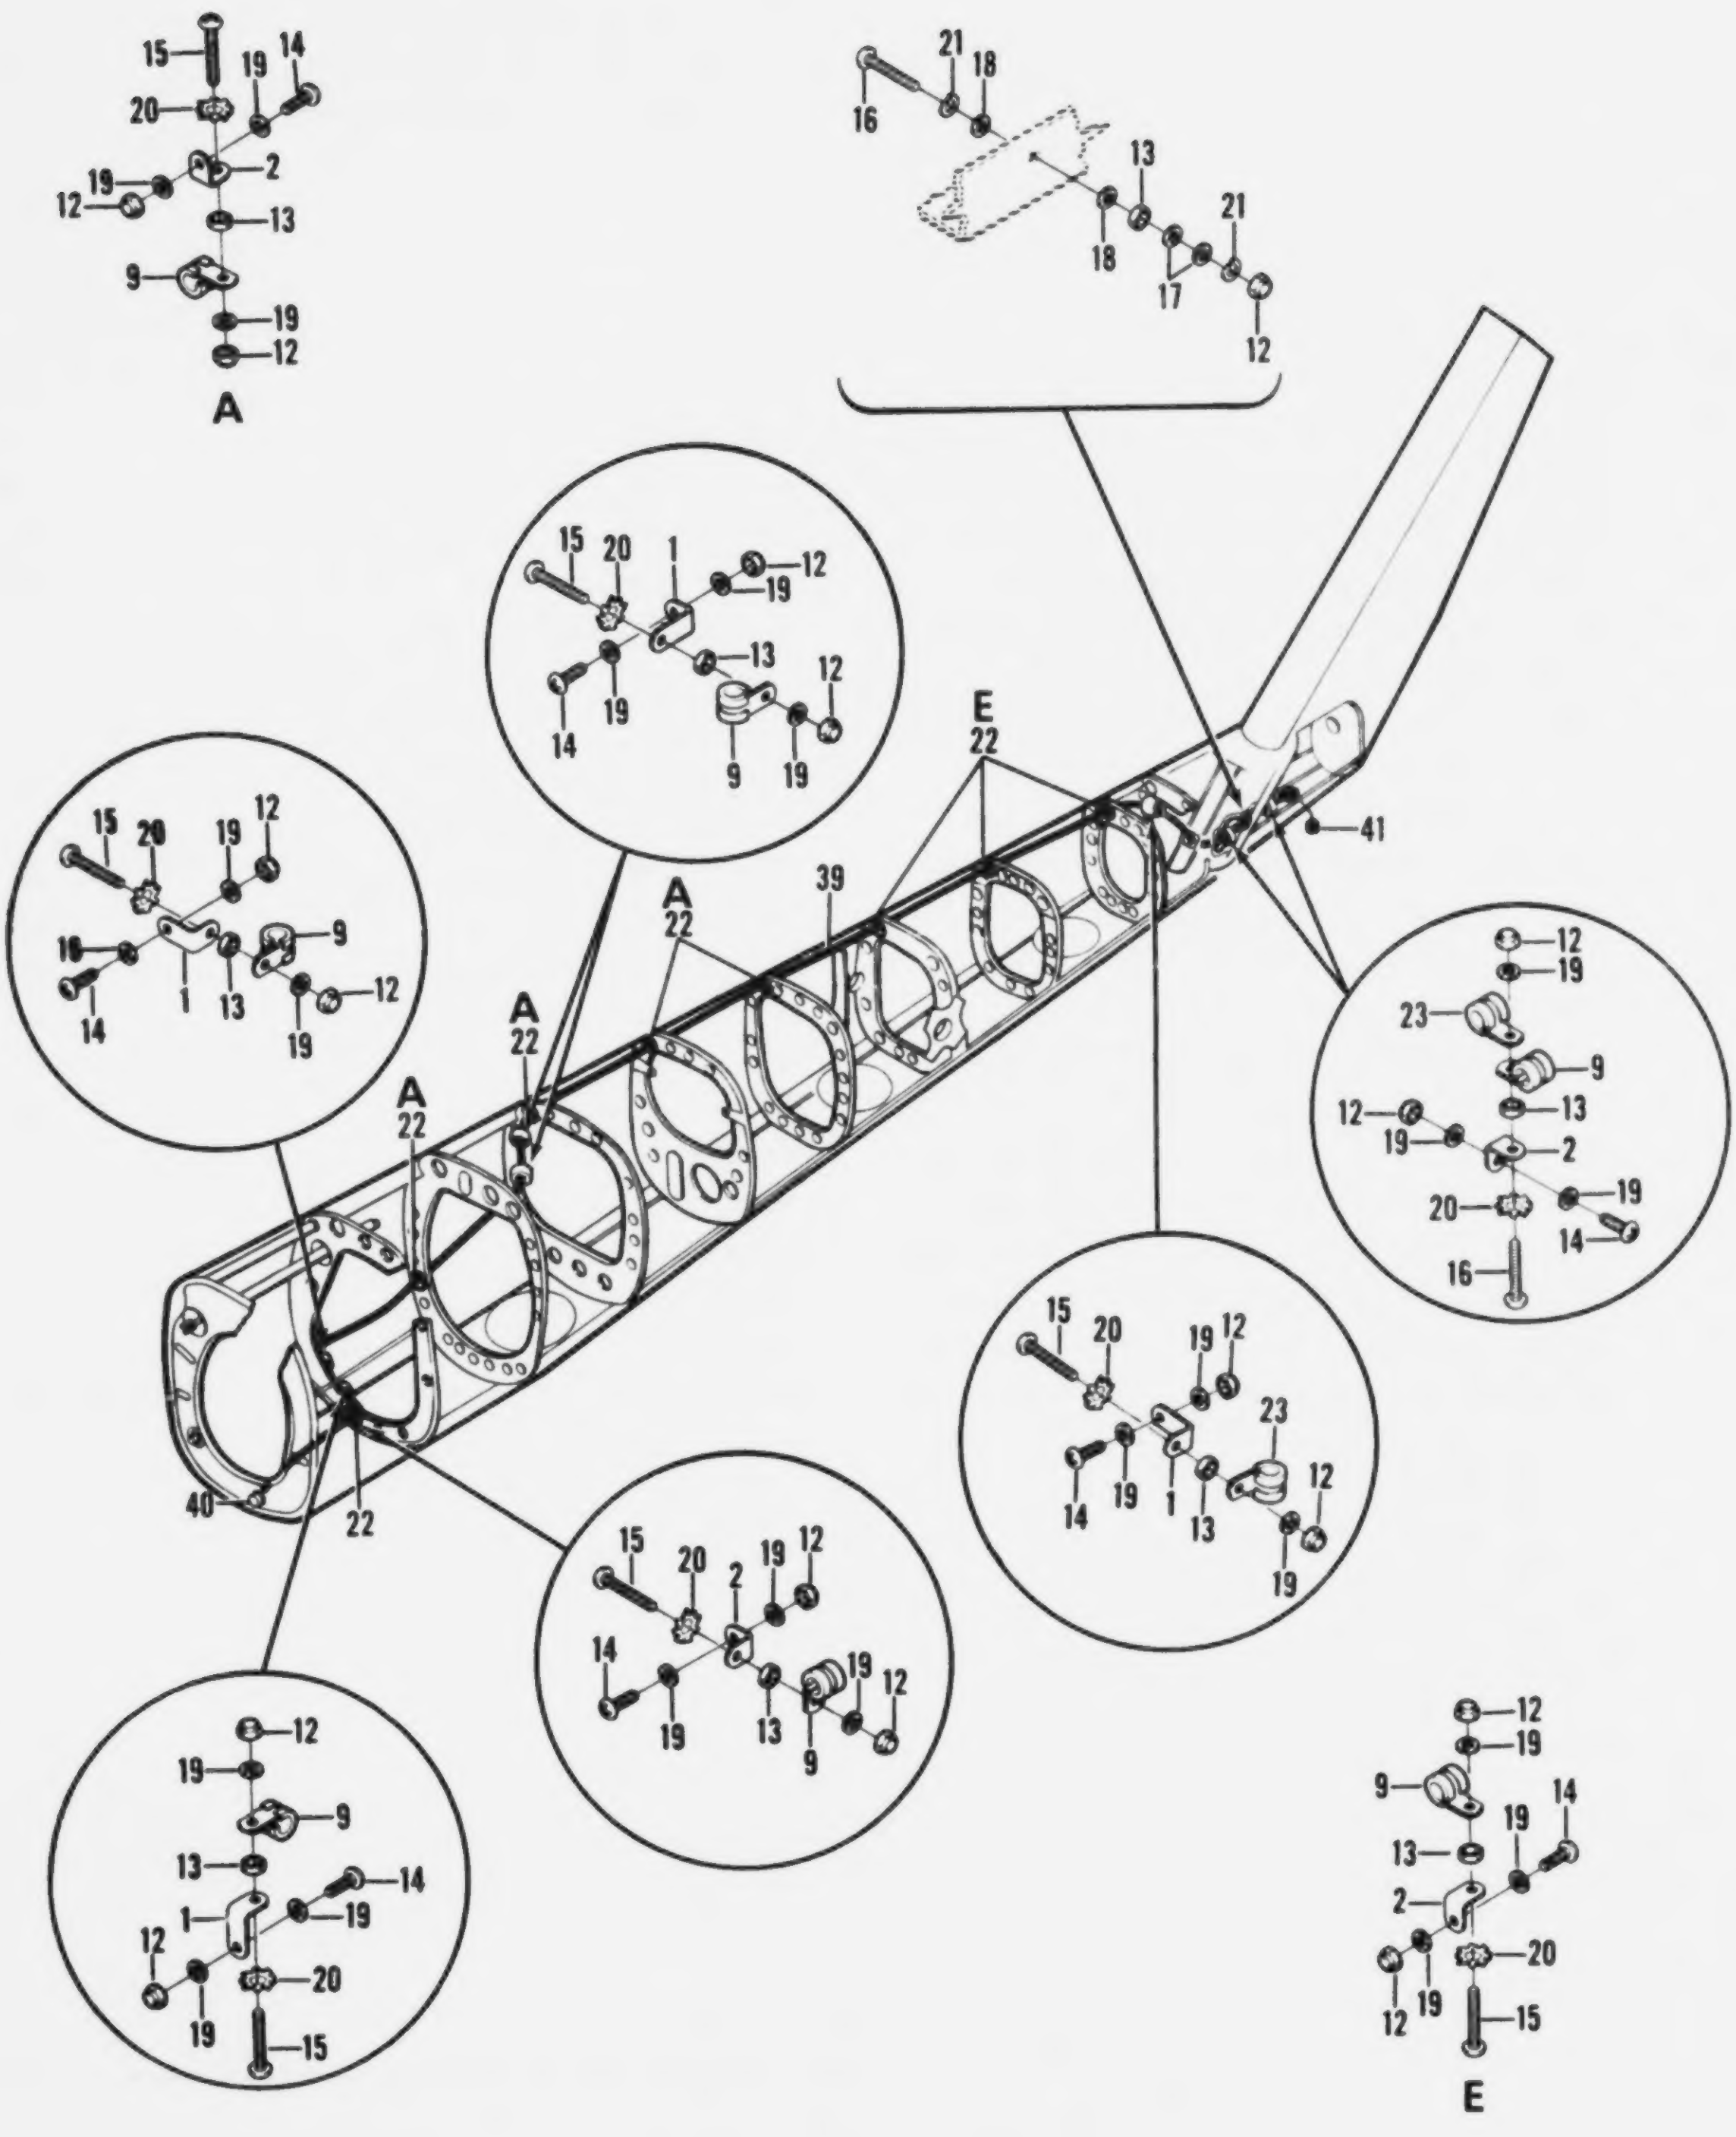
15
19
14
20
2
19
12
13
9
19
12
A
21
18
16
13
21
18
17
12
15
20
1
12
19
13
12
14
19
9
19
E
22
41
15
20
19
12
16
9
1
13
12
14
19
A
22
39
A
22
A
22
12
19
23
9
13
12
19
2
19
20
14
16
15
20
19
12
23
12
14
19
1
13
19
40
22
15
20
2
19
12
14
19
19
12
13
9
12
19
9
13
14
1
19
12
20
19
15
12
19
9
14
19
13
2
20
12
19
15
E

Figure 290F. Wiring Harness and Cable Installation, Tailboom (Sheet 1 of 3)

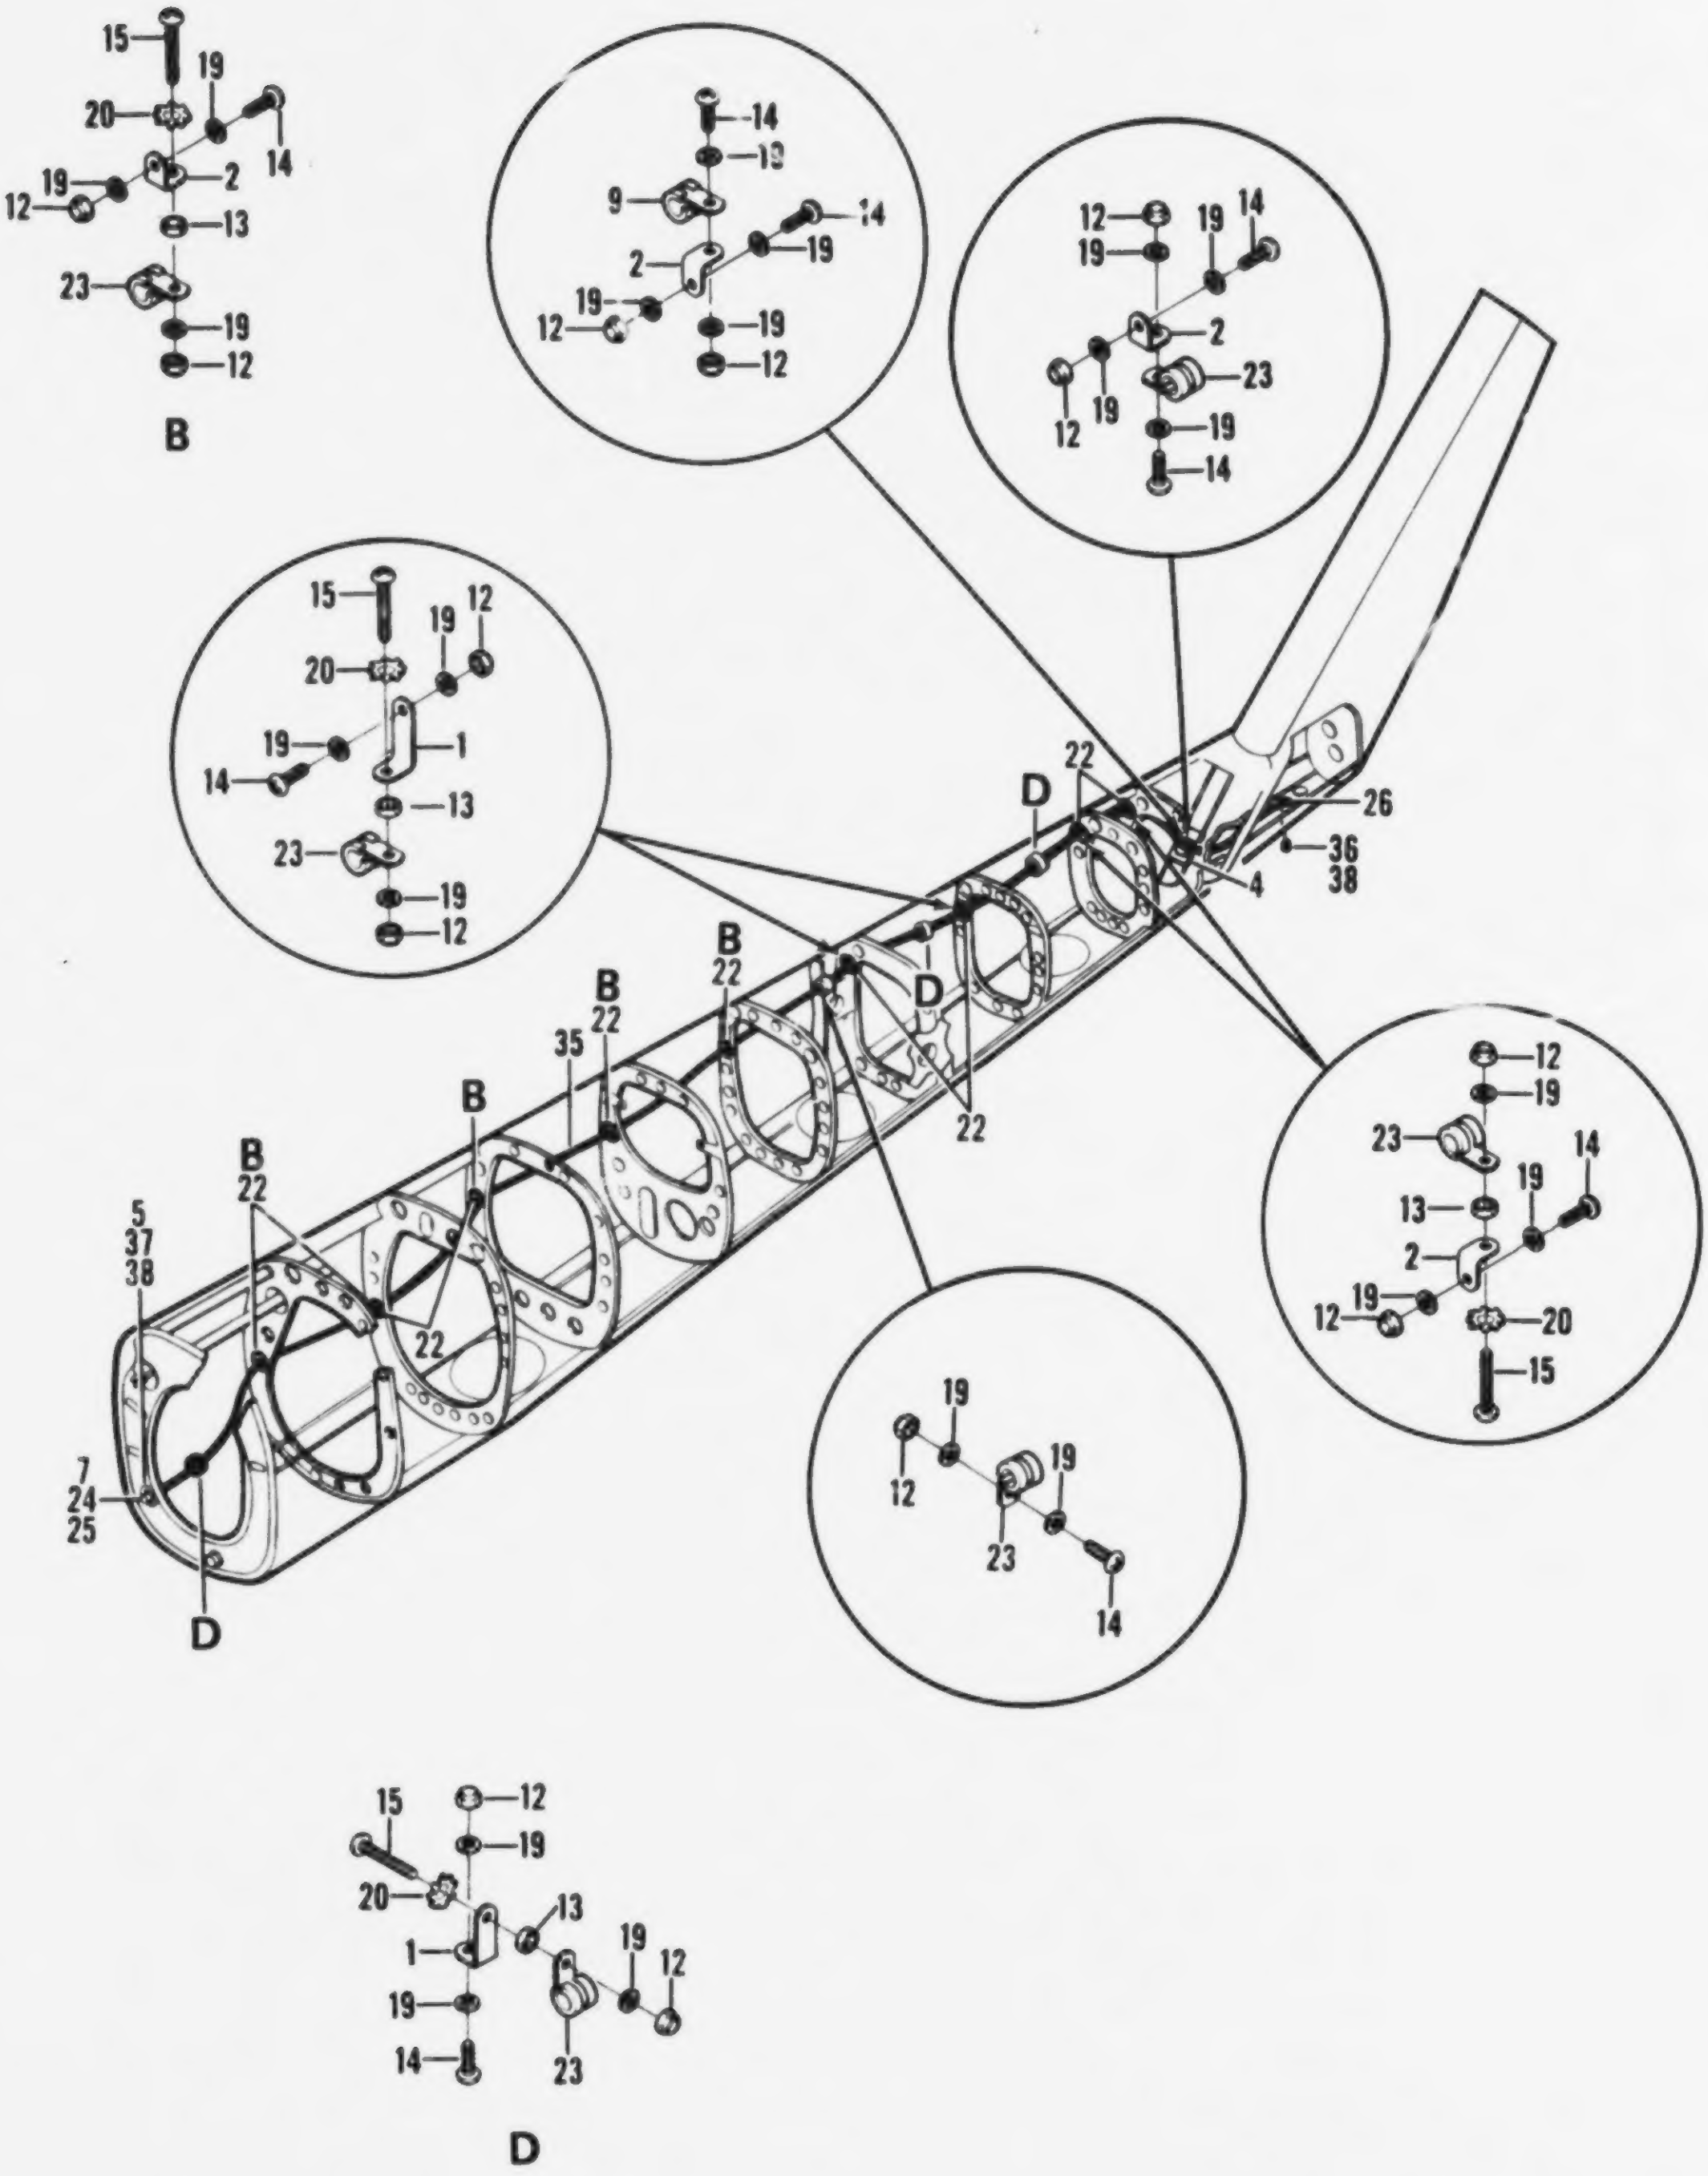
15
19
20
14
19
12
2
13
23
19
12
B
14
13
9
14
2
19
19
12
19
12
12
19
14
19
2
23
12
19
19
14
15
19
12
20
19
1
14
13
23
19
12
D
22
26
4
36
38
B
22
B
22
35
D
22
B
B
22
5
37
38
22
7
24
25
D
12
19
23
13
14
19
2
19
12
20
15
19
12
19
23
14
15
12
19
20
13
1
19
12
19
14
23
D

Figure 290F. Wiring Harness and Cable Installation, Tailboom (Sheet 2 of 3)

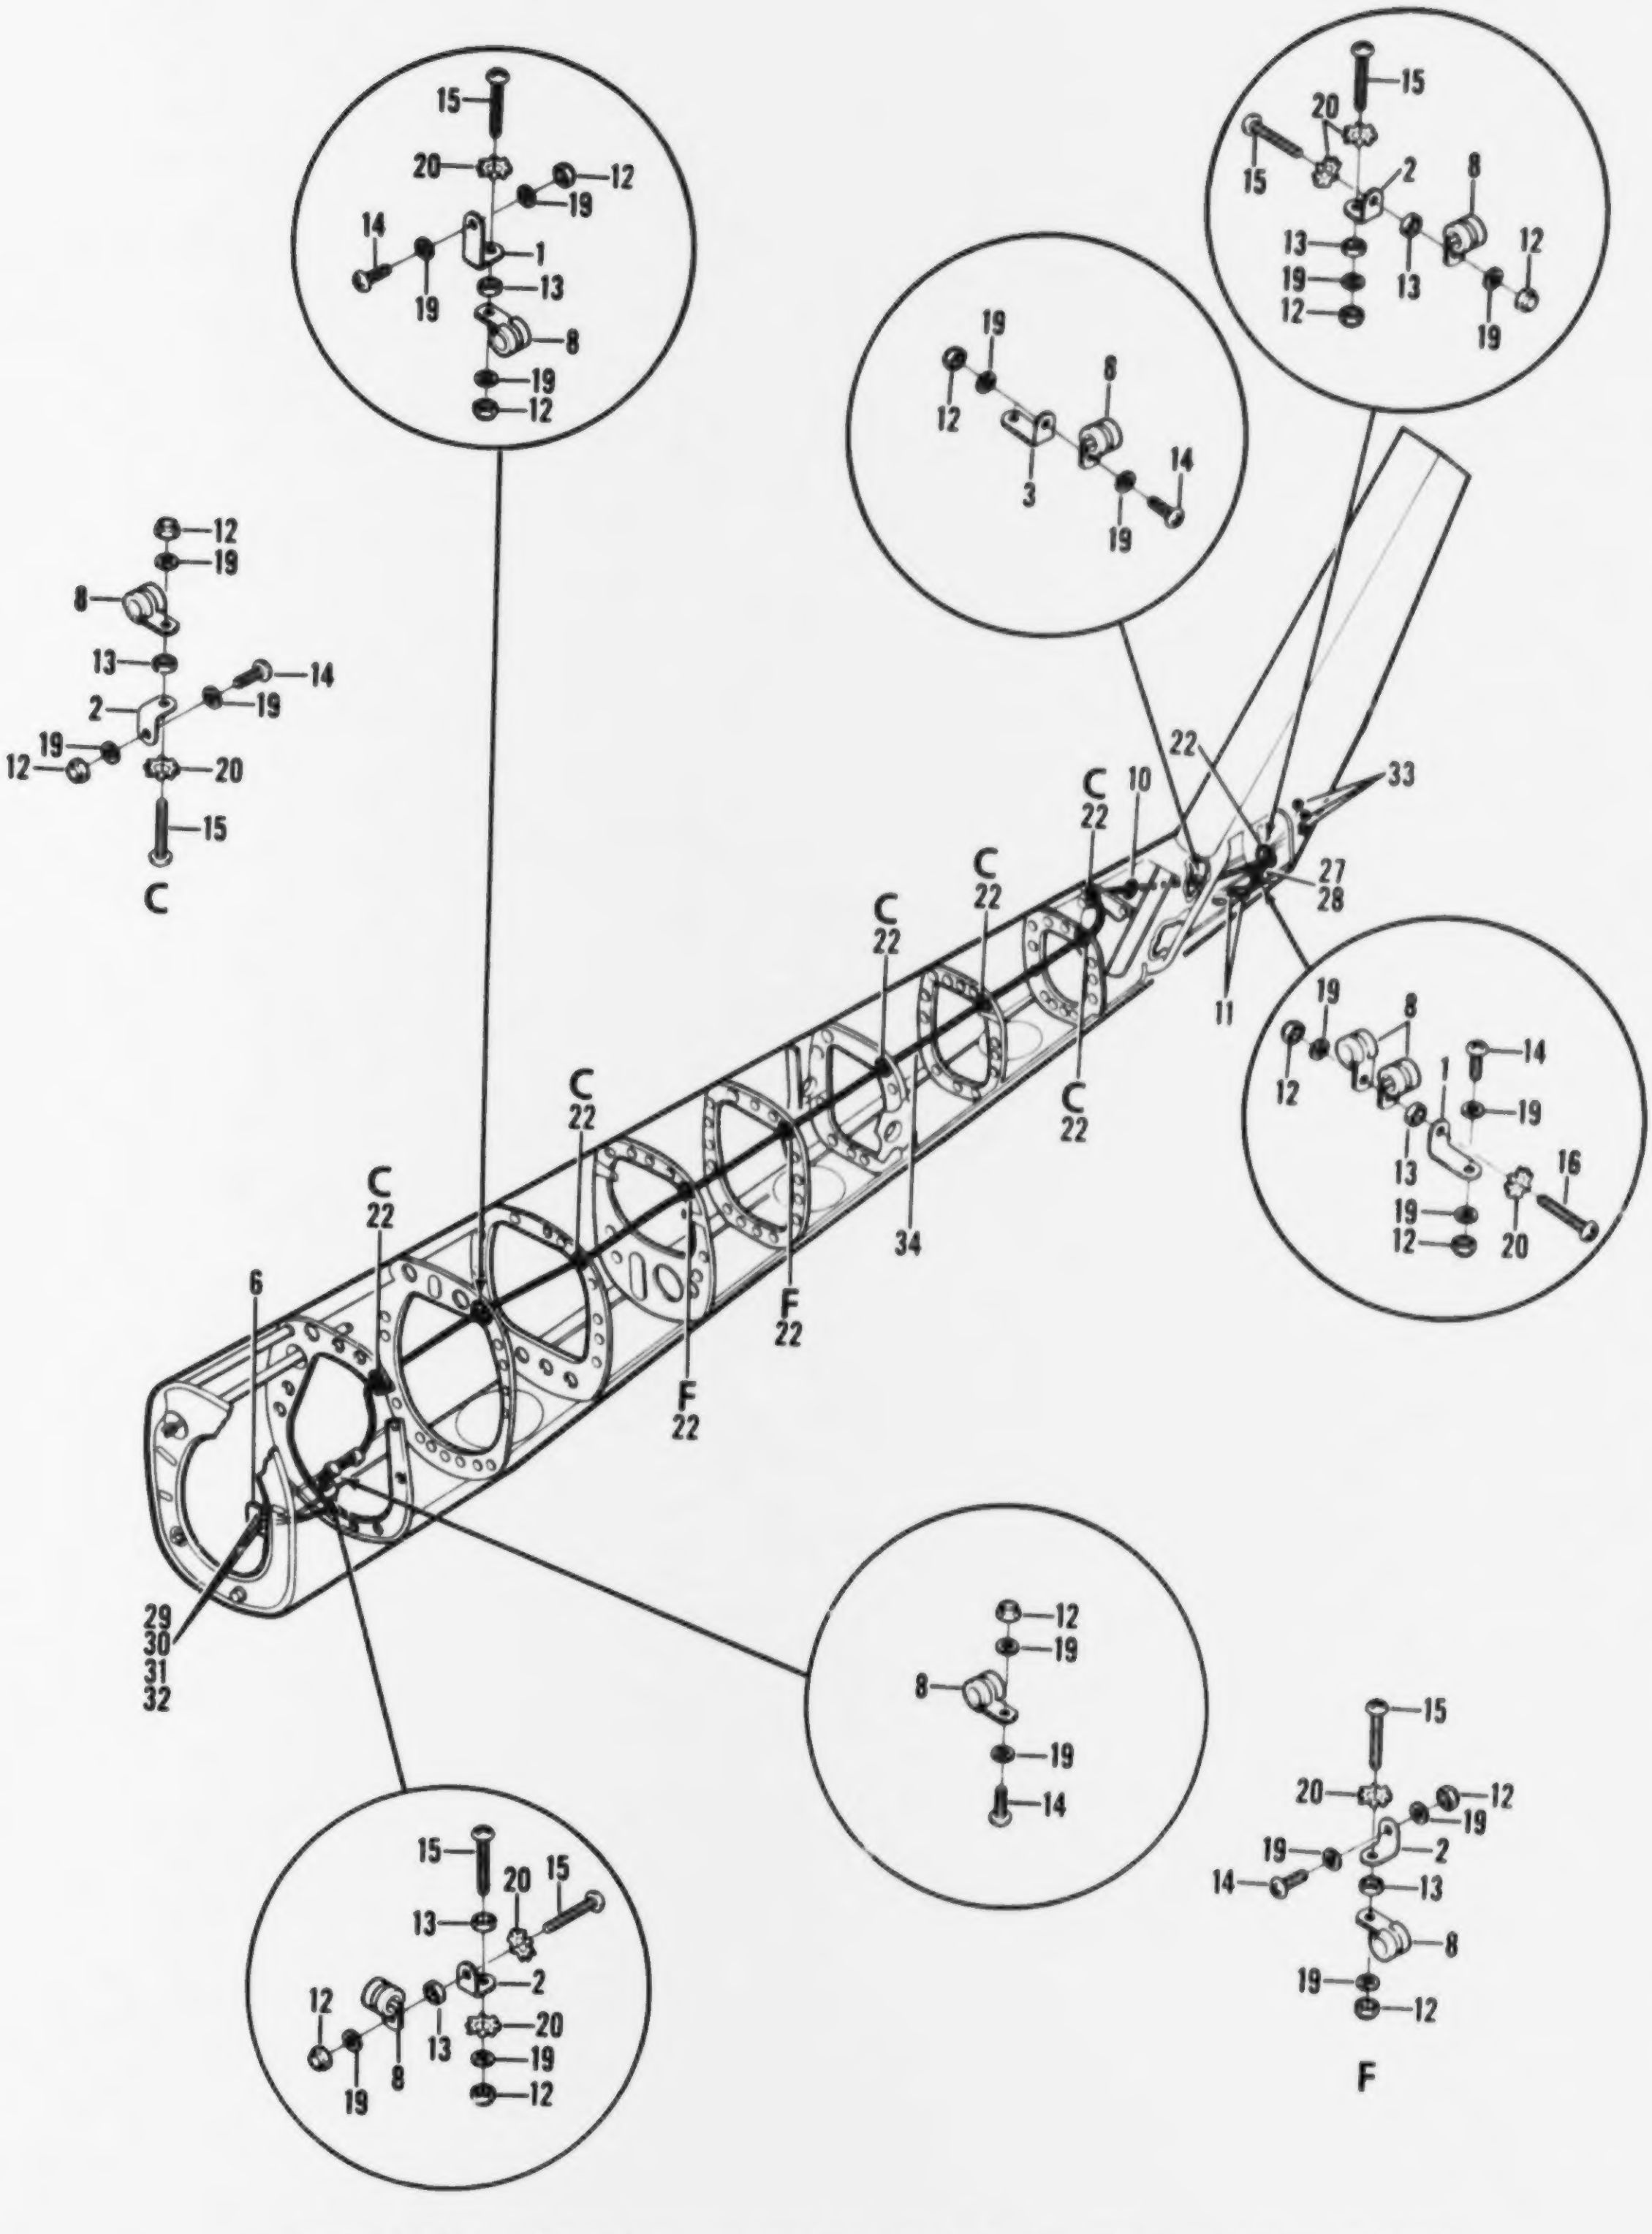
15
20
12
19
14
1
13
19
8
19
12
15
20
15
2
8
13
12
19
13
12
19
19
8
12
3
14
19
12
19
8
13
14
2
19
19
12
20
15
C
22
33
C
22
10
27
28
C
22
C
22
11
19
8
12
14
1
19
13
16
19
12
20
C
22
C
22
34
C
22
C
22
F
22
F
22
6
29
30
31
32
12
19
8
19
14
15
20
12
19
19
2
14
13
8
19
12
F
15
20
15
13
2
12
20
13
19
8
12
19

Figure 290F. Wiring Harness and Cable Installation, Tailboom (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 09 ELECTRICAL SYSTEMS		
290F		XCFZZ		20309	ES-F-221291	WIRING HARNESS AND CABLE ASSY INSTL,TAILBOOM.SEE FIG.5B FOR NHA........UHX	EA	1
290F	1	MFOZZ		20309	ES-B-220311-1	.BRACKET,ANGLE........UHX	EA	13
290F	2	MFOZZ		20309	ES-B-220311-2	.BRACKET,ANGLE........UHX	EA	29
290F	3	MFOZZ		20309	ES-B-220356-1	.BRACKET,ANGLE........UHX	EA	1
290F	4	MFOZZ		20309	ES-B-220316	.PLATE,STRUCTUAL,A/C........UHX	EA	1
290F	5	MFOZZ		20309	ES-B-220354	.PLATE,STRUCTUAL,A/C........UHX	EA	1
290F	6	MFOZZ		20309	ES-C-221739	.BRACKET,ANGLE........UHX	EA	1
290F	7	PAOZZ	5305-00-889-2998	96906	MS35206-216	.SCREW,MACHINE........UHX	EA	4
290F	8	PAOZZ	5340-00-052-9552	96906	MS21104DW3	.CLAMP,LOOP........UHX	EA	16
290F	9	PAOZZ	5340-00-205-6302	96906	MS21919DG5	.CLAMP,LOOP........UHX	EA	17
290F	10	PAOZZ	5325-00-582-3601	96906	MS35489-38	.GROMMET,NONMETALLIC........UHX	EA	1
290F	11	PAOZZ		96906	MS35489-69	.GROMMET........UHX	EA	2
290F	12	PAOZZ	5310-00-857-4945	96906	MS21045L3	.NUT,SELF-LOCKING,HE........UHX	EA	89
290F	13	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON........UHX	EA	42
290F	14	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........UHX	EA	47
290F	15	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE........UHX	EA	38
290F	16	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE........UHX	EA	4
290F	17	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT........UHX	EA	2
290F	18	XDOZZ		88044	AN960D10	.WASHER,FLAT........UHX	EA	2
290F	19	PAOZZ	5310-00-167-0752	88044	AN960D10L	.WASHER,FLAT........UHX	EA	135
290F	20	PAOZZ	5310-00-596-7691	96906	MS35335-32	.WASHER,LOCK........UHX	EA	40
290F	21	PAOZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK........UHX	EA	2
290F	22	PAOZZ	5325-00-074-3301	96906	MS21266-2N	.GROMMET,NONMETALLIC........UHX	EA	26
290F	23	PAOZZ		96906	MS21104DW2	.CLAMP,LOOP........UHX	EA	16
290F	24	PAOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE........UHX	EA	4
290F	25	PAOZZ	5310-00-656-0111	96906	MS15795-703	.WASHER,FLAT........UHX	EA	8
290F	26	PAOZZ	5325-00-923-9512	96906	MS21266-4N	.GROMMET,NONMETALLIC........UHX	EA	1
290F	27	XDOZZ		07145	AE-4144-C	.CABLE,RF,LOW LOSS........UHX	EA	1
290F	28	XDOZZ		07145	AE-4144-D	.CABLE,RF,LOW LOSS........UHX	EA	1
290F	29	A0000		20309	ES-D-221305-101	.CABLE ASSY,RADIO FREQUENCY,APR-39........UHX	EA	1
290F	30	A0000		20309	ES-D-221305-102	.CABLE ASSY,RADIO FREQUENCY,APR-39........UHX	EA	1
290F	31	A0000		20309	ES-D-221305-103	.CABLE ASSY,RADIO FREQUENCY,APR-39........UHX	EA	1
290F	32	PAOZZ	5935-00-325-4524	81349	M39012/59-3026	.CONNECTOR,RECEPTACL........UHX	EA	1
290F	33	PAOZZ	5935-00-325-9392	81349	M39012/55-3026	..CONNECTOR,PLUG,ELEC........UHX	EA	1
290F	34	PAOZZ	6145-01-067-5225	07145	RD-316	..CABLE,RADIO FREQUEN........UHX	FT	V
290F	35	A0000		20309	ES-C-221552	.CABLE ASSEMBLY........UHX	EA	1
290F	36	PAOZZ	5935-00-892-9365	74868	80775	..CONNECTOR,PLUG,ELEC........UHX	EA	1
290F	37	PAOZZ		80058	UG-1095B/U	..CONNECTOR,COAXIAL........UHX	EA	1
290F	38	PAOZZ		91836	KS-89-32	..K-GRIT KIT........UHX	EA	2
290F	39	A0000		20309	ES-F-221553	.WIRING HARNESS........UHX	EA	1
290F	40	PAOZZ	5935-01-108-3804	96906	MS3476W14-12P	..CONNECTOR,PLUG,ELEC........UHX	EA	1
290F	41	PAOZZ	5935-01-076-9452	96906	MS3476W14-12S	..CONNECTOR,PLUG,ELEC........UHX	EA	1

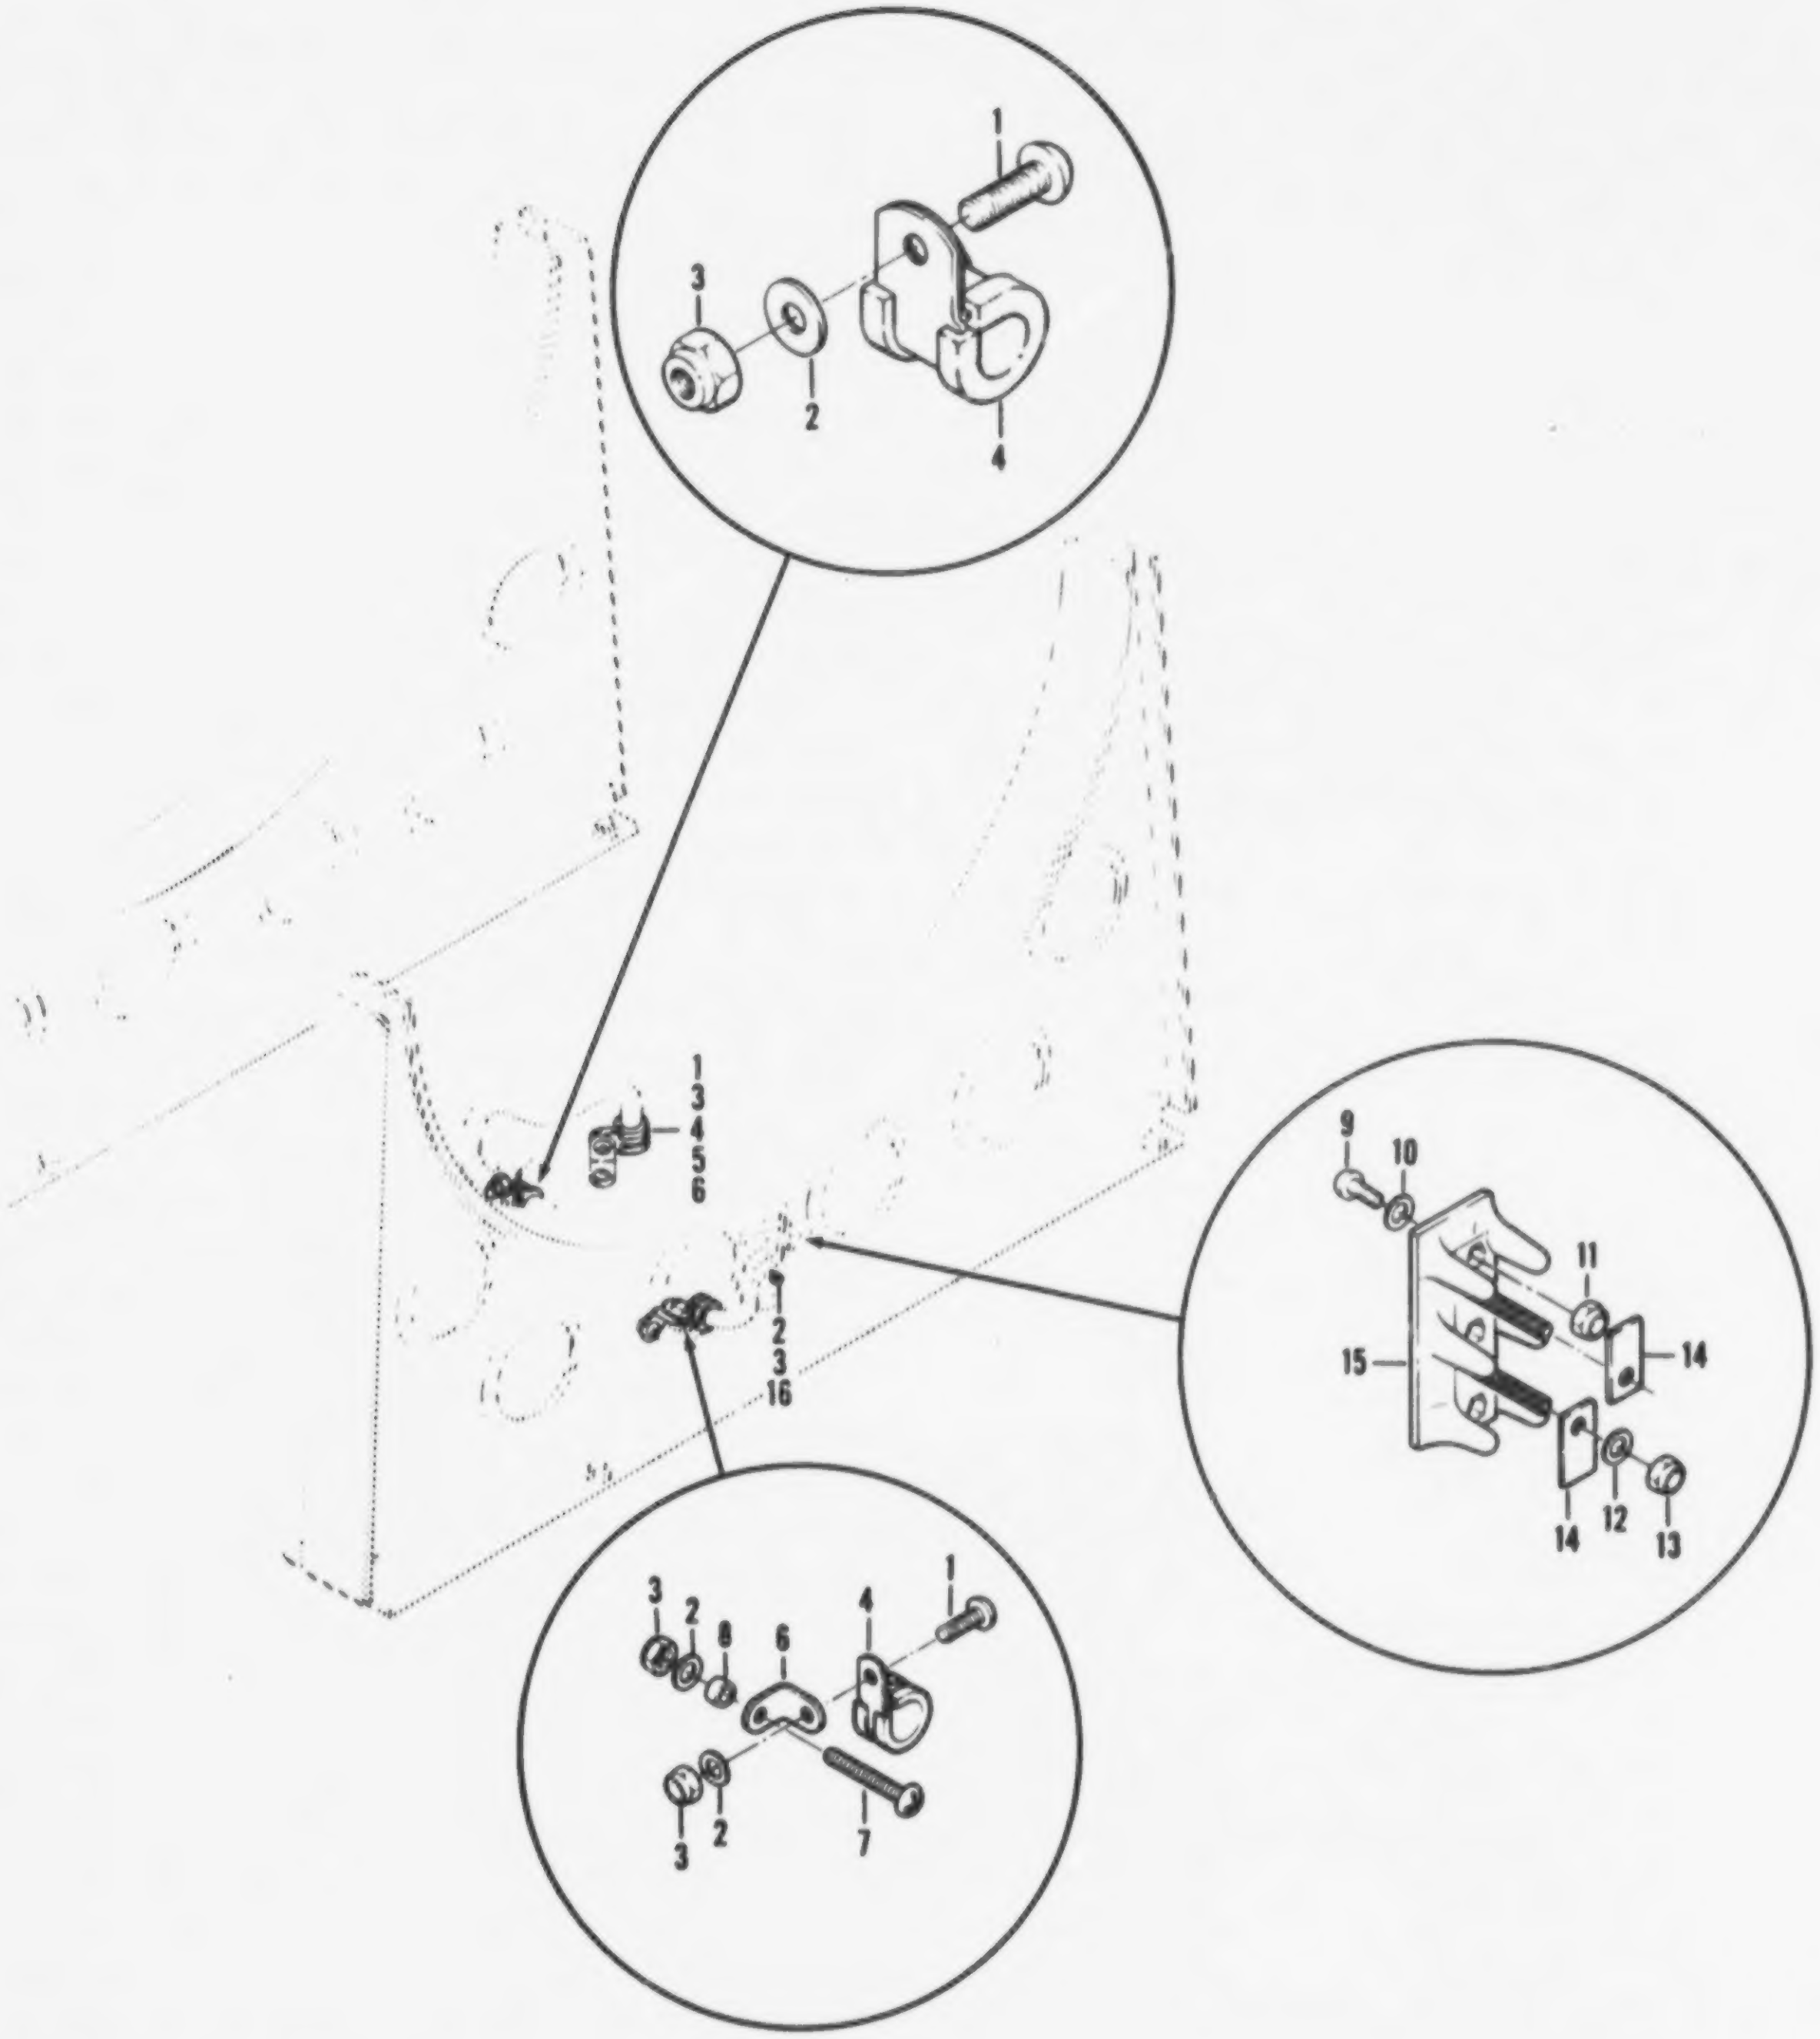
1
3
2
4
1
3
4
5
6
1
2
3
16
9
10
11
15
14
14
12
13
3
2
8
6
4
1
3
2
7

Figure 291. Electrical Installation, Auxiliary Fuel System

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
291		XCFZZ		97499	204-075-109-1	ELECTRICAL INSTL AUXILIARY FUEL SYSTEM SEE FIG.339 FOR NHA ....UHB,UHC,UHM	EA	1
291	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE....UHB,UHC,UHM	EA	3
291	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHB,UHC,UHM	EA	4
291	3	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING, HEXAGON....UHB,UHC,UHM	EA	5
291	4	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP.LOOP....UHB,UHC,UHM	EA	3
291	5	PAOZZ	5305-00-989-4864	96906	MS35207-245	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
291	6	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE....UHB,UHC,UHM	EA	1
291	7	PAOZZ	5305-00-993-1848	96906	MS35207-266	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
291	8	PAOZZ	5365-00-684-2093	80205	NAS43003-16	.SPACER,SLEEVE....UHB,UHC,UHM	EA	1
291	9	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE....UHB,UHC,UHM	EA	2
291	10	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT....UHB,UHC,UHM	EA	2
291	11	PAOZZ	5310-00-857-5580	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON....UHB,UHC,UHM	EA	2
291	12	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT....UHB,UHC,UHM	EA	2
291	13	PAOZZ	5310-00-088-0551	96906	MS21044N04	.NUT,SELF-LOCKING, HEXAGON....UHB,UHC,UHM	EA	2
291	14	XBOZZ	5970-00-926-2644	96906	MS25227-1A	.INSULATOR,PLATE....UHB,UHC,UHM	EA	2
291	15	PBOZZ	5940-00-950-1610	96906	MS27212-1-20	.TERMINAL BOARD....UHB,UHC,UHM	EA	1
291	16	PAOZZ	5305-00-781-9067	96906	MS27039-1-08	.SCREW,MACHINE....UHE,UHX	EA	1

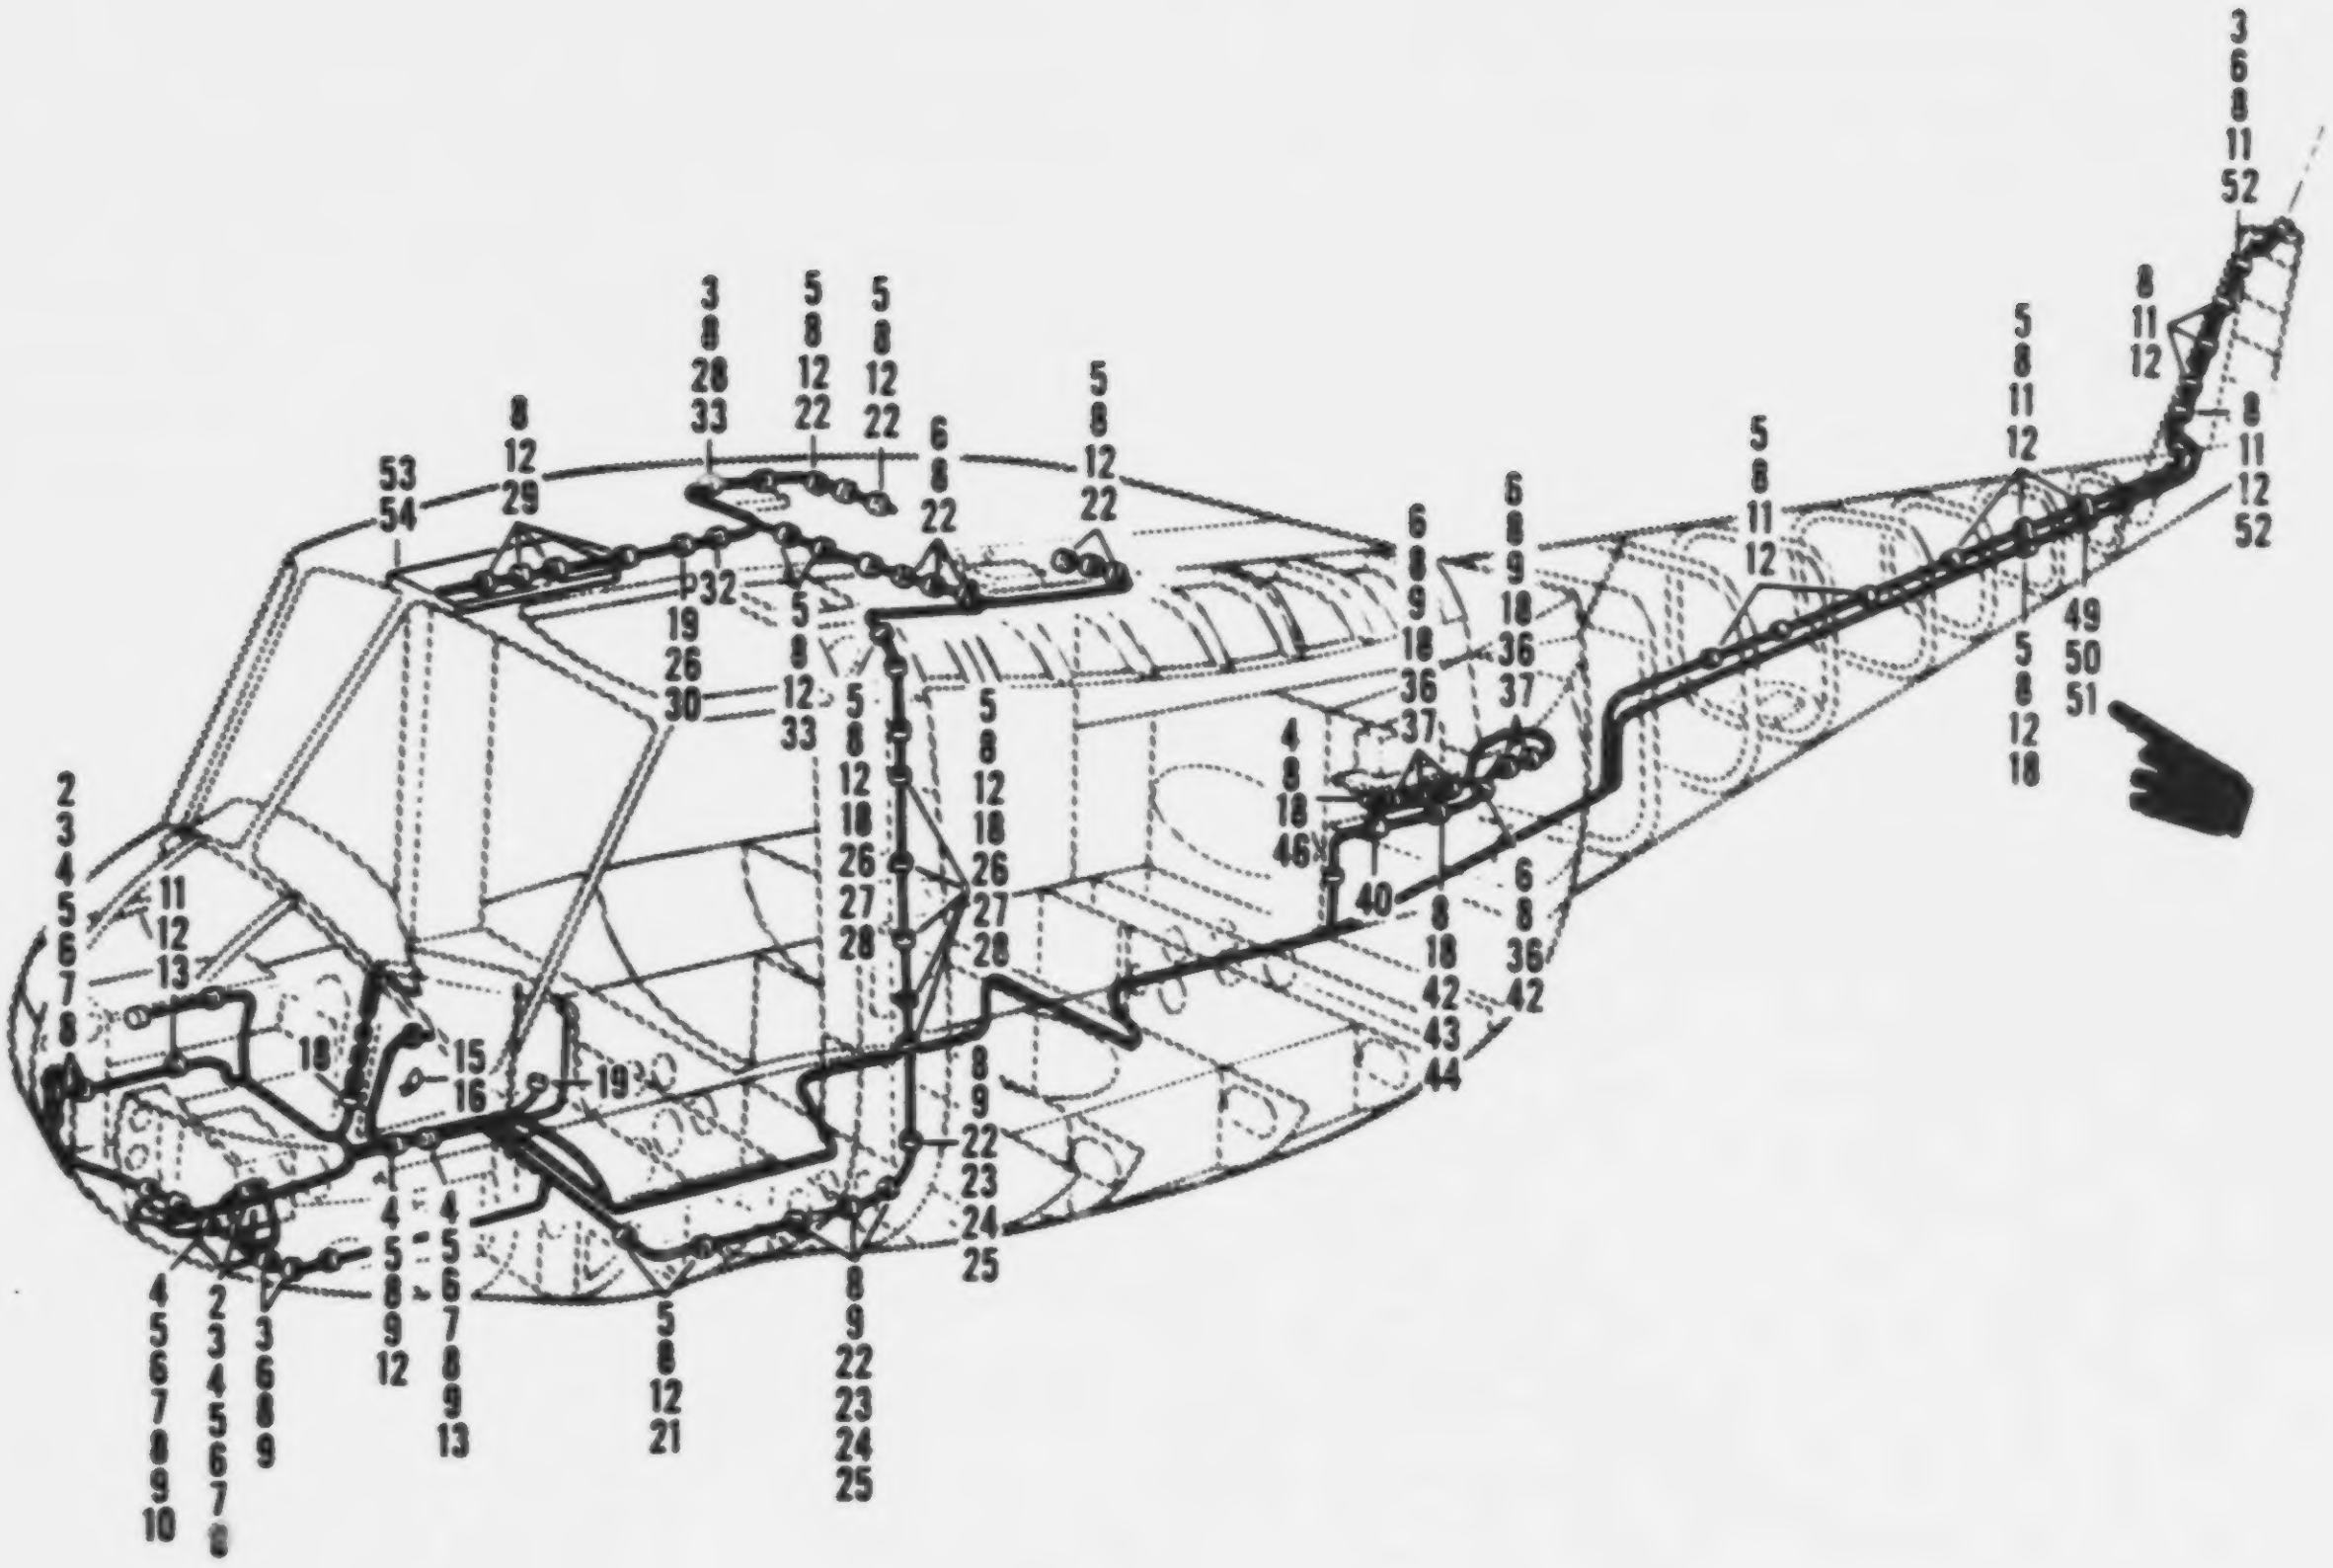
3 6 8 11 52
8 11 12
5 8 11 12
8 11 12 52
5 8 11 12
49 50 51
5 8 12 18
6 8 9 18 36 37
6 8 9 18 36 37
4 8 18 46
40
8 18 42 43 44
6 8 36 42
3 8 28 33
5 8 12 22
5 8 12 22
6 8 22
5 8 12 22
8 12 29
53 54
32 19 26 30
5 8 12 33
5 8 12 18 26 27 28
5 8 12 18 26 27 28
8 9 22 23 24 25
8 9 22 23 24 25
2 3 4 5 6 7 8
11 12 13
18
15 16
19
4 5 6 7 8 9 10
2 3 4 5 6 7 8
3 6 8 9
4 5 8 9 12
4 5 6 7 8 9 13
5 8 12 21

Figure 292. Avionics Electrical Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
292		PBOZZ	1560-00-929-1003	95104	762-1379	INSTALLATION KIT, AVIONICS USBL EFF 64-13492 THRU 64-13901 ....UHE,UHH,UHV,UHX	EA	1
'92	2	PAOZZ	5340-00-533-3511	81996	EAB700-4	.CLAMP,SUPPORT............UHE,UHH,UHV,UHX	EA	3
¿92	3	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	V
292	4	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	V
292	5	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE............UHE,UHH,UHV,UHX	EA	V
292	6	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE............UHE,UHH,UHV,UHX	EA	V
292	7	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT............UHE,UHH,UHV,UHX	EA	V
292	8	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING, HEXAGON............UHE,UHH,UHV,UHX	EA	V
292	9	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	V
292	10	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	1
292	11	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	2
292	12	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	2
292	13	PAOZZ	5305-00-958-0585	96906	MS35207-272	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	1
292	15	PAOZZ	5340-00-493-7020	81996	EAB700024	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	16	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	1
292	18	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	2
292	19	PAOZZ	5340-00-993-1470	81996	EAB700018	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	21	PAOZZ	5340-00-954-6826	81996	EAB70008	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	2
292	22	PAOZZ	5340-00-993-6245	81996	EAB70006	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	23	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	24	PAOZZ	5305-00-958-0586	96906	MS35207-273	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	4
292	25	PAOZZ	5365-00-662-8788	80205	NAS43DD3-36	.SPACER,SLEEVE............UHE,UHH,UHV,UHX	EA	4
292	26	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	6
292	27	PAOZZ	5305-00-995-6311	96906	MS35207-271	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	6
292	28	PBOZZ	5365-00-819-2435	80205	NAS43DD3-84	.SPACER,SLEEVE............UHE,UHH,UHV,UHX	EA	6
292	29	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	4
292	30	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE............UHE,UHH,UHV,UHX	EA	1
292	32	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	33	PAOZZ	5340-00-993-6247	81996	EAB700011	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	36	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	3
292	37	PAOZZ	5310-00-167-0772	88044	AN970-10	.WASHER, FLAT............UHE,UHH,UHV,UHX	EA	6
292	40	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	42	PAOZZ	5340-00-989-4572	81996	EAB700015	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
292	43	PAOZZ	5305-00-995-3440	96906	MS35207-270	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	1
292	44	PAOZZ	5365-00-337-8737	80205	NAS43DD3-80	.SPACER,SLEEVE............UHE,UHH,UHV,UHX	EA	1
292	46	PAOZZ	5340-00-721-8182	88044	AN743-13	.BRACKET,ANGLE............UHE,UHH,UHV,UHX	EA	1
292	49	PAOZZ	5325-00-276-6101	96906	MS35489-3	.GROMMET,NONMETALLIC............UHE,UHH,UHV,UHX	EA	1
292	50	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	2
292	51	MOOZZ	DELETED	96906	MS27212-1-14	.TERMINAL,BOARD............UHE,UHH,UHV,UHX	EA	3
292	52	PAOZZ	5935-00-726-6519	96906	MS3126F10-6P	.CONNECTOR,PLUG,ELEC............UHE,UHH,UHV,UHX	EA	1
292	53	PAOZZ	5325-00-574-3379	29372	F100A516	.FASTENER,PANEL............UHE,UHH,UHV,UHX	EA	1
292	54	PBOZZ	5945-00-823-2611	81349	M5757/1-103	.RELAY,ELECTROMAGNET............UHE,UHH,UHV,UHX	EA	1

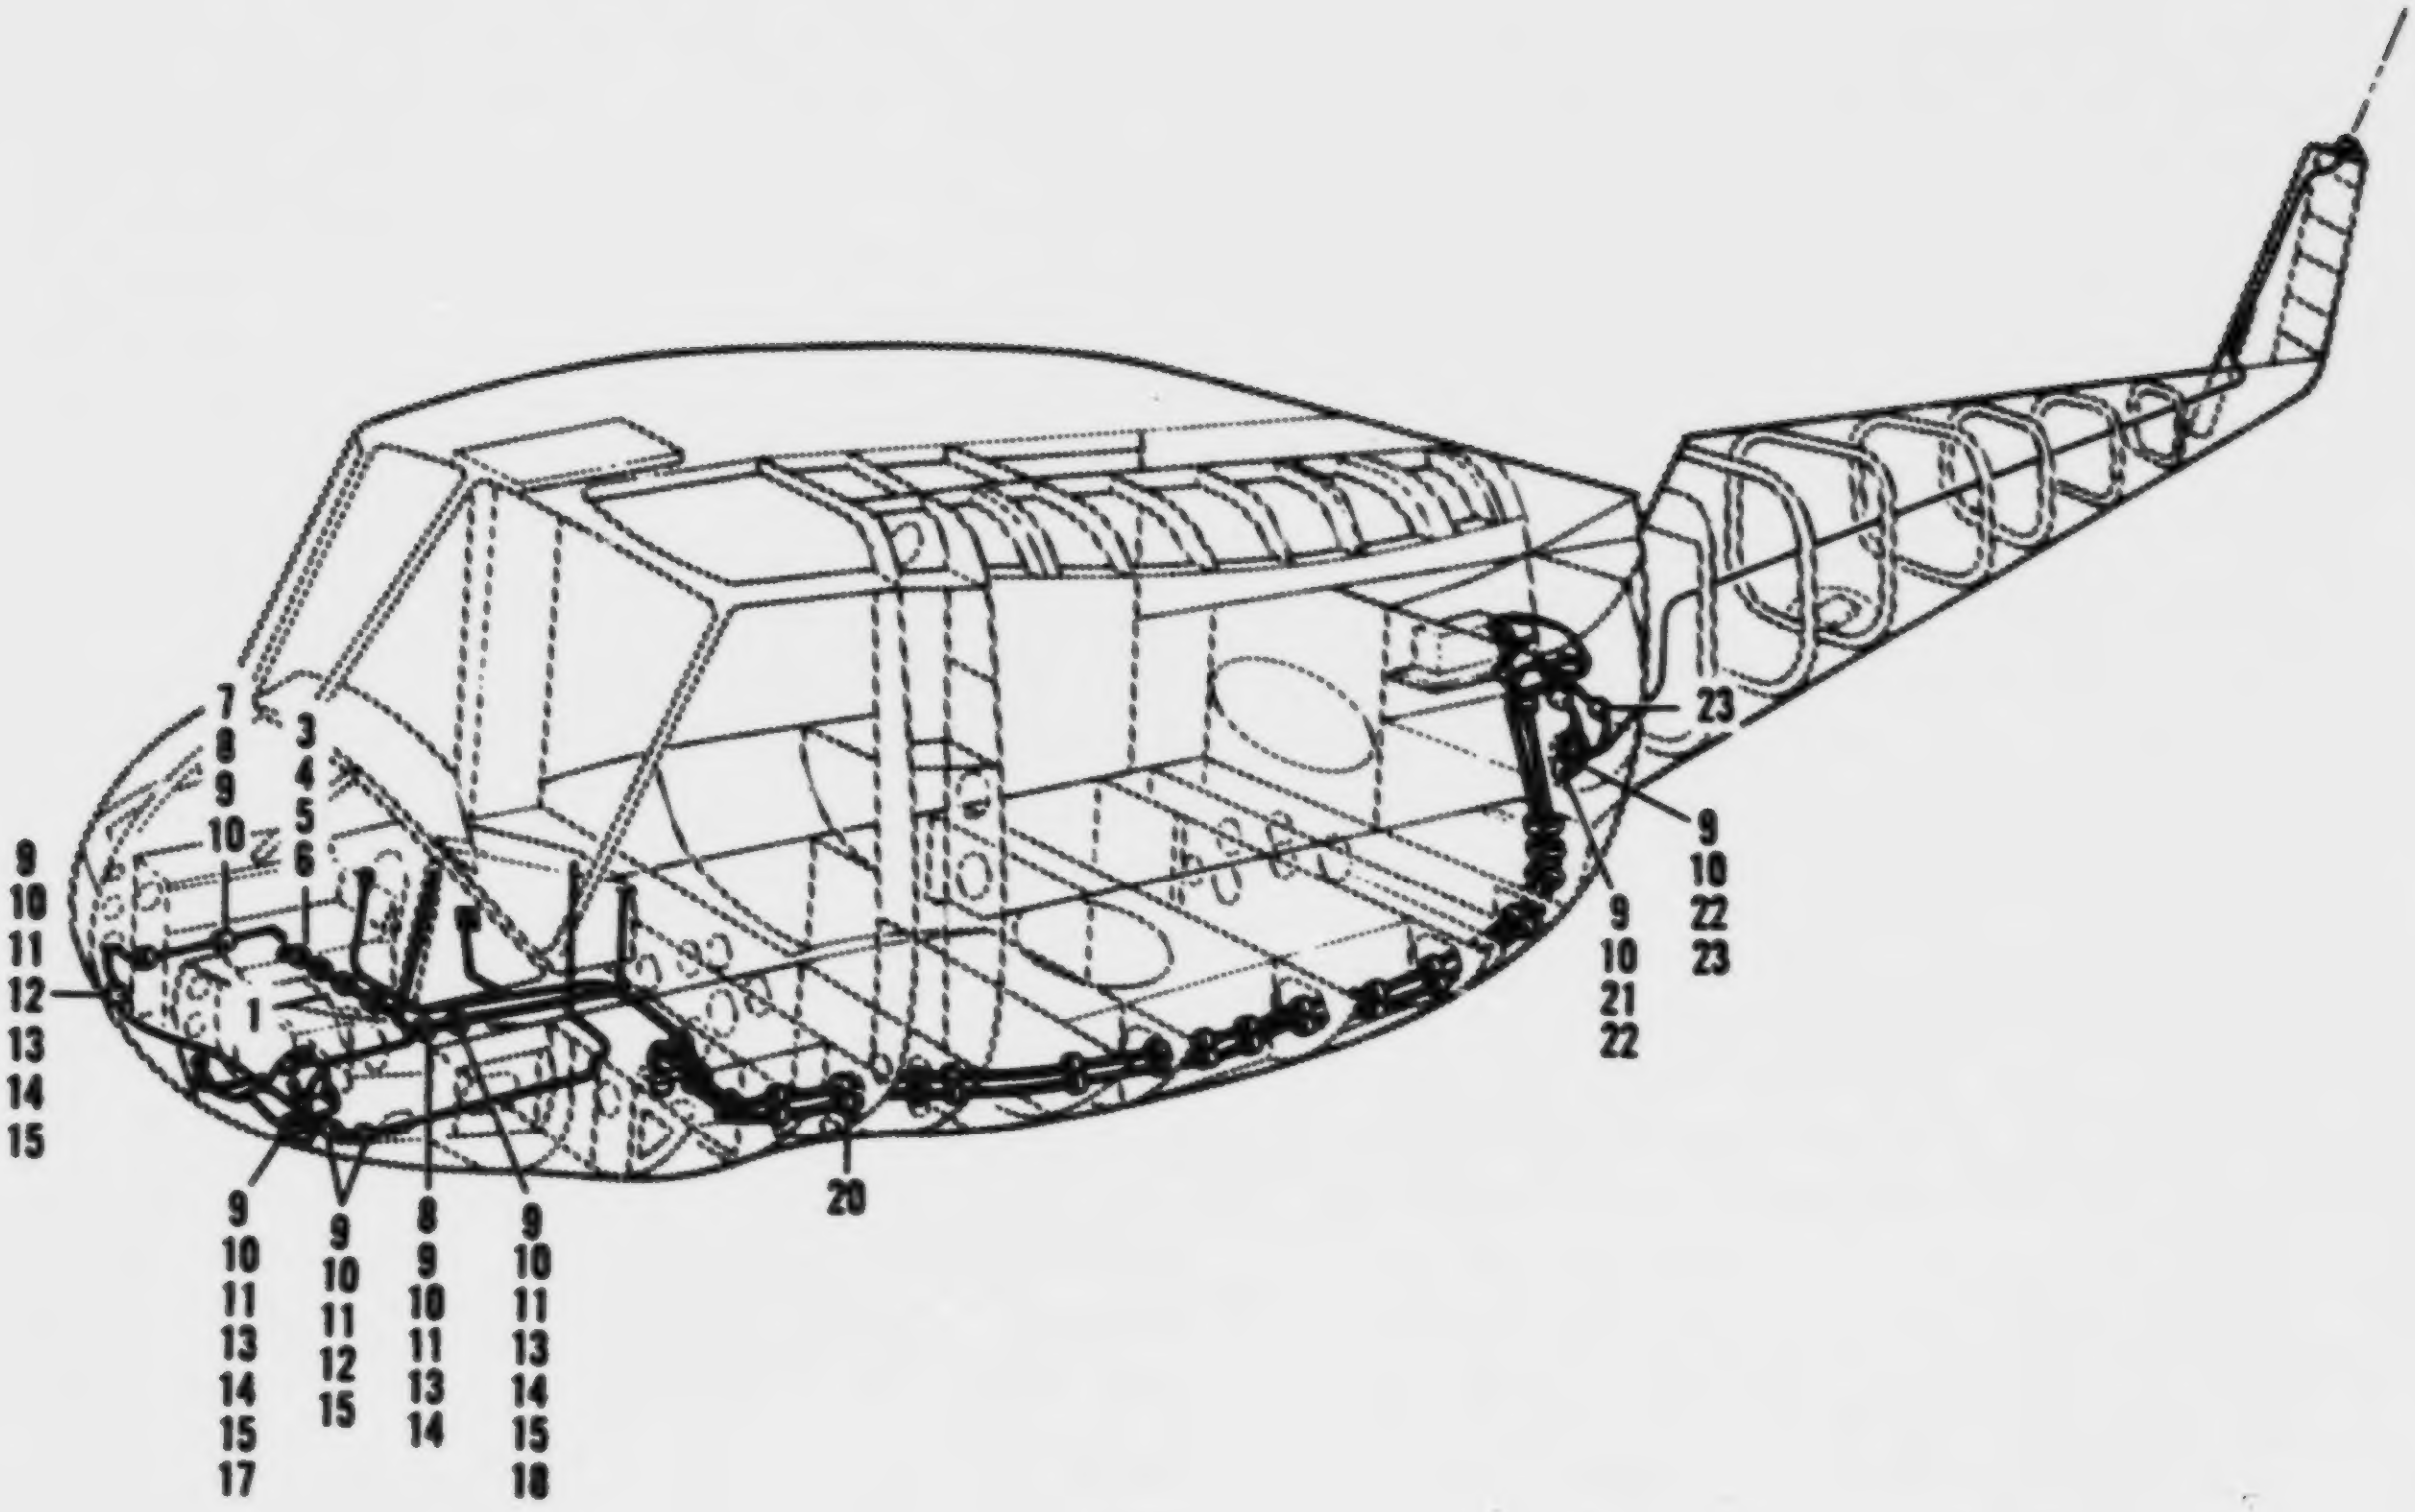
7
8
9
10
3
4
5
6
9
10
11
12
13
14
15
1
9
10
11
13
14
15
17
9
10
11
12
15
8
9
10
11
13
14
9
10
11
13
14
15
18
20
23
9
10
22
23
9
10
21
22

Figure 293. Avionics Electrical Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
293		PBOZZ	1560-00-929-1015	95104	762-1381	INSTL KIT, AVIONICS USBL EFF 66-746 THRU 66-1210 & 66-16000 THRU 66-171 38....UHE,UHH,UHV,UHX	EA	1
293	1	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP....UHE,UHH,UHV,UHX	EA	1
293	3	PAOZZ	6145-00-932-5732	96906	MS25313A181	.CABLE,POWER,ELECTRI....UHE,UHH,UHV,UHX	IN	60
293	4	PAOZZ	5940-00-204-8966	96906	MS23036-102	.TERMINAL,LUG....UHE,UHH,UHV,UHX	EA	V
293	5	PAOZZ	6145-00-578-6602	81349	M5086/2-18-9	.WIRE,ELECTRICAL....UHE,UHH,UHV,UHX	FT	25
293	6	PAOZZ	5945-00-226-8692	96906	MS24149D1	.RELAY,ELECTROMAGNET....UHE,UHH,UHV,UHX	EA	1
293	7	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP....UHE,UHH,UHV,UHX	EA	1
293	8	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	2
293	9	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT....UHE,UHH,UHV,UHX	EA	V
293	10	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING, HEXAGON....UHE,UHH,UHV,UHX	EA	V
293	11	PAOZZ	5340-00-151-6997	96906	MS21122-4	.CLAMP,LOOP....UHE,UHH,UHV,UHX	EA	V
293	12	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	2
293	13	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	1
293	14	PAOZZ	5340-00-598-5251	88044	AN743-12	.BRACKET,ANGLE....UHE,UHH,UHV,UHX	EA	V
293	15	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE....UHE,UHH,UHV,UHX	EA	V
293	17	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	1
293	18	PAOZZ	5305-00-958-0686	96906	MS35207-272	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	1
293	20	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP....UHE,UHH,UHV,UHX	EA	22
293	21	PAOZZ	5340-00-993-6247	81996	EAB700D11	.CLAMP,LOOP....UHE,UHH,UHV,UHX	EA	1
293	22	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	2
293	23	PAOZZ	5340-00-989-4574	81996	EAB700D17	.CLAMP,LOOP....UHE,UHH,UHV,UHX	EA	2

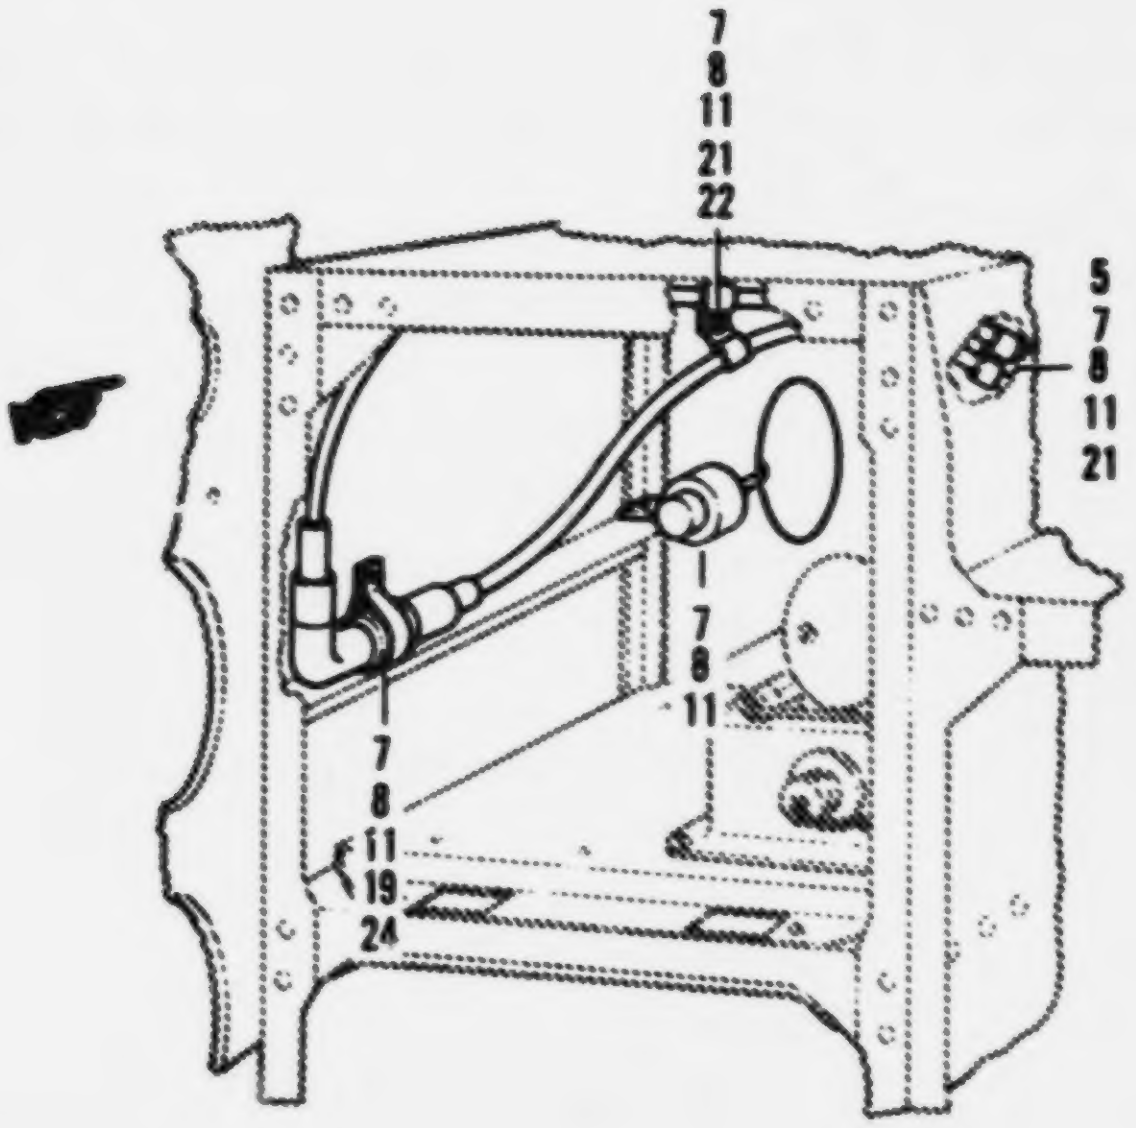
7 8 11 21 22
5 7 8 11 21
7 8 11
7 8 11 19 24

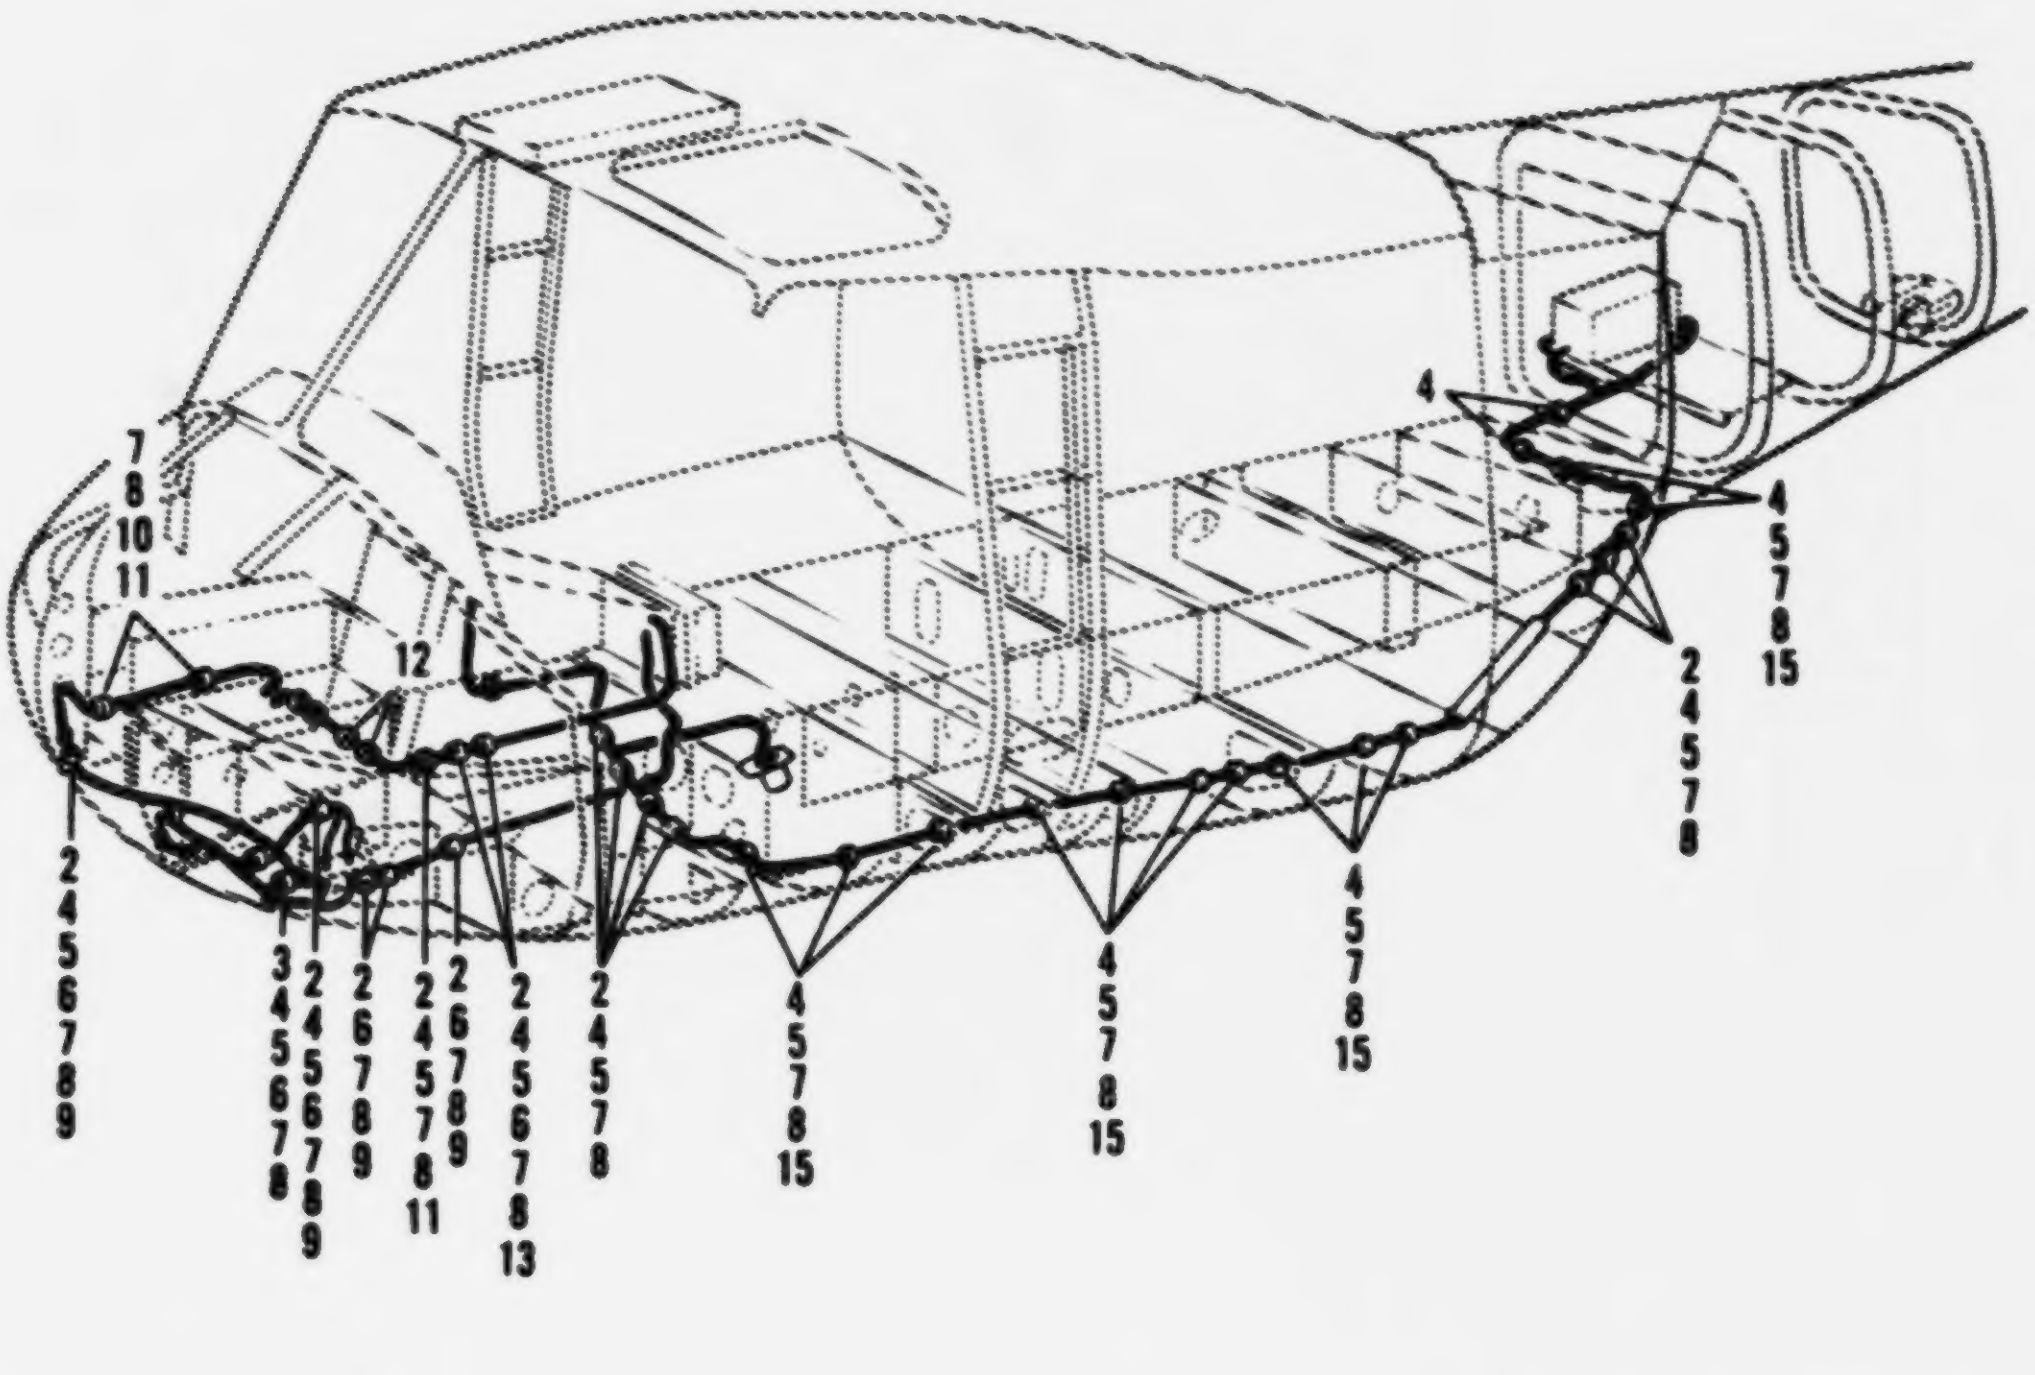
7 8 10 11
12
4
4 5 7 8 15
2 4 5 7 8
2 4 5 6 7 8 9
3 4 5 6 7 8
2 4 5 6 7 8 9
2 6 7 8 9
2 4 5 7 8 11
2 6 7 8 9
2 4 5 6 7 8 13
2 4 5 7 8
4 5 7 8 15
4 5 7 8 15
4 5 7 8 15

Figure 294. Avionics Electrical Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
294		XCFZZ		97499	762-1375	AVIONICS ELECTRICAL INSTALLATION USBL EFF 65-9416 THRU 65-9564, 65-12738 THRU 65-12744,& 65-12772 .... UHC,UHM	EA	1
294	2	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP .... UHC,UHM	EA	V
294	3	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE .... UHC,UHM	EA	1
294	4	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHC,UHM	EA	V
294	5	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHC,UHM	EA	V
294	6	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE .... UHC,UHM	EA	V
294	7	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT .... UHC,UHM	EA	V
294	8	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING, HEXAGON .... UHC,UHM	EA	V
294	9	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE .... UHC,UHM	EA	1
294	10	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP .... UHC,UHM	EA	1
294	11	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHC,UHM	EA	V
294	12	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP .... UHC,UHM	EA	1
294	13	PAOZZ	5305-00-958-0585	96906	MS35207-272	.SCREW,MACHINE .... UHC,UHM	EA	2
294	15	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP .... UHC,UHM	EA	1
294	19	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP .... UHC,UHM	EA	1
294	21	PAOZZ	5340-00-954-6826	81996	EAB700D8	.CLAMP,LOOP .... UHC,UHM	EA	2
294	22	PAOZZ	5365-00-662-8788	80205	NAS43D03-36	.SPACER,SLEEVE .... UHC,UHM	EA	1
294	24	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP .... UHC,UHM	EA	1

Fig. 295 & 296 NOT USED

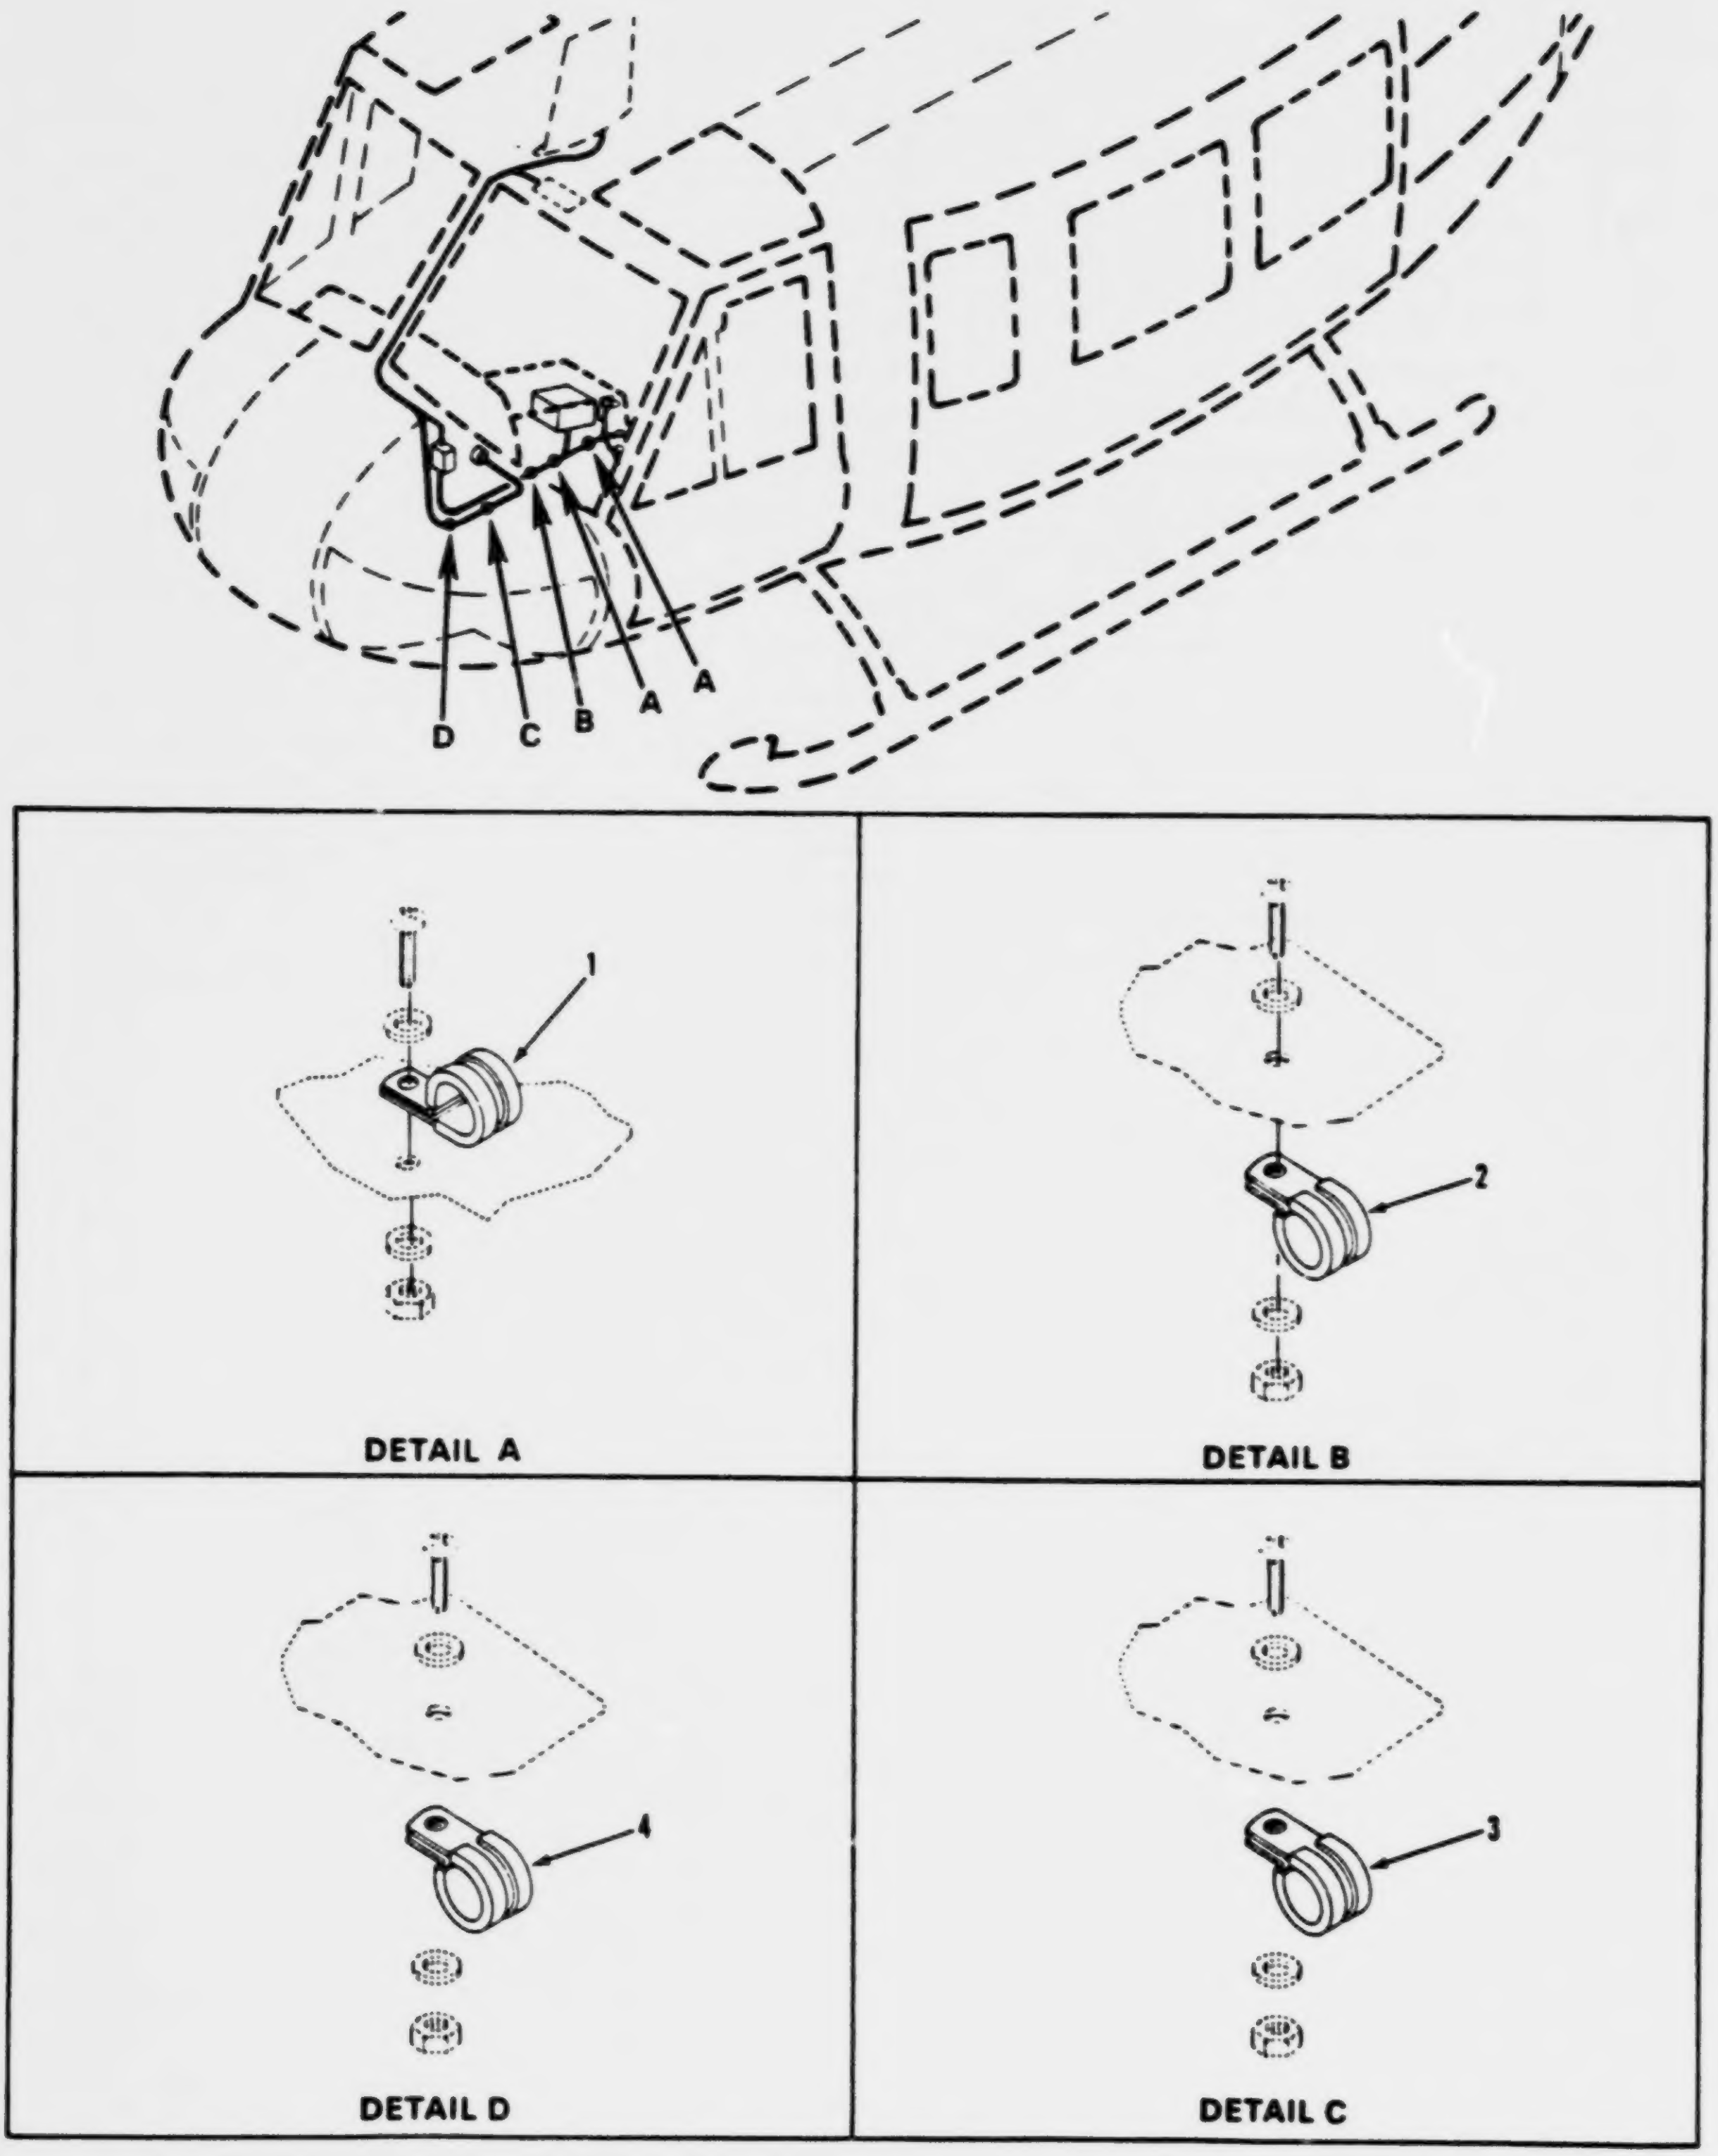
D
C
B
A
A
1
2
4
3
DETAIL A
DETAIL B
DETAIL D
DETAIL C

Figure 295. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-13)

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-13)		
295	1	PAOZZ	5340-00-565-0004	MS21919WDG10	96906	CLAMP,LOOP.........................UHH,UHV	EA	2
295	2	PAOZZ	5340-00-598-0415	MS21919WDG18	96906	CLAMP,LOOP.........................UHH,UHV	EA	1
295	3	PAOZZ	5340-00-286-9418	MS21919WDG16	96906	CLAMP,LOOP.........................UHH,UHV	EA	1
295	4	PAOZZ	5340-00-533-4463	MS21919WDG14	96906	CLAMP,LOOP.........................UHH,UHV	EA	1

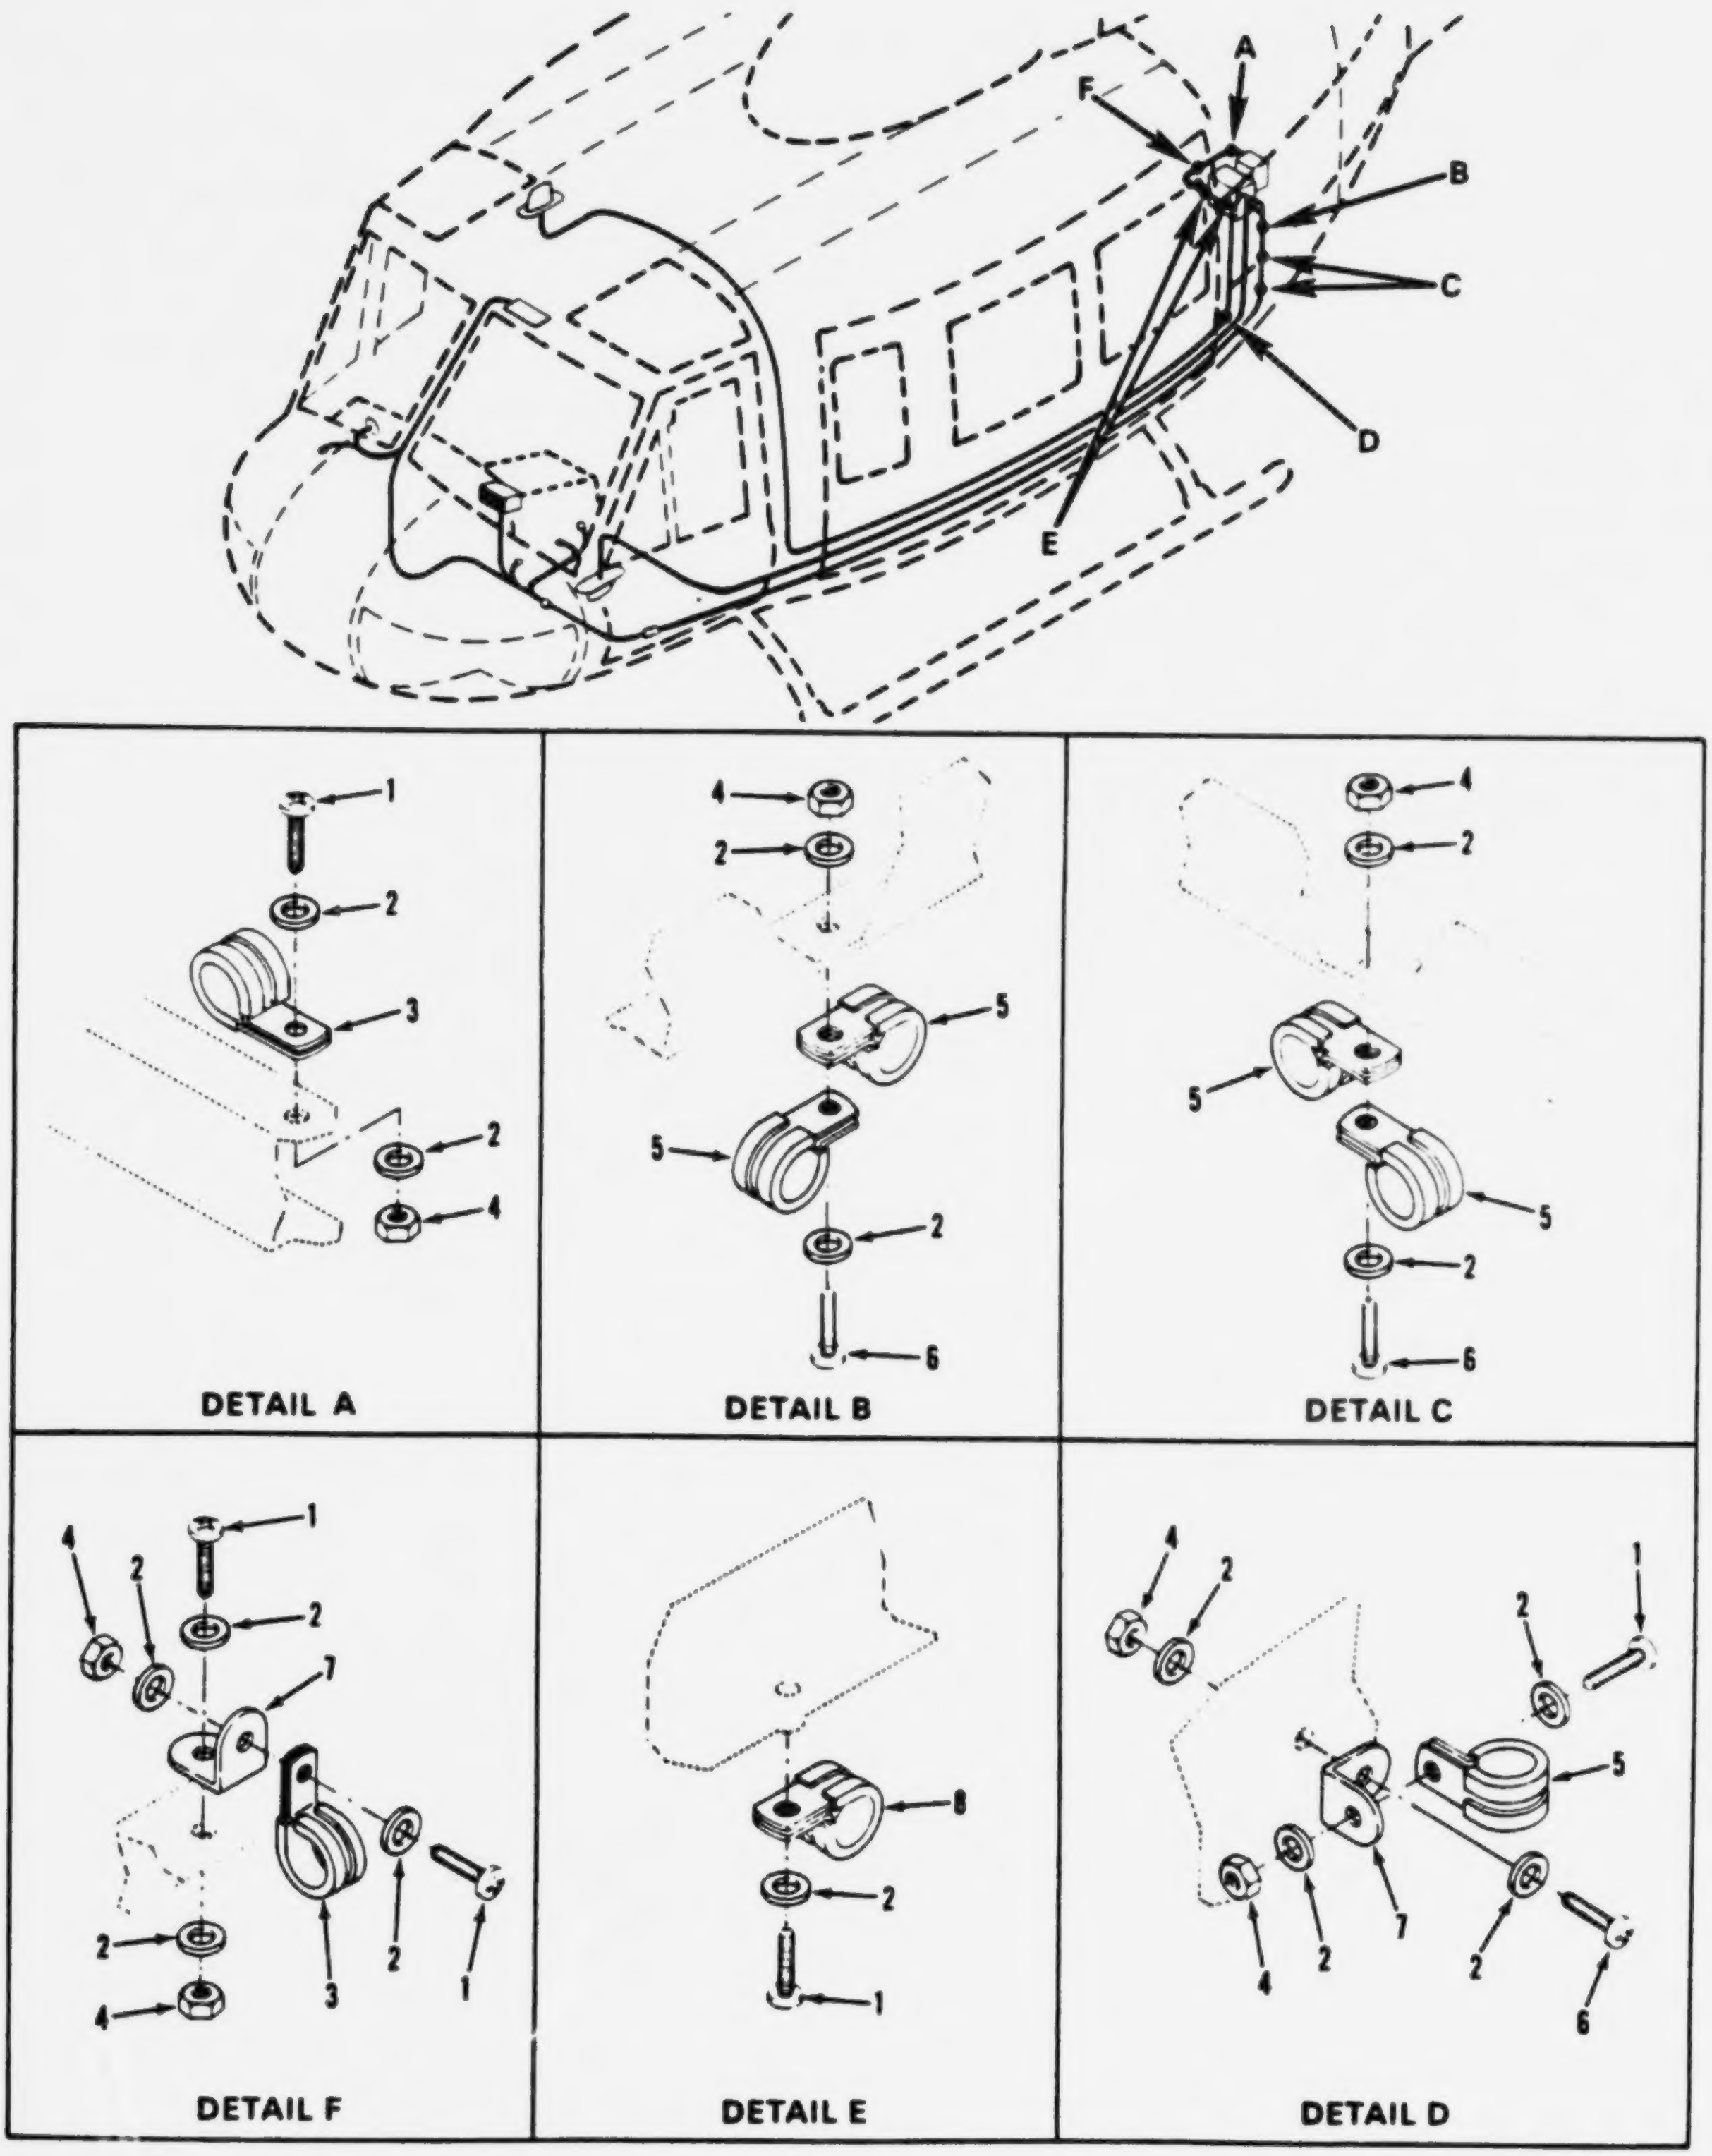
A
F
B
C
D
E
1
2
3
2
4
DETAIL A
4
2
5
5
2
6
DETAIL B
4
2
5
5
2
6
DETAIL C
4
2
1
2
7
3
2
1
2
4
DETAIL F
8
2
1
DETAIL E
4
2
1
2
5
7
4
2
2
6
DETAIL D

Figure 296. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-15)

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-15)		
296	1	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW,MACHINE........................UHH,UHV	EA	6
296	2	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT..........................UHH,UHV	EA	18
296	3	PAOZZ	5340-00-106-0555	MS21919WDG4	96906	CLAMP,LOOP...........................UHH,UHV	EA	2
296	4	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE..............UHH,UHV	EA	8
296	5	PAOZZ	5340-00-283-0649	MS21919WDG7	96906	CLAMP,LOOP...........................UHH,UHV	EA	18
296	6	PAOZZ	5305-00-059-3660	MS51958-64	96906	SCREW,MACHINE........................UHH,UHV	EA	4
296	7	PAOZZ	5340-00-598-8251	AN743-12	88044	BRACKET,ANGLE........................UHH,UHV	EA	2
296	8	PAOZZ	5340-00-598-0597	MS21919WDG9	96906	CLAMP,LOOP...........................UHH,UHV	EA	14

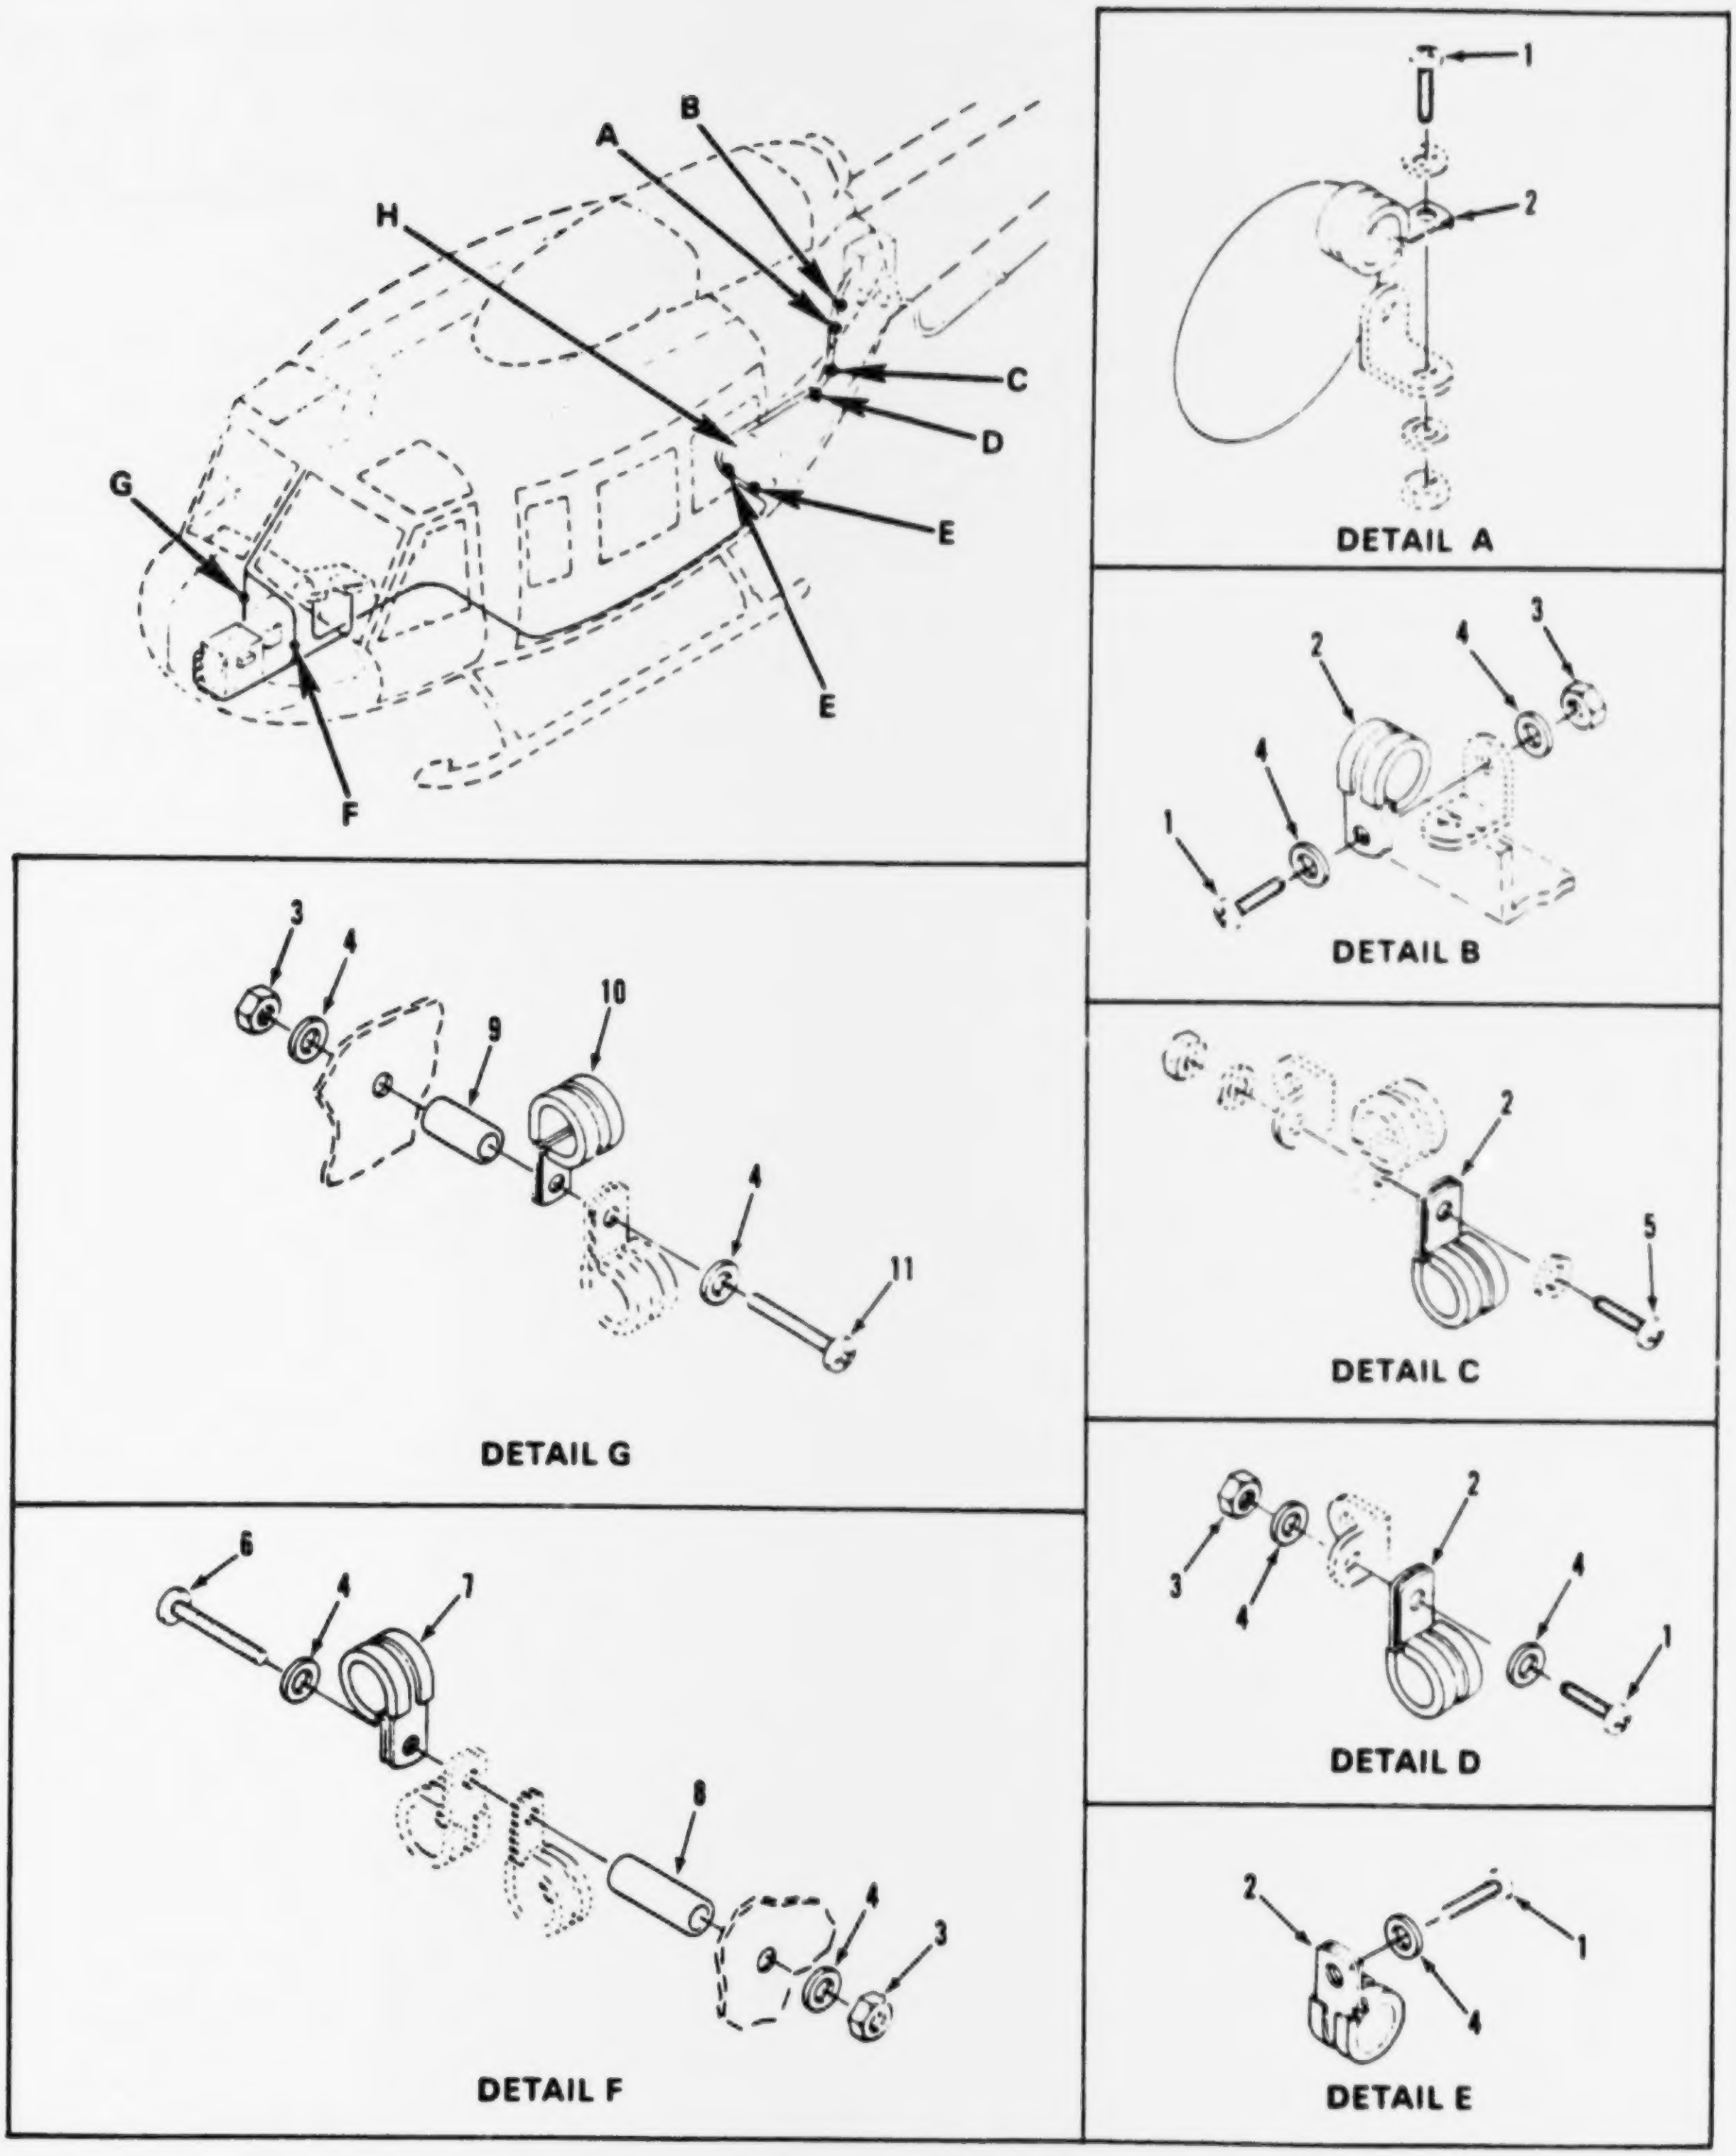
B
A
H
C
D
G
E
E
F
1
2
DETAIL A
2
4
3
4
1
DETAIL B
3
4
10
9
4
11
DETAIL G
2
5
DETAIL C
2
3
4
4
1
DETAIL D
6
4
7
8
4
3
DETAIL F
2
1
4
DETAIL E

Figure 296.1. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-16)
(Sheet 1 of 2)

[THIS PAGE LEFT BLANK]

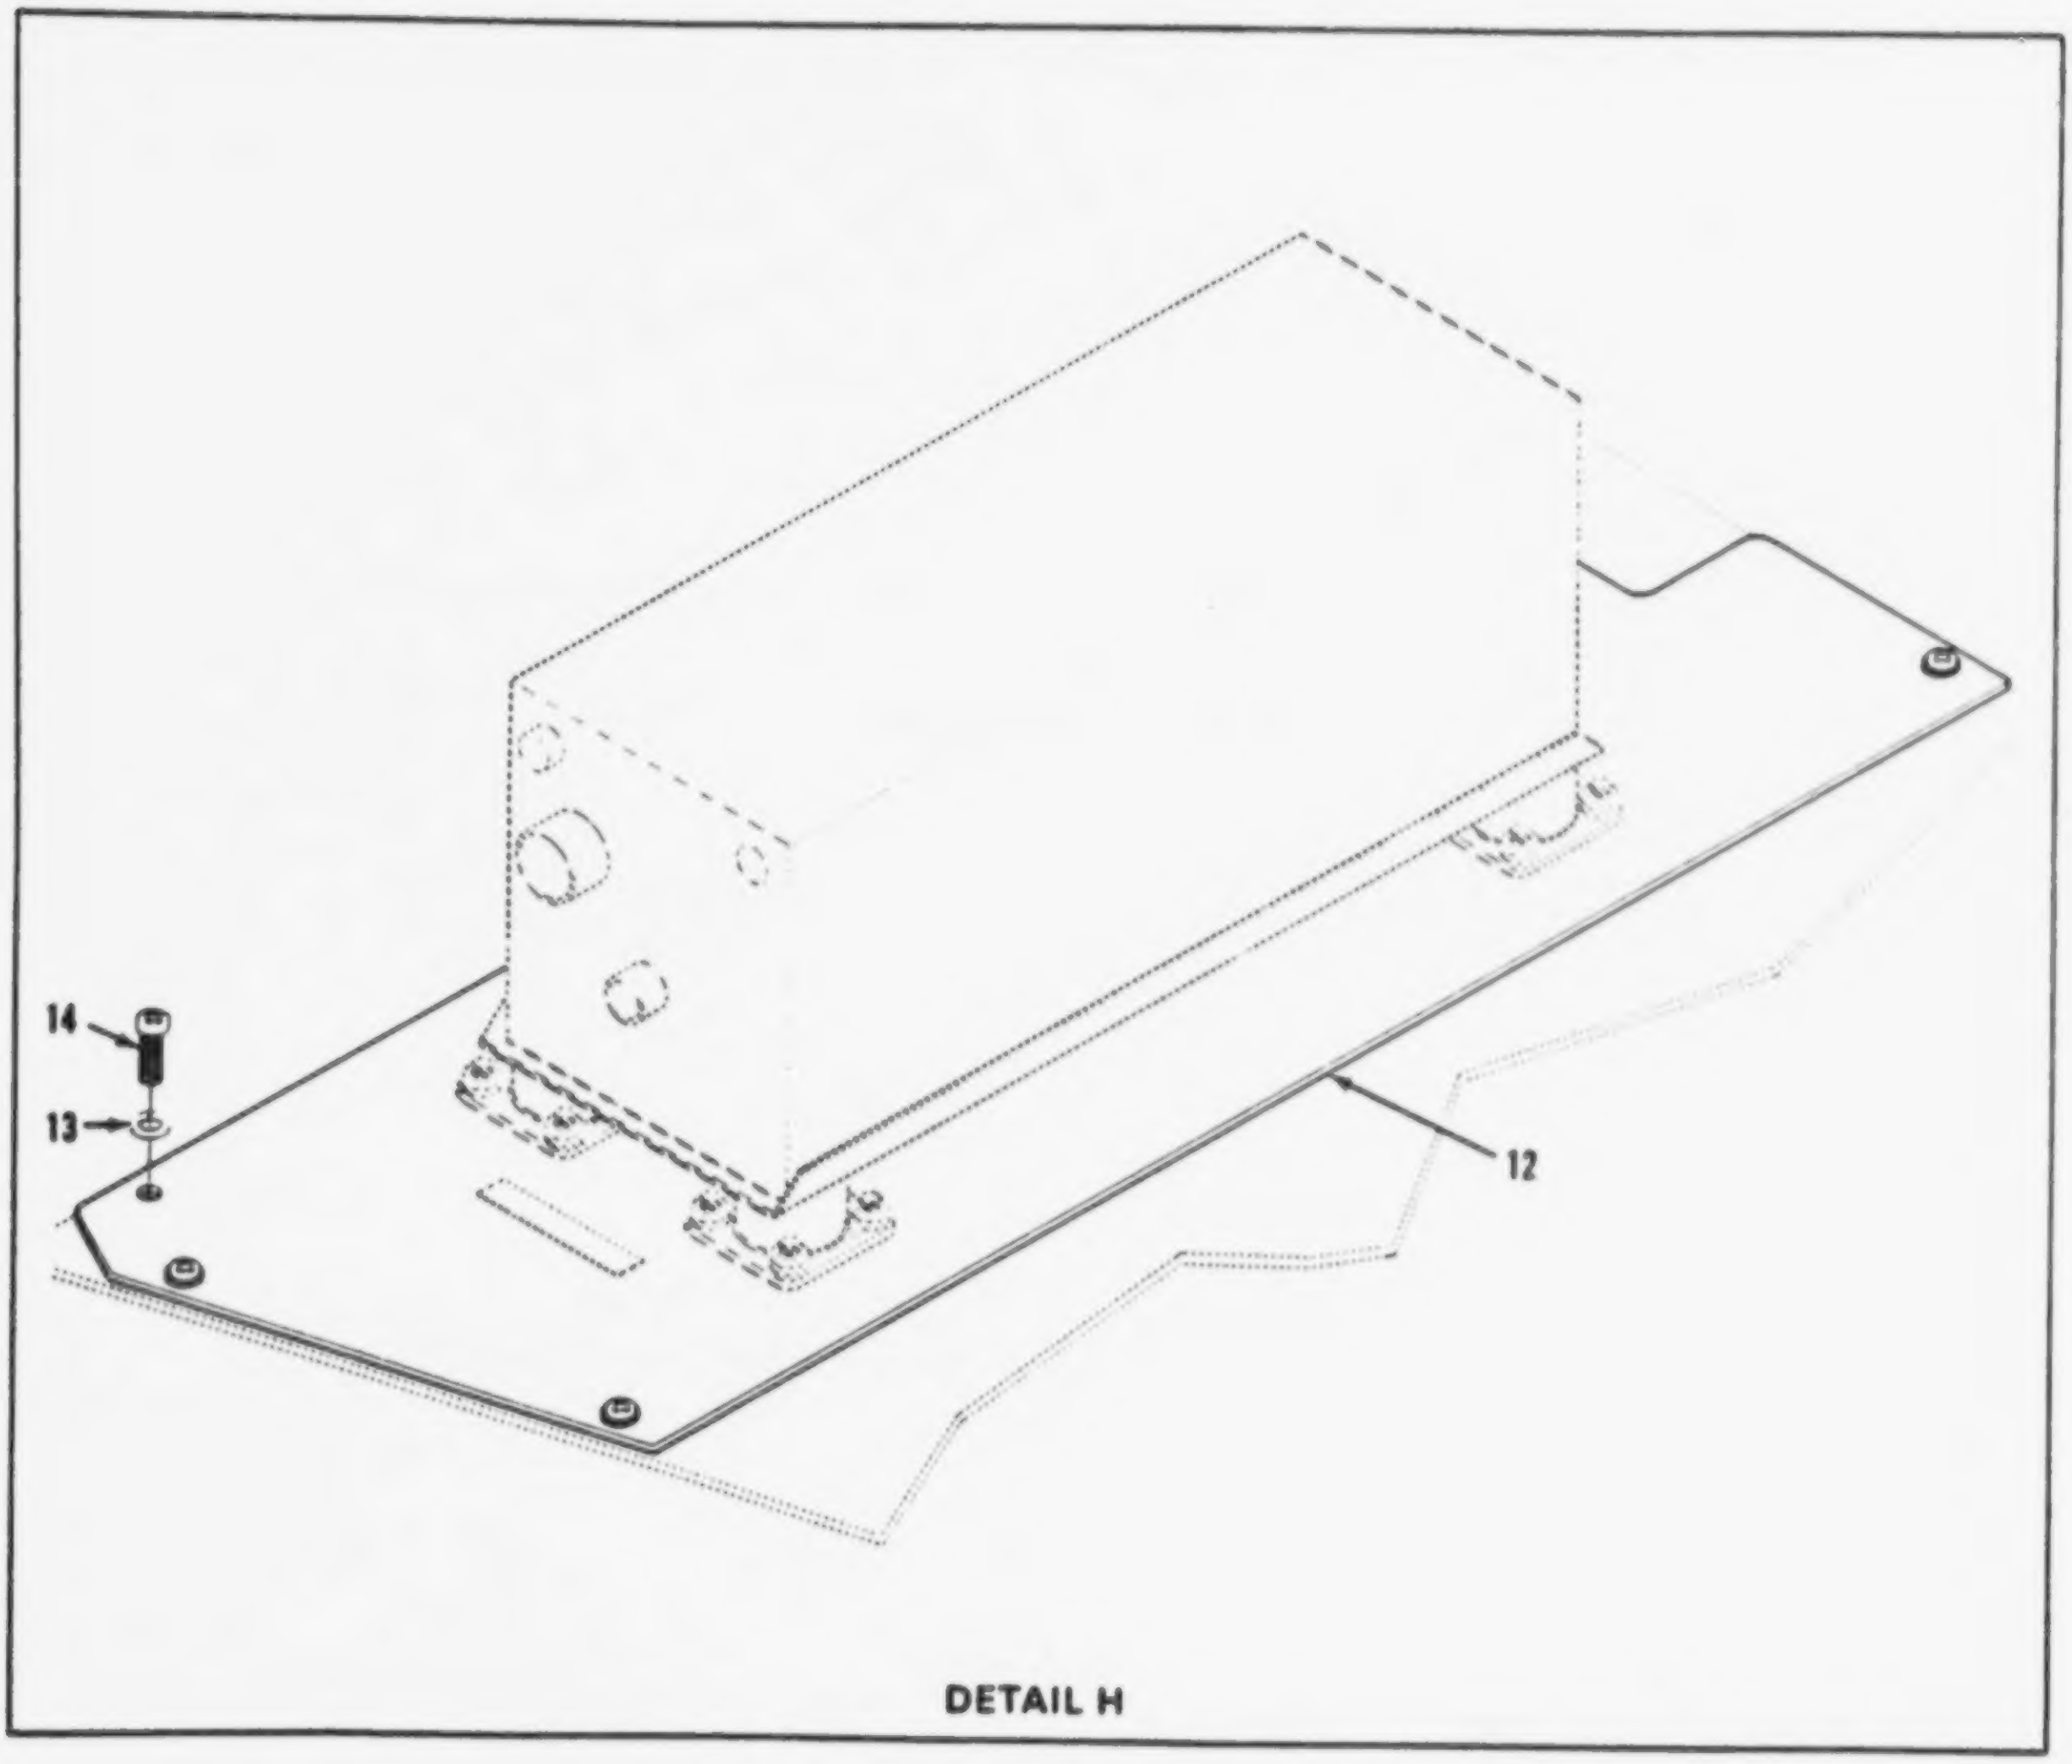
14
13
12
DETAIL H

Figure 296.1. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-16)
(Sheet 2)

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-16)		
296.1	1	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW,MACHINE......................UHH,UHV	EA	5
296.1	2	PAOZZ	5340-00-664-8163	MS21919WDG11	96906	CLAMP,LOOP........................UHH,UHV	EA	6
296.1	3	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE...............UHH,UHV	EA	4
296.1	4	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT.......................UHH,UHV	EA	10
296.1	5	PAOZZ	5305-00-059-3660	MS51958-64	96906	SCREW,MACHINE.....................UHH,UHV	EA	1
296.1	6	PAOZZ	5305-00-059-3664	MS51958-68	96906	SCREW,MACHINE.....................UHH,UHV	EA	1
296.1	7	PAOZZ	5340-00-291-5347	MS21919WDG8	96906	CLAMP,LOOP........................UHH,UHV	EA	4
296.1	8	PAOZZ	5365-00-294-0580	NAS43DD3-48	80205	SPACER,SLEEVE.....................UHH,UHV	EA	1
296.1	9	PAOZZ	5365-00-662-3098	NAS43DD3	80205	SPACER,SLEEVE.....................UHH,UHV	EA	1
296.1	10	PAOZZ	5340-00-291-5323	MS21919WDG4	96906	CLAMP,LOOP........................UHH,UHV	EA	1
296.1	11	PAOZZ	5305-00-059-3665	MS51958-69	96906	SCREW,MACHINE.....................UHH,UHV	EA	1
296.1	12	PBOZZ		DSK-9-03254-1	19544	PLATE,ADAPTER.....................UHH,UHV	EA	1
296.1	13	PAOZZ	5310-00-595-6772	MS15795-808	96906	WASHER,FLAT.......................UHH,UHV	EA	52
296.1	14	PAOZZ	5305-00-059-3661	MS51958-65	96906	SCREW,MACHINE.....................UHH,UHV	EA	28

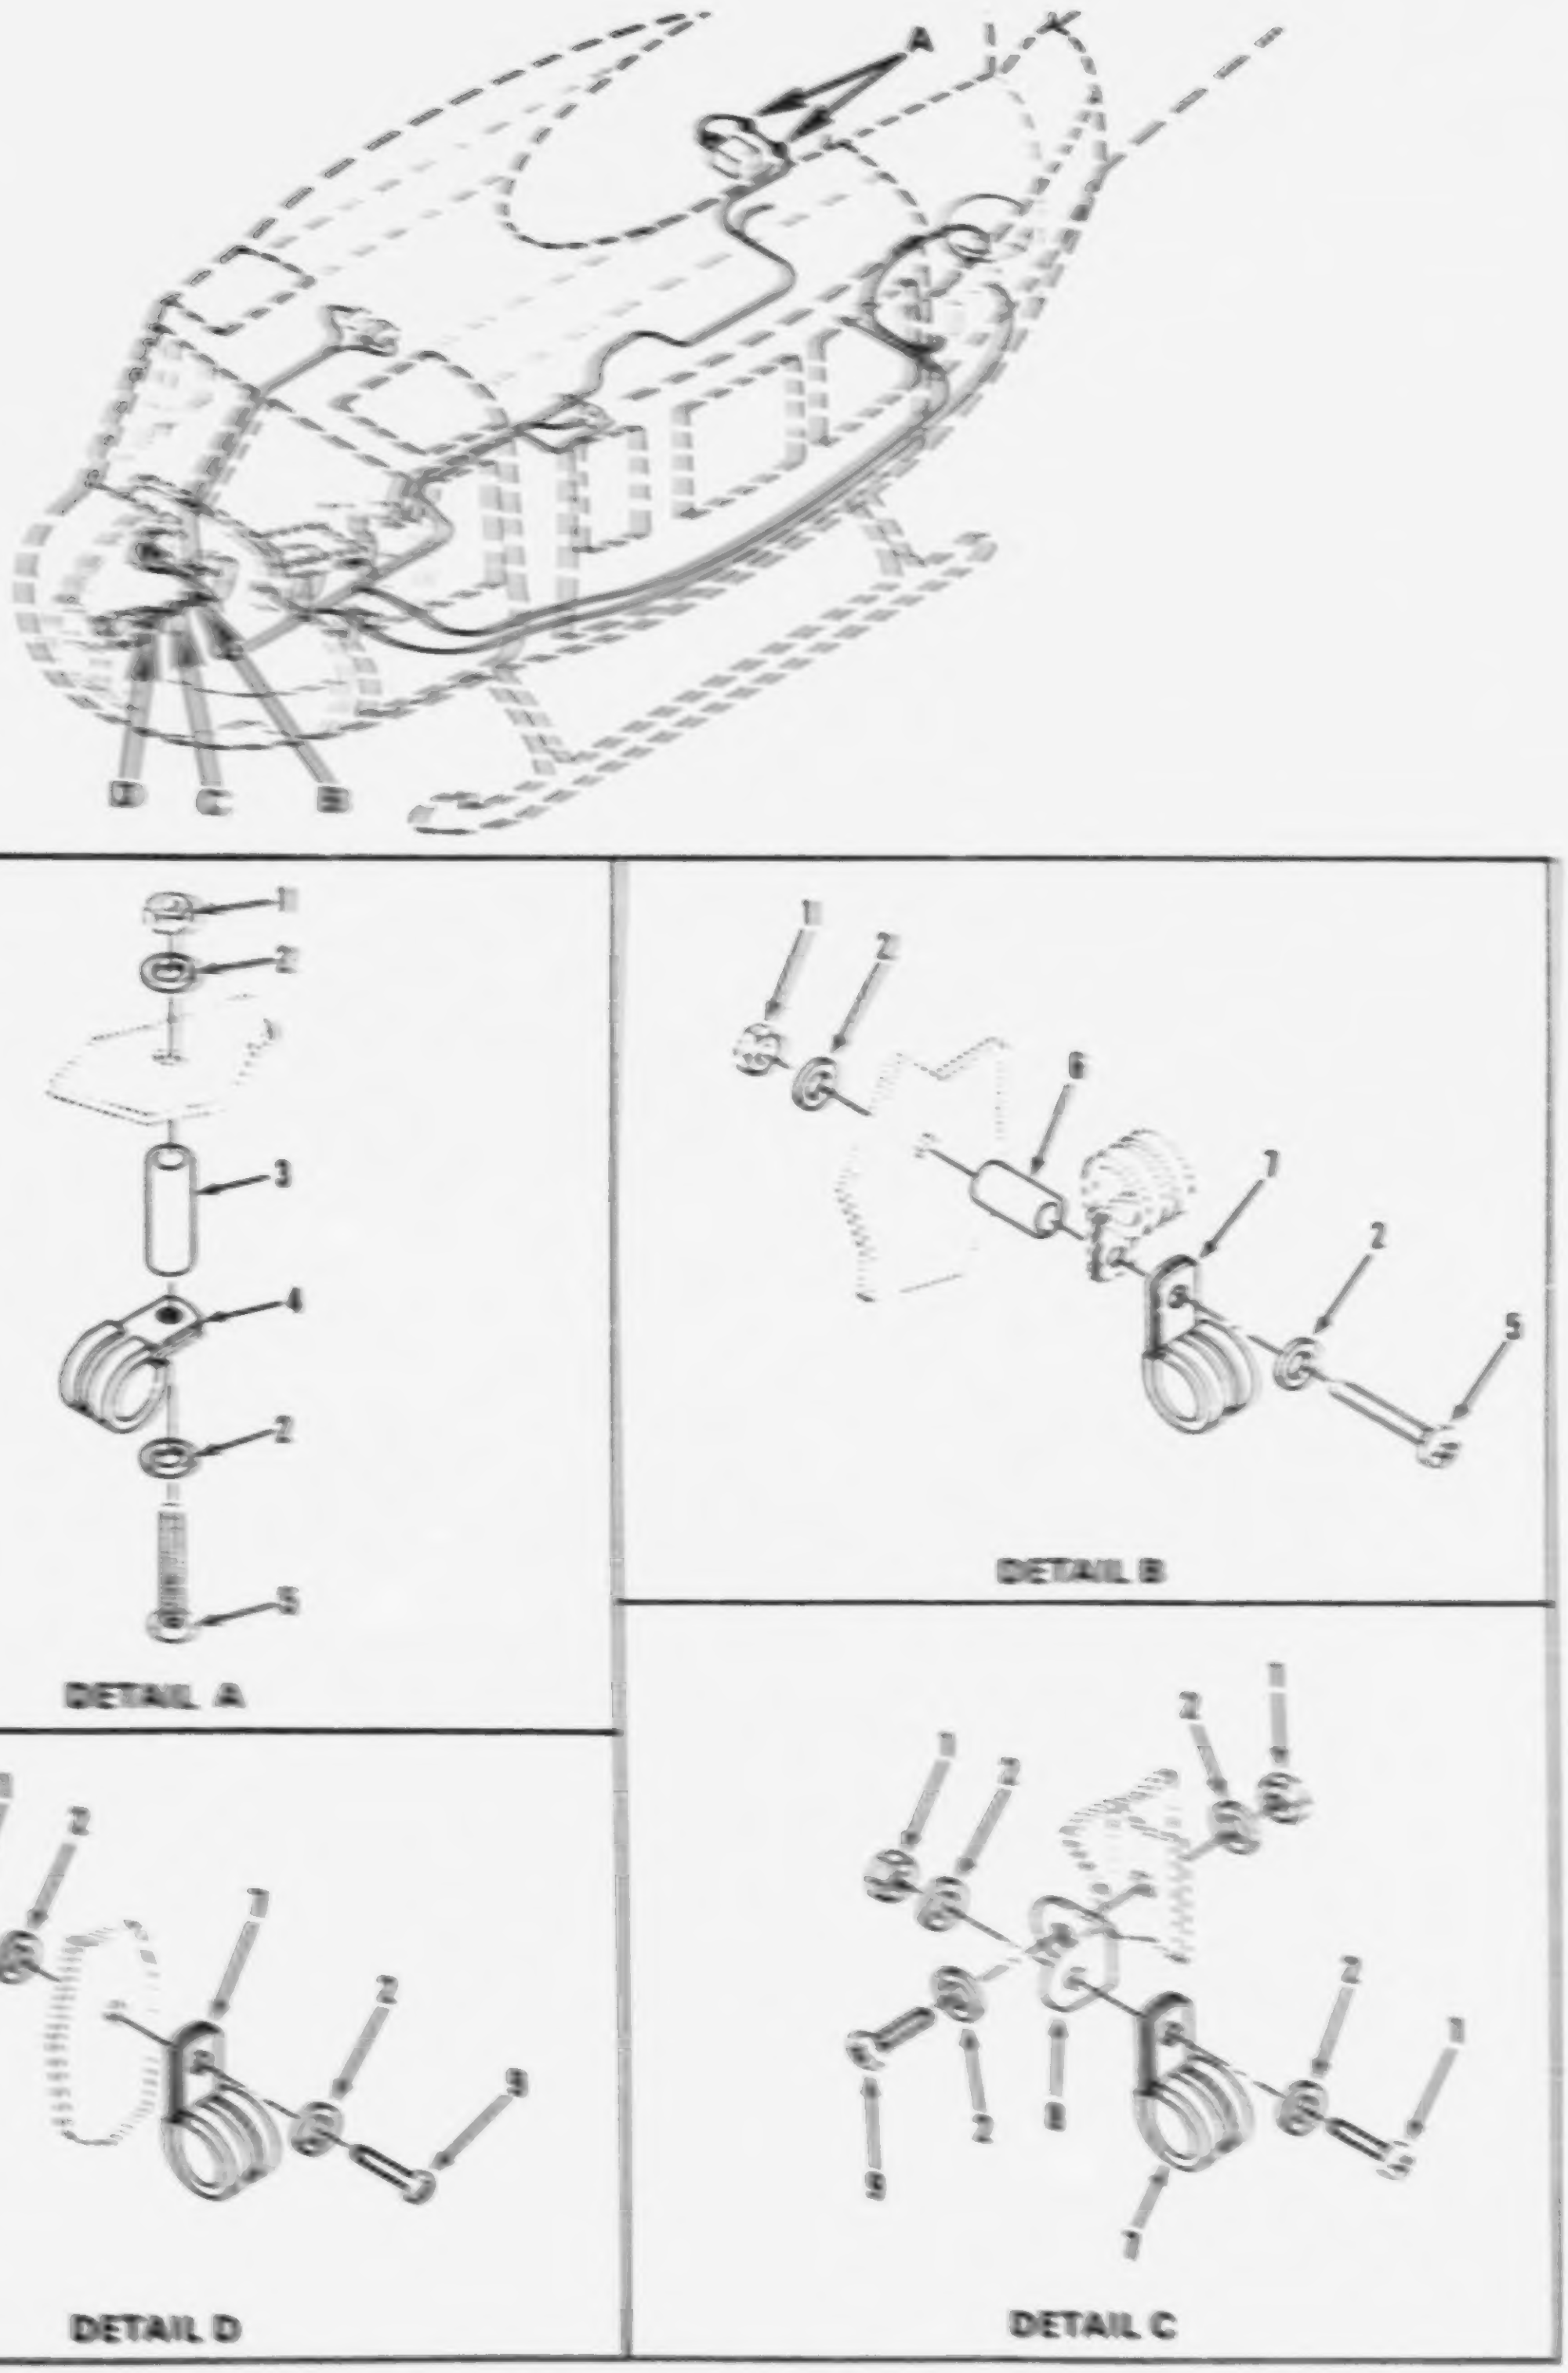
A
D
C
B
1
2
3
4
2
5
DETAIL A
1
2
6
7
2
5
DETAIL B
1
2
7
2
9
DETAIL D
2
1
1
2
2
1
9
2
8
7
DETAIL C

Figure 296.2. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-17)

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-17)		
2962	1	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE.......UHH,UHV	EA	6
2962	2	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT.......UHH,UHV	EA	12
2962	3	PAOZZ	5365-00-294-0580	NAS43DD3-48	88044	SPACER.......UHH,UHV	EA	2
2962	4	PAOZZ	5340-00-286-9427	MS21919WDG12	96906	CLAMP,LOOP.......UHH,UHV	EA	2
2962	5	PAOZZ	5305-00-059-3664	MS35206-42	96906	SCREW,MACHINE.......UHH,UHV	EA	3
2962	6	PAOZZ	5365-00-662-3998	NAS43DD3-27	88044	SPACER.......UHH,UHV	EA	1
2962	7	PAOZZ	5340-00-291-5322	MS21919WDG3	96906	CLAMP,LOOP.......UHH,UHV	EA	3
2962	8	PAOZZ	5340-00-598-8251	AN743-12	88044	BRACKET,ANGLE.......UHH,UHV	EA	1
2962	9	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW,MACHINE.......UHH,UHV	EA	3

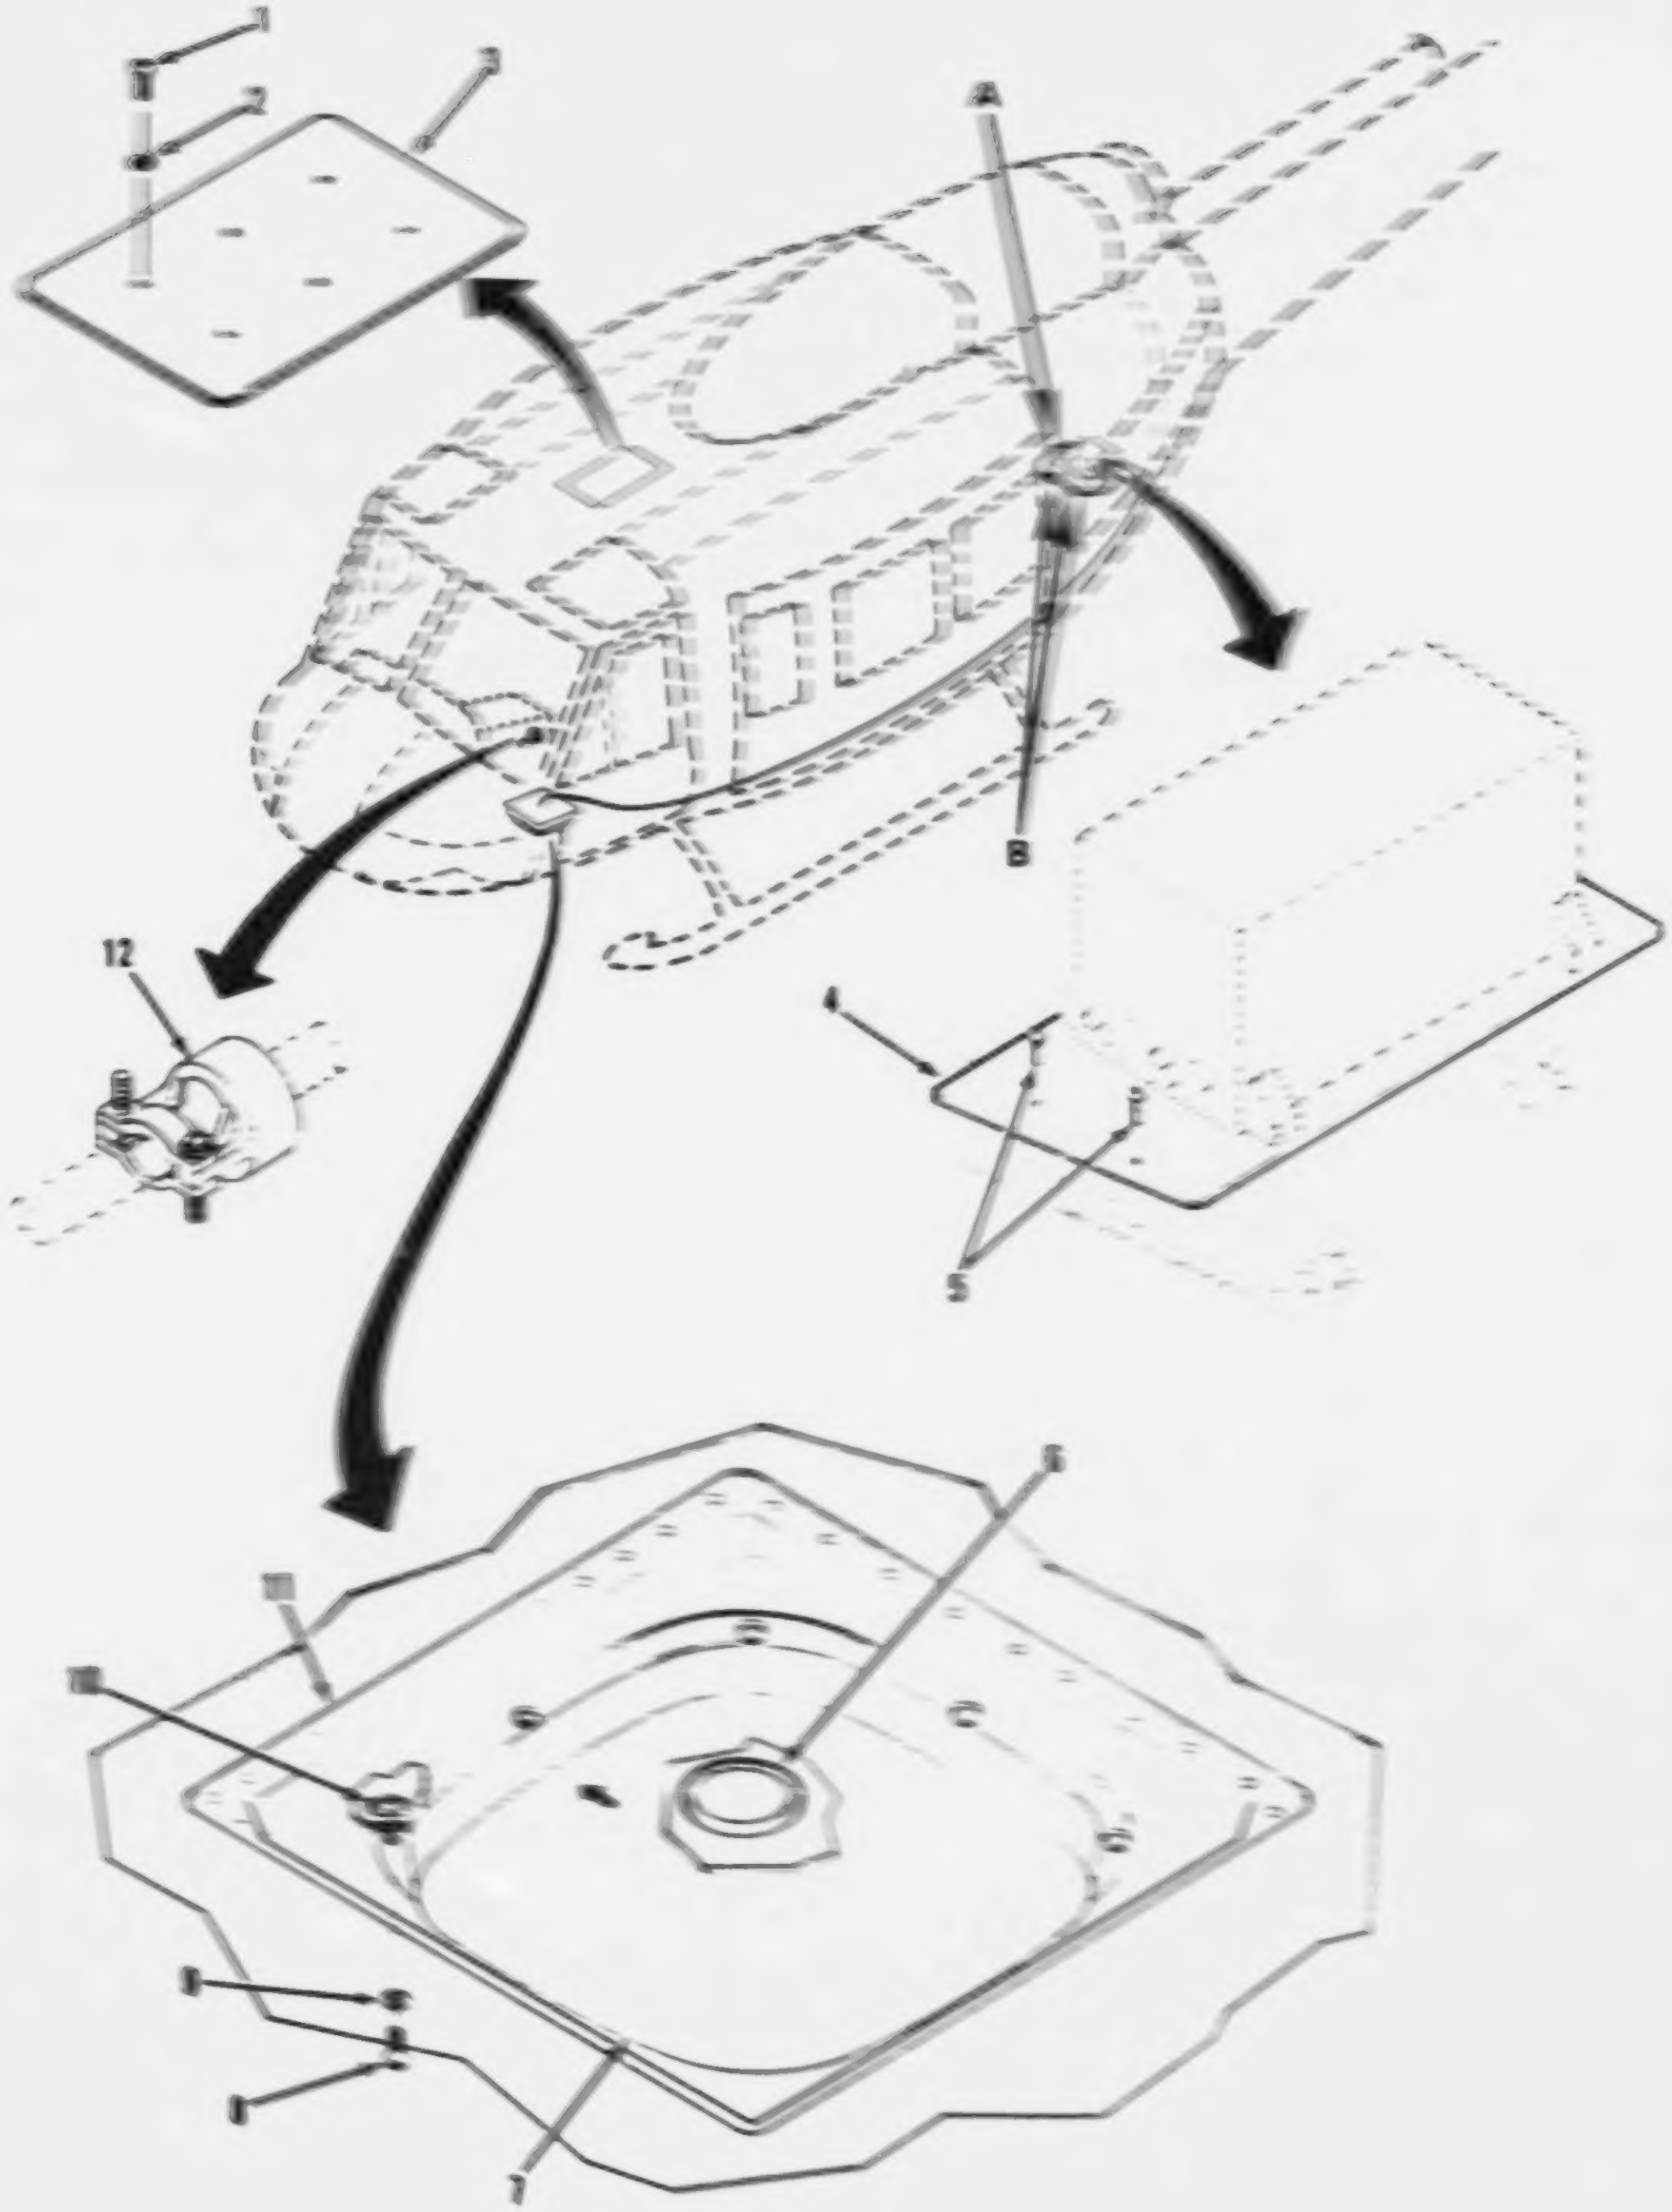
1
2
3
A
B
12
4
5
6
11
10
9
8
7

Figure 296.3. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-18)
(Sheet 1 of 2)

[THIS PAGE LEFFT BLANK]

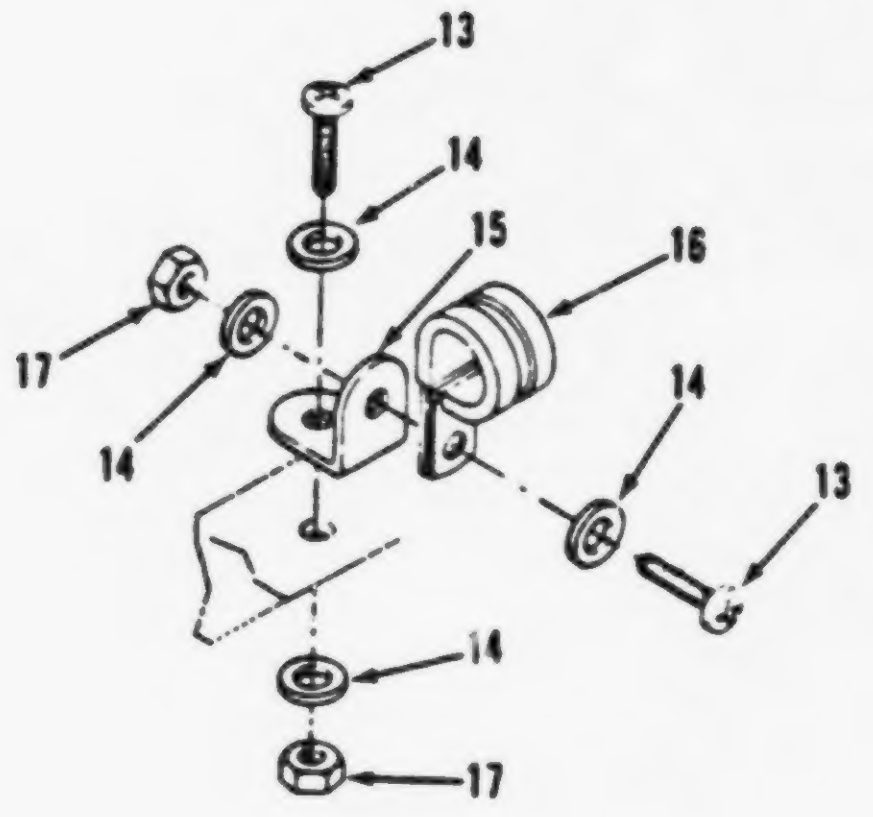
13
14
15
16
17
14
14
13
14
17

DETAIL A

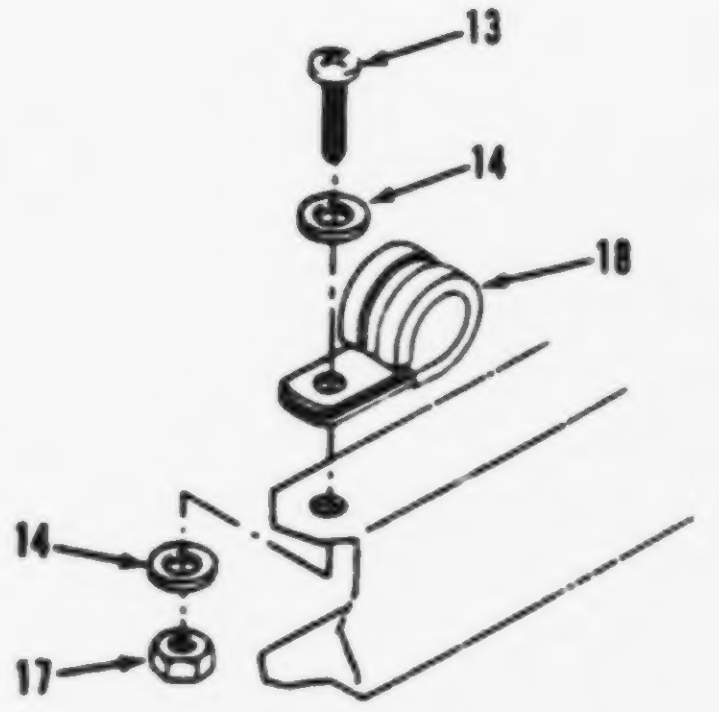
13
14
18
14
17

DETAIL B

Figure 296.3. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-18)
(Sheet 2)

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MW055-1520-210-50-18)		
296.3	1	PAOZZ	5305-00-701-5061	MS51958-45	96906	SCREW,MACHINE......................UHH,UHV	EA	6
296.3	2	PAOZZ	5310-00-880-5978	MS15795-807	96906	WASHER,FLAT........................UHH,UHV	EA	6
296.3	3	PBOZZ		CSK-9-04088-1	19544	PLATE,ANTENNA COVER................UHH,UHV	EA	1
296.3	4	PBOZZ		DSK-9-03019-1	19544	PLATE,ADPTR,RCVR MT................UHH,UHV	EA	1
296.3	5	PAOZZ	5305-00-054-6671	MS51957-46	96906	SCREW,MACHINE......................UHH,UHV	EA	4
296.3	6	PAOZZ		MS21266-1	96906	GROMMET,NONMETALLIC................UHH,UHV	EA	6
296.3	7	XAOZZ		ESK-9-04072-1	19544	PLATE,ANTENNA MTG..................UHH,UHV	EA	1
296.3	8	PAOZZ	5305-00-059-3660	MS51958-64	96906	SCREW,MACHINE......................UHH,UHV	EA	12
296.3	9	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT........................UHH,UHV	EA	8
296.3	10	PAOZZ	5310-00-771-7406	MS21076L3	96906	NUT,SELF-LOCKING,PL................UHH,UHV	EA	8
296.3	11	PAOZZ		ESK-9-04072-501	19544	PLATE,ANT, MTG,ASSY................UHH,UHV	EA	1
296.3	12	PAOZZ	5935-00-622-2723	MS3417-14N	96906	CLAMP,CABLE,ELECTRI................UHH,UHV	EA	1
296.3	13	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW,MACHINE......................UHH,UHV	EA	4
296.3	14	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT........................UHH,UHV	EA	8
296.3	15	PAOZZ	5340-00-598-8251	AN743-12	88044	BRACKET,ANGLE......................UHH,UHV	EA	1
296.3	16	PAOZZ	5340-00-291-5303	MS21919WDG4	96906	CLAMP,LOOP.........................UHH,UHV	EA	1
296.3	17	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE................UHH,UHV	EA	4
296.3	18	PAOZZ	5340-00-283-0649	MS21919WDG7	96906	CLAMP,LOOP.........................UHH,UHV	EA	2

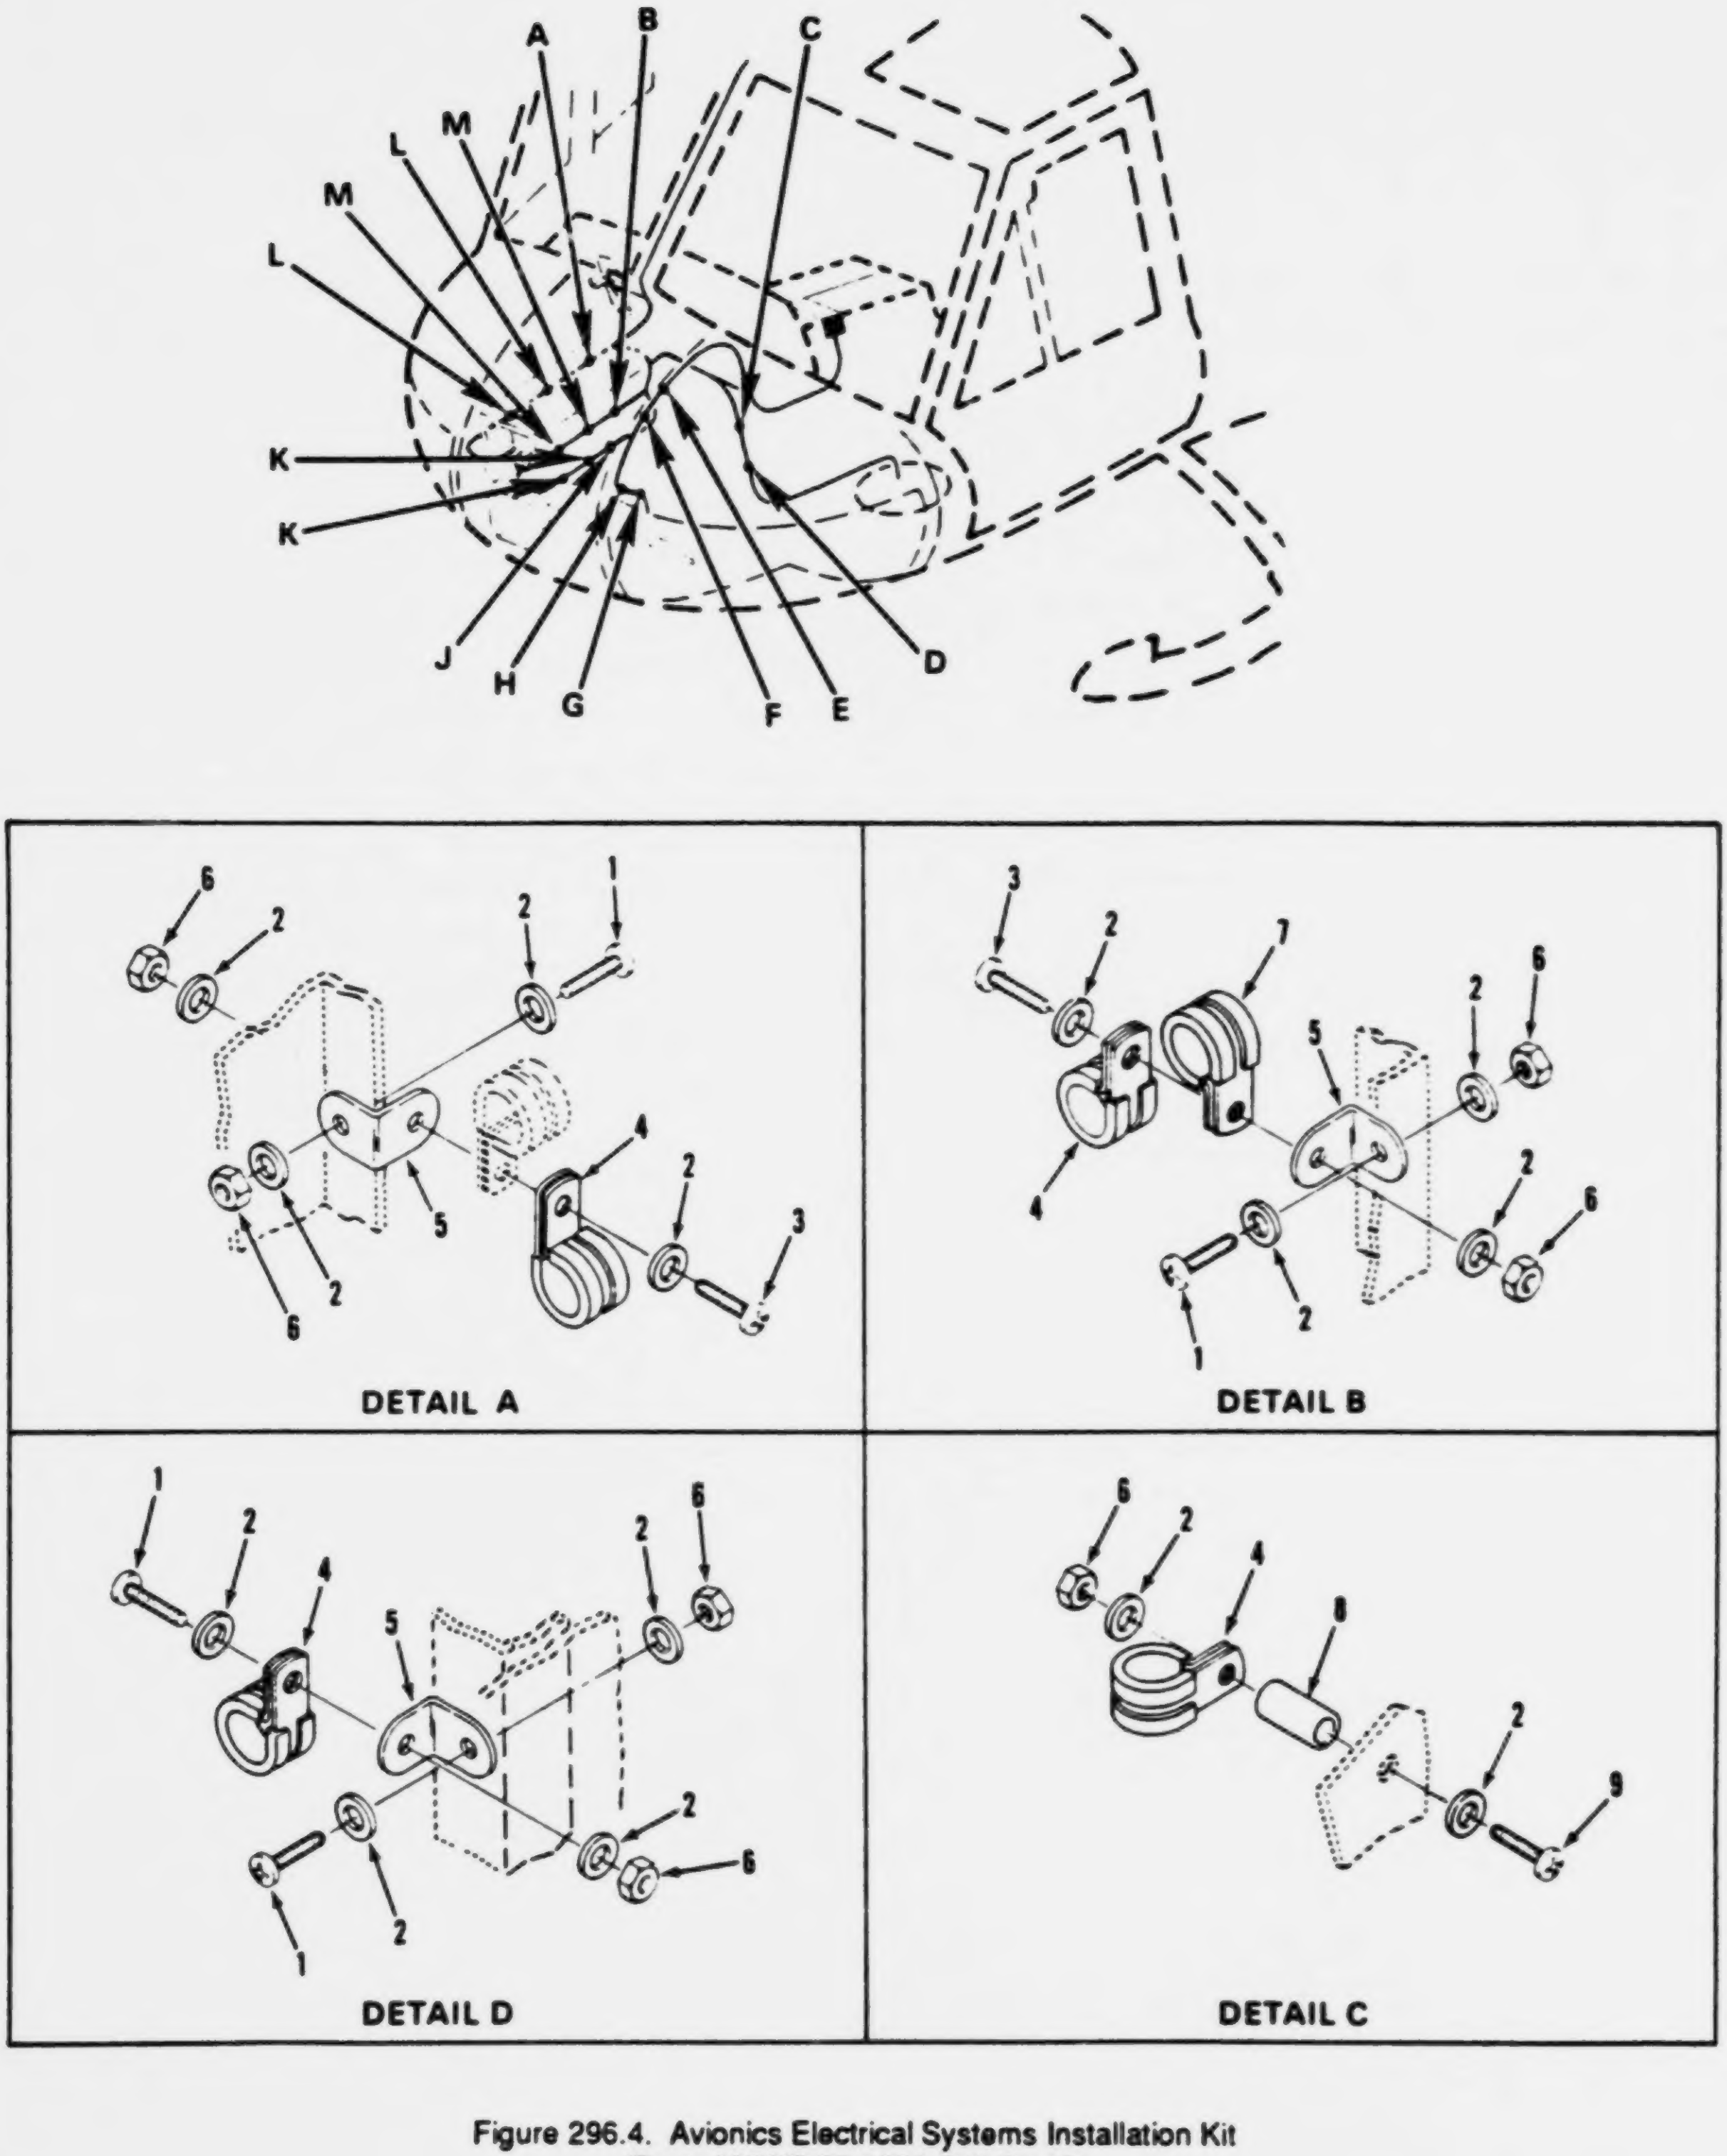
A
B
C
M
L
M
L
K
K
J
H
G
F
E
D
6
2
2
1
4
2
5
3
6
2
6
DETAIL A
3
2
7
2
6
5
4
2
6
1
2
DETAIL B
1
2
4
5
2
6
2
6
1
2
DETAIL D
6
2
4
8
2
9
DETAIL C

Figure 296.4. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-19)
(Sheet 1 of 2)

1246.14

[THIS PAGE LEFT BLANK]

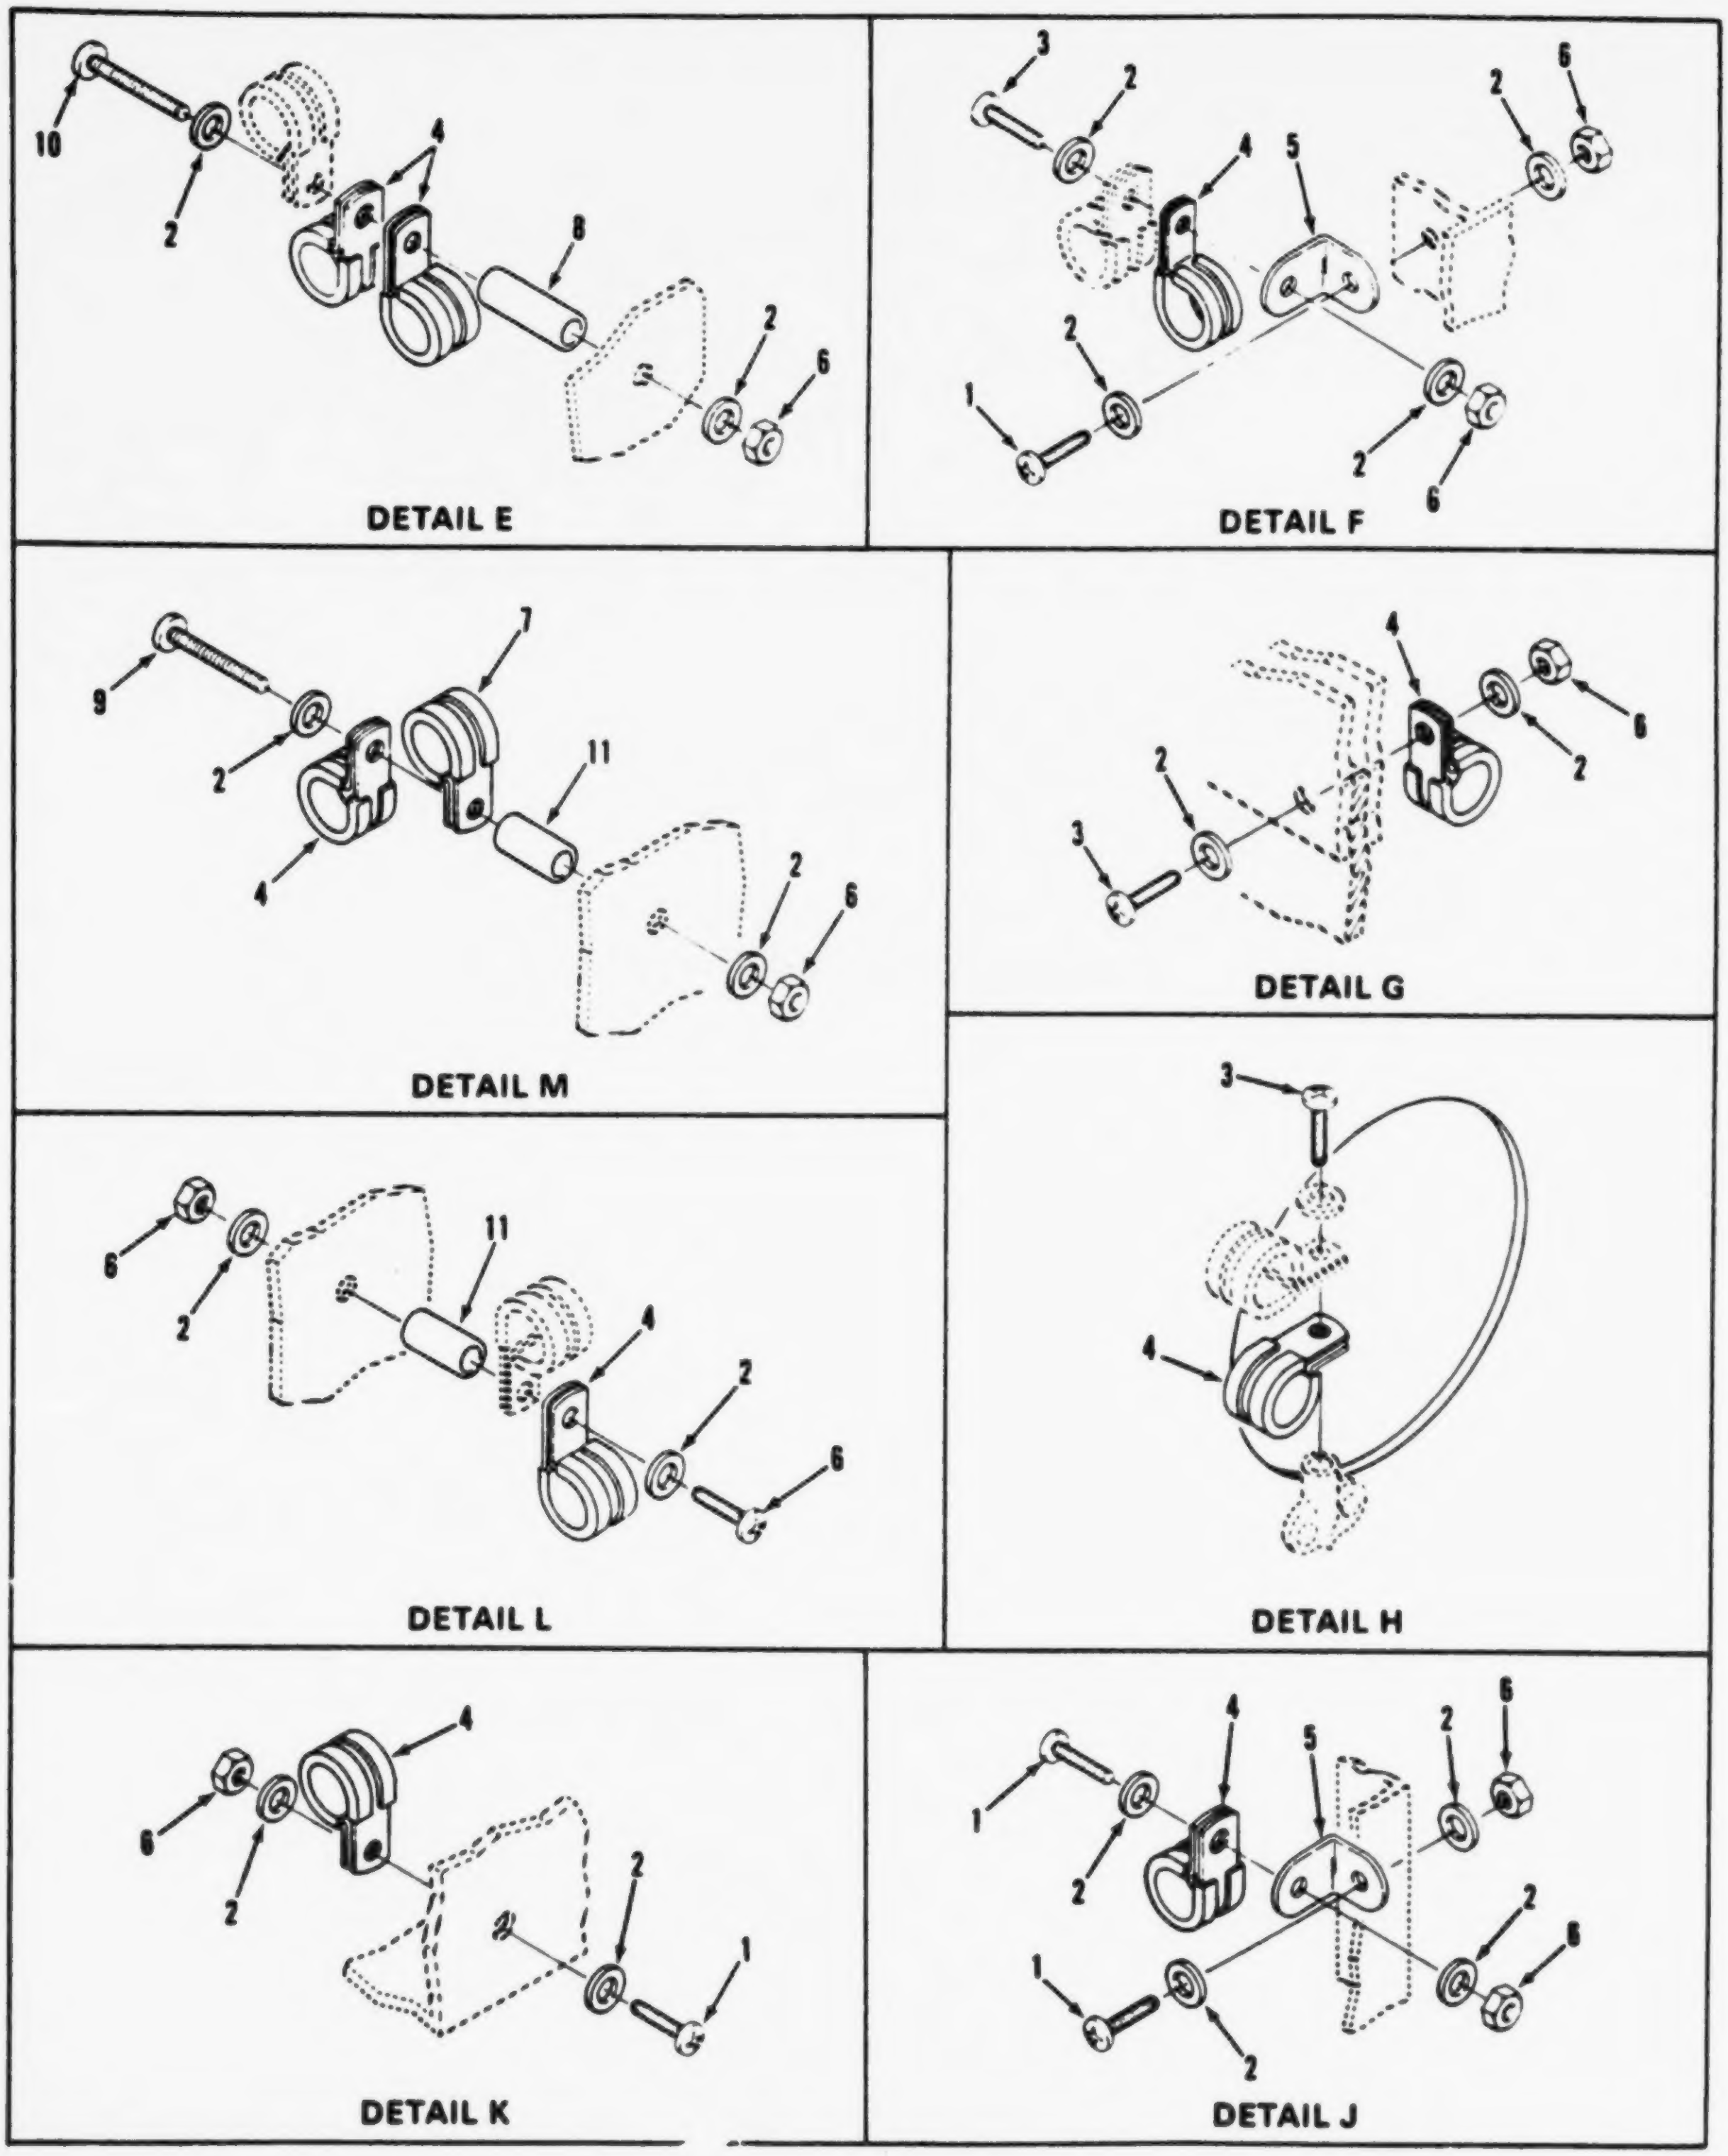
10
2
4
8
2
6
DETAIL E
3
2
2
6
4
5
2
1
2
6
DETAIL F
7
9
2
11
4
2
6
DETAIL M
4
6
2
2
3
DETAIL G
11
6
2
4
2
6
DETAIL L
3
4
DETAIL H
4
6
2
2
1
DETAIL K
6
2
4
5
1
2
2
6
1
2
DETAIL J

Figure 296.4. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-19)
(Sheet 2)

1246.16

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY. INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-19)		
296.4	1	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW,MACHINE....................UHH,UHV	EA	9
296.4	2	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT....................UHH,UHV	EA	38
296.4	3	PAOZZ	5305-00-059-3660	MS51958-64	96906	SCREW,MACHINE....................UHH,UHV	EA	5
296.4	4	PAOZZ	5340-00-291-5322	MS21919WDG3	96906	CLAMP,LOOP....................UHH,UHV	EA	16
296.4	5	PAOZZ	5340-00-548-8251	AN743-12	88044	BRACKET,ANGLE....................UHH,UHV	EA	5
296.4	6	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE....................UHH,UHV	EA	19
296.4	7	PAOZZ	5340-00-291-5323	MS21919WDG9	96906	CLAMP,LOOP....................UHH,UHV	EA	3
296.4	8	PAOZZ	5365-00-294-0580	NAS43DD3-48	80502	SPACER,SLEEVE....................UHH,UHV	EA	2
296.4	9	PAOZZ	5305-00-059-3664	MS51958-68	96906	SCREW,MACHINE....................UHH,UHV	EA	5
296.4	10	PAOZZ	5305-00-059-3665	MS51958-69	96906	SCREW,MACHINE....................UHH,UHV	EA	1
296.4	11	PAOZZ	5365-00-662-3098	NAS43DD3-32	80205	SPACER,SLEEVE....................UHH,UHV	EA	4

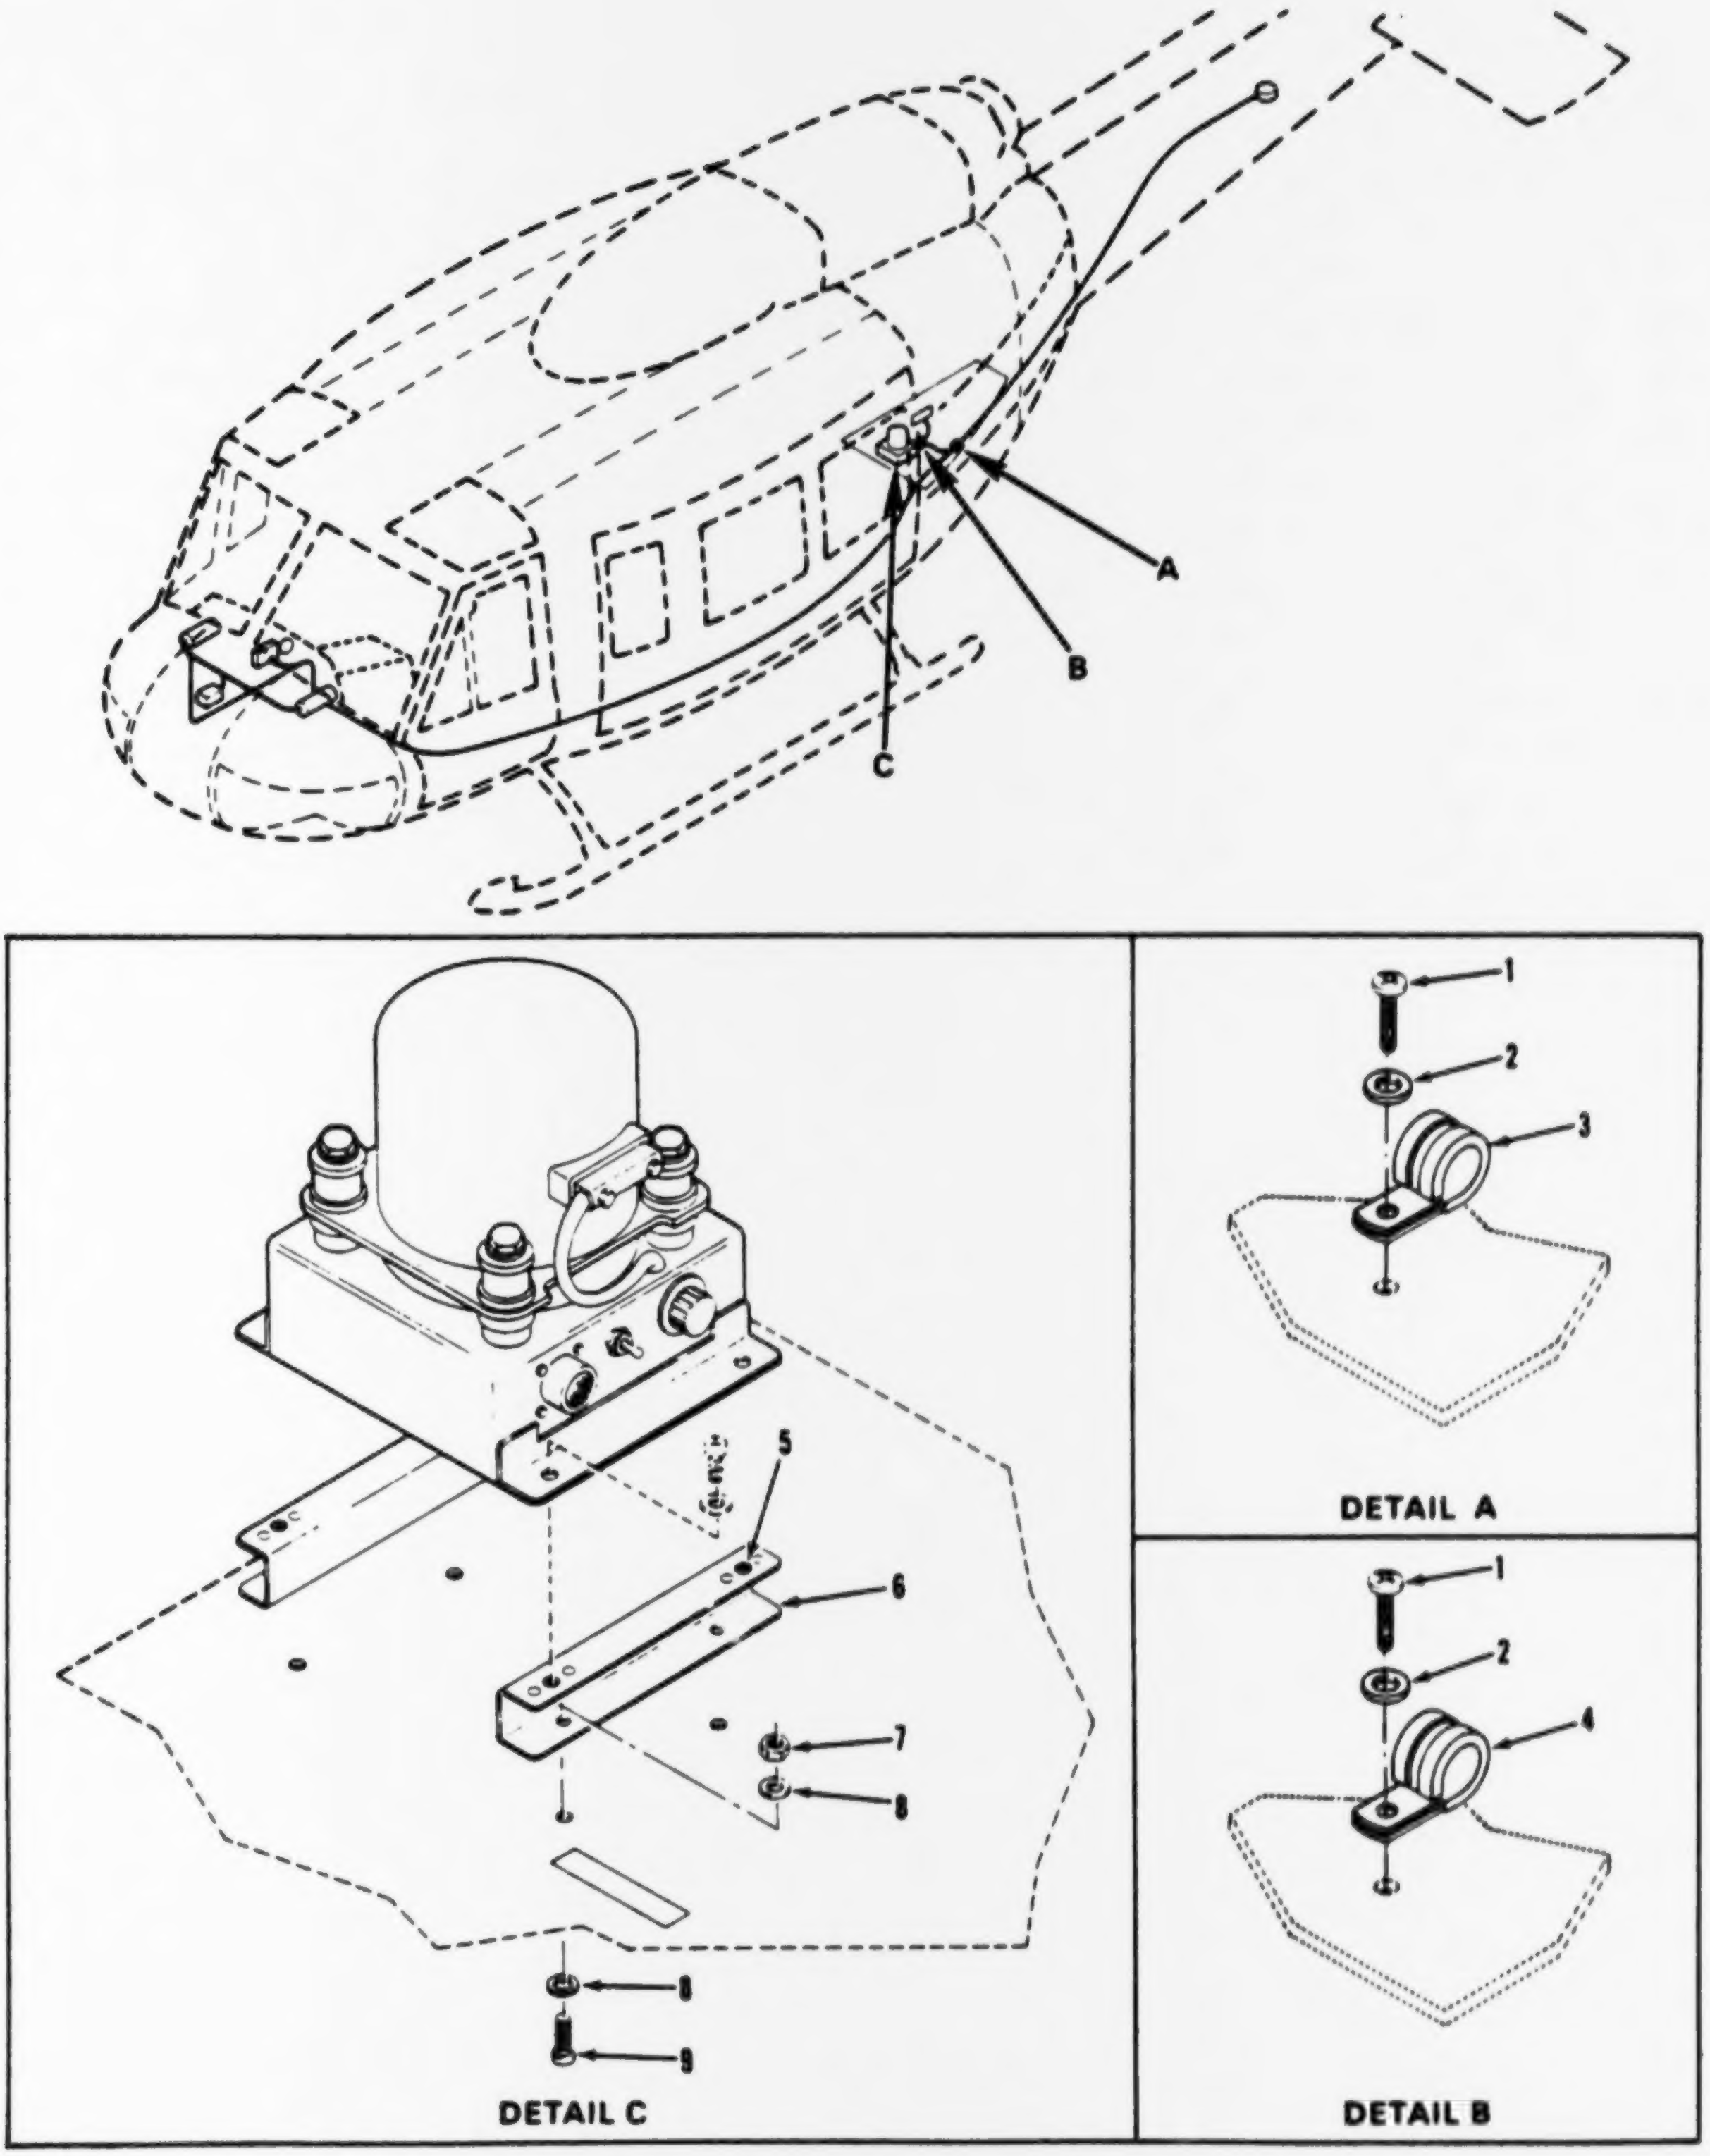
A
B
C
1
2
3
DETAIL A
1
2
4
DETAIL B
5
6
7
8
8
9
DETAIL C

Figure 296.5. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-20)

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS. INSTALLATION KIT (PART OF MWO55-1520-210-50-20)		
296.5	1	PAOZZ	5305-00-059-3657	MS51958-61	96906	SCREW.MACHINE....................UHH,UHV	EA	2
296.5	2	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER.FLAT......................UHH,UHV	EA	2
296.5	3	PAOZZ	5340-00-291-5247	MS21919WDG8	96906	CLAMP.LOOP.......................UHH,UHV	EA	1
296.5	4	PAOZZ	5340-00-598-0146	MS21919WDG6	96906	CLAMP.LOOP.......................UHH,UHV	EA	1
296.5	5	PAOZZ	5310-00-771-7406	MS21076L3	96906	NUT.SELF-LOCKING,HE..............UHH,UHV	EA	2
296.5	6	XBOZZ		CSK-9-03154-1	19544	CHANNEL..........................UHH,UHV	EA	2
296.5	7	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT.SELF-LOCKING,HE..............UHH,UHV	EA	4
296.5	8	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER.FLAT......................UHH,UHV	EA	8
296.5	9	PAOZZ	5305-00-059-3660	MS51958-64	96906	SCREW.MACHINE....................UHH,UHV	EA	4

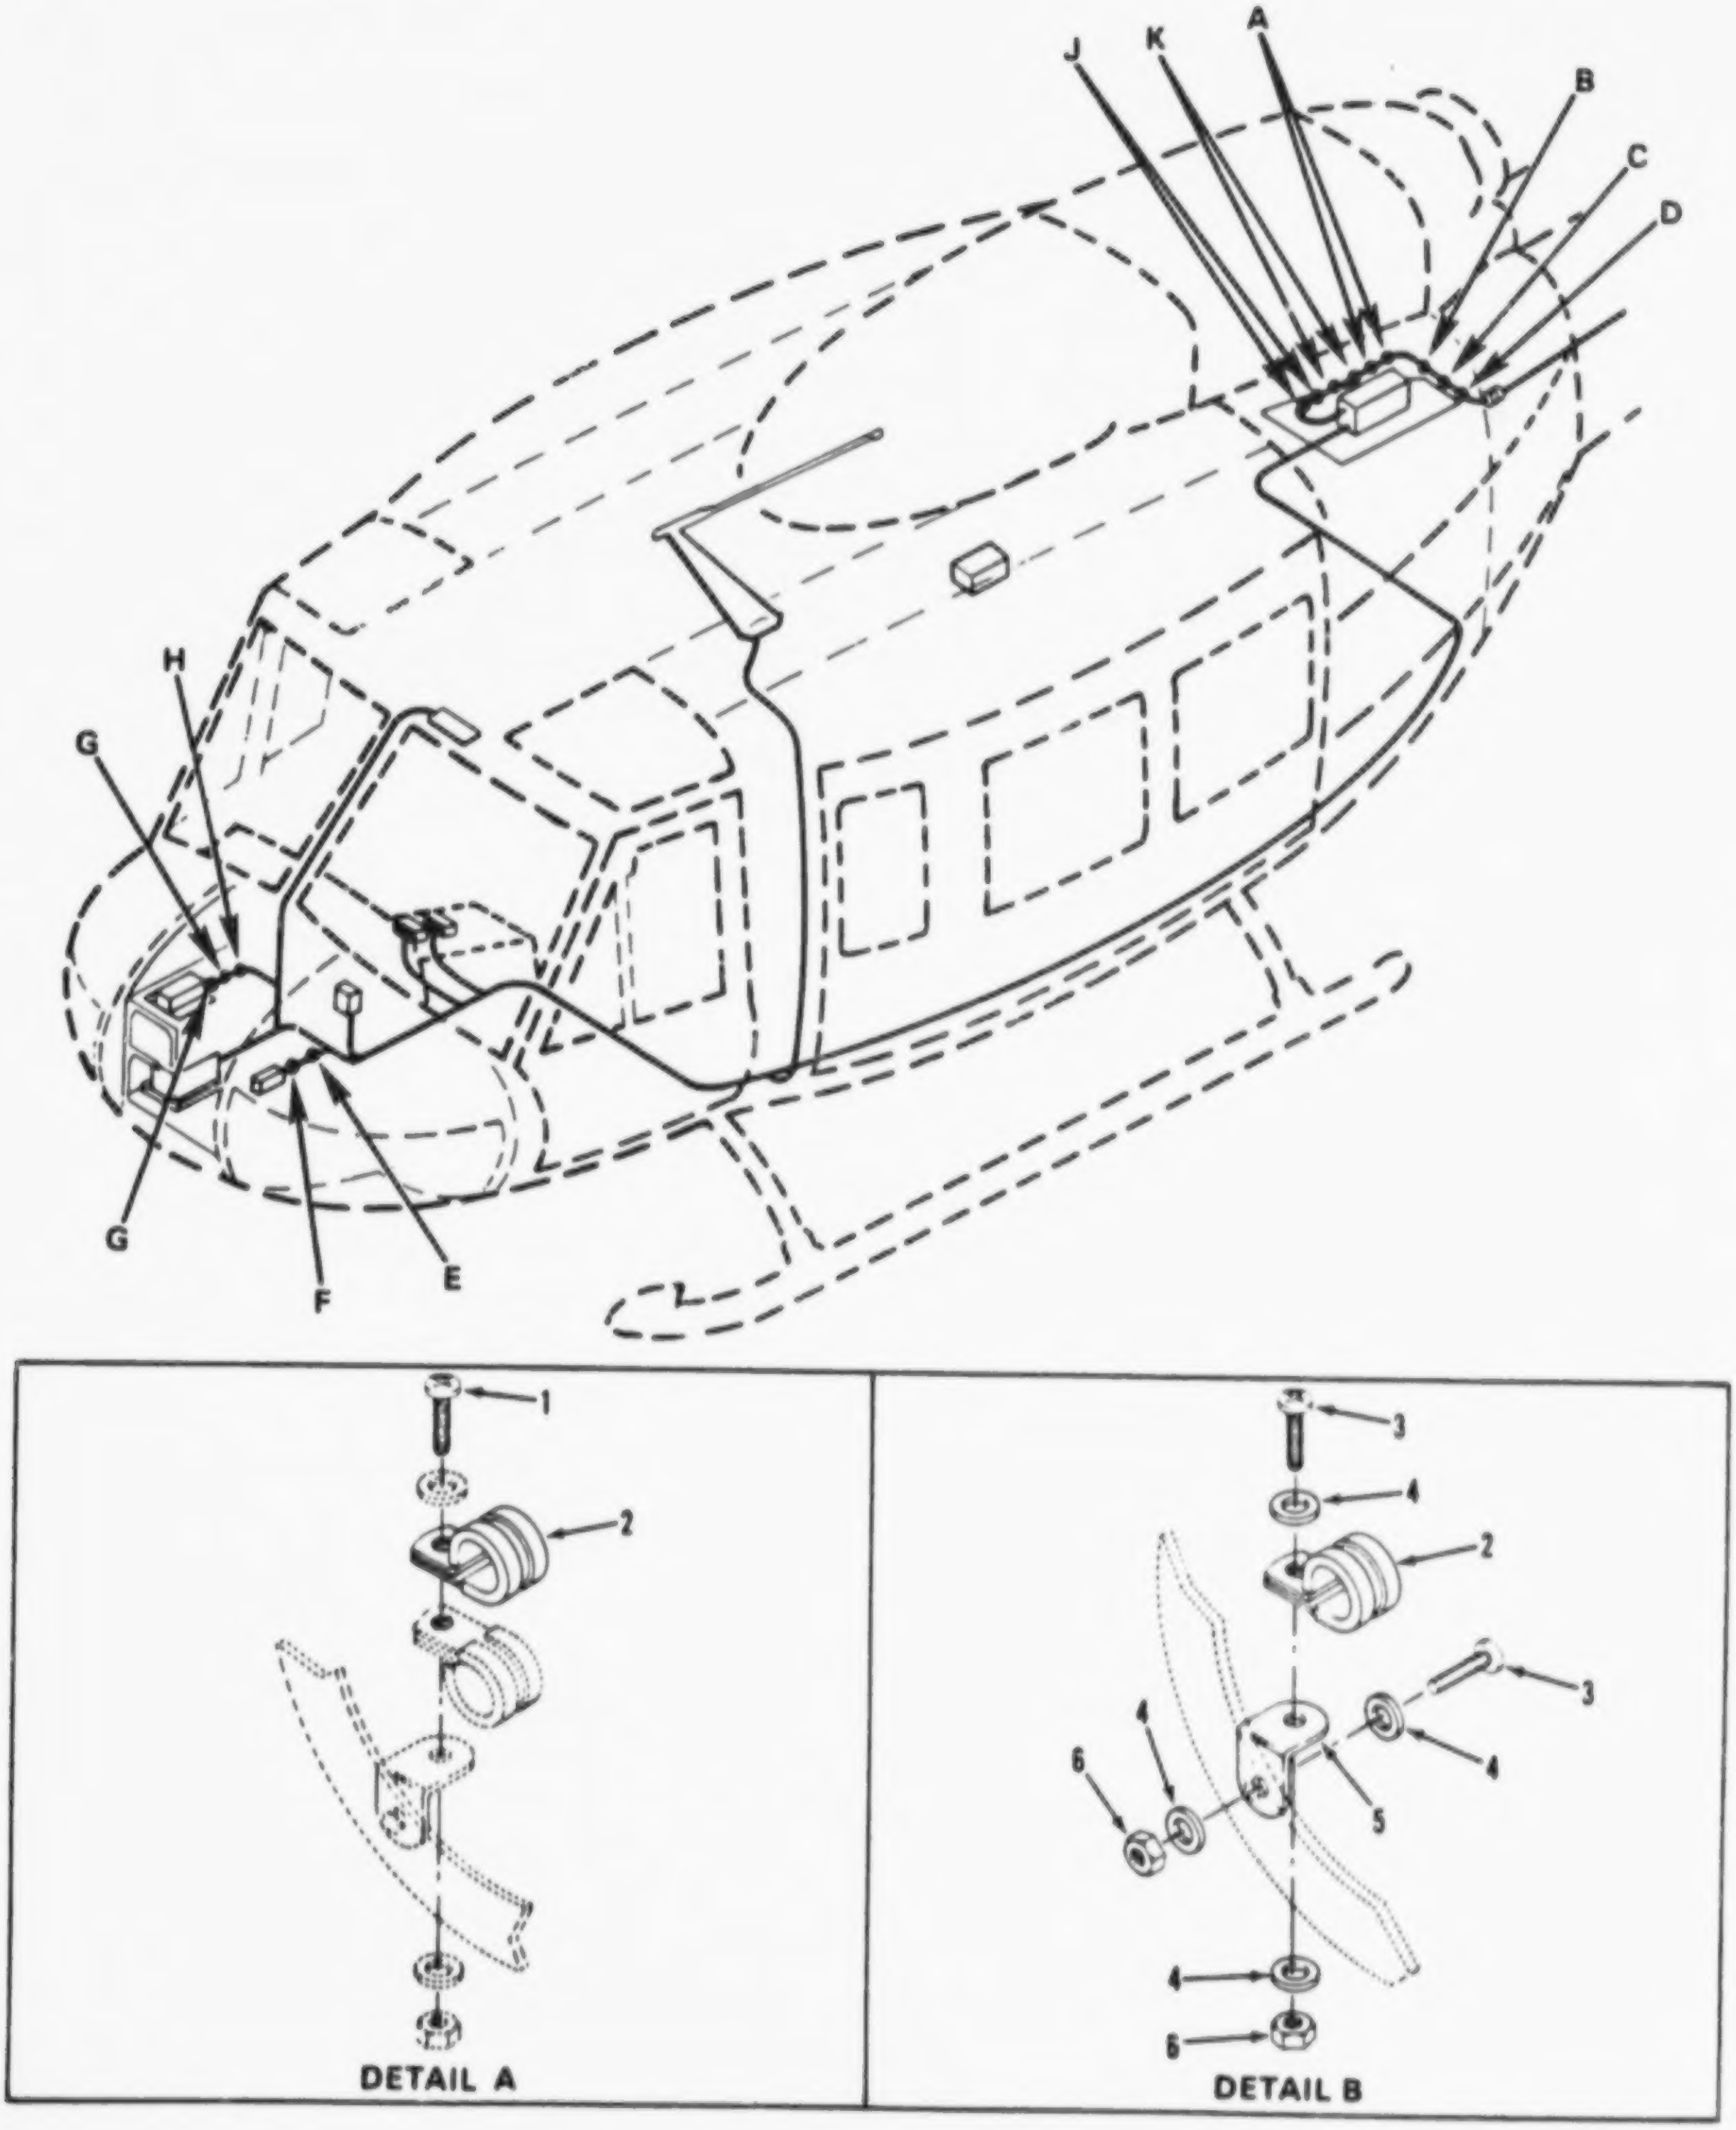
J
K
A
B
C
D
H
G
G
F
E
1
2
DETAIL A
3
4
2
3
4
6
4
5
4
6
DETAIL B

Figure 296.6. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-21)
(Sheet 1 of 2)

1246.20

[THIS PAGE LEFT BLANK]

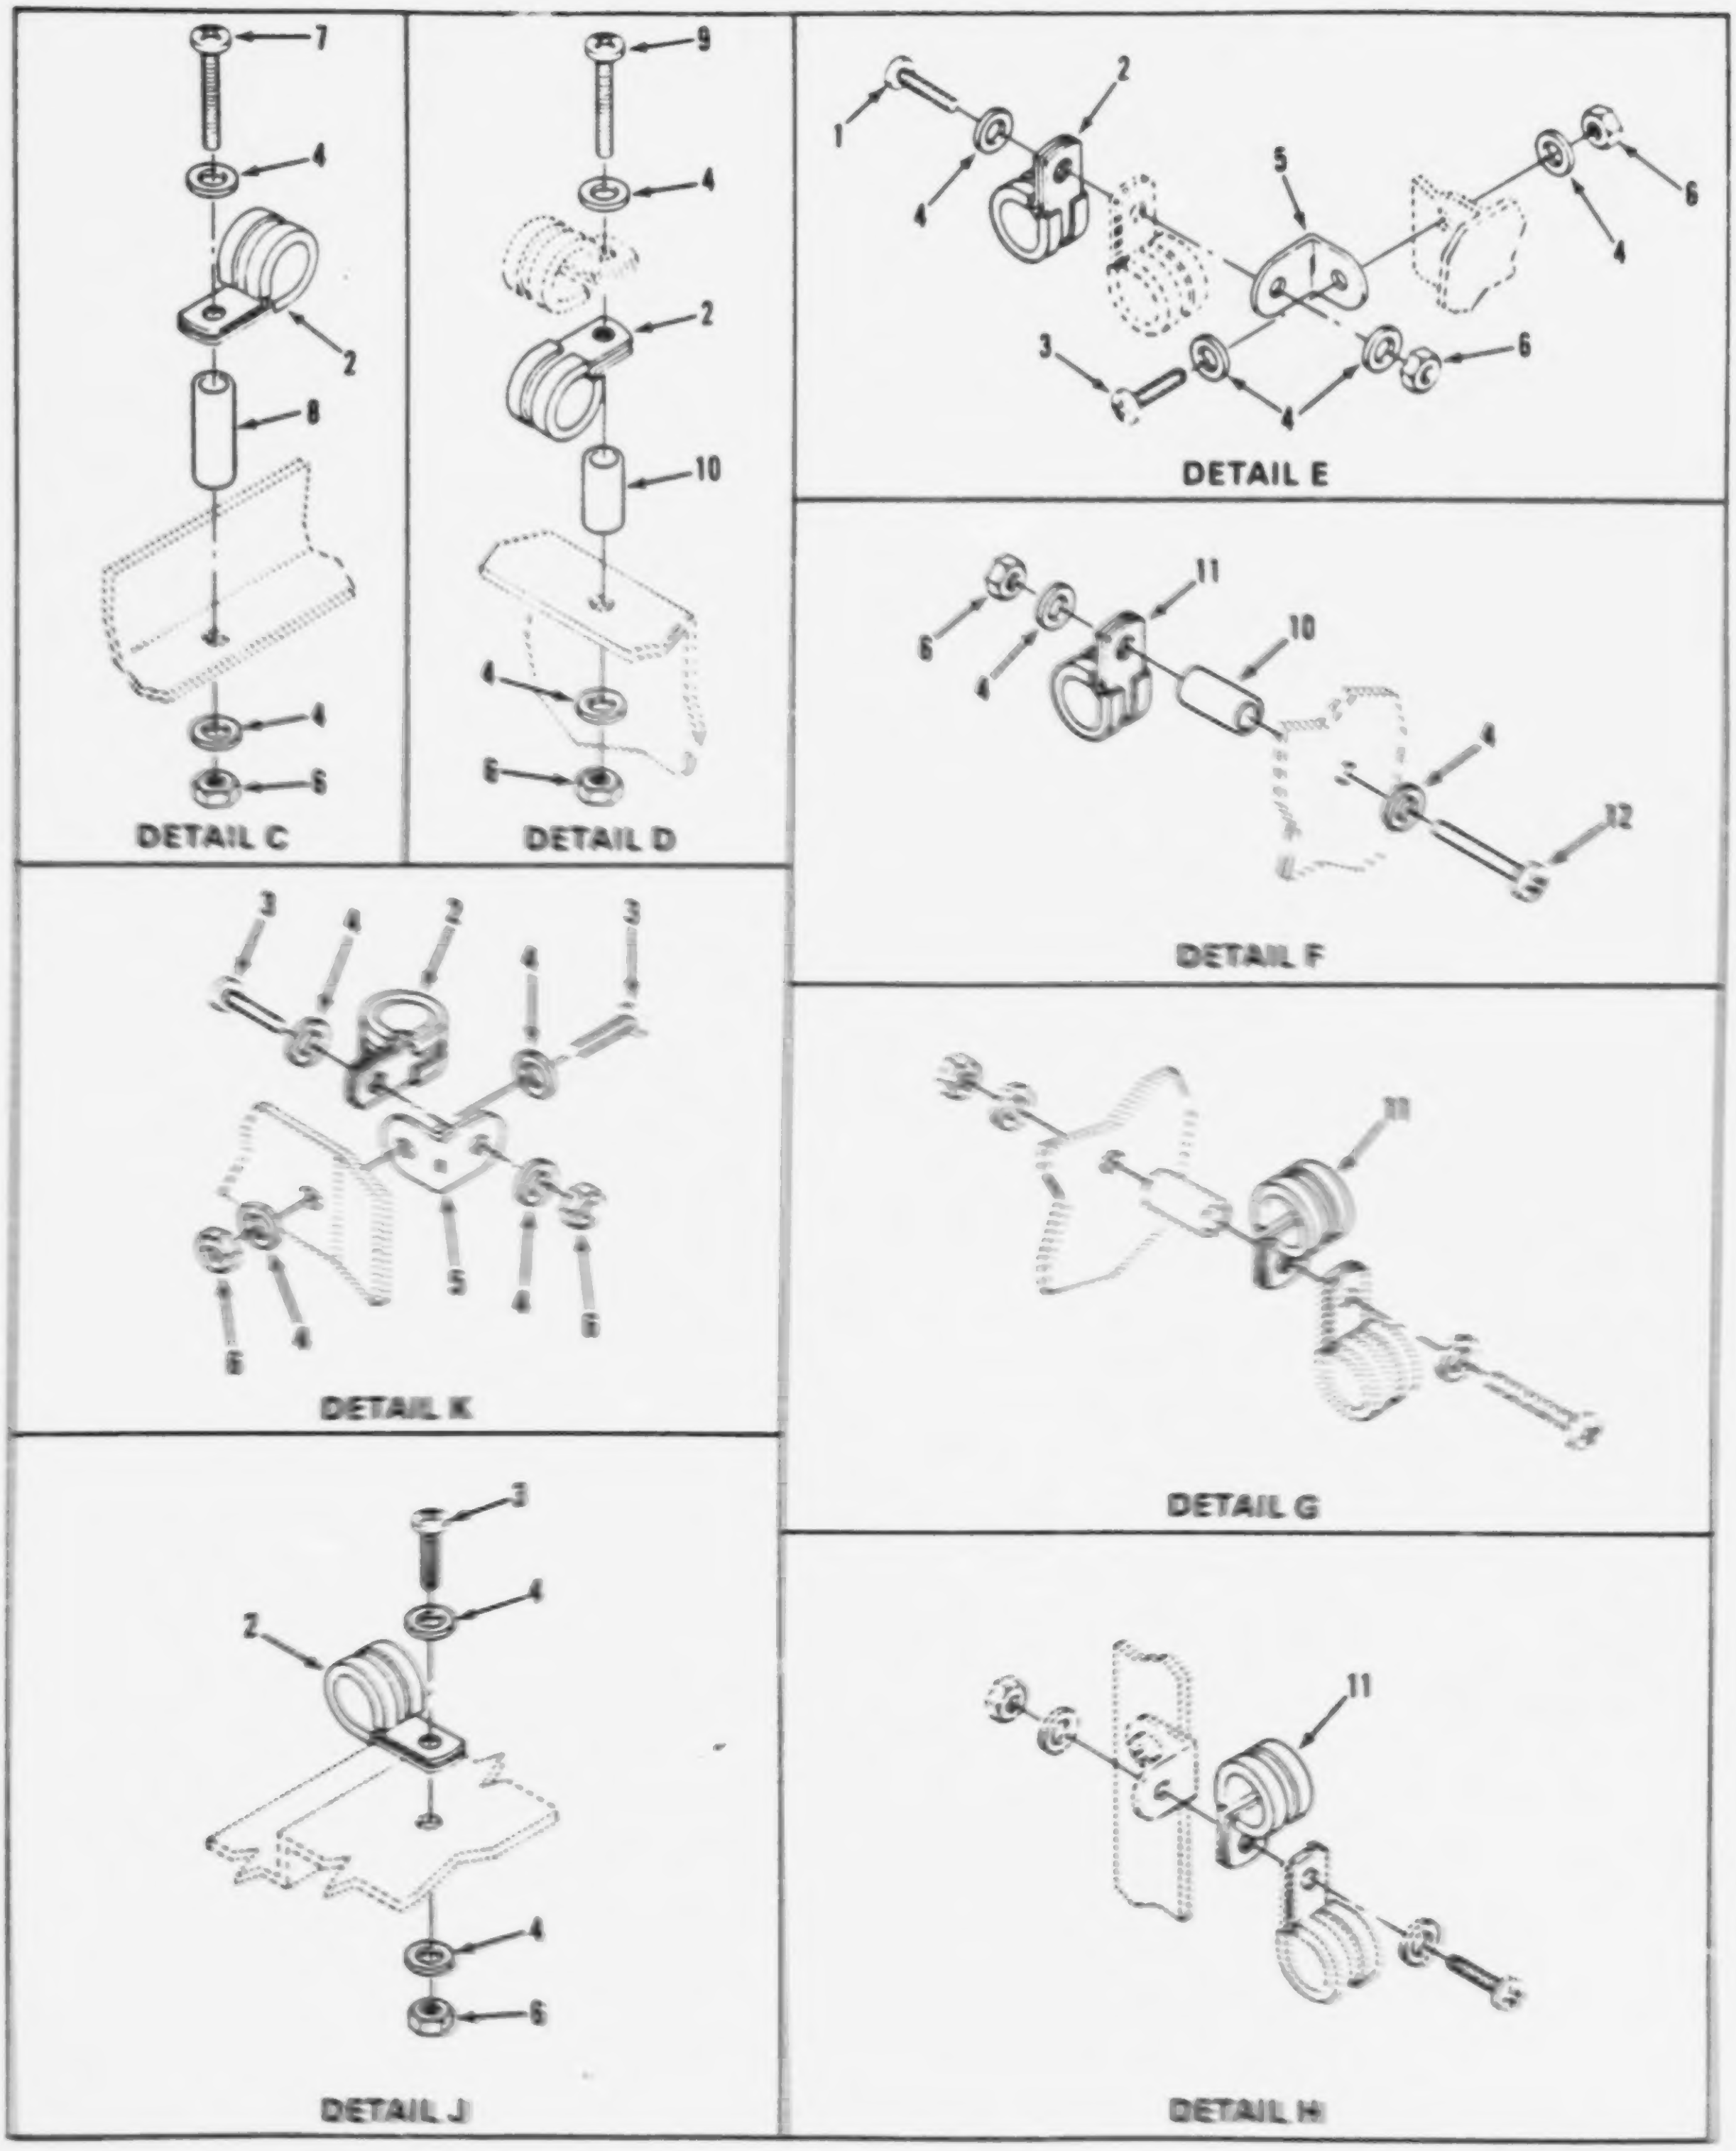
7
4
2
8
4
6
9
4
2
10
4
6
1
2
4
5
3
4
4
6
4
6
6
4
11
10
4
12
3
4
2
4
3
5
6
4
4
6
11
3
4
2
4
6
11

DETAIL C

DETAIL D

DETAIL E

DETAIL F

DETAIL K

DETAIL G

DETAIL J

DETAIL H

Figure 296.6. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-21)
(Sheet 2)

12466-202

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-71)		
296.6	1	PAOZZ	5305-00-059-3658	MS51958-64	96906	SCREW,MACHINE....................UHH,UHV	EA	3
296.6	2	PAOZZ	5340-00-291-5322	MS21919WDG3	96906	CLAMP,LOOP....................UHH,UHV	EA	10
296.6	3	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW,MACHINE....................UHH,UHV	EA	9
296.6	4	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT....................UHH,UHV	EA	26
296.6	5	PAOZZ	5340-00-598-8251	AN743-12	88044	BRACKET,ANGLE....................UHH,UHV	EA	4
296.6	6	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE....................UHH,UHV	EA	19
296.6	7	PAOZZ	5305-00-059-3665	MS51958-69	96906	SCREW,MACHINE....................UHH,UHV	EA	1
296.6	8	PAOZZ	5365-00-662-3100	NAS43DD3-64	80205	SPACER,SLEEVE....................UHH,UHV	EA	1
296.6	9	PAOZZ	5305-00-059-3662	MS51958-68	96906	SCREW,MACHINE....................UHH,UHV	EA	1
296.6	10	PAOZZ	5365-00-662-3098	NAS43DD3-32	80205	SPACER,SLEEVE....................UHH,UHV	EA	2
296.6	11	PAOZZ	5340-00-291-5323	MS21919WDG4	96906	CLAMP,LOOP....................UHH,UHV	EA	4
296.6	12	PAOZZ	5305-00-059-3663	MS51958-67	96906	SCREW,MACHINE....................UHH,UHV	EA	1

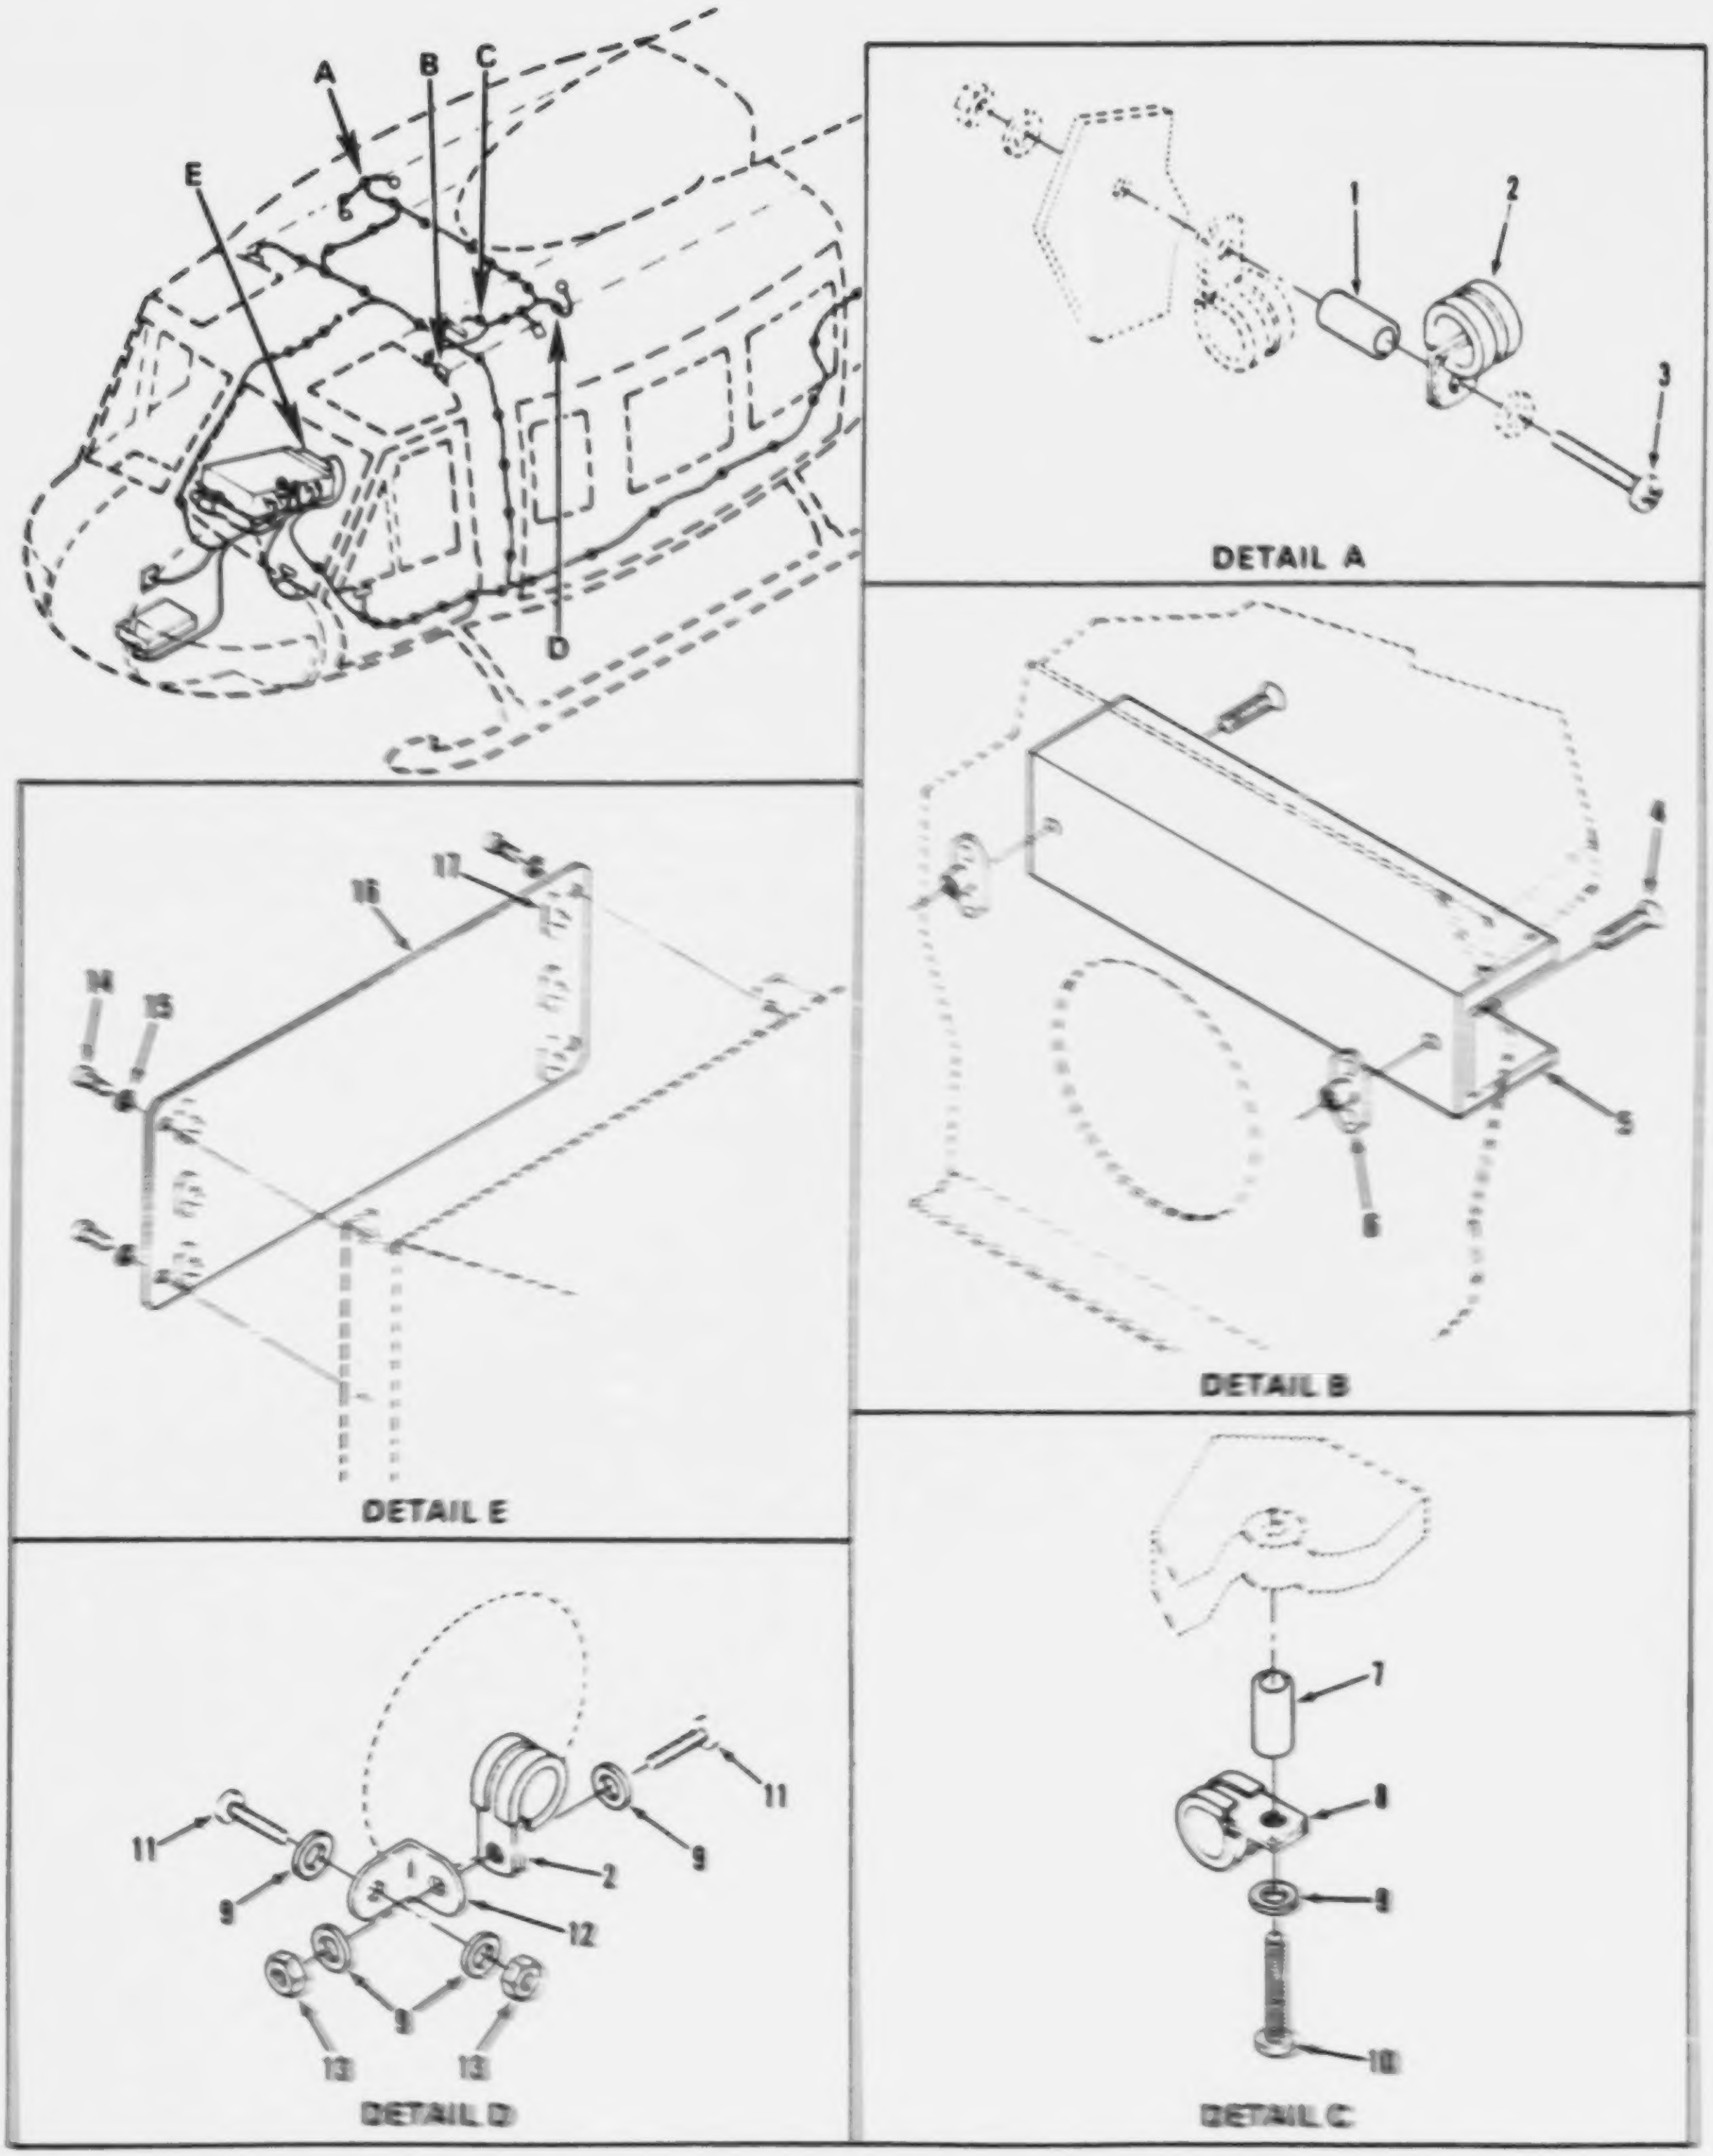
A
B
C
E
D
1
2
3
DETAIL A
4
5
6
DETAIL B
16
17
14
15
DETAIL E
7
8
9
10
DETAIL C
11
11
9
9
2
12
9
13
13
DETAIL D

Figure 296.7. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-22)

[illegible]

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS, INSTALLATION KIT (PART OF MWO55-1520-210-50-22)		
296.7	1	PAOZZ	5365-00-294-0580	NAS43DD3-48	80205	SPACER..........................UHH,UHV	EA	1
296.7	2	PAOZZ	5340-00-200-8559	MS21919WDG7	96906	CLAMP,LOOP......................UHH,UHV	EA	2
296.7	3	PAOZZ	5305-00-059-3664	MS51958-68	96906	SCREW,MACHINE...................UHH,UHV	EA	1
296.7	4	PAOZZ	5305-00-958-2918	MS24693-C26	96906	SCREW,MACHINE...................UHH,UHV	EA	2
296.7	5	PAOZZ		M81714/5-1	81349	RACK,ELECTRONIC.................UHH,UHV	EA	1
296.7	6	PAOZZ	5310-00-771-7396	MS21076L06	96906	NUT,SELF-LOCKING,PL.............UHH,UHV	EA	7
296.7	7	PAOZZ	5365-00-808-2527	NAS43DD3-40	80205	SPACER..........................UHH,UHV	EA	1
296.7	8	PAOZZ	5320-00-200-8560	MS21919WDG5	96906	CLAMP,LOOP......................UHH,UHV	EA	1
296.7	9	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT.....................UHH,UHV	EA	6
296.7	10	PAOZZ	5305-00-059-3663	MS51958-67	96906	SCREW,MACHINE...................UHH,UHV	EA	1
296.7	11	PAOZZ	5305-00-059-3658	MS51958-63	96906	SCREW,MACHINE...................UHH,UHV	EA	2
296.7	12	PAOZZ	5340-00-548-8251	AN743-12	88044	BRACKET,ANGLE...................UHH,UHV	EA	1
296.7	13	PAOZZ	5310-00-208-9255	MS21044C3	96906	NUT,SELF-LOCKING,HE.............UHH,UHV	EA	2
296.7	14	PAOZZ	5305-00-059-3658	MS51958-63	96906	SCREW,MACHINE...................UHH,UHV	EA	4
296.7	15	PAOZZ	5310-00-619-1148	MS15795-808	96906	WASHER,FLAT.....................UHH,UHV	EA	4
296.7	16	PAOZZ		DSH-4-07567-1	[illegible]	PLATE,MOUNTING..................UHH,UHV	EA	1
296.7	17	PAOZZ	5310-00-771-7396	MS21076L06	96906	NUT,SELF-LOCKING,PL.............UHH,UHV	EA	6

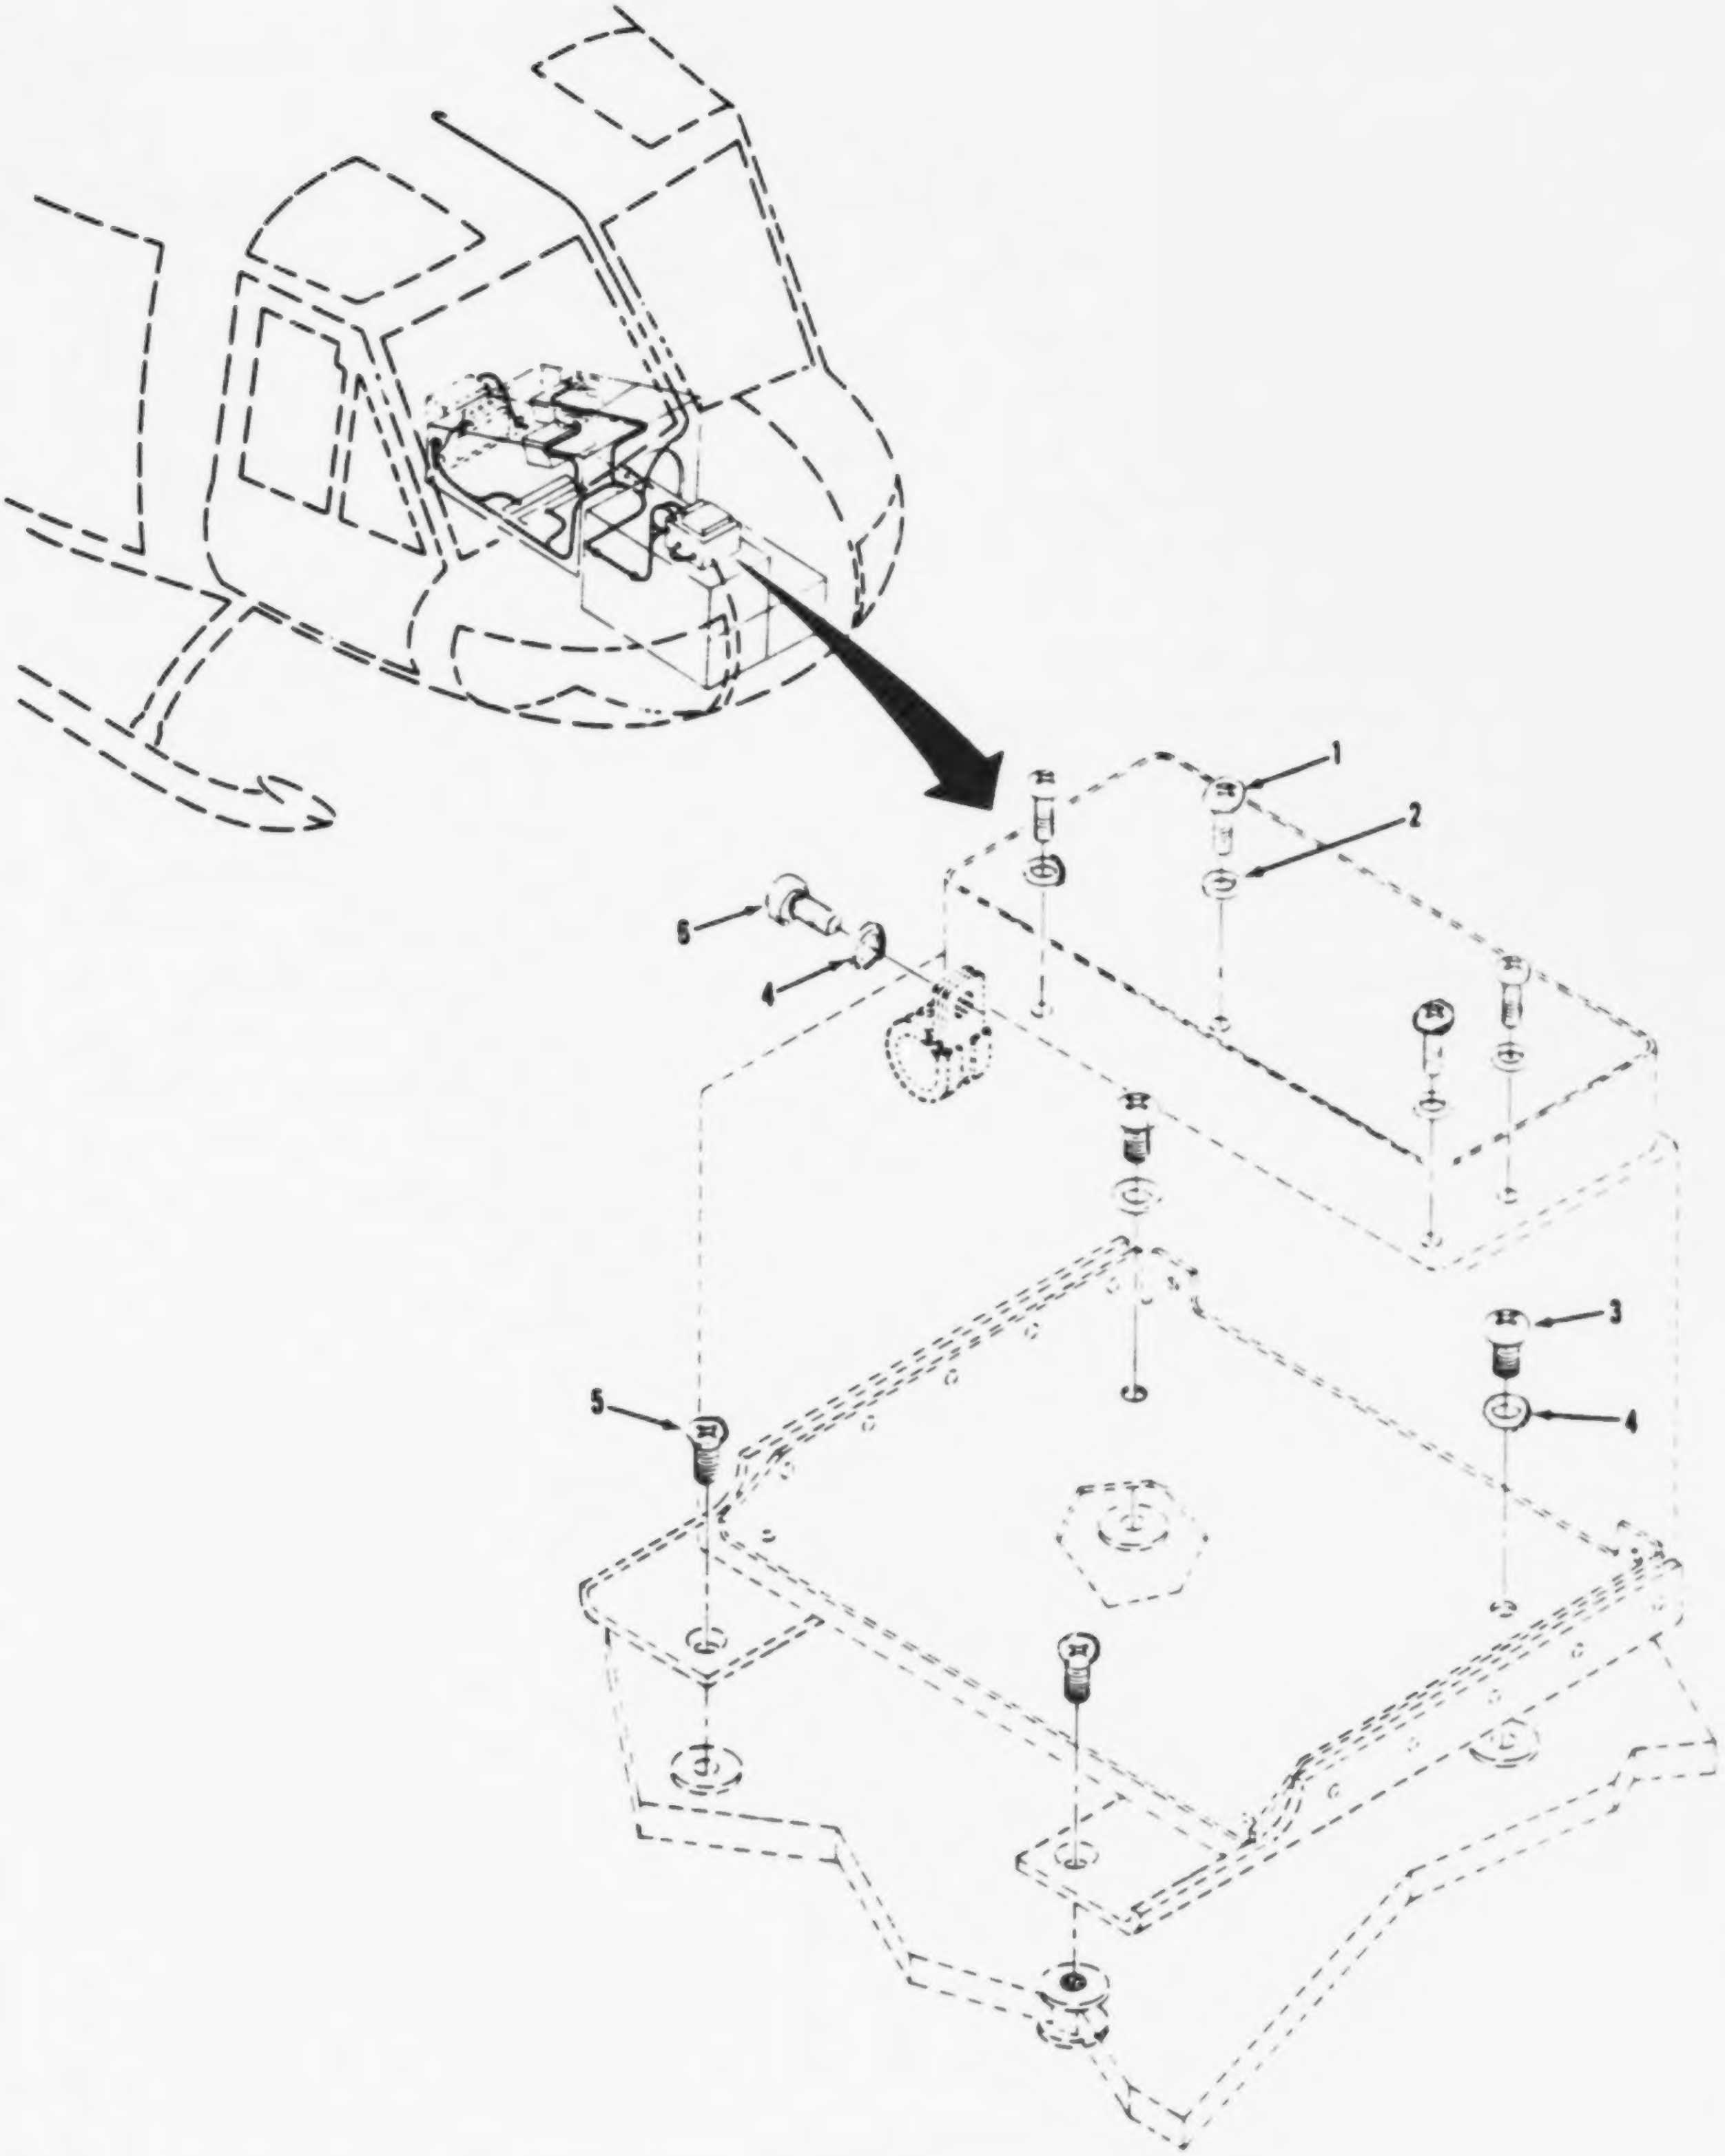

Figure 296.8. Avionics Electrical Systems Installation Kit
(Part of MWO 55-1520-210-50-23)

1246.26

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS. INSTALLATION KIT (PART OF MWO55-1520-210-50-23)		
296.8	1	PAOZZ	5305-00-054-6670	MS51957-45	96906	SCREW.MACHINE....................UHH.UHV	EA	4
296.8	2	PAOZZ	5310-00-880-5978	MS15795-807	96906	WASHER.FLAT....................UHH.UHV	EA	4
296.8	3	PAOZZ	5305-00-059-3657	MS51958-61	96906	SCREW.MACHINE....................UHH.UHV	EA	2
296.8	4	PAOZZ	5310-01-215-7315	AN960KD10LL	88044	WASHER.FLAT....................UHH.UHV	EA	3
296.8	5	PAOZZ	5305-00-088-9667	MS24693-C270	96906	SCREW.MACHINE....................UHH.UHV	EA	2
296.8	6	PAOZZ	5305-00-059-3659	MS51958-63	96906	SCREW.MACHINE....................UHH.UHV	EA	1

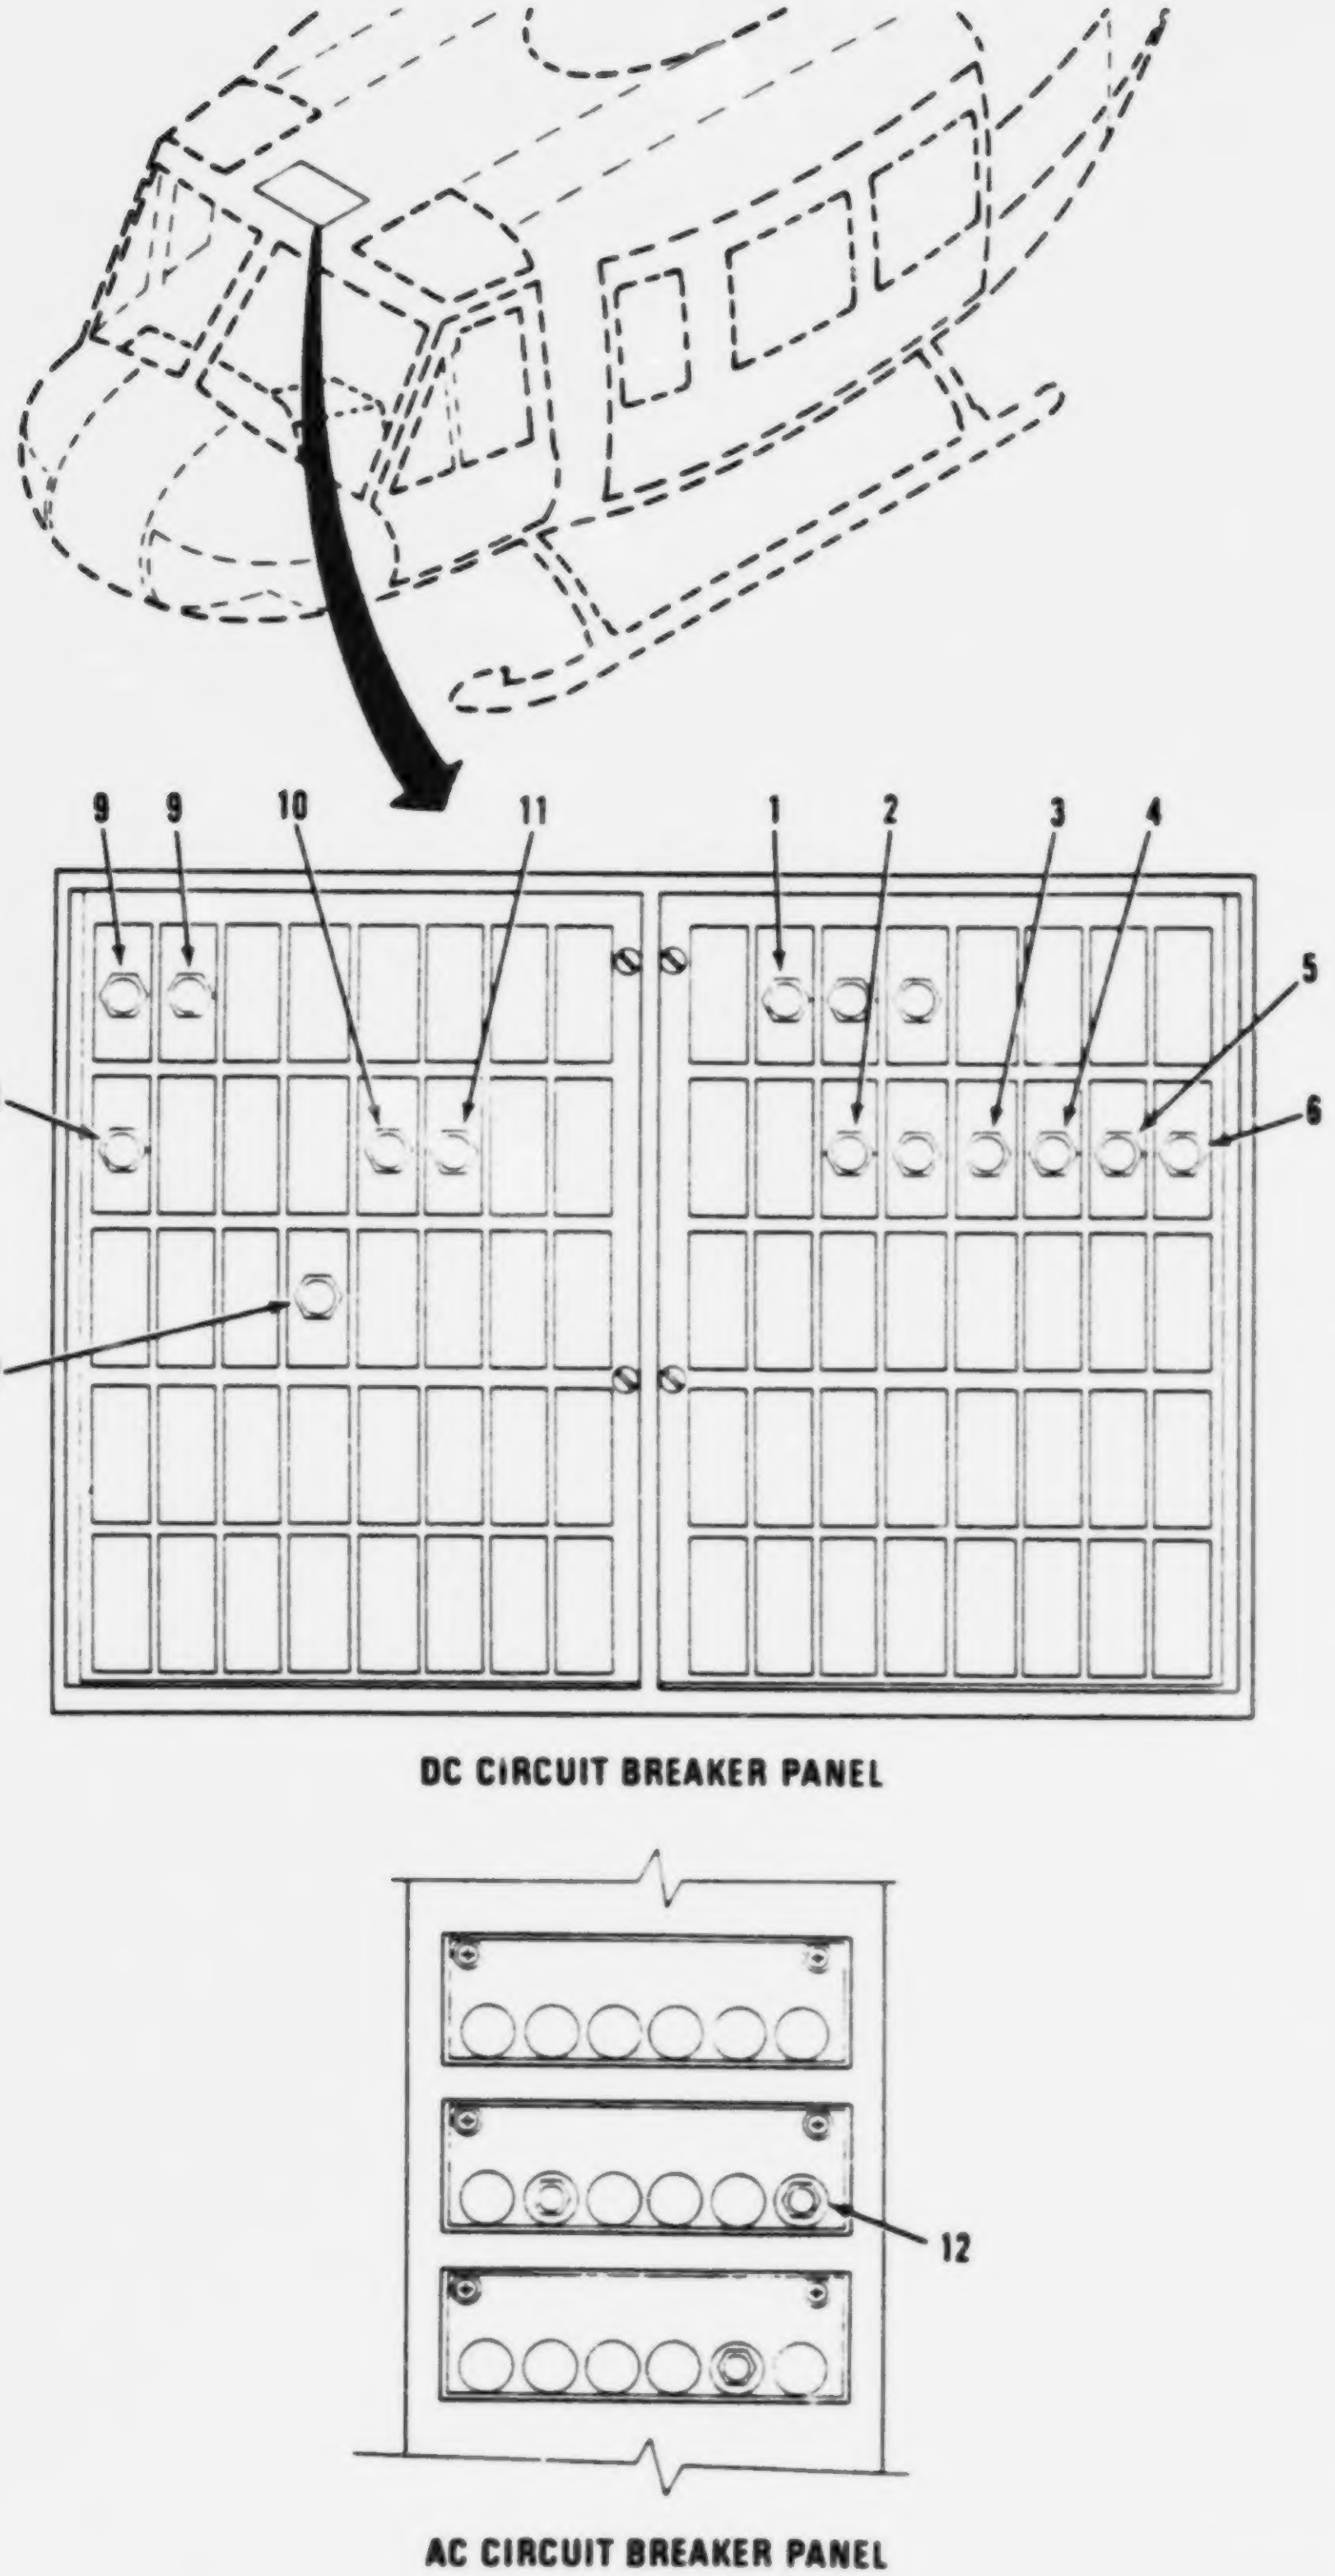
9
9
10
11
1
2
3
4
5
6
8
7
DC CIRCUIT BREAKER PANEL
12
AC CIRCUIT BREAKER PANEL

Figure 296.9. Avionics Electrical Systems Installation Kit (Circuit Breaker Locations)

1246.28

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(a) FIG NO	(b) ITEM NO							
						AVIONICS ELECTRICAL SYSTEMS. INSTALLATION KIT		
296.9	1	PAOZZ	5925-00-776-5062	MS22073-2 1/2	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-17)..........................UHH,UHV	EA	1
296.9	2	PAOZZ	5925-00-682-4015	MS25244-20	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-16)..........................UHH,UHV	EA	1
296.9	3	PAOZZ	5925-00-686-3297	MS25244-5	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-13)..........................UHH,UHV	EA	1
296.9	4	PAOZZ	5925-00-681-4952	MS25244-10	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-21)..........................UHH,UHV	EA	1
296.9	5	PAOZZ	5925-00-686-3297	MS25244-5	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-21)..........................UHH,UHV	EA	1
296.9	6	PAOZZ	5925-00-682-4015	MS25244-20	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-14)..........................UHH,UHV	EA	1
296.9	7	PAOZZ		MS22073-3	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-16)..........................UHH,UHV	EA	1
296.9	8	PAOZZ	5925-00-686-3297	MS25244-5	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-15)..........................UHH,UHV	EA	1
296.9	9	PAOZZ	5925-00-686-3297	MS25244-5	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-17)..........................UHH,UHV	EA	2
296.9	10	PAOZZ	5925-00-686-3297	MS25244-5	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-19)..........................UHH,UHV	EA	1
296.9	11	PAOZZ	5925-00-686-3297	MS25244-5	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-18)..........................UHH,UHV	EA	1
296.9	12	PAOZZ	5925-00-914-3505	MS22073-2	96906	CIRCUIT BREAKER (PART OF MWO 55-1520-210 -50-17)..........................UHH,UHV	EA	1

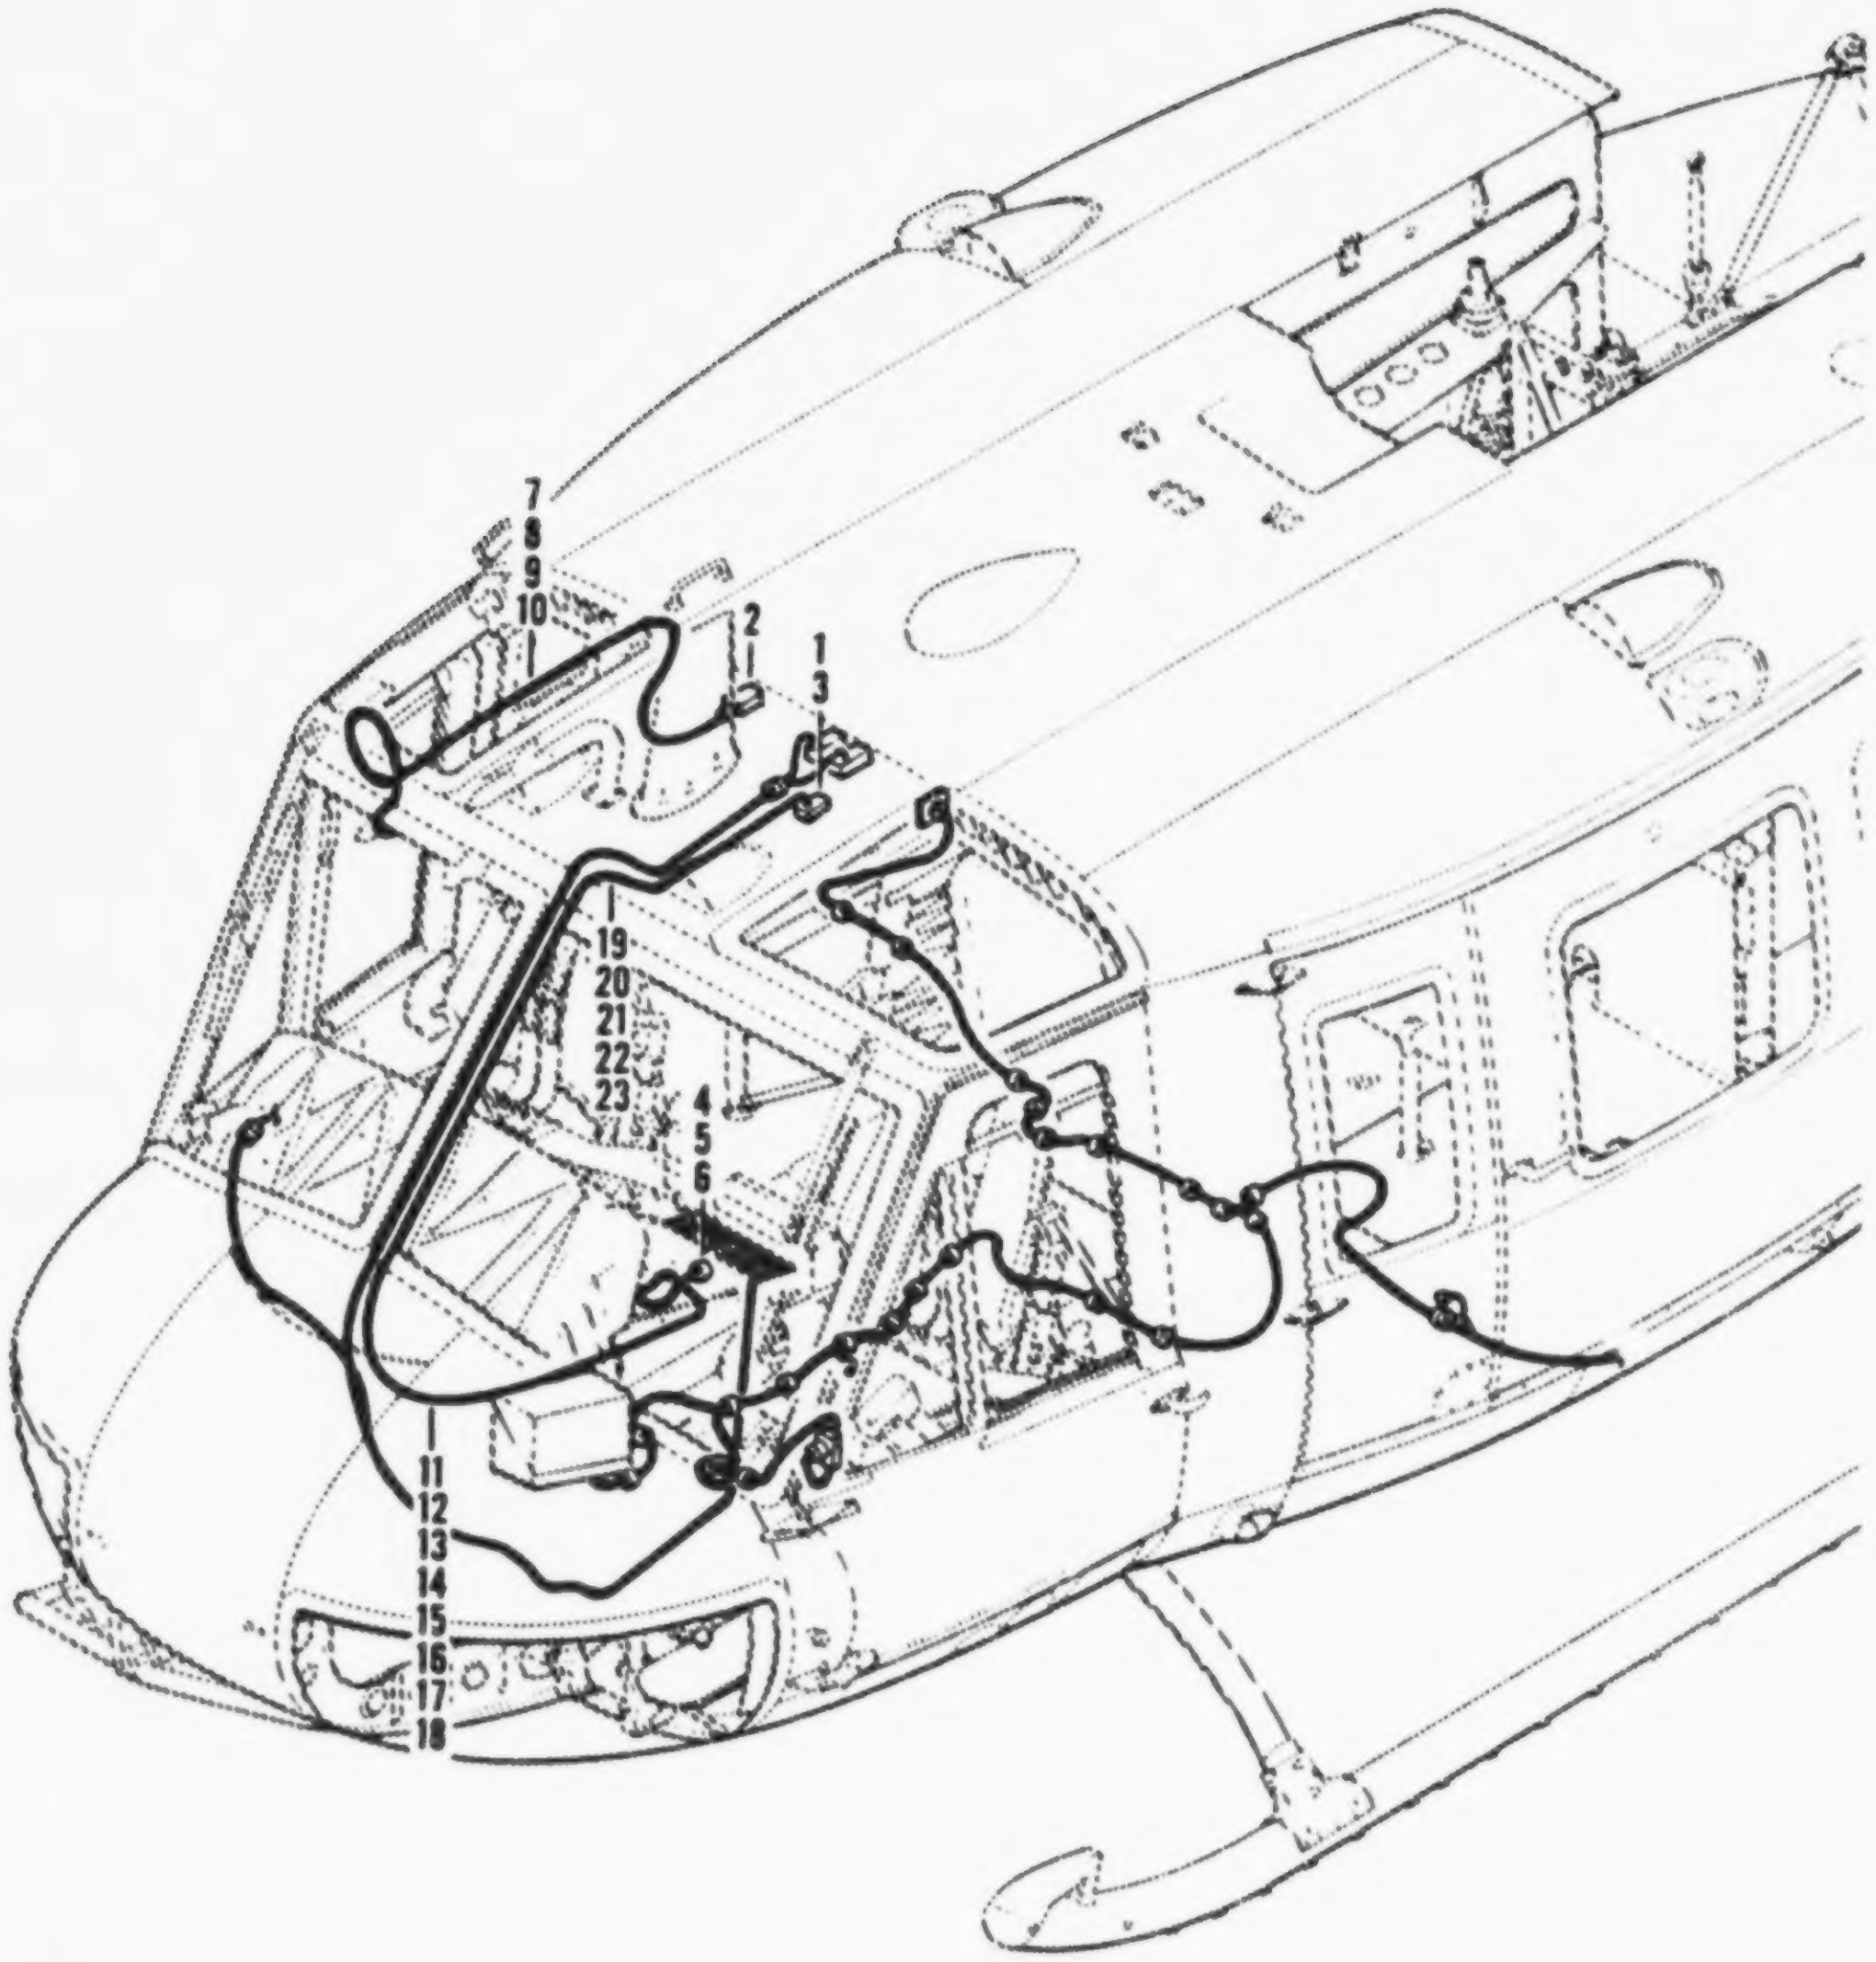
7
8
9
10
2
1
3
19
20
21
22
23
4
5
6
11
12
13
14
15
16
17
18

Figure 297. Electrical Installation, Armament Kit, XM16

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
297		XCFZZ		97499	204-1686-1	ARMAMENT KIT,XM16 USBL EFF (UH-1B) 62-1997 & SUBSEQUENT, (UH-1C) 64-14101 & SUBSEQUENT .... UHB,UHC,UHM	EA	1
297	1	XBOZZ	9905-00-182-4914	97499	204-075-289-385	.PLATE,IDENTIFICATIO .... UHC,UHM	EA	1
297	2	XBOZZ		97499	204-075-289-391	.NAMEPLATE,PILOT SIGHT .... UHB,UHC,UHM	EA	1
297	3	PAOZZ	5925-00-686-3301	96906	MS25244-15	.CIRCUIT BREAKER .... UHC,UHM	EA	1
297	4	AOOOZ	6150-00-955-9450	97499	204-175-434-5	.CABLE ASSY,POWER .... UHB,UHC,UHM	EA	1
297	5	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR .... UHB,UHC,UHM	EA	1
297	6	PAOZZ	5935-00-784-5982	96906	MS3124E16-26P	..CONNECTOR,RECEPT ELECTRICAL .... UHB,UHC,UHM	EA	1
297	7	AOOOZ	6150-00-955-9436	97499	204-175-434-11	.CABLE ASSY,POWER .... UHB,UHC,UHM	EA	1
297	8	XDOZZ		77820	PT06E8-2S	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
297	9	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
297	10	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
297	11	AOOOZ	1560-00-836-8583	97499	204-175-434-1	.CABLE ASSEMBLY,ELEC .... UHB,UHC,UHM	EA	1
297	12	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
297	13	PBOZZ	6145-00-851-8605	96906	MS25190B20	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
297	14	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG .... UHB,UHC,UHM	EA	7
297	15	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR .... UHB,UHC,UHM	EA	7
297	16	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR .... UHB,UHC,UHM	EA	1
297	17	PAOZZ	5935-00-902-2363	96906	MS3126E16-26S	..CONNECTOR,PLUG,ELEC .... UHC,UHM	EA	1
297	18	PBOZZ	5935-00-122-8554	96906	MS3121E18-32P	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
297	19	AOOOO		97499	204-175-434-7	.CABLE ASSEMBLY .... UHB,UHC,UHM	EA	1
297	20	PAOZZ	5940-00-283-6280	96906	MS25036-108	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
297	21	PAOZZ	5940-00-143-4774	96906	MS25036-153	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
297	22	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	..WIRE,ELECTRICAL .... UHB,UHC,UHM	FT	V
297	23	PAOZZ	5940-00-812-2903	09922	YE1620	..FERRULE,ELECTRIC .... UHB,UHC,UHM	EA	1

Fig. 298 NOT USED

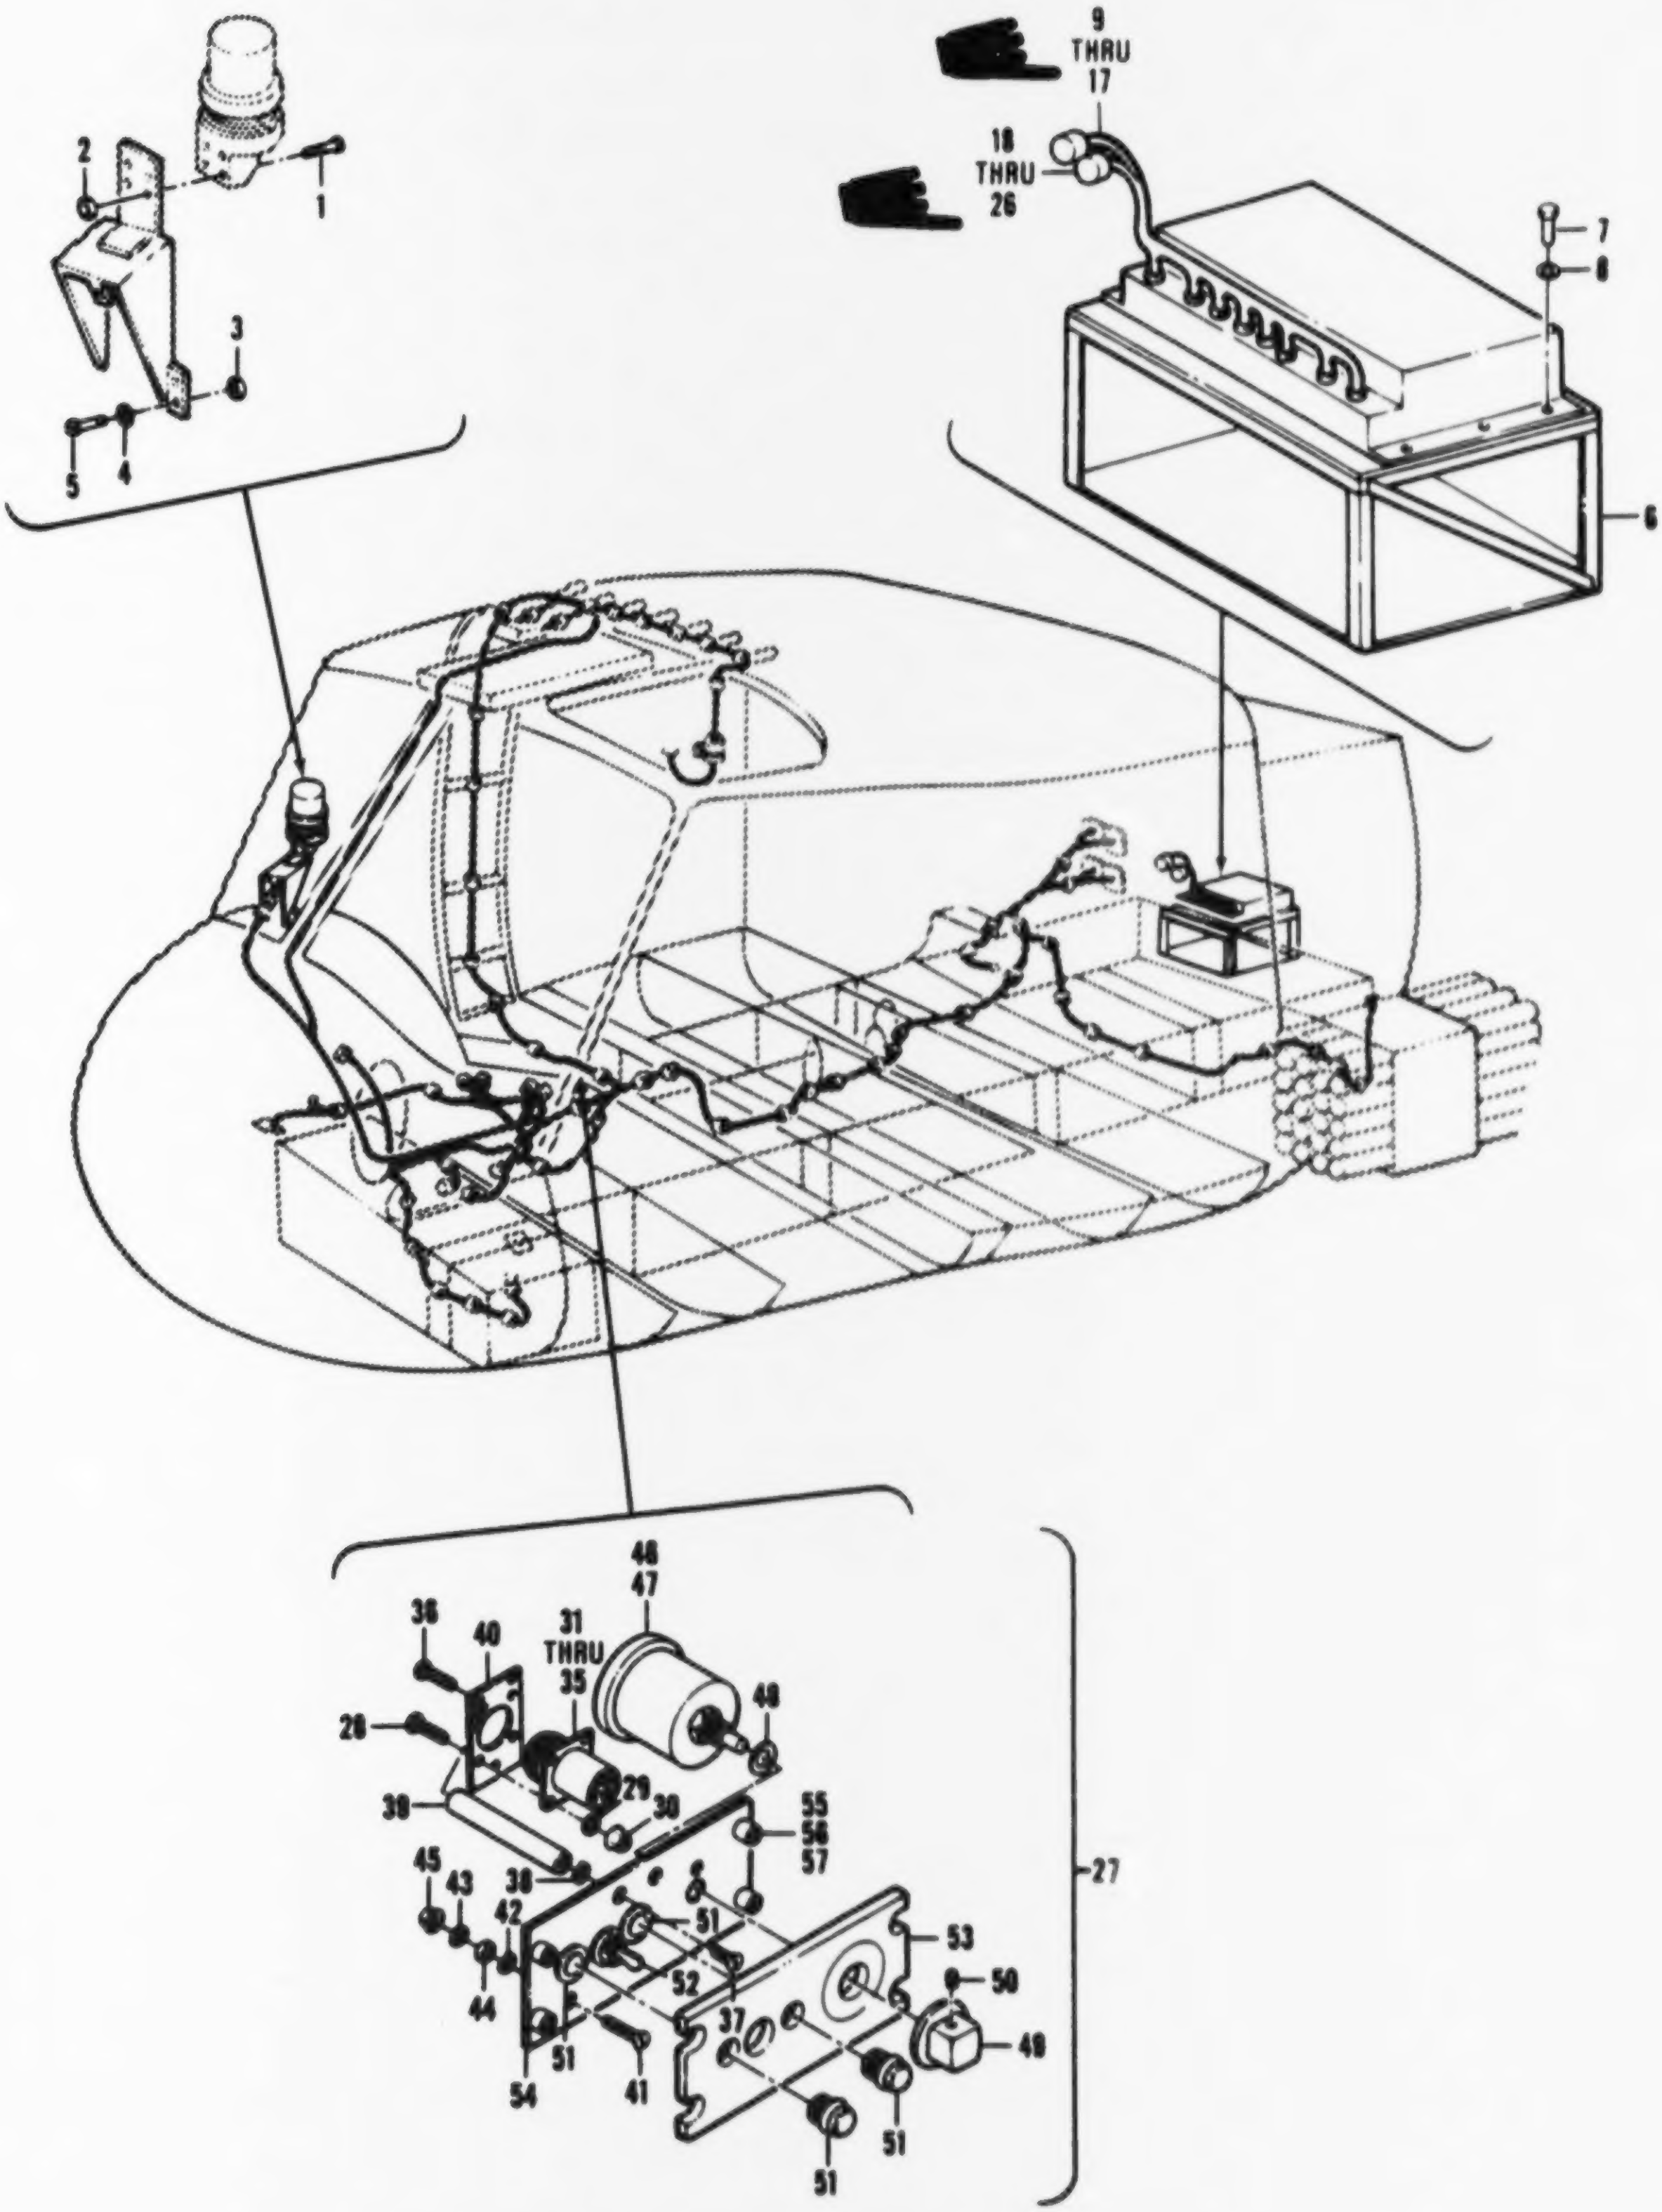
9
THRU
17
18
THRU
26
7
8
6
2
1
3
5
4
46
47
36
40
31
THRU
35
48
28
29
30
39
55
56
57
45
43
38
42
51
53
44
52
50
37
49
51
54
41
51
51
27

Figure 299. Electrical Installation, XM3 Armament

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	UM	QTY INC IN UNIT
299		XCFZZ		97499	204-706-041-1	ARMAMENT INSTL USBL EFF (UH-1B) 62-1997 & SUBSEQUENT, (UH-1C) 64-14101 & SUBSEQUENT, & 63-12956 & SUBSEQUENT	UHB,UHC,UHH,UHM,UHV	EA	1
299	1	PAOZZ	5306-00-180-2750	88044	AN5H11	BOLT,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	4
299	2	PAOZZ	5310-00-881-0944	96906	MS21043-5	NUT,SELF-LOCKING, HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	4
299	3	PAOZZ	5310-00-982-5064	96906	MS21044B3	NUT,SELF-LOCKING, HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	5
299	4	PAOZZ	5310-00-637-4390	88044	AN960B10	WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	5
299	5	PAOZZ	5305-00-837-8918	96906	MS35274-64	SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	5
299	6	PAOZZ	1560-00-909-2604	97499	204-075-172-63	SHELF ASSY,ACFT	UHB,UHC,UHH,UHM,UHV	EA	1
299	7	PAOZZ	5306-00-151-1427	88044	AN4-5A	BOLT,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	6
299	8	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	6
299	9	AOOOZ	1560-00-682-2357	97499	204-075-951-1	CABLE ASSEMBLY	UHB,UHH,UHV	EA	1
299	10	PBOZZ	5935-00-988-3539	96906	MS3126E18-32P	CONNECTOR,PLUG,ELEC	UHB,UHH,UHV	EA	1
299	11	XBOZZ	5935-00-823-5322	96906	MS25251-16	PLUG,END SEAL,ELECT MOISTURE	UHB,UHH,UHV	EA	1
299	12	PBOZZ	5935-00-913-7256	96906	MS3126E18-11P	CONNECTOR,PLUG,ELEC	UHB,UHH,UHV	EA	1
299	13	XDOZZ		81312	XMRA66PC1A706F	CONNECTOR,PLUG,ELEC	UHB,UHH,UHV	EA	1
299	14	PAOZZ	5999-00-805-5620	09922	CYW10	CAP,ELECTRICAL	UHB,UHH,UHV	EA	1
299	15	MFOZZ	DELETED	97499	85T4-0-2	TUBING INSULATION	UHB,UHH,UHV	EA	1
299	16	MFOZZ	DELETED	97499	85T4-500-2	TUBING INSULATION	UHB,UHH,UHV	EA	2
299	17	MOOZZ	DELETED	97499	85T4-625-2	INSULATION,SLEEVING	UHB,UHH,UHV	IN	2
299	18	AOOOZ	4010-00-757-7084	97499	204-075-952-1	WIRE ROPE ASSEMBLY,	UHB,UHC,UHH,UHM,UHV	EA	1
299	19	XDOZZ	5935-00-765-5985	96906	MS3126E14-55	CONNECTOR,PLUG,ELEC	UHB,UHC,UHH,UHM,UHV	EA	1
299	20	PBOZZ	5935-00-988-3539	96906	MS3126E18-32P	CONNECTOR,PLUG,E	UHB,UHC,UHH,UHM,UHV	EA	1
299	21	XBOZZ	5935-00-823-5322	96906	MS25251-16	PLUG,END SEAL,ELECT MOISTURE	UHB,UHC,UHH,UHM,UHV	EA	1
299	22	XDOZZ	5935-00-578-8596	81312	XMRA66PC1B706F	CONNECTOR,PLUG,ELEC ELECTRICAL	UHB,UHC,UHH,UHM,UHV	EA	1
299	23	PAOZZ	5999-00-805-5620	09922	CYW10	CAP,ELECTRICAL	UHB,UHC,UHH,UHM,UHV	EA	1
299	24	PAOZZ	5940-00-772-3509	09922	CYW16	CABLE NIPPLE,ELE	UHB,UHC,UHH,UHM,UHV	EA	1
299	25	MOOZZ	DELETED	97499	85T4-2-2	INSULATION SLEEVING	UHB,UHC,UHH,UHM,UHV	EA	1
299	26	MOOZZ	DELETED	97499	85T4-625-2	INSULATION,SLEEVING	UHB,UHC,UHH,UHM,UHV	IN	1
299	27	AOOOZ	1680-00-931-8327	97499	204-075-723-3	PANEL ASSY	UHB,UHC,UHH,UHM,UHV	EA	1
299	28	PBOZZ	5305-00-889-2997	96906	MS35206-215	SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	4
299	29	PAOZZ	5310-00-550-5009	96906	MS15795-704	WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	4
299	30	PAOZZ	5310-00-807-1471	96906	MS21042L04	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	4
299	31	AOOOO		97499	204-075-435-5	WIRING ASSY EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	1
299	32	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHB,UHC,UHM	EA	4
299	33	PAOZZ	5940-00-113-9828	96906	MS25036-148	TERMINAL,LUG	UHB,UHC,UHM	EA	3
299	34	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG	UHB,UHC,UHM	EA	2
299	35	PBOZZ	5935-00-813-4722	96906	MS3102R14S5P	CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
299	36	PAOZZ	5305-00-984-4988	96906	MS35206-228	SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	3
299	37	PAOZZ	5305-00-957-7817	96906	MS24693S26	SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	3
299	38	PAOZZ	5310-00-045-4007	96906	MS35338-41	WASHER,LOCK	UHB,UHC,UHH,UHM,UHV	EA	3
299	39	XDOZZ	5340-00-896-6246	97499	204-075-242-3	POST,ELECTRICAL-	UHB,UHC,UHH,UHM,UHV	EA	3
299	40	MFOZZ		97499	204-075-761-1	PLATE	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
299	41	PAOZZ	5305-00-637-3343	96906	MS24693S28	..SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	1
299	42	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK	UHB,UHC,UHH,UHM,UHV	EA	1
299	43	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	1
299	44	PAOZZ	5310-00-934-9763	96906	MS35649-265	..NUT,PLAIN,HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	1
299	45	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	1
299	46	PAOZZ	5905-00-695-9647	81349	AN3155-25-100	..RESISTOR	UHB,UHC,UHH,UHM,UHV	EA	1
299	47	PAOZZ	5905-00-295-3761	81349	AN3155-25-50	..RESISTER	UHB,UHC,UHH,UHM,UHV	EA	1
299	48	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	1
299	49	PAOZZ	1680-00-772-1877	97499	204-075-254-15	..KNOB ASSY,INDICATOR	UHB,UHC,UHH,UHM,UHV	EA	1
299	50	PAOZZ	5305-00-719-5339	96906	MS51963-22	..SETSCREW	UHB,UHC,UHH,UHM,UHV	EA	1
299	51	AOOOZ	6210-00-619-2953	96906	MS25010B11A	..LIGHT,PANEL	UHB,UHC,UHH,UHM,UHV	EA	2
299	52	PBOZZ	5930-00-655-1515	96906	MS35058-23	..SWITCH,TOGGLE	UHB,UHC,UHH,UHM,UHV	EA	1
299	53	PAOZZ	1680-00-977-7489	97499	204-075-760-1	..PANEL,EDGE,LIT	UHB,UHC,UHH,UHM,UHV	EA	1
299	54	XBOOZ	1680-00-403-1161	97499	204-075-759-1	..PLATE ASSY	UHB,UHC,UHM	EA	1
299	55	XAOZZ		72794	PF3 1-2 38	...STUD,TURNLOCK	UHB,UHC,UHM	EA	4
299	56	XAOZZ		72794	PC3 1-2	...RETAINER,TURNLOCK	UHB,UHC,UHM	EA	4
299	57	XAOZZ		72794	PS3 1-2	...SPRING,FASTENER	UHB,UHC,UHM	EA	4

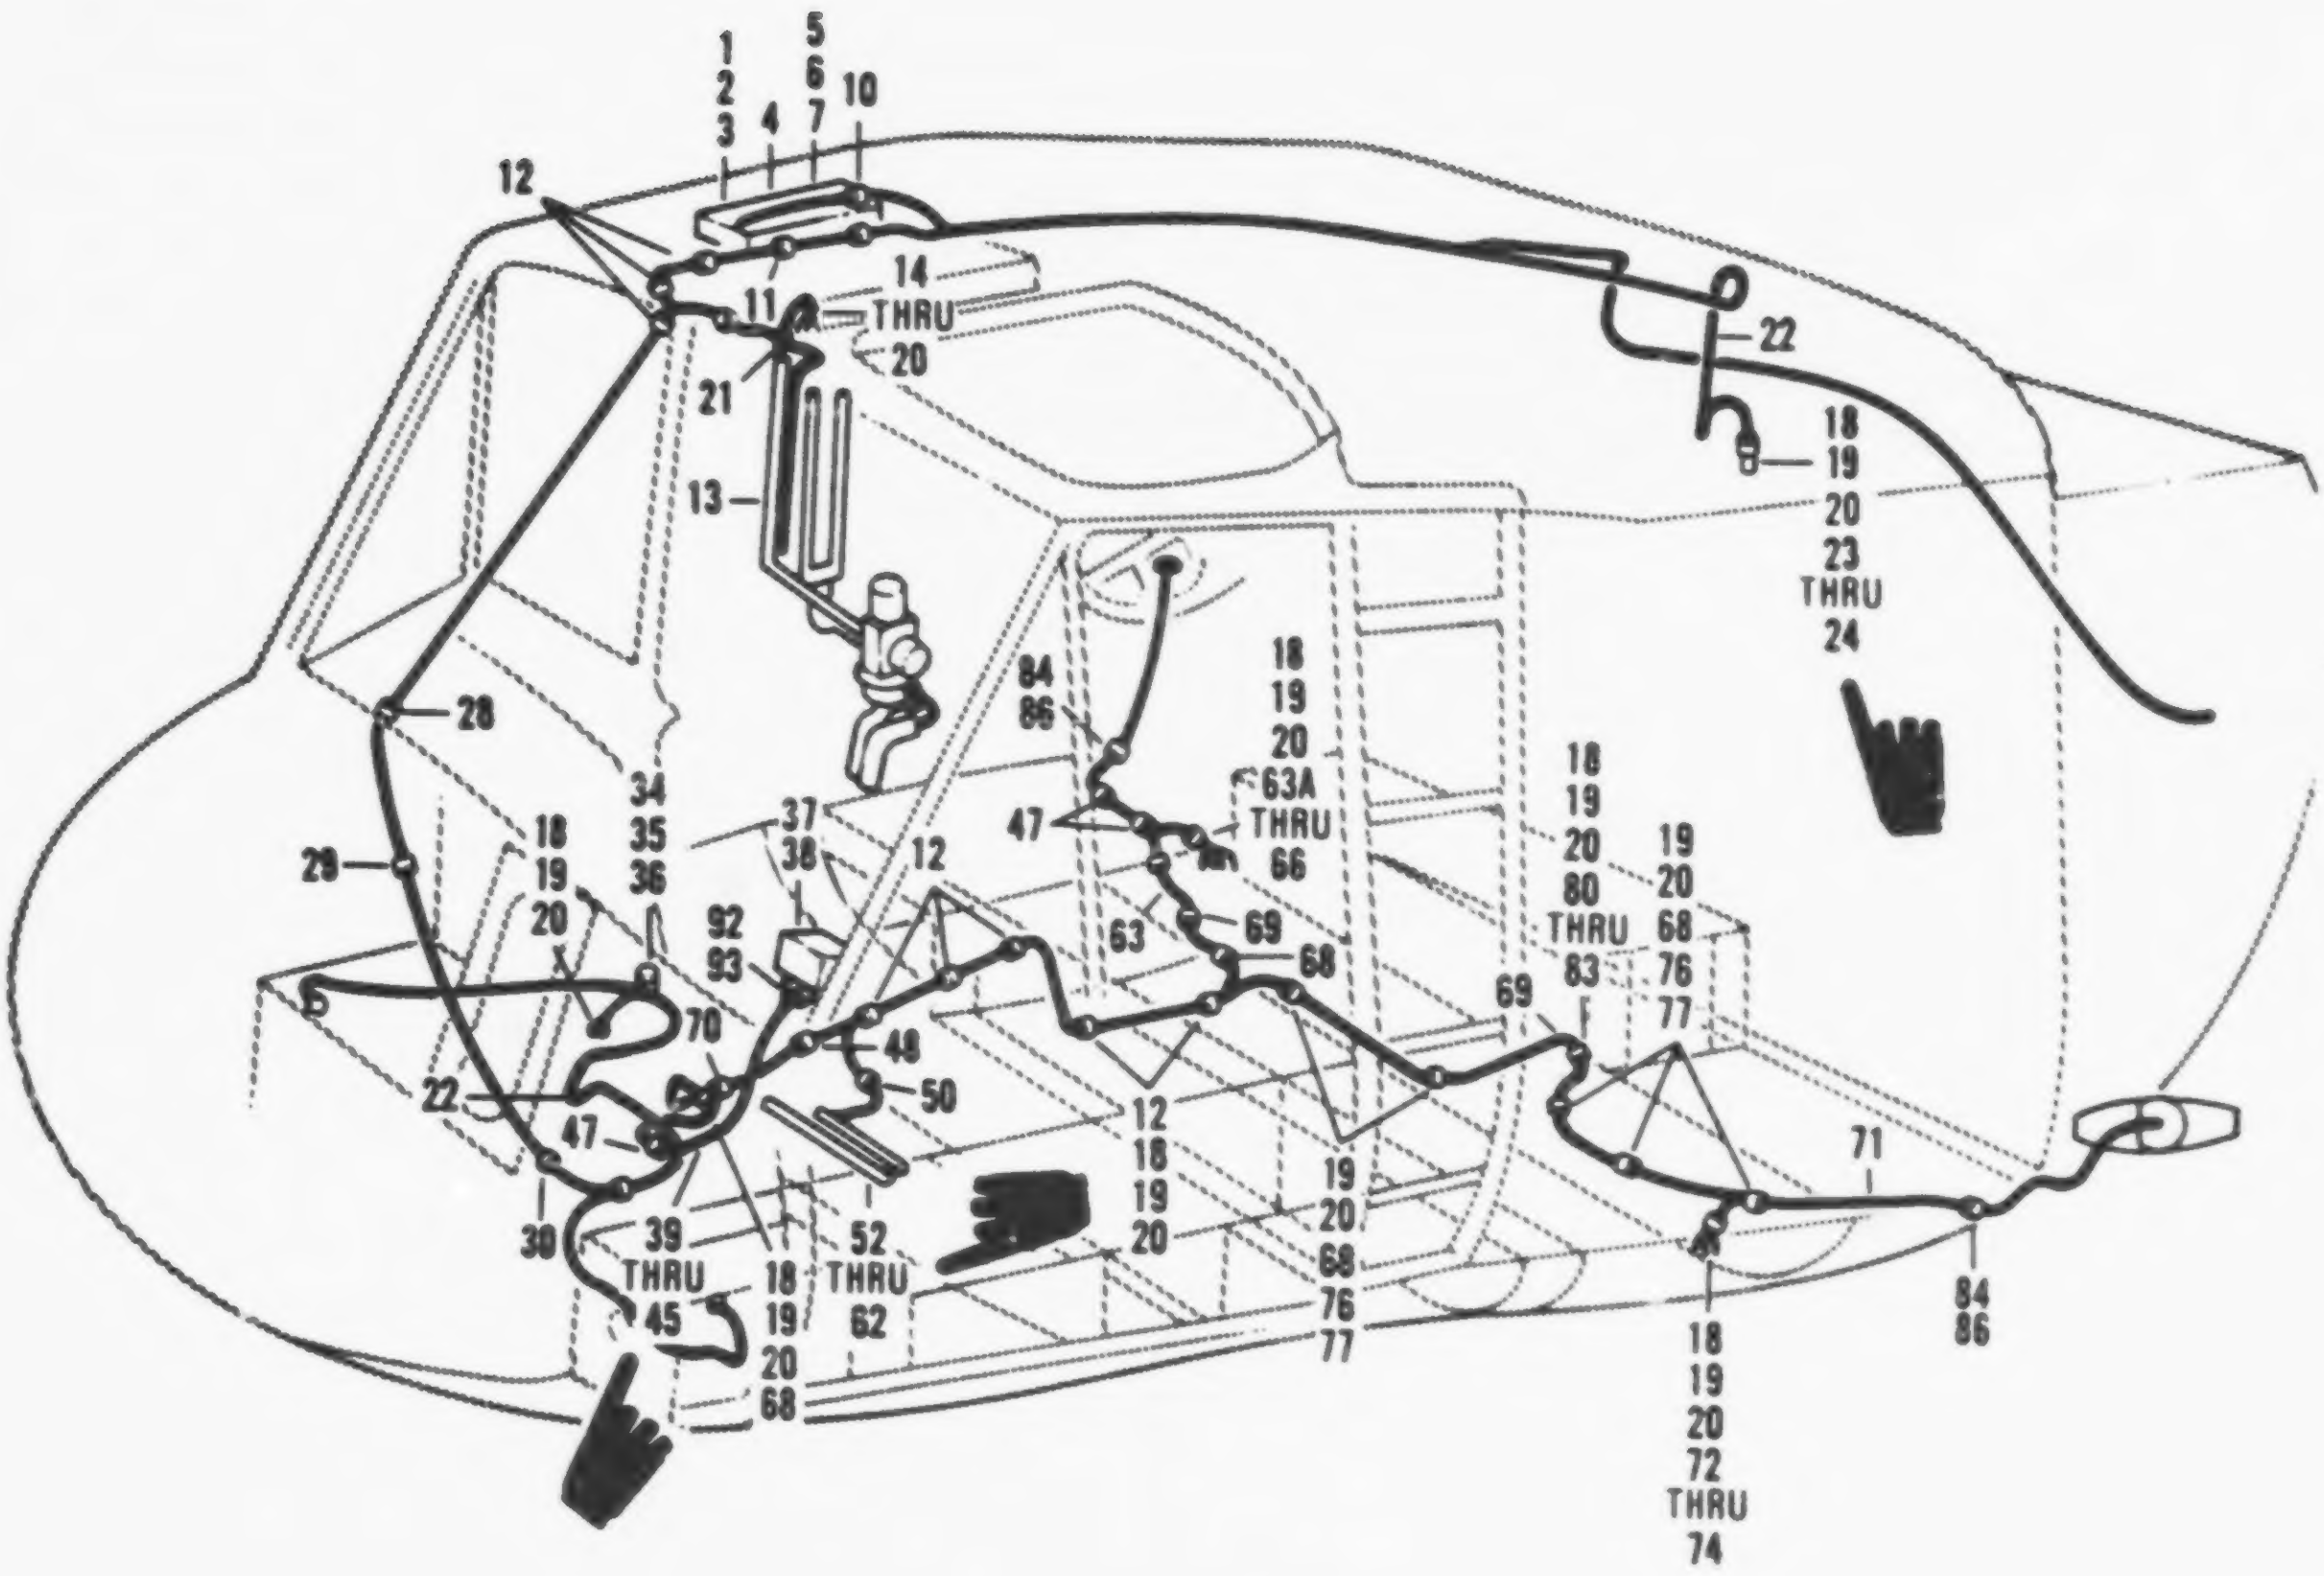
1
2
3
4
5
6
7
10
12
11
14
THRU
20
21
13
22
18
19
20
23
THRU
24
28
84
86
18
19
20
63A
THRU
66
47
34
35
36
37
38
12
18
19
20
80
THRU
83
19
20
68
76
77
29
18
19
20
92
93
63
69
68
69
70
48
50
22
47
12
18
19
20
19
20
68
76
77
71
30
39
THRU
45
18
19
20
68
52
THRU
62
84
86
18
19
20
72
THRU
74

Figure 300. Electrical Installation, XM6E3

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
300		XCFZZ		97499	204-075-038-3	ARMAMENT INSTL ELECTRICAL USBL EFF (UH-1B) 62-1997 & SUBSEQUENT, (UH-1C) 64-14101 & SUBSEQUENT.........UHB,UHC,UHM	EA	1
300	1	XBOOO		97499	204-075-289-115	.PLATE,IDENTIFICATIO..........................UHB,UHC,UHM	EA	1
300	2	PAOZZ	4730-00-319-9162	00624	3305-4	.COUPLING HALF,QUICK DISCONNECT..................UHB,UHC,UHM	EA	1
300	3	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER..........................UHB,UHC,UHM	EA	1
300	4	XBOZZ		97499	204-075-289-117	.PLATE,IDENTIFICATIO..........................UHB,UHC,UHM	EA	1
300	5	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER..........................UHB,UHC,UHM	EA	1
300	6	XBOZZ		97499	204-075-289-119	.PLATE,IDENTIFICATIO..........................UHB,UHC,UHM	EA	1
300	7	PAOZZ	5925-00-686-3299	96906	MS25244-35	.CIRCUIT BREAKER..........................UHB,UHC,UHM	EA	1
300	10	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	1
300	11	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	1
300	12	XDOZZ	5340-00-989-4569	81996	EAB700D9	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	6
300	13	AOOOZ	1560-00-987-5262	97499	204-075-911-7	.CABLE ASSEMBLY..........................UHB,UHC,UHM	EA	1
300	14	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	V
300	15	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	V
300	16	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR..........................UHB,UHC,UHM	EA	5
300	17	PBOZZ	5935-00-726-7101	96906	MS3124E14-19S	..CONNECTOR,RECEPT ELECTRICAL..................UHB,UHC,UHM	EA	1
300	18	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........................UHB,UHC,UHM	EA	V
300	19	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........................UHB,UHC,UHM	EA	V
300	20	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	V
300	21	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC..........................UHB,UHC,UHM	EA	1
300	22	AOOOZ	1560-00-987-5297	97499	204-075-912-5	.CABLE ASSEMBLY..........................UHB,UHC,UHM	EA	1
300	23	PAOZZ	5935-00-850-1759	96906	MS3106R12-5SC	..CONNECTOR,PLUG,ELEC..........................UHB,UHC,UHM	EA	1
300	23A	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	14
300	23B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	2
300	24	MFOZZ	DELETED	97499	85T4-8-1	..TUBE..........................UHB,UHC,UHM	EA	4
300	28	PAOZZ	5340-00-989-4571	81996	EAB700D14	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	2
300	29	PAOZZ	5340-00-989-4575	81996	EAB700D21	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	1
300	30	XDOZZ	5340-00-989-4574	81996	EAB700D17	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	1
300	34	PAOZZ	5310-00-857-5564	96906	MS21045L06	.NUT,SELF-LOCKING, HEXAGON..................UHB,UHC,UHM	EA	4
300	35	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT..........................UHB,UHC,UHM	EA	4
300	36	PAOZZ	5945-00-681-9716	96906	MS24568D1	.RELAY,ELECTROMAGNET..........................UHB,UHC,UHM	EA	1
300	37	PAOZZ	5340-00-533-3615	81996	EAB700-8	.CLAMP,LOOP..........................UHB,UHC,UHM	EA	1
300	38	PBOZZ	1560-00-919-2051	97499	204-075-266-49	.PANEL,BLANK..........................UHB,UHC,UHM	EA	1
300	39	AOOOZ	1560-00-987-5264	97499	204-075-912-3	.CABLE ASSEMBLY..........................UHB,UHC,UHM	EA	1
300	40	PAOZZ	5935-00-807-0060	96906	MS3106R20-8S	..CONNECTOR,PLUG,ELEC..........................UHB,UHC,UHM	EA	1
300	41	PBOZZ	5935-00-988-4317	96906	MS3126E20-41S	..CONNECTOR,PLUG,ELEC..........................UHB,UHC,UHM	EA	1
300	41A	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	12
300	41B	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	1
300	42	PAOZZ	5940-00-143-5284	96906	MS25036-115	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	1
300	43	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG..........................UHB,UHC,UHM	EA	2
300	44	MFOZZ		97499	85T4-3-1	..INSULATION TUBE..........................UHB,UHC,UHM	EA	1
300	45	MFOZZ	DELETED	97499	85T4-8-1	..TUBE,INSULATION..........................UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (A) FIG NO	(B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
300	47	PBOZZ	5340-00-145-8339	96906	MS21122C10	CLAMP,LOOP	UHB,UHC,UHM	EA	2
300	48	PAOZZ	5340-00-990-9301	81996	EAB70007	CLAMP,LOOP	UHB,UHC,UHM	EA	1
300	50	PAOZZ	5340-00-993-624	81996	EAB70005	CLAMP,LOOP	UHB,UHC,UHM	EA	1
300	52	AOOOO		97499	204-075-185-1	SUPPORT ASSEMBLY	UHB,UHC,UHM	EA	1
300	53	MFOZZ		97499	204-075-185-3	BRACKET	UHB,UHC,UHM	EA	1
300	54	XBOZZ	5970-00-926-2544	96906	MS25227-14	INSULATOR,PLATE	UHB,UHC,UHM	EA	2
300	55	PBOZZ	5305-00-889-2997	96906	MS35206-215	SCREW MACHINE	UHB,UHC,UHM	EA	3
300	56	PAOZZ	5310-00-157-0816	88044	AN960-6	WASHER,FLAT	UHB,UHC,UHM	EA	15
300	57	PAOZZ	5310-00-550-5009	96906	MS15795-704	WASHER,FLAT	UHB,UHC,UHM	EA	3
300	58	MOOZZ	DELETED	96906	MS27212-1-15	TERMINAL BOARD	UHB,UHC,UHM	EA	1
300	59	PAOZZ	5310-00-807-1471	96906	MS21042L04	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	3
300	60	PAOZZ	5310-00-807-1472	96906	MS21042L06	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	16
300	61	MFOZZ		96906	MS18029-1S15	COVER,TERMINAL BOAR	UHB,UHC,UHM	EA	1
300	62	PAOZZ	5970-00-963-6321	96906	MS25227-2A	INSULATOR,PLATE	UHB,UHC,UHM	EA	1
300	63	AOOOZ	1560-00-987-5261	97499	204-075-911-5	CABLE ASSEMBLY	UHB,UHC,UHM	EA	1
300	63A	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHB,UHC,UHM	EA	6
300	63B	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHB,UHC,UHM	EA	6
300	64	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR	UHB,UHC,UHM	EA	8
300	65	PAOZZ	5940-01-007-7876	81349	M7928/3-3	SPLICE,CONDUCTOR	UHB,UHC,UHM	EA	2
300	66	PBOZZ	5935-00-766-8049	96906	MS3120E20-39S	CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
300	68	PAOZZ	5340-00-187-6023	96906	MS21122-6	CLAMP,LOOP	UHB,UHC,UHM	EA	4
300	69	PAOZZ	5325-00-263-6651	96906	MS35489-12	GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	3
300	70	PAOZZ	5340-00-187-6023	96906	MS21122-6	CLAMP,LOOP	UHB,UHC,UHM	EA	3
300	71	AOOOZ	1560-00-987-5263	97499	204-075-912-1	CABLE ASSEMBLY	UHB,UHC,UHM	EA	1
300	72	PBOZZ	5935-00-766-8049	96906	MS3120E20-39S	CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
300	72A	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHB,UHC,UHM	EA	6
300	72B	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHB,UHC,UHM	EA	6
300	73	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR	UHB,UHC,UHM	EA	6
300	74	PAOZZ	5940-01-007-7876	81349	M7928/3-3	SPLICE,CONDUCTOR	UHB,UHC,UHM	EA	2
300	76	PAOZZ	5365-00-662-3098	80205	NAS43003-32	SPACER,SLEEVE	UHB,UHC,UHM	EA	1
300	77	PAOZZ	5305-00-995-3444	96906	MS35207-266	SCREW,MACHINE	UHB,UHC,UHM	EA	1
300	80	PAOZZ	5305-00-531-0298	96906	MS35265-15	SCREW,MACHINE	UHB,UHC,UHM	EA	2
300	81	PBOZZ	5305-00-889-2997	96906	MS35206-215	SCREW,MACHINE	UHB,UHC,UHM	EA	6
300	82	PAOZZ	5310-00-550-5009	96906	MS15795-704	WASHER,FLAT	UHB,UHC,UHM	EA	8
300	83	PAOZZ	5310-00-807-1471	96906	MS21042L04	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	8
300	84	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE	UHB,UHC,UHM	EA	V
300	86	PAOZZ	5306-00-282-2679	88044	AN4H64A	BOLT,MACHINE	UHB,UHC,UHM	EA	2
300	92	PAOZZ	5340-00-583-8837	77820	10-70506-20	CAP, PROTECTIVE DUST	UHB,UHC,UHM	EA	1
300	93	PAOZZ	5325-00-515-9154	72794	A5T8	STUD,TURNLOCK, FASTENER	UHB,UHC,UHM	EA	1

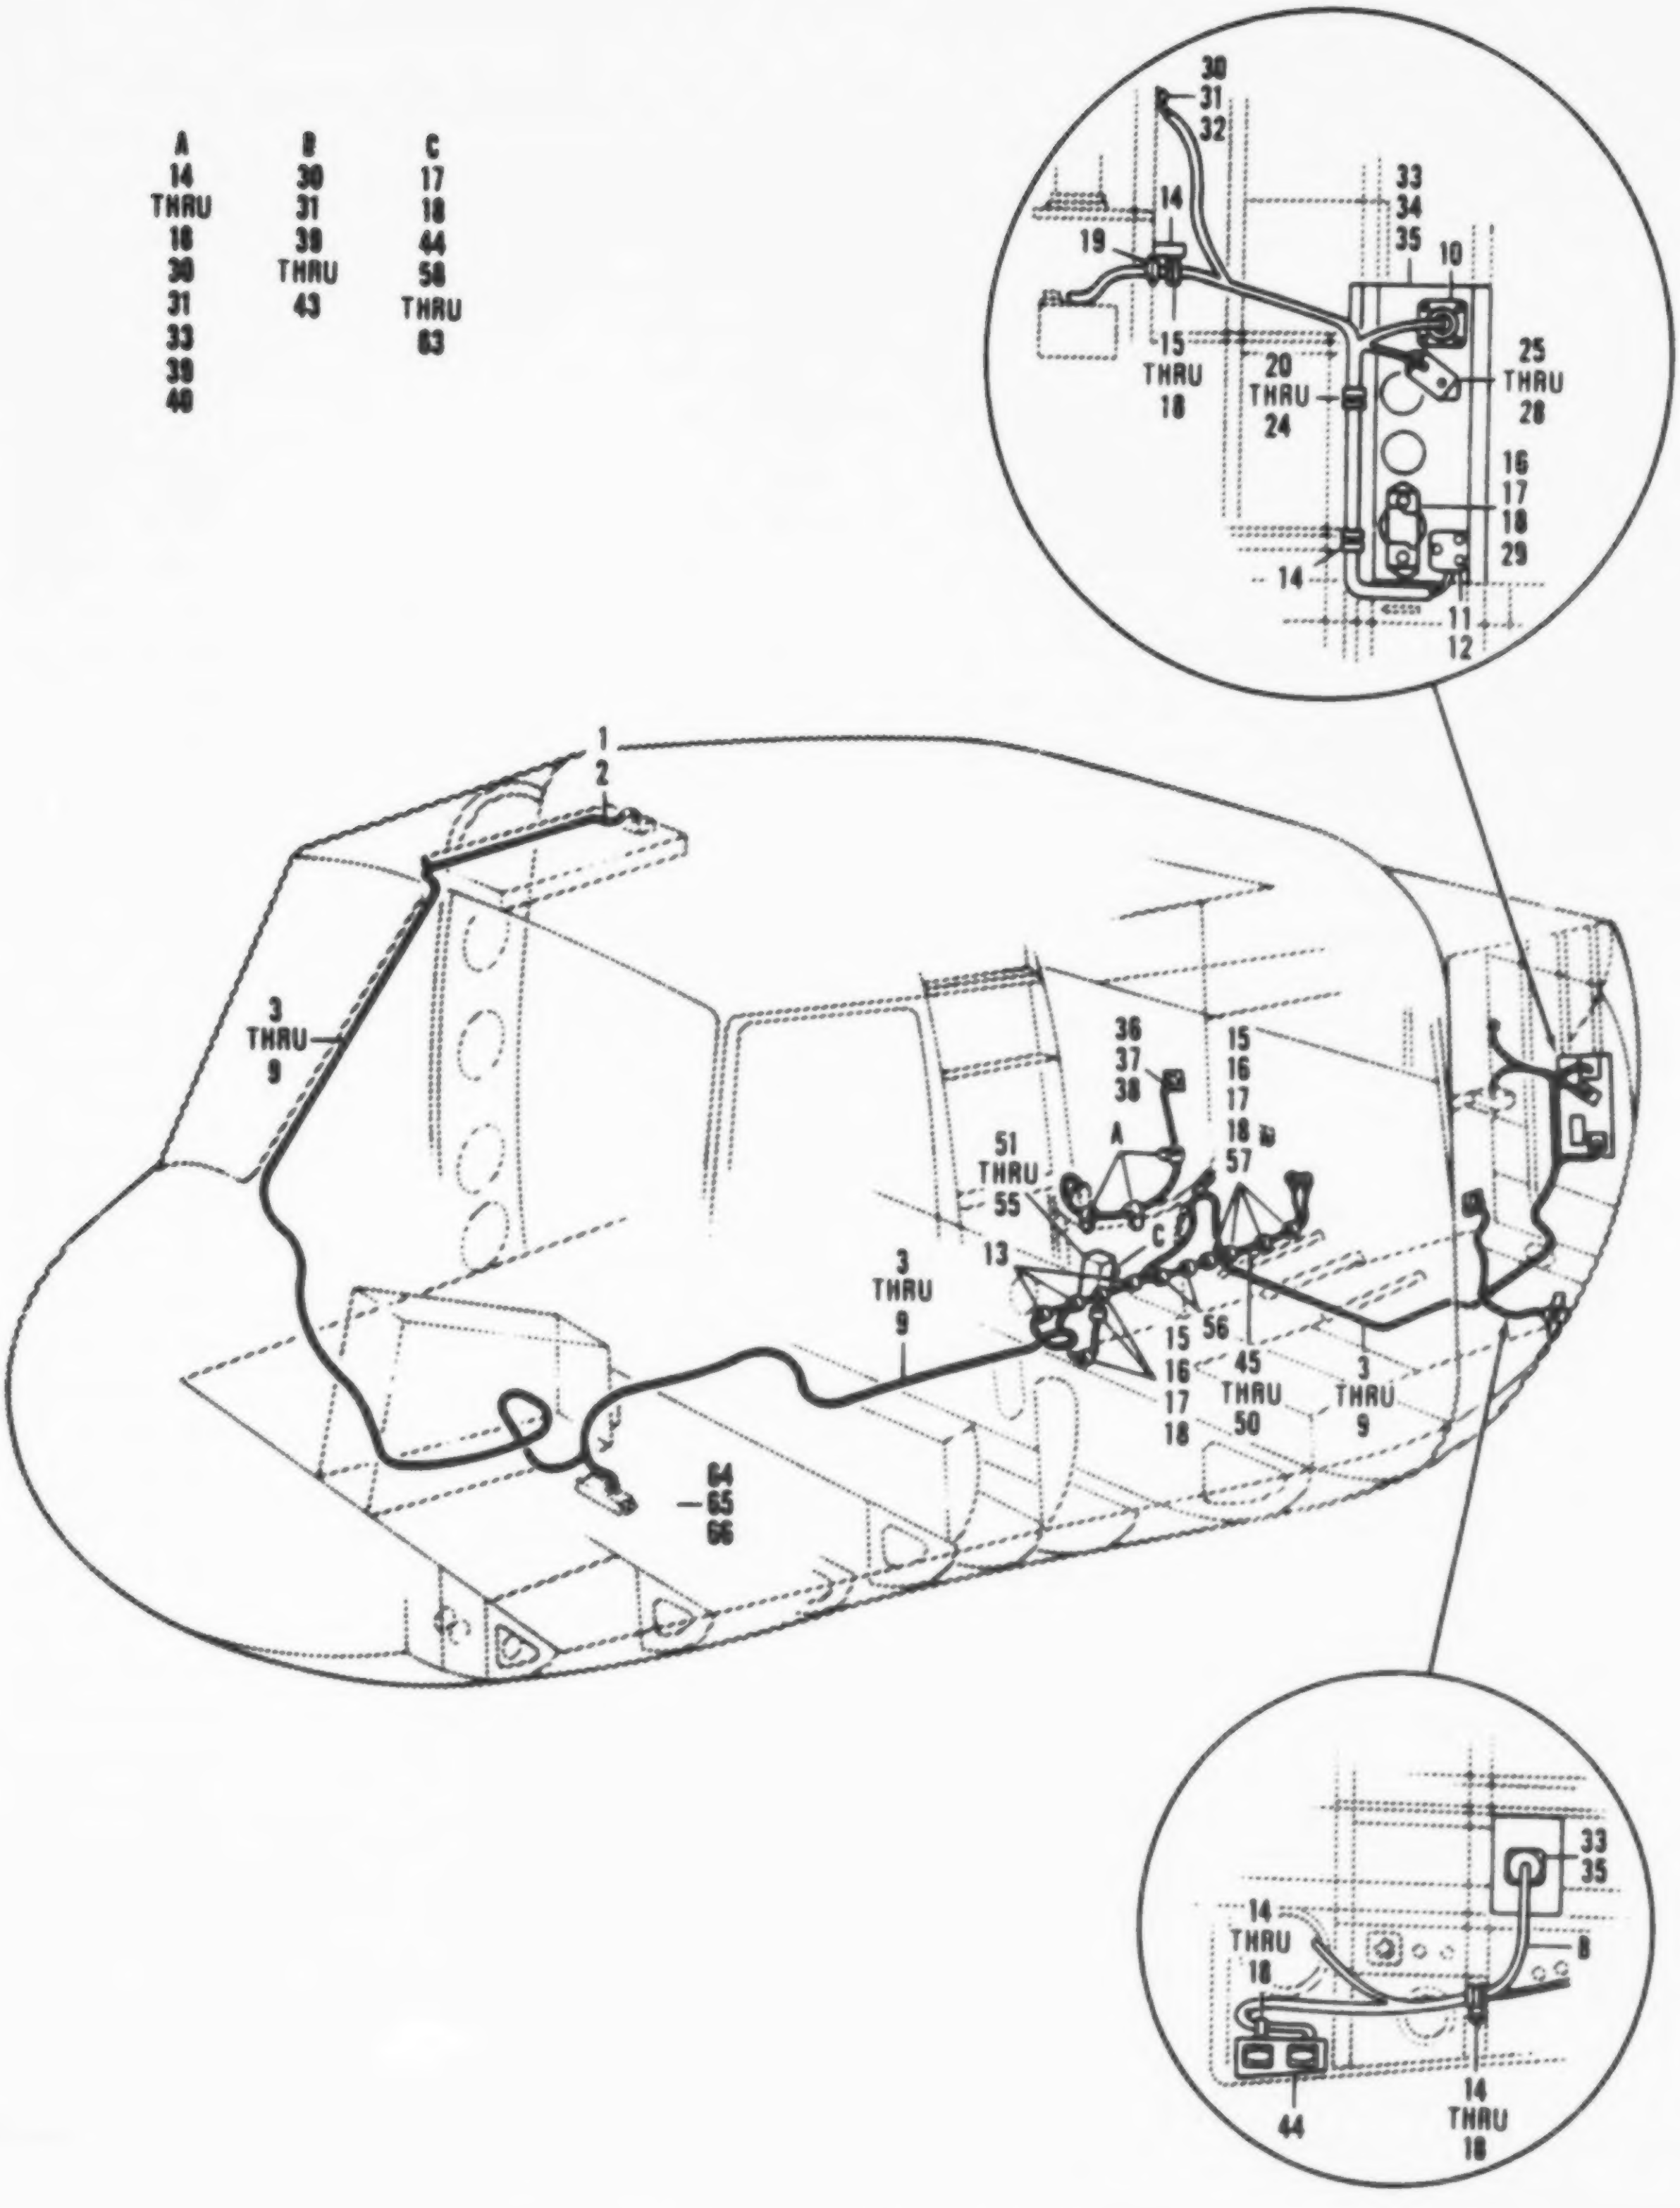
A
14 THRU 18
30
31
33
39
40
B
30
31
39 THRU 43
C
17
18
44
58 THRU 63
30
31
32
33
34
35
14
19
10
15 THRU 18
20 THRU 24
25 THRU 28
16
17
18
29
14
11
12
1
2
3 THRU 9
36
37
38
15
16
17
18
57
A
51 THRU 55
13
C
3 THRU 9
15
16
17
18
56
45 THRU 50
3 THRU 9
64
65
66
33
35
14 THRU 18
B
44
14 THRU 18

Figure 301. Armament Installation, XM21

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) 'G. O.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
301		XCFZZ		97499	204-1704-1	ADAPTER KIT ARMAMENT USBL EFF (UH-1B) 62-1997 & SUBSEQUENT, (UH-1C) 64-14101 & SUBSEQUENT ... UHB,UHC,UHM	EA	1
1	1	PBOZZ	5925-00-686-3297	96906	MS25244-5	.CIRCUIT BREAKER ... UHB,UHC,UHM	EA	1
1	2	XBOZZ		97499	204-075-289-399	.IDENTIFICATION PLAT ... UHB,UHC,UHM	EA	1
301	3	AOOOZ	6150-00-952-7315	97499	204-175-435-5	.CABLE ASSY,SPECIAL ... UHB,UHC,UHM	EA	1
301	4	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG ... UHB,UHC,UHM	EA	4
301	5	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG ... UHB,UHC,UHM	EA	2
301	6	PBOZZ	5940-00-557-4339	96906	MS25036-126	..TERMINAL,LUG ... UHB,UHC,UHM	EA	1
301	7	PAOZZ	5940-00-113-8191	96906	MS25036-127	..TERMINAL,LUG ... UHB,UHC,UHM	EA	5
301	8	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG ... UHB,UHC,UHM	EA	4
301	9	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR ... UHB,UHC,UHM	EA	1
301	10	PAOZZ	5935-00-836-9078	96906	MS3100R32-15	..CONNECTOR,RECEPT ... UHB,UHC,UHM	EA	1
301	11	PAOZZ	5945-00-906-3556	07031	91678	..RELAY,ELECTROMAGNET INTRCH ... UHB,UHC,UHM	EA	1
301	12	PAOZZ	5945-00-988-0260	03972	2003-2	..RELAY,ELECTROMAGNET ... UHD,UHC,UHM	EA	1
301	13	PAOZZ	5340-00-993-1470	81996	EAB700018	.CLAMP,LOOP ... UHB,UHC,UHM	EA	3
301	14	XDOZZ	5340-00-989-4569	81996	EAB70009	.CLAMP,LOOP ... UHB,UHC,UHM	EA	7
301	15	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE ... UHB,UHC,UHM	EA	6
301	16	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE ... UHB,UHC,UHM	EA	14
301	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT ... UHB,UHC,UHM	EA	15
301	18	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ... UHB,UHC,UHM	EA	21
11	19	PAOZZ	5325-00-290-6163	96906	MS35489-13	.GROMMET,NONMETALLIC ... UHB,UHC,UHM	EA	1
01	20	PAOZZ	5340-00-993-6247	81996	EAB700011	.CLAMP,LOOP ... UHB,UHC,UHM	EA	1
301	21	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE ... UHB,UHC,UHM	EA	1
301	22	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE ... UHB,UHC,UHM	EA	3
301	23	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT ... UHB,UHC,UHM	EA	4
301	24	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ... UHB,UHC,UHM	EA	4
301	25	PAOZZ	5945-00-660-9315	96906	MS24171-D1	.RELAY,ELECTROMAGNET ... UHB,UHC,UHM	EA	1
301	26	PAOZZ	5305-00-993-2463	96906	MS35207-279	.SCREW,MACHINE ... UHB,UHC,UHM	EA	2
301	27	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT ... UHB,UHC,UHM	EA	2
301	28	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ... UHB,UHC,UHM	EA	2
301	29	PAOZZ	5925-00-819-1098	82647	D7236-1-175	.OVERLOAD CIRCUIT BREAKER ... UHB,UHC,UHM	EA	1
301	30	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ... UHB,UHC,UHM	EA	19
301	31	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT ... UHB,UHC,UHM	EA	19
301	32	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE ... UHB,UHC,UHM	EA	1
301	33	PAOZZ	5320-00-754-0822	96906	MS20470AD4-5	.RIVET,SOLID ... UHB,UHC,UHM	LB	V
301	34	PAOZZ	5320-00-117-6828	96906	MS20470AD4-6	.RIVET,SOLID ... UHB,UHC,UHM	LB	5
301	35	PBOZZ	5320-00-117-6938	96906	MS20426AD3-4	.RIVET,SOLID ... UHB,UHC,UHM	LB	8
301	36	AOOOZ	6150-00-952-7279	97499	204-175-435-1	.CABLE ASSY,SPECIAL ... UHB,UHC,UHM	EA	1
301	37	PAOZZ	5935-00-952-7276	77820	SG3100E28-66P	..CONNECTOR AND CABLE ... UHB,UHC,UHM	EA	1
301	38	PAOZZ	5935-00-952-7277	77820	SG3100E28-66S	..CONNECTOR AND CABLE ... UHB,UHC,UHM	EA	1
301	39	PAOZZ	5305-00-282-2712	88044	AN503-6-8	.SCREW,MACHINE ... UHB,UHC,UHM	EA	4
301	40	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE ... UHB,UHC,UHM	EA	12

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
301	41	AOOOZ	6150-00-952-7280	97499	204-175-435-3	CABLE ASSY,SPECIAL	UHB,UHC,UHM	EA	1
301	42	PAOZZ	5935-00-952-7276	77820	SG3100E28-66P	CONNECTOR AND CABLE	UHB,UHC,UHM	EA	1
301	43	PAOZZ	5935-00-952-7277	77820	SG3100E28-66S	CONNECTOR AND CABLE	UHB,UHC,UHM	EA	1
301	44	PAOZZ	1560-00-181-4310	97499	204-038-257-15	RETAINER	UHB,UHC,UHM	EA	2
301	45	AOOOZ	6150-00-957-7457	97499	204-175-435-7	CABLE ASSY,POWER	UHB,UHC,UHM	EA	1
301	46	PAOZZ	5935-00-815-1136	96906	MS3106R16S1P	CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
301	47	PAOZZ	5935-00-878-8547	96906	MS3106R16S1PW	CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
301	48	PAOZZ	5935-00-814-4618	96906	MS3116P16-8S	CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
301	49	PAOZZ	5940-00-772-3509	09922	CYW16	CABLE NIPPLE,ELEC	UHB,UHC,UHM	EA	2
301	50	PBOZZ	6145-00-578-6605	81349	M5086/2-16-9	WIRE,ELECTRICAL	UHB,UHC,UHM	FT	V
301	51	PAOZZ	5935-00-954-1425	96906	MS3119E16-8	ADAPTER,CONNECTOR	UHB,UHC,UHM	EA	1
301	52	PAOZZ	5305-00-889-2999	96906	MS35206-217	SCREW,MACHINE	UHB,UHC,UHM	EA	4
301	53	PAOZZ	5310-00-187-2397	88044	AN960PD4L	WASHER,FLAT	UHB,UHC,UHM	EA	4
301	54	PAOZZ	5310-00-807-1471	96906	MS21042L04	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	4
301	55	PAOZZ	5975-00-250-6871	96906	MS25171-3S	CABLE NIPPLE,ELEC	UHB,UHC,UHM	EA	4
301	56	PAOZZ	5340-00-989-4570	81996	EAB700013	CLAMP,LOOP	UHB,UHC,UHM	EA	2
301	57	PAOZZ	5340-00-993-6245	81996	EAB70005	CLAMP,LOOP	UHB,UHC,UHM	EA	7
301	58	PAOZZ	1560-00-950-6948	97499	204-038-257-11	PAN,AIRFRAME	UHB,UHC,UHM	EA	1
301	59	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	SCREW,MACHINE	UHB,UHC,UHM	EA	6
301	60	PAOZZ	5305-00-912-7308	96906	MS27039-1-14	SCREW,MACHINE	UHB,UHC,UHM	EA	6
301	61	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER,FLAT	UHB,UHC,UHM	EA	6
301	62	PAOZZ	5305-00-993-1851	96906	MS35207-267	SCREW,MACHINE	UHB,UHC,UHM	EA	2
301	63	PAOZZ	5305-00-989-7435	96906	MS35207-264	SCREW,MACHINE	UHB,UHC,UHM	EA	2
301	64	AOOOZ	1560-00-923-8262	97499	204-075-173-21	TUBE,BATTERY,DRAIN USE-AFT-CMPL-W MWO 55-1520-211-30/8	UHB,UHC,UHM	EA	1
301	65	PAOZZ	1560-00-972-5317	97499	10-002-1	ADAPTER,BATTERY DRAIN TUBE	UHB,UHC,UHM	EA	1
301	66	MOOZZ		97499	204-075-173-23	TUBE ASSEMBLY	UHC,UHM	EA	1

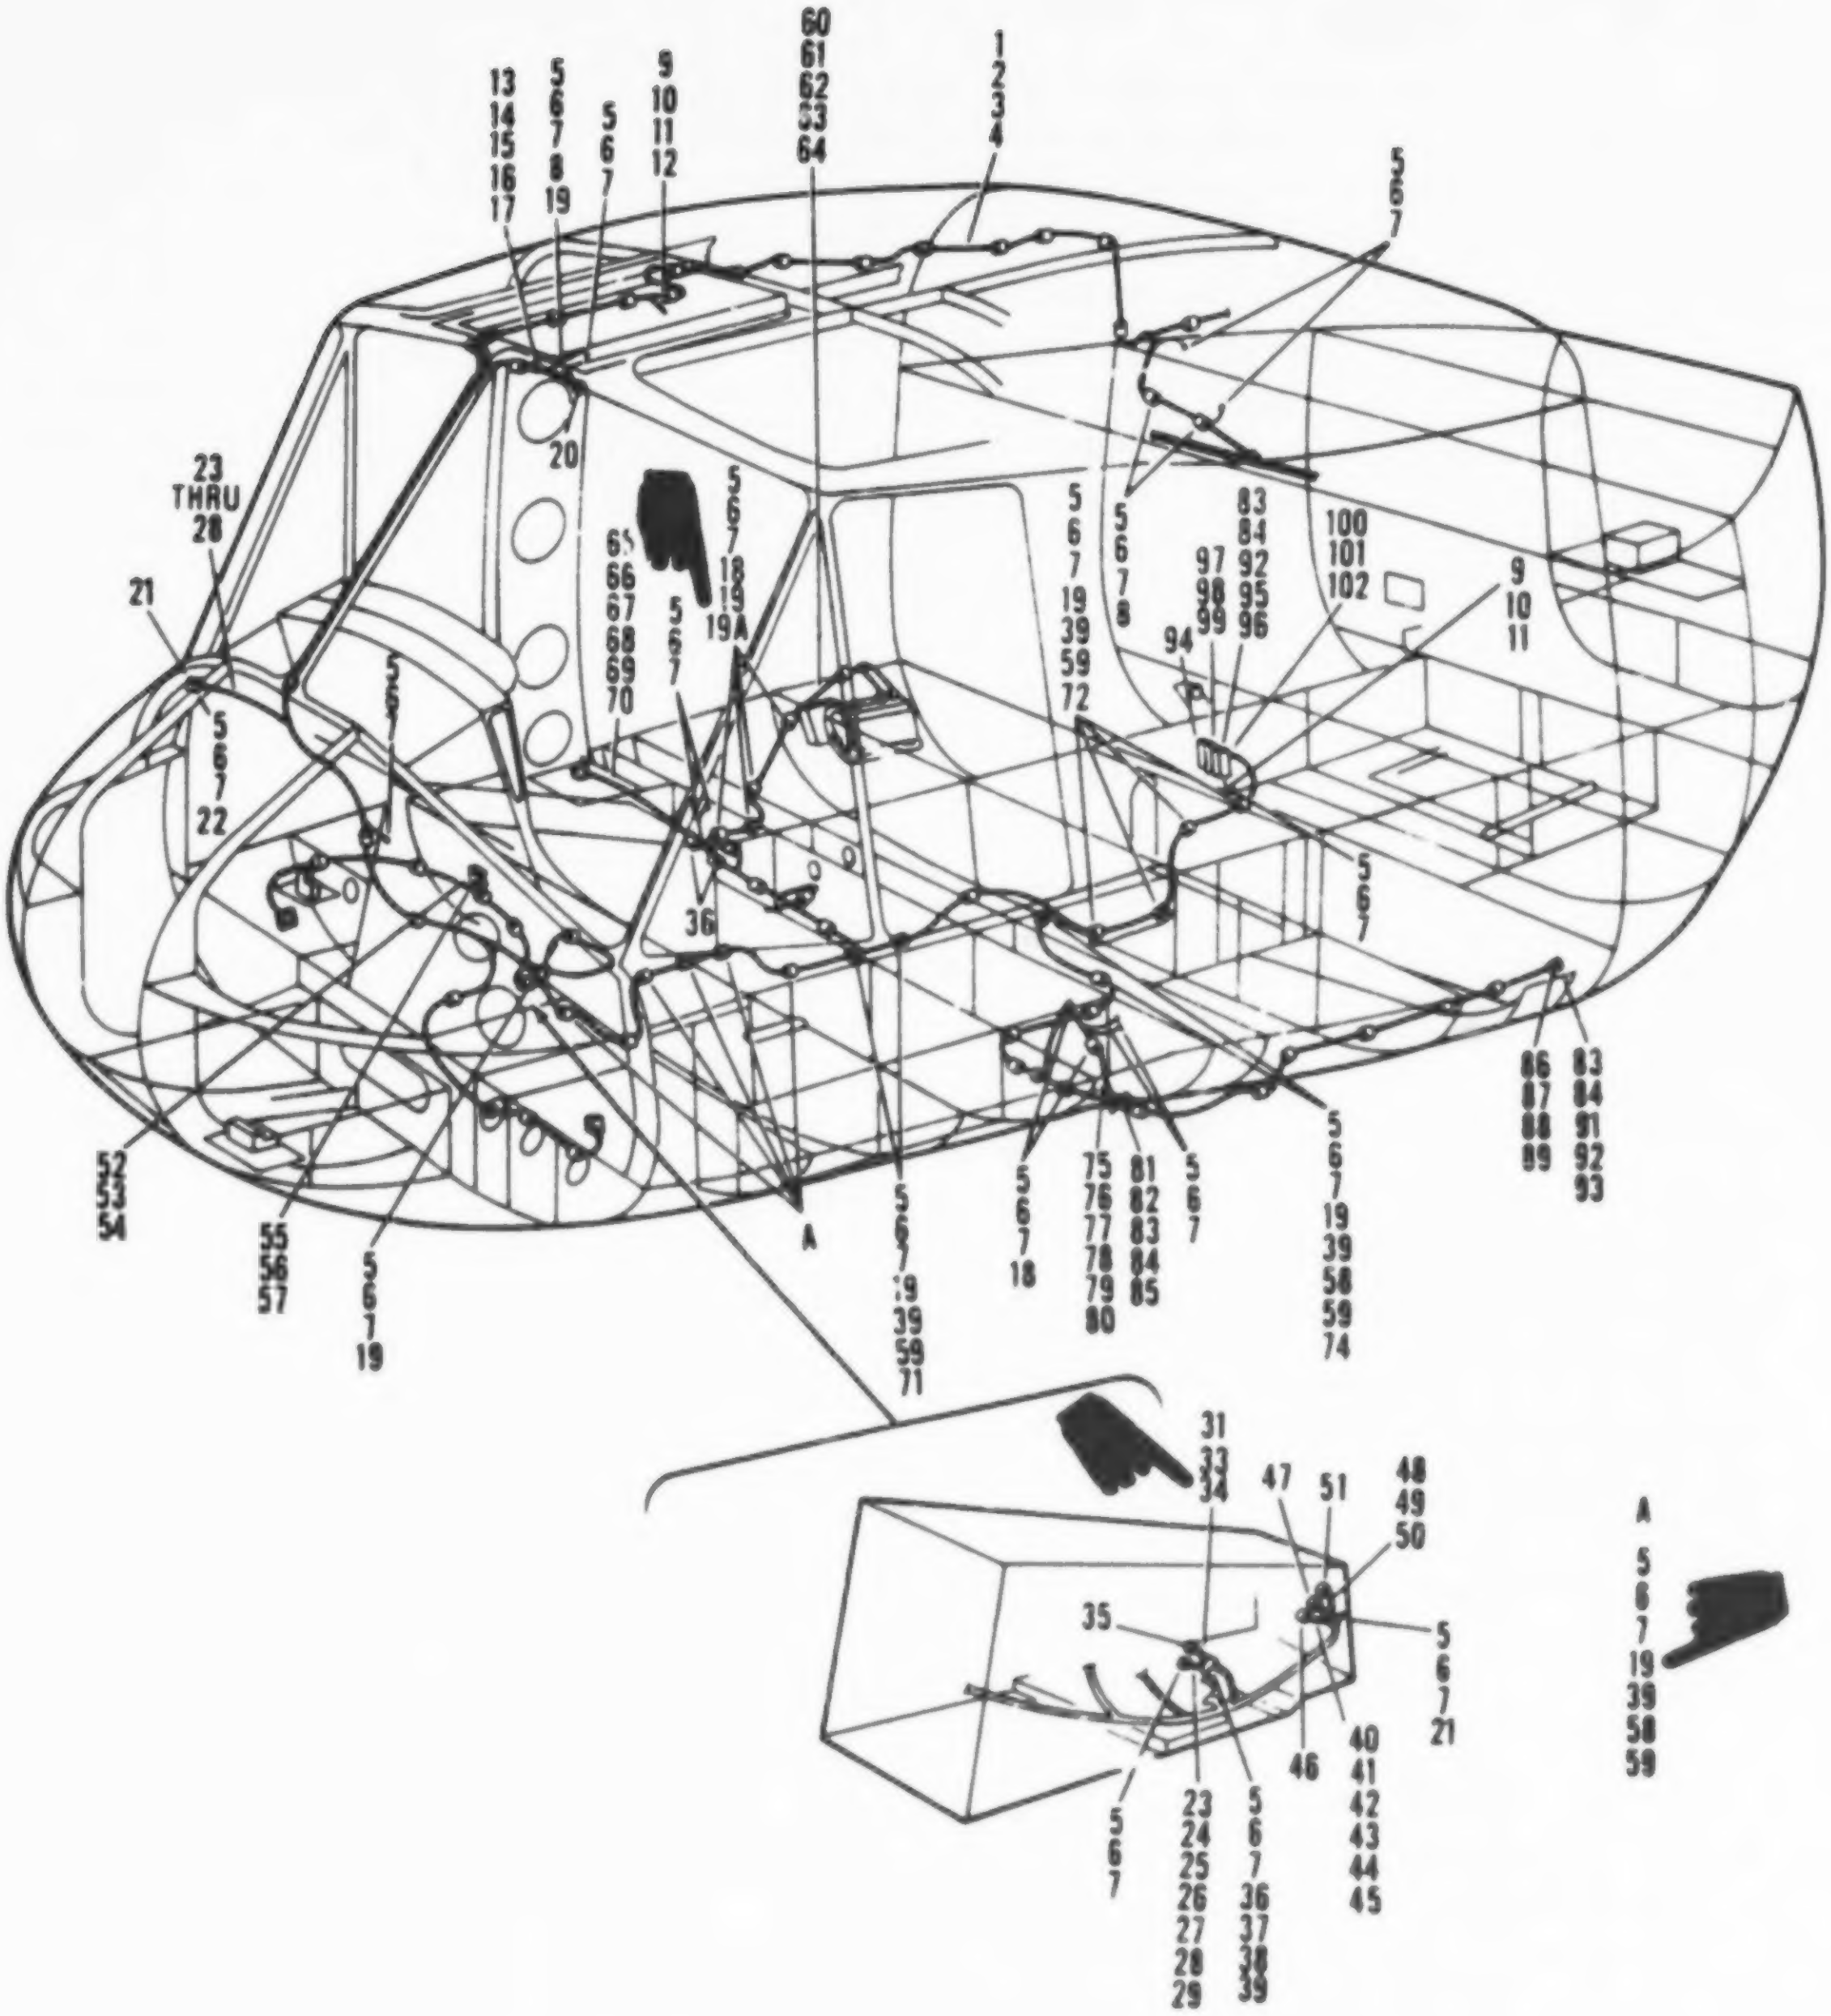
13 14 15 16 17
5 6 7 8 19
5 6 7
9 10 11 12
60 61 62 63 64
1 2 3 4
5 6 7
20
23 THRU 28
21
5 6 7 22
5 6 7 18 19 19A
65 66 67 68 69 70
5 6 7
5 6 7 19 39 59 72
5 6 7 8
97 98 99
94
83 84 92 95 96
100 101 102
9 10 11
5 6 7
36
52 53 54
55 56 57
5 6 7 19
A
5 6 7 19 39 59 71
5 6 7 18
75 76 77 78 79 80
81 82 83 84 85
5 6 7
5 6 7 19 39 58 59 74
86 87 88 89
83 84 91 92 93
31 33 34
47
51
48 49 50
35
5 6 7 21
46
40 41 42 43 44 45
5 6 7
23 24 25 26 27 28 29
5 6 7 36 37 38 39
A
5 6 7 19 39 58 59

Figure 302. Armament Installation, Electrical

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS	USABLE ON CODE	U/M	QTY INC IN UNIT
302		XCFZZ		97499	205-075-011-1	ELECTRICAL INSTL, ARMAMENT USBL EFF 63-12956 THRU 65-12895	UHH,UHV	EA	1
302	1	AOOOZ	1560-00-758-5708	97499	205-075-425-3	CABLE ASSY,ARAMENT	UHH,UHV	EA	1
302	2	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1
302	3	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHH,UHV	EA	1
302	4	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	CONNECTOR,PLUG,ELEC HYD PWR	UHH,UHV	EA	1
302	5	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE	UHH,UHV	EA	2
302	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHH,UHV	EA	V
302	7	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHH,UHV	EA	V
302	8	PAOZZ	5340-00-990-9298	81996	EAB70003	CLAMP,LOOP	UHH,UHV	EA	2
302	9	AOOOZ	1560-00-758-5702	97499	205-075-429-9	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	10	XBOZZ	5940-00-143-4780	96906	MS25036-108	TERMINAL,LUG	UHH,UHV	EA	1
302	11	PAOZZ	5940-00-143-4774	96906	MS25036-153	TERMINAL,LUG	UHH,UHV	EA	1
302	12	PAOZZ	5999-01-063-4563	81349	MS17804-16-16	CONTACT,ELECTRICAL	UHH,UHV	EA	1
302	13	AOOOZ	1560-00-758-9271	97499	205-075-425-1	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	14	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1
302	15	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHH,UHV	EA	1
302	16	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR	UHH,UHV	EA	1
302	17	PBOZZ	5935-00-726-7101	96906	MS3124E14-19S	CONNECTOR,RECEPT ELECTRICAL,XMGE ( ) SIGHT	UHH,UHV	EA	1
302	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHH,UHV	EA	3
302	19	PAOZZ	5340-00-990-9301	81996	EAB70007	CLAMP,LOOP	UHH,UHV	EA	5
302	19A	MFOZZ	DELETED	97499	20-032-1	BRACKET,ENGINE	UHH,UHV	EA	V*
302	20	PAOZZ	5340-00-826-9785	71468	025-0479-000	CAP,PROTECTIVE,DUST	UHH,UHV	EA	1
302	21	PAOZZ	5340-00-481-8934	96906	MS90376-14Y	CAP,PROTECTIVE,DUST	UHH,UHV	EA	1
302	22	PAOZZ	5340-00-989-4572	81996	EAB700015	CLAMP,LOOP	UHH,UHV	EA	1
302	23	AOOOZ	1560-00-758-5703	97499	205-075-429-7	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	24	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1
302	25	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHH,UHV	EA	1
302	26	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG	UHH,UHV	EA	1
302	27	PAOZZ	5935-00-846-8665	96906	MS3108R14S7S	CONNECTOR,PLUG ELEC MK V111 SIGHT LAMP	UHH,UHV	EA	1
302	28	PAOZZ	5340-00-577-8992	96906	MS90376-18Y	CAP,PROTECTIVE,DUST	UHH,UHV	EA	1
302	29	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHH,UHV	EA	1
302	30	AOOOZ	1560-00-758-5706	97499	205-075-429-1	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	31	XDOZZ	5935-00-988-3540	96906	MS3126E18-32S	CONNECTOR,PLUG,ELEC INTERVALOMETER DISC	UHH,UHV	EA	1
302	33	PAOZZ	5940-00-772-3509	09922	CYW16	CABLE NIPPLE,ELEC	UHH,UHV	EA	1
302	34	MFOZZ	DELETED	97499	85T4-500-6	INSULATION SLEEVING	UHH,UHV	EA	V
302	35	PAOZZ	5340-00-577-8992	77820	10-70606-18	CAP,PROTECTIVE,DUST	UHH,UHV	EA	1
302	36	XDOZZ	5340-00-989-4569	81996	EAB70009	CLAMP,LOOP	UHH,UHV	EA	1
302	37	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE	UHH,UHV	EA	1
302	38	PAOZZ	5305-00-993-1848	96906	MS35207-265	SCREW,MACHINE	UHH,UHV	EA	1
302	39	PAOZZ	5365-00-294-0580	80205	NAS43003-48	SPACER,SLEEVE	UHH,UHV	EA	5
302	40	AOOOZ	1560-00-758-9273	97499	205-075-424-3	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	41	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
302	42	PAOZZ	5940-00-143-5284	96906	MS25036-115	TERMINAL,LUG	UHH,UHV	EA	1
302	43	PAOZZ	5940-00-557-1629	96906	MS25036-149	TERMINAL,LUG	UHH,UHV	EA	1
302	44	PAOZZ	5935-00-807-0050	96906	MS3106R20-8S	CONNECTOR,PLUG,ELEC	UHH,UHV	EA	1
302	45	PBOZZ	5935-00-988-4317	96906	MS3126E20-41S	CONNECTOR,PLUG,ELEC	UHH,UHV	EA	1
302	46	PAOZZ	5340-00-583-8837	77820	10-70506-20	CAP,PROTECTIVE DUST	UHH,UHV	EA	1
302	47	PAOZZ	5935-00-722-8176	71468	025-0467-000	COVER,ELECTRICAL	UHH,UHV	EA	1
302	48	AOOOZ	1560-00-758-5705	97499	205-075-429-3	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	49	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	CONNECTOR,PLUG,ELEC JETTISON CONT PNL DISC	UHH,UHV	EA	1
302	50	PAOZZ	5999-00-818-1603	81312	100-1018P	CONTACT,SOCKET	UHH,UHV	EA	1
302	51	PAOZZ	5340-00-481-8934	96906	MS90376-14Y	CAP,PROTECTIVE,DUST	UHH,UHV	EA	1
302	52	PAOZZ	5945-00-681-9716	96906	MS24568D1	RELAY,ELECTROMAGNET	UHH,UHV	EA	1
302	53	PAOZZ	5310-00-184-9002	88044	AN960PD8L	WASHER,FLAT	UHH,UHV	EA	4
302	54	PAOZZ	5310-00-807-1473	96906	MS21042L08	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHH,UHV	EA	4
302	55	AOOOZ	1560-00-758-5704	97499	205-075-429-5	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	56	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1
302	57	PAOZZ	5999-00-818-1603	81312	100-1018P	CONTACT,ELECTRIC	UHH,UHV	EA	1
302	58	PAOZZ	5340-00-993-5478	81996	EAB700012	CLAMP,LOOP	UHH,UHV	EA	V
302	59	PAOZZ	5305-00-995-3442	96906	MS35207-268	SCREW,MACHINE	UHH,UHV	EA	V
302	60	AOOOZ	1560-00-758-9272	97499	205-075-426-1	CABLE ASSY,ARMAMENT	UHH,UHV	EA	1
302	61	PBOZZ	5935-00-765-6392	96906	MS3120E22-55S	CONNECTOR,RECEPTACL ELECTRICAL,ARMA SKIN DISC (R.H.)	UHH,UHV	EA	1
302	62	PAOZZ	5999-00-818-1603	81312	100-1018P	CONTACT,ELECTRIC	UHH,UHV	EA	1
302	63	PAOZZ	5999-00-805-5620	09922	CYW10	CAP,ELECTRICAL	UHH,UHV	EA	1
302	64	PAOZZ	5940-00-772-3509	09922	CYW16	CABLE NIPPLE,ELEC	UHH,UHV	EA	1
302	65	AOOOZ	1560-00-758-7302	97499	205-075-424-5	CABLE ASSEMBLY,DISC	UHH,UHV	EA	1
302	66	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1
302	67	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHH,UHV	EA	1
302	68	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR	UHH,UHV	EA	1
302	69	PAOZZ	5940-01-007-7876	81349	M7928/3-3	SPLICE,CONDUCTOR	UHH,UHV	EA	1
302	70	PBOZZ	5935-00-766-8049	96906	MS3120E20-39S	CONNECTOR,RECEPTACL	UHH,UHV	EA	1
302	71	PAOZZ	5340-00-989-4573	81996	EAB700016	CLAMP,LOOP	UHH,UHV	EA	2
302	72	PAOZZ	5340-00-993-1470	81996	EAB700018	CLAMP,LOOP	UHH,UHV	EA	4
302	74	PAOZZ	5340-00-989-4570	81996	EAB700013	CLAMP,LOOP	UHH,UHV	EA	1
302	75	AOOOZ	1560-00-758-7301	97499	205-075-424-1	CABLE ASSEMBLY,DISC	UHH,UHV	EA	1
302	76	PAOZZ	5940-00-813-0698	96906	MS25036-101	TERMINAL,LUG	UHH,UHV	EA	1
302	77	PAOZZ	5940-00-143-4771	96906	MS25036-103	TERMINAL,LUG	UHH,UHV	EA	1
302	78	PAOZZ	5940-01-007-7875	81349	M7928/3-2	SPLICE,CONDUCTOR	UHH,UHV	EA	1
302	79	PAOZZ	5940-01-007-7876	81349	M7928/3-3	SPLICE,CONDUCTOR	UHH,UHV	EA	1
302	80	PBOZZ	5935-00-766-8049	96906	MS3120E20-39S	CONNECTOR,RECEPTACL	UHH,UHV	EA	1
302	81	PAOZZ	5305-00-531-0298	96906	MS35265-15	SCREW,MACHINE	UHH,UHV	EA	2
302	82	PBOZZ	5305-00-889-2997	96906	MS35206-215	SCREW,MACHINE	UHH,UHV	EA	6
302	83	PAOZZ	5310-00-187-2397	88044	AN960PD4L	WASHER,FLAT	UHH,UHV	EA	8
302	84	PAOZZ	5310-00-807-1471	96906	MS21042L04	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHH,UHV	EA	8

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
302	85	XDOZZ	5340-00-677-2573	77820	10-70606-22	.CAP-PLUG,PROTECT .... UHH,UHV	EA	2
302	86	AOOOZ	1560-00-758-6707	97499	205-075-428-1	.CABLE ASSY,ARMAMENT .... UHH,UHV	EA	1
'02	87	PBOZZ	5935-00-766-6392	96906	MS3120E22-55S	..CONNECTOR,RECEPTACL ELECTRICAL,ARMA SKIN DISC.(L.H.) .... UHH,UHV	EA	1
302	88	PAOZZ	5999-00-818-1603	81312	100-1018P	..CONTACT,ELECTRIC .... UHH,UHV	EA	1
302	89	PAOZZ	5999-00-805-6620	09922	CYW10	..CAP,ELECTRICAL .... UHH,UHV	EA	1
302	90	PAOZZ	5940-00-772-3609	09922	CYW16	..CABLE NIPPLE,ELEC .... UHH,UHV	EA	1
302	91	XDOZZ		88044	AN500A4-8	.SCREW,MACHINE .... UHH,UHV	EA	2
302	92	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE .... UHH,UHV	EA	6
302	93	PAOZZ	5340-00-530-5956	95760	EP24	.PLUG,PROTECTIVE .... UHH,UHV	EA	2
302	94	XDOZZ		10400	MK86SRB7	.CONNECTOR,RECEPT .... UHH,UHV	EA	1
302	95	PAOZZ	5935-00-950-6888	10400	MK86SRA7	.CONNECTOR,RECEPT .... UHH,UHV	EA	1
302	96	XDOZZ		88044	AN500A4-8	.SCREW,MACHINE .... UHH,UHV	EA	2
302	97	AOOOZ	1560-00-758-9275	97499	205-075-429-11	.CABLE ASSY,ARMAMENT .... UHH,UHV	EA	1
302	98	PAOZZ	5999-01-063-4563	81349	MS17804-16-16	..CONTACT,ELECTRICAL .... UHH,UHV	EA	1
302	99	PAOZZ	5940-00-772-3609	09922	CYW16	..CABLE NIPPLE,ELEC .... UHH,UHV	EA	1
302	100	AOOOZ	1560-00-758-9274	97499	205-075-429-13	.CABLE ASSY,ARMAMENT .... UHH,UHV	EA	1
302	101	PAOZZ	5999-01-063-4563	81349	MS17804-16-16	..CONTACT,ELECTRICAL .... UHH,UHV	EA	1
302	102	PAOZZ	5940-00-772-3609	09922	CYW16	..CABLE NIPPLE,ELEC .... UHH,UHV	EA	1

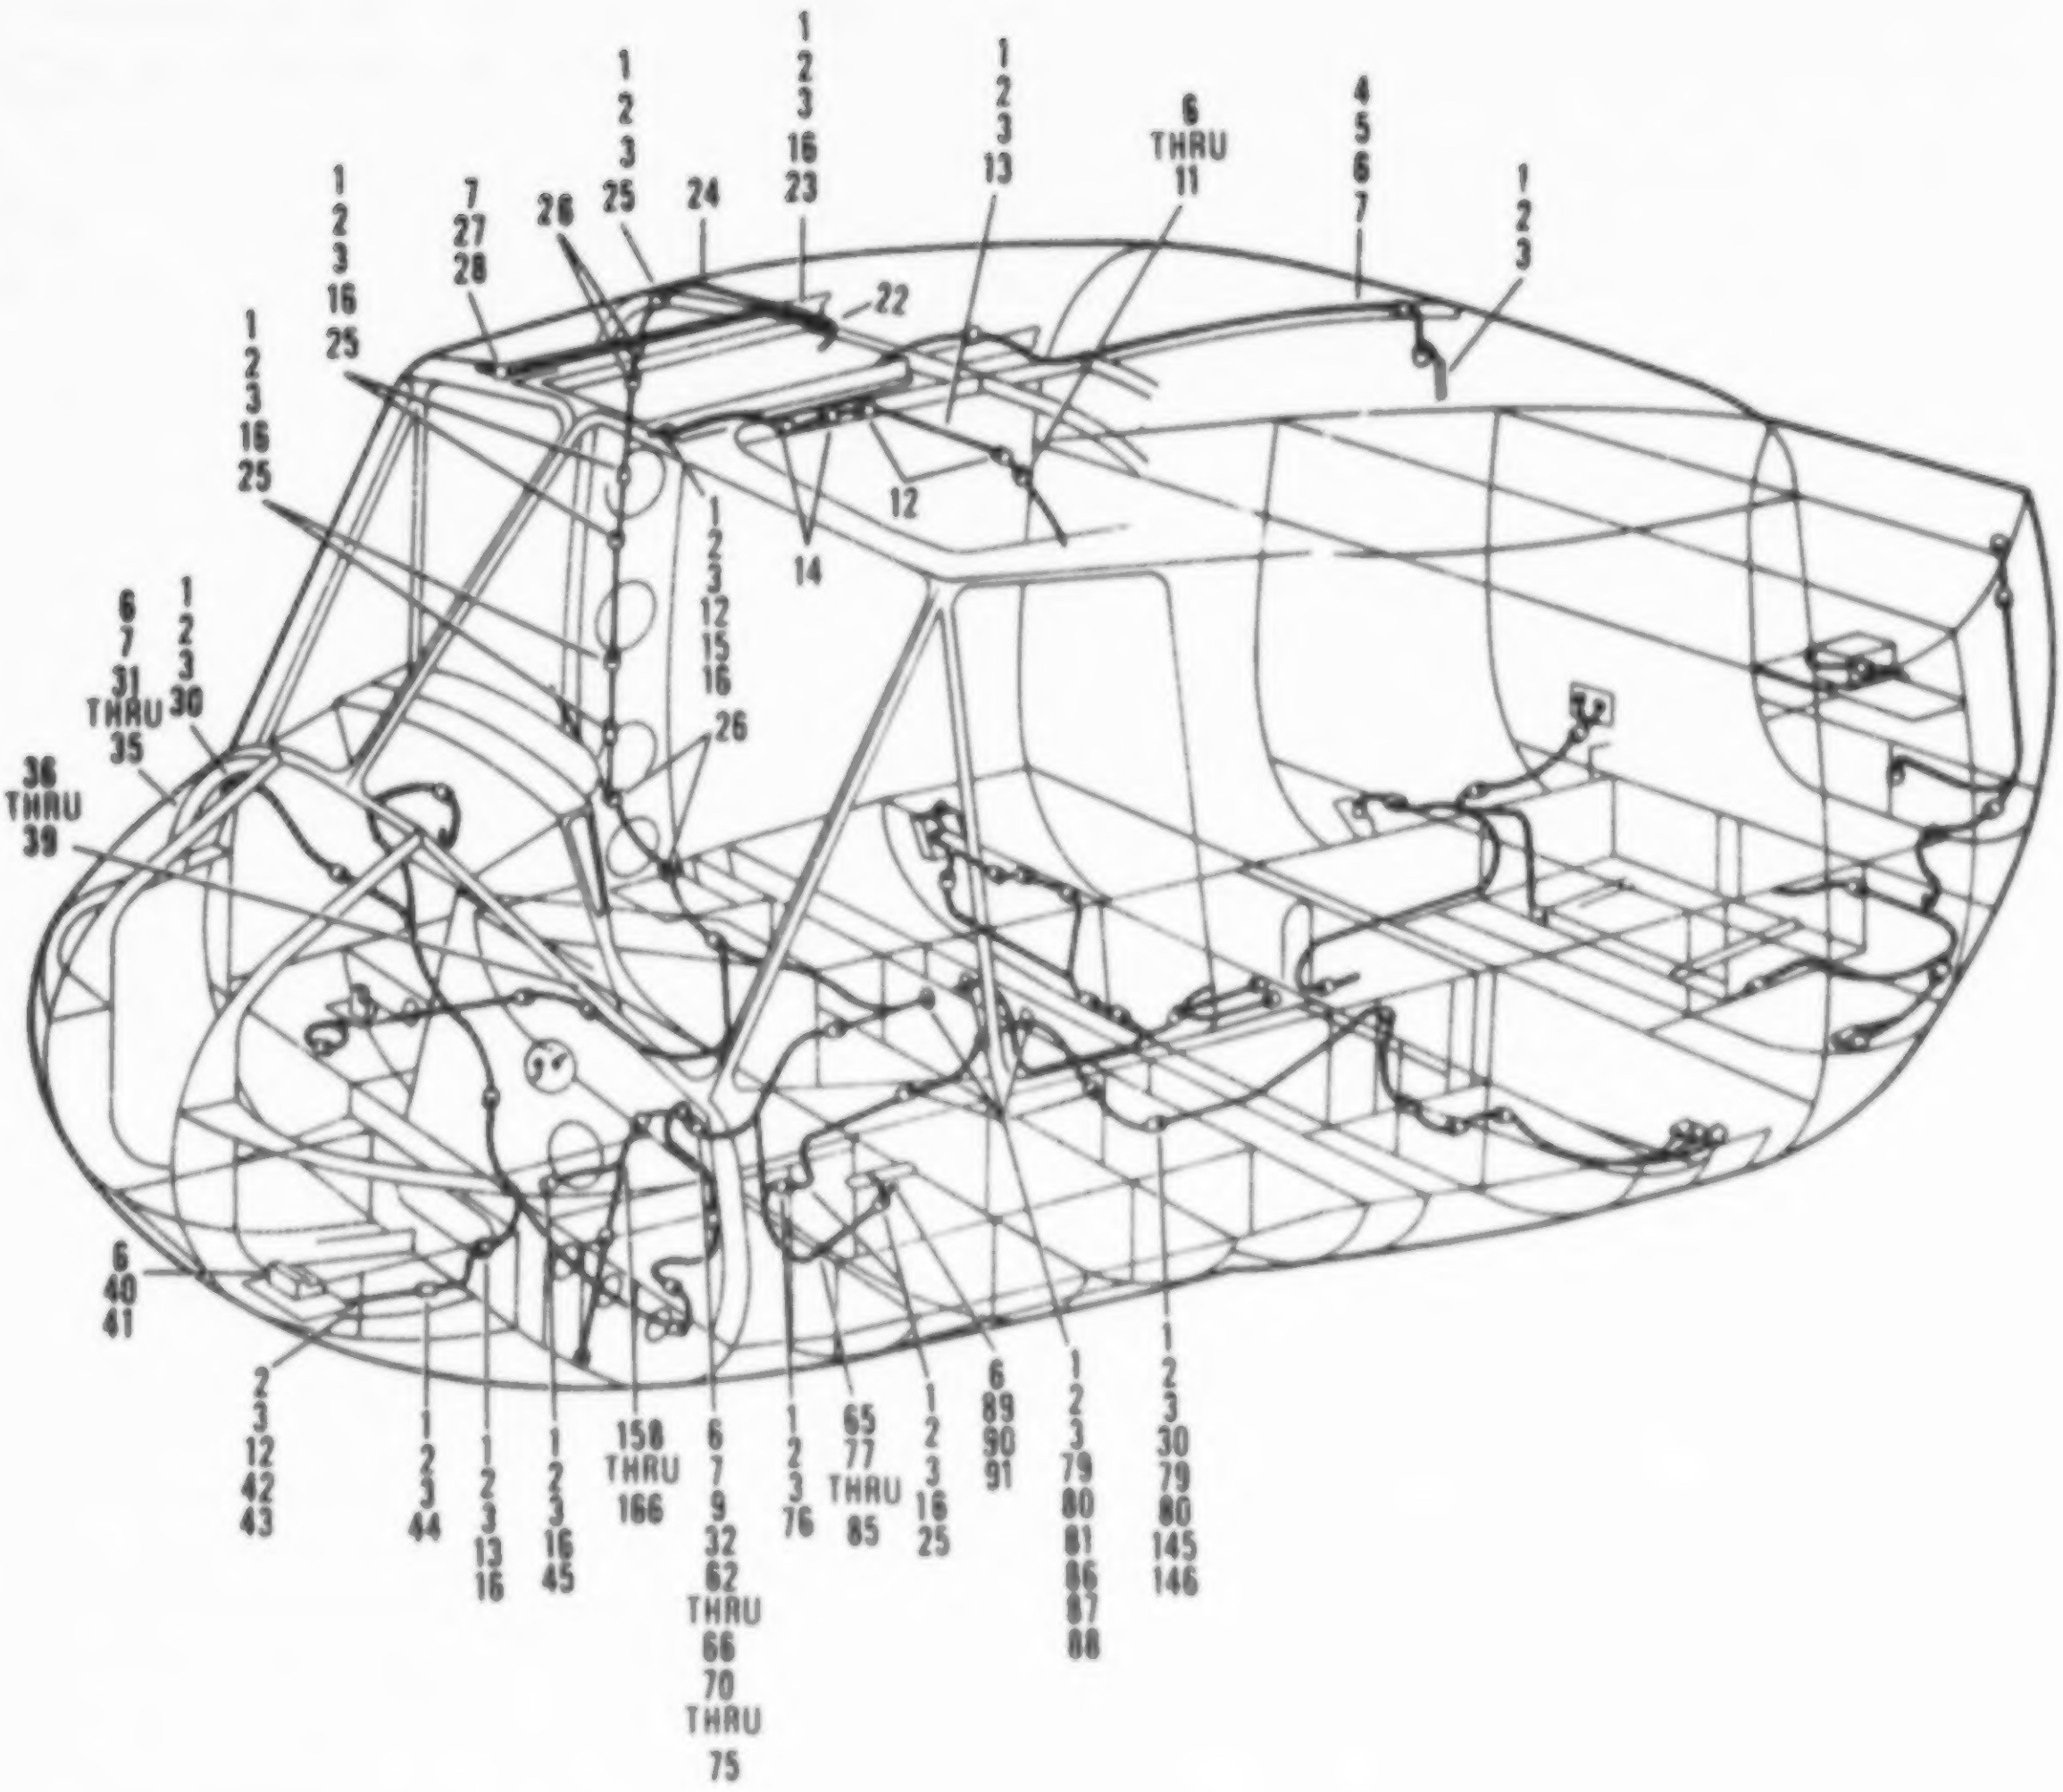
1 2 3 16 25
1 2 3 16 25
7 27 28
26
1 2 3 25
24
1 2 3 16 23
22
1 2 3 13
6 THRU 11
4 5 6 7
1 2 3
12
14
1 2 3 12 15 16
26
6 7 31 THRU 35
1 2 3 30
36 THRU 39
6 40 41
2 3 12 42 43
1 2 3 44
1 2 3 13 16
1 2 3 16 45
158 THRU 166
6 7 9 32 62 THRU 66 70 THRU 75
1 2 3 76
65 77 THRU 85
1 2 3 16 25
6 89 90 91
1 2 3 79 80 81 86 87 88
1 2 3 30 79 80 145 146

Figure 303. Armament Installation, Electrical (Sheet 1 of 3)

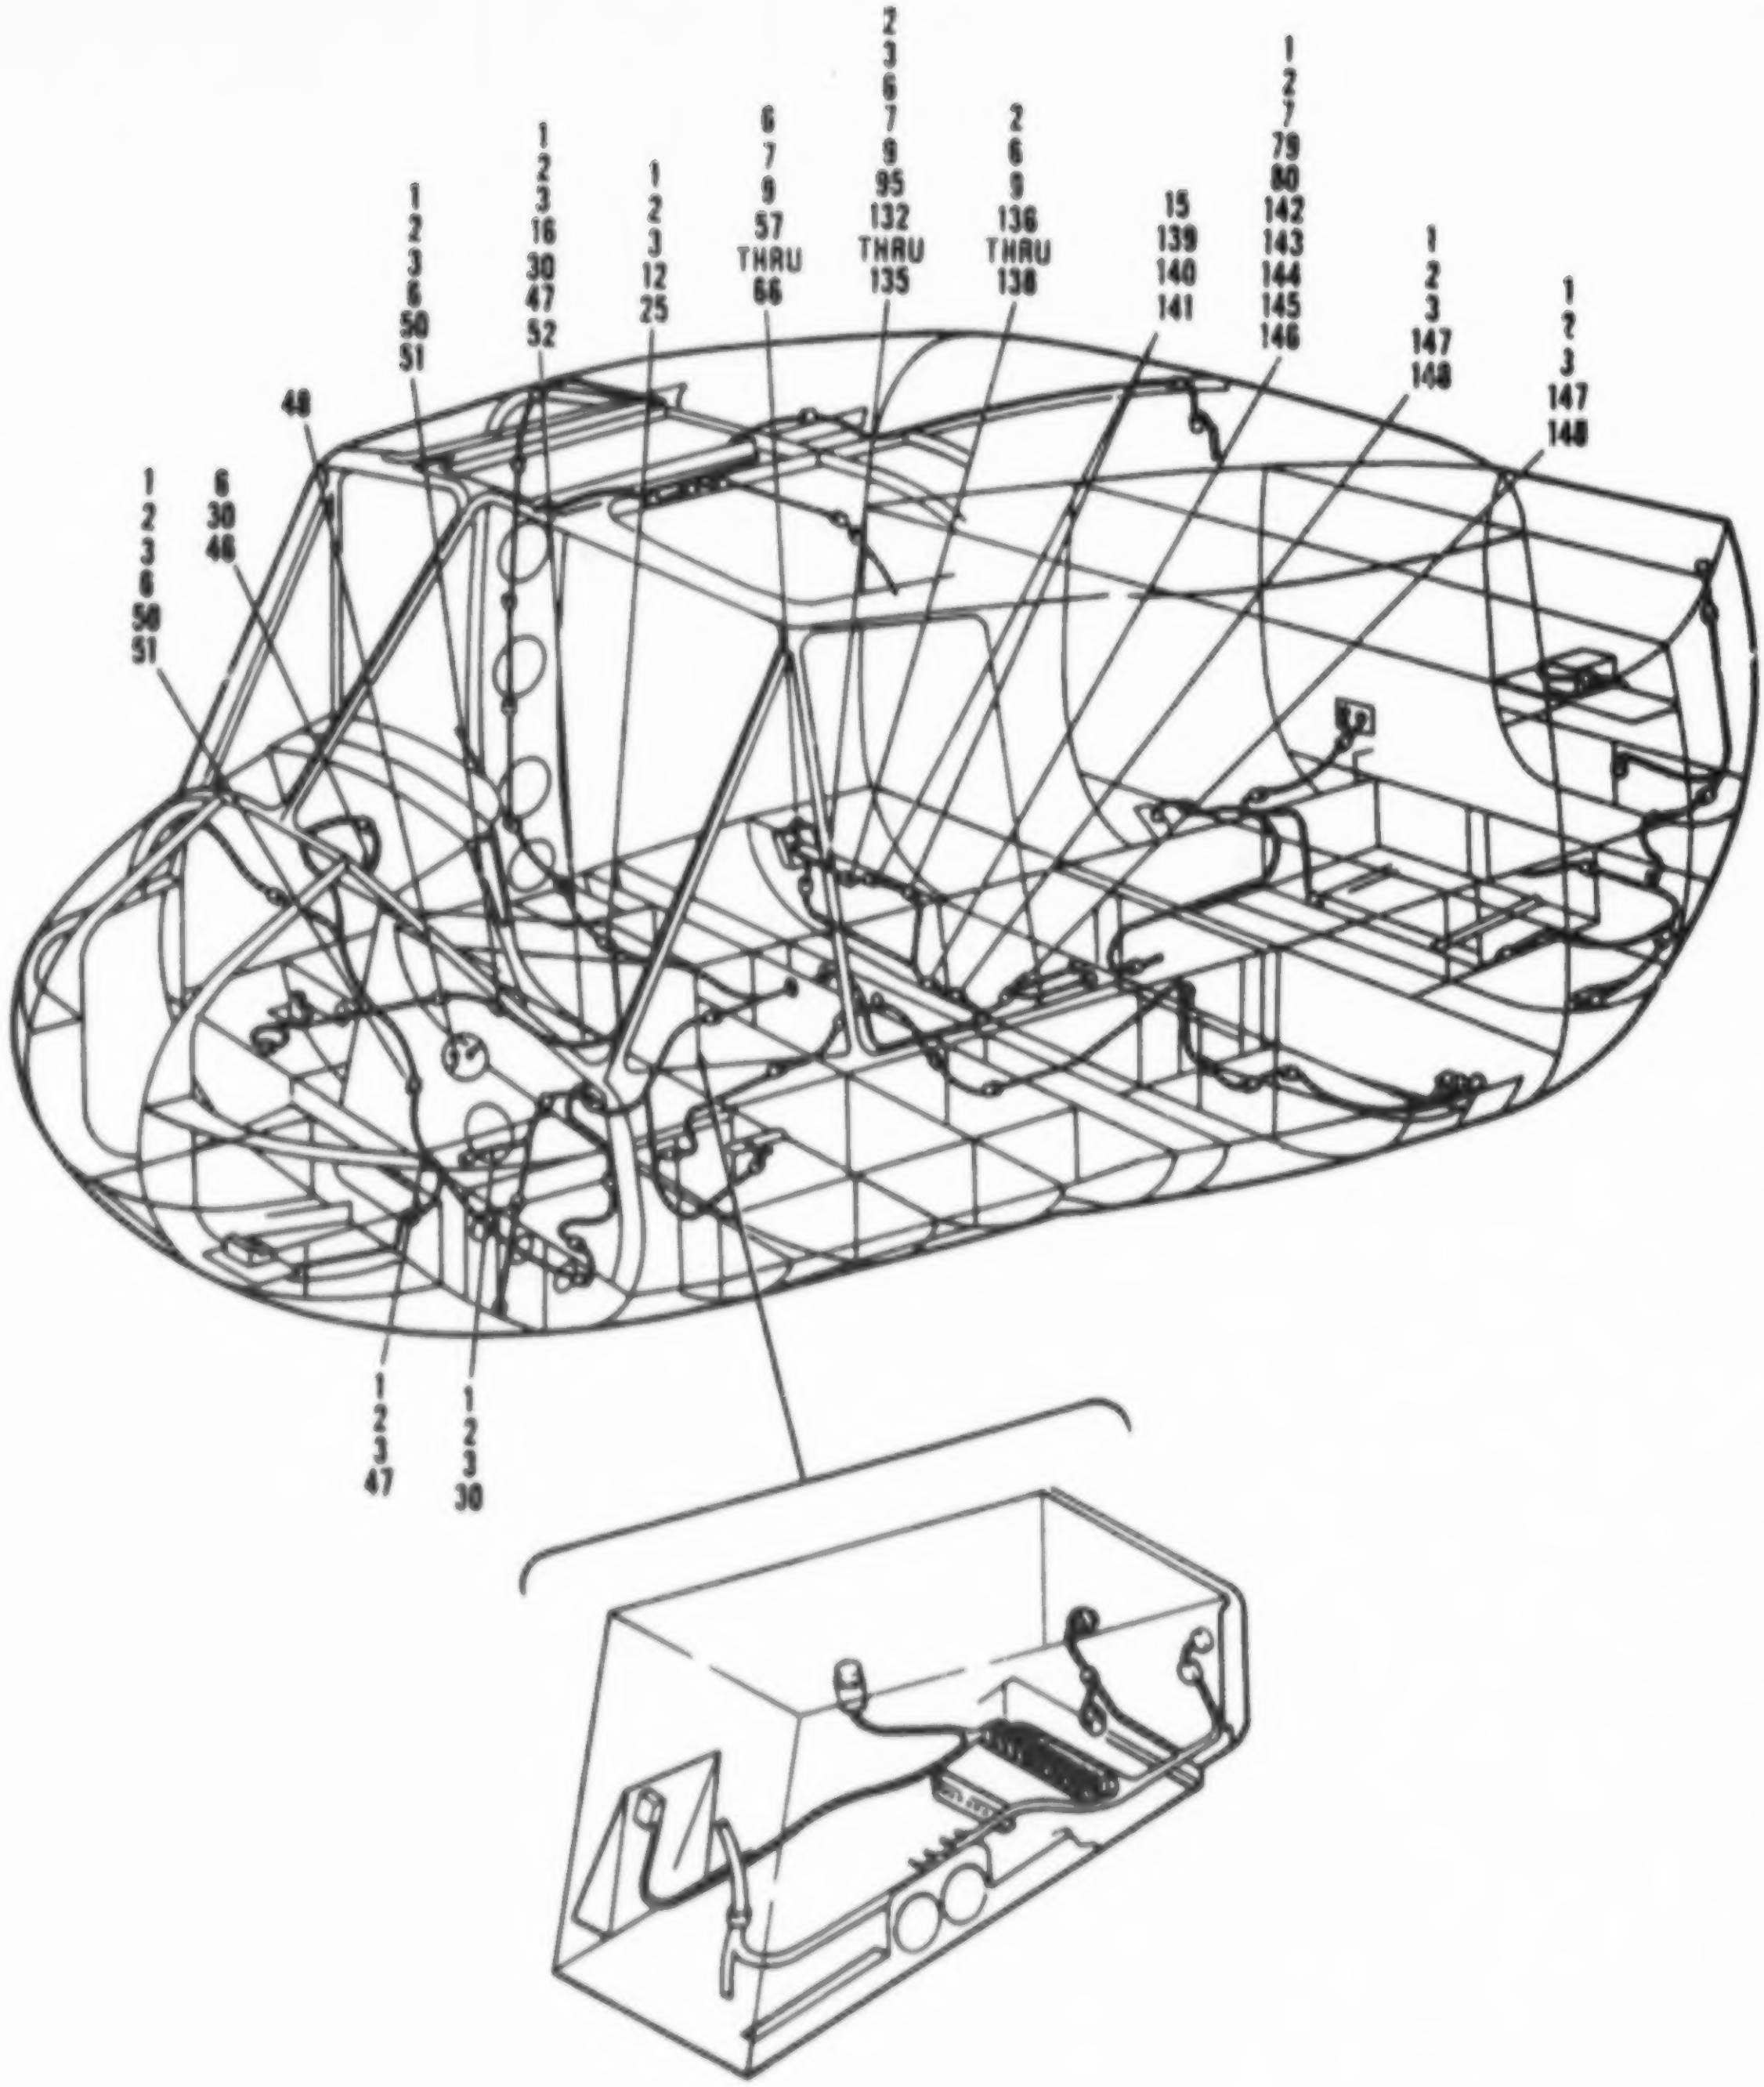
1 2 3 6 50 51
6 30 46
48
1 2 3 6 50 51
1 2 3 16 30 47 52
1 2 3 12 25
6 7 9 57 THRU 66
2 3 6 7 9 95 132 THRU 135
2 6 9 136 THRU 138
15 139 140 141
1 2 7 79 80 142 143 144 145 146
1 2 3 147 148
1 2 3 147 148
1 2 3 47
1 2 3 30

Figure 303. Armament Installation, Electrical (Sheet 2 of 3)

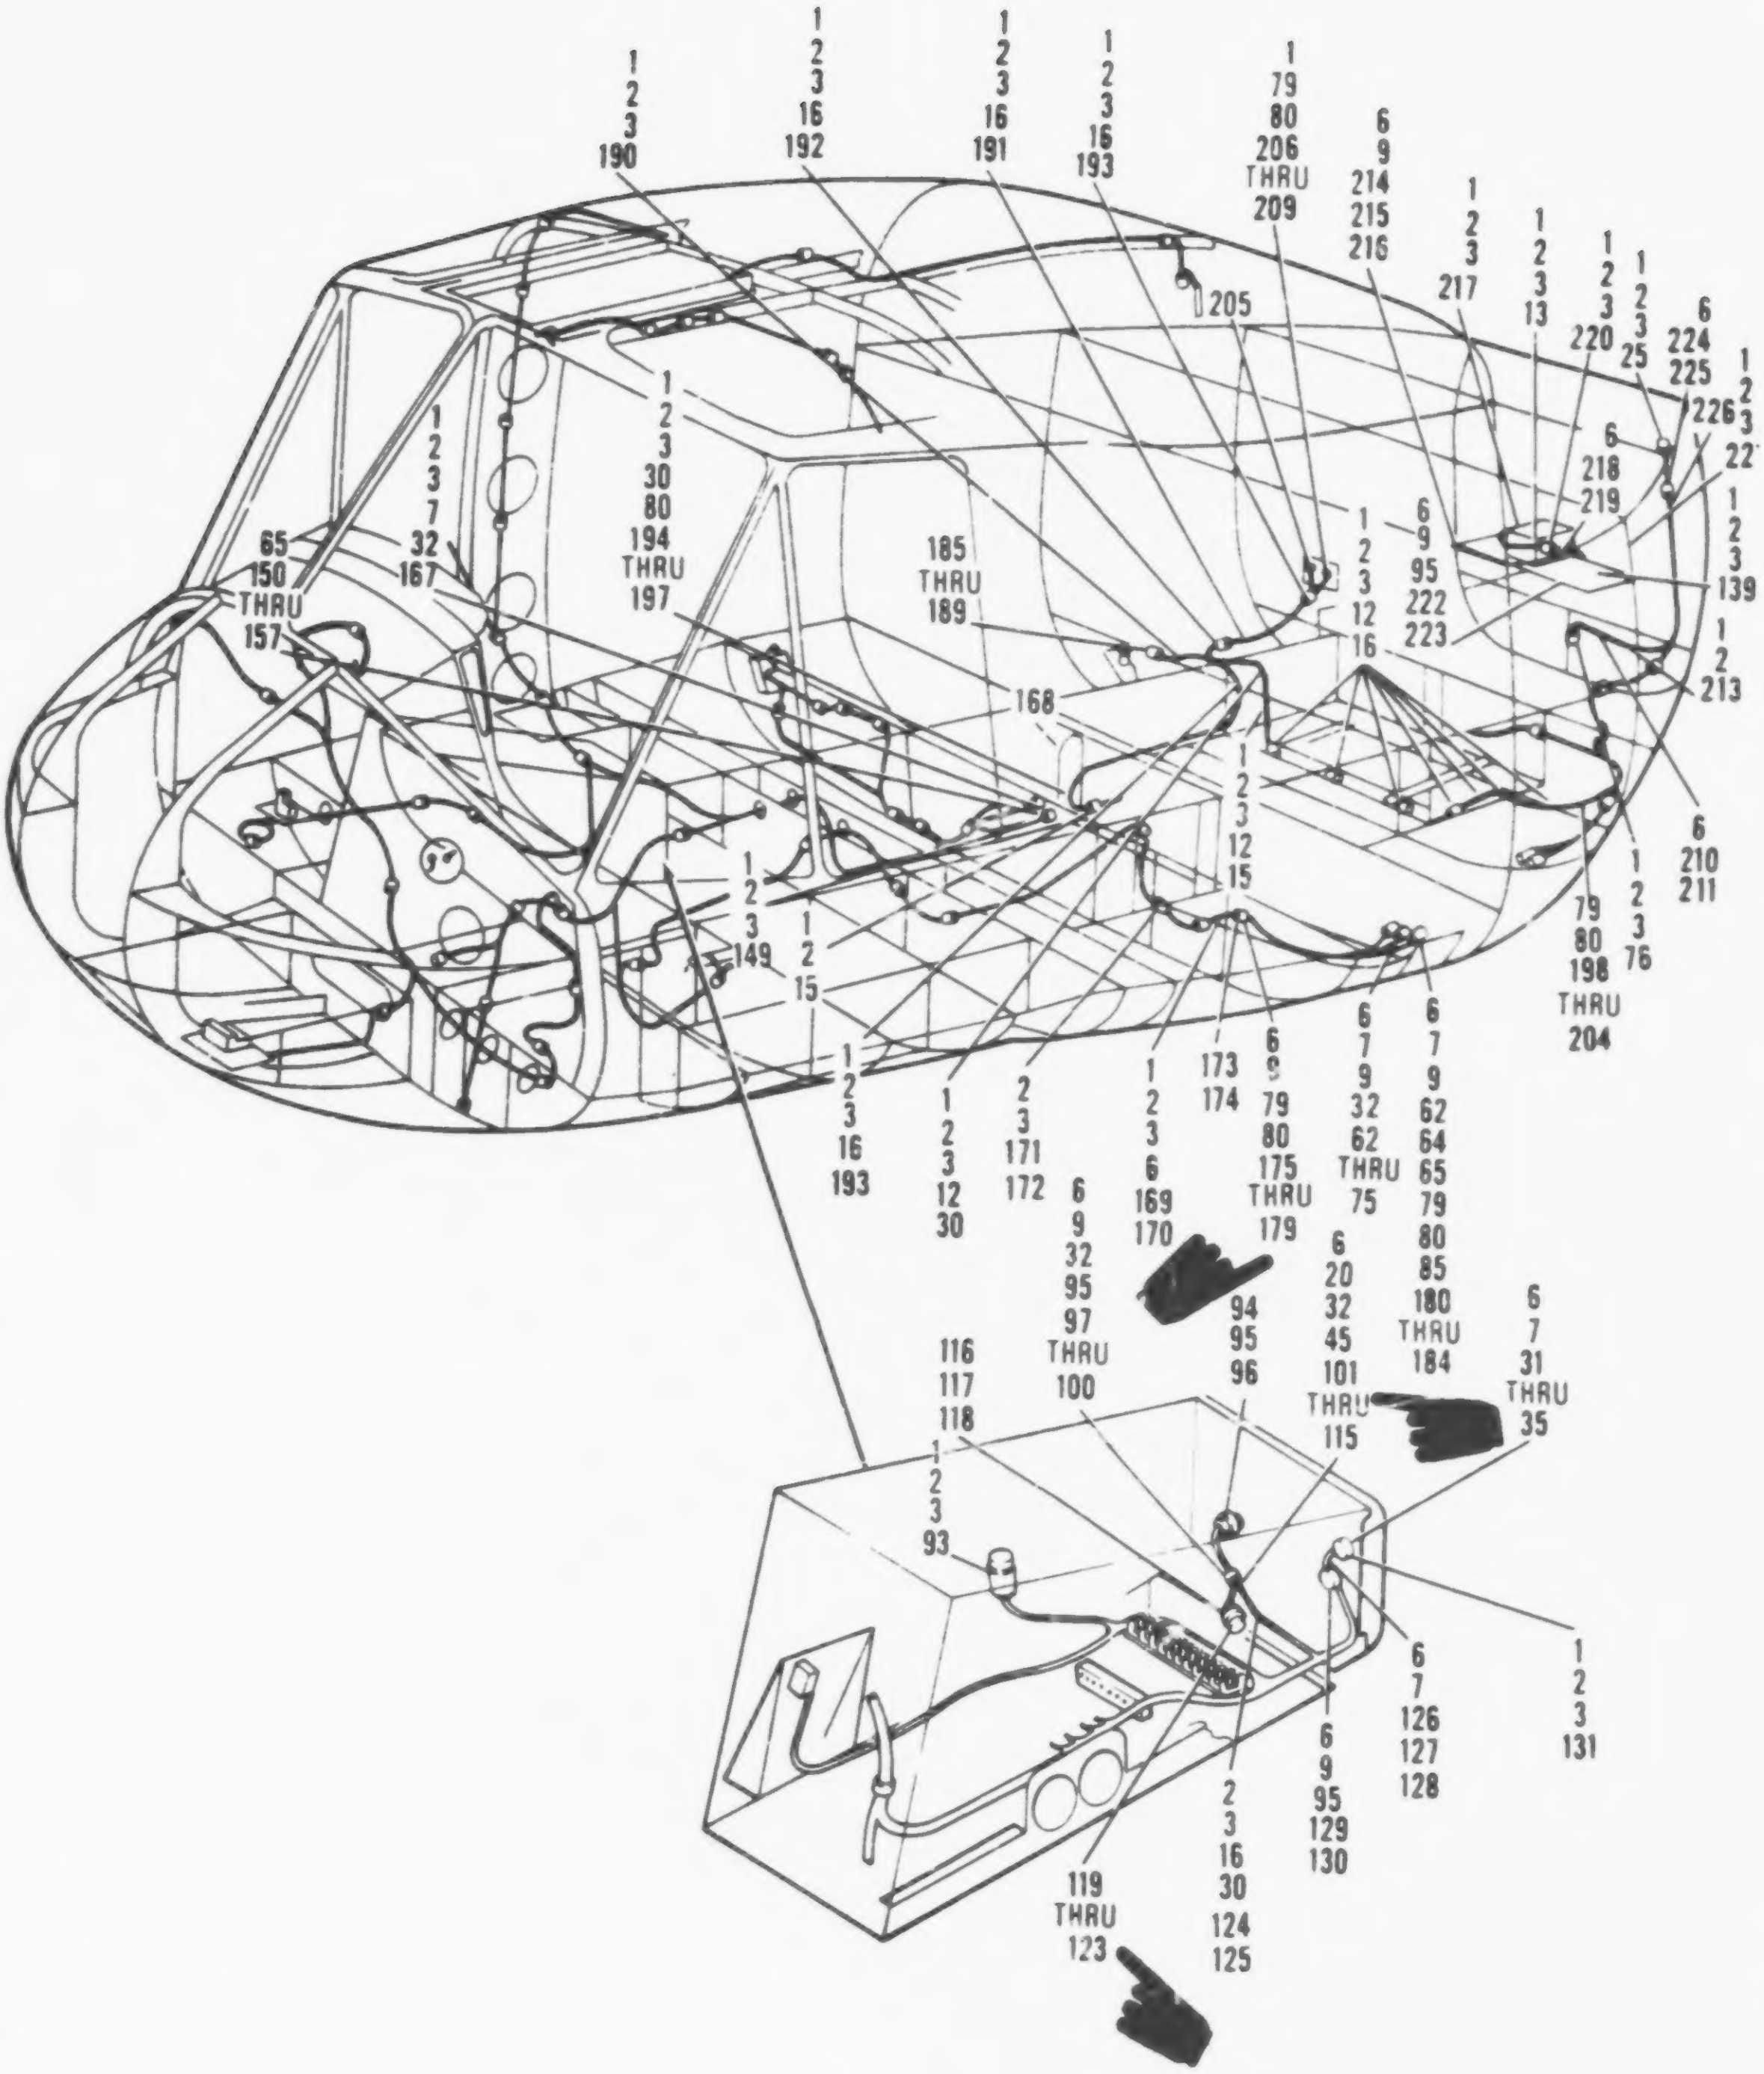
1 2 3 190
1 2 3 16 192
1 2 3 16 191
1 2 3 16 193
1 79 80 206 THRU 209
6 9 214 215 216
1 2 3 217
1 2 3 13
1 2 3 220
1 2 3 25
6 224 225 226
1 2 3 22
205
6 218 219
1 2 3 139
1 2 213
6 210 211
1 2 3 76
79 80 198 THRU 204
1 2 3 12 16
6 9 95 222 223
1 2 3 30 80 194 THRU 197
1 2 3 7 32 167
65 150 THRU 157
185 THRU 189
168
1 2 3 12 15
1 2 3 149
1 2 15
1 2 3 16 193
1 2 3 12 30
2 3 171 172
1 2 3 6 169 170
173 174
6 9 79 80 175 THRU 179
6 7 9 32 62 THRU 75
6 7 9 62 64 65 79 80 85 180 THRU 184
6 9 32 95 97 THRU 100
94 95 96
6 20 32 45 101 THRU 115
6 7 31 THRU 35
116 117 118
1 2 3 93
1 2 3 131
6 7 126 127 128
6 9 95 129 130
2 3 16 30 124 125
119 THRU 123

Figure 303. Armament Installation, Electrical (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 09 ELECTRICAL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
303		XCFZZ		97499	204-075-045-3	ARMAMENT INSTL ELECTRICAL USBL EFF (UH-1B) 64-13902 THRU 64-14100,(UH-1C) 64-14101 THRU 64-14191 .... UHB,UHC,UHM	EA	1
03		XCFZZ		97499	204-075-045-5	ARMAMENT INSTL ELECTRICAL USBL EFF 65-9416 THRU 66-601 .... UHC,UHM	EA	1
		XCFZZ		97499	204-075-085-1	ARMAMENT INSTL ELECTRICAL USBL EFF 66-602 & SUBSEQUENT .... UHC,UHM	EA	1
303	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHB,UHC,UHM	EA	V
303	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	V
303	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHB,UHC,UHM	EA	V
303	4	AOOOZ	6150-00-016-0141	97499	204-075-939-5	.CABLE ASSY,POWER .... UHB,UHC,UHM	EA	1
303	5	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
303	6	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG .... UHB,UHC,UHM	EA	V
303	7	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG .... UHB,UHC,UHM	EA	V
303	8	AOOOZ	1560-00-987-5262	97499	204-075-911-7	.CABLE ASSEMBLY U/O PN 204-075-045-3 .... UHB,UHC,UHM	EA	1
303	9	PAOZZ	5940-01-007-7875	81349	M7928/3-2	..SPLICE,CONDUCTOR .... UHB,UHC,UHM	EA	5
303	10	PBOZZ	5935-00-726-7101	96906	MS3124E14-19S	.CABLE ASSY,POWER .... UHB,UHC,UHM	EA	1
303	11	AOOOZ	6150-00-955-9480	97499	204-075-911-9	.CABLE ASSY,POWER U/O PN 204-075-045-5, 204-075-085-1 .... UHC,UHM	EA	1
303	12	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP .... UHB,UHC,UHM	EA	V
303	13	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP .... UHB,UHC,UHM	EA	V
303	14	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC .... UHB,UHC,UHM	EA	2
303	15	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP U/O PN 204-075-911-7 .... UHB,UHC,UHM	EA	1
3	16	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHB,UHC,UHM	EA	V
	22	AOOOZ	6150-00-016-0162	97499	204-075-953-5	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5,204-075-085-1 .... UHB,UHC,UHM	EA	1
303	23	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
303	24	PAOZZ	5325-00-276-6087	96906	MS35489-8	.GROMMET,NONMETALLIC .... UHB,UHC,UHM	EA	1
303	25	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
303	26	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHB,UHC,UHM	EA	1
303	27	AOOOZ	6150-00-955-9436	97499	204-175-434-11	.CABLE ASSY,POWER U/O PN 204-075-045-5, 204-075-085-1 .... UHC,UHM	EA	1
303	28	XDOZZ		77820	PT06E8-2S	..CONNECTOR,PLUG,ELEC .... UHC,UHM	EA	1
303	30	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
303	31	AOOOZ	6150-00-016-0137	97499	204-075-932-5	.LEAD ASSY .... UHB,UHC,UHM	EA	1
303	32	PAOZZ	5940-00-557-1629	96906	MS25036-149	..TERMINAL,LUG .... UHB,UHC,UHM	EA	1
303	33	PAOZZ	5935-00-820-0555	96906	MS3106R14S5S	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
303	34	PAOZZ	5935-00-846-8665	96906	MS3108R14S7S	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
303	35	PAOZZ	5935-00-280-2195	96906	MS3057-6A	..CLAMP,CABLE TO CONNECTOR .... UHB,UHC,UHM	EA	1
303	36	PAOZZ	5945-00-681-9716	96906	MS24568D1	.RELAY,ELECTROMAGNET .... UHB,UHC,UHM	EA	1
303	37	PAOZZ	5305-00-989-4864	96906	MS35207-265	.SCREW,MACHINE .... UHB,UHC,UHM	EA	4
303	38	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT .... UHB,UHC,UHM	EA	4
303	39	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHB,UHC,UHM	EA	4
	40	AOOOZ	6150-00-016-0154	97499	204-075-937-11	.CABLE ASSY,POWER U/O PN 204-075-045-5 .... UHB,UHC,UHM	EA	1
3	41	PAOZZ	5935-00-898-7284	96906	MS3121F12-10S	..CONNECTOR,PLUG,ELEC .... UHB,UHC,UHM	EA	1
303	42	PAOZZ	5305-00-588-2342	03538	N80P16018C6	.SCREW,MACHINE .... UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
303	43	PAOZZ	5365-00-684-5980	80205	NAS43D03-39	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
303	44	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
303	45	PAOZZ	5340-00-993-6247	81996	EAB700011	.CLAMP,LOOP	UHB,UHC,UHM	EA	
303	46	AOOOZ	6150-00-016-0159	97499	204-075-936-9	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	
303	47	PAOZZ	5305-00-993-1848	96906	MS35207-266	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
303	48	PAOZZ	5365-00-808-2527	80205	NAS43D03-40	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
303	50	AOOOZ	6150-00-016-0144	97499	204-075-939-13	.CABLE ASSY,POWER	UHB,UHC,UHM	EA	1
303	51	PAOZZ	5999-00-818-1603	81312	100-1018P	..CONTACT,SOCKET	UHB,UHC,UHM	EA	1
303	52	PAOZZ	5365-00-808-2527	80205	NAS43D03-40	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
303	57	AOOOZ	6150-00-016-0161	97499	204-075-953-3	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	58	PAOZZ	5935-00-608-4561	96906	MS3100R28-21S	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
303	59	PAOZZ	5999-00-259-3143	77820	10-40556	..CONTACT,SOCKET	UHB,UHC,UHM	EA	1
303	60	PAOZZ	5999-00-805-5620	09922	CYW10	..CAP,INSULATING	UHB,UHC,UHM	EA	1
303	61	XDOZZ		77820	80-190028-21SW	.CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
303	62	PAOZZ	5305-00-282-2712	88044	AN503-6-8	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
303	63	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE	UHB,UHC,UHM	EA	3
303	64	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT	UHB,UHC,UHM	EA	4
303	65	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	4
303	66	XDOZZ		96906	MS25043-28C	.COVER,ELECTRICAL	UHB,UHC,UHM	EA	1
303	70	AOOOZ	6150-00-016-0147	97499	204-075-953-1	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	71	PAOZZ	5935-00-608-4561	96906	MS3100R28-21S	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
303	72	PAOZZ	5999-00-259-3143	77820	10-40556	..CONTACT,ELECTRICAL	UHB,UHC,UHM	EA	
303	73	PAOZZ	5999-00-805-5620	09922	CYW10	..CAP,INSULATING	UHB,UHC,UHM	EA	1
303	74	XDOZZ		77820	80-190028-21S	.CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
303	75	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE	UHB,UHC,UHM	EA	3
303	76	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP,LOOP	UHB,UHC,UHM	EA	2
303	77	MOOZZ	5940-00-132-2765	96906	MS27212-1-16	.TERMINAL BOARD	UHB,UHC,UHM	EA	1
303	78	PBOZZ	5305-00-889-2997	96906	MS35206-216	.SCREW,MACHINE	UHB,UHC,UHM	EA	3
303	79	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT	UHB,UHC,UHM	EA	3
303	80	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB,UHC,UHM	EA	3
303	81	MFOZZ		96906	MS18029-1S15	.COVER,TERMINAL BOAR	UHB,UHC,UHM	EA	1
303	82	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHB,UHC,UHM	EA	15
303	83	XBOZZ	5970-00-926-2544	96906	MS25227-1A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	2
303	84	PAOZZ	5970-00-963-6321	96906	MS25227-2A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	1
303	85	PAOZZ	6150-00-600-6268	96906	MS25226-2-2	.BUS,CONDUCTOR	UHB,UHC,UHM	EA	1
303	86	PAOZZ	5340-00-989-4572	81996	EAB700016	.CLAMP,LOOP	UHB,UHC,UHM	EA	5
303	87	PAOZZ	5305-00-958-4348	96906	MS35207-217	.SCREW,MACHINE	UHB,UHC,UHM	EA	6
303	88	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE	UHB,UHC,UHM	EA	3
303	89	AOOOZ	6150-00-016-0150	97499	204-075-937-3	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	90	PBOZZ	5935-00-731-0139	96906	MS3126F12-10S	..CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	
303	91	PAOZZ	5935-00-762-1496	96906	MS3116F12-10S	..CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	
303	93	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP,LOOP	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
303	94	AOOOZ	6150-00-955-9450	97499	204-175-434-5	.CABLE ASSY,POWER U/O PN 204-075-045-5, 204-075-085-1 UHC,UHM	EA	1
303	95	PAOZZ	5940-01-007-7876	81349	M7928/3-3	..SPLICE,CONDUCTOR UHC,UHM	EA	1
303	96	PAOZZ	5935-00-784-5982	96906	MS3124E16-26P	..CONNECTOR,RECEPT UHC,UHM	EA	1
303	97	AOOOZ	6150-00-955-9422	97499	204-175-434-9	.CABLE ASSY,POWER U/O PN 204-075-045-5, 204-075-085-1 UHC,UHM	EA	1
303	98	PBOZZ	5935-00-122-8554	96906	MS3121E18-32P	..CONNECTOR,PLUG,ELEC UHC,UHM	EA	1
303	99	PAOZZ	5935-00-902-2363	96906	MS3126E16-26S	..CONNECTOR,PLUG,ELEC UHC,UHM	EA	1
303	100	PAOZZ	5940-00-812-2903	09922	YE1620	..FERRULE,ELECTRICAL UHC,UHM	EA	2
303	101	AOOOZ	6150-00-955-9451	97499	204-075-912-15	.CABLE ASSY,POWER U/O PN 204-075-045-5, 204-075-085-1 UHC,UHM	EA	1
303	102	PAOZZ	5940-00-283-5280	96906	MS25036-106	..TERMINAL,LUG UHC,UHM	EA	1
303	103	PAOZZ	5940-00-143-5284	96906	MS25036-115	..TERMINAL,LUG UHC,UHM	EA	1
303	104	PAOZZ	5935-00-807-0050	96906	MS3106R20-8S	..CONNECTOR,PLUG,ELEC UHC,UHM	EA	1
303	105	PBOZZ	5935-00-988-4317	96906	MS3126E20-41S	..CONNECTOR,PLUG,ELEC UHC,UHM	EA	1
303	106	MFOZZ		97499	85T4-3-1	..INSULATION TUBE UHC,UHM	EA	1
303	107	MFOZZ	DELETED	97499	85T4-8-1	..TUBE UHC,UHM	EA	4
303	108	PAOZZ	5940-00-812-2903	09922	YE1620	..FERRULE,ELECTRIC UHC,UHM	EA	2
303	109	PBOZZ	6145-00-284-0657	96906	MS2519088	..WIRE,ELECTRICAL UHC,UHM	FT	V
303	110	PBOZZ	6145-00-578-6605	96906	MS25190B16	..WIRE,ELECTRICAL UHC,UHM	FT	V
303	111	PBOZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL UHC,UHM	FT	V
303	112	AOOOZ	1560-00-987-5264	97499	204-075-912-3	.CABLE ASSEMBLY U/O PN 204-075-045-3 UHB,UHC,UHM	EA	1
303	113	PAOZZ	5940-00-143-5284	96906	MS25036-115	..TERMINAL,LUG UHB,UHC,UHM	EA	1
303	114	PAOZZ	5935-00-807-0050	96906	MS3106R20-8S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	115	PBOZZ	5935-00-988-4317	96906	MS3126E20-41S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	116	AOOOZ	1560-00-987-5204	97499	204-075-926-5	.CABLE ASSEMBLY UHB,UHC,UHM	EA	1
303	117	PBOZZ	5935-00-988-3542	96906	MS3126E14-19S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	118	PAOZZ	5999-00-818-1603	81312	100-1018P	..CONTACT,SOCKET UHB,UHC,UHM	EA	1
303	119	AOOOZ	6150-00-016-0140	97499	204-075-938-7	.CABLE ASSY,POWER UHB,UHC,UHM	EA	1
303	120	XDOZZ	5935-00-988-3540	96906	MS3126E18-32S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	121	PAOZZ	5999-00-818-1603	81312	100-1018P	..CONTACT,SOCKET UHB,UHC,UHM	EA	1
303	122	PAOZZ	5940-00-772-3509	09922	CYW16	..CABLE NIPPLE,ELEC UHB,UHC,UHM	EA	1
303	123	MFOZZ	DELETED	97499	85T4-500-6	..INSULATION SLEEVING UHB,UHC,UHM	EA	1
303	124	PAOZZ	5306-00-993-1851	96906	MS35207-267	.SCREW,MACHINE UHB,UHC,UHM	EA	1
303	125	PAOZZ	5365-00-294-0680	80205	NAS43D03-48	.SPACER,SLEEVE UHB,UHC,UHM	EA	1
303	126	AOOOZ	6150-00-016-0139	97499	204-075-933-7	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5 UHB,UHC,UHM	EA	1
303	127	XDOZZ	5935-00-765-5985	96906	MS3126E14-5S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	128	PAOZZ	5999-00-259-3143	77820	10-40556	..CONTACT,ELECTRICAL UHB,UHC,UHM	EA	1
303	129	AOOOZ	6150-00-016-0138	97499	204-075-936-3	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5 UHB,UHC,UHM	EA	1
303	130	PAOZZ	5935-00-677-2684	77820	PT06SE16-23SSR	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	131	PAOZZ	5340-00-993-6247	81996	EAB700D11	.CLAMP,LOOP UHB,UHC,UHM	EA	1
303	132	AOOOZ	1560-00-987-5261	97499	204-075-911-5	.CABLE ASSEMBLY UHB,UHC,UHM	EA	1
303	133	PBOZZ	5935-00-766-8049	96906	MS3120E20-39S	..CONNECTOR,RECEPTACL UHB,UHC,UHM	EA	1
303	134	PAOZZ	5310-00-576-5752	96906	MS35333-39	.WASHER,LOCK UHB,UHC,UHM	EA	3

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
303	135	PAOZZ	5310-00-905-8434	96906	MS21083B3	NUT,SELF-LOCKING, HEXAGON	UHB,UHC,UHM	EA	3
303	136	AOOOZ	6150-00-016-0156	97499	204-075-936-1	CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	137	PAOZZ	5935-00-724-4150	96906	MS3116P14-15S	CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
303	138	PAOZZ	5999-00-661-0416	96906	MS25274-2	INSULATION,SPLICE	UHB,UHC,UHM	EA	3
303	139	PAOZZ	5340-00-993-1470	81996	EAB700018	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
303	140	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
303	141	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE	UHB,UHC,UHM	EA	2
303	142	PAOZZ	5340-00-993-1470	81996	EAB700018	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
303	143	PAOZZ	5305-00-958-4348	96906	MS35207-217	.SCREW,MACHINE	UHB,UHC,UHM	EA	2
303	144	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE	UHB,UHC,UHM	EA	1
303	145	PAOZZ	5305-00-958-4348	96906	MS35207-217	.SCREW,MACHINE	UHB,UHC,UHM	EA	2
303	146	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE	UHB,UHC,UHM	EA	1
303	147	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
303	148	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
303	149	PAOZZ	5340-00-533-3515	81996	EAB700-8	.CLAMP,LOOP	UHB,UHC,UHM	EA	3
303	150	MOOZZ	5940-00-251-0275	96906	MS27212-1-18	.TERMINAL,BLOCK	UHB,UHC,UHM	EA	2
303	151	PAOZZ	5970-00-963-6321	96906	MS25227-2A	.INSULATOR,PLATE	UHB,UHC,UHM	EA	6
303	152	PAOZZ	6150-00-600-6258	96906	MS25226-2-2	.BUS,CONDUCTOR	UHB,UHC,UHM	EA	2
303	153	XDOZZ		96906	MS25226-2-3	.BUS,CONDUCTOR	UHB,UHC,UHM	EA	1
303	154	XDOZZ		96906	MS25226-2-5	.LINK,TERMINAL CO	UHB,UHC,UHM	EA	1
303	155	PAOZZ	5305-00-889-3116	96906	MS35206-213	.SCREW,MACHINE	UHB,UHC,UHM	EA	6
303	156	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHB,UHC,UHM	EA	36
303	157	MOOZZ	5940-00-229-8830	96906	MS18029-1S18	.COVER,TERMINAL BOARD	UHC,UHM	EA	2
303	158	AOOOO		97499	110-054E102JR	.RESISTOR ASSEMBLY U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	159	PAOZZ	5905-00-104-8348	81349	RCR20G332JS	..RESISTOR,FIXED,COMP	UHB,UHC,UHM	EA	1
303	160	PAOZZ	5940-00-703-9241	96906	MS17143-5	..TERMINAL,LUG	UHB,UHC,UHM	EA	1
303	161	AOOOO		97499	110-054E471JR	.RESISTOR ASSEMBLY U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	162	MOOZZ		97499	130-005-7C4	..TUBING,INSULATION	UHB,UHC,UHM	EA	1
303	163	PAOZZ	5905-00-111-4858	81349	RCR20G471JS	..RESISTOR,FIXED,COMP	UHB,UHC,UHM	EA	1
303	163A	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG	UHB,UHC,UHM	EA	2
303	164	AOOOO		97499	110-054E103JR	.RESISTOR ASSEMBLY U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	165	PAOZZ	5905-00-141-0591	81349	RCR20G103JS	..RESISTOR,FIXED,COMP	UHB,UHC,UHM	EA	1
303	165A	MOOZZ		97499	130-005-7C4	..TUBING,INSULATION	UHB,UHC,UHM	EA	2
303	165B	PAOZZ	5940-00-204-8966	96906	MS25036-102	..TERMINAL,LUG	UHB,UHC,UHM	EA	2
303	166	PAOZZ	5999-00-805-5620	09922	CYW10	.CAP,ELECTRICAL	UHB,UHC,UHM	EA	V
303	167	AOOOZ	6150-00-016-0148	97499	204-075-936-13	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	168	PAOZZ	5325-00-174-9334	88044	AN931-12-26	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	1
303	169	AOOOZ	6150-00-016-0149	97499	204-075-937-1	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1
303	170	PBOZZ	5935-00-913-4893	96906	MS3120F20-39S	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
303	171	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
303	172	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
303	173	AOOOZ	6150-00-016-0142	97499	204-075-938-9	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
303	174	PBOZZ	5935-00-728-7793	96906	MS3126E22-55P	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	175	AOOOZ	6150-00-016-0157	97499	204-075-936-5	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5 UHB,UHC,UHM	EA	1
303	176	MFOZZ	DELETED	97499	85T4-10-1	..NIPPLE,TUBE UHB,UHC,UHM	EA	1
303	177	PAOZZ	5999-00-806-5620	09922	CYW10	..CAP,ELECTRICAL UHB,UHC,UHM	EA	1
303	178	XDOZZ		96906	MS3110F22-55S	..CONNECTOR,RECEPT UHB,UHC,UHM	EA	1
303	179	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE UHB,UHC,UHM	EA	8
303	180	AOOOZ	1560-00-987-5263	97499	204-075-912-1	.CABLE ASSEMBLY UHB,UHC,UHM	EA	1
303	181	PBOZZ	5935-00-766-8049	96906	MS3120E20-39S	..CONNECTOR,RECEPTACL UHB,UHC,UHM	EA	1
303	182	PAOZZ	5305-00-889-3000	96906	MS35206-230	.SCREW,MACHINE UHB,UHC,UHM	EA	3
303	183	PAOZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE UHB,UHC,UHM	EA	1
303	184	PBOZZ	5305-00-889-2997	96906	MS35206-215	.SCREW,MACHINE UHB,UHC,UHM	EA	3
303	185	AOOOZ	6150-00-016-0145	97499	204-075-947-1	.CABLE ASSY,POWER UHB,UHC,UHM	EA	1
303	186	PBOZZ	5935-00-765-6392	96906	MS3120E22-55S	..CONNECTOR,RECEPTACL UHB,UHC,UHM	EA	1
303	187	PAOZZ	5999-00-818-1603	81312	100-1018P	..CONTACT,SOCKET UHB,UHC,UHM	EA	1
303	188	PAOZZ	5999-00-806-5620	09922	CYW10	..CAP,INSULATING UHB,UHC,UHM	EA	1
303	189	PAOZZ	5940-00-772-3509	09922	CYW16	..CABLE NIPPLE,ELEC UHB,UHC,UHM	EA	1
303	190	PAOZZ	5340-00-151-6000	96906	MS21122-10	.CLAMP,LOOP UHB,UHC,UHM	EA	2
303	191	PAOZZ	5340-01-061-2297	96906	MS21122-19	.CLAMP,LOOP UHB,UHC,UHM	EA	1
303	192	PAOZZ	5340-00-256-7342	96906	MS21122-14	.CLAMP,LOOP UHB,UHC,UHM	EA	1
303	193	PAOZZ	5340-00-993-6249	81996	EAB700020	.CLAMP,LOOP UHB,UHC,UHM	EA	1
303	194	PAOZZ	5305-00-958-4348	96906	MS35207-217	.SCREW,MACHINE UHB,UHC,UHM	EA	4
303	195	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE UHB,UHC,UHM	EA	2
303	196	MFOZZ	1560-00-073-6596	97499	20-032-1	.BRACKET,ENGINE UHB,UHC,UHM	EA	1
303	197	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE UHB,UHC,UHM	EA	2
303	198	AOOOZ	6150-00-016-0145	97499	204-075-948-1	.CABLE ASSY,POWER UHB,UHC,UHM	EA	1
303	199	PBOZZ	5935-00-765-6392	96906	MS3120E22-55S	..CONNECTOR,RECEPTACL UHB,UHC,UHM	EA	1
303	200	PAOZZ	5999-00-818-1603	81312	100-1018P	..CONTACT,SOCKET UHB,UHC,UHM	EA	1
303	201	PAOZZ	5999-00-806-5620	09922	CYW10	..CAP,INSULATING UHB,UHC,UHM	EA	1
303	202	PAOZZ	5940-00-772-3509	09922	CYW16	..CABLE NIPPLE,ELEC UHB,UHC,UHM	EA	1
303	203	XDOZZ		88044	AN500A4-8	.SCREW,MACHINE UHB,UHC,UHM	EA	1
303	204	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE UHB,UHC,UHM	EA	3
303	205	PAOZZ	5935-00-960-6888	10400	MK66SRA7	.CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	206	XDOZZ		10400	MK66SRB7	.CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	207	PAOZZ	5305-00-889-3116	96906	MS35206-213	.SCREW,MACHINE UHB,UHC,UHM	EA	4
303	208	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE UHB,UHC,UHM	EA	12
303	209	PAOZZ	5999-01-063-4563	81349	MS17804-16-16	.CONTACT,ELECTRICAL UHB,UHC,UHM	EA	23
303	210	AOOOZ	6150-00-016-0158	97499	204-075-936-7	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5 UHB,UHC,UHM	EA	1
303	211	PAOZZ	5935-00-898-7284	96906	MS3121F12-10S	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	213	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP UHB,UHC,UHM	EA	1
303	214	AOOOZ	6150-00-016-0152	97499	204-075-937-7	.CABLE ASSY,POWER U/O PN 204-075-045-3 & -5 UHB,UHC,UHM	EA	1
303	215	PBOZZ	5935-00-904-6873	96906	MS3126F16-26SW	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1
303	216	PBOZZ	5935-00-903-8378	96906	MS3126F16-26SY	..CONNECTOR,PLUG,ELEC UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
303	217	XDOZZ	5340-00-989-4569	81996	EAB700D9	.CLAMP,LOOP.................................UHB,UHC,UHM	EA	1
303	218	AO000		97499	204-075-937-5	.CABLE ASSY,POWER U/O PN 204-075-046-3 & -5......UHB,UHC,UHM	EA	1
303	219	PBOZZ	5935-00-903-8496	96906	MS3126F16-26SZ	..CONNECTOR,PLUG,ELEC...........................UHB,UHC,UHM	EA	1
303	220	PAOZZ	5340-00-993-6249	81996	EAB700D20	.CLAMP,LOOP.................................UHB,UHC,UHM	EA	1
303	221	PAOZZ	5340-00-993-6249	81996	EAB700D20	.CLAMP,LOOP.................................UHB,UHC,UHM	EA	2
303	222	AOOOZ	6150-00-016-0153	97499	204-075-937-9	.CABLE ASSY,POWER U/O PN 204-075-046-3 & -5......UHB,UHC,UHM	EA	1
303	223	PAOZZ	5935-00-903-2439	96906	MS3126F14-15S	..CONNECTOR,PLUG,ELEC...........................UHB,UHC,UHM	EA	1
303	224	AOOOZ	6150-00-016-0155	97499	204-075-937-13	.CABLE ASSY,POWER U/O PN 204-075-046-3 & -5......UHB,UHC,UHM	EA	1
303	225	PBOZZ	5935-00-731-0139	96906	MS3126F12-10S	..CONNECTOR,PLUG,ELEC...........................UHB,UHC,UHM	EA	1
303	226	PAOZZ	5340-00-989-4572	81996	EAB700D15	.CLAMP,LOOP.................................UHB,UHC,UHM	EA	1

Fig 304,305,306,307,308,309,310, & 311 NOT USED

Pages 1274 through 1337 deleted.

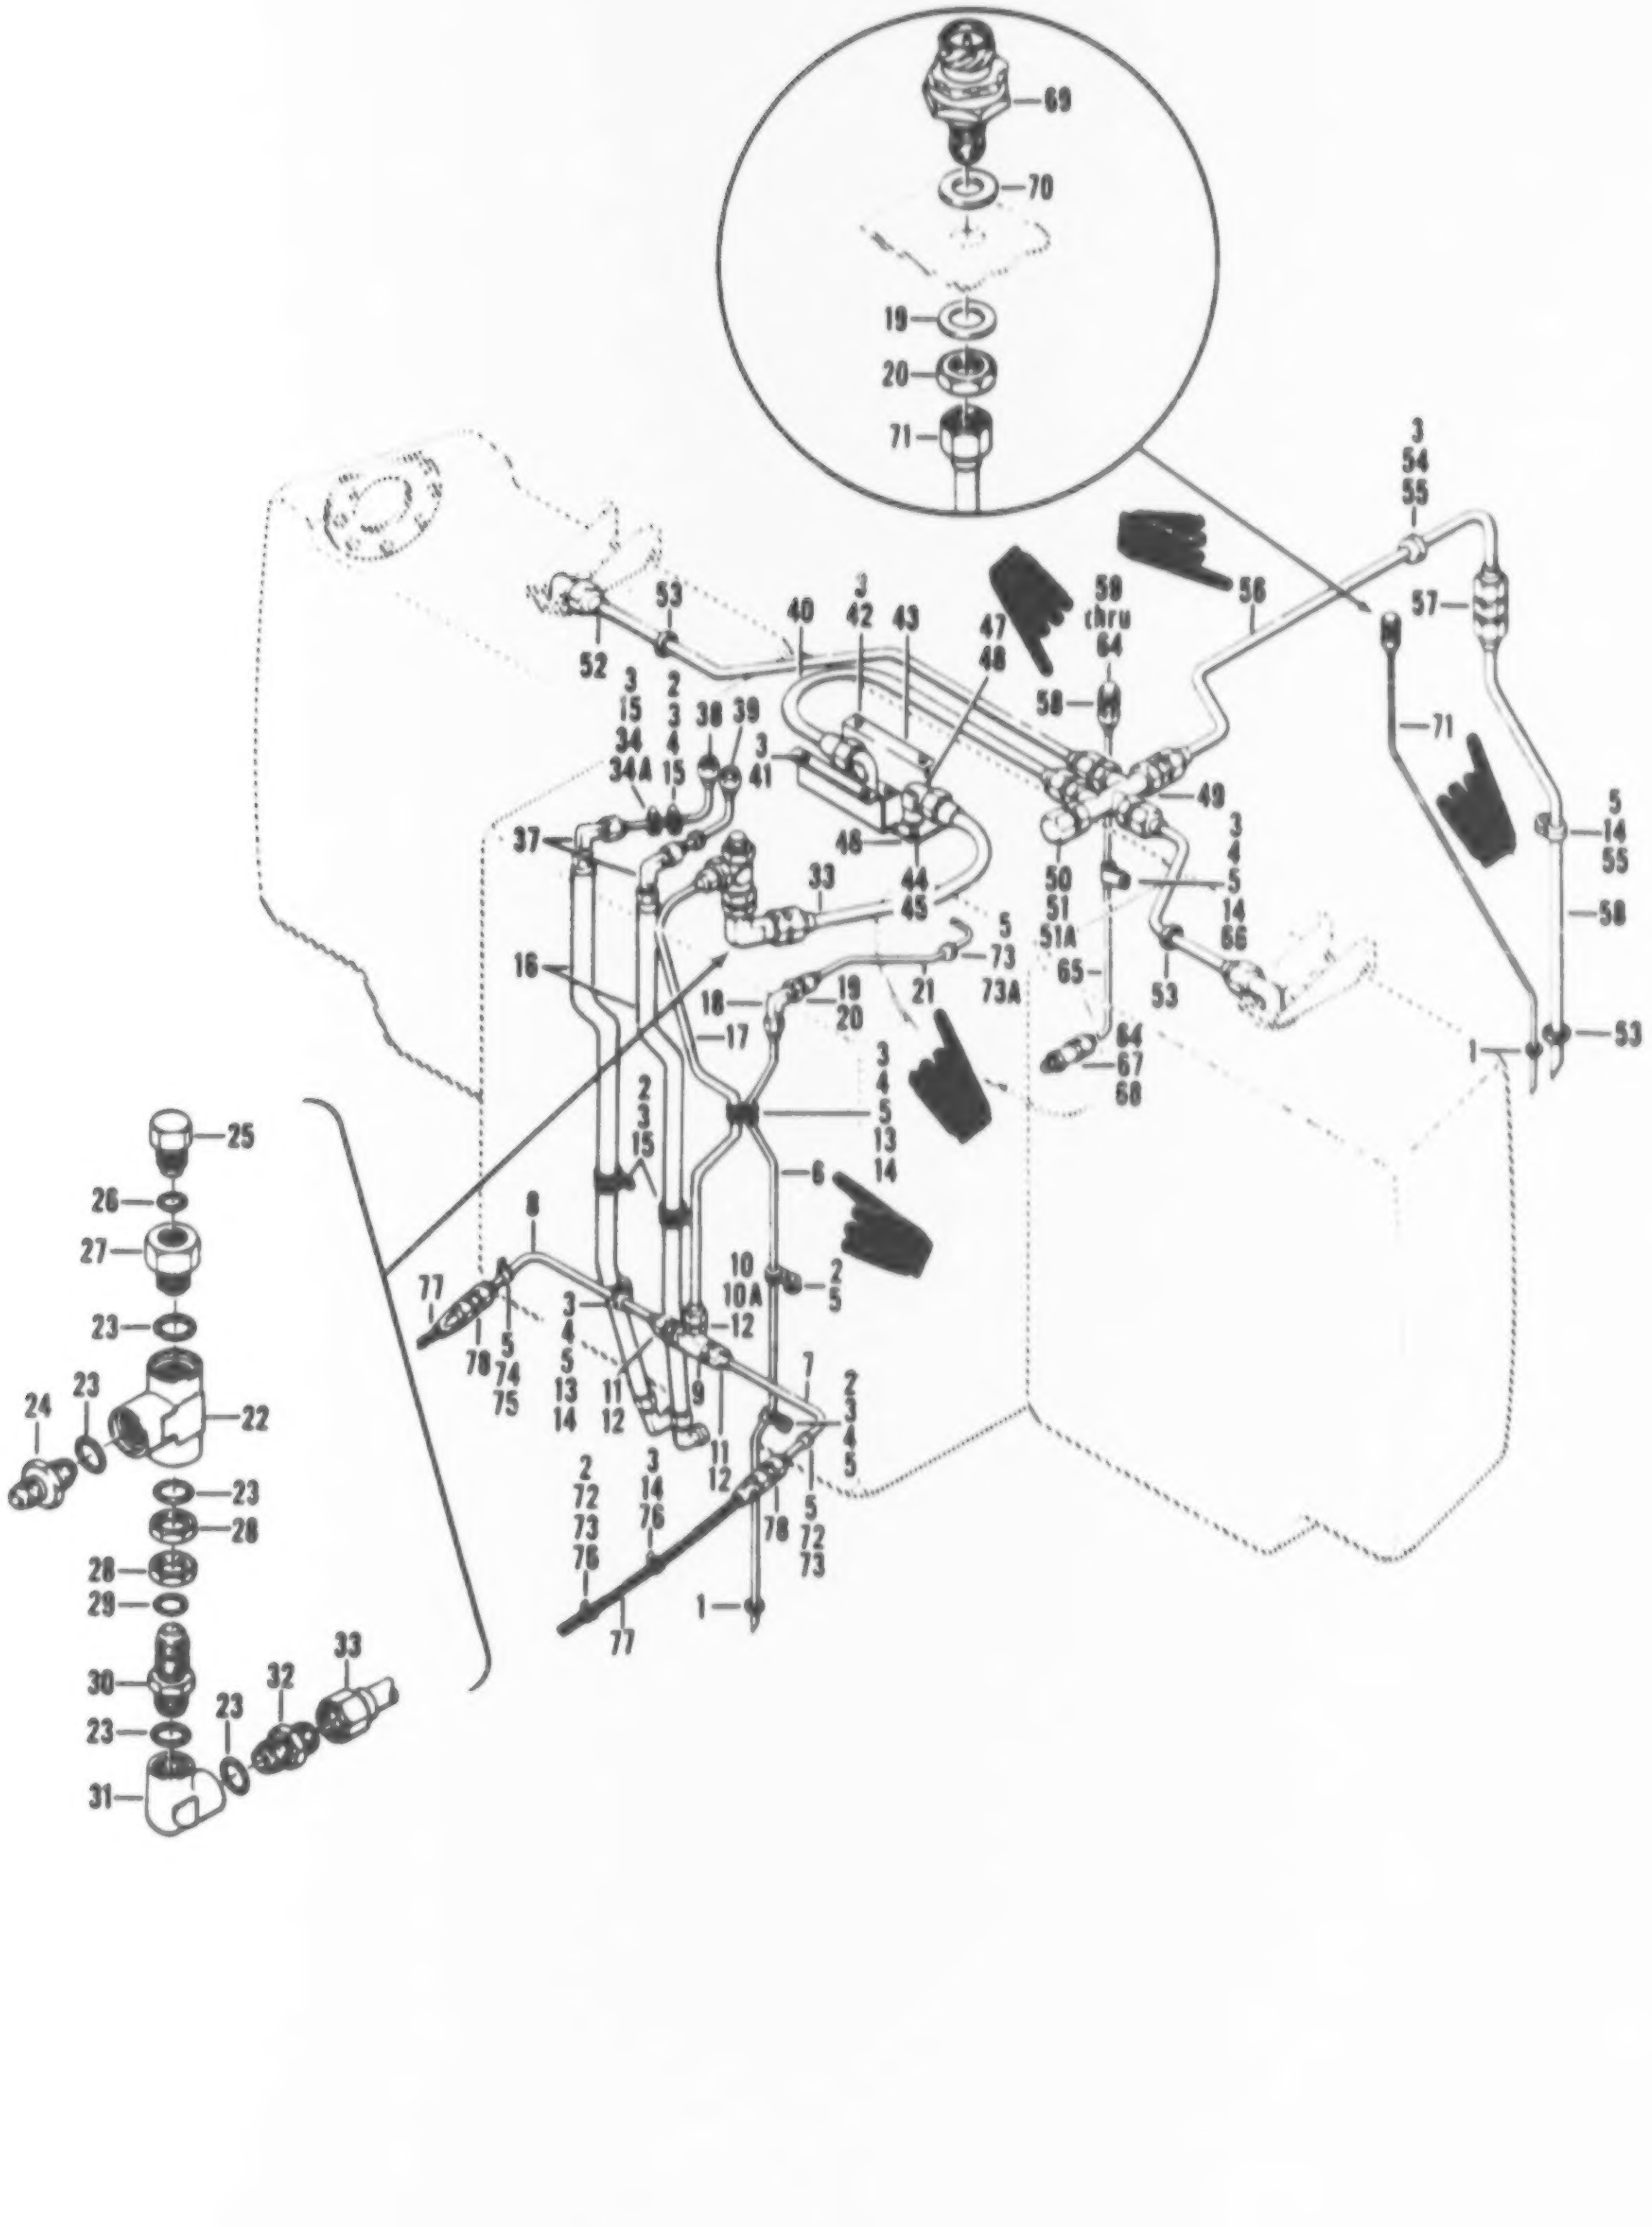
69
70
19
20
71
3
54
55
56
57
53
40
3
42
43
47
48
59
thru
64
58
52
3
15
34
34A
2
3
4
15
38
39
3
41
49
46
44
45
50
51
51A
3
4
5
14
66
5
14
55
58
37
33
5
73
73A
65
53
1
53
16
18
19
20
21
17
64
67
68
3
4
5
13
14
25
26
27
23
22
24
23
23
28
28
29
30
23
31
23
32
33
2
3
15
6
8
77
78
5
74
75
3
4
5
13
14
11
12
12
9
11
12
10
10A
2
5
7
2
3
4
5
2
72
73
76
3
14
76
78
5
72
73
1
77
71

Figure 312. Fuel System Installation, Lower Section

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS	USABLE ON CODE	(7)	(8) QTY INC IN UNIT
312		XCFZZ		97499	205-063-600-9	FUEL SYSTEM INSTL LOWER SECTION USBL EFF 72-21465 AND SUBSEQUENT SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
312	1	PAOZZ	5325-00-291-9366	96906	MS35489-11	GROMMET,NONMETALLIC	UHE,UHH,UHV,UHX	EA	2
312	2	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	6
312	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	14
312	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	5
312	5	PAOZZ	5340-00-187-5023	96906	MS21122-6	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	9
312	6	MFOZZ	DELETED	97499	205-060-690-1	TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
312	7	MFOZZ	4710-00-482-3141	97499	205-062-662-1	TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
312	8	MFOZZ	4710-00-482-3148	97499	205-062-663-1	TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
312	9	PAOZZ	4730-00-277-5055	88044	AN938D8	TEE,BOSS	UHE,UHH,UHV,UHX	EA	1
312	10	PBOZZ	4730-00-684-6915	96906	MS24392D8	NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
312	10A	PAOZZ	4730-01-034-4807	92215	VSF1015A8	SLEEVE,FLARED,TUBE	UHE,UHH,UHV,UHX	EA	1
312	11	PAOZZ	4730-00-803-7981	96906	MS24399D13	REDUCER,TUBE	UHE,UHH,UHV,UHX	EA	2
312	12	PAOZZ	5330-00-263-8031	96906	MS29512-08	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	3
312	13	PAOZZ	5340-00-993-6244	81996	E48700D10	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
312	14	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	5
312	15	PAOZZ	5340-00-514-1230	96906	MS21919WDG25	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	5
312	16	PAOZZ	4720-00-176-4612	97499	205-062-650-9	HOSE ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
312	17	MFOZZ	4720-00-246-2585	96906	MS87028H280C	HOSE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
312	18	PBOZZ	4730-00-684-6922	96906	MS24394D6	ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
312	19	PAOZZ	5310-00-187-2402	81352	AN960PD916	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
312	20	PAOZZ	5310-00-638-2605	96906	MS24400D6	NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
312	21	MFOZZ	DELETED	97499	205-061-655-1	TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
312	22	PAOZZ	4730-00-278-2786	88044	AN938D12	TEE,TUBE	UHE,UHH,UHV,UHX	EA	1
312	23	PAOZZ	5330-00-263-8033	96906	MS29512-12	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	5
312	24	PAOZZ	4730-00-684-7160	96906	MS24399D20	REDUCER,TUBE	UHE,UHH,UHV,UHX	EA	1
312	25	PAOZZ	5365-00-146-0153	88044	AN814-6D	PLUG,MACHINE THREAD	UHH,UHV,UHE,UHX	EA	1
312	26	PAOZZ	5330-00-263-8030	96906	MS29512-06	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
312	27	PAOZZ	4730-00-231-1332	88044	AN893-13D	REDUCER,BOSS	UHE,UHH,UHV,UHX	EA	1
312	28	XDOZZ	5310-00-961-1341	97499	205-060-661-1	NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
312	29	PAOZZ	5310-00-461-5609	97499	140-009E69T101	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
312	30	PAOZZ	4730-00-806-8924	96906	MS24393-12	NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
312	31	PAOZZ	4730-00-277-2461	88044	AN939D12	ELBOW,BOSS	UHE,UHH,UHV,UHX	EA	1
312	32	PAOZZ	4730-00-684-6914	96906	MS24392D12	NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
312	33	MFOZZ		96906	MS87028K146A	HOSE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
312	34	PAOZZ	5365-00-684-2093	80205	NAS43D03-16	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
312	34A	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
312	37	PAOZZ	4730-00-231-3993	88044	AN821-10	ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
312	38	PAOZZ	4720-00-176-4614	97499	205-062-650-13	HOSE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
312	39	PAOZZ	4720-00-176-4606	97499	205-062-650-11	HOSE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
312	40	XDOZZ		96906	MS87028K214A	.HOSE ASSEMBLY.......UHE,UHH,UHV,UHX	EA	1
312	41	PAOZZ	5306-00-685-3027	88044	AN3-11A	.BOLT,MACHINE.......UHE,UHH,UHV,UHX	EA	2
312	42	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE.......UHE,UHH,UHV,UHX	EA	2
312	43	PAOZZ	5340-00-181-1354	97499	205-062-691-1	.BRACKET,VENT CENTER.......UHE,UHH,UHV,UHX	EA	1
312	44	PAOZZ	5306-00-515-8064	88044	AN4-7A	.BOLT,MACHINE.......UHE,UHH,UHV,UHX	EA	6
312	45	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	6
312	46	PAOZZ	1560-00-176-1969	97499	205-062-692-1	.SUPPORT,STRUCTURAL.......UHE,UHH,UHV,UHX	EA	1
312	47	PAOZZ	4730-00-202-8828	96906	MS20762D12-16	.ELBOW,SWIVEL FLANGE.......UHE,UHH,UHV,UHX	EA	2
312	48	PBOZZ	5330-00-250-0238	96906	MS29513-216	.PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	2
312	49	PAOZZ	4730-00-249-3322	97499	205-060-663-1	.MANIFOLD,TANK VENT.......UHE,UHH,UHV,UHX	EA	1
312	50	PAOZZ	4730-00-221-2128	88044	AN929-12	.CAP,TUBE.......UHE,UHH,UHV,UHX	EA	1
312	51	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON.......UHE,UHH,UHV,UHX	EA	1
312	51A	PAOZZ	5310-00-595-6902	88044	AN960PD2116L	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	1
312	52	XDOZZ	4720-00-161-7581	96906	MS87028K292A	.HOSE ASSEMBLY.......UHE,UHH,UHV,UHX	EA	1
312	53	PAOZZ	5325-00-276-6343	96906	MS35489-23	.GROMMET,NONMETALLIC.......UHE,UHH,UHV,UHX	EA	3
312	54	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	1
312	55	PAOZZ	5340-00-989-4573	81996	EAB70016	.CLAMP,LOOP.......UHE,UHH,UHV,UHX	EA	1
312	56	MFOZZ	DELETED	97499	205-060-695-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
312	57	PAOZZ	4730-00-684-6913	96906	MS24392D16	.NIPPLE,TUBE.......UHE,UHH,UHV,UHX	EA	1
312	58	MFOZZ	DELETED	97499	205-060-696-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
312	59	PAOOO	4730-00-773-2616	00624	375201-4	.COUPLING HALF,QUICK DISCONNECT.......UHE,UHH,UHV,UHX	EA	1
312	60	PAOZZ	5330-00-248-3848	96906	MS29513-018	..PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	1
312	61	PAOZZ	5330-00-248-3837	96906	MS29513-110	..PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	1
312	62	PAOZZ	5330-00-700-4477	97499	204-060-534-5	.GASKET.......UHE,UHH,UHV,UHX	EA	1
312	63	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	1
312	64	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON.......UHE,UHH,UHV,UHX	EA	2
312	65	MFOZZ		96906	MS87028E216A	.HOSE ASSEMBLY.......UHE,UHH,UHV,UHX	EA	1
312	66	PAOZZ	5340-00-964-6826	81996	EAB70008	.CLAMP,LOOP.......UHE,UHH,UHV,UHX	EA	1
312	67	PAOZZ	4820-00-176-4621	97499	205-062-668-1	.VALVE,CHECK.......UHE,UHH,UHV,UHX	EA	1
312	68	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED.......UHE,UHH,UHV,UHX	EA	1
312	69	PAOOO	4730-00-839-0976	00624	375200-6	.COUPLING HALF,QUICK.......UHE,UHH,UHV,UHX	EA	1
312	70	PAOZZ	5330-00-678-5442	97499	204-060-534-3	.GASKET.......UHE,UHH,UHV,UHX	EA	1
312	71	MFOZZ	DELETED	97499	205-060-697-1	.TUBE ASSEMBLY,METAL.......UHE,UHH,UHV,UHX	EA	1
312	72	PAOZZ	5305-00-925-7863	96906	MS27039-1-16	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	2
312	73	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE.......UHE,UHH,UHV,UHX	EA	3
312	73A	PAOZZ	5305-00-912-7308	96906	MS27039-1-14	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	1
312	74	PAOZZ	5305-00-925-4836	96906	MS27039-1-17	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	1
312	75	PAOZZ	5365-00-585-3579	80205	NAS43D03-52	.SPACER,SLEEVE.......UHE,UHH,UHV,UHX	EA	1
312	76	XDOZZ	5340-00-989-4569	81996	EAB70009	.CLAMP,LOOP.......UHE,UHH,UHV,UHX	EA	3
312	77	MFOZZ		96906	MS8000G180C	.HOSE ASSY.......UHE,UHH,UHV,UHX	EA	2
312	78	PAOZZ	4730-00-684-6916	96906	MS24392D6	.NIPPLE,TUBE.......UHE,UHH,UHV,UHX	EA	2

Fig 313,314,315 & 316 NOT USED

best copy available

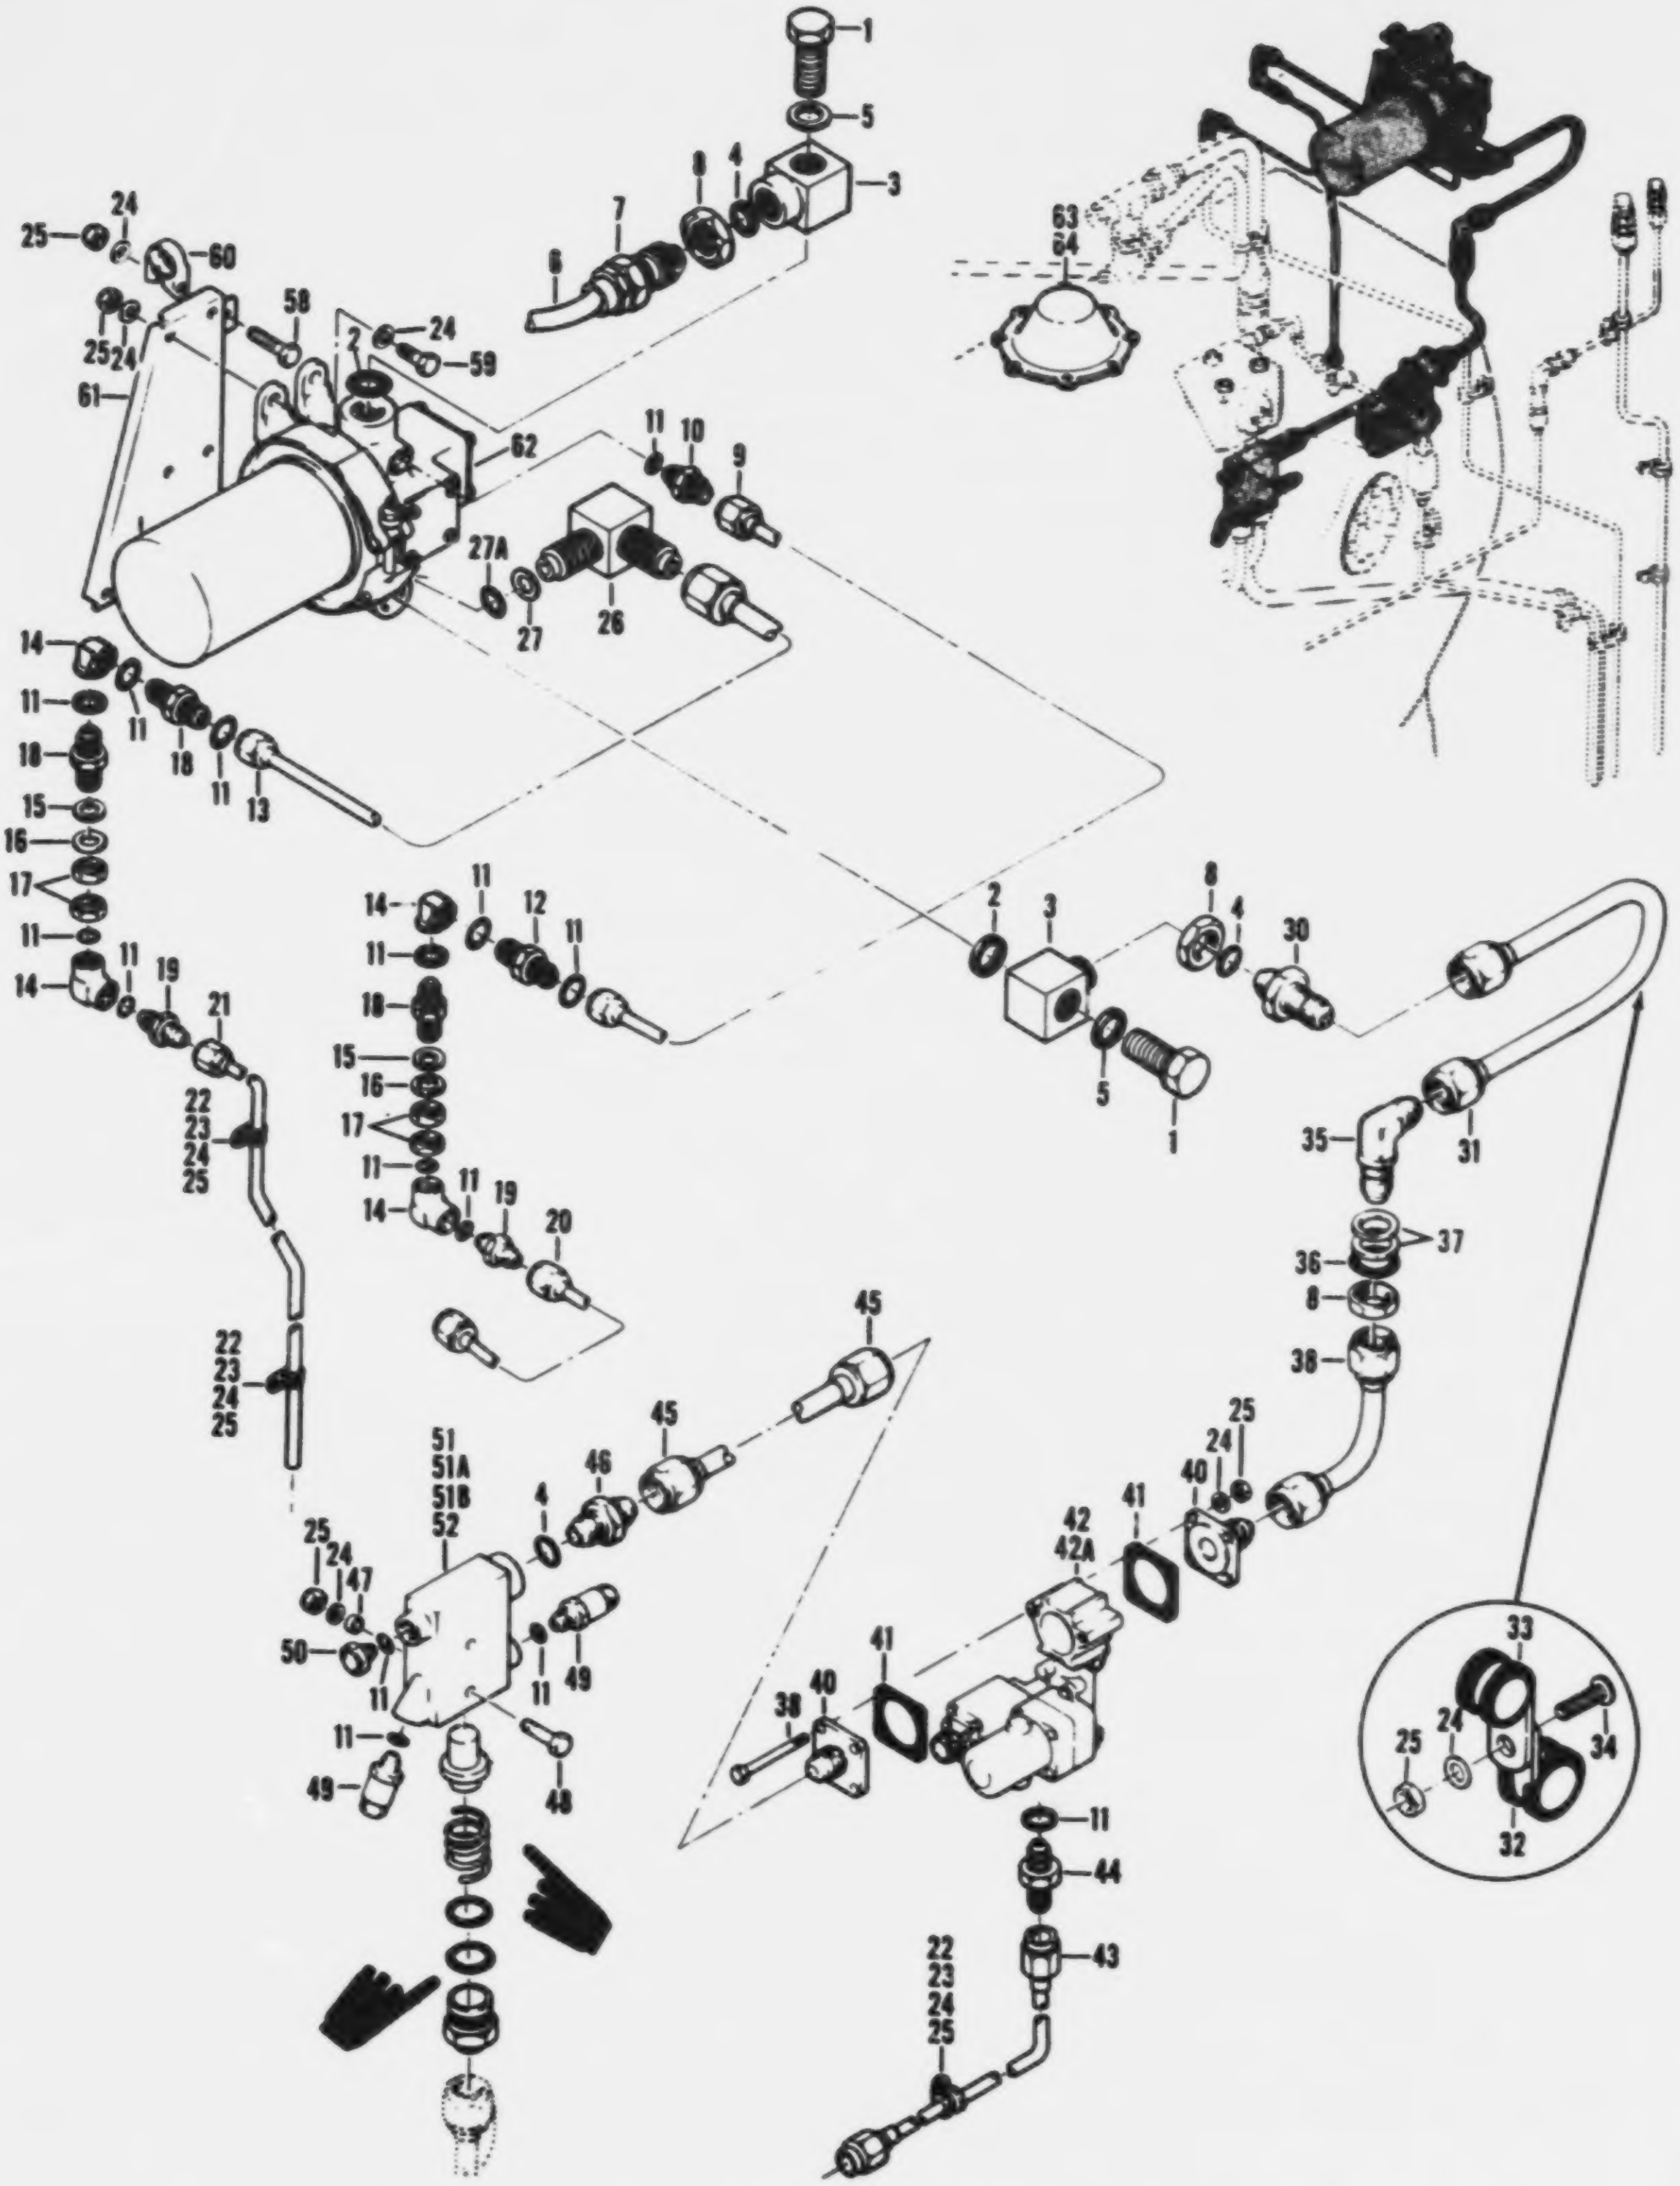
1
5
3
8
4
7
6
25
24
60
58
2
24
59
25
24
61
62
63
64
11
10
9
27A
27
26
14
11
11
18
18
11
13
15
16
17
11
14
11
19
21
22
23
24
25
14
11
12
11
11
18
15
16
17
11
14
11
19
20
2
3
8
4
30
5
1
35
31
37
36
8
38
45
22
23
24
25
51
51A
51B
52
4
46
45
25
24
40
41
42
42A
25
24
47
50
11
11
49
11
49
48
41
38
40
33
24
25
34
32
11
44
43
22
23
24
25

Figure 317. Fuel System Installation, Upper Center Section

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
317		XDFZZ	1560-00-157-5007	97499	204-704-049-1	FUEL SYSTEM,INSTL UPPER CENTER SECTION	UHC,UHM	EA	1
317	1	PAOZZ	4730-00-555-9357	80205	NAS551-100	.BOLT,FLUID PASSAGE	UHC,UHM	EA	2
317	2	PAOZZ	5330-00-182-3057	83259	250-215-10	.PACKING WITH RETAINER	UHC,UHM	EA	2
317	3	PAOZZ	1560-00-147-8939	97499	204-062-573-1	.FITTING,FUEL FILTER	UHC,UHM	EA	2
317	4	PAOZZ	5330-00-263-8032	96906	MS29512-10	.PACKING,PREFORME	UHC,UHM	EA	3
317	5	PAOZZ	5330-00-248-3847	96906	MS29513-115	.PACKING,PREFORMED	UHC,UHM	EA	2
317	6	PAOZZ	4720-00-161-7629	97499	70-032K168F132	.HOSE ASSEMBLY	UHC,UHM	EA	1
317	7	PAOZZ	4730-00-076-0561	00624	AE93532J	.COUPLING HALF,SELF- SEALING	UHC,UHM	EA	1
317	8	PBOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	3
317	9	MFOZZ		97499	70-U09F155Z194	.HOSE ASSEMBLY	UHC,UHM	EA	1
317	10	PAOZZ	4730-00-152-3774	97499	204-060-039-1	.NIPPLE,TUBE	UHC,UHM	EA	1
317	11	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED	UHC,UHM	EA	14
317	12	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE,TUBE	UHC,UHM	EA	2
317	13	MFOZZ		96906	MS87028G144C	.HOSE ASSEMBLY	UHC,UHM	EA	1
317	14	PAOZZ	4730-00-278-3682	88044	AN939D4	.ELBOW,BOSS	UHC,UHM	EA	4
317	15	PAOZZ	5330-00-700-4477	97499	204-060-534-5	.GASKET	UHC,UHM	EA	2
317	16	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT	UHC,UHM	EA	2
317	17	MFOZZ	5310-00-987-5325	97499	204-060-108-1	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	4
317	18	PAOZZ	4730-00-684-7157	96906	MS2439307	.REDUCER,TUBE	UHC,UHM	EA	2
317	19	PAOZZ	4730-00-834-9560	96906	MS24392D4	.NIPPLE,TUBE	UHC,UHM	EA	2
317	20	MFOZZ	4710-00-739-4598	97499	204-060-107-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
317	21	MFOZZ	4710-00-739-4595	97499	204-060-105-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
317	22	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHC,UHM	EA	3
317	23	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHC,UHM	EA	2
317	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHC,UHM	EA	18
317	25	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	15
317	26	PAOZZ	4820-00-181-9247	97499	209-060-656-1	.COCK,POPPET DRAIN	UHC,UHM	EA	1
317	27	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
317	27A	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED	UHC,UHM	EA	1
317	30	PAOZZ	4730-00-231-3952	96906	MS24396-10	.ELBOW,TUBE	UHC,UHM	EA	1
317	31	PAOZZ	4720-00-161-7628	97499	70-032K000G324	.HOSE ASSEMBLY	UHC,UHM	EA	1
317	32	PAOZZ	5340-00-247-6221	81996	EAB700026	.CLAMP,LOOP	UHC,UHM	EA	1
317	33	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP	UHC,UHM	EA	1
317	34	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE	UHC,UHM	EA	1
317	35	PAOZZ	4730-00-443-4737	96906	MS24393D10	.NIPPLE,TUBE	UHC,UHM	EA	1
317	36	PAOZZ	5330-00-880-5812	97499	204-060-534-17	.GASKET	UHC,UHM	EA	1
317	37	PAOZZ	5310-00-187-2393	88044	AN960PD1416L	.WASHER,FLAT	UHC,UHM	EA	2
317	38	MFOZZ		97499	204-062-662-1	.TUBE ASSEMBLY	UHC,UHM	EA	1
317	39	PAOZZ	5306-00-151-0776	88044	AN3-20A	.BOLT,MACHINE	UHC,UHM	EA	4
317	40	XDOZZ	4730-00-163-4655	97499	212-061-629-3	.ADAPTER STRAIGHT	UHC,UHM	EA	2
317	41	PAOZZ	5330-00-599-9352	88044	AN763-16	.GASKET	UHC,UHM	EA	2
317	42	PAOOO	4810-00-758-2845	97499	204-062-520-3	.VALVE,CUTOFF	UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
317	42A	PAOZZ	5330-00-250-0235	96906	MS29513-215	..PACKING,PREFORMED UHC,UHM	EA	1
317	43	MFOZZ		97499	204-062-680-1	.TUBE ASSEMBLY UHC,UHM	EA	1
317	44	PAOZZ	4730-00-720-3966	96906	MS24392-D4	.NIPPLE,TUBE UHC,UHM	EA	1
317	45	MFOZZ		97499	204-062-661-1	.TUBE ASSEMBLY UHC,UHM	EA	1
317	46	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE UHC,UHM	EA	1
317	47	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE UHC,UHM	EA	2
317	48	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE UHC,UHM	EA	2
317	49	PAOZZ	5930-00-868-8474	97499	204-062-542-3	.SWITCH,PRESSURE UHC,UHM	EA	1
317	50	PAOZZ	5365-00-837-0856	96906	MS24391D4L	.PLUG,MACHINE THREAD UHC,UHM	EA	1
317	51	PAOZZ	2915-00-003-5903	99215	42C42603	.VALVE,FUEL,MANIFOLD BREAKDOWN FOR 205-060-611-3 (42C42603) UHC,UHM	EA	1
317	51	PAOZZ	2915-00-003-5903	91816	P13-389	.VALVE,FUEL,MANIFOLD BREAKDOWN FOR 205-060-611-3 (P13-89) UHC,UHM	EA	1
317	51A	PAOZZ	5330-00-248-3844	96906	MS29513-113	..PACKING,PREFORMED U/O PN P13-389 UHC,UHM	EA	4
317	51B	PAOZZ	5330-00-263-8033	96906	MS29512-12	..PACKING,PREFORMED U/O PN P13-389 UHC,UHM	EA	2
317	52	XBOZZ		99215	C42603-1	..BODY,VALVE U/O PN 42C42603 UHC,UHM	EA	1
			DELETED					
			DELETED					
			DELETED					
			DELETED					
			DELETED					
317	58	PAOZZ	5306-00-182-2062	88044	AN3H11A	.BOLT,MACHINE UHC,UHM	EA	1
317	59	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE UHC,UHM	EA	4
317	60	PAOZZ	5340-00-593-3392	97499	45C20AAD12	.CLAMP,LOOP UHC,UHM	EA	1
317	61	PAOZZ	1560-00-795-0685	97499	204-061-659-3	.SUPPORT,FUEL FILTER UHC,UHM	EA	1
317	62	PADOO	2915-00-003-5904	97499	204-040-760-5	.FILTER,FLUID PRESSURE SEE FIG.321 FOR BREAKDOWN OF PN 204-040-760-5 (100103 & 133363) UHC,UHM	EA	1
317	63	PAOZZ	1560-00-146-6612	97499	204-062-672-1	.COVER,FUEL CELL,LH UHC,UHM	EA	1
317	64	PAOZZ	1560-00-327-2394	97499	204-062-692-1	.COVER,FUEL CELL,RH UHC,UHM	EA	1

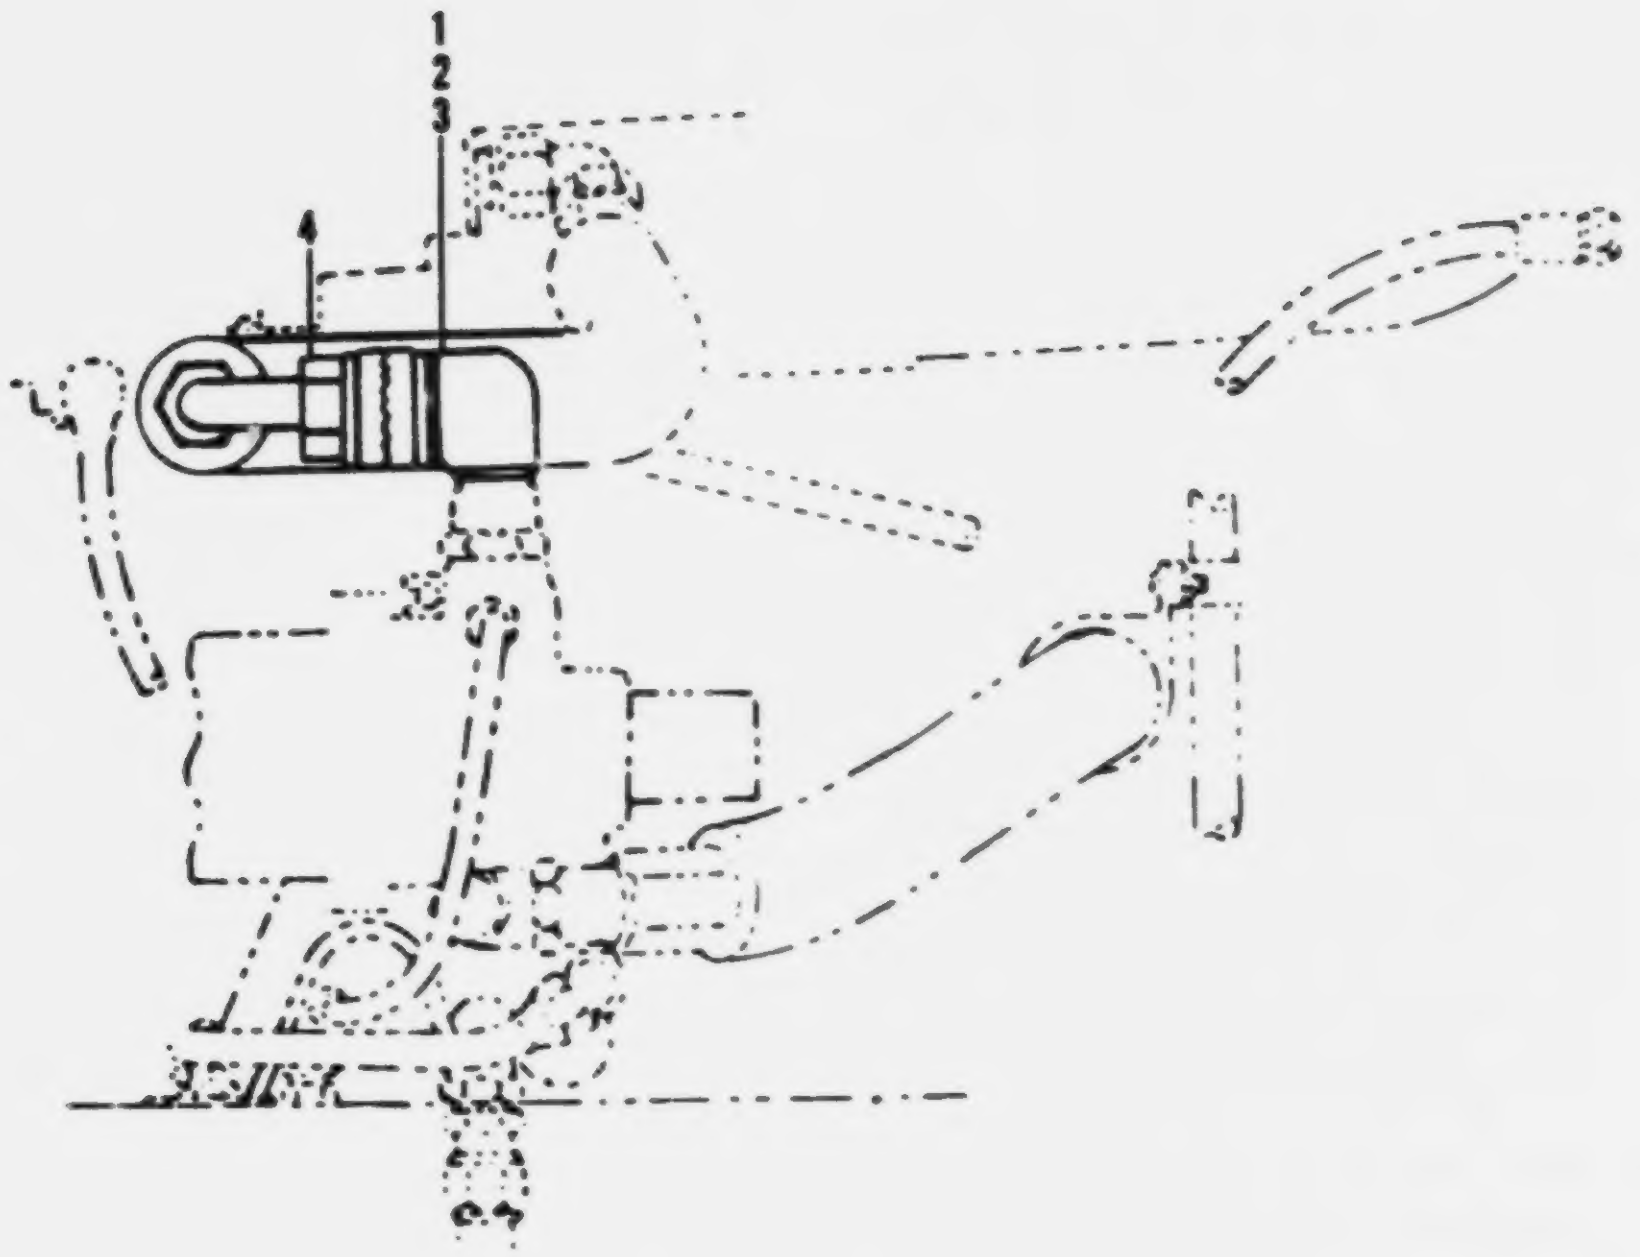

Figure 317A. Modification Kit, Fuel System

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
317A		XCFZZ	1560-01-008-2866	97499	204-704-068-1	MOD KIT, FUEL SYS USE-AFT-CMPL-W MWO 55-1500-206-30/3 SEE FIG. 125A FOR BALANCE OF BREAKDOWN.............UHB,UHC,UHM	EA	1
317A	1	PAOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON..............................UHB,UHC,UHM	EA	1
317A	2	PAOZZ	4730-01-069-1301	97499	204-063-005-1	.COUPLING,HALF..................................UHB,UHC,UHM	EA	1
317A	3	PAOZZ	5330-00-263-8032	96906	MS29512-10	.PACKING,PREFORMED..............................UHB,UHC,UHM	EA	1
317A	4	PAOZZ	4730-01-044-3191	97499	204-063-006-1	.COUPLING,HALF,QUICK............................UHB,UHC,UHM	EA	1

Fig 318 & 319 NOT USED

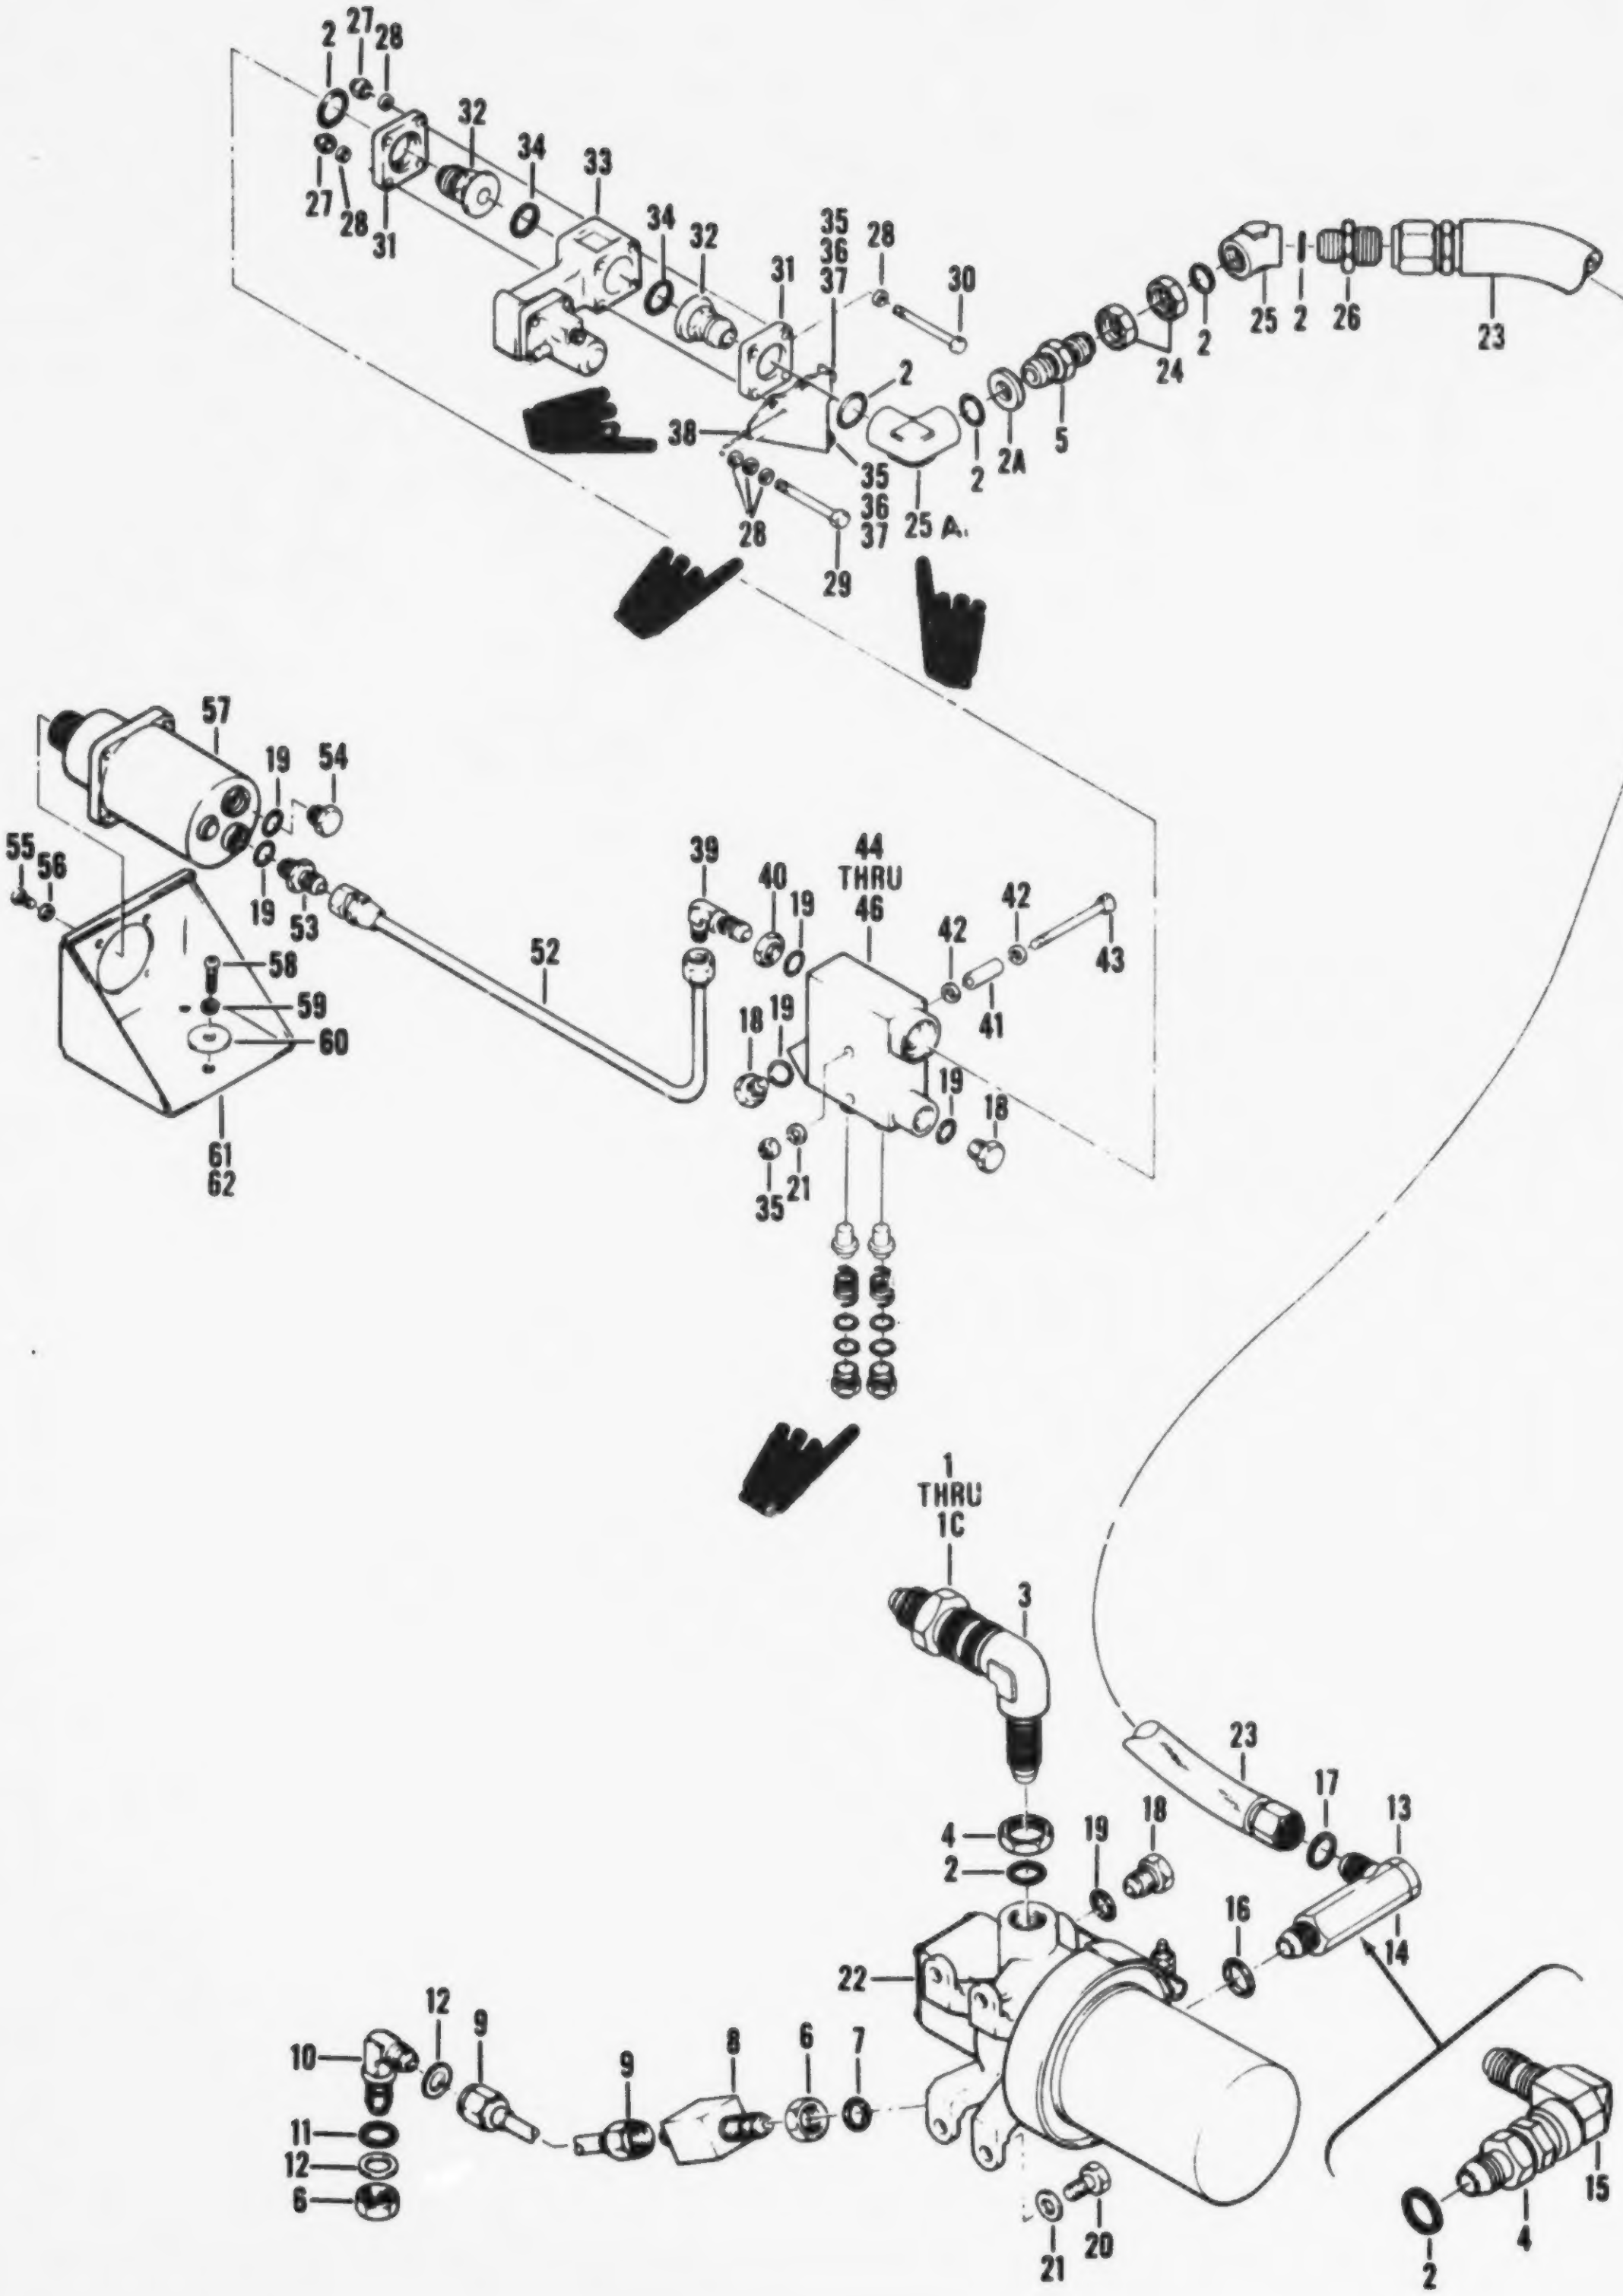
2
27
28
32
34
33
27
28
31
34
32
31
35
36
37
28
30
2
38
35
36
37
25 A
2
2A
5
24
2
25
2
26
23
28
29
57
19
54
55
56
19
53
58
59
60
61
62
52
39
40
19
44
THRU
46
42
42
43
41
18
19
19
18
35
21
1
THRU
1C
3
23
17
13
4
2
19
18
16
14
22
12
9
10
9
8
6
7
11
12
6
15
4
2
21
20

Figure 320. Fuel System Installation, Upper Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
320		XCFZZ		97499	205-063-600-9	FUEL SYSTEM INSTL UPPER SECTION USBL EFF 72-21465 AND SUBSEQUENT SEE FIG 7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
320	1	PA000	4730-00-591-0715	97499	209-060-692-1	COUPLING ASSEMBLY.......................... UHE,UHH,UHV,UHX	EA	1
320	1	PA000	4730-00-591-0715	79326	CW116-01	COUPLING ASSEMBLY.......................... UHE,UHH,UHV,UHX	EA	REF
320	1	PA000	4730-00-591-0715	00624	AE96385J	COUPLING ASSEMBLY.......................... UHE,UHH,UHV,UHX	EA	REF
320	1A	PAOZZ	5330-00-248-3848	96906	MS29513-018	PACKING,PREFORMED U/O PN CW116-01 ONLY .... UHE,UHH,UHV,UHX	EA	1
320	1A	PAOZZ		00624	AE96312J	COUPLING ASSY RELEASE U/O PN AE96385J.... UHE,UHH,UHV,UHX	EA	1
320	1B	PAOZZ	5330-00-620-2899	00624	AE15380-115	PACKING,PREFORMED U/O PN AE96312J ...... UHE,UHH,UHV,UHX	EA	1
320	1C	XAOZZ		00624	AE96054J	COUPLING ASSY U/O PN AE96385J .... UHE,UHH,UHV,UHX	EA	1
320	2	PAOZZ	5330-00-263-8032	96906	MS29512-10	PACKING,PREFORME .... UHE,UHH,UHV,UHX	EA	12
320	2A	PAOZZ	5310-00-551-8089	88044	AN960C1416L	WASHER,FLAT........ ....UHE,UHH,UHV,UHX	EA	1
320	3	PAOZZ	4730-00-277-2459	88044	AN939D10	ELBOW,BOSS.............. ..... UHE,UHH,UHV,UHX	EA	1
320	4	PAOZZ	5310-00-282-7834	88044	AN924-100	NUT,PLAIN,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
320	5	XDOZZ	4730-00-277-6437	88044	AN832-100	NIPPLE,TUBE............ ..... UHE,UHH,UHV,UHX	EA	1
320	5	PAOZZ	4730-00-443-4737	96906	MS24393D10	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	1
320	6	PAOZZ	5310-00-638-2605	96906	MS24400D6	NUT,PLAIN,HEXAGON.................. UHE,UHH,UHV,UHX	EA	2
320	7	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED................. UHE,UHH,UHV,UHX	EA	1
320	8	PAOZZ	2915-00-488-5326	91511	475C62NWPS	COCK,POPPET DRAIN .... UHE,UHH,UHV,UHX	EA	1
320	9	MFOZZ		96906	MS87028G210A	.HOSE ASSEMBLY...................... UHE,UHH,UHV,UHX	EA	1
320	10	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE........................ UHE,UHH,UHV,UHX	EA	1
320	11	PAOZZ	5330-00-678-5442	97499	204-060-534-3	.GASKET .... UHE,UHH,UHV,UHX	EA	1
320	12	PAOZZ	5310-00-187-2402	81352	AN950PD916	.WASHER,FLAT....................... UHE,UHH,UHV,UHX	EA	2
320	13	PAOZZ	4730-00-555-9357	80205	NAS551-100	.BOLT,FLUID PASSAGE................ UHE,UHH,UHV,UHX	EA	1
320	14	PAOZZ	4730-00-253-9015	80205	NAS552-100	.CONNECTOR,MULTIPLE................ UHE,UHH,UHV,UHX	EA	1
320	15	PAOZZ	4820-00-181-9226	97499	205-063-601-11	.VALVE,CHECK....................... UHE,UHH,UHV,UHX	EA	1
320	16	PAOZZ	5330-00-182-3057	83259	250-215-10	.PACKING WITH RETAIN............... UHE,UHH,UHV,UHX	EA	1
320	17	PAOZZ	5330-00-248-3847	96906	MS29513-115	.PACKING,PREFORMED................. UHE,UHH,UHV,UHX	EA	1
320	18	PAOZZ	5365-00-837-0856	96906	MS24391D4L	.PLUG,MACHINE THREAD............... UHE,UHH,UHV,UHX	EA	3
320	19	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED................. UHE,UHH,UHV,UHX	EA	6
320	20	PAOZZ	5306-00-182-2057	83044	AN3H4A	.BOLT,MACHINE...................... UHE,UHH,UHV,UHX	EA	4
320	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................... UHE,UHH,UHV,UHX	EA	8
320	22	PA000	2915-00-003-5904	97499	204-040-760-5	.FILTER,FLUID PRESSURE SEE FIG.321 FOR BREAKDOWN OF PN 204-040-760-5 (100103 & 133363)............ UHE,UHH,UHV,UHX	EA	1
320	23	PAOZZ	4720-00-090-8911	97499	205-062-650-21	.HOSE ASSEMBLY..................... UHE,UHH,UHV,UHX	EA	1
320	24	PAOZZ	5310-00-558-0929	97499	204-062-539-1	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
320	25	PAOZZ	4730-00-278-3697	88044	AN941-10	.ELBOW,BOSS........................ UHE,UHH,UHV,UHX	EA	1
320	25A	PAOZZ	4730-00-277-2459	88044	AN939-D10	ELBOW BOSS .... UHE, UHH, UHV, UHX	EA	1
320	26	PBOZZ	4730-00-805-5100	96906	MS24399D21	.REDUCER,TUBE...................... UHE,UHH,UHV,UHX	EA	1
320	27	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
320	28	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT....................... UHE,UHH,UHV,UHX	EA	12
320	29	PAOZZ	5306-00-182-2012	88044	AN3H23A	.BOLT,MACHINE............ .... UHE,UHH,UHV,UHX	EA	2
320	30	PAOZZ	5306-00-182-2010	88044	AN3H21A	.BOLT,MACHINE............ .... UHE,UHH,UHV,UHX	EA	2
320	31	PAOZZ	4730-00-289-6015	96906	MS20756D16	.FLANGE,PIPE,SWIVEL................ UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
320	32	PAOZZ	1560-00-963-1096	97499	205-060-616-1	FITTING,VALVE,FUEL	UHE,UHH,UHV,UHX	EA	2
320	33	PAOOO	2915-00-991-3255	97499	205-060-612-3	VALVE,GATE,AIRCRAFT	UHE,UHH,UHV,UHX	EA	1
320	34	PAOZZ	5330-00-250-0235	96906	MS29513-215	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
320	35	PAOZZ	5310-00-263-2862	96906	MS21045C3	NUT,SELF-LOCKING, HEXAGON	UHE,UHH,UHV,UHX	EA	5
320	36	PAOZZ	5310-00-167-0812	88044	AN960C10L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
320	37	PAOZZ	5306-00-180-2769	88044	AN3CH3A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	3
320	38	MFOZZ	DELETED	97499	205-060-919-3	BRACKET,FUEL SYSTEM	UHE,UHH,UHV,UHX	EA	1
320	39	PAOZZ	4730-00-708-2257	97499	204-060-031-1	ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
320	40	PAOZZ	5310-00-282-7823	96906	MS2440004	NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
320	41	PAOZZ	5365-00-618-6485	80205	NAS43D03-56	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
320	42	PAOZZ	5310-00-167-0801	88044	AN960C10	WASHER,FLAT	UHH,UHV	EA	4
320	43	PAOZZ	5306-00-182-2013	88044	AN3H24A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
320	44	PAOZZ	2915-00-003-5903	91816	P13-389	VALVE,FUEL,MANIFOLD BREAKDOWN FOR 205-060-611-3 (P13-389)	UHE,UHH,UHV,UHX	EA	1
320	44	PAOZZ	2915-00-003-5903	99215	42C42603	VALVE,FUEL,MANIFOLD BREAKDOWN FOR 205-060-611-3 (42C42603)	UHE,UHH,UHX	EA	1
320	45	PAOZZ	5330-00-263-8033	96906	MS29512-12	PACKING,PREFORMED U/O PN P13-389	UHH	EA	2
320	45A	PAOZZ	5330-00-248-3844	96906	MS29513-113	PACKING,PREFORMED U/O PN P13-389	UHH	EA	4
320	46	XBFZZ		99215	C42603-1	BODY,VALVE U/O PN 42C42603	UHE,UHH,UHV,UHX	EA	1
			DELETED						
			DELETED						
			DELETED						
			DELETED						
			DELETED						
320	52	MFOZZ		96906	MS87028E123A	HOSE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
320	53	PAOZZ	4730-00-834-9560	96906	MS2439204	NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	2
320	54	PAOZZ	1560-00-716-8554	97499	100-016-1	PLUG,VENTILLATION	UHE,UHH,UHV,UHX	EA	1
320	55	PAOZZ	5305-00-889-3001	96906	MS35206-231	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
320	56	PAOZZ	5310-00-187-2398	88044	AN960PD6L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
320	57	PAOZZ	6620-00-553-8988	96906	MS28005-1	TRANSMITTER,PRESSUR	UHE,UHH,UHV,UHX	EA	1
320	58	PAOZZ	5305-00-984-6195	96906	MS35206-247	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
320	59	PAOZZ	5310-00-167-0889	88044	AN8013D1	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
320	60	PAOZZ	5310-00-184-9002	88044	AN960PD5L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
320	61	PAOOO	1560-00-226-1779	97499	204-060-671-3	BRACKET,PRESSURE	UHE,UHH,UHV,UHX	EA	1
320	62	PAOZZ	5340-00-134-3521	76005	100PLN1088-1	MOUNT,RESILIENT	UHE,UHH,UHV,UHX	EA	3

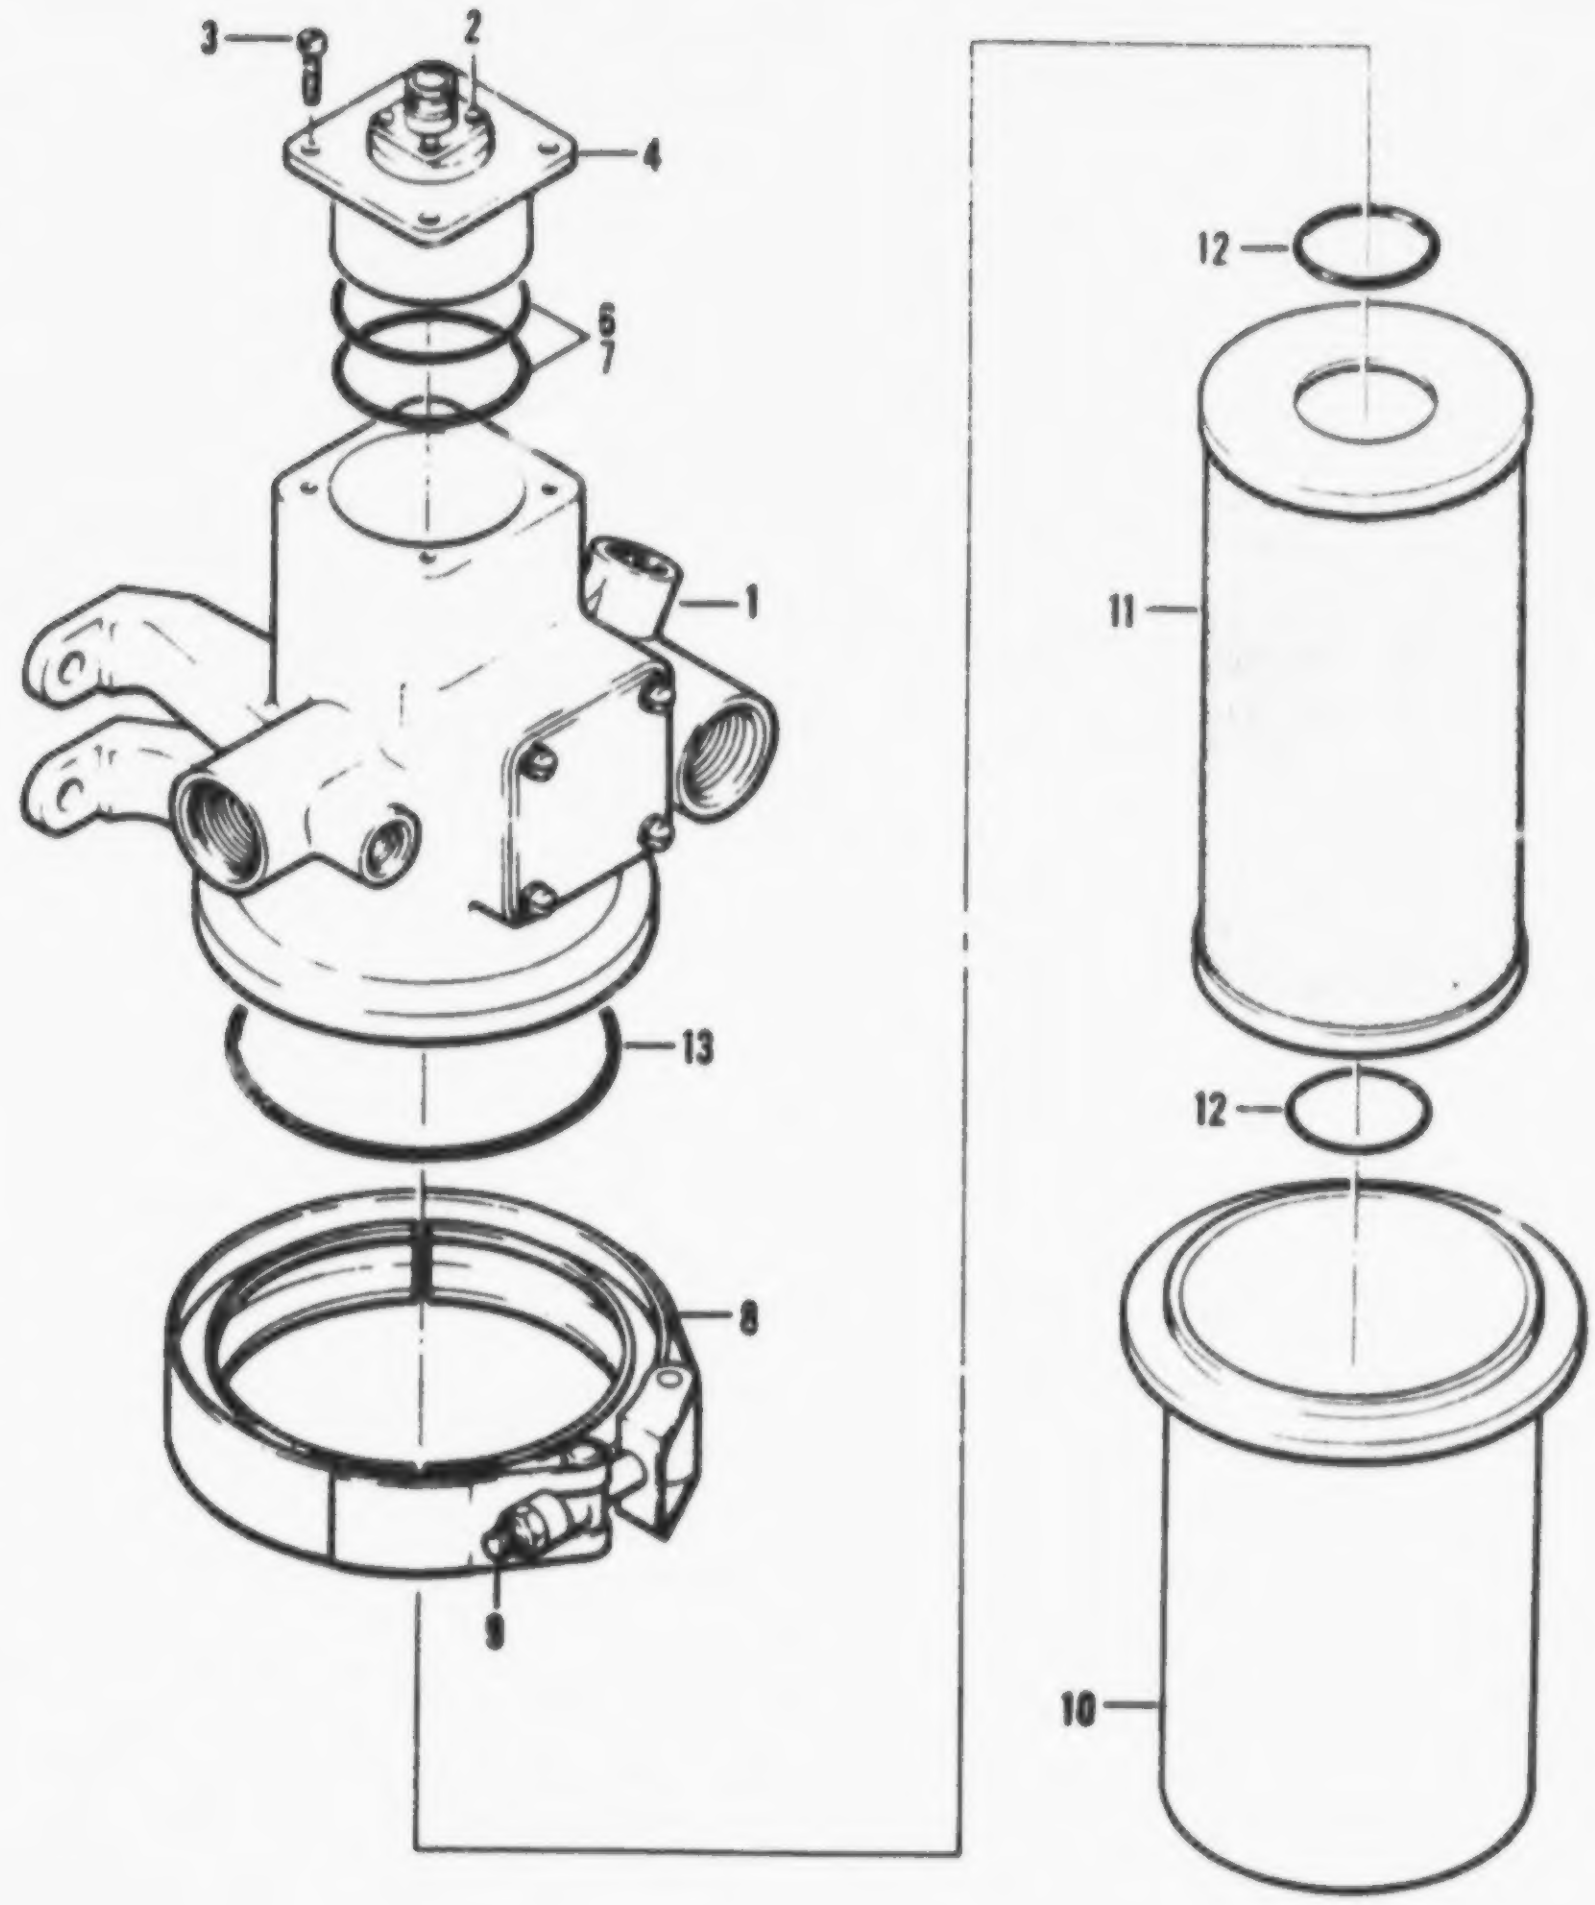
3
2
4
6
7
1
13
8
9
12
11
12
10

Figure 321. Filter, Fluid, Pressure Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
321		PA000	2915-00-003-5904	97499	204-040-760-5	FILTER,FLUID BREAKDOWN FOR PN 204-040-760-5 (100103 & 133363) SEE FIG.317,& 320 FOR NHA UHE,UHH,UHM,UHV,UHX	EA	1
321	1	PA000	2915-00-868-2708	97499	204-040-760-11	.HEAD ASSY,FILTER UHE,UHH,UHM,UHV,UHX	EA	1
321	1	PA000	2915-00-868-2708	87405	139240	.HEAD ASSY,FILTER U/O PN 133363 UHE,UHH,UHM,UHV,UHX	EA	1
321	1	PA000	2915-00-868-2708	05160	101206	.HEAD ASSY,FILTER U/O PN 100103 UHE,UHH,UHM,UHV,UHX	EA	1
321	2	PAOZZ	5305-00-967-7712	73370	126221	..SCREW,MACHINE U/O PN 139240 UHE,UHH,UHM,UHV,UHX	EA	4
321	3	PAOZZ	5305-00-720-8562	02615	NK500C8-8	..SCREW,SELF-LOCKING U/O PN 101206 UHE,UHH,UHM,UHV,UHX	EA	4
321	4	PAOZZ	5930-00-961-1318	73370	126222	..SWITCH,PRESSURE U/O PN 139240 & 101206 UHE,UHH,UHM,UHV,UHX	EA	1
321	6	PAOZZ	5330-00-252-6048	73370	115171	..PACKING,PREFORMED U/O PN. 139240 UHE,UHH,UHM,UHV,UHX	EA	2
321	7	PAOZZ	5330-00-841-2366	96906	MS29513-030	..PACKING,PREFORMED U/O PN 101206 UHE,UHH,UHM,UHV,UHX	EA	2
321	8	PA000	5340-00-225-9053	98625	4562-350	.COUPLING,CLAMP UHE,UHH,UHM,UHV,UHX	EA	1
321	9	PAOZZ	5310-00-813-3232	80205	NAS679C4M	.NUT,SELF-LOCKING,HE HEXAGON UHE,UHH,UHM,UHV,UHX	EA	1
321	10	PAOZZ	1560-00-757-8745	97499	204-040-760-15	.STRAINER BODY SEDIMENT UHE,UHH,UHM,UHV,UHX	EA	1
321	11	XAOZZ		97499	204-040-760-13	.FILTER ELEMENT UHE,UHH,UHM,UHV,UHX	EA	1
321	12	FAOZZ	5330-00-250-0236	96906	MS29513-024	.PACKING,PREFORME COMPONENT OF KIT 2945-00-019-0280 UHE,UHH,UHM,UHV,UHX	EA	2
321	13	PAOZZ	5330-00-291-3078	96906	MS29513-237	.PACKING,PREFORMED WHEN EXHTD RQTN COMPLETE KIT 2945-019-0280 UHE,UHH,UHM,UHV,UHX	EA	1
321		PAOZZ	2945-00-019-0280	97499	204-2490-1	FUEL AND OIL KIT, FILTER U/O 2915-00-003-5904 SEE FUNCTIONAL GROUP 50 FOR COMPONENTS UHE,UHH,UHM,UHV,UHX	EA	1

Fig 322,323,324 & 325 NOT USED

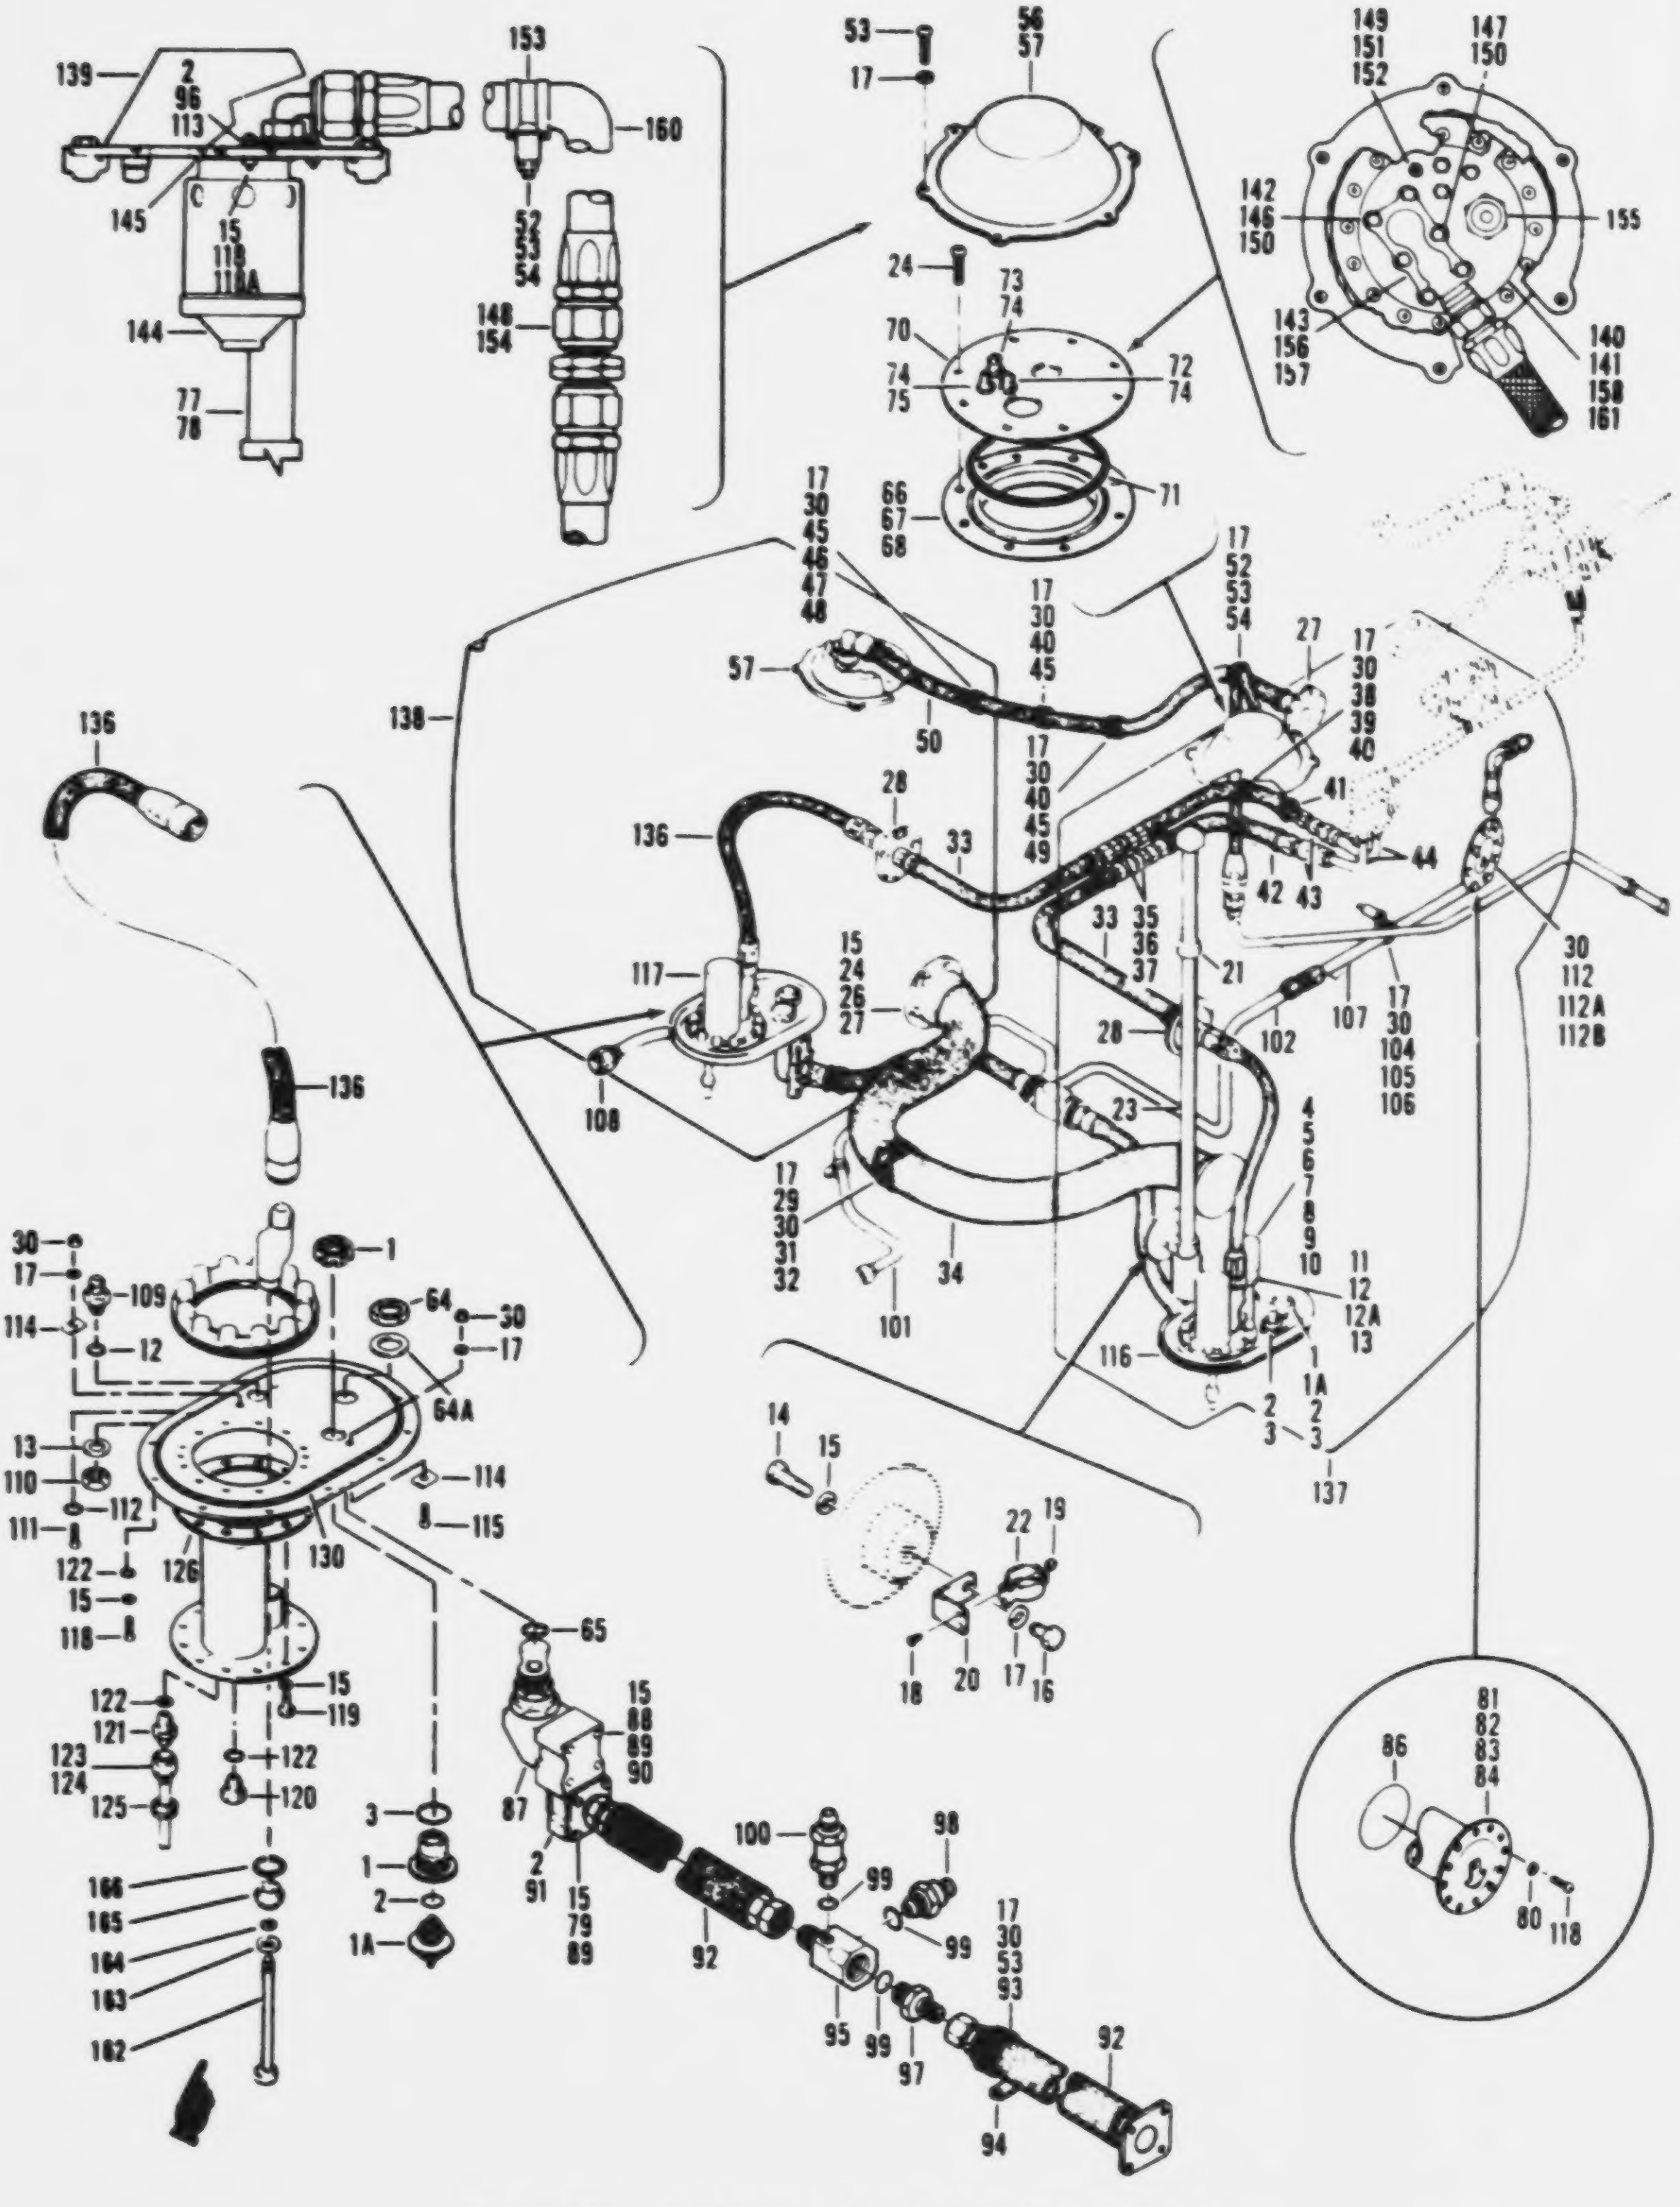
139
2
96
113
145
15
118
118A
144
77
78
153
160
52
53
54
148
154
53
17
56
57
24
73
74
70
74
75
72
74
66
67
68
71
149
151
152
147
150
142
146
150
155
143
156
157
140
141
158
161
17
30
45
46
47
48
17
30
40
45
17
52
53
54
27
17
30
38
39
40
57
50
138
17
30
40
45
49
41
44
42
43
136
28
33
33
35
36
37
21
30
112
112A
112B
136
15
24
26
27
117
108
28
102
107
17
30
104
105
106
23
4
5
6
7
8
9
10
11
12
12A
13
17
29
30
31
32
34
101
116
1
1A
2
3
2
3
137
136
30
17
109
114
12
1
64
30
17
64A
13
110
112
111
114
115
122
126
130
15
118
14
15
22
19
18
20
17
16
122
121
123
124
125
15
119
122
120
65
15
88
89
90
87
2
91
3
1
2
1A
15
79
89
100
98
99
99
92
99
95
97
17
30
53
93
92
94
166
165
164
163
162
81
82
83
84
86
80
118

Figure 326. Fuel System Installation, Tank Section

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
326		XDFZZ	1560-00-157-5007	97499	204-704-049-1	FUEL INSTL TANK SECTION -CRASHWORTHY-	UHC,UHM	EA	1
6	1	PAOZZ	4820-00-181-9234	97499	209-060-655-3	COCK,POPPET DRAIN UPPER HALF	UHC,UHM	EA	2
	1A	PAOZZ	4820-00-181-9230	97499	209-060-655-5	COCK,POPPET DRAIN LOWER HALF	UHC,UHM	EA	2
326	2	PAOZZ	5330-00-263-8033	96906	MS29512-12	PACKING,PREFORMED	UHC,UHM	EA	4
326	3	PAOZZ	5330-00-841-2366	96906	MS29513-030	PACKING,PREFORMED	UHC,UHM	EA	2
326	4	PAOOO	1560-00-675-3238	97499	204-060-654-1	SWITCH ASSY,SUMP	UHC,UHM	EA	1
326	5	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHC,UHM	EA	1
326	6	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG	UHC,UHM	EA	1
326	7	PAOZZ	2915-00-089-7737	50625	F8300-134	..SWITCH,FLOAT,LIQUID	UHC,UHM	EA	1
326	8	MFOZZ		97499	85T4-9-3	..TUBE	UHC,UHM	EA	2
326	9	MFOZZ		97499	85T4-5-15	INSULATION,TUBE	UHC,UHM	EA	1
326	10	PAOZZ	5330-00-263-8030	96906	MS29512-06	PACKING,PREFORMED	UHC,UHM	EA	2
326	11	PAOZZ	1560-00-146-9300	97499	212-060-602-7	SUPPORT,SWITCH,LOW	UHC,UHM	EA	1
326	12	PAOZZ	5330-00-263-8031	96906	MS29512-08	PACKING,PREFORMED	UHC,UHM	EA	4
326	12A	PAOZZ	5310-00-854-7973	96906	MS9200-08	NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
326	13	PAOZZ	5310-00-187-2396	88044	AN960PD1216L	WASHER, FLAT	UHC,UHM	EA	3
326	14	PAOZZ	5306-00-182-2014	88044	AN4H3A	BOLT,MACHINE	UHC,UHM	EA	1
326	15	PAOZZ	5310-00-184-9001	88044	AN960PD416L	WASHER,FLAT	UHC,UHM	EA	51
326	16	PAOZZ	5306-00-182-2056	88044	AN3H3A	BOLT,MACHINE	UHC,UHM	EA	1
326	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHC,UHM	EA	22
	18	PAOZZ	5305-00-584-8279	88044	AN525D832R6	SCREW,MACHINE	UHC,UHM	EA	1
6	19	PAOZZ	5310-00-878-7196	96906	MS21043-08	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	1
326	20	MFOZZ		97499	204-062-664-1	BRACKET--LOWER	UHC,UHM	EA	1
326	21	MFOZZ		97499	204-062-664-3	BRACKET--UPPER	UHC,UHM	EA	1
326	22	PAOZZ	5340-00-767-8005	97499	204-060-628-1	CLIP,SPRING TENSION	UHC,UHM	EA	2
326	23	PAOZZ	6680-00-868-7028	97499	204-061-606-1	TRANSMITTER,LIQUID	UHC,UHM	EA	1
326	24	PAOZZ	5305-00-891-1783	96906	MS27039-4-10	SCREW,MACHINE	UHC,UHM	EA	56
326	25	PAOZZ	1560-00-444-2375	97499	209-060-664-15	CLIP,FRANGIBLE	UHC,UHM	EA	22
326	27	PAOZZ	5330-00-291-7340	96906	MS29513-225	PACKING,PREFORMED	UHC,UHM	EA	3
326	28	PAOZZ	5330-00-291-3078	96906	MS29513-237	PACKING,PREFORMED	UHC,UHM	EA	2
326	29	XDOZZ	5340-00-514-3017	96906	MS21919DG48	CLAMP,LOOP U/O HOSE WITH SMALLER OD	UHC,UHM	EA	1
326	29	XDOZZ		81996	EAB700D56	CLAMP,LOOP U/O HOSE WITH LARGER OD	UHC,UHM	EA	1
326	30	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	17
326	31	PAOZZ	5305-00-839-0762	96906	MS27039-1-29	SCREW,MACHINE	UHC,UHM	EA	1
326	32	PAOZZ	5365-00-809-9379	80205	NAS43DD3-51	SPACER,SLEEVE	UHC,UHM	EA	1
326	33	PAOZZ	4720-00-148-0825	97499	204-062-687-3	HOSE ASSY	UHC,UHM	EA	2
326	34	PAOZZ	4710-00-155-4211	97499	204-062-686-1	TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
326	35	PAOZZ	4730-00-994-0883	96906	MS24393D12	NIPPLE,TUBE	UHC,UHM	EA	2
6	36	PAOZZ	5310-00-183-4397	88044	AN960PD1716	WASHER,FLAT	UHC,UHM	EA	2
5	37	PAOZZ	5310-00-199-1028	88044	AN924-12D	NUT,PLAIN,HEXAGON	UHC,UHM	EA	2
326	38	PAOZZ	5340-00-993-5478	81996	EAB700D12	CLAMP,LOOP	UHC,UHM	EA	2
326	39	PAOZZ	5340-00-247-6221	81996	EAB700D26	CLAMP,LOOP	UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
326	40	PAOZZ	5305-00-781-9067	96906	MS27039-1-08	.SCREW,MACHINE	UHC,UHM	EA	3
326	41	PAOZZ	4720-00-230-0318	97499	70-032L000A174	.HOSE ASSY	UHC,UHM	EA	1
326	42	PAOZO	4720-00-159-8282	97499	70-032L000H11G	.HOSE ASSY	UHC,UHM	EA	
326	43	PBOZZ	4730-00-805-5100	96906	MS24399D21	.REDUCER,TUBE	UHC,UHM	EA	2
326	44	MFOZZ		97499	204-062-659-1	.TUBE ASSEMBLY	UHC,UHM	EA	2
326	45	PAOZZ	5340-00-989-4573	96906	MS21919DG30	.CLAMP,LOOP	UHC,UHM	EA	3
325	46	PAOZZ	5340-00-533-3653	81996	EAB700-16	.CLAMP,LOOP	UHC,UHM	EA	1
326	47	PAOZZ	5305-00-989-7435	88044	AN520-10R10	.SCREW,MACHINE	UHC,UHM	EA	1
326	48	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE	UHC,UHM	EA	1
326	49	PAOZZ	5340-00-993-6249	81996	EAB700D20	.CLAMP,LOOP	UHC,UHM	EA	1
326	50	PAOZZ	4720-00-148-0824	97499	204-062-687-1	.HOSE ASSY	UHC,UHM	EA	1
326	52	PAOZZ	5340-00-993-1471	81996	EAB700D19	.CLAMP,LOOP	UHC,UHM	EA	1
326	53	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE	UHC,UHM	EA	15
326	54	PAOZZ	5365-00-304-7679	80205	NAS43DD3-12	.SPACER,SLEEVE	UHC,UHM	EA	1
326	56	PAOZZ	1560-00-146-6612	97499	204-062-672-1	.COVER,FUEL CELL,LH	UHC,UHM	EA	1
326	57	PAOZZ	1560-00-327-2394	97499	204-062-692-1	.COVER,FUEL CELL,RH	UHC,UHM	EA	1
326	64	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	2
326	64A	PAOZZ	5310-00-595-6902	88044	AN960PD216L	.WASHER,FLAT	UHC,UHM	EA	2
326	65	PAOZZ	5330-00-263-8034	96906	MS29512-16	.PACKING,PREFORMED	UHC,UHM	EA	2
326	66	AOOOO		97499	204-062-629-1	.RETAINER ASSEMBLY	UHC,UHM	EA	1
326	67	PBOZZ	1560-00-158-9157	97499	204-062-629-3	..RING,RETAINER,VENT	UHC,UHM	EA	1
326	68	PBOZZ	1560-00-158-9156	97499	204-062-629-5	..RING,RETAINER,VENT	UHC,UHM	EA	1
326	70	PAOZZ	1560-00-146-6608	97499	204-062-615-3	.PLATE,FUEL VENT	UHC,UHM	EA	1
326	71	PAOZZ	5330-00-291-3313	95906	MS29513-255	.PACKING,PREFORMED	UHC,UHM	EA	1
326	72	PAOZZ	5935-00-504-3684	95712	1-892-1	.ADAPTER,CONNECTOR	UHC,UHM	EA	1
326	73	PAOZZ	5935-00-590-3865	95712	1-890-1	.ADAPTER,CONNECTOR	UHC,UHM	EA	1
326	74	PAOZZ	5330-00-168-6160	95712	1-309-10	.PACKING,PREFORMED	UHC,UHM	EA	3
326	75	PAOOO	5935-00-539-0203	95712	1-891-1	.ADAPTER,CONNECTOR	UHC,UHM	EA	1
326	77	PAOZZ	2915-00-868-2766	97499	204-062-613-1	.SWITCH,FLOAT,LIQUID	UHC,UHM	EA	1
326	78	PAOZZ	5330-00-265-1084	96906	MS29513-131	.PACKING,PREFORME	UHC,UHM	EA	1
326	79	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE	UHC,UHM	EA	8
326	80	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHC,UHM	EA	24
326	81	AFOZZ		97499	205-062-669-1	.RETAINER ASSEMBLY	UHC,UHM	EA	1
326	82	PBFZZ	1560-00-158-9154	97499	205-062-669-3	..RING,RETAINER	UHC,UHM	EA	1
326	83	PAFZZ	1560-00-158-9148	97499	205-062-669-5	..RING,RETAINER	UHC,UHM	EA	1
326	84	PBOOO	1560-00-444-2374	97499	209-060-694-5	.CAP AND RECEIVER ASSEMBLY	UHC,UHM	EA	1
326	86	PCOZZ	5330-00-263-8013	96906	MS29513-243	.PACKING,PREFORMED	UHC,UHM	EA	1
326	87	PAOZZ	4820-00-152-3772	97499	205-063-601-13	.VALVE,CHECK	UHC,UHM	EA	2
326	88	PAOZZ	4820-00-155-4206	97499	204-062-627-1	.FITTING ASSEMBLY	UHC,UHM	EA	1
326	89	PAOZZ	5330-00-250-0235	96906	MS29513-215	.PACKING,PREFORMED	UHC,UHM	EA	2
326	90	PAOZZ	5306-00-151-1418	88044	AN4-16A	.BOLT,MACHINE	UHC,UHM	EA	4
326	91	PAOZZ	5365-00-278-8806	88044	AN814-12D	.PLUG,MACHINE THREAD	UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
326	92	PAOZZ	4720-00-148-0823	97499	204-062-688-1	.HOSE ASSEMBLY	UHC,UHM	EA	2
326	93	PAOZZ	5340-00-993-6251	81996	EAB700036	.CLAMP,LOOP	UHC,UHM	EA	1
326	94	MFOZZ	1660-00-073-6596	97499	20-032-1	.BRACKET,ENGINE	UHC,UHM	EA	1
326	95	PAOZZ	4730-00-147-2606	97499	204-062-626-1	.FITTING,LOWER CROSS	UHC,UHM	EA	1
326	96	PAOZZ	4730-00-152-3775	97499	204-062-676-1	.ADAPTER STRAIGHT	UHC,UHM	EA	1
326	97	PAOZZ	4730-00-684-6913	96906	MS24392D16	.NIPPLE,TUBE	UHC,UHM	EA	1
326	98	PAOZZ	4820-00-181-9248	97499	209-060-657-1	.VALVE,CHECK	UHC,UHM	EA	1
326	99	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED	UHC,UHM	EA	3
326	100	PAOZZ	4820-00-155-4207	97499	204-062-689-1	.VALVE,CHECK	UHC,UHM	EA	1
326	101	MFOZZ		97499	204-062-684-1	.TUBE ASSEMBLY	UHC,UHM	EA	1
326	102	MFOZZ		97499	204-062-683-1	.TUBE ASSEMBLY	UHC,UHM	EA	1
326	104	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHC,UHM	EA	1
326	105	PAOZZ	5305-00-945-0539	96906	MS27039-1-22	.SCREW,MACHINE	UHC,UHM	EA	1
326	106	PAOZZ	5365-00-618-6485	80205	NAS43DD3-56	.SPACER,SLEEVE	UHC,UHM	EA	1
326	107	MFOZZ		97499	204-062-680-1	.TUBE ASSEMBLY	UHC,UHM	EA	1
326	108	MFOZZ		96906	MS87028H152B	.HOSE ASSEMBLY	UHC,UHM	EA	2
326	109	PAOZZ	2915-00-898-9760	86768	12-1762-1	.VALVE ASSEMBLY,FUEL	UHC,UHM	EA	2
326	110	PAOZZ	5310-00-282-7835	96906	MS2440008	.NUT,PLAIN,HEXAGON	UHC,UHM	EA	2
326	111	PAOZZ	5305-00-082-6780	96906	MS27039-1-12	.SCREW,MACHINE	UHC,UHM	EA	4
326	112	PAOZZ	5330-00-603-0193	80205	NAS1523AA3F	.PACKING WITH RETAINER	UHC,UHM	EA	7
326	112A	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE	UHC,UHM	EA	1
326	112B	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHC,UHM	EA	1
326	113	PAOZZ	5330-00-413-4734	80205	NAS1523AA4F	.PACKING WITH RETAINER	UHC,UHM	EA	4
326	114	MFOZZ		97499	204-062-679-1	.CLIP	UHC,UHM	EA	6
326	115	XBOZZ		97499	100-047-6-6	.PIN	UHC,UHM	EA	2
326	116	PAOZZ	1560-00-147-8940	97499	204-062-660-19	.SUMP ASSY,FUEL CELL	UHC,UHM	EA	1
326	117	PAOZZ	1560-00-147-8941	97499	204-062-660-15	.SUMP ASSY,FUEL CELL	UHC,UHM	EA	1
326	118	PAOZZ	5305-00-891-8883	96906	MS27039-4-11	.SCREW,MACHINE	UHC,UHM	EA	64
326	118A	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING	UHC,UHM	EA	4
326	119	PAOZZ	5306-00-151-1424	88044	AN4-10A	.BOLT,MACHINE	UHC,UHM	EA	24
326	120	PAOZZ	5365-00-837-0856	96906	MS24391D4L	.PLUG,MACHINE THREAD	UHC,UHM	EA	2
326	121	PAOZZ	4730-00-834-9560	96906	MS24392-D4	.NIPPLE,TUBE	UHC,UHM	EA	2
326	122	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED	UHC,UHM	EA	5
326	123	MFOZZ	1560-00-885-0010	97499	204-060-087-1	.TUBE ASSEMBLY	UHC,UHM	EA	1
326	124	MFOZZ	4710-00-074-4345	97499	204-060-495-1	.TUBE ASSEMBLY	UHC,UHM	EA	1
326	125	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC	UHC,UHM	EA	1
326	126	PAOZZ	5330-01-053-7035	97499	60-011-1	.GASKET	UHC,UHM	EA	2
326	128	PAOZZ	5330-00-291-6328	51663	RB11226	.GASKET	UHC,UHM	EA	1
326	130	PAOZZ	5330-00-291-3272	96906	MS29513-270	.PACKING,PREFORMED	UHC,UHM	EA	2
326	136	MFOZZ		96906	MS8000J240G	.HOSE ASSEMBLY TETRAFLUOROETHYLENE	UHC,UHM	EA	1
326	137	PAOOO	1560-00-146-6610	97499	204-062-685-1	.TANK,FUEL,ACFT LH	UHC,UHM	EA	1
326	138	PAOOO	1560-00-146-6611	97499	204-062-685-3	.TANK,FUEL,ACFT RH	UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
326	139	XCOOO		97499	204-704-077-3	KIT,ROLL OVER VENT VALVE.....UHM	EA	1
326	140	PBOOO	1560-01-070-0902	97499	204-062-696-1	.PLATE,FUEL CELL.....UHM	EA	1
326	141	XAOZZ		97499	204-062-596-3	..PLATE.....UHM	EA	1
326	142	PAOZZ	5310-00-994-7209	80206	NAS1474A4	..NUT,SELF-LOCKING,PL.....UHM	EA	2
326	143	PAOZZ	1560-01-066-2660	97499	205-063-622-1	.MANIFOLD,RELIEF VAL.....UHM	EA	1
326	144	PAOOO	4820-00-527-4333	97499	214-066-005-1	.VALVE,VENT,ATTITUDE.....UHM	EA	2
326	145	PAOZZ	5330-00-524-4375	97499	214-066-015-1	.GASKET.....UHM	EA	1
326	146	PAOZZ	5306-00-151-1426	88044	AN4-6A	.BOLT,MACHINE.....UHM	EA	5
326	147	PAOZZ	5306-00-182-2017	88044	AN4H5A	.BOLT,MACHINE.....UHM	EA	1
326	148	XDOZZ	4730-00-063-6454	96906	MS24398D16-12	.REDUCER.....UHM	EA	1
326	149	PADZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER.....UHM	EA	1
326	150	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT.....UHM	EA	6
326	151	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER.....UHM	EA	1
326	152	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE.....UHM	EA	1
326	153	PAOZZ	5340-00-989-4572	81996	EAB700D15	.CLAMP,LOOP.....UHM	EA	1
326	154	PAOZZ	5330-00-263-8034	96906	MS29512-16	.PACKING,PREFORMED.....UHM	EA	1
326	155	PAOZZ	5330-00-265-1084	96906	MS29513-131	.PACKING,PREFORMED.....UHM	EA	1
326	156	PAOZZ	5330-00-250-0238	96906	MS29513-216	.PACKING,PREFORMED.....UHM	EA	1
326	157	PAOZZ	5330-00-265-1079	96906	MS29513-221	.PACKING,PREFORMED.....UHM	EA	1
326	158	PAOZZ	5330-00-291-3313	96906	MS29513-255	.PACKING,PREFORMED.....UHM	EA	1
326	160	MFOZZ		97499	70-010L000A270	.HOSE ASSEMBLY.....UHM	EA	1
326	161	PACZZ	5330-00-584-2161	83259	800-515-10	.PACKING WITH RETAINER.....UHM	EA	1
326	162	PAOZZ	5306-00-281-8945	88044	ANH35A	.BOLT,MACHINE.....UHM	EA	1
326	163	PAOZZ	5310-00-181-2354	88044	AN960PD416	.WASHER,FLAT.....UHM	EA	1
326	164	PAOZZ	5330-00-248-3835	96906	MS29513-010	.PACKING,PREFORMED.....UHM	EA	1
326	165	PAOZZ	2915-00-224-3224	96906	50B9390	.PLUG,BOLT RETAINING.....UHM	EA	1
326	166	PAOZZ	5330-00-248-3844	96906	MS29513-113	.PACKING,PREFORMED.....UHM	EA	1

Fig. 327 NOT USED

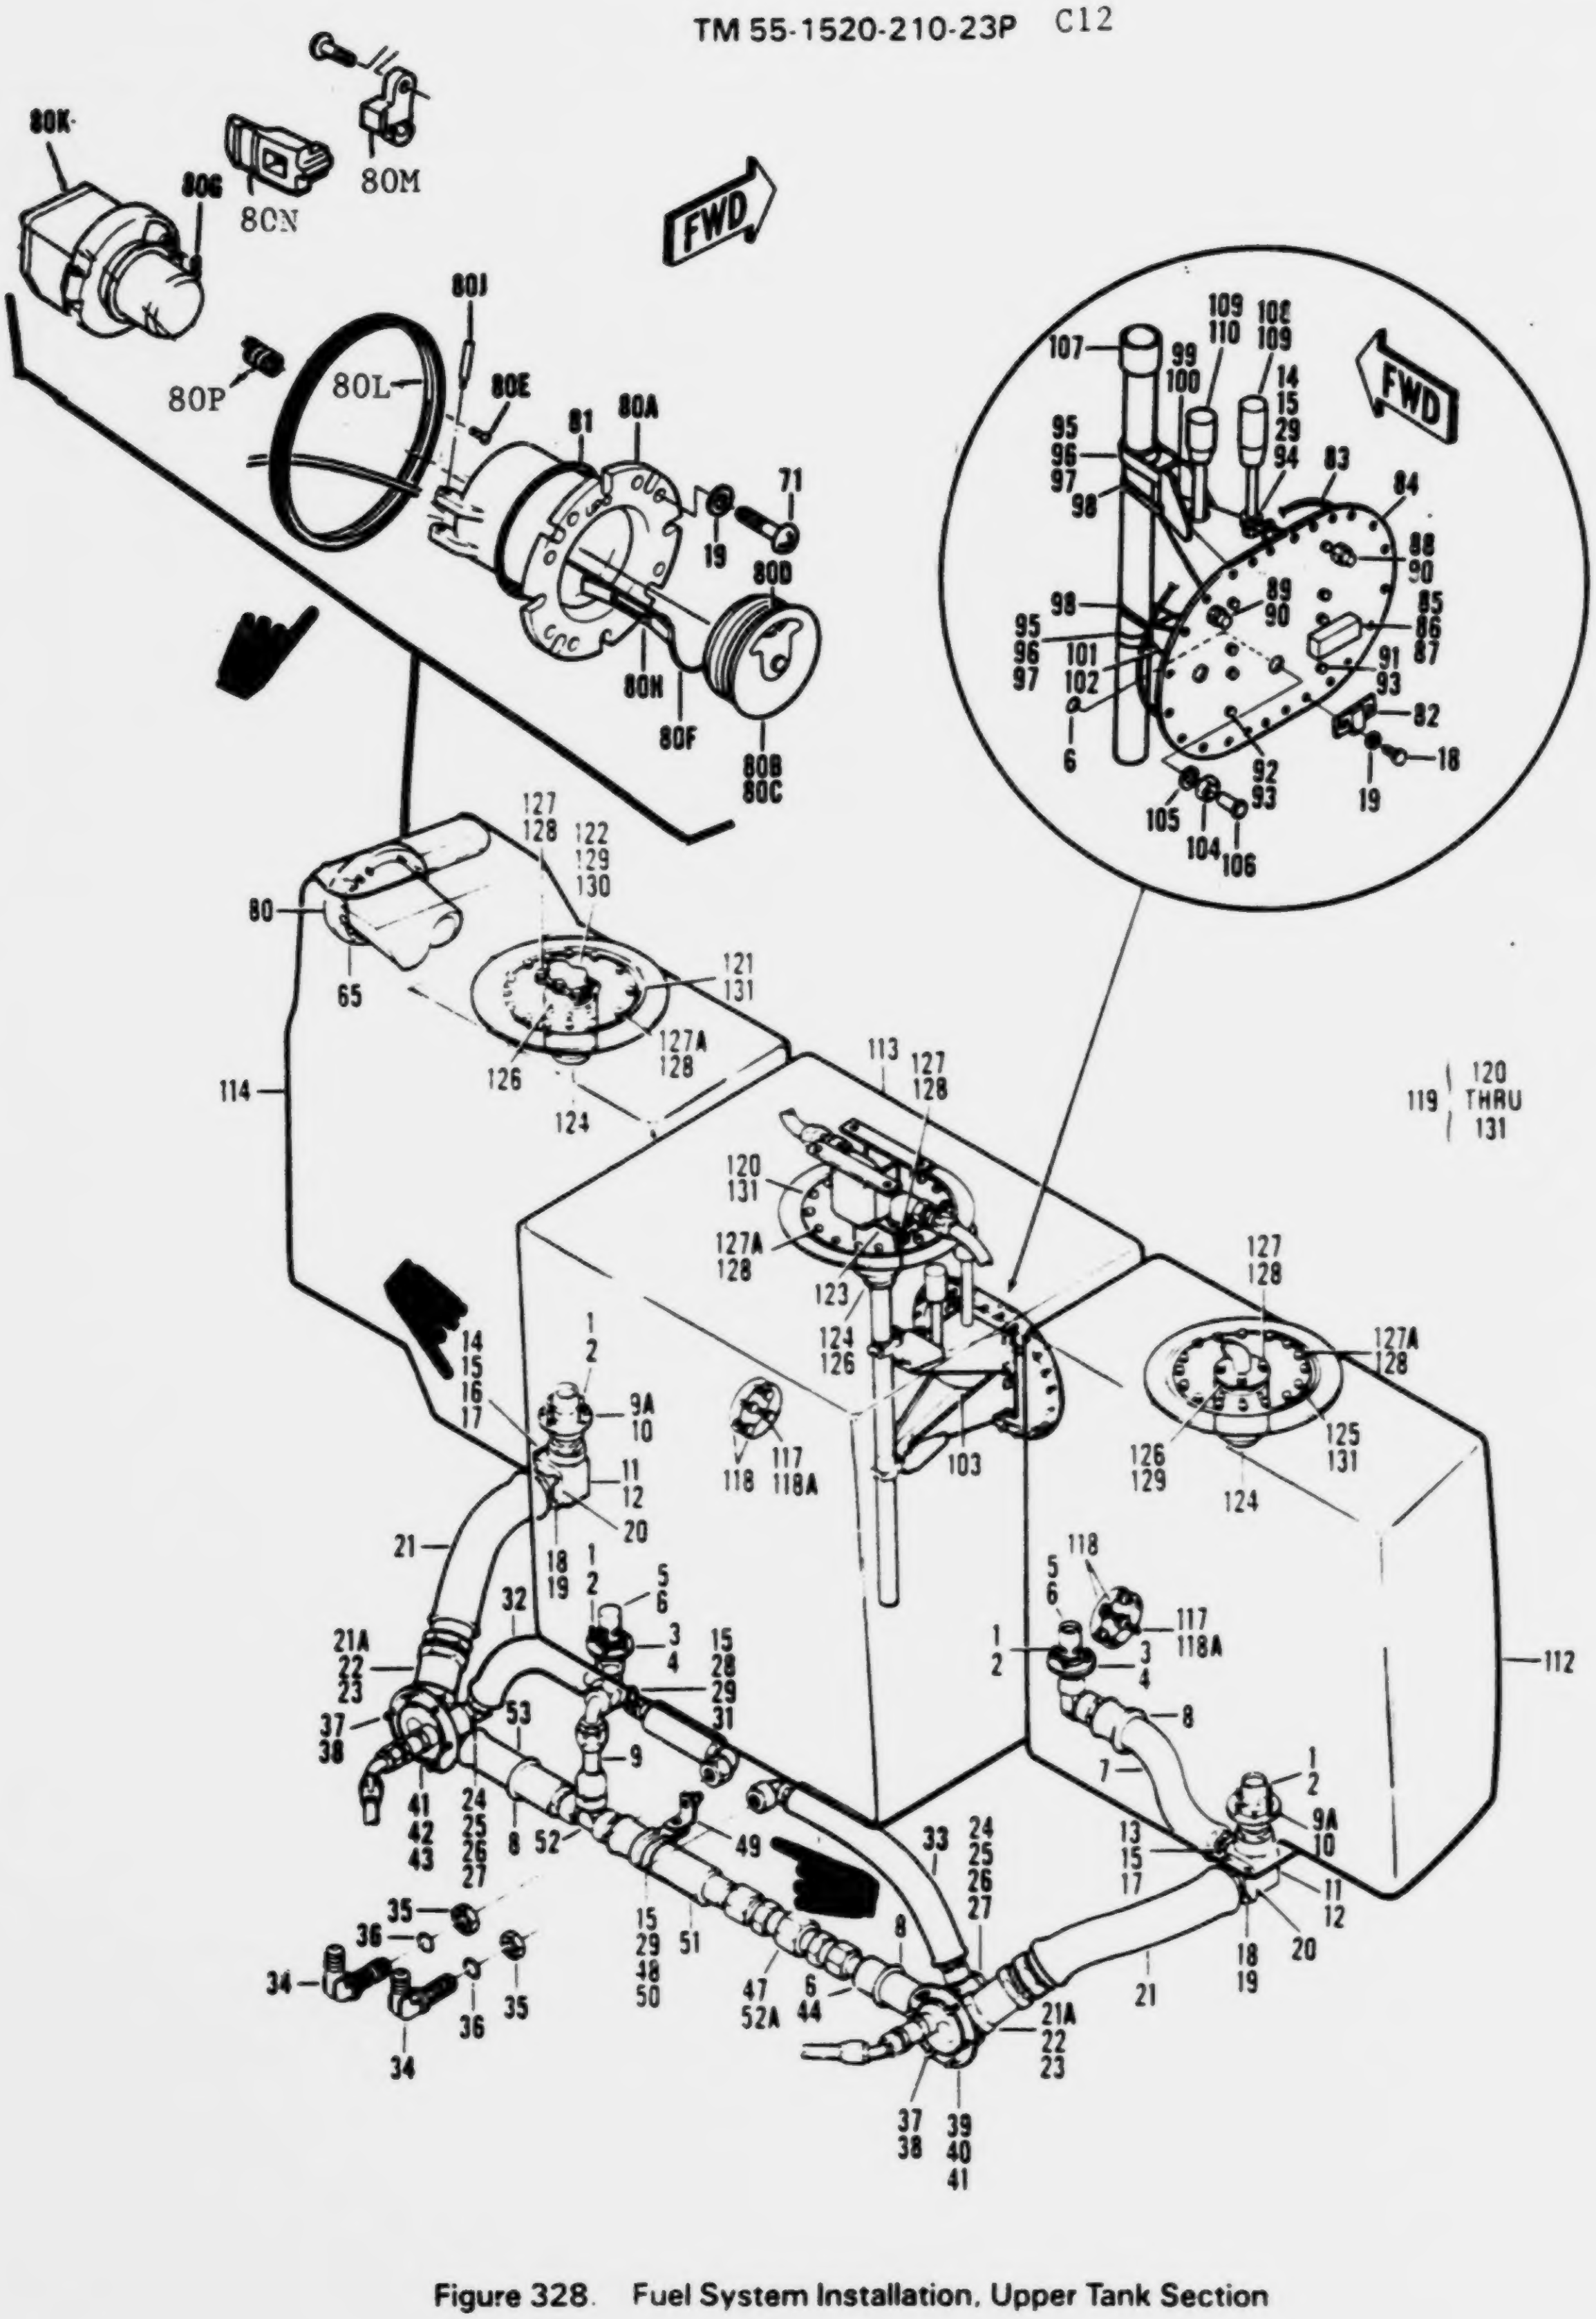
80K
80G
80N
80M
FWD
80J
80P
80L
80E
81
80A
71
19
80D
80H
80F
80B
80C
107
109
110
99
100
108
109
14
15
29
94
FWD
95
96
97
98
83
84
88
90
98
89
90
95
96
97
101
102
6
85
86
87
91
93
82
18
19
92
93
105
104
106
127
128
122
129
130
80
65
121
131
127A
128
126
124
114
113
127
128
120
131
127A
128
123
124
126
119
120
THRU
131
1
2
9A
10
14
15
16
17
11
12
20
18
19
117
118
118A
103
127
128
127A
128
126
129
125
131
124
112
21
1
2
5
6
3
4
32
21A
22
23
37
38
15
28
29
31
53
9
41
42
43
24
25
26
27
8
52
49
118
5
6
117
118A
1
2
3
4
8
7
1
2
9A
10
13
15
17
11
12
18
19
20
21
33
24
25
26
27
8
35
36
34
36
35
34
15
29
48
50
51
47
52A
6
44
21A
22
23
37
38
39
40
41

Figure 328. Fuel System Installation, Upper Tank Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 10 FUEL SYSTEMS			
328		XCFZZ		97499	205-063-600-9	FUEL SYSTEM INSTL UPPER TANK SECTION,SEE FIG. 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
328	1	PAOZZ	5305-00-891-8883	96906	MS27039-4-11	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	24
328	2	PAOZZ	5305-00-043-2682	96906	MS24694S98	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	16
328	3	PAOZZ	1560-00-176-2032	97499	205-062-644-1	.FITTING,OUTLET,FUEL	UHE,UHH,UHV,UHX	EA	2
328	4	PAOZZ	5330-00-255-1075	96906	MS29513-218	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	5	PAOZZ	4820-00-134-4506	00624	AE95270K	.VALVE,RELIEF,PRESSU PRESSURE	UHE,UHH,UHV,UHX	EA	2
328	6	PAOZZ	5330-00-253-8033	96906	MS29512-12	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	3
328	7	PAOZZ	4720-00-176-4502	97499	205-062-698-1	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
328	8	PAOZZ	5325-00-926-1394	96906	MS21266-3N	.GROMMET,NONMETALLIC	UHE,UHH,UHV,UHX	EA	3
328	9	PAOZZ	4720-00-182-8853	97499	70-010L000G056	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
328	9A	PAOZZ	1560-00-176-2043	97499	205-062-643-1	.FITTING,OUTLET,FUEL	UHE,UHH,UHV,UHX	EA	2
328	10	PAOZZ	5330-00-253-5173	96906	MS29513-226	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	11	PAOZZ	4730-00-176-4617	97499	205-062-653-1	..COUPLING ASSEMBLY,Q	UHE,UHH,UHV,UHX	EA	2
328	12	PAOZZ	5330-00-253-8035	96906	MS29512-20	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	13	PBOZZ	5306-00-274-2119	88044	AN3-5A	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	4
328	14	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
328	15	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	9
328	16	MFOZZ	DELETED	97499	205-062-696-1	.PLATE	UHE,UHH,UHV,UHX	EA	1
328	17	PAOZZ	5330-00-250-0226	96906	MS29513-212	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	18	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	16
328	19	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	62
328	20	PAOZZ	5330-00-255-1079	96906	MS29513-221	.PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	2
328	21	PAOZZ	4720-00-176-4603	97499	205-062-698-3	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	2
328	21A	PAOZZ	4730-01-034-4803	92215	VSF1015A20	.SLEEVE,FLARED,TUBE	UHE,UHH,UHV,UHX	EA	2
328	22	PAOZZ	4730-00-176-4623	97499	205-062-651-1	.COUPLING ASSEMBLY,Q	UHE,UHH,UHV,UHX	EA	2
328	23	PAOZZ	5330-00-253-8035	96906	MS29512-20	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	24	PAOZZ	4730-00-555-9357	80205	NAS551-100	.BOLT,FLUID PASSAGE	UHE,UHH,UHV,UHX	EA	2
328	25	PAOZZ	5330-00-248-3847	96906	MS29513-115	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	26	PAOZZ	4730-00-253-9015	80205	NAS552-100	.CONNECTOR,MULTIPLE,	UHE,UHH,UHV,UHX	EA	2
328	27	PAOZZ	5330-00-182-3057	83259	250-215-10	.PACKING WITH RETAIN	UHE,UHH,UHV,UHX	EA	1
328	28	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
328	29	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
328	31	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
328	32	PAOZZ	4720-00-176-4605	97499	205-062-650-1	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
328	33	PAOZZ	4720-00-176-4604	97499	205-062-650-5	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
328	34	PAOZZ	4730-00-231-3030	88044	AN833-10	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
328	34	PAOZZ	4730-00-924-6504	96906	MS24394-10	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
328	35	PAOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
328	36	PAOZZ	5310-00-187-2405	88044	AN960PD1416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
328	37	PAOZZ	5306-00-150-9101	88044	AN5-6A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	12
328	38	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	12

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
328	39	PAOZZ	5365-00-181-1264	97499	205-062-648-1	.RING ASSY,RETAINER	UHE,UHH,UHV,UHX	EA	1
328	40	PAOZZ	1560-00-176-1977	97499	205-062-685-1	.FITTING,OUTLET,FUEL	UHE,UHH,UHV,UHX	EA	1
328	41	PAOZZ	5330-00-291-3069	96906	MS29513-236	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	42	PAOZZ	5365-00-181-1264	97499	205-052-648-1	.RING ASSY,RETAINER	UHE,UHH,UHV,UHX	EA	1
328	43	PAOZZ	1560-00-176-1979	97499	205-062-685-2	.FITTING,OUTLET,FUEL	UHE,UHH,UHV,UHX	EA	1
328	44	PAOZZ	4720-00-182-8862	97499	205-062-697-1	.HOSE ASSY	UHE,UHH,UHV,UHX	EA	1
328	47	PAOZZ	4730-00-176-4615	97499	205-062-652-1	.UNION,TUBE	UHE,UHH,UHV,UHX	EA	1
328	48	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
328	49	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE	UHE,UHH,UHV,UHX	EA	1
328	50	PAOZZ	5340-00-598-0529	96906	MS21919WDG28	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
328	51	PAOZZ	4720-00-175-4611	97499	205-062-650-3	.HOSE ASSY	UHE,UHH,UHV,UHX	EA	1
328	52	PAOZZ	4730-00-722-8599	96906	MS24402D12	.TEE,TUBE	UHE,UHH,UHV,UHX	EA	1
328	52A	PAOZZ	4730-01-034-4805	92215	VSF1015A12	.SLEEVE,FLARED,TUBE	UHE,UHH,UHV,UHX	EA	6
328	53	PAOZZ	4720-00-182-8860	97499	205-062-697-3	.HOSE ASSY	UHE,UHH,UHV,UHX	EA	1
328	65	PAOZZ	5365-00-181-1243	97499	205-062-669-1	.RING ASSY,RETAINER	UHE,UHH,UHV,UHX	EA	1
328	71	PAOZZ	5305-00-891-1783	96906	MS27039-4-10	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	14
328	80	PAOZD	1560-01-068-5326	97499	209-060-694-5	RECEIVER,CLOSED CIRCUIT	UHE,UHH,UHV,UHX	EA	1
328	80A	XAOFF		96124	745001-5	..RECEIVER	UHE,UHH,UHV,UHX	EA	1
328	80B	AOOOO		96124	744069-7	..CAP ASSY	UHE,UHH,UHV,UHX	EA	1
328	80C	PAOZZ	1560-01-093-2860	96124	744034	...CAP,FILLER OPENING	UHE,UHH,UHV,UHX	EA	1
328	80D	PAOZZ	5330-00-251-9364	96906	MS29513-232	...PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
328	80E	PAOZZ	5305-00-054-6669	96906	MS51957-44	.. SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
328	80F	PAOZZ	5315-00-514-2660	96906	MS29523-1	...PIN,RETAINING	UHE,UHH,UHV,UHX	EA	1
328	80G	PAOZZ	4010-01-070-5645	96124	745010-1	.. WIRE ROPE ASSEMBLY,	UHE,UHH,UHV,UHX	EA	1
328	80H	PAOZZ	5120-01-165-5466	96124	745016	...TOOL,LATCH	UHE,UHH,UHV,UHX	EA	1
328	80J	PAOZZ	1630-00-182-3401	96124	750039	..PIN,HINGE	UHE,UHH,UHV,UHX	EA	1
328	80K	PAFZZ	1560-01 114 0868	96124	750003-3	..MODULE,REFUELING		EA	1
328	80L	PBOZZ	2915-01-147-3285	96124		..SEAL,HOUSING	UHE,UHH,UHV,UHX	EA	1
328	80M	PBFZZ	1560-01-071-5512	96124	750010	RETAINER,LATCH,REFU	UHE,UHH,UHV,UHX	EA	1
328	80N	PBFZZ	1560-01-070-5669	96124	750009	LATCH,REFUELING MOD	UHE,UHH,UHV	EA	1
328	80P	PAFZZ	5360-01-074-8090	94124	750051	SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
328	81	PAOZZ	5330-00-263-8013	96906	MS29513-243	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
328	82	PAOZZ	5365-00-181-1265	97499	205-062-659-1	.SPACER,PLATE	UHE,UHH,UHV,UHX	EA	4
328	83	PAOZZ	5330-00-291-3272	96906	MS29513-270	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
328	84	PAOOO	1560-00-177-4170	97499	205-062-639-1	.COVER,ACCESS	UHE,UHH,UHV,UHX	EA	1
328	85	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	3
328	86	PAOZZ	5310-00-194-0634	88044	AN961-6	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
328	87	XDOZZ	5940-00-132-2768	96906	MS27212-1-3	.TERMINAL BOARD	UHE,UHH,UHV,UHX	EA	1
328	88	PAOZZ	5935-00-590-3865	95712	1-890-1	.ADAPTER,CONNECTOR	UHE,UHH,UHV,UHX	EA	1
328	89	PAOZZ	5935-00-504-3684	97499	30-060-1A	.ADAPTER,CONNECTOR	UHE,UHH,UHV,UHX	EA	1
328	90	PAOZZ	5330-00-168-6160	74868	33-1309-10	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
328	91	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	7
328	92	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
328	93	PAOZZ	5330-00-171-8360	83259	800-515-10 OS	.PACKING,RETAINER	UHE,UHH,UHV,UHX	EA	6
328	94	XDOZZ		81996	EAB700D6	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
328	95	PBOZZ	5305-00-889-3002	96906	MS35206-242	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
328	96	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	4
328	97	PAOZZ	5340-00-757-8005	97499	204-060-628-1	.CLIP,SPRING TENSION..........UHE,UHH,UHV,UHX	EA	2
328	98	PAOZZ	5975-00-074-2072	96906	MS3367-1-9	.STRAP,TIEDOWN,ELECT..........UHE,UHH,UHV,UHX	EA	2
328	99	PAOZZ	5340-00-181-1356	97499	205-062-682-1	.BRACKET,FUEL QUANTI..........UHE,UHH,UHV,UHX	EA	1
328	100	PAOZZ	5310-00-778-9491	96906	MS21061L3K	..NUT,SELF-LOCKING,PL PLATE..........UHE,UHH,UHV,UHX	EA	4
328	101	PAOZZ	5340-00-181-1358	97499	205-062-682-3	.BRACKET,FUEL QUANTI..........UHE,UHH,UHV,UHX	EA	1
328	102	PAOZZ	5310-00-778-9491	96906	MS21061L3K	..NUT,SELF-LOCKING,PL PLATE..........UHE,UHH,UHV,UHX	EA	4
328	103	PAOZZ	1560-00-789-4979	97499	205-060-614-9	.SUPPORT ASSEMBLY,FU..........UHE,UHH,UHV,UHX	EA	1
328	104	PAOZZ	5310-00-854-7973	96906	MS9200-08	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
328	105	PAOZZ	5310-00-187-2396	88044	AN960PD1216L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
328	106	PAOZZ	5365-00-820-4535	49956	204MS002P003	.BUSHING,RUBBER..........UHE,UHH,UHV,UHX	EA	1
328	107	PAOZZ	6680-00-758-2816	97499	205-061-633-13	.TRANSMITTER,LIQUID..........UHE,UHH,UHV,UHX	EA	1
328	108	PAOZZ	2915-00-968-6362	97499	205-060-613-1	.SWITCH,FLOAT,LIQUID..........UHE,UHH,UHV,UHX	EA	1
328	109	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	2
328	110	PAOZZ	2915-00-968-6363	97499	205-060-613-3	.SWITCH,FLOAT,LIQUID..........UHE,UHH,UHV,UHX	EA	1
328	112	PAODD	1560-00-176-1247	73842	2F11637012-1	.TANK,FUEL,AIRCRAFT..........UHE,UHH,UHV,UHX	EA	1
328	113	PAODD	1560-00-176-1251	97499	205-062-635-13	.TANK,FUEL,AIRCRAFT..........UHE,UHH,UHV,UHX	EA	1
328	114	PAODD	1560-00-176-1249	97499	205-062-635-11	.TANK,FUEL,AIRCRAFT..........UHE,UHH,UHV,UHX	EA	1
328	117	PAOZZ	5306-00-722-8759	88044	AN5-14A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	8
328	118	PAOZZ	5330-00-251-9376	96906	MS29513-241	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	4
328	118A	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT..........UHE,UHH,UHX	EA	8
328	119	XCFZZ	1560-01-007-7031	97499	205-704-032-1	.MODIFICATION KIT..........UHE,UHH,UHV,UHX	EA	1
328	120	PAOOO	1560-01-066-2517	97499	205-062-687-5	..COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
328	121	PBOOO	1560-01-066-1554	97499	205-062-688-7	..COVER ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
328	122	PAOZZ	1560-01-066-2660	97499	205-063-622-1	..MANIFOLD,RELIEF VAL VALVE..........UHE,UHH,UHV,UHX	EA	1
328	123	PBOZZ	1560-01-066-2659	97499	205-063-623-1	..FLANGE,CENTER CELL..........UHE,UHH,UHV,UHX	EA	1
328	124	PAOOO	4820-00-527-4333	96124	773900-2	..VALVE,FLOAT..........UHE,UHH,UHV,UHX	EA	3
328	125	PBOZZ	1560-00-509-6859	97499	214-066-014-5	..COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
328	126	PAOZZ	5330-00-524-4375	97499	214-066-015-1	..GASKET..........UHE,UHH,UHV,UHX	EA	3
328	127	PAOZZ	5306-00-515-8064	88044	AN4-7A	..BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	16
328	127A	PAOZZ	5306-00-182-2015	88044	AN4H4A	..BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	48
328	128	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	64
328	129	PAOZZ	5330-00-250-0238	96906	MS29513-216	..PACKING,PREFORME..........UHE,UHH,UHV,UHX	EA	4
328	130	PAOZZ	5330-00-266-1079	96906	MS29513-221	..PACKING,PREFORME..........UHE,UHH,UHV,UHX	EA	1
328	131	PAOZZ	5330-00-291-3313	96906	MS29513-255	..PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	3

Fig 329,330 NOT USED

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
329		PAOFF	1560-01-068-5326	97499	209-060-634-5	RECEIVER,CLOSED CIR SEE FIG. 328 FOR NHA	UHE,UHH,UHV,UHX	EA	1
329	1	XAOFF		96124	745001-5	.RECEIVER	UHE,UHH,UHV,UHX	EA	1
329	2	A0000		96124	744069-7	..CAP ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
329	3	PAOZZ	1560-01-093-2860	96124	744034	...CAP,FILLER OPENING	UHE,UHH,UHV	EA	1
329	4	PAOZZ	4010-01-070-5645	96124	745010-1	...WIRE ROPE ASSEMBLY,	UHE,UHH,UHV,UHX	EA	1
329	4A	PAOZZ	5315-00-514-2660	96906	MS29523-1	...PIN,RETAINING	UHE,UHH,UHV,UHX	EA	1
329	5	PAOZZ	5330-00-251-9364	96906	MS29513-232	...PACKING,PREFORMED	UHE,UHH,UHV	EA	1
329	6	PAOZZ	1630-00-182-3401	96124	750039	..PIN,HINGE	UHE,UHH,UHV,UHX	EA	1
329	7	PAOZZ	1615-01-113-0168	96124	745009-1	..TOOL,LATCH	UHE,UHH,UHV,UHX	EA	1
329	8	PBOZZ	2915-01-147-3285	96124	750045	..SEAL,HOUSING	UHE,UHH,UHV,UHX	EA	1
329	9	XAOZZ	5330-01-158-2946	96124	750045-101	...SEAL,RUBBER SPECIAL	UHE,UHH,UHV,UHX	EA	V
329	10	XDFZZ		96124	745008-5	..HOUSING	UHE,UHH,UHV,UHX	EA	1
329	11	PBOFF	1560-01-114-0868	96124	750003-3	..MODULE,REFUELING	UHE,UHH,UHV,UHX	EA	1
329	12	PAFZZ	5305-00-054-6669	96906	MS51957-44	...SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
329	13	PBFZZ	1560-01-071-5512	96124	750010	...RETAINER,LATCH,REFU	UHE,UHH,UHV,UHX	EA	1
329	14	PAFZZ	1560-01-070-5669	96124	750009	...LATCH,REFUELING MOD	UHE,UHH,UHV	EA	1
329	15	PAFZZ	5360-01-074-8090	96124	750051	...SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
329	16	PAFZZ	5305-00-054-6677	96906	MS51957-52	...SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
329	17	XDFZZ		96124	750020	...PLATE,COVER	UHE,UHH,UHV,UHX	EA	1
329	18	MFFZZ		96124	750052	...WIRE,CLEANING	UHE,UHH,UHV,UHX	EA	1
329	19	PBFZZ	1560-01-070-7719	96124	750029-1	...POPPET,SENSING,REFU	UHE,UHH,UHV,UHX	EA	3
329	20	PBFZZ	1560-01-070-7716	96124	750029-3	...POPPET,SENSING,REFU	UHE,UHH,UHV,UHX	EA	1
329	21	XDFZZ		96124	750019	...PLATE	UHE,UHH,UHV	EA	1
329	22	PAFZZ	1560-01-070-7720	96124	750026	...DIAPHRAGM,REFUELING	UHE,UHH,UHV,UHX	EA	1
329	23	PAFZZ	5330-01-072-9200	96124	AS113-60-008	...PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
329	24	PBFZZ	1560-01-070-7718	96124	750022	...JET ASSEMBLY,REFUEL	UHE,UHH,UHV,UHX	EA	1
329	25	PAFZZ	5360-01-074-0610	96124	750049	...SPRING,HELICAL,COMP	UHE,UHH,UHV	EA	2
329	26	PAFZZ	5360-01-074-8089	96124	750050	...SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
329	27	PAFZZ	5360-01-075-7693	96124	750048	...SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
329	28	XDFZZ		96124	750056-1	...TUBE,JOINT	UHE,UHH,UHV,UHX	EA	1
329	29	PAFZZ	5330-01-072-9198	96124	AS113-60-003	...PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
329	30	PAFZZ	5330-01-072-9199	96124	AS113-60-007	...PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
329	31	XDFZZ		96124	750018	...PLATE,DIAPHRAGM	UHE,UHH,UHV,UHX	EA	1
329	32	XDFZZ		96124	750017-1	...PLATE,UPPER,SEAT	UHE,UHH,UHV,UHX	EA	1
329	33	XDFZZ		96124	750004-3	...PLATE,ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
329	34	PBFZZ	1560-01-070-7717	96124	750038-5	...ORIFICE,JET FEED,RE	UHE,UHH,UHV,UHX	EA	1
329	35	PAFZZ	5330-01-075-1007	96124	750067	...GASKET	UHE,UHH,UHV,UHX	EA	1
329	36	PAFZZ	5330-01-075-1010	96124	750063	...RETAINER,PACKING	UHE,UHH,UHV,UHX	EA	1
329	37	PAFZZ	5330-01-077-0216	96124	750031	...GASKET	UHE,UHH,UHV,UHX	EA	1
329	38	PAFZZ	3110-00-277-0119	96906	MS19060-4813	...BEARING,BALL	UHE,UHH,UHV,UHX	EA	4
329	39	XDFZZ		96124	750030	...SUPPORT,SEAL	UHE,UHH,UHV,UHX	EA	1
329	40	PAFZZ	5330-01-075-0911	96124	AS113-60-015	...PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
329	41	XDFZZ		96124	750036	...CYLINDER	UHE,UHH,UHV,UHX	EA	1
329	42	PAFZZ	5360-01-075-1164	96124	750047	...SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
329	43	PBFZZ	1560-01-070-5668	96124	750014	...PISTON ASSEMBLY,SEC	UHE,UHH,UHV,UHX	EA	1
329	44	XAFZZ		96124	750013	....BLANK,PISTON	UHE,UHH,UHV,UHX	EA	1
329	45	XAFZZ	1560-01-070-7722	96124	750013-101	.....POPPET,REFUELING MD	UHE,UHH,UHV,UHX	EA	1
329	46	XAFZZ		96124	750034	....SEAL	UHE,UHH,UHV,UHX	EA	1
329	47	XAFZZ	1560-01-070-5667	96124	750035	....RETAINER,SEAL,REFUE	UHE,UHH,UHV,UHX	EA	1
329	48	PBFZZ	1560-01-071-0159	96124	750012-1	...PISTON,REFUELING MD	UHE,UHH,UHV,UHX	EA	1
329	49	XAFZZ		96124	750011	....BLANK,PISTON	UHE,UHH,UHV,UHX	EA	1
329	50	XAFZZ	1560-01-071-5513	96124	750011-101	.....POPPET,REFUELING MD	UHE,UHH,UHV,UHX	EA	1
329	51	XAFZZ		96124	750034	....SEAL	UHE,UHH,UHV,UHX	EA	1
329	52	XAFZZ	1560-01-070-5667	96124	750035	....RETAINER,SEAL,REFUE	UHE,UHH,UHV,UHX	EA	1
329	53	XAFFF		96124	750006-3	..BASE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
329	54	PAFZZ	5340-00-376-8648	96906	MS21209C0815L	...INSERT,SCREW THREAD	UHE,UHH,UHV,UHX	EA	7
329	56	PAFZZ	5360-01-072-9335	96124	744015	..SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
329	57	PAFZZ	1560-01-070-5671	96124	744011-3	..SPIDER,REFUELING MD	UHE,UHH,UHV,UHX	EA	1
329	58	XDFZZ		96124	750040	..NIPPLE	UHE,UHH,UHV,UHX	EA	1
329	59	PBFZZ	1560-01-070-7721	96124	750027	..POPPET,NIPPLE,REFUE	UHE,UHH,UHV,UHX	EA	1

Fig 330 NOT USED

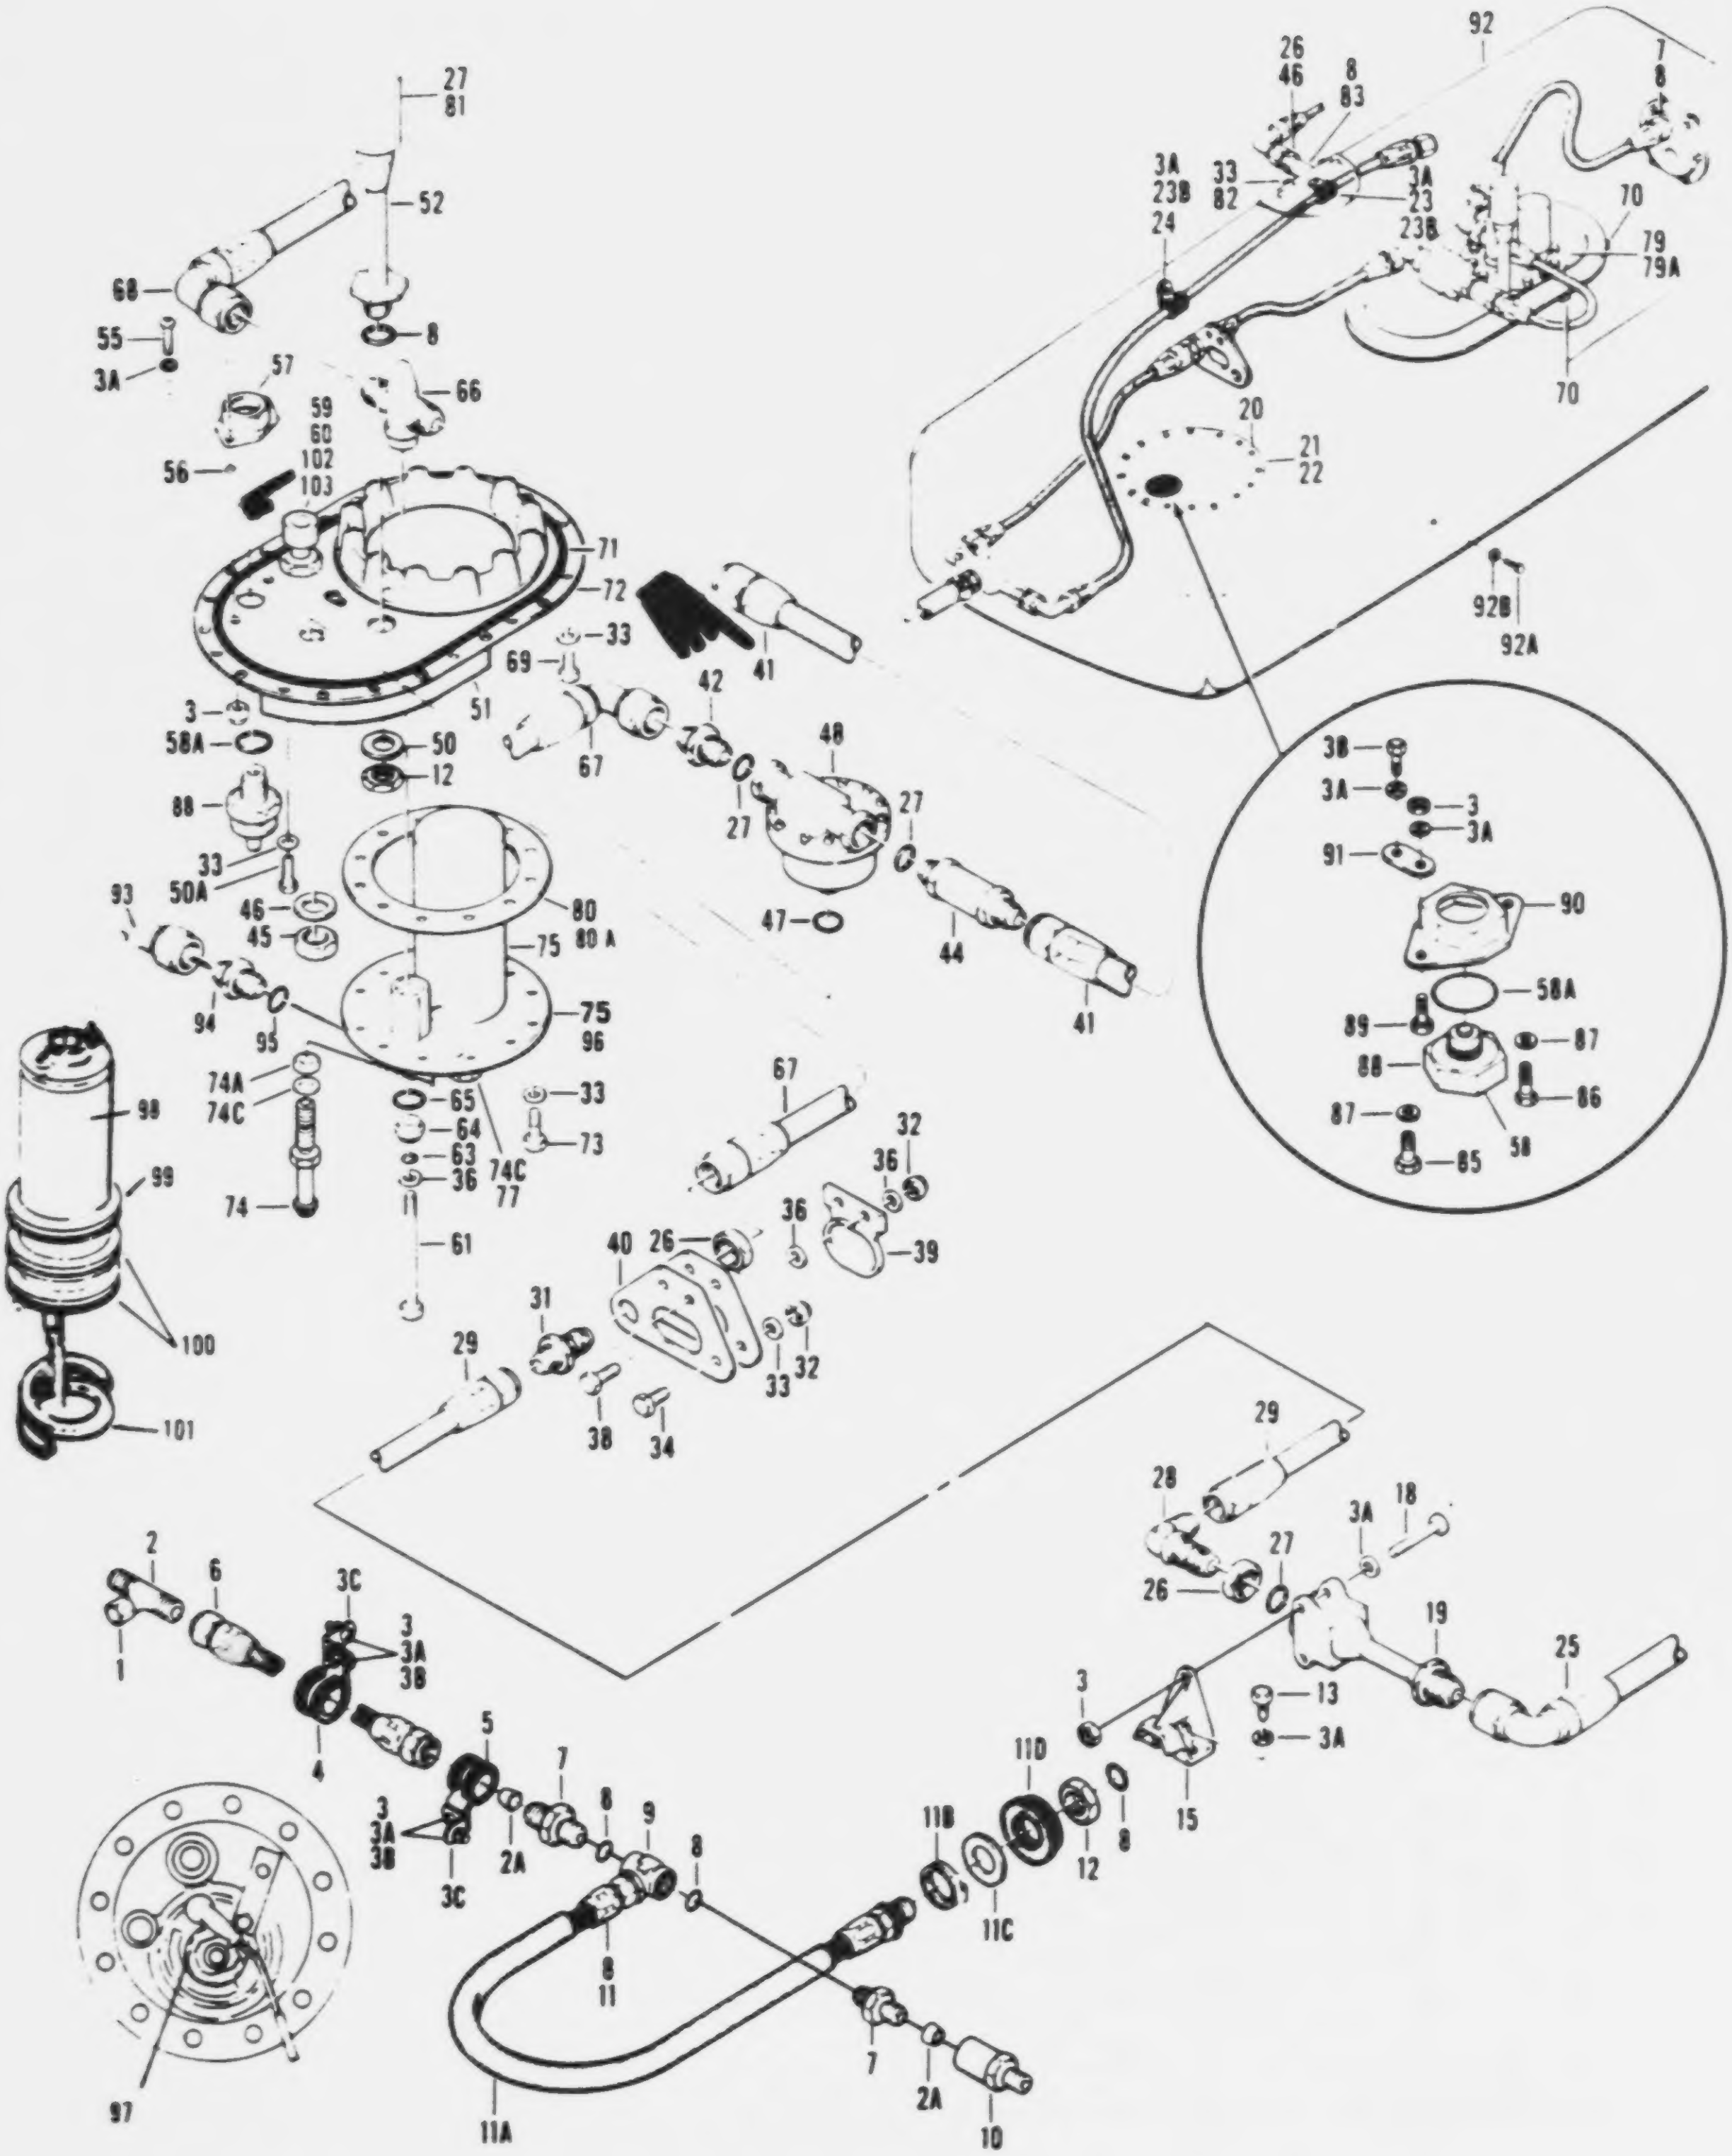
27
81
52
68
55
3A
8
57
66
59
60
102
103
56
71
72
33
69
41
42
48
3
58A
51
50
12
67
27
27
88
33
50A
46
45
80
80A
75
47
44
41
93
94
95
75
96
74A
74C
65
64
63
36
74C
77
33
73
74
61
98
99
100
101
67
32
36
40
26
36
39
31
29
33
32
38
34
92
26
46
8
83
7
8
3A
23B
33
82
3A
23
23B
24
70
79
79A
70
20
21
22
92B
92A
3B
3A
3
3A
91
90
58A
89
87
88
86
87
85
58
29
28
3A
18
27
26
2
6
3C
3
3A
3B
1
4
19
25
3
13
3A
5
11D
7
9
3
3A
3B
3C
2A
8
11B
12
8
15
8
11C
8
11
97
11A
7
2A
10

Figure 331. Fuel System Installation, Left-Hand Tank Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
331		XCFZZ		97499	205-063-600-9	FUEL SYSTEM INSTL SEE FIG.312,320,328 AND 335 FOR BALANCE OF BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
331	1	PAOZZ	4730-00-541-8296	88044	AN929A8	.CAP,TUBE..........UHE,UHH,UHV,UHX	EA	1
331	2	XDOZZ	4730-00-722-0086	96906	MS2440208	.TEE,TUBE..........UHE,UHH,UHV,UHX	EA	1
331	2A	PAOZZ	4730-01-034-4807	92215	VSF1015A8	.SLEEVE,FLARED,TUBE..........UHE,UHH,UHV,UHX	EA	5
331	3	PAOZZ	5310-00-807-1474	96306	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	10
331	3A	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	17
331	3B	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	6
331	3C	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	2
331	4	PAOZZ	5340-00-993-6247	81996	EAB700011	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
331	5	PAOZZ	5340-00-989-4573	81996	EAB700016	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
331	6	MFOZZ		96906	MS87028H090A	.HOSE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
331	7	PBOZZ	4730-00-684-6915	96906	MS2439208	.NIPPLE,TUBE..........UHE,UHH,UHV,UHX	EA	3
331	8	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	7
331	9	PAOZZ	4730-00-277-5055	88044	AN93808	.TEE,BOSS..........UHE,UHH,UHV,UHX	EA	1
331	10	PAOZZ	4820-00-018-0092	86768	488-801-1-4	.VALVE,CHECK..........UHE,UHH,UHV,UHX	EA	1
331	11	PAOZZ	4720-00-182-8971	97499	205-062-666-1	.HOSE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
331	11A	XDOZZ	4730-00-177-0668	97499	120-067B020	.SLEEVE,PROTECTIVE C..........UHE,UHH,UHV,UHX	EA	1
331	11B	PAOZZ	4730-00-278-0314	88044	AN737RM38	.CLAMP,HOSE..........UHE,UHH,UHV,UHX	EA	1
331	11C	PAOZZ	5310-00-187-2394	88044	AN960PD1616L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
331	11D	PAOZZ	5330-00-168-6099	97499	205-062-606-3	.SEAL,SPECIAL..........UHE,UHH,UHV,UHX	EA	1
331	12	PAOZZ	5310-00-282-7835	96906	MS2440008	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
331	13	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
331	15	PBOZZ	1560-00-176-2042	97499	205-062-686-1	.SUPPORT,PUMP..........UHE,UHH,UHV,UHX	EA	1
331	18	PAOZZ	5305-00-936-0044	96906	MS27039-1-27	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
331	19	PAOZZ	1560-00-789-4969	97499	205-061-634-1	.PUMP ASSY..........UHE,UHH,UHV,UHX	EA	1
331	20	PBOZZ	5305-00-043-2681	96905	MS24694S96	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	16
331	21	PAOZZ	5330-00-291-3313	96906	MS29513-255	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
331	22	PAOZZ	1560-00-177-4172	97499	205-062-636-1	.COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
331	23	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
331	23B	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
331	24	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
331	25	MFOZZ		96906	MS87028J336C	.HOSE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
331	26	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
331	27	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	4
331	28	PBOZZ	4730-00-684-6922	96906	MS2439406	.ELBOW,TUBE..........UHE,UHH,UHV,UHX	EA	1
331	29	PAOZZ	4720-00-421-1420	00524	646121-600280	.HOSE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
331	31	PAOZZ	4730-00-805-2221	96906	MS2439306	.NIPPLE,TUBE..........UHE,UHH,UHV,UHX	EA	1
331	32	PAOZZ	5310-00-807-1475	96905	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	3
331	33	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	42
331	34	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
331	36	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	V
331	38	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	2
331	39	PAOZZ	4820-00-762-0058	97499	205-060-666-1	.VALVE..........................UHE,UHH,UHV,UHX	EA	1
331	40	MFOZZ	1560-00-461-4386	97499	205-061-643-3	.PLATE..........................UHE,UHH,UHV,UHX	EA	2
331	41	MFOZZ		96906	MS8000G130A	.HOSE ASSY..........................UHE,UHH,UHV,UHX	EA	1
331	42	PAOZZ	4730-00-684-6916	96906	MS24392D6	.NIPPLE,TUBE..........................UHE,UHH,UHV,UHX	EA	1
331	44	PAOZZ	4820-00-226-1784	86768	488-6D1-1-4	.VALVE,CHECK..........................UHE,UHH,UHV,UHX	EA	1
331	45	PAOZZ	5310-00-881-6069	96906	MS9200-06	.NUT,PLAIN,HEXAGON..........................UHE,UHH,UHV,UHX	EA	1
331	46	PAOZZ	5310-00-188-7723	81352	AN960PD916L	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	2
331	47	PAOZZ	5330-00-248-3848	96906	MS29513-018	.PACKING,PREFORMED..........................UHE,UHH,UHV,UHX	EA	1
331	48	PAOZZ	5930-00-405-3675	97499	206-061-635-5	.SWITCH,ELECTRICAL..........................UHE,UHH,UHV,UHX	EA	1
331	50	PAOZZ	5310-00-167-0842	88044	AN960-1216L	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	1
331	50A	PAOZZ	5306-00-151-1423	88044	AN4-11A	.BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	4
331	51	PAOZZ	1560-00-175-1972	97499	205-062-641-1	.COVER,WIRE,FUEL, SUMP..........................UHE,UHH,UHV,UHX	EA	1
331	52	PAOZZ	1560-00-176-2041	97499	212-060-602-5	.SUPPORT,SWITCH..........................UHE,UHH,UHV,UHX	EA	1
331	55	PAOZZ	5305-00-719-5402	96906	MS24694S53	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	2
331	56	PAOZZ	5330-00-171-8360	83259	800-515-10 0S	.PACKING,RETAINER..........................UHE,UHH,UHV,UHX	EA	1
331	57	PAOZZ	5310-00-010-7434	97499	205-060-645-1	.NUT,PLAIN,PLATE..........................UHE,UHH,UHV,UHX	EA	1
331	58	PAOOO	2915-00-134-4512	97499	205-062-656-1	.VALVE,FUEL DRAIN..........................UHE,UHH,UHV,UHX	EA	1
331	58A	PAOZZ	5330-00-250-0224	96906	MS29513-020	.PACKING,PREFORMED..........................UHE,UHH,UHV,UHX	EA	2
331	59	PAOOO	2915-00-134-4504	97499	205-062-657-1	.VALVE,DEFUELING..........................UHE,UHH,UHV,UHX	EA	1
331	60	PAOZZ	5330-00-054-0168	96906	MS29513-029	.PACKING,PREFORME..........................UHE,UHH,UHV,UHX	EA	1
331	61	PAOZZ	5306-00-281-8945	88044	AN4H35A	.BOLT,MACHINE U/O PUMP NSN 2915-00-018-0012 ....UHE,UHH,UHV,UHX	EA	1
331	63	PAOZZ	5330-00-248-3835	96906	MS29513-010	.PACKING,PREFORMED..........................UHE,UHH,UHV,UHX	EA	1
331	64	PAOZZ	2915-00-224-3224	80049	5089390	.PLUG,BOLT RETAINING U/O PUMP NSN 2915-00-018-0012 ....UHE,UHH,UHV,UHX	EA	1
331	65	PAOZZ	5330-00-248-3844	96906	MS29513-113	.PACKING,PREFORMED U/O PUMP NSN 2915-00-018-0012 ....UHE,UHH,UHV,UHX	EA	1
331	66	PAOZZ	1560-00-836-9943	99473	S2490	.CROSS FITTING,ASSY..........................UHE,UHH,UHV,UHX	EA	1
331	67	MFOZZ	4720-00-491-4991	96906	MS8000G130A	.HOSE ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
331	68	MFOZZ		96906	MS37028H110C	.HOSE ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
331	69	PAOZZ	5305-00-891-8883	96906	MS27039-4-11	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	21
331	70	PAOZZ	5365-00-181-1265	97499	205-062-669-1	.RING ASSY,RETAINER..........................UHE,UHH,UHV,UHX	EA	4
331	71	PAOZZ	5330-00-291-3272	96906	MS29513-270	.PACKING,PREFORMED..........................UHE,UHH,UHV,UHX	EA	1
331	72	PAOZZ	1560-00-176-1273	97499	205-062-640-1	.SUMP ASSEMBLY,FUEL..........................UHE,UHH,UHV,UHX	EA	1
331	73	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	12
331	74	PAOZZ	4730-00-187-0881	88044	AN807-4D	.ADAPTER,STRAIGHT..........................UHE,UHH,UHV,UHX	EA	1
331	74A	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON..........................UHE,UHH,UHV,UHX	EA	1
331	74C	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED..........................UHE,UHH,UHV,UHX	EA	2
331	75	PAOOO	2915-00-012-8584	97499	205-060-607-5	.PUMP,SUBMERSED,AIRC SEE FIG.332 & 333 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	2
331	77	PAOZZ	5365-00-837-0866	96906	MS24391D4L	.PLUG,MACHINE THREAD..........................UHE,UHH,UHV,UHX	EA	1
331	78	PAOZZ	1560-00-152-3530	85109	476D12NH48LT32	.FLANGE,FUEL TANK..........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
331	79A	PAOZZ	5305-00-964-2845	96906	MS24694S51	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
331	80	PAOZZ	5330-01-079-8163	97499	1C64-1 PUMP	.GASKET	UHE,UHH,UHV,UHX	EA	1
331	80A	PAOZZ	5330-01-053-7035	97499	60-011-1	GASKET	UHE,UHH,UHV,UHX	EA	1
331	81	PAOZZ	2915-00-969-9158	97499	204-060-654-5	.SWITCH,ASSY	UHE,UHH,UHV,UHX	EA	1
331	82	PAOZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
331	83	PAOZZ	4820-00-176-4616	97499	205-062-655-1	.VALVE,CHECK	UHE,UHH,UHV,UHX	EA	1
331	85	PAOZZ	5306-00-182-2014	88044	AN4-3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
331	86	PAOZZ	5306-00-182-2014	88044	AN4H3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
331	87	PAOZZ	5310-00-182-6173	97499	140-009D17T39	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
331	88	PAOOO	2915-00-134-4512	97499	205-062-656-1	.VALVE,FUEL DRAIN	UHE,UHH,UHV,UHX	EA	1
331	89	PAOZZ	5305-00-719-5400	96906	MS24694S48	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
331	90	PAOZZ	5310-00-010-7434	97499	205-060-645-1	.NUT,PLAIN,PLATE	UHE,UHH,UHV,UHX	EA	1
331	91	PAOZZ	5340-00-181-1355	97499	205-062-661-1	.CLIP,SUMP DRAIN	UHE,UHH,UHV,UHX	EA	2
331	92	PAOOO	1560-00-176-1250	97499	206-062-635-1	.TANK,FUEL,AIRCRAFT LH	UHE,UHH,UHV,UHX	EA	1
331	92A	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
331	92B	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
331	93	MFOZZ		97499	205-061-668-1	.TUBE ASSEMBLY, METAL USBL EFF 62-2106 THRU 69-15291	UHH,UHE,UHV	EA	1
331	94	MFOZZ		97499	205-061-672-1	REDUCER USBL EFF 62-2106 THRU 69-15291	UHH,UHE,UHV	EA	1
331	95	PAOZZ	5330-00-987-3393	02697	365418-6	PACKING,PREFORMED USBL EFF 62-2106 THRU 69-15291	UHH,UHE,UHV	EA	1
331	96	PAOFF	2915-01-124-5222	97499	1C64-1	PUMP,SUBMERGED,AIRC	UHE,UHH,UHV,UHX	EA	1
331	97	PAOZZ	5305-01-119-3623	80205	NAS1190-06P4LH	SCREW	UHE,UHH,UHV,UHX	EA	1
331	98	PAOFF	2915-01-131-4998	26433	2C27-3	CARTRIDGE	UHE,UHH,UHV,UHX	EA	1
331	99	PAOZZ	5330-00-410-4887	96906	MS29513-033	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
331	100	PAOZZ	5330-00-435-9355	96906	MS29513-034	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
331	101	PAOZZ	5365-00-527-1987	80756	RR227S	RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
331	102	PAOZZ	5330-00-263-8033	96906	MS29512-12	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
331	103	PAOZZ	5365-01-191-4762	91511	967A-4	PLUG,MACHINE	UHE,UHH,UHV,UHX	EA	1

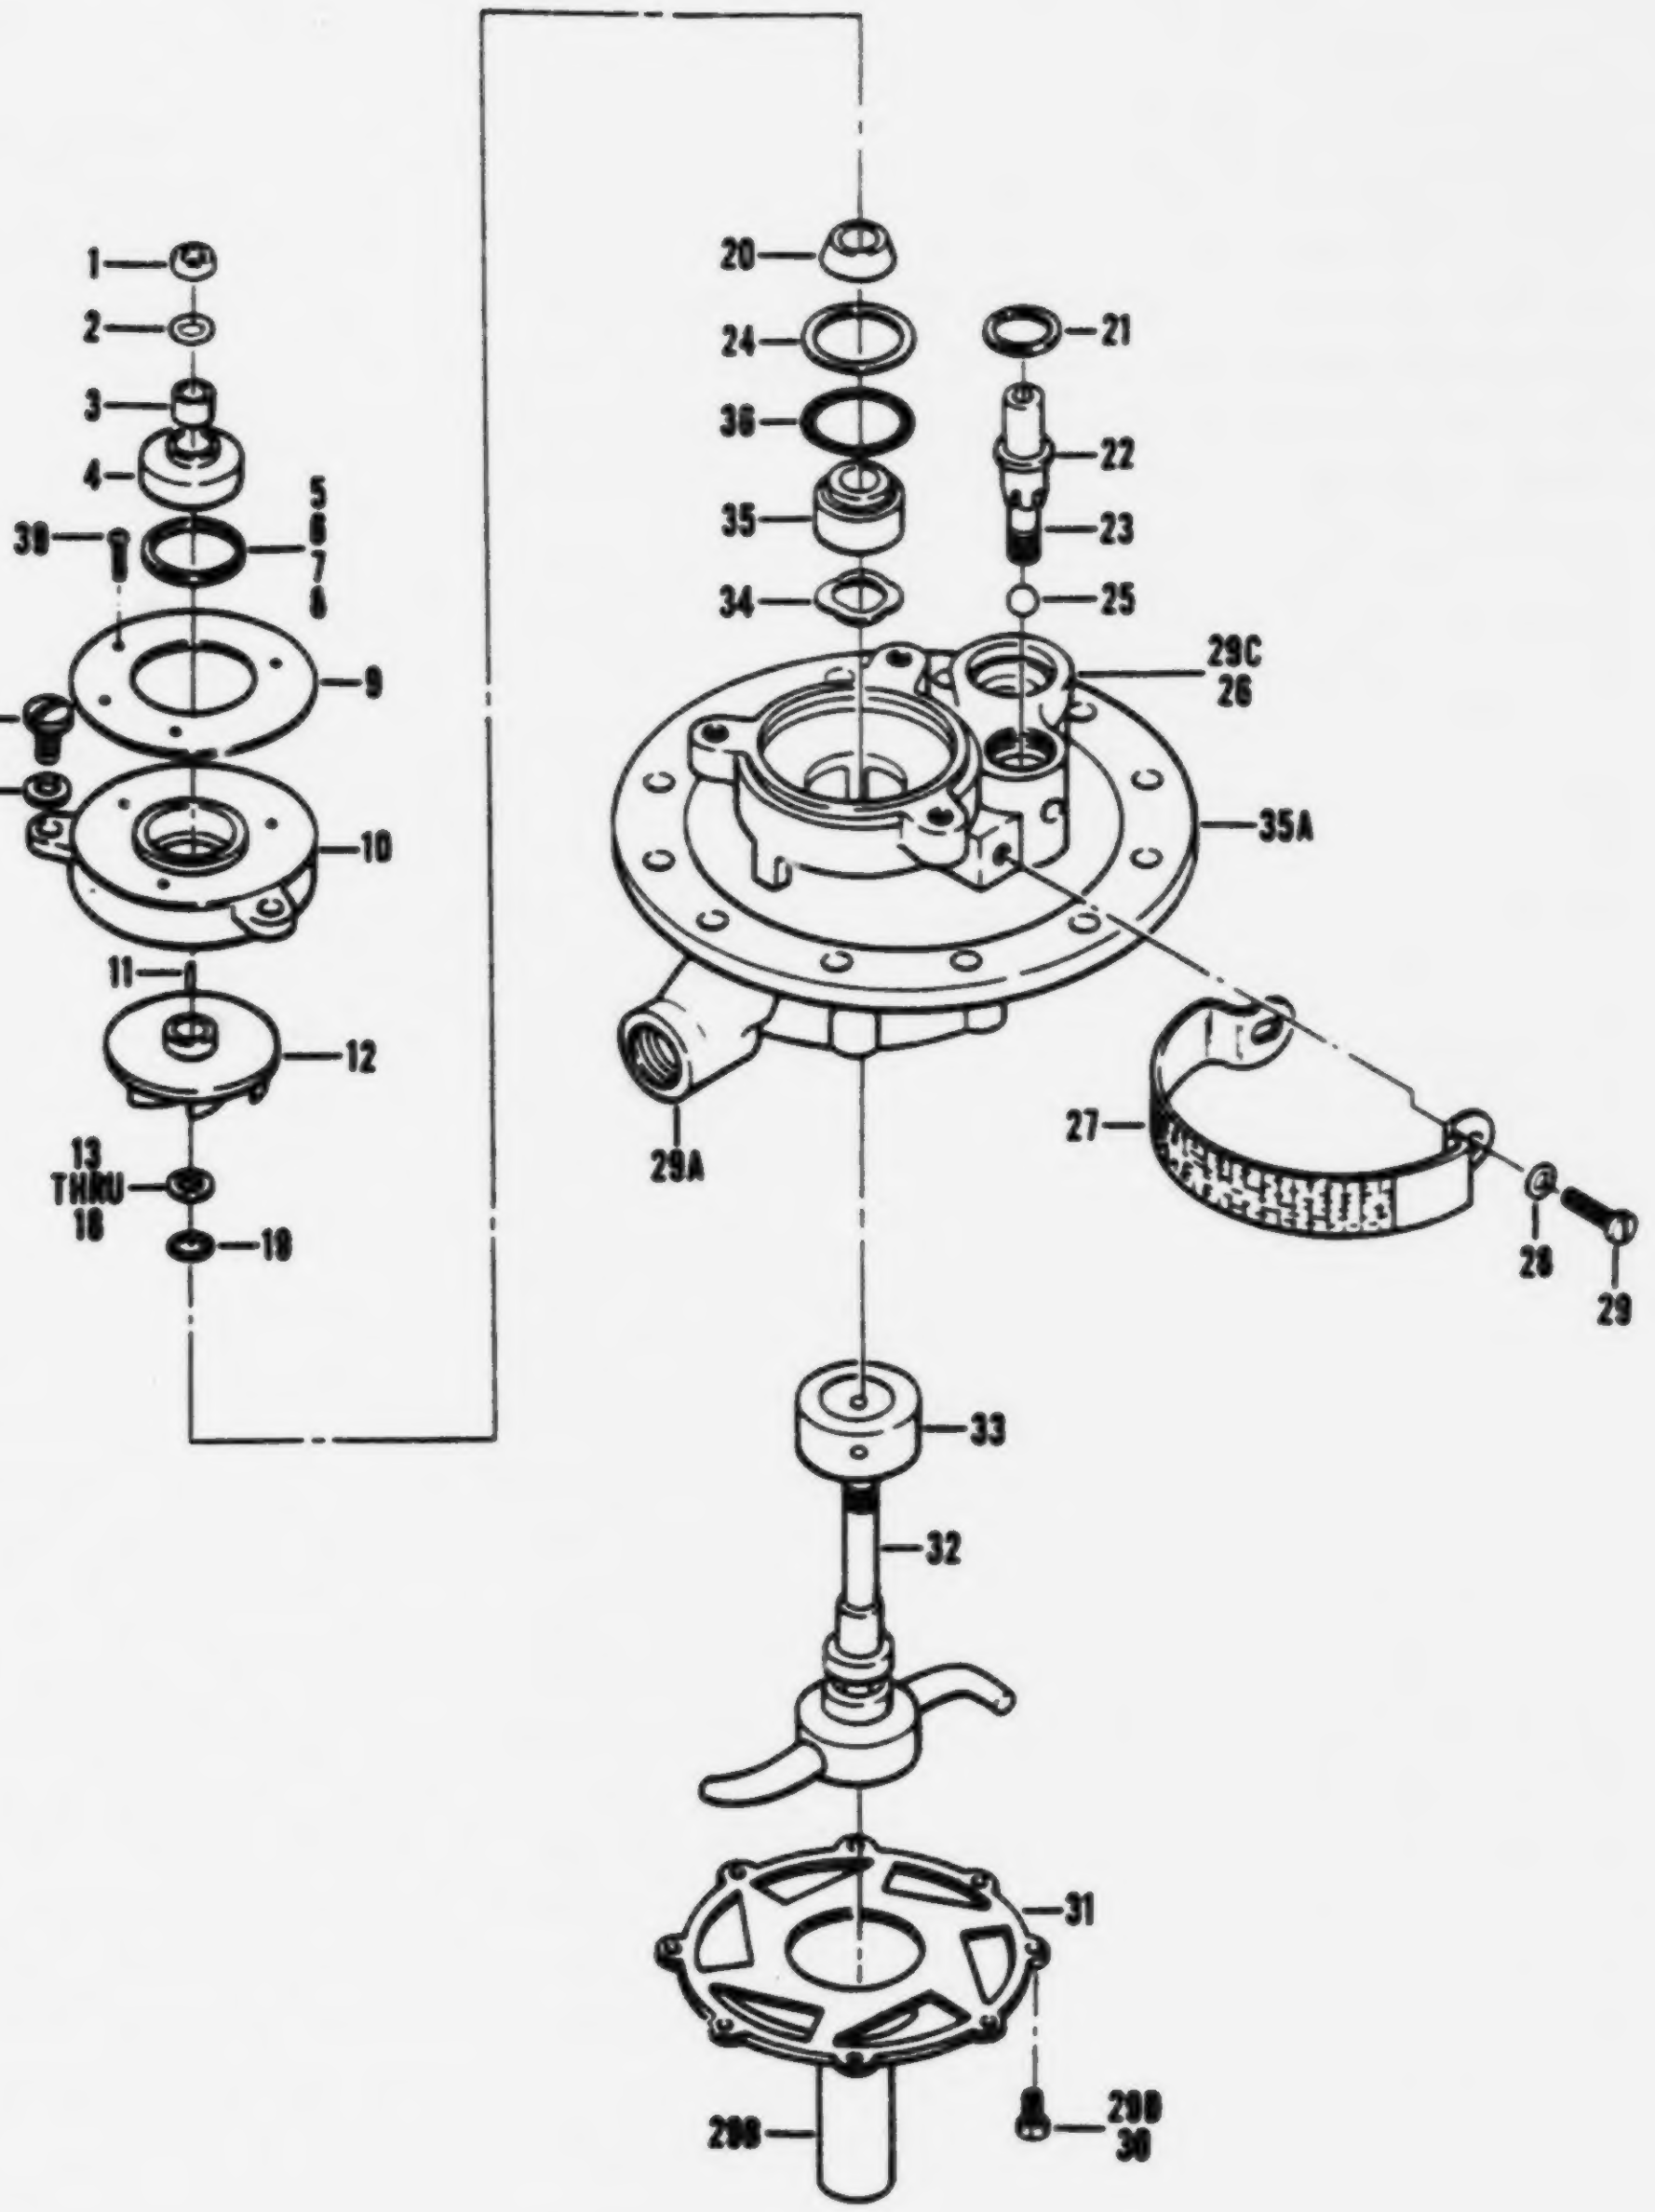
1
2
3
4
5
6
7
8
39
9
38
37
10
11
12
13
THRU
18
19
20
24
36
35
34
21
22
23
25
29C
26
35A
27
29A
28
29
33
32
31
29B
29B
30

Figure 332. Pump, Submerged, Aircraft

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
332		PAODD	2915-00-921-5660	51663	RG12470	PUMP,SUBMERGED,ACFT SEE FIGS 331 AND 335 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
332	1	PADZZ	5310-00-059-9265	96906	MS21046C4	.NUT,SELF-LOCKING, HEXAGON .... UHE,UHH,UHV,UHX	EA	1
332	2	PADZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
332	3	PADZZ	3120-00-794-2663	51663	RB12474	.BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
332	4	PADZZ	3110-00-866-7250	51663	RA21321	.BEARING,BALL, ANNULAR .... UHE,UHH,UHV,UHX	EA	1
332	5	PADZZ	5365-00-033-5977	35351	27713-01	.SHIM .... UHE,UHH,UHV,UHX	EA	1
332	6	PADZZ	5365-00-597-7044	35351	27713-02	.SHIM .... UHE,UHH,UHV,UHX	EA	1
332	7	PADZZ	5365-00-033-5978	35351	27713-03	.SHIM .... UHE,UHH,UHV,UHX	EA	1
332	8	PADZZ	5365-00-597-7046	35351	27713-05	.SHIM .... UHE,UHH,UHV,UHX	EA	1
332	9	PADZZ	9905-00-796-4911	51663	RB12476	.PLATE, IDENTIFICATION .... UHE,UHH,UHV,UHX	EA	1
332	10	PADZZ	2915-00-793-0024	51663	RD12475	.COVER,END,FUEL PUMP .... UHE,UHH,UHV,UHX	EA	1
332	11	PADZZ	5315-00-789-1377	51663	RA11444-2	.KEY,MACHINE .... UHE,UHH,UHV,UHX	EA	1
332	12	PADZZ	2915-00-790-2310	51663	RB12254-8	.IMPELLER,PUMP,FUEL .... UHE,UHH,UHV,UHX	EA	1
332	13	PADZZ	5365-00-793-0734	51663	RB12484-1	.SHIM .... UHE,UHH,UHV,UHX	EA	V
332	14	XBDZZ	5340-00-793-0735	51663	RB12484-2	.SHIM .... UHE,UHH,UHV,UHX	EA	V
332	15	XBDZZ	5340-00-793-0737	51663	RB12484-3	.SHIM .... UHE,UHH,UHV,UHX	EA	V
332	16	PADZZ	5365-00-793-0742	51663	RB12484-4	.SHIM .... UHE,UHH,UHV,UHX	EA	V
332	17	XBDZZ	5340-00-793-0743	51663	RB12484-5	.SHIM .... UHE,UHH,UHV,UHX	EA	V
332	18	XDDZZ	5365-00-793-0746	51663	RB12484-6	.SHIM .... UHE,UHH,UHV,UHX	EA	V
332	19	PADZZ	5330-00-166-0969	81349	M83248-1-010	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	1
332	20	PADZZ	2915-00-788-1182	51663	RB12473	.SEAT,SEAL .... UHE,UHH,UHV,UHX	EA	1
332	21	XDDZZ	5365-00-793-0765	51663	RD12479-81S	.RING,RETAINING .... UHE,UHH,UHV,UHX	EA	1
332	22	PADZZ	2915-00-793-0023	51663	RB12483	.GUIDE,RELIEF VALVE .... UHE,UHH,UHV,UHX	EA	1
332	23	PADZZ	5360-00-793-0021	51663	RA9174	.SPRING,HELICAL,COMP .... UHE,UHH,UHV,UHX	EA	1
332	24	XDDZZ	5365-00-793-0792	51663	RD15951-62S	.RING,RETAINING .... UHE,UHH,UHV,UHX	EA	1
332	25	PADZZ	3110-00-183-9164	96906	MS19060-26	.BEARING,BALL .... UHE,UHH,UHV,UHX	EA	1
332	26	PADZZ	2915-00-793-0032	51663	RR12471	.HOUSING,PUMP ASSEMB .... UHE,UHH,UHV,UHX	EA	1
332	27	PADZZ	2915-00-790-2329	51663	RB12478	.STRAINER ELEMENT,SE .... UHE,UHH,UHV,UHX	EA	1
332	28	PADZZ	5310-00-515-8058	88044	AN960-8	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	2
332	29	PADZZ	5305-00-145-6971	88044	AN503-8-6	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
332	29A	PADZZ	5340-00-817-0917	80205	NAS818-6	.PLUG,PROTECTIVE, ... UHE,UHH,UHV,UHX	EA	2
332	29B	PADZZ	5340-00-764-7094	80205	NAS816-48	.CAP-PLUG,PROTECT .... UHE,UHH,UHV,UHX	EA	1
332	29C	PADZZ	5340-00-764-7093	80205	NAS816-72	.CAP-PLUG,PROTECT .... UHE,UHH,UHV,UHX	EA	1
332	29D	PADZZ	9525-00-355-6072	96906	MS20995NC32	.WIRE,NONELECTRICAL .... UHE,UHH,UHV,UHX	LB	V
332	30	PADZZ	5305-00-282-2712	88044	AN503-6-8	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	8
332	31	PADZZ	2915-00-793-0025	51663	RD18455	.VANE ADN CONE, OUTLET .... UHE,UHH,UHV,UHX	EA	1
332	32	PADZZ	2915-00-793-0028	51663	RD18457	.SHAFT AND NOZZLE .... UHE,UHH,UHV,UHX	EA	1
332	33	PADZZ	3120-00-922-0738	51663	RB12472	..BEARING,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
332	34	PADZZ	5310-00-793-0022	51663	RB12481	.WASHER,SPRING TENSION .... UHE,UHH,UHV,UHX	EA	1
332	35	PADZZ	5330-00-793-0684	51663	RB12477	.SEAL,PLAIN ENCASED .... UHE,UHH,UHV,UHX	EA	1
332	35A	PADZZ	5340-00-793-0733	51663	RB10768-1	.PLUG,PROTECTIVE .... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
332	36	PADZZ	5330-00-166-0996	81349	MS3248-1-019	.PACKING,PREFORMED..............................UHE,UHH,UHV,UHX	EA	1
332	37	PADZZ	5310-00-515-8058	88044	AN960-8	.WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	3
332	38	PADZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
332	39	XDDZZ	5305-00-253-5603	96906	MS21318-1	.SCREW,DRIVE..............................UHE,UHH,UHV,UHX	EA	3

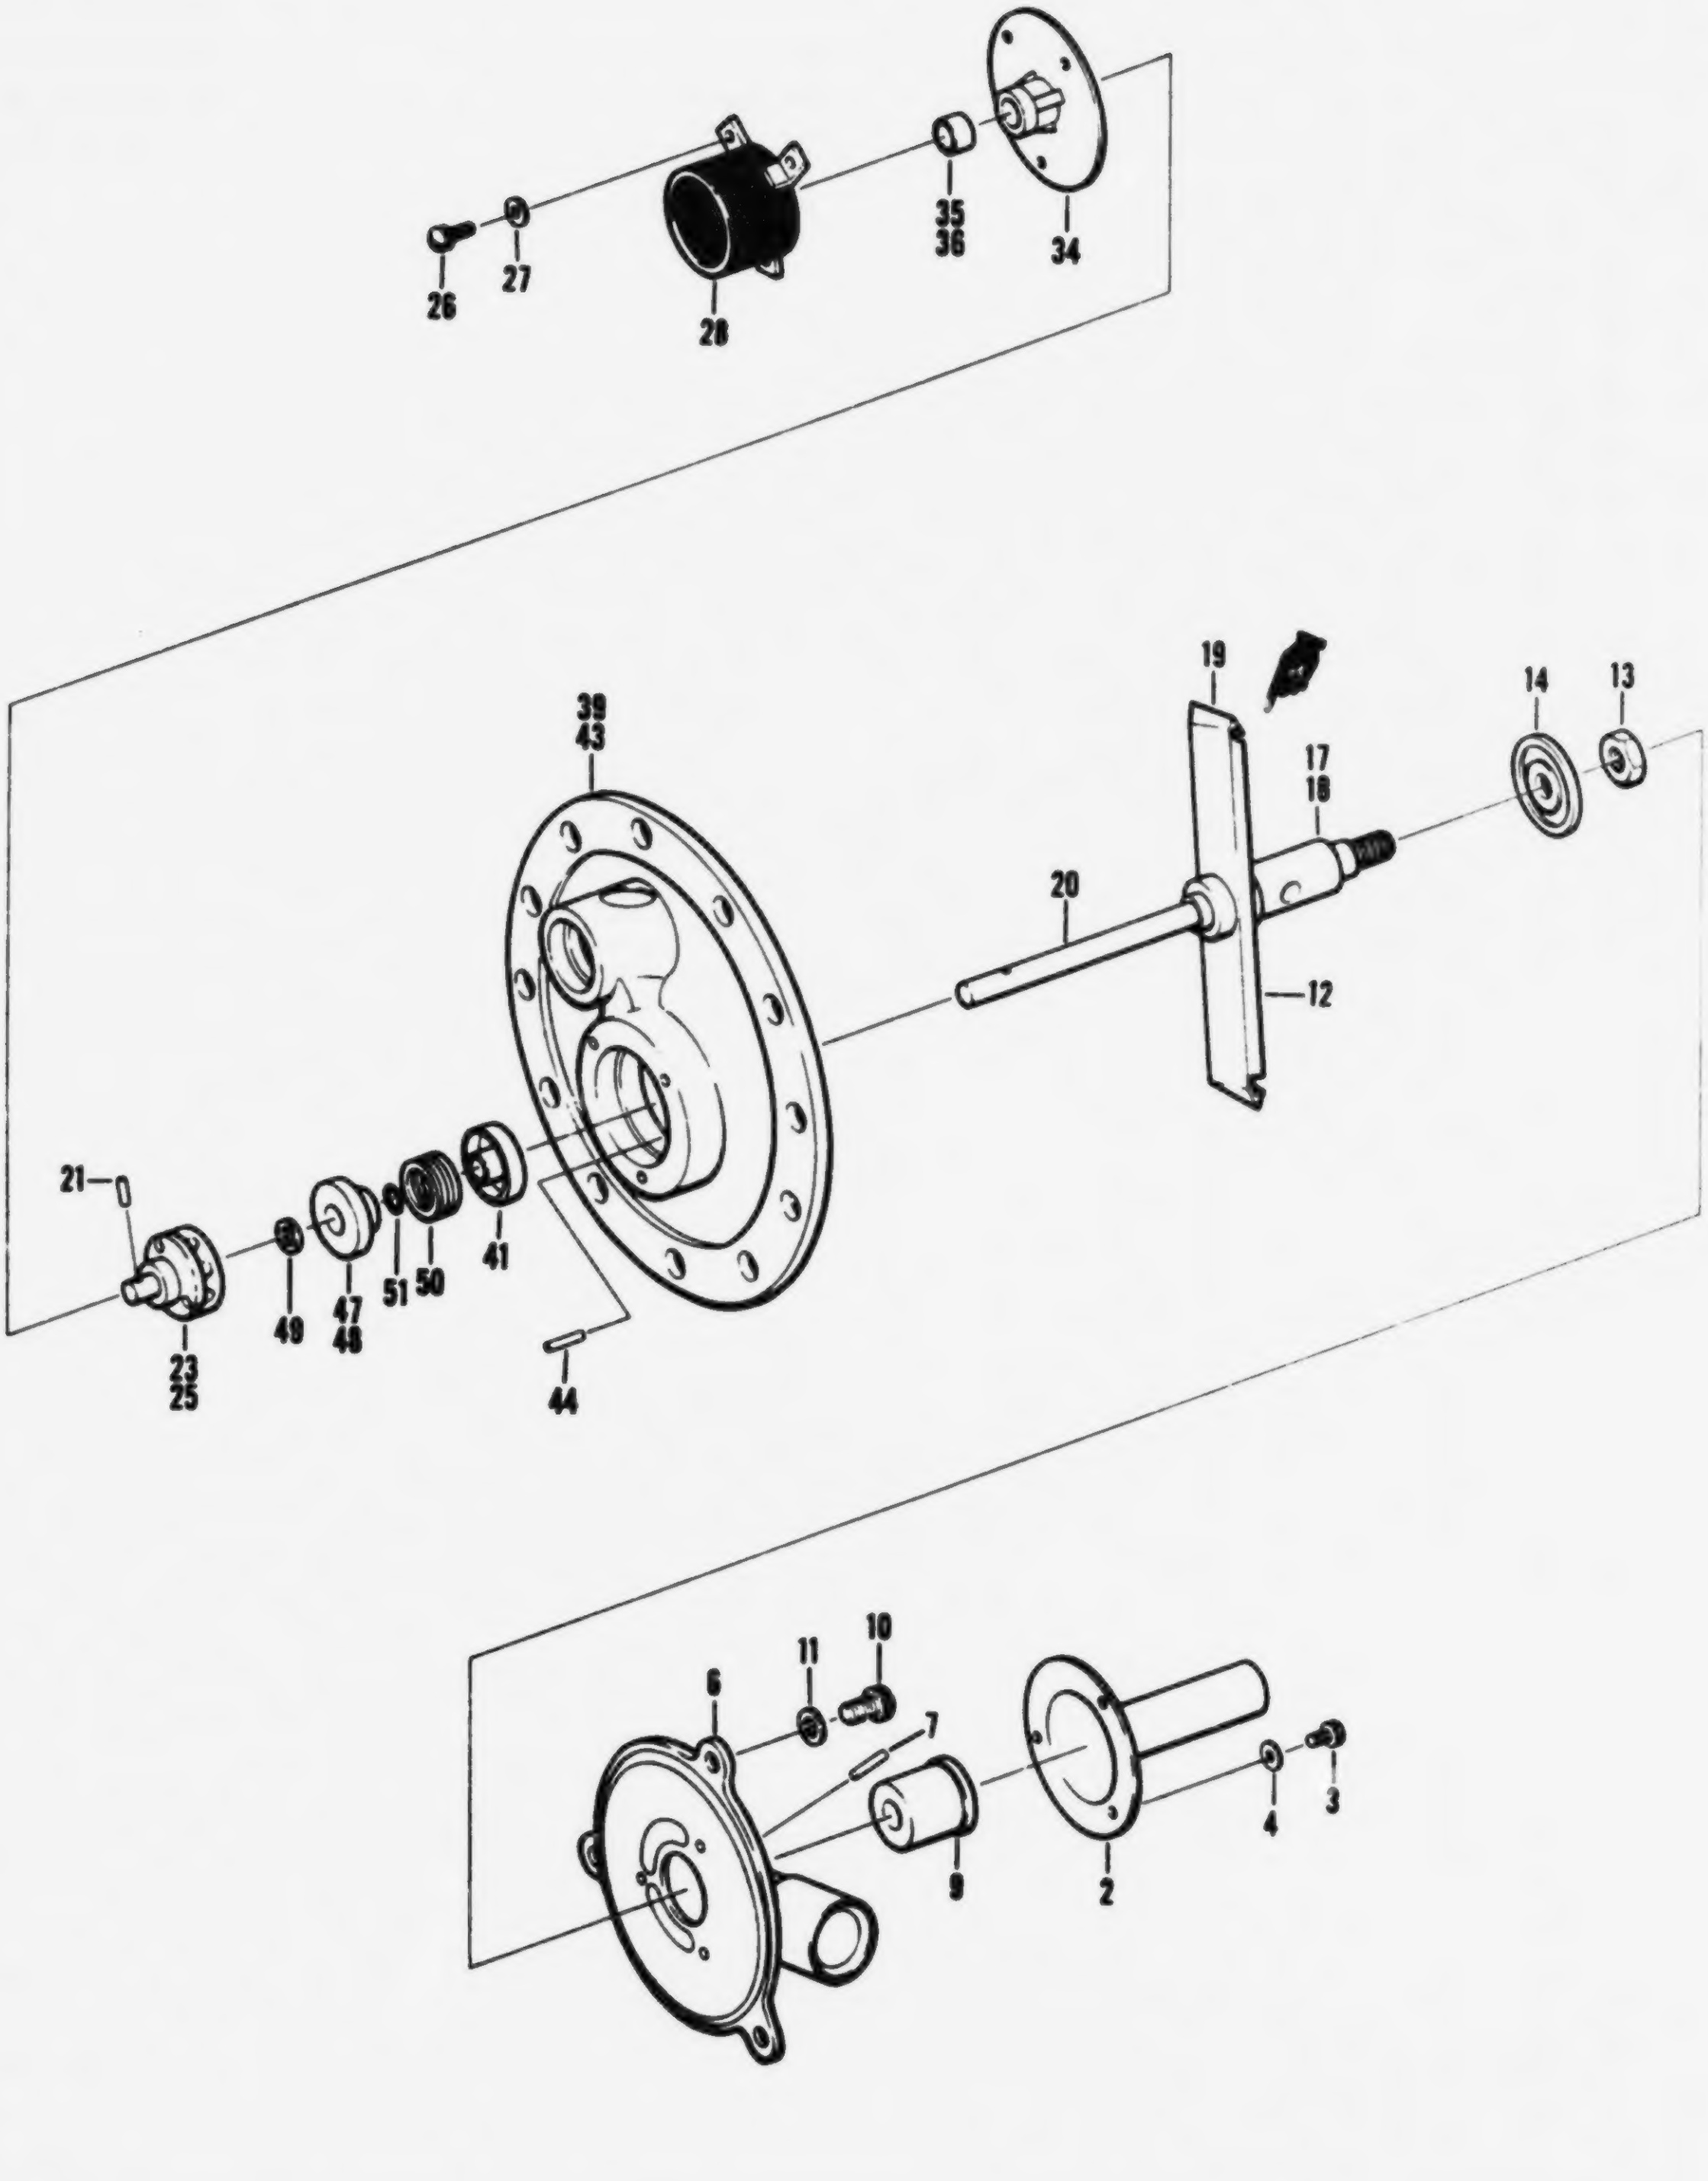
26
27
28
35
36
34
19
39
43
17
18
14
13
20
12
21
23
25
49
47
48
51
50
41
44
10
11
6
7
9
2
4
3

Figure 333. Pump, Submerged, Aircraft

(1) ILLUSTRATION FIG. NO.	(1) ILLUSTRATION ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
333		PADDD	2915-00-012-8684	81982	60-351E	PUMP,SUBMERGED,ACFT SEE FIGS. 331 AND 335 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
333	2	PBDZZ	2915-00-403-7055	81982	60-351152	AIR OUTLET TUBE........UHE,UHH,UHV,UHX	EA	1
333	3	PADZZ	5305-00-923-2585	96906	MS35275-260	SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	3
333	4	PADZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT........UHE,UHH,UHV,UHX	EA	3
333	6	XDDDD	2915-00-176-8943	81982	60-351150	CAP ASSY,END........UHE,UHH,UHV,UHX	EA	1
333	7	PBDZZ	5315-00-821-9522	96906	MS35672-22	PIN,GROOVED,HEAD........UHE,UHH,UHV,UHX	EA	1
333	9	XDDZZ	3120-00-410-5947	81982	60-351151	BEARING,SLEEVE........UHE,UHH,UHV,UHX	EA	1
333	10	PBDZZ	5305-00-939-9188	96906	MS35275-263	SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	3
333	11	PADZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT........UHE,UHH,UHV,UHX	EA	3
333	12	PBDDD	2915-00-403-7053	81982	60-351153	SPINDLE ASSY,FUEL........UHE,UHH,UHV,UHX	EA	1
333	13	PADZZ	5310-00-813-3233	80205	NAS679C08M	NUT,SELF-LOCKING, HEXAGON........UHE,UHH,UHV,UHX	EA	1
333	14	XDDZZ		81982	60-351157	WASHER,THRUST........UHE,UHH,UHV,UHX	EA	1
333	17	XADDD	2915-00-099-5250	81982	60-351153	SPINNER TURBINE FUEL........UHE,UHH,UHV,UHX	EA	1
333	18	PBDZZ	2915-00-097-0115	81982	60-351154	SPINNER,TURBINE, PUMP........UHE,UHH,UHV,UHX	EA	1
333	19	PBDZZ	2915-00-097-0118	81982	60-351155	PLUG,SPINNER SHAFT........UHE,UHH,UHV,UHX	EA	1
333	20	PBDZZ	2915-00-097-0108	81982	60-351156	SPINNER,TURBINE, SPINNER........UHE,UHH,UHV,UHX	EA	1
333	21	PADZZ	5315-00-619-3999	96906	MS51923-187	PIN,SPRING........UHE,UHH,UHV,UHX	EA	1
333	23	PADDD	2915-00-097-0114	81982	60-351138	IMPELLER,PUMP........UHE,UHH,UHV,UHX	EA	1
333	25	XDDZZ	2915-00-097-0119	81982	60-351128	IMPELLER ASSEMBLY,F........UHE,UHH,UHV,UHX	EA	1
333	26	PADZZ	5305-00-923-2585	96906	MS35275-250	SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	3
333	27	PADZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT........UHE,UHH,UHV,UHX	EA	3
333	28	PADZZ	2915-00-900-3365	81982	60-351126	STRAINER ELEMENT........UHE,UHH,UHV,UHX	EA	1
333	34	XADDD	2915-00-403-7057	81982	60-351160	ADAPTER,INLET,PUMP........UHE,UHH,UHV,UHX	EA	1
333	35	PBDZZ	2915-00-097-0121	81982	60-351161	.ADAPTER,INLET,FUEL........UHE,UHH,UHV,UHX	EA	1
333	36	PADZZ	3120-00-411-2623	81982	60-351162	.BEARING,SLEEVE........UHE,UHH,UHV,UHX	EA	1
333	39	PBDDD	2915-00-403-7056	81982	60-351137	HOUSING ASSY,PUMP........UHE,UHH,UHV,UHX	EA	1
333	41	XDDZZ	5330-00-185-0190	81982	60-351135	.PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	1
333	43	PADZZ	2915-00-097-0113	81982	60-351136	.HOUSING ASSY,........UHE,UHH,UHV,UHX	EA	1
333	44	PBDZZ	5315-00-806-7039	96906	MS16555-604	. PIN,STRAIGHT, HEADLESS........UHE,UHH,UHV,UHX	EA	1
333	45	XBDZZ	5330-00-764-6509	81982	HS232-31-006	PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	1
333	47	XDDDD	2915-00-403-7054	81982	60-351140	SEAL,SHAFT,FUEL PUMP........UHE,UHH,UHV,UHX	EA	1
333	48	PBDZZ	2915-00-097-0112	81982	60-351139	..RETAINER,SHAFT SEAL........UHE,UHH,UHV,UHX	EA	1
333	49	PBDZZ	5330-00-174-7827	81982	60-351119	.SEAL,PLAIN........UHE,UHH,UHV,UHX	EA	1
333	50	PADZZ	5360-00-793-0062	81982	60-35157	SPRING,SHAFT,SEAL........UHE,UHH,UHV,UHX	EA	1
333	51	XBDZZ	5330-00-764-7107	02139	568-008	PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	1

Fig 334 NOT USED

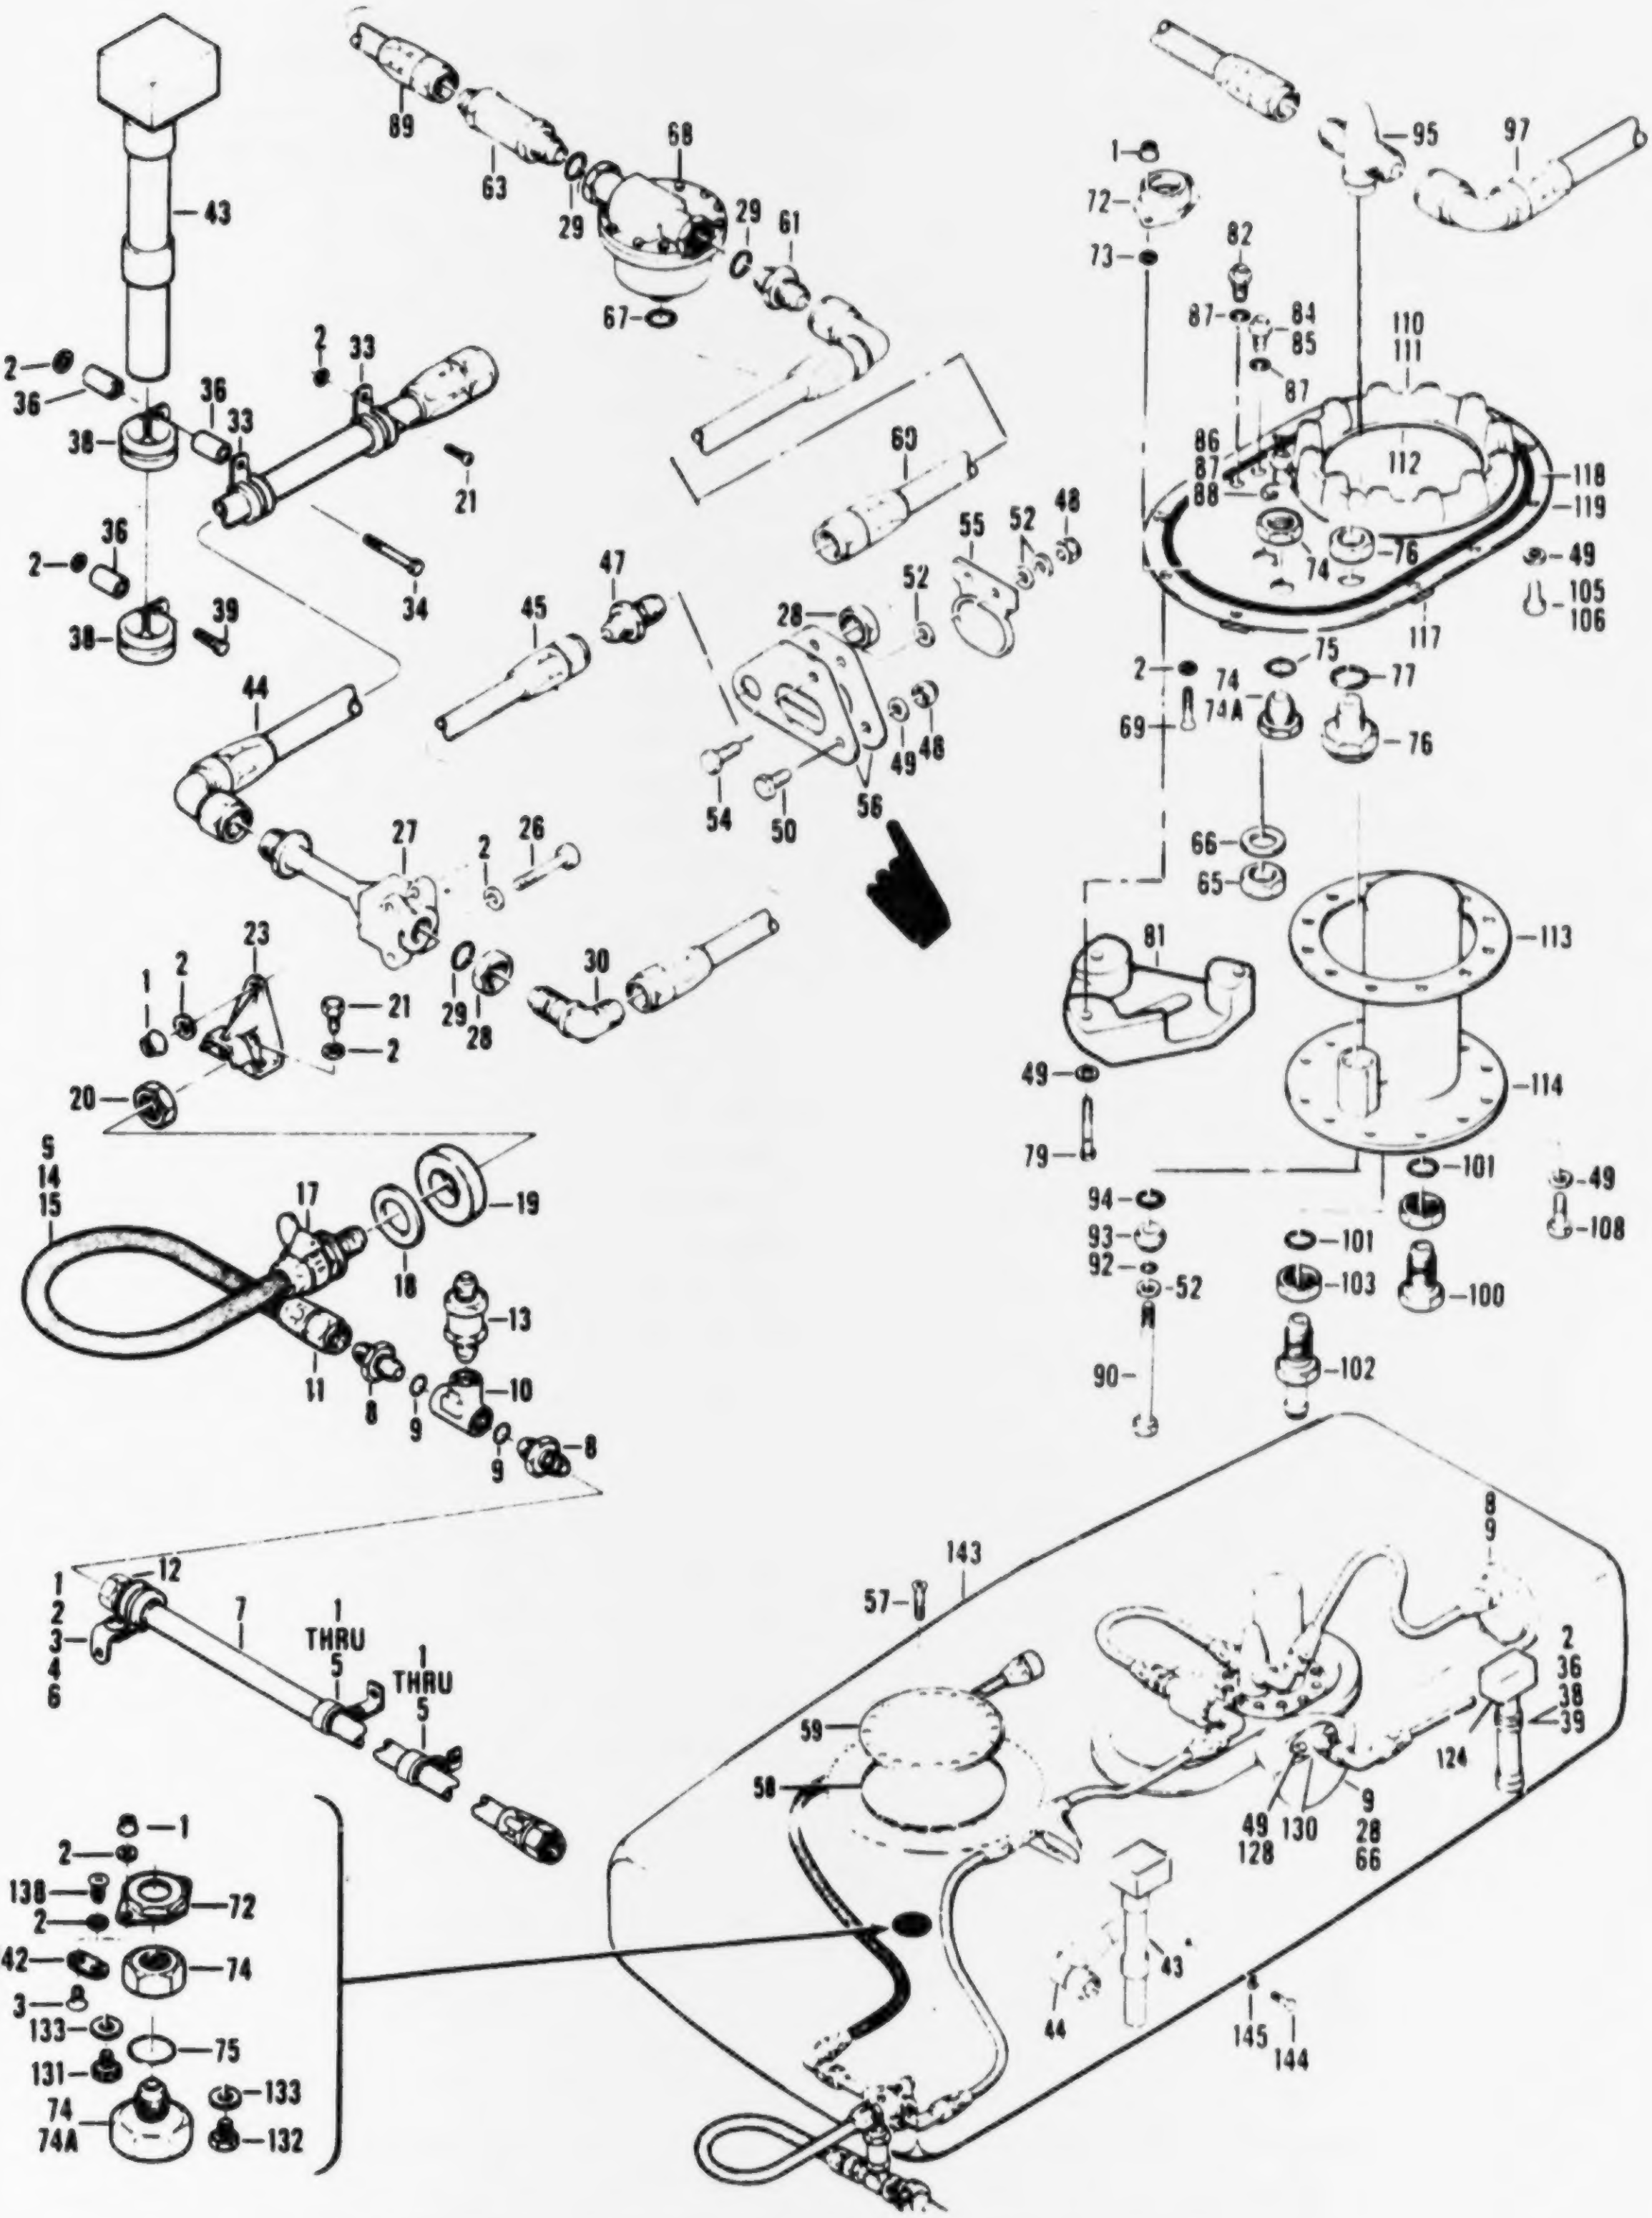
89
63
68
29
29
61
67
43
2
36
2
33
36
33
38
21
2
36
34
38
39
60
55
52
48
52
47
45
28
44
49
48
54
50
56
27
2
26
23
1
2
21
2
29
28
30
20
5
14
15
17
19
18
13
11
8
10
9
9
8
95
97
1
72
73
82
87
84
85
110
111
87
86
87
88
112
118
119
74
76
49
105
106
117
2
75
77
74
74A
69
76
66
65
81
113
114
49
79
101
49
94
93
92
52
101
103
100
108
90
102
1
2
3
4
6
12
7
1
THRU
5
1
THRU
5
8
9
143
57
2
36
38
39
59
58
124
9
28
66
49
128
130
1
2
138
72
2
142
74
3
133
75
131
133
74
74A
132
43
44
145
144

Figure 335. Fuel System Installation, Right-Hand Tank

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
335		XCFZZ		97499	205-063-600-9	FUEL SYSTEM INSTL RIGHT HAND TANK SECTION.SEE FIGS.312,320, 326 AND 331 FOR BALANCE OF BREAKDOWN,SEE FIG.7 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
335	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	12
335	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	21
335	3	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	9
335	4	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE........UHE,UHH,UHV,UHX	EA	3
335	5	PAOZZ	5340-00-993-6247	81996	EAB700011	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	2
335	6	PAOZZ	5340-00-989-4573	81996	EAB700016	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	1
335	7	MFOZZ		96906	MS87028H175A	.HOSE ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
335	8	PBOZZ	4730-00-684-6915	96906	MS24392D8	.NIPPLE,TUBE........UHE,UHH,UHV,UHX	EA	3
335	9	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	6
335	10	PAOZZ	4730-00-277-5055	88044	AN938D8	.TEE,BOSS........UHE,UHH,UHV,UHX	EA	1
335	11	PAOZZ	4730-01-034-4807	92215	VSF1015A8	.SLEEVE,FLARED,TUBE........UHE,UHH,UHV,UHX	EA	2
335	11	PAOZZ	4730-01-034-4807	97499	110-144-8A	.SLEEVE,FLARED,TUBE........UHE,UHH,UHV,UHX	EA	2
335	13	PAOZZ	4820-00-018-0092	86768	488-801-1-4	.VALVE,CHECK........UHE,UHH,UHV,UHX	EA	1
335	14	PAOZZ	4720-00-182-8971	97499	205-062-666-1	.HOSE ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
335	15	XDOZZ	4730-00-177-0668	97499	120-067B020	.SLEEVE,PROTECTIVE C........UHE,UHH,UHV,UHX	EA	1
335	17	PAOZZ	4730-00-278-0314	88044	AN737RM38	.CLAMP,HOSE........UHE,UHH,UHV,UHX	EA	1
335	18	PAOZZ	5310-00-187-2394	88044	AN960PD1616L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	1
335	19	PAOZZ	5330-00-168-6099	97499	205-062-605-3	.SEAL,SPECIAL........UHE,UHH,UHV,UHX	EA	1
335	20	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	1
335	21	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	3
335	23	PBOZZ	1560-00-176-2042	97499	205-062-686-1	.SUPPORT,PUMP........UHE,UHH,UHV,UHX	EA	1
335	26	PAOZZ	5305-00-936-0044	96906	MS27039-1-27	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
335	27	PAOZZ	1560-00-789-4969	97499	205-061-634-1	.PUMP ASSY........UHE,UHH,UHV,UHX	EA	1
335	28	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	2
335	29	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	3
335	30	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE........UHE,UHH,UHV,UHX	EA	1
335	33	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	2
335	34	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1
335	36	PAOZZ	5365-00-808-2527	80205	NAS43DD3-40	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	5
335	38	PAOZZ	5340-00-193-0129	88044	AN735D19	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	4
335	39	PAOZZ	5305-00-182-2061	88044	AN3H10A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	3
335	43	PAOZZ	6680-00-133-7911	97499	205-061-633-17	.TRANSMITTER,LIQUID........UHE,UHH,UHV,UHX	EA	1
335	44	MFOZZ		96906	MS87028J336C	.HOSE ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
335	45	PAOZZ	4720-00-421-1420	00624	646121-6D0280	.HOSE ASSEMBLY........UHE,UHH,UHV,UHX	EA	:
335	47	PAOZZ	4730-00-805-2221	96906	MS24393D6	.NIPPLE,TUBE........UHE,UHH,UHV,UHX	EA	1
335	48	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	3
335	49	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	40
335	50	PACZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1
335	52	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
335	54	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	2
335	55	PAOZZ	4820-00-762-0058	97499	205-060-666-1	VALVE ... UHE,UHH,UHV,UHX	EA	1
335	56	MFOZZ	DELETED	97499	205-061-643-3	.PLATE ... UHE,UHH,UHV,UHX	EA	2
335	57	PBOZZ	5305-00-043-2681	96906	MS24694S96	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	16
335	58	PAOZZ	5330-00-291-3313	96906	MS29513-255	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
335	59	PAOZZ	1560-00-177-4172	97499	205-062-636-1	.COVER,ACCESS ... UHE,UHH,UHV,UHX	EA	1
335	60	MFOZZ		96906	MS8000G090C	HOSE ASSY ... UHE,UHH,UHV,UHX	EA	1
335	61	PAOZZ	4730-00-684-6916	96906	MS2439206	NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	1
335	63	PAOZZ	4820-00-226-1784	86768	488-601-1-4	VALVE,CHECK ... UHE,UHH,UHV,UHX	EA	1
335	65	PAOZZ	5310-00-881-6069	96906	MS9200-06	.NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
335	66	PAOZZ	5310-00-188-7723	81352	AN960PD916L	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
335	67	PAOZZ	5330-00-248-3848	96906	MS29513-018	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
335	68	PAOZZ	5930-00-405-3675	97499	205-061-635-5	.SWITCH,ELECTRICAL ... UHE,UHH,UHV,UHX	EA	1
335	69	PAOZZ	5305-00-719-5402	96906	MS24694S53	SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	2
335	72	PAOZZ	5310-00-010-7434	97499	205-060-645-1	.NUT,PLAIN,PLATE ... UHE,UHH,UHV,UHX	EA	2
335	73	PAOZZ	5330-00-171-8360	83259	800-515-10 05	.PACKING WITH RETAINER ... UHE,UHH,UHV,UHX	EA	2
335	74	PAOOO	2915-00-134-4512	97499	205-062-656-1	.VALVE,FUEL DRAIN ... UHE,UHH,UHV,UHX	EA	2
335	74A	PAOZZ	5330-00-248-3831	96906	MS29513-011	..PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	4
335	75	PAOZZ	5330-00-250-0224	96906	MS29513-020	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	2
335	76	PAOOO	2915-00-134-4504	97499	205-062-657-1	.VALVE,DEFUELING ... UHE,UHH,UHV,UHX	EA	1
335	77	PAOZZ	5330-00-054-0168	96906	MS29513-029	..PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
			DELETED					
335	79	PAOZZ	5306-00-151-1423	88044	AN4-11A	.BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	3
335	81	PAOZZ	1560-00-176-1971	97499	205-062-699-1	.COVER,WIRE,FUEL SUMP ... UHE,UHH,UHV,UHX	EA	1
335	82	PAOZZ	5935-00-539-0203	95712	1-891-1	.ADAPTER,CONNECTOR ... UHE,UHH,UHV,UHX	EA	1
335	84	PAOZZ	5935-00-504-3684	95712	1-892-1	.ADAPTER,CONNECTOR ... UHE,UHH,UHV,UHX	EA	1
335	85	PAOZZ	5935-00-557-1815	95712	5193-1	ADAPTER,CONNECTOR TEE ... UHE,UHH,UHV,UHX	EA	1
335	86	PAOOO	5935-00-590-3865	95712	1-890-1	.ADAPTER,CONNECTOR ... UHE,UHH,UHV,UHX	EA	1
335	87	PAOZZ	5330-00-168-6160	95712	1-309-10	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	3
335	88	PAOZZ	5935-00-683-4978	95712	1-713-1	. ADAPTER,CONNECTOR TEE ... UHE,UHH,UHV,UHX	EA	1
335	89	MFOZZ	4720-00-491-4991	96906	MS8000G130A	.HOSE ASSEMBLY ... UHE,UHH,UHV,UHX	EA	1
335	90	PAOZZ	5306-00-281-8945	88044	AN4H35A	.BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	1
335	92	PAOZZ	5330-00-248-3835	96906	MS29513-010	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
335	93	PAOZZ	2915-00-224-3224	80049	5089390	.PLUG,BOLT RETAINING ... UHE,UHH,UHV,UHX	EA	1
335	94	PAOZZ	5330-00-248-3844	96906	MS29513-113	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
335	95	PAOZZ	1560-00-836-9943	99473	S2490	.CROSS FITTING ASSY ... UHE,UHH,UHV,UHX	EA	1
335	97	MFOZZ		96906	MS87028H110C	.HOSE ASSEMBLY ... UHE,UHH,UHV,UHX	EA	1
335	100	PAOZZ	5365-00-837-0856	96906	MS24391D4L	.PLUG,MACHINE THREAD ... UHE,UHH,UHV,UHX	EA	1
335	101	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	2
336	102	PAOZZ	4730-00-187-0881	88044	AN807-4D	.ADAPTER,STRAIGHT ... UHE,UHH,UHV,UHX	EA	1
335	103	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
335	106	PAOZZ	5305-00-891-8883	96906	MS27039-4-11	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	22

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
335	106	PAOZZ	5305-00-719-5404	96906	MS24694S55	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
335	108	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	12
335	110	PAOZZ	1560-00-152-3530	85109	475D12NN48LT32	.FLANGE,FUEL TANK	UHE,UHH,UHV,UHX	EA	1
335	111	PAOZZ	5305-00-954-2845	96906	MS24694S51	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
335	112	PAOZZ	5330-01-079-8163	97499	60-011-3	.GASKET	UHE,UHH,UHV,UHX	EA	1
335	113	PAOZZ	5330-01-053-7035	97499	60-011-1	.GASKET	UHE,UHH,UHV,UHX	EA	1
335	114	PAODD	2915-01-124-5222	26433	1C64-1	.PUMP,SUBMERGED SEE FIG.332 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	2
335	114	PAODD	2915-00-012-8684	81982	60-351E	.PUMP,SUBMERGED SEE FIG.333 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	2
335	117	PAOZZ	5365-00-181-1265	97499	205-062-659-1	.RING ASSY,RETAINER	UHE,UHH,UHV,UHX	EA	4
335	118	PAOZZ	5330-00-291-3272	96906	MS29513-270	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
335	119	PAOZZ	1560-00-176-1274	97499	205-062-640-2	.SUMP ASSEMBLY,FUEL	UHE,UHH,UHV,UHX	EA	1
335	124	PAOZZ	6680-00-123-7912	97499	205-061-633-19	.TRANSMITTER,LIQUID	UHE,UHH,UHV,UHX	EA	1
335	128	PAOZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
335	130	PAOZZ	4820-00-176-4616	97499	205-062-655-1	.VALVE,CHECK	UHE,UHH,UHV,UHX	EA	1
335	131	PAOZZ	5306-00-206-4931	88044	AN4-3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
335	132	PAOZZ	5306-00-182-2014	88044	AN4H3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
335	133	PAOZZ	5310-00-182-6173	97499	140-009017T39	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
335	138	PAOZZ	5305-00-719-5400	96906	MS24694S48	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
335	142	PAOZZ	5340-00-181-1355	97499	205-062-661-1	.CLIP,SUMP DRAIN	UHE,UHH,UHV,UHX	EA	2
335	143	PAODD	1560-00-176-1248	97499	205-062-635-2	.TANK,FUEL,AIRCRAFT	UHE,UHH,UHV,UHX	EA	1
335	144	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
335	145	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1

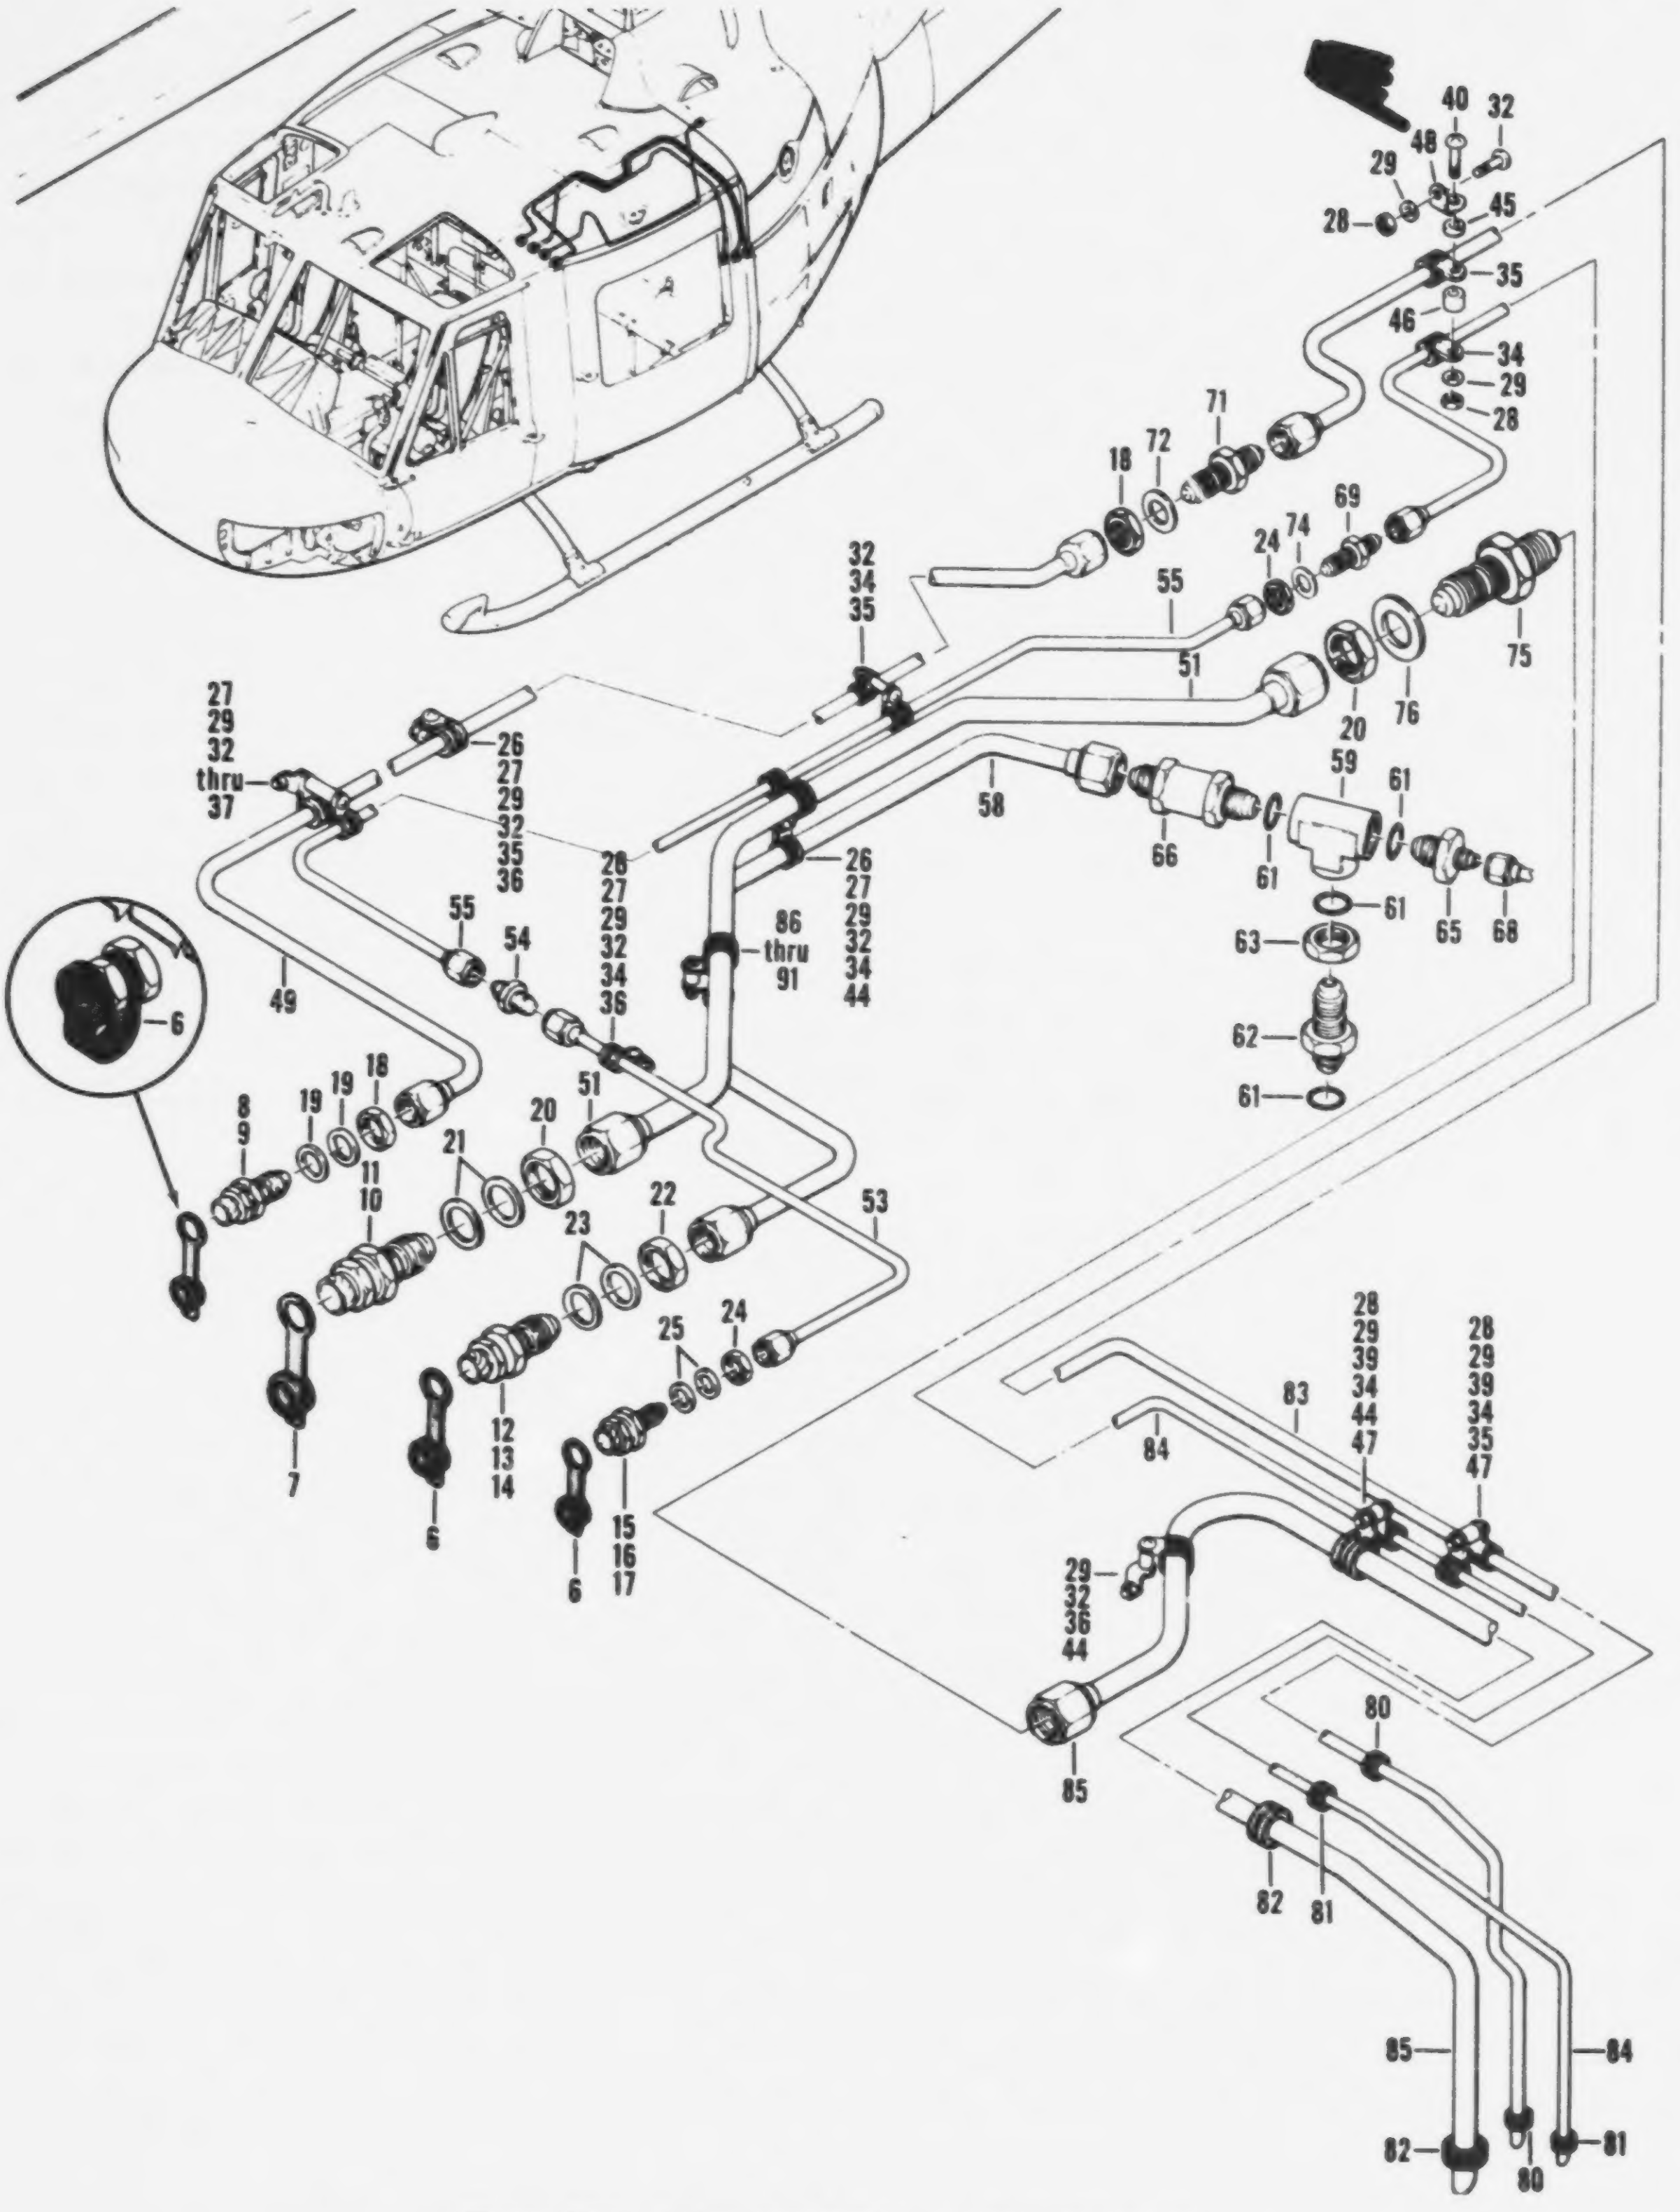
40
32
48
29
45
28
35
46
34
29
28
71
18
72
69
24
74
32
34
35
55
51
75
76
20
27
29
32
thru
37
26
27
29
32
35
36
58
59
61
66
61
61
65
68
63
62
61
26
27
29
32
34
36
26
27
29
32
34
44
86
thru
91
55
54
49
6
8
9
19
19
11
10
18
20
51
21
22
23
53
24
25
12
13
14
7
6
15
16
17
6
28
29
39
34
44
47
83
84
28
29
39
34
35
47
29
32
36
44
85
80
82
81
85
84
82
80
81

Figure 336. Lines Installation, Auxiliary Fuel Tank

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
336		XCFZZ		97499	204-061-600-1	LINES INSTL AUXILIARY FUEL TANK USBL EFF 64-14101 THRU 64-14191 SEE FIG. 6 FOR NHA..........UHC,UHM	EA	1
336		XCFZZ		97499	204-061-600-7	LINES INSTL AUXILIARY FUEL TANK USBL EFF 65-9416 & SUBSEQUENT SEE FIG. 6 FOR NHA..........UHC,UHM	EA	1
336	6	PAOZZ	5340-00-794-2674	97439	30-008-1	.CAP,PROTECTIVE,DUST..........UHB,UHC,UHM	EA	3
336	7	PAOZZ	5340-00-847-7537	97499	30-008-2	.CAP,PROTECTIVE,DUST..........UHB,UHC,UHM	EA	1
336	8	PAOOO	4730-00-773-2613	00624	375201-6	.COUPLING HALF,QUICK DISCONNECT. U/O PN 204-061-600-1..........UHB,UHC,UHM	EA	1
336	9	PAOZZ	5330-00-248-3848	96906	MS29513-018	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
336	10	PAOOO	4730-00-773-2617	00624	375201-12	.COUPLING HALF,QUICK U/O PN 204-061-600-1..........UHB,UHC,UHM	EA	1
336	11	PBOZZ	5330-00-250-0233	96906	MS29513-23	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
336	12	PAOOO	4730-00-773-2614	00624	375201-8	.COUPLING HALF,QUICK U/O PN 204-061-600-1..........UHB,UHC,UHM	EA	1
336	13	PAOZZ	5330-00-248-3848	96906	MS29513-018	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
336	14	PAOZZ	5330-00-248-3837	96906	MS29513-110	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
336	15	PAOOO	4730-00-773-2616	00624	375201-4	.COUPLING HALF,QUICK DISCONNECT. U/O PN 204-061-600-1..........UHB,UHC,UHM	EA	1
336	16	PAOZZ	5330-00-248-3848	96906	MS29513-018	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
336	17	PAOZZ	5330-00-248-3837	96906	MS29513-110	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
336	18	PAOZZ	5310-00-636-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
336	19	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
336	20	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
336	21	PAOZZ	5310-00-183-4397	88044	AN960PD1716	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
336	22	PAOZZ	5310-00-282-7835	96906	MS2440008	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
336	23	PAOZZ	5310-00-187-2404	88044	AN960PD1216	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
336	24	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
336	25	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
336	26	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING, HEXAGON..........UHB,UHC,UHM	EA	8
336	27	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 204-061-600-1..........UHC,UHM	EA	7
336	29	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	12
336	32	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
336	33	PAOZZ	5305-00-180-3326	88044	AN525-10R16	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
336	34	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP..........UHB,UHC,UHM	EA	1
336	35	PAOZZ	5340-00-990-9300	81996	EAB700D6	.CLAMP,LOOP..........UHB,UHC,UHM	EA	1
336	36	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........UHB,UHC,UHM	EA	1
336	37	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
336	39	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE..........UHB,UHC,UHM	EA	2
336	40	PAOZZ	5305-00-282-8470	88044	AN525-10R18	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
336	44	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP..........UHB,UHC,UHM	EA	3
336	45	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
336	46	PAOZZ	5365-00-682-4524	80205	NAS43DD3-28	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
336	47	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	2
336	48	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE..........UHB,UHC,UHM	EA	1
336	49	MFOZZ	1560-00-885-3555	97499	204-060-020-175	.TUBE ASSEMBLY,METAL..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) IG. O.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
336	51	MFOZZ	4710-00-766-8580	97499	204-060-020-177	.TUBE ASSEMBLY,METAL........UHB,UHC,UHM	EA	1
336	53	MFOZZ	1560-00-885-3554	97499	204-060-020-109	.TUBE ASSEMBLY,METAL........UHB,UHC,UHM	EA	1
5	54	PAOZZ	4730-00-834-9560	96906	MS24392D4	.NIPPLE,TUBE........UHB,UHC,UHM	EA	1
336	55	MFOZZ	1560-00-885-3556	97499	204-060-020-179	.TUBE ASSEMBLY,METAL........UHB,UHC,UHM	EA	1
336	58	MFOZZ	1560-00-927-9511	97499	204-061-608-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
336	59	PAOZZ	4730-00-277-5055	88044	AN938D8	.TEE,BOSS........UHB,UHC,UHM	EA	1
336	61	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORMED........UHC,UHM	EA	4
336	62	PAOZZ	4730-00-062-6821	96906	MS24393D8	.NIPPLE,TUBE........UHB,UHC,UHM	EA	1
336	63	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON........UHB,UHC,UHM	EA	1
336	65	PAOZZ	4730-00-975-2922	81349	MILF5509	.REDUCER,TUBE........UHB,UHC,UHM	EA	1
336	66	XDOZZ	4820-00-711-1917	91816	P5-533	.VALVE,CHECK........UHB,UHC,UHM	EA	1
336	68	MFOZZ	1560-00-904-1482	97499	204-061-687-1	.TUBE ASSEMBLY,METAL........UHC,UHM	EA	1
336	69	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE,TUBE........UHB,UHC,UHM	EA	1
336	71	PAOZZ	4730-00-805-2221	96906	MS24393D6	.NIPPLE,TUBE........UHB,UHC,UHM	EA	1
336	72	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT U/O PN 204-061-600-1........UHC,UHM	EA	1
336	74	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT U/O PN 204-061-600-1........UHC,UHM	EA	1
336	75	PAOZZ	4730-00-994-0883	96906	MS24393D12	.NIPPLE,TUBE........UHB,UHC,UHM	EA	1
336	76	PAOZZ	5310-00-183-4397	88044	AN960PD1716	.WASHER,FLAT U/O PN 204-061-600-1........UHC,UHM	EA	1
336	80	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC........UHB,UHC,UHM	EA	2
336	81	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC........UHB,UHC,UHM	EA	2
6	82	PAOZZ	5325-00-263-6648	96906	MS35489-135	.GROMMET,RUBBER........UHB,UHC,UHM	EA	2
36	83	MFOZZ	1560-00-884-9999	97499	204-060-020-75	.TUBE ASSY........UHB,UHC,UHM	EA	1
336	84	MFOZZ	1560-00-885-0003	97499	204-060-020-79	.TUBE ASSEMBLY........UHB,UHC,UHM	EA	1
336	85	MFOZZ	1560-00-766-8581	97499	204-060-020-83	.TUBE ASSY........UHB,UHC,UHM	EA	1
336	86	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP U/O PN 204-061-600-1........UHC,UHM	EA	2
336	87	PAOZZ	5340-00-954-6826	81996	EAB700D8	.CLAMP,LOOP U/O PN 204-061-600-1........UHC,UHM	EA	2
336	88	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE U/O PN 204-061-600-1........UHC,UHM	EA	2
336	89	PAOZZ	5365-00-684-2093	80205	NAS43D03-16	.SPACER,SLEEVE U/O PN 204-061-600-1........UHC,UHM	EA	2
336	90	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-061-600-1........UHC,UHM	EA	2
336	91	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON U/O PN 204-061-600-1........UHC,UHM	EA	2

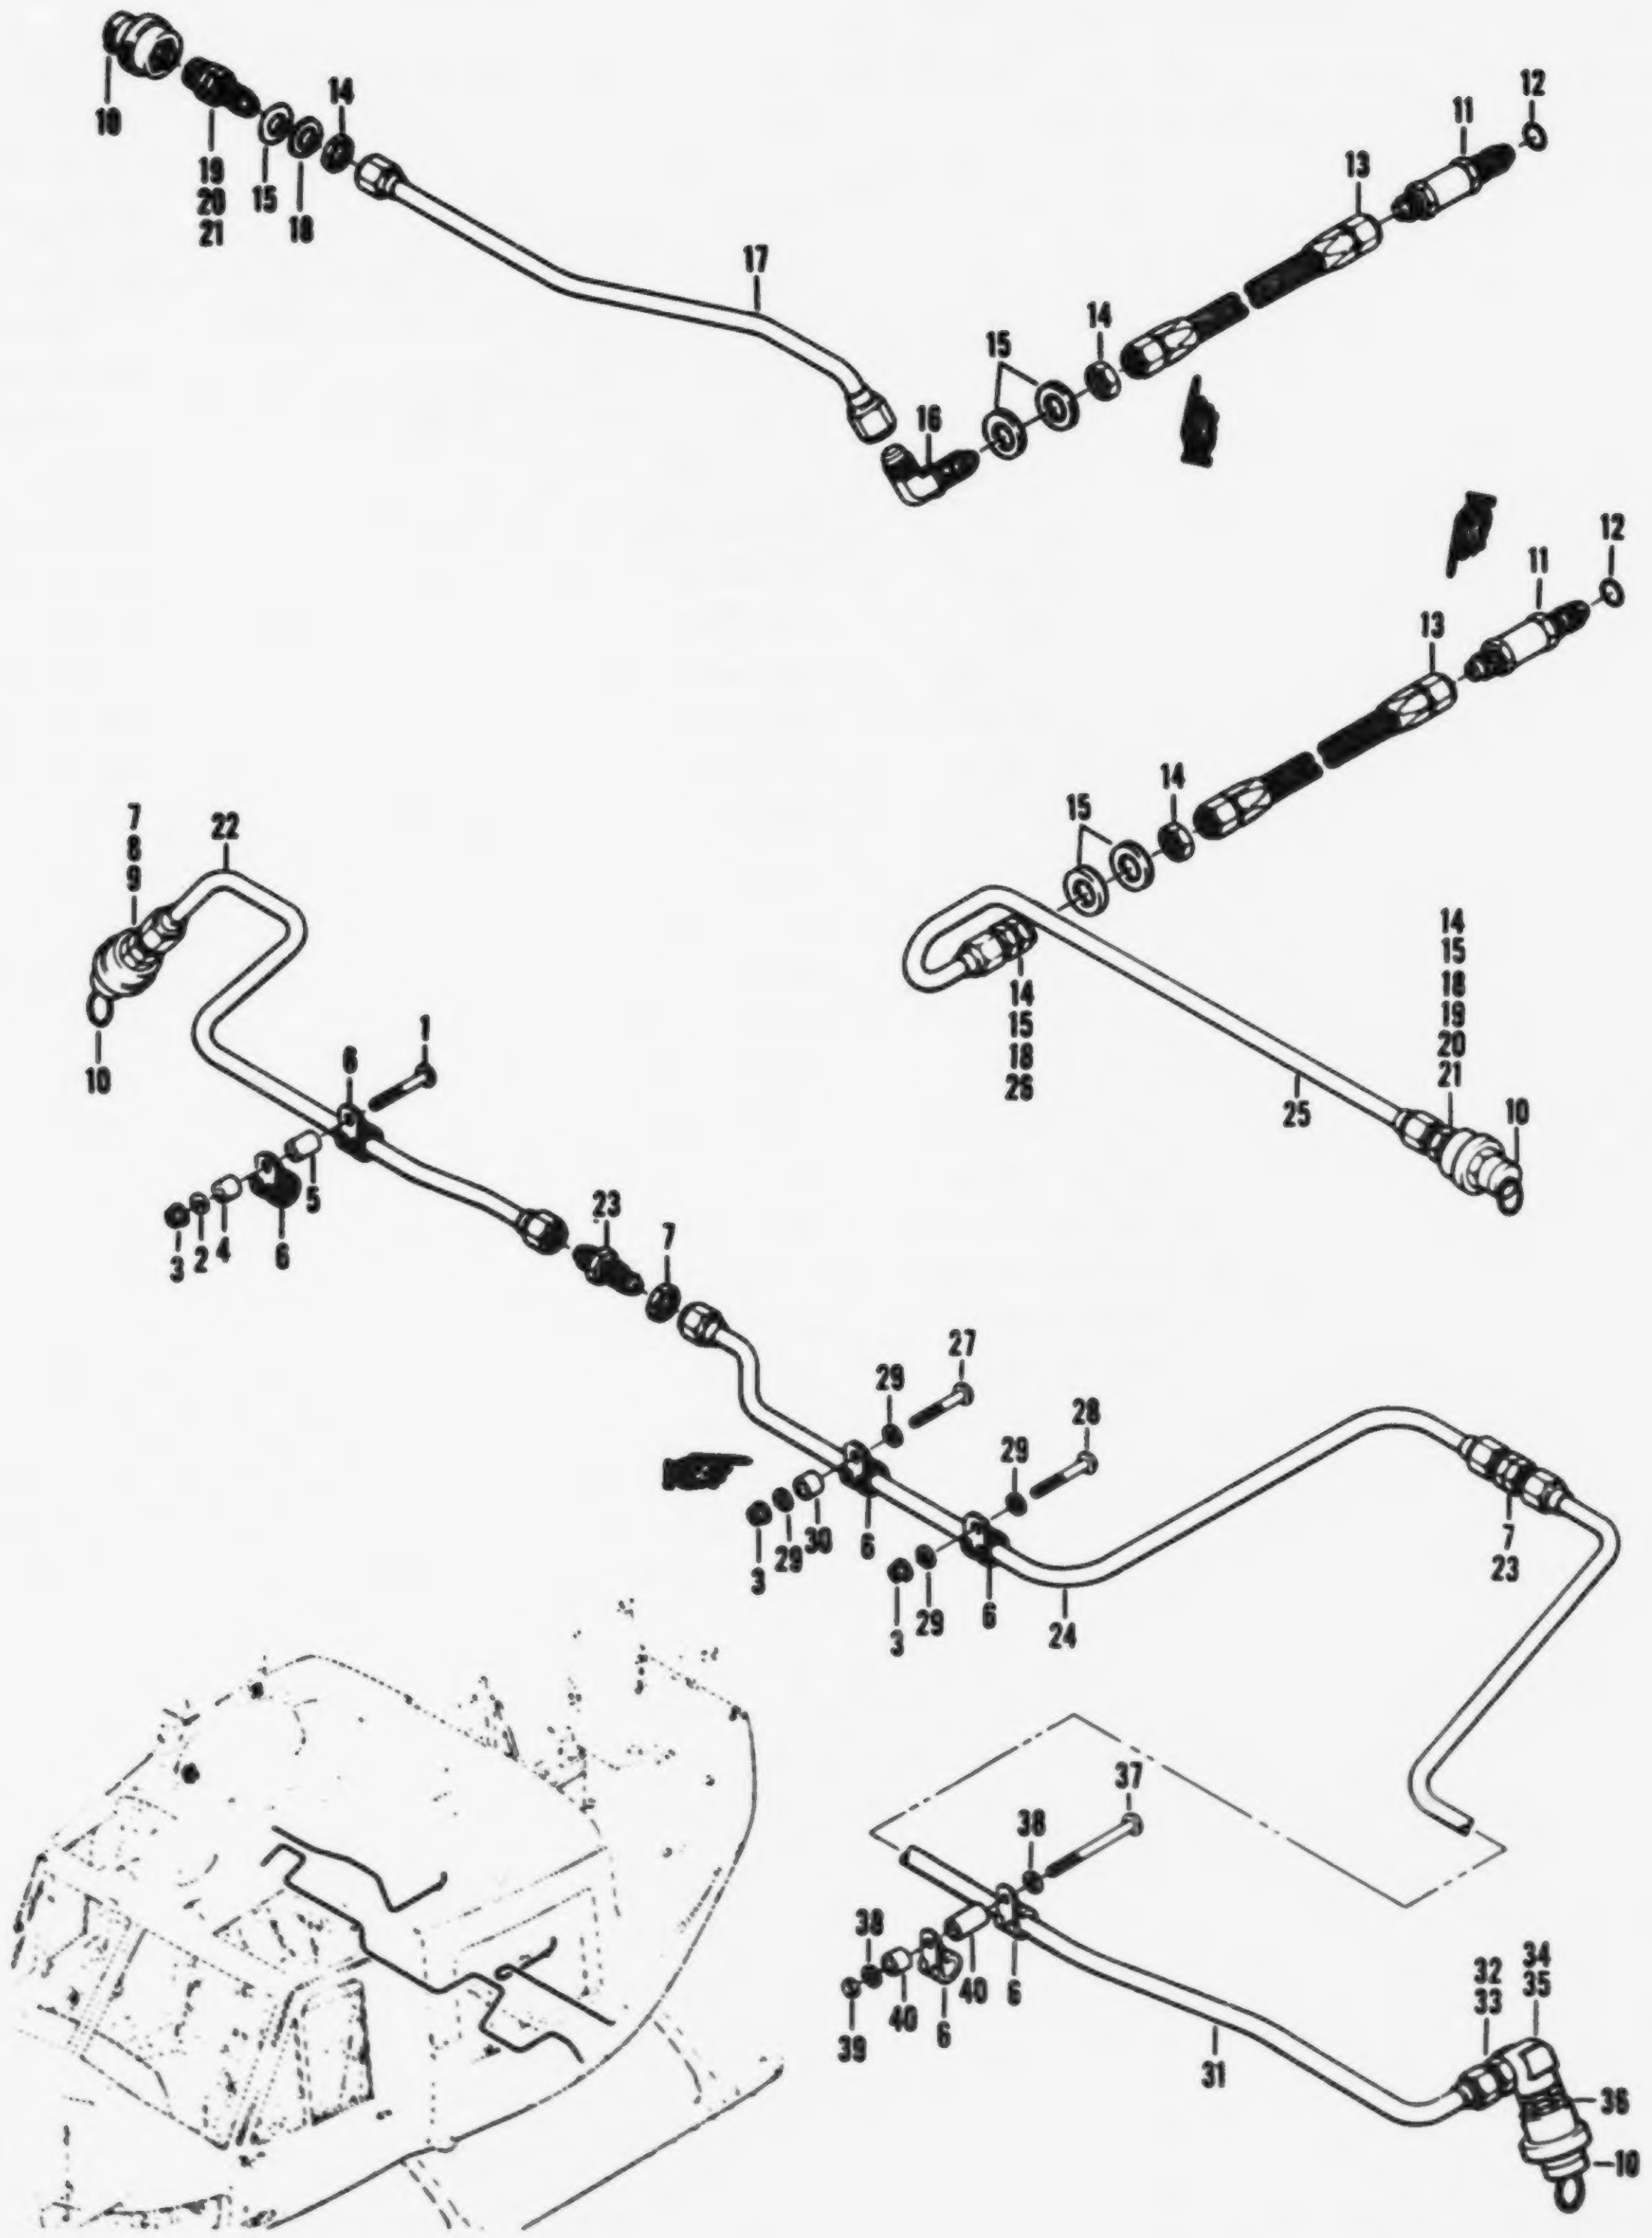
10
19
20
21
15
18
14
17
16
15
14
13
11
12
12
11
13
14
15
7
8
9
22
10
1
6
5
3
2
4
6
23
7
14
15
18
26
25
14
15
18
19
20
21
10
27
29
28
29
3
29
30
6
3
29
6
24
7
23
37
38
38
39
40
6
40
6
31
32
33
34
35
36
10

Figure 337. Lines Installation, Fuel and Air External Auxiliary Tanks

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
337		XCFZZ		97499	204-060-689-5	LINES INSTL FUEL AND AIR EXTERNAL AUXILIARY TANK USBL EFF 64-14102 THRU 65-12772 SEE FIG.6 FOR NHA............UHC,UHM	EA	1
37		XCFZZ		97499	204-060-689-7	LINES INSTL FUEL AND AIR EXTERNAL AUXILIARY TANK USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA...............UHC,UHM	EA	1
337	1	XDOZZ		88044	AN525-10R30	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	1
337	2	PAOZZ	5310-00-183-4406	88044	AN950PD10	.WASHER,FLAT....................................UHB,UHC,UHM	EA	2
337	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON......UHB,UHC,UHM	EA	1
337	4	PAOZZ	5365-00-838-0591	80205	NAS43DD3-67	.SPACER,SLEEVE....................................UHB,UHC,UHM	EA	1
337	5	PAOZZ	5365-00-618-6485	80205	NAS43DD3-56	.SPACER,SLEEVE....................................UHB,UHC,UHM	EA	1
337	6	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP ....UHB,UHC,UHM	EA	2
337	7	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON..............................UHB,UHC,UHM	EA	2
337	8	XCOOZ	4730-00-960-8878	00624	375239-6	.COUPLING HALF,QUICK DISCONNECT..................UHB,UHC,UHM	EA	2
337	9	PAOZZ	5310-00-187-2402	81352	AN960PD916	.WASHER,FLAT....................................UHB,UHC,UHM	EA	4
337	10	PAOZZ	5340-00-794-2674	97499	30-008-1	.CAP,PROTECTIVE,DUST.............................UHB,UHC,UHM	EA	4
337	11	PAOZZ	2915-00-898-9760	86768	12-1762-1	.VALVE ASSEMBLY,FUEL.............................UHB,UHC,UHM	EA	2
337	12	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORMED...................................UHC,UHM	EA	2
337	13	MFOZZ		96906	MS87028H105A	.HOSE ASSEMBLY.......................................UHC,UHM	EA	2
337	14	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON..............................UHB,UHC,UHM	EA	1
337	15	PAOZZ	5310-00-187-2404	88044	AN960PD1216	.WASHER,FLAT....................................UHB,UHC,UHM	EA	2
337	16	PAOZZ	4730-00-197-2917	96906	MS24394D6	.ELBOW,TUBE.....................................UHB,UHC,UHM	EA	1
337	17	MFOZZ	4710-00-986-9953	97499	204-061-616-1	.TUBE ASSEMBLY,METAL.............................UHB,UHC,UHM	EA	1
37	18	PAOZZ	5310-00-187-2396	88044	AN960PD1216L	.WASHER, FLAT....................................UHB,UHC,UHM	EA	2
7	19	PAOOC	4730-00-773-2614	00624	375201-8	.COUPLING HALF,QUICK.............................UHB,UHC,UHM	EA	2
337	20	PAOZZ	5330-00-248-3848	96906	MS29513-018	..PACKING,PREFORMED..............................UHB,UHC,UHM	EA	1
337	21	PAOZZ	5330-00-248-3837	96906	MS29513-110	..PACKING,PREFORMED..............................UHB,UHC,UHM	EA	1
337	22	MFOZZ	4710-00-986-9951	97499	204-061-614-1	.TUBE ASSEMBLY,METAL.............................UHB,UHC,UHM	EA	1
337	23	PAOZZ	4730-00-805-2221	96906	MS24393D6	.NIPPLE,TUBE.....................................UHB,UHC,UHM	EA	2
337	24	MFOZZ	1560-00-929-8458	97499	204-061-694-1	.TUBE ASSEMBLY,METAL.................................UHC,UHM	EA	1
337	25	MFOZZ	4710-00-986-9952	97499	204-061-615-1	.TUBE ASSEMBLY,METAL.............................UHB,UHC,UHM	EA	1
337	26	PAOZZ	4730-00-062-6821	96906	MS24393D8	.NIPPLE,TUBE ....UHB,UHC,UHM	EA	1
337	27	PAOZZ	5305-00-999-7435	96906	MS35207-264	.SCREW,MACHINE...................................UHB,UHC,UHM	EA	2
337	28	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE...................................UHB,UHC,UHM	EA	1
337	29	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................................UHB,UHC,UHM	EA	4
337	30	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE...................................UHB,UHC,UHM	EA	1
337	31	MFOZZ	1560-00-971-6308	97499	204-061-695-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-689-7............UHC,UHM	EA	1
337	32	PAOZZ	5340-00-533-3515	96906	MS24392D6	.NIPPLE,TUBE U/O PN 204-060-689-7............UHC,UHM,UHH,UHV	EA	1
337	33	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED U/O PN 204-060-689-7..............UHC,UHM	EA	1
337	34	PAOZZ	4730-00-278-3663	88044	AN939D6	.ELBOW,BOSS U/O PN 204-060-689-7.....................UHC,UHM	EA	1
337	35	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED U/O PN 204-060-689-7..............UHC,UHM	EA	1
337	36	PAOZZ	5310-00-839-7112	97499	204-061-696-1	.NUT,PLAIN,HEXAGON U/O PN 204-060-689-7..............UHC,UHM	EA	2
7	37	XDOZZ	5305-00-182-1365	88044	AN525-10R28	.SCREW,MACHINE U/O PN 204-060-689-7..................UHC,UHM	EA	1
337	38	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-060-689-7....................UHC,UHM	EA	2
337	39	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON U/O PN 204-060-689-7..............UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
337	40	PAOZZ	5365-00-684-6980	80205	NAS43DD3-39	.SPACER,SLEEVE U/O PN 204-060-689-7..................UHC,UHM	EA	2

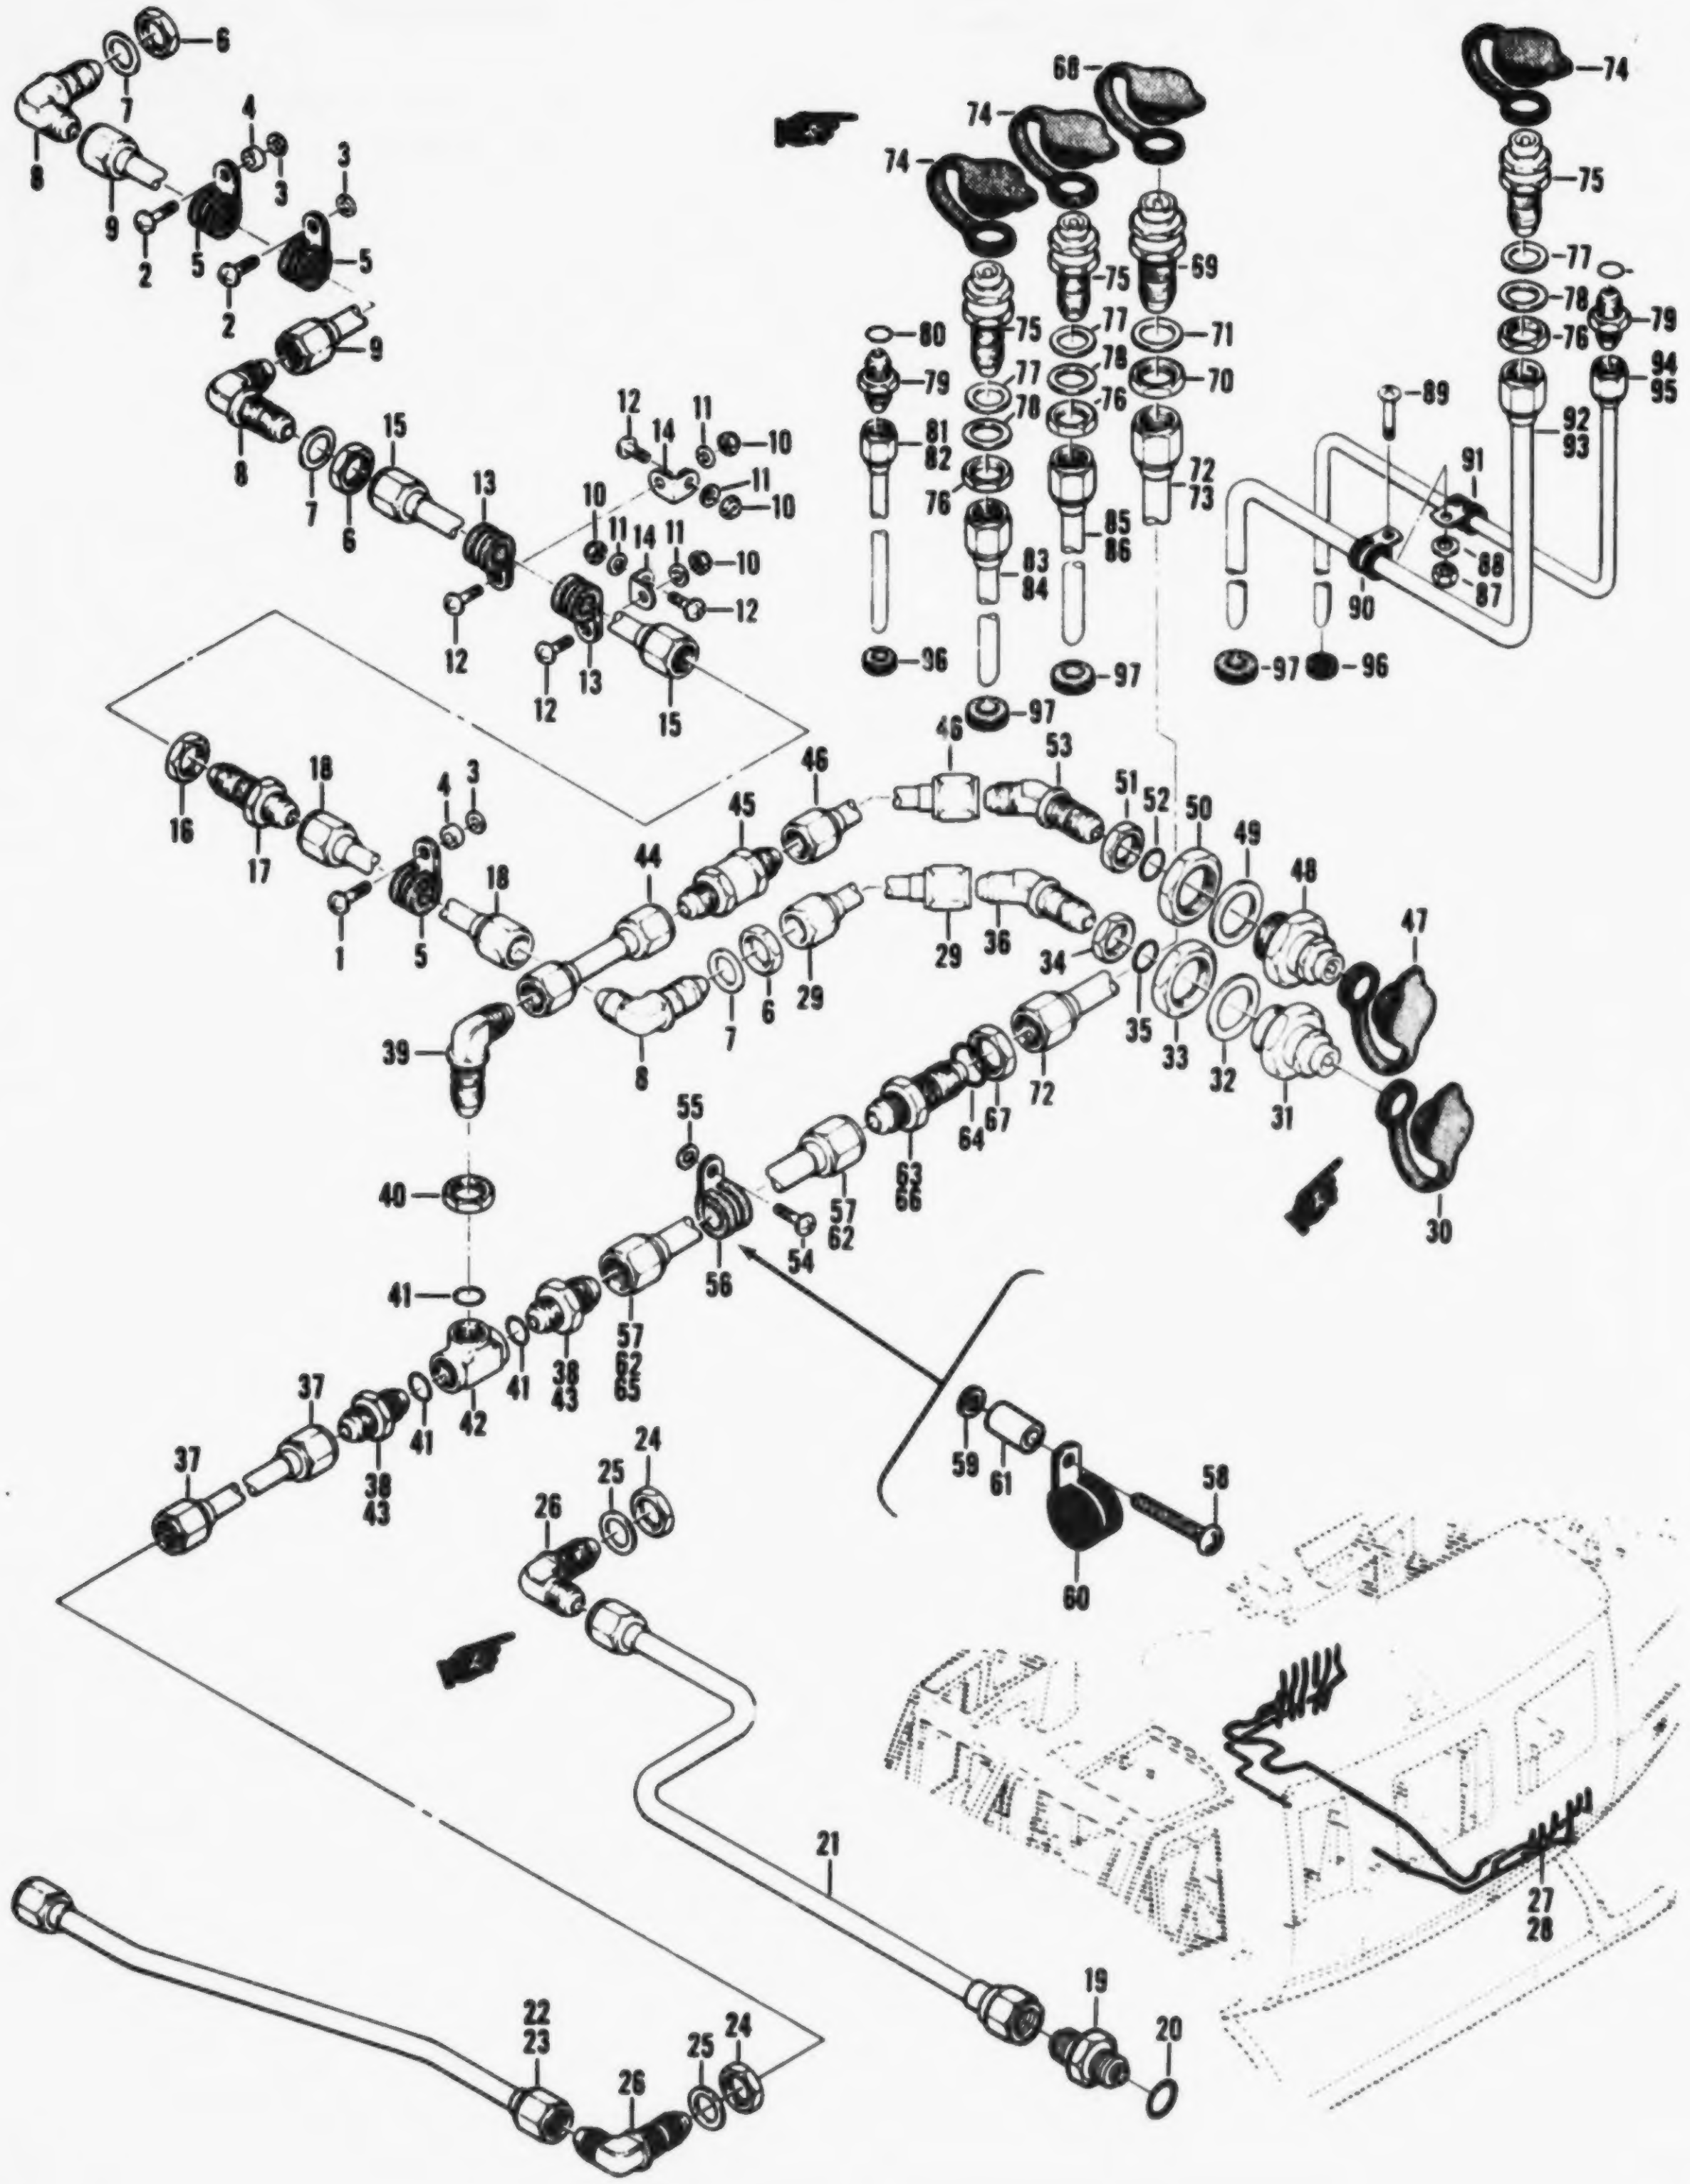
6
7
8
4
3
3
9
2
5
5
2
9
74
68
74
74
75
80
79
75
75
69
77
71
78
70
76
81
82
72
73
89
77
78
76
79
94
95
92
93
12
11
14
10
11
10
15
8
7
6
13
10
11
14
11
10
12
12
12
13
15
76
83
84
85
86
91
88
87
90
96
97
97
96
97
46
53
51
52
50
49
48
47
16
17
18
4
3
1
5
18
44
45
46
29
36
34
35
33
32
31
30
39
8
7
6
29
72
67
64
63
66
57
62
55
54
56
40
41
41
42
38
43
57
62
65
37
37
38
43
41
24
25
26
59
61
58
60
21
19
20
27
28
22
23
26
25
24

Figure 338. Lines Installation, Auxiliary Fuel Tanks

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
338		XCFZZ		97499	205-061-620-1	LINES INSTL USBL EFF 62-2106 THRU 63-13002 SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
338		XCFZZ		97499	205-061-620-3	LINES INSTL USBL EFF 64-13492 THRU 66-16867 SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
338		XCFZZ		97499	205-061-620-5	LINES INSTL USBL EFF 66-16868 THRU 69-15291 SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
338		XCFZZ		97499	205-061-620-9	LINES INSTL USBL EFF 69-15292 AND SUBSEQUENT SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
338	1	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHH,UHV	EA	1
338	2	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE .... UHH,UHV	EA	2
338	3	PAOZZ	5310-00-771-6827	88044	AN960PD10L	.WASHER,FLAT .... UHH,UHV	EA	3
338	4	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE .... UHH,UHV	EA	2
338	5	PAOZZ	5340-00-990-9300	81996	EAB700D6	.CLAMP,LOOP .... UHH,UHV	EA	3
338	6	PAOZZ	5310-00-638-2605	88044	AN924-6D	.NUT,PLAIN,HEXAGON .... UHH,UHV	EA	3
338	7	PAOZZ	5310-00-187-2402	81352	AN960PD916	.WASHER,FLAT U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	3
338	8	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE .... UHH,UHV	EA	3
338	9	MFOZZ		97499	205-061-611-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	1
338	10	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	4
338	11	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	4
338	12	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	4
338	13	PAOZZ	5340-00-990-9300	96906	MS21122-6	.CLAMP,LOOP U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	14	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	15	MFOZZ		97499	205-061-610-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	1
338	16	PAOZZ	5310-00-638-2605	88044	AN924-6D	.NUT,PLAIN,HEXAGON .... UHH,UHV	EA	1
338	17	PAOZZ	4730-00-805-2221	96906	MS24393D6	.NIPPLE,TUBE .... UHH,UHV	EA	1
338	18	MFOZZ		97499	205-061-612-1	.TUBE ASSEMBLY U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	1
338	19	PAOZZ	4730-00-684-6915	96906	MS24392D8	.NIPPLE,TUBE .... UHH,UHV	EA	1
338	20	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORME .... UHH,UHV	EA	1
338	21	MFOZZ		97499	205-061-606-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1,-3 & -5 ... UHH,UHV	EA	1
338	22	PAOZZ	4730-01-034-4807	92215	VSF1015A8	.SLEEVE,FLARED,TUBE U/O PN 205-061-620-9 ..... UHE,UHH,UHV,UHX	EA	4
338	23	MFOZZ		97499	205-062-681-1	.TUBE ASSEMBLY U/O PN 205-061-620-9 .... UHH,UHV	EA	1
338	24	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON .... UHH,UHV	EA	2
338	25	PAOZZ	5310-00-187-2404	88044	AN960PD1216	.WASHER,FLAT .... UHH,UHV	EA	2
338	26	PAOZZ	4730-00-197-2917	96906	MS24394D8	.ELBOW,TUBE .... UHH,UHV	EA	2
338	27	MFOZZ		97499	205-061-607-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1,-3 & -5 .... UHH,UHV	EA	1
338	28	MFOZZ		97499	205-062-680-1	.TUBE ASSEMBLY U/O PN 205-061-620-9 .... UHH,UHV	EA	1
338	29	MFOZZ	4710-00-980-1829	97499	205-061-624-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	30	PAOZZ	5340-00-772-7791	00624	377900-8	.CAP,PROTECTIVE,DUST U/O PN 205-061-620-1 .... UHH,UHV	EA	2
338	31	PAOZZ	4730-00-045-4503	00624	375275-6	.COUPLING HALF,QUICK U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	32	PAOZZ	5310-00-183-4397	88044	AN960PD1716	.WASHER,FLAT U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	33	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	34	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	35	PAOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORME U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2
338	36	PAOZZ	4730-00-186-9997	88044	AN837-6D	.ELBOW U/O PN 205-061-620-1 & -3 .... UHH,UHV	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
338	37	MFOZZ		97499	205-061-608-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3.......UHH,UHV	EA	2
338	38	PAOZZ	4730-00-187-3588	88044	AN919-15D	.REDUCER,TUBE U/O PN 205-061-620-1 & -3...............UHH,UHV	EA	2
338	39	PAOZZ	4730-00-197-2917	96906	MS24394D8	.ELBOW,TUBE U/O PN 205-061-620-1 & -3...............UHH,UHV	EA	
338	40	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON U/O PN 205-061-620-1 & -3.........UHH,UHV	EA	2
338	41	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORMED U/O PN 205-061-620-1 & -3.........UHH,UHV	EA	6
338	42	PAOZZ	4730-00-277-5055	88044	AN938D8	.TEE,BOSS U/O PN 205-061-620-1 & -3.................UHH,UHV	EA	2
338	43	PAOZZ	4730-00-684-6915	95906	MS24392D8	.NIPPLE,TUBE U/O PN 205-061-620-1 & -3..............UHH,UHV	EA	2
338	44	MFOZZ		97499	205-061-609-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3.......UHH,UHV	EA	2
338	45	PAOZZ	4820-00-018-0092	86768	486-8D1-1-4	.VALVE,CHECK U/O PN 205-061-620-1 & -3..............UHH,UHV	EA	2
338	46	MFOZZ		97499	205-061-645-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3.......UHH,UHV	EA	1
338	47	PAOZZ	5340-00-772-7791	00624	377900-8	.CAP,PROTECTIVE,DUST U/O PN 205-061-620-1............UHH,UHV	EA	2
338	47	PAOZZ	5340-00-794-2674	97499	30-008-1	.CAP,PROTECTIVE,D U/O PN 205-061-620-3...............UHH,UHV	EA	2
338	48	PAOZZ	4730-00-961-1319	00624	375205-8	.COUPLING HALF,QUICK U/O PN 205-061-620-1 & -3.......UHH,UHV	EA	2
338	49	PAOZZ	5310-00-183-4356	88044	AN960PD2116	.WASHER,FLAT U/O PN 205-061-620-1 & -3..............UHH,UHV	EA	2
338	50	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON U/O PN 205-061-620-1 & -3.........UHH,UHV	EA	1
338	51	PAOZZ	5310-00-282-7835	88044	AN924-8D	.NUT,PLAIN,HEXAGON U/O PN 205-061-620-1 & -3.........UHH,UHV	EA	2
338	52	PAOZZ	5330-00-263-8031	96906	MS29512-08	.PACKING,PREFORMED U/O PN 205-061-620-1 & -3.........UHH,UHV	EA	2
338	53	PAOZZ	4730-00-186-9999	88044	AN837-8D	.ELBOW,TUBE U/O PN 205-061-620-1 & -3...............UHH,UHV	EA	2
338	54	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE U/O PN 205-061-620-1 & -3.............UHH,UHV	EA	2
338	55	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-061-620-1 & -3..............UHH,UHV	EA	2
338	56	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP U/O PN 205-061-620-1 & -3...............UHH,UHV	EA	[illegible]
338	57	MFOZZ		97499	205-061-647-1	.TUBE ASSEMBLY,METAL U/O PN 205-061-620-1 & -3.......UHH,UHV	EA	
338	58	PAOZZ	5305-00-207-1208	88044	AN520-10R30	.SCREW,MACHINE U/O PN 205-061-620-5 & -9.............UHH,UHV	EA	2
338	59	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-061-620-5 & -9..............UHH,UHV	EA	2
338	60	PAOZZ	5340-00-954-6826	81996	EAB700-8	.CLAMP,LOOP U/O PN 205-061-620-5....................UHH,UHV	EA	2
338	61	PAOZZ	5365-00-580-4834	80205	NAS43DD3-96	.SPACER,SLEEVE U/O PN 205-061-620-5 & -9.............UHH,UHV	EA	2
338	62	MFOZZ		97499	205-062-614-1	.TUBE ASSEMBLY,METAL U/O P/N 205-061-620-5 & -9......UHH,UHV	EA	2
338	63	PAOZZ	4730-00-060-7075	96906	MS24398D10-8	.ADAPTER,STRAIGHT,TU U/O PN 205-061-620-5 & -9.......UHH,UHV	EA	2
338	64	PAOZZ	5330-00-263-8032	96906	MS29512-10	.PACKING,PREFORME U/O PN 205-061-620-5 & -9..........UHH,UHV	EA	2
338	65	PAOZZ	4730-01-034-4807	92215	VSF1015A8	.SLEEVE,FLARED,TUBE U/O PN 205-061-620-9.............UHH,UHV	EA	4
338	66	PAOZZ	4730-00-443-4737	96906	MS24393D10	.NIPPLE,TUBE...UHH,UHV	EA	2
338	67	PBOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON...................................UHH,UHV	EA	2
338	68	PAOZZ	5340-00-847-7537	97499	30-008-2	.CAP,PROTECTIVE,DUST.................................UHH,UHV	EA	2
338	69	PAOZZ	4730-00-773-2618	00624	375201-10	.COUPLING HALF,QUICK.................................UHH,UHV	EA	1
338	70	PBOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON...................................UHH,UHV	EA	2
338	71	PAOZZ	5310-00-187-2405	88044	AN960PD1416	.WASHER,FLAT...UHH,UHV	EA	2
338	72	PAOZZ	4730-01-034-4806	92215	VSF1015A10	.SLEEVE,FLARED,TUBE......................UHE,UHH,UHV,UHX	EA	4
338	73	MFOZZ		97499	205-061-649-1	.TUBE ASSEMBLY,METAL.................................UHH,UHV	EA	1
338	73	MFOZZ		97499	205-061-650-1	.TUBE ASSEMBLY,METAL.................................UHH,UHV	EA	1
338	74	PAOZZ	5340-00-794-2674	97499	30-008-1	.CAP,PROTECTIVE,D....................................UHH,UHV	EA	
338	75	PA000	4730-00-773-2614	00624	375201-8	.COUPLING HALF,QUICK.................................UHH,UHV	EA	6
338	76	PAOZZ	5310-00-282-7835	96906	MS24400D8	.NUT,PLAIN,HEXAGON...................................UHH,UHV	EA	6

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
338	77	PAOZZ	5310-00-187-2396	88044	AN960PD1216L	WASHER, FLAT	UHH, UHV	EA	2
338	78	PAOZZ	5310-00-187-2404	88044	AN960PD1216	WASHER, FLAT	UHH, UHV	EA	6
338	79	PAOZZ	4730-00-834-9560	96906	MS24392D4	NIPPLE, TUBE	UHH, UHV	EA	2
338	80	PAOZZ	5330-00-263-8028	96906	MS29512-04	PACKING, PREFORMED	UHH, UHV	EA	2
338	81	MFOZZ	4710-00-980-1827	97499	205-061-618-1	TUBE ASSY, LH	UHH, UHV	EA	1
338	82	MFOZZ	4710-00-980-1828	97499	205-061-619-1	TUBE ASSY, RH	UHH, UHV	EA	1
338	83	MFOZZ	4710-00-980-1824	97499	205-061-615-1	TUBE ASSY, LH	UHH, UHV	EA	1
338	84	MFOZZ	4710-00-980-1826	97499	205-061-617-1	TUBE ASSY, RH	UHH, UHV	EA	1
338	85	MFOZZ	4710-00-980-1823	97499	205-061-614-1	TUBE ASSY, LH	UHH, UHV	EA	1
338	86	MFOZZ	4710-00-980-1825	97499	205-061-616-1	TUBE ASSY, RH	UHH, UHV	EA	1
338	87	PAOZZ	5310-00-807-1474	80205	NAS679A3	NUT, SELF-LOCKING	UHH, UHV	EA	2
338	88	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT	UHH, UHV	EA	2
338	89	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW, MACHINE	UHH, UHV	EA	2
338	90	PAOZZ	5340-00-954-6826	81996	EAB70008	CLAMP, LOOP	UHH, UHV	EA	2
338	91	PAOZZ	5340-00-205-6301	96906	MS21919DG4	CLAMP	UHH, UHV	EA	2
338	92	MFOZZ	4710-00-980-1837	97499	205-061-651-1	TUBE ASSY, LH	UHH, UHV	EA	1
338	93	MFOZZ	4710-00-980-1838	97499	205-061-652-1	TUBE ASSY, RH	UHH, UHV	EA	1
338	94	MFOZZ	4710-00-980-1839	97499	205-061-653-1	TUBE ASSY, LH	UHH, UHV	EA	1
338	95	MFOZZ	4710-00-980-1840	97499	205-061-654-1	TUBE ASSY, RH	UHH, UHV	EA	1
338	96	PAOZZ	5325-00-263-6632	96906	MS35489-6	GROMMET, NONMETALLIC	UHH, UHV	EA	4
338	97	PAOZZ	5325-00-276-6100	96906	MS35489-14	GROMMET, NONMETALLIC	UHH, UHV	EA	6

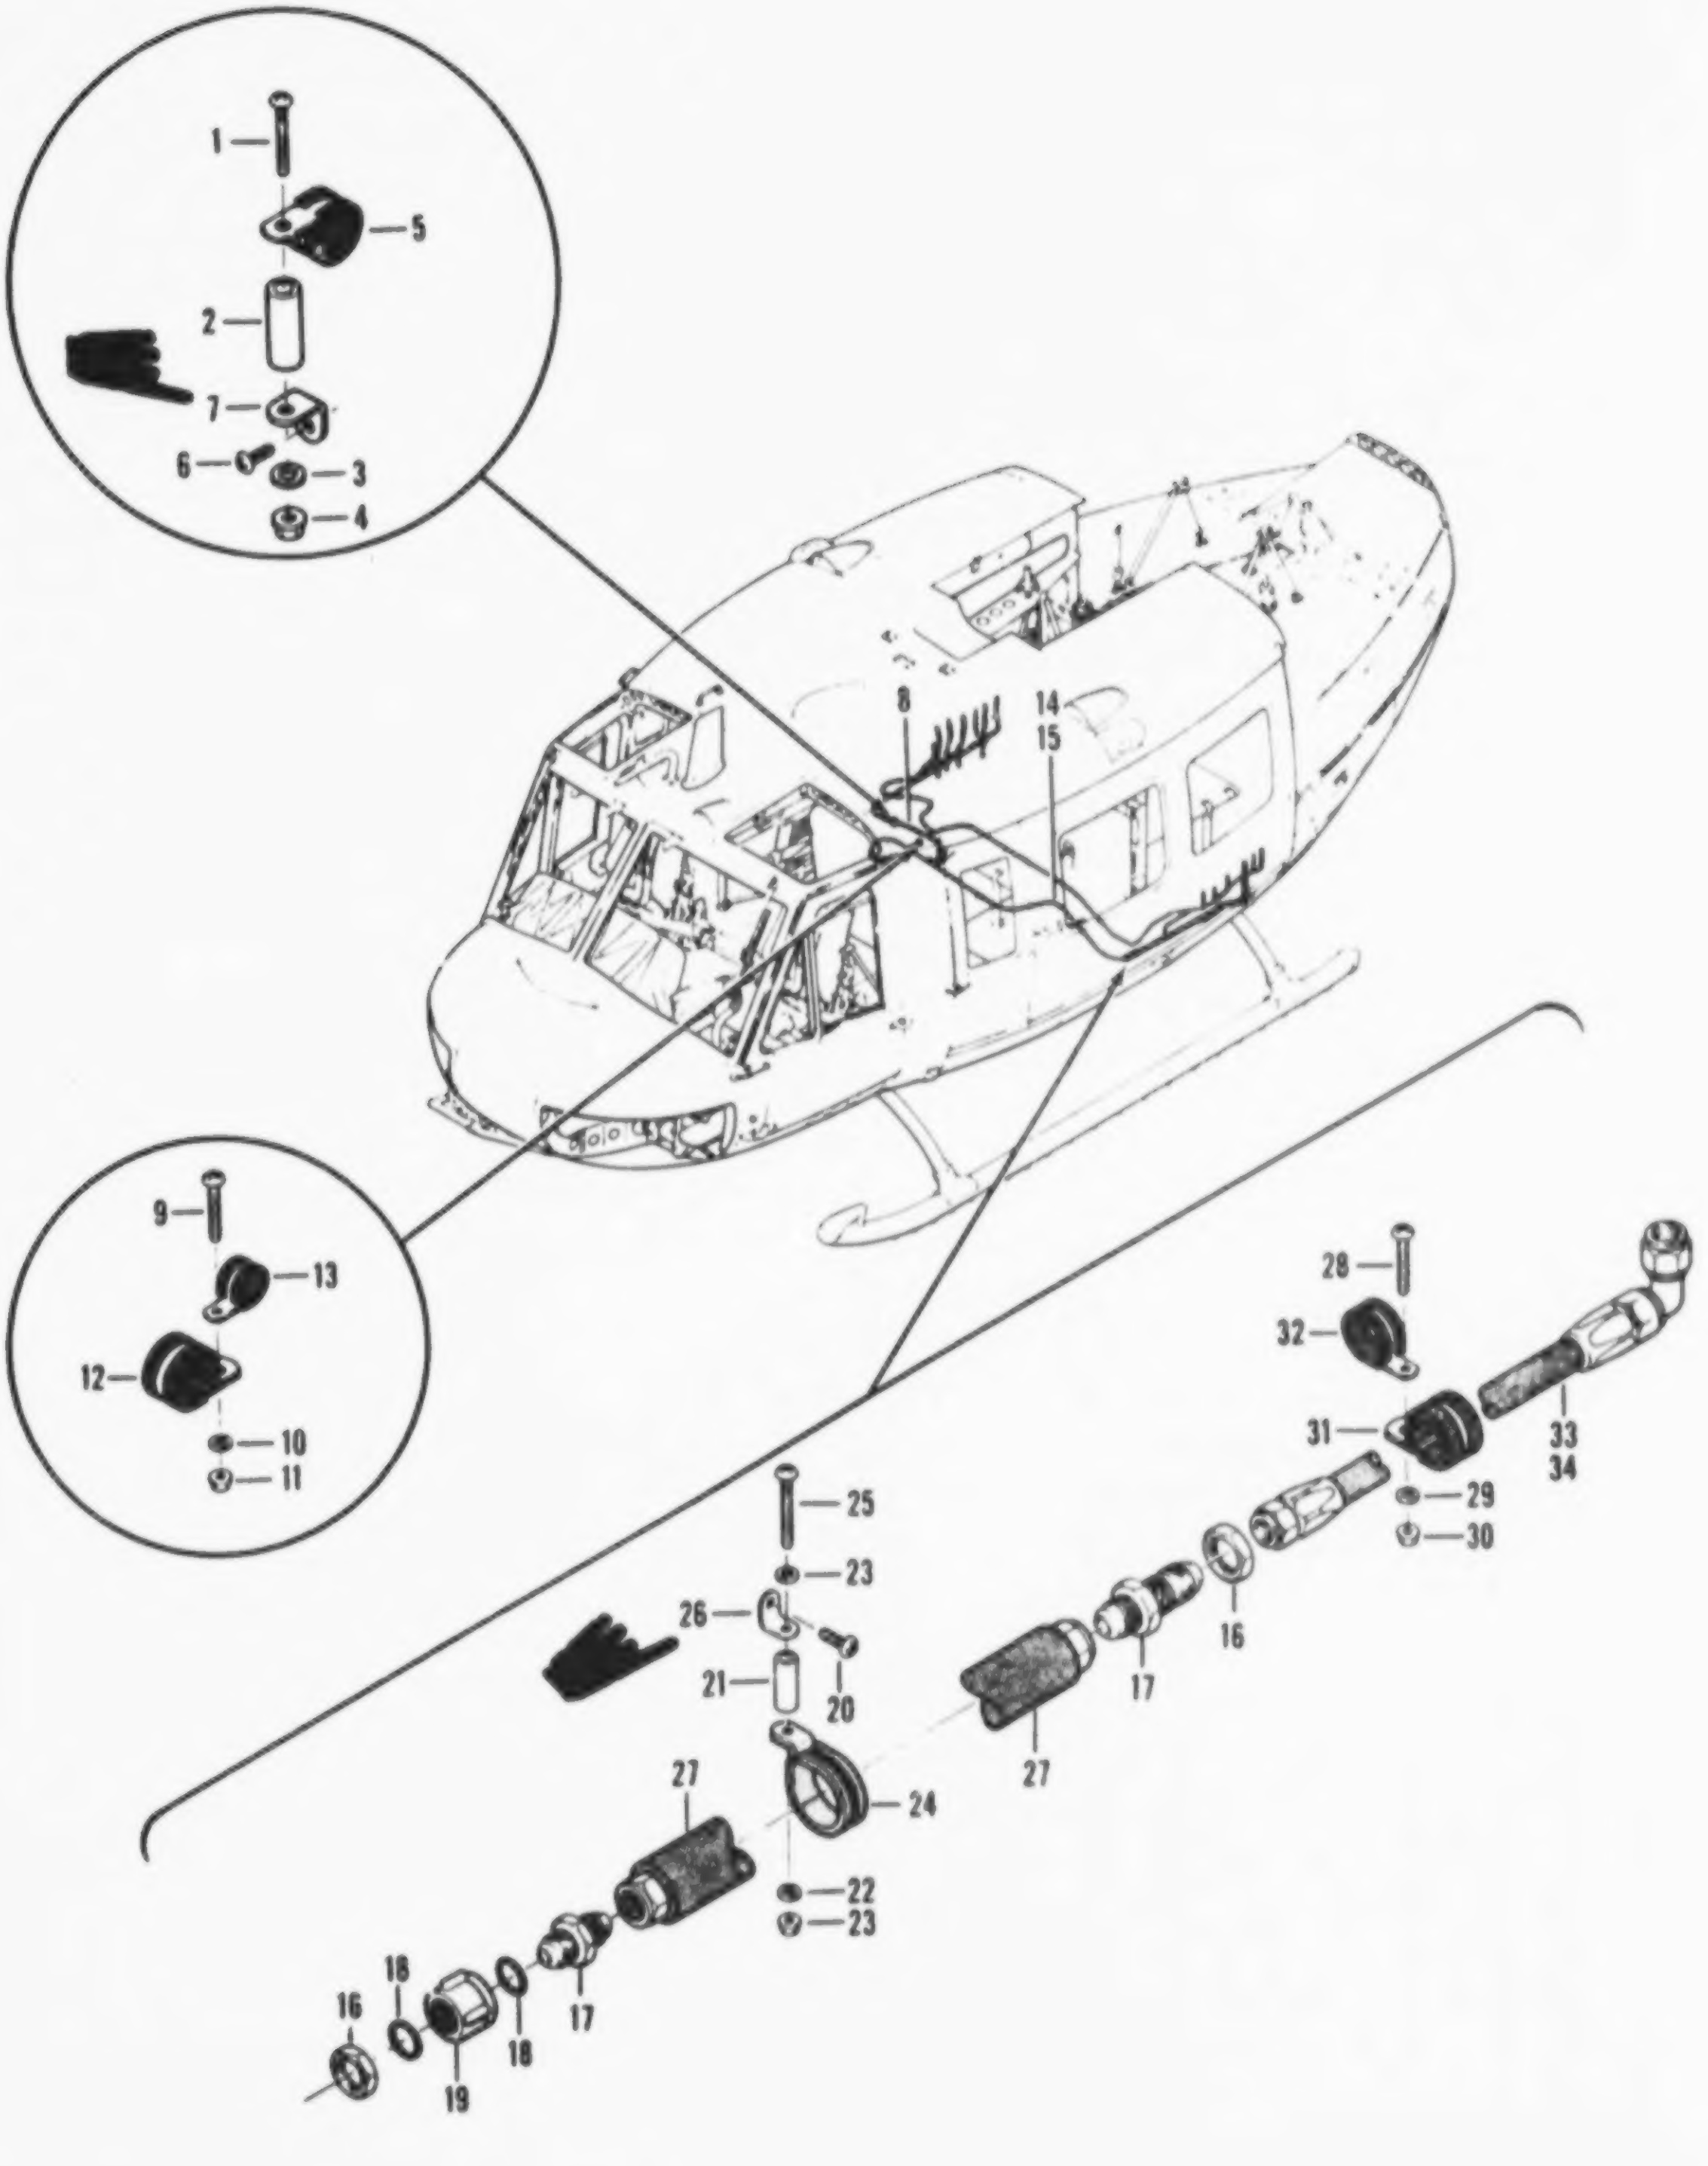
1
5
2
7
6
3
4
8
14
15
9
13
12
10
11
28
32
31
33
34
29
30
25
23
26
20
21
16
17
27
24
27
22
23
18
16
18
17
19

Figure 338A. Lines Installation Kit

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 10 FUEL SYSTEMS		(7) U/M	(8) QTY INC IN UNIT
(a) FIG. NO.	(b) ITEM NO.						USABLE ON CODE		
338A		XCFZZ	1560-00-602-5165	97499	205-704-036-3	LINES INSTL KIT	UHH,UHV	EA	1
338A	1	PAOZZ	5305-00-915-0040	96906	MS27039-1-20	SCREW,MACHINE USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	2	PAOZZ	5365-00-562-3100	80205	NAS43DD3-64	SPACER	UHH,UHV	EA	1
338A	3	PAOZZ	5310-00-167-0753	88044	AN960PC10L	WASHER,FLAT	UHH,UHV	EA	4
338A	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING	UHH,UHV	EA	1
338A	5	PAOZZ	5340-00-993-6244	81996	EAB700D10	CLAMP,LOOP USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	6	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	SCREW,MACHINE USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	7	MFOZZ	DELETED	97499	20-032-1	BRACKET	UHH,UHV	EA	1
338A	8	MFOZZ		97499	70-010J000G214	HOSE ASSEMBLY USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	9	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	SCREW,MACHINE	UHH,UHV	EA	1
338A	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHH,UHV	EA	3
338A	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF LOCKING	UHH,UHV	EA	1
338A	12	PAOZZ	5340-00-993-6244	81996	EAB700D10	CLAMP,LOOP	UHH,UHV	EA	1
338A	13	PAOZZ	5340-00-291-5323	96906	MS21919WDG4	CLAMP,LOOP	UHH,UHV	EA	1
338A	14	MOOZZ		97499	120-067B17	SLEEVE USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	15	MFOZZ		97499	70-010J000A180	HOSE ASSEMBLY USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	16	PAOZZ	5310-01-066-9389	97499	206-060-658-3	NUT,PLAIN,HEXAGON USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	4
338A	17	PAOZZ	4730-00-187-3588	88044	AN919-15D	REDUCER,TUBE	UHH,UHV	EA	2
338A	18	PAOZZ	5330-00-263-8031	96906	MS29512-08	PACKING,PREFORMED	UHH,UHV	EA	4
338A	19	PAOZZ	4730-00-278-8872	80205	NAS424-8D	COUPLING,BOSS	UHH,UHV	EA	2
338A	20	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	SCREW,MACHINE USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	2
338A	21	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	SPACER,SLEEVE USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	2
338A	22	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHH,UHV	EA	2
338A	23	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF LOCKING	UHH,UHV	EA	2
338A	24	PAOZZ	5340-00-598-0529	96906	MS21919WDG28	CLAMP,LOOP USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	2
338A	25	PAOZZ	5305-00-925-7866	96906	MS27039-1-05	SCREW,MACHINE USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	4
338A	26	MFOZZ	DELETED	97499	20-032-1	BRACKET	UHH,UHV	EA	2
338A	27	PBOZZ	4720-01-067-5938	97499	70-052K000A230	HOSE ASSEMBLY,NONME USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	2
338A	28	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	SCREW,MACHINE	UHH,UHV	EA	2
338A	29	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHH,UHV	EA	2
338A	30	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF LOCKING	UHH,UHV	EA	2
338A	31	PAOZZ	5340-00-286-9421	96906	MS21919WDG13	CLAMP,LOOP	UHH,UHV	EA	2
338A	32	PAOZZ	5340-00-722-6878	96906	MS21919WDG8	CLAMP,LOOP	UHH,UHV	EA	2
338A	33	MFOZZ		97499	70-010K000H154 MS21919WDG13	HOSE ASSEMBLY- LH USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1
338A	34	MFOZZ		97499	70-010K304Z134	HOSE ASSEMBLY- RH USE-AFT-CMPL-W MWO 55-1520-210-30/42	UHH,UHV	EA	1

Fig 339,340, & 341 NOT USED

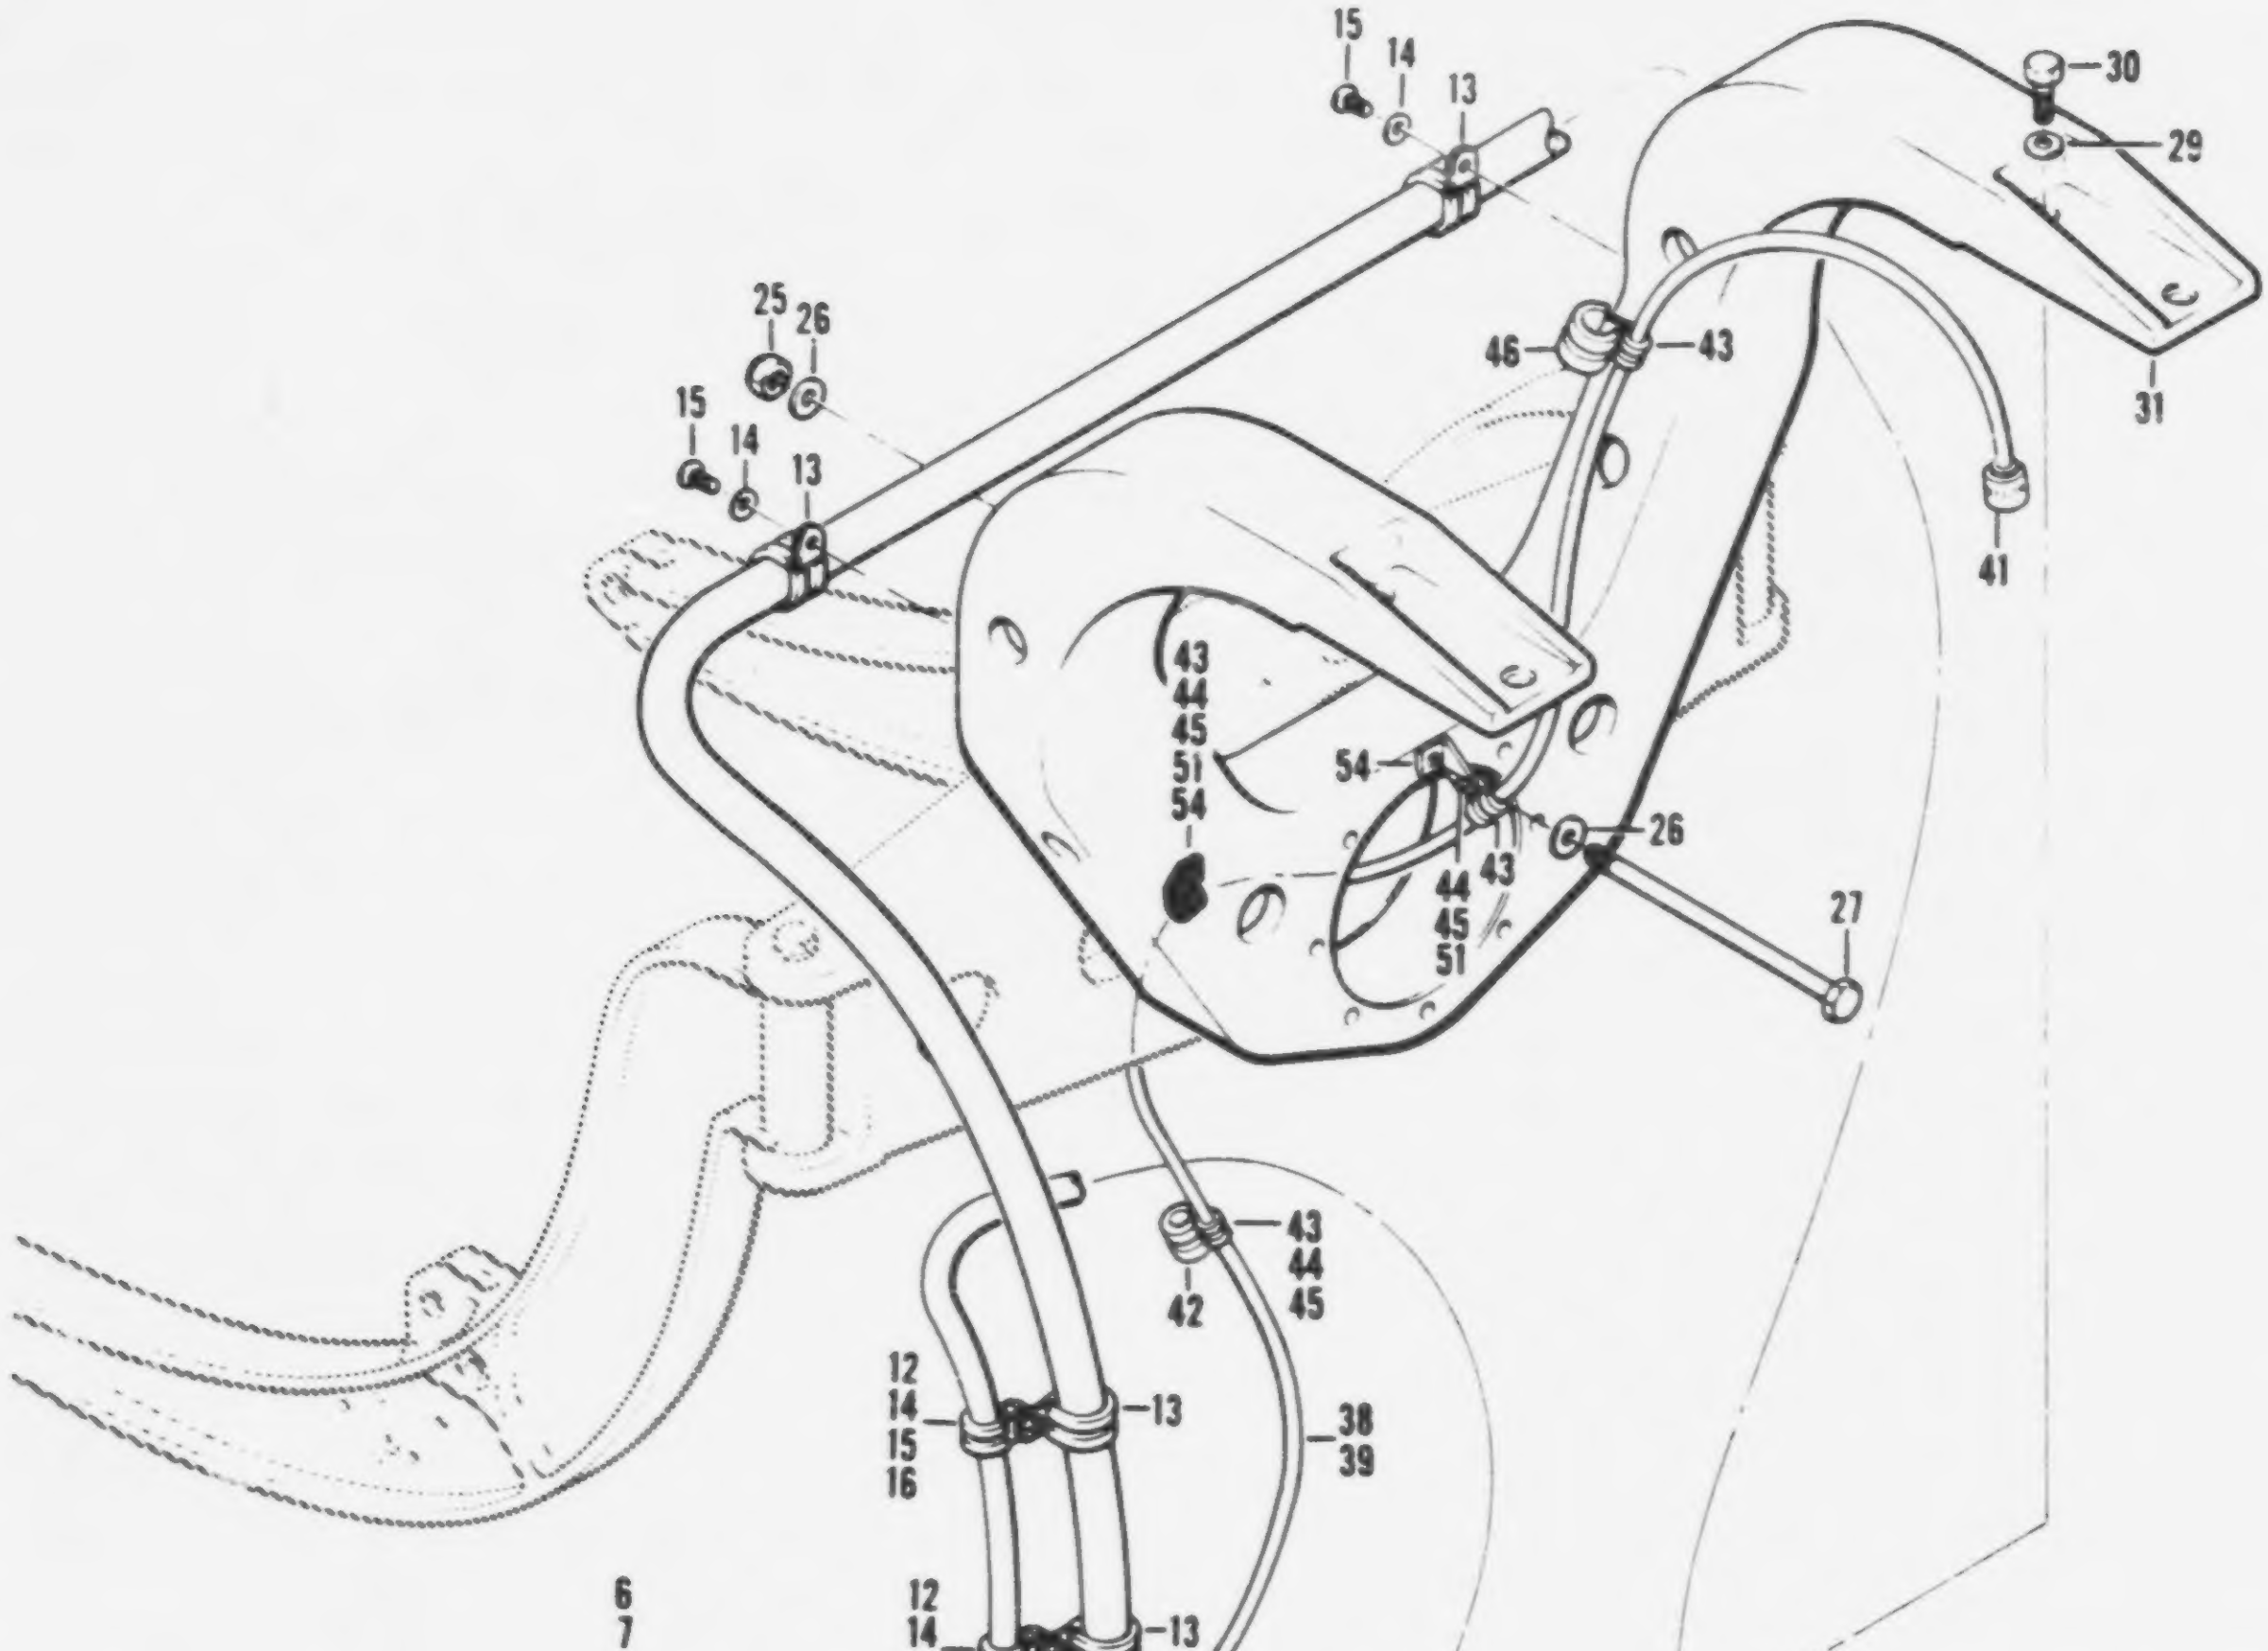
15
14
13
30
29
25
26
15
14
13
46
43
31
41
43
44
45
51
54
54
26
44
45
51
43
27
43
44
45
42
12
14
15
16
13
38
39
12
14
15
16
13
6
7
9
8
9
1
2
3
4
3
18
11
10
14
15
16
17
40
29
28
100
32
36
37
32

Figure 342. External Fuel Tank Installation (Sheet 1 of 2)

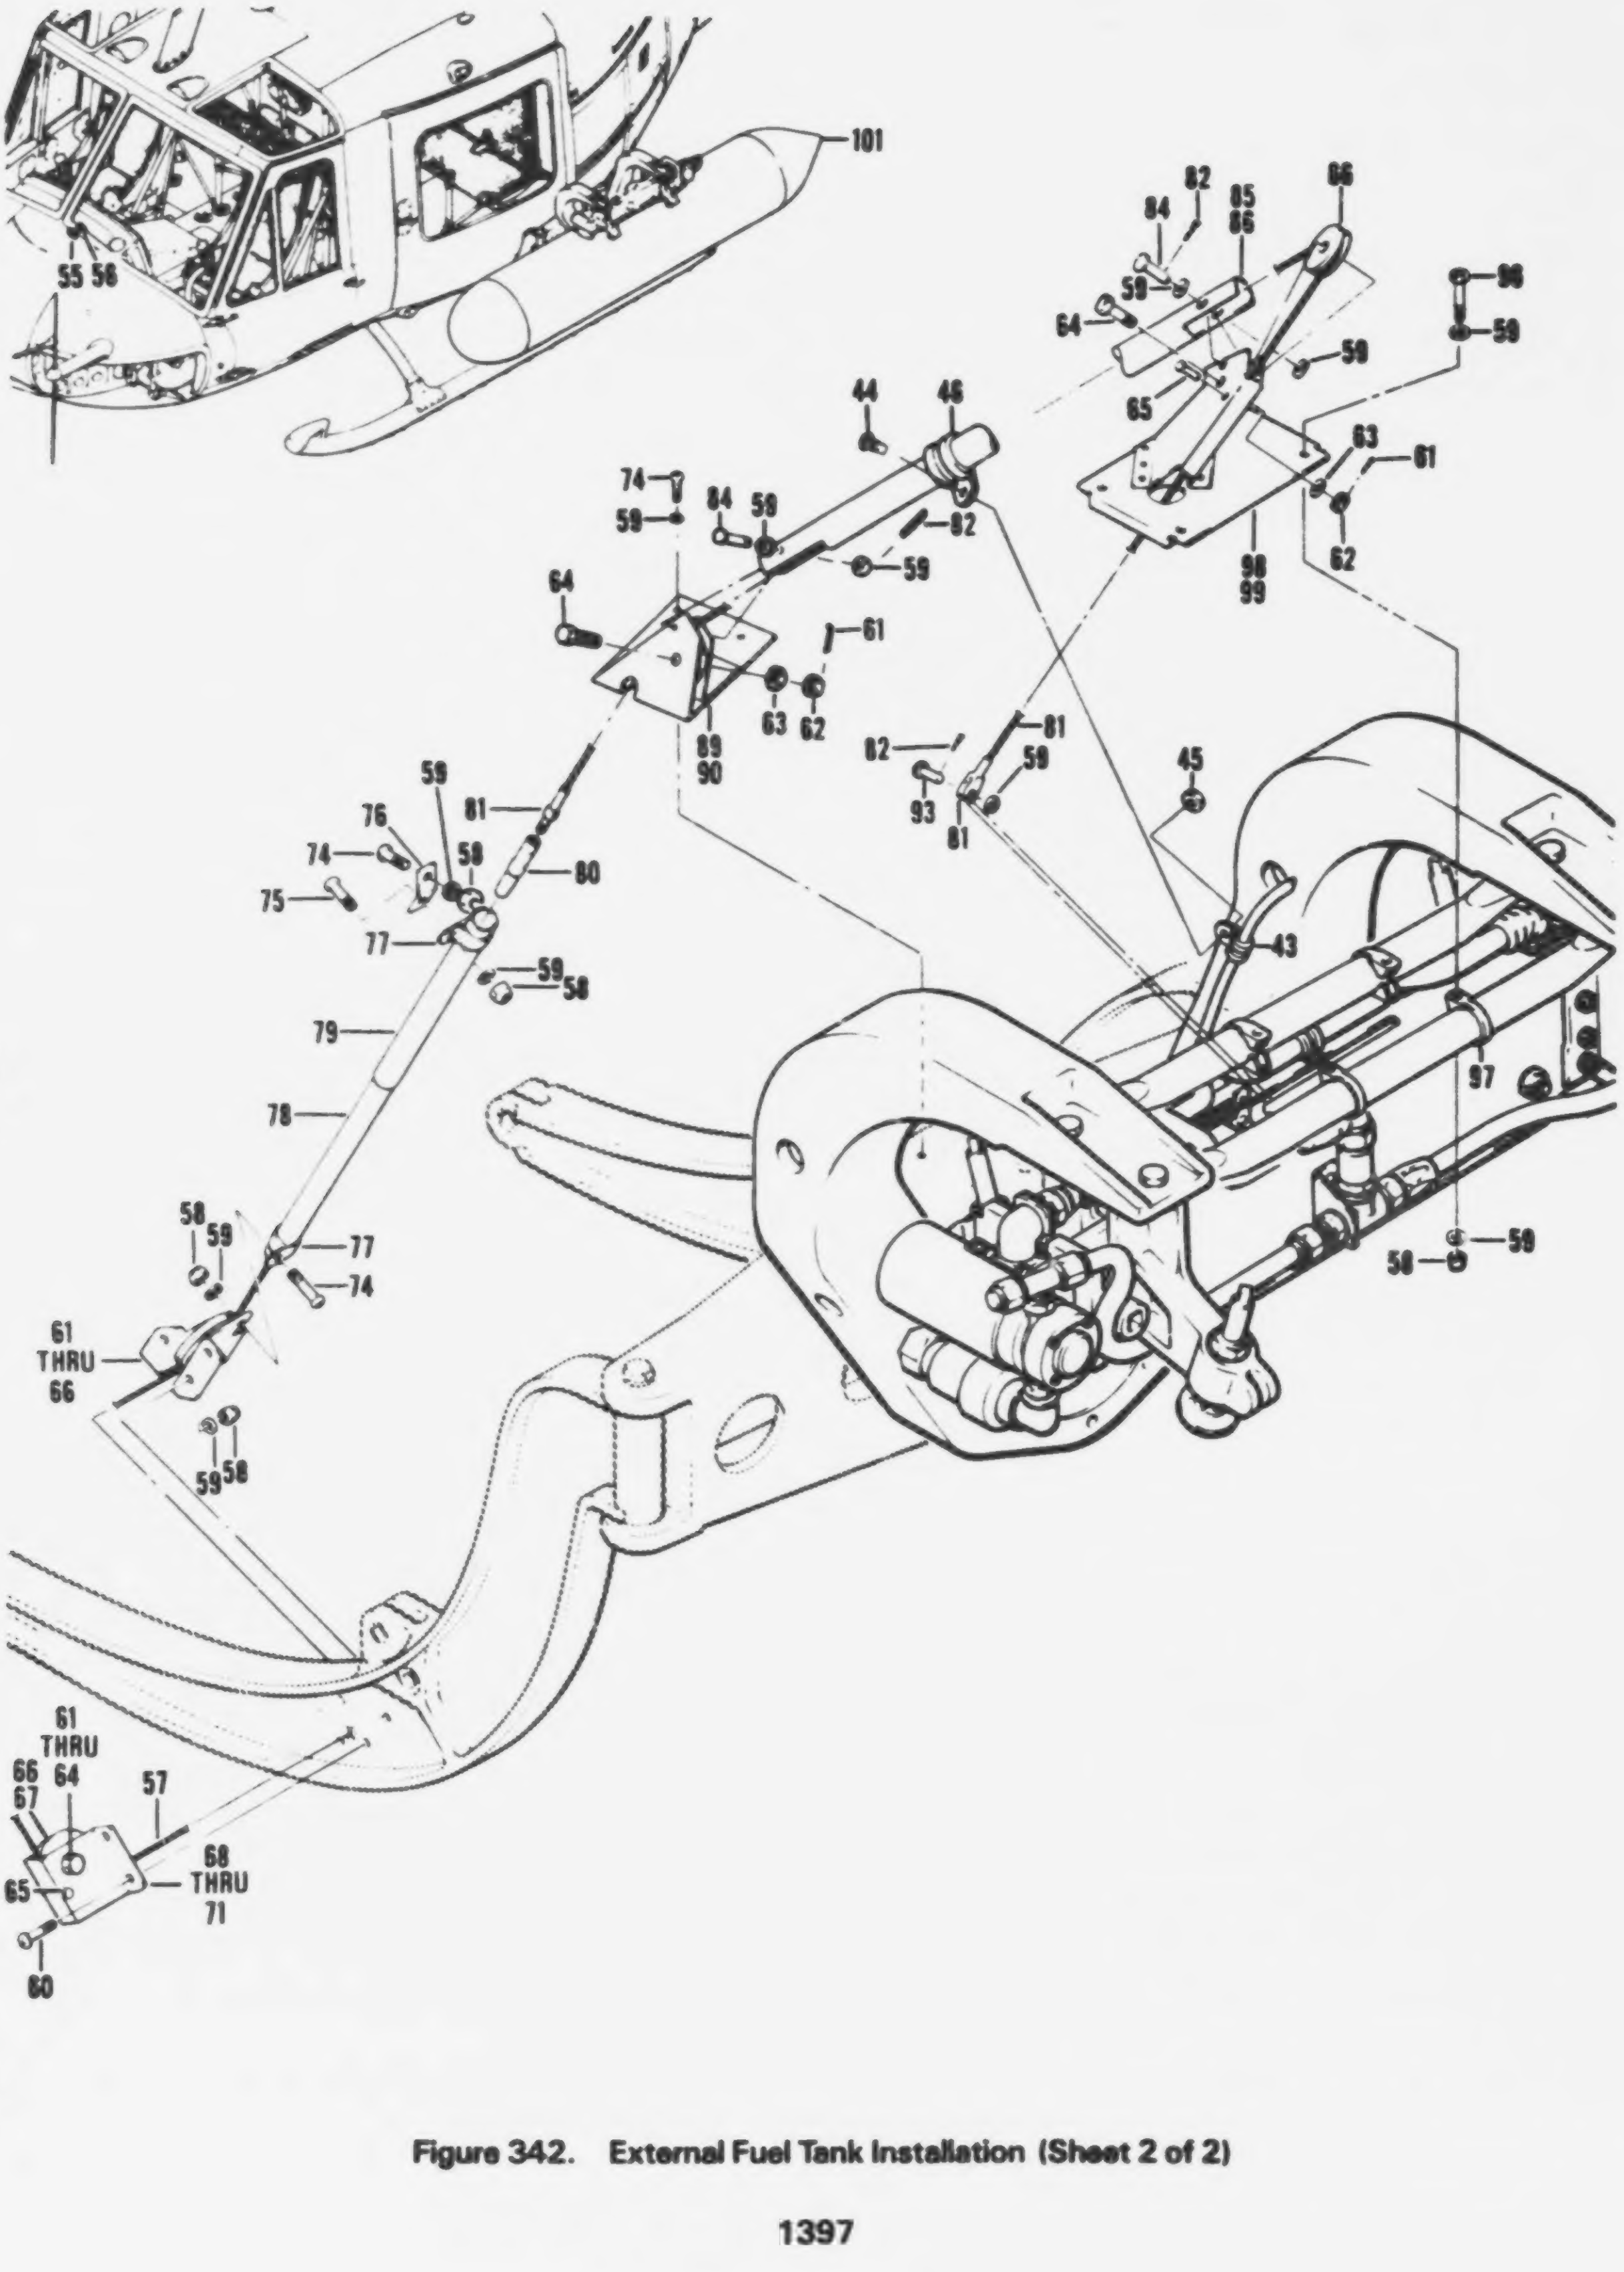
101
55 56
82
84
85
86
86
59
64
96
59
59
44
46
65
63
61
74
59
84
58
82
59
98
99
62
64
61
63
62
89
90
82
81
59
93
81
45
59
76
81
74
58
75
80
77
59
58
43
79
97
78
58
59
77
74
58
59
61
THRU
66
59 58
61
THRU
64
66
67
57
65
68
THRU
71
60

Figure 342. External Fuel Tank Installation (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 10 FUEL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
342		PBOZZ	1560-00-994-9003	97499	204-706-043-1	INSTL KIT,FUEL TANK USBL EFF 62-1872 & SUB SEE FIG 436 FOR NHA UHB,UHC,UHH,UHM,UHV	EA	1
342		A0000		97499	204-706-043-3	.EXTERNAL FUEL TANK ASSEMBLY-LH UHB,UHC,UHH,UHM,UHV	EA	1
342		A0000		97499	204-706-043-5	.EXTERNAL FUEL TANK ASSEMBLY-RH UHB,UHC,UHH,UHM,UHV	EA	1
342	1	PAOZZ	4730-00-941-9911	00624	3755-8S	..COUPLING HALF,QUICK DISCONNECT UHB,UHC,UHH,UHM,UHV	EA	1
342	2	PAOZZ	4730-00-278-8872	80205	NAS424-8D	..COUPLING,BOSS UHB,UHC,UHH,UHM,UHV	EA	1
342	3	PAOZZ	5330-00-263-8031	96906	MS29512-08	..PACKING,PREFORMED UHB,UHC,UHH,UHM,UHV	EA	2
342	4	PAOZZ	4730-00-684-7160	96906	MS24399D20	..REDUCER,TUBE UHB,UHC,UHH,UHM,UHV	EA	1
342	6	PA000	4730-00-021-8974	00624	375525-6	..COUPLING HALF,QUICK DICSONNECT UHB,UHC,UHH,UHM,UHV	EA	1
342	7	PAOZZ	5330-00-443-6089	00624	AE10633-018	...PACKING,PREFORMED UHB,UHC,UHH,UHM,UHV	EA	1
342	8	PAOZZ	4730-00-278-8868	80205	NAS424-6D	..COUPLING,BOSS UHB,UHC,UHH,UHM,UHV	EA	1
342	9	PAOZZ	5330-00-263-8030	96906	MS29512-06	..PACKING,PREFORMED UHB,UHC,UHH,UHM,UHV	EA	1
342	10	PAOZZ	4730-00-684-6916	96906	MS24392D6	..NIPPLE,TUBE UHB,UHC,UHH,UHM,UHV	EA	1
342	11	MFOZZ		96906	MS8000G520F	..HOSE ASSEMBLY UHB,UHC,UHH,UHM,UHV	EA	1
342	12	PAOZZ	5340-00-993-6244	81995	EAB700010	..CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	3
342	13	PAOZZ	5340-00-989-4572	81996	EAB700015	..CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	4
342	14	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE UHB,UHC,UHH,UHM,UHV	EA	5
342	15	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT UHB,UHC,UHH,UHM,UHV	EA	5
342	16	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON UHB,UHC,UHH,UHM,UHV	EA	3
342	17	PAOZZ	5340-00-993-6245	81996	EAB70005	..CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	1
342	18	PAOZZ	5340-00-993-6244	81996	EAB700010	..CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	1
342	25	PAOZZ	5310-00-807-1469	96906	MS21042-5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON UHB,UHC,UHH,UHM,UHV	EA	8
342	26	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT UHB,UHC,UHH,UHM,UHV	EA	16
342	27	PAOZZ	5306-00-150-9540	38044	AN5-67A	..BOLT,MACHINE UHB,UHC,UHH,UHM,UHV	EA	8
342	28	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON UHB,UHC,UHH,UHM,UHV	EA	4
342	29	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT UHB,UHC,UHH,UHM,UHV	EA	8
342	30	PADZZ	5306-00-638-5760	88044	AN6H13	..BOLT,MACHINE UHB,UHC,UHH,UHM,UHV	EA	4
342	31	PBOZZ	1560-00-016-0071	97499	204-061-620-1	..SUPPORT,EXTERNAL FUEL TANK UHB,UHC,UHH,UHM,UHV	EA	1
342	32	PAOOD	1560-00-994-5898	97619	206K68550-1	..PYLON ASSY UHB,UHC,UHH,UHM,UHV	EA	1
342	35	PAOOD	1095-00-874-9581	98752	65J46343	...RACK,BOMB EJECTOR ACFT SEE FIG 435 FOR BREAKDOWN UHB,UHC,UHH,UHM,UHV	EA	1
342	37	XCFZZ		97499	204-075-040-1	..FUEL TANK INSTL EXTERNAL,ELECTRICAL UHB,UHC,UHH,UHM,UHV	EA	1
342	38	A000Z	1560-00-018-0102	97499	204-075-929-7	...CABLE ASSY,LH UHB,UHC,UHH,UHM,UHV	EA	1
342	39	A000Z	1560-00-018-0101	97499	204-075-929-5	...CABLE ASSY,RH UHB,UHC,UHH,UHM,UHV	EA	1
342	40	PAOZZ	5935-00-835-4987	96906	MS3108R1452P	...CONNECTOR,PLUG E UHB,UHC,UHH,UHM,UHV	EA	1
342	41	PAOZZ	5935-00-807-7999	96906	MS3106R28-21P	...CONNECTOR,PLUG,E UHB,UHC,UHH,UHM,UHV	EA	1
342	42	PAOZZ	5340-00-993-1470	81995	EAB700018	...CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	1
342	43	PAOZZ	5340-00-990-9298	81996	EAB70003	...CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	2
342	44	PAOZZ	5305-00-989-7434	96906	MS35207-263	...SCREW,MACHINE UHB,UHC,UHH,UHM,UHV	EA	4
342	45	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON UHB,UHC,UHH,UHM,UHV	EA	4
342	46	PAOZZ	5340-00-993-5478	81996	EAB700012	...CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	1
342	51	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT UHB,UHC,UHH,UHM,UHV	EA	2
342	54	PAOZZ	2915-00-967-1740	97499	206-060-020-5	...SUPPORT,ENGINE ASSE UHB,UHC,UHH,UHM,UHV	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
342	55	PAOZZ	1560-00-915-5921	97499	204-075-266-33	...PANEL,BLANK UHB,UHC,UHH,UHM,UHV	EA	1
342	56	XBOOZ	1560-00-867-1239	97499	204-075-809-1	...CONTROL PANEL,FUEL SEE FIG.257 FOR BREAKDOWN UHB,UHC,UHH,UHM,UHV	EA	1
342		XCFZZ		97499	204-061-621-1	..RELEASE INSTL MANUAL-LH UHB,UHC,UHH,UHM,UHV	EA	1
342		XCFZZ		97499	204-061-621-2	..RELEASE INSTL MANUAL-RH UHB,UHC,UHH,UHM,UHV	EA	1
342	57	PAOZZ	4010-00-088-4882	97499	204-071-520-1	...WIRE ROPE ASSEMBLY, SINGLE LEG UHB,UHC,UHH,UHM,UHV	EA	1
342	58	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX UHB,UHC,UHH,UHM,UHV	EA	12
342	59	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT UHB,UHC,UHH,UHM,UHV	EA	25
342	60	PBOZZ	5305-00-180-0013	88044	AN525-10R11	...SCREW,MACHINE UHB,UHC,UHH,UHM,UHV	EA	5
342	61	PAOZZ	5315-00-234-1854	96906	MS24665-153	...PIN,COTTER UHB,UHC,UHH,UHM,UHV	EA	4
342	62	PAOZZ	5310-00-176-8108	88044	AN320-4	...NUT,PLAIN,SLOTTED,H UHB,UHC,UHH,UHM,UHV	EA	4
342	63	PAOZZ	5310-00-187-2354	88044	AN960PD416	...WASHER,FLAT UHB,UHC,UHH,UHM,UHV	EA	4
342	64	PAOZZ	5306-00-263-3514	80205	NAS464-4-9	...BOLT,SHEAR UHB,UHC,UHH,UHM,UHV	EA	4
342	65	PAOZZ	5315-00-597-1562	80205	NAS427K9	...PIN,SPRING UHB,UHC,UHH,UHM,UHV	EA	3
342	66	PAOZZ	3020-00-288-3411	96906	MS20219A2	...PULLEY,GROOVE UHB,UHC,UHH,UHM,UHV	EA	3
342	67	PAOZZ	3020-00-541-3227	95906	MS20219A1	...PULLEY,GROOVE UHB,UHC,UHH,UHM,UHV	EA	1
342	68	MFOZZ	1560-00-345-8132	97499	204-071-518-1	...BRACKET,FWD LH UHB,UHC,UHH,UHM,UHV	EA	1
342	69	XDOZZ	1560-00-345-8133	97499	204-071-518-2	...BRACKET,FWD RH UHB,UHC,UHH,UHM,UHV	EA	1
342	70	MFOZZ	1560-00-345-8134	97499	204-071-519-1	...BRACKET,LH UHB,UHC,UHH,UHM,UHV	EA	1
342	71	XDOZZ	1560-00-345-8135	97499	204-071-519-2	...BRACKET,RH UHB,UHC,UHH,UHM,UHV	EA	1
342	74	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE UHB,UHC,UHH,UHM,UHV	EA	6
342	75	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE UHB,UHC,UHH,UHM,UHV	EA	1
342	76	MFOZZ	5340-00-345-8141	97499	204-071-525-1	...BRACKET,ANGLE UHB,UHC,UHH,UHM,UHV	EA	1
342	77	PAOZZ	5340-00-186-3389	88044	AN742D8	...CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	2
342	78	XDOZZ	1560-00-345-8137	97499	204-071-522-1	...GUARD,LOWER UHB,UHC,UHH,UHM,UHV	EA	1
342	79	XDOZZ	1560-00-345-8138	97499	204-071-523-1	...GUARD,UPPER UHB,UHC,UHH,UHM,UHV	EA	1
342	80	PAOZZ	5340-00-067-9871	96906	MS21251B2S	...TURNBUCKLE BODY UHB,UHC,UHH,UHM,UHV	EA	1
342	81	XDOZZ	4010-00-965-0418	80205	NAS302R12-0353	...WIRE ROPE ASSY UHB,UHC,UHH,UHM,UHV	EA	1
342	82	PAOZZ	5315-00-815-1405	96906	MS24665-151	...PIN,COTTER UHB,UHC,UHH,UHM,UHV	EA	2
342	84	PAOZZ	5315-00-080-1941	96906	MS20392-2C27	...PIN,STRAIGHT,HEADED UHB,UHC,UHH,UHM,UHV	EA	2
342	85	PAOZZ	1560-00-202-8619	97499	204-061-625-1	...PROTECTOR,TUBE-LH UHB,UHC,UHH,UHM,UHV	EA	1
342	86	PAOZZ	1560-00-202-8620	97499	204-061-625-2	...PROTECTOR,TUBE-RH UHB,UHC,UHH,UHM,UHV	EA	1
342	89	PAOZZ	1560-00-018-0061	97499	204-061-623-1	...SUPPORT ASSY,LH UHB,UHC,UHH,UHM,UHV	EA	1
342	90	PAOZZ	1560-00-018-0062	97499	204-061-623-2	...SUPPORT ASSY,RH UHB,UHC,UHH,UHM,UHV	EA	1
342	93	PBOZZ	5315-00-080-0170	96906	MS20392-2C9	...PIN,STRAIGHT,HEA UHB,UHC,UHH,UHM,UHV	EA	1
342	96	PAOZZ	5305-00-282-8470	88044	AN525-10R18	...SCREW,MACHINE UHB,UHC,UHH,UHM,UHV	EA	4
342	97	PAOZZ	5340-00-593-3392	97499	45C20AAD12	...CLAMP,LOOP UHB,UHC,UHH,UHM,UHV	EA	4
342	98	PAOZZ	1560-00-018-0059	97499	204-061-622-1	...SUPPORT ASSY,LH UHB,UHC,UHH,UHM,UHV	EA	1
342	99	PAOZZ	1560-00-018-0060	97499	204-061-622-2	...SUPPORT ASSY,RH UHB,UHC,UHH,UHM,UHV	EA	1
342	100	PAOZZ	1560-00-019-0207	97499	204-061-624-1	...TUBE, CABLE SUPPORT UHB,UHC,UHH,UHM,UHV	EA	2
342	101	PAOZZ	1560-00-919-7317	97619	206K68510-1	..TANK,FUEL,AIRCRAFT 100 GALLONS UHB,UHC,UHH,UHM,UHV	EA	1

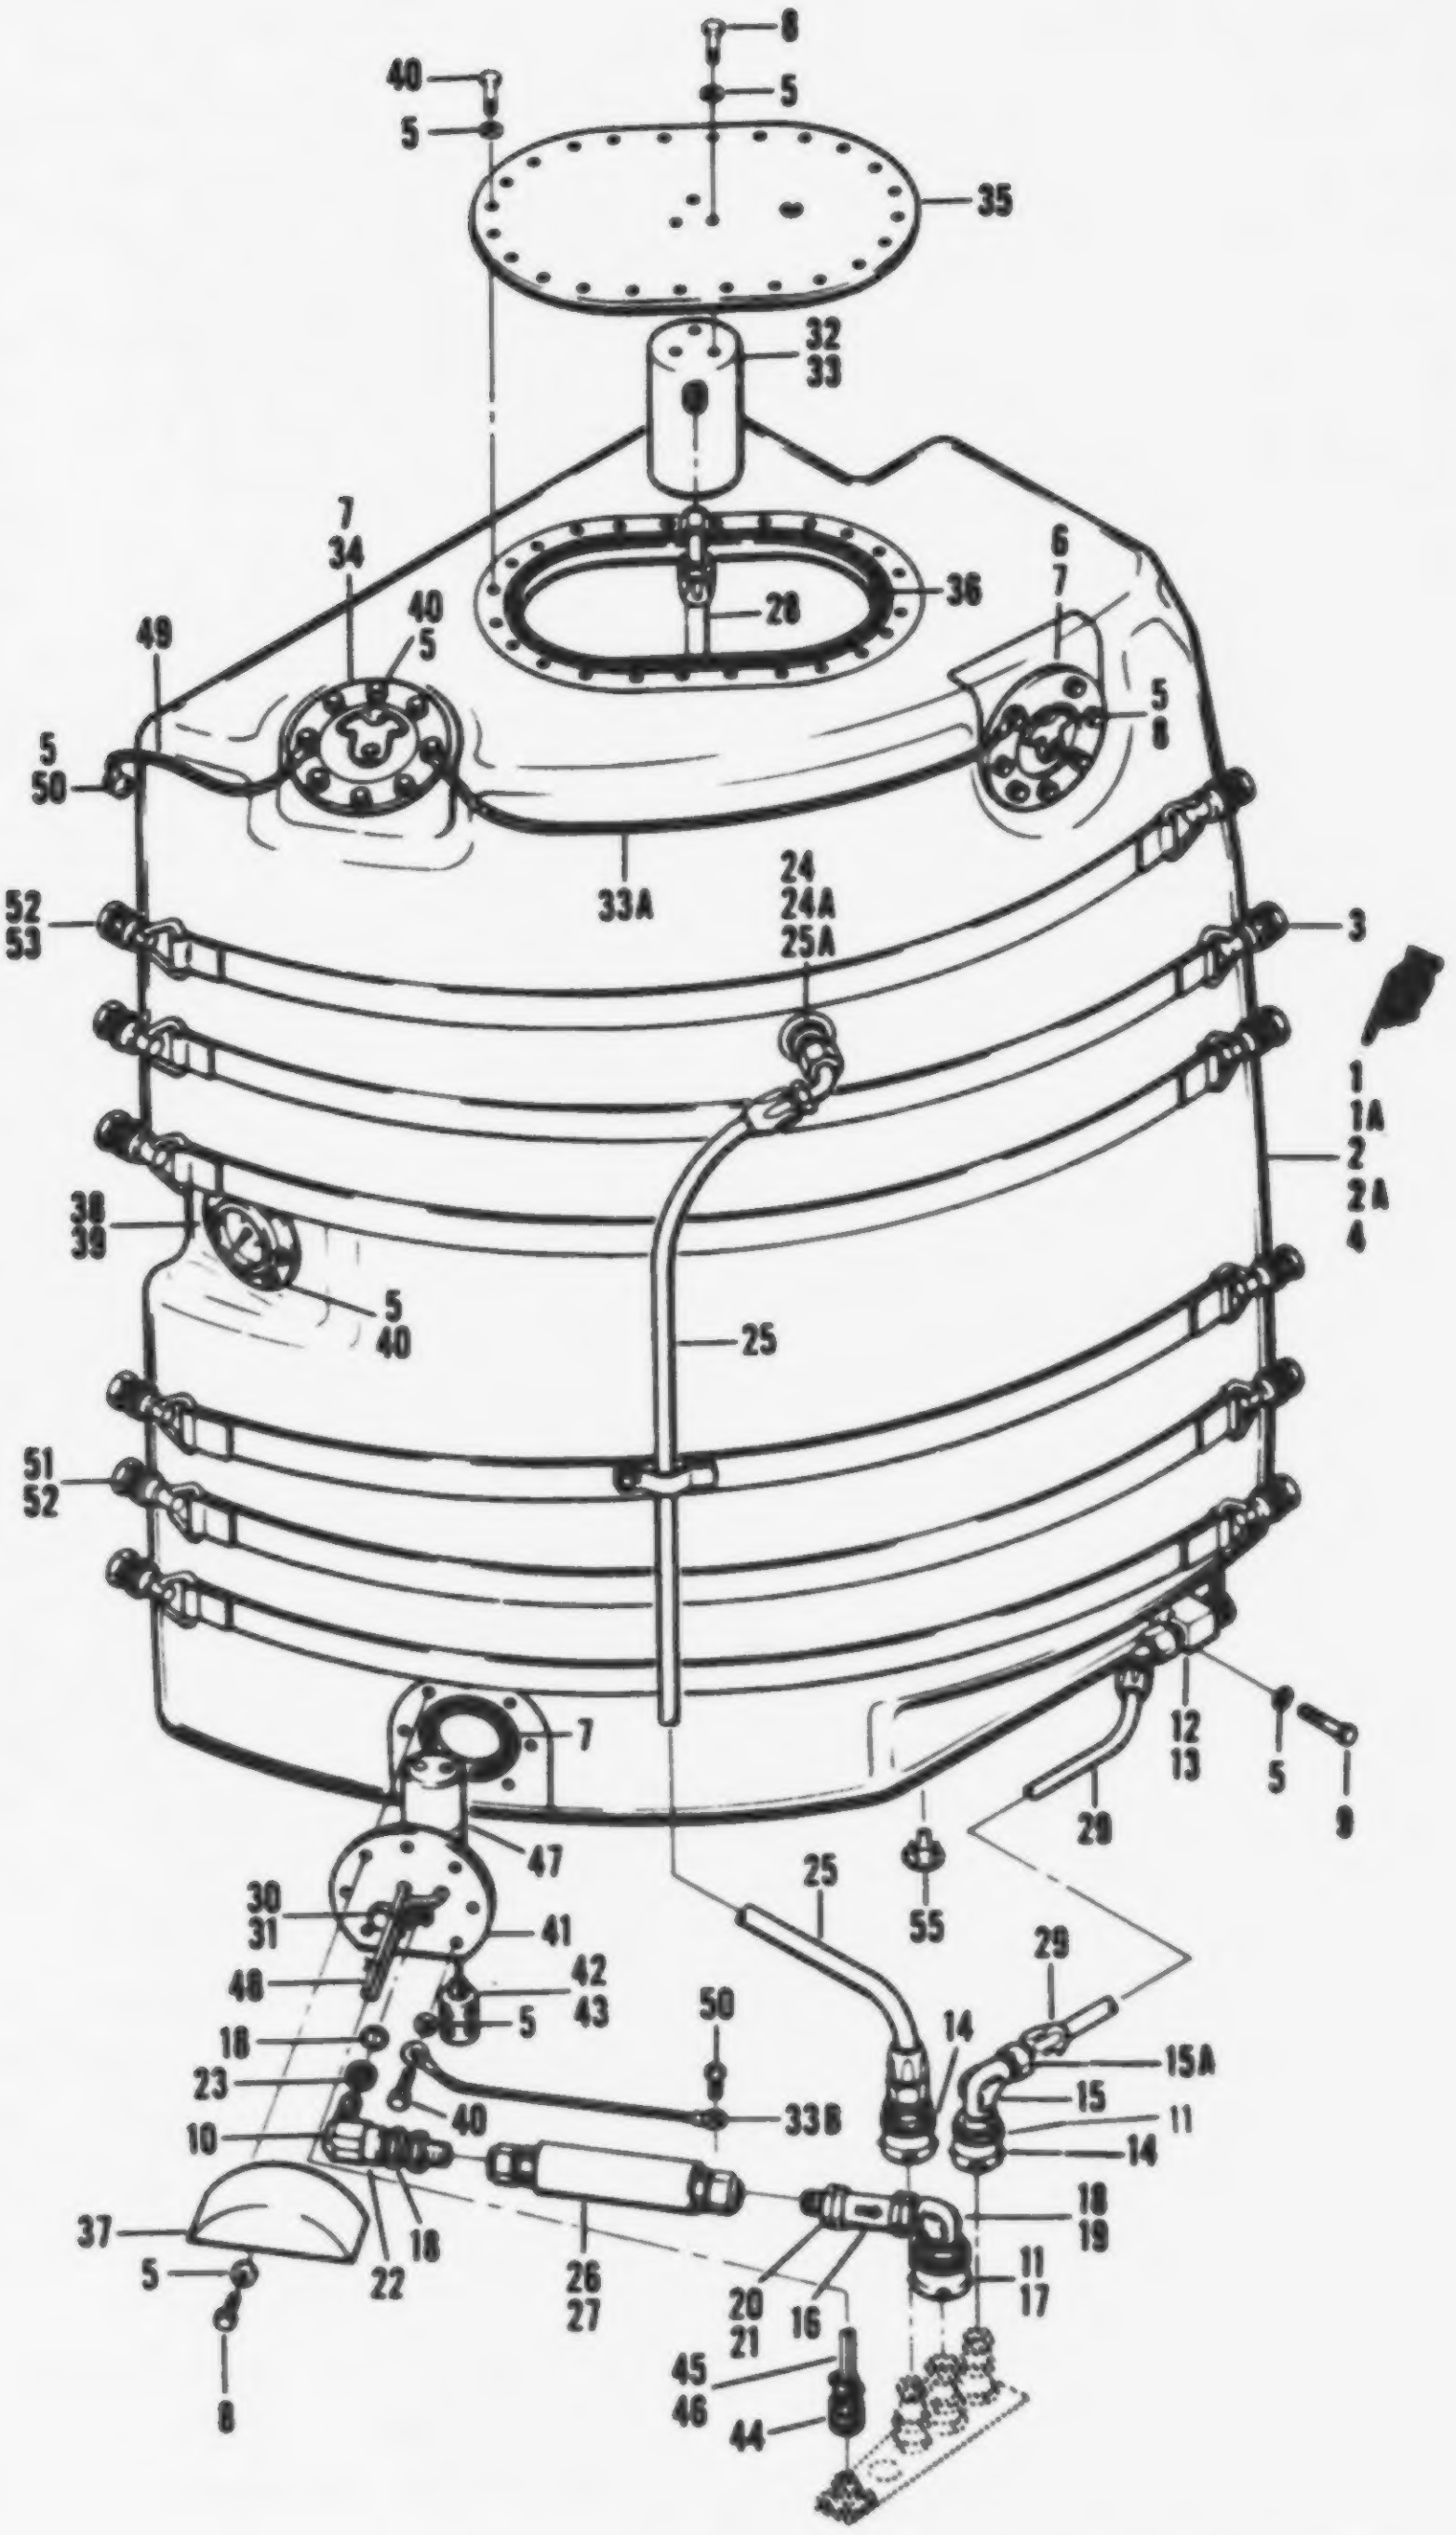
8
40
5
5
35
32
33
7
34
40
5
36
28
6
7
5
8
49
5
50
33A
24
24A
25A
52
53
3
1
1A
2
2A
4
38
39
5
40
25
51
52
7
12
13
5
9
29
47
25
55
30
31
41
42
43
5
48
18
50
29
15A
23
40
33B
14
15
11
14
10
18
19
37
22
18
26
27
20
21
16
11
17
5
45
46
44
8

Figure 343. Auxiliary Fuel System

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
343		PBOZZ	1560-00-602-5164	97499	205-706-087-1	MODIFICATION KIT AUXILIARY FUEL SYSTEM	UHH,UHV	EA	1
343		XCFZZ		97499	205-706-087-3	.FUEL CELL ASSEMBLY LH	UHH,UHV	EA	1
343		XDFZZ		97499	205-706-087-4	.FUEL CELL ASSEMBLY RH	UHH,UHV	EA	1
343	1	PAOZZ	1560-01-058-4390	97499	205-063-606-1	..TANK,FUEL,AIRCRAFT LH	UHH,UHV	EA	1
343	1A	PAOZZ	1560-01-225-3902	00333	FCD57953	...RETAINER,LH	UHH,UHV	EA	1
343	2	PAOZZ	1560-01-058-4391	97499	205-063-606-2	..TANK,FUEL,AIRCRAFT RH	UHH,UHV	EA	1
343	2A	PAOZZ	1560-01-225-3911	00333	FCD57954	...RETAINER,RH	UHH,UHV	EA	1
343	3	PAOZZ	1680-01-085-7826	00624	32343	...ADAPTER,QUICK DISCO	UHH,UHV	EA	14
343	4	PAOZZ	8305-00-051-2163	81349	MILW4088	...WEBBING,TEXTILE	UHH,UHV	EA	7
343	5	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT	UHH,UHV	EA	57
343	6	PAOZZ	1560-01-095-4337	97499	209-060-651-11	..RECEIVER,REFUELING	UHH,UHV	EA	1
343	7	PAOZZ	5330-00-263-8013	96906	MS29513-243	..PACKING,PREFORMED	UHH,UHV	EA	3
343	8	PAOZZ	5306-00-182-2016	88044	AN4H6A	..BOLT,MACHINE	UHH,UHV	EA	13
343	9	PAOZZ	5306-00-182-2017	88044	AN4H6A	..BOLT,MACKINE	UHH,UHV	EA	2
343	10	PBOZZ	4730-01-064-2487	97499	205-063-619-1	..ADAPTER,STRAIGHT,TU U/O PN 205-076-087-4	UHH,UHV	EA	1
343	11	PAOZZ	5330-00-263-8031	96906	MS29512-08	..PACKING,PREFORMED	UHH,UHV	EA	2
343	12	PBOZZ	1560-01-078-5647	97499	205-063-604-1	..COCK,POPPET DRAIN	UHH,UHV	EA	1
343	13	PAOZZ	5330-00-248-3846	96906	MS29513-114	..PACKING,PREFORMED	UHH,UHV	EA	1
343	14	PAOZZ	4730-00-941-9911	00624	3755-8S	..COUPLING HALF,QUICK DISCONNECT	UHH,UHV	EA	2
343	15	PAOZZ	4730-00-277-2458	88044	AN939D8	..ELBOW,BOSS	UHH,UHV	EA	1
343	15A	PAOZZ	4730-00-684-6915	88044	AN815-8D	..UNION	UHH,UHV	EA	1
343	16	PAOZZ	4820-00-758-9299	97499	205-061-623-1	..VALVE,CHECK	UHH,UHV	EA	1
343	17	PBOZZ	4730-00-773-2615	00624	3755-10	..COUPLING HALF,QUICK	UHH,UHV	EA	1
343	18	PAOZZ	5330-00-263-8032	96906	MS29512-10	..PACKING,PREFORMED	UHH,UHV	EA	4
343	19	PAOZZ	4730-00-277-2459	88044	AN939D10	..ELBOW,BOSS	UHH,UHV	EA	1
343	20	PBOZZ	4730-00-805-5100	96906	MS24399D21	..REDUCER,TUBE	UHH,UHV	EA	2
343	21	PAOZZ	5330-00-263-8033	96906	MS29512-12	..PACKING,PREFORMED	UHH,UHV	EA	2
343	22	PBOZZ	4730-01-070-8534	97499	205-063-601-17	..VALVE,CHECK	UHH,UHV	EA	1
343	23	PAOZZ	5310-00-282-7834	88044	AN924-10D	..NUT,PLAIN	UHH,UHV	EA	1
343	24	PAOZZ	4730-00-062-6821	96906	MS24393D8	..NIPPLE,TUBE	UHH,UHV	EA	1
343	24A	PAOZZ	5320-00-263-8031	96906	MS29512-08	..PACKING,PREFORME	UHH,UHV	EA	1
343	25	MFOZZ		97499	70-010J000V384	..HOSE ASSEMBLY	UHH,UHV	EA	1
343	25A	PAOZZ	5310-00-282-7835	96906	MS24400D8	..NUT,PLAIN,HEXAGON	UHH,UHV	EA	1
343	26	PAOZZ	4720-01-091-8506	97499	70-032K000A085	..HOSE ASSEMBLY U/O PN 205-706-087-4	UHH,UHV	EA	1
343	27	PAOZZ	4720-01-110-5440	97499	70-032K000A081	..HOSE ASSEMBLY,NONME U/O PN 205-706-087-3	UHH,UHV	EA	1
343	28	MFOZZ		97499	70-010J000T174	..HOSE ASSEMBLY	UHH,UHV	EA	1
343	29	MFOZZ		97499	70-010J000T164	..HOSE ASSEMBLY	UHH,UHV	EA	1
343	30	PAOZZ	5365-00-287-0094	88044	AN814-4D	..NIPPLE,TUBE U/O PN 205-706-087-4	UHH,UHV	EA	1
343	31	PAOZZ	5330-00-263-8028	96906	MS29512-04	..PACKING,PREFORMED	UHH,UHV	EA	1
343	32	PBOZZ	1560-01-057-7306	97499	205-063-605-1	..VALVE,SHUTOFF,FUEL	UHH,UHV	EA	1
343	33	PBOZZ	5330-01-064-9889	97499	205-063-611-1	..GASKET	UHH,UHV	EA	1
343	33A	MOOZZ	6150-00-313-2317	96906	MS25083-2OO27	..LEAD,ELECTRICAL	UHH,UHV	EA	1
343	33B	MOOZZ	6150-00-916-3979	96906	MS25083-2BC18	..LEAD,ELECTRICAL	UHH,UHV	EA	1
343	34	PBOZZ	1560-01-056-7470	97499	205-063-607-1	..CAP,FILLER OPENING	UHH,UHV	EA	1
343	35	PBOZZ	1560-01-057-3816	97499	205-063-608-3	..COVER,ACCESS	UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
343	36	PBOZZ	5330-00-678-5443	97499	204-060-667-3	..PACKING,PREFORMED	UHH,UHV	EA	1
343	37	PBOZZ	1560-01-057-7307	97499	205-063-621-1	..COVER,RADIO INTERFE	UHH,UHV	EA	1
343	38	PAOZZ	6680-01-072-1818	97499	205-063-618-1	..INDICATOR,LIQUID	UHH,UHV	EA	1
343	39	PAOZZ	5330-00-291-3078	96906	MS29513-237	..PACKING,PREFORMED	UHH,UHV	EA	1
343	40	PAOZZ	5306-00-150-9105	88044	AN4-4A	..BOLT,MACHINE	UHH,UHV	EA	42
343	41	AOOOO		97499	205-061-626-5	..PUMP ASSEMBLY	UHH,UHV	EA	1
343	42	PAOZZ	2915-00-089-7737	50625	F8300-134	...SWITCH,FLOAT,LIQUID	UHH,UHV	EA	1
343	43	PAOZZ	5330-00-263-8030	96906	MS29512-06	...PACKING,PREFORMED	UHH,UHV	EA	1
343	44	PAOZZ	5935-00-755-3236	96906	MS3116E14-5P	...CONNECTOR,PLUG	UHH,UHV	EA	1
343	45	MOOZZ		97499	85T4-10-14	...TUBE	UHH,UHV	EA	1
343	46	MOOZZ		97499	85T4-1-52	...TUBE	UHH,UHV	EA	1
343	47	PAOOO	2915-01-100-5556	97499	205-061-622-3	...PUMP,FUEL BOOSTER	UHH,UHV	EA	1
343	48	MOOZZ		97499	85T4-3-12	. TUBING	UHH,UHV	EA	4
343	49	XDOZZ	6150-00-725-1185	96906	MS25083-2CC11	..LEAD,ELECTRICAL	UHH,UHV	EA	1
343	50	PAOZZ	5305-00-891-8883	96906	MS27039-4-11	..SCREW	UHH,UHV	EA	2
343	51	PBOZZ	5305-01-064-3606	97499	120-064-6H	..SCREW,SHOULDER	UHH,UHV	EA	2
343	52	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT	UHH,UHV	EA	24
343	53	PBOZZ	5305-01-064-3607	97499	120-064-8H	..SCREW,SHOULDER	UHH,UHV	EA	22
343	55	XDOZZ	5340-00-413-0079	97499	100-0508437	..PLUG,PROTECTIVE	UHH,UHV	EA	2

Fig 344 NOT USED

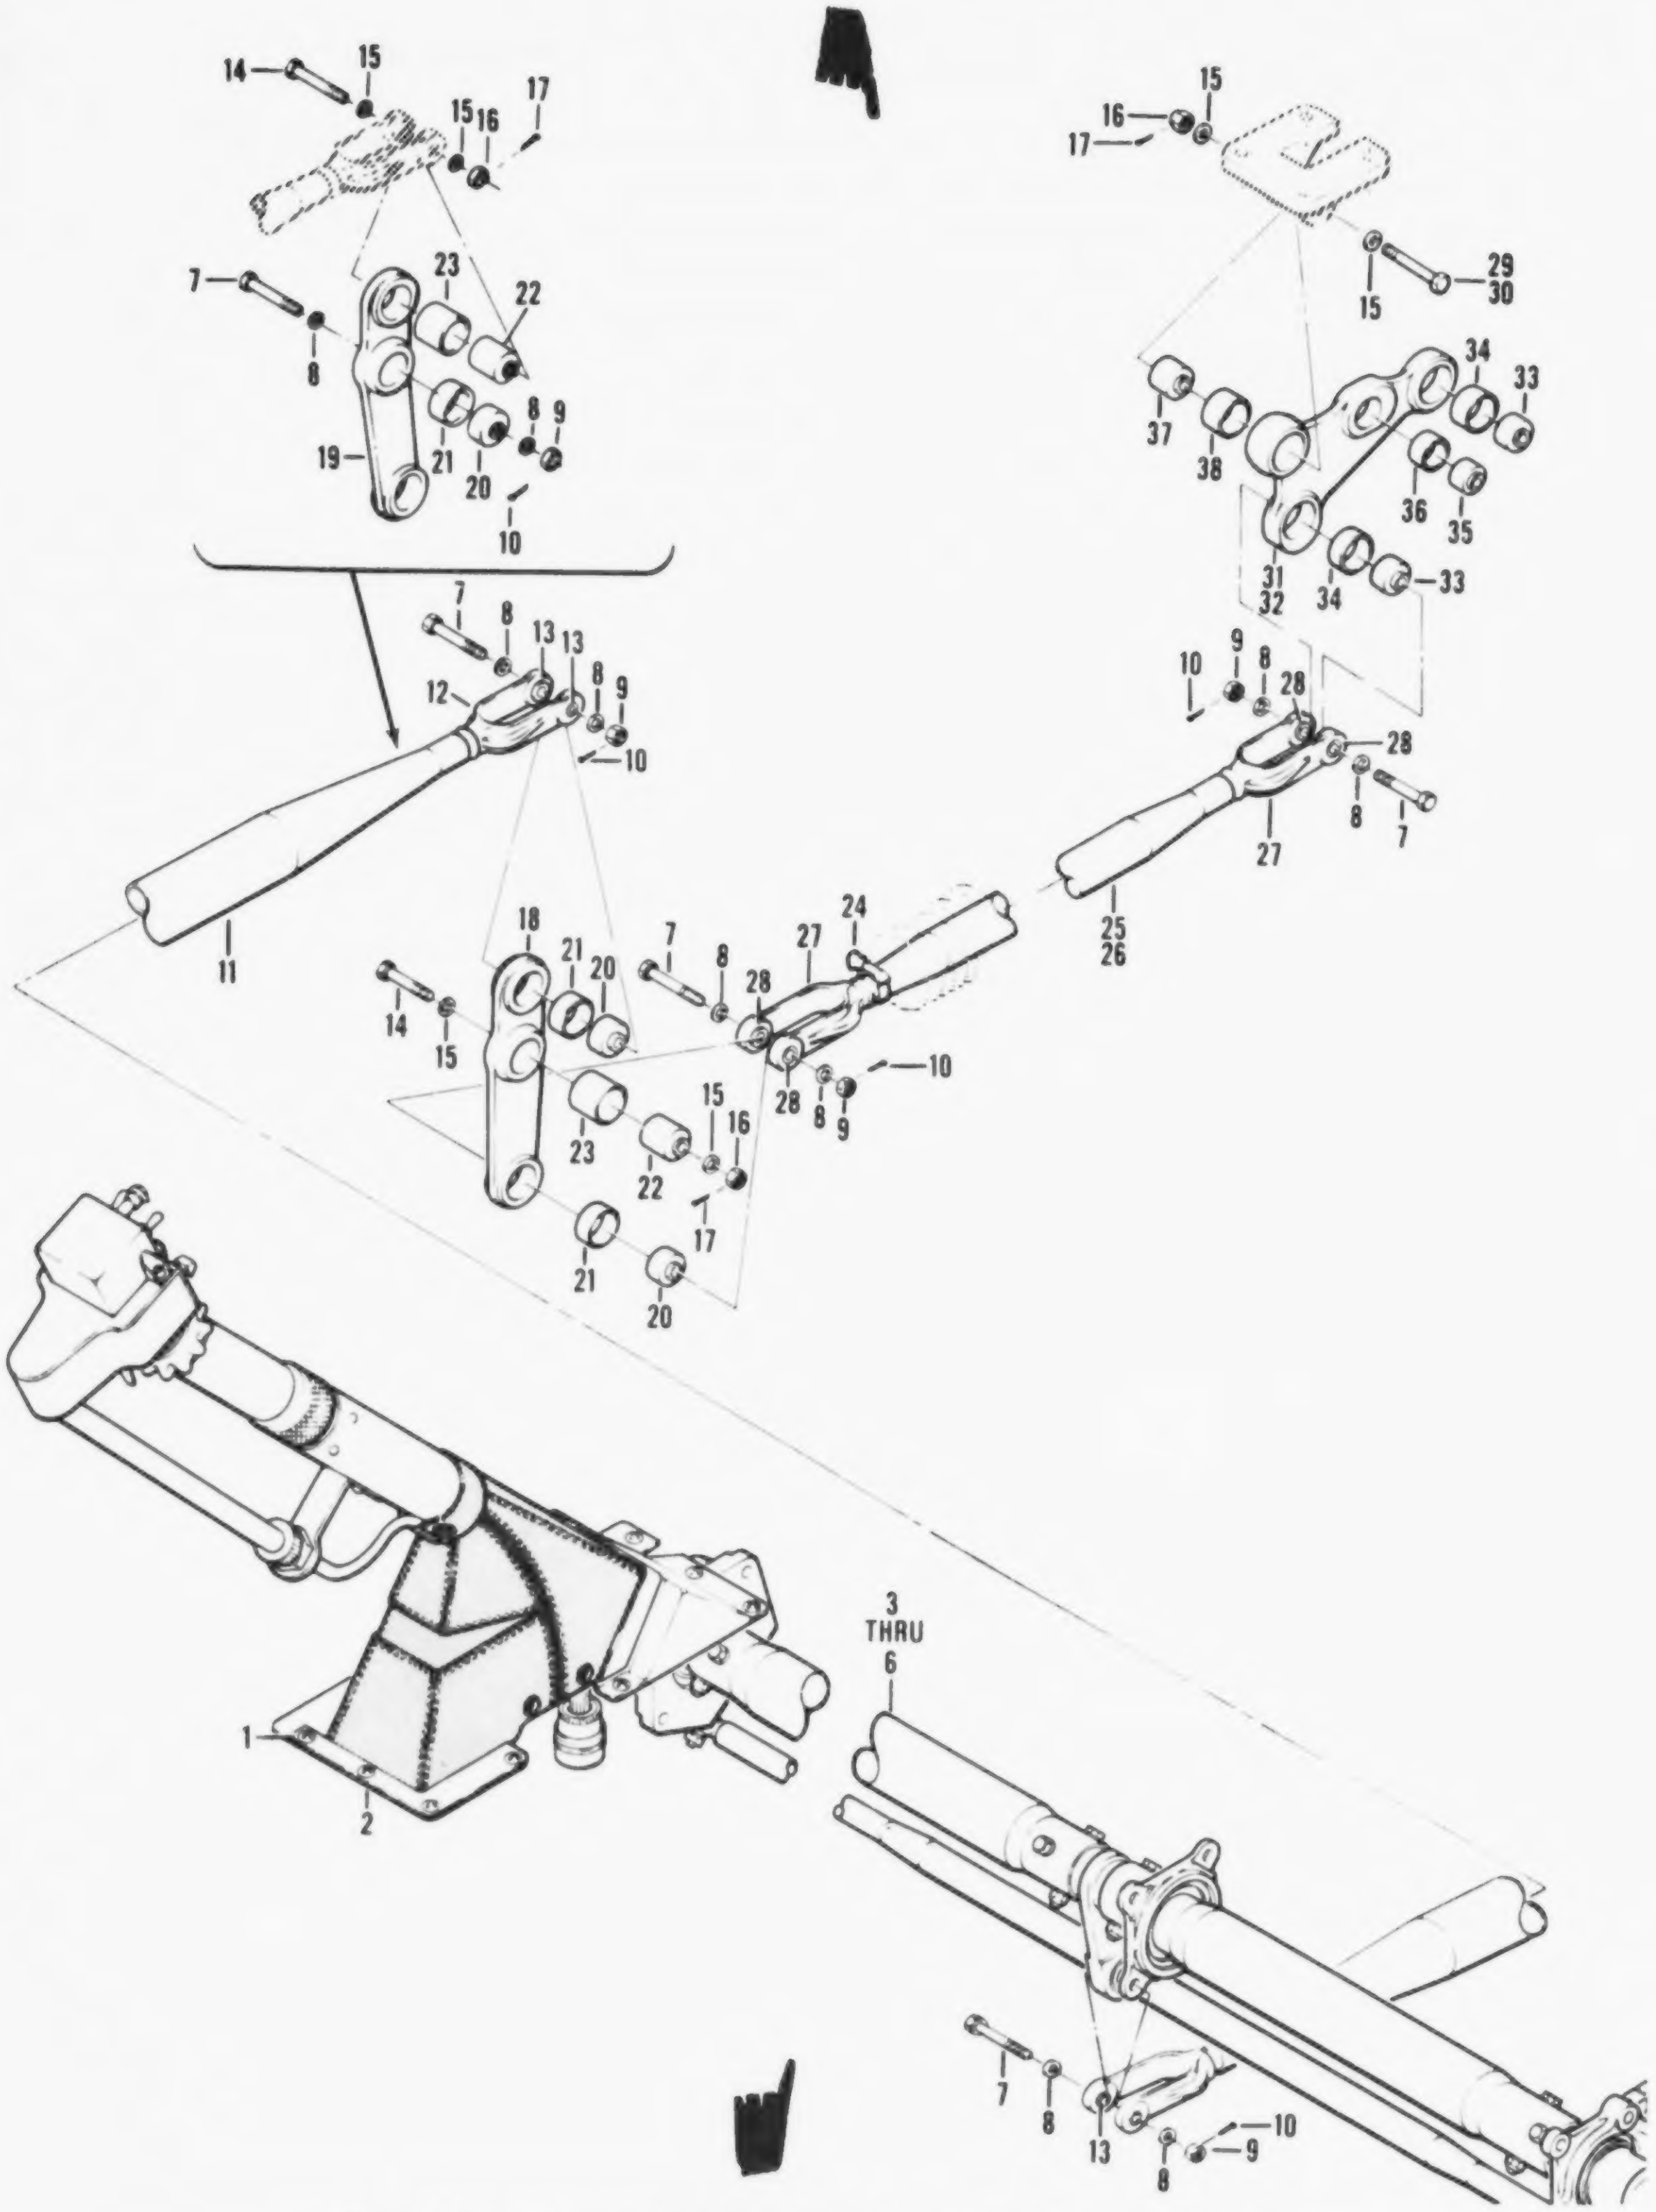
14
15
15
16
17
7
8
23
22
8
9
19
21
20
10
15
16
17
29
30
15
34
33
37
38
36
35
31
32
34
33
7
8
13
13
12
8
9
10
9
10
8
28
28
8
7
27
11
18
21
20
7
8
27
24
25
26
14
15
28
10
28
8
9
15
16
23
22
17
21
20
3
THRU
6
1
2
7
8
13
10
9
8

Figure 345. Control Installation, Collective Pitch, Forward Section

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
345		XCFZZ		97499	204-001-078-1	CONTROL INSTL COLLECTIVE PITCH USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA.SEE FIG.347 FOR BAL OF BREAKDOWN ....UHM	EA	1
345		XCFZZ		97499	204-001-078-7	CONTROL INSTL COLLECTIVE PITCH USBL EFF 65-9416 THRU 65-12772 SEE FIG.6 FORNHA.SEE FIG.347 FOR BAL.OF BREAKDOWN. ....UHM	EA	1
345		XCFZZ		97499	204-001-078-11	CONTROL INSTL COLLECTIVE PITCH USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA.SEE FIG.347 FOR BAL.OF BREAKDOWN........UHM	EA	1
345		XCFZZ		97499	205-001-002-3	CONTROL INSTL ANTI-TORQUE USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA SEE FIG.346 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
345		XCFZZ		97499	205-001-002-5	CONTROL INSTL ANTI-TORQUE USBL EFF 63-8739 THRU 63-13002 SEE FIG.7 FOR NHA SEE FIG.346 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
345		XCFZZ		97499	205-001-002-7	CONTROL INSTL ANTI-TORQUE USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHASEE FIG.346 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
345		XCFZZ		97499	205-001-002-11	CONTROL INSTL ANTI-TORQUE USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA SEE FIG.346 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
345		XCFZZ		97499	205-001-002-13	CONTROL INSTL ANTI-TORQUE USBL EFF 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.7 FOR NHA.SEE FIG.346 FOR BAL.OF BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
345		XCFZZ		97499	205-001-002-15	CONTROL INSTL ANTI-TORQUE USBL EFF 67-17145 THRU 67-17777 SEE FIG.7 FOR NHASEE FIG.346 FOR BAL.OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
345		XCFZZ		97499	205-001-002-19	CONTROL INSTL ANTI-TORQUE USBL EFF 67-17778 & SUBSEQUENT SEE FIG.7 FOR NHA SEE FIG.346 FOR BAL.OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
345	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	10
345	2	PAOZZ	1680-00-753-0594	97499	204-001-217-41	.BOOT ASSY,CONTROL INSTALLATION........UHE,UHH,UHM,UHV,UHX	EA	1
345	3	XCFZZ		97499	204-001-610-15	.JACKSHAFT INSTL SEE FIG.348 FOR BREAKDOWN U/O PN 204-001-061-19,204-001-078-1-7,-11........UHM	EA	1
345	4	XCFZZ		97499	205-001-101-1	.JACKSHAFT INSTL U/O PN 205-001-002-3 SEE FIG.348 FOR BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
345	5	XCFZZ		97499	205-001-101-5	.JACKSHAFT INSTL U/O PN 205-001-002-5 SEE FIG.348 FOR BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
345	6	XCFZZ		97499	205-001-101-7	.JACKSHAFT INSTL U/O PN 205-001-002-7,-11,-13,-15,-19 SEE FIG.348 FOR BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
345	7	PAOZZ	5305-00-151-0332	88044	AN174H20	.BOLT,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	5
345	8	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHE,UHH,UHM,UHV,UHX	EA	10
345	9	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN........UHE,UHH,UHM,UHV,UHX	EA	5
345	10	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER........UHE,UHH,UHM,UHX	EA	5
345	11	PAOOO	3040-00-886-5994	97499	204-001-027-23	.CONNECTING LINK, RIGID........UHE,UHH,UHM,UHV,UHX	EA	1
345	12	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY........UHE,UHH,UHM,UHV,UHX	EA	2
345	13	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE........UHE,UHH,UHM,UHV,UHX	EA	2
345	14	PAOZZ	5305-00-180-0471	88044	AN175-16	.BOLT,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	1
345	15	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT........UHE,UHH,UHM,UHV,UHX	EA	6
345	16	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,PLAIN........UHE,UHH,UHM,UHV,UHX	EA	3
345	17	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER........UHE,UHH,UHM,UHV,UHX	EA	3
345	18	PAOFF	1560-00-886-5997	97499	204-001-603-1	.LEVER ASSY,STICK U/O PN 205-001-002-3,5,7,11,13,15,19 & 204-001-078-1,7........UHE,UHH,UHV,UHX	EA	1
345	19	PAOFF	1615-00-930-5236	97499	540-001-101-1	.LEVER ASSY,STICK U/O PN 204-001-078-11........UHM	EA	1
345	20	XDFZZ	3110-00-198-0336	88044	AN206DSP4	..BEARING,BALL........UHE,UHH,UHM,UHV,UHX	EA	3

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
345	21	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE.............................UHE,UHH,UHV,UHX	EA	3
345	22	PAFZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL,AIRFRA....................UHE,UHH,UHM,UHV,UHX	EA	2
345	23	PAFZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE.............................UHE,UHH,UHV,UHX	EA	1
345	24	PAOZZ	4730-00-278-9099	88044	AN737RM34	.CLAMP,HOSE..UHM	EA	1
345	25	PAOOO	3040-00-995-1333	97499	205-001-011-17	.CONNECTING LINK, RIGID U/O PN 205-001-002-3,-5,-7,-11,-13,-15,-19......................................UHE,UHH,UHV,UHX	EA	1
345	26	PAOOO	3040-00-625-0023	97499	204-001-011-17	.CONNECTING LINK,RIG RIGID U/O PN 204-001-078-1,7,11.....UHM	EA	1
345	27	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY.........................UHE,UHH,UHM,UHV,UHX	EA	2
345	28	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE.........................UHE,UHH,UHM,UHV,UHX	EA	2
345	29	PAOZZ	5306-00-275-9562	88044	AN175-21	.BOLT,CLOSE, TOLERANCE U/O PN 204-001-078-11, 205-001-002-3, 5,7,11,13,15 &19.........................UHE,UHH,UHM,UHV,UHX	EA	1
345	30	PAOZZ	5306-00-182-1395	88044	AN175-17	.BOLT,CLOSE TOLERENC......................UHE,UHH,UHM,UHV,UHX	EA	1
345	31	PAOFF	1560-00-731-7992	97499	204-001-148-1	.BELL CRANK ASSY U/O 204-001-078-11, 205-001-002-3,5,7,11, 13,15 & 19...............................UHE,UHH,UHM,UHV,UHX	EA	1
345	32	PAOFF	1680-00-872-1143	97499	540-001-100-1	.BELL CRANK ASSY U/O PN 204-001-078-1 & 7 ....UHE,UHH,UHM,UHV,UHX	EA	1
345	33	XDFZZ	3110-00-198-0336	88044	AN206DSP4	..BEARING,BALL,AIRFRA.....................UHE,UHH,UHM,UHV,UHX	EA	2
345	34	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE..........................UHE,UHH,UHM,UHV,UHX	EA	2
345	35	PAFZZ	3110-00-042-1012	96906	MS27643-3	..BEARING,BALL AIRFRAME. ....UHE,UHH,UHM,UHV,UHX	EA	1
345	36	PAFZZ	3120-00-690-1136	97499	2354-3A	..BUSHING,SLEEVE..........................UHE,UHH,UHM,UHV,UHX	EA	1
345	37	PAFZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL............................UHE,UHH,UHM,UHV,UHX	EA	1
345	38	PAFZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE..........................UHE,UHH,UHM,UHV,UHX	EA	1

Page 1407 Deleted

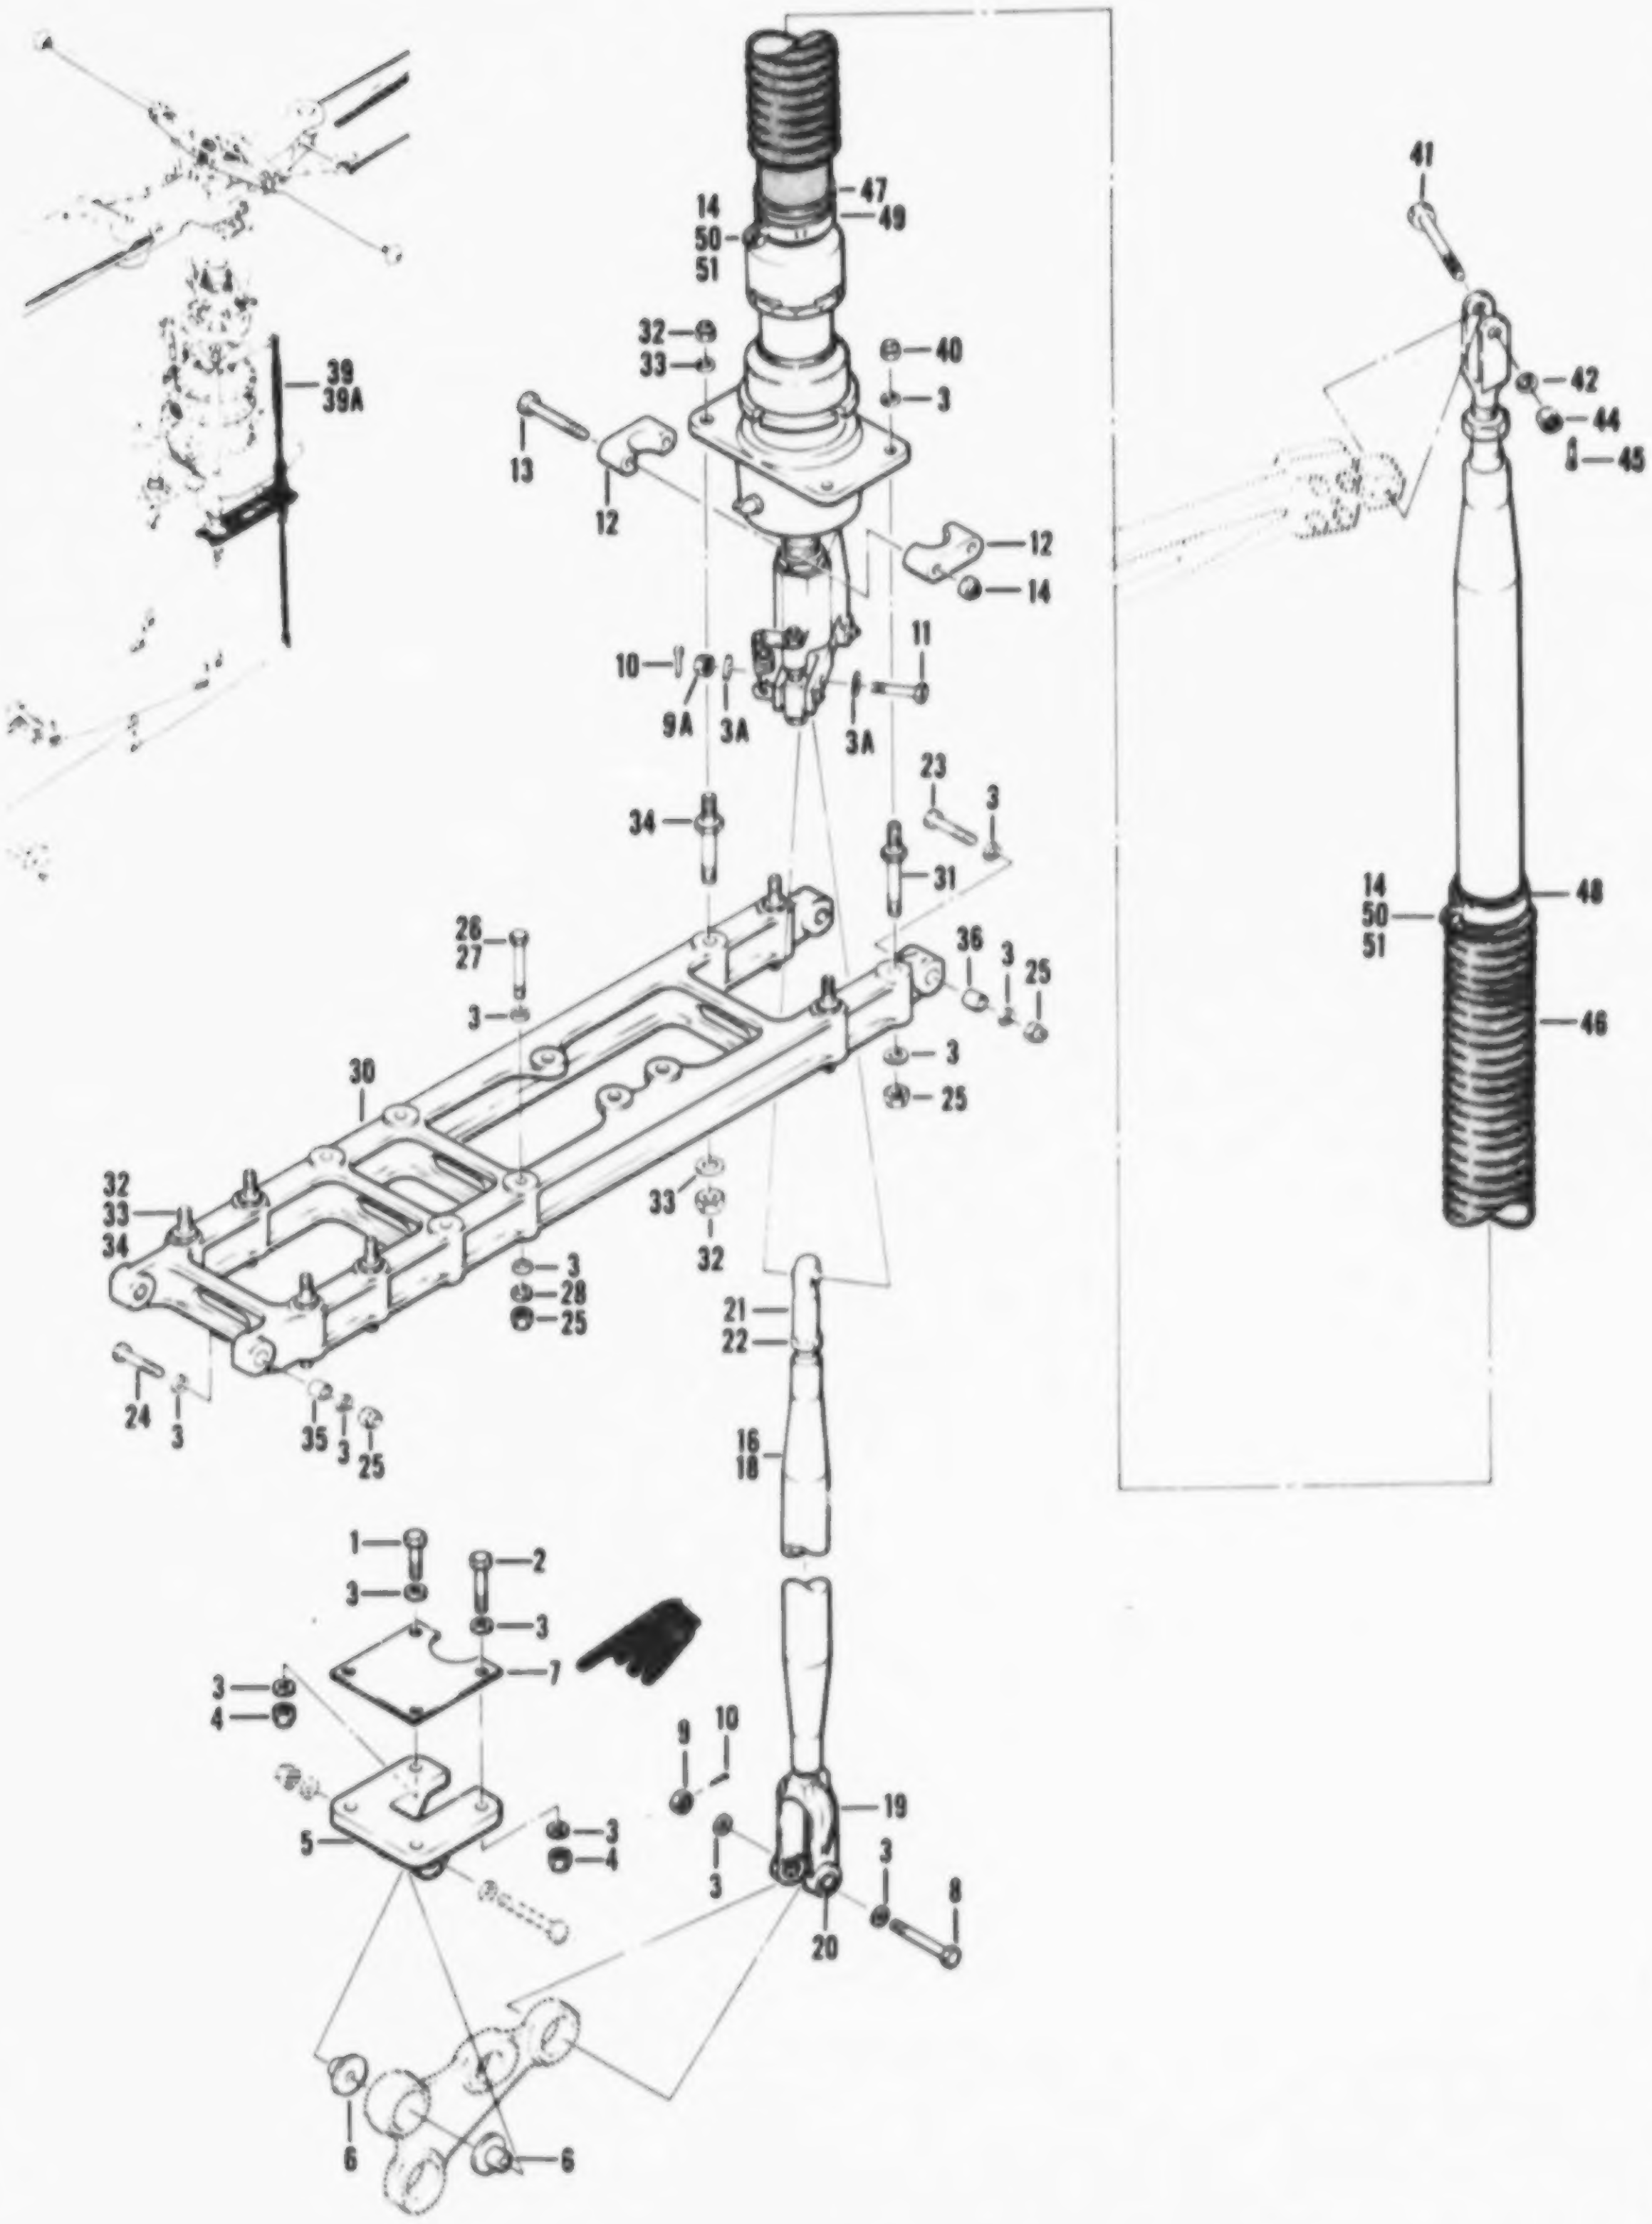
39
39A
41
14
50
51
47
49
32
33
40
3
42
44
45
13
12
12
14
11
10
9A
3A
3A
23
3
34
31
14
50
51
48
26
27
36
3
25
3
30
3
25
46
32
33
34
33
32
3
28
25
21
22
24
3
35
3
25
16
18
1
2
3
3
7
3
4
9
10
5
3
4
19
3
3
8
20
6
6

Figure 346. Control Installation, Collective Pitch, Aft Section

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
346		XCFZZ		97499	205-001-002-3	CONTROL INSTL ANTI-TORQUE USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA SEE FIG.345 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
346		XCFZZ		97499	205-001-002-5	CONTROL INSTL ANTI-TORQUE USBL EFF 63-8739 THRU 63-13002 SEE FIG.7 FOR NHA SEE FIG.345 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
346		XCFZZ		97499	205-001-002-7	CONTROL INSTL ANTI-TORQUE USBL EFF 64-1342 THRU 64-13901 SEE FIG.7 FOR NHA SEE FIG.345 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
346		XCFZZ		97499	205-001-002-11	CONTROL INSTL ANTI-TORQUE USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA SEE FIG.345 FOR BAL.OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
346		XCFZZ		97499	205-001-002-13	CONTROL INSTL ANTI-TORQUE USBL EFF 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.7 FOR NHA.SEE FIG.345 FOR BALANCE OF BREAKDOWN........UHE,UHH,UHV,UHX	EA	1
346		XCFZZ		97499	205-001-002-15	CONTROL INSTL ANTI-TORQUE USBL EFF 67-17145 THRU 67-17777 SEE FIG.7 FOR NHASEE FIG.345 FOR BAL.OF BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
346		XCFZZ		97499	205-001-002-19	CONTROL INSTL ANTI-TORQUE USBL EFF 67-17778 & SUBSEQUENT SEE FIG.7 FOR NHA SEE FIG.345 FOR BAL.OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
346	1	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1
346	2	PAOZZ	5306-00-182-1964	88044	AN4H16A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	3
345	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	25
346	3A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	2
346	4	PAOZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING, HEXAGON........UHE,UHH,UHV,UHX	EA	4
346	5	PAOFF	1560-00-624-5108	97499	204-001-102-1	.SUPPORT ASSY, BELLCRANK U/O PN 205-001-002-3,5,7,11,&13 SEE FIG.67 & 70 FORSUPPORT ASSY USBL EFF 67-17145 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
346	6	PAFZZ	3120-00-625-0051	97499	22-007-19-19-18	..BUSHING,SLEEVE........UHE,UHH,UHV,UHX	EA	2
346	7	MFOZZ	DELETED	97499	205-001-104-1	.SHIM U/O PN 205-001-002-3,-5,-7,-11,-13.....UHE,UHH,UHV,UHX	EA	1
346	8	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1
346	9	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN........UHE,UHH,UHV,UHX	EA	1
346	9A	PAOZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING,SL........UHE,UHH,UHV,UHX	EA	1
346	10	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER........UHE,UHH,UHV,UHX	EA	2
346	11	PAOZZ	5306-00-174-4114	88044	AN174H14	.BOLT,CLOSE TOLER........UHE,UHH,UHV,UHX	EA	1
346	12	PAOZZ	1560-00-908-0369	97499	205-001-105-1	.STOP,COLLECTIVE CYLINDER EXTERNAL........UHE,UHH,UHV,UHX	EA	2
346	13	PAOZZ	5306-00-182-1919	88044	AN3H20	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	2
346	14	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,........UHE,UHH,UHV,UHX	EA	4
346	16	PAOOO	3040-00-963-0945	97499	205-001-013-1	.CONNECTING LINK,........UHE,UHH,UHV,UHX	EA	1
346	18	XAOZZ		97499	205-001-013-3	..TUBE........UHE,UHH,UHV,UHX	EA	1
346	19	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
346	20	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE........UHE,UHH,UHV,UHX	EA	2
346	21	PAOZZ	3120-00-269-4453	97499	47-140-252-3	..BEARING,PLAIN,ROD END........UHE,UHH,UHV,UHX	EA	1
346	22	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	1
346	23	PAOZZ	5306-00-182-1800	88044	AN174-20A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	1
346	24	PAOZZ	5306-00-182-1799	88044	AN174-17A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	3
346	25	PAOZZ	5310-00-857-5567	96906	MS21045L4	.NUT,SELF-LOCKING, HEXAGON........UHE,UHH,UHV,UHX	EA	10
346	26	PAOZZ	5306-00-151-1415	88044	AN4-21A	.BOLT,MACHINE U/O PN 205-001-002-3,5,7,11 & 13 ....UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
346	27	PAOZZ	5306-00-182-2039	88044	AN4H23A	.BOLT,MACHINE U/O PN 205-001-002-15,-19...... UHE,UHH,UHV,UHX	HD	4
346	28	PAOZZ	5365-00-063-9149	97499	120-032-32-10	.SHIM...... UHE,UHH,UHV,UHX	EA	2
346	30	PAOFF	1560-00-995-0835	97499	205-001-303-1	.SUPPORT ASSY...... UHE,UHH,UHV,UHX	EA	1
346	31	PAFZZ	5307-00-670-7623	97499	204-001-347-1	..STUD,SHOULDERED...... UHE, [illegible]H,UHV,UHX	EA	6
346	32	PAFZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON...... UHE,UHH,UHV,UHX	EA	2
346	33	PAFZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT...... UHE,UHH,UHV,UHX	EA	2
346	34	PAFZZ	5307-00-670-7622	97499	204-001-344-1	..STUD,SHOULDERED...... UHE,UHH,UHV,UHX	EA	2
346	35	PAFZZ	3120-00-670-5312	97499	21-00687-5-20-5	..BUSHING,SLEEVE...... UHE,UHH,UHV,UHX	EA	3
346	36	PAFZZ	3120-00-670-5313	97499	21-00687-5-25	..BUSHING,SLEEVE...... UHE,UHH,UHV,UHX	EA	1
346	39	A0000		97499	205-076-099-5	.CYLINDER ASSEMBLY SEE FIG. 185 FOR BREAKDOWN. PN 205-076-099-5 AND PN 204-076-056-1 (AS A UNIT) ARE REPLACED BY PN 205-076-056-105...... UHE,UHH,UHV,UHX	EA	1
346	39A	A0000		97499	205-076-056-105	.CYLINDER ASSEMBLY SEE FIG.185A FOR BREAKDOWN. REPLACES PN 205-076-099-5 AND PN 204-076-056-1 AS A UNIT...... UHE,UHH,UHV,UHX	EA	1
346	40	PAOZZ	5310-00-807-1476	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON...... UHE,UHH,UHV,UHX	EA	3
346	41	PAOZZ	5306-00-180-0471	88044	AN175-15	.BOLT,MACHINE...... UHE,UHH,UHV,UHX	EA	1
346	42	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT...... UHE,UHH,UHV,UHX	EA	1
346	44	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,PLAIN...... UHE,UHH,UHV,UHX	EA	1
346	45	PAOZZ	5315-00-234-1864	96906	MS24665-153	.PIN,COTTER...... UHE,UHH,UHV,UHX	EA	1
346	46	PAOZZ	1680-00-923-2926	97499	204-076-410-1	.BOOT ASSY,CONTROL INSTALLATION...... UHE,UHH,UHV,UHX	EA	1
346	47	PAOZZ	1560-00-924-8083	97499	204-076-412-1	.FLANGE,SWIVEL JOINT...... UHE,UHH,UHV,UHX	EA	1
346	48	PAOZZ	5340-00-193-0133	88044	AN735D26	.CLAMP,LOOP...... UHE,UHH,UHV,UHX	EA	1
346	49	PAOZZ	5340-00-193-0134	88044	AN735D27	.CLAMP,LOOP...... UHE,UHH,UHV,UHX	EA	1
346	50	PAOZZ	5305-00-989-6265	96906	MS35207-262	.SCREW,MACHINE...... UHE,UHH,UHV,UHX	EA	2
346	51	PAOZZ	5310-00-167-0763	88044	AN960PD10L	.WASHER,FLAT...... UHE,UHH,UHV,UHX	EA	4

Page 1411 Deleted

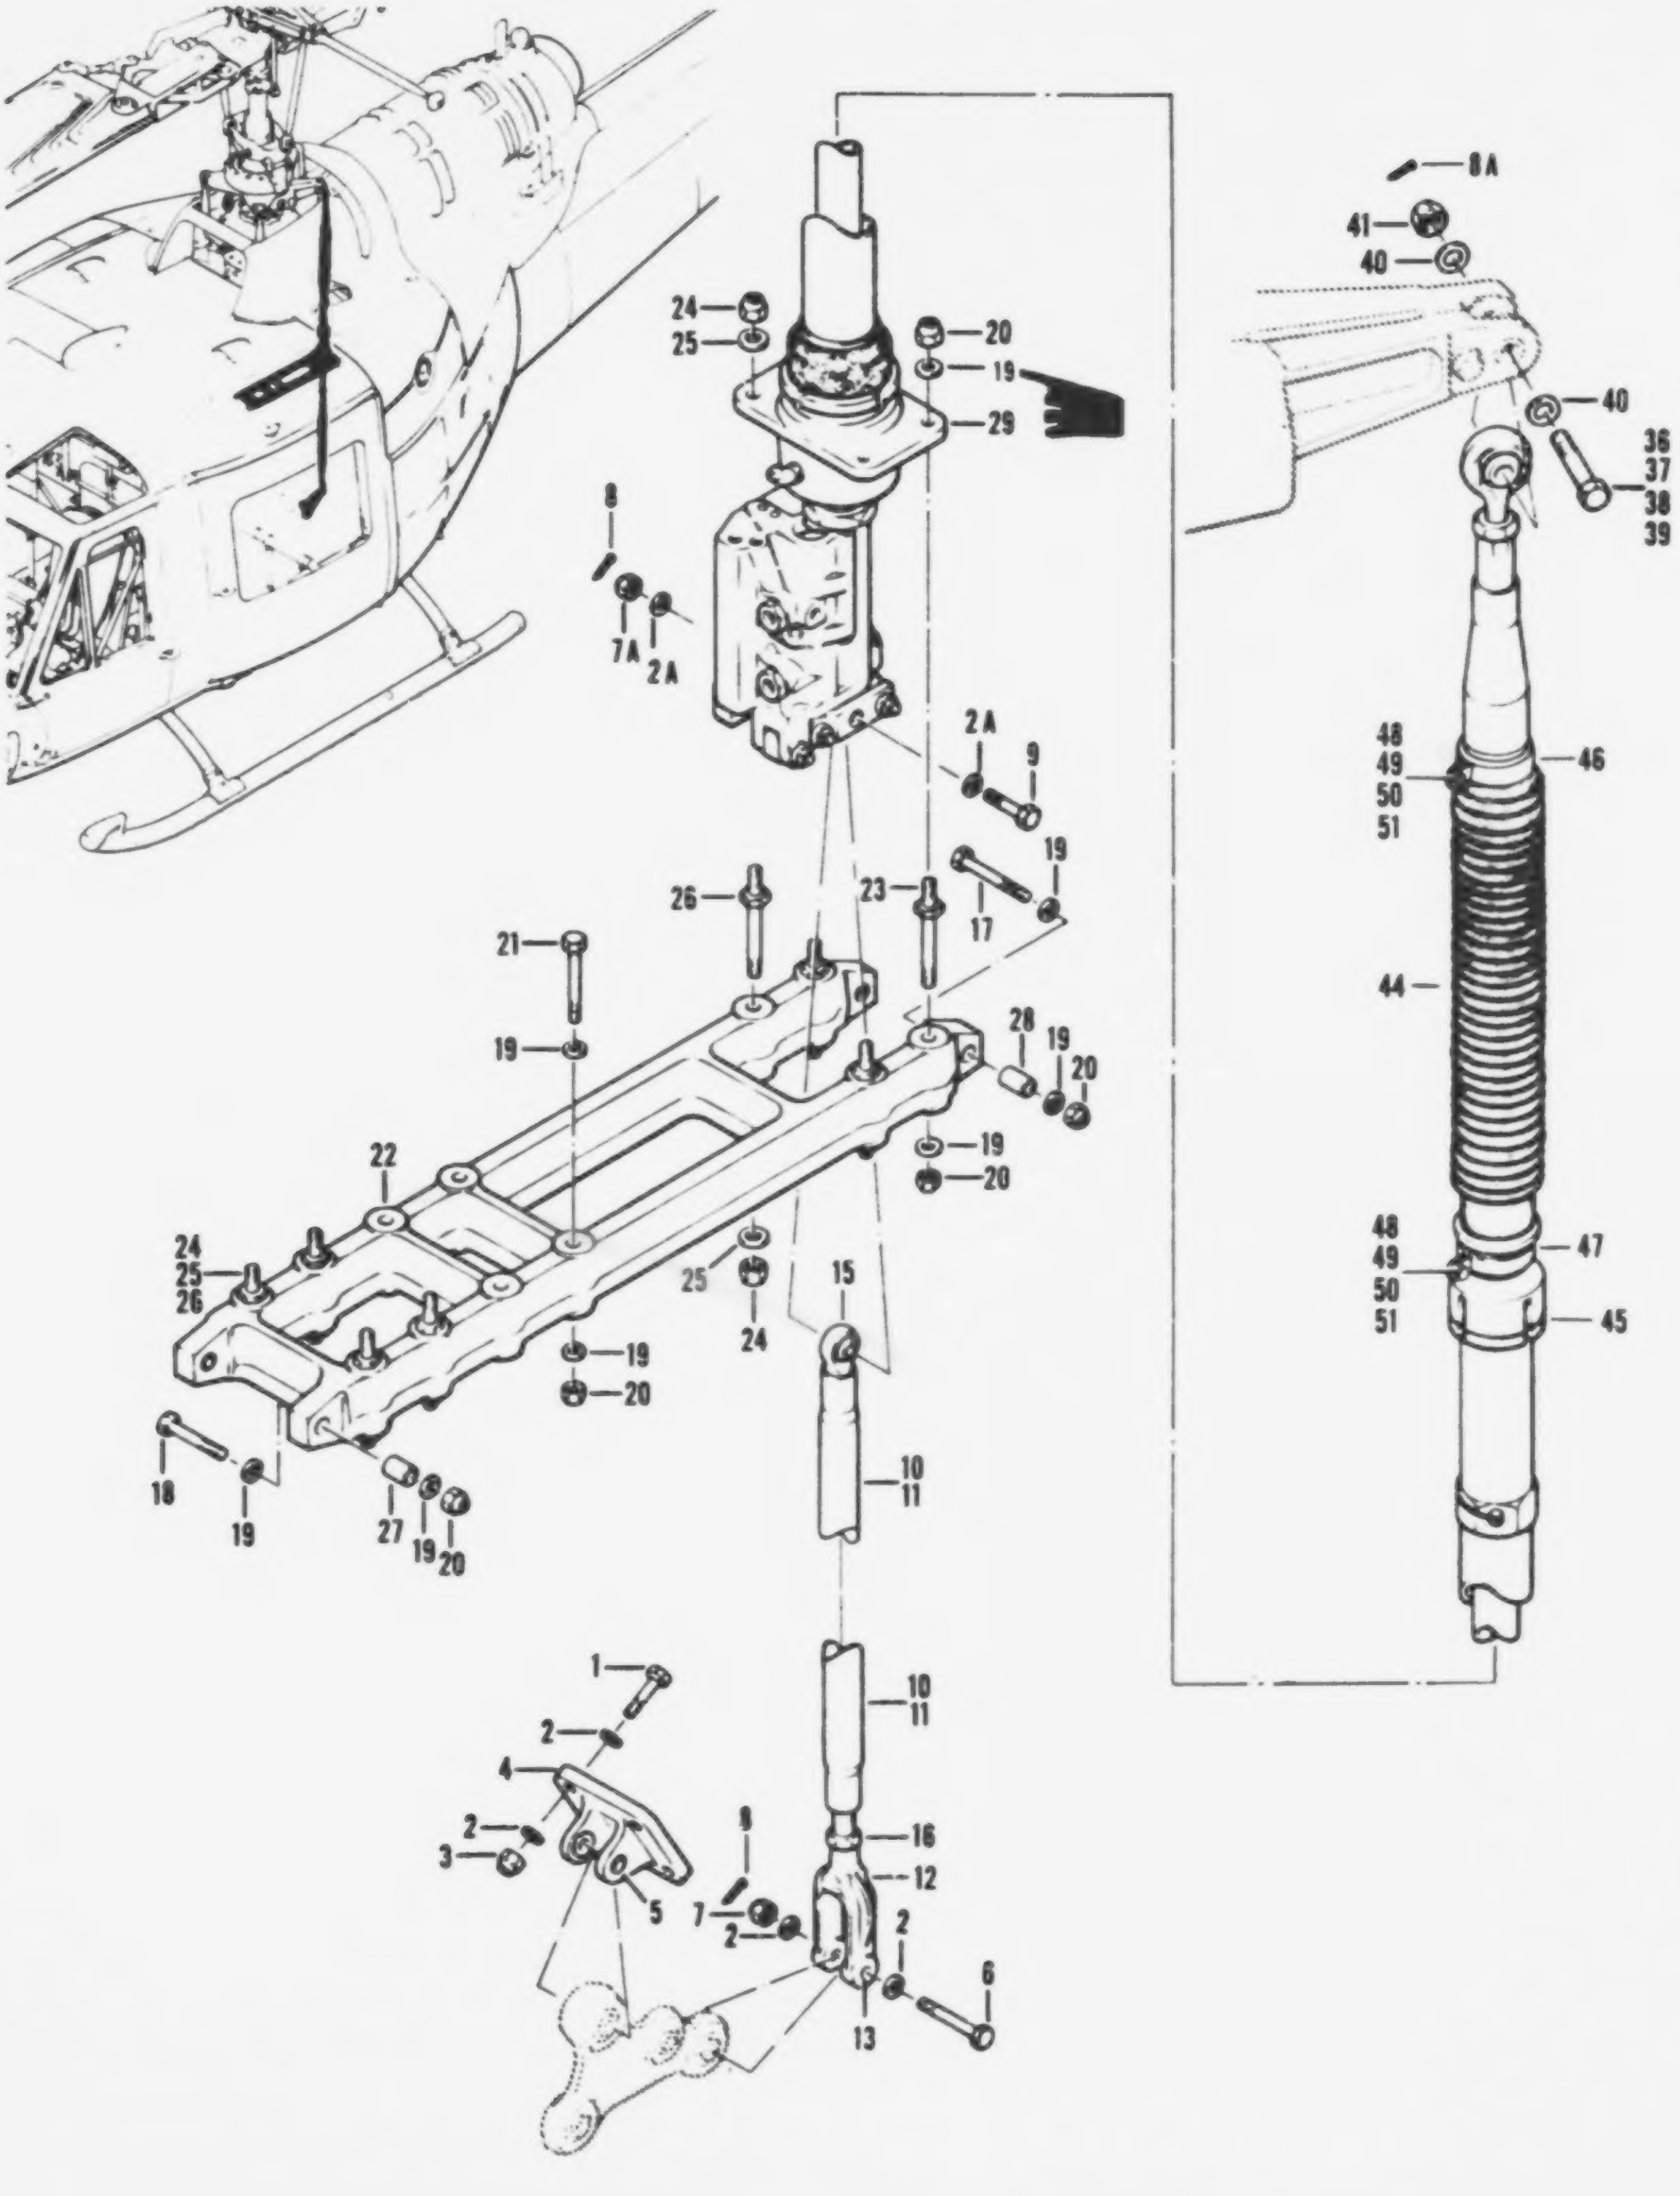
8A
41
40
24
25
20
19
29
40
36
37
38
39
8
7A
2A
2A
9
48
49
50
51
46
26
23
19
17
21
19
44
28
19
20
22
19
20
24
25
26
25
24
15
19
20
48
49
50
51
47
45
18
19
27
19
20
10
11
1
10
11
2
4
2
3
5
8
16
12
7
2
2
6
13

Figure 347. Control Installation, Collective Pitch, Aft Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
347		XCFZZ		97499	204-001-078-1	CONTROL INSTL COLLECTIVE PITCH,AFT SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA.SEE FIG.345 FOR BAL.OF BREAKDOWN .... UHM	EA	1
347		XCFZZ		97499	204-001-078-7	CONTROL INSTL COLLECTIVE PITCH,AFT SECTION USBL EFF 65-9416 THRU 65-12772 SSEE FIG.6 FOR NHA.SEE FIG.345 FOR BAL.OF BREAKDOWN .... UHM	EA	1
347		XCFZZ		97499	204-001-078-11	CONTROL INSTL COLLECTIVE PITCH,AFT SECTION USBL EFF 66-492 & SUBSEQUENT SEEFIG.6 FOR NHA.SEE FIG 345 FOR BAL.OF BREAKDOWN. .... UHM	EA	1
347	1	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE U/O PN 204-001-078-1........ UHM	EA	4
347	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........ UHM	EA	10
347	2A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT........ UHM	EA	2
347	3	PAOZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING, HEXAGON........ UHM	EA	4
347	4	PAOFF	1560-00-624-5108	97499	204-001-102-1	.SUPPORT ASSY, BELLCRANK USBL EFF 64-14101 THRU 64-14191 SEE FIG 60 FOR SUPPORT ASSY USBL EFF 65-9416 & SUB U/O PN 204-001-078-1........ UHM	EA	1
347	5	PAFZZ	3120-00-625-0051	97499	22-007-19-19-18	..BUSHING,SLEEVE........ UHM	EA	2
347	6	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER........ UHM	EA	1
347	7	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN........ UHM	EA	1
347	7A	PAOZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING,SL........ UHM	EA	1
347	8	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER........ UHM	EA	2
347	8A	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER........ UHM	EA	2
347	9	PAOZZ	5306-00-174-4114	88044	AN174H-14	.BOLT,CLOSE TOLER........ UHM	EA	1
347	10	PAOOO	1680-00-872-1151	97499	540-001-050-1	.TUBE ASSY,FLIGHT........ UHM	EA	1
347	11	XAOOO		97499	540-001-050-3	..TUBE ASSEMBLY........ UHM	EA	1
347	12	PAOZZ	5340-00-616-5422	97499	204-001-007-1	...CLEVIS,ROD END........ UHM	EA	1
347	13	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	..BUSHING,SLEEVE........ UHM	EA	2
347	15	XAOZZ		97499	47-140-252-5	..BEARING,ROD END........ UHM	EA	1
347	16	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO........ UHM	EA	1
347	17	PAOZZ	5306-00-275-9524	88044	AN175H17	.BOLT,CLOSE TOLERANC........ UHM	EA	1
347	18	PAOZZ	5306-00-275-9531	88044	AN175H16	.BOLT,MACHINE........ UHM	EA	3
347	19	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT........ UHM	EA	V
347	20	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON........ UHM	EA	V
347	21	PAOZZ	5306-00-151-2617	88044	AN5-26A	.BOLT,MACHINE........ UHM	EA	4
347	22	PAOFF	1560-00-872-1139	97439	540-001-301-1	.SUPPORT ASSY........ UHM	EA	1
347	23	PAFZZ	5307-00-872-1269	97499	540-001-303-1	..STUD,SHOULDERED........ UHM	EA	6
347	24	PAFZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON........ UHM	EA	1
347	25	PAFZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT........ UHM	EA	1
347	26	PAFZZ	5307-00-872-1268	97499	540-001-302-1	..STUD,SHOULDERED........ UHM	EA	2
347	27	XDFZZ	3120-00-872-1260	97499	21-007B9-5-20-5	..BUSHING,SLEEVE........ UHM	EA	3
347	28	XDFZZ	3120-00-872-1259	97499	21-007B9-5-25	..BUSHING,SLEEVE........ UHM	EA	1
347	29	AOOZZ		97499	204-076-511-19	.CYLINDER ASSY SEE FIG.185 FOR BREAKDOWN........ UHM	EA	1
347	29	AOOOO		97499	204-076-511-21	.CYLINDER ASSY SEE FIG.185 FOR BREAKDOWN........ UHM	EA	REF
347	36	PAOZZ	5306-00-673-1723	80205	NAS1308-38D	.BOLT,MACHINE USBL EFF 64-14175 AND SUB........ UHM	EA	2
347	37	PBOZZ	5306-00-924-7783	80205	NAS1308-36D	.BOLT,SHEAR USBL EFF 64-14101 THRU 64-14174........ UHM	EA	2
347	38	PAOZZ	5306-00-924-5980	80205	NAS1308-32D	.BOLT,SHEAR U/O PN 204-001-078-1,-11. USBL EFF 64-14101 THRU	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
						64-14174 AND66-491 AND SUB .... UHC,UHM		
347	39	PAOZZ	5306-00-946-0415	80205	NAS1308-34D	.BOLT,SHEAR U/O PN 204-001-078-1,-7. USBL EFF 64-14175 THRU 12772 .... UHC,UHM	EA	1
347	40	PAOZZ	5310-00-911-9446	97499	140-007-33-28C4	.WASHER,RECESSED .... UHC,UHM	EA	6
347	41	PAOZZ	5310-00-871-8758	96906	MS17825-8	.NUT,SELF-LOCKING,SL .... UHC,UHM	EA	3
347	44	PAOZZ	1680-00-923-2926	97499	204-076-410-1	.BOOT ASSY,CONTROL INSTALLATION .... UHC,UHM	EA	1
347	45	PAOZZ	1560-00-924-8083	97499	204-076-412-1	.FLANGE,SWIVEL JOINT .... UHC,UHM	EA	1
347	46	PAOZZ	5340-00-192-0133	88044	AN735D26	.CLAMP,LOOP .... UHC,UHM	EA	1
347	47	PAOZZ	5340-00-193-0134	88044	AN735D27	.CLAMP,LOOP .... UHC,UHM	EA	1
347	48	PAOZZ	5305-00-989-6265	96906	MS35207-262	.SCREW,MACHINE .... UHC,UHM	EA	1
347	49	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE .... UHC,UHM	EA	1
347	50	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHC,UHM	EA	4
347	51	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHC,UHM	EA	2

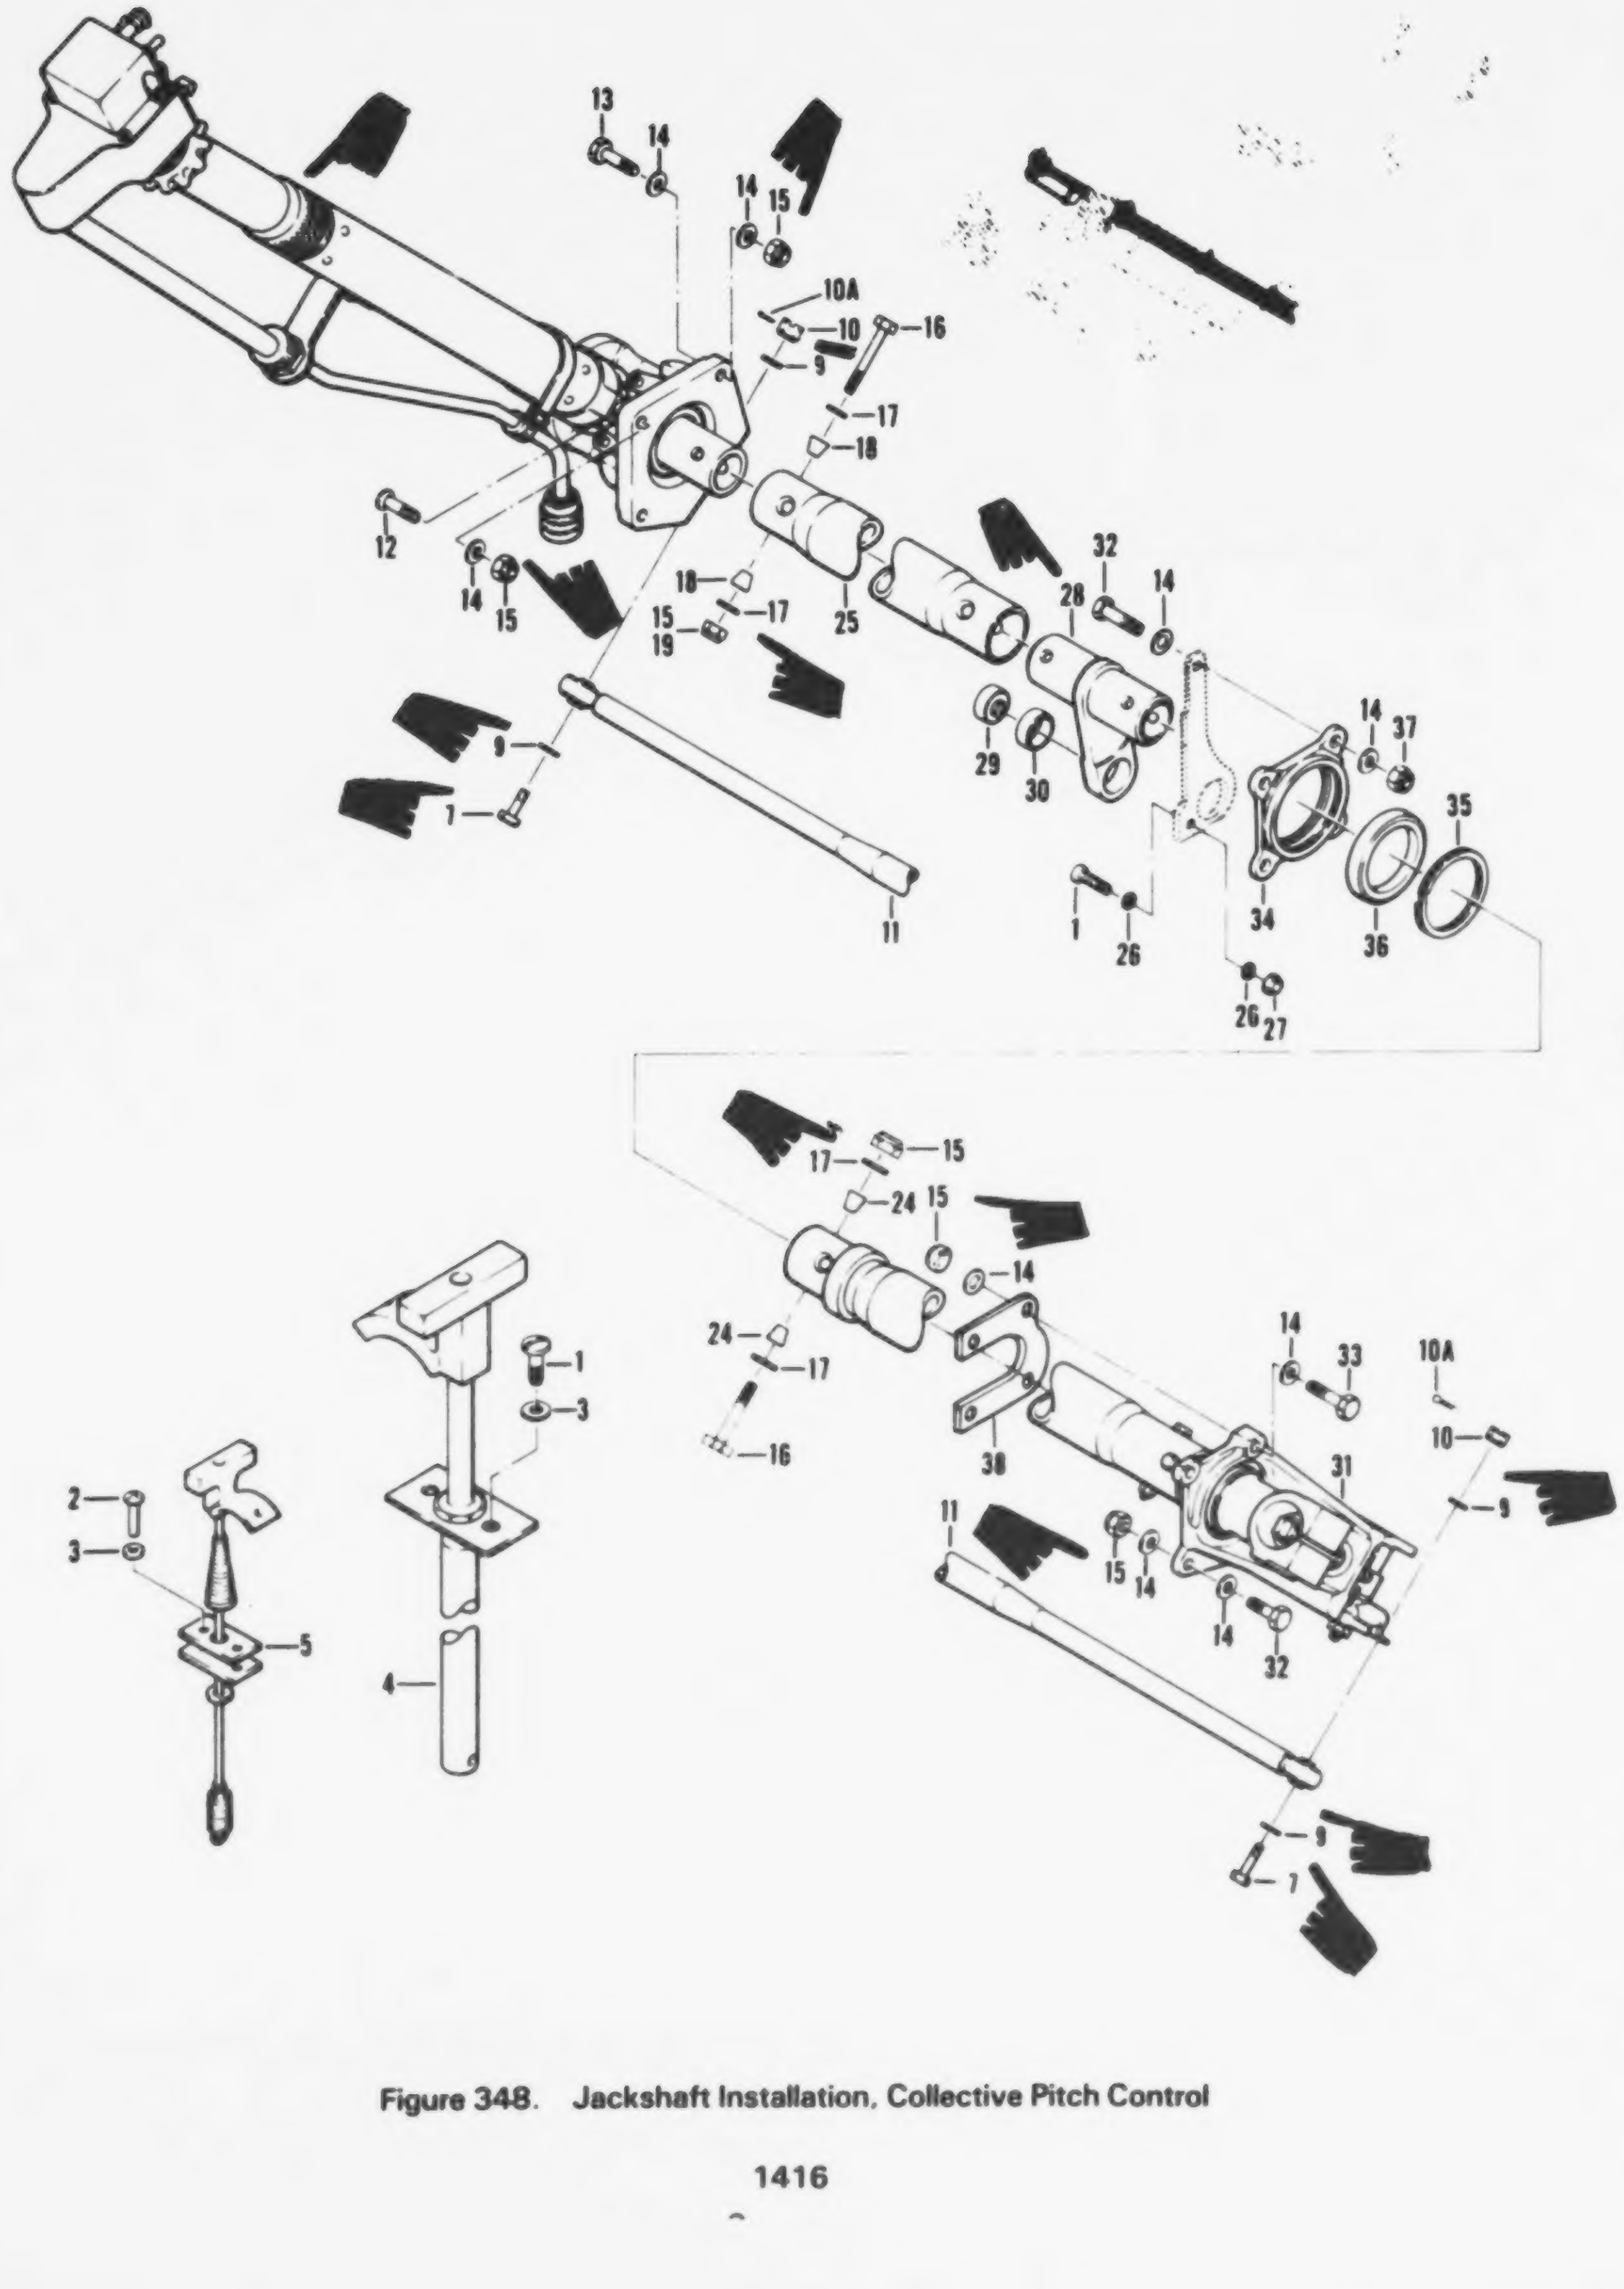
13
14
14
15
10A
10
16
9
17
18
12
14
15
18
17
15
19
25
32
28
14
9
1
11
29
30
14
37
35
34
36
1
26
26
27
17
15
24
15
14
24
17
16
38
14
33
10A
10
31
9
11
15
14
14
32
9
7
1
3
2
3
5
4

Figure 348. Jackshaft Installation, Collective Pitch Control

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
348		XCFZZ		97499	204-001-610-15	JACKSHAFT INSTL COLLECTIVE PITCH CONTROL USBL EFF 64-13902 & SUBSEQUENT SEE FIG.345 FOR NHA..........UHM	EA	1
348		XCFZZ		97499	205-001-101-1	JACKSHAFT INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.345 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
348		XCFZZ		97499	205-001-101-5	JACKSHAFT INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.345 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
348		XCFZZ		97499	205-001-101-7	JACKSHAFT INSTL USBL EFF 64-13492 & SUBSEQUENT SEE FIG.345 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
348	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-001-610-1,-3,-5,-7, & -9 & PN 205-001-101-1,-5 ....UHE,UHH,UHV,UHX	EA	2
348	2	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE U/O PN 204-001-610-15 & 205-001-101-7 ....UHE,UHH,UHM,UHV,UHX	EA	2
348	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	2
348	4	PAOZZ	1680-00-875-8003	97499	204-001-605-1	.DOWNLOCK ASSY, U/O PN 204-001-610-1,-3,-5,-7,-9, AND 205-C01-101-1,-5 ....UHE,UHH,UHV,UHX	EA	1
348	5	PAOZZ	1680-00-758-9759	97499	204-001-623-1	.CONTROL ASSY,PITCH U/O PN 204-001-610-15 & 205-001-101-7 ....UHE,UHH,UHM,UHV,UHX	EA	1
348	6	PAOZZ	5306-00-150-9083	88044	AN173H10	.BOLT,MACHINE U/O PN 204-001-186-9..........	EA	1
348	7	PAOZZ	5306-00-174-4108	88044	AN173H11	.BOLT,MACHINE U/O PN 204-001-610-1,-3,-5,-7,-9,-15,205-001-101-1,-5,-7 ....UHE,UHH,UHM,UHV,UHX	EA	1
348	8	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT U/O PN 204-001-186-9..........	EA	2
348	9	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT U/O PN 204-001-610-1,-3,-5,-7,-9,-15,205-001-101-1,-5,-7 ....UHE,UHH,UHM,UHV,UHX	EA	2
348	10	PAOZZ	5310-00-167-1284	88044	AN310-3	.NUT,PLAIN..........UHE,UHH,UHM,UHV,UHX	EA	2
348	10A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER..........UHE,UHH,UHM,UHV,UHX	EA	2
348	11	PAOZZ	3040-00-859-2742	97499	204-001-602-1	.CONNECTING LINK, RIGID..........UHE,UHH,UHM,UHV,UHX	EA	1
348	12	PBOZZ	5305-00-207-3741	80205	NAS517-4-9	.SCREW, MACHINE..........UHE,UHH, UHM,UHV,UHX	EA	2
348	13	XDOZZ	5306-00-292-8285	88044	AN174H10A	.BOLT,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	2
348	14	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	4
348	15	PAOZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING, HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	4
348	16	PAOZZ	5306-00-151-1414	88044	AN4-22A	.BOLT,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	1
348	17	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	4
348	18	PAOZZ	5340-00-579-7186	97499	20-037-4-7	.BUSHING,TAPERED..........UHE,UHH,UHM,UHV,UHX	EA	4
348	19	PAOZZ	5310-00-061-7325	96906	MS21045-4	.NUT,SELF-LOCKING, HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	2
348	20	PAOFF	1680-00-731-7993	97499	204-001-199-17	.CONTROL STICK ASSY, FLIGHT CONTROL, GRIP AND HOUSING SECTION U/O PN 204-001-186-9 SEE FIG.349 FOR BREAKDOWN..........	EA	1
348	20	PAOFF	1680-00-022-2344	97499	204-001-600-9	.CONTROL STICK ASSY, FLIGHT CONTROL, GRIP AND HOUSING SECTION	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						SEE FIG 349 FOR BREAKDOWN	UHB,UHC,UHE,UHH,UHM,UHV,UHX		
348	24	PAOZZ	5365-00-984-2631	97499	20-037-4-5	BUSHING,TAPERED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
348	25	PAOFF	1560-00-670-5905	97499	204-001-109-1	TUBE,FLIGHT CONTROL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	26	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER,FLAT	UHB	EA	2
348	27	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB	EA	1
348	28	PAOFF	1560-00-670-5901	97499	204-001-185-5	ARM ASSEMBLY,FLIGHT CONTROL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	29	PAFZZ	3110-00-042-1045	96906	MS27643-4	BEARING,BALL,AIRFRA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	30	PAFZZ	3120-00-624-5248	97499	120-013-4A	BUSHING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	31	PAOFF	1560-00-972-2738	97499	204-001-259-5	CONTROL ASSEMBLY,TO SEE FIG 350 FOR BREAKDOWN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	32	PAOZZ	5306-00-206-5748	88044	AN174-7A	BOLT,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
348	33	PAOZZ	5306-00-285-5326	88044	AN174H11A	BOLT,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	34	PAOOO	3130-00-624-5129	97499	204-001-330-5	BEARING UNIT,BALL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
348	35	PAOZZ	5365-00-067-3732	80756	RR262C	RING,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	36	PAOZZ	3110-00-678-5425	38443	B545ZZ	BEARING,BALL, ANNULAR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
348	37	PAOZZ	5310-00-857-5557	96906	MS21045L4	NUT,SELF-LOCKING, HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
348	38	PAOZZ	5365-00-460-4877	97499	212-001-168-1	SHIM U/O PN 205-001-101-1	UHE,UHH,UHV,UHX	EA	1

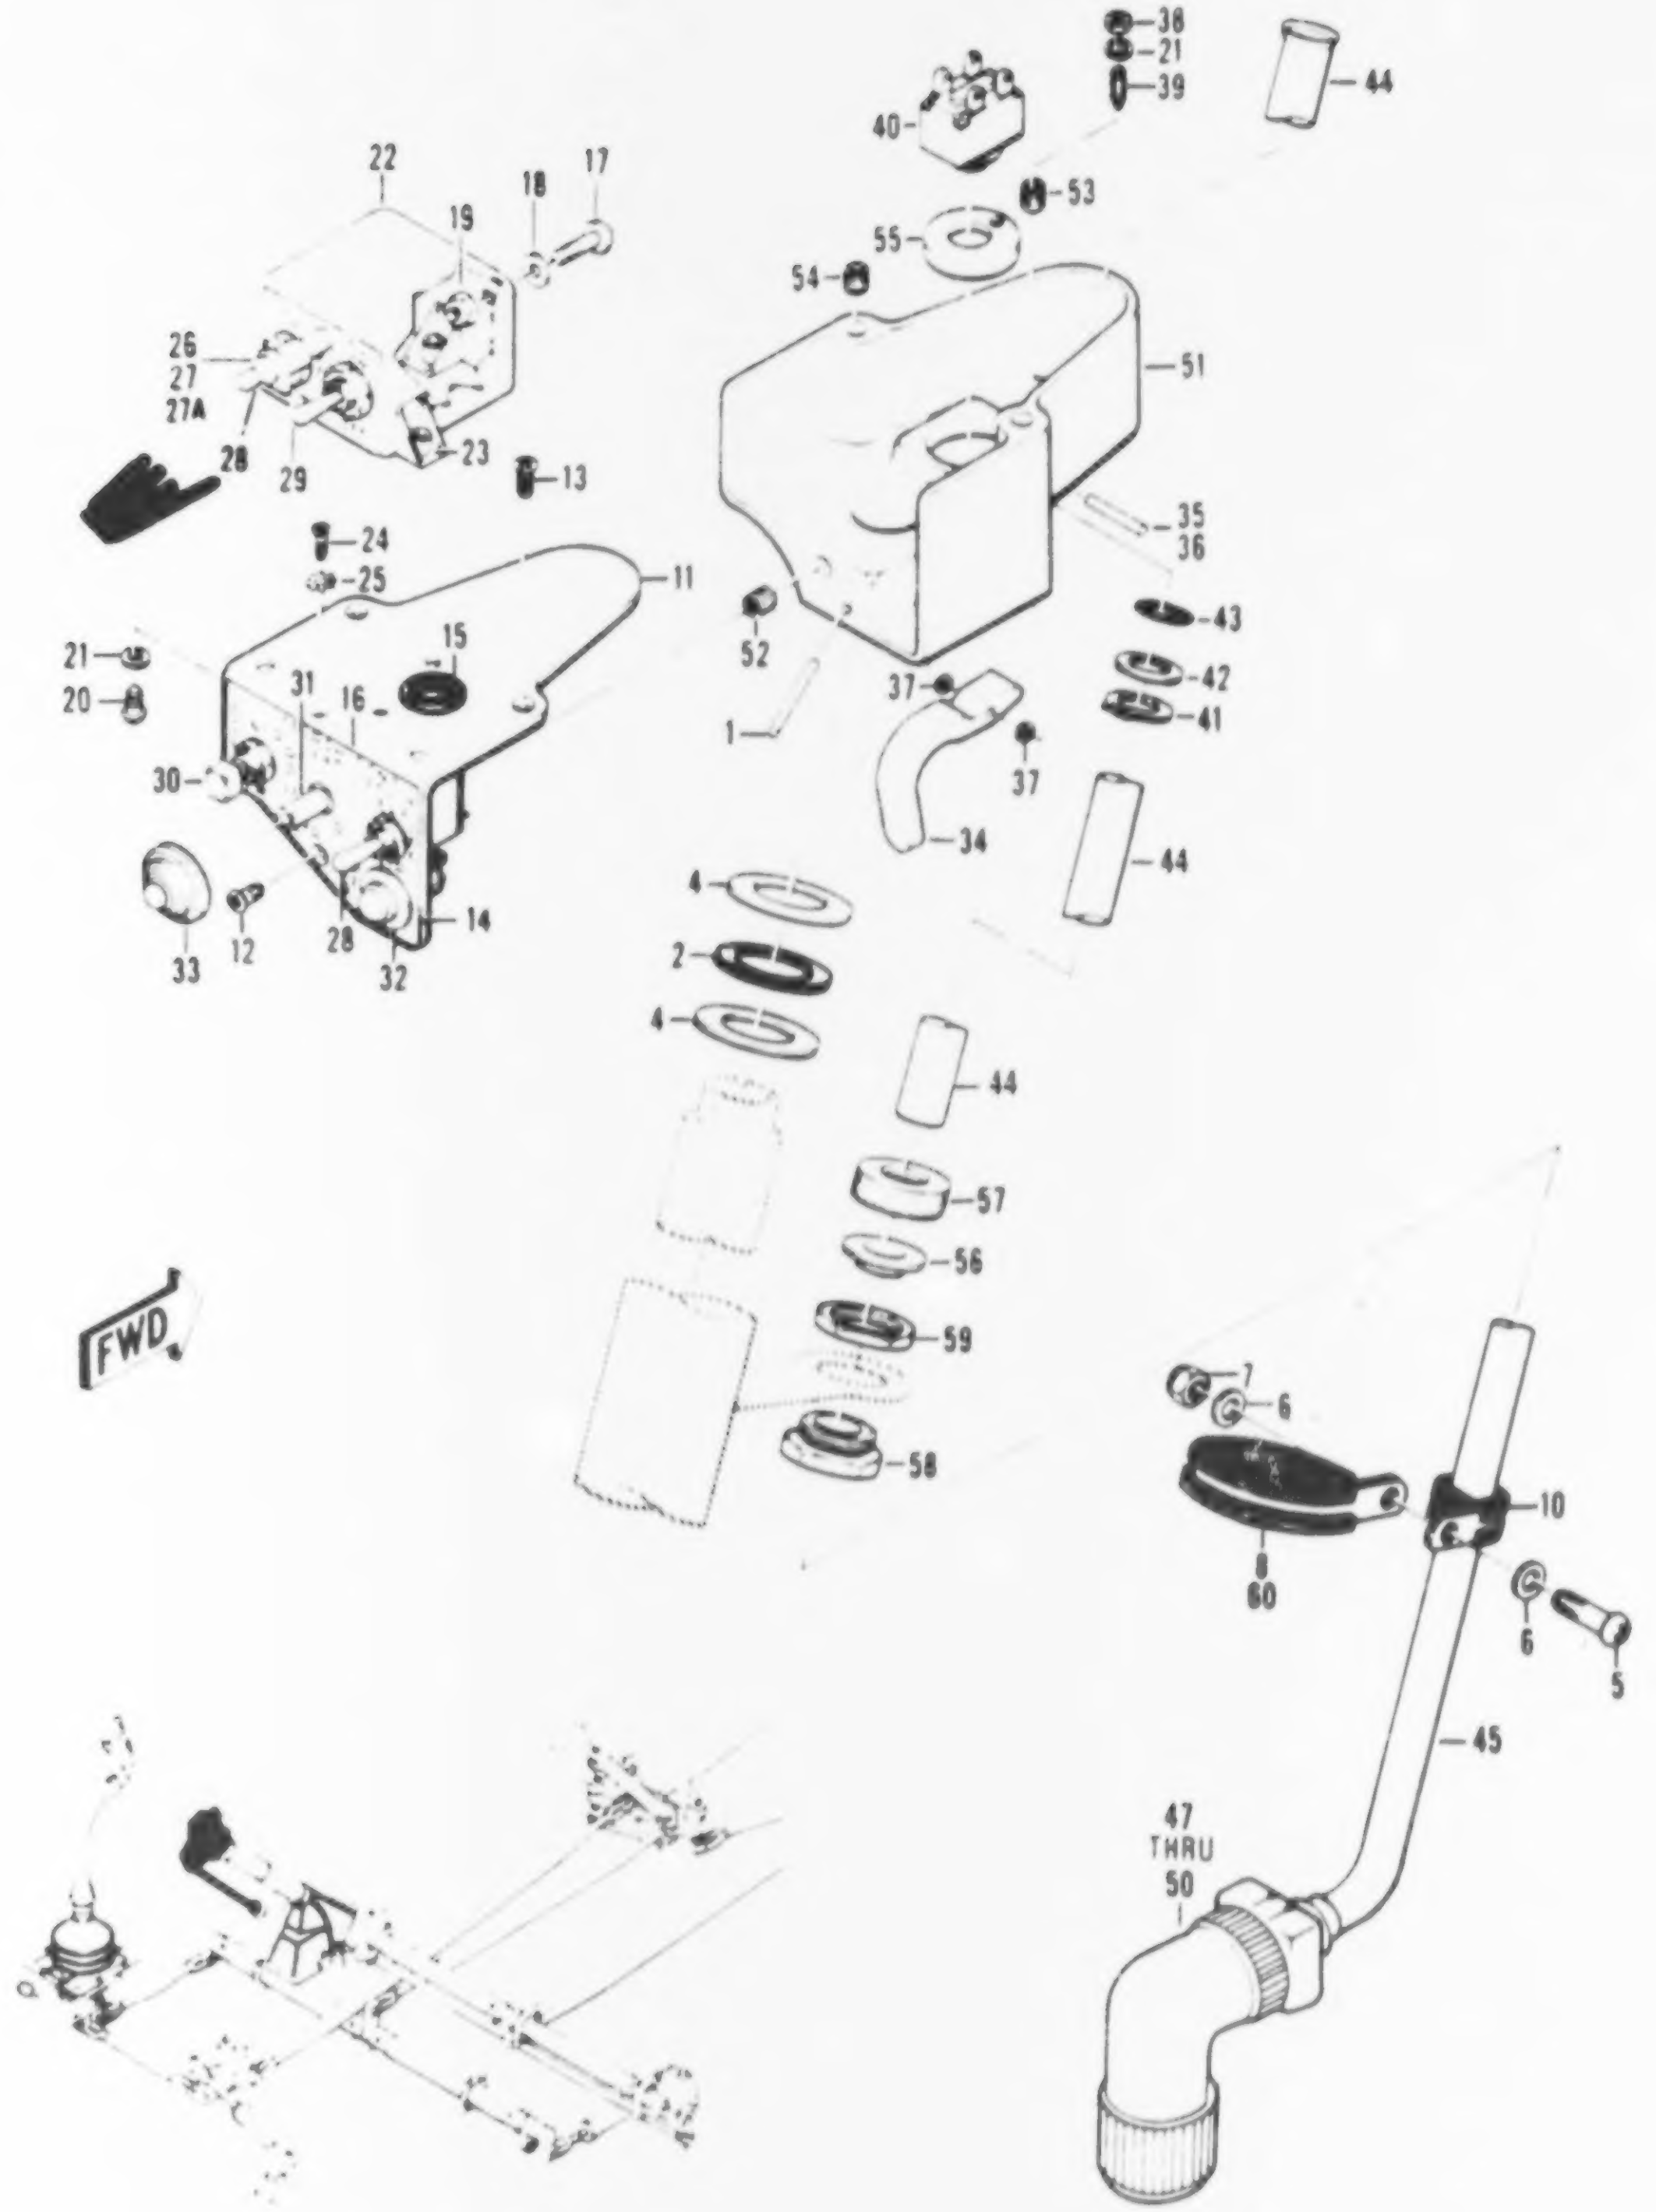
38
21
39
44
40
53
22
17
18
19
55
54
51
26
27
27A
28
29
23
13
35
36
24
25
11
52
43
42
41
21
20
15
31
16
37
1
37
30
34
44
4
12
28
14
33
32
2
4
44
57
56
FWD
59
7
6
58
10
8
60
6
5
45
47
THRU
50

Figure 349. Stick Assembly, Flight Control Grip and Housing Assembly (Sheet 1 of 2)

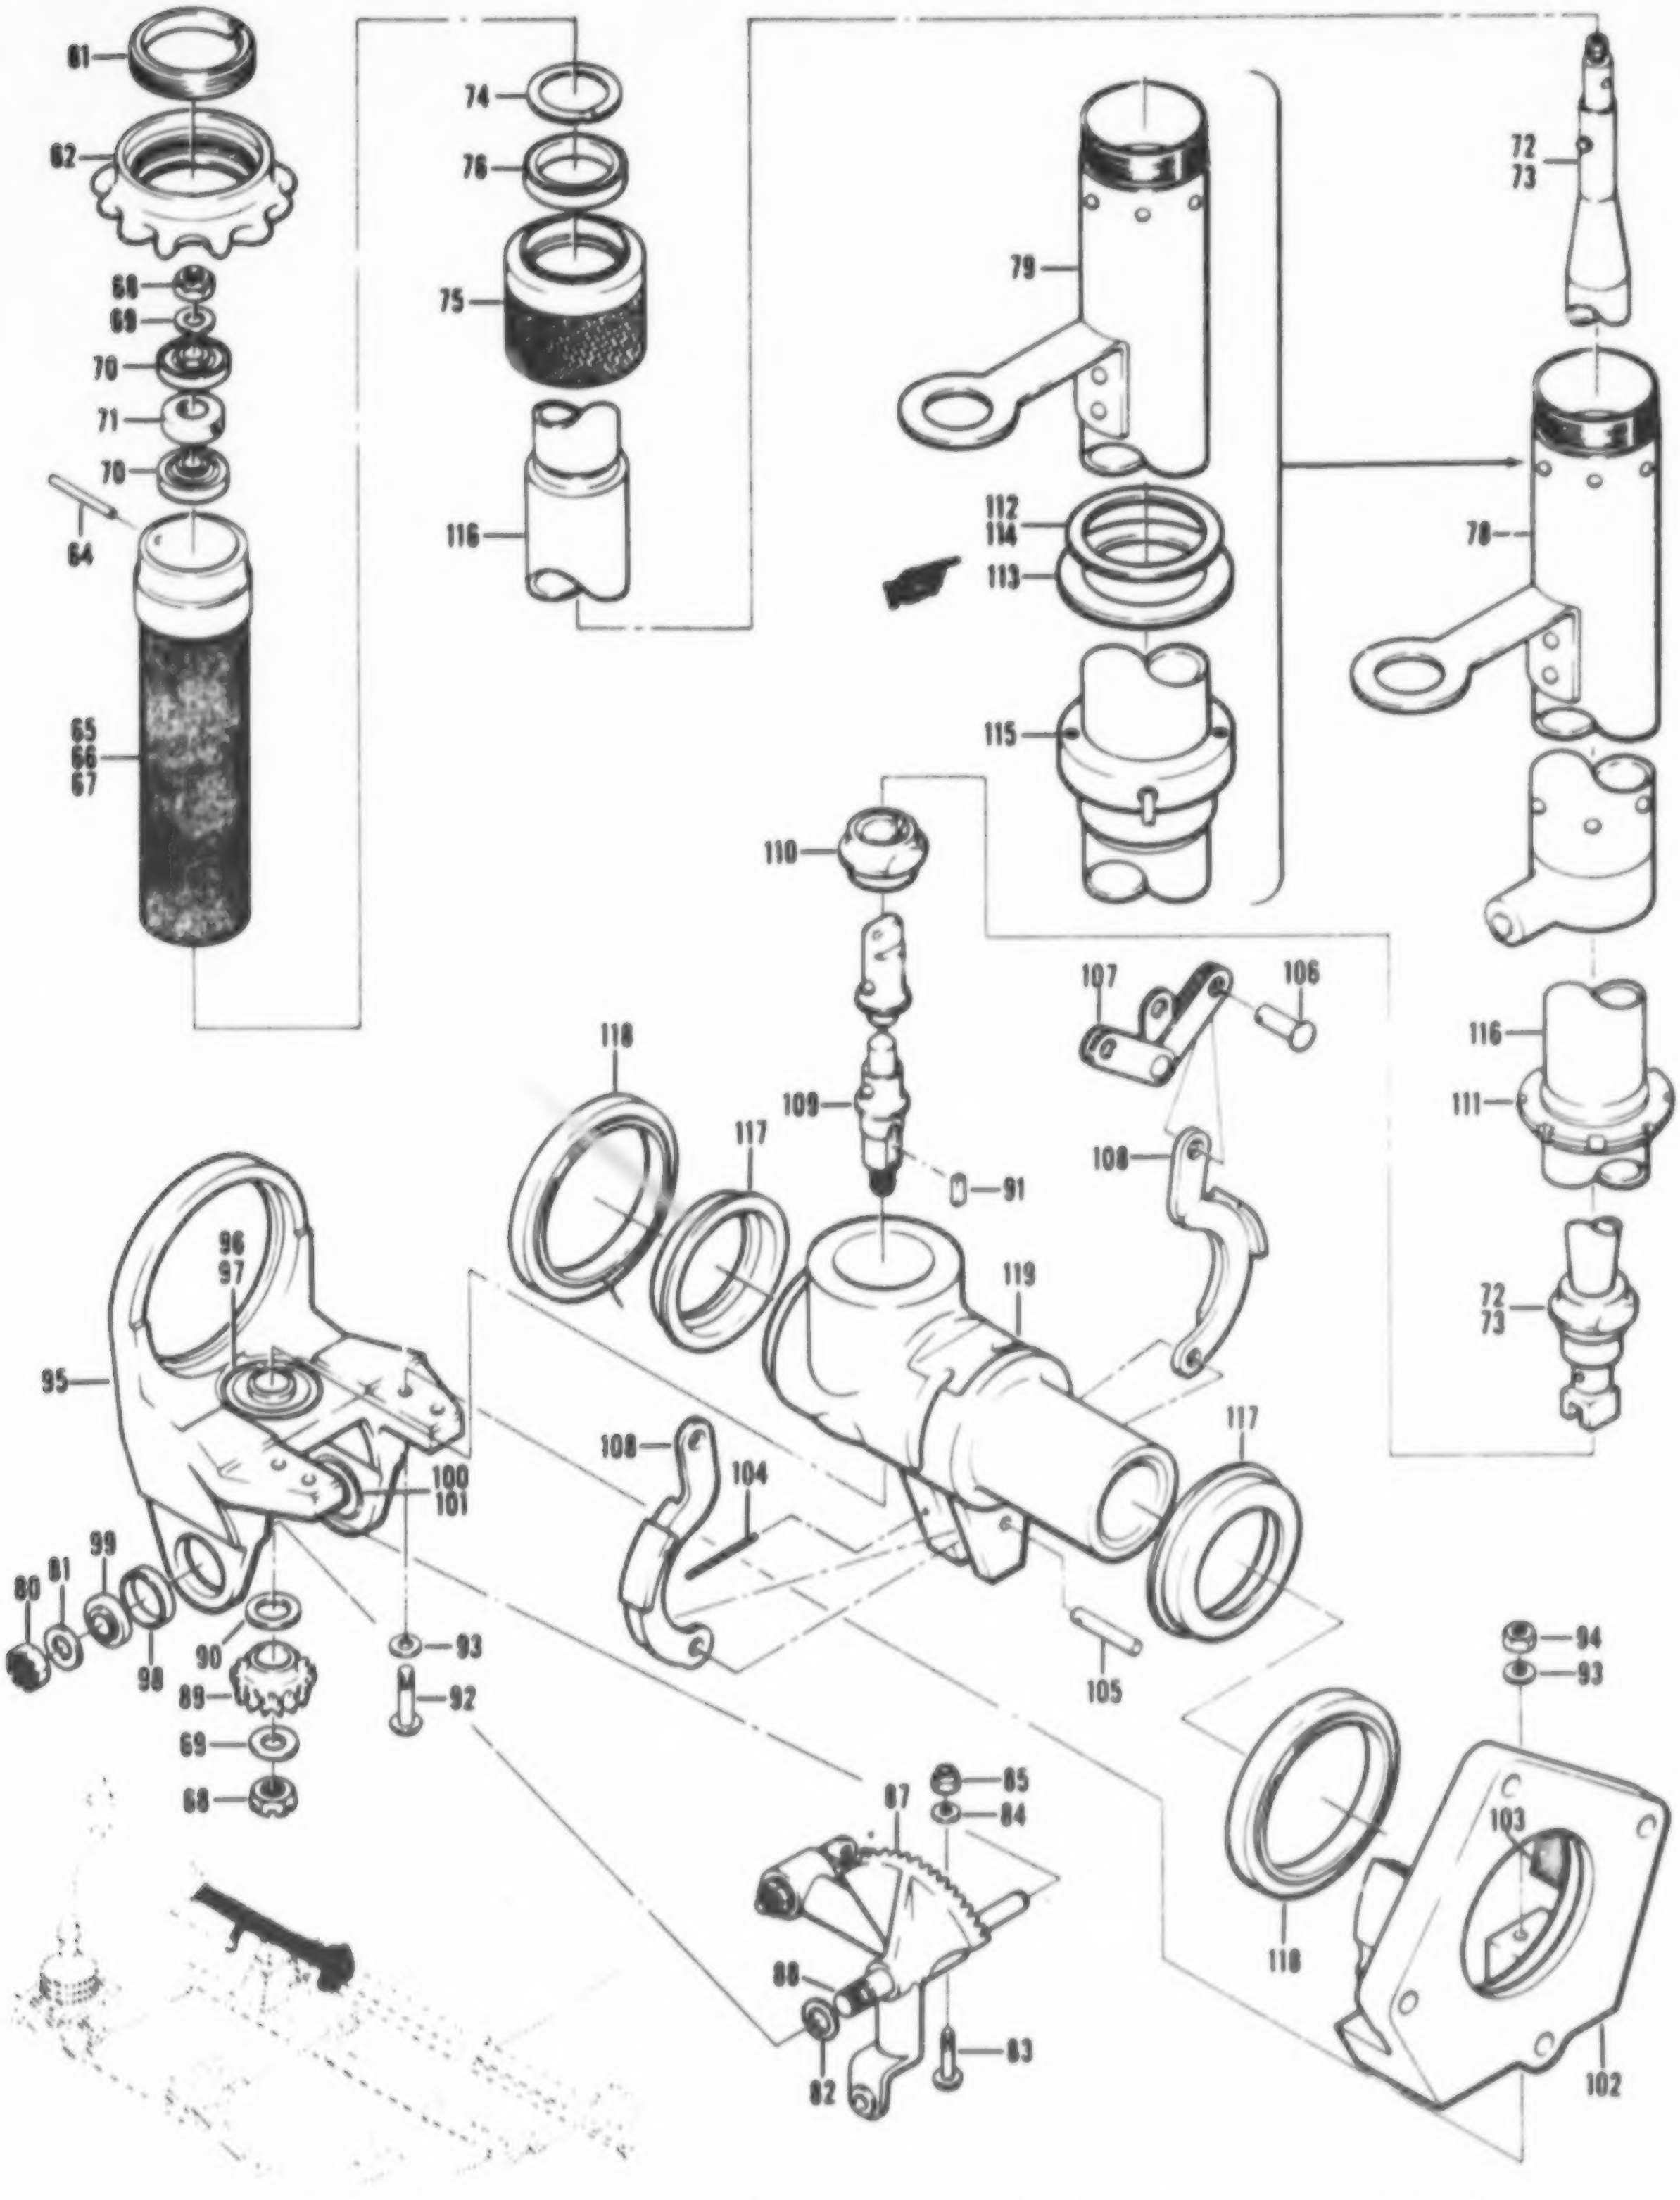
61
62
68
69
70
71
70
64
65
66
67
74
76
75
116
79
112
114
113
115
72
73
78
110
107
106
116
111
118
117
109
91
108
119
72
73
96
97
95
100
101
108
104
117
99
81
80
98
90
89
69
68
93
92
105
94
93
85
84
87
103
88
83
82
118
102

Figure 349. Stick Assembly, Flight Control Grip and Housing Assembly (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
349		PAOFF	1680-00-731-7993	97499	204-001-199-17	CONTROL STICK ASSY, FLIGHT CONTROL,GRIP AND HOUSING ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.348 FOR NHA UHB	EA	1
349		PAOFF	1680-00-022-2344	97499	204-001-600-9	CONTROL STICK ASSY, GRIP AND HOUSING ASSY USBL EFF 60-3591 & SUBSEQUENT SEE FIG.348 FOR NHA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	1	PAOZZ	5315-00-200-3163	96906	MS16562-240	.PIN,SPRING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	2	PAOZZ	5310-00-584-9676	97499	204-001-156-1	.WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
349	4	PAOZZ	5310-00-167-0844	88044	AN960-1616L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
349	5	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	6	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	7	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER HEXAGON UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	8	PAOZZ	5340-00-186-3388	88044	AN742D28	.CLAMP,LOOP U/O PN 204-001-199-17 UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	10	PAOZZ	5340-00-992-6245	81996	EAB70005	.CLAMP,LOOP UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	11	PAOZZ	5930-00-923-2876	97499	204-001-296-7	.SWITCH BOX ASSEMBLY UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	12	PBOZZ	5305-00-226-7919	96906	MS24693BB50	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	13	PBOZZ	5305-00-225-3847	96906	MS24693BB73	..SCREW,MACHINE UHB,UHC,UHM	EA	2
349	14	PAOOO	1680-00-731-8092	97499	204-001-297-1	..PANEL,SWITCH,CONTRO BOX-PILOTS COLLECTIVE STICK UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	15	PAOZZ	5325-00-276-6228	96906	MS35489-9	...GROMMET,NONMETALLIC UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	16	PAOZZ	9905-00-733-8358	97499	204-001-286-1	...NAMEPLATE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	17	PAOZZ	5305-00-984-4986	96906	MS35206-228	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	18	PAOZZ	5310-00-158-7721	88044	AN960PD6	..WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	19	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING,HE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	20	PAOZZ	5305-00-984-6193	96906	MS35206-245	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
349	21	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
349	22	PAOOO	1560-00-731-8091	97499	204-001-298-1	..BOX ASSEMBLY,PILOT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	23	PAOZZ	5310-00-893-2734	75237	MF6000-08	...NUT,SELF-LOCKING,PL UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
349	24	PAOZZ	5305-00-958-0997	96906	MS35198-17	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	25	PAOZZ	5310-00-194-9206	96906	MS35336-3	..WASHER,LOCK UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	26	PAOOO	6210-00-226-9259	72914	A-6815-24	..LIGHT,PANEL UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	27	PAOZZ	6240-00-155-7836	96906	MS25237-327	...LAMP,INCANDESCENT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	27A	PAOZZ	1680-01-230-0520	81996	EGD-0928-1	...BULB,CAP,NVG UHE,UHH,UHV,UHX	EA	1
349	28	PBOZZ	5930-00-655-1513	96906	MS35058-21	..SWITCH,TOGGLE UHE,UHH,UHM,UHV,UHX	EA	2
349	29	PBOZZ	5930-00-655-1515	96906	MS35058-23	..SWITCH,TOGGLE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	30	PAOZZ	5930-00-796-4343	91929	13AT66	..SWITCH,TOGGLE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	31	PAOZZ	5930-00-522-6866	73949	X646A	..SWITCH,TOGGLE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	32	PAOZZ	5930-00-687-1481	81640	C100E2-39	..SWITCH, PUSH UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	33	PAOZZ	1560-00-649-8151	73949	192-200010-00	..PUSH BUTTON UHB,UHC,UHE,UHH,UHM,UHX	EA	1
349	34	PAOZZ	1680-00-674-5495	97499	204-001-273-1	..TRIGGER,STARTER SWITCH UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	35	PAOZZ	5340-00-573-0779	96906	MS20253-1-3600	..ROD,STRAIGHT,HEA UHB,UHC,UHM	EA	1
349	36	MFOZZ	5315-00-081-1667	96906	MS20253-1-82	..PIN,STRAIGHT,HEA UHE,UHH,UHV,UHX	EA	1
349	37	PAOZZ	5310-00-515-9371	88044	AN960PD3	..WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	38	PAOZZ	5310-00-934-9757	96906	MS35649-282	..NUT,PLAIN,HEXAGON UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	39	PBOZZ	5305-00-723-9403	96906	MS51963-40	..SETSCREW UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
349	40	PAOZZ	5930-00-955-0569	81640	H20078	..SWITCH,PUSH....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	41	PAOZZ	5365-00-205-6699	96906	MS16628-1060	..RING,RETAINING.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
49	42	PAOZZ	5310-00-767-6457	97499	204-001-251-1	..WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	43	PCOZZ	5330-00-350-9013	88044	AN6227-10	..PACKING,PREFORMED..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	44	XDOZZ	5975-00-765-8738	97499	204-001-250-1	..CONDUIT,COLLECTIVE PILOT STICK WIRING ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	45	AOOOZ	1560-00-736-4040	97499	204-075-423-3	..CABLE ASSEMBLY.........................UHB,UHE,UHH,UHV,UHX	EA	1
349	47	PAOZZ	5935-00-165-3342	96906	MS3126E16-26P	...CONNECTOR,PLUG,E..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	48	PAFZZ	5340-00-984-2123	77820	10-101033-11	...PLUG,PROTECTIVE,DUS DUST AND MOISTURE SEAL ....UHB,UHE,UHH,UHV,UHX	EA	1
349	49	PAOZZ	5940-00-813-0698	96906	MS25036-101	...TERMINAL,LUG..........................UHB,UHE,UHH,UHV,UHX	EA	1
349	50	PAOZZ	5940-01-007-7875	81349	M7928/3-2	...SPLICE,CONDUCTOR......................UHB,UHE,UHH,UHV,UHX	EA	1
349	51	PBOOO	5930-00-847-7543	97499	204-001-243-1	..CASE ASSY,SWITCH...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	52	PAOZZ	5340-00-721-7906	96906	MS122199	...INSERT,SCREW THR..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	53	XDOZZ		96906	MS21208CD810	...INSERT,SCREW THR..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	54	PAOZZ	5340-00-291-3482	96906	MS122240	...INSERT,SCREW THR..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	55	PAOZZ	5310-00-893-1697	97499	204-001-248-1	...WASHER,RECESSED...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	56	XBOZZ	5975-00-280-3660	88044	AN3053-8	..FERRULE,CONDUIT................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	57	XBOZZ	5975-00-296-1698	88044	AN3064-8	..NUT,COUPLING,ELECTR CONDUIT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	58	XBOZZ	5975-00-504-6751	88044	AN3064-8	..CHASE NIPPLE, CONDUIT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	59	XDOZZ	5975-00-296-0535	88044	AN3066-8	..LOCKNUT,ELECTRIC...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
49	60	PAOZZ	5340-00-993-6246	81996	EAB700028	.CLAMP,LOOP THROTTLE GRIP U/O PN 204-001-600-9 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	61	PAOZZ	5305-00-053-3982	97499	204-001-142-5	.SCREW,PILOT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	62	PAOZZ	5310-00-766-8597	97499	204-001-275-5	.NUT ASSEMBLY....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	64	PAOZZ	5315-00-282-1192	88044	AN122709	.PIN,STRAIGHT,HEA................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	65	PAOOO	1680-00-777-5299	97499	204-001-270-1	.GRIP ASSY,THROTTLE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	66	PAOZZ	3120-00-948-3181	97499	204-001-606-1	..BEARING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	67	PAOZZ	5340-00-898-9691	97499	204-001-269-3	..GRIP,HANDLE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	68	PAOZZ	5310-00-903-8282	96906	MS21083N4	.NUT,SELF-LOCKING,HE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	69	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	70	PAOZZ	3110-00-034-5257	96906	MS27641-6	.BEARING,BALL,AIRFRA RPLS-- 3110-00-142-4468 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	71	PAOZZ	1560-00-830-4289	97499	204-001-168-1	.RING,TRIP ASSEMBLY..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	72	PAOOO	1680-00-912-0167	97499	204-001-683-1	.CONNECTING LINK ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	73	PAOZZ	5365-00-892-1778	80205	NAS43DD8-20	..SPACER,SLEEVE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	74	PAOZZ	5365-00-619-0822	80756	RS106C	.RING,RETAINING..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
341	75	PAOOO	1680-00-603-8589	97499	204-001-209-1	.RETAINER,FRICTION ASSY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	76	PAOZZ	3110-00-808-2088	38443	8541ZZ	..BEARING,BALL,AIR -ALTERNATE- ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	76	PAOZZ	3110-00-293-8584	21335	854100	..BEARING,BALL,AIRFRA............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
49	78	PAOZZ	1560-00-796-4267	97499	204-001-215-7	.TUBE ASSY,CONTROL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
49	79	PAOZZ	1560-00-767-7160	97499	204-001-617-1	.TUBE,SLIDE STICK U/O PN 204-001-600-9 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	80	PAOZZ	5310-00-176-8109	88044	AN320-6	.NUT,PLAIN,SLOTTED H.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
349	81	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	82	PAOZZ	5365-00-076-9919	97499	120-048-24-10	.SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	83	PBOZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	84	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	85	PAOZZ	5310-00-807-1466	96906	MS21042-08	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	87	PA000	1560-00-730-0883	97499	204-001-295-5	.LEVER,THROTTLE CONT U/O PN 204-001-600-9	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	88	PAOZZ	1560-00-649-8154	97499	204-001-258-1	.SHAFT,THROTTLE CONT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	89	PAOZZ	3020-00-633-0855	97499	204-001-230-1	.GEAR,BEVEL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	89	PAOZZ	3020-00-633-0855	44560	SP1631	.GEAR,BEVEL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	90	PAOZZ	5365-00-063-6018	97499	120-047-20-14	.SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	91	PAOZZ	5315-00-690-9825	97499	47-631-216-1	.KEY,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	92	PAOZZ	5306-00-292-8278	88044	AN173H13A	.BOLT,CLOSE TOLERANC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
349	93	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
349	94	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
349	95	PA000	1560-00-633-0850	97499	204-001-195-1	.SUPPORT ASSY,PILOTS	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	96	PAOZZ	3120-00-624-5249	97499	120-012-8A	..BUSHING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	97	PAOZZ	3110-00-042-0440	96906	MS27641-8	..BEARING,BALL,AIRFRA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	98	PAOZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	99	PAOZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	100	PAOZZ	3120-00-625-0124	97499	120-012-5A	..BUSHING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	101	XDOZZ	3110-00-033-9851	96906	MS27641-5	..BEARING,BALL,AIRFRA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	102	PA000	1680-00-925-7072	97499	204-001-601-5	HOUSING STICK ASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	103	PAOZZ	1560-00-808-3159	97499	204-001-274-1	..LINING,COLLECTIVE F	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	104	PAOZZ	5315-00-584-0257	96906	MS16562-198	.PIN,SPRING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	105	PAOZZ	5315-00-837-9891	97499	204-001-234-1	.PIN,STRAIGHT,HEADLE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	106	PAOZZ	5315-00-619-6513	88044	AN121652	.PIN,STRAIGHT,HEADED	UHB,UHC,UHM	EA	2
349	107	PAOZZ	1560-00-797-6074	97499	204-001-236-1	.DRAG LINK ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	108	PAOZZ	1560-00-936-9253	97499	204-001-256-5	.SHOE,FRICTION,COLLE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	109	PAOZZ	1560-00-701-4124	97499	204-001-267-1	.DRIVE ASSEMBLY,THRO	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	110	PAOZZ	1560-00-624-5110	97499	204-001-193-1	.GUIDE,THROTTLE TUBE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	111	PAOZZ	5310-00-755-7681	97499	204-001-222-1	.NUT,COLLECTIVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	112	PAOZZ	5365-00-796-4236	97499	120-037E55-44	.SHIM U/O PN 204-001-199-17	UHB,UHC,UHM	EA	1
349	113	PAOZZ	5365-00-755-7955	97499	204-001-622-3	.SPACER,RING U/O PN 204-001-600-9	UHE,UHH,UHV,UHX	EA	1
349	114	PAOZZ	5310-00-900-2391	97499	204-001-622-5	.WASHER,FLAT U/O PN 204-001-600-9	UHE,UHH,UHV,UHX	EA	1
349	115	PAOZZ	5305-00-728-6323	96906	MS51966-66	.SETSCREW U/O PN 204-001-600-9	UHB,UHC,UHE,UHH,UHV,UHX	EA	2
349	116	PAOZZ	1560-00-624-6731	97499	204-001-212-1	.TUBE ASSY,PILOTS STICK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
349	117	PAOZZ	1560-00-830-4291	97499	204-001-224-1	.REDUCER,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	118	PAOZZ	3110-00-678-5425	38443	B545ZZ	.BEARING,BALL,AIRFRA -ALTERNATE-	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	118	PAOZZ	3110-00-293-9195	21335	B545DDFS160	.BEARING,BALL,AIRFRA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
349	119	PAFFF	1680-00-624-5157	97499	204-001-194-3	.ELBOW,PILOT STICK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

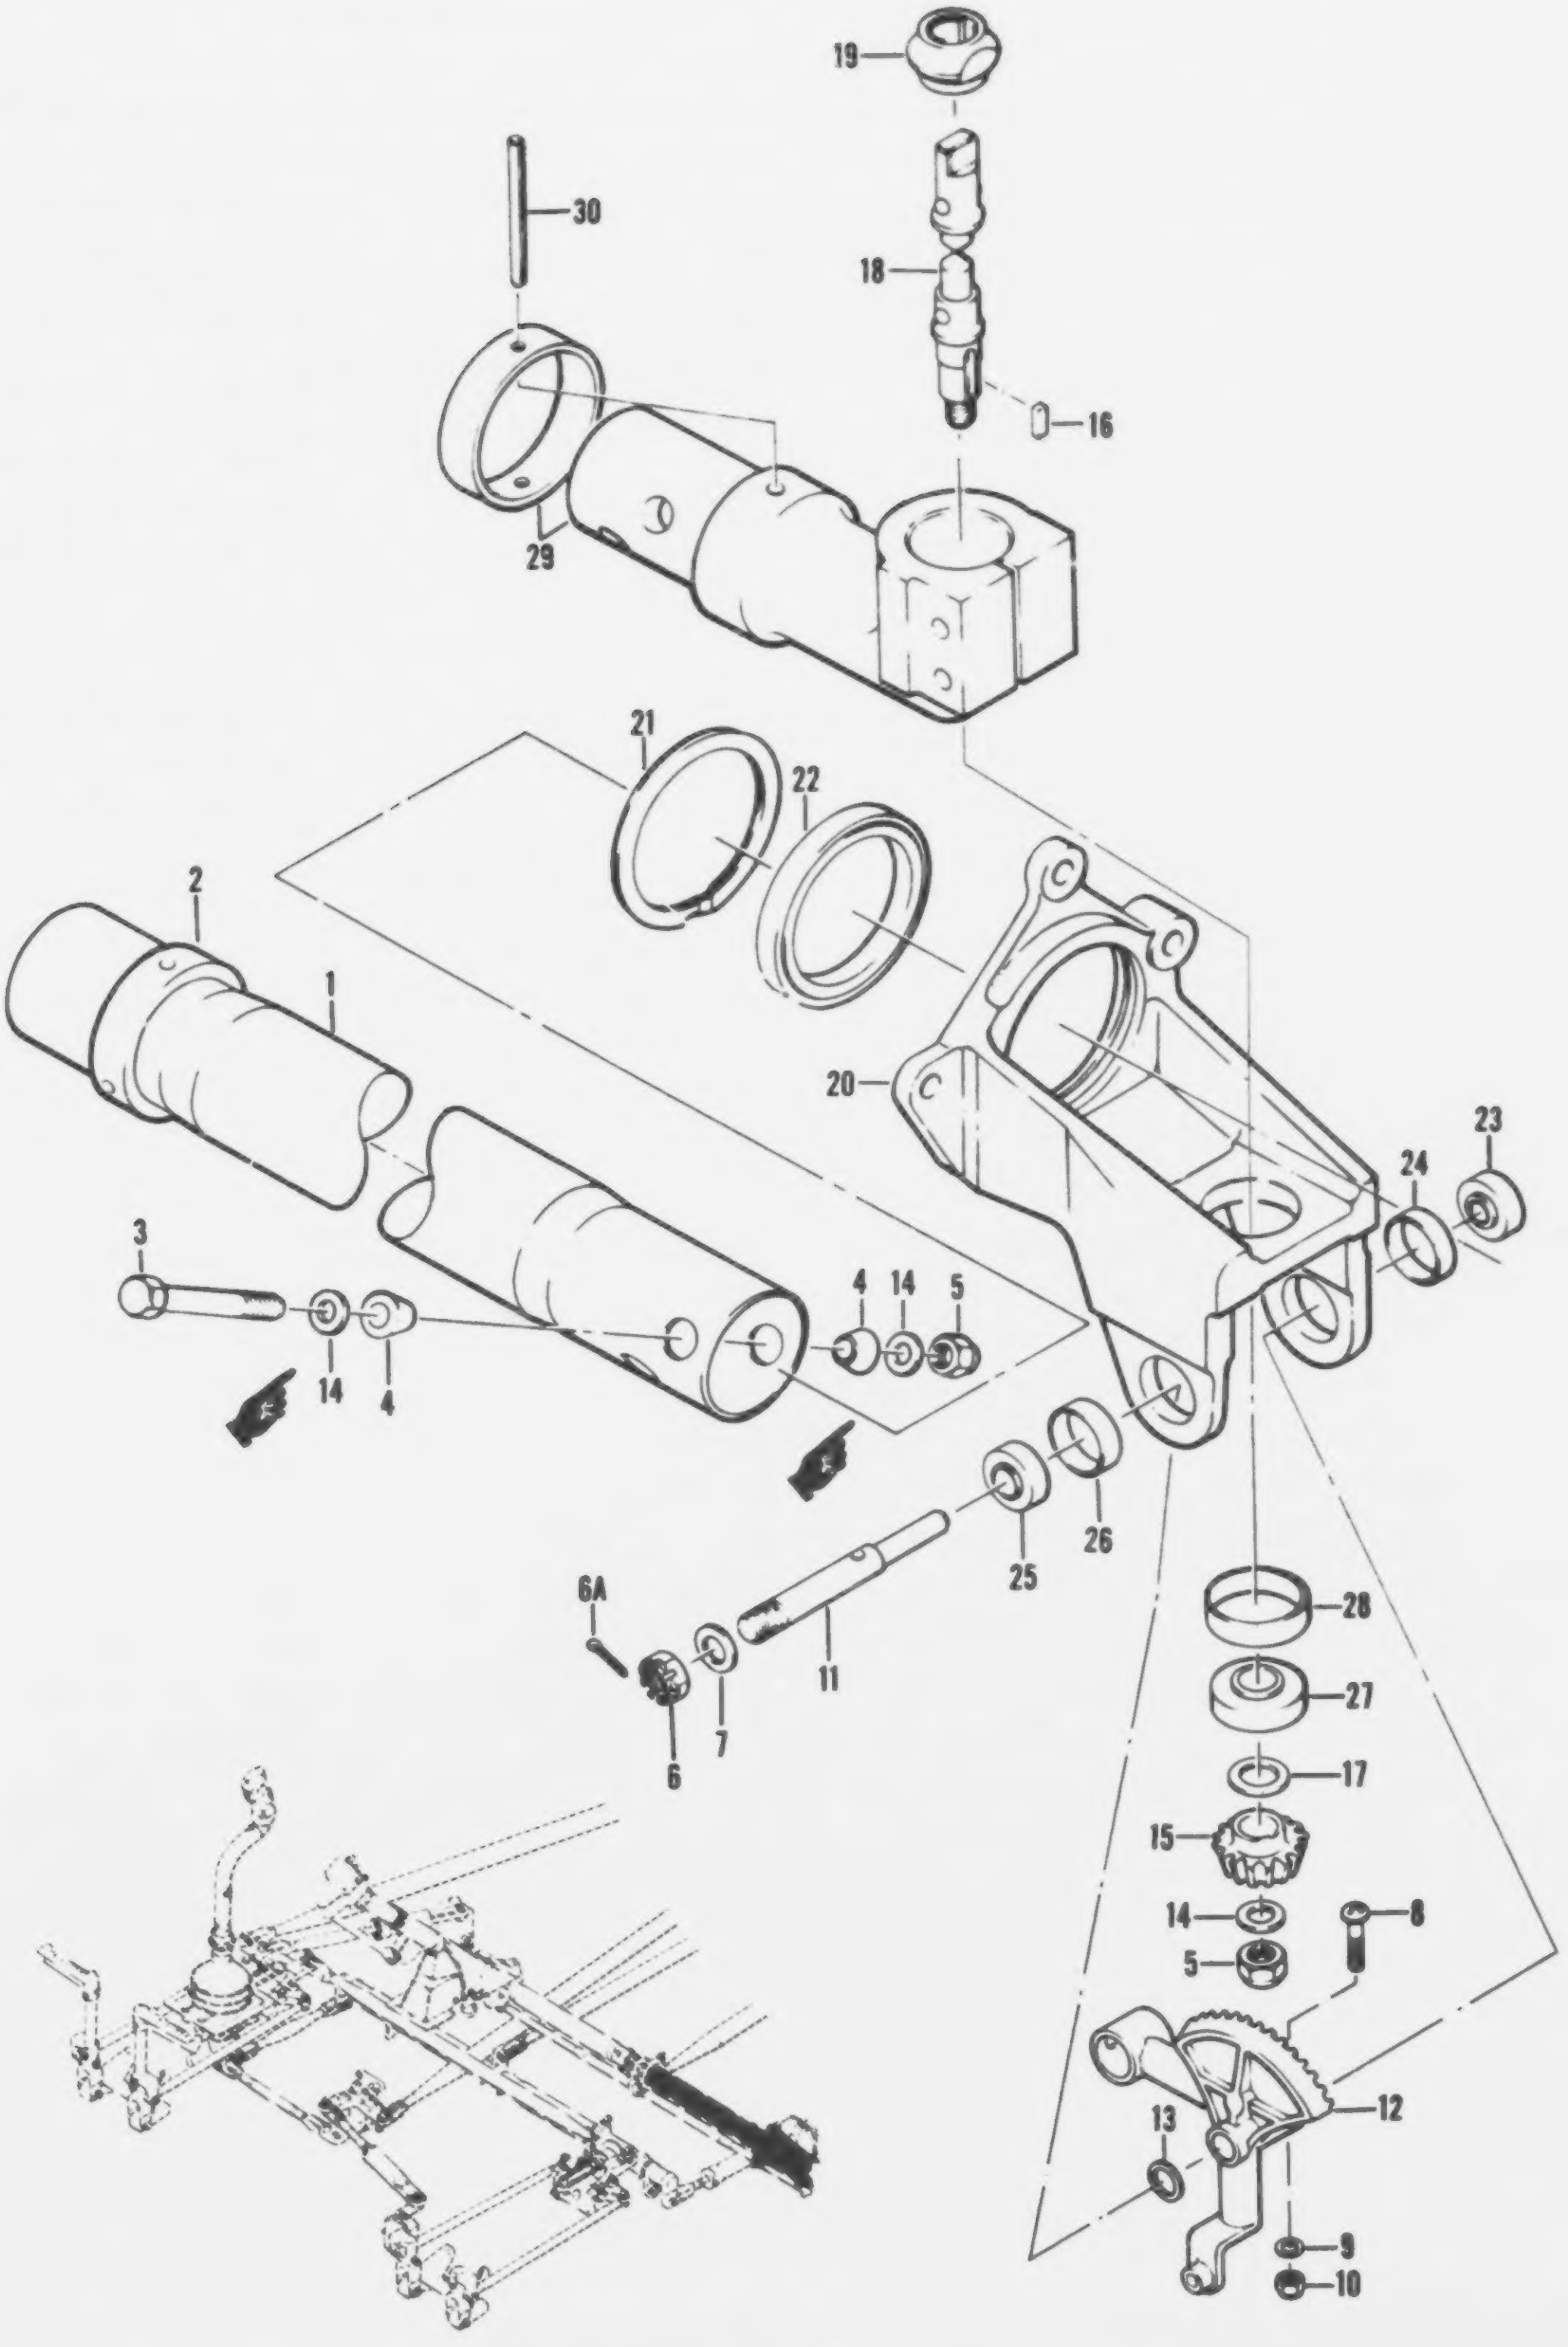
19
30
18
16
29
21
22
2
1
20
23
24
3
4
14
5
14
4
25
26
6A
11
28
7
6
27
17
15
14
8
5
12
13
9
10

Figure 350. Control Assembly Collective

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
350		PAOFF	1560-00-972-2738	97499	204-001-259-5	CONTROL ASSY, COLLECTIVE SEE FIG 348 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	1	PAFFF	1560-00-701-2945	97499	204-001-190-1	.TUBE,FLIGHT CONTROL....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	2	PAFZZ	5365-00-690-5259	97499	204-001-189-1	..SPACER,SLEEVE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	3	PAFZZ	5306-00-182-1966	88044	AN4H20A	.BOLT,MACHINE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
350	4	PAFZZ	5340-00-579-7186	97499	7981-4-7	.BUSHING,TAPERED....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
350	5	PAFZZ	5310-00-903-8282	96906	MS21083N4	.NUT,SELF-LOCKING,HE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
350	6	PAFZZ	5310-00-176-8109	88044	AN320-5	.NUT,PLAIN,SLOTTED H....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	6A	PAFZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	7	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	8	PBFZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	9	PAFZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	10	PAFZZ	5310-00-807-1466	96906	MS21042-08	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	11	PAFZZ	1560-00-649-8154	97499	204-001-258-1	.SHAFT,THROTTLE CONT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	12	PAFZZ	1560-00-780-0884	97499	204-001-295-1	.LEVER,THROTTLE CONT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	13	PAFZZ	5365-00-714-5322	97499	120-048-16-10	.SHIM....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	14	PAFZZ	5310-00-141-1795	88044	AN960-416	WASHER,FLAT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
350	15	PAFZZ	3020-00-633-0855	97499	204-001-230-1	.GEAR,BEVEL....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	16	PAFZZ	5315-00-690-9825	97499	47-631-216-1	.KEY,MACHINE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	17	PAFZZ	5365-00-083-6018	97499	120-047-20-14	.SHIM....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	18	PAFZZ	1560-00-701-4124	97499	204-001-267-1	.DRIVE ASSEMBLY,THRO....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	19	PAFZZ	1560-00-624-5110	97499	204-001-193-1	..GUIDE,THROTTLE TUBE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	20	PAFFF	1560-00-980-9546	97499	204-001-178-11	.SUPPORT ASSEMBLY,TH....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	21	PAFZZ	5365-00-067-3732	81349	MILR27426	..RING,RETAINING....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	22	PAFZZ	3110-00-678-5425	38443	B545ZZ	..BEARING,BALL,AIRFRA....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	23	PAFZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	24	PAFZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	25	PAFZZ	3110-00-033-9851	96906	MS27641-5	..BEARING,BALL,AIRFRA....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	26	PAFZZ	3120-00-625-0124	97499	120-012-5A	..BUSHING,SLEEVE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	27	PAFZZ	3110-00-042-0440	96906	MS27641-8	..BEARING,BALL,AIRFRA....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	28	PAFZZ	3120-00-624-5249	97499	120-012-6A	..BUSHING,SLEEVE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	29	PAFFF	1560-00-624-5161	97499	204-001-184-1	.ADAPTER,CONTROL STI....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
350	30	PBFZZ	5315-00-843-9730	96906	MS171572	..PIN,SPRING....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

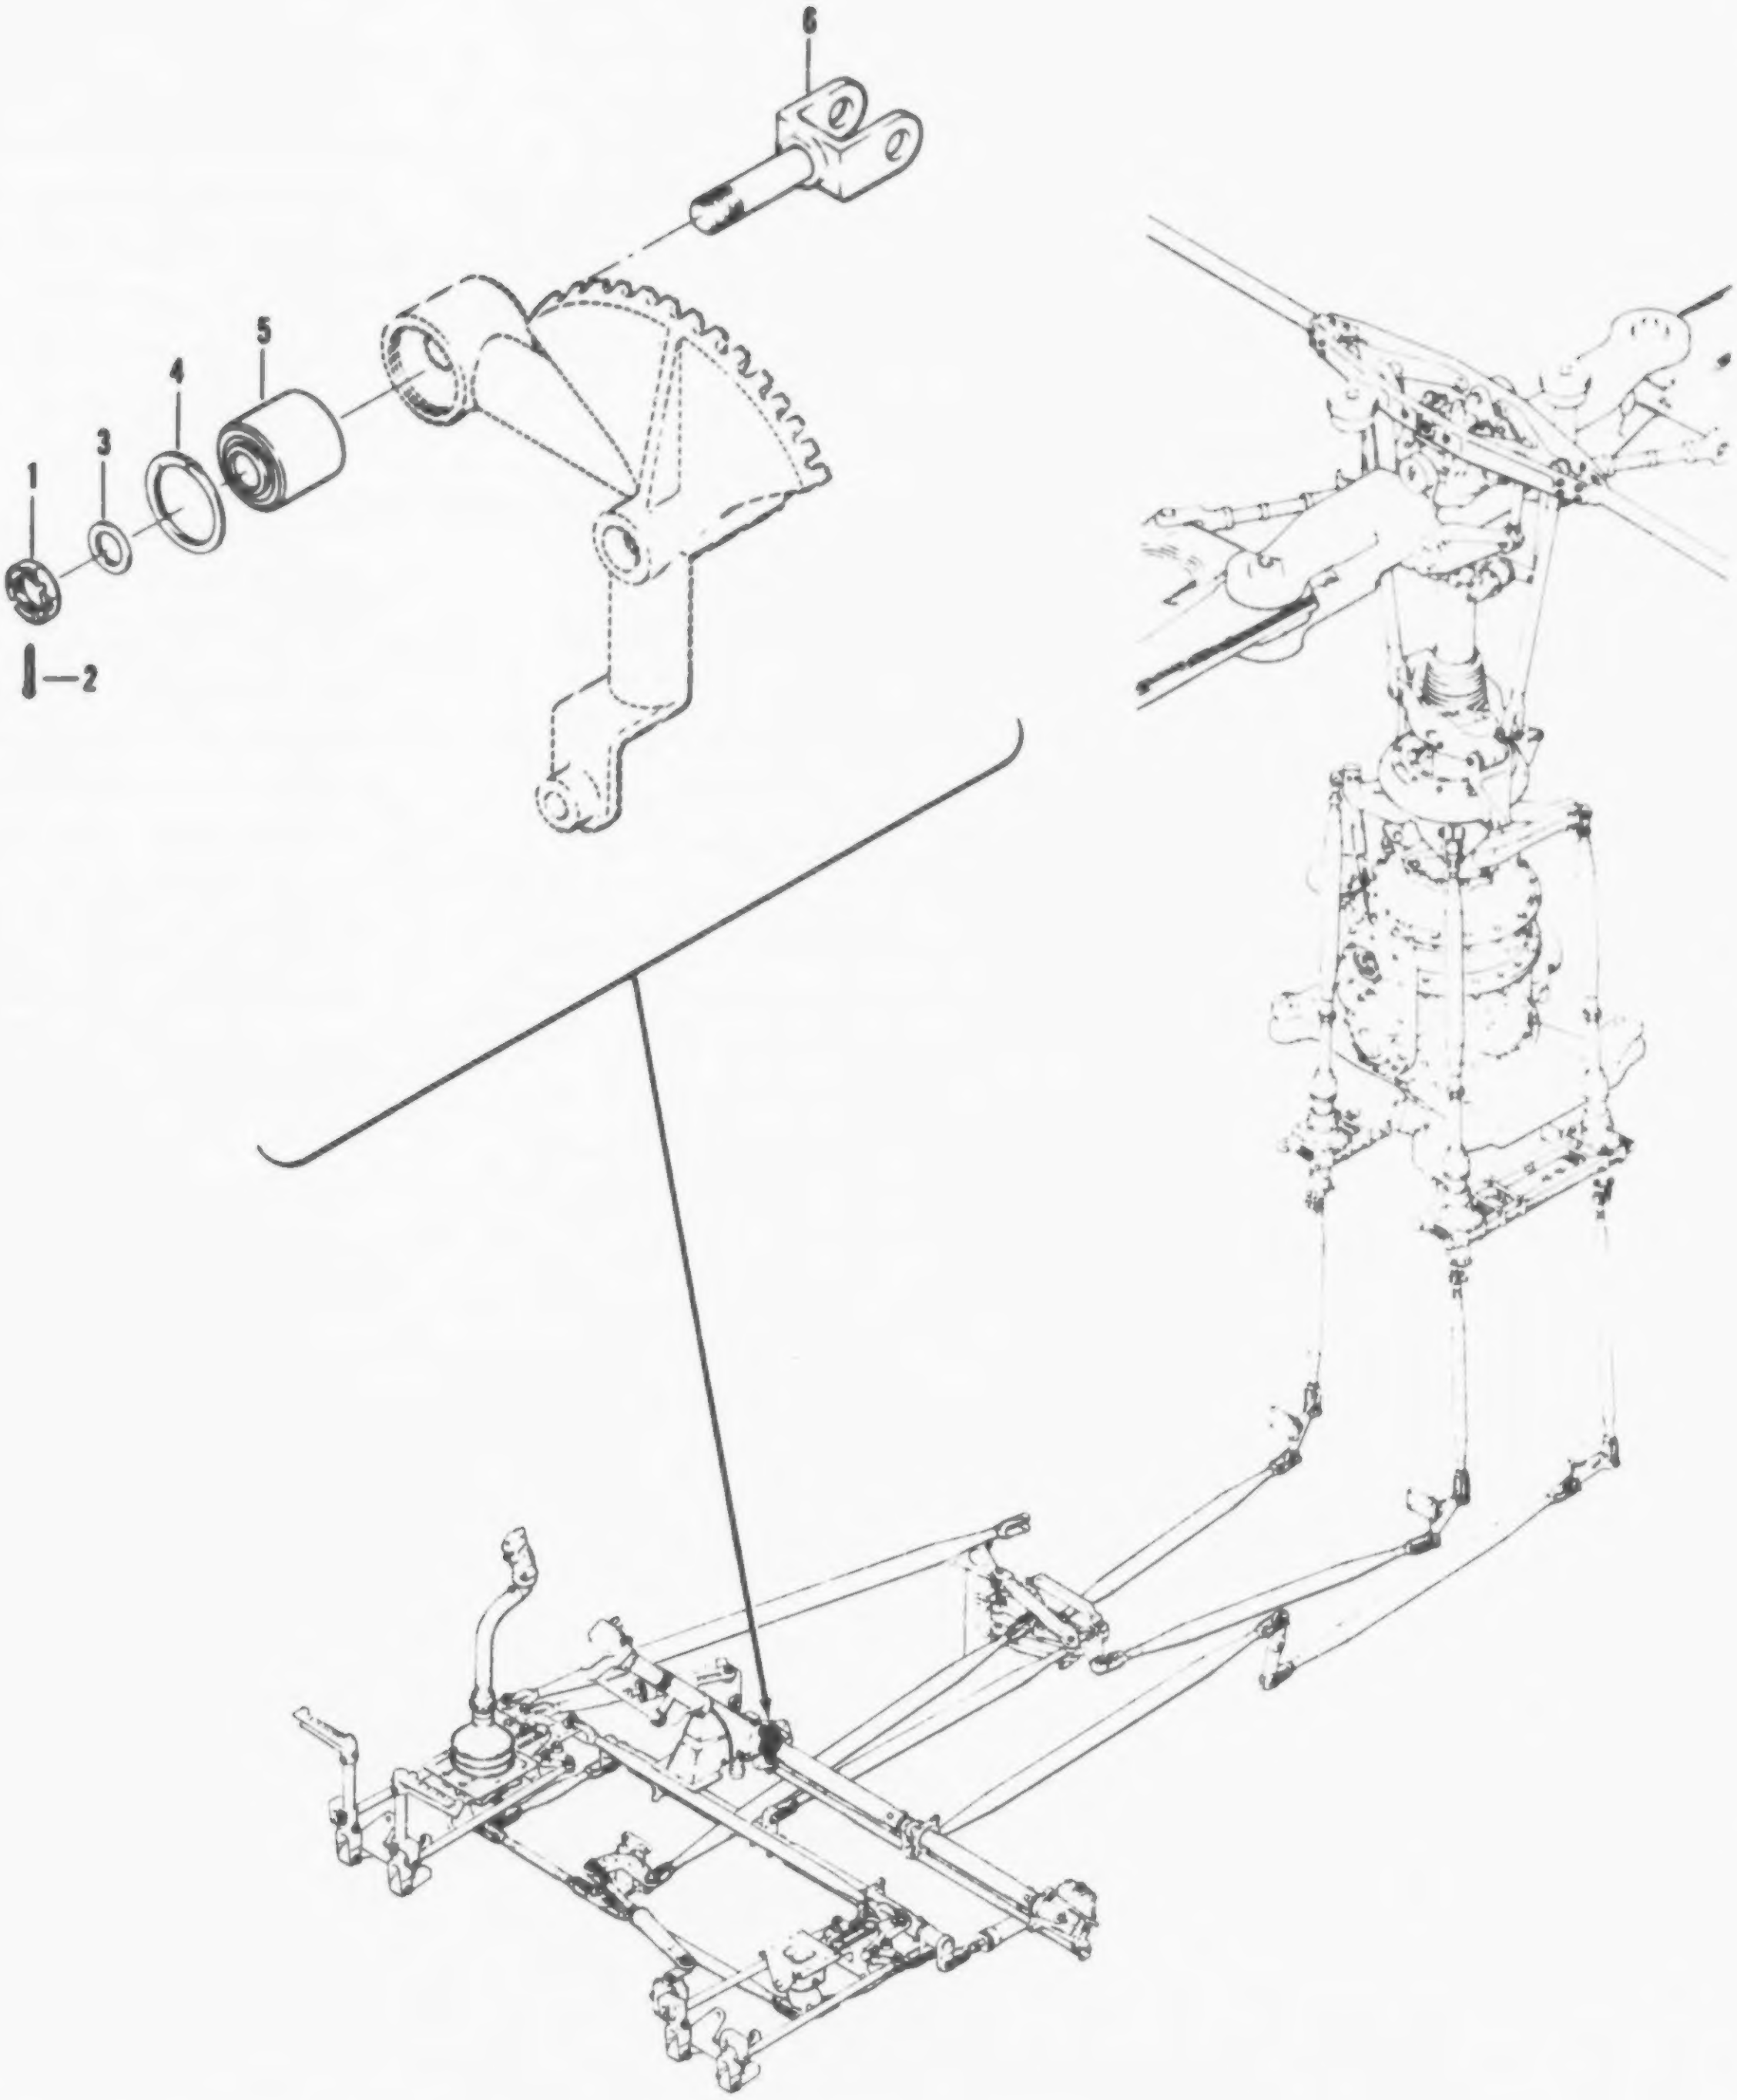

Figure 351. Drive Assembly, Throttle

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
351		PAOOO	1560-00-780-0883	97499	204-001-295-5	LEVER ASSY,THROTTLE CONTROL SEE FIG 349 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
351	1	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
351	2	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
351	3	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
351	4	PBOZZ	5365-00-988-5319	81349	MILR27426T2CL1-625	.RING,RETAINING....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
351	5	PAOZZ	3110-00-190-9385	21335	DW4K2	.BEARING,BALL,AIR.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
351	6	PAOZZ	5340-00-856-0585	97499	204-001-213-1	.CLEVIS,ROD END....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

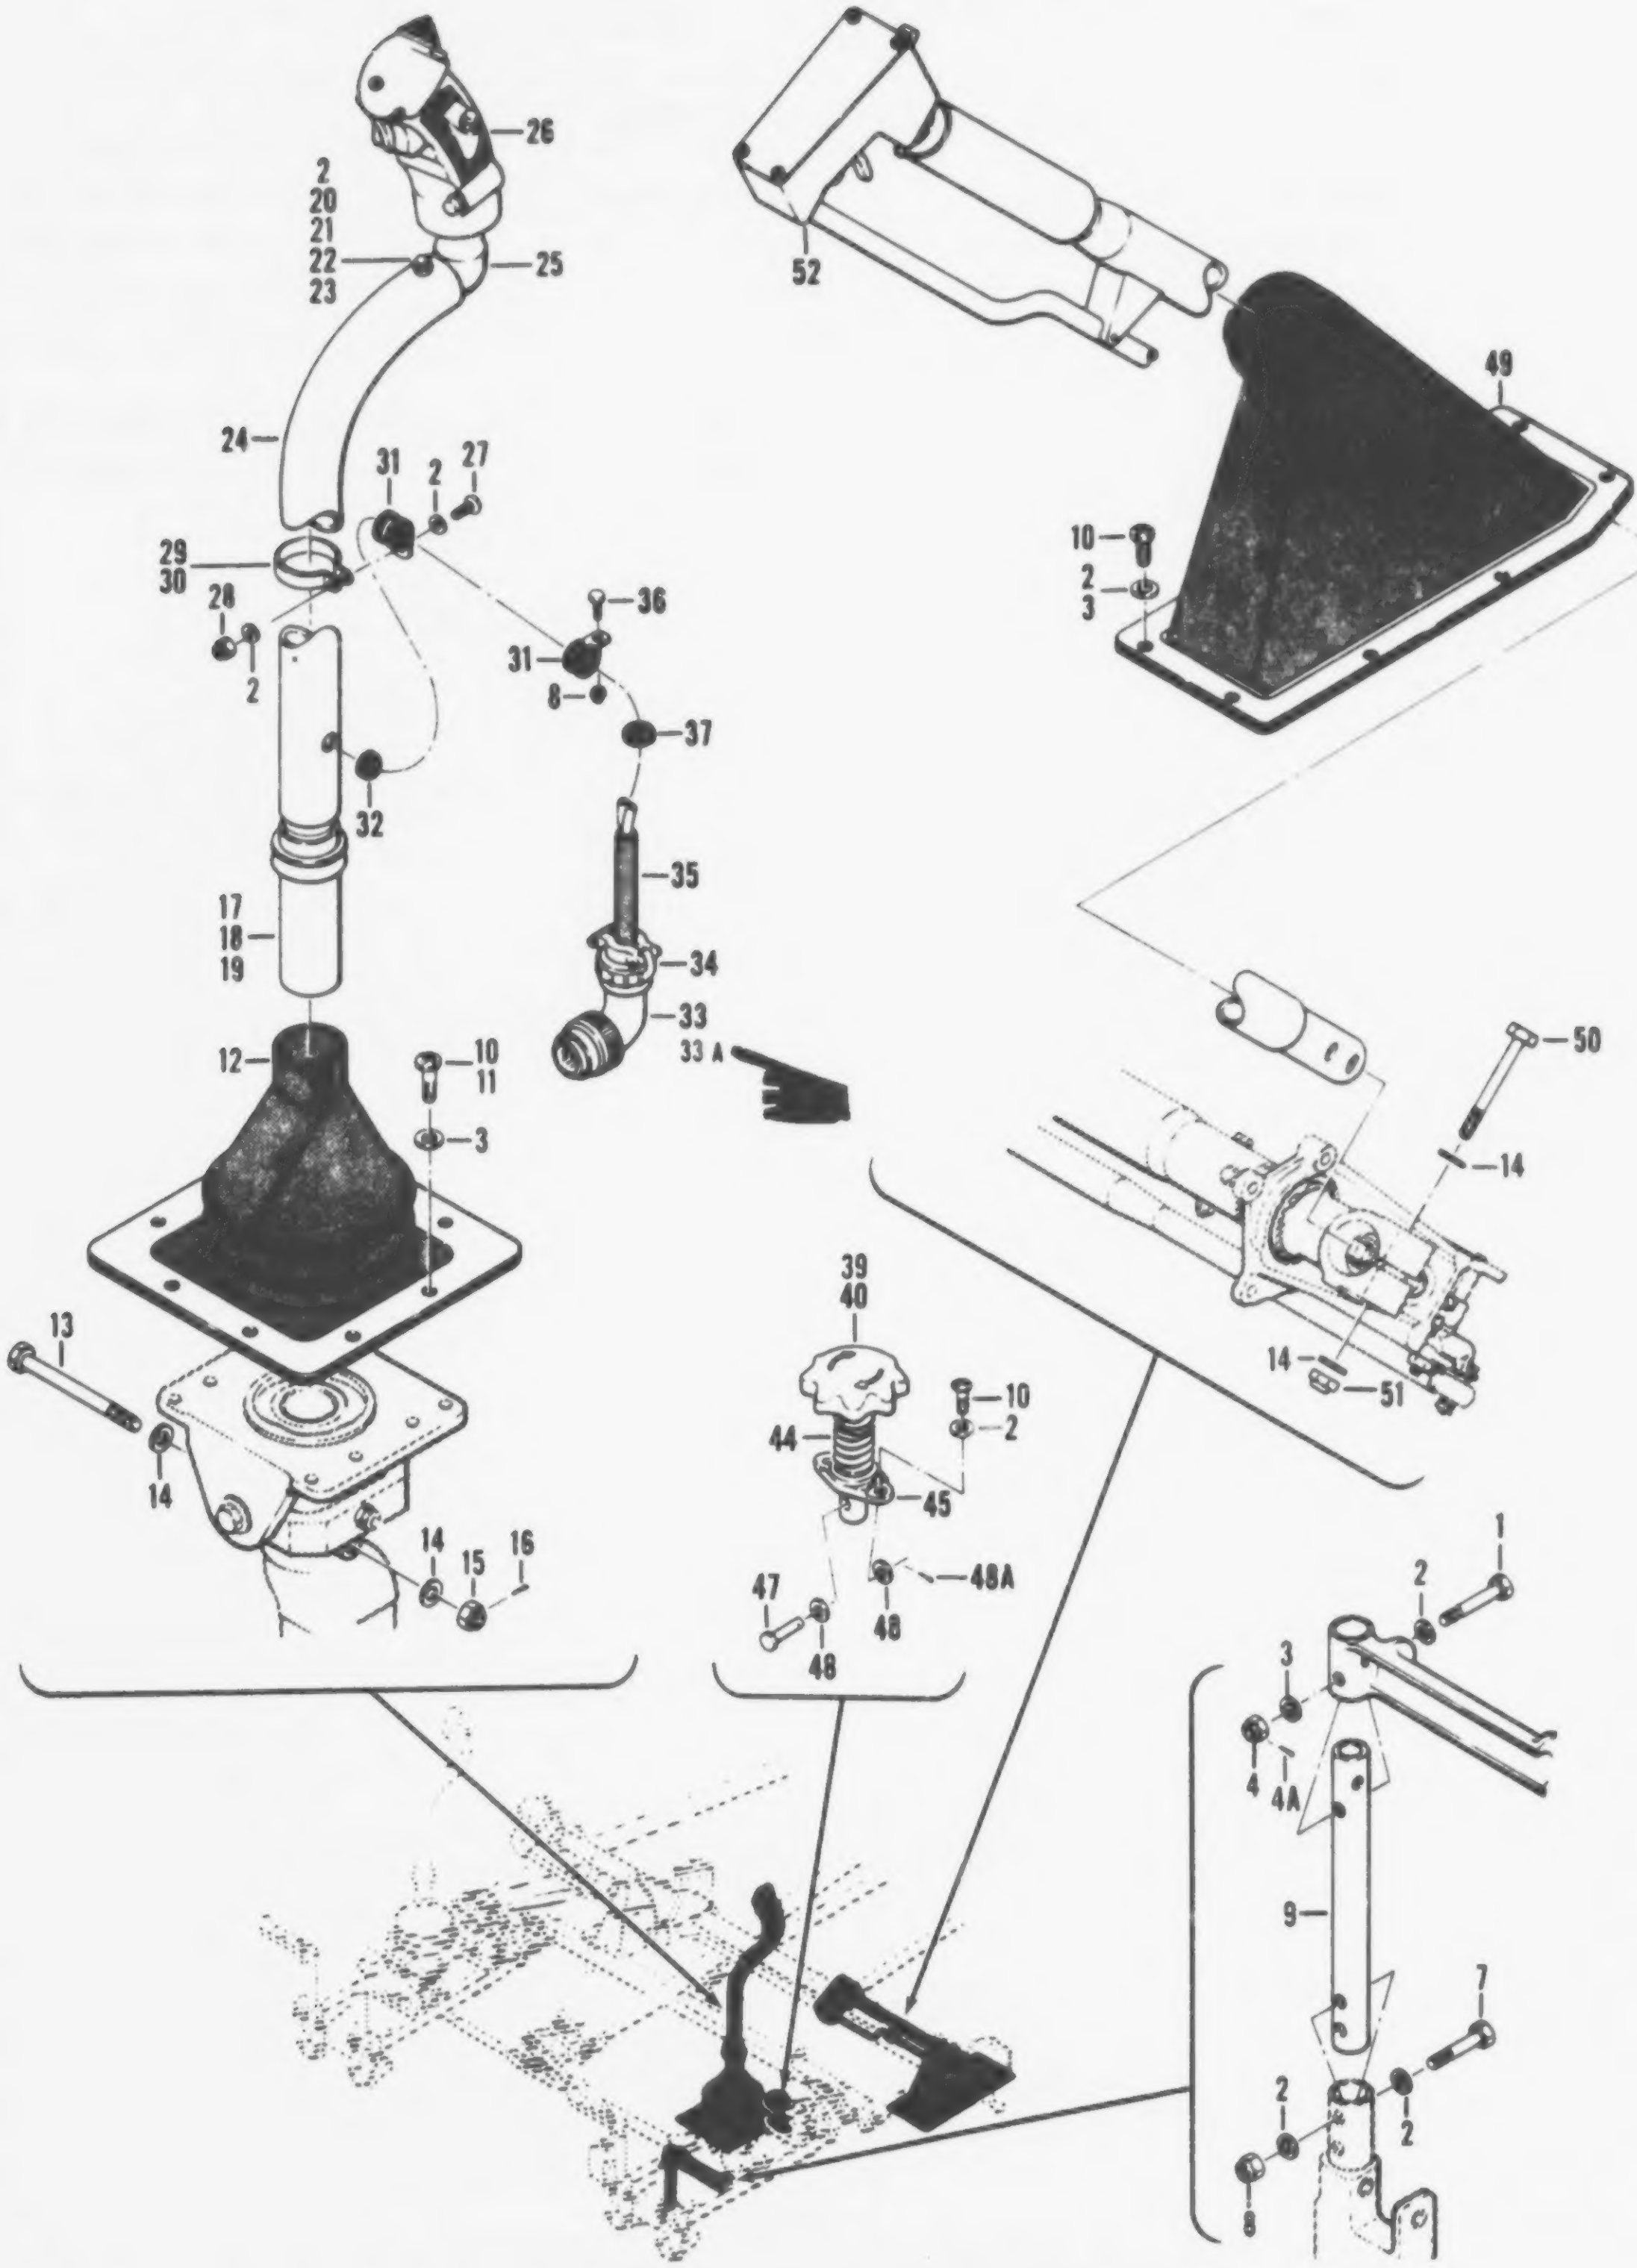
26
2
20
21
22
23
25
52
49
24
31
2
27
29
30
28
2
36
31
8
10
2
3
37
32
35
17
18
19
34
33
33 A
12
10
11
3
50
14
39
40
13
14
51
10
44
2
45
14
15
16
48A
47
48
48
48
1
2
3
4
4A
9
7
2
2
8

Figure 352. Control Installation, Dual Removable

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO							
352		XCFZZ		97499	204-706-001-9	CONTROL INSTL,DUAL REMOVABLE USBL EFF 60-3546 THRU 60-3590 SEE FIG 4 FOR NHA.......UHB	EA	1
352		XCFZZ		97499	204-706-001-11	CONTROL INSTL,DUAL REMOVABLE USBL EFF 60-3591 THRU 61-719, 61-736 & SUBSEQUENT SEE FIG 4 FOR NHA.......UHB	EA	1
352		XCFZZ		97499	204-706-001-13	CONTROL INSTL,DUAL REMOVABLE USBL EFF 61-720 THRU 61-735 SEE FIG 4 FOR NHA.......UHB	EA	1
352		XCFZZ		97499	204-706-001-15	CONTROL INSTL,DUAL REMOVABLE USBL EFF 62-1872 THRU 62-1996 SEE FIG 4 FOR NHA.......UHB	EA	1
352		XCFZZ		97499	204-706-001-21	CONTROL INSTL,DUAL USBL EFF 62-1997 & SUBSEQUENT SEE FIG 4 FOR NHA NHA.......UHB,UHC,UHM	EA	1
352		XCFZZ		97499	205-001-006-3	CONTROL INSTL,DUAL USBL EFF 62-2106 THRU 63-8859 SEE FIG 380 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
352		XCFZZ		97499	205-001-006-5	CONTROL INSTL,DUAL USBL EFF 63-12956 THRU 67-19537 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
352		XCFZZ		97499	205-001-006-9	CONTROL INSTL,DUAL USBL EFF 63-15214 THRU 68-16625 SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
352		XCFZZ		97499	205-001-006-11	CONTROL INSTL,DUAL USBL EFF 69-15000 & SUBSEQUENT SEE FIG 7 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
352	1	PAOZZ	5306-00-151-2308	88044	AN23-29	BOLT,CLEVIS.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
352	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	8
352	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......UHB,UHC,UHM	EA	8
352	4	PAOZZ	5310-00-167-1284	88044	AN310-3	.NUT,PLAIN,CASTELLAT.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
352	4A	PAOZZ	5315-00-815-1405	96906	MS24665-151	PIN,COTTER.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
352	5	PAOZZ	1680-00-986-9930	97499	204-001-702-5	.PAD,LEFT HAND.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	6	PAOZZ	1680-00-991-0310	97499	204-001-702-6	.PAD,RIGHT HAND.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	7	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
352	8	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
352	9	PAOZZ	1560-00-981-6988	97499	204-001-705-9	.ARM,PEDAL CONTROL.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
352	10	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE U/O UH-1B PN 204-706-001-9 & -13 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	17
352	11	PAOZZ	5305-00-925-7857	96906	MS27039-1-05	.SCREW,MACHINE U/O UH-1B PN 204-706-001-11,-15,&-21 ....UHB,UHC,UHM	EA	15
352	12	PAOZZ	1680-00-740-6485	97499	204-001-328-43	.BOOT ASSY,CONTROL STICK.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	13	PAOZZ	5306-00-180-0453	88044	AN174-33	BOLT,CLOSE TOLERANC.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	14	PAOZZ	5310-00-844-5081	80205	NAS1197-416	.WASHER,FLAT.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
352	15	PAOZZ	5310-00-961-8390	96906	MS17825-4	NUT,SELF-LOCKING,SL.......UHB	EA	1
352	16	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	17	PAOZZ	1680-00-084-7755	97499	204-001-334-3	.CONTROL ASSY,STICK GRIP U/O PN 204-706-001-13.......UHB	EA	1
352	18	PAOOO	1680-00-075-9377	97499	204-001-334-5	.CONTROL ASSY,STICK GRIP U/O PN 204-706-001-9,-11,-15 AND 205-001-006-3.......UHB,UHE,UHH,UHV,UHX	EA	1
352	19	PAOOO	1680-00-116-5513	97499	204-001-334-13	.CONTROL ASSY,STICK GRIP U/O PN 204-706-001-21 AND 205-001-006-5,-9,-11.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	20	PAOZZ	5306-00-156-2395	88044	AN24-30A	..BOLT,CLEVIS.......UHB,UHC,UHM	EA	1
352	21	PAOZZ	5306-00-151-0532	88044	AN24-30	..BOLT,CLEVIS.......UHE,UHH,UHV,UHX	EA	1
352	22	PAOZZ	5325-00-543-4447	80205	NAS557-8C	..GROMMET,NONMETALLIC.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	23	PAOZZ	5310-00-488-8566	72962	22K2-048	..NUT,SELF-LOCKING,CA.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	24	XAOZZ		97499	204-001-342-7	..STICK,CYCLIC CONTR.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
352	25	PAOZZ	1680-00-633-0878	97499	204-001-338-3	..ELBOW,CYCLIC CONTRO.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
352	26	PAOOO	1560-00-106-4546	97499	205-001-046-1	..GRIP ASSY, CONTROL SEE FIG.355 FOR BREAKDOWN OF PN 205-001-046-1 702-5103 RPLS-- PN 204-001-068-1 NSN 1680-00-914-2653 SEE FIG.353 & 354 FOR BREAKDOWN........UHE,UHH,UHM,UHV,UHX	EA	1
352	27	PAOZZ	5305-00-912-7308	88044	AN525-10R14	..SCREW, MACHINE........UHE,UHH,UHM,UHV,UHX	EA	1
352	28	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	1
352	29	PAOZZ	5340-00-186-3408	88044	AN742D24	..CLAMP,LOOP........UHE,UHH,UHM,UHV,UHX	EA	1
352	30	PAOZZ	5340-00-993-5476	81996	EAB700D23	..CLAMP,LOOP........UHE,UHH,UHM,UHV,UHX	EA	1
352	31	PAOZZ	5340-00-187-6023	96906	MS21122-6	..CLAMP,LOOP........UHE,UHH,UHM,UHV,UHX	EA	1
352	32	PAOZZ	5325-00-276-6228	96906	MS35489-9	..GROMMET,NONMETALLIC........UHE,UHH,UHV,UHX	EA	1
352	33	PBOZZ	5935-00-259-9775	88044	AN3108B-20-27P	..CONNECTOR,PLUG,ELEC USE WITH PN 205-001-006-5 CONTROL INSTALLATION........UHE,UHH,UHM,UHV,UHX	EA	1
352	33A	PBOZZ	5935-00-255-7999	77820	PT06E20-27P	..CONNECTOR,PLUG,ELEC USE WITH PN 205-001-009,-11 CONTROL INSTALLATION........UHE,UHH,UHM,UHV,UHX	EA	1
352	34	PAOZZ	5935-00-223-0572	96906	MS3057-12A	..ADAPTER,CABLE CLAMP........UHE,UHH,UHM,UHV,UHX	EA	1
352	35	MOOZZ	1560-00-888-1097	97499	85T4-8-2	..TUBE,INSULATION........UHE,UHH,UHM,UHV,UHX	EA	1
352	36	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	1
352	37	MOOZZ	5325-00-282-2134	88044	AN931-5S9	.GROMMET,RUBBER........UHE,UHH,UHM,UHV,UHX	EA	1
352	39	PAOOO	5355-00-979-8943	97499	204-001-852-1	.KNOB ASSEMBLY........UHE,UHH,UHM,UHV,UHX	EA	1
352	40	XAOZZ		97499	204-001-851-1	..KNOB-SHAFT ASSY........UHE,UHH,UHM,UHV,UHX	EA	1
352	44	XDOZZ	5360-00-854-2335	97499	204-001-853-1	..SPRING,HELICAL,COMP........UHE,UHH,UHM,UHV,UHX	EA	1
352	45	XAOZZ		94799	204-001-850-1	..COLLAR........UHE,UHH,UHM,UHV,UHX	EA	1
352	47	PBOZZ	5315-00-811-1233	96906	MS20392-2C25	..PIN,STRAIGHT,HEA........UHE,UHH,UHM,UHV,UHX	EA	1
352	48	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT........UHE,UHH,UHM,UHV,UHX	EA	2
352	48A	PAOZZ	5315-00-815-1405	96906	MS24665-151	..COTTER PIN........UHE,UHH,UHM,UHV,UHX	EA	1
352	49	PAOZZ	1680-00-876-8760	97499	204-001-268-17	.BOOT ASSEMBLY........UHE,UHH,UHM,UHV,UHX	EA	1
352	50	PAOZZ	5306-00-180-2708	88044	AN4H25	.BOLT,MACHINE........UHE,UHH,UHM,UHV,UHX	EA	2
352	51	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE........UHM	EA	2
352	52	PAOOO	1680-00-133-6205	97499	205-001-116-1	.CONTROL STICK, THROTTLE SEE FIG.357 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1

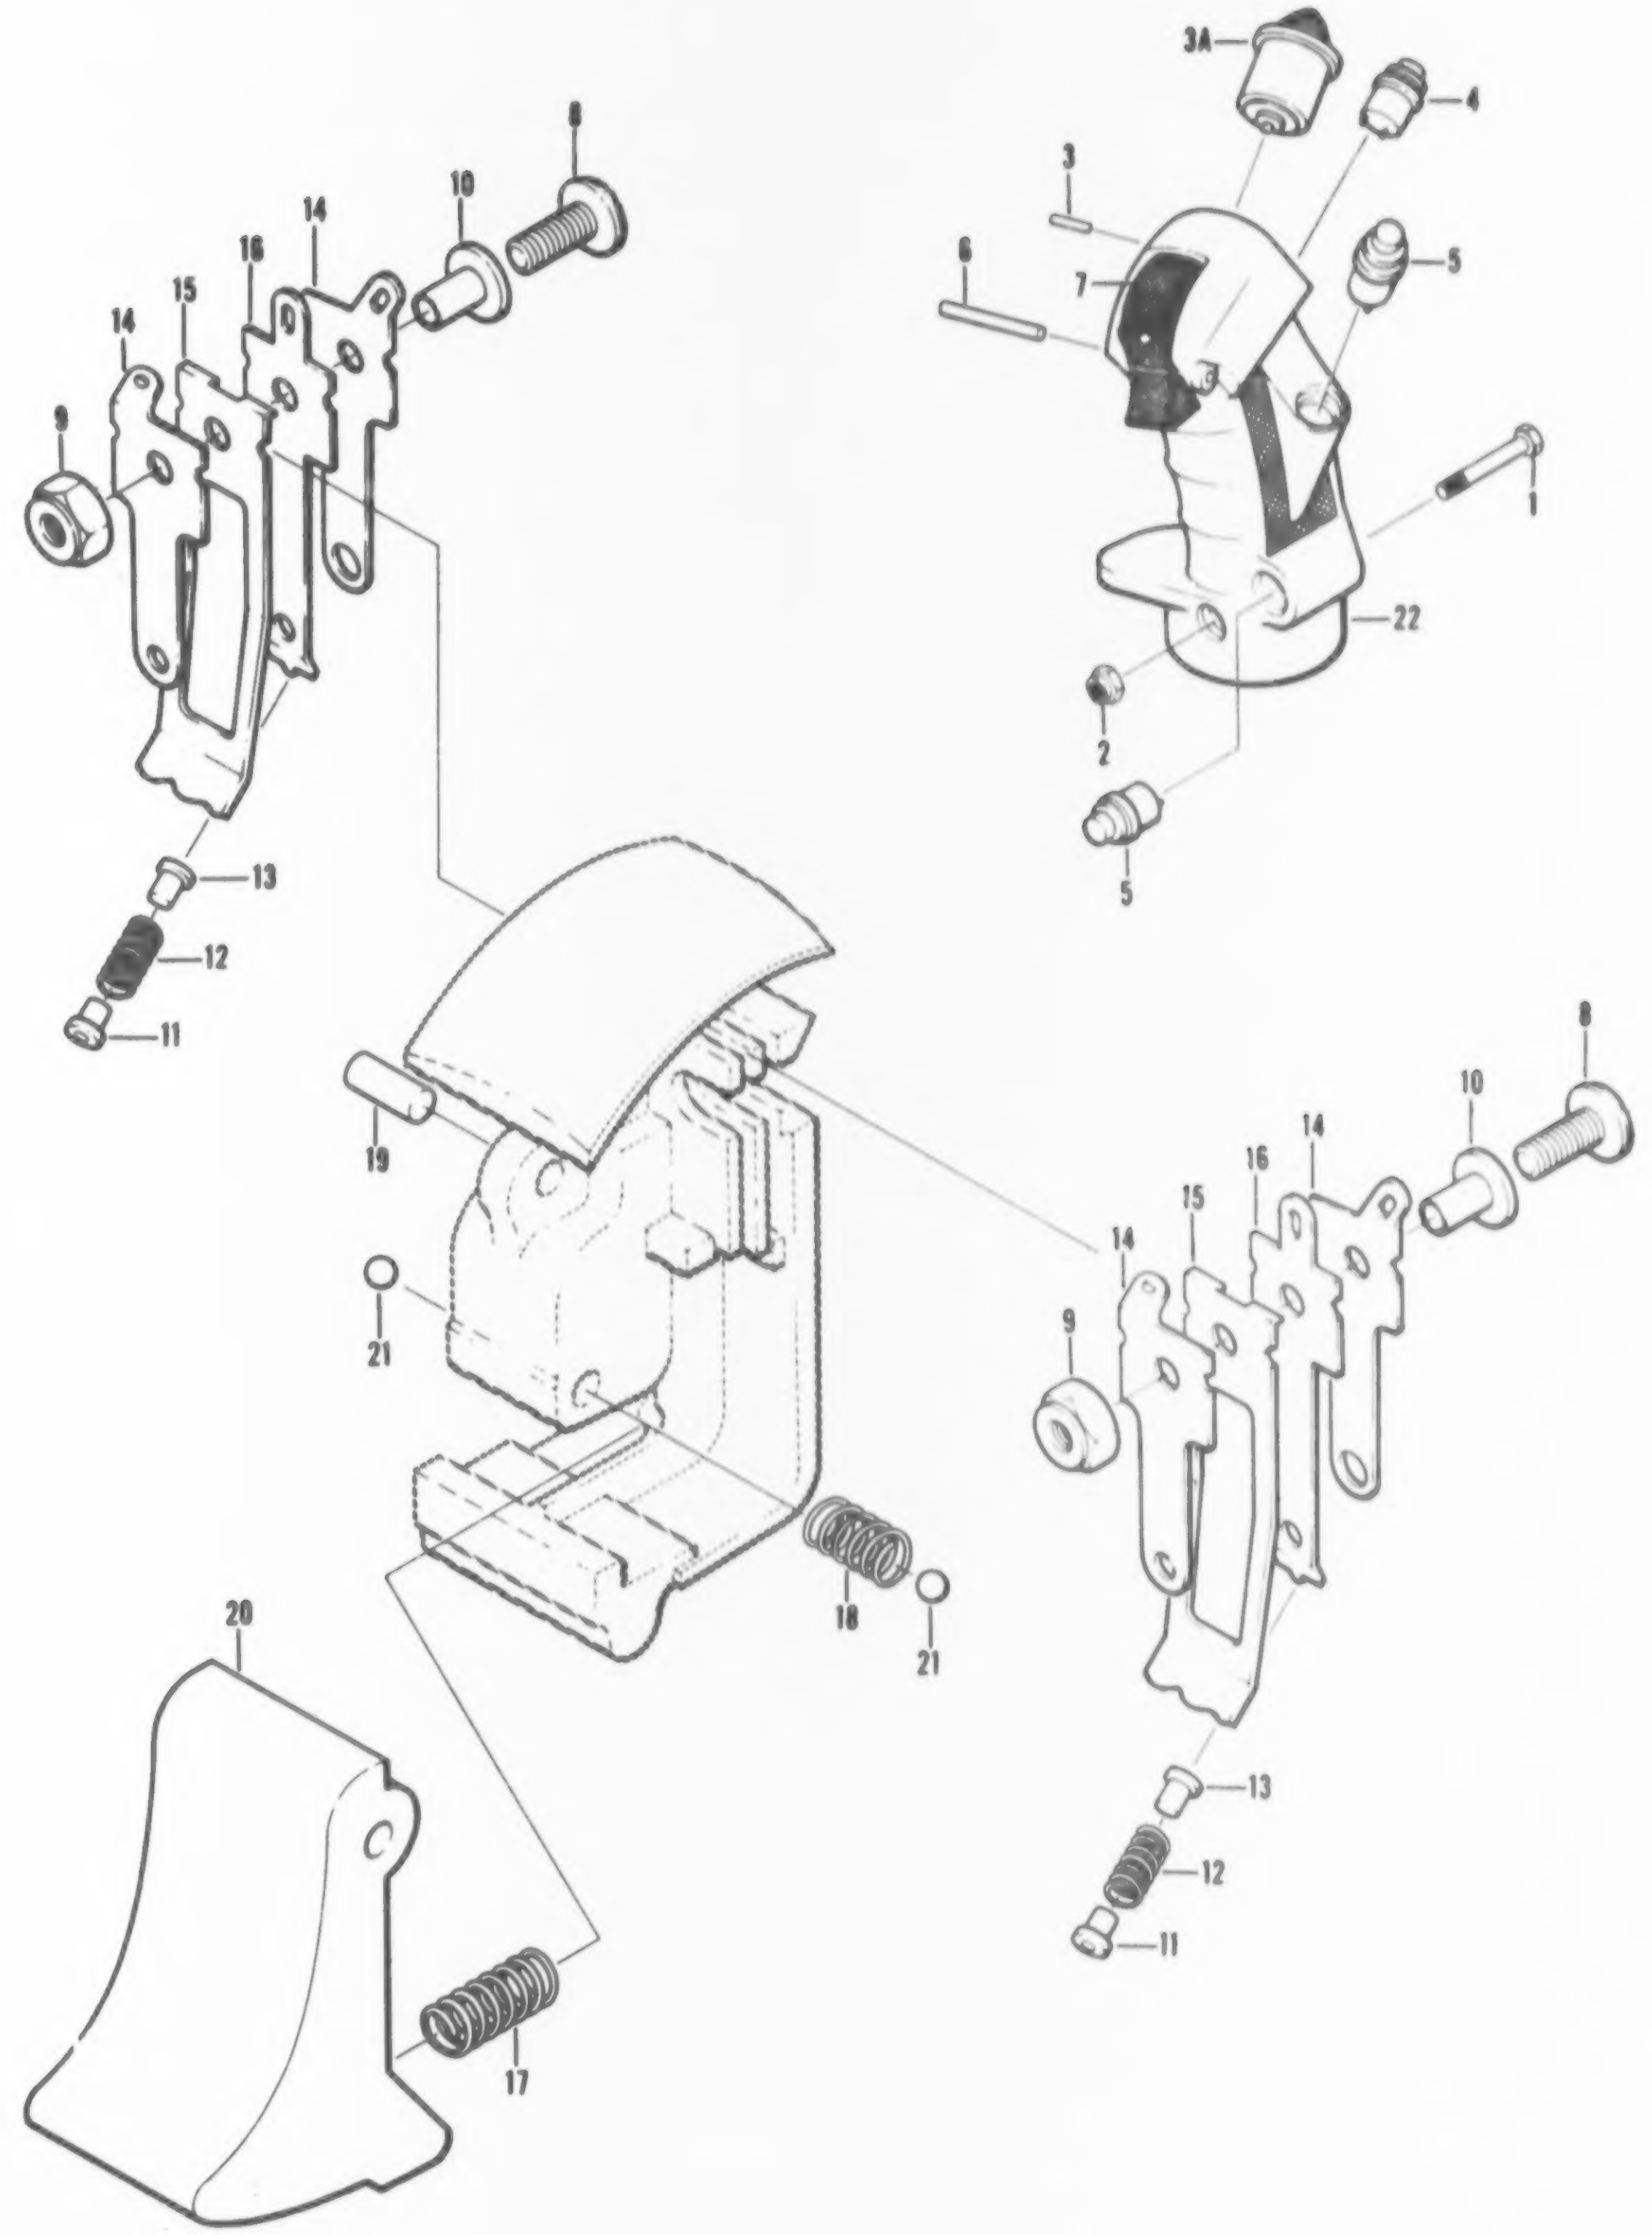
3A
4
8
3
10
14
16
14
15
6
5
7
14
9
1
22
2
5
13
12
11
8
19
10
14
16
15
14
21
9
18
21
20
13
12
11
17

Figure 355. Grip Assembly, control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
355		PAOOO	1560-00-106-4546	97499	205-001-046-1	GRIP ASSY,CONTROL BREAKDOWN FOR PN 205-001-046-1 702-5103 SEE FIG 352 FOR NHA UHE,UHH,UHM,UHV,UHX	EA	1
355	1	PAOZZ	5305-00-655-6556	96906	MS35266-70	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	1
355	2	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	1
355	3	PAOZZ	5315-00-169-5089	81579	STD870-5	.PIN,STRAIGHT,HEADLE UHE,UHH,UHM,UHV,UHX	EA	1
355	3A	PBOZZ	5930-00-013-9136	96906	MS27708-3	.SWITCH,TOGGLE UHE,UHH,UHM,UHV,UHX	EA	1
355	4	PAOZZ	5930-00-687-1973	96906	MS25089-5AR	.SWITCH,PUSH UHE,UHH,UHM,UHV,UHX	EA	1
355	5	PAOZZ	5930-00-823-2115	96906	MS25089-4AR	.SWITCH,PUSH UHE,UHH,UHM,UHV,UHX	EA	2
355	6	PAOZZ	5315-00-148-3580	81579	10-279-1	.PIN,STRAIGHT,HEADLE UHE,UHH,UHM,UHV,UHX	EA	1
355	7	PAOOO	5930-01-036-6671	81579	406-1300	.SWITCH TRIGGER UHE,UHH,UHM,UHV,UHX	EA	1
355	8	XDOZZ		81579	STD854-7	..SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	2
355	9	PBOZZ	5310-00-175-3492	81579	STD887-5	..NUT,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	2
355	10	PBOZZ	5970-00-172-9067	81579	406-206-1	..INSULATOR,BUSHING UHE,UHH,UHM,UHV,UHX	EA	2
355	11	PBOZZ	3120-00-244-2735	81579	406-203-1	..BUSHING,SLEEVE UHE,UHH,UHM,UHV,UHX	EA	2
355	12	PAOZZ	5360-00-175-5003	81579	STD405-13	..SPRING,HELICAL,COMP UHE,UHH,UHM,UHV,UHX	EA	2
355	13	PBOZZ	5325-00-175-3578	81579	STD890-7	..EYELET,METALLIC UHE,UHH,UHM,UHV,UHX	EA	2
355	14	XBOZZ		81579	406-029-1	..CONTACT,BUSS BAR UHE,UHH,UHM,UHV,UHX	EA	4
355	15	XBOZZ		81579	406-249-2	..SPRING,ACTUATOR UHE,UHH,UHM,UHV,UHX	EA	2
355	16	PBOZZ	5999-00-173-2302	81579	406-029-2	..CONTACT,ELECTRICAL UHE,UHH,UHM,UHV,UHX	EA	2
355	17	PAOZZ	5360-00-175-3270	81579	STD405-14	..SPRING,HELICAL,COMP UHE,UHH,UHM,UHV,UHX	EA	1
355	18	PBOZZ	5360-00-175-3269	81579	STD405-15	..SPRING,HELICAL,COMP UHE,UHH,UHM,UHV,UHX	EA	1
355	19	XDOZZ	5325-00-175-3579	81579	STD890-8	..EYELET UHE,UHH,UHM,UHV,UHX	EA	1
355	20	PAOZZ	5930-00-176-0193	81579	406-223-1	..ACTUATOR, MOLDED PL SWITCH,TRIGGER UHE,UHH,UHM,UHV,UHX	EA	1
355	21	PBOZZ	3110-00-142-0146	19315	B04 1-2SS	..BALL,BEARING UHE,UHH,UHM,UHV,UHX	EA	2
355	22	XAOZZ		81579	702-040-3	.GRIP,MOLDED UHE,UHH,UHM,UHV,UHX	EA	1

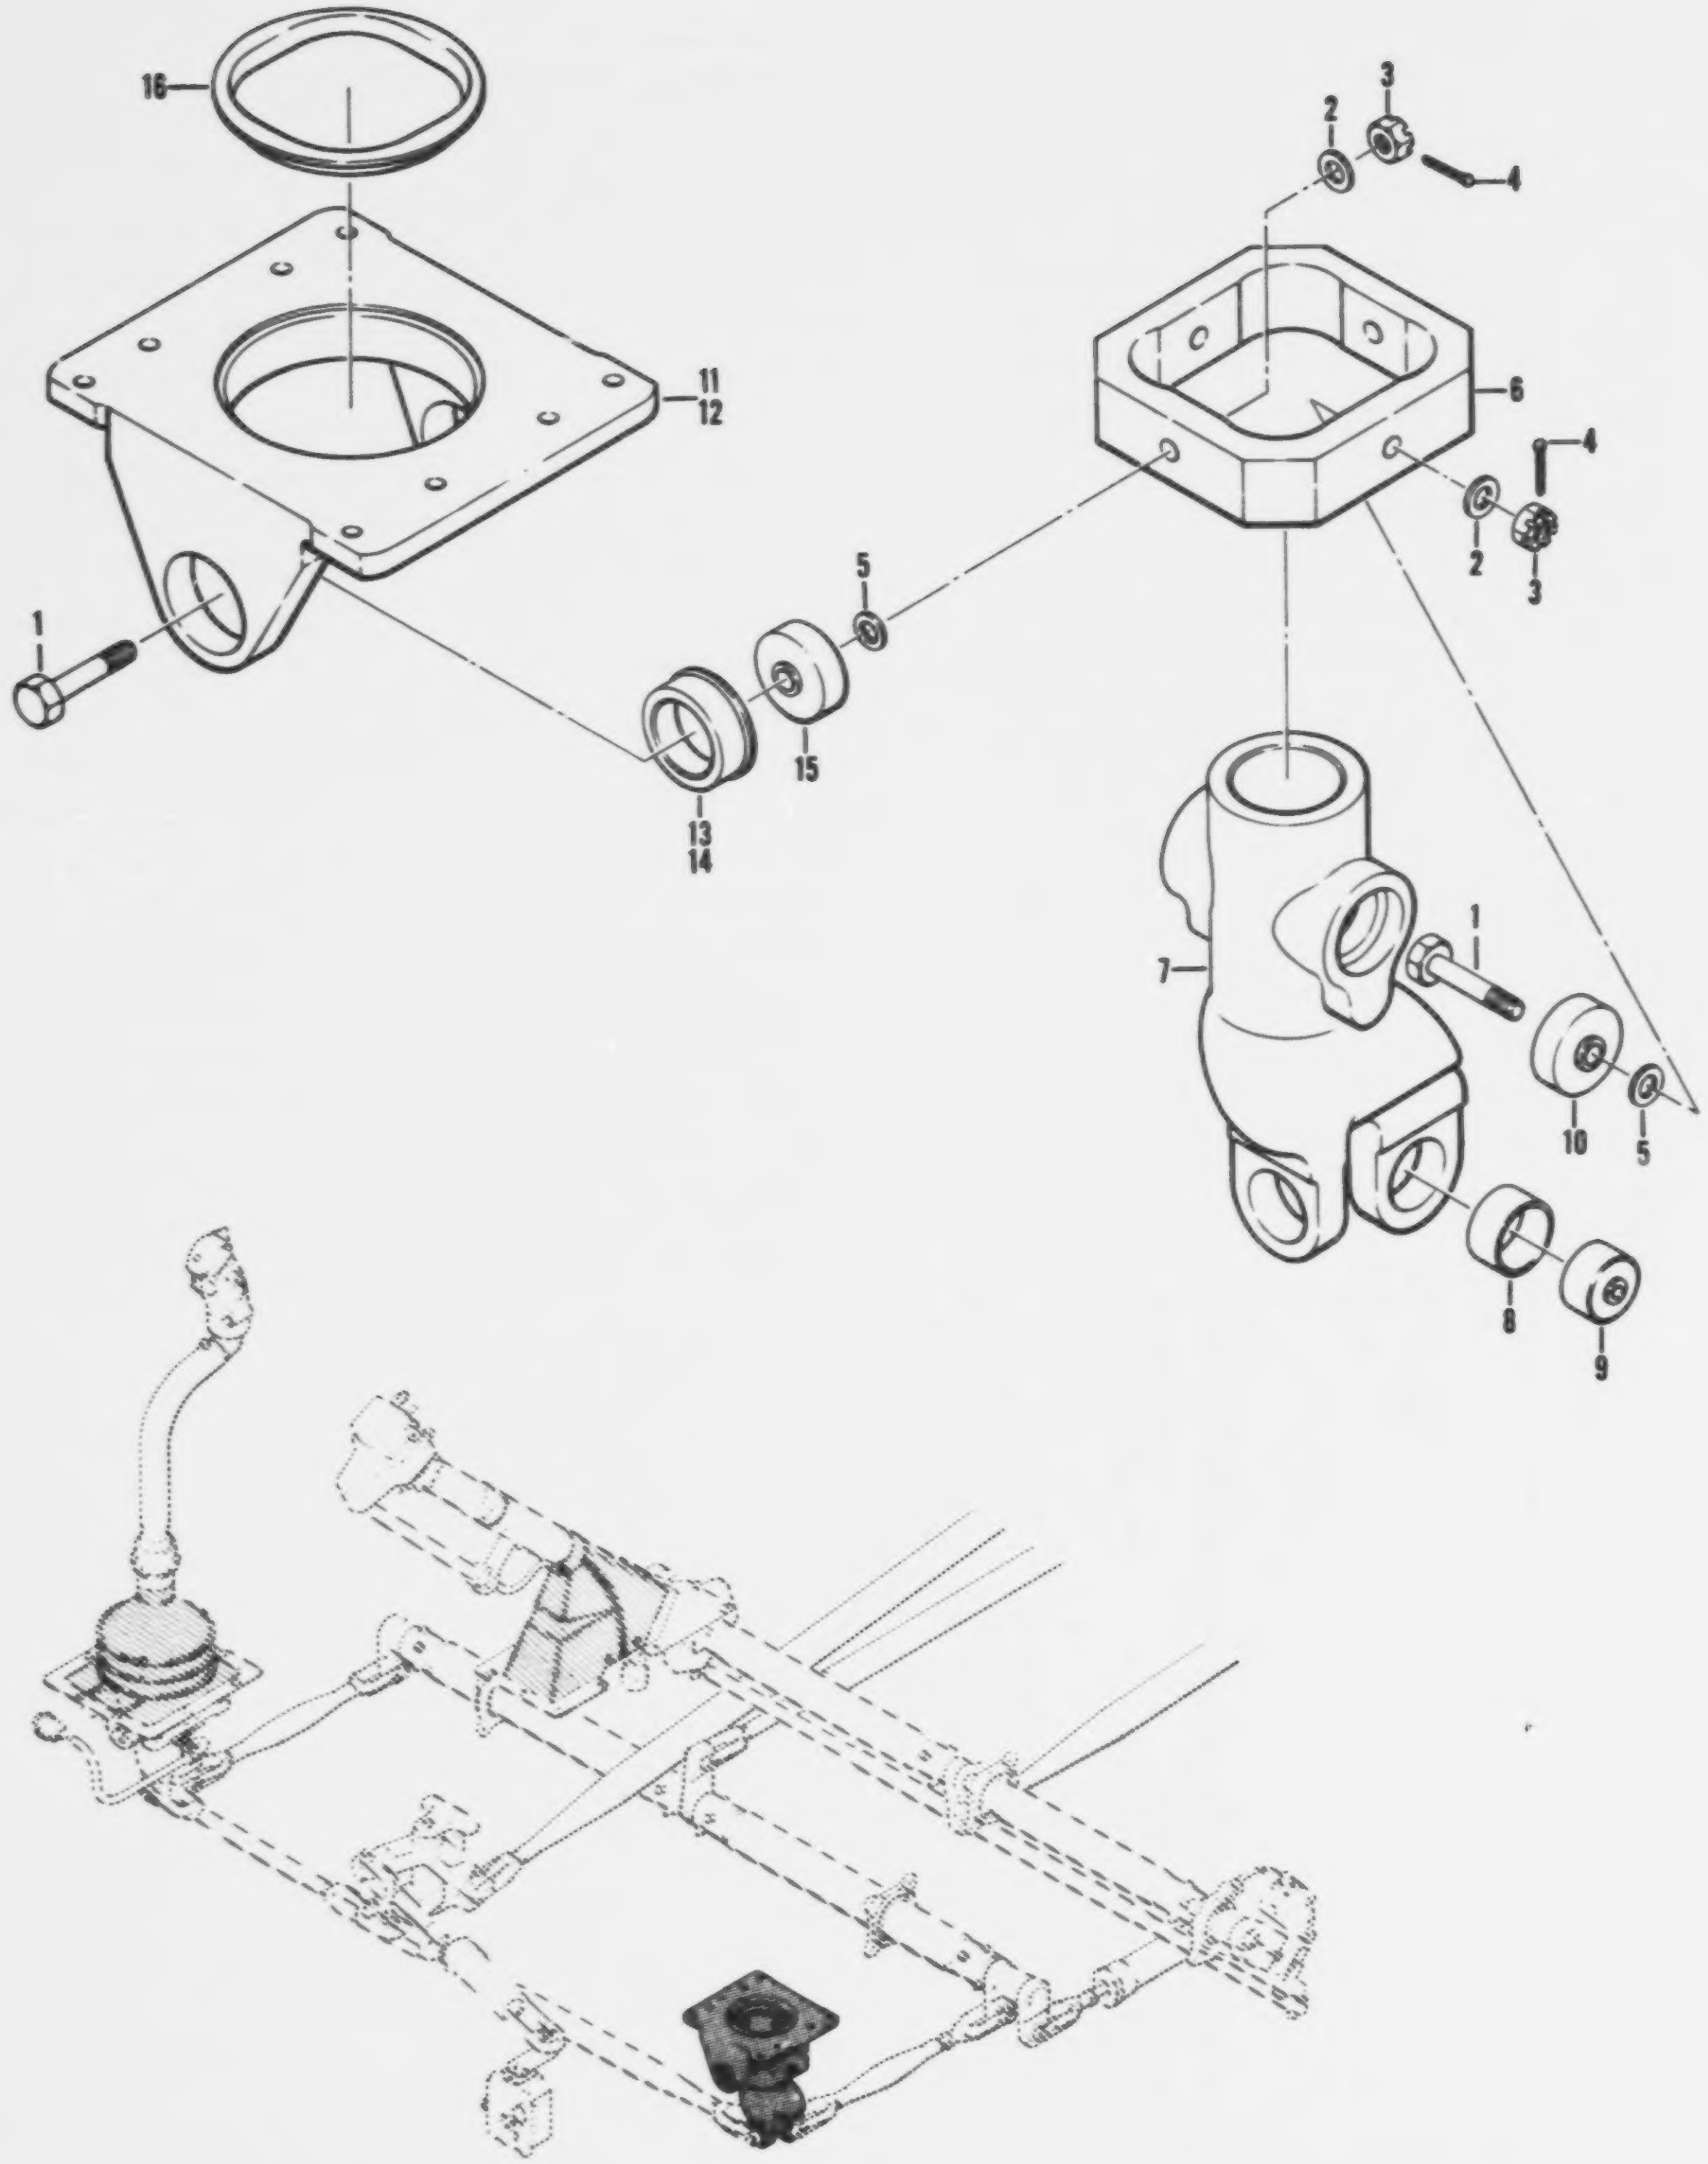
16
3
2
4
11
12
6
4
2
3
5
1
15
13
14
1
7
10
5
8
9

Figure 356. Support and Lever Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
356		PA000	1560-00-670-7609	97499	204-001-336-3	SUPPORT ASSY, CYCLIC STICK SEE FIG.358 FOR NHA ....UHB,UHE,UHH,UHV,UHX	EA	1
356		PA000	1560-00-872-1158	97499	204-001-336-5	SUPPORT ASSY, CYCLIC STICK SEE FIG.358 FOR NHA......UHC,UHM	EA	1
356	1	PAOZZ	5306-00-292-5102	80205	NAS464-5-17	.BOLT,SHEAR..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
356	2	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
356	3	PAOZZ	5310-00-176-8109	88044	AN320-5	.NUT,PLAIN,SLOTTED..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
356	4	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
356	5	PAOZZ	5365-00-678-6407	97499	120-034-14-10	.SHIM..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
356	6	PAOZZ	1560-00-991-0322	97499	204-001-337-3	.BRACKET,GIMBAL ARM..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
356	7	XBOOZ	1680-00-847-7438	97499	204-001-387-1	.LEVER ASSY,CYCLIC..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
356	8	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
356	9	PAOZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
356	10	PAOZZ	3110-00-023-7007	96906	MS27640-5	.BEARING,BALL..................UHB,UHC,UHH,UHM,UHV	EA	2
356	11	PA000	1560-00-624-5130	97499	204-001-333-1	.SUPPORT ASSY,CYCLIC U/O PN 204-001-336-3 ....UHB,UHE,UHH,UHV,UHX	EA	1
356	12	PB000	1680-00-913-4056	97499	204-001-333-5	.SUPPORT ASSY,CYCLIC U/O PN 204-001-336-5............UHC,UHM	EA	1
356	13	PAOZZ	3130-00-633-0797	97499	204-001-345-1	..LINER,BEARING..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
356	14	PAOZZ	3130-00-633-0797	16461	500830	..LINER,BEARING..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
356	15	PAOZZ	3110-00-023-7007	96906	MS27640-5	..BEARING,BALL..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
356	16	PAOZZ	1560-00-670-7607	97499	204-001-346-1	..RING,DUST BOOT..................UHB,UHE,UHH,UHV,UHX	EA	1

best copy available

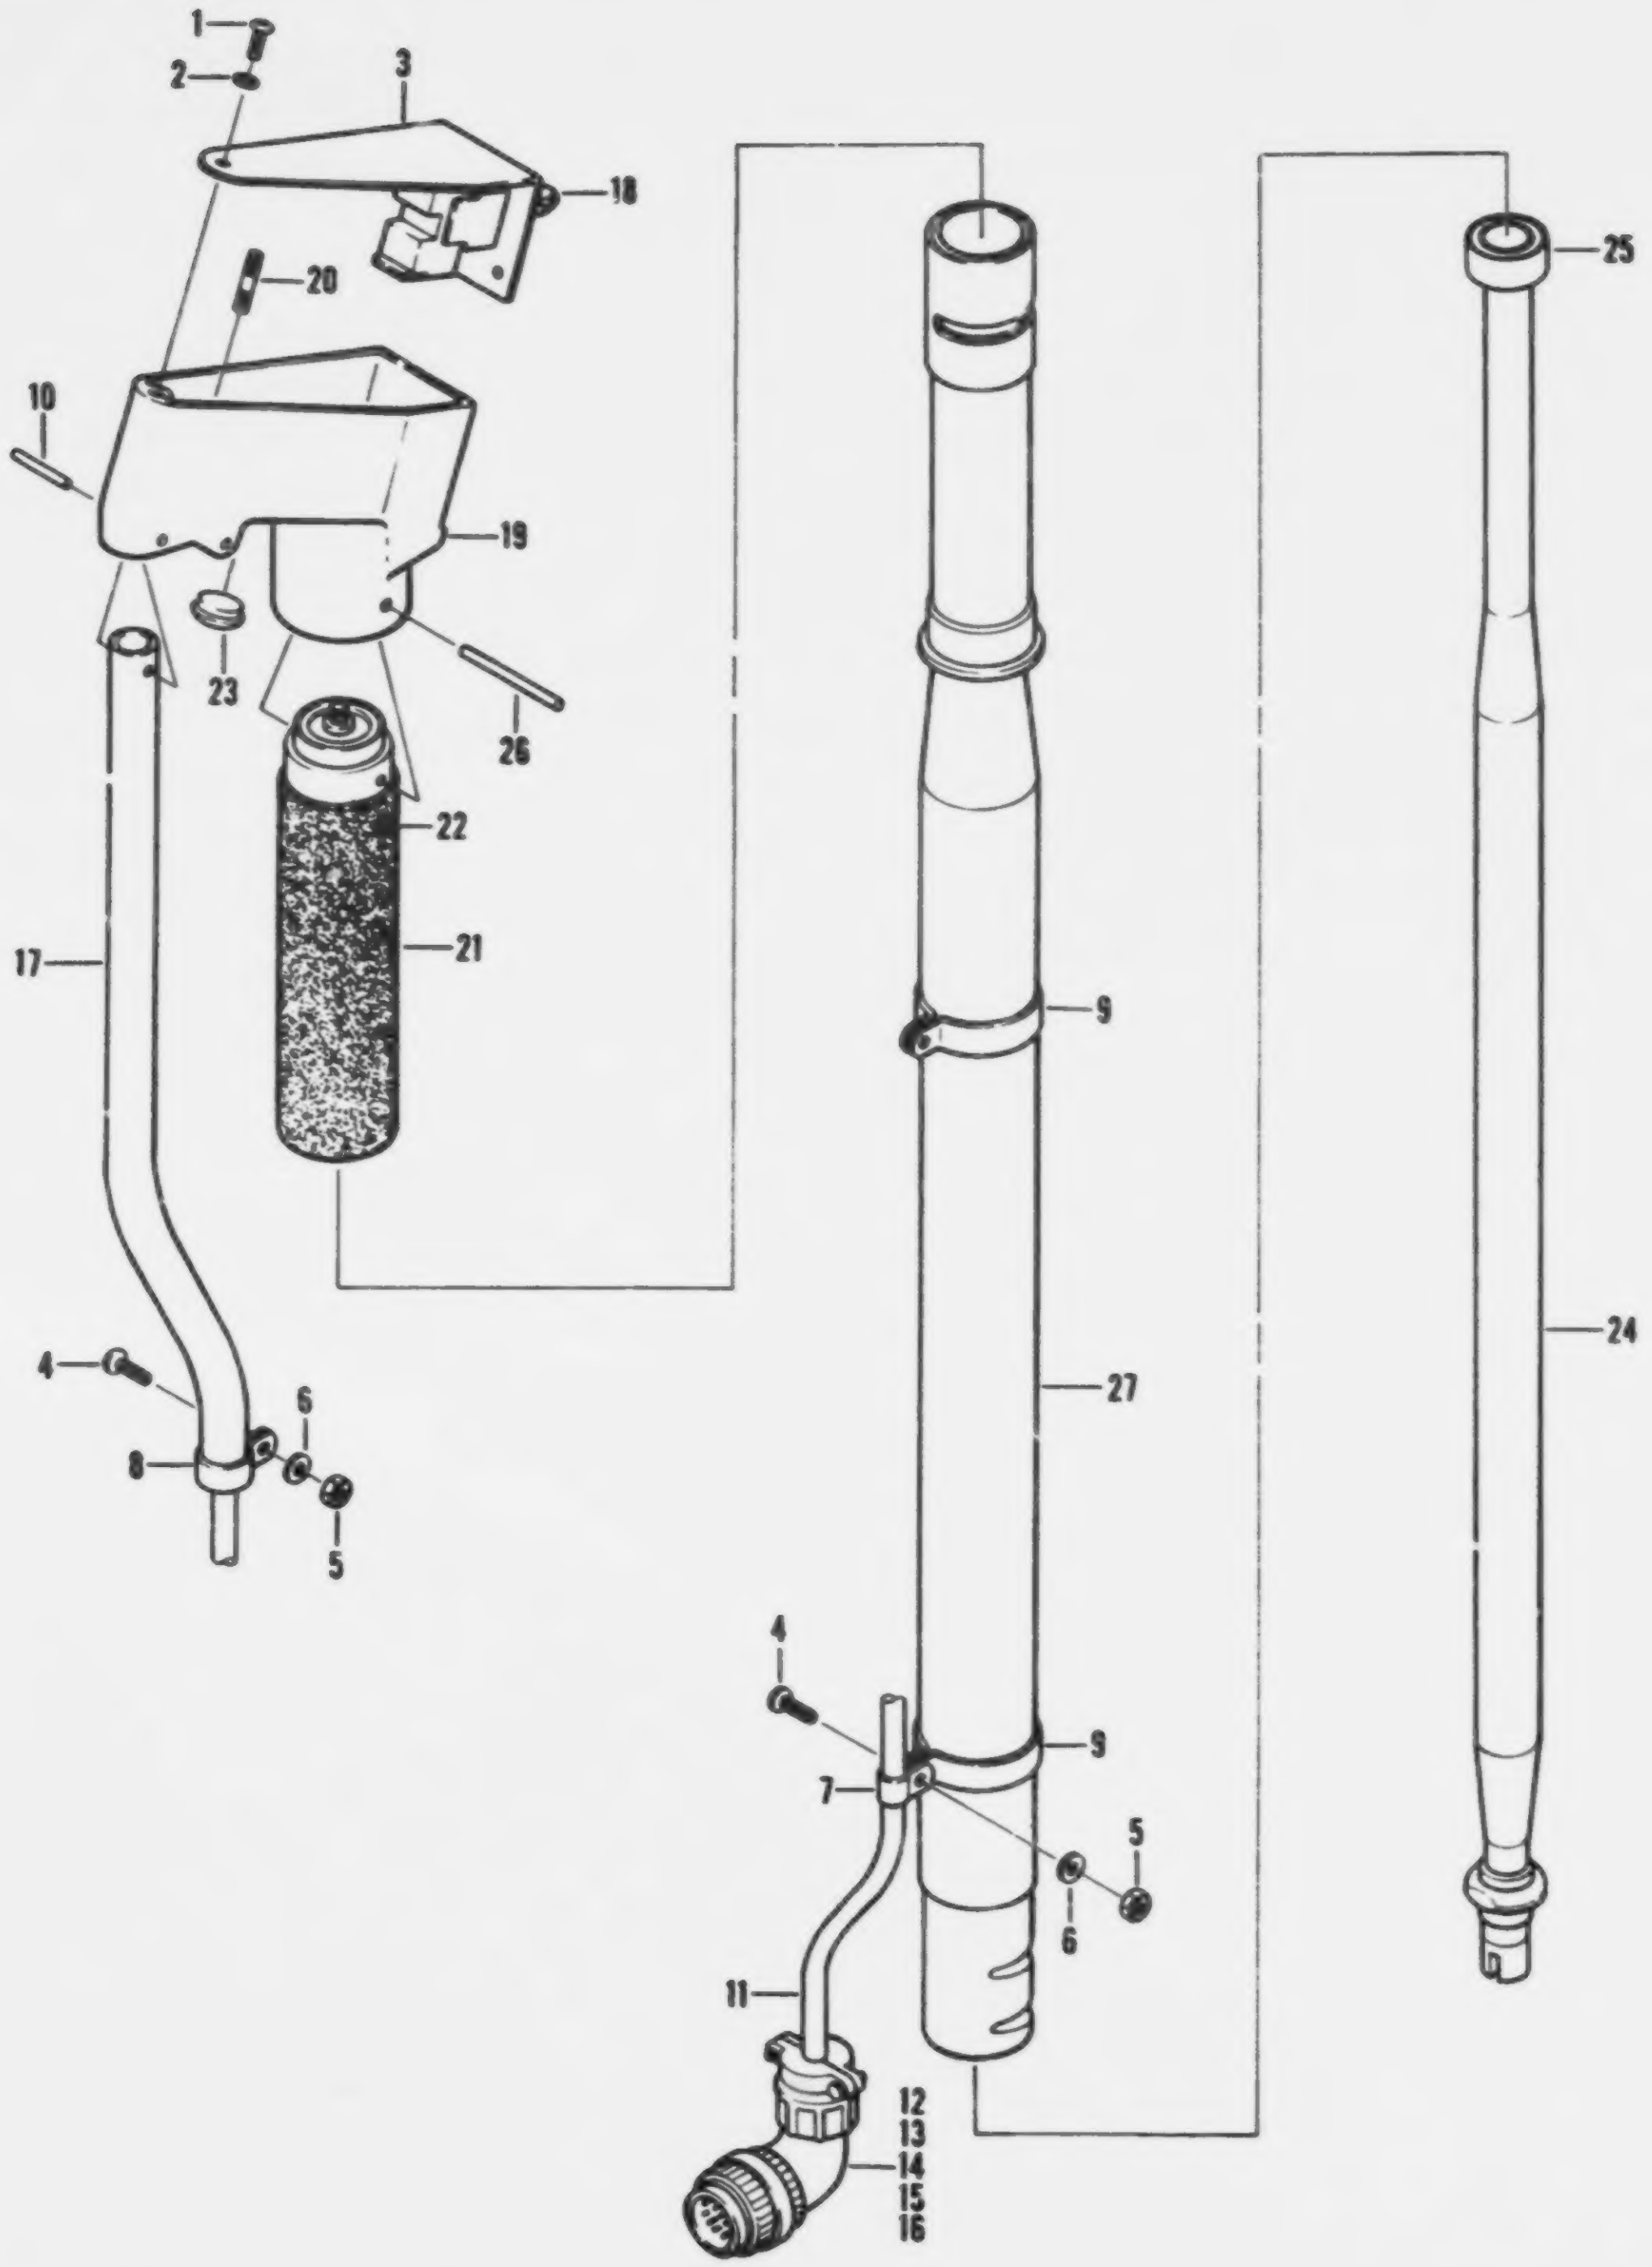
1
2
3
18
20
10
19
23
26
22
21
17
4
6
8
5
25
9
27
24
4
9
7
5
6
11
12
13
14
15
16

Figure 357. Stick Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
357		PA000	1680-00-133-6205	97499	205-001-116-1	CONTROL STICK, THROTTLE SEE FIG.352 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	1	PBOZZ	5305-00-889-3002	96906	MS35206-242	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
357	2	PAOZZ	5310-00-184-8956	88044	AN960PD8	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
357	3	PBOZZ	1680-00-133-7081	97499	205-001-125-1	.COVER,CONTROL BOX...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	4	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
357	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
357	6	PAOZZ	5310-00-183-4405	88044	AN960PD10	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
357	7	PAOZZ	5340-00-205-6301	96906	MS21919DG4	.CLAMP,LOOP......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	8	PAOZZ	5340-00-193-0116	88044	AN735D8	.CLAMP,LOOP......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	9	PAOZZ	5340-00-193-0130	88044	AN735D20	.CLAMP,LOOP......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
357	10	PBOZZ	5315-00-558-2732	96906	MS171501	.PIN,SPRING......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	11	AOOOZ	1680-00-133-7402	97499	204-075-421-15	.WIRING ASSY,CONTROL.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	12	PAOZZ	5935-01-031-0701	96906	MS3418-18N	..CLAMP,CABLE,ELECT...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	13	PAOZZ	5935-00-548-0952	96906	MS3456W18-1P	..CONNECTOR,PLUG,ELEC.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	14	XDOZZ	5970-00-772-5671	97499	85T4-7-2	..INSULATION TUBE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	6
357	15	MOOZZ		97499	85T4-4-34	..INSULATION SLEEVING.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	1
357	16	PAOZZ	5365-00-598-5416	96906	MS3420-12	..BUSHING,RUBBER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	17	PAOZZ	1680-00-133-6208	97499	205-001-120-1	.TUBE ASSY,CONTROL STICK.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	18	PAOZZ	5930-00-796-4343	91929	13AT66	.SWITCH,TOGGLE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	19	PA000	1680-00-133-7082	97499	205-001-124-1	.SWITCH BOX ASSY.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	20	PAOZZ	5340-00-721-7906	96906	MS122199	..INSERT,SCREW THREAD.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
357	21	PA000	1680-00-133-6209	97499	205-001-119-1	.GRIP ASSY,CYCLIC STICK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	22	PBOZZ	5305-00-177-5535	97499	205-001-121-1	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	23	PAOZZ	6685-00-248-6891	28520	P500	.PLUG BUTTON..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	24	PAOZZ	1680-00-133-6207	97499	205-001-122-1	.TUBE ASSY,CONTROL STICK.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	25	XAOZZ		97499	205-001-123-1	..PLUG............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	26	PAOZZ	5315-00-814-4456	96906	MS171538	.PIN..................................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
357	27	PA000	1680-00-133-6206	97499	205-001-117-1	.CONTROL STICK,ACFT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

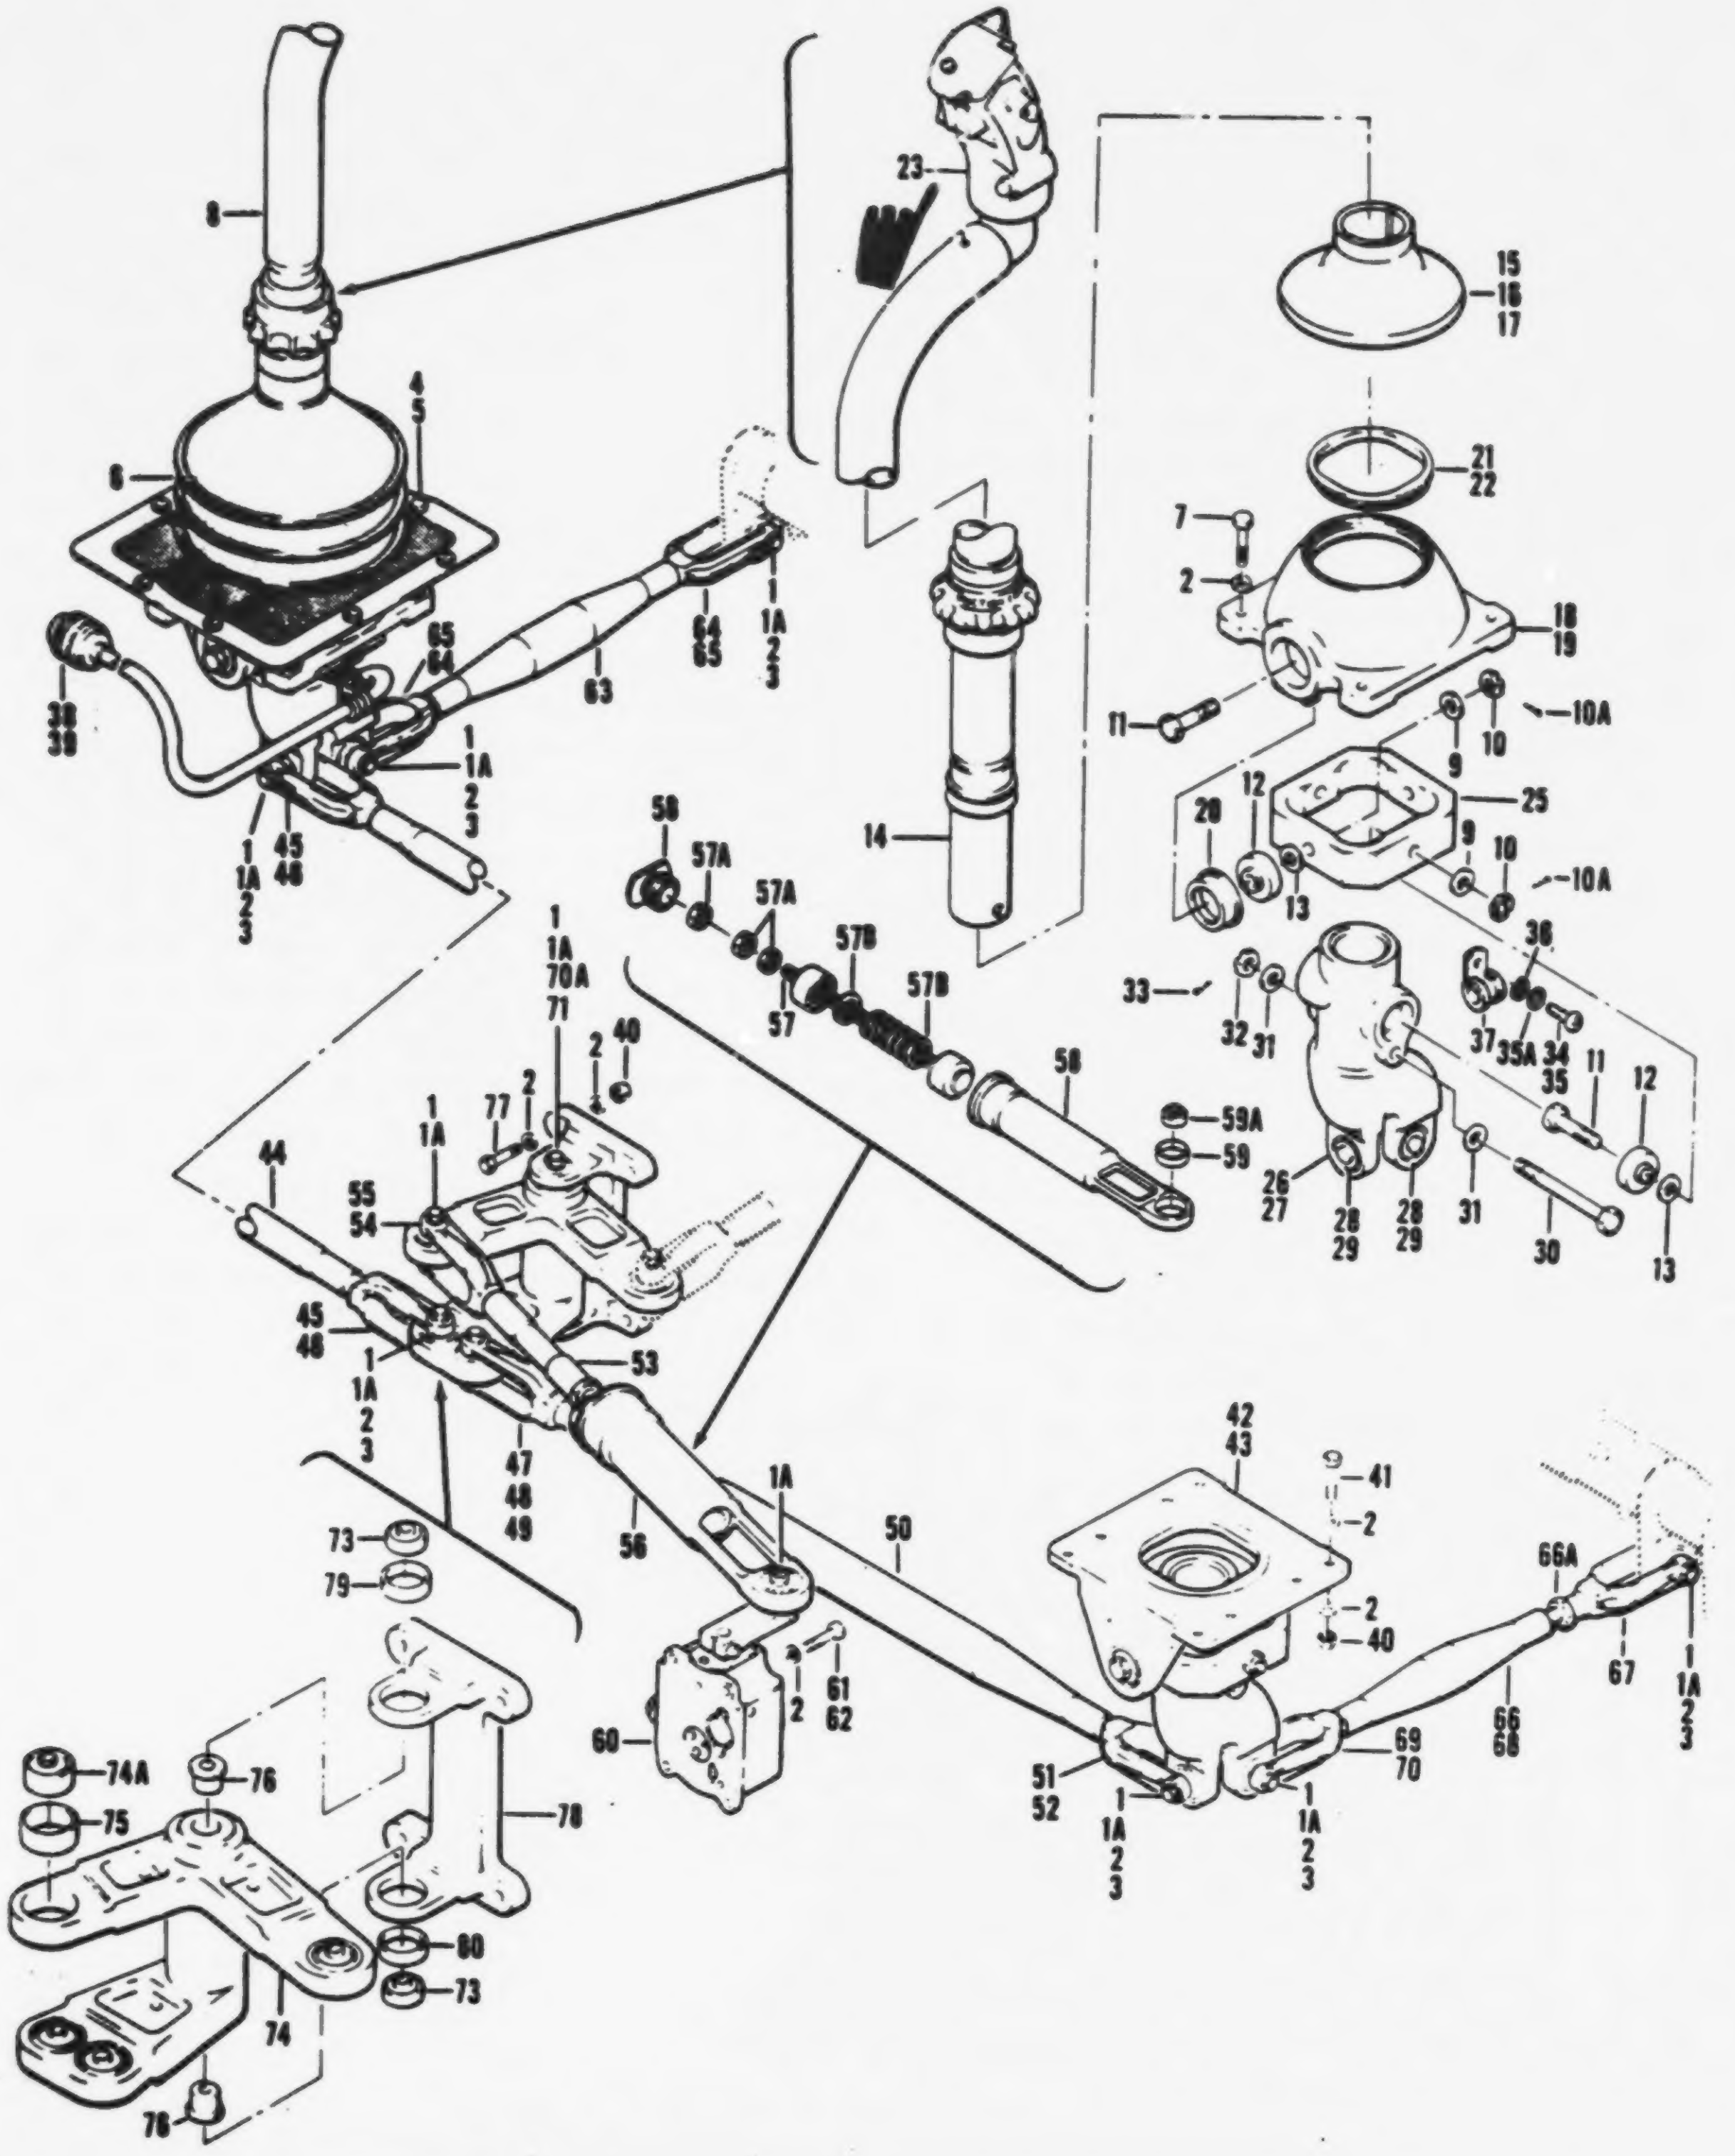
8
4
5
6
23
15
16
17
21
22
7
2
18
19
11
9
10
10A
25
20
12
13
38
39
65
64
64
65
1
1A
2
3
63
1
1A
2
3
45
46
58
57A
57A
57B
57B
57
14
36
33
32
31
37
35A
34
35
11
12
59A
59
58
26
27
28
29
28
29
31
30
13
1
1A
70A
71
2
40
77
2
44
55
54
53
47
48
49
56
1A
50
42
43
9
41
2
2
40
66A
67
66
68
73
79
60
61
62
51
52
69
70
74A
76
75
78
80
73
74
76

Figure 358. Control Installation, Fore and Aft and Lateral Cyclic

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
356		XCFZZ		97499	204-001-077-1	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA....................UHM	EA	1
358		XCFZZ		97499	204-001-077-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA........................UHM	EA	1
358		XCFZZ		97499	205-001-004-3	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
358		XCFZZ		97499	205-001-004-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
358		XCFZZ		97499	205-001-004-7	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-12956 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
358		XCFZZ		97499	205-001-004-9	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
358		XCFZZ		97499	205-001-004-11	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-746 THRU 67-17778 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
358		XCFZZ		97499	205-001-004-19	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15214 THRU 68-15324 SEE FIG.7 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
358		XCFZZ		97499	205-001-004-15	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15325 AND SUBSEQUENT SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
358	1	PAOZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING,SL......................UHE,UHH,UHM,UHV,UHX	EA	10
358	1A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER...............................UHE,UHH,UHM,UHV,UHX	EA	10
358	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT 93 U/O PN 204-001-062-1,-3,-5,-9,-11,-15,93 U/O PN 205-001-004-3,-5,-7,-9,-11,-15,-19,71 U/O PN 204-001-077,-1,-5.....................................UHE,UHH,UHM,UHV,UHX	EA	16
358	3	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER.........................UHE,UHH,UHM,UHV,UHX	EA	9
358	4	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE............................UHE,UHH,UHM,UHV,UHX	EA	8
358	5	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..............................UHE,UHH,UHM,UHV,UHX	EA	8
358	6	PAOZZ	1680-00-740-6485	97499	204-001-328-47	.BOOT,DUST AND MOIST......................UHE,UHH,UHM,UHV,UHX	EA	1
358	7	XDOZZ	5306-00-292-8285	88044	AN174H10A	.BOLT,CLOSE TOLERANC......................UHE,UHH,UHM,UHV,UHX	EA	4
358	8	AOOOZ	1680-00-133-7042	97499	204-001-363-17	.CONTROL STICK,ASSY U/O PN 204-001-062-1,-3,-9,-11,-15,PN 205-001-004-3,-5,-7,-9,-11,-15,-19...........UHE,UHH,UHV,UHX	EA	1
358	8	AOOOO		97499	204-001-363-11	.CYCLIC STICK ASSY U/O PN 204-001-077-1,-5...............UHM	EA	1
358	9	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT.............................UHE,UHH,UHM,UHV,UHX	EA	4
358	10	PAOZZ	5310-00-176-8109	88044	AN320-5	..NUT,PLAIN,SLOTTED H.....................UHE,UHH,UHM,UHV,UHX	EA	4
358	10A	PAOZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER..............................UHE,UHH,UHM,UHV,UHX	EA	4
358	11	PAOZZ	5306-00-292-5102	80205	NAS464-5-17	..BOLT,SHEAR..............................UHE,UHH,UHM,UHV,UHX	EA	4
358	12	PAOZZ	3110-00-023-70[illegible]7	96906	MS27640-5	..BEARING,BALL,AIRFRA.....................UHE,UHH,UHM,UHV,UHX	EA	2
358	13	PAOZZ	5365-00-678-5407	97499	120-034-14-10	..SHIM....................................UHE,UHH,UHM,UHV,UHX	EA	4
358	14	PAOOO	1680-00-731-8109	97499	204-001-364-1	..STICK ASSEMBLY..........................UHE,UHH,UHM,UHV,UHX	EA	1
358	15	PAOOO	1680-00-829-8022	97499	204-001-367-1	...SLEEVE,CYLIC STICK.....................UHE,UHH,UHM,UHV,UHX	EA	1
358	16	PAOOO	1680-00-829-7863	37499	204-001-366-1	....BELL,CYCLIC STICK.....................UHE,UHH,UHM,UHV,UHX	EA	1
358	17	PAOZZ	1680-00-089-8234	97499	204-001-366-5	.....LINEAR,CYCLIC FRICT..................UHE,UHH,UHM,UHV,UHX	EA	1
358	18	PAOOO	1680-00-847-7440	97499	204-001-362-1	..SUPPORT,CYCLIC STIC STICK U/O PN 204-001-363-3,-17 ....UHE,UHH,UHV,UHX	EA	1
358	19	PBOOO	1680-00-913-4057	97499	204-001-362-5	..SUPPORT,CYCLIC STIC STICK U/O PN 204-001-363-11........UHM	EA	1
358	20	PAOZZ	3130-00-633-0797	97499	204-001-345-1	...BUSHING,SLEEVE.........................UHE,UHH,UHM,UHV,UHX	EA	2
358	20	PAOZZ	3130-00-633-0797	16461	500830	...BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV	EA	2
358	21	PAOZZ	1560-00-670-7607	97499	204-001-346-1	...RING,DUST BOOT SUPPORT U/O PN 204-001-362-1 ....UHE,UHH,UHV,UHX	EA	1
358	22	PAOZZ	5310-00-872-1281	97499	540-001-304-1	...WASHER,SHOULDERED U/O PN 204-001-362-5................UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
358	23	PAOOO	1560-00-106-4546	97499	205-001-046-1	..GRIP ASSY,CONTROL U/O PN 204-001-363-11,-17 ....UHE,UHH,UHM,UHV,UHX	EA	1
358	25	PAOZZ	1560-00-991-0322	97499	204-001-337-3	..BRACKET,GIMBAL ARM..........UHE,UHH,UHM,UHV,UHX	EA	1
358	26	PAOOO	1680-00-847-7439	97499	204-001-357-5	..LEVER ASSY,CYCLIC..........UHE,UHH,UHM,UHV,UHX	EA	1
358	27	XAOZZ		97499	204-001-357-7	...LEVER ASSY..........UHE,UHH,UHM,UHV,UHX	EA	1
358	28	PAOZZ	3110-00-042-1045	96906	MS27643-4	...BEARING,BALL,AIRFRA..........UHE,UHH,UHM,UHV,UHX	EA	2
358	29	PAOZZ	3120-00-624-5248	97499	120-013-4A	...BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	30	PAOZZ	5306-00-180-0453	88044	AN174-33	..BOLT,CLOSE TOLERANC..........UHE,UHH,UHM,UHV,UHX	EA	1
358	31	PAOZZ	5310-00-844-5081	80205	NAS1197-416	..WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	2
358	32	PAOZZ	5310-00-961-8390	96906	MS17825-4	..NUT,SELF-LOCKING,SL..........UHE,UHH,UHM,UHV,UHX	EA	9
358	33	PAOZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER..........UHE,UHH,UHM,UHV,UHX	EA	1
358	34	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	1
358	35	PAOZZ	5306-00-182-2056	88044	AN3H3A	..BOLT,MACHINE..........UHE,UHH,UHM,UHV,UHX	EA	1
358	35A	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	1
358	36	PAOZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,LOCK..........UHE,UHH,UHM,UHV,UHX	EA	1
358	37	PAOZZ	5340-00-187-6023	96906	MS21122-6	..CLAMP,LOOP..........UHE,UHH,UHM,UHV,UHX	EA	1
358	38	PAOZZ	5935-01-108-4483	96906	MS3476W14-19P	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHM,UHV,UHX	EA	1
358	38	PAOZZ	5935-00-988-4350	96906	MS3126E-14-19P	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHM,UHV,UHX	EA	1
358	39	PAOZZ	5935-00-456-8383	77820	10-101033-11	..PLUG,END SEAL,ELECT DUST & MOISTURE SEAL ....UHE,UHH,UHM,UHV,UHX	EA	7
358	40	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..........UHE,UHH,UHM,UHV,UHX	EA	4
358	41	PAOZZ	5306-00-206-5748	88044	AN174-7A	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHM,UHV,UHX	EA	4
358	42	PAOOO	1560-00-670-7609	97499	204-001-336-3	.SUPPORT ASSY,CYCLIC STICK SEE FIG.356 FOR BREAKDOWN U/O PN 204-001-062-1,-3,-5,-9-11,-15,PN 205-001-004-3,-5,-7,-9,-11,-15,-19..........UHE,UHH,UHV,UHX	EA	1
358	43	PAOOO	1560-00-872-1158	97499	204-001-336-5	.SUPPORT ASSY,CYCLIC STICK SEE FIG 356 FOR BREAKDOWN U/O PN 204-001-077-1,-5..........UHM	EA	1
358	44	PAOOO	3040-00-624-5122	97499	204-001-016-13	.CONNECTING LINK,RIG..........UHE,UHH,UHM,UHV,UHX	EA	1
358	45	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	2
358	46	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	47	PAOOO	3040-00-624-5146	97499	204-001-012-29	.CONNECTING LINK,RIG..........UHE,UHH,UHM,UHV,UHX	EA	1
358	48	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	1
358	49	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO..........UHE,UHH,UHM,UHV,UHX	EA	1
358	50	XAOOZ		97499	204-001-012-31	..TUBE ASSEMBLY..........UHE,UHH,UHM,UHV,UHX	EA	1
358	51	PAOZZ	5340-00-765-6255	97499	204-001-006-1	...CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	1
358	52	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	53	PAOOO	1560-00-670-5904	97499	204-001-047-1	.CLEVIS ASSY..........UHE,UHH,UHM,UHV,UHX	EA	1
358	54	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	1
358	55	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	56	PAOFF	1680-00-767-4219	97499	204-001-045-5	.GRADIENT ASSY..........UHE,UHH,UHM,UHV,UHX	EA	1
358	57	XAFZZ		97499	204-001-044-5	..SPRING ASSEMBLY..........UHE,UHH,UHM,UHV,UHX	EA	1
358	57A	PAFZZ	5310-00-167-1302	88044	AN316-7R	...NUT,PLAIN,HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	3
358	57B	PAFZZ		88044	AN960JD1016	...WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	2
358	58	XAFFF	1680-00-045-6642	97499	204-001-042-1	..CYLINDER ASSY FORCE GRADIENT..........UHE,UHH,UHM,UHV,UHX	EA	1
358	59	PAFZZ	3120-00-624-5248	97499	120-013-4A	...BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
358	59A	PAFZZ	3110-00-042-1045	96906	MS27643-4	...BEARING,BALL,AIRFRA..........UHE,UHH,UHM,UHV,UHX	EA	1
358	60	PAOFF	1680-00-909-8716	97499	204-001-376-3	.BRAKE ASSY,MAGNETIC..........UHE,UHH,UHM,UHV,UHX	EA	1
358	60	PAOFF	1680-00-909-8098	83777	MP498-3	.BRAKE,MAGNETIC SEE FIG.365 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1
358	60	PAOFF	1680-00-921-5992	81039	R460M15-11	.BRAKE,MAGNETIC SEE FIG.365A FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1
358	61	PAOZZ	5306-00-558-9467	88044	AN4H32A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	4
358	62	PAOZZ	5306-00-182-2038	88044	AN4H22A	.BOLT,MACHINE..........UHM	EA	4
358	63	PAOOO	3040-00-624-5139	97499	204-001-011-13	.CONNECTING LINK,RIG..........UHE,UHH,UHM,UHV,UHX	EA	1
358	64	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	2
358	65	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	66	PAOOO	3040-00-624-5143	97499	204-001-012-13	.CONNECTING LINK,RIG..........UHE,UHH,UHM,UHV,UHX	EA	1
358	66A	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN HEXAGON..........UHE,UHH,UHM,UHV,UHX	EA	1
358	67	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	1
358	68	XAOZZ		97499	204-001-012-27	..TUBE ASSEMBLY..........UHE,UHH,UHM,UHV,UHX	EA	1
358	69	PAOZZ	5340-00-765-6255	97499	204-001-006-1	...CLEVIS,ROD END..........UHE,UHH,UHM,UHV,UHX	EA	1
358	70	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	70A	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHE,UHH,UHM,UHV,UHX	EA	5
358	71	PAOZZ	5306-00-151-2420	88044	AN174H54	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHM,UHV,UHX	EA	1
358	73	PAOZZ	3110-00-030-3381	96906	MS27641-4	.BEARING,BALL,AIRFRA..........UHE,UHH,UHM,UHV,UHX	EA	2
358	74	PAOOO	1560-00-624-6740	97499	204-001-559-1	.BELL CRANK INTERCONNECTING..........UHE,UHH,UHM,UHV,UHX	EA	1
358	74A	PAOZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL AIRFRA..........UHE,UHH,UHM,UHV,UHX	EA	4
358	75	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	4
358	76	PAOZZ	3120-00-625-0045	97499	22-009-15-37-22	..BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	2
358	77	PAOZZ	5306-00-156-2537	88044	AN174H12A	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHM,UHV,UHX	EA	4
358	78	PAOOO	1560-00-979-3646	97499	204-001-514-1	.SUPPORT,CYCLIC CONT LATERAL..........UHE,UHH,UHM,UHV,UHX	EA	1
358	79	PAOZZ	3120-00-629-9628	97499	120-012-4S	..BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	1
358	80	PAOZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE..........UHE,UHH,UHM,UHV,UHX	EA	1

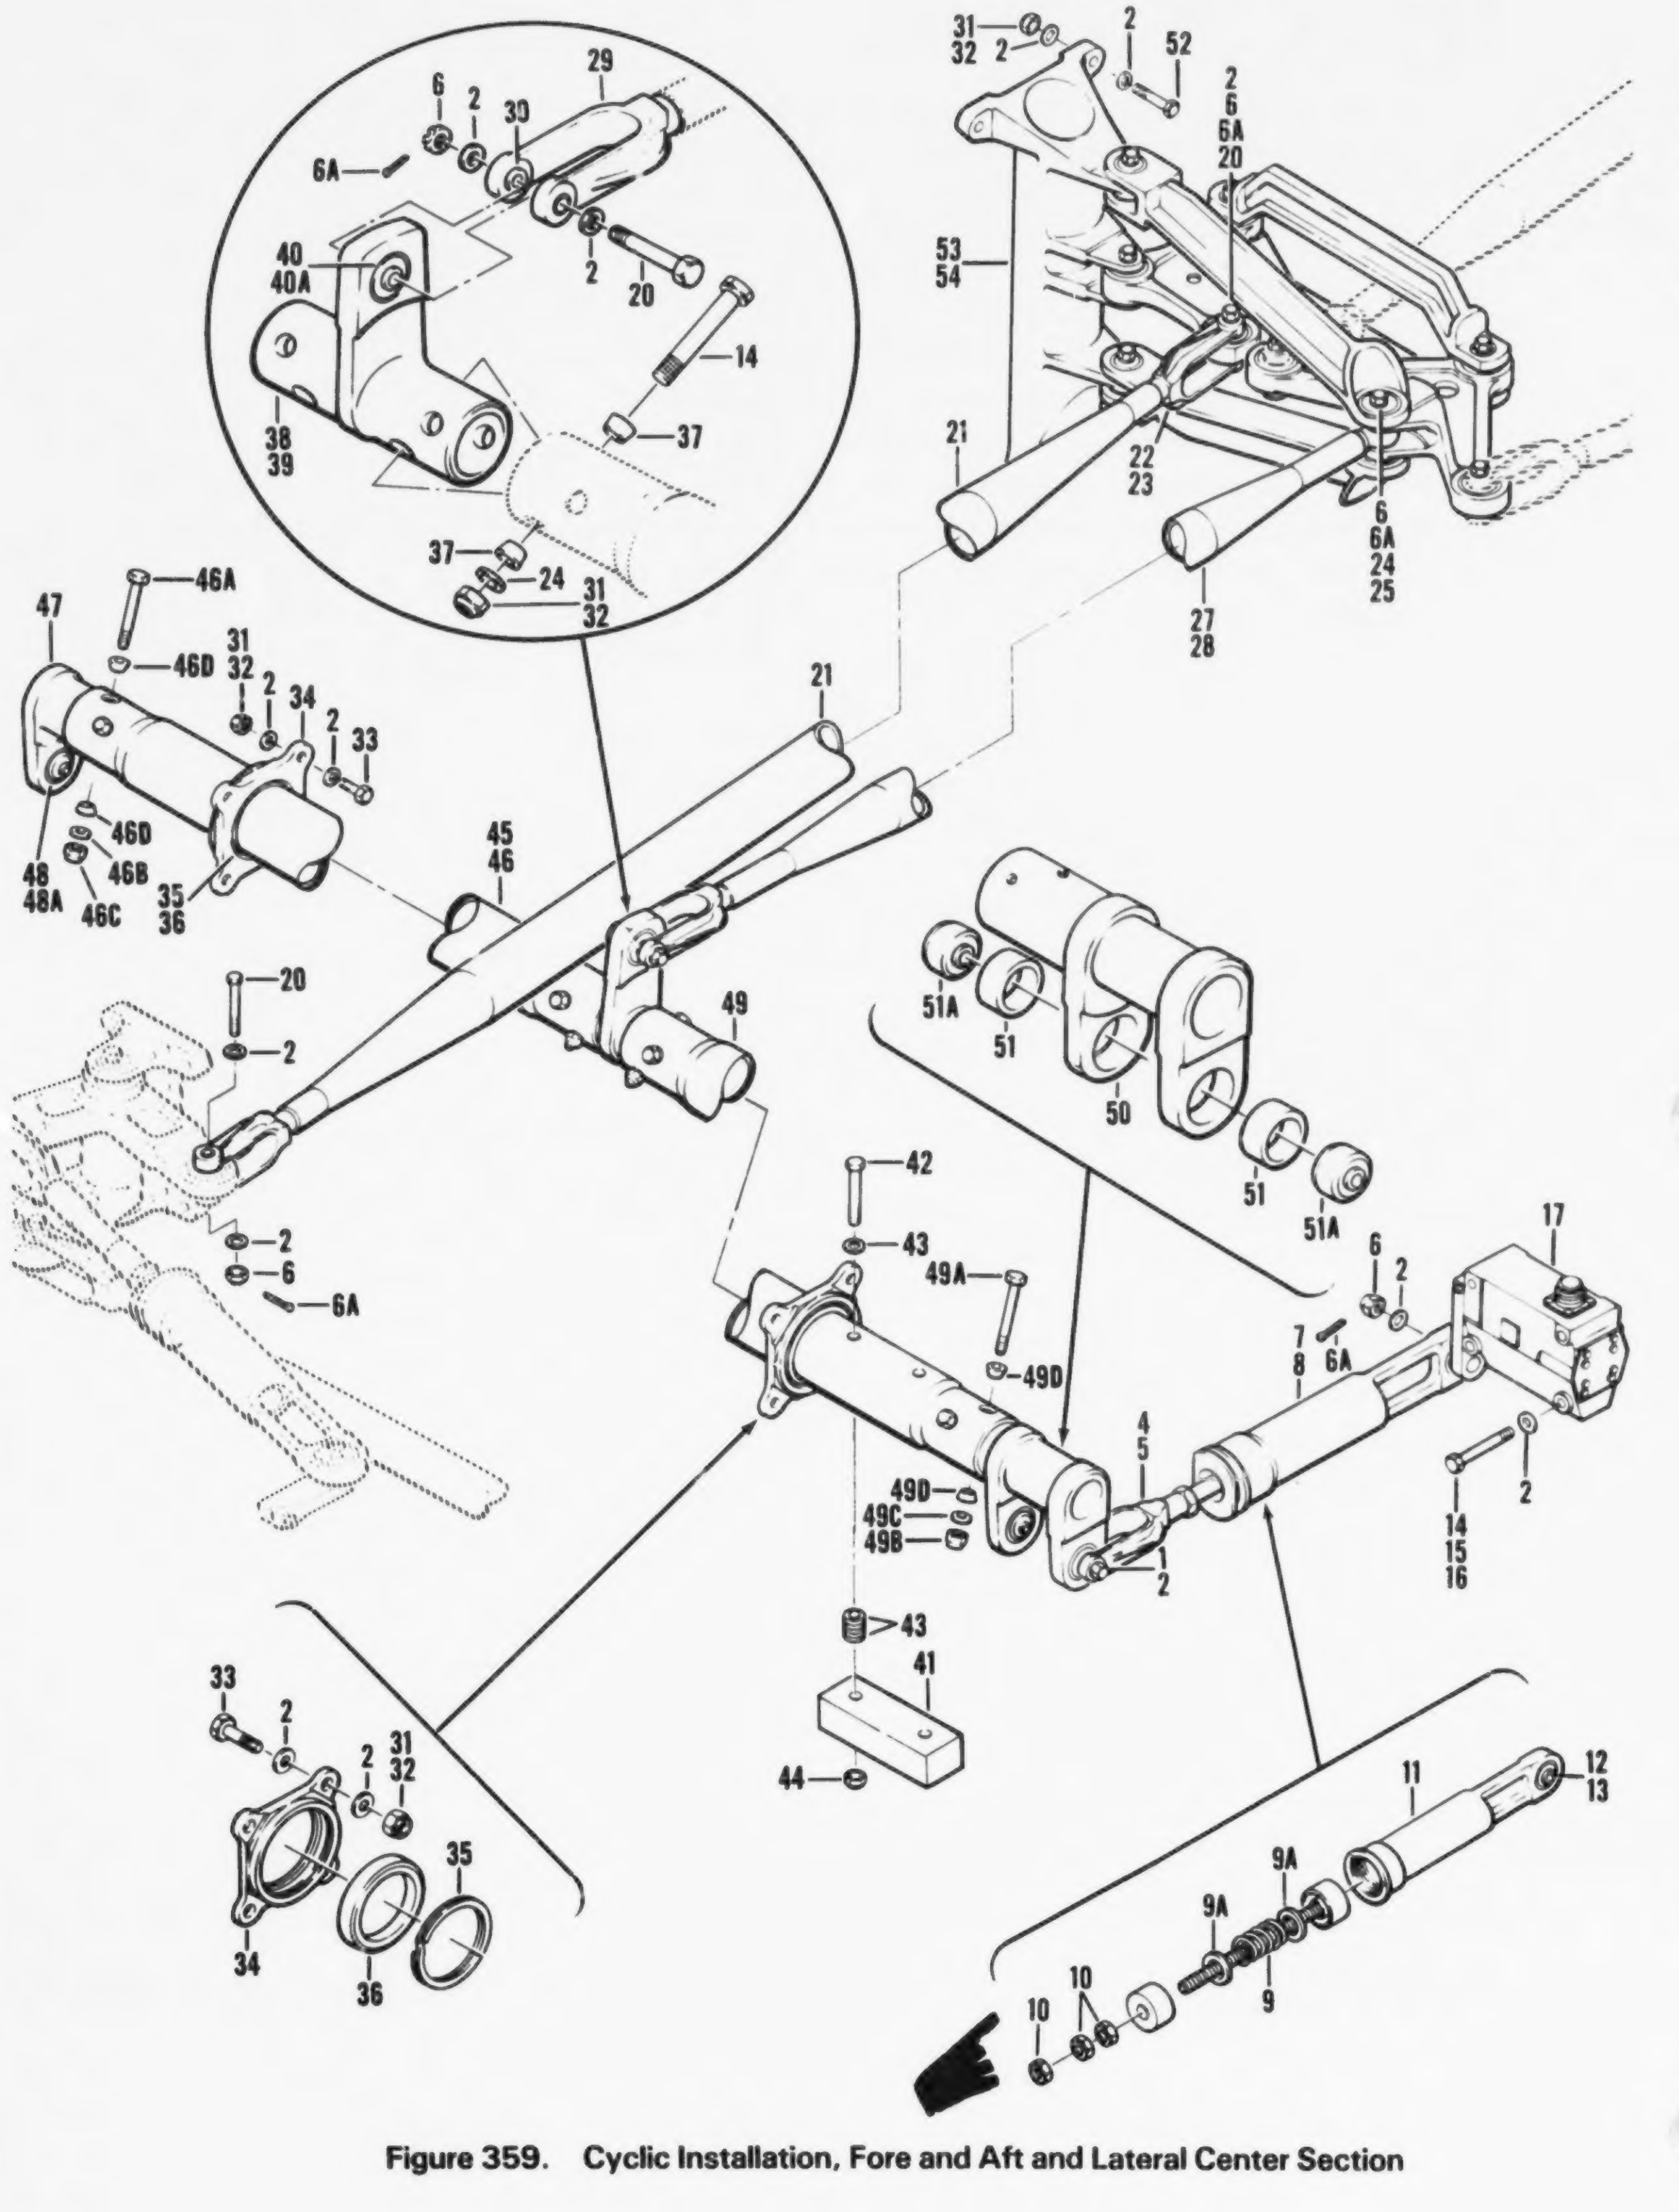
31
32
2
2
52
2
6
6A
20
29
6
2
30
6A
40
40A
2
20
14
53
54
38
39
37
21
22
23
6
6A
24
25
37
24
31
32
27
28
47
46A
46D
31
32
2
34
2
33
21
48
48A
46D
46B
46C
35
36
45
46
20
2
49
51A
51
50
51
51A
2
6
6A
42
43
49A
49D
17
6
2
7
8
6A
4
5
14
15
16
2
49D
49C
49B
1
2
43
41
33
2
2
31
32
44
11
12
13
35
34
36
9A
9A
10
10
9

Figure 359. Cyclic Installation, Fore and Aft and Lateral Center Section

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
359		XCFZZ		97499	204-001-077-1	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA......................UHM	EA	1
359		XCFZZ		97499	204-001-077-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA........................UHM	EA	1
359		XCFZZ		97499	205-001-004-3	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
359		XCFZZ		97499	205-001-004-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
359		XCFZZ		97499	205-001-004-7	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-12956 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
359		XCFZZ		97499	205-001-004-9	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
359		XCFZZ		97499	205-001-004-11	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-746 THRU 67-17777 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
359		XCFZZ		97499	205-001-004-19	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-1524 THRU 68-15324 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
359		XCFZZ		97499	205-001-004-15	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15325 AND SUBSEQUENT SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
359	1	PAOZZ	5306-00-550-1159	88044	AN174H14A	.BOLT,CLOSE TOLERANC......................UHE,UHH,UHM,UHV,UHX	EA	1
359	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..............................UHE,UHH,UHM,UHV,UHX	EA	36
359	4	PAOZZ	5340-00-912-9981	97499	540-001-030-1	.CLEVIS,ROD END U/O PN 204-001-077-1,-5.................UHM	EA	1
359	5	PAOZZ	5340-00-055-6042	97499	205-001-030-1	.CLEVIS,ROD END U/O PN 205-001-004-3,-5,-7,-9,-11,-15,-19 ....UHE,UHH,UHV,UHX	EA	1
359	6	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN................................UHE,UHH,UHM,UHV,UHX	EA	5
359	6A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER......................................UHE,UHH,UHX	EA	5
359	7	PAOFF	1680-00-767-4219	97499	204-001-045-5	.GRADIENT ASSY FORE AND AFT CYCLIC CONTROL TRIM ....UHE,UHH,UHV,UHX	EA	1
359	8	PAOFF	1680-00-919-2369	97499	540-001-029-1	.GRADIENT ASSY, FORE AND AFT CYCLIC CONTROL TRIM U/O PN 204-001-077-1,-5...UHM	EA	1
359	9	XAFFF		97499	204-001-044-5	..SPRING ASSEMBLY.........................UHE,UHH,UHM,UHV,UHX	EA	1
359	9A	PAOZZ		88044	AN960JD1016	...WASHER,FLAT............................UHE,UHH,UHM,UHV,UHX	EA	2
359	10	PAFZZ	5310-00-167-1302	88044	AN316-7R	...NUT,PLAIN,HEXAGO...........................UHE,UHH,UHV,UHX	EA	3
359	11	XAFFF	1680-00-045-6642	97499	204-001-042-1	..CYLINDER ASSY FORCE GRADIENT...........UHE,UHH,UHM,UHV,UHX	EA	1
359	12	PAFZZ	3120-00-624-5248	97499	120-013-4A	...BUSHING,SLEEVE.........................UHE,UHH,UHM,UHV,UHX	EA	1
359	13	PAFZZ	3110-00-042-1045	96906	MS27643-4	...BEARING,BALL,AIRFRA ....UHE,UHH,UHM,UHV,UHX	EA	1
359	14	PAOZZ	5306-00-151-1415	88044	AN4-21A	.BOLT,MACHINE.............................UHE,UHH,UHM,UHV,UHX	EA	8
359	15	PAOZZ	5306-00-182-2038	88044	AN4H22A	.BOLT,MACHINE U/O PN 204-001-077-1,-5....................UHM	EA	4
359	16	PAOZZ	5306-00-558-9467	88044	AN4H32A	.BOLT,MACHINE U/O PN 205-001-004-3,-5,-7,-9,-11,-15,-19 ....UHE,UHH,UHV,UHX	EA	4
359	17	PAOFF	1680-00-909-8716	97499	204-001-376-3	.BRAKE,MAGNETIC...........................UHE,UHH,UHM,UHV,UHX	EA	1
359	20	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER.........................UHE,UHH,UHM,UHV,UHX	EA	3
359	21	PAOOO	3040-00-624-5109	97499	204-001-027-5	.CONNECTING LINK,RIG......................UHE,UHH,UHM,UHV,UHX	EA	1
359	22	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END..........................UHE,UHH,UHM,UHV,UHX	EA	2
359	23	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE.........................UHE,UHH,UHM,UHV,UHX	EA	2
359	24	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..............................UHE,UHH,UHM,UHV,UHX	EA	6
359	25	PAOZZ	5306-00-151-0325	88044	AN174H27	.BOLT,CLOSE,TOLER.........................UHE,UHH,UHM,UHV,UHX	EA	1
359	27	PAOOO	3040-00-964-5072	97499	205-001-014-1	.CONNECTING LINK,RIG U/O PN 205-001-004-3,-5,-7,-9,-11,-15,-19..UHE,UHH,UHV,UHX	EA	1
359	28	PAOOO	3040-00-872-1155	97499	540-001-305-1	.CONNECTING LINK,RIG U/O PN 204-001-077-1 & -5..........UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
359	29	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END..........................UHE,UHH,UHM,UHV,UHX	EA	1
359	30	PAOZZ	3120-00-678-5422	97499	22-006-15-[illegible]-16	...BUSHING,SLEEVE.........................UHE,UHH,UHM,UHV,UHX	EA	2
359	31	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE....................................UHM	EA	18
359	32	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON......UHE,UHH,UHM,UHV,UHX	EA	18
359	33	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE.............................UHE,UHH,UHM,UHV,UHX	EA	8
359	34	PAOOO	3130-00-624-5129	97499	204-001-330-5	.BEARING UNIT,BALL........................UHE,UHH,UHM,UHV,UHX	EA	2
359	35	PAOZZ	5340-00-077-2133	80756	RR262C	..RING,RETAINING..........................UHE,UHH,UHM,UHV,UHX	EA	1
359	36	PAOZZ	3110-00-678-5425	38443	B545ZZ	..BEARING,BALL,AIRFRA.............................UHH,UHM,UHV	EA	1
359	37	PAOZZ	5365-00-984-2631	97499	20-037-4-5	.BUSHING,TAPERED..UHM	EA	8
359	38	PAOOO	1560-00-085-7370	97499	204-001-358-1	.ARM ASSEMBLY,CYCLIC U/O PN 204-001-062-1,-3,-5,-9,-11,-15, 205-001-004-3,-5,-7,-9,-11,-15,-19............UHE,UHH,UHV,UHX	EA	1
359	39	PAOOO	1680-00-872-1142	97499	540-001-306-1	.ARM ASSEMBLY,FLIGHT CONTROL U/O PN 204-001-077-1 & -5 ....UHM	EA	1
359	40	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE..UHM	EA	1
359	40A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL AIRFRA.....................UHE,UHH,UHM,UHV,UHX	EA	1
359	41	PAOZZ	1560-00-918-2685	97499	540-001-307-1	.COUNTERWEIGHT,FORE JACKSHAFT U/O PN 204-001-077-1,-5....UHM	EA	1
359	42	PAOZZ	5306-00-559-8141	88044	AN3H37A	.BOLT,MACHINE U/O PN 204-001-077-1,-5...................UHM	EA	2
359	43	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-001-077-1,-5....................UHM	EA	32
359	44	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-001-077-1,-5 ....UHM	EA	2
359	45	PAOOO	1560-00-624-5127	97499	204-001-326-9	.TUBE, CYCLIC CONTRO RH.................UHE,UHH,UHM,UHV,UHX	EA	1
359	46	XAOZZ		97499	204-001-326-11	..TUBE ASSEMBLY...........................UHE,UHH,UHM,UHV,UHX	EA	1
359	46A	PAOZZ	5306-00-151-1415	88044	AN4-21A	..BOLT,MACHINE............................UHE,UHH,UHM,UHV,UHX	EA	2
359	46B	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT.............................UHE,UHH,UHM,UHV,UHX	EA	2
359	46C	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX.....................UHE,UHH,UHM,UHV,UHX	EA	2
359	46D	PAOZZ	5365-00-984-2631	97499	20-037-4-5	..BUSHING,TAPERED.........................UHE,UHH,UHM,UHV,UHX	EA	4
359	47	XAOOZ		97499	204-001-332-1	..LEVER ASSEMBLY..........................UHE,UHH,UHM,UHV,UHX	EA	1
359	48	PAOZZ	3120-00-624-5248	97499	120-013-4A	...BUSHING,SLEEVE.........................UHE,UHH,UHM,UHV,UHX	EA	1
359	48A	PAFZZ	3110-00-042-1045	96906	MS27643-4	...BEARING,BALL AIRFRA....................UHE,UHH,UHM,UHV,UHX	EA	1
359	49	PAOOO	1560-00-652-3262	97499	204-001-359-1	.TUBE, CYCLIC CONTRO CONTROL,LH..........UHE,UHH,UHM,UHV,UHX	EA	1
359	49A	PAOZZ	5306-00-151-1415	88044	AN4-21A	..BOLT,MACHINE.......................UHC,UHE,UHH,UHM,UHV,UHX	EA	2
359	49B	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING........................UHE,UHH,UHM,UHV,UHX	EA	2
359	49C	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT.............................UHE,UHH,UHM,UHV,UHX	EA	2
359	49D	PAOZZ	5365-00-984-2631	97499	20-037-4-5	..BUSHING,TAPERED.........................UHE,UHH,UHM,UHV,UHX	EA	4
359	50	XAOOZ		97499	204-001-356-1	..LEVER ASSY..............................UHE,UHH,UHM,UHV,UHX	EA	1
359	51	PAOZZ	3120-00-624-5248	97499	120-013-4A	...BUSHING,SLEEVE.......................................UHM	EA	1
359	51A	PAOZZ	3110-00-042-1045	96906	MS27643-4	...BEARING,BALL AIRFRA..................................UHM	EA	2
359	52	PAOZZ	5306-00-182-1960	88044	AN4H12A	.BOLT,MACHINE.............................UHE,UHH,UHM,UHV,UHX	EA	6
359	53	PAOOO	1560-00-709-3026	97499	204-001-355-3	.LEVER,MIXING ASSEMB SEE FIG.360 FOR BREAKDOWN U/O PN 204- 001-077-1,-5,204-001-062-1,-3,-5,-9,-11,-15...............UHM	EA	1
359	54	PAOOO	1680-00-967-1750	97499	205-001-301-1	.CONTROL STICK ASSY SEE FIG.360 FOR BREAKDOWN U/O 205-001- 004-3,-5,-7,-9,-11,-158-19....................UHE,UHH,UHV,UHX	EA	1

Delete page 1447

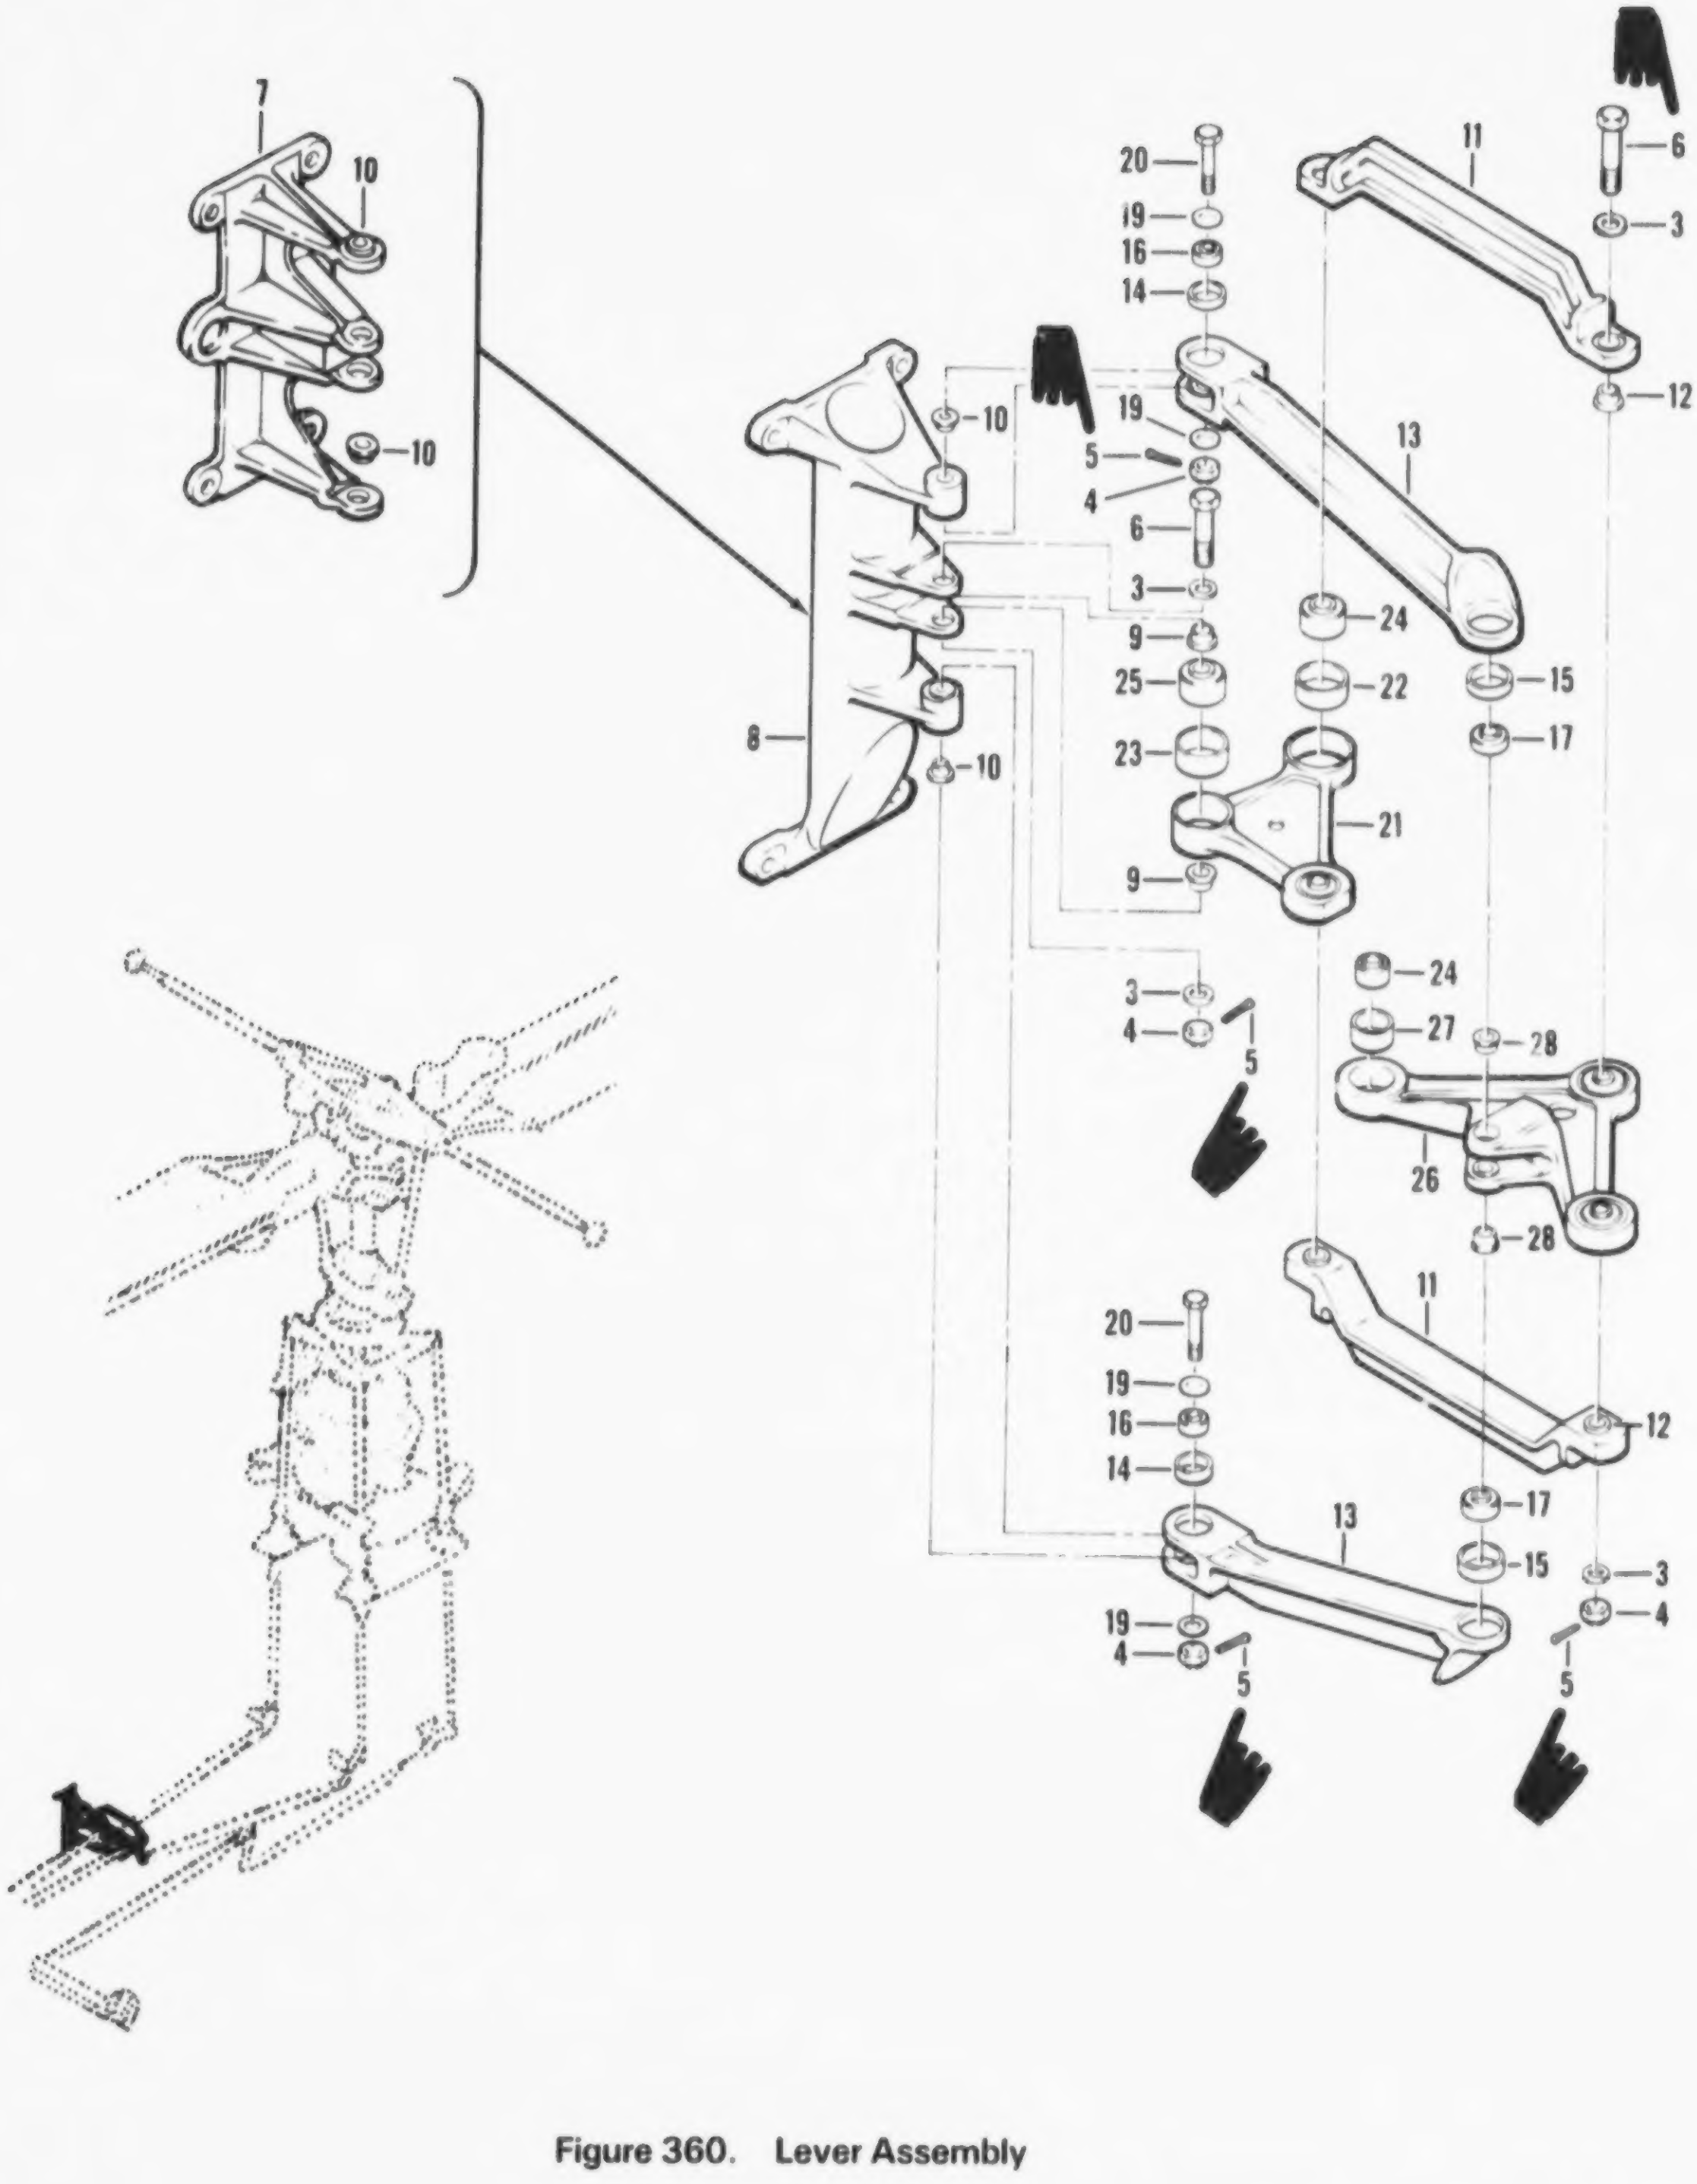
7
10
10
20
19
16
14
11
6
3
12
10
19
5
4
6
3
13
24
9
25
22
15
23
17
8
10
21
9
3
24
4
5
27
28
26
28
11
20
19
16
14
12
13
17
15
3
4
19
4
5
5

Figure 360. Lever Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
360		PA000	1560-00-709-3026	97499	204-001-355-3	LEVER,MIXING ASSY SEE FIG.359 FOR NHA....................UHM	EA	1
360		PA000	1680-00-967-1750	97499	205-001-301-1	CONTROL STICK ASSY SEE FIG.359 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
360	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT......................................UHH,UHM,UHV	HD	6
360	4	PAOZZ	5310-00-167-1286	88044	AN310-4	.NUT,CASTELLATED,HEX.........................UHE,UHH,UHM,UHV,UHX	EA	5
360	5	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER..................................UHE,UHH,UHM,UHV,UHX	EA	5
360	6	PAOZZ	5306-00-180-1711	88044	AN174-17	.BOLT,CLOSE TOLERANC.........................UHE,UHH,UHM,UHV,UHX	EA	3
360	7	PA000	1560-00-996-2124	97499	204-001-343-1	.SUPPORT ASSY U/O PN 204-001-355-3.......................UHM	EA	1
360	8	PA000	1560-00-944-7199	97499	205-001-302-1	.SUPPORT ASSY U/O PN 205-001-301-1...........UHE,UHH,UHV,UHX	EA	1
360	9	PAOZZ	3120-00-662-4734	97499	22-006-15-15-16	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	2
360	10	PAOZZ	3120-00-662-4357	97499	22-006-15-19-16	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	4
360	11	PA000	3040-00-524-6739	97499	204-001-354-1	.CONNECTING LINK,RIG.........................UHE,UHH,UHM,UHV,UHX	EA	2
360	12	PAOZZ	3120-00-625-0055	97499	22-006-15-22-16	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	4
360	13	PA000	3040-00-624-6741	97499	204-001-353-1	.CONNECTING LINK,RIG.........................UHE,UHH,UHM,UHV,UHX	EA	2
360	14	PAOZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	2
360	15	PAOZZ	3120-00-625-0123	97499	23S2-4A	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	1
360	16	PAOZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA........................UHE,UHH,UHM,UHV,UHX	EA	2
360	17	PAOZZ	3110-00-023-6669	96906	MS27640-4	..BEARING,BALL,AIRFRA........................UHE,UHH,UHM,UHV,UHX	EA	1
360	19	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.................................UHE,UHH,UHM,UHV,UHX	EA	4
360	20	PAOZZ	5306-00-174-4115	88044	AN174H15	.BOLT,CLOSE TOLER............................UHE,UHH,UHM,UHV,UHX	EA	2
360	21	PA000	1680-00-896-6263	97499	204-001-352-5	.BELL CRANK ASSEMBLY.........................UHE,UHH,UHM,UHV,UHX	EA	1
360	22	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	1
360	23	PAOZZ	3120-00-624-5247	97499	23S6-4KA	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	1
360	24	PAOZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA........................UHE,UHH,UHM,UHV,UHX	EA	2
360	25	PAOZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA........................UHE,UHH,UHM,UHV,UHX	EA	1
360	26	PA000	1560-00-624-5132	97499	204-001-351-1	.BELL CRANK..................................UHE,UHH,UHM,UHV,UHX	EA	1
360	27	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	1
360	28	PAOZZ	3120-00-528-5726	97499	22-006-15-11-16	..BUSHING,SLEEVE.............................UHE,UHH,UHM,UHV,UHX	EA	2

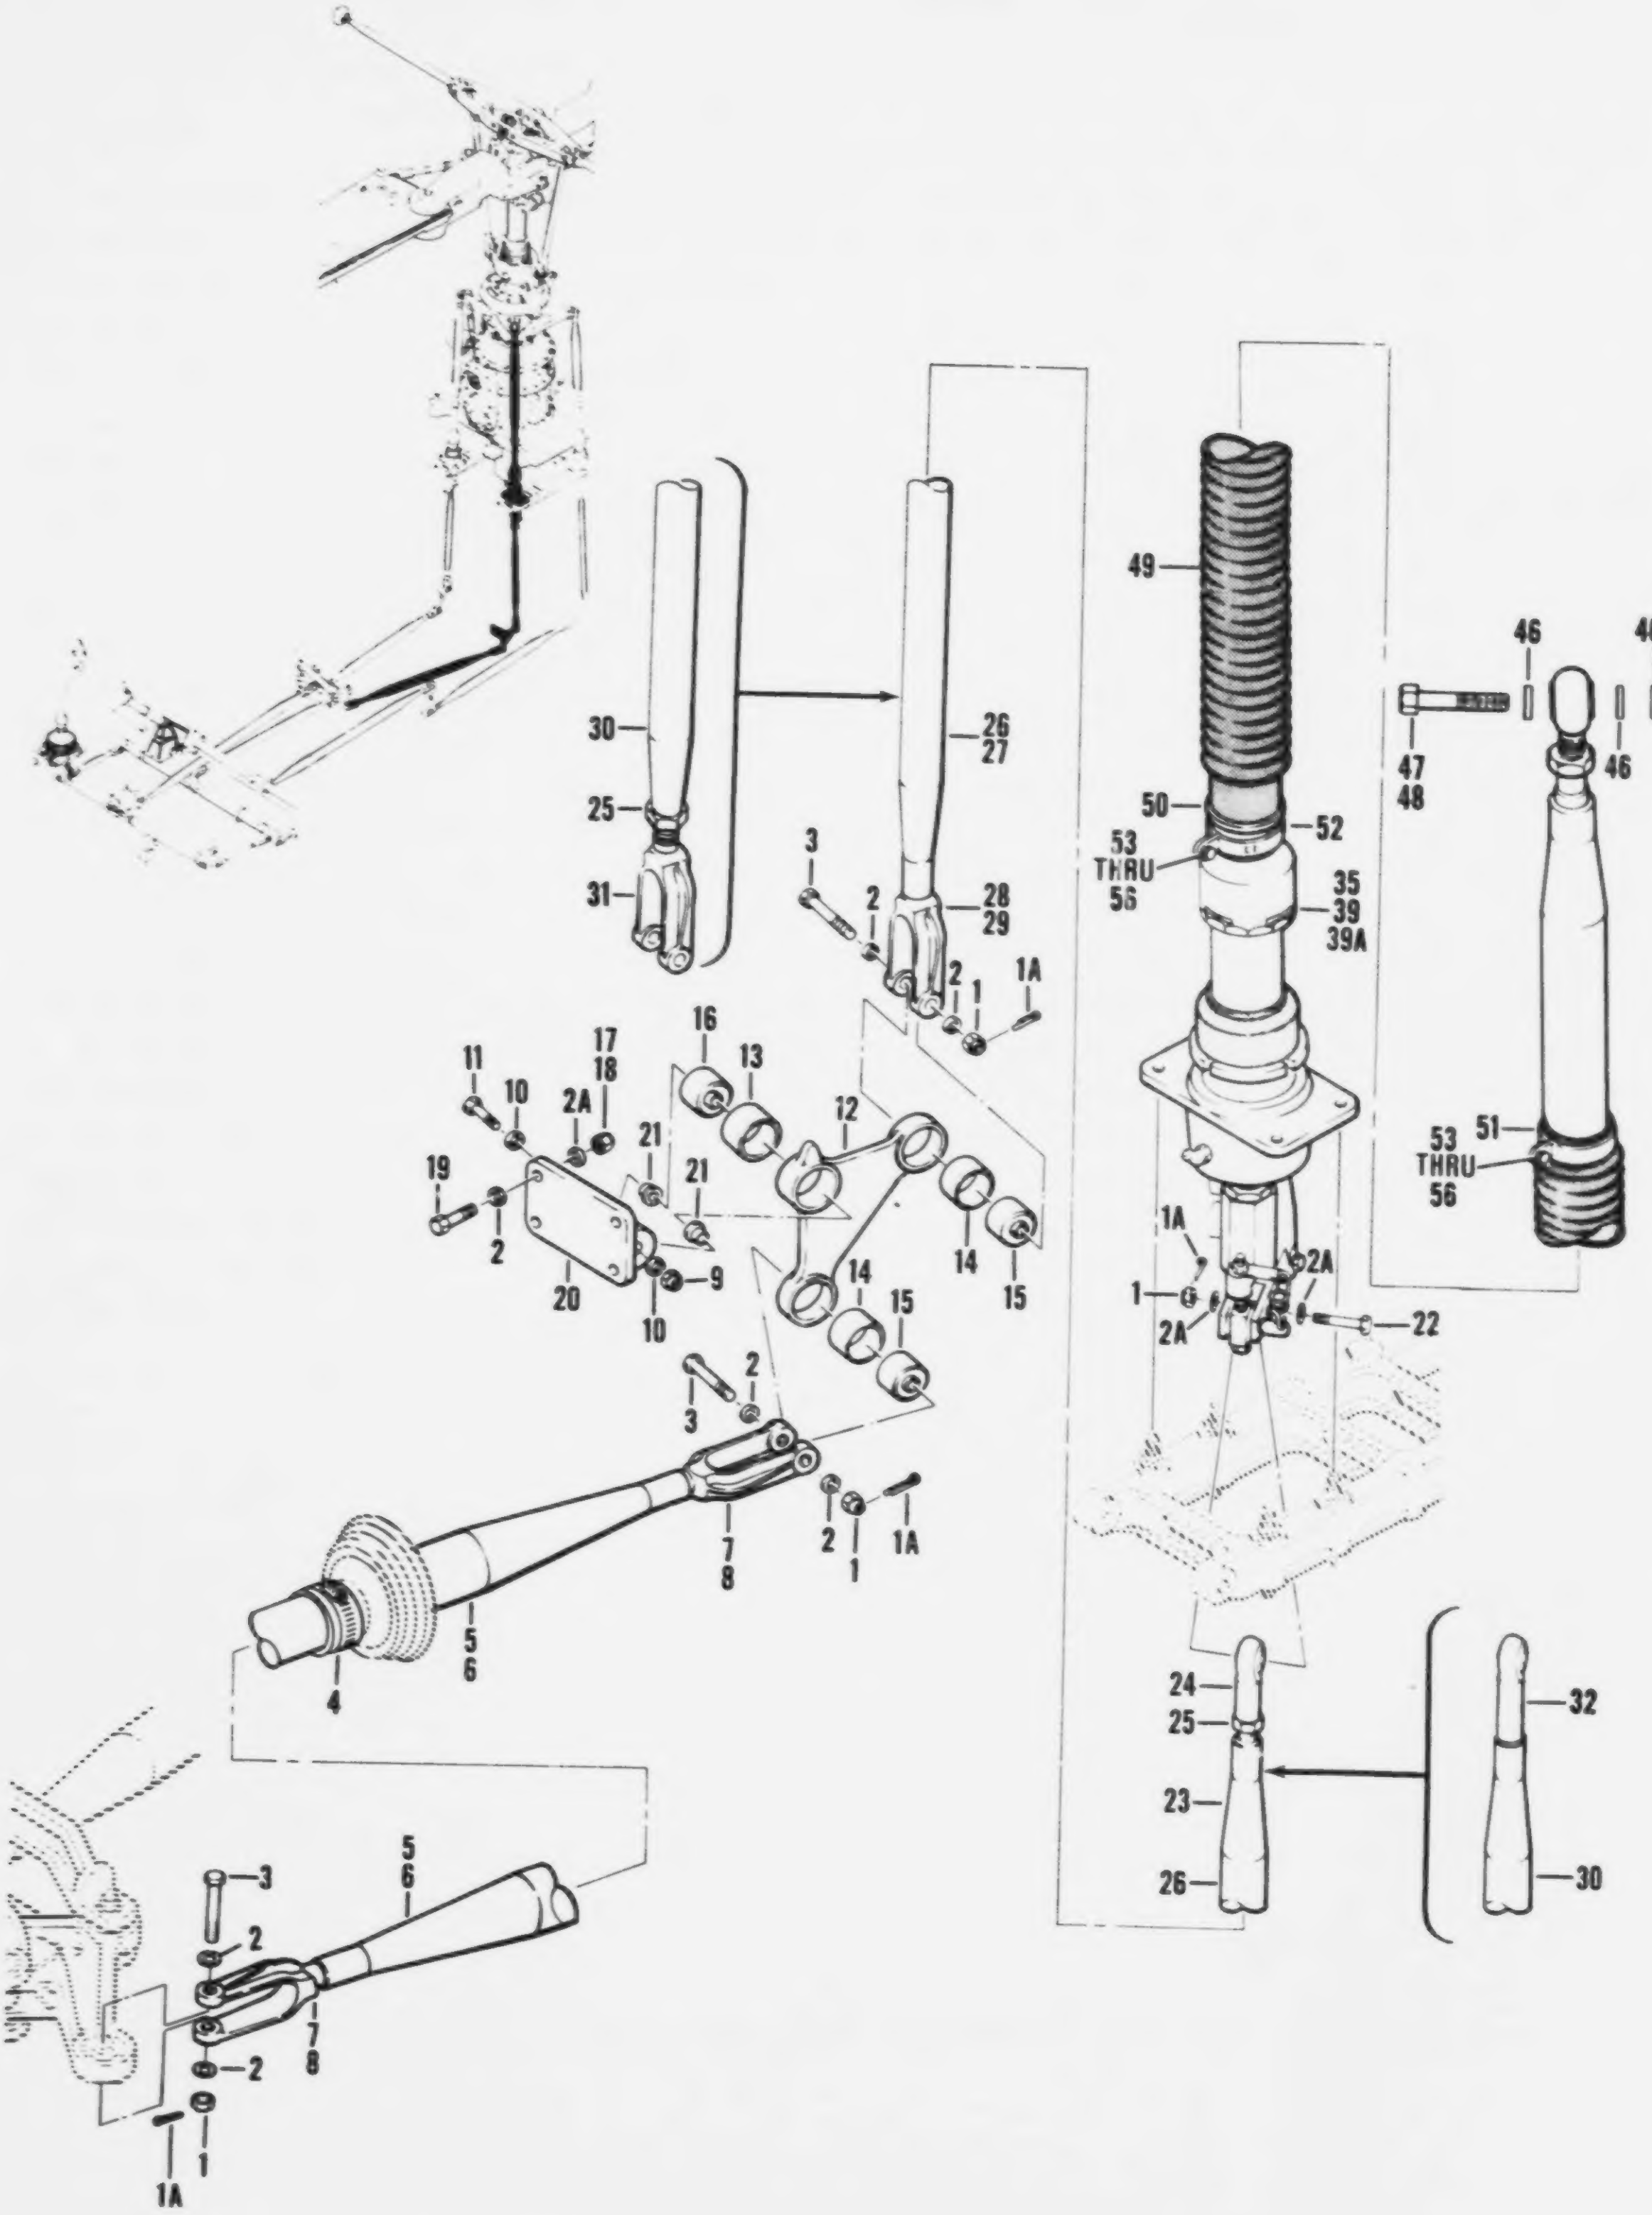
49
46B
46
46A
30
26
27
47
48
46
45
50
52
25
53 THRU 56
35
39
39A
3
31
2
28
29
2
1A
1
16
17
18
11
13
10
2A
12
21
19
21
51
53 THRU 56
1A
2A
2
20
9
14
15
10
14
15
1
2A
22
2
3
7
8
2
1
1A
5
6
4
24
25
32
23
26
30
5
6
3
2
7
8
2
1A
1

Figure 361. Control Installation, Lateral Cyclic Aft Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
361		XCFZZ		97499	204-001-077-1	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA......................UHM	EA	1
361		XCFZZ		97499	204-001-077-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA.........................UHM	EA	1
361		XCFZZ		97499	205-001-004-3	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
361		XCFZZ		97499	205-001-004-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
361		XCFZZ		97499	205-001-004-7	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-12956 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
361		XCFZZ		97499	205-001-004-9	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
361		XCFZZ		97499	205-001-004-11	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-746 THRU 67-17777 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
361		XCFZZ		97499	205-001-004-19	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15214 THRU 68-15324 SEE FIG.7 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
361		XCFZZ		97499	205-001-004-15	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15325 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
361	1	PAOZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING,SL.......................UHE,UHH,UHM,UHV,UHX	EA	4
361	1A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER................................UHE,UHH,UHM,UHV,UHX	EA	4
361	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT...............................UHE,UHH,UHM,UHV,UHX	EA	10
361	2A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT...............................UHE,UHH,UHM,UHV,UHX	EA	6
361	3	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,MACHINE..............................UHE,UHH,UHM,UHV,UHX	EA	3
361	4	PAOZZ	4730-00-278-9101	88044	AN737RM44	.CLAMP,HOSE U/O PN 204-001-077-1,-5......................UHM	EA	1
361	5	PAOOO	3040-00-624-5121	97499	204-001-016-5	.CONNECTING LINK, RIGID U/O PN 204-001-077-1,-5..........UHM	EA	1
361	6	PAOOO	3040-00-964-5068	97499	205-001-011-13	.CONNECTING LINK, RIGID U/O PN 205-001-004-3,-5,-7,-9,-11,-15,-19.......................................UHE,UHH,UHV,UHX	EA	1
361	7	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END...........................UHE,UHH,UHM,UHV,UHX	EA	2
361	8	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE..........................UHE,UHH,UHM,UHV,UHX	EA	2
361	9	PAOZZ	5310-00-900-9421	96906	MS17825-5	.NUT,SELF-LOCKING,SL.......................UHE,UHH,UHM,UHV,UHX	EA	1
361	10	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT...............................UHE,UHH,UHM,UHV,UHX	EA	2
361	11	PAOZZ	5306-00-275-9562	88044	AN175-21	.BOLT,MACHINE..................................UHE,UHH,UHV,UHX	EA	1
361	12	PAOOO	1560-00-758-3668	97499	204-001-373-1	.BELL CRANK ASSY...........................UHE,UHH,UHM,UHV,UHX	EA	1
361	13	PAOZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE...........................UHE,UHH,UHM,UHV,UHX	EA	1
361	14	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE...........................UHE,UHH,UHM,UHV,UHX	EA	2
361	15	PAOZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL..	EA	2
361	16	PAOZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL........................ UHE,UHH,UHM,UHV,UHX	EA	1
361	17	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING, HEXAGON...............................UHM	EA	4
361	18	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	4
361	19	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE..............................UHE,UHH,UHM,UHV,UHX	EA	4
361	20	PAOOO	1560-00-980-9544	97499	204-001-350-1	.SUPPORT,CYCLIC CONTROL....................UHE,UHH,UHM,UHV,UHX	EA	1
361	21	PAOZZ	3120-00-625-0051	97499	22-007-19-19-18	..BUSHING,SLEEVE...........................UHE,UHH,UHM,UHV,UHX	EA	2
361	22	PAOZZ	5306-00-174-4114	88044	AN174H14	.BOLT,MACHINE..............................UHE,UHH,UHM,UHV,UHX	EA	1
361	23	PAOOO	3040-00-776-7739	97499	204-001-018-27	.TUBE ASSEMBLY U/O PN 205-001-004-3,-5,-7,-9,-11,-15,-19 ....UHE,UHH,UHV,UHX	EA	1
361	24	PAOZZ	3120-00-269-4453	97499	47-140-252-3	..BEARING,PLAIN,ROD END....................UHE,UHH,UHM,UHV,UHX	EA	1
361	25	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO.........................UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
361	26	XAOZZ		97499	204-001-018-21	..TUBE ASSEMBLY..........................UHE,UHH,UHM,UHV,UHX	EA	1
361	27	XAOZZ		97499	80-002-1	...INSERT..........................UHM,UHE,UHH,UHV,UHX	EA	1
361	28	PAOZZ	5340-00-766-6255	97499	204-001-006-1	...CLEVIS,ROD END..........................UHE,UHH,UHM,UHV,UHX	EA	1
361	29	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING,SLEEVE..........................UHE,UHH,UHM,UHV,UHX	EA	2
361	30	PAOOO	1680-00-872-1150	97499	540-001-050-7	.TUBE ASSEMBLY U/O PN 204-001-077-1 & -5................UHM	EA	1
361	31	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END..UHM	EA	1
361	32	XAOZZ		97499	47-140-252-5	..BEARING,ROD END..UHM	EA	1
361	35	AOOOO		97499	204-076-511-17	.CYLINDER ASSY,LH SEE FIG. 185 FOR BREAKDOWN U/O PN 204-001-077-1,-5..UHM	EA	1
361	39	XDOOZ		97499	205-076-099-1	.SERVOCYLINDER,LH SEE FIG. 185 FOR BREAKDOWN U/O PN 205-001-004-3,-5,-7,-9,-11, -15,-19. PN 205-076-099-1 AND 204-076-055-1 (AS A UNIT) ARE REPLACED BY 205-076-056-101. ....UHE,UHH,UHV,UHX		
361	39A	AOOOO		97499	205-076-056-101	.CYLINDER SEE FIG.185A FOR BREAKDOWN U/O PN 205-001-004-3,-5,7,-9,-11, -15,-19. REPLACES PN 205-076-099-1 AND 204-076-055-1 AS A UNIT..........................UHE,UHH,UHV,UHX	EA	1
361	45	PAOZZ	5310-00-871-8758	96906	MS17825-8	.NUT,SELF-LOCKING, HEXAGON..UHM	EA	1
361	45	PAOZZ	5310-00-167-1286	88044	AN 310-5	.NUT,PLAIN,CASTELLAT..........................UHE,UHH,UHV,UHX	EA	1
361	46	PAOZZ	5310-00-911-9446	97499	140-007-33-28C4	.WASHER,RECESSED..UHM	EA	4
361	46A	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	1
361	46B	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER..........................UHE,UHH,UHV,UHX	EA	1
361	47	PBOZZ	5306-00-924-7783	80205	NAS1308-36D	.BOLT,SHEAR..UHM	EA	1
361	48	PAOZZ	5306-00-180-0471	88044	AN175-16	.BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	1
361	49	PAOZZ	1680-00-923-2926	97499	204-076-410-1	.BOOT ASSY,CONTROL INSTALLATION..........UHE,UHH,UHM,UHV,UHX	EA	1
361	50	PAOZZ	1560-00-924-8083	97499	204-076-412-1	.FLANGE,SWIVEL JOINT..........................UHE,UHH,UHM,UHV,UHX	EA	1
361	51	PAOZZ	5340-00-193-0133	88044	AN735D26	.CLAMP,LOOP..........................UHE,UHH,UHM,UHV,UHX	EA	1
361	52	PAOZZ	5340-00-193-0134	88044	AN735D27	.CLAMP,LOOP..........................UHE,UHH,UHM,UHV,UHX	EA	1
361	53	PAOZZ	5305-00-989-5265	96906	MS35207-262	.SCREW,MACHINE..........................UHE,UHH,UHM,UHV,UHX	EA	2
361	54	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE..UHM	EA	2
361	55	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........................UHE,UHH,UHM,UHV,UHX	EA	4
361	56	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	2

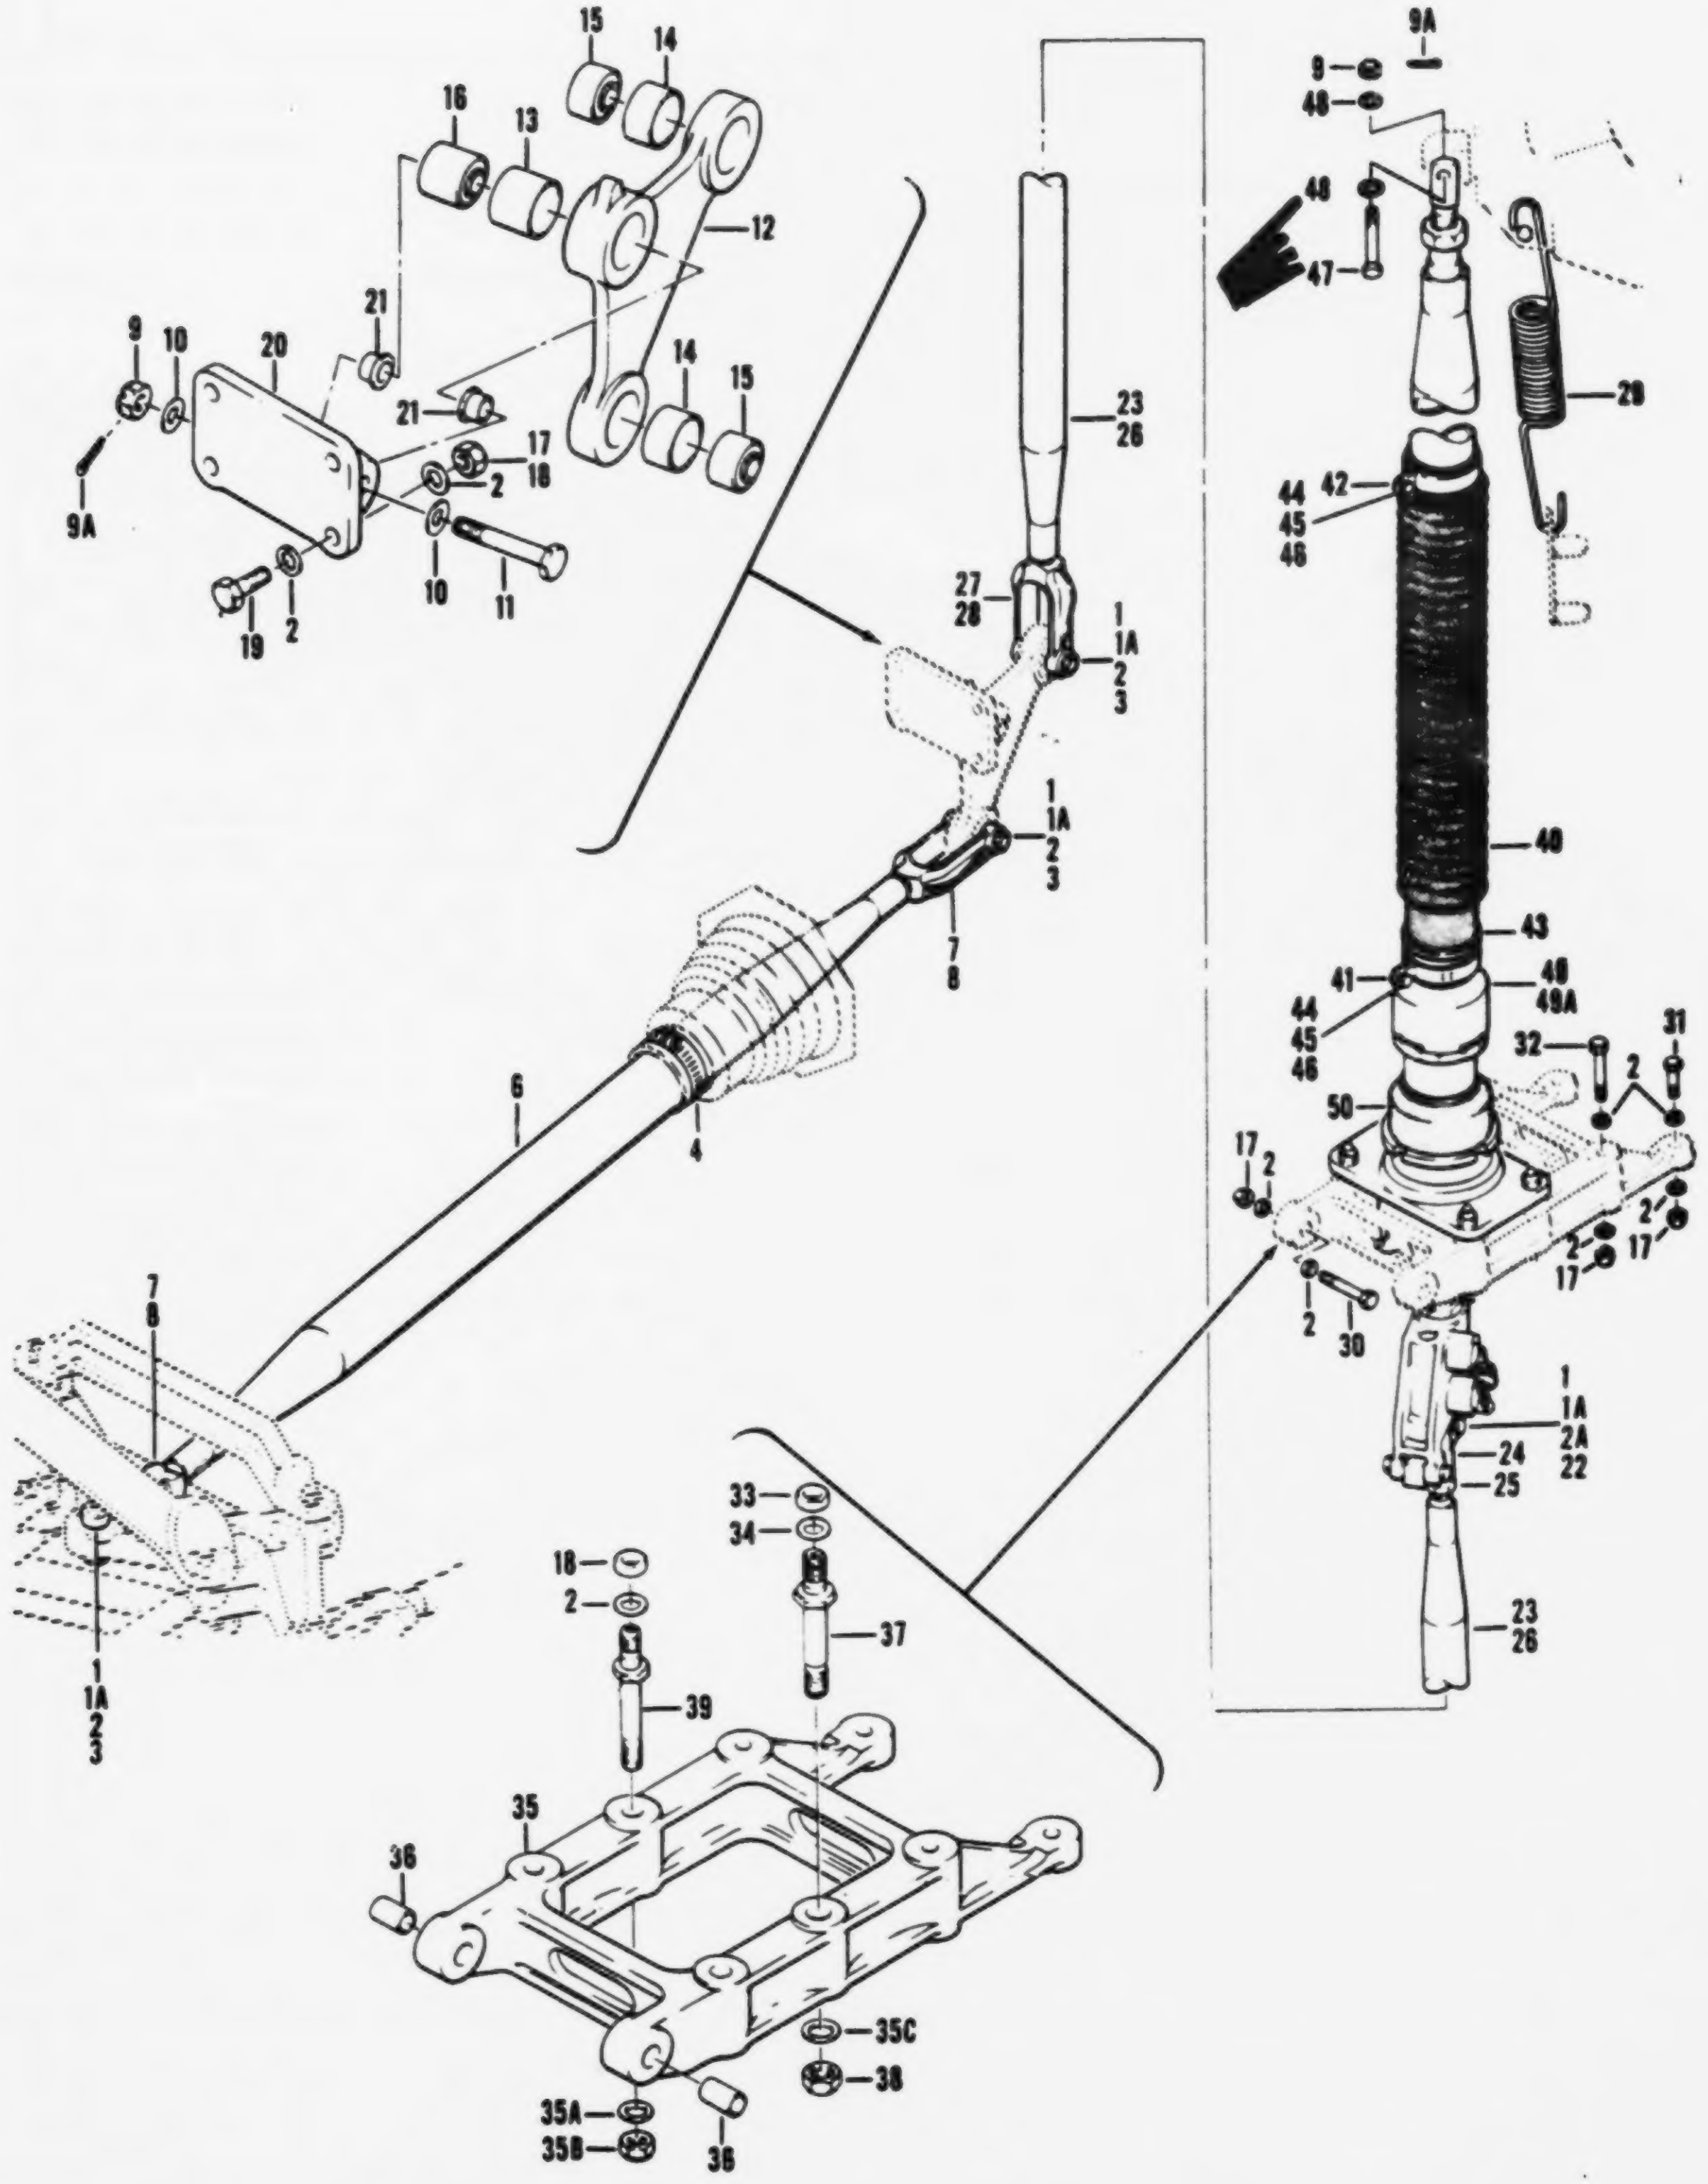
15
14
16
13
12
9
10
20
21
21
14
15
17
18
2
9A
10
11
19
2
23
26
27
28
1
1A
2
3
1
1A
2
3
7
8
6
4
7
8
1
1A
2
3
9A
9
48
48
47
29
42
44
45
46
40
43
41
44
45
46
49
49A
31
32
2
50
17
2
2
17
2
17
2
30
1
1A
2A
22
24
25
23
26
33
34
18
2
37
39
35
36
35C
38
35A
35B
36

Figure 362. Control Installation, Fore and Aft and Lateral Cyclic

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
362		XCFZZ		97499	205-001-004-3	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
362		XCFZZ		97499	205-001-004-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
352		XCFZZ		97499	205-001-004-7	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 63-12956 THRU 64-13901 SEE FIG.7 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
362		XCFZZ		97499	205-001-004-9	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
362		XCFZZ		97499	205-001-004-11	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-746 THRU 67-17777 SEE FIG.7 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
362		XCFZZ		97499	205-001-004-19	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15214 THRU 68-15324 SEE FIG.7 FOR NHA.........UHE,UHH,UHV UHX	EA	1
362		XCFZZ		97499	205-001-004-15	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 68-15325 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
362	1	PAOZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING,SL..............................UHE,UHH,UHV,UHX	EA	4
362	1A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.......................................UHE,UHH,UHV,UHX	EA	4
362	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT......................................UHE,UHH,UHV,UHX	EA	25
362	2A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT......................................UHE,UHH,UHV,UHX	EA	2
362	3	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,MACHINE.....................................UHE,UHH,UHV,UHX	EA	3
362	4	PAOZZ	4730-00-278-9101	88044	AN737RM44	.CLAMP,HOSE.......................................UHE,UHH,UHV,UHX	EA	1
362	6	PAOOO	3040-00-964-6068	97499	205-001-011-13	.CONNECTING LINK, RIGID...........................UHE,UHH,UHV,UHX	EA	1
362	7	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END..................................UHE,UHH,UHV,UHX	EA	2
362	8	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE.................................UHE,UHH,UHV,UHX	EA	2
362	9	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,PLAIN..UHE,UHH,UHV,UHX	EA	2
362	9A	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER.......................................UHE,UHH,UHV,UHX	EA	2
362	10	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT......................................UHE,UHH,UHV,UHX	EA	2
362	11	PAOZZ	5306-00-275-9662	88044	AN175-21	.BOLT,MACHINE.....................................UHE,UHH,UHV,UHX	EA	1
362	12	PAOOO	1560-00-758-3668	97499	204-001-373-1	.BELL CRANK ASSY..................................UHE,UHH,UHV,UHX	EA	1
362	13	PAOZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE..................................UHE,UHH,UHV,UHX	EA	1
362	14	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE..................................UHE,UHH,UHV,UHX	EA	2
362	15	XDOZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,...................................UHE,UHH,UHV,UHX	EA	2
362	16	PAOZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL,...................................UHE,UHH,UHV,UHX	EA	1
362	17	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING, HEXAGON........................UHE,UHH,UHV,UHX	EA	10
362	18	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	5
362	19	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE.....................................UHE,UHH,UHV,UHX	EA	4
362	20	PAOOO	1560-00-980-9545	97499	204-001-350-2	.SUPPORT,CYCLIC CONTROL...........................UHE,UHH,UHV,UHX	EA	1
362	21	PAOZZ	3120-00-625-0051	97499	22-007-19-19-18	..BUSHING,SLEEVE..................................UHE,UHH,UHV,UHX	EA	2
362	22	PAOZZ	5306-00-174-4114	88044	AN174H14	.BOLT,MACHINE.....................................UHE,UHH,UHV,UHX	EA	1
362	23	PAOOO	3040-00-775-7739	97499	204-001-018-27	.CONNECTING LINK, RIGID...........................UHE,UHH,UHV,UHX	EA	1
362	24	PAOZZ	3120-00-269-4453	97499	47-140-252-3	..BEARING,PLAIN,ROD END...........................UHE,UHH,UHV,UHX	EA	1
362	25	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGON...............................UHE,UHH,UHV,UHX	EA	1
362	26	XAOOZ		97499	204-001-018-21	..TUBE ASSEMBLY...................................UHE,UHH,UHV,UHX	EA	1
362	27	PAOZZ	5340-00-765-6255	97499	204-001-006-1	...CLEVIS,ROD END.................................UHE,UHH,UHV,UHX	EA	1
362	28	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING,SLEEVE................................UHE,UHH,UHV,UHX	EA	2
362	29	PAOZZ	5360-00-670-7605	97499	204-001-515-1	.SPRING,HELICAL, EXTENSION........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
362	30	PAOZZ	5306-00-155-2541	88044	AN174H16A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
362	31	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
362	32	PAOZZ	5306-00-151-1415	88044	AN4-21A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
362	33	PAOZZ	5310-00-807-1469	96906	MS21042-5	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
362	34	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
362	35	PAOOO	1560-00-670-7608	97499	204-001-340-1	.SUPPORT ASSY..........UHE,UHH,UHV,UHX	EA	1
362	35A	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	3
362	35B	PAOZZ	5310-00-857-5557	96906	MS21045L4	..NUT,SELF-LOCKING..........UHE,UHH,UHV,UHX	EA	3
362	35C	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
362	36	PAOZZ	3120-00-670-5312	97499	21-006B7-5-20-5	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
362	37	PAOZZ	5307-00-670-7622	97499	204-001-344-1	..STUD,SHOULDERED..........UHE,UHH,UHV,UHX	EA	1
362	38	PAOZZ	5310-00-857-5559	96906	MS21045L5	..NUT,SELF-LOCKING, HEXAGON..........UHE,UHH,UHV,UHX	EA	1
362	39	PAOZZ	5307-00-670-7623	97499	204-001-347-1	..STUD,SHOULDERED..........UHE,UHH,UHV,UHX	EA	3
362	40	PAOZZ	1680-00-923-2926	97499	204-076-410-1	.BOOT ASSY,CONTROL INSTALLATION..........UHE,UHH,UHV,UHX	EA	1
362	41	PAOZZ	1560-00-924-8083	97499	204-076-412-1	.FLANGE,SWIVEL JOINT..........UHE,UHH,UHV,UHX	EA	1
362	42	PAOZZ	5340-00-193-0133	88044	AN735D26	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
362	43	PAOZZ	5340-00-193-0134	88044	AN735D27	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
362	44	PAOZZ	5305-00-989-6265	96906	MS35207-262	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
362	45	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
362	46	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	2
362	47	PAOZZ	5306-00-180-0471	88044	AN175-16	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
362	48	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
362	49	AOOOO	1680-01-036-8951	97499	205-076-099-3	.SERVOCYLINDER,RH SEE FIG.185 FOR BREAKDOWN. PN 205-076-099-3 AND 204-076-055-1(AS A UNIT) ARE REPLACED BY 205-076-056-103..........UHE,UHH,UHV,UHX	EA	1
362	49A	AOOOO		97499	205-076-056-103	.CYLINDER SEE FIG 185A FOR BREAKDOWN REPLACES 205-076-099-3 AND 204-076-055-1 AS A UNIT..........UHE,UHH,UHV,UHX	EA	1
362	50	PAOZZ		97499	204-076-171-1	.BOOT,DUST AND MOIST URE..........UHE,UHH,UHV,UHX	EA	1

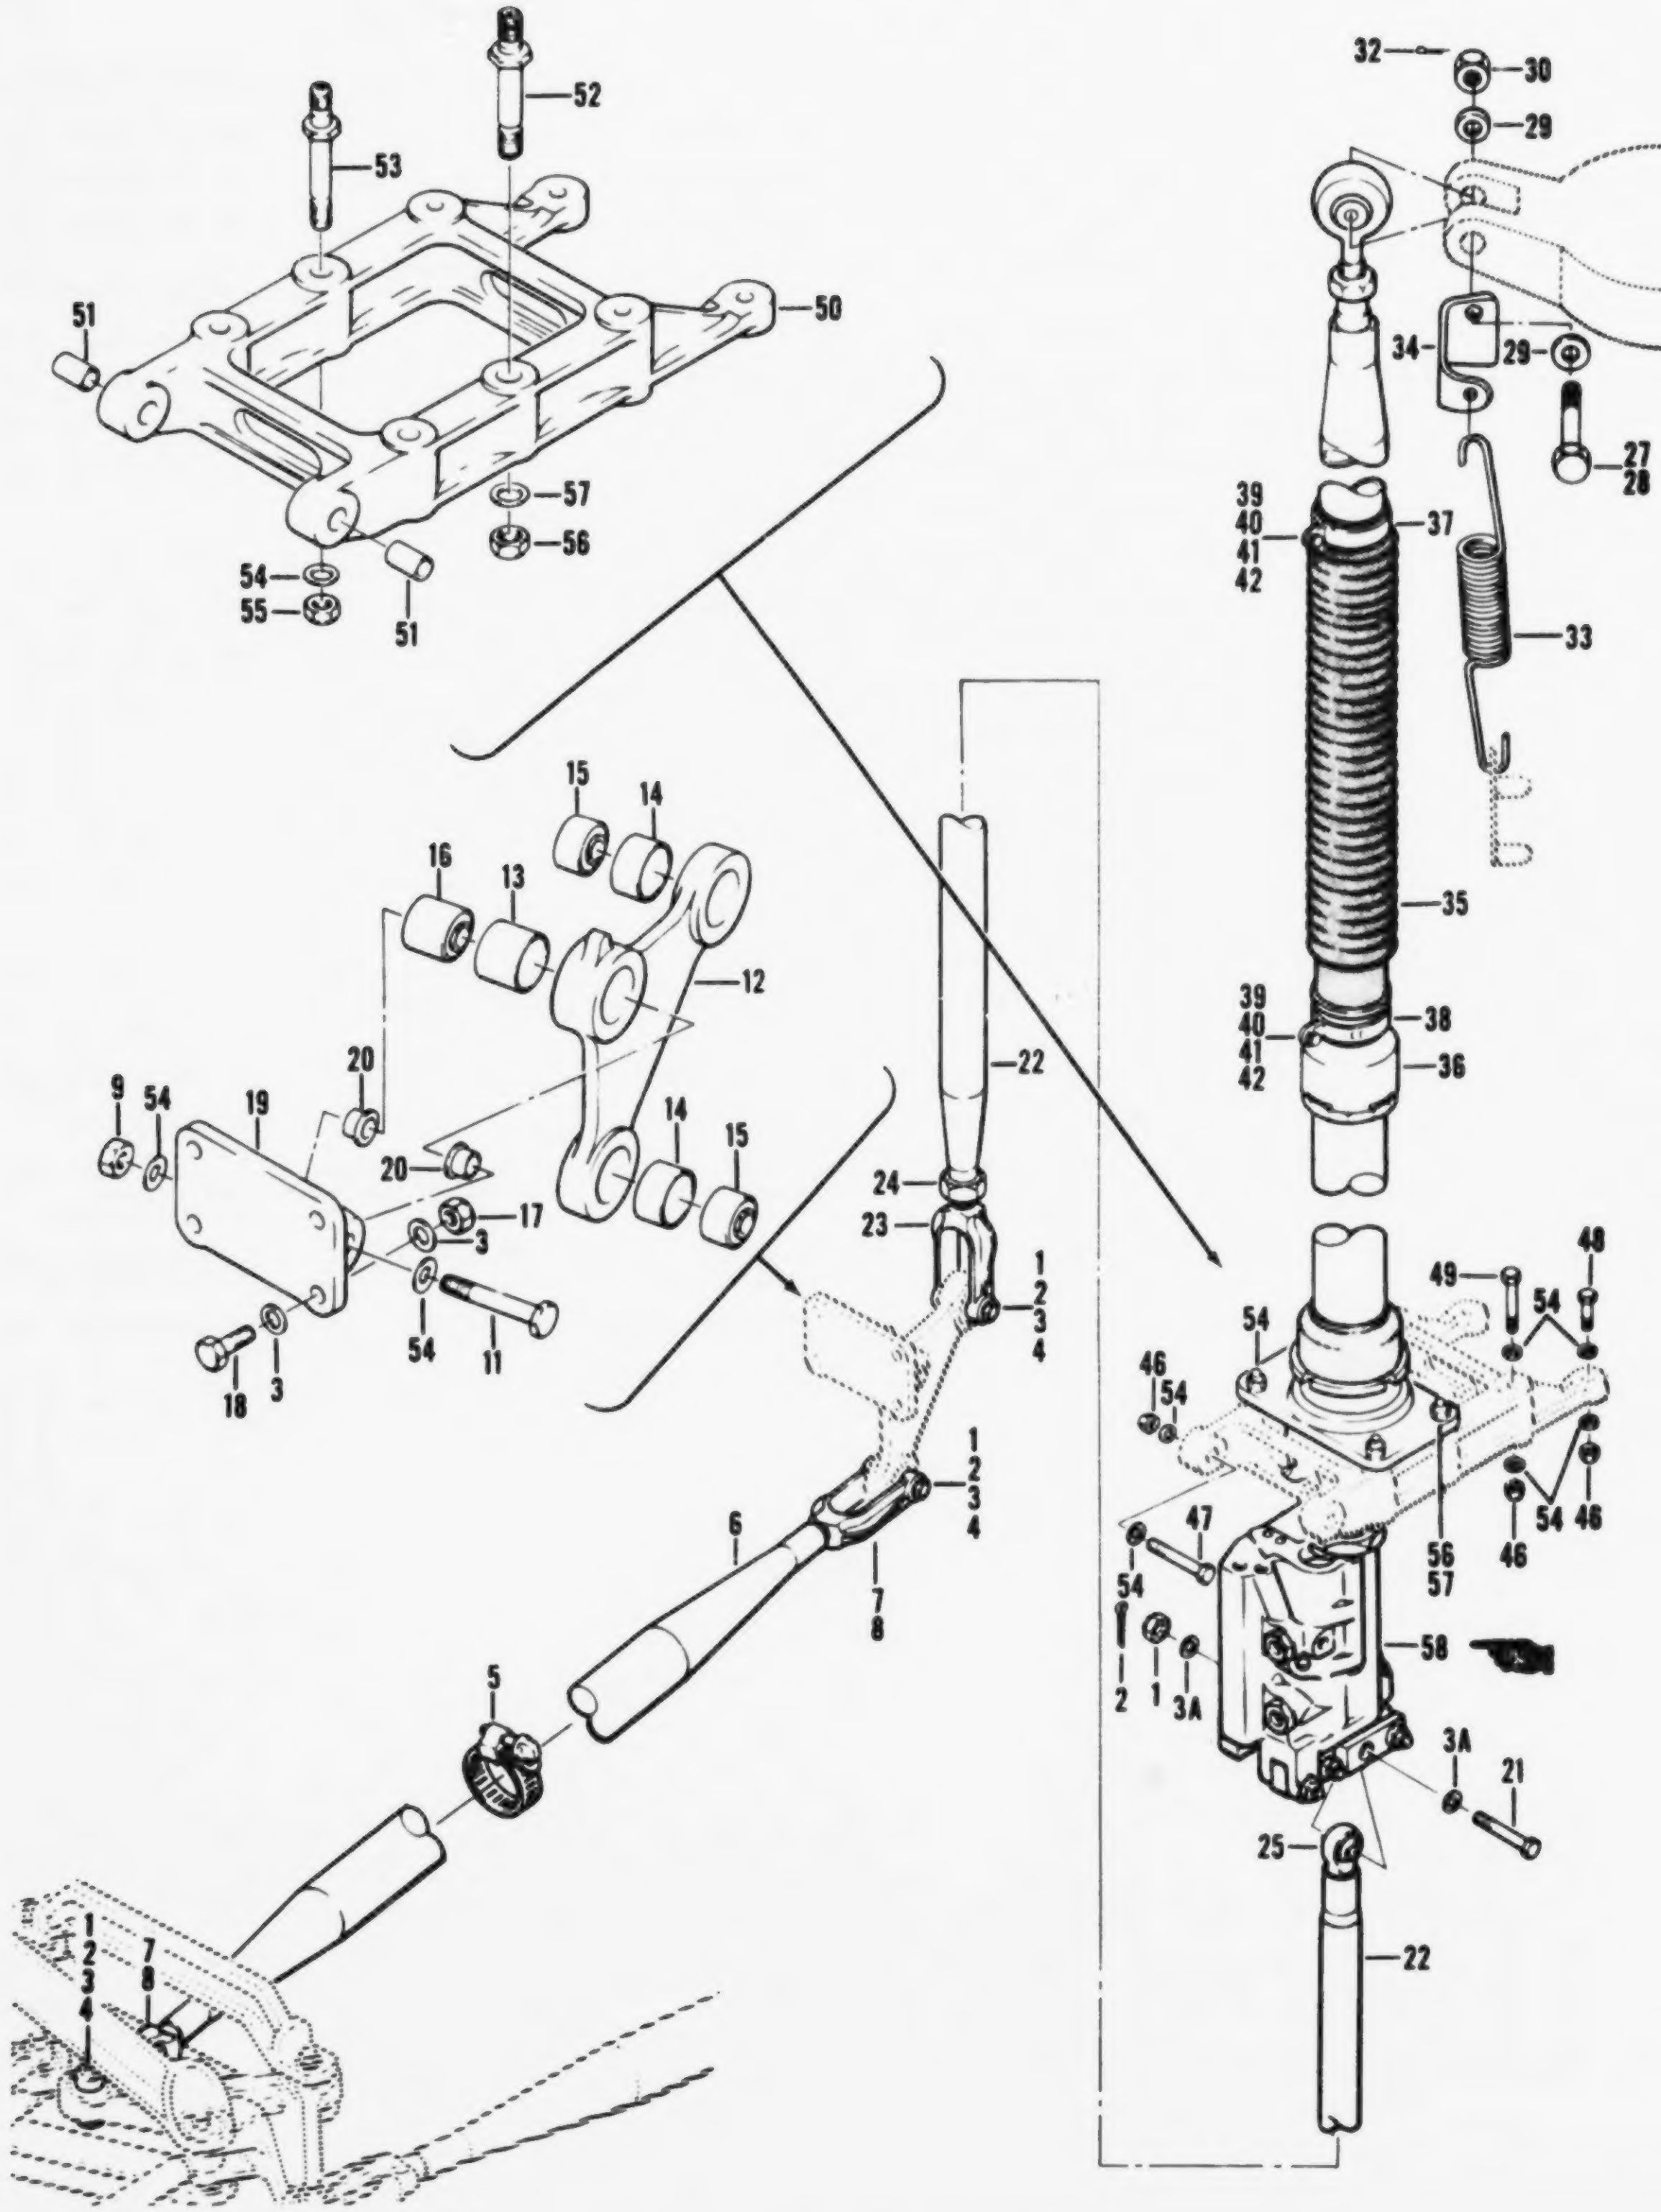
53
52
51
50
57
56
54
55
51
15
14
16
13
12
20
9
54
19
20
17
3
14
15
18
3
54
11
22
24
23
1
2
3
4
1
2
3
4
6
7
8
5
1
2
3
4
7
8
32
30
29
34
29
27
28
39
40
41
42
37
33
35
39
40
41
42
38
36
49
48
54
54
46
54
47
54
56
57
46
54
46
58
2
1
3A
3A
21
25
22

Figure 363. Control Installation, Fore and Aft and Lateral Cyclic

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
363		XCFZZ		97499	204-001-077-1	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA....UHC,UHM	EA	1
363		XCFZZ		97499	204-001-077-5	CONTROL INSTL,FORE AND AFT AND LATERAL CYCLIC USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA....UHC,UHM	EA	1
363	1	PAOZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING,SL....UHC,UHM	EA	4
363	2	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER....UHC,UHM	EA	4
363	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT....UHC,UHM	EA	14
363	3A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT....UHC,UHM	EA	2
363	4	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,MACHINE....UHC,UHM	EA	3
363	5	PAOZZ	4730-00-278-9101	88044	AN737RM44	.CLAMP,HOSE....UHC,UHM	EA	1
363	6	PAOOO	3040-00-624-5121	97499	204-001-016-5	.CONNECTING LINK, RIGID....UHC,UHM	EA	1
363	7	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY....UHC,UHM	EA	2
363	8	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE....UHC,UHM	EA	2
363	9	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,PLAIN....UHC,UHM	EA	1
363	11	PAOZZ	5306-00-275-9562	88044	AN175-21	.BOLT,MACHINE....UHC,UHM	EA	1
363	12	PAOOO	1560-00-758-3668	97499	204-001-373-1	.BELL CRANK ASSY....UHC,UHM	EA	1
363	13	PAOZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE....UHC,UHM	EA	1
363	14	PAOZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE....UHC,UHM	EA	2
363	15	PAOZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL....UHC,UHM	EA	2
363	16	PAOZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL....UHC,UHM	EA	1
363	17	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING, HEXAGON....UHC,UHM	EA	4
363	18	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE....UHC,UHM	EA	4
363	19	PAOOO	1560-00-980-9545	97499	204-001-350-2	.SUPPORT,CYCLIC CONTROL....UHC,UHM	EA	1
363	20	PAOZZ	3120-00-625-0051	97499	22-007-19-19-18	..BUSHING,SLEEVE....UHC,UHM	EA	2
363	21	PAOZZ	5306-00-174-4114	88044	AN174H14	.BOLT,MACHINE....UHC,UHM	EA	1
363	22	PAOOO	1680-00-872-1150	97499	540-001-050-7	.TUBE ASSY....UHC,UHM	EA	1
363	23	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END....UHC,UHM	EA	1
363	24	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGON....UHC,UHM	EA	1
363	25	XAOZZ		97499	47-140-252-5	..BEARING,ROD END....UHC,UHM	EA	1
363	27	PBOZZ	5306-00-924-7783	80205	NAS1308-36D	.BOLT,SHEAR USBL EFF 64-14101 THRU 64-14174 U/O PN 204-001-077-1....UHC,UHM	EA	1
363	28	PAOZZ	5306-00-673-1723	80205	NAS1308-38D	.BOLT,MACHINE USBL EFF 64-14175 & SUBSEQUENT....UHC,UHM	EA	1
363	29	PAOZZ	5310-00-911-9446	97499	140-007-33-28C4	.WASHER,RECESSED....UHC,UHM	EA	2
363	30	PAOZZ	5310-00-871-8758	96906	MS17825-8	.NUT,SELF-LOCKING,SL HEXAGON....UHC,UHM	EA	1
363	32	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER....UHC,UHM	EA	1
363	33	PAOZZ	5360-00-930-6292	97499	540-001-308-1	.SPRING,HELICAL, EXTENSION U/O PN 204-001-077-5....UHC,UHM	EA	1
363	34	PAOZZ	1615-00-875-9718	97499	540-001-315-1	.BRACKET ASSY U/O PN 204-001-077-5....UHC,UHM	EA	1
363	35	PAOZZ	1680-00-923-2926	97499	204-076-410-1	.BOOT ASSY,CONTROL INSTALLATION....UHC,UHM	EA	1
363	36	PAOZZ	1560-00-924-8083	97499	204-076-412-1	.FLANGE,SWIVEL JOINT....UHC,UHM	EA	1
363	37	PAOZZ	5340-00-193-0133	88044	AN735D26	.CLAMP,LOOP....UHC,UHM	EA	1
363	38	PAOZZ	5340-00-193-0134	88044	AN735D27	.CLAMP,LOOP....UHC,UHM	EA	1
363	39	PAOZZ	5305-00-989-6265	96906	MS35207-262	.SCREW,MACHINE....UHC,UHM	EA	2
363	40	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE....UHC,UHM	EA	2

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.								
363	41	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHC,UHM	EA	4
363	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	2
363	46	PAOZZ	5310-00-807-1469	96906	MS21042-5	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	6
363	47	PAOZZ	5306-00-182-1894	88044	AN175-16A	.BOLT,MACHINE	UHC,UHM	EA	2
363	48	PAOZZ	5306-00-151-2625	88044	AN5-16A	.BOLT,MACHINE	UHC,UHM	EA	2
363	49	PAOZZ	5306-00-151-2617	88044	AN5-26A	.BOLT,MACHINE	UHC,UHM	EA	2
363	50	PAOOO	1560-00-872-1138	97499	540-001-300-1	.SUPPORT ASSEMBLY	UHC,UHM	EA	1
363	51	XDOZZ	3120-00-872-1260	97499	21-007B9-5-20-5	..BUSHING,SLEEVE	UHC,UHM	EA	2
363	52	PAOZZ	5307-00-872-1268	97499	540-001-302-1	..STUD,SHOULDERED	UHC,UHM	EA	1
363	53	PAOZZ	5307-00-872-1269	97499	540-001-303-1	..STUD,SHOULDERED	UHC,UHM	EA	3
363	54	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT	UHC,UHM	EA	15
363	55	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	3
363	56	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	3
363	57	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT	UHC,UHM	EA	2
363	58	AOOOO		97499	204-076-511-19	.CYLINDER ASSY,RH SEE FIG 185 FOR BREAKDOWN	UHC,UHM	EA	1

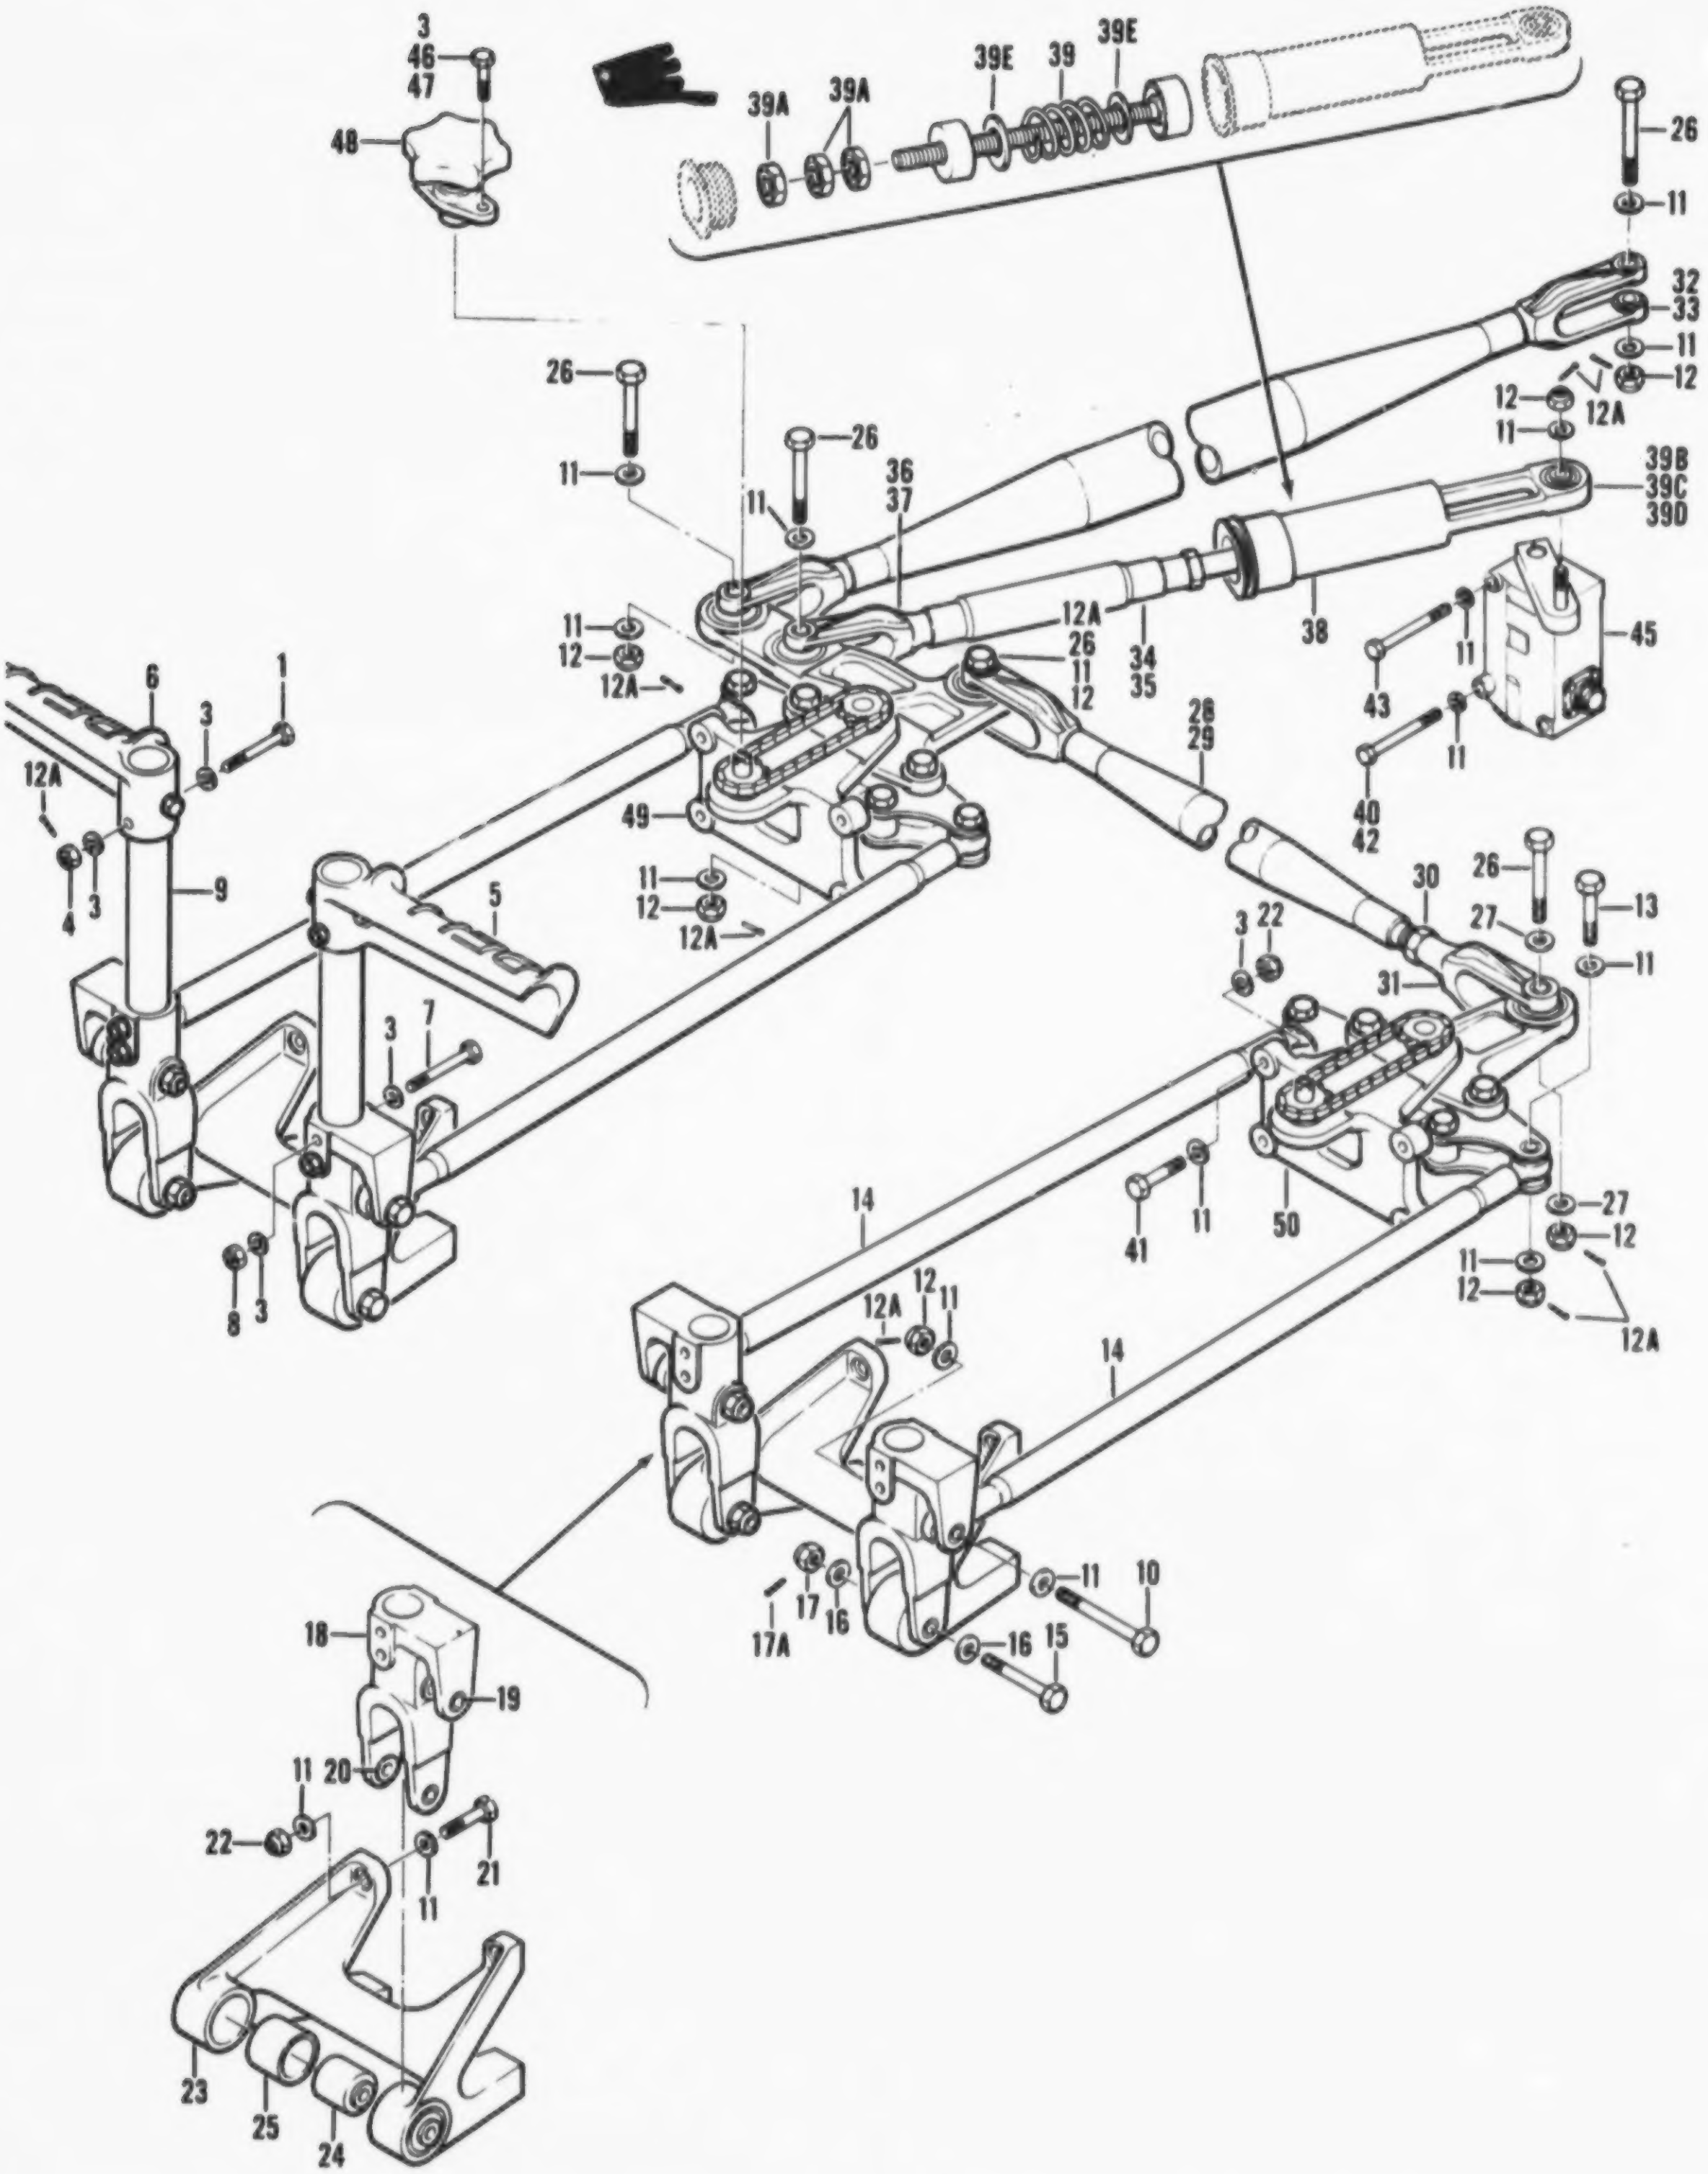
3
46
47
48
39A
39A
39E
39
39E
26
11
32
33
11
12
12
12A
11
39B
39C
39D
26
11
26
11
36
37
11
12
12A
12A
26
11
12
34
35
38
45
43
11
11
40
42
6
1
3
12A
4
3
9
49
28
29
5
11
12
12A
3
22
26
13
27
11
30
31
3
7
41
11
50
27
12
11
12
12A
8
3
14
12A
12
11
14
11
10
17
16
17A
16
15
18
19
11
20
22
21
11
23
25
24

Figure 364. Control Installation, Tail rotor Forward Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
364		XCFZZ		97499	204-001-059-17	CONTROL INSTL,TAIL ROTOR FORWARD SECTION USBL EFF 64-14101 & SUBSEQUENT SEE FIG.6 FOR NHA.....UHM	EA	1
364		XCFZZ		97499	205-001-003-3	CONTROL INSTL,TAIL ROTOR FORWARD SECTION USBL EFF 62-2106 THRU 62-2113 SEE FIG.7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
364		XCFZZ		97499	205-001-003-5	CONTROL INSTL,TAIL ROTOR FORWARD SECTION USBL EFF 62-12351 THRU 62-12372 SEE FIG.7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
364		XCFZZ		97499	205-001-003-7	CONTROL INSTL,TAIL ROTOR FORWARD SECTION USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
364		XCFZZ		97499	205-001-003-9	CONTROL INSTL,TAIL ROTOR FORWARD SECTION USBL EFF 63-12956 THRU 64-13901 SEE FIG.7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
364		XCFZZ		97499	205-001-003-11	CONTROL INSTL,TAIL ROTOR FORWARD SECTION USBL EFF 65-9565 & SUBSEQUENT SEE FIG.7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
364	1	PAOZZ	5306-00-151-2308	88044	AN23-29	.BOLT,CLEVIS.....UHE,UHH,UHM,UHV,UHX	EA	4
364	3	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.....UHE,UHH,UHM,UHV,UHX	EA	26
364	4	PAOZZ	5310-00-785-1755	96906	MS17825-3	.NUT,SELF-LOCKING,SL HEXAGON.....UHE,UHH,UHM,UHV,UHX	EA	4
364	5	PAOZZ	1680-00-986-9930	97499	204-001-702-5	.PAD,LEFT HAND,REMOV.....UHE,UHH,UHM,UHV,UHX	EA	1
364	6	PAOZZ	1680-00-991-0310	97499	204-001-702-6	.PAD,PEDAL RIGHT HAN.....UHE,UHH,UHM,UHV,UHX	EA	1
364	7	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE.....UHE,UHH,UHM,UHV,UHX	EA	4
364	8	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON .....UHE,UHH,UHM,UHV,UHX	EA	4
364	9	PAOZZ	1560-00-981-6988	97499	204-001-705-9	.ARM,PEDAL CONTROL ANTI-TORGUE.....UHE,UHH,UHM,UHV,UHX	EA	2
364	10	PAOZZ	5306-00-151-0324	88044	AN174H30	.BOLT,CLOSE TOLERANC.....UHE,UHH,UHM,UHV,UHX	EA	4
364	11	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....UHE,UHH,UHM,UHV,UHX	EA	53
364	12	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN,CASTELLAT.....UHE,UHH,UHM,UHV,UHX	EA	14
364	12A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.....UHE,UHH,UHM,UHV,UHX	EA	18
364	13	PAOZZ	5306-00-174-4114	88044	AN174H14	.BOLT,CLOSE TOLER.....UHE,UHH,UHM,UHV,UHX	EA	4
364	14	PAOZZ	3040-00-736-3999	97499	204-001-014-7	.CONNECTING LINK,RIG RIGID.....UHE,UHH,UHM,UHV,UHX	EA	4
364	15	PAOZZ	5306-00-151-2321	81352	AN176H23	.BOLT,CLOSE TOLERANC.....UHE,UHH,UHM,UHV,UHX	EA	4
364	16	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT.....UHE,UHH,UHM,UHV,UHX	EA	8
364	17	PAOZZ	5310-00-582-6068	81352	AN310-6	.NUT,PLAIN,CASTELLAT.....UHE,UHH,UHM,UHV,UHX	EA	4
364	17A	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER.....UHE,UHH,UHM,UHV,UHX	EA	4
364	18	PA000	1560-00-991-0311	97499	204-001-757-5	.LEVER ASSEMBLY,CONT.....UHE,UHH,UHM,UHV,UHX	EA	4
364	19	PAOZZ	3120-00-708-0080	97499	20-006-15-12-16	..BUSHING,SLEEVE.....UHE,UHH,UHM,UHV,UHX	EA	2
364	20	PAOZZ	3120-00-912-4763	97439	22-008B23-19-20	..BUSHING,SLEEVE.....UHE,UHH,UHM,UHV,UHX	EA	2
364	21	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE.....UHE,UHH,UHM,UHV,UHX	EA	8
364	22	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE HEXAGON.....UHE,UHH UHM,UHV,UHX	EA	16
364	23	PA000	1560-00-624-6834	97499	204-001-700-1	.SUPPORT ASSEMBLY,PE ANTI-TORGUE.....UHE,UHH,UHM,UHV,UHX	EA	2
364	24	PAOZZ	3110-00-158-6297	21335	DWGANG25	..BEARING,BALL,AIRFRA.....UHE,UHH,UHM,UHV,UHX	EA	2
364	25	PAOZZ	3120-00-690-7504	97499	23S6-6A	..BUSHING,SLEEVE.....UHE,UHH,UHM,UHV,UHX	EA	2
364	26	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER.....UHE,UHH,UHM,UHV,UHX	EA	5
364	27	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.....UHE,UHH,UHM,UHV,UHX	EA	2
364	28	PA000	3040-00-624-5142	97499	204-001-012-1	.CONNECTING LINK,RIG RIGID.....UHE,UHH,UHM,UHV,UHX	EA	1
364	29	XAOZZ		97499	204-001-012-21	..TUBE ASSY,CONTROLS.....UHE,UHH,UHM,UHV,UHX	EA	1
364	30	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGON.....UHE,UHH,UHM,UHV,UHX	EA	1
364	31	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END.....UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
364	32	PA000	3040-00-731-7990	97499	204-001-027-17	.CONNECTING LINK, RIGID U/O PN 204-001-059-1,-3,-5,-7,-9,-13,-15,-17.........UHM	EA	1
364	33	PA000	3040-00-952-8835	97499	205-001-011-9	.CONNECTING LINK, RIGID U/O PN 205-001-003-3,-5,-7,-9,-11 ....UHE,UHH,UHV,UHX	EA	1
364	34	PA000	3040-00-858-8422	97499	204-001-046-5	.CONNECTING LINK, RIGID U/O PN 204-001-059-1,-3,-5,-7,-9,-13,-15,-17.........UHM	EA	1
364	35	PA000	3040-00-967-8758	97499	205-001-033-1	.CONNECTING LINK, RIGID U/O PN 205-001-003-3,-5,-7,-9,-11 ....UHE,UHH,UHV,UHX	EA	1
364	36	PAOZZ	5340-00-765-6255	97499	204-001-006-1	..CLEVIS,ROD END.........UHE,UHH,UHV,UHX,UHC	EA	1
364	37	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE.........UHE,UHH,UHV,UHX,UHC	EA	2
364	38	PAOFF	1560-00-888-7348	97499	204-001-045-9	.FORCE GRADIENT ASSY.........UHE,UHH,UHM,UHV,UHX	EA	1
364	39	XAFZZ		97499	204-001-044-9	..SPRING ASSEMBLY.........UHE,UHH,UHM,UHV,UHX	EA	1
364	39A	PAOZZ	5310-00-167-1302	88044	AN316-7R	...NUT.........UHE,UHH,UHM,UHV,UHX	EA	3
364	39B	XAFFD	1680-01-192-4912	97499	204-001-042-5	..CYLINDER ASSY,FORCE.........UHE,UHH,UHM,UHV,UHX	EA	1
364	39C	PAFZZ	3120-00-624-5248	97499	120-013-4A	...BUSHING,SLEEVE.........UHE,UHH,UHM,UHV,UHX	EA	1
364	39D	PAFZZ	3110-00-042-1045	96906	MS27643-4	...BEARING.........UHE,UHH,UHM,UHV,UHX	EA	1
364	39E	PAOZZ		88044	AN960JD1016	...WASHER,FLAT.........UHE,UHH,UHM,UHV,UHX	EA	2
364	40	PAOZZ	5306-00-182-2038	88044	AN4H22A	.BOLT,MACHINE U/O PN 204-001-059-1,-3,-5,-7,-9,-13,-15,-17 ....UHM	EA	4
364	41	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE U/O PN 204-001-059-1,-3,-5,-7,-9,-13,-15,-17 ....UHE,UHH,UHM,UHV,UHX	EA	8
364	42	PAOZZ	5306-00-151-1412	88044	AN4-24A	.BOLT,MACHINE U/O PN 205-001-003-3,-5,-7,-9,-11 ....UHE,UHH,UHM,UHV,UHX	EA	3
364	43	PAOZZ	5306-00-182-2019	88044	AN4H25A	.BOLT,MACHINE U/O PN 205-001-003-3,-5,-7,-9,-11 ....UHE,UHH,UHV,UHX	EA	1
364	45	PAOFF	1680-00-909-8716	97499	204-001-376-3	.BRAKE,MAGNETIC.........UHE,UHH,UHM,UHV,UHX	EA	1
364	46	PBOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE U/O PN 204-001-059-1,-3,-5,-7,-9,-13,-15,-17 ....UHM	EA	2
364	47	PAOZZ	5306-00-182-2061	88044	AN3H10A	.BOLT,MACHINE U/O PN 205-001-003-3,-5,-7,-9,-11 ....UHE,UHH,UHV,UHX	EA	2
364	48	PAOZZ	5355-00-979-8943	97499	204-001-852-1	.KNOB ASSEMBLY SEE FIG.352 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1
364	49	PAOFF	1560-00-053-3949	97499	204-001-762-13	.ADJUSTER ASSY,PILOT SEE FIG.369 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1
364	50	PBOFF	1615-00-053-3954	97499	204-001-762-15	.ADJUSTER ASSY, CO-PILOTS SEE FIG.369 FOR BREAKDOWN ....UHE,UHH,UHM,UHV,UHX	EA	1

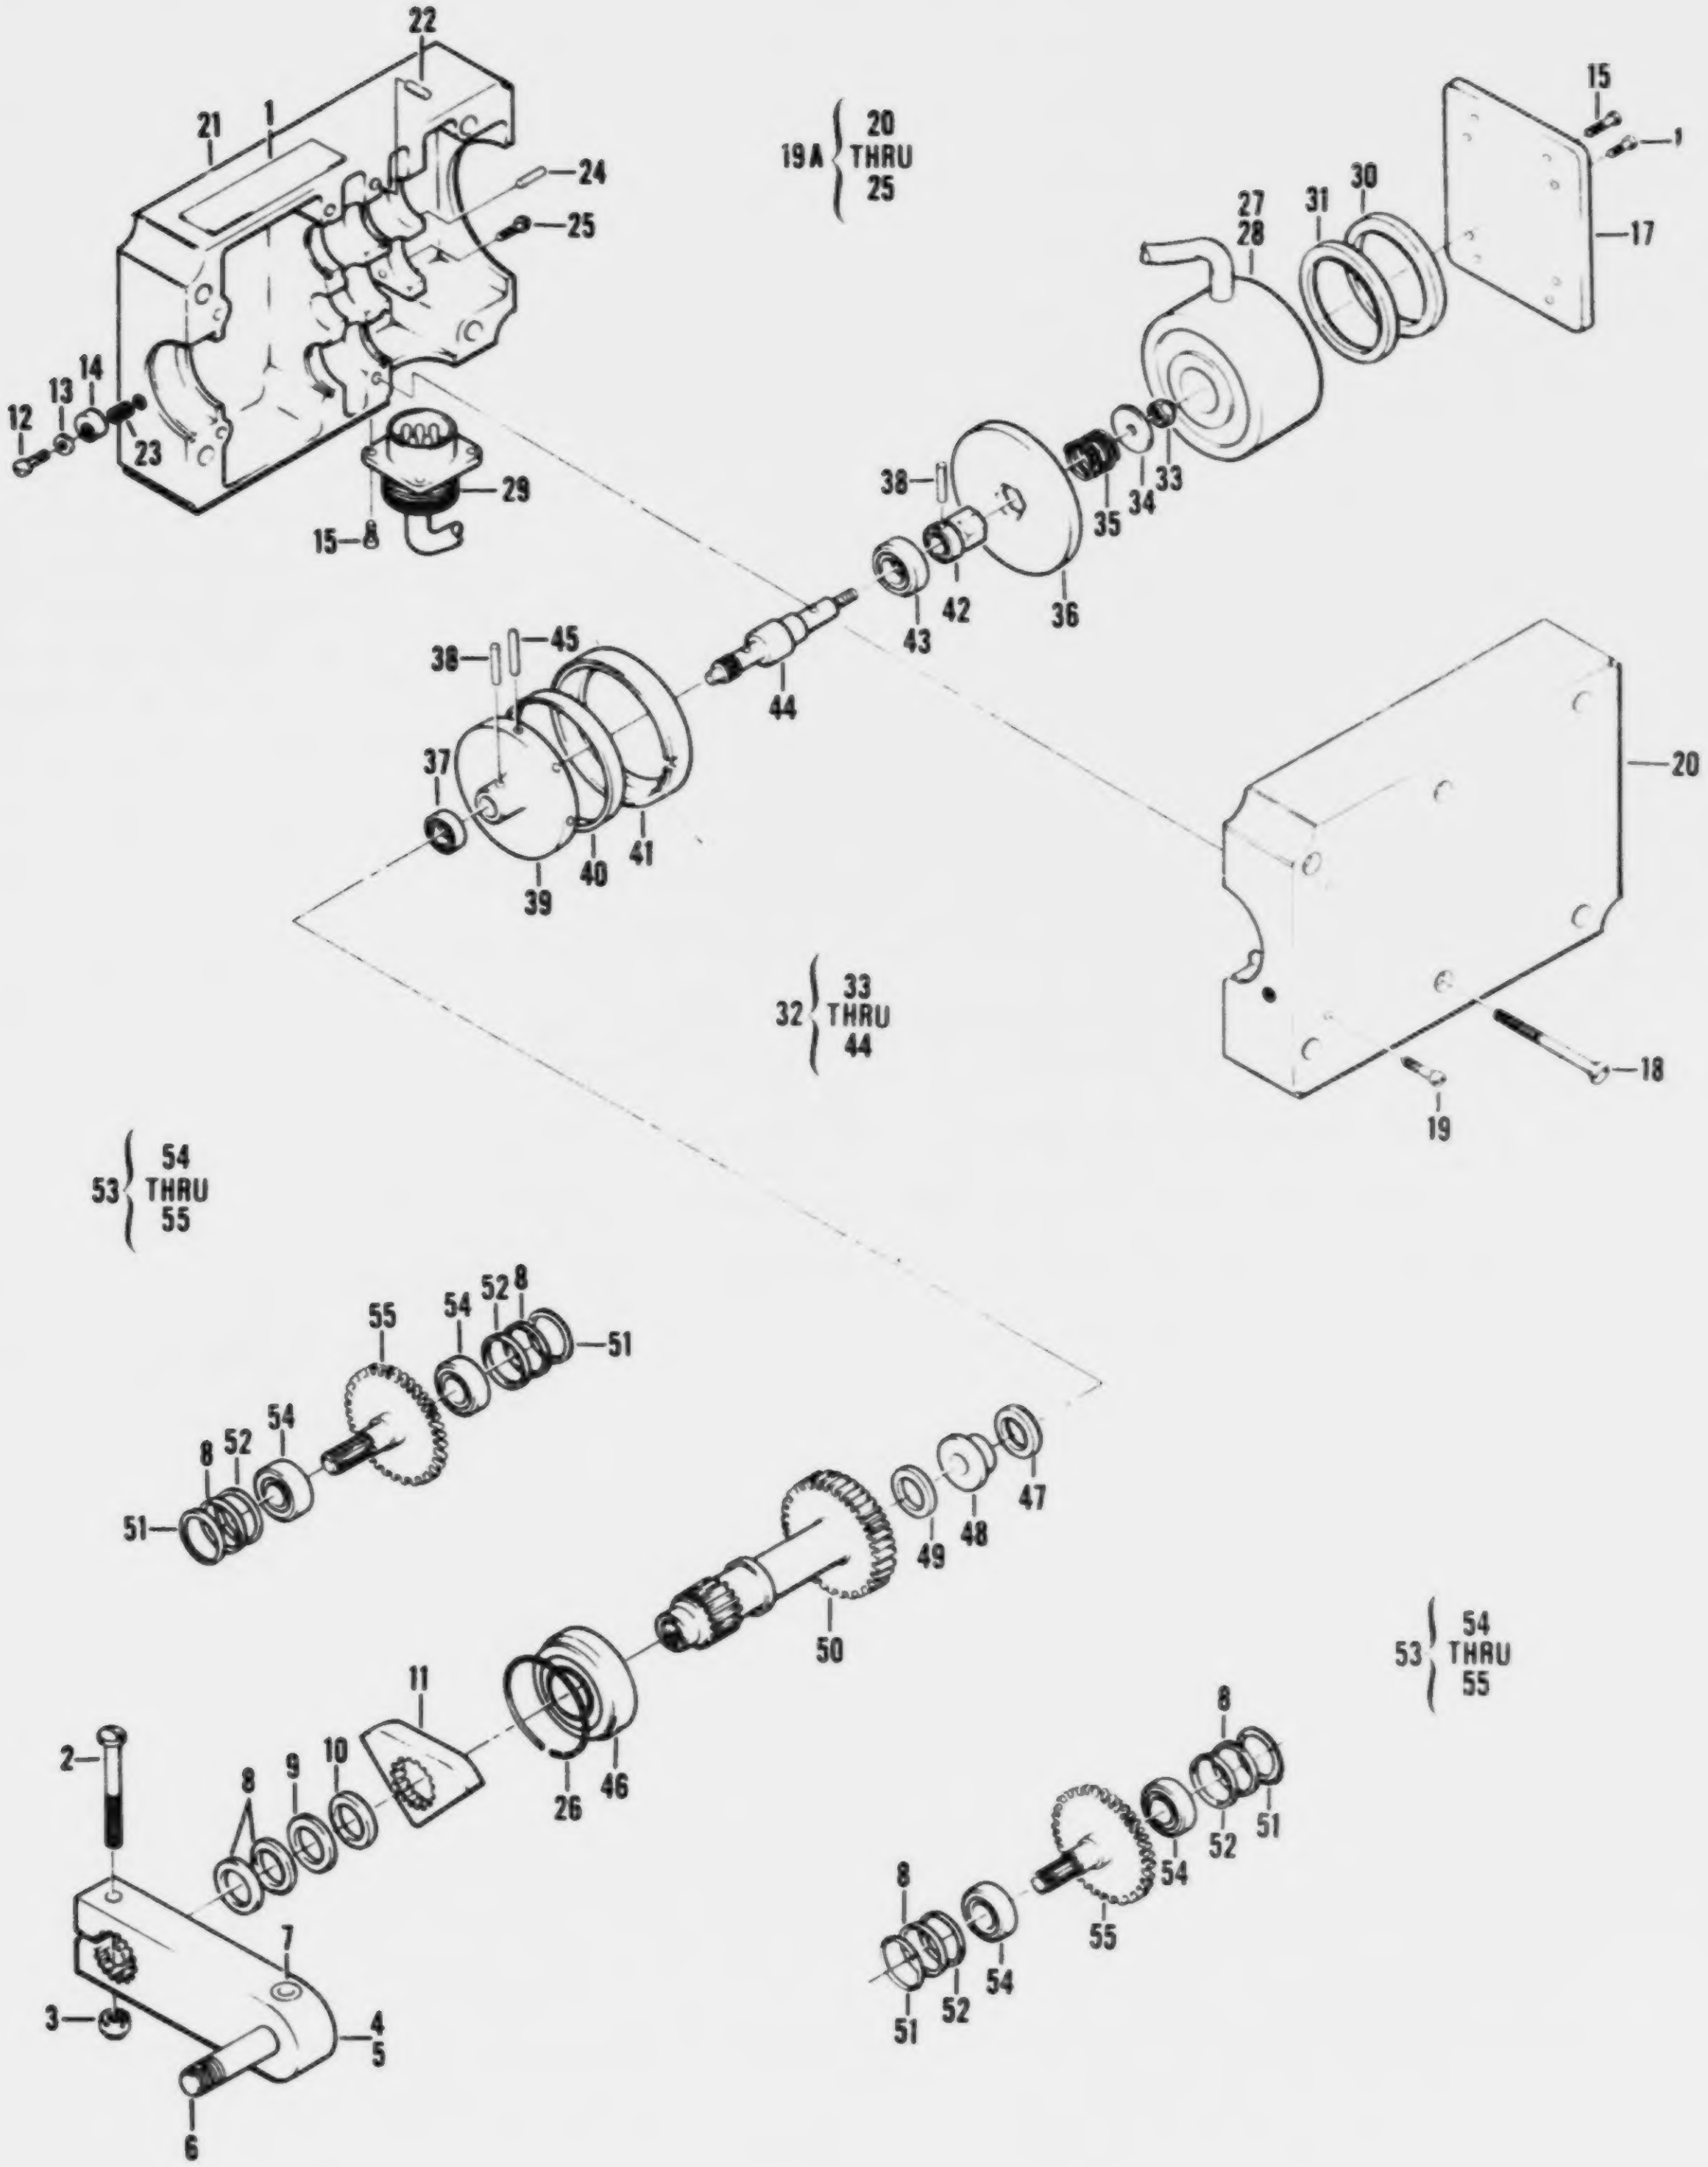
22
21
1
19A { 20 THRU 25
24
25
15
1
17
27
28
31
30
14
13
12
23
29
15
38
35
34
33
42
43
36
38
45
44
37
41
40
39
20
32 { 33 THRU 44
18
19
53 { 54 THRU 55
55
54
52
8
51
54
52
8
51
47
48
49
50
53 { 54 THRU 55
11
2
10
9
8
26
46
8
52
51
54
55
8
52
51
54
7
3
4
5
6

Figure 365. Magnetic Brake Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
365		PAOFF	1680-00-909-8098	83777	MP498-3	BRAKE ASSY,MAGNETIC SEE FIG.358.359 & 364 FOR NHA ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	1	PAFZZ	9905-00-831-0673	55943	MP517	.PLATE,IDENTIFICATIO ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	2	PAOZZ	5305-00-286-1766	88044	AN525-10R20	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	3	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING, HEXAGON ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	4	PAOZZ	1680-00-946-1132	83777	MP482	.ARM ASSY ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	5	XAFZZ		83777	MP493	..ARM,MAGNETIC BRAKE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	6	XAFZZ		83777	MP496	..STUD,ARM ASSEMBLY ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	7	PAFZZ	5320-00-068-2277	96906	MS20613-5C14	..RIVET,SOLID ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	LB	1
365	8	XDFZZ		83777	MP504-3	.SHIM ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	9	PAFZZ	5365-00-016-6167	83777	MP504-2	.SPACER,RING ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	10	PAFZZ	5365-00-016-6163	83777	MP504-1	.SPACER,RING ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	11	PAFZZ	1680-00-946-1131	83777	MP481	.STOP,LIMIT,BRAKE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	12	PAFZZ	5305-00-727-8833	96906	MS51959-3	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	13	PAFZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	14	PAFZZ	1680-00-946-1130	83777	MP486	.STOP,BRAKE,ACTUATOR ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	15	PAFZZ	5305-00-925-4774	96906	MS35275-214	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
365	16	PAFZZ	5305-00-922-8777	96906	MS35275-202	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365	17	XDFZZ	1680-00-833-3927	83777	MP488	.COVER,END,HOUSING ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	18	PAFZZ	5305-00-723-9423	96906	MS51959-50	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	19	PAFZZ	5305-00-660-2625	96906	MS35265-47	.SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	19A	XDFZZ		83777	MP515	.HOUSING,ASSY ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	19A	XAFZZ		83777	800112	..HOUSING ASSEMBLY ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	20	XAFZZ		83777	800111	...HOUSING,LH ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	21	XAFZZ		83777	800110	...HOUSING,RH ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	22	XAFZZ		83777	MP525	....PIN,DOWEL ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	23	XAFZZ		83777	MP487	..SHAFT,ADJ STOP ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	24	XAFZZ		83777	MP516	..PIN,STRAIGHT ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	25	XAFZZ		83777	MP533	..SCREW,MACHINE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365	26	PAFZZ	5365-00-285-1466	96906	MS16629-4112	.RING,RETAINING ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	27	PAFZZ	5950-00-056-4408	83777	MP485	.COIL ASSY,ELEC ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	28	XAFZZ		83777	MP532	..COIL,SOLENOID ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	29	XAFZZ		96906	MS3102R14S9P	..CONNECTOR,RECEPT ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	30	PAFZZ	5365-00-081-5976	83777	400204-1	.SHIM ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365	31	PAFZZ	5365-00-081-5918	83777	400204-2	.SHIM ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365	32	PAFZZ	1680-00-946-1134	83777	MP483	.DAMPING AND BRAKE ASSY ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	33	PAFZZ	5310-00-982-4999	96906	MS21044C04	..NUT,SELF-LOCKING, HEXAGON ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
355	34	PAFZZ	5310-00-882-7865	83777	MP531	..WASHER,FLAT ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	35	PAFZZ	5360-00-998-5001	83777	MP520	..SPRING,HELICAL,COMP ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	36	XDFZZ		83777	MP522	..PLATE,BRAKE ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	37	XDFZZ	3110-00-141-9561	49956	302-1003P3	..BEARING,BALL,ANNULA ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	38	PAFZZ	5315-00-882-1438	96906	MS16562-193	..PIN,SPRING ...... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
365	39	XDFZZ	1680-00-181-5544	83777	MP523	..HOLDER DAMPER....................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	40	PAFZZ	5365-00-874-2652	83777	MP555	..RING,REINFORCING................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	41	PAFZZ	1680-00-073-8477	83777	MP495	..RING,DAMPING.....................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	42	XDFZZ		83777	MP521	..STUD,DRIVE.......................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	43	XDFZZ	3110-00-289-6739	93712	99-9518-4	..BEARING,BALL,ANNULA.............	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	44	XDFZZ		83777	MP524	..GEARSHAFT,SPUR..................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	45	PAFZZ	5315-00-997-1918	83777	MP519	.PIN,STRAIGHT, HEADLESS..........	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
365	46	PAFZZ	3110-00-903-2182	83777	MP506	.BEARING,BALL,ANNULA..............	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	47	PAFZZ	5365-00-882-0278	83777	MP526	.SHIM................................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	48	PAFZZ	3120-00-917-6063	83777	MP528	.BEARING,SLEEVE....................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	49	PAFZZ	5365-00-882-0318	83777	MP561	.SHIM................................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	50	PAFZZ	3040-00-950-9568	83777	MP480	.GEARSHAFT,SPUR....................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	51	PAFZZ	5365-00-929-3978	83777	MP497	.SPACER,RING.......................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365	52	PAFZZ	5365-00-016-6227	83777	MP504-4	.SHIM................................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365	53	AFFZZ	1680-00-946-1151	83777	MP478	.GEAR ASSEMBLY......................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	54	XDFZZ	3110-00-289-6739	93712	99-9518-4	..BEARING,BALL,ANNULA.............	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365	55	PAFZZ	3040-00-853-8289	83777	MP484	..GEARSHAFT,SPUR..................	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

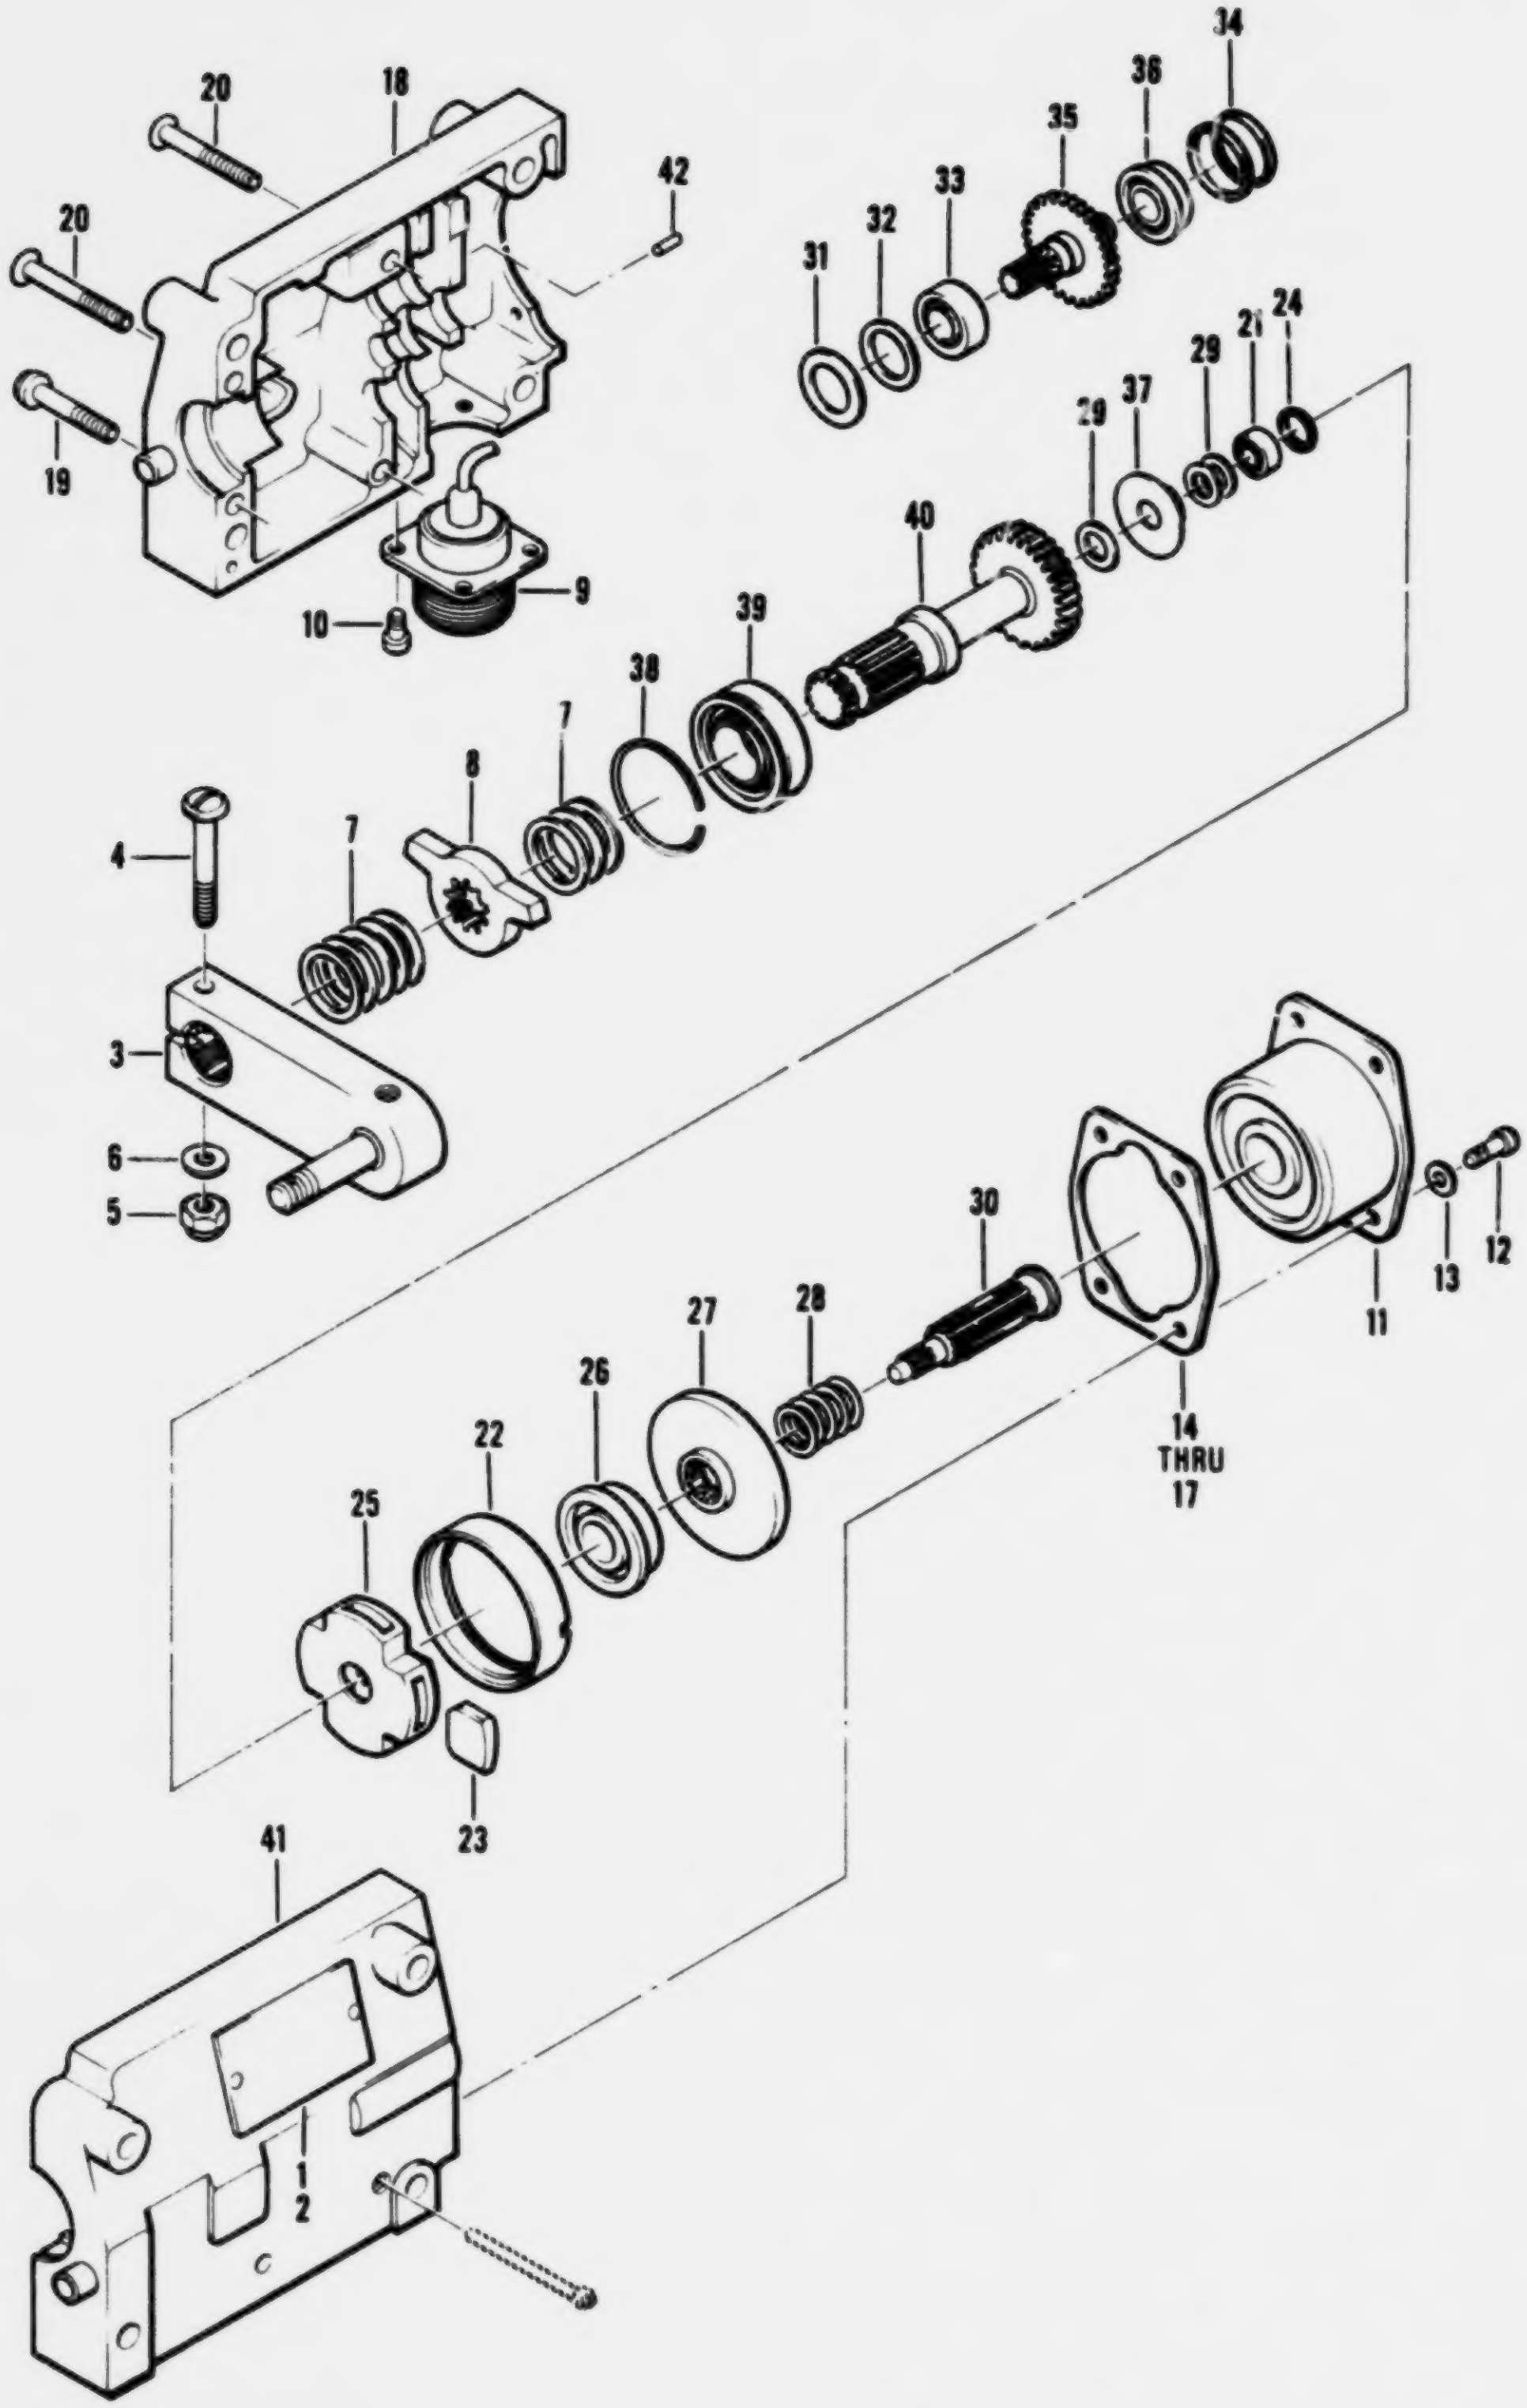
20
18
42
20
19
10
9
34
36
35
33
32
31
24
21
29
37
29
40
39
38
7
8
7
4
3
6
5
30
28
27
26
22
25
23
14
THRU
17
11
13
12
41
1
2

Figure 365A. Magnetic Brake

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
365A		PAOFF	1680-00-921-5992	81039	R460M15-11	BRAKE,MAGNETIC SEE FIG 353,359 & 364 FOR NHA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	1	PAFZZ	9905-00-890-2778	81039	6021541-16	PLATE,IDENTIFICATIO .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	2	PAFZZ	5305-00-253-5607	96906	MS21318-8	SCREW,DRIVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365A	3	PAFZZ	1680-00-066-9413	81039	E9172	ARM ASSEMBLY,CRANK .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	4	PAFZZ	5305-00-576-7812	88044	AN525D10R18	SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	5	PAOZZ	5310-00-905-3081	96905	MS21083D3	NUT,SELF-LOCKING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	7	XAFZZ	5365-00-917-7863	81039	E878	SHIM SET .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	8	PBFZZ	1680-00-069-4148	81039	E9091M8	.STOP,MECHANICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	9	PAFZZ	5935-00-938-1561	96905	MS3102R14S9P	.CONNECTOR,ELECTRIC .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	10	PAFZZ	5305-00-543-2024	96906	MS35265-13	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365A	11	PAFZZ	1680-00-824-1466	81039	4540318-1	CORE AND COIL ASSY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	12	PAFZZ	5305-00-531-0298	96906	MS35265-15	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365A	13	PAFZZ	5310-00-550-5009	96906	MS15795-704	WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365A	14	PAFZZ	5365-00-093-7411	81039	E1356	SHIM .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	15	PAFZZ	5365-00-535-9565	81039	E1356M1	.SHIM .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	16	PAFZZ	5365-00-079-2544	81039	E1356M7	.SHIM .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	17	PAFZZ	5365-00-824-1468	81039	E1356M8	.SHIM .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	18	XBFZZ	1680-00-114-1178	81039	E2740M100-1	HOUSING,MAGNETIC BR .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	19	PAFZZ	5305-00-156-2817	88044	AN505-8R18	SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	20	PAFZZ	5305-00-488-7506	81039	E9500M1-8-12	..SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365A	21	PAFZZ	3110-00-554-2928	81039	4131102-2A1A	.BEARING,BALL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	22	PAFZZ	1680-00-831-4143	81039	E3924-2	.BRAKE DRUM ASSEMBLY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	23	PAFZZ	1680-00-346-4005	81039	E3276	.WEIGHT,CENTRIFUGAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
365A	24	PAFZZ	5365-00-282-0761	77339	XSC119	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	25	PAFZZ	1680-00-827-2160	81039	5620202-1	.SPIDER,CENTRIFUGAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	26	XDFZZ	3110-00-075-2632	21335	FS3KDDFS160	.BEARING,BALL,ANNULA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	27	PAFZZ	1680-00-824-1467	81039	3030632	.DISK,CLUTCH .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	28	PAFZZ	5360-00-874-4583	81039	E7518-1	.SPRING,HELICAL,COMP .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	29	PAFZZ	5365-00-530-6164	81039	E1024	.SHIM SET .... UHB	EA	V
365A	30	PAFZZ	3040-00-865-9219	81039	1131045	.GEARSHAFT,HELICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	31	PAFZZ	5365-00-370-4629	81039	E1641	.SPACER,RING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365A	32	PAFZZ	5365-00-917-7863	81039	E878	.SHIM SET .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	33	PAFZZ	3110-00-227-4521	21335	AMS1KDD7ANG-25	.BEARING,BALL .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365A	34	PAFZZ	5365-00-103-0017	81039	3090184	.SHIM SET .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
365A	35	PAFZZ	3040-00-069-4149	81039	1061106	.GEARSHAFT,HELICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
365A	36	PAFZZ	3110-00-864-0580	14418	GX14328-57	.BEARING,BALL,ANNULA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
356A	37	PAFZZ	3120-00-874-4590	81039	E779-1	.BEARING,SLEEVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	38	PAFZZ	5365-00-032-1817	81039	E2460	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	39	PAFZZ	3110-00-198-2844	81039	E2175M1	.BEARING,BALL,ANNULA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	40	PAFZZ	3040-00-824-1465	81039	1091309	.GEARSHAFT,SPUR .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
365A	41	PAFZZ	1680-00-833-3925	81039	E2740M58-2	.HOUSING,GEAR-MOTOR...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
365A	42	PAFZZ	5315-00-997-1920	81039	5412100C02508	.PIN,GROOVED,HEAD.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

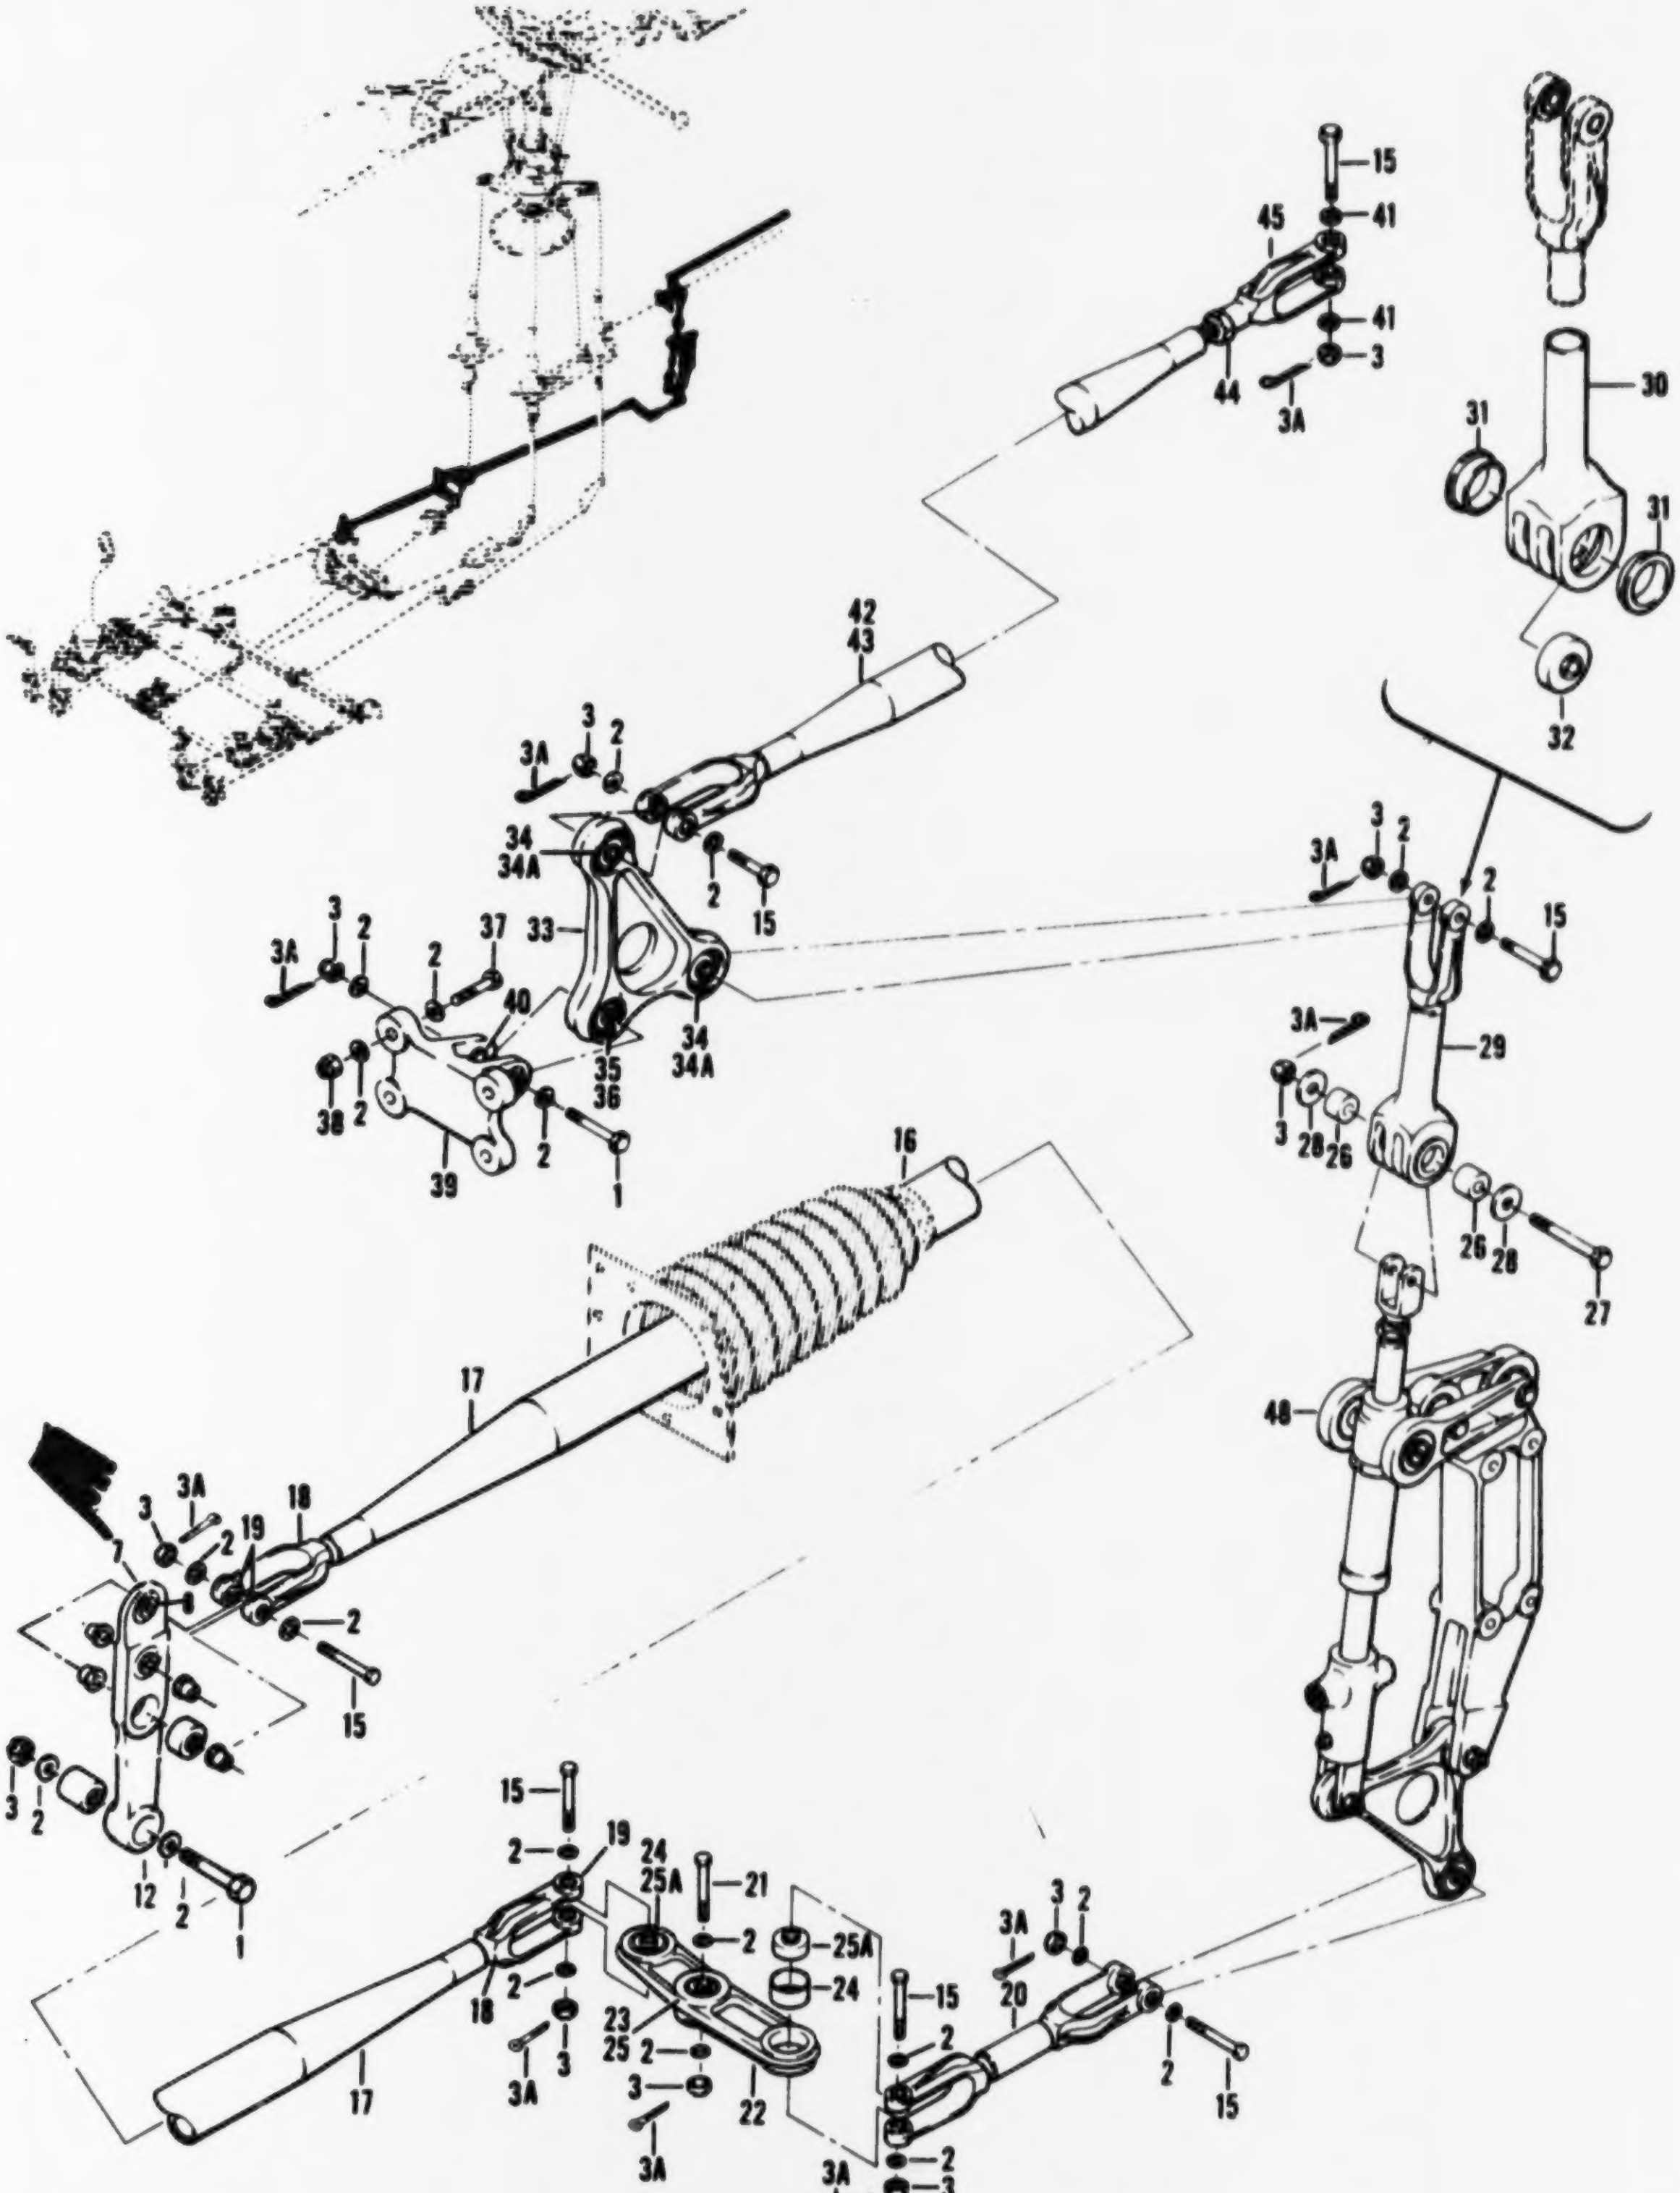
15
45
41
41
3
44
3A
30
31
31
32
42
43
3
2
3A
34
34A
2
15
33
37
3
2
3A
2
40
34
34A
35
36
38
2
39
2
1
3A
3
2
2
15
3A
29
3
28
26
26
28
27
16
17
48
3A
3
18
19
2
7
8
2
15
3
2
12
2
1
15
2
19
24
25A
21
2
25A
24
18
2
3
3A
23
25
2
3
3A
22
17
15
2
3A
3
2
20
2
15
3A
2
3

Figure 366. Control Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
366		XCFZZ		97499	204-001-059-1	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 60-3546 THRU 60-3590 SEE FIG.6 FOR NHA........................UHB	EA	1
66		XCFZZ		97499	204-001-059-5	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 60-3591 THRU 60-3619 SEE FIG.6 FOR NHA........................UHB	EA	1
66		XCFZZ		97499	204-001-059-3	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 61-686 THRU 61-719 AND 61-736 THRU 61-803 SEE FIG.6 FOR NHA......UHB	EA	1
366		XCFZZ		97499	204-001-059-7	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 61-720 THRU 61-735 SEE FIG.6 FOR NHA............................UHB	EA	1
366		XCFZZ		97499	204-001-059-9	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR NHA........................UHB	EA	1
366		XCFZZ		97499	204-001-059-15	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 62-1997 THRU 62-15555 SEE FIG.6 FOR NHA.......................UHB	EA	1
366		XCFZZ		97493	204-001-059-13	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 63-8500 THRU 64-14100 SEE FIG.6 FOR NHA.......................UHB	EA	1
366		XCFZZ		97499	204-001-059-17	CONTROL INSTL,TAIL ROTOR FORWARD AFT SECTION USBL EFF 64-14101 & SUBSEQUENT SEE FIG.6 FOR NHA..................UHC,UHM	EA	1
366	1	PAOZZ	5306-00-182-1912	88044	AN4H17	.BOLT,MACHINE................................UHB,UHC,UHM	EA	2
366	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT................................UHB,UHC,UHM	EA	26
366	3	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN................................UHB,UHC,UHM	EA	11
366	3A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER................................UHB,UHC,UHM	EA	11
366	7	PAOFF	1515-00-987-3306	97499	204-001-855-1	.LEVER,REMOTE CONTRO USBL EFF UH-1B 61-719 THRU 61-736 & SUBSEQUENT................................UHB,UHC,UHM	EA	1
366	10	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA................................UHB,UHC,UHM	EA	2
366	12	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA................................UHB,UHC,UHM	EA	1
366	15	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER................................UHB,UHC,UHM	EA	7
66	16	PAOZZ	4730-00-278-9104	88044	AN737RM66	.CLAMP,HOSE................................UHB,UHC,UHM	EA	1
366	17	PAOOO	3040-00-731-7991	97499	204-001-027-19	.CONNECTING LINK,RIG................................UHB,UHC,UHM	EA	1
366	18	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY................................UHB,UHC,UHM	EA	2
366	19	PAOZZ	3120-00-675-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE................................UHB,UHC,UHM	EA	2
366	20	PAOZZ	1560-00-731-8090	97499	204-001-724-5	.LINK ASSEMBLY,TORQU................................UHB,UHC,UHM	EA	1
366	21	PAOZZ	5306-00-180-1711	88044	AN174-17	.BOLT,CLOSE TOLERANC................................UHB,UHC,UHM	EA	1
366	22	PAOFF	1560-00-908-6463	97499	204-001-828-1	.BELL CRANK................................UHB,UHC,UHM	EA	1
366	23	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA................................UHB,UHC,UHM	EA	1
366	24	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE................................UHB,UHC,UHM	EA	2
366	25	PAFZZ	3120-00-624-5247	97499	23S6-4KA	..BUSHING,SLEEVE................................UHB,UHC,UHM	EA	1
366	25A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA................................UHC,UHM	EA	2
366	26	PAOZZ	5365-00-707-7781	97499	204-001-801-1	.SPACER,SLEEVE................................UHB,UHC,UHM	EA	2
366	27	PAOZZ	5306-00-151-0329	88044	AN174H23	.BOLT,CLOSE,TOLER................................UHB,UHC,UHM	EA	1
366	28	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT................................UHB,UHC,UHM	EA	2
366	29	PAOOO	3040-00-633-0803	97493	204-001-802-3	LINK ASSY ANTI-TORQUE................................UHB,UHC,UHM	EA	1
366	30	XAOOO		97499	204-001-811-1	..FORK ASSEMBLY................................UHB,UHC,UHM	EA	1
366	31	PAOZZ	3120-00-670-5321	97499	22-015-43-15-36	...BUSHING,SLEEVE................................UHB,UHC,UHM	EA	2
366	32	PAOZZ	3110-00-042-4805	96906	MS27645-4	...BEARING,BALL,AIRFRA................................UHB,UHC,UHM	EA	1
366	33	PAOFF	1560-00-653-4333	97499	204-001-813-1	.BELL CRANK ANTI-TORQUE CONTROL................................UHB,UHC,UHM	EA	
366	34	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE................................UHB,UHC,UHM	EA	2
366	34A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA................................UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
366	35	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA..........UHB,UHC,UHM	EA	1
366	36	PAFZZ	3120-00-624-5247	97499	23S6-4KA	..BUSHING,SLEEVE..........UHB,UHC,UHM	EA	1
366	37	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	4
366	38	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..........UHB,UHC,UHM	EA	4
366	39	PAOOO	1560-00-653-4362	97499	204-001-814-1	.SUPPORT ASSY..........UHB,UHC,UHM	EA	1
366	40	PAOZZ	3120-00-662-4734	97499	22-006-16-15-16	..BUSHING,SLEEVE..........UHB,UHC,UHM	EA	2
366	41	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
366	42	PAOOO	3040-00-893-4546	97499	204-001-012-77	.CONNECTING LINK,RIG..........UHB,UHC,UHM	EA	1
366	43	XAOZZ		97499	204-001-012-37	..TUBE ASSEMBLY..........UHB,UHC,UHM	EA	1
366	44	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO..........UHB,UHC,UHM	EA	1
366	45	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END..........UHB,UHC,UHM	EA	1
366	48	AOOOO		97499	204-001-726-11	.CYLINDER AND SUPPOR ASSEMBLY,ANTI-TORQUE SEE FIG.368 FOR BREAKDOWN..........UHB,UHC,UHM	EA	1

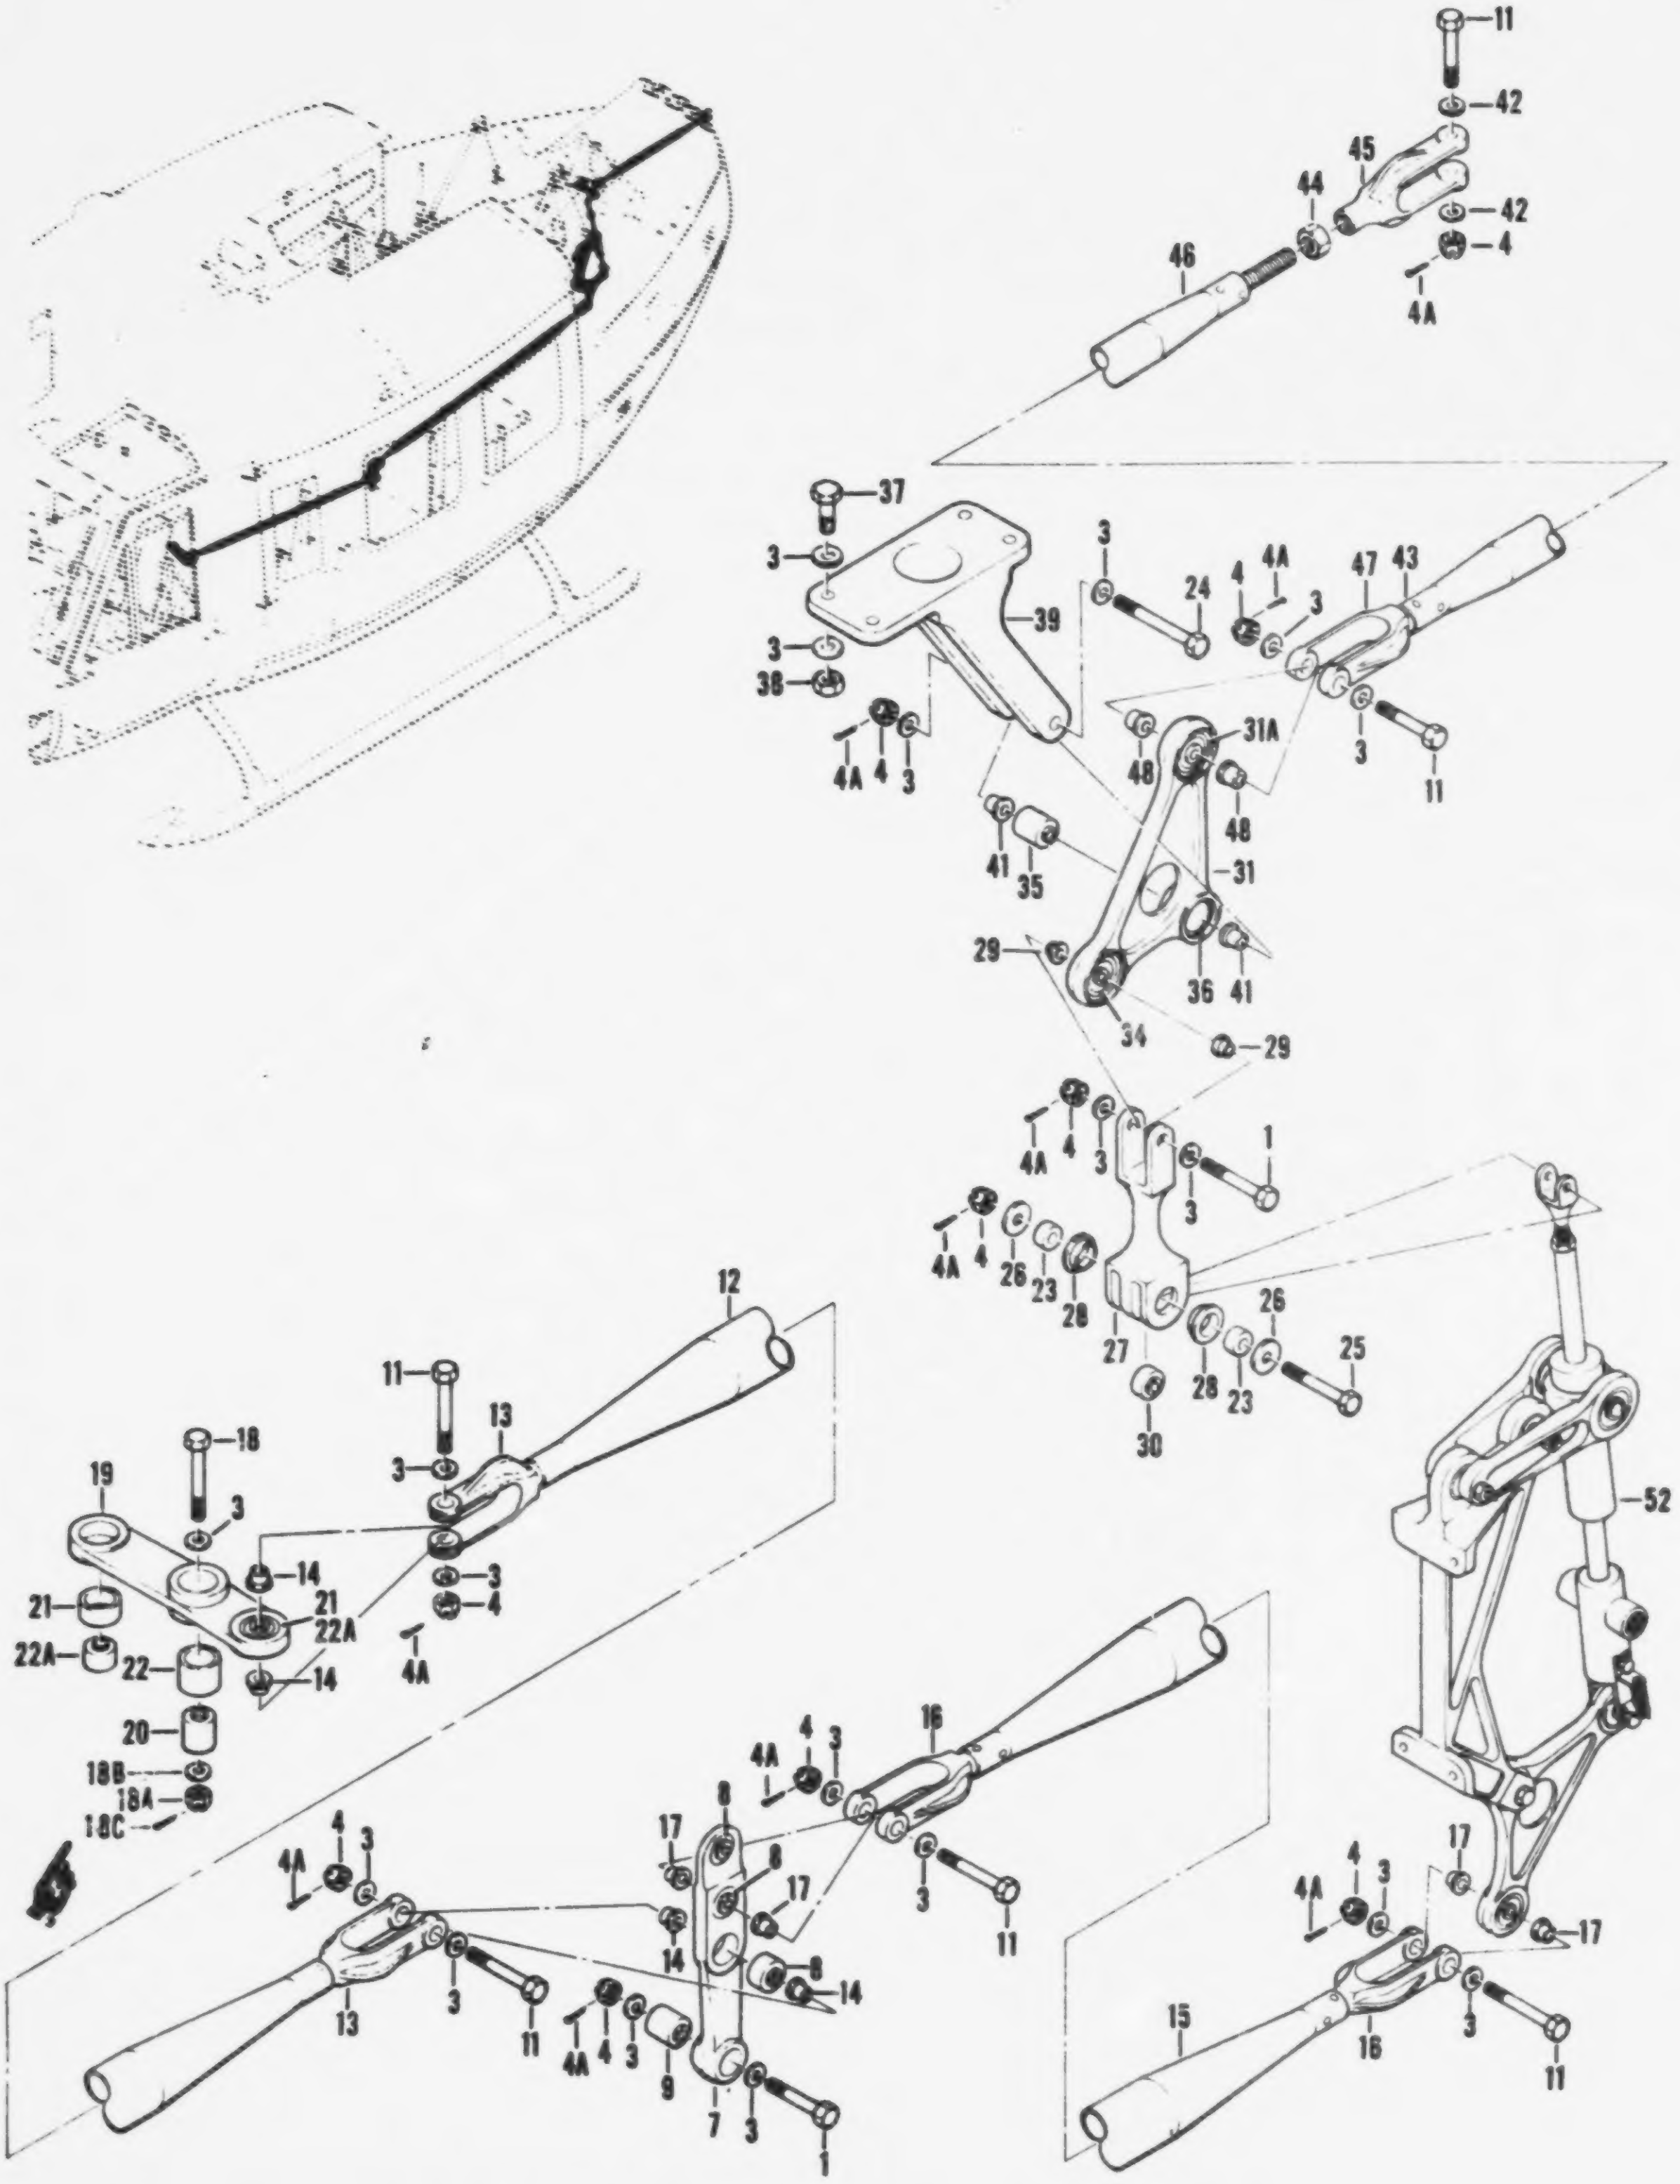
11
42
45
44
42
4
4A
46
37
3
39
3
38
4A
4
3
3
24
4
4A
3
47
43
31A
48
48
3
11
41
35
31
29
36
41
34
29
4A
4
3
1
3
4A
4
26
23
28
27
28
23
26
25
30
52
12
11
13
18
3
19
3
14
3
4
21
21
22A
22A
22
14
4A
20
18B
18A
18C
16
4A
4
3
8
17
8
17
4
3
4A
14
8
14
13
3
11
4A
4
3
9
7
3
1
17
4
3
4A
17
15
16
3
11

Figure 367. Control Installation, Tail Rotor Forward Aft Section

SECTION II

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
367		XCFZZ		97499	205-001-003-3	CONTROL INSTL TAIL ROTOR FWD AFT USBL EFF 62-2106 THRU 62-2113 SEE FIG.6 FOR NHA	UHE,UHH,UHV,UHX	EA	1
367		XCFZZ		97499	205-001-003-5	CONTROL INSTL TAIL ROTOR FWD AFT USBL EFF 62-12351 THRU 62-12372 SEE FIG.6 FOR NHA	UHE,UHH,UHV,UHX	EA	1
367		XCFZZ		97499	205-001-003-7	CONTROL INSTL TAIL ROTOR FWD AFT USBL EFF 63-8739 THRU 63-8859 SEE FIG.6 FOR NHA	UHE,UHH,UHV,UHX	EA	1
367		XCFZZ		97499	205-001-003-9	CONTROL INSTL TAIL ROTOR FWD AFT USBL EFF 63-12956 THRU 64-13901 SEE FIG.6 FOR NHA	UHE,UHH,UHV,UHX	EA	1
367		XCFZZ		97499	205-001-003-11	CONTROL INSTL TAIL ROTOR FWD AFT USBL EFF 65-9565 & SUBSEQUENT SEE FIG.6 FOR NHA	UHE,UHH,UHV,UHX	EA	1
367	1	PAOZZ	5306-00-298-2815	88044	AN174-16	.BOLT,CLOSE TOLER	UHE,UHH,UHV,UHX	EA	2
367	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	26
367	4	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN	UHE,UHH,UHV,UHX	EA	11
367	4A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	11
367	7	PAOFF	1615-00-987-3306	97499	204-001-855-1	.LEVER,REMOTE CONTRO ASSY USBL EFF UH-1B 61-719 THRU 61-736 & SUBSEQUENT	UHE,UHH,UHV,UHX	EA	1
367	8	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	2
367	9	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
367	11	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER	UHE,UHH,UHV,UHX	EA	6
367	12	PAOOO	3040-00-964-5066	97499	205-001-011-5	.CONNECTING LINK, RIG	UHE,UHH,UHV,UHX	EA	1
367	13	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
367	14	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	4
367	15	PAOOO	3040-00-964-5065	97499	205-001-011-1	.CONNECTING LINK, RIG	UHE,UHH,UHV,UHX	EA	1
367	16	PAOOO	5340-00-765-6255	97499	204-001-006-1	..CLEVIS ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
367	17	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	...BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
367	18	PAOZZ	5360-00-207-1665	88044	AN 175-20	.BOLT,CLOSE TOLERANC	UHE,UHH,UHV,UHX	EA	1
367	18A	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,CASTELLATED	UHE,UHH,UHV,UHX	EA	1
367	18B	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
367	18C	PAOZZ	5315-00-851-6000	96906	MS24665-152	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	1
367	19	PAOFF	1680-00-918-6997	97499	205-001-704-1	.LEVER ASSY ANTI-TORQUE	UHE,UHH,UHV,UHX	EA	1
367	20	PAFZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
367	21	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
367	22	PAFZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
367	22A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	2
367	23	PAOZZ	3120-00-964-6474	97499	205-001-800-1	.BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
367	24	PAOZZ	5306-00-151-0328	88044	AN174H24	.BOLT,CLOSE TOLER	UHE,UHH,UHV,UHX	EA	1
367	25	PAOZZ	5306-00-151-0329	88044	AN174H23	.BOLT,CLOSE,TOLER	UHE,UHH,UHV,UHX	EA	1
367	26	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
367	27	PAOOO	3040-00-055-9023	97499	205-001-715-1	.CONNECTING LINK, RIGID	UHE,UHH,UHV,UHX	EA	1
367	28	PAOZZ	3120-00-670-5321	97499	22-015-43-15-36	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
367	29	PAOZZ	3120-00-662-4734	94799	22-006-15-15-16	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
367	30	PAOZZ	3110-00-042-4806	96906	MS27645-4	..BEARING,BALL AIRFRA	UHE,UHH,UHV,UHX	EA	1
367	31	PAOFF	1615-00-941-8734	97499	205-001-728-1	.BELL CRANK ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
367	31A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL AIRFRA	UHE,UHH,UHV,UHX	EA	1
367	34	PAFZZ	3120-00-903-1016	76005	J11672-3	..BEARING ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
367	35	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
367	36	PAFZZ	3120-00-624-5247	97499	2356-4KA	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
367	37	PAOZZ	5306-00-151-1422	88044	AN4-12A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
367	38	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
367	39	PBOOO	1560-00-918-3346	97499	205-001-714-1	.SUPPORT ASSY..........UHE,UHH,UHV,UHX	EA	1
367	41	PAOZZ	3120-00-711-6201	97499	22-006-15-24-16	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
367	42	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
367	43	PAOOO	3040-00-051-3647	97499	205-001-012-19	.CONNECTING LINK,RIG U/O PN 205-001-003-3,-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	1
367	44	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO..........UHE,UHH,UHV,UHX	EA	1
367	45	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END..........UHE,UHH,UHV,UHX	EA	1
367	46	XAOOZ		97499	205-001-012-21	..TUBE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
367	47	PAOOO	5340-00-765-6255	97499	204-001-006-1	...CLEVIS ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
367	48	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
367	52	AOOOZ	1560-00-403-0588	97499	205-001-700-5	.CYLINDER AND SUPPOR ASSY,ANTI-TORQUE SEE FIG.368 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1

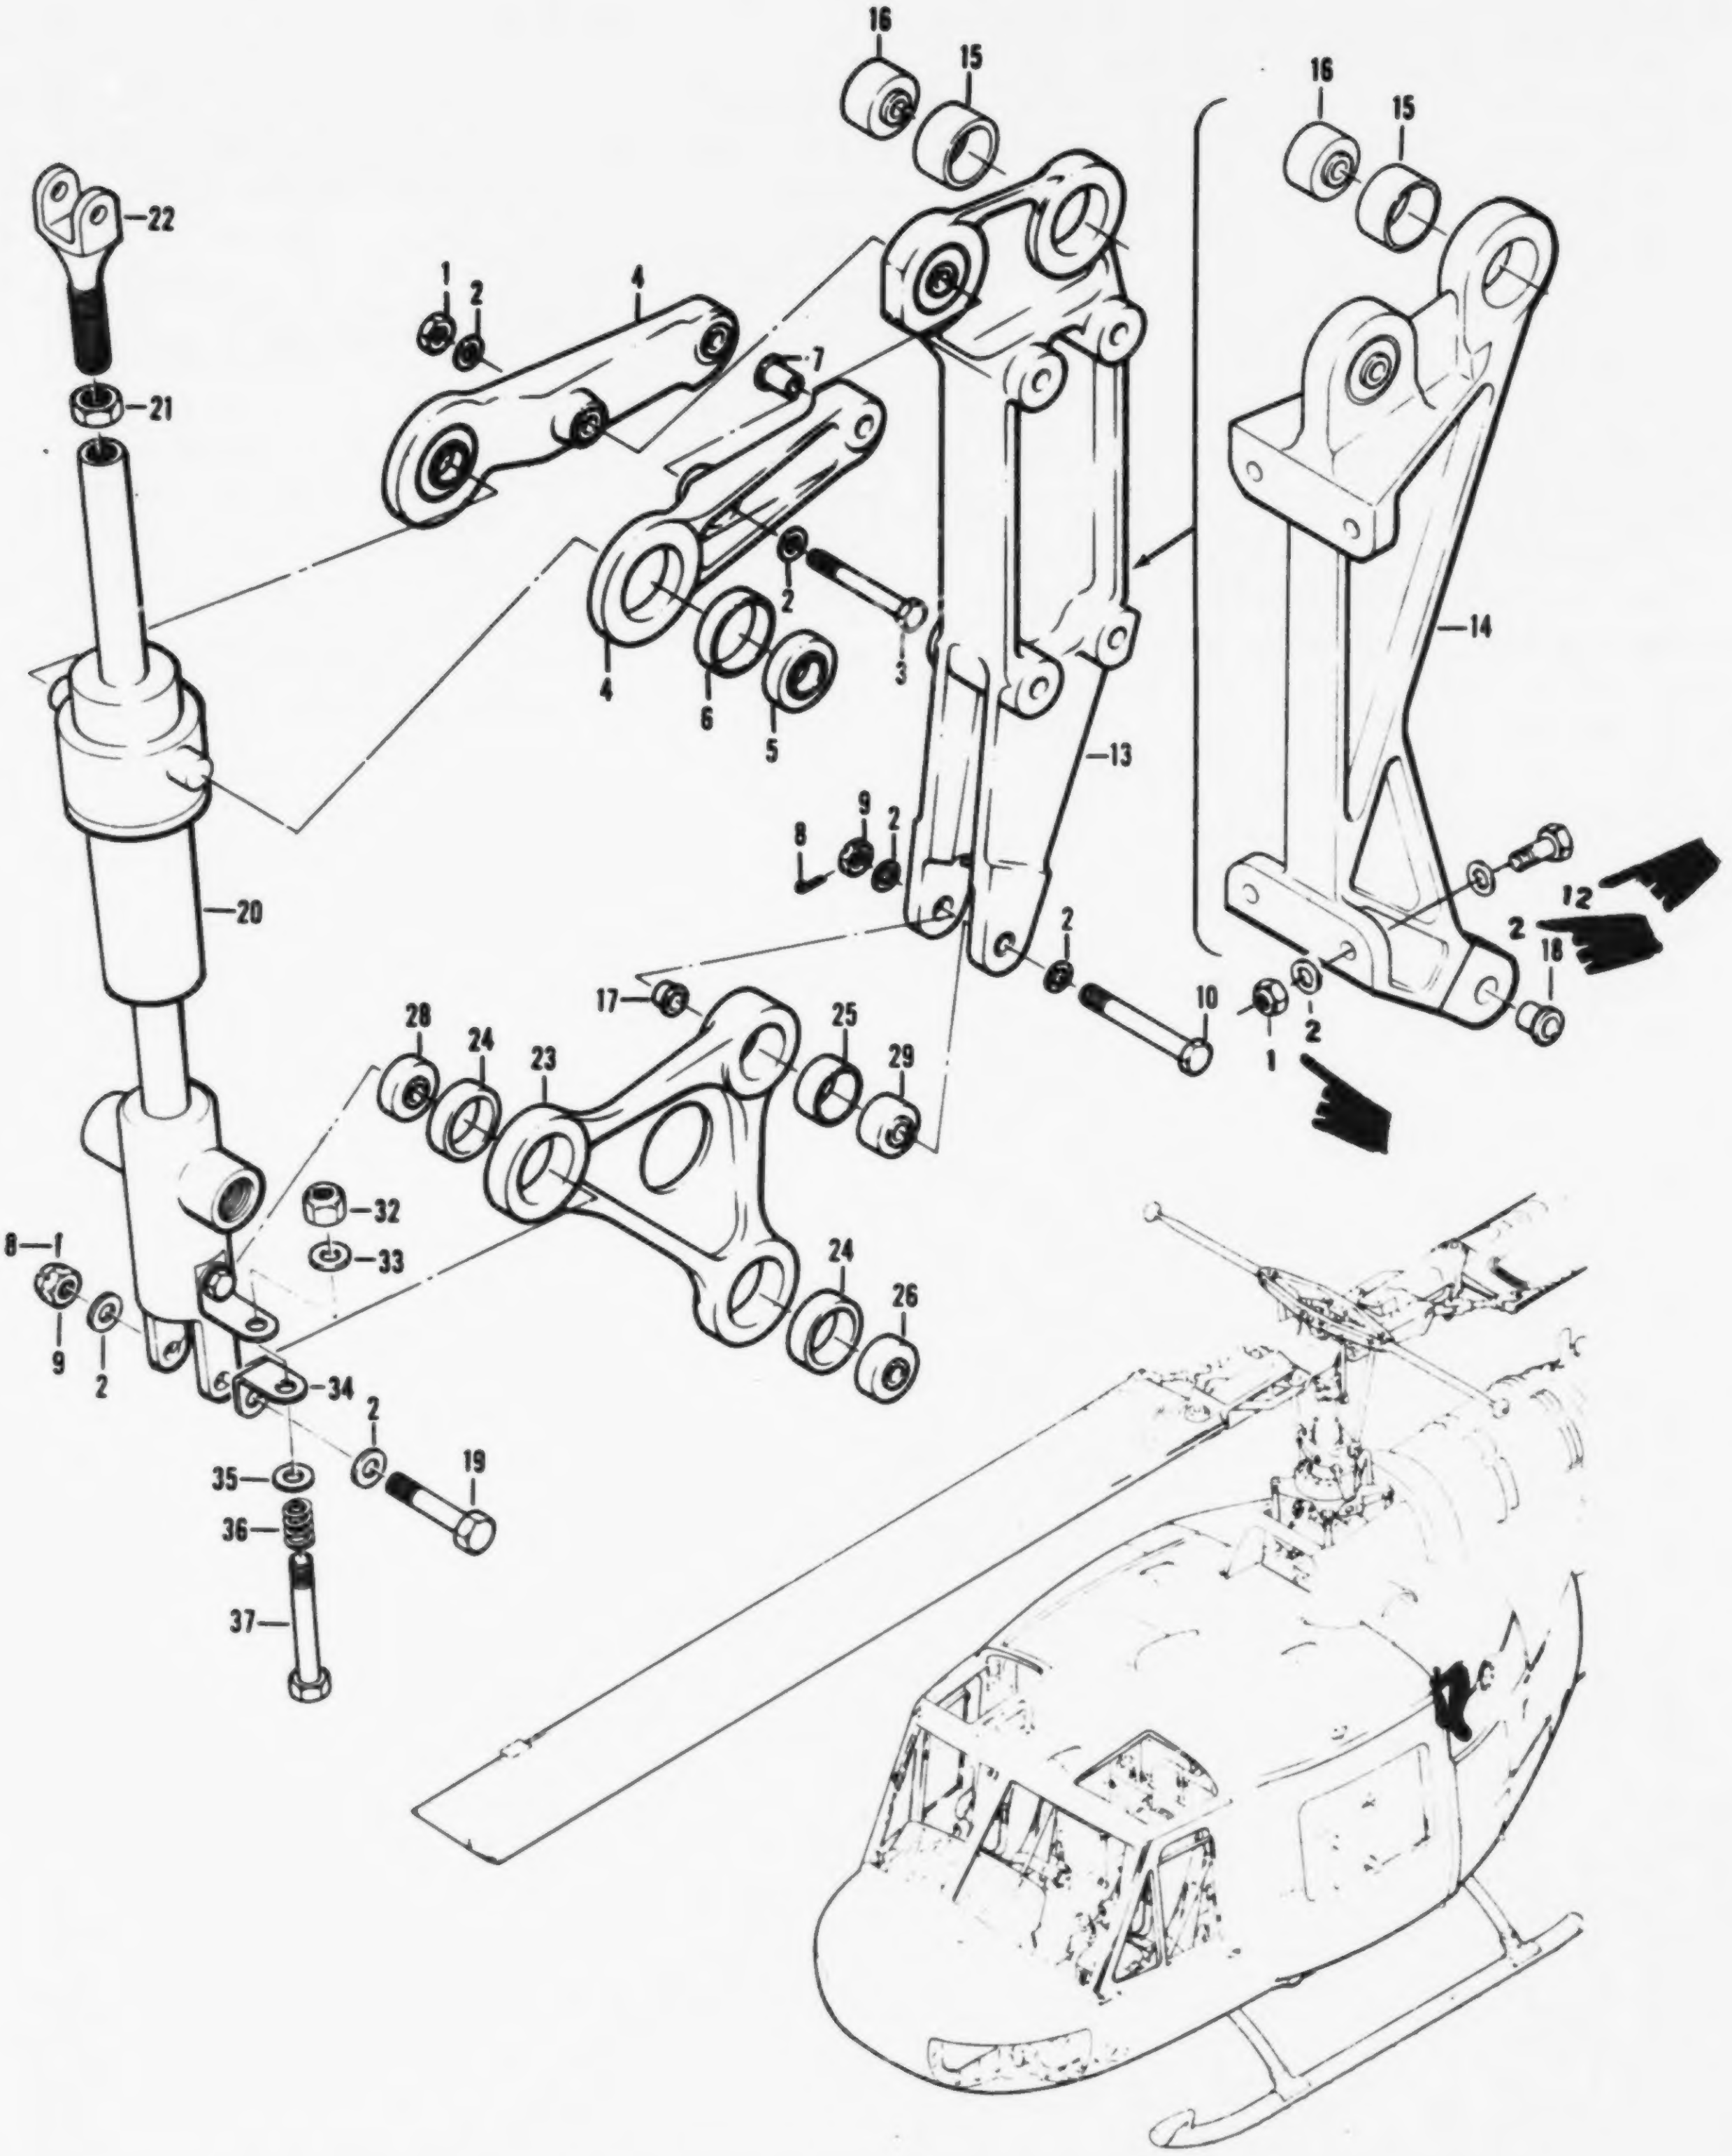
16
15
16
15
22
1
2
4
7
21
2
3
4
6
5
14
13
9
2
8
12
2
20
2
18
10
2
1
17
28
24
23
25
29
32
33
8—f
24
26
9
2
34
2
35
19
36
37

Figure 368. Cylinder and Support Assembly, Anti-torque

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
368		A0000		97499	204-001-726-11	CYLINDER AND SUPPOR ASSY,ANTI-TORQUE SEE FIG.366 FOR NHA ...UHM	EA	1
368		A000Z	1560-00-403-0588	97499	205-001-700-5	CYLINDER AND SUPPOR ASSY,ANTI-TORQUE SEE FIG.367 FOR NHA ...UHE,UHH,UHV,UHX	EA	1
368	1	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ...UHE,UHH,UHM,UHV,UHX	EA	V
368	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT...UHE,UHH,UHM,UHV,UHX	EA	V
368	3	PAOZZ	5306-00-141-4512	88044	AN174H21A	.BOLT,CLOSE TOLERANC...UHE,UHH,UHM,UHV,UHX	EA	2
368	4	PAOFF	1560-00-625-0149	97499	204-001-799-1	.ARM ASSY,SUPPORT...UHE,UHH,UHM,UHV,UHX	EA	2
368	5	PAFZZ	3110-00-042-0440	96906	MS27641-8	..BEARING,BALL,AIRFRA...UHE,UHH,UHM,UHV,UHX	EA	1
368	6	PAFZZ	3120-00-624-5249	97499	120-012-8A	..BUSHING,SLEEVE...UHE,UHH,UHM,UHV,UHX	EA	1
368	7	PAFZZ	3120-00-670-5330	97499	22-006-15-30-16	..BUSHING,SLEEVE...UHE,UHH,UHM,UHV,UHX	EA	2
368	8	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER...UHE,UHH,UHM,UHV,UHX	EA	2
368	9	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN...UHE,UHH,UHM,UHV,UHX	EA	2
368	10	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER...UHE,UHH,UHM,UHV,UHX	EA	1
368	12	PAOZZ	5306-00-550-1159	88044	AN174H14A	.BOLT CLOSE TOLERANCE...UHH,UHE,UHV	EA	4
368	13	PAOFF	1560-00-624-6825	97499	204-001-719-1	.SUPPORT ASSY U/O PN 204-001-726-11...UHM	EA	1
368	14	PAOFF	1560-00-966-7507	97499	205-001-701-1	.SUPPORT ASSY U/O PN 205-001-700-5...UHE,UHH,UHV,UHX	EA	1
368	15	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE...UHE,UHH,UHM,UHV,UHX	EA	2
368	16	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA...UHE,UHH,UHM,UHV,UHX	EA	2
368	17	PAFZZ	3120-00-629-9630	97499	20-006-15-15-16	..BUSHING,SLEEVE U/O PN 204-001-719-1...UHM	EA	2
368	18	PAFZZ	3120-00-662-4357	97499	22-006-15-19-16	..BUSHING,SLEEVE U/O PN 205-001-701-1...UHE,UHH,UHV,UHX	EA	2
368	19	PAOZZ	5306-00-174-4115	88044	AN174H15	.BOLT,CLOSE TOLER...UHE,UHH,UHM,UHV,UHX	EA	1
368	20	PAOFF	1650-00-907-6197	97499	204-076-053-5	.SERVO CYLINDER, HYDRAULIC U/O PN 204-001-726-11 ...UHM	EA	1
368	20	PAOFF	1650-00-912-4122	92003	SGT220-7	.SERVOCYLINDER HYDRAULIC SEE FIG.208 FOR BREAKDOWN ...UHM	EA	1
368	20	PAOFF	1650-00-912-4122	53583	1660-17	.SERVOCYLINDER HYDRAULIC SEE FIG.208A FOR BREAKDOWN ...UHM	EA	1
368	20	PAOFF	1650-00-014-2038	97499	204-076-053-11	.SERVO CYLINCER, HYDRAULIC U/O PN 205-001-700-5 ...UHE,UHH,UHV,UHX	EA	1
368	20	PAOFF	1650-00-014-2038	92003	SGT220-11	.SERVOCYLINDER HYDRAULIC SEE FIG.208 FOR BREAKDOWN ...UHE,UHH,UHV,UHX	EA	1
368	20	PAOFF	1650-00-014-2038	00286	1660-23	.SERVOCYLINDER HYDRAULIC SEE FIG.208A FOR BREAKDOWN ...UHE,UHH,UHV,UHX	EA	1
368	21	PAOZZ	5310-00-167-1302	88044	AN316-7R	.NUT,PLAIN,HEXAGO...UHE,UHH,UHM,UHV,UHX	EA	1
368	22	PAOZZ	5340-00-721-4957	97499	204-001-803-1	.CLEVIS,ROD END...UHE,UHH,UHM,UHV,UHX	EA	1
368	23	PAOFF	1560-00-991-0318	97499	204-001-832-1	.BELL CRANK...UHE,UHH,UHM,UHV,UHX	EA	1
368	24	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE...UHE,UHH,UHM,UHV,UHX	EA	2
368	25	PAFZZ	3120-00-624-5247	97499	120-015-4KA	..BUSHING,SLEEVE...UHE,UHH,UHM,UHV,UHX	EA	1
368	26	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA...UHE,UHH,UHM,UHV,UHX	EA	1
368	28	PAFZZ	3110-00-271-0011	21335	DSRP4	..BEARING,ROLLER,AIRF...UHE,UHH,UHM,UHV,UHX	EA	1
368	29	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA...UHE,UHH,UHM,UHV,UHX	EA	1
368	32	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-001-700-5 ...UHE,UHH,UHV,UHX	EA	1
368	33	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 205-001-700-5...UHE,UHH,UHV,UHX	EA	1
368	34	PAOZZ	5340-00-012-4598	97499	205-076-118-1	.BRACKET,ANGLE U/O PN 205-001-700-5...UHE,UHH,UHV,UHX	EA	1
368	35	PAOZZ	5310-00-072-4873	97499	140-001-5	.WASHER,FLAT U/O PN 205-001-700-5...UHE,UHH,UHV,UHX	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
368	36	PAOZZ	5360-00-780-9324	97499	205-076-119-1	.SPRING,HELICAL,COMP U/O PN 205-001-700-5....UHE,UHH,UHV,UHX	EA	1
368	37	PAOZZ	5306-00-282-5821	88044	AN3H28A	.BOLT,MACHINE U/O PN 205-001-700-5...........UHE,UHH,UHV,UHX	EA	1

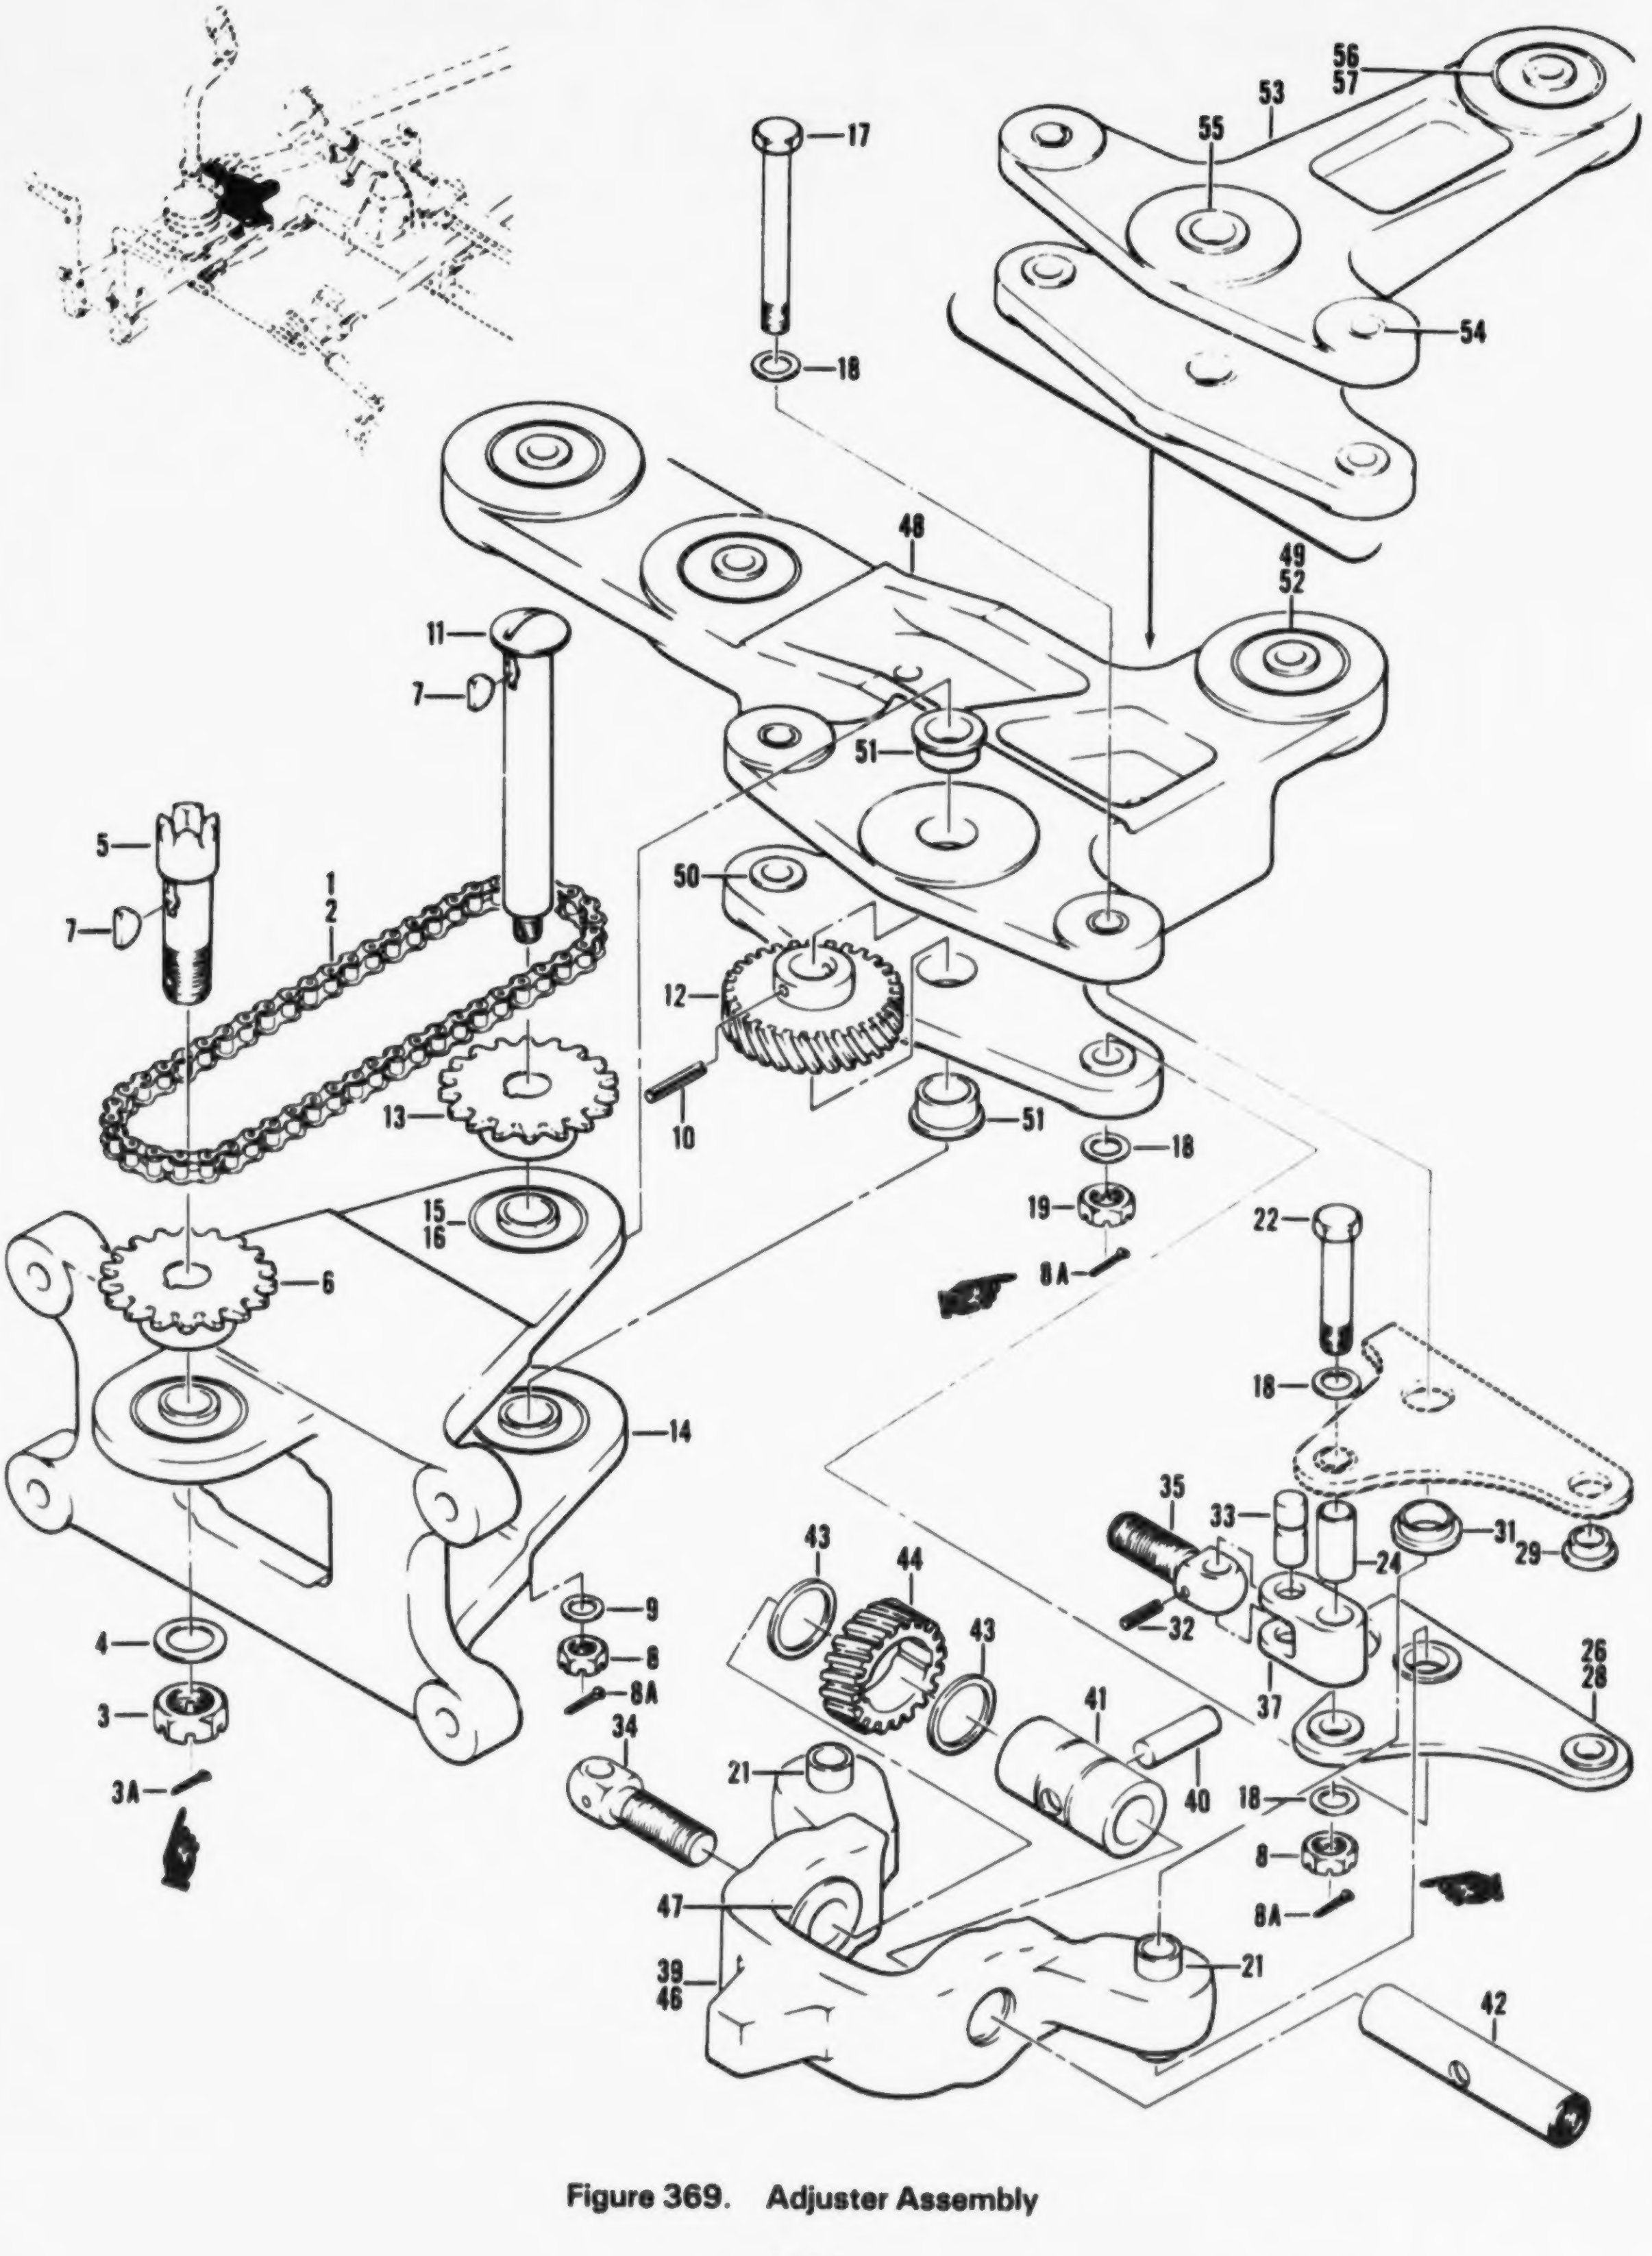
56
57
53
55
17
18
54
48
49
52
11
7
51
5
7
1
2
50
12
13
10
51
18
15
16
19
6
8A
22
14
18
35
33
31
29
24
43
44
43
32
9
8
8A
4
3
3A
37
26
28
41
34
21
40
18
8
8A
47
21
39
46
42

Figure 369. Adjuster Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
369		PAOFF	1560-00-053-3949	97499	204-001-762-13	ADJUSTER ASSY,PILOT SEE FIG.364 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369		PBOFF	1615-00-053-3954	97499	204-001-762-15	ADJUSTER ASSY, CO-PILOT SEE FIG.364 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	1	PAFFF	3020-00-671-5872	97499	204-001-736-1	.CHAIN,ROLLER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	2	PAFZZ	3020-00-231-8695	72625	C4189	..LINK,ROLLER CHAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	3	PAFZZ	5310-00-582-6058	81352	AN310-6	.NUT,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	3A	PAFZZ	5315-00-234-1863	96906	MS24665-300	.PIN,COTTER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	4	PAFZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	5	PAFZZ	1615-00-633-0831	97499	204-001-717-1	.BOLT-ANTITORQUE CON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	6	PAFZZ	3020-00-652-3275	97499	204-001-712-1	.SPROCKET WHEEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	7	PAOZZ	5315-00-045-2561	96906	MS35756-32	.KEY,WOODRUFF..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	8	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
369	8A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER..........UHB,UHC,UHE,UHH,UHM,UHV	EA	5
369	9	PAFZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	10	PAFZZ	5315-00-823-8745	96906	MS16562-215	.PIN,SPRING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	11	PAFZZ	5305-00-633-0830	97499	204-001-808-3	.SCREW,SHOULDER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	12	PAFZZ	3020-00-605-9083	97499	204-001-771-1	.GEAR ASSY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	13	PAFZZ	3020-00-652-3275	97499	204-001-712-1	.SPROCKET WHEEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	14	PAFFF	1560-00-624-6738	97499	204-001-701-1	.SUPPORT ASSY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	15	PAFZZ	3110-00-034-5257	96906	MS27641-6	..BEARING,BALL,AIRFRA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
369	16	PAFZZ	3120-00-625-0125	80070	2353-6A	..BUSHING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
369	17	PAFZZ	5306-00-151-0330	88044	AN174H22	.BOLT,CLOSE,TOLER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	18	PAFZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
369	19	PAFZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN,CASTELLAT HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	21	PAFZZ	5365-00-953-8977	97499	204-001-857-1	.SPACER,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	22	PAFZZ	5306-00-207-2347	80205	NAS464-P4-18	.BOLT,SHEAR..........UHB,UHC,UHE,UHH,UHV,UHX	EA	2
369	24	PAFZZ	5365-00-052-8585	97499	204-001-857-3	.SPACER,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	26	PAFFF	1560-00-869-0706	97499	204-001-710-5	.PLATE ASSY,PEDAL ADJUSTMENT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	28	PAFFF	1560-00-869-0707	97499	204-001-710-6	.PLATE ASSY,PEDAL ADJUSTMENT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	29	PAFZZ	3120-00-678-5417	97499	204-001-729-1	..BUSHING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	31	PAFZZ	3120-00-952-9767	97499	20-008-23-7-20	..BUSHING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	32	PAFZZ	5315-00-614-3586	96906	MS16562-212	.PIN,SPRING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	33	PAFZZ	5315-00-077-2130	97499	204-001-766-1	.PIN,GROOVED,HEADLES..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	34	PAFZZ	5306-00-604-3169	97499	204-001-768-1	.BOLT,EYE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	35	PAFZZ	5306-00-604-3170	97499	204-001-768-2	.BOLT,EYE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	37	PAFZZ	3040-00-055-9022	97499	204-001-769-5	.CONNECTING LINK,RIG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	39	AFFFZ	1680-00-239-3677	97499	204-001-762-17	.NUT AND SUPPORT ASY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	40	PAFZZ	5315-00-757-1282	97499	204-001-770-1	..PIN,STRAIGHT,HEADLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	41	PAFZZ	1560-00-633-0851	97499	204-001-765-1	..SHAFT,PEDAL ADJUSTI..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	42	PAFZZ	1560-00-633-0798	97499	204-001-764-1	..NUT,PEDAL ADJUSTING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	43	PAFZZ	5365-00-619-0821	80756	RS68	..RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	44	PAFZZ	3020-00-555-7693	97499	204-001-774-1	..GEAR,HELICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
369	46	PBFFF	1560-00-990-3750	97499	204-001-810-9	..SUPPORT ASSY....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	47	PAFZZ	3120-00-670-5320	97499	22-012831-26-28	...BUSHING,SLEEVE................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	48	PAOFF	1560-00-633-0813	97499	204-001-809-1	.BELL CRANK ASSY U/O PN 204-001-762-13 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	49	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
369	50	PAFZZ	3120-00-625-0055	97499	22-006-15-22-16	..BUSHING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
369	51	PAFZZ	3120-00-670-5331	97499	22-008-23-22-20	..BUSHING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	52	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
369	53	PAOFF	1560-00-625-0153	97499	204-001-760-1	.BELL CRANK ASSY U/O PN 204-001-762-15 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	54	PAFZZ	3120-00-625-0055	97499	22-006-15-22-16	..BUSHING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
369	55	PAFZZ	3120-00-670-5331	97499	22-008-23-22-20	..BUSHING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
369	56	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
369	57	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL AIRFRA................UHC,UHE,UHH,UHM,UHV,UHX	EA	1

Fig 370 NOT USED

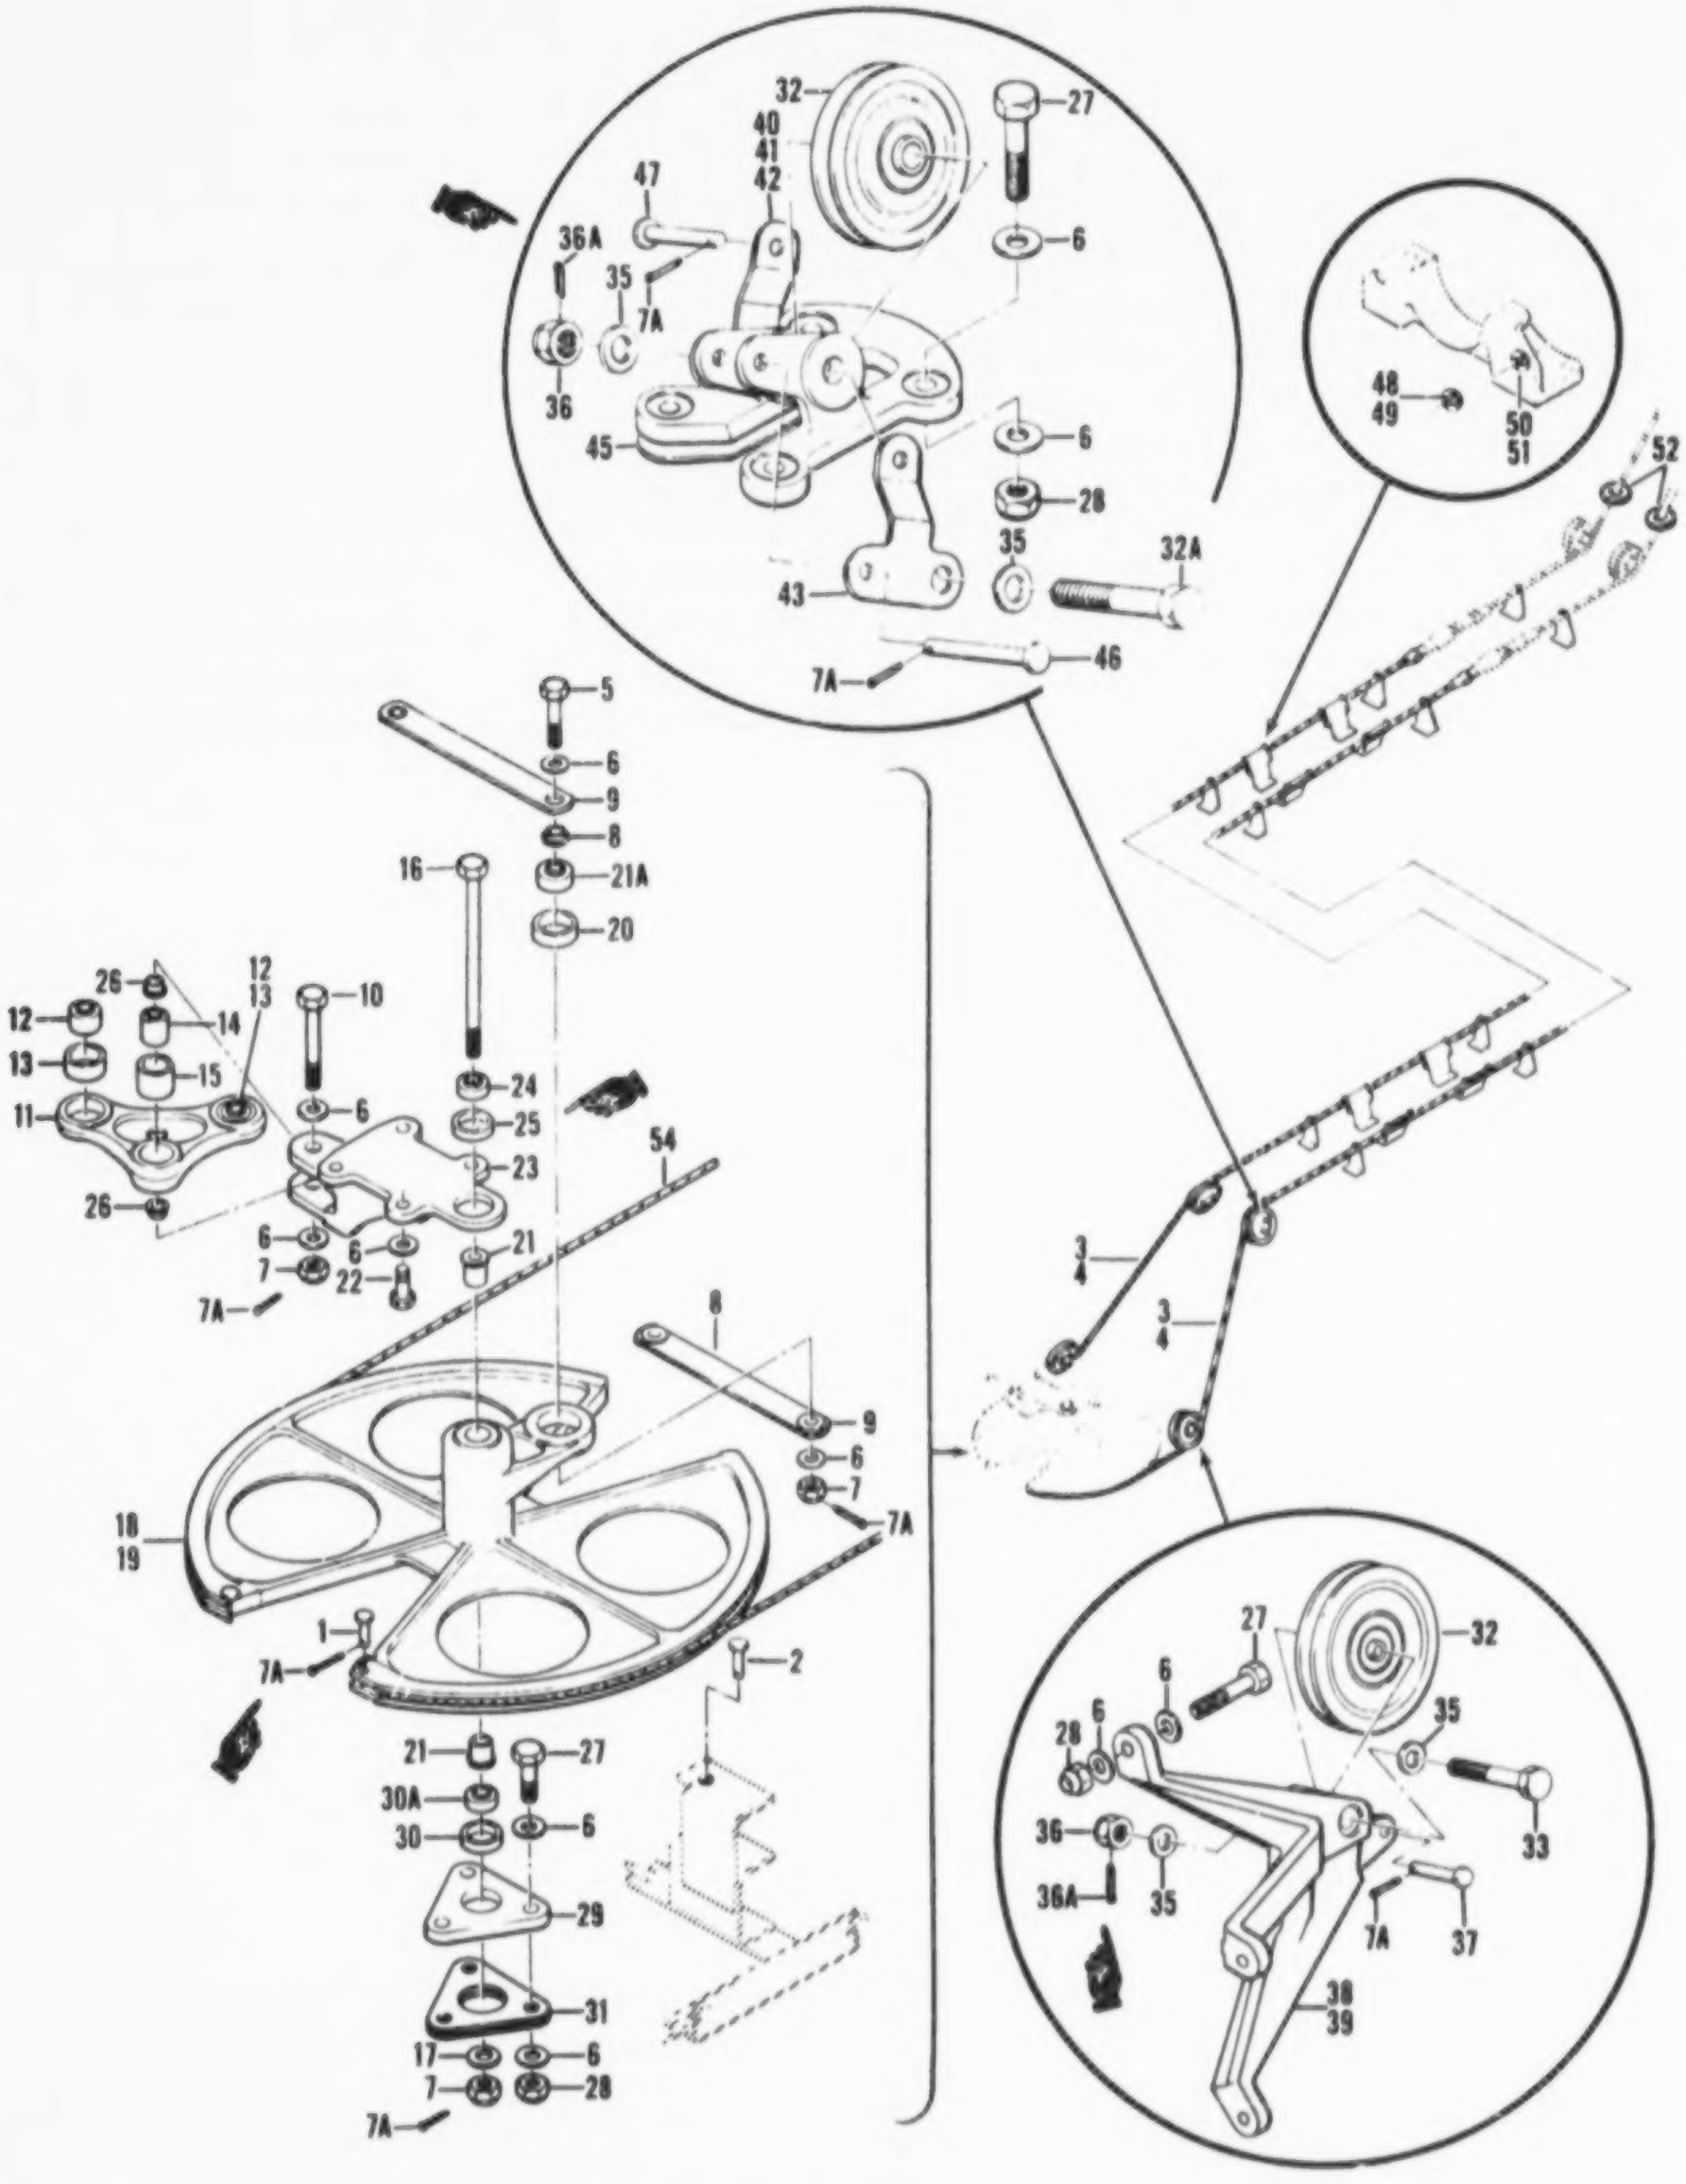
32
40
41
42
27
47
36A
35
7A
6
36
45
6
28
35
32A
43
7A
46
48
49
50
51
52
5
6
9
8
16
21A
20
26
12
13
12
13
14
15
10
11
24
6
25
23
54
26
6
7
6
21
22
7A
3
4
3
4
8
9
6
7
7A
18
19
1
7A
2
27
32
6
35
28
6
36
35
33
36A
35
7A
37
38
39
21
27
30A
30
6
29
31
17
6
7
28
7A

Figure 371. Cable Installation, Tail Rotor Control Aft

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
371		XCFZZ		97499	204-001-049-1	CABLE INSTL,TAIL ROTOR CONTROL AFT USBL EFF 59-1607 THRU 61-753 SEE FIG.8 FOR NHA........UHB	EA	1
371		XCFZZ		97499	204-001-049-3	CABLE INSTL,TAIL ROTOR CONTROL AFT USBL EFF 61-754 THRU 61-803 SEE FIG.8 FOR NHA........UHB	EA	1
371		XCFZZ		97499	204-001-049-9	CABLE INSTL,TAIL ROTOR CONTROL AFT USBL EFF 62-1872 THRU 62-1996 SEE FIG.8 FOR NHA........UHB	EA	1
371		XCFZZ		97499	204-001-049-17	CABLE INSTL,TAIL ROTOR CONTROL AFT USBL EFF 62-1997 & SUBSEQUENT SEE FIG.8 FOR NHA........UHB,UHC,UHM	EA	1
371	1	PBOZZ	5315-00-811-1266	96906	MS20392-1C19	.PIN,STRAIGHT,HEA........UHB,UHC,UHM	EA	2
371	2	PAOZZ	5315-00-597-1642	80205	NAS427K17	.PIN, SPRING........UHB,UHC,UHM	EA	2
371	3	PAOZZ	4010-00-771-2512	97499	204-001-792-9	.WIRE ROPE ASSEMBLY........UHB,UHC,UHM	EA	2
371	4	XAOZZ		97499	204-001-794-1	..WASHER,BALL SEAT........UHB,UHC,UHM	EA	2
371	5	PAOZZ	5306-00-174-4115	88044	AN174H15	.BOLT,CLOSE TOLER........UHB,UHC,UHM	EA	2
371	6	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHB,UHC,UHM	EA	44
371	7	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN........UHB,UHC,UHM	EA	4
371	7A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER........UHB,UHC,UHM	EA	12
371	8	PAOOO	3040-00-625-0156	97499	204-001-784-1	.CONNECTING LINK,RIG........UHB,UHC,UHM	EA	2
371	9	PAOZZ	3120-00-662-4734	97499	22-006-15-15-16	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	2
371	10	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER........UHB,UHC,UHM	EA	1
371	11	PAOFF	1560-00-633-0818	97499	204-001-800-1	.BELL CRANK ASSY........UHB,UHC,UHM	EA	1
371	12	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA........UHB,UHC,UHM	EA	2
371	13	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	2
371	14	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA........UHB,UHC,UHM	EA	1
371	15	PAFZZ	3120-00-624-5247	97499	2356-4KA	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	1
371	16	PAOZZ	5306-00-151-1059	88044	AN174H57	.BOLT,CLOSE TOLER........UHB,UHC,UHM	EA	1
371	17	PAOZZ	5310-00-141-1796	88044	AN960-416	.WASHER,FLAT........UHB,UHC,UHM	EA	1
371	18	PAOFF	1560-00-075-9327	97499	204-001-779-5	.QUANDRANT,CONTROL ASSY........UHB,UHC,UHM	EA	1
371	19	PAFZZ	1560-00-065-5531	97499	205-001-719-1	..ADAPTER,QUADRANT........UHB,UHC,UHM	EA	1
371	20	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	1
371	21	PAFZZ	3120-00-625-0045	97499	22-009-15-37-22	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	2
371	21A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA........UHC,UHM	EA	1
371	22	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE........UHB,UHC,UHM	EA	4
371	23	PAOOO	1560-00-896-6265	97499	204-001-795-5	.SUPPORT ASSY, QUADRANT........UHB,UHC,UHM	EA	1
371	24	PAOZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA........UHB,UHC,UHM	EA	1
371	25	PAOZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	1
371	26	PAOZZ	3120-00-862-4357	97499	22-006-15-19-16	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	2
371	27	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE........UHB,UHC,UHM	EA	17
371	28	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE........UHB,UHC,UHM	EA	17
371	29	PAOOO	1560-00-653-4339	97499	204-001-793-5	.SUPPORT ASSEMBLY QUADRANT........UHB,UHC,UHM	EA	1
371	30	PAOZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE........UHB,UHC,UHM	EA	1
371	30A	PAOZZ	3110-00-030-3381	97499	MS27641-4	..BEARING,BALL,AIRFRA........UHC,UHM	EA	1
371	31	PAOZZ	5365-00-670-7887	97499	204-001-785-1	.SHIM........UHB,UHC,UHM	EA	1
371	32	PAOZZ	3020-00-277-1123	96906	MS20220-2	.PULLEY,GROOVE........UHB,UHC,UHM	EA	4
371	32A	PAOZZ	5306-00-182-1395	88044	AN175-17	.BOLT,MACHINE........UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
371	33	PAOZZ	5306-00-180-0470	88044	AN175-15	.BOLT,CLOSE TOLERANC	UHB,UHC,UHM	EA	2
371	35	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT	UHB,UHC,UHM	EA	8
371	36	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,PLAIN	UHB,UHC,UHM	EA	4
371	36A	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER	UHB,UHC,UHM	EA	4
371	37	PBOZZ	5315-00-811-1245	96906	MS20392-2C35	.PIN,STRAIGHT,HEADED	UHB,UHC,UHM	EA	2
371	38	PAOZZ	1560-00-733-8307	97499	204-001-824-1	.BRACKET,PULLEY,LH	UHB,UHC,UHM	EA	1
371	39	PAOZZ	1560-00-731-7983	97499	204-001-824-2	.BRACKET,PULLEY,RH	UHB,UHC,UHM	EA	1
371	40	PAOZZ	1560-00-778-7761	97499	204-001-826-1	.BRACKET,PULLEY,LH	UHB,UHC,UHM	EA	1
371	41	PAOZZ	1560-00-778-7758	97499	204-001-826-2	.BRACKET,PULLEY,RH	UHB,UHC,UHM	EA	1
371	42	MFOZZ	1560-00-735-6550	97499	204-001-827-1	.BRACKET,CABLE GUARD U/O PN 204-001-049-1	UHB,UHC,UHM	EA	2
371	43	MFOZZ	1560-00-735-6551	97499	204-001-827-2	.BRACKET,CABLE GUARD U/O PN 204-001-049-1	UHB,UHC,UHM	EA	2
371	45	PAOZZ	5365-00-678-5402	97499	204-001-787-3	.SPACER,PLATE	UHB,UHC,UHM	EA	2
371	46	PBOZZ	5315-00-080-0486	96906	MS20392-2C47	.PIN,STRAIGHT,HEA	UHB,UHC,UHM	EA	2
371	47	PAOZZ	5315-00-811-1242	96906	MS20392-2C29	.PIN,STRAIGHT,HEA	UHB,UHC,UHM	EA	2
371	48	PAOZZ	5325-00-574-9369	97820	S11154-3BTS	.GROMMET,NONMETALLIC -ALTERNATE-	UHB,UHC,UHM	EA	10
371	49	PAOZZ	3120-00-966-6535	97499	50-004-1B	.GROMMET,FAIRLEAD	UHB,UHC,UHM	EA	10
371	50	PAOZZ	5325-00-678-7112	97820	S11154-3DTS	.GROMMET,NONMETALLIC -ALTERNATE-	UHB,UHC,UHM	EA	4
371	51	PAOZZ	5325-00-966-6536	97499	50-004-1D	.GROMMET,FAIRLEAD	UHB,UHC,UHM	EA	4
371	52	PAOZZ	5325-00-818-1563	97820	S11154-8ATS	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	2

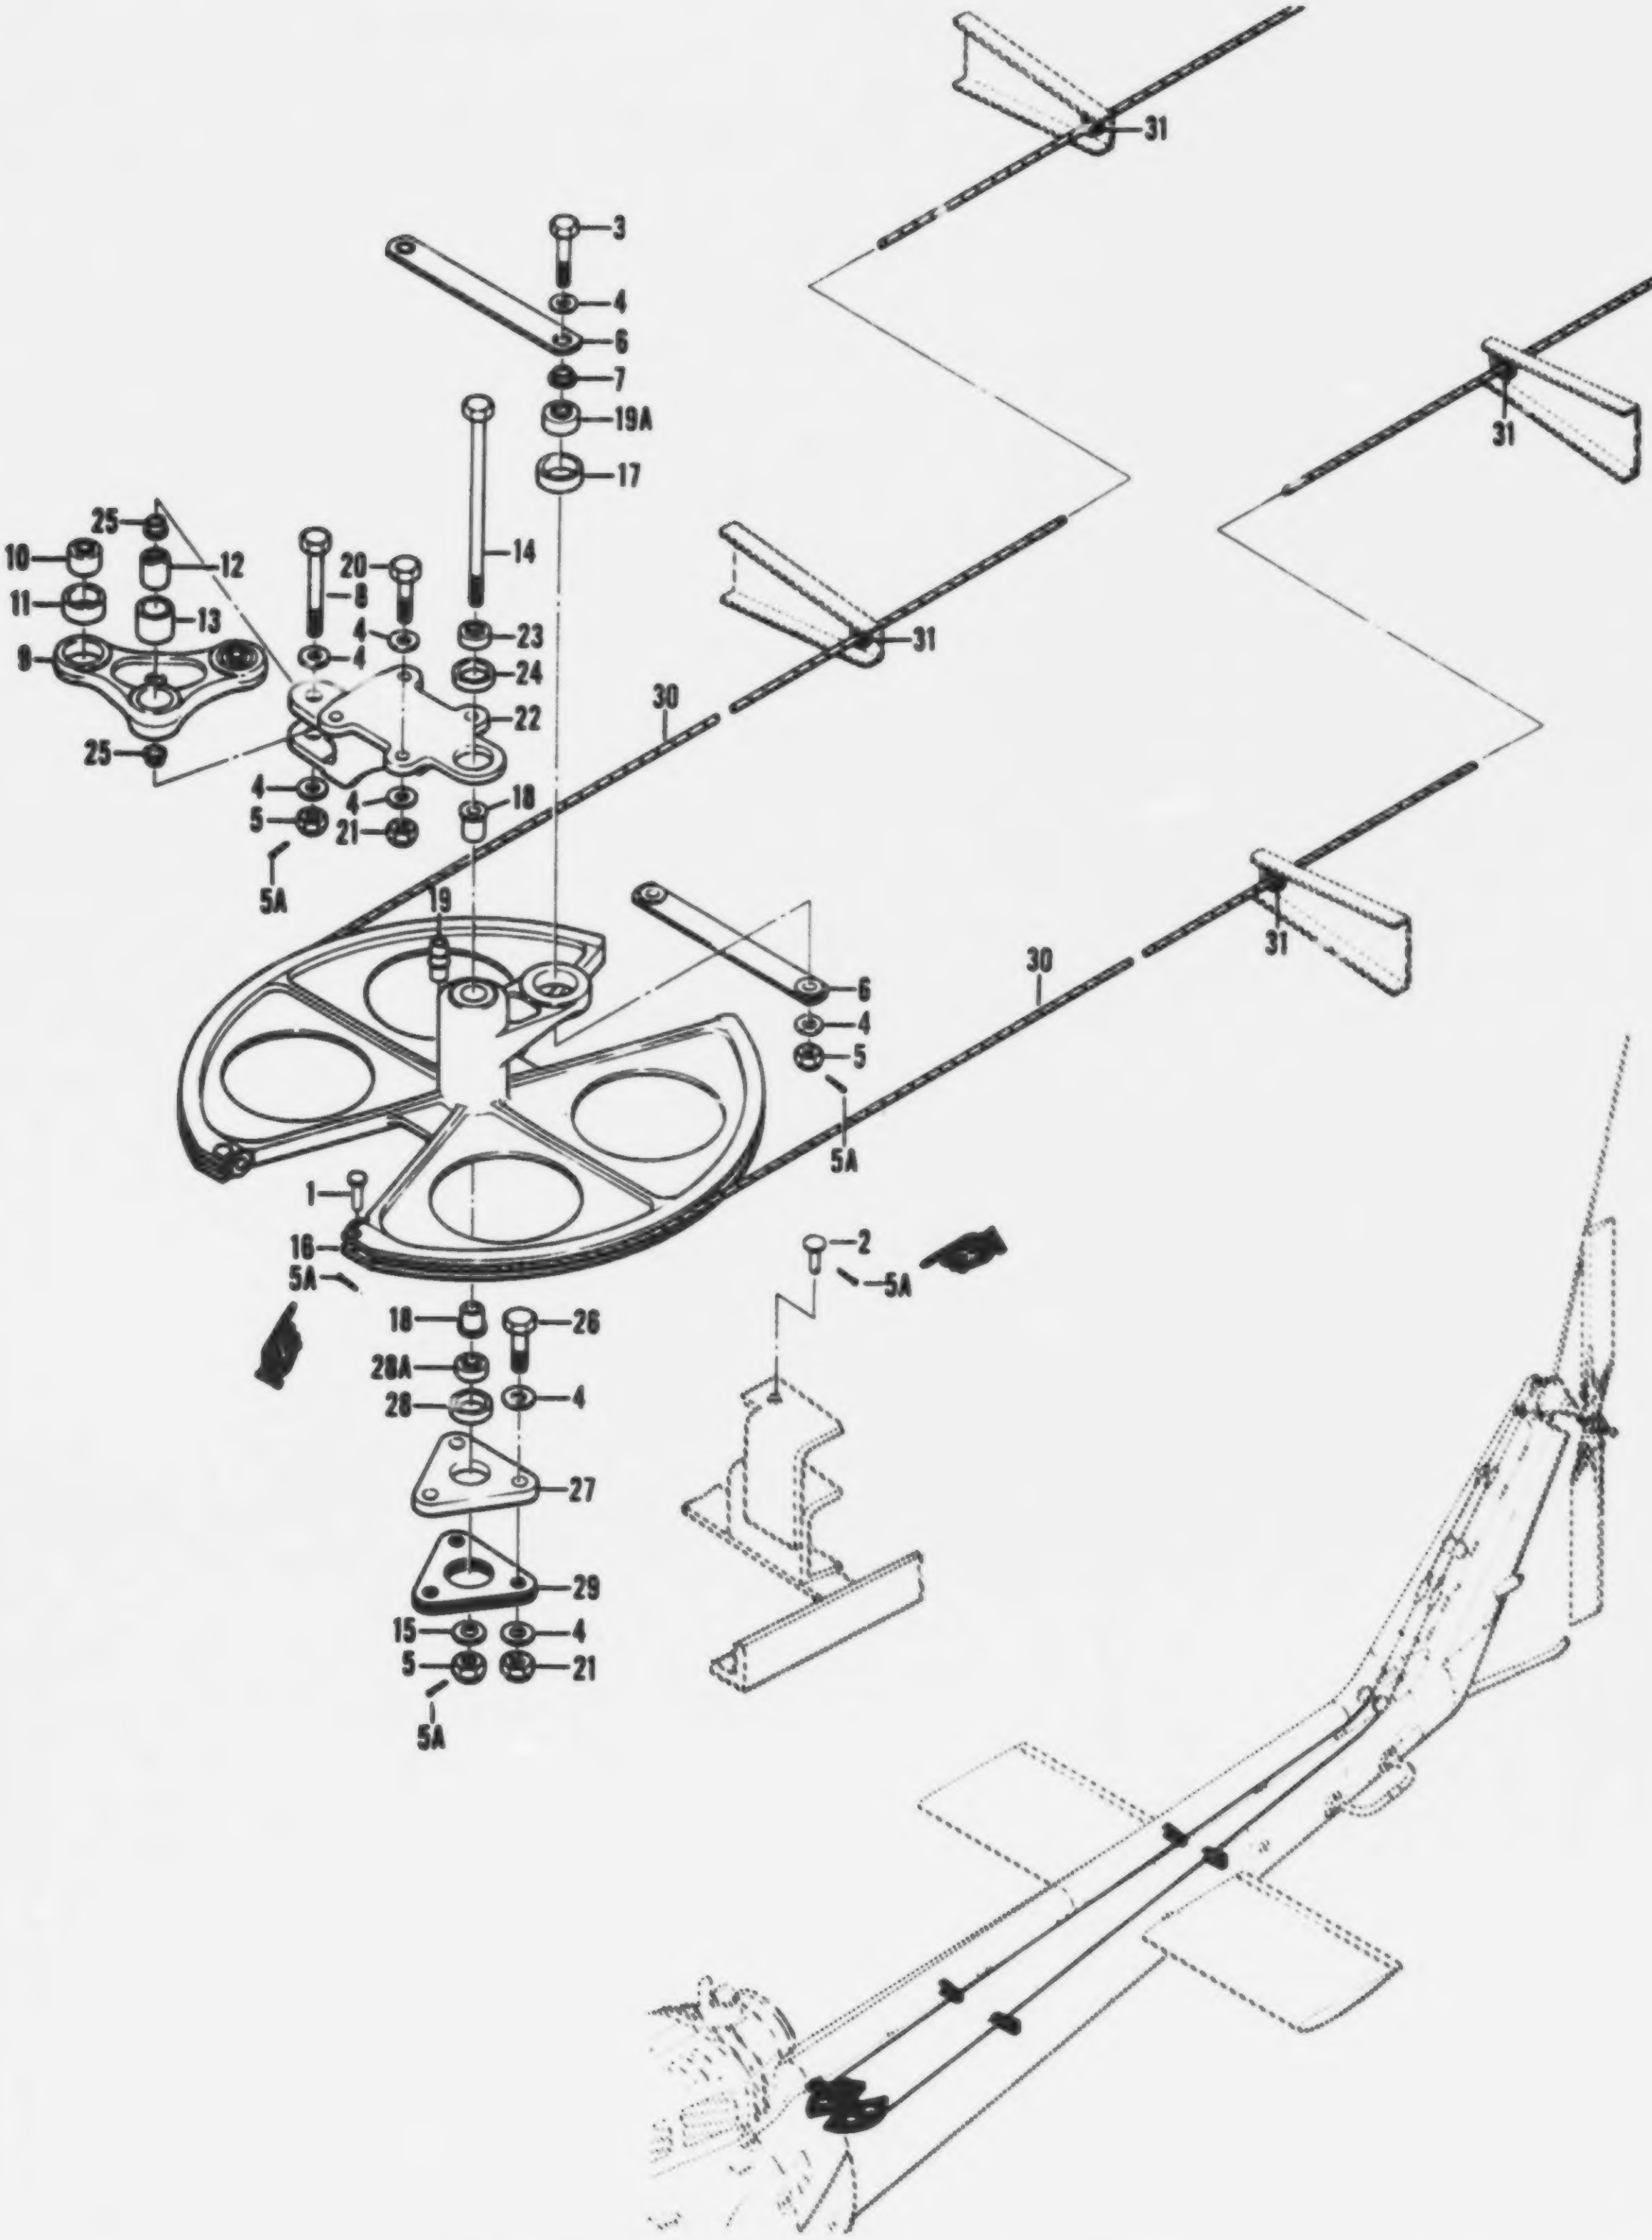
31
3
4
6
7
19A
17
31
25
12
10
11
13
14
20
8
4
4
9
23
24
22
30
31
25
4
5
4
21
18
5A
19
6
4
5
30
31
5A
1
16
5A
2
5A
18
26
28A
28
4
27
29
15
4
5
21
5A

Figure 372. Cable Installation, Tail Rotor Control

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
372		XCFZZ		97499	205-001-005-3	CABLE INSTL TAIL ROTOR CONTROL USBL EFF 62-12351 THRU 63-12372 SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
372		XCFZZ		97499	205-001-005-5	CABLE INSTL TAIL ROTOR CONTROL USBL EFF 63-8739 THRU 64-13901 SEE FIG.8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
372		XCFZZ		97499	205-001-005-7	CABLE INSTL TAIL ROTOR CONTROL USBL EFF 65-9565 & SUBSEQUENT SEE FIG 8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
372	1	PBOZZ	5315-00-811-1266	96906	MS20392-1C19	.PIN,STRAIGHT,HEA .... UHE,UHH,UHV,UHX	EA	2
372	2	PBOZZ	5315-00-811-1245	96906	MS20392-2C35	.PIN,STRAIGHT,HEADED .... UHE,UHH,UHV,UHX	EA	2
372	3	PAOZZ	5306-00-180-1739	88044	AN174-15	.BOLT,CLOSE TOLER .... UHE,UHH,UHV,UHX	EA	2
372	4	PAOZZ	5310-00-844-5081	80205	NAS1197-416	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	20
372	5	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN .... UHE,UHH,UHV,UHX	EA	4
372	5A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER .... UHE,UHH,UHX,UHV	EA	8
372	6	PAOOO	3040-00-625-0156	97499	204-001-784-1	.CONNECTING LINK,RIG .... UHE,UHH,UHV,UHX	EA	2
372	7	PAOZZ	3120-00-662-4734	97499	22-006-15-15-16	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
372	8	PAOZZ	5306-00-283-0169	88044	AN174-20	.BOLT,CLOSE,TOLER .... UHE,UHH,UHV,UHX	EA	1
372	9	PAOFF	1560-00-633-0818	97499	204-001-800-1	.BELL CRANK ASSY .... UHE,UHH,UHV,UHX	EA	1
372	10	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA .... UHE,UHH,UHV,UHX	EA	2
372	11	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
372	12	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA .... UHE,UHH,UHV,UHX	EA	1
372	13	PAFZZ	3120-00-624-5247	97499	2356-4KA	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
372	14	PAOZZ	5306-00-151-1059	88044	AN174H57	.BOLT,CLOSE TOLER .... UHE,UHH,UHV,UHX	EA	1
372	15	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
372	16	PAOFF	1560-00-075-9327	97499	204-001-779-5	.QUADRANT,CONTROL ASSY ANTI-TORQUE .... UHE,UHH,UHV,UHX	EA	1
372	17	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
372	18	PAFZZ	3120-00-625-0045	97499	22-009-15-37-22	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
372	19	PAFZZ	1560-00-065-5531	97499	205-001-719-1	..ADAPTER,QUADRANT U/O PN 204-001-779-5 .... UHE,UHH,UHV,UHX	EA	1
372	19A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA .... UHE,UHH,UHV,UHX	EA	1
372	20	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	4
372	21	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	7
372	22	PAOOO	1560-00-896-6265	97499	204-001-795-5	.SUPPORT ASSY, QUADRANT .... UHE,UHH,UHV,UHX	EA	1
372	23	PAFZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA .... UHE,UHH,UHV,UHX	EA	1
372	24	PAFZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
372	25	PAFZZ	3120-00-662-4357	97499	22-006-15-19-16	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
372	26	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	3
372	27	PAOOO	1560-00-653-4339	97499	204-001-793-5	.SUPPORT ASSY QUADRANT .... UHE,UHH,UHV,UHX	EA	1
372	28	PAOZZ	3120-00-835-5712	97499	120-012-4A	..BUSHING,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
372	28A	PAFZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA .... UHE,UHH,UHV,UHX	EA	1
372	29	PAOZZ	5365-00-670-7867	97499	204-001-785-1	.SHIM .... UHE,UHH,UHV,UHX	EA	1
372	30	PAOZZ	4010-00-017-8267	97499	205-001-706-9	.CABLE ASSEMBLY .... UHE,UHH,UHV,UHX	EA	2
372	31	PAOZZ	5325-00-630-9442	97820	S11154-3ATS	.GROMMET,NONMETALLIC .... UHE,UHH,UHV,UHX	EA	4

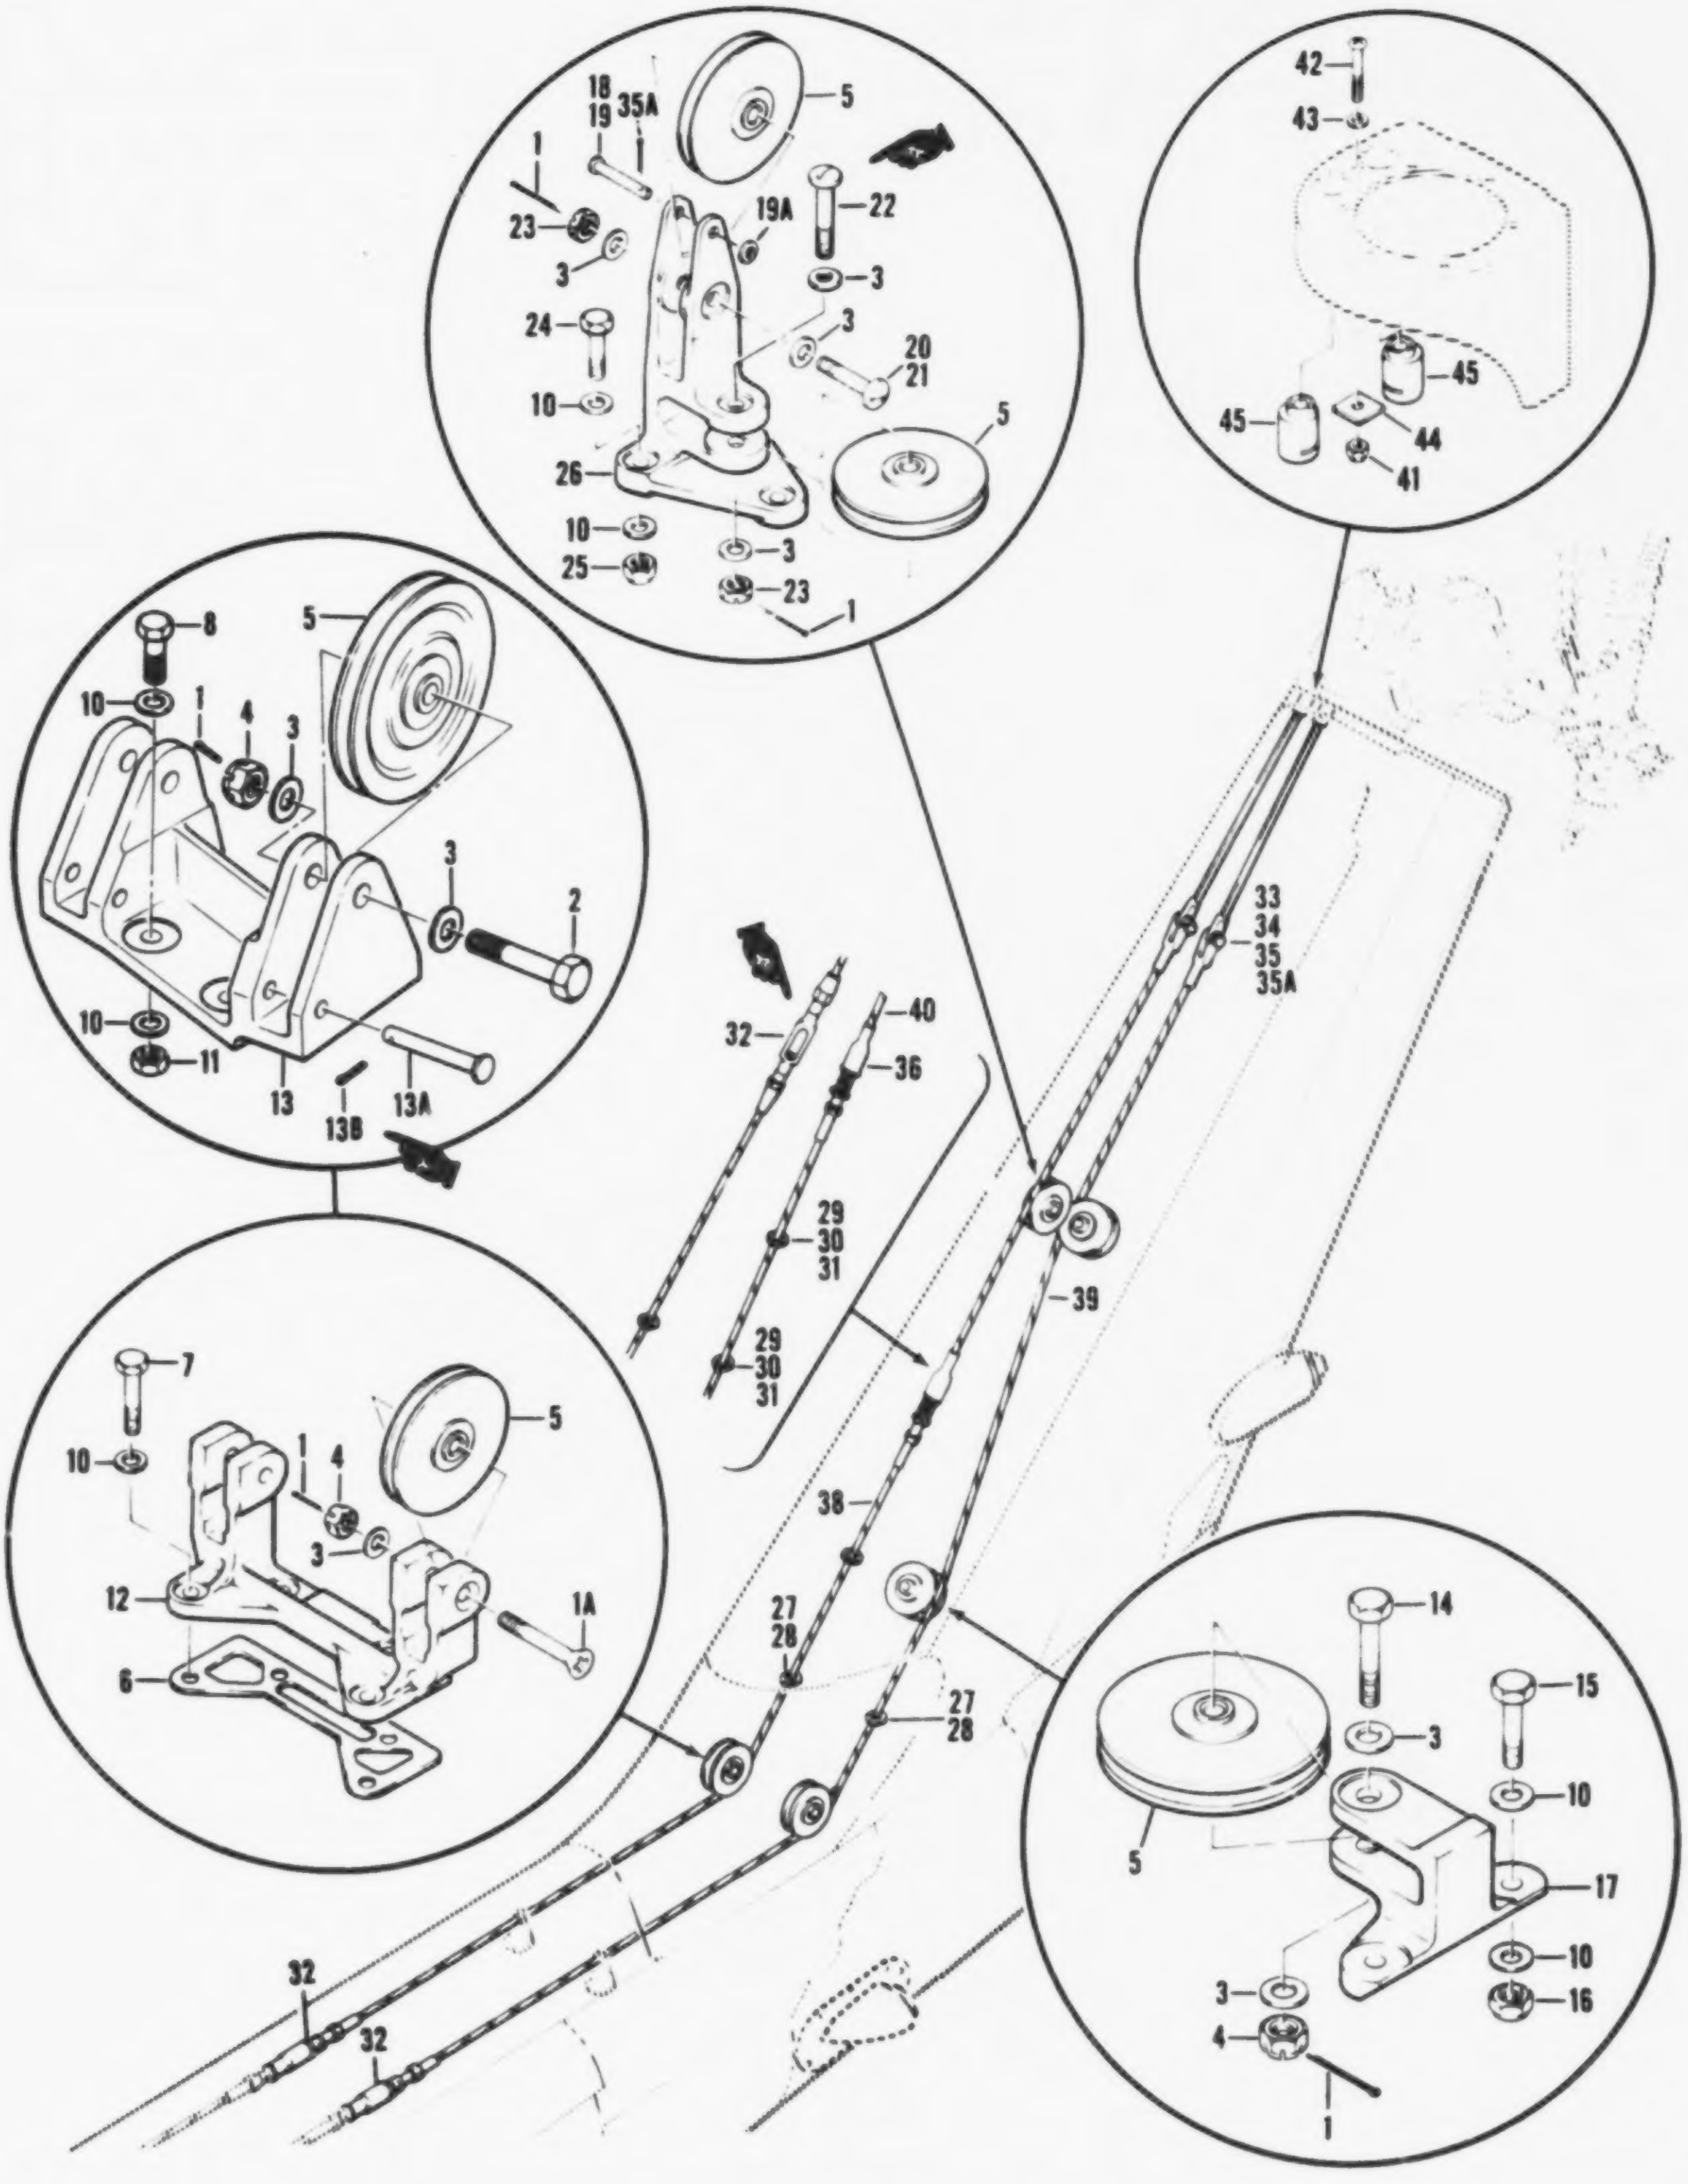
18
19
35A
5
1
23
3
19A
22
3
3
24
20
21
10
5
26
10
3
25
23
1
42
43
45
45
44
41
8
5
10
1
4
3
3
2
10
11
13
13B
13A
33
34
35
35A
32
40
36
29
30
31
29
30
31
39
7
5
10
1
4
3
12
1A
6
38
27
28
27
28
14
15
3
10
5
17
10
3
16
4
1
32
32

Figure 373. Cable Installation, Tail Rotor Control Aft

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
373		XCFZZ		97499	204-001-049-1	CABLE INSTL, TAIL ROTOR CONTROL AFT USBL EFF 60-3546 THRU 61-753 SEE FIG 8 FOR NHA UHB	EA	1
373		XCFZZ		97499	204-001-049-3	CABLE INSTL TAIL ROTOR CONTROL AFT USBL EFF 61-754 THRU 61-803 SEE FIG.8 FOR NHA UHB	EA	1
373		XCFZZ		97499	204-001-049-9	CABLE INSTL TAIL ROTOR CONTROL AFT USBL EFF 62-1872 THRU 62-1996 SEE FIG.8 FOR NHA UHB	EA	1
373		XCFZZ		97499	204-001-049-17	CABLE INSTL, TAIL ROTOR CONTROL AFT USBL EFF 62-1997 & SUBSEQUENT SEE FIG.8 FOR NHA UHB,UHC,UHM	EA	1
373		XCFZZ		97499	205-001-005-3	CABLE INSTL TAIL ROTOR CONTROL AFT USBL EFF 62-2106 THRU 62-12372 SEE FIG.8 FOR NHA UHE,UHH,UHV,UHX	EA	1
373		XCFZZ		97499	205-001-005-5	CABLE INSTL TAIL ROTOR CONTROL AFT USBL EFF 63-8739 THRU 64-13901 SEE FIG 8 FOR NHA UHE,UHH,UHV,UHX	EA	1
373		XCFZZ		97499	205-001-005-7	CABLE INSTL TAIL ROTOR CONTROL AFT USBL EFF 65-9565 & SUBSEQUENT SEE FIG 8 FOR NHA UHE,UHH,UHV,UHX	EA	1
373	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	PIN,COTTER UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
373	1A	PAOZZ	5305-00-616-1563	80205	NAS335CP17	SCREW,CLOSE TOLERAN U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	2
373	2	PAOZZ	5306-00-180-0469	88044	AN175-14	BOLT,CLOSE TOLERANC U/O PN 205-001-005-3,-5,-7 UHE,UHH,UHV,UHX	EA	2
373	3	PAOZZ	5310-00-187-2399	88044	AN960PD516	WASHER,FLAT UHE,UHH,UHV,UHX	EA	10
373	4	PAOZZ	5310-00-167-1286	88044	AN310-5	NUT,PLAIN UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
373	5	PAOZZ	3020-00-277-1123	96906	MS20220-2	PULLEY,GROOVE 5 EA U/O PN 204-001-049-1,-3,-9,-17 4 EA U/O PN 205-001-005-3,-5,-7 UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
373	6	PAOZZ	5365-00-646-3550	97499	204-001-788-1	SHIM U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	6
373	7	PAOZZ	5306-00-182-1958	88044	AN4H10A	BOLT,MACHINE U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	4
373	8	PAOZZ	5306-00-182-2017	88044	AN4H6A	BOLT,MACHINE U/O PN 205-001-005-3,-5,-7 UHE,UHH,UHV,UHX	EA	4
373	10	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	18
373	11	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-001-005-3,-5,-7 UHE,UHH,UHV,UHX	EA	4
373	12	PAOZZ	1560-00-733-8295	97499	204-001-823-1	BRACKET,PULLEY AFT SECTION U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	1
373	13	PAOZZ	1560-00-966-6102	97499	205-001-709-1	BRACKET ASSY,PULLEY U/O PN 205-001-005-3,-5,-7 UHE,UHH,UHV,UHX	EA	1
373	13A	PAOZZ	5315-00-080-0484	96906	MS20392-2C43	PIN,STRAIGHT,HEA UHE,UHH,UHV,UHX	EA	2
373	13B	PAOZZ	5315-00-058-3164	96906	MS24665-148	PIN,COTTER UHE,UHH,UHV,UHX	EA	2
373	14	PAOZZ	5306-00-275-9528	88044	AN175H13	BOLT,CLOSE TOLER U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	1
373	15	PAOZZ	5306-00-182-1959	88044	AN4H11A	BOLT,MACHINE U/C PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	2
373	16	PAOZZ	5310-00-857-5557	96906	MS21045L4	NUT,SELF-LOCKING,HE U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	2
373	17	PAOZZ	1560-00-779-0690	97499	204-001-822-1	BRACKET,PULLEY U/O PN 204-001-049-1,-3,-9,-17 UHB,UHC,UHM	EA	1
373	18	PBOZZ	5315-00-812-3764	96906	MS20392-2C41	PIN,STRAIGHT,HEA USBL EFF 62-2106 THRU 65-9720 UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
373	19	PBOZZ	5315-00-811-1245	96906	MS20392-2C35	PIN,STRAIGHT,HEADED USBL EFF 65-9721 AND SUBSEQUENT 205-001-005-3,-5,-7 UHE,UHH,UHV,UHX	EA	1
373	19A	PAOZZ	5310-00-814-8313	80205	NAS1197-10L	WASHER,FLAT UHB,UHC,UHH,UHM,UHE,UHV,UHX	EA	1
373	20	PAOZZ	5306-00-144-3857	88044	AN25-21	BOLT,CLEVIS UBBL EFF 62-2106 THRU 65-9720 UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
373	21	PAOZZ	5306-00-144-3856	88044	AN25-20	BOLT,CLEVIS USBL EFF 65-9721 & SUBSEQUENT U/O PN 204-001-049-17,205-001- 005-7 UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
373	22	PAOZZ	5306-00-144-3860	88044	AN25-24	.BOLT,CLEVIS..........................UHE,UHH,UHV,UHX,UHC,UHM	EA	1
373	23	PAOZZ	5310-00-176-8109	88044	AN320-5	.NUT,PLAIN,SLOTTED H.............. .UHE,UHH,UHM,UHV,UHX	EA	2
373	24	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE...................... .UHE,UHH,UHM,UHV,UHX	EA	3
373	25	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE.............. UHE,UHH,UHM,UHV,UHX	EA	3
373	26	PAOZZ	1560-00-931-8331	97499	204-001-825-3	.BRACKET,PULLEY.................... UHE,UHH,UHM,UHV,UHX	EA	1
373	27	PAOZZ	5325-00-818-1563	97499	50-004-6A	.GROMMET,NONMETALLIC U/O PN 204-001-049-1,-3,-9,-17,PN 205-001-005-3,-5.................... UHE,UHH,UHM,UHV,UHX	EA	2
373	28	PAOZZ	5325-00-939-8549	97499	50-004-7A	.GROMMET,NONMETALLIC U/O PN 205-001-005-7....UHE,UHH,UHV,UHX	EA	2
373	29	PAOZZ	5325-00-986-9970	97499	50-004-5C	.GROMMET BLANK,NO U/O PN 205-001-005-3,-5,-7 ....UHE,UHH,UHV,UHX	EA	2
373	30	PAOZZ	5365-00-995-8009	97499	120-030-32-24	.SHIM U/O PN 205-001-005-3,-5,PN 204-001-049-1,-3,-9,-17 ....UHE,UHH,UHV,UHX	EA	2
373	31	PAOZZ	5365-00-923-4408	97499	120-030-41-33	.SHIM U/O PN 205-001-005-7...................UHE,UHH,UHV,UHX	EA	2
373	32	PAOZZ	4030-00-709-6091	45402	D7-2001-5-1A	.COUPLING,WIRE ROPE, QUICK DISCONNECT U/O PN 204-001-049-1,-3,-9,-17.................................... UHM	EA	2
373	33	PAOZZ	5306-00-151-1963	88044	AN23-11	.BOLT,CLEVIS...................... UHE,UHH,UHM,UHV,UHX	EA	2
373	34	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT...................... UHE,UHH,UHM,UHV,UHX	EA	2
373	35	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,PLAIN,SLOTTED,H.............. .UHE,UHH,UHM,UHV,UHX	EA	2
373	35A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.......................... UHE,UHH,UHM,UHX	EA	3
373	36	PAOZZ	5340-00-068-8739	45402	0301245	.BARREL ASSEMBLY U/O PN 205-001-005-3,-5,-7 ....UHE,UHH,UHV,UHX	EA	2
373	38	PAOZZ	4010-00-893-4867	80205	NAS314C27-0797	.WIRE ROPE ASSY U/O PN 204-001-049-1,-3,-9,-17 .... UHM	EA	1
373	39	PAOZZ	4010-00-893-4866	80205	NAS314C27-0804	.WIRE ROPE ASSY U/O PN 204-001-049-1,-3,-9,-17 .... UHM	EA	1
373	40	PAOZZ	4010-00-021-9095	97499	205-001-720-1	.CABLE ASSEMBLY U/O PN 205-001-005-3,-5,-7 ....UHE,UHH,UHV,UHX	EA	2
373	41	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHH,UHM,UHV,UHX	EA	1
373	42	PAOZZ	5305-00-182-1365	88044	AN525-10R26	.SCREW,MACHINE.................... UHH,UHM,UHV,UHX	EA	1
373	43	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT...................... UHH,UHM,UHV,UHX	EA	1
373	44	PAOZZ	1560-00-707-7799	97499	204-001-821-1	.SPACER PLATE..................... UHH,UHM,UHV,UHX	EA	1
373	45	PAOZZ	1615-01-016-1334	81996	1560-UH-1-765-1	.FAIRLEAD,CHAIN,TORQ.............. UHH,UHM,UHV,UHX	EA	2

Fig 374 NOT USED

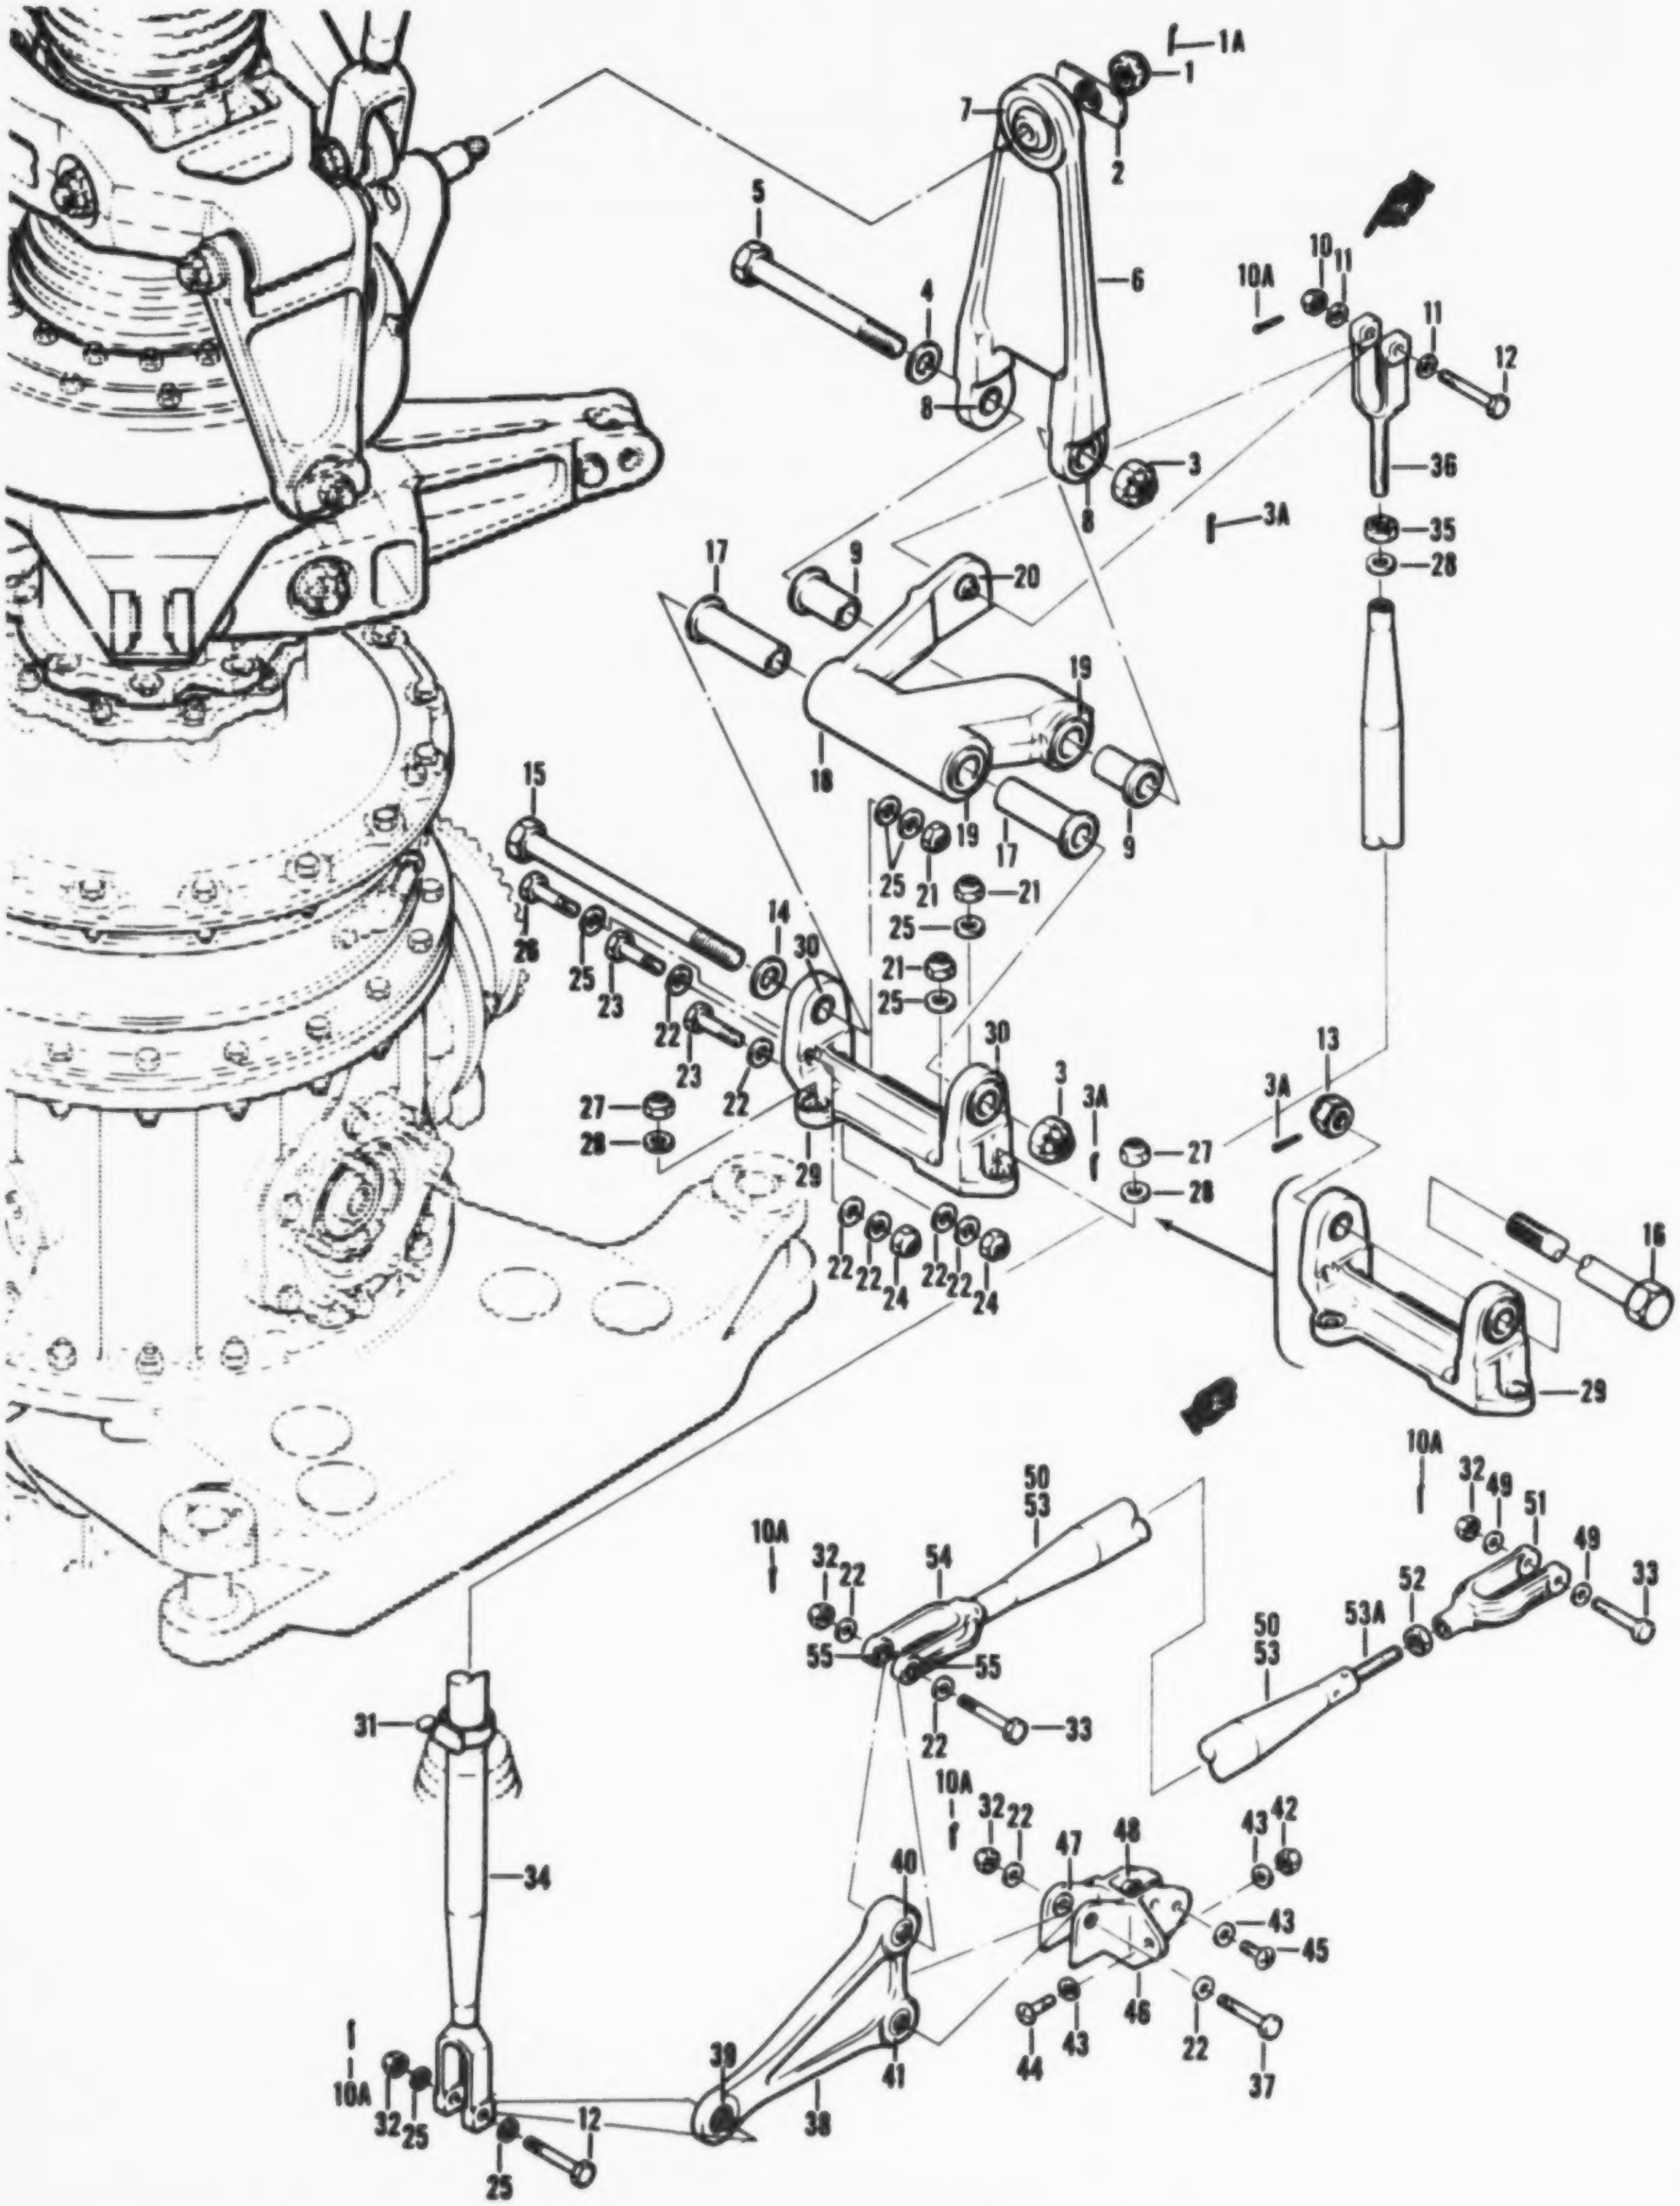
1A
1
7
2
5
6
4
8
3
8
3A
10A
10
11
11
12
36
35
28
17
9
20
19
18
19
17
9
15
25
21
21
25
21
25
26
25
23
14
30
22
23
22
30
3
3A
27
28
29
13
3A
27
28
22
22
24
22
22
24
16
29
10A
32
49
51
49
33
50
53
54
10A
32
22
55
55
22
33
52
53A
50
53
31
34
10A
32
22
47
48
43
42
40
43
45
46
22
37
44
43
39
41
38
10A
32
25
25
12

Figure 375. Control Installation, Synchronized Elevator Forward

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 11 FLIGHT CONTROL SYSTEM		
375		XCFZZ		97499	204-001-076-1	CONTROL INSTL SYNCHRONIZED ELEVATOR FORWARD USBL EFF 64-14101 THRU 65-12772 SEE FIG.6 FOR NHA..........UHM	EA	1
375		XCFZZ		97499	204-001-076-5	CONTROL INSTL SYNCHRONIZED ELEVATOR FORWARD USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA..........UHM	EA	1
375	1	PAOZZ	5310-00-167-1289	88044	AN310-8	.NUT,PLAIN..........UHM	EA	1
375	1	PAOZZ	5310-00-871-8758	96906	MS17826-8	.NUT,SELF-LOCKING,SL ,CASTELLATED..........UHM	EA	1
375	1A	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN COTTER..........UHM	EA	1
375	2	PAOZZ	5365-00-871-8788	97499	540-011-440-5	.SPACER,PLATE..........UHM	EA	1
375	3	PAOZZ	5310-00-582-6055	88044	AN310-10	.NUT,PLAIN,CASTELLAT USE 2 EA ON 204-001-076-1, USE 1 EA ON 204-001-076-5..........UHM	EA	2
375	3A	PAOZZ	5315-00-059-0491	96906	MS24665-372	.PIN,COTTER..........UHM	EA	2
375	4	PAOZZ	5310-00-878-0339	97499	140-007-41-35D5	.WASHER,RECESSED..........UHM	EA	1
375	5	PAOZZ	5306-00-900-8702	80205	NAS1310-72D	.BOLT,SHEAR..........UHM	EA	1
375	6	PAOOO	3040-00-847-7501	97499	540-001-903-1	.LEVER,REMOTE CONTRO..........UHM	EA	1
375	7	PAOZZ	3120-00-775-1852	97499	540-011-414-1	..BEARING,PLAIN,SELF-..........UHM	EA	1
375	8	PAOZZ	3120-00-871-8769	97499	540-011-421-15	..BUSHING,SLEEVE..........UHM	EA	2
375	9	PAOZZ	3120-00-771-5927	97499	540-011-441-3	.BUSHING,SLEEVE..........UHM	EA	2
375	10	PAOZZ	5310-00-900-9421	96906	MS17825-5	.NUT,SELF-LOCKING,SL..........UHM	EA	2
375	10A	PAOZZ	5315-00-234-1854	96906	MS24665-153	.COTTER PIN..........UHM	HD	5
375	11	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........UHM	EA	2
375	12	PAOZZ	5306-00-207-1665	88044	AN175H20	.BOLT,CLOSE TOLERANC..........UHM	EA	2
375	13	PAOZZ	5310-00-176-8114	88044	AN320-10	.NUT,PLAIN,SLOTTED,H U/O PN 204-001-076-5..........UHM	EA	1
375	14	PAOZZ	5310-00-878-0339	97499	140-007-41-35D5	.WASHER,RECESSED U/O PN 204-001-076-1..........UHM	EA	1
375	15	PAOZZ	5306-00-900-8701	80205	NAS1310-114D	.BOLT,SHEAR U/O PN 204-001-076-1..........UHM	EA	1
375	16	PAOZZ	5306-00-891-3250	80205	NAS464P10-112	.BOLT,SHEAR U/O PN 204-001-076-5..........UHM	EA	1
375	17	PAOZZ	3120-00-771-5938	97499	540-011-441-1	.BUSHING,SLEEVE..........UHM	EA	2
375	18	PAOFF	1680-00-057-8301	97499	540-001-904-9	.BELLCRANK ASSEMBLY..........UHM	EA	1
375	19	PAFZZ	3120-00-772-6188	97499	540-011-419-11	..BEARING,SLEEVE..........UHM	EA	4
375	20	PAFZZ	3120-00-775-1851	97499	206-001-053-1	..BEARING,PLAIN..........UHM	EA	1
375	21	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHM	EA	3
375	22	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHM	EA	10
375	23	PAOZZ	5306-00-182-1795	88044	AN174-13A	.BOLT,MACHINE..........UHM	EA	2
375	24	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHM	EA	2
375	25	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT..........UHM	EA	7
375	26	PAOZZ	5306-00-275-9528	88044	AN175H13	.BOLT,CLOSE TOLER..........UHM	EA	1
375	27	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHM	EA	2
375	28	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT..........UHM	EA	2
375	29	PAOOO	1615-00-871-8679	97499	540-001-905-1	.SUPPORT,SWASHPLATE..........UHM	EA	1
375	30	PAOZZ	3120-00-871-8769	97499	540-011-421-15	..BUSHING,SLEEVE..........UHM	EA	2
375	31	PAOZZ	4730-00-278-9101	88044	AN737RM44	.CLAMP,HOSE..........UHM	EA	1
375	32	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN..........UHM	EA	3
375	33	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER..........UHM	EA	2
375	34	PAOOO	3040-00-871-8789	97499	540-001-908-1	.CONNECTING LINK ASSY..........UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
375	35	PAOZZ	5310-00-167-1300	88044	AN316-6R	..NUT,PLAIN,HEXAGO UHM	EA	1
375	36	PAOZZ	5340-00-918-4609	97499	540-001-025-1	..CLEVIS,ROD END UHM	EA	1
375	36A	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT UHM	EA	1
375	37	PAOZZ	5306-00-182-1912	88044	AN4H17	.BOLT,MACHINE UHM	EA	1
375	38	PAOFF	1560-00-872-1114	97499	540-001-907-1	.BELL CRANK ASSY UHM	EA	1
375	39	PAFZZ	3120-00-775-1861	97499	206-001-053-1	..BEARING,PLAIN UHM	EA	1
375	40	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA UHM	EA	1
375	41	PAFZZ	3110-00-168-6296	21335	DW4	..BEARING,BALL,AIRFRA UHM	EA	1
375	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHM	EA	2
375	43	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHM	EA	10
375	44	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE UHM	EA	2
375	45	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE UHM	EA	6
375	46	PAOFF	1615-00-890-7283	97499	204-001-945-1	.SUPPORT ASSY UHM	EA	1
375	47	PAFZZ	3120-00-862-4734	97499	22-006-15-15-16	..BUSHING,SLEEVE UHM	EA	2
375	48	PAFZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL UHM	EA	6
375	49	PAOZZ	5310-00-141-1796	88044	AN960-416	.WASHER,FLAT UHM	EA	2
375	50	XAFZZ	3040-00-731-7966	97499	204-001-012-71	.CONNECTING LINK,RIG UHM	EA	1
375	51	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END UHM	EA	1
375	52	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO UHM	EA	1
375	53	XAOOO		97499	204-001-012-73	..TUBE ASSEMBLY UHM	EA	1
375	53A	PAOZZ	5315-00-168-4497	97499	80-002-2	...INSERT UHM	EA	1
375	54	PAOZZ	5340-00-755-6265	97499	204-001-006-1	...CLEVIS,ROD END UHM	EA	1
375	55	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING,SLEEVE UHM	EA	2

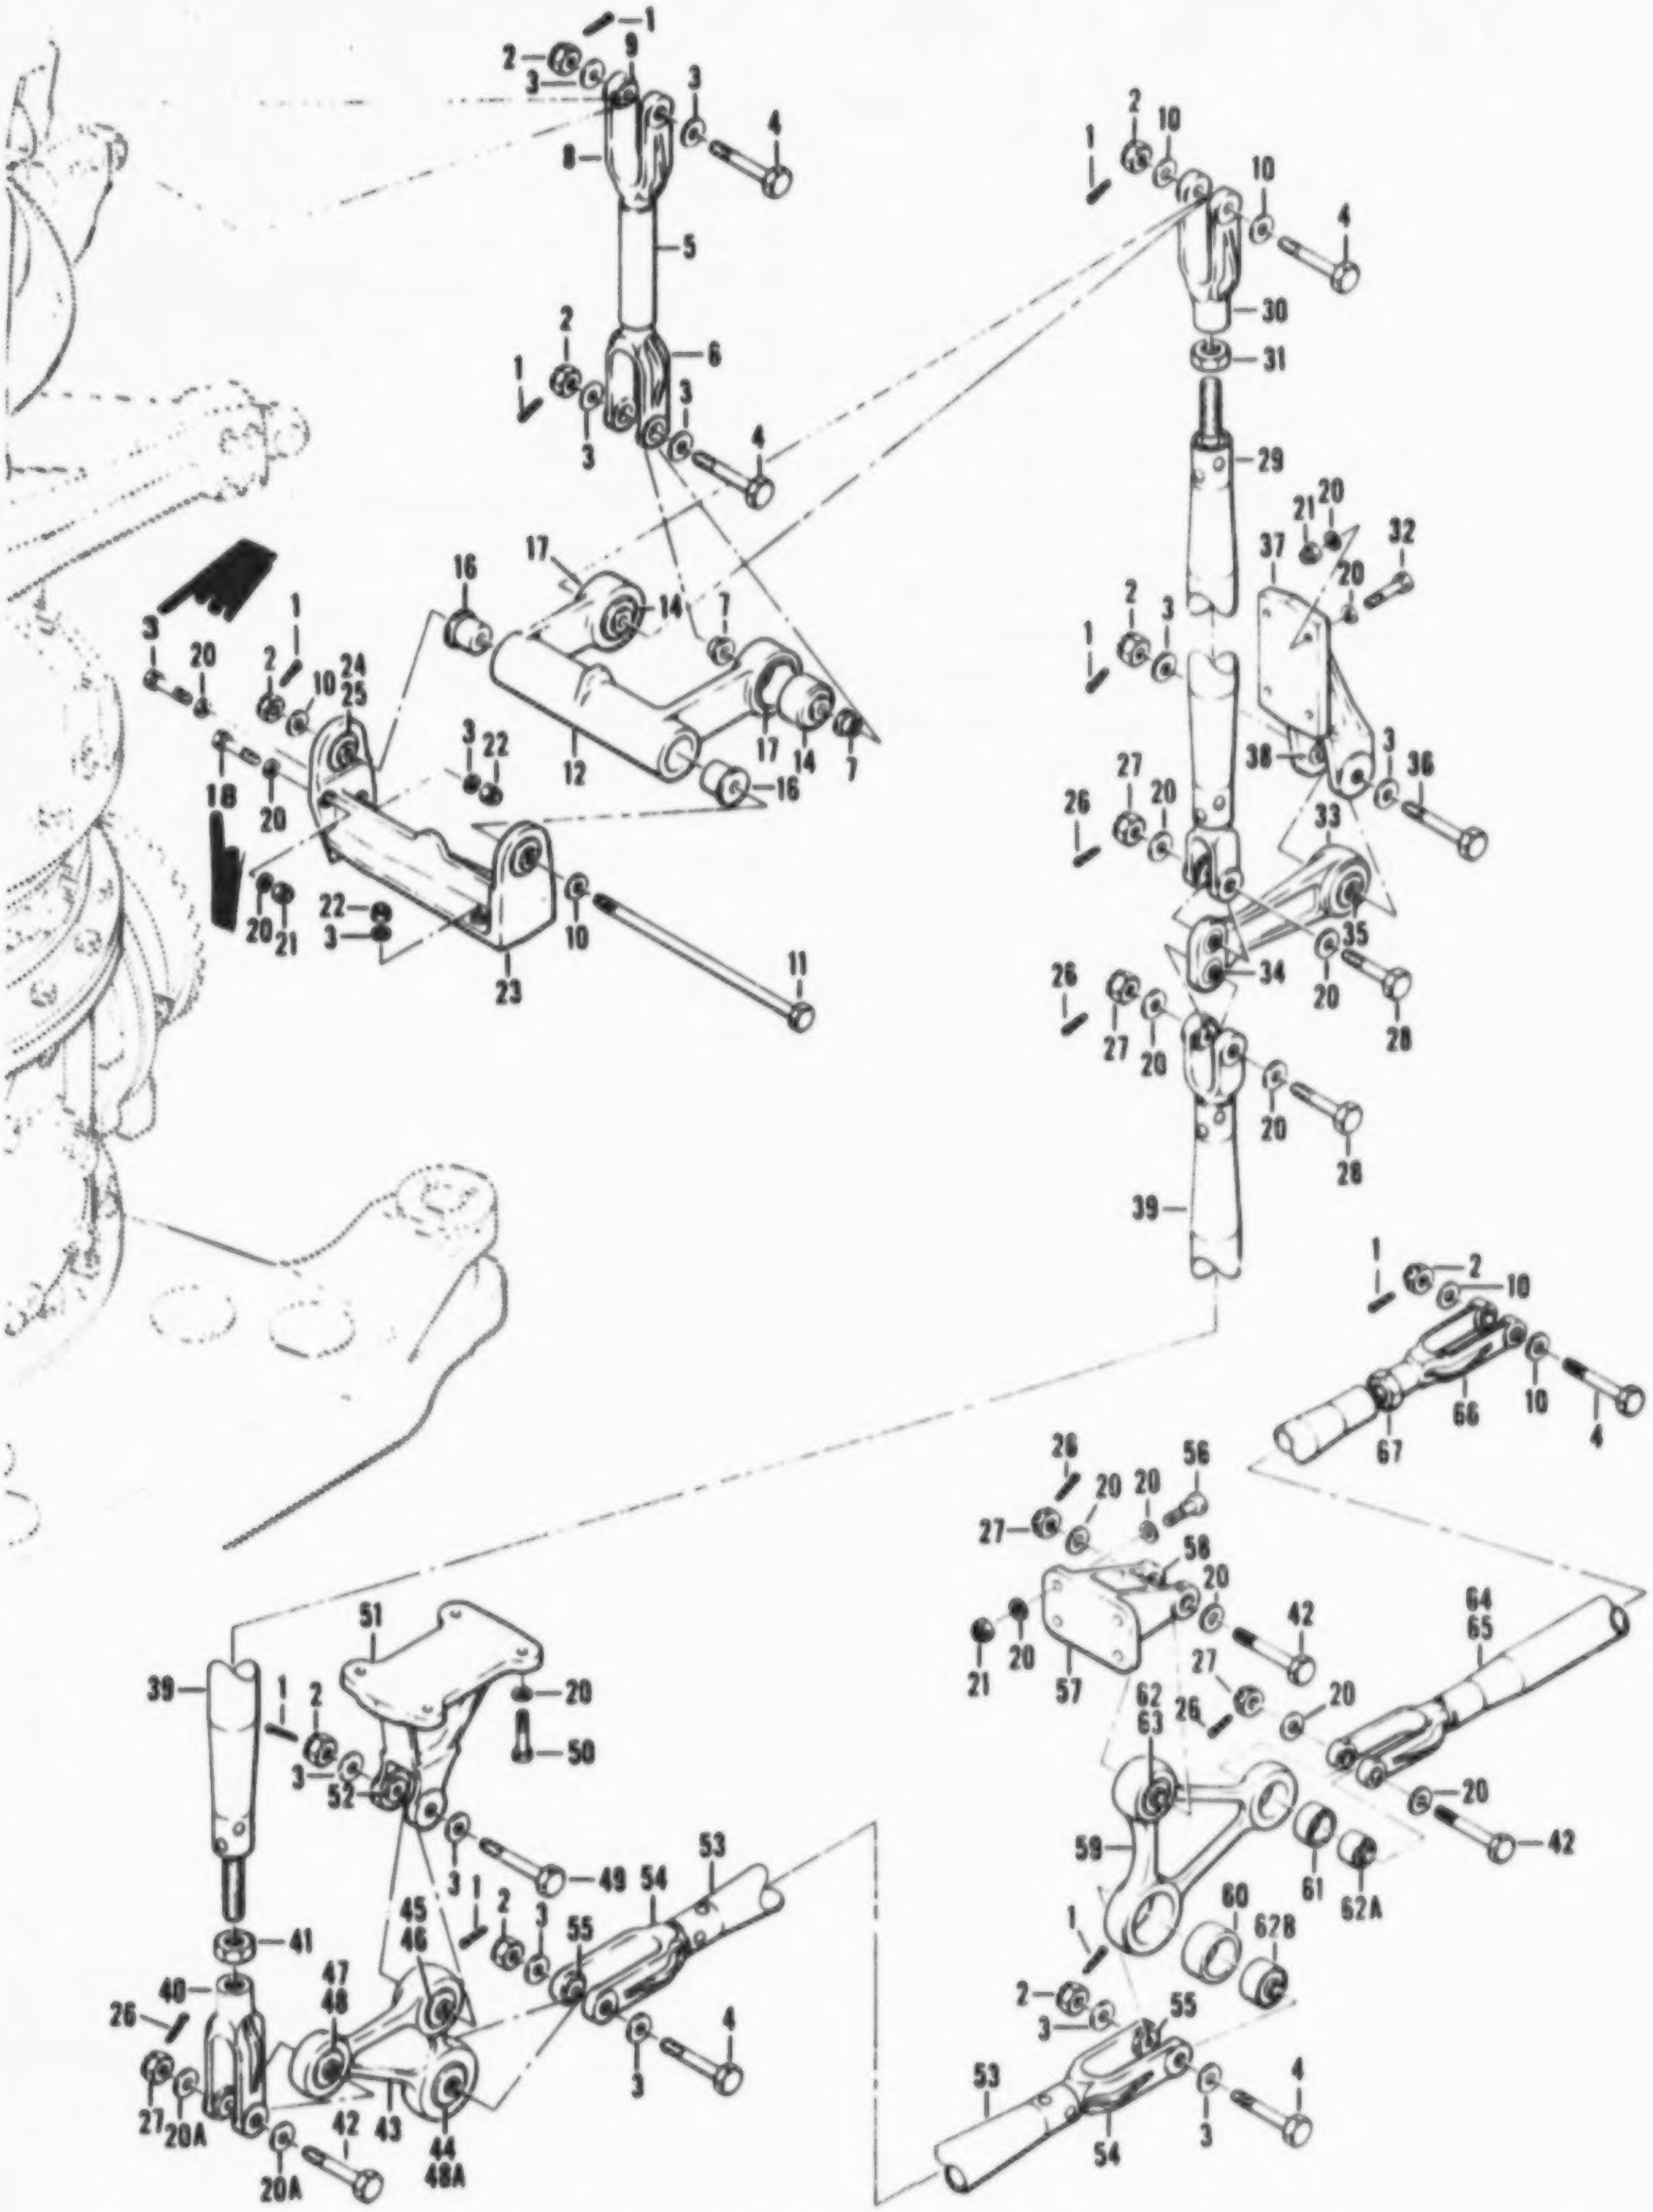
1
2
9
3
3
4
8
5
2
6
1
3
3
4
2
10
10
1
4
30
31
29
21
20
32
37
20
2
3
1
16
17
14
7
3
1
20
2
10
24
25
3
22
12
17
14
7
16
18
20
20
21
22
3
10
23
11
27
20
26
38
3
36
33
35
34
20
28
26
27
20
20
28
39
1
2
10
66
10
4
67
26
56
20
20
27
58
20
42
64
65
21
20
57
27
26
20
62
63
20
42
59
61
62A
60
62B
1
2
3
55
4
53
3
54
39
1
2
20
50
3
52
51
3
49
54
53
1
2
3
45
46
55
41
47
48
40
26
3
4
27
20A
42
43
44
48A
20A

Figure 376. Control Installation, Synchronized Elevator Forward

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CCDE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
376		XCFZZ		97496	205-001-010-1	CONTROL INSTL,FWD USBL EFF 62-2106 THRU 68-15324 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
376		XCFZZ		97499	205-001-010-9	CONTROL INSTL,FWD USBL EFF 68-15325 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
376	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER..........UHE,UHH,UHV,UHX	EA	9
376	2	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,PLAIN..........UHE,UHH,UHV,UHX	EA	9
376	3	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	16
376	4	PAOZZ	5306-00-207-1665	88044	AN175H20	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	6
376	5	PAOOO	3040-00-731-8098	97499	204-001-957-1	.CONNECTING LINK,RIG..........UHE,UHH,UHV,UHX	EA	1
376	6	XAOOZ		97499	204-001-959-1	..CLEVIS,ROD END ASSY..........UHE,UHH,UHV,UHX	EA	1
376	7	PAOZZ	3120-00-840-2717	97499	204-001-960-1	...BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
376	8	XAOOZ		97499	204-001-053-1	..CLEVIS ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
376	9	PAOZZ	3120-00-670-5906	97499	204-001-054-1	...BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
376	10	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	6
376	11	PAOZZ	5306-00-582-9997	88044	AN175H74	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	1
376	12	PAOFF	1560-00-949-8231	97499	205-001-902-5	.LEVER,ELEVATOR,ASSY..........UHE,UHH,UHV,UHX	EA	1
376	14	PAFZZ	3120-00-928-9024	99526	RALT5-4	..BEARING,PLAIN,SELF- ALIGNING..........UHE,UHH,UHV,UHX	EA	2
376	16	PAFZZ	3120-00-840-2730	97499	22-012-19-40-28	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
376	17	PAFZZ	3120-00-690-8394	97499	120-013-5A	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
376	18	PAOZZ	5306-00-727-6788	88044	AN174I11A	.BOLT,CLOSE TOLER..........UHE,UHH,UHV,UHX	EA	2
376	20	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	V
376	20A	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
376	21	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	10
376	22	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
376	23	PAOFF	1560-00-731-8096	97499	204-001-954-1	.SUPPORT ASSY..........UHE,UHH,UHV,UHX	EA	1
376	24	PAFZZ	3110-00-033-9851	96906	MS27641-5	..BEARING,BALL,AIRFRA.......... UHE,UHH,UHM,UHV,UHX	EA	2
376	25	PAFZZ	3120-00-625-0124	97499	120-012-5A	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
376	26	PAOZZ	5315-00-816-1405	96906	MS24665-151	.PIN,COTTER..........UHE,UHH,UHV,UHX	EA	5
376	27	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN..........UHE,UHH,UHV,UHX	EA	5
376	28	PAOZZ	5306-00-174-4115	88044	AN174H15	.BOLT,CLOSE TOLER..........UHE,UHH,UHV,UHX	EA	2
376	29	PAOOO	3040-00-052-5312	97499	205-001-017-1	.CONNECTING LINK,RIG..........UHE,UHH,UHV,UHX	EA	1
376	30	PAOZZ	5340-00-843-1726	97499	204-001-958-1	..CLEVIS,ROD END..........UHE,UHH,UHV,UHX	EA	1
376	31	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO..........UHE,UHH,UHV,UHX	EA	1
376	32	PAOZZ	5306-00-182-1962	88044	AN4H14A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	4
376	33	PAOFF	1560-00-966-6104	97499	205-001-908-1	.IDLER ASSY..........UHE,UHH,UHV,UHX	EA	1
376	34	PAFZZ	3120-00-088-4631	99528	RSST4	..BEARING,PLAIN,SELF- ALIGNING..........UHE,UHH,UHV,UHX	EA	2
376	35	PAFZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL,AIRFRA..........UHE,UHH,UHV,UHX	EA	1
376	36	PAOZZ	5306-00-275-9562	88044	AN175-21	.BOLT,CLOSE,TOLER..........UHE,UHH,UHV,UHX	EA	1
376	37	PAOOO	1560-00-966-6107	97499	205-001-913-1	.SUPPORT ASSY..........UHE,UHH,UHV,UHX	EA	1
376	38	PAOZZ	3120-00-072-5073	97499	22-007-19-20-18	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
376	39	PAOOO	3040-00-964-5073	97499	205-001-017-7	.CONNECTING LINK,RIG..........UHE,UHH,UHV,UHX	EA	1
376	40	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
376	41	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO	UHE,UHH,UHV,UHX	EA	1
376	42	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER	UHE,UHH,UHV,UHX	EA	3
376	43	PAOFF	1560-00-966-7522	97499	205-001-905-1	.BELL CRANK ASSY	UHE,UHH,UHV,UHX	EA	1
376	44	PAFZZ	3120-00-690-8394	97499	120-013-5A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
376	45	PAFZZ	3110-00-158-6298	21335	DW5	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
376	46	PAFZZ	3120-00-690-7503	97499	120-015-5A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
376	47	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
376	48	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
376	48A	PAFZZ	3110-00-042-3853	96906	MS27643-5	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
376	49	PAOZZ	5306-00-275-9562	88044	AN175-21	.BOLT,CLOSE,TOLER	UHE,UHH,UHV,UHX	EA	1
376	50	PAOZZ	5306-00-638-4283	80205	NAS464P4A4	.BOLT,SHEAR	UHE,UHH,UHV,UHX	EA	4
376	51	PAOOO	1560-00-966-6106	97499	205-001-910-1	.SUPPORT ASSY	UHE,UHH,UHV,UHX	EA	1
376	52	PAOZZ	3120-00-072-5073	97499	22-007-19-20-18	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
376	53	PAOOO	3040-00-246-4554	97499	205-001-018-5	.CONNECTING LINK,RIG	UHE,UHH,UHV,UHX	EA	1
376	54	XAOOZ		97499	204-001-053-1	..CLEVIS ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
376	55	PAOZZ	3120-00-670-5906	97499	204-001-064-1	...BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
376	56	PAOZZ	5306-00-182-1961	88044	AN4H13A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
376	57	PAOOO	1560-00-966-6105	97499	205-001-909-1	.SUPPORT ASSY	UHE,UHH,UHV,UHX	EA	1
376	58	PAOZZ	3120-00-555-5557	97499	22-006-15-18-16	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
376	59	PAOFF	1560-00-966-6103	97499	205-001-906-1	.BELL CRANK ASSY	UHE,UHH,UHV,UHX	EA	1
376	60	PAFZZ	3120-00-690-8394	97499	120-013-5A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
376	61	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
376	62	PAFZZ	3110-00-158-6295	21335	DW4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
376	62A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
376	62B	PAFZZ	3110-00-042-3853	96906	MS27643-5	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1
376	63	PAFZZ	3120-00-624-5247	97499	23S6-4KA	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
376	64	PAOOO	3040-00-952-7145	97499	205-001-019-1	.CONNECTING LINK,RIG	UHE,UHH,UHV,UHX	EA	1
376	65	XAOZZ		97499	205-001-019-3	..TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
376	66	PAOZZ	5340-00-843-1726	97499	204-001-958-1	..CLEVIS,ROD END	UHE,UHH,UHV,UHX	EA	1
376	67	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN HEXAGON	UHE,UHH,UHV,UHX	EA	1

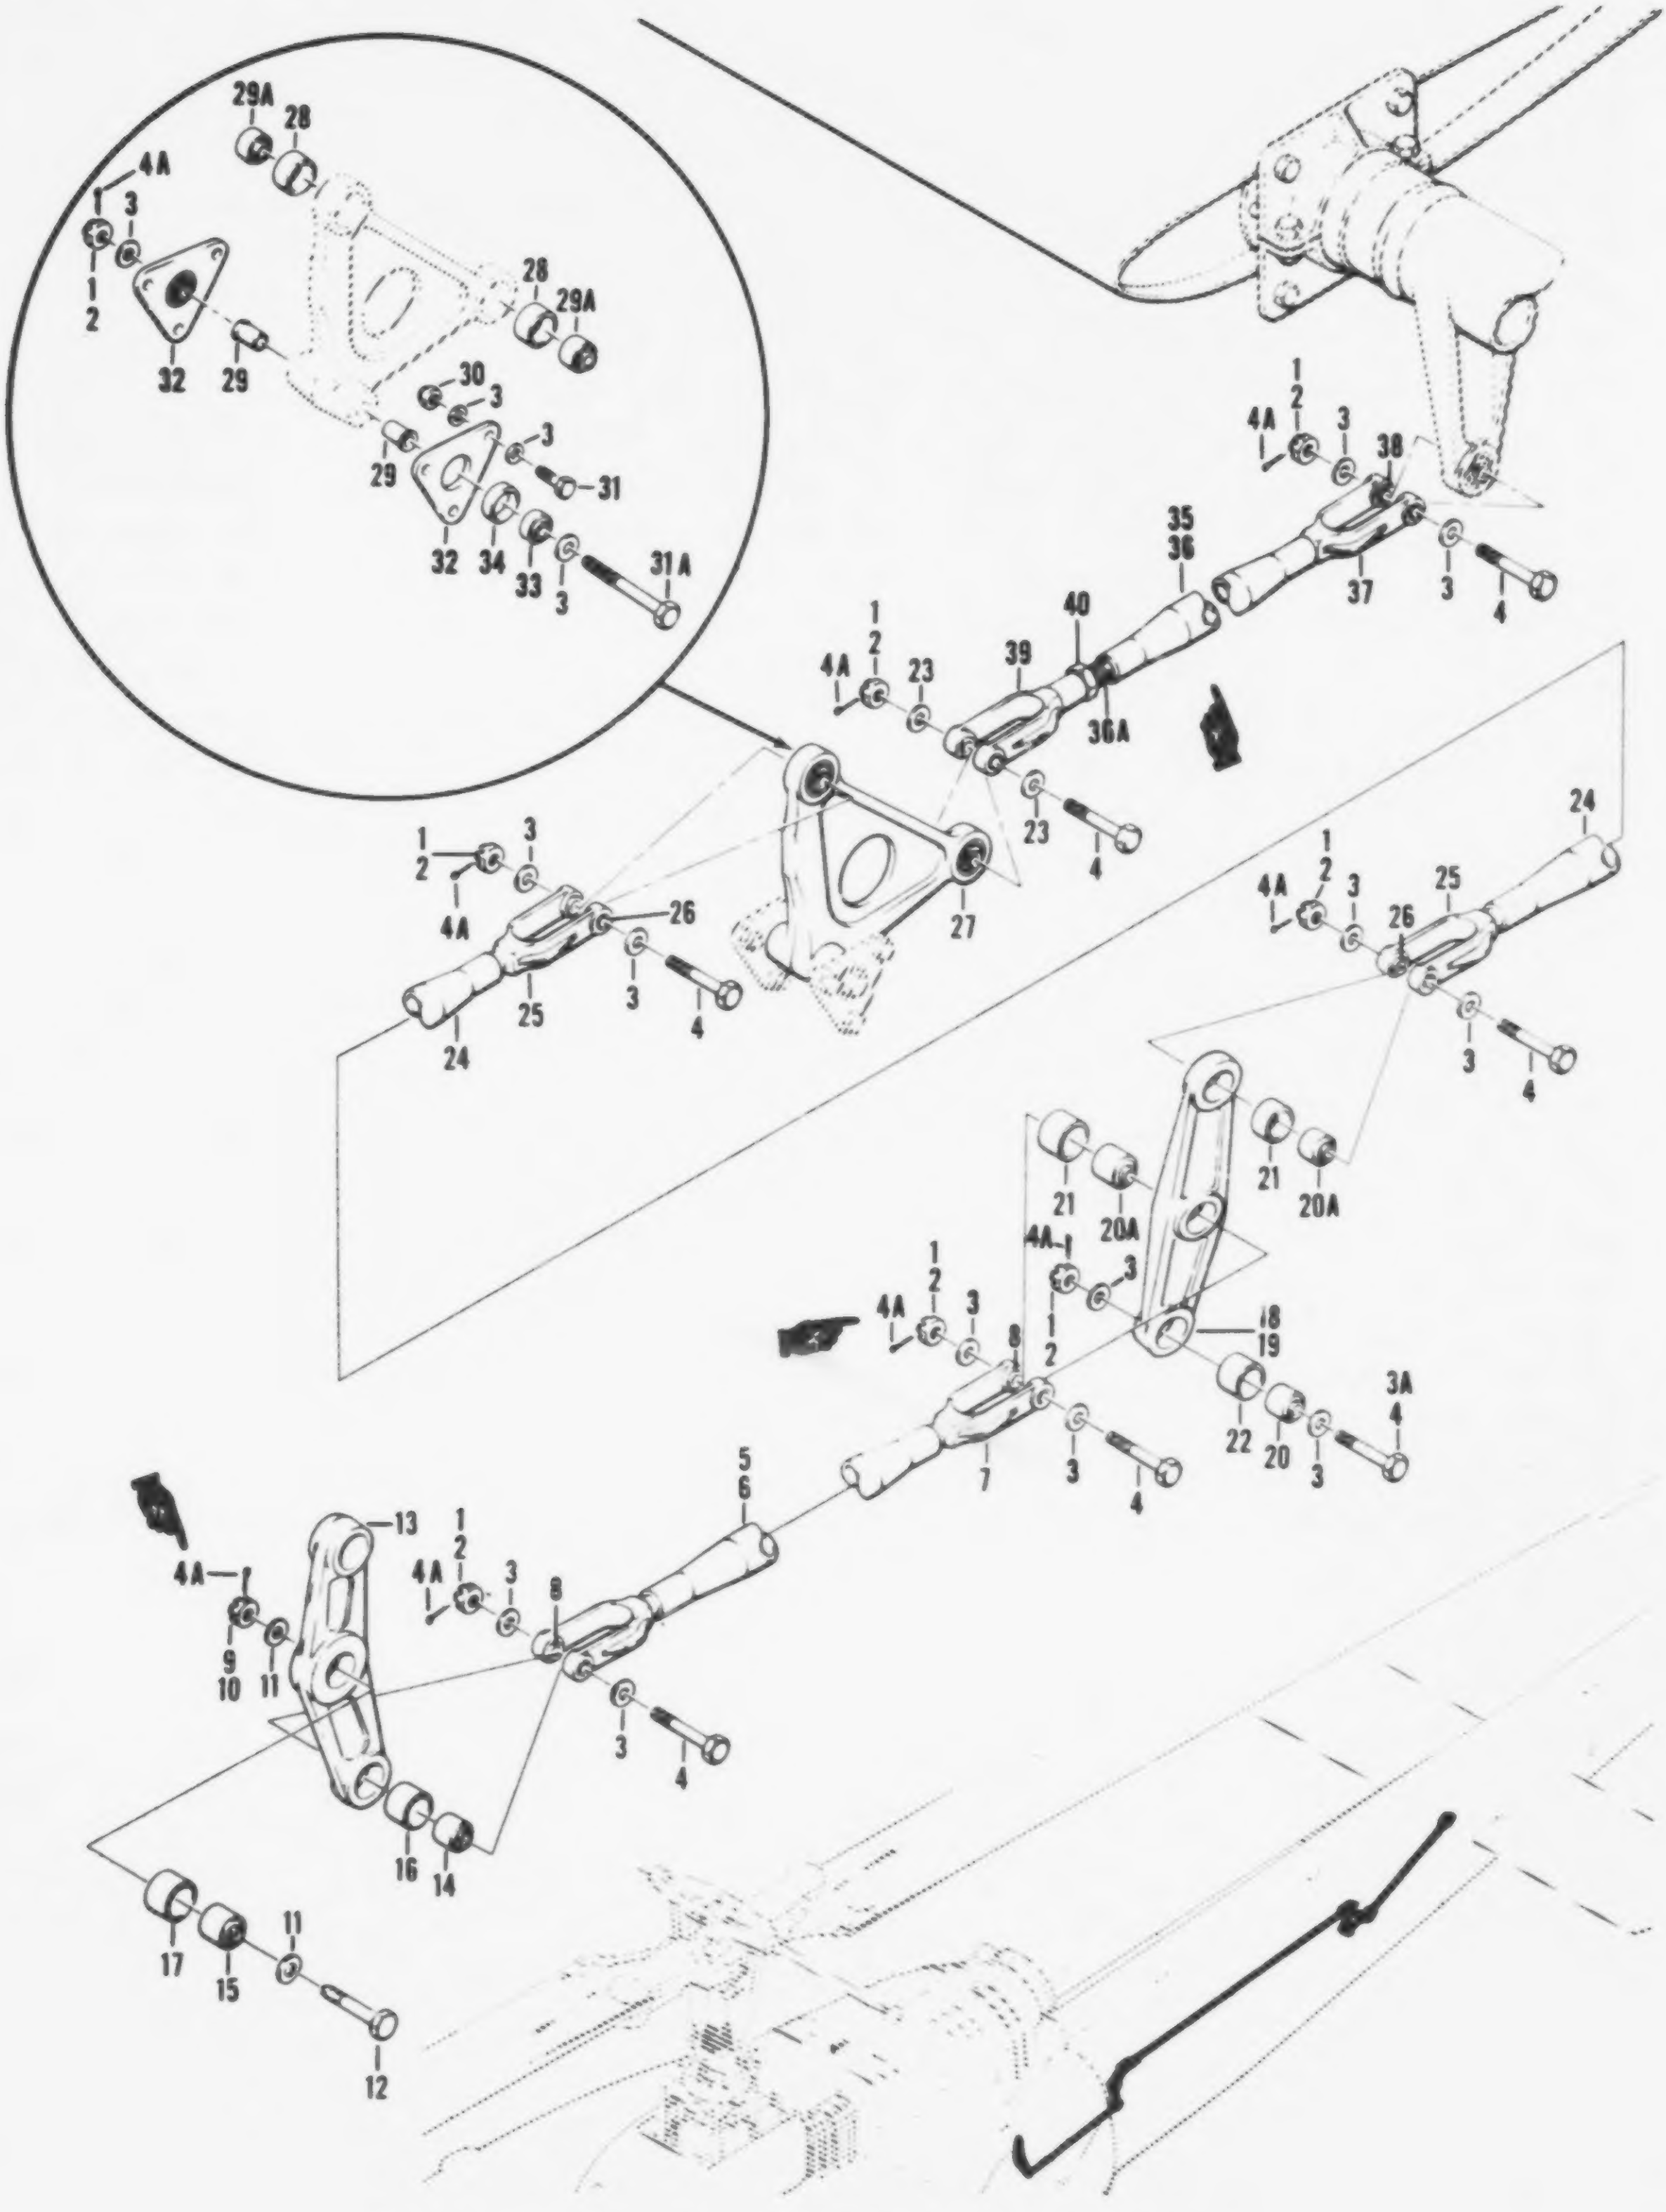
29A
28
4A
1
3
1
2
32
29
28
29A
30
3
3
29
31
32
34
33
3
31A
1
2
4A
3
38
35
36
37
3
4
40
39
1
2
4A
23
36A
23
4
1
3
2
4A
26
27
25
24
3
4
24
1
4A
2
3
25
26
3
4
21
20A
21
20A
1
4A
3
1
2
4A
3
8
1
2
18
19
3A
4
22
20
3
7
3
4
5
6
13
4A
1
2
4A
3
8
9
10
11
3
4
16
14
11
17
15
12

Figure 377. Control Installation, Synchronized Elevator Aft

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
377		XCFZZ		97499	204-001-060-3	CONTROL INSTL SYNCHRONIZED ELEVATOR AFT USBL EFF 60-3546 THRU 61-753 SEE FIG.8 FOR NHA .... UHB	EA	1
377		XCFZZ		97499	204-001-060-5	CONTROL INSTL SYNCHRONIZED ELEVATOR AFT USBL EFF 61-754 THRU 61-803 SEE FIG 8 FOR NHA .... UHB	EA	1
377		XCFZZ		97499	204-001-060-7	CONTROL INSTL SYNCHRONIZED ELEVATOR AFT USBL EFF 62-1872 THRU 64-14100 SEE FIG 8 FOR NHA .... UHB	EA	1
377		XCFZZ		97499	204-001-076-3	CONTROL INSTL SYNCHRONIZED ELEVATOR AFT USBL EFF 64-14101 & SUBSEQUENT SEE FIG 8 FOR NHA .... UHC,UHM	EA	1
377	1	PAOZZ	5310-00-167-1285	88044	AN310-4	NUT,PLAIN U/O PN 204-001-060-3,-5,-7 .... UHB	EA	8
377	2	PAOZZ	5310-00-961-8390	96906	MS17825-4	NUT,SELF-LOCKING,SL U/O PN 204-001-076-3 .... UHC,UHM	EA	8
377	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT .... UHB,UHC,UHM	EA	27
377	3A	PAOZZ	5306-00-180-1711	88044	AN174-17	BOLT,CLOSE TOLERANC U/O PN 204-001-076-3 .... UHC,UHM	EA	1
377	4	PAOZZ	5306-00-151-0332	88044	AN174H20	BOLT,CLOSE,TOLER .... UHB,UHC,UHM	EA	7
377	4A	PAOZZ	5315-00-234-1854	96906	MS24665-153	PIN,COTTER U/O PN 204-001-076-3 .... UHC,UHM	EA	9
377	5	PA000	3040-00-646-2183	97499	204-001-011-29	CONNECTING LINK,RIG U/O PN 204-001-060-3,-5,-7 .... UHB	EA	1
377	6	PA000	3040-00-937-7234	97499	540-001-910-9	CONNECTING LINK,RIG U/O PN 204-001-076-3 .... UHC,UHM	EA	1
377	7	PA000	5340-00-765-6255	97499	204-001-006-1	CLEVIS ASSEMBLY .... UHB,UHC,UHM	EA	2
377	8	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	BUSHING,SLEEVE .... UHB,UHC,UHM	EA	2
377	9	PAOZZ	5310-00-167-1286	88044	AN310-5	NUT,PLAIN U/O PN 204-001-060-3,-5,-7 .... UHB	EA	1
377	10	PAOZZ	5310-00-900-9421	96906	MS17825-5	NUT,SELF-LOCKING,SL U/O PN 204-001-076-3 .... UHC,UHM	EA	1
377	11	PAOZZ	5310-00-187-2399	88044	AN960PD516	WASHER,FLAT .... UHB,UHC,UHM	EA	2
377	12	PAOZZ	5306-00-180-0474	88044	AN175-22	BOLT,MACHINE .... UHB,UHC,UHM	EA	1
377	13	PAOFF	1560-00-862-2783	97499	204-001-947-1	BELL CRANK ASSY .... UHB,UHC,UHM	EA	1
377	14	PAFZZ	3110-00-042-1045	96906	MS27643-4	.BEARING,BALL,AIRFRA .... UHB,UHC,UHM	EA	2
377	15	PAFZZ	3110-00-158-6298	21335	DW5	.BEARING,BALL,AIRFRA .... UHB,UHC,UHM	EA	1
377	16	PAFZZ	3120-00-624-5248	97499	120-013-4A	.BUSHING,SLEEVE .... UHB,UHC,UHM	EA	2
377	17	PAFZZ	3120-00-690-7503	97499	120-015-5A	.BUSHING,SLEEVE .... UHB,UHC,UHM	EA	1
377	18	PAOFF	1560-00-789-0913	97499	204-001-944-1	IDLER ASSEMBLY,ELEV U/O PN 204-001-060-3,-5,-7 .... UHB	EA	1
377	19	PAOFF	2915-00-939-7805	97499	540-001-911-1	IDLER ASSEMBLY,FUEL U/O PN 204-001-076-3 .... UHC,UHM	EA	1
377	20	PAFZZ	3110-00-158-6295	21335	DW4	.BEARING,BALL,AIRFRA .... UHB,UHC,UHM	EA	1
377	20A	PAFZZ	3110-00-042-1045	96906	MS27643-4	.BEARING,BALL,AIRFRA .... UHC,UHM	EA	2
377	21	PAFZZ	3120-00-624-5248	97499	120-013-4A	.BUSHING,SLEEVE .... UHB,UHC,UHM	EA	2
377	22	PAFZZ	3120-00-624-5247	97499	2356-4KA	.BUSHING,SLEEVE .... UHB,UHC,UHM	EA	1
377	23	PAOZZ	5310-00-141-1795	83044	AN960-416	WASHER,FLAT .... UHB,UHC,UHM	EA	2
377	24	PA000	3040-00-993-1036	97499	204-001-011-41	CONNECTING LINK,RIG .... UHB,UHC,UHM	EA	1
377	25	PA000	5340-00-765-6255	97499	204-001-006-1	.CLEVIS ASSEMBLY .... UHB,UHC,UHM	EA	2
377	26	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	..BUSHING,SLEEVE .... UHB,UHC,UHM	EA	2
377	27	PAOFF	1560-00-804-2526	97499	204-001-950-1	BELL CRANK ASSY .... UHB,UHC,UHM	EA	1
377	28	PAFZZ	3120-00-624-5248	97499	120-013-4A	.BUSHING,SLEEVE .... UHB,UHC,UHM	EA	2
377	29	PAFZZ	3120-00-690-8691	97499	22-006-15-32-16	.BUSHING,SLEEVE .... UHB,UHC,UHM	EA	2
377	29A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL,AIRFRA .... UHC,UHM	EA	2
377	30	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE .... UHB,UHC,UHM	EA	6
377	31	PAOZZ	5306-00-182-2017	88044	AN4H6A	BOLT,MACHINE .... UHB,UHC,UHM	EA	6
377	31A	PAOZZ	5306-00-180-0454	88044	AN174-34	.BOLT,CLOSE TOLERANC .... UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
377	32	PA000	1560-00-653-4339	97499	204-001-793-5	.SUPPORT ASSEMBLY, QUADRANT........................UHB,UHC,UHM	EA	2
377	33	PAOZZ	3110-00-030-3381	96906	MS27641-4	..BEARING,BALL,AIRFRA..............................UHB,UHC,UHM	EA	1
77	34	PAOZZ	3120-00-836-5712	97499	120-012-4A	..BUSHING,SLEEVE...................................UHB,UHC,UHM	EA	1
377	35	PA000	3040-00-646-2317	97499	204-001-012-65	.CONNECTING LINK,RIG...............................UHB,UHC,UHM	EA	1
377	36	XA000		97499	204-001-012-67	..TUBE ASSEMBLY....................................UHB,UHC,UHM	EA	1
377	36A	PAOZZ	5315-00-168-4497	97499	80-002-2	...INSERT..UHC,UHM	EA	1
377	37	PA000	5340-00-765-6255	97499	204-001-006-1	...CLEVIS ASSEMBLY.................................UHB,UHC,UHM	EA	1
377	38	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	....BUSHING,SLEEVE.................................UHB,UHC,UHM	EA	2
377	39	PAOZZ	5340-00-616-5422	97499	204-001-007-1	..CLEVIS,ROD END...................................UHB,UHC,UHM	EA	1
377	40	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO.................................UHB,UHC,UHM	EA	1

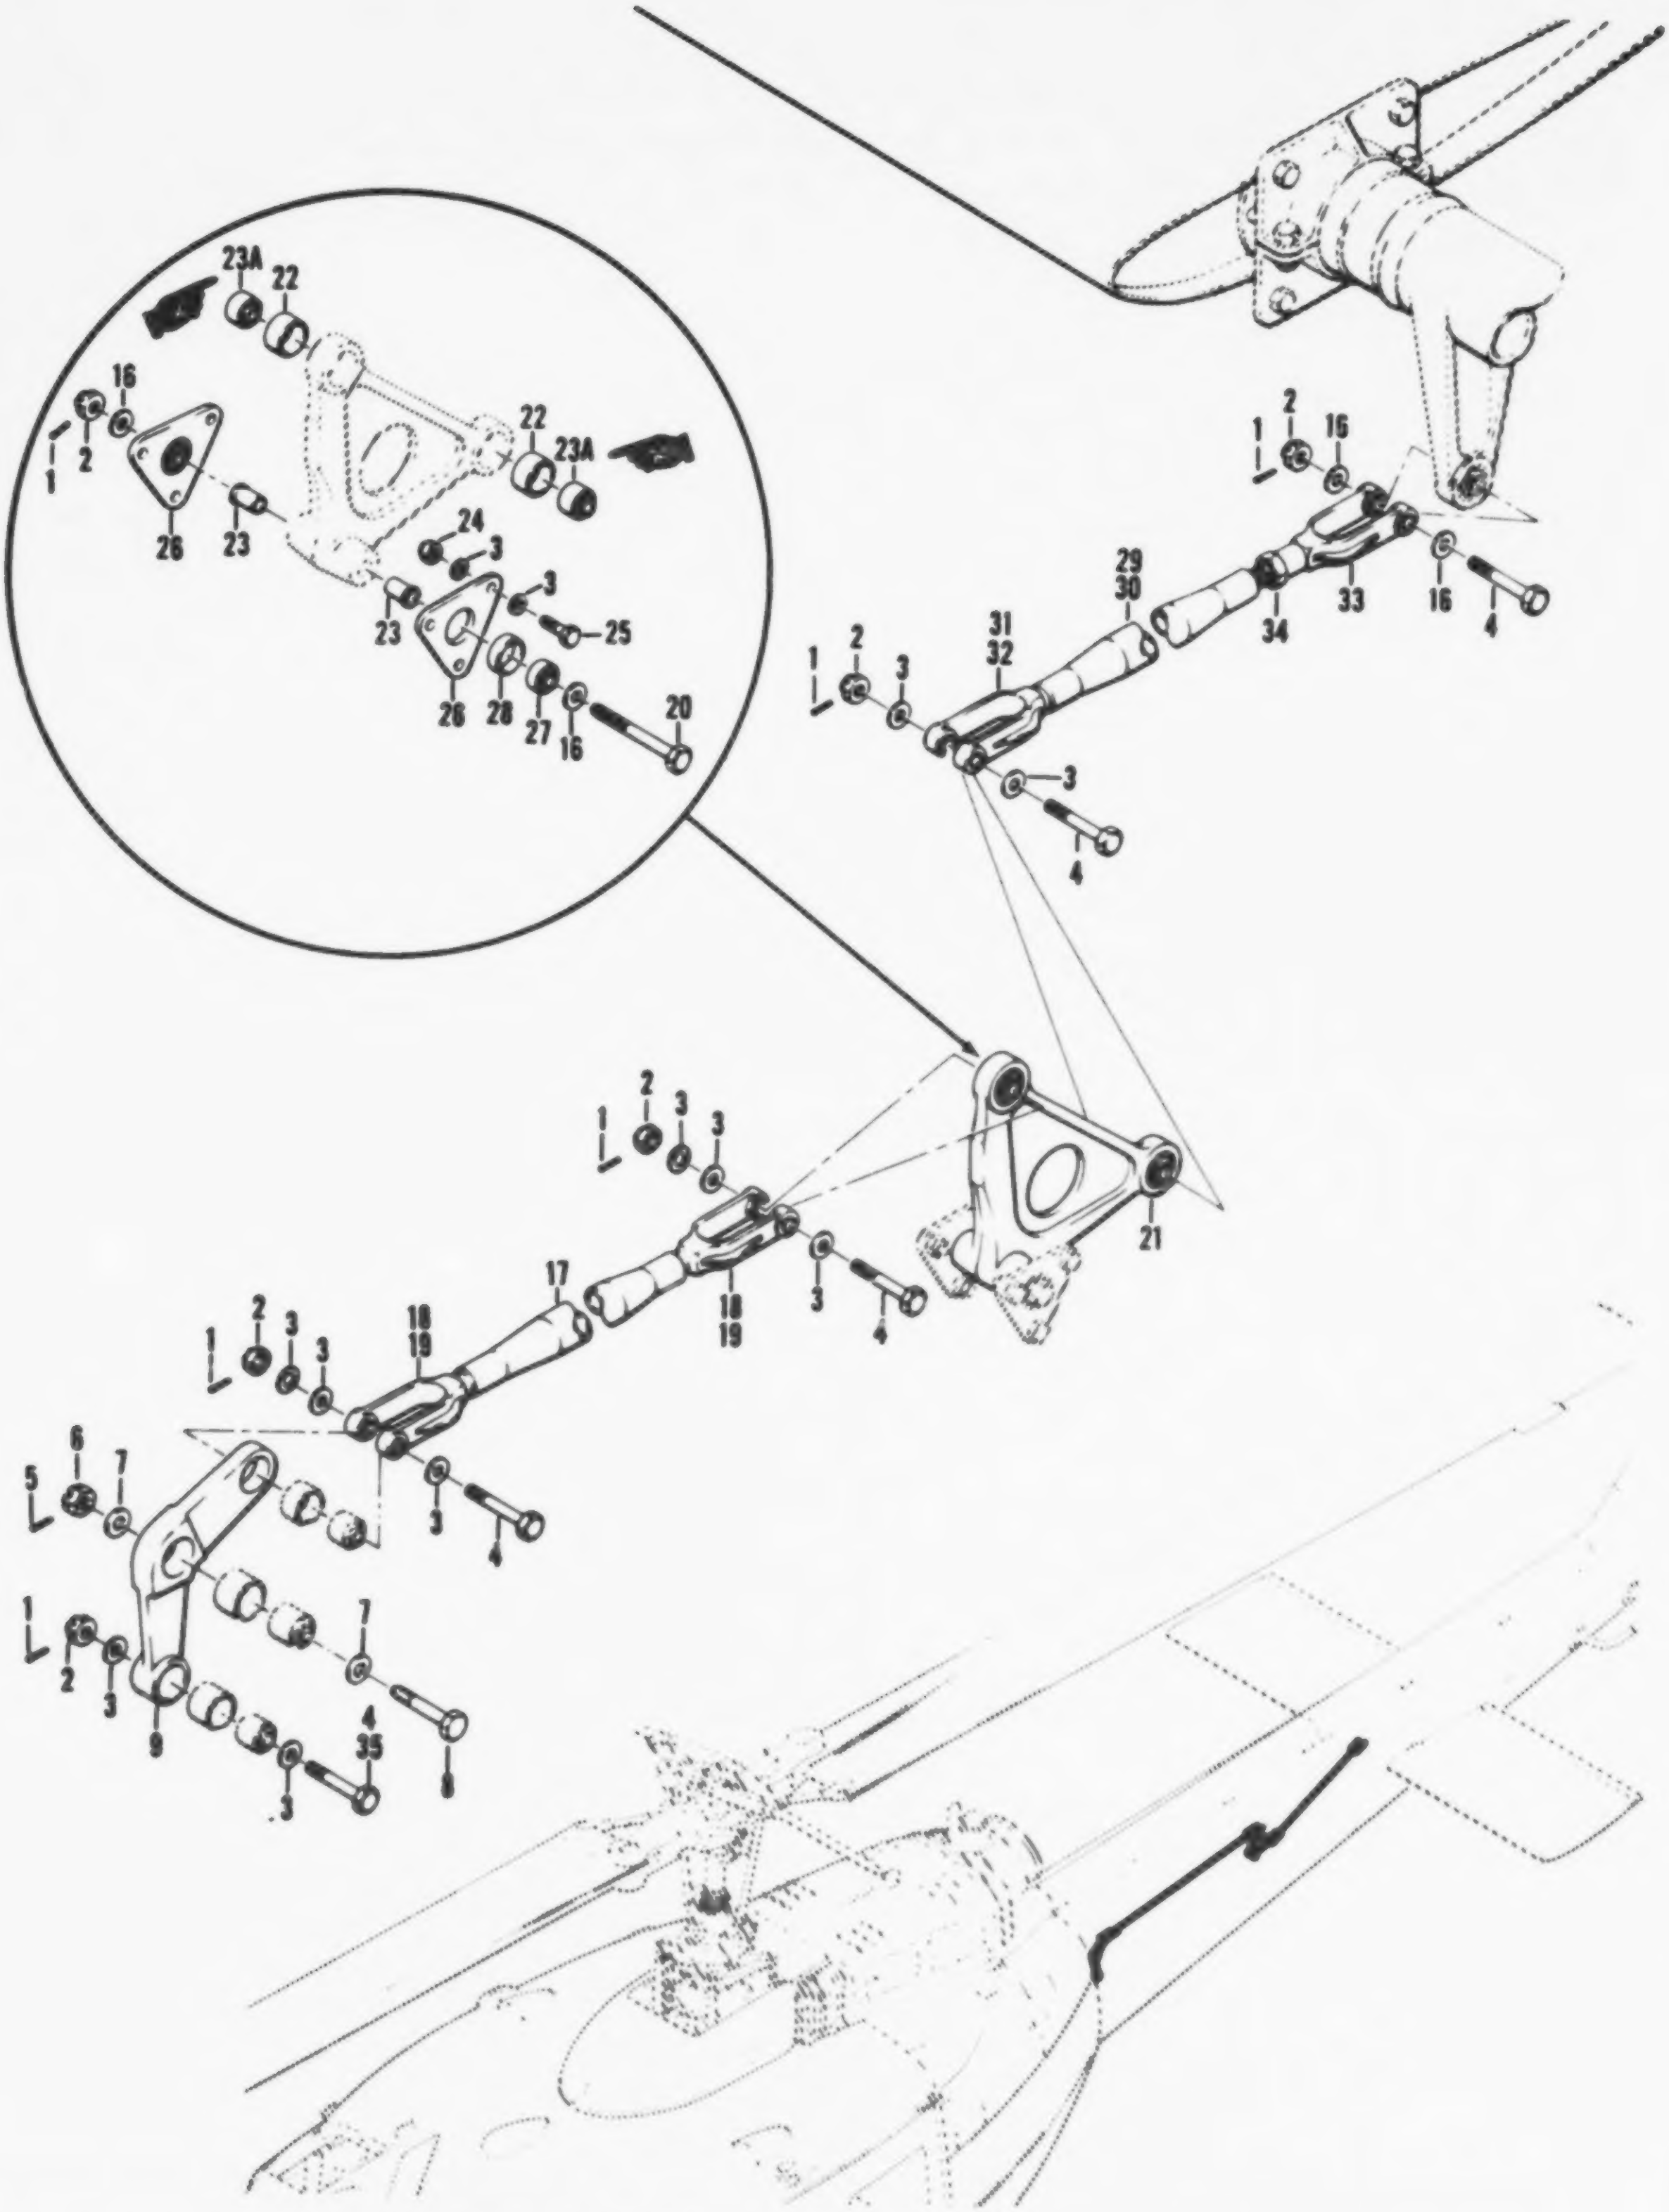
23A
22
16
1
2
26
23
22
23A
24
3
3
25
23
26
28
27
16
20
2
1
16
29
30
31
32
34
33
16
4
1
2
3
3
4
2
1
3
3
21
17
18
19
18
19
3
4
2
1
3
3
6
5
7
3
4
1
2
3
9
7
4
35
8
3

Figure 378. Control Installation, Synchronized Elevator Aft

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
378		XCFZZ		97499	205-001-010-5	CONTROL INSTL ELEVATOR USBL EFF 62-2106 THRU 62-2113 SEE FIG 8 FOR NHA UHE,UHH,UHV,UHX	EA	1
378		XCFZZ		97499	205-001-010-7	CONTROL INSTL ELEVATOR USBL EFF 62-12351 THRU 63-8859 SEE FIG.8 FOR NHA UHE,UHH,UHV,UHX	EA	1
378		XCFZZ		97499	205-001-009-1	CONTROL INSTL ELEVATOR USBL EFF 63-12956 THRU 66-17144 SEE FIG 8 FOR NHA UHE,UHH,UHV,UHX	EA	1
378		XCFZZ		97499	205-001-009-3	CONTROL INSTL ELEVATOR USBL EFF 67-17145 & SUBSEQUENT SEE FIG 8 FOR NHA UHE,UHH,UHV,UHX	EA	1
378	1	PAOZZ	5315-00-815-1405	96906	MS24665-151	PIN,COTTER UHE,UHH,UHV,UHX	EA	6
378	2	PAOZZ	5310-00-167-1285	88044	AN310-4	NUT,PLAIN UHE,UHH,UHV,UHX	EA	6
378	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT UHE,UHH,UHV,UHX	EA	22
378	4	PAOZZ	5306-00-283-0169	88044	AN174-20	BOLT,CLOSE TOLERANC 5 EA U/O PN 205-001-010-5,-7, 4 EA U/O PN 205-001-009-1,-3 UHE,UHH,UHV,UHX	EA	5
378	5	PAOZZ	5315-00-234-1854	96906	MS24665-153	PIN,COTTER UHE,UHH,UHV,UHX	EA	1
378	6	PAOZZ	5310-00-167-1286	88044	AN310-5	NUT,PLAIN UHE,UHH,UHV,UHX	EA	1
378	7	PAOZZ	5310-00-187-2399	88044	AN960PD516	WASHER,FLAT UHE UHH,UHV,UHX	EA	2
378	8	XDOZZ	5306-00-207-1665	88044	AN175H20	BOLT,CLOSE TOLERANC UHE,UHH,UHV,UHX	EA	1
378	9	PAOZZ	1560-00-867-1213	97499	205-001-915-1	IDLER ASSEMBLY UHE,UHH,UHV,UHX	EA	1
378	16	PAOZZ	5310-00-141-1795	88044	AN960-416	WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
378	17	PAOOO	3040-00-051-3648	97499	205-001-011-33	CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
378	18	PAOOO	5340-00-765-6255	97499	204-001-006-1	CLEVIS ASSEMBLY UHE,UHH,UHV,UHX	EA	2
378	19	PAOZZ	3120-00-678-5422	97499	22-006-15-23-16	BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	2
378	20	PAOZZ	5306-00-180-0456	88044	AN174-34	BOLT,CLOSE,TOLER UHE,UHH,UHV,UHX	EA	1
378	21	PAOFF	1560-00-804-2526	97499	204-001-950-1	BELL CRANK ASSY UHE,UHH,UHV,UHX	EA	1
378	22	PAFZZ	3120-00-624-5248	97499	120-013-4A	BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	2
378	23	PAFZZ	3120-00-690-8691	97499	22-006-15-32-16	BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	2
378	23A	PAFZZ	3110-00-042-1045	96906	MS27643-4	BEARING,BALL,AIRFRA UHE,UHH,UHV,UHX	EA	2
378	24	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	6
378	25	PAOZZ	5306-00-182-2017	88044	AN4H8A	BOLT,MACHINE UHE,UHH,UHV,UHX	EA	6
378	26	PAOOO	1560-00-653-4339	97499	204-001-793-5	SUPPORT ASSEMBLY,QU UHE,UHH,UHV,UHX	EA	2
378	27	PAOZZ	3110-00-030-3381	96906	MS27641-4	BEARING,BALL,AIRFRA UHE,UHH,UHV,UHX	EA	1
378	28	PAOZZ	3120-00-835-5712	97499	120-012-4A	BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	1
378	29	PAOOO	3040-00-877-2954	97499	205-001-012-25	CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
378	30	XAOOZ		97499	205-001-012-27	TUBE ASSEMBLY,METAL UHE,UHH,UHV,UHX	EA	1
378	31	PAOOO	5340-00-765-6255	97499	204-001-006-1	CLEVIS ASSEMBLY UHE,UHH,UHV,UHX	EA	1
378	32	PAOZZ	3120-00-678-5422	97499	22-006 15-23-16	BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	2
378	33	PAOZZ	5340-00-616-5422	97499	204-001-007-1	CLEVIS,ROD END UHE,UHH,UHV,UHX	EA	1
378	34	PAOZZ	5310-00-167-1302	88044	AN316-7R	NUT,PLAIN,HEXAGO UHE,UHH,UHV,UHX	EA	1
378	35	XDOZZ	5306-00-298-2815	88044	AN174-16	BOLT,CLOSE TOLER U/O PN 205-001-009-1,-3 UHE,UHH,UHV,UHX	EA	1

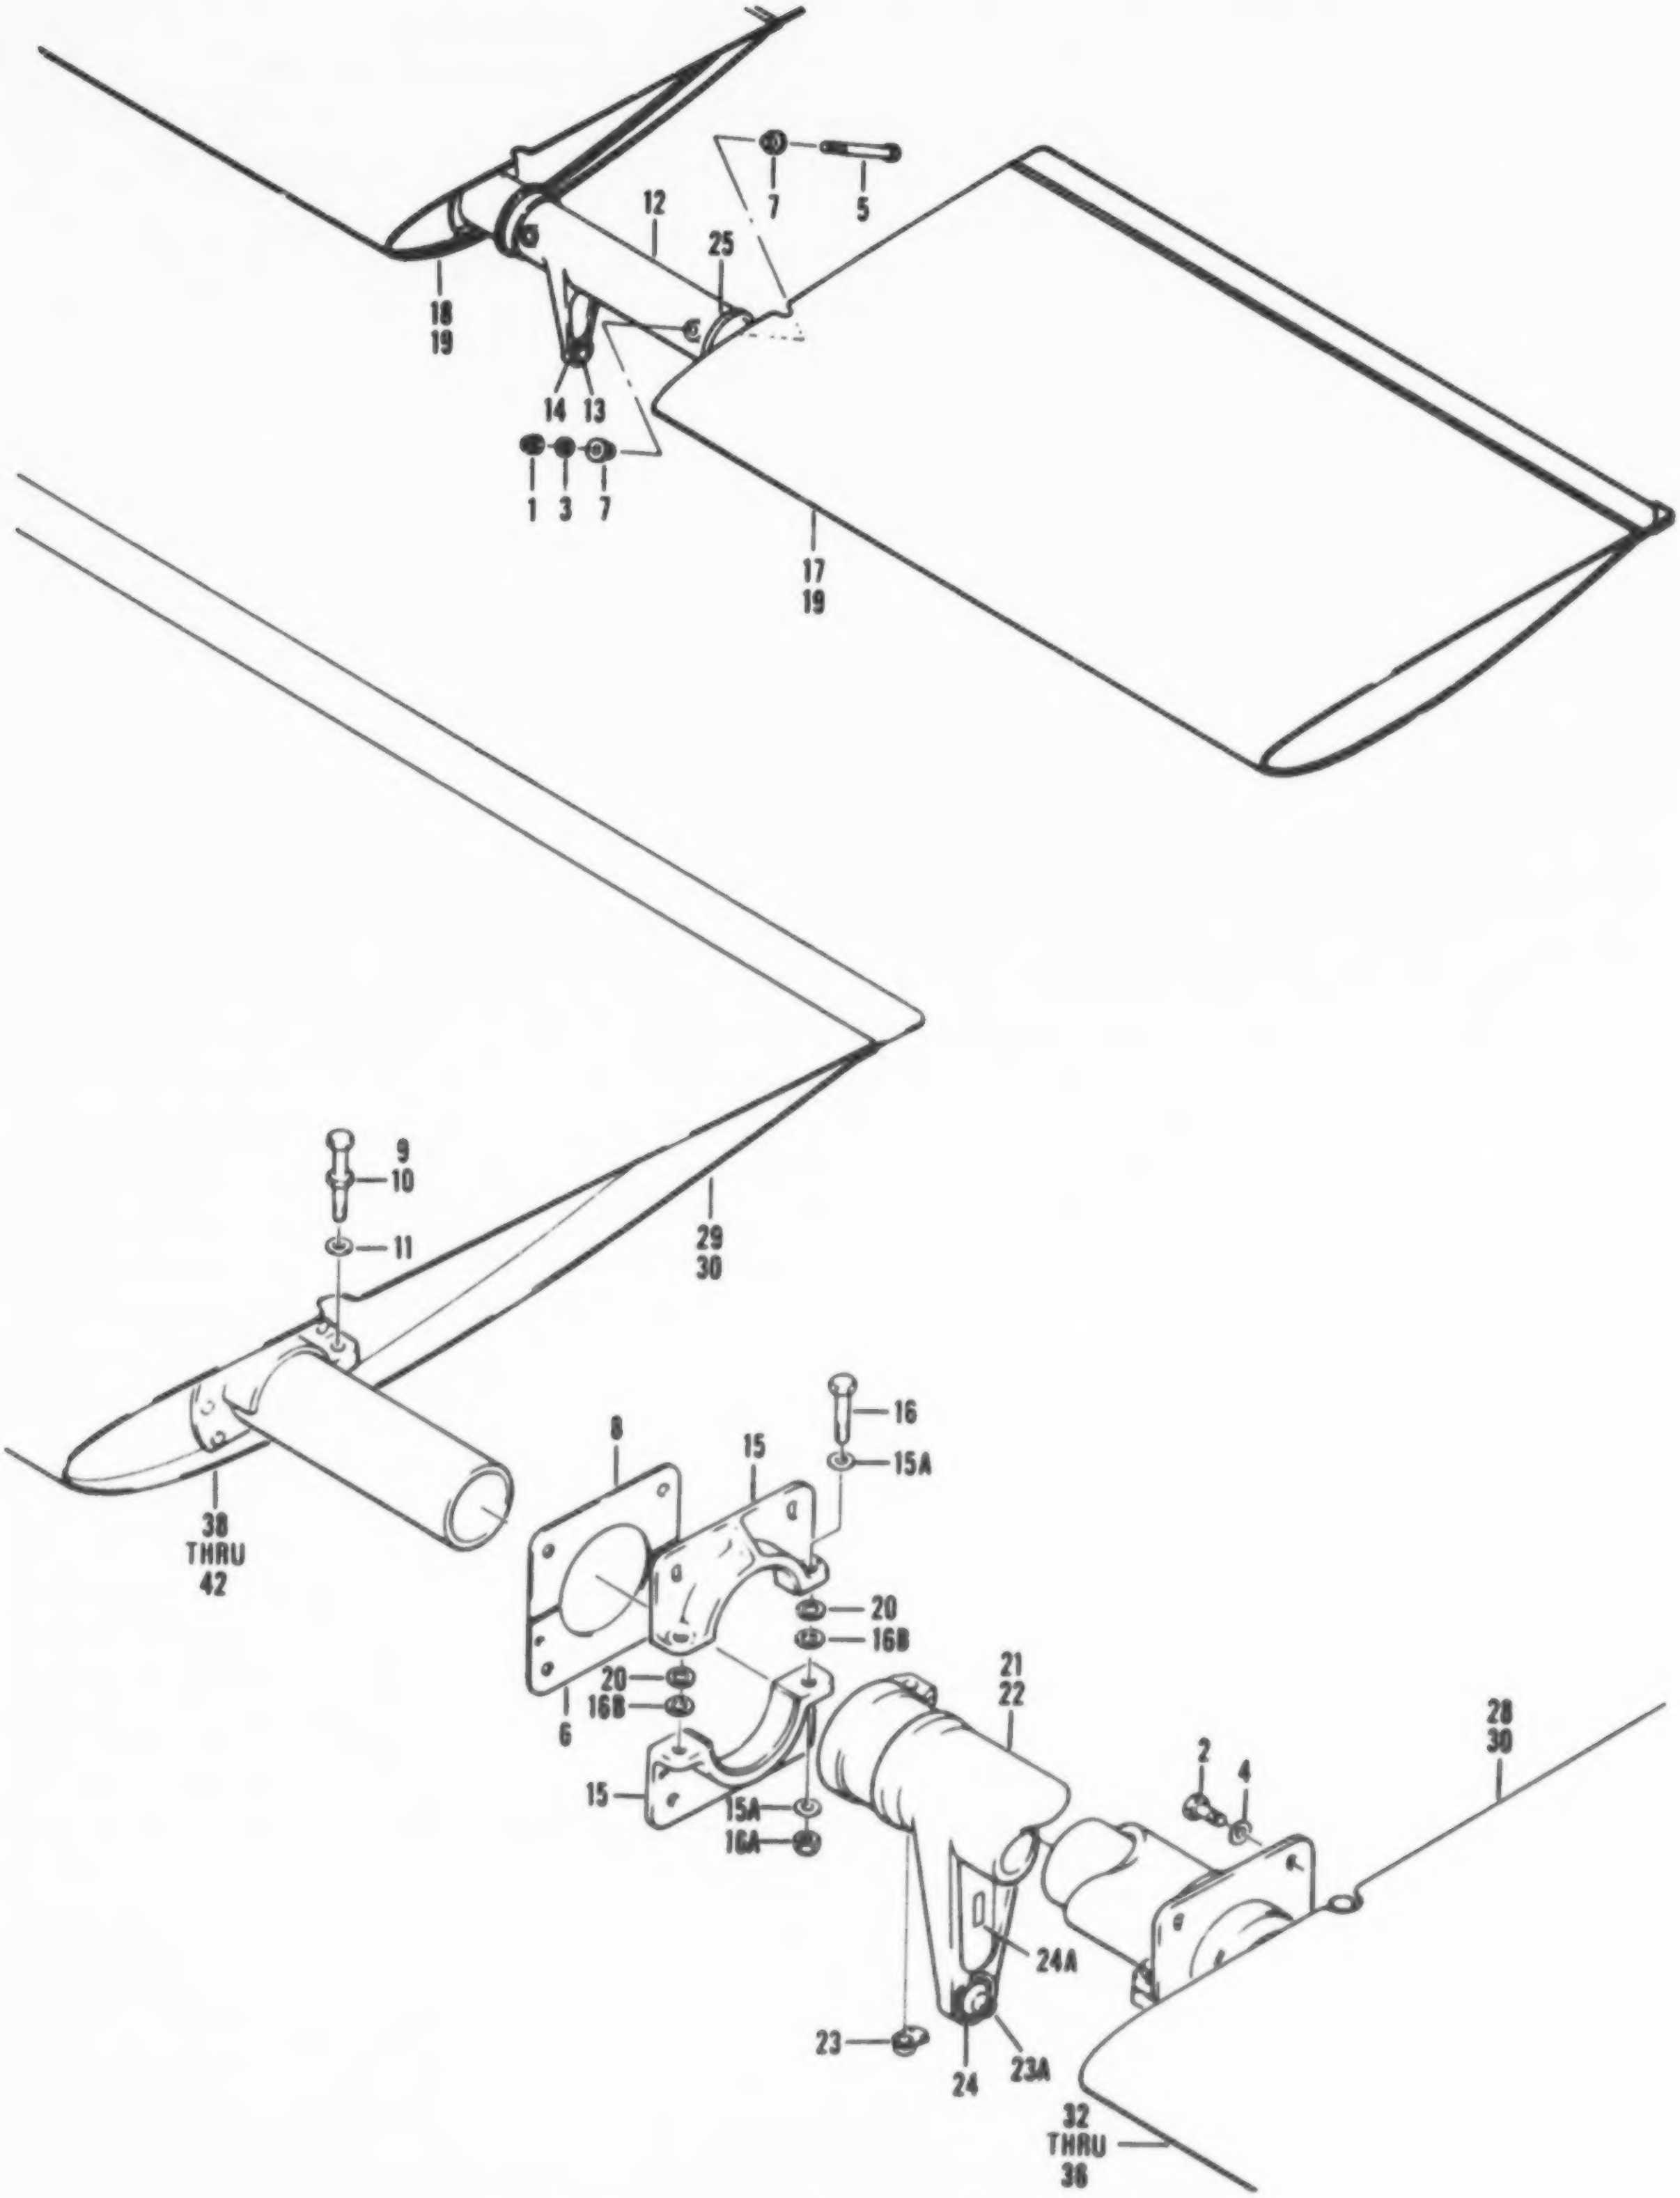
7
5
12
25
18
19
14 13
1 3 7
17
19
9
10
11
29
30
38
THRU
42
8
15
16
15A
20
16B
21
22
20
16B
6
28
30
2
4
15
15A
16A
24A
23
24
23A
32
THRU
36

Figure 370. Elevator Installation, Synchronized

(1) ILLUSTRATION G. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 11 FLIGHT CONTROL SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
379		XCFZZ		97499	204-030-858-45	ELEVATOR INSTL SYNCHRONIZED USBL EFF 60-3546 THRU 61-803 SEE FIG 8 FOR NHA .... UHB	EA	1
		XCFZZ		97499	204-030-858-49	ELEVATOR INSTL SYNCHRONIZED USBL EFF 62-1872 THRU 64-14100 SEE FIG 8 FOR NHA .... UHB	EA	1
379		XCFZZ		97499	205-030-890-9	ELEVATOR INSTL SYNCHRONIZED USBL EFF 64-14101 THRU 65-12772 SEE FIG.8 FOR NHA .... UHC,UHM	EA	1
379		XCFZZ		97499	205-030-890-15	ELEVATOR INSTL SYNCHRONIZED USBL EFF 66-492 & SUBSEQUENT SEE FIG 8 FOR NHA .... UHC,UHM	EA	1
379		XCFZZ		97499	205-030-890-3	ELEVATOR INSTL SYNCHRONIZED SEE FIG 8 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
379	1	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-030-858-45,-49 .... UHB,UHC,UHM,UHH,UHV,UHE,UHX	EA	4
379	2	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE U/O PN 205-030-890-3,-9,-15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	12
379	3	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT U/O PN 204-030-858-45,-49 .... UHB,UHC,UHM	EA	4
379	4	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT U/O PN 204-030-890-3,-9,-15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	12
379	5	PAOZZ	5306-00-151-1131	88044	AN4-42	.BOLT,MACHINE U/O PN 204-030-858-45,-49 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
379	6	PAOZZ	5365-00-967-1857	97499	205-030-891-5	.SHIM 2 EA U/O PN 205-030-890-3, 4 EA U/O PN 205-030-890-9 AND -15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	4
379	7	PAOZZ	3120-00-950-9941	97499	204-001-964-3	.BUSHING,SLEEVE U/O PN 204-030-858-45,-49 .... UHB	EA	8
379	8	PAOZZ	5365-00-967-1829	97499	205-030-891-3	.SHIM 2 EA U/O PN 205-030-890-3, 4 EA U/O PN 205-030-890-9 AND -15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	4
379	9	PAOZZ	5306-00-966-9359	97499	205-030-476-3	.BOLT,ELEVATOR ATTACHMENT U/O PN 205-030-890-3 .... UHE,UHH,UHV,UHX	EA	2
9	10	PAOZZ	5306-00-930-3170	97499	205-030-476-5	.BOLT,SHOULDER ATTACHMENT U/O PN 205-030-890-9,-15 .... UHC,UHM	EA	2
379	11	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT U/O PN 205-030-890-3,-9,-15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
379	12	PAOFF	1560-00-718-6476	97499	204-001-937-5	.HORN ASSEMBLY,ELEVA U/O PN 204-030-858-45,-49 .... UHB	EA	1
379	13	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE .... UHB	EA	1
379	15	PAOZZ	1560-00-966-6108	97499	205-030-477-1	.SUPPORT ASSY,TAIL MATCHED SET U/O PN 205-030-890-3,-9,-15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
379	15A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT .... UHC,UHE,UHH,UHM,UHV,UHX	EA	4
379	16	PAOZZ	5306-00-182-1529	88044	AN4H11	..BOLT,MACHINE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
379	16A	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF LOCKING .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
379	16B	PAFZZ	5365-00-067-9743	97499	3523-28-8-125	..SHIM USE FOR ADDITIONAL SHIMMING .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
379	17	PAOFF	1560-00-733-8315	97499	204-030-858-43	.ELEVATOR,ASSY-LH U/O PN 204-030-858-45,-49 .... UHB	EA	1
379	18	PAOFF	1560-00-733-8316	97499	204-030-858-44	.ELEVATOR,ASSY-RH U/O PN 204-030-858-45,-49 .... UHB	EA	1
379	19	PAOZZ	1560-00-921-5974	97499	204-031-072-1	..CAP,CORNER ELEVATOR .... UHB	EA	1
379	20	PAFZZ	5365-00-067-9743	97499	120-038-28-8	.SHIM U/O PN 205-030-890-3,-9,-15 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	4
379	21	PAOFF	1560-00-966-7517	97499	205-001-914-25	.HORN ASSY,ELEVATOR U/O PN 205-030-890-3 .... UHE,UHH,UHV,UHX	EA	1
379	22	PAOFF	1560-00-925-7702	97499	205-001-914-5	.HORN ASSY,ELEVATOR U/O PN 205-030-890-9,-15 .... UHC,UHM	EA	1
379	23	PAFZZ	5310-00-477-2712	96906	MS21086L5	..NUT,SELF-LOCKING,PL .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
79	23A	PAFZZ	3110-00-042-1045	96906	MS27643-4	..BEARING,BALL .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
379	24	PAFZZ	3120-00-624-5248	97499	120-013-4A	..BUSHING,SLEEVE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
379	24A	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO U/O PN 205-001-914-5 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
379	25	PAOZZ	1560-00-739-2568	97499	204-030-448-9	.FITTING,FLOATING EL U/O PN 204-030-858-43, -44 USBL EFF 68-2078 THRU 64-14100........UHB	EA	2
379	28	PAOFF	1560-00-996-3906	97499	205-030-856-19	.ELEVATOR,ASSY,LH U/O PN 205-030-890-3.......UHE,UHH,UHV,UHX	EA	1
379	29	PAOFF	1560-00-996-3905	97499	205-030-856-21	.ELEVATOR,ASSY,RH U/O PN 205-030-890-3.......UHE,UHH,UHV,UHX	EA	1
379	30	PAOZZ	1560-00-921-5975	97499	204-031-072-3	..CAP,CORNER ELEVATOR........UHE,UHH,UHV,UHX	EA	1
379	32	PAOFF	1560-00-999-7954	97499	205-030-856-65	.ELEVATOR,FLIGHT CONTROL LH U/O ARMORED SHIPS ONLY U/O PN 205-030-890-15........UHC,UHM	EA	1
379	33	PBFZZ	1560-00-943-0415	97499	204-038-261-3	..SHIELD ASSY........UHC,UHM	EA	1
379	34	PAFZZ	5320-00-616-5548	96906	MS20600MP4W2	..RIVET,BLIND........UHC,UHM	EA	244
379	35	PAFZZ	5320-00-616-5549	96906	MS20600MP4W3	..RIVET,BLIND........UHC,UHM	EA	24
379	36	PAFZZ	1560-00-921-5975	97499	204-031-072-3	..CAP,CORNER ELEVATOR OUTSIDE AFT EDGE........UHC,UHM	EA	1
379	38	PAOFF	1560-00-999-7953	97499	205-030-856-67	.ELEVATOR FLIGHT CONTROL RH U/O ARMORED SHIPS ONLY U/O PN 205-030-890-15........UHC,UHM	EA	1
379	39	XBFZZ	1560-00-943-0415	97499	204-038-261-3	..SHIELD ASSY........UHC,UHM	EA	1
379	40	PAFZZ	5320-00-616-5548	96906	MS20600MP4W2	..RIVET,BLIND........UHC,UHM	EA	244
379	41	PAFZZ	5320-00-616-5549	96906	MS20600MP4W3	..RIVET,BLIND........UHC,UHM	EA	24
379	42	PAFZZ	1560-00-921-5975	97499	204-031-072-3	..CAP,CORNER ELEVATOR........UHC,UHM	EA	1

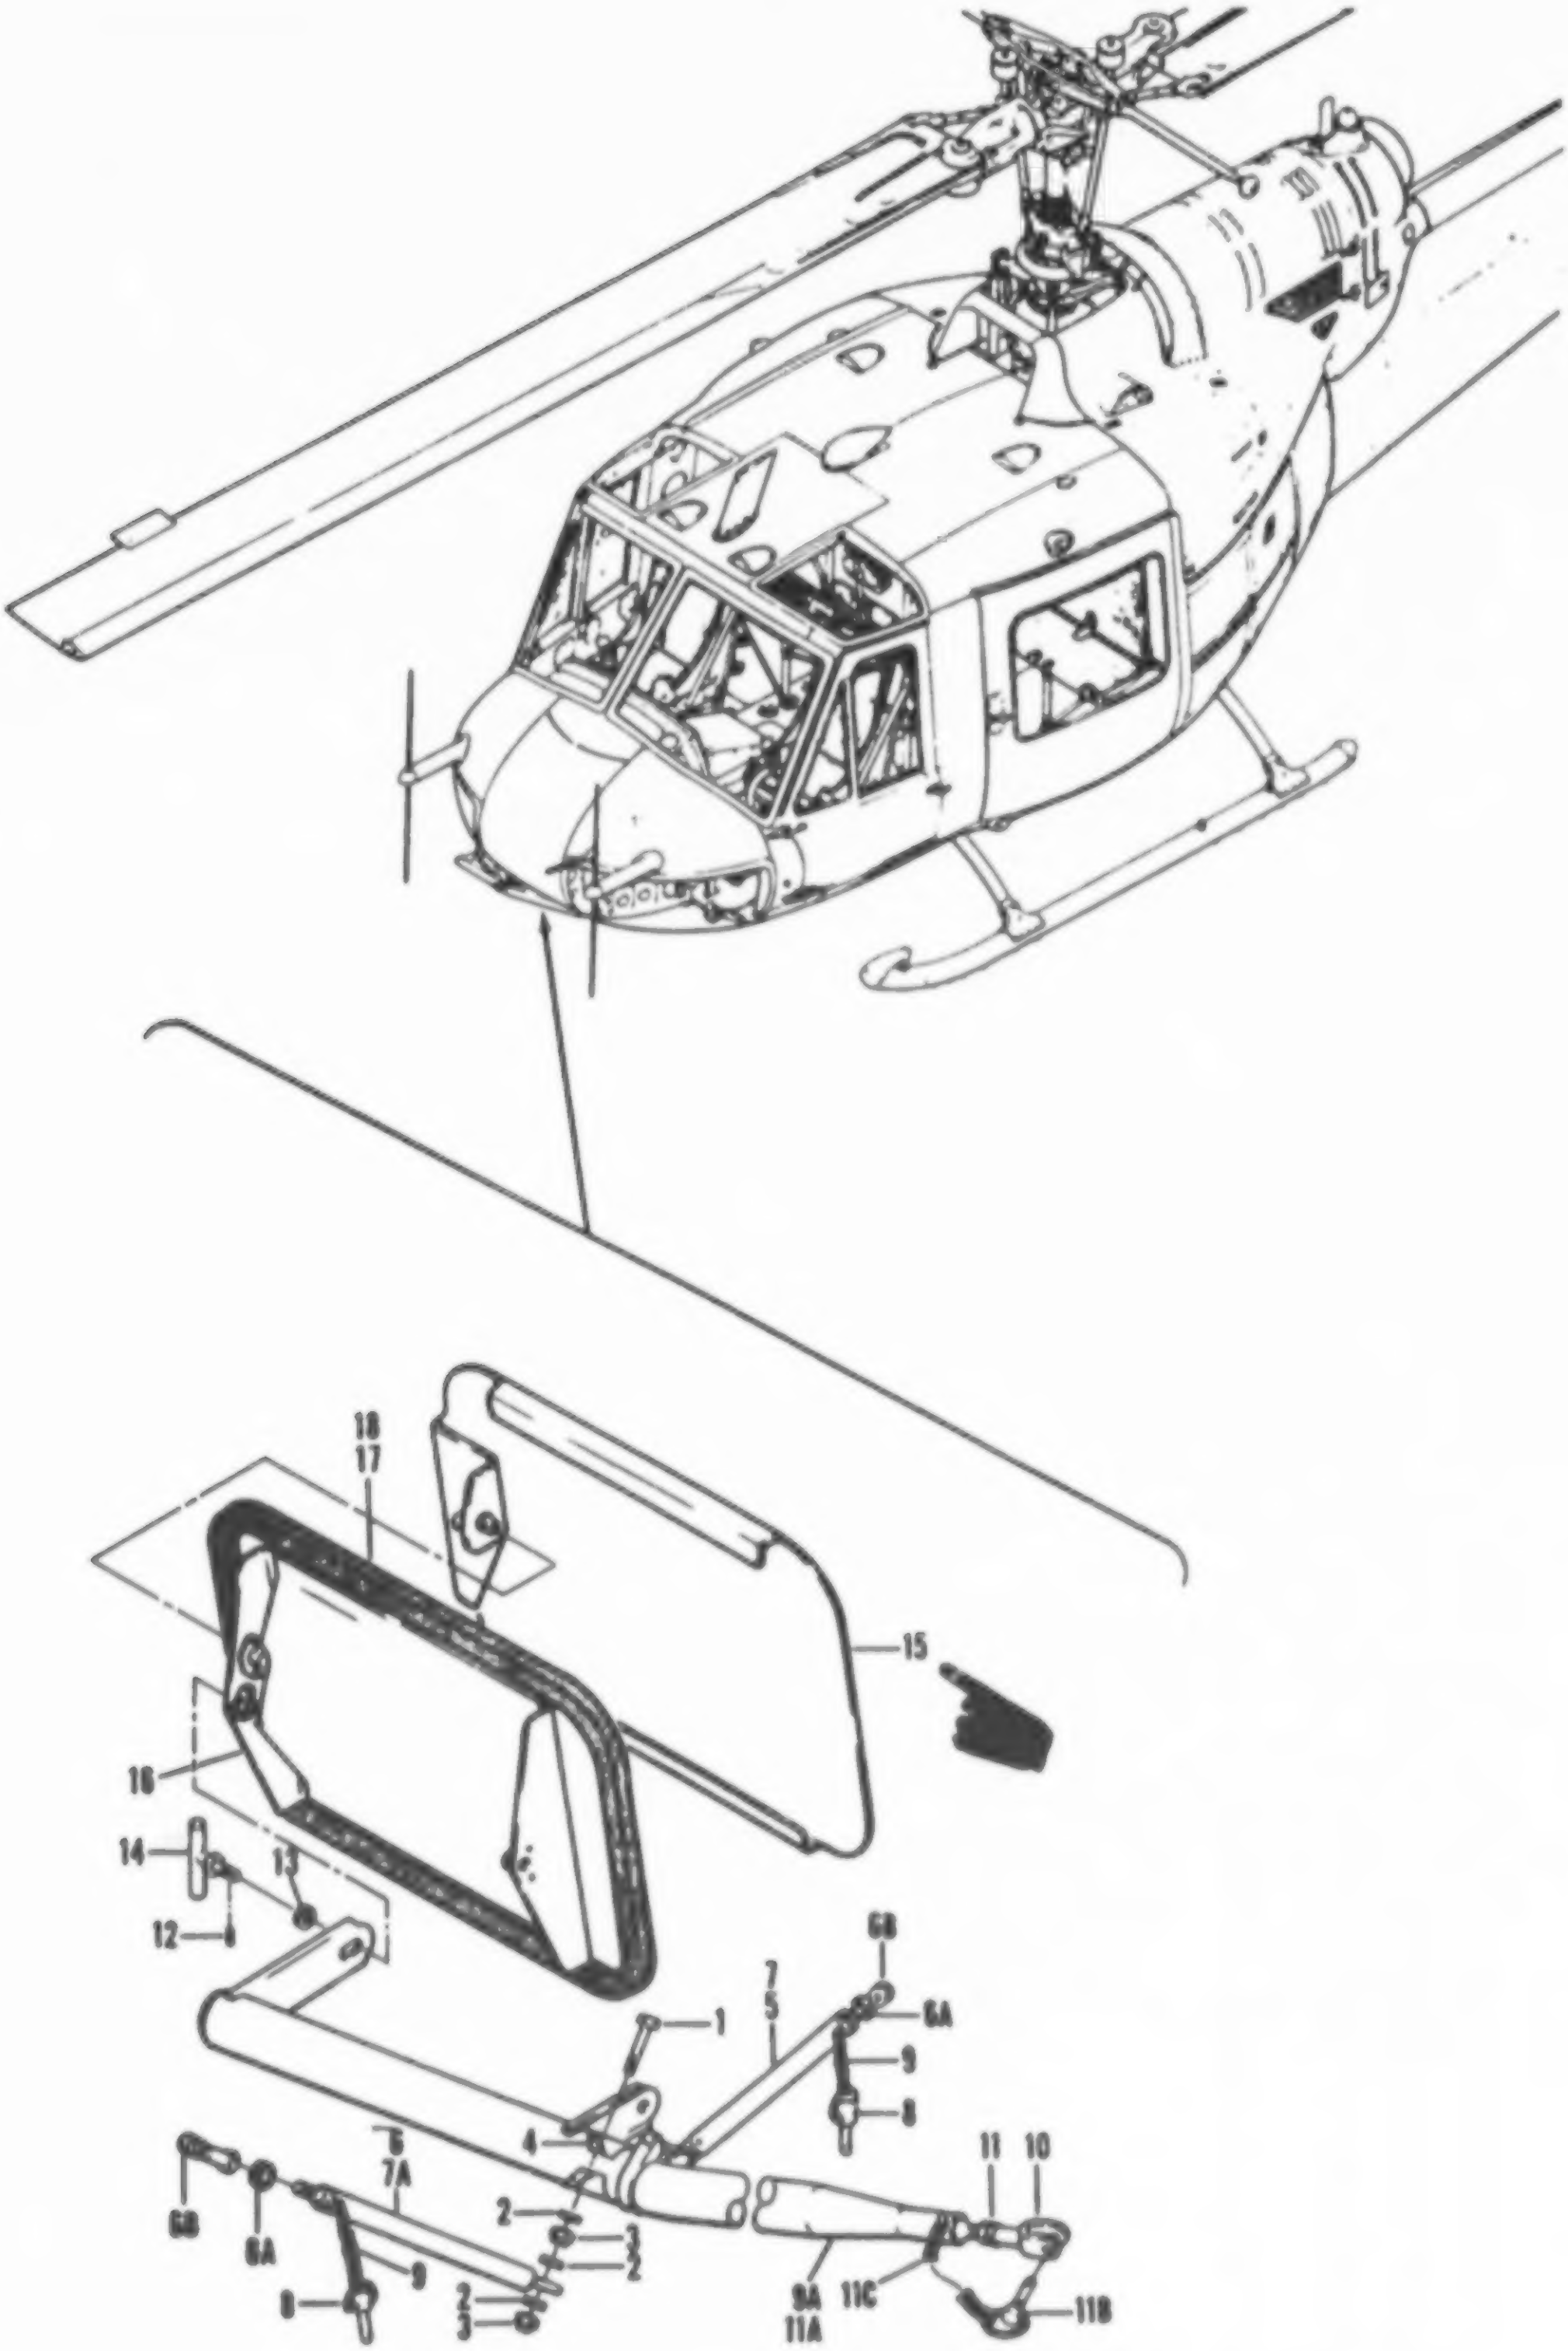
18
17
15
16
14
13
12
1
7
5
6B
6A
9
8
4
6
7A
2
3
2
6B
6A
9
8
2
3
11
10
9A
11A
11C
11B

Figure 380. Mirror Installation

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 12 UTILITY SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
380		AOOOO	1680-00-868-5757	97499	204-070-526-3	MIRROR INSTALLATION..........UHB,UHC,UHM	EA	1
380		AOOOO	1680-00-868-5758	97499	204-070-526-5	MIRROR INSTALLATION..........UHE,UHH,UHV,UHX	EA	1
380	1	PAOZZ	5306-00-981-3058	97499	204-072-083-1	.BOLT,MACHINE..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	2
380	2	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	6
380	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	4
380	4	PAOZZ	1560-00-731-8975	97499	45C20AA20	.CLIP,TUBE CLAMP..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	2
380	5	PAOOO	1560-00-981-3064	97499	204-070-525-13	.BRACE ASSY,MIRROR..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	6	PAOOO	1560-00-981-3065	97499	204-070-525-15	.BRACE ASSY,MIRROR..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	6A	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN HEXAGON..........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	6B	PAOZZ	5340-00-838-1591	96906	MS27975-4	..CLEVIS,ROD END..........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	7	XAOZZ	1560-00-413-1466	97499	204-070-525-17	..BRACE ASSEMBLY U/O PN 204-070-525-13 ....UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	7A	XAOZZ	1560-00-413-1467	97499	204-070-525-19	..BRACE ASSEMBLY U/O PN 204-070-525-15 ....UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	8	PAOZZ	5340-00-958-1323	80205	NAS1353DS7S04D	...PIN,QUICK RELEASE..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	9	PAOZZ	4010-00-946-6431	80205	NAS1455C2-5	...CHAIN,WELDLESS..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	9A	PAOOO	1560-00-981-3063	97499	204-070-527-13	.BRACE ASSY,MIRROR..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	10	PAOZZ	5340-00-838-1591	96906	MS27975-4	..CLEVIS,ROD END..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	11	PAOZZ	5310-00-208-7589	38044	AN316-4R	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	11A	PAOZZ	1615-00-403-0550	97499	204-070-527-15	..TUBE ASSEMBLY..........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	11B	PAOZZ	5340-00-958-1323	80205	NAS1353DS7S04D	...PIN,QUICK RELEASE..........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	11C	PAOZZ	4010-00-946-6431	80205	NAS1455C2-5	...CHAIN,WELDLESS..........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
380	12	PAOZZ	5315-00-844-3940	96906	MS16562-4	.PIN,SPRING..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	2
380	13	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	2
380	14	PAOZZ	1560-00-733-8300	97499	204-070-524-1	.HANDLE,MIRROR,CARGO ASSY..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	2
380	15	MFOZZ	DELETED	97499	204-070-528-1	.COVER ASSEMBLY..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	16	PAOOO	1680-00-715-2295	97499	204-070-347-1	.MIRROR ASSY,CARGO..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	17	PAOZZ	1680-00-897-9997	97499	204-070-345-1	..MOULDING,MINOR..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	1
380	18	PAOZZ	1680-00-893-0031	97499	204-070-346-1	..MIRROR,CARGO HOOK..........UHB,UHC,UHM,UHE,UHH,UHV,UHX	EA	2

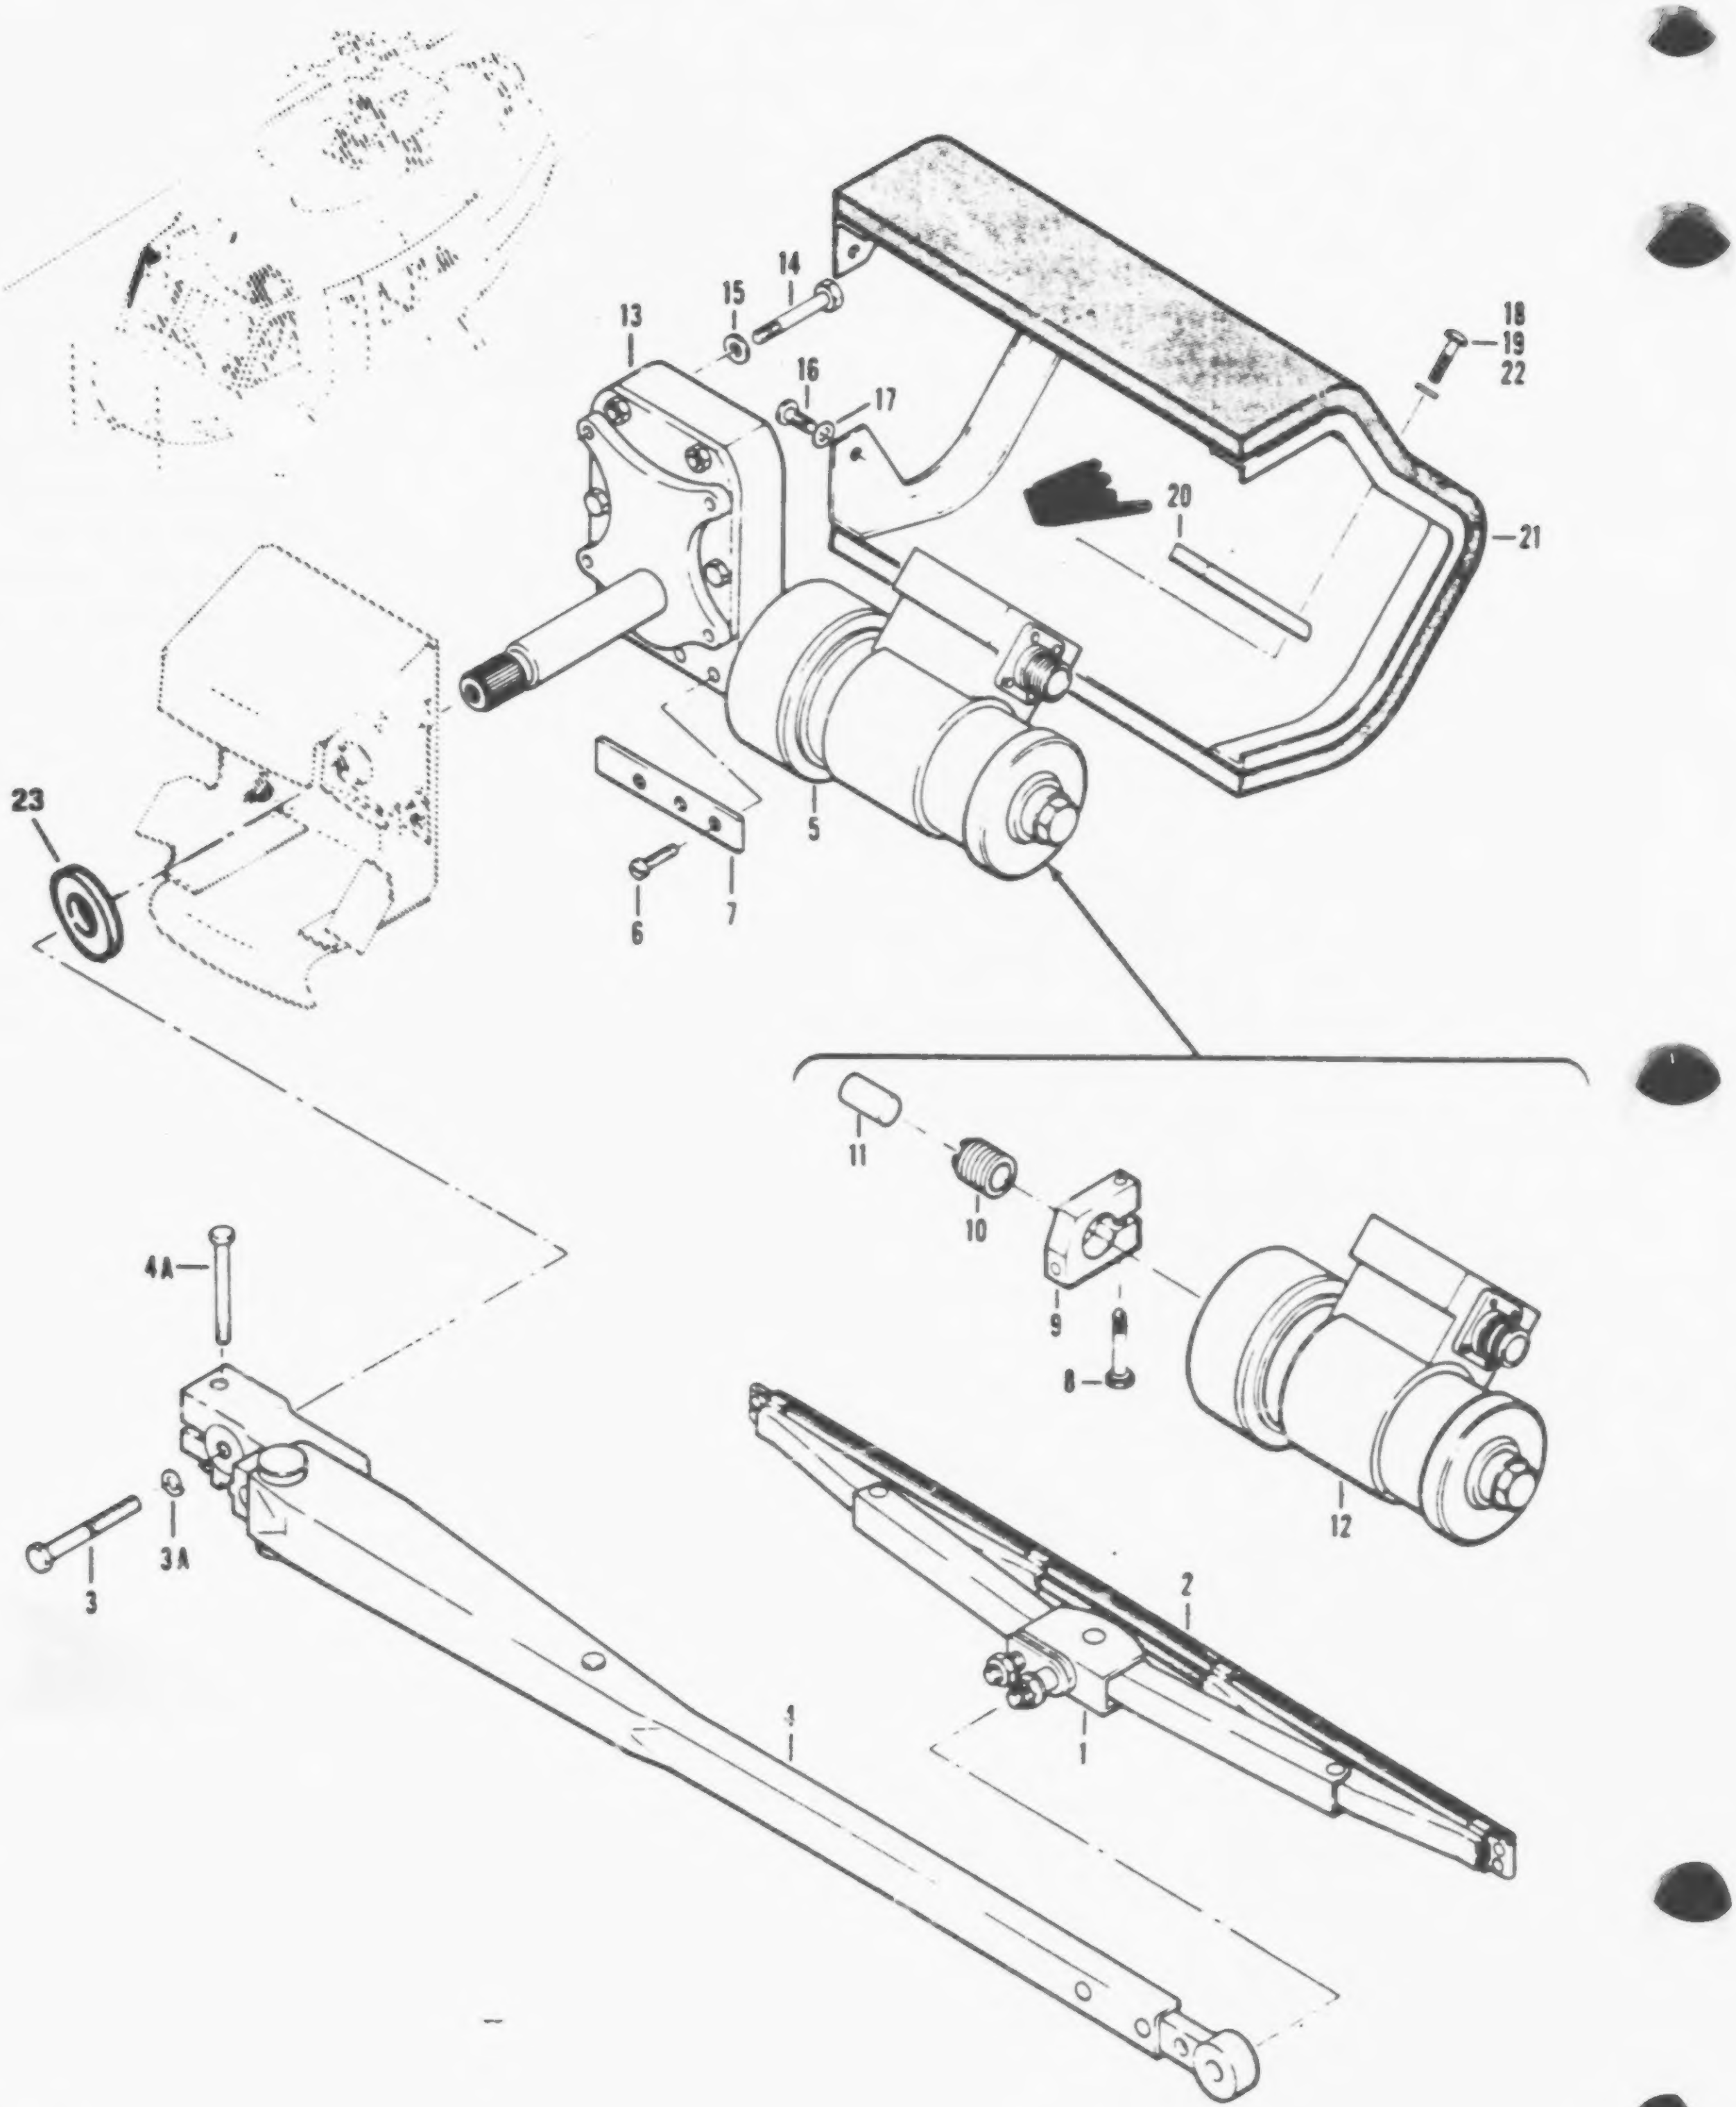
14
15
13
16
17
18
19
22
20
21
23
5
6
7
11
10
9
8
12
4A
3
3A
4
2
1

Figure 381. Wiper Installation, Windshield

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 12 UTILITY SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
381		XC000		97499	204-070-905-3	WIPER INSTL WINDSHIELD PILOT SEE FIG 6 & FIG 7 FOR NHA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381		XC000		97499	204-070-905-7	WIPER INSTL WINDSHIELD CO-PILOT SEE FIG 6 & FIG 7 FOR NHA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	1	PAOZZ	1680-00-733-8302	97499	204-070-907-5	.BLADE,WIPER ASSY USBL EFF 61-686 THRU 61-803 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	2	PAOZZ	1680-00-450-7743	70255	XW20973H14	..REFILL,WIPER BLADE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	3	PAOZZ	5306-00-754-3049	96906	MS20073-03-04	.BOLT,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	3A	PAOZZ	5310-01-074-7462	70255	W20166-23	.WASHER .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	4	PAOZZ	1680-00-781-4031	97499	204-070-907-3	.ARM,WINDSHIELD WIPE ASSY .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	4	PAOZZ	1680-00-781-4031	70255	XW20500-1-2000-2	.ARM,WINDSHIELD WIPE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	4	PAOZZ	1680-00-781-4031	11638	D18479MKA	.ARM,WINDSHIELD WIPE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	4A	PAOZZ	5305-00-225-7774	96906	MS16996-24	..SCREW,CAP,SOCKET HE U/O PN XW20500-1-2000-2 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	4A	PAOZZ	5305-00-957-5897	96906	MS24673-11	..SCREW,CAP,SOCKET HE U/O PND18479MKA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	5	PA000	1680-00-946-6677	97499	204-070-907-1	.MOTOR,WINDSHIELD WIPER ASSY U/O PN 204-070-905-3 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	5	PA000	1680-00-946-6624	97499	204-070-907-2	MOTOR,WINDSHIELD WIPER ASSY U/O PN 204-070-905-7 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	6	PAOZZ	5305-00-271-5230	88044	AN502-10-4	..SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	7	PAGZZ	1580-00-753-0532	70255	W20396	..BRACKET,MOTOR .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	8	PAOZZ	5305-00-150-9208	88044	AN502-10-16	..SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	9	PAOZZ	5340-00-738-6818	70255	W20397	..CLAMP,RIM CLENCHING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	10	PAOZZ	4730-00-075-3660	70255	W20395	..PACKING NUT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	11	PAOZZ	3010-00-019-1514	70255	W20398	..COUPLING,SHAFT,RIGI SEE FIG 382 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	12	PA00C	6105-00-669-6434	70255	XW20173-2	..MOTOR,DIRECT CURREN SEE FIG 382 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	13	A0000		70255	XW20345-369R64	..CONVERTER ASSEMBLY- SEE FIG 383 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	13	A0000		70255	XW20345-369L64	..CONVERTER ASSEMBLY- SEE FIG 383 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	14	PAOZZ	5306-00-182-2005	88044	AN3H14A	.BOLT,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
381	15	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
381		XCOZZ		97499	204-070-903-1	.GUARD INSTL,PADDED HEAD PILOT U/O PN 204-070-905-3 USBL EFF (UH-1C) 64-14101 THRU 65-9524 ..... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381		XCFZZ		97499	204-072-926-1	.GUARD INSTL,PADDED HEAD PILOT U/O PN 204-070-905-3 USBL EFF (UH-1C) 65-9525 & SUBSEQUENT .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381		XCOZZ		97499	204-070-903-2	.GUARD INSTL,PADDED HEAD CO-PILOT U/O PN 204-070-905-7 USBL EFF (UH-1C) 64-14101 THRU 65-9524 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381		XCOZZ		97499	204-072-926-2	.GUARD INSTL,PADDED HEAD CO-PILOT U/O PN 204-070-905-7 USBL EFF (UH-1C) 65-9525 & SUBSEQUENT ...... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
381	16	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE U/O PN 204-070-903-1 & -2 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
381	16	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE U/O PN 204-072-926-1 & -2 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
381	17	PAOZZ	5310-00-821-1489	82577	174870	..WASHER,FLAT U/O PN 204-072-926-1 & -2 .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2
381	18	PAOZZ	5305-00-167-3635	88044	AN525-416-12	..SCREW, MACHINE U/O PN 204-070-903-1 & -2	EA	2

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						........UHE,UHH,UHM,UHV,UHX		
381	18	PAOZZ	5305-00-952-0760	96906	MS35207-277	..SCREW,MACHINE U/O PN 204-072-926-1 & -2 ....UHE,UHH,UHM,UHV,UHX	EA	2
381	19	PAOZZ	5310-00-181-6411	97499	140-009C16T56	..WASHER,FLAT U/O PN 204-072-926-1 & -2 ....UHE,UHH,UHM,UHV,UHX	EA	2
381	20	MFOZZ	DELETED	97499	204-070-904-1	..SHIM U/O PN 204-070-903-1 & -2 ....UHE,UHH,UHM,UHV,UHX	EA	1
381	21	PAOZZ	1680-00-067-8251	97499	204-072-926-3	..GUARD,HEAD PROTECTO PILOTS HEADGUARD ASSY ....UHE,UHH,UHM,UHV,UHX	EA	1
381	21	PAOZZ	1680-00-879-0789	97499	204-072-926-4	..HEADGUARD ASSY, WIND CO-PILOTS HEADGUARD ....UHE,UHH,UHM,UHV,UHX	EA	1
381	22	PAOZZ	5325-00-281-1557	96906	MS35489-17	.GROMMET,NONMETALLIC........UHE,UHH,UHM,UHV,UHX	EA	1
381	23	PAOZZ	5325-00-184-9846	96906	MS35489-10	.GROMMET,NONMETALLIC........UHE,UHH,UHM,UHV,UHX	EA	1

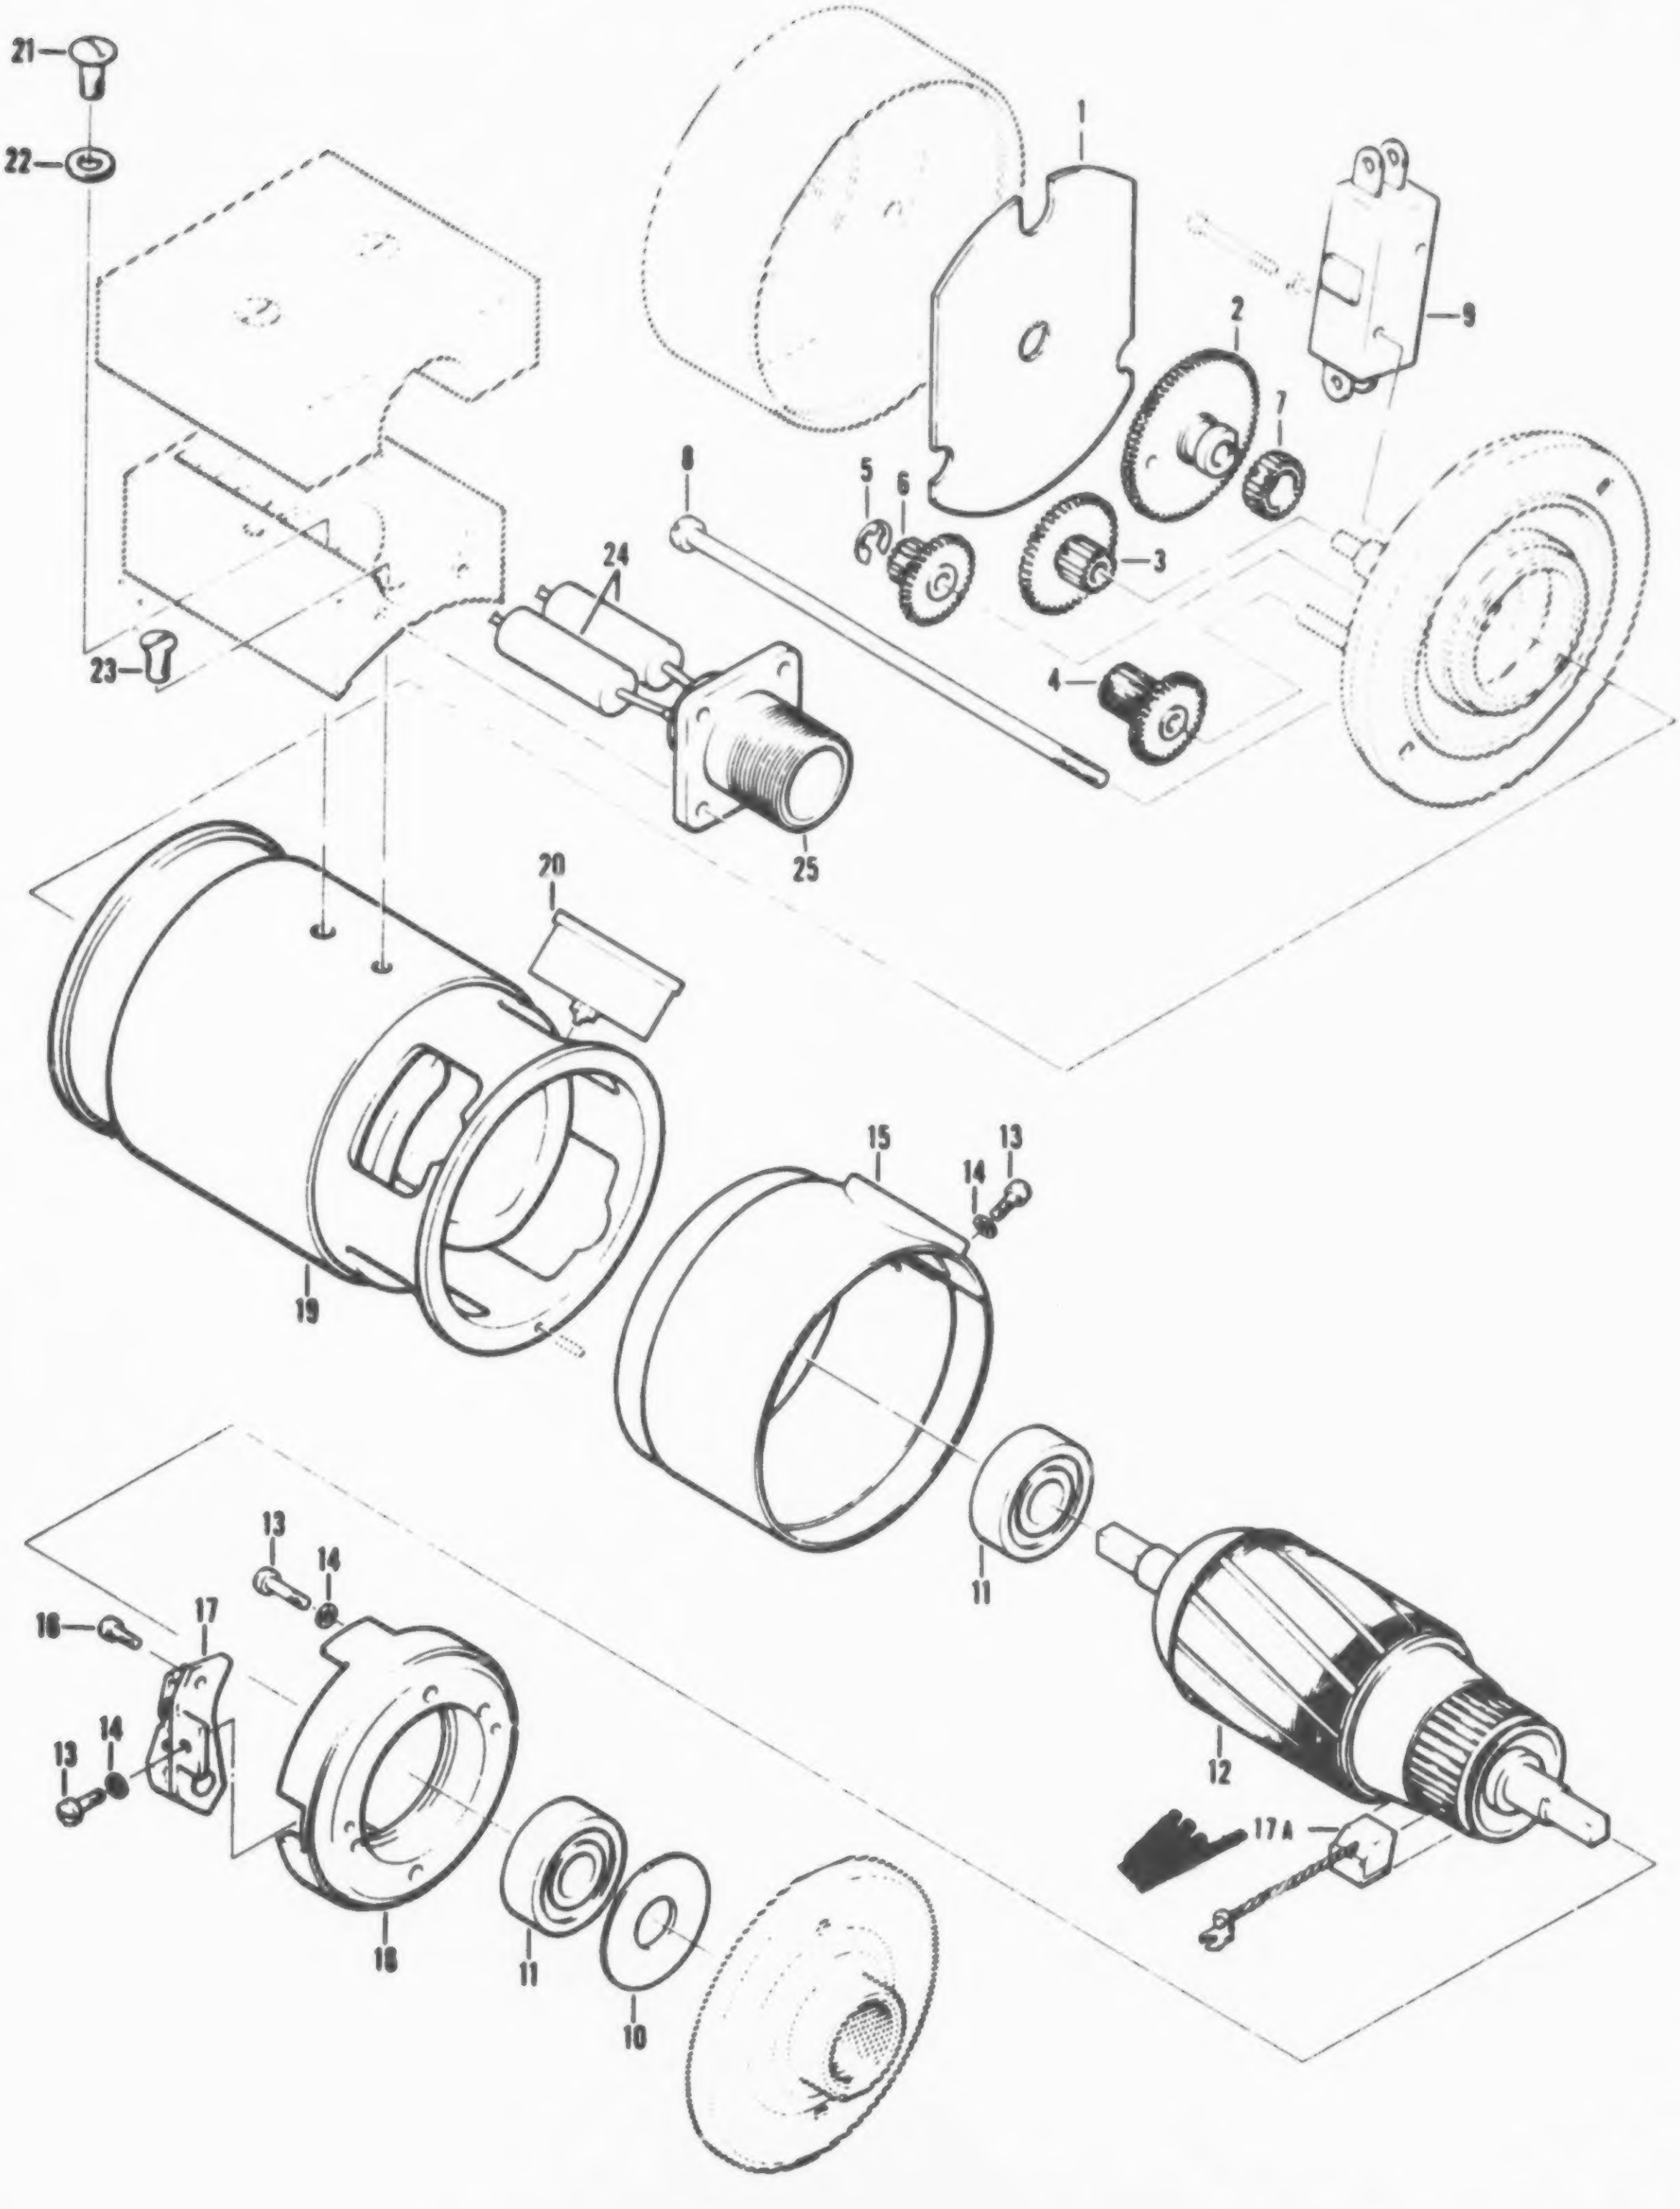
21
22
1
9
2
7
8
5
6
3
24
23
4
25
20
15
13
14
19
11
13
14
16
17
12
13
14
17A
18
11
10

Figure 382. Motor Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
382		PAOOO	6105-00-669-6434	70255	XW20173-2	MOTOR,DIRECT CURREN SEE FIG.381 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
382	1	PAOZZ	5970-00-341-9933	70255	W20388	.INSULATOR,DISK........	UHE,UHH,UHM,UHV,UHX	EA	1
382	2	PAOZZ	6105-00-307-5900	70255	XW20119	.CAM ASSEMBLY,MOTOR........	UHE,UHH,UHM,UHV,UHX	EA	1
382	3	PAOZZ	6105-00-307-5903	70255	XW20128-3	.GEAR ASSEMBLY,IDLER........	UHE,UHH,UHM,UHV,UHX	EA	1
382	4	PAOZZ	6105-00-307-5902	70255	XW20128-2	.GEAR ASSEMBLY,IDLER........	UHE,UHH,UHM,UHV,UHX	EA	1
382	5	XDOZZ	1680-00-614-4475	70255	W20048-12	..RING,RETAINING........	UHE,UHH,UHM,UHV,UHX	EA	1
382	6	PAOZZ	6105-00-307-5901	70255	XW20128-1	.GEAR ASSEMBLY,IDLER........	UHE,UHH,UHM,UHV,UHX	EA	1
382	7	PAOZZ	3020-00-506-7842	70255	W20136	.GEAR,SPUR........	UHE,UHH,UHM,UHV,UHX	EA	1
382	8	PAOZZ	5305-00-527-4371	70255	W17379	.SCREW,MACHINE........	UHE,UHH,UHM,UHV,UHX	EA	2
382	9	PAOZZ	5930-00-815-9908	70255	PS1264-2	.SWITCH,SENSITIVE........	UHE,UHH,UHM,UHV,UHX	EA	1
382	10	PAOZZ	5310-00-227-4883	70255	PS1285-3	.WASHER,SPRING TENSI........	UHE,UHH,UHM,UHV,UHX	EA	1
382	11	XDOZZ		52676	R7A22JC2	.BEARING,BALL........	UHE,UHH,UHM,UHV,UHX	EA	2
382	12	PAOZZ	6105-00-510-2514	70255	XW17380-4	.ARMATURE,MOTOR........	UHE,UHH,UHM,UHV,UHX	EA	1
382	13	PAOZZ	5305-00-998-3216	96906	MS35266-12	..SCREW,MACHINE........	UHE,UHH,UHM,UHV,UHX	EA	2
382	14	PAOZZ	5310-00-543-2410	96906	MS35338-40	.WASHER,LOCK........	UHE,UHH,UHM,UHV,UHX	EA	7
382	15	PAOZZ	6105-00-862-5788	70255	XW20442	.COVER AND NAME PLAT........	UHE,UHH,UHM,UHV,UHX	EA	1
382	16	PAOZZ	5305-00-082-6652	96906	MS35273-3	..SCREW,MACHINE........	UHE,UHH,UHM,UHV,UHX	EA	4
382	17	PAOZZ	5977-00-503-2300	70255	XW17386	..HOLDER,ELECTRICAL C........	UHE,UHH,UHM,UHV,UHX	EA	2
382	17A	PAOZZ	5977-00-296-6044	70255	XW20020	..BRUSH AND CLIP ASSY........	UHE,UHH,UHM,UHV,UHX	EA	2
382	18	PAOZZ	5977-00-698-2057	70255	W17392	..RING,BRUSH MOUNTING........	UHE,UHH,UHM,UHV,UHX	EA	1
382	19	XAOZZ		70255	XW20175	..HOUSING,ELECTRICAL........	UHE,UHH,UHM,UHV,UHX	EA	1
382	20	PAOZZ	5930-00-594-1089	70255	PS1239	.PROTECTOR,THERMA OVERHEAD........	UHE,UHH,UHM,UHV,UHX	EA	1
382	21	PAOZZ	5305-00-984-6191	96906	MS35206-243	.SCREW,MACHINE........	UHE,UHH,UHM,UHV,UHX	EA	1
382	22	PAOZZ	5310-00-045-3299	96906	MS35338-42	.WASHER,LOCK........	UHE,UHH,UHM,UHV,UHX	EA	1
382	23	PAOZZ	5305-00-957-7814	96906	MS24693S48	.SCREW,MACHINE........	UHE,UHH,UHM,UHV,UHX	EA	1
382	24	PAOZZ	5910-00-144-1890	81349	M39022/01-1671	.CAPACITOR,FIXED........	UHE,UHH,UHM,UHV,UHX	EA	2
382	25	PADZZ	5935-00-726-0708	96906	MS3102R10SL3P	.CONNECTOR, RECEPTACLE........	UHE,UHH,UHM,UHV,UHX	EA	1

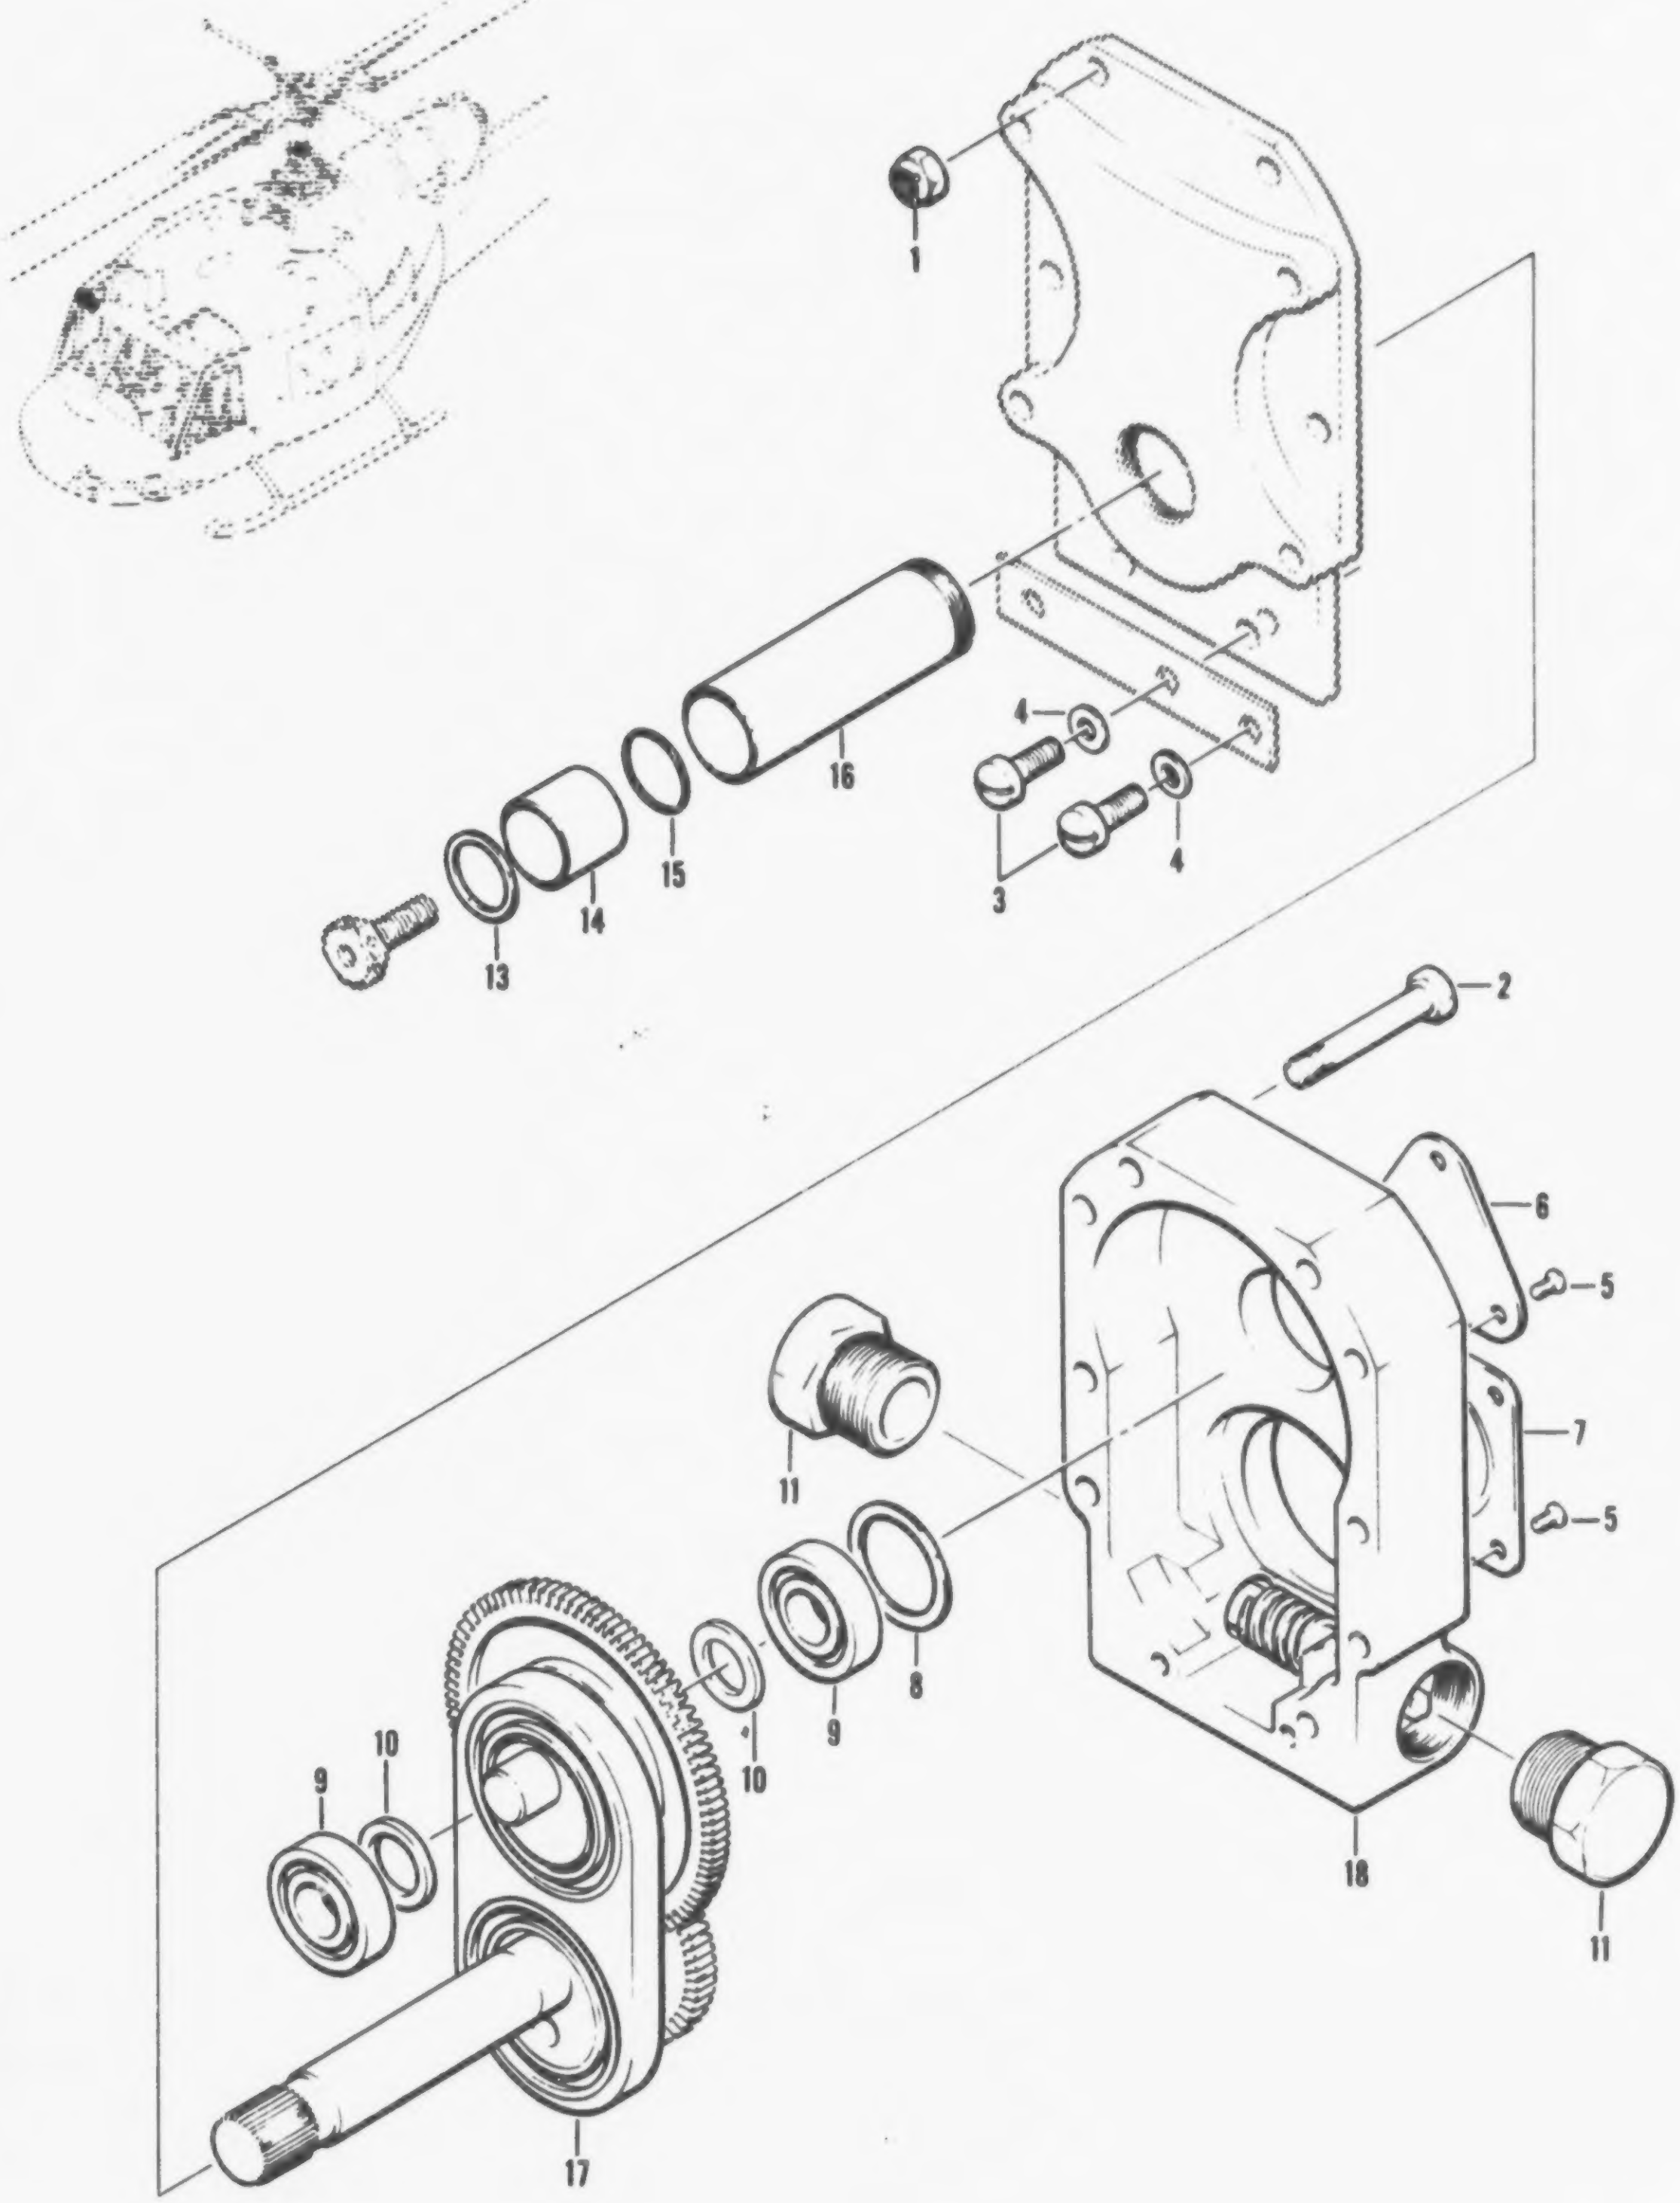
1
4
16
4
3
15
14
13
2
6
5
11
7
5
8
10
9
10
9
10
18
11
17

Figure 383. Converter Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 12 UTILITY SYSTEMS	USABLE ON CODE	U/M	QTY INC IN UNIT
383		A0000		70255	XW20345-369L64	CONVERTER ASSEMBLY- SEE FIG.381 FOR NHA	,UHE,UHH,UHM,UHV,UHX	EA	1
383		A0000		70255	XW20345-369R64	CONVERTER ASSEMBLY- SEE FIG.381 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
383	1	PAOZZ	5310-00-941-6440	96906	MS21083D08	.NUT,SELF-LOCKING,HE	UHE,UHH,UHM,UHV,UHX	EA	4
383	2	PAOZZ	5305-00-057-0487	96906	MS24694S13	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	4
383	3	PAOZZ	5305-00-145-6971	88044	AN503-8-6	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
383	4	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	2
383	5	PAOZZ	5305-00-753-6009	96906	MS24693C1	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	7
383	6	PAOZZ	1680-00-328-1690	70255	W20169	.PLATE,IDLER COVER,C	UHE,UHH,UHM,UHV,UHX	EA	1
383	7	PAOZZ	9905-00-639-1342	70255	W20170-4	.PLATE,IDENTIFICATIO	UHE,UHH,UHM,UHV,UHX	EA	1
383	8	PAOZZ	5310-00-209-5392	70255	W20166-8	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
383	9	PAOZZ	3110-00-679-6786	43334	SSR6X3A	.BEARING,BALL,ANNULA	UHE,UHH,UHM,UHV,UHX	EA	2
383	10	PAOZZ	5310-00-298-7397	70255	W20166-9	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	2
383	11	PAOZZ	1680-00-326-4470	70255	W20168	.CAP,WORM GEAR END	UHE,UHH,UHM,UHV,UHX	EA	2
383	13	XBOZZ	5365-00-076-0209	96906	MS16632-1043	.RING,RETAINING -ALTERNATE-	UHE,UHH,UHM,UHV,UHX	EA	1
383	13	PAOZZ	5365-00-282-5322	96906	MS16633-12	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
383	14	PAOZZ	1680-00-736-8879	70255	W20150	.SLEEVE,NYLON CONVERTER	UHE,UHH,UHM,UHV,UHX	EA	1
383	15	PAOZZ	5330-00-584-0265	96906	MS28775-012	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
383	16	PAOZZ	1680-00-736-8880	70255	W20367-369	.SLEEVE,CONVERTER	UHE,UHH,UHM,UHV,UHX	EA	1
383	17	PAOZZ	1680-00-736-8881	70255	XW20369-1-369-64	.LINKAGE ASSY U/O PN XW20345-369L64 AND 369R64	UHE,UHH,UHM,UHV,UHX	EA	1
383	18	PAOZZ	1680-00-024-6240	70255	XW20368	.WORM AND HOUSING ASSY	UHE,UHH,UHM,UHV,UHX	EA	1

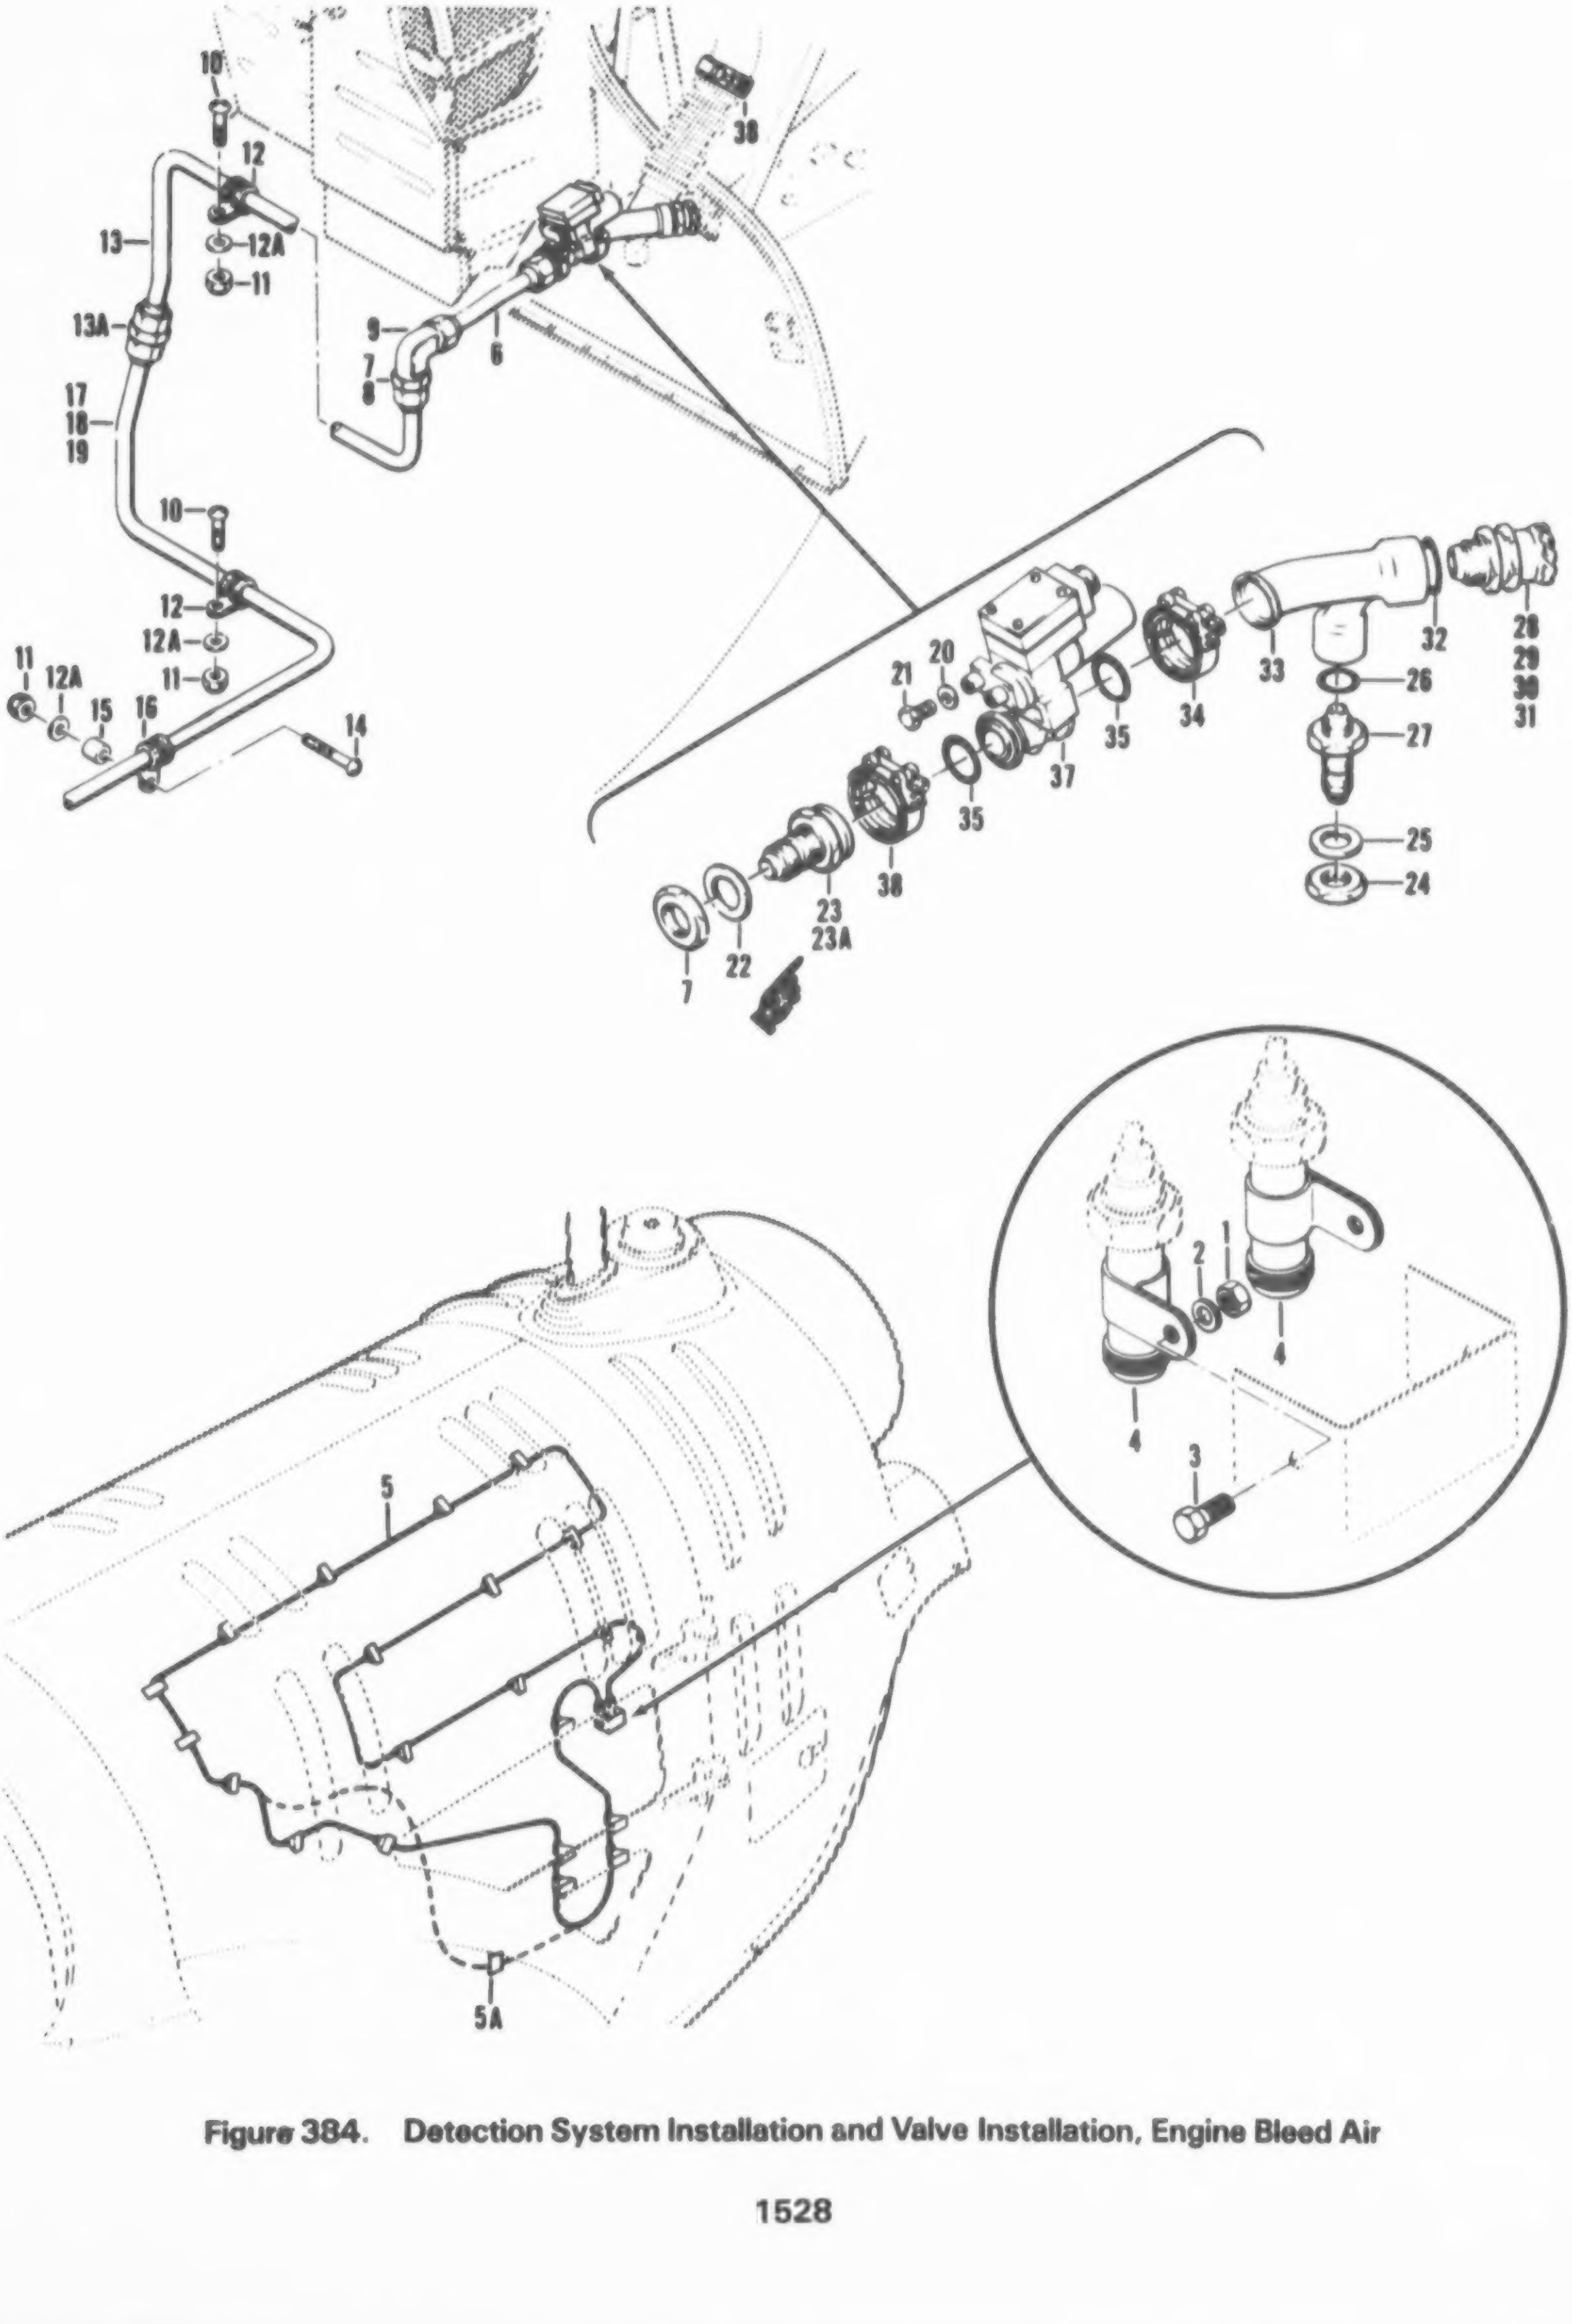
10
12
13
12A
11
13A
17
18
19
10
12
12A
11
11
12A
15
16
14
38
9
7
8
6
21
20
35
34
33
26
27
32
28
29
30
31
37
35
38
23
23A
7
22
25
24
2
1
4
4
3
5
5A

Figure 384. Detection System Installation and Valve Installation, Engine Bleed Air

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 12 UTILITY SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
384		XCFZZ		97499	204-060-904-1	DETECTION SYSTEM INSTL ENGINE FIRE LH SEE FIG 95 FOR NHA .... UHB,UHC,UHM	EA	1
384		XCFZZ		97499	204-060-904-2	DETECTION SYSTEM INSTL ENGINE FIRE RH SEE FIG 95 FOR NHA .... UHB,UHC,UHM	EA	1
384	1	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING, HEXAGON .... UHB,UHC,UHM	EA	2
384	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	V
384	3	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE .... UHB,UHC,UHM	EA	2
384	4	PAOZZ	5935-00-778-2317	19500	41806	.CONNECTOR, RECEPTACLE .... UHB,UHC,UHM	EA	2
384	5	PAOZZ	1680-00-923-2727	14140	294-1B023	.SENSING ELEMENT, FIRE DETECTOR .... UHB,UHC,UHM	EA	1
384	5A	PAOZZ	5340-00-753-3456	96906	MS25281R2	.CLAMP,LOOP U/O PN 204-060-904-1 .... UHB,UHC,UHM	EA	1
384		XCFZZ		97499	204-060-454-1	VALVE INSTL USBL EFF 60-3546 THRU 60-3619 SEE FIG 95 FOR NHA .... UHB	EA	1
384		XCFZZ		97499	204-060-454-3	VALVE INSTL USBL EFF 61-686 THRU 62-1915 SEE FIG 95 FOR NHA .... UHB,UHC,UHM	EA	1
384		XCFZZ		97499	204-060-454-5	VALVE INSTALLATION USBL EFF 62-1916 THRU 63-12952 SEE FIG 95 FOR NHA .... UHB	EA	1
384		XCFZZ		97499	204-050-454-9	VALVE INSTL USBL EFF UH-1B 64-13902 & SUBSEQUENT & UH-1C 64-14101 THRU 64-14191 SEE FIG 95 FOR NHA .... UHB,UHC,UHM	EA	1
384		XCFZZ		97499	204-060-454-11	VALVE INSTL USBL EFF 65-9416 & SUBSEQUENT SEE FIG 95 FOR NHA .... UHC,UHM	EA	1
384	6	PAOZZ	4710-00-060-2035	97499	204-060-569-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
384	7	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	V
384	8	PAOZZ	5310-00-183-4356	88044	AN960PD2116	.WASHER,FLAT .... UHB,UHC,UHM	EA	2
384	9	PAOZZ	4730-00-722-7216	96906	MS24394D16	.ELBOW,TUBE .... UHB,UHC,UHM	EA	1
384	10	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHB,UHC,UHM	EA	2
384	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON .... UHB,UHC,UHM	EA	V
384	12	PAOZZ	5340-00-989-4573	81995	EAB700D16	.CLAMP,LOOP .... UHB,UHC,UHM	EA	2
384	12A	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHC,UHM	EA	3
384	13	PAOZZ	4710-00-831-1441	97499	204-060-086-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-454-1,-3, -5,& -9 .... UHB,UHC,UHM	EA	1
384	13A	PAOZZ	4730-00-684-6913	96906	MS24392D16	.NIPPLE,TUBE .... UHB,UHC,UHM	EA	1
384	14	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE .... UHB,UHC,UHM	EA	1
384	15	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE .... UHB,UHC,UHM	EA	1
384	16	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
384	17	XBOZZ	1560-00-831-1440	97499	204-060-085-1	.TUBE ASSEMBLY U/O PN 204-060-454-1 .... UHB	EA	1
384	18	MFOZZ	1560-00-876-0109	97499	204-060-117-1	.TUBE ASSEMBLY U/O PN 204-060-454-3,-5,-9 .... UHB	EA	1
384	19	PBOZZ	4710-00-829-8429	97499	204-060-315-1	.TUBE ASSEMBLY USE-AFT-CMPL-W MWO-55-1520-211-30/32 .... UHB,UHC,UHM	EA	1
384	20	PAOZZ	5310-00-205-8924	88044	AN960C416L	.WASHER,FLAT .... UHB,UHC,UHM	EA	2
384	21	PAOZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE .... UHB,UHC,UHM	EA	2
384	22	PAOZZ	5330-00-171-7245	88044	AN123038	.GASKET .... UHB,UHC,UHM	EA	1
384	23	PAOZZ	1560-00-731-7961	97499	204-060-453-1	.ADAPTER,ENGINE AIR U/O PN 204-060-454-1,-3 .... UHB,UHC,UHM	EA	1
384	23A	PAOZZ	1560-00-075-9322	97499	204-061-410-1	.ADAPTER,ENGINE AIR U/O PN 204-060-454-5,-9,-11 .... UHC,UHM	EA	1
384	24	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	1
384	25	PAOZZ	5330-00-290-9407	88044	AN123034	.GASKET .... UHB,UHC,UHM	EA	1
384	26	PAOZZ	5330-00-072-8352	45681	3-12S418-6	.PACKING,PREFORMED .... UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
384	27	PAOZZ	4730-00-996-0883	96906	MS24393D12	.NIPPLE,TUBE UHM	EA	1
384	28	PAOOO	4730-00-225-9117	00624	375240-16	.COUPLING HALF,QUICK DISCONNECT UHM	EA	1
384	29	PAOZZ	5330-00-968-1864	96906	MS9068-213	..PACKING,PREFORMED UHM	EA	1
384	30	PAOZZ	5330-00-585-3346	96906	MS29513-213	..PACKING,PREFORMED UHM	EA	1
384	31	PAOZZ	5330-00-265-1088	96906	MS29513-027	..PACKING,PREFORME UHM	EA	1
384	32	PAOZZ	5330-00-599-0981	02697	3-165418-6	.PACKING,PREFORMED UHM	EA	1
384	33	PAOZZ	1560-00-731-7959	97499	204-060-445-1	.LATERAL,ENGINE AIR UHM	EA	1
384	34	PAOZZ	5340-00-707-6971	94581	U329052-1758S	.CLAMP ASSEMBLY UHM	EA	2
384	35	PAOZZ	5330-00-973-3683	45681	2-2165418-6	.PACKING,PREFORMED UHM	EA	2
384	37	PAODD	1660-00-872-1719	05624	BYLB9272	.VALVE ASSY USBL EFF 65-9565 THRU 66-16867 SEE FIG.386 FOR BREAKDOWN UHM	EA	1
384	37	PAODD	1660-00-113-5799	97499	204-060-444-5	.VALVE ASSY USBL EFF 66-16868 & SUBSEQUENT UHM	EA	1
384	38	PAOZZ	5340-00-810-1360	98625	24540-200	.COUPLING,CLAMP,GROO UHM	EA	1

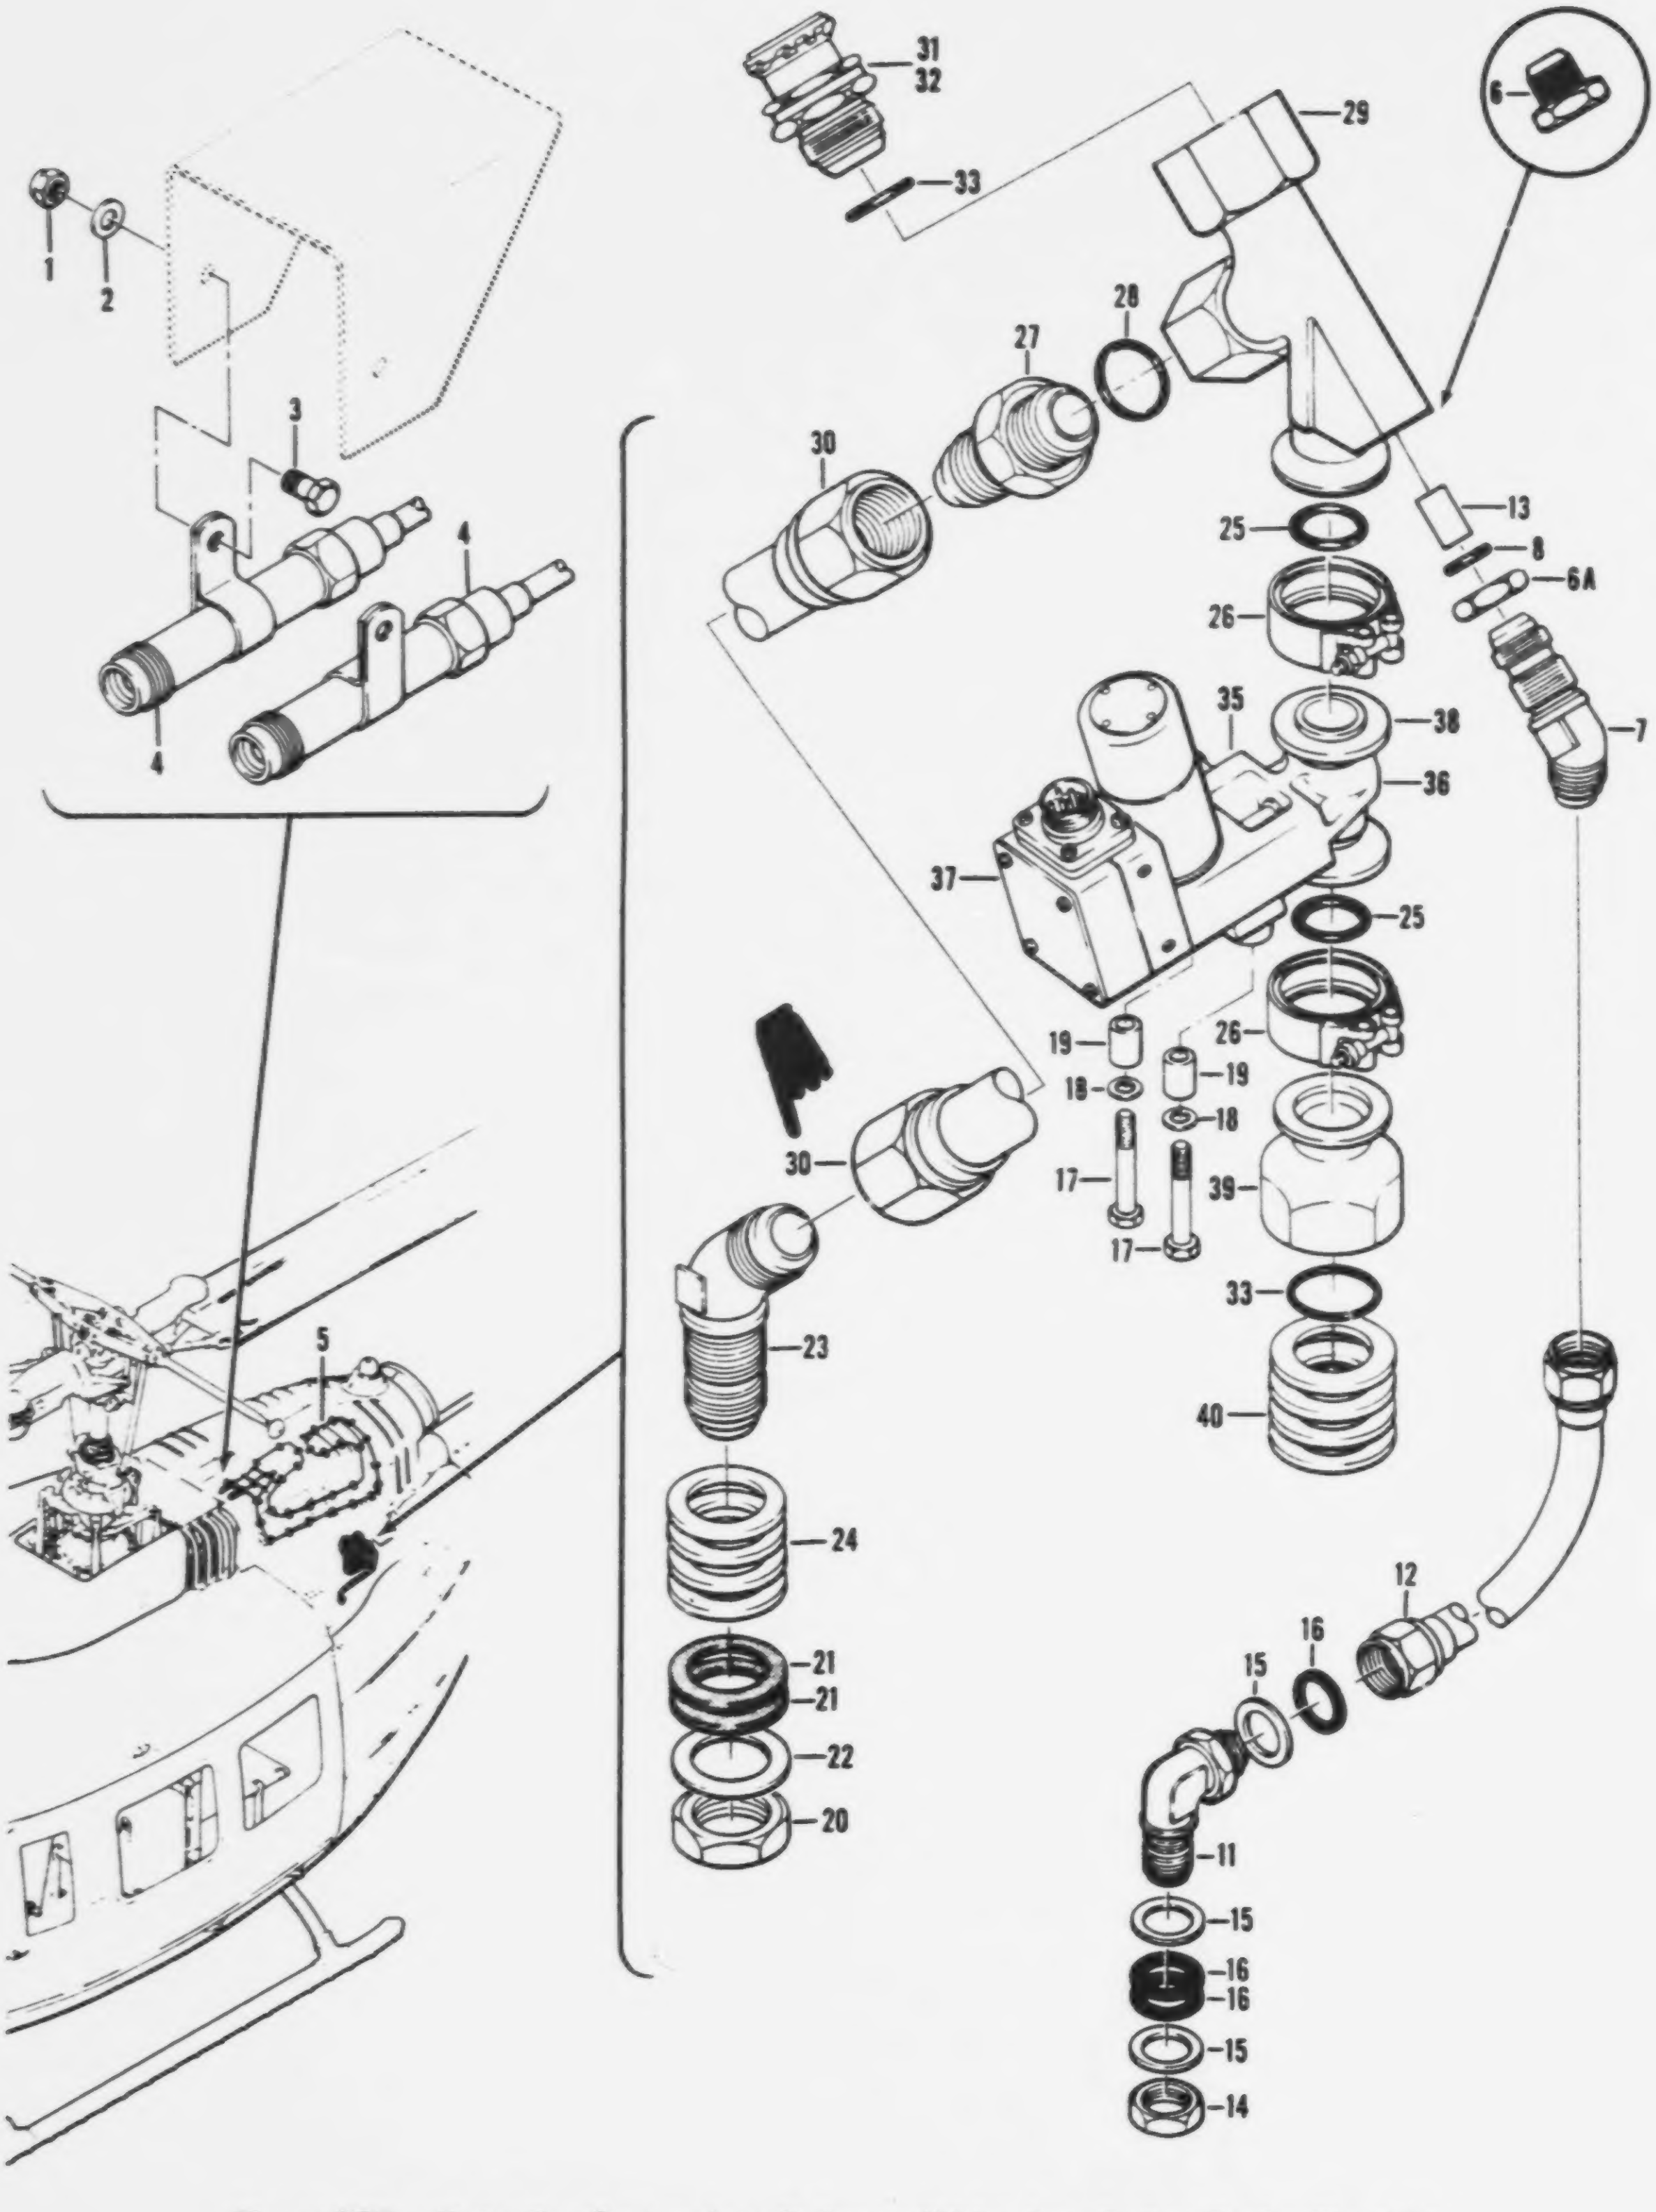
1
2
3
4
4
4
5
31
32
33
29
6
28
27
30
13
25
8
6A
26
7
35
38
36
37
25
19
26
18
19
18
30
17
39
17
33
23
40
24
12
16
15
21
21
22
20
11
15
16
16
15
14

Figure 385. Detection System Installation and Valve Installation, Engine Bleed Air

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 12 UTILITY SYSTEMS USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
385		XCFZZ		97499	205-060-950-1	DETECTION SYSTEM-LH USBL EFF 62-2106 THRU 66-8577 SEE FIG. 96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-950-3	DETECTION SYSTEM-LH USBL EFF 67-17145 & SUBSEQUENT SEE FIG. 96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-950-2	DETECTION SYSTEM-RH USBL EFF 62-2106 THRU 66-8577 SEE FIG. 96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-950-4	DETECTION SYSTEM-RH USBL EFF 67-17145 & SUBSEQUENT SEE FIG 96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385	1	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING, HEXAGON..........UHE,UHH,UHV,UHX	EA	2
385	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
385	3	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
385	4	PAOZZ	5935-00-778-2317	19500	41806	.CONNECTOR, RECEPTACLE ELECTRICAL..........UHE,UHH,UHV,UHX	EA	2
385	5	PAOZZ	1680-00-923-2727	14140	294-18023	.SENSING ELEMENT, FIRE DETECTOR SYSTEM.......UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-403-1	VALVE INSTL USBL EFF 62-2106 THRU 62-13002 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-403-3	VALVE ASSY USBL EFF 64-13492 THRU 66-746 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-404-1	VALVE INSTL USBL EFF 66-16858 THRU 69-15291 SEE FIG.95 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385		XCFZZ		97499	205-060-404-5	VALVE INSTL USBL EFF 69-15292 & SUBSEQUENT SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
385	6	PAOZZ	5365-00-289-3070	96906	MS9015-08	.PLUG,MACHINE THREAD U/O PN 205-060-404-5....UHE,UHH,UHV,UHX	EA	1
385	6A	PAOZZ	5310-00-208-5775	88044	AN924-8	.NUT,PLAIN,HEXAGON U/O PN 205-060-404-1,205-060-403-1,-3 ....UHE,UHH,UHV,UHX	EA	1
385	7	PAOZZ	4730-00-804-1931	96906	MS24396-8	.ELBOW,TUBE U/O PN 205-060-404-1,205-060-403-1,-3 ....UHE,UHH,UHV,UHX	EA	1
385	8	PAOZZ	5330-00-072-8353	02697	3-908S418-6	.PACKING,PREFORMED U/O PN 205-060-404-1,205-060-403-1,-3 ....UHE,UHH,UHV,UHX	EA	1
385	11	PAOZZ	4730-00-806-6233	96906	MS24394-8	.ELBOW,TUBE U/O PN 205-060-404-1,205-060-403-1,-3 ....UHE,UHH,UHV,UHX	EA	1
385	12	MFOZZ	4710-00-010-5461	97499	205-060-440-1	.TUBE ASSEMBLY,METAL U/O PN 205-060-404-1,205-060-403-1,-3 ....UHE,UHH,UHV,UHX	EA	1
385	13	PAOZZ	4710-00-052-1550	97499	205-060-441-1	.TUBE,METALLIC..........UHE,UHH,UHV,UHX	EA	1
385	14	PAOZZ	5310-00-208-5775	88044	AN924-8	.NUT,PLAIN,HEXAGON U/O PN 205-050-404-1......UHE,UHH,UHV,UHX	EA	1
385	15	PAOZZ	5310-00-187-2404	88044	AN960PD1216	.WASHER,FLAT USE 2 EA ON PN 205-060-404-1,USE 3 EA ON PN 205-060-403-1,-3..........UHE,UHH,UHV,UHX	EA	3
385	16	PAOZZ	5330-00-780-9325	97499	204-060-534-7	.GASKET USE 2 EA ON PN 205-060-404-1,USE 3 EA ON PN 205-060-403-1,-3..........UHE,UHH,UHV,UHX	EA	3
385	17	PAOZZ	5306-00-182-1966	88044	AN4H20A	.BOLT ....UHE,UHH,UHV,UHX	EA	2
385	18	PAOZZ	5310-00-205-8924	88044	AN960C416L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
385	19	PAOZZ	5365-00-874-2165	80205	NAS43DD4-95	.SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
385	20	PBOZZ	5310-00-282-7831	96906	MS24400-12	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
385	21	PAOZZ	5310-00-959-3580	97499	205-060-438-3	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
385	22	PAOZZ	5310-00-797-5916	97499	140-009D69T109	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
385	23	PAOZZ	4730-00-231-3020	88044	AN837-12	.ELBOW,TUBE..........UHE,UHH,UHV,UHX	EA	1
385	24	PAOZZ	5310-00-616-1253	88044	AN960-1716L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
385	25	PAOZZ	5330-00-973-3683	45681	2-216S418-6	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	2
385	26	PAOZZ	5340-00-707-6971	94581	U3290S2-175SS	.CLAMP ASSY..........UHE,UHH,UHV,UHX	EA	2
385	27	PBOZZ	4730-00-187-0489	88044	AN815-12	.NIPPLE,TUBE..........UHE,UHH,UHV,UHX	EA	1

best copy available

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
385	28	PAOZZ	5330-00-072-8352	45681	3-128418-6	.PACKING,PREFORMED....................................	UHE,UHH,UHV,UHX	EA	1
385	29	PAOZZ	4730-00-072-8330	97499	205-060-439-1	.FITTING,BLEED AIR....................................	UHE,UHH,UHV,UHX	EA	1
385	30	MFOZZ	DELETED	97499	205-060-424-1	.TUBE ASSEMBLY,METAL....................................	UHE,UHH,UHV,UHX	EA	1
385	31	PAOOO	4730-00-225-9117	00624	375240-16	.COUPLING HALF,QUICK....................................	UHE,UHH,UHV,UHX	EA	1
385	32	PAOZZ	5330-00-968-1864	96906	MS9068-213	..PACKING,PREFORMED....................................	UHE,UHH,UHV,UHX	EA	1
385	33	PAOZZ	5330-00-599-0981	02697	3-168418-6	.PACKING,PREFORMED....................................	UHE,UHH,UHV,UHX	EA	2
385	35	PAODD	1660-00-872-1719	05624	BYLB9272	.VALVE ASSY USBL EFF 65-9565 THRU 66-16867 U/O PN 205-060-403-1, & -3 SEE FIG.386 FOR BREAKDOWN....................................	UHE,UHH,UHV,UHX	EA	1
385	35	PAODD	1660-00-113-5799	97499	204-060-444-5	.VALVE ASSY USBL EFF 66-16868 & SUBSEQUENT....................................	UHE,UHH,UHV,UHX	EA	1
385	36	ADDDD		05624	BYLB82-20	..VALVE ASSEMBLY....................................	UHE,UHH,UHV,UHX	EA	1
385	37	ADDDZ	1680-00-448-9608	05624	FTLC9287	..ACTUATOR,ELECTRO....................................	UHE,UFH,UHV,UHX	EA	1
385	38	PAOZZ	1660-00-931-2310	97499	205-060-421-1	.CONNECTOR,HEAT CONT U/O PN 205-060-404-1 & -5	UHE,UHI,UHV,UHX	EA	1
385	39	PAOZZ	4730-00-072-1083	97499	205-060-494-1	.FITTING....................................	UHE,UHH,UHV,UHX	EA	1
385	40	PAOZZ	5310-00-183-4351	88044	AN960-2116L	.WASHER, FLAT....................................	UHE,UHH,UHV,UHX	EA	4

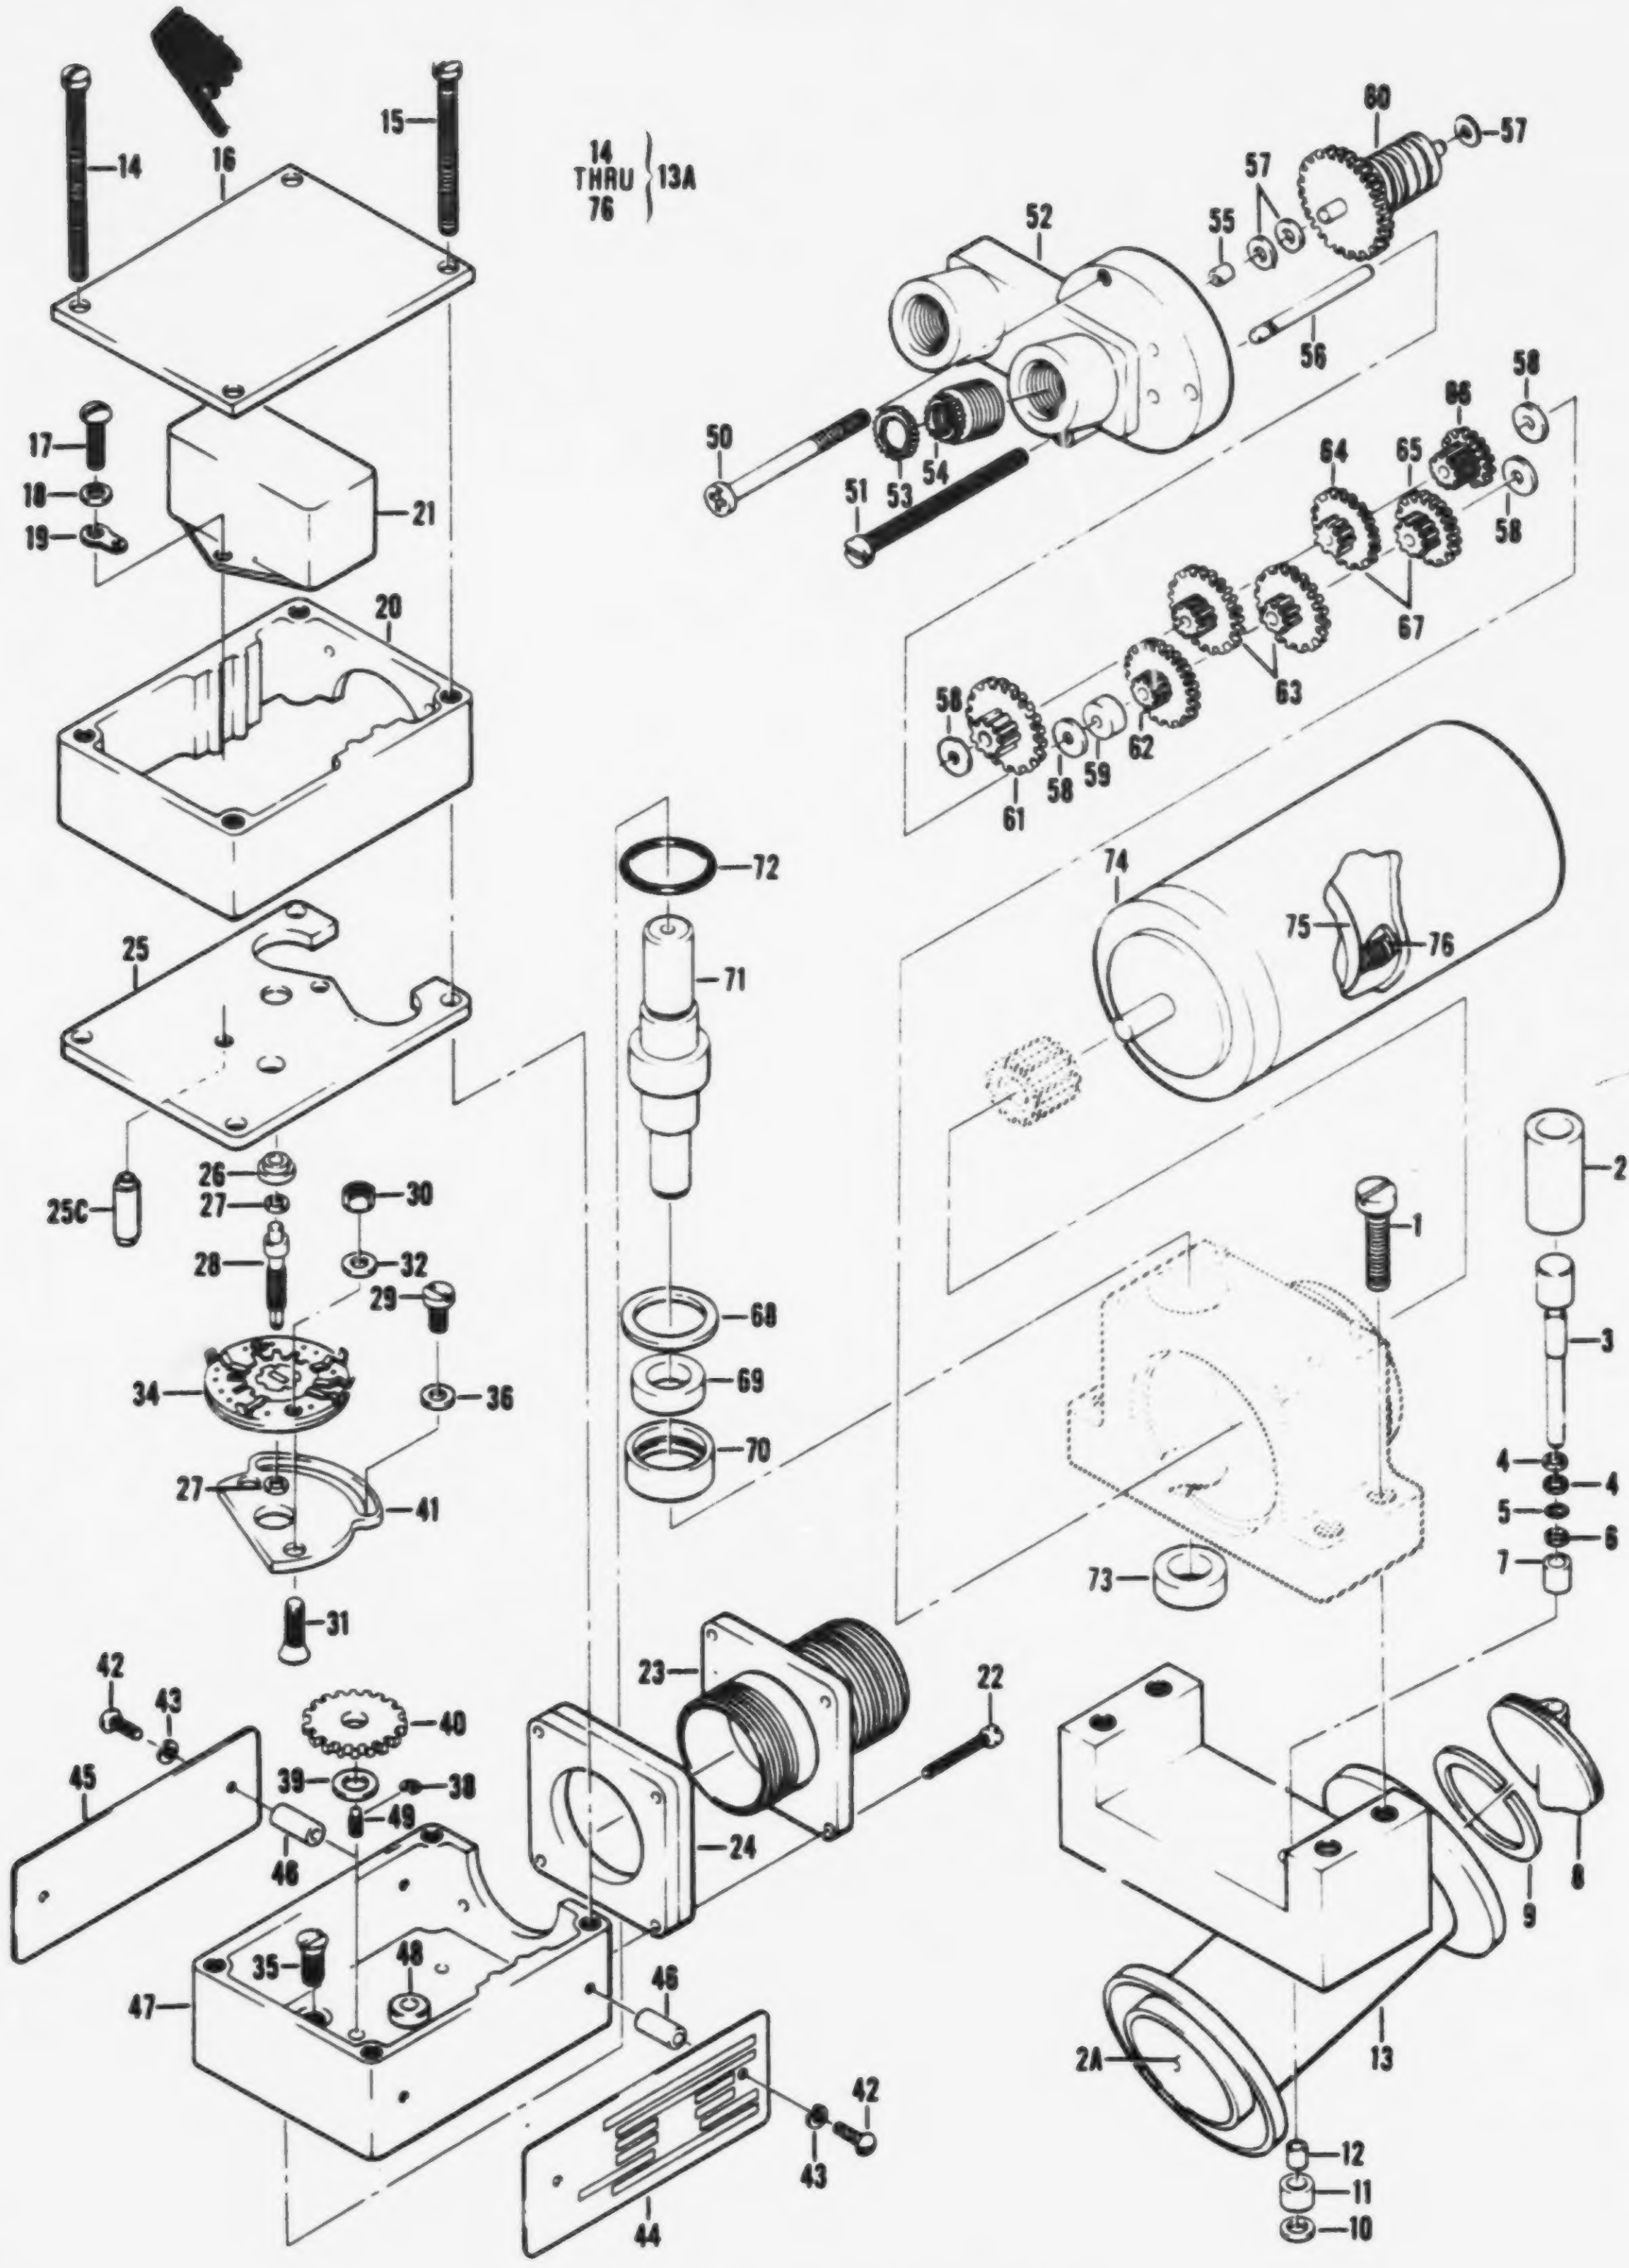
14
16
15
14 THRU 76 } 13A
80
57
57
52
55
56
58
66
64
65
58
50
51
53
54
17
18
19
21
20
67
63
58
62
59
58
61
72
74
75
76
71
25
2
1
25C
26
27
30
28
32
29
68
3
34
36
69
70
4
4
5
6
27
41
7
73
31
22
23
42
43
40
39
38
49
45
24
46
8
9
35
48
47
46
13
2A
42
43
12
11
10
44

Figure 386. Valve Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 12 UTILITY SYSTEMS	USABLE ON CODE	U/M	QTY INC IN UNIT
386		PAODO	1660-00-872-1719	05624	BYL89272	VALVE ASSY SEE FIG 384 & 385 FOR NHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	1	PADZZ	5305-00-939-9232	96906	MS35275-246	SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
386	2	XBDZZ	3010-00-932-5154	05624	BYLB80	.COUPLING,SHAFT, RIGID	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	2A	ADODO		05624	BYLB82-20	.VALVE ASSEMBLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	3	PADZZ	1680-00-894-0581	05624	BYLB78	..SHAFT,SHOULDERED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	4	PADZZ	1660-00-610-0616	05624	DYLZ508	..SPACER,SPECIAL,BUTT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	5	PADZZ	5330-00-998-0162	05624	BYLB76	..PACKING,VALVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
385	6	PADZZ	5310-00-995-2719	05624	BYLB73	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	7	PADZZ	3110-00-179-7296	05624	CYRB106	..BEARING,ROLLER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	8	PADZZ	1660-00-984-5633	05624	BYLB79	..DISK,BUTTERFLY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	9	PADZZ	5365-00-851-1512	05624	BYLB74	..RING,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	10	PADZZ	5365-00-597-8487	96906	MS15625-4031	..RING,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	11	PADZZ	3110-00-902-4305	60380	M21-251XASOH	..BEARING,ROLLER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
385	12	PADZZ	3120-00-540-7533	05624	DYLZ509	..BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHV,UHX	EA	1
386	13	PADZZ	1660-00-998-0100	05624	BYLB81	..HOUSING,VALVE,HEATE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	13A	ADODZ	1680-00-448-9608	05624	NYLC9287	.ACTUATOR ASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	14	XDOZZ	5305-00-850-4892	05624	BYRF2108	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	15	PADZZ	5305-00-622-9473	05624	BYRF2056	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	16	MDOZZ	DELETED	05624	NYLC3	..COVER,ACCESS	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	17	PADZZ	5305-00-990-8386	96906	MS35206-201	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	18	PADZZ	5310-00-543-5060	96906	MS35338-39	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	19	PADZZ	5940-00-615-6073	96906	MS25036-152	..TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	20	XBDZZ	1660-00-443-1134	05624	NYLC271	..HOUSING,FILTER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	21	PADZZ	5915-00-055-6067	05624	CYZR485	..FILTER,RADIO FREQUE CURRENT POWER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
385	22	PADZZ	5305-00-639-2428	88044	AN500A4-14	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
386	23	PADZZ	5935-00-621-0345	96906	MS3102R14S6P	..CONNECTOR, RECEPTCLE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	24	XDOZZ	6110-00-321-1302	05624	EYLC-44-2	..SPACER,CONNECTOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	25	XBDZZ	1680-00-868-8431	05624	NYLC280	..PLATE ASSY,FILTER	UHB,UHC,UHE,UHH,UHM UHV,UHX	EA	1
386	25C	PADZZ	5975-00-891-8516	05624	NYLC279	..CONDUIT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	26	XDOZZ	3120-00-014-0730	05624	NYLC278	...BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	27	PADZZ	5365-00-571-1553	19315	12[illegible]531-3	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	28	PADZZ	1660-00-014-2047	05624	CYRG272	..GEARSHAFT,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	29	PADZZ	5305-00-811-9853	96906	MS35265-12	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	30	PADZZ	5310-00-934-9738	96906	MS35649-222	..NUT,PLAIN,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	31	PADZZ	5305-00-958-5462	96906	MS35190-215	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	32	PADZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK U/O PN NYLC7913	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	34	PBDDO	5930-00-946-1136	05624	NYLC879	..SWITCH SUBASSEMBLY SEE FIG.387 FOR BREAKDOWN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	35	PADZZ	5305-00-081-6668	96906	MS24693S2	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	36	PADZZ	5310-00-012-9413	05624	CYRD331	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	38	PADZZ	5340-00-663-2894	73287	HPC115	..CLIP,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
386	39	PADZZ	5365-00-637-2738	05624	AYLC187	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
386	40	PADZZ	3020-00-042-9486	05624	AYRG909	..GEAR,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
86	41	XBDZZ	1680-00-868-8430	05624	NYLC273	..PLATE,ADJUSTING, SWITCH	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	42	PADZZ	5305-00-990-8386	96906	MS35206-201	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
386	43	PADZZ	5310-00-543-5060	96906	MS35338-39	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
386	44	XBDZZ	1680-00-983-0076	05624	NYRZ1-12	..NAMEPLATE, IDENTIFICATION	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	45	PADZZ	1660-00-984-5315	05624	NYRZ1-11-1	..PLATE,IDENTIFICATIO IDENTIFICATION	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	45	PADZZ	9905-00-017-9468	05624	BYLB77	..PLATE,IDENTIFICATIO	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	46	XBDZZ	5340-00-733-2498	05624	AYRD586	..SPACER,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
386	47	PBDDD	1680-00-868-8433	05624	NYLC267	..HOUSING SWITCH ASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	48	XDDZZ	3120-00-014-0730	05624	NYLC278	...BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	49	PADZZ	1660-00-014-2046	05624	NYLC276	...GEARSHAFT,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	50	PADZZ	5305-00-938-5979	05624	JYRF36	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	51	PADZZ	5305-00-614-0263	96906	MS35265-23	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	52	PBDDD	1680-00-868-8432	05624	NYLC268	..PLATE ASSEMBLY,GEAR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	53	PADZZ	5365-00-819-6656	83324	RL28SB5	...RING,LOCK,SERRATED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	54	XBDZZ	5340-00-012-9278	83324	RD3606L	...INSERT,SCREW THREAD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	55	PADZZ	3120-00-901-9243	05624	BYRB332	...BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	56	PADZZ	1660-00-014-2045	05624	NYLC76	...GEARSHAFT,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	57	PADZZ	5365-00-209-4077	05524	CYRD257	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
386	58	PADZZ	5365-00-824-1351	05624	CYRD379	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
386	59	PADZZ	3120-00-540-9687	05624	AYRD367	..BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	60	PADZZ	1660-00-014-2051	05624	NYLC73	..GEAR ASSY,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	61	PADZZ	1650-00-014-2050	05624	NYLC277	..GEAR ASSY,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	62	XBDZZ	6105-00-085-5690	05624	BYLH72	..GEAR ASSY,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	63	PADZZ	3020-00-085-5693	05624	BYLH96	..GEAR,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	64	PADZZ	1660-00-014-2048	05624	NYLC112	..GEAR ASSEMBLY,SPUR,	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	65	PADZZ	1680-00-055-6050	05624	NYLC114	..GEAR SUBASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	66	PADDD	1660-00-953-0836	05624	BYLH304	..GEAR SUBASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	67	XDDZZ	3120-00-088-9678	05624	BYRB338	...BEARING,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	68	PADZZ	5365-00-824-1355	05624	NYLC96	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
386	69	PADZZ	3110-00-411-4346	05624	CYRB160	..BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	70	PADZZ	1680-00-056-0471	05624	NYLC274	..HOUSING,BEARING, ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	71	PADZZ	1660-00-014-2049	05624	NYLC269	..GEARSHAFT,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	72	PADZZ	5365-00-808-3957	96906	MS16625-1056	..RING RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	73	PADZZ	3110-00-949-6150	05624	CYRB159	..BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	74	PADDD	6105-00-070-6123	05624	DYLM43301-24	..GEARCASE-MOTOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
386	75	PADZZ	5977-00-539-7970	05624	DYLM-26-1	...BRUSH,ELECTRICAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
386	76	XDDZZ	5360-00-564-8068	05624	CYRS24	...SPRING,HELICAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

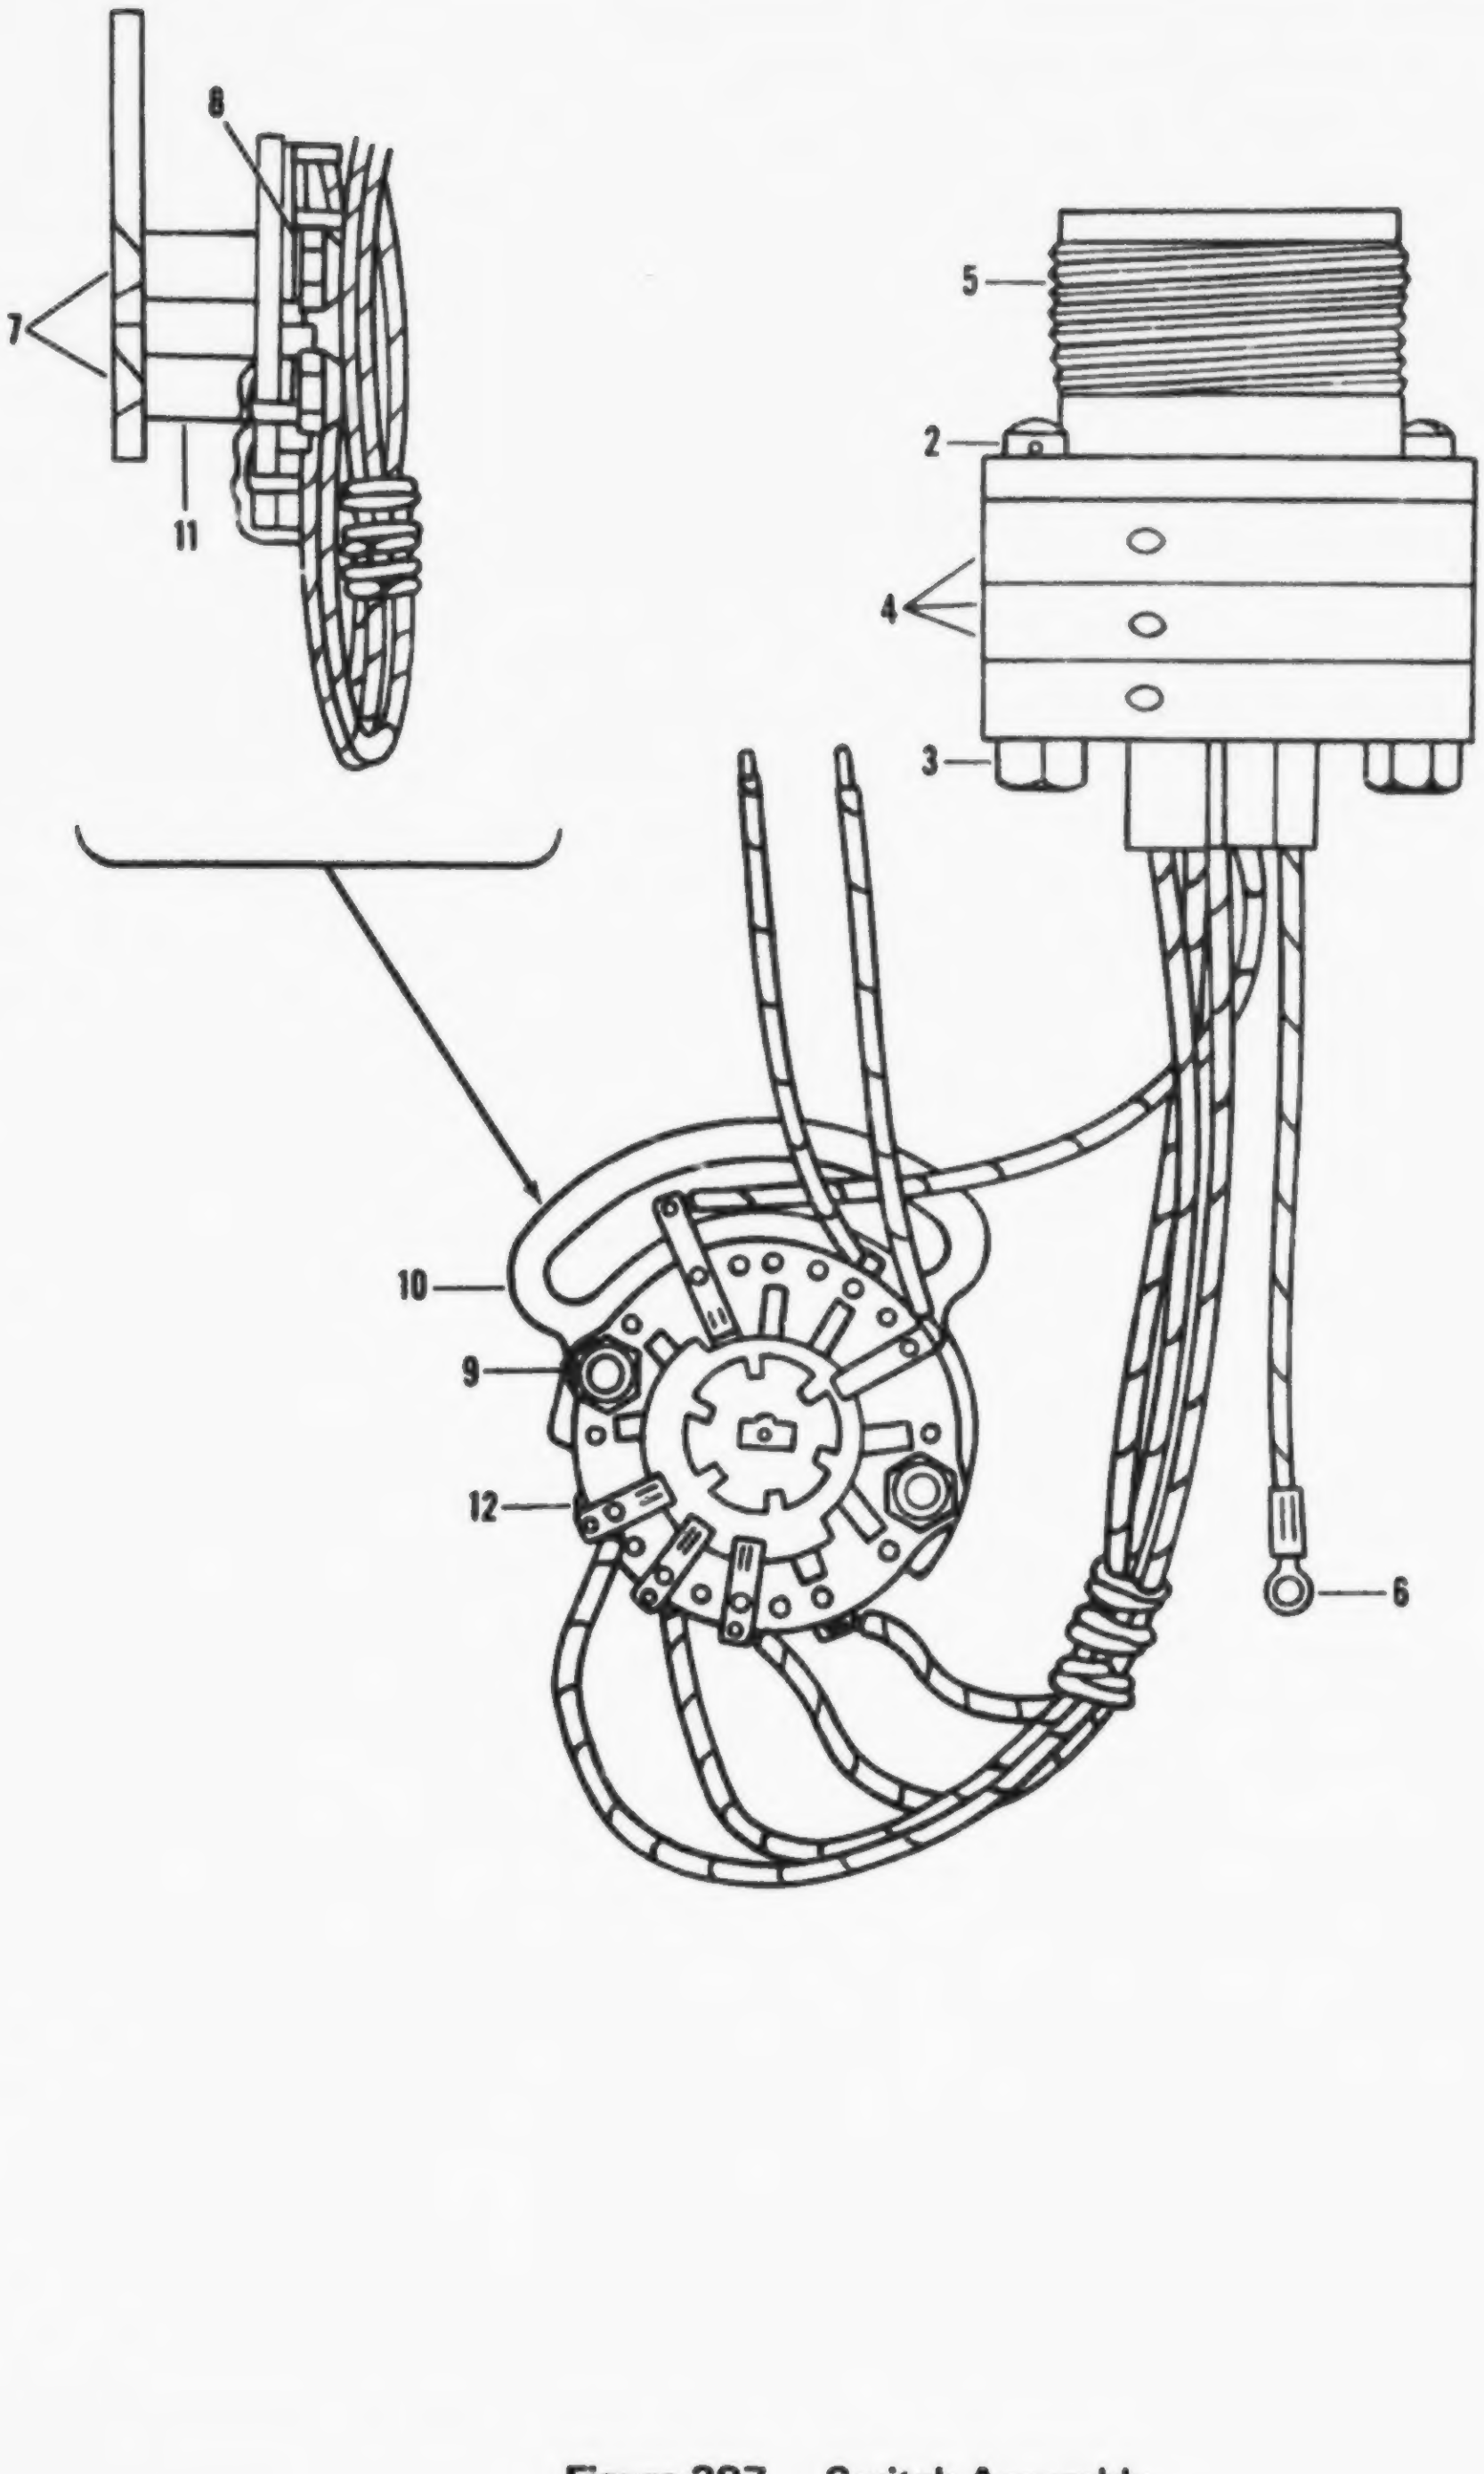
8
7
11
5
2
4
3
10
9
12
6

Figure 387. Switch Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 12 UTILITY SYSTEMS USABLE ON CODE	U/M	QTY INC IN UNIT
387		PBDDD	5930-00-946-1136	05624	NYLC879	SWITCH SUBASSEMBLY SEE FIG 386 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
387	2	PADZZ	5305-00-639-2428	88044	AN500A4-14	.SCREW,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
387	3	PADZZ	5310-00-850-4726	05624	DYRF3	.NUT,PLAIN,HEXAGON...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
387	4	XDDZZ	6110-00-321-1302	05624	EYLC-44-2	.SPACER,CONNECTOR................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
387	5	PADZZ	5935-00-821-0345	96906	MS3102R14S6P	.CONNECTOR, RECEPTACLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
387	6	PADZZ	5940-00-615-6073	96906	MS25036-152	.TERMINAL,LUG.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
387	7	PADZZ	5305-00-010-1195	81348	FFS92TYPE1STYLE2 S	.SCREW,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
387	8	PADZZ	5310-00-054-4963	88818	C312009277	.WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
387	9	PADZZ	5310-00-207-9364	72962	92-1650-26	.NUT,SELF-LOCKING, HEXAGON......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
387	10	XBDZZ	1680-00-868-8430	05624	NYLC273	.PLATE,ADJUSTING, SWIVEL....... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
387	11	XDDZZ	5340-00-936-6155	05624	AYRD586-3	.POST,ELECTRICAL-.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
387	12	XDDZZ	5930-00-070-5986	05624	CYZP439	.SWITCH SECTION,ROTA..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

Pages 1542 through 1577 deleted

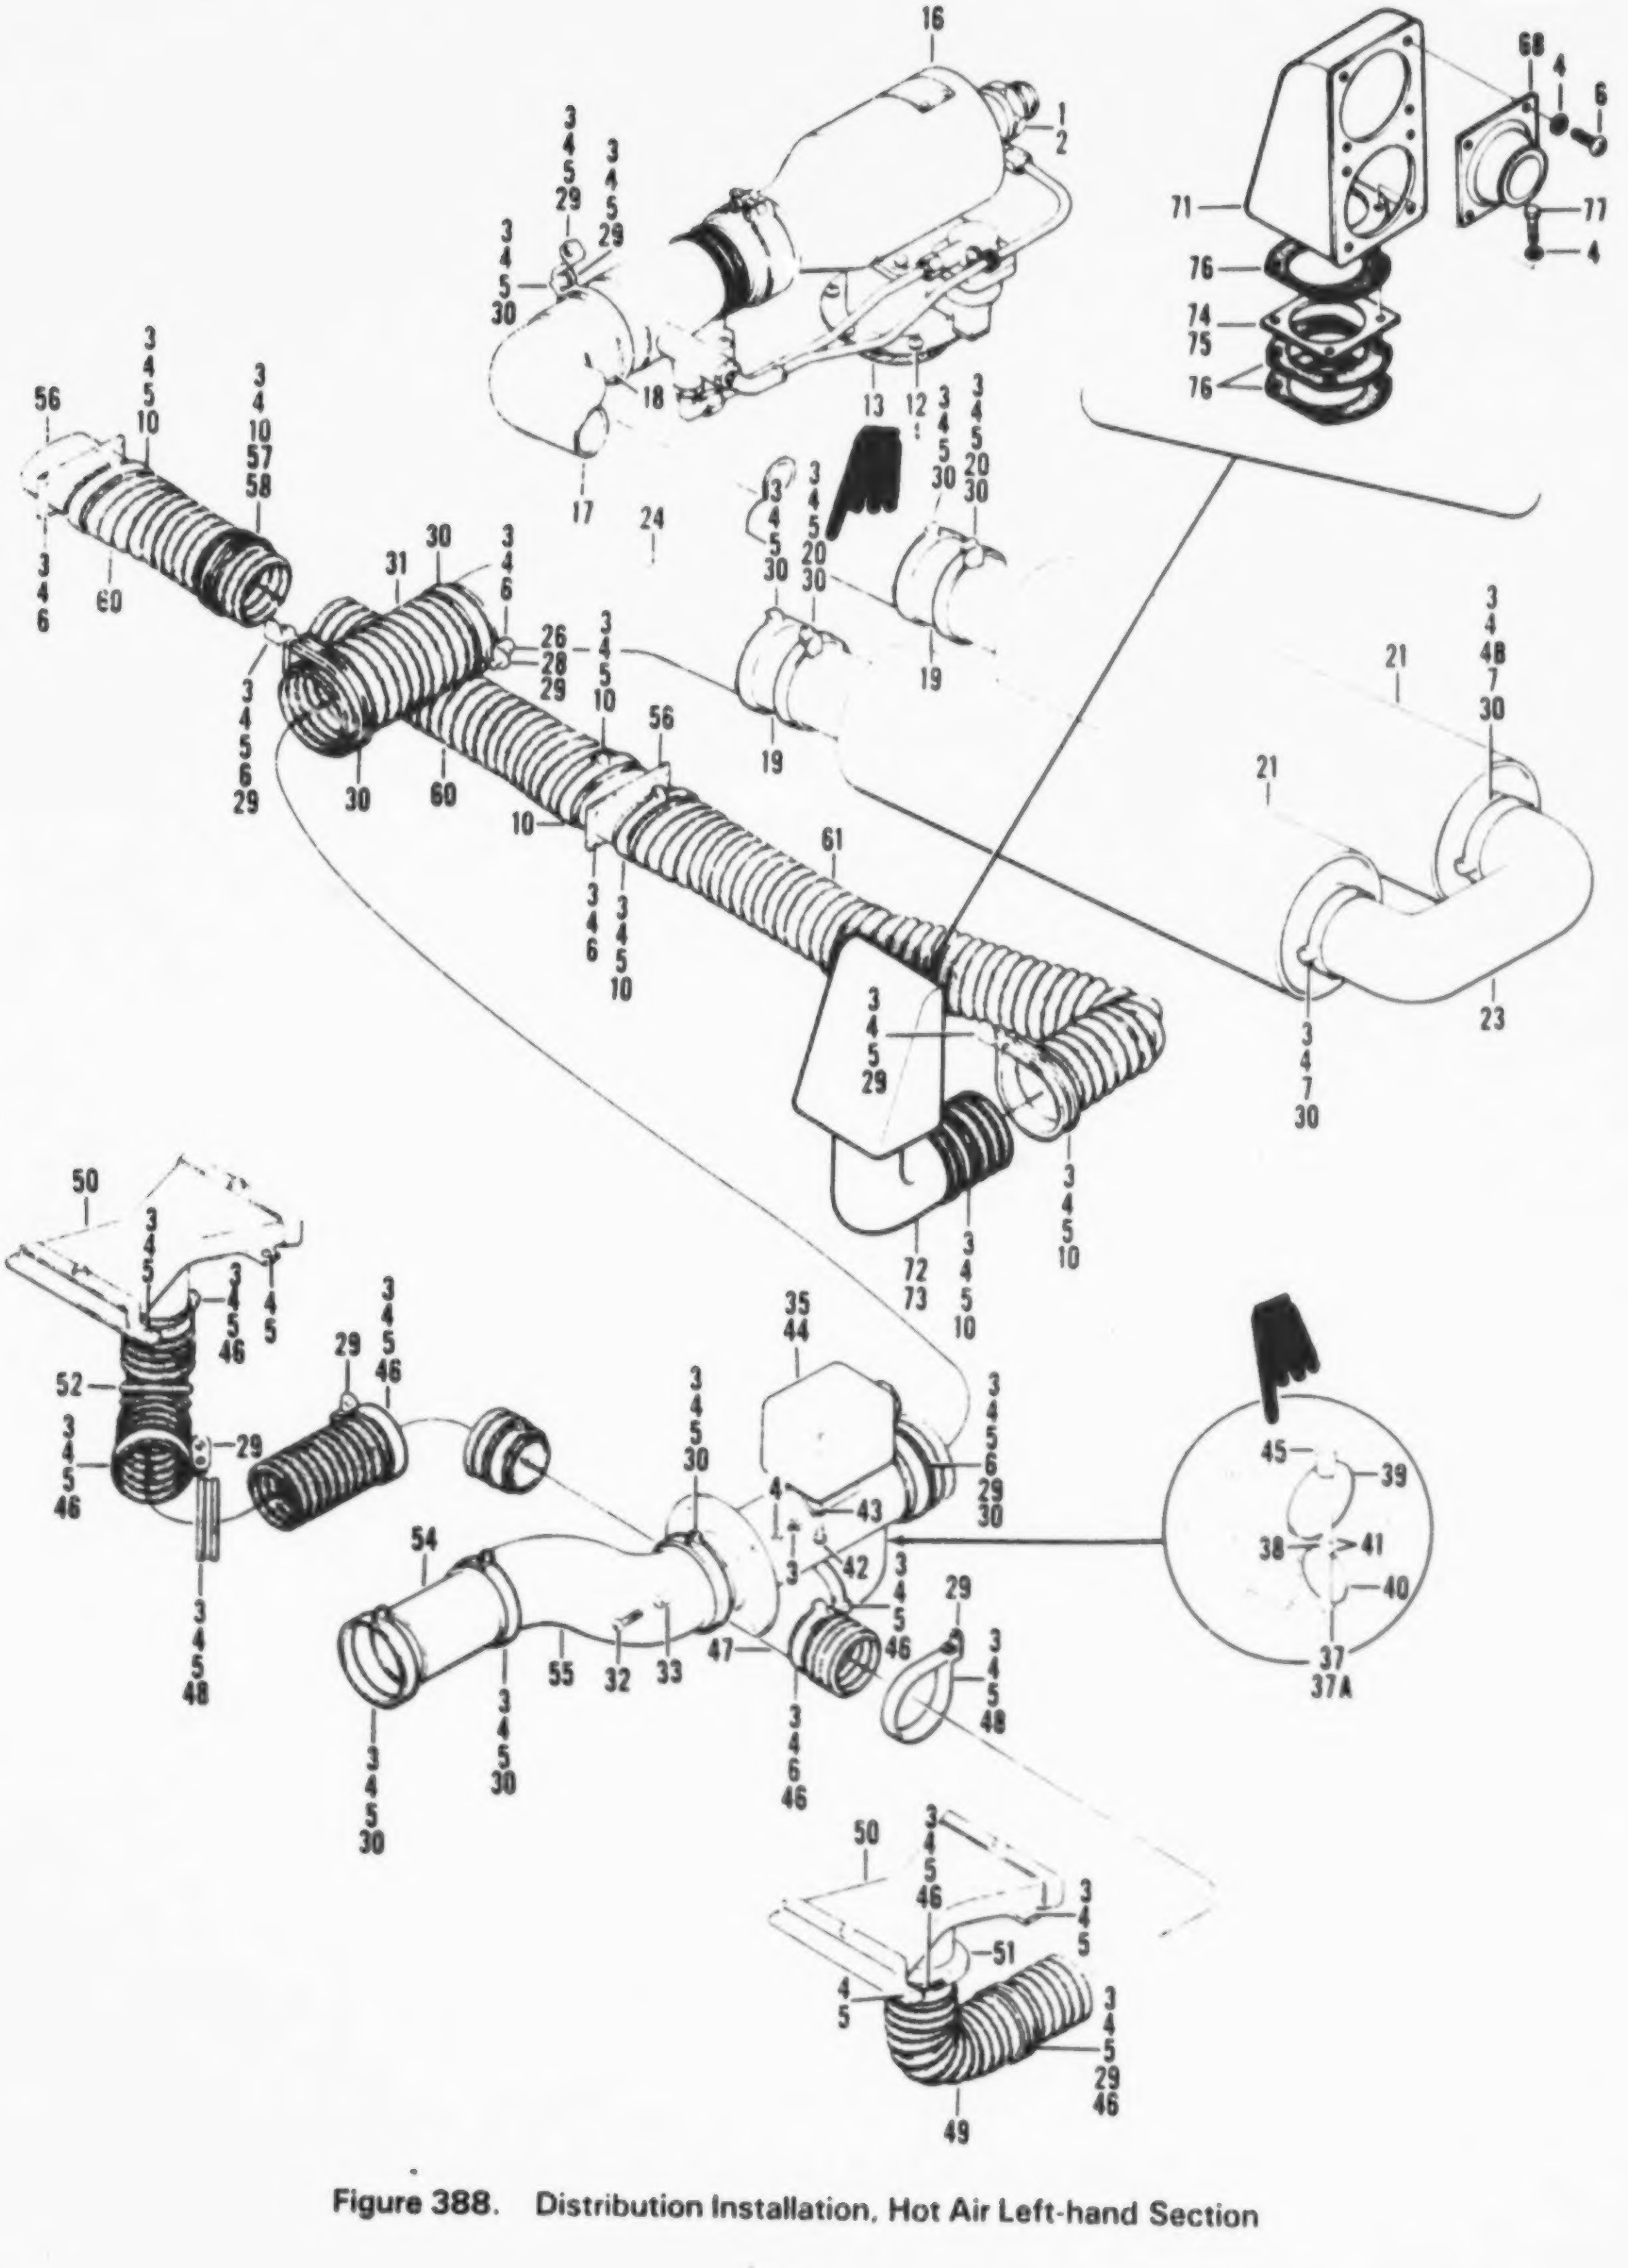
16
1
2
68
4
6
71
77
4
76
74
75
76
3 4 5 29
3 4 5 29
3 4 5 30
18
17
13
12
3 4 5 30
3 4 5 20 30
24
13 4 5 30
3 4 5 20 30
19
19
56
3 4 5 10
3 4 10 57 58
3 4 6
60
31
30
3 4 6
26
28
29
3 4 5 10
3 4 5 6 29
30
60
56
10
3 4 6
3 4 5 10
61
21
3 4 48 7 30
21
23
3 4 7 30
3 4 5 29
3 4 5 10
72 73
3 4 5 10
50
3 4 5
3 4 5 46
3 4 5
52
3 4 5 46
29
29
3 4 5 46
3 4 5 48
35 44
3 4 5 30
3 4 5 6 29 30
4
43
3
42
45
39
38
41
40
37 37A
54
55
32
33
47
3 4 5 46
29
3 4 5 48
3 4 6 46
3 4 5 30
3 4 5 30
50
3 4 5 46
3 4 5
51
4 5
3 4 5 29 46
49

Figure 388. Distribution Installation, Hot Air Left-hand Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
388		XCFZZ		97499	204-070-169-29	DISTRIBUTION INSTL HOT AIR, AFT-LH SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA........UHC,UHM	EA	1
388	1	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON........UHB,UHC,UHM	EA	1
388	2	PAOZZ	5310-00-163-4356	88044	AN960PD216L	.WASHER,FLAT........UHB,UHC,UHM	EA	1
388	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON........UHB,UHC,UHM	EA	V
388	4	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHB,UHC,UHM	EA	V
388	5	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE........UHB,UHC,UHM	EA	V
388	6	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE........UHB,UHC,UHM	EA	V
388	7	PAOZZ	5365-00-580-4634	80205	NAS43DD3-96	.SPACER,SLEEVE........UHB	EA	2
388	10	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP........UHB,UHC,UHM	EA	7
388	12	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........UHB,UHC,UHM	EA	6
388	13	PAOZZ	1660-00-807-7807	97499	204-070-056-1	.SCREEN ASSY,MIXING VALVE........UHB,UHC,UHM	EA	1
388	16	PAODD	1660-00-762-9781	97499	204-072-475-1	.VALVE ASSY,MIXING SEE TM55-1660-234-40 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
388	17	PAODD	1660-00-876-6756	97499	204-070-057-1	.DUCT ASSEMBLY........UHB,UHC,UHM	EA	1
388	18	XDOZZ		80205	NAS521-24-8	..SLEEVE,SEAL,COUPLER........UHB,UHC,UHM	EA	1
388	19	PAOZZ	5330-00-543-7033	80205	NAS521-24-10	.SLEEVE,SEAL,COUPLER........UHB,UHC,UHM	EA	2
388	20	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE........UHB,UHC,UHM	EA	2
388	21	PAOZZ	1660-00-740-6511	89513	82C01	.SUPPRESSOR,HEATER, AIR NOISE........UHB,UHC,UHM	EA	2
388	23	PAOZZ	1660-00-986-9924	97499	204-072-452-1	.BEND,BLEED AIR........UHC,UHM	EA	1
388	24	PAOZZ	1660-00-986-9923	97499	204-072-451-1	.ELBOW,HEAT CONTROL........UHC,UHM	EA	1
388	26	PAOZZ	5306-00-638-5777	88044	AN3H35A	.BOLT,MACHINE........UHB,UHC,UHM	EA	1
388	28	XDOZZ		80205	NAS43HT3-208	.SPACER,SLEEVE........UHB,UHC,UHM	EA	1
388	29	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE........UHB,UHC,UHM	EA	V
388	30	PAOZZ	5340-00-548-8207	81996	EAB700-48	.CLAMP,LOOP........UHB,UHC,UHM	EA	13
388	31	PAOZZ	4720-00-955-7628	97499	70-001B12F2722	.HOSE,AIR DUCT........UHB	EA	1
388	32	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE........UHB,UHC,UHM	EA	4
388	33	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE........UHB,UHC,UHM	EA	4
388	35	PAOFF	1660-00-070-9344	97499	204-070-181-7	.REGULATOR,AIR FLOW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
388	37	PAFZZ	5310-00-167-2399	88044	AN960PD516	..WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
388	37A	PAOZZ	5315-00-282-1225	88044	AN381-2-7	..PIN,COTTER........UHC,UHM	EA	2
388	38	PAFZZ	1660-00-893-1705	97499	204-070-186-1	..SHAFT,STRAIGHT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
388	39	PBFZZ	1660-00-484-8718	97499	204-070-184-7	..FLAPPER ASSY,VALVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
388	40	PAFZZ	1660-00-722-3969	97499	204-070-183-1	..FLAPPER ASSY,VALVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
388	41	PAFZZ	5310-00-184-8980	88044	AN960PD516L	..WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
388	42	PAFZZ	5306-00-182-2056	88044	AN3H3A	..BOLT,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
388	43	PAFZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
388	44	PAFZZ	5945-00-718-6862	81840	A3E153-001	..SOLENOID........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
388	45	MFFZZ	DELETED	97499	204-070-185-1	..CONNECTOR,VALVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
388	46	PBOZZ	5340-00-985-4580	81996	EAB700031	.CLAMP,LOOP........UHB,UHC,UHM	EA	7
388	47	PAOZZ	1660-00-735-1009	97499	204-070-193-1	.TEE,BLEED AIR........UHB,UHC,UHM	EA	1
388	48	PAOZZ	5340-00-993-5475	81996	EAB700D34	.CLAMP,LOOP........UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
388	49	PAOZZ	4720-00-956-9917	97499	70-001B8F5623	.HOSE,AIR DUCT	UHB,UHC,UHM	EA	1
388	50	PAOZZ	1660-00-987-5158	97499	204-072-429-9	REGISTER ASSY,HEAT	UHC,UHM	EA	2
388	51	PAOZZ	1660-00-730-6974	97499	204-070-228-1	ADAPTER ASSEMBLY	UHB,UHC,UHM	EA	1
388	52	PAOZZ	4720-00-845-0951	97499	70-001B8F10223	HOSE,AIR DUCT	UHB,UHC,UHM	EA	1
388	54	XDOZZ		80205	NAS521-24-13	HOSE,AIR DUCT	UHB,UHC,UHM	EA	1
388	55	PAOZZ	1560-00-986-9942	97499	204-072-457-1	TUBE,BLEED AIR	UHB,UHC,UHM	EA	1
388	56	PAOZZ	1660-00-918-1521	97499	204-072-430-3	CONNECTOR,AFT,CABIN HEATING	UHB,UHC,UHM	EA	2
388	57	PAOZZ	5305-00-995-3444	96906	MS35207-266	SCREW,MACHINE	UHB,UHC,UHM	EA	4
388	58	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE	UHB,UHC,UHM	EA	4
388	60	PAOZZ	4720-00-989-0554	97499	70-004A10F5323	HOSE,AIR DUCT	UHB,UHC,UHM	EA	1
388	61	PAOZZ	4720-00-846-0245	80205	NAS1375A10SA12B	HOSE,AIR DUCT	UHB	EA	1
388	68	PAOZZ	1560-00-070-4606	97499	204-072-465-1	VALVE ASSEMBLY,AIR	UHB,UHC,UHM	EA	2
388	71	PAOZZ	1560-00-912-1178	97499	204-072-420-5	.DUCT ASSEMBLY	UHB,UHC,UHM	EA	2
388	72	PAOZZ	1560-00-760-3311	97499	204-072-472-1	.CONNECTOR	UHC,UHM	EA	1
388	73	PAOZZ	1560-00-759-9933	97499	204-072-472-1	.CONNECTOR	UHC,UHM	EA	1
388	74	MFOZZ		97499	205-070-416-9	ORIFICE USBL EFF 63-8500 & SUBSEQUENT	UHB,UHC,UHM	EA	1
388	75	MFOZZ		97499	205-070-416-11	ORIFICE	UHC,UHM	EA	1
388	76	PAOZZ	5330-00-905-8738	97499	205-070-412-1	GASKET	UHC,UHM	EA	3
388	77	PAFZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE	UHC,UHM	EA	8

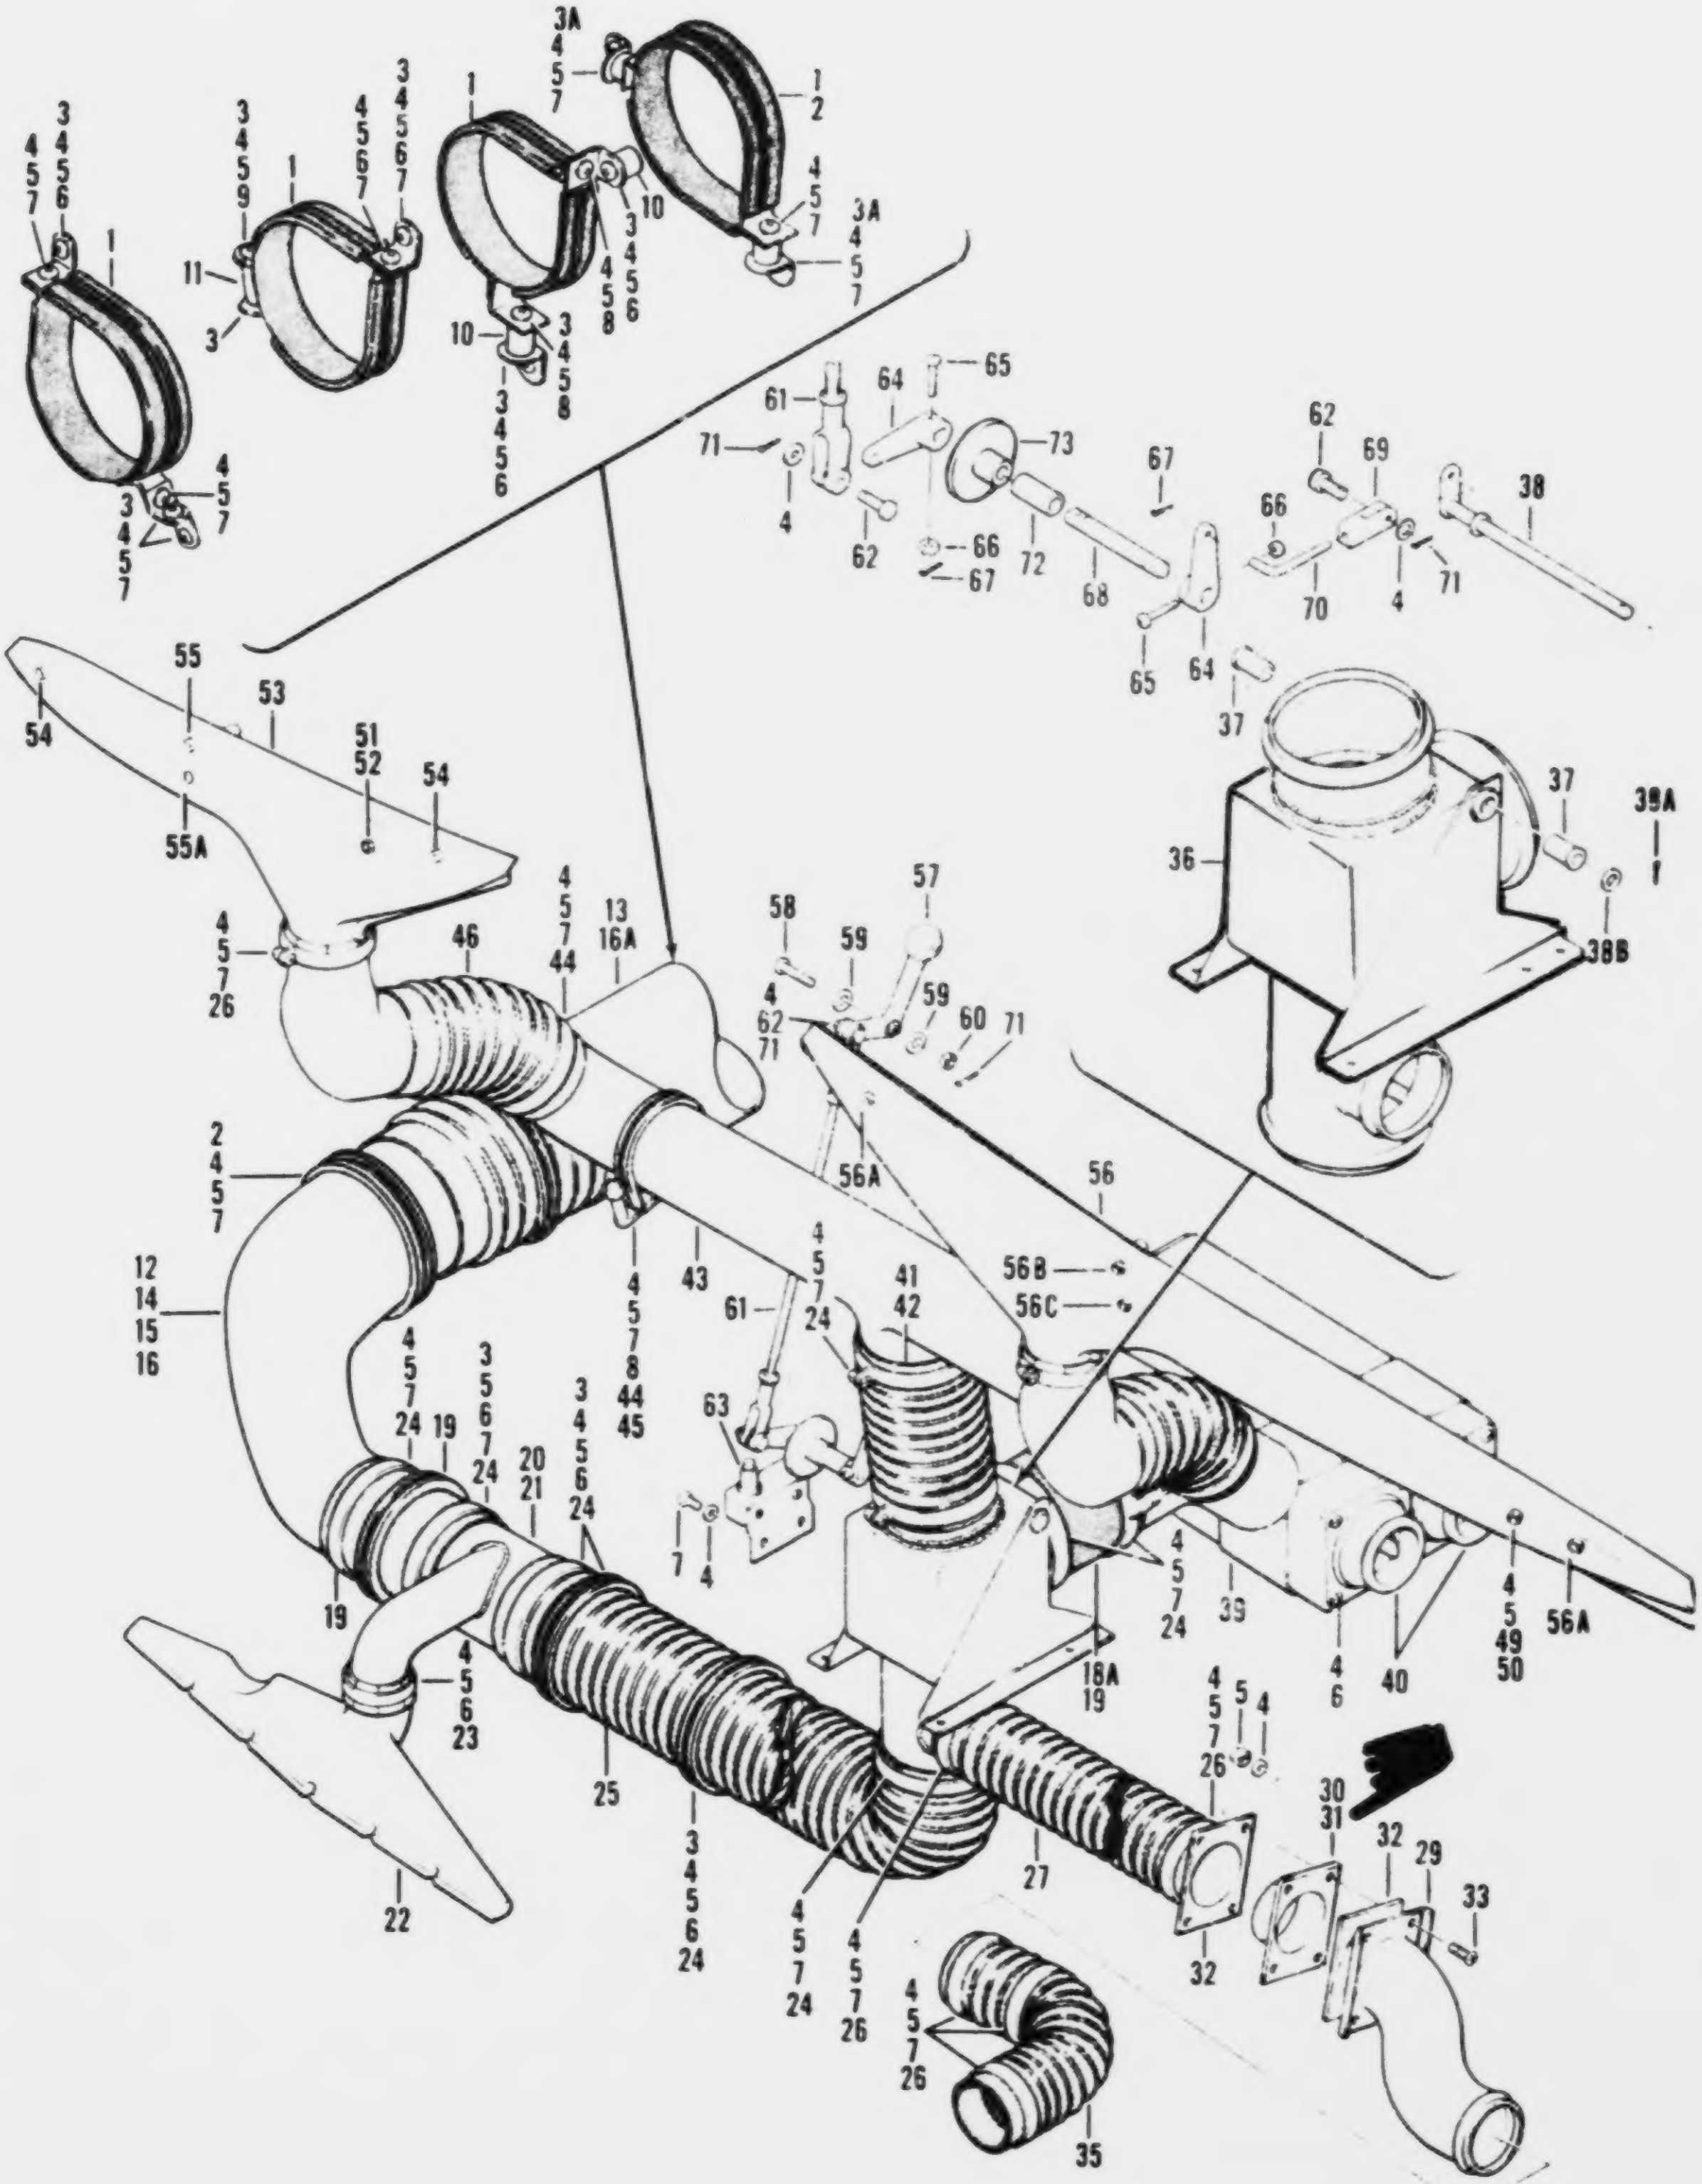
3A 4 5 7
1 2
3 4 5 6 7
4 5 6 7
3 4 5 9
1
3 4 5 6
4 5 7
1
11
3
10
3 4 5 6
4 5 8
10
3 4 5 8
3 4 5 6
4 5 7
3A 4 5 7
3 4 5 7
4 5 7
65
64
61
71
4
62
73
66
67
72
68
67
62
69
66
70
4
71
38
65
64
37
36
37
39A
38B
55
53
54
51 52
54
55A
4 5 7 26
46
4 5 7 44
13 16A
58
57
59
4 62 71
59
60
71
2 4 5 7
12 14 15 16
56A
56
43
4 5 7 8 44 45
4 5 7 24
61
41 42
56B
56C
4 5 7 24
19
3 5 6 7 24
20 21
3 4 5 6 24
63
7
4
19
4 5 6 23
25
22
3 4 5 6 24
4 5 7 24
39
18A 19
4 5 7 24
4 6
40
4 5 49 50
56A
4 5 7 26
5 4
30 31
27
32
29
33
32
4 5 7 24
4 5 7 26
4 5 7 26
35

Figure 389. Distribution System Installation, Forward Section

(1) ILLUSTRATION (A) FIG NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
389		XCFZZ		97499	204-072-417-1	DISTRIBUTION SYSTEM INSTL USBL EFF 65-9416 & SUBSEQUENT SEE FIG 6 FOR NHA	UHC,UHM	EA	1
389		XCFZZ		97499	205-072-400-1	DISTRIBUTION SYSTEM INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
389		XCFZZ		97499	205-072-400-3	DISTRIBUTION SYSTEM INSTL USBL EFF 66-746 THRU 66-16033 SEE FIG 7 FOR NHA	UHE,UHH,UHV UHX	EA	1
389		XCFZZ		97499	205-072-400-7	DISTRIBUTION SYSTEM INSTL USBL EFF 66-16034 THRU 66-16867 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
389		XCFZZ		97499	205-072-400-5	DISTRIBUTION SYSTEM INSTL USBL EFF 66-16868 AND SUBSEQUENT SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
389	1	MFOZZ	5340-00-758-1424	97499	204-070-048-1	CLAMP,LOOP 4 EA U/O PN 205-072-400-1,3,5 AND-7,3 EA U/O PN 204-072-417-1	UHC,UHE,UHH UHM,UHV,UHX	EA	4
389	2	PAOZZ	5340-00-548-8525	81996	EAB700-64	CLAMP,LOOP	UHC,UHM	EA	2
389	3	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE	UHC,UHE,UHH,UHM,UHV,UHX	EA	V
389	3A	PAOZZ	1660-00-073-6596	97499	20-032-1	BRACKET U/C PN 205-072-400-5,-7	UHE,UHH,UHV,UHX	EA	2
389	4	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHC,UHE,UHH,UHM UHV,UHX	EA	V
389	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER HEXAGON	UHC,UHE,UHH,UHM,UHV,UHX	EA	V
389	6	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE	UHC,UHE,UHH,UHM,UHV,UHX	EA	V
389	7	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW,MACHINE	UHC,UHE,UHH,UHM,UHV,UHX	EA	V
389	8	PAOZZ	5305-00-993-1848	96906	MS35207-265	SCREW,MACHINE	UHC,UHM	EA	5
389	9	PAOZZ	5305-00-995-3441	96906	MS35207-269	SCREW,MACHINE U/O PN 204-072-417-1	UHC,UHM	EA	1
389	10	PAOZZ	5365-00-293-9800	80205	NAS43D03-24	SPACER,SLEEVE U/O PN 204-072-417-1	UHC,UHM	EA	3
389	11	PAOZZ	5365-00-580-4893	80205	NAS43D03-72	SPACER,SLEEVE U/O PN 204-072-417-1	UHC,UHM	EA	1
389	12	PAOZZ	1660-00-918-0731	97499	204-072-454-5	FITTING,PRESSURE U/O PN 204-072-417-1	UHC,UHM	EA	1
389	13	PAOZZ	4720-00-951-0142	80205	NAS1374A16CA146	.HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
389	14	PAOZZ	4730-00-916-0723	97499	205-070-474-3	.ELBOW,HEATING DUCT	UHC,UHM	EA	1
389	15	AOOOZ	4720-00-950-6844	97499	205-070-525-1	DUCT ASSEMBLY U/O PN 205-072-400-1,-3,-5,-7	UHE,UHH,UHV,UHX	EA	1
389	16	PAOZZ	4730-00-916-0723	97499	205-070-474-3	..ELBOW,HEATING DUCT	UHE,UHH,UHV,UHX	EA	1
389	16A	PAOZZ	4720-00-877-6011	97499	205-070-523-3	.DUCT,AIR DIST	UHE,UHH,UHV,UHX	EA	1
389	18A	XDOZZ	4720-00-752-9433	80205	NAS521-24-14	HOSE,AIR DUCT U/O PN 205-072-400-5	UHE,UHH,UHV,UHX	EA	1
389	19	XDOZZ		80205	NAS521-24-16	.HOSE,AIR DUCT 2 EA U/O PN 204-072-417-1 AND 205-072-400-1, 1 EA U/O PN 205-C72-400-3 AND-7	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	20	PAOZZ	1560-00-912-1167	97499	205-072-401-3	DUCT,LOWER RIGHT U/O PN 204-072-417-1	UHC,UHM	EA	1
389	21	PAOZZ	1560-00-918-0712	97499	205-072-401-1	.TEE,DEFROSTER U/O PN 205-072-400-1,-3,-5,-7	UHE,UHH,UHV,UHX	EA	1
389	22	PAOZZ	1660-00-918-1522	97499	205-072-402-1	.NOZZLE,LOWER DEFROSTER	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	23	PAOZZ	5340-00-247-6221	81996	EAB700026	CLAMP,LOOP	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	24	PAOZZ	5340-00-548-8207	81996	EAB700-48	.CLAMP,LOOP	UHC,UHE,UHH,UHM,UHV,UHX	EA	10
389	25	PBOZZ	4720-00-912-8349	80205	NAS1374A12CA096	.HOSE,AIR DUCT	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	26	PBOZZ	5340-00-989-4580	81996	EAB700031	.CLAMP,LOOP	UHC,UHE,UHH,UHM,UHV,UHX	EA	7
389	27	PBOZZ	4720-00-912-9138	80205	NAS1374A08CA045	.HOSE,AIR DUCT	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	29	PAOZZ	1560-00-949-4583	97499	205-070-492-3	DUCT ASSY,CO-PILOT	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	30	MFOZZ		97499	205-070-493-3	.ORIFICE,FOOT WARMER CC-PILOT U/O PN 204-072-417-1	UHC,UHM	EA	1
389	31	MFOZZ	DELETED	97499	205-070-493-1	.ORFICE,FOOT WARMER CO-PILOT U/O PN 205-072-400-1,-3,-5,-7		EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNI
							UHE,UHH,UHV,UHX		
389	32	MFOZZ	5330-00-470-8751	97499	205-070-494-1	.GASKET	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	33	PAOZZ	5305-00-989-7[illegible]	96906	MS35207-264	.SCREW,MACHINE	UHC,UHE,UHH,UHM,UHV,UHX	EA	
389	35	PBOZZ	4720-00-912-9141	80205	NAS1374C08CA030	.HOSE,AIR DUCT	UHC,UHE,UHH,UHM,UHV,UHX	EA	
389	36	PAOOO	1560-00-912-1170	97499	205-070-497-1	.DUCT ASSEMBLY,CABIN	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	37	PAOZZ	3120-00-912-9136	97499	22-006B16-48-16	..BUSHING,SLEEVE	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	38	PAOZZ	1660-00-918-2439	97499	204-072-401-3	..ROD ASSEMBLY,CABIN	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	38A	PAOZZ	5315-00-815-1405	88044	AN381-2-6	..PIN	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	38B	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	39	PAOZZ	1560-00-912-1168	97499	205-070-498-1	.DUCT ASSEMBLY,PILOT	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	40	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY,AIR	UHC,UHE,UHH,UHM,UHV,UHX	EA	4
389	41	XDOZZ		80205	NAS521-24-22	HOSE,AIR DUCT U/O PN 204-072-417-1	UHE,UHH,UHV,UHX,UHC,UHM	EA	1
389	42	PAOZZ	4720-00-950-9919	80205	NAS1374A12CA015	.HOSE,AIR DUCT U/O PN 205-072-400-1,-3,-5,-7	UHE,UHH,UHV,UHX	EA	1
389	43	PAOZZ	1560-00-912-1177	97499	204-072-432-3	.DUCT,HEATING AND DEFROSTING	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	44	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP	UHC,UHE,UHH,UHM,UHV,UHX	EA	4
389	45	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	46	PAOZZ	1560-00-912-1172	97499	204-072-746-3	.DUCT ASSEMBLY	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	49	PAOZZ	5306-00-182-2064	88044	AN3H13A	.BOLT,MACHINE 3 EA U/O PN 205-072-400-5 AND -7, 2 EA U/O PN 205-072-400-1 -3 AND 204-072-417-1	UHC,UHE,UHH,UHM,UHV,UHX	EA	3
389	50	PAOZZ	5306-00-182-2005	88044	AN3H14A	.BOLT,MACHINE 1 EA U/O PN 205-072-400-5 AND -7, 2 EA U/O PN 205-072-400-1, -3 AND 204-072-417-1	UHC,UHE,UHH,UHM,UHV,UHX	EA	[illegible]
389	51	PAOZZ	5306-00-182-2011	88044	AN3H22A	.BOLT,MACHINE	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	52	PAOZZ	5306-00-282-5821	88044	AN3H26A	.BOLT,MACHINE	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	53	PAOOO	1660-00-918-1518	97499	204-072-450-12	.NOZZLE ASSY, DEFROSTER	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	54	PBOZZ	5365-00-768-2747	80205	NAS43DD3-62	..SPACER,SLEEVE	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	55	PAOZZ	5365-00-830-[illegible]3	80205	NAS43DD3-96	..SPACER,SLEEVE DEFROSTER	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	55A	PAOZZ	5365-00-915-2403	80205	NAS43DD3-119	..SPACER,SLEEVE	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	56	PAOOO	1660-00-918-1517	97499	204-072-450-11	.NOZZLE ASSY,	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	56A	PBOZZ	5365-00-768-2747	80205	NAS43DD3-62	..SPACER,SLEEVE	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	56B	PBOZZ	5365-00-827-0570	80205	NAS43DD3-86	..SPACER	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	56C	PBOZZ	5365-00-413-4767	80205	NAS43DD3-134	..SPACER	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	57	PAOZZ	1660-00-730-7019	97499	204-070-245-1	.LEVER ASSEMBLY	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	58	PAOZZ	5306-00-151-1971	88044	AN23-19	.BOLT,CLEVIS	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	59	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	60	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,PLAIN,SLOTTED,H.	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	61	PAOZZ	1560-01-135-1786	97499	204-070-244-101	.ROD ASSEMBLY	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	62	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	.PIN,STRAIGHT, HEADLESS	UHC,UHE,UHH,UHM,UHV,UHX	EA	3
389	63	PAOZZ	5930-00-918-0876	97499	205-072-406-1	.SWITCH,SENSITIVE	UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	64	PAOZZ	1660-00-736-1015	97499	204-070-243-1	.ARM,ACTUATING CONTROL	UHC,UHE,UHH,UHM,UHV,UHX	EA	[illegible]
389	65	PAOZZ	5306-00-151-0605	88044	AN21-14	.BOLT,CLEVIS	UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	66	PAOZZ	5310-00-176-8105	88044	AN320-1	.NUT,PLAIN,SLOTTED H.	UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
389	67	PAOZZ	5315-00-855-6805	96906	MS24665-22	.PIN,COTTER............................UHC,UHE,UHH,UHM,UHV,UHX	EA	2
389	68	PAOZZ	1560-00-913-1592	97499	204-072-403-1	.SHAFT,STRAIGHT........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	69	PAOZZ	5340-00-913-0516	97499	204-072-404-1	.CLEVIS,ROD END........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	70	PAOZZ	5306-00-912-9989	97499	204-072-405-1	.BOLT,HOOK.............................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
389	71	PAOZZ	5315-00-234-1855	96906	MS24665-155	.PIN,COTTER............................UHC,UHE,UHH,UHM,UHV,UHX	EA	4
389	72	PAOZZ	5365-00-997-7039	80205	NAS43DD6-61	.SPACER,SLEEVE.........................UHC,UHM,UHE,UHH,UHV,UHX	EA	1
389	73	XCFZZ		97499	204-070-169-1	DISTRIBUTION INSTL NHA 204-070-537 6 FOR NHA...UHB	EA	1

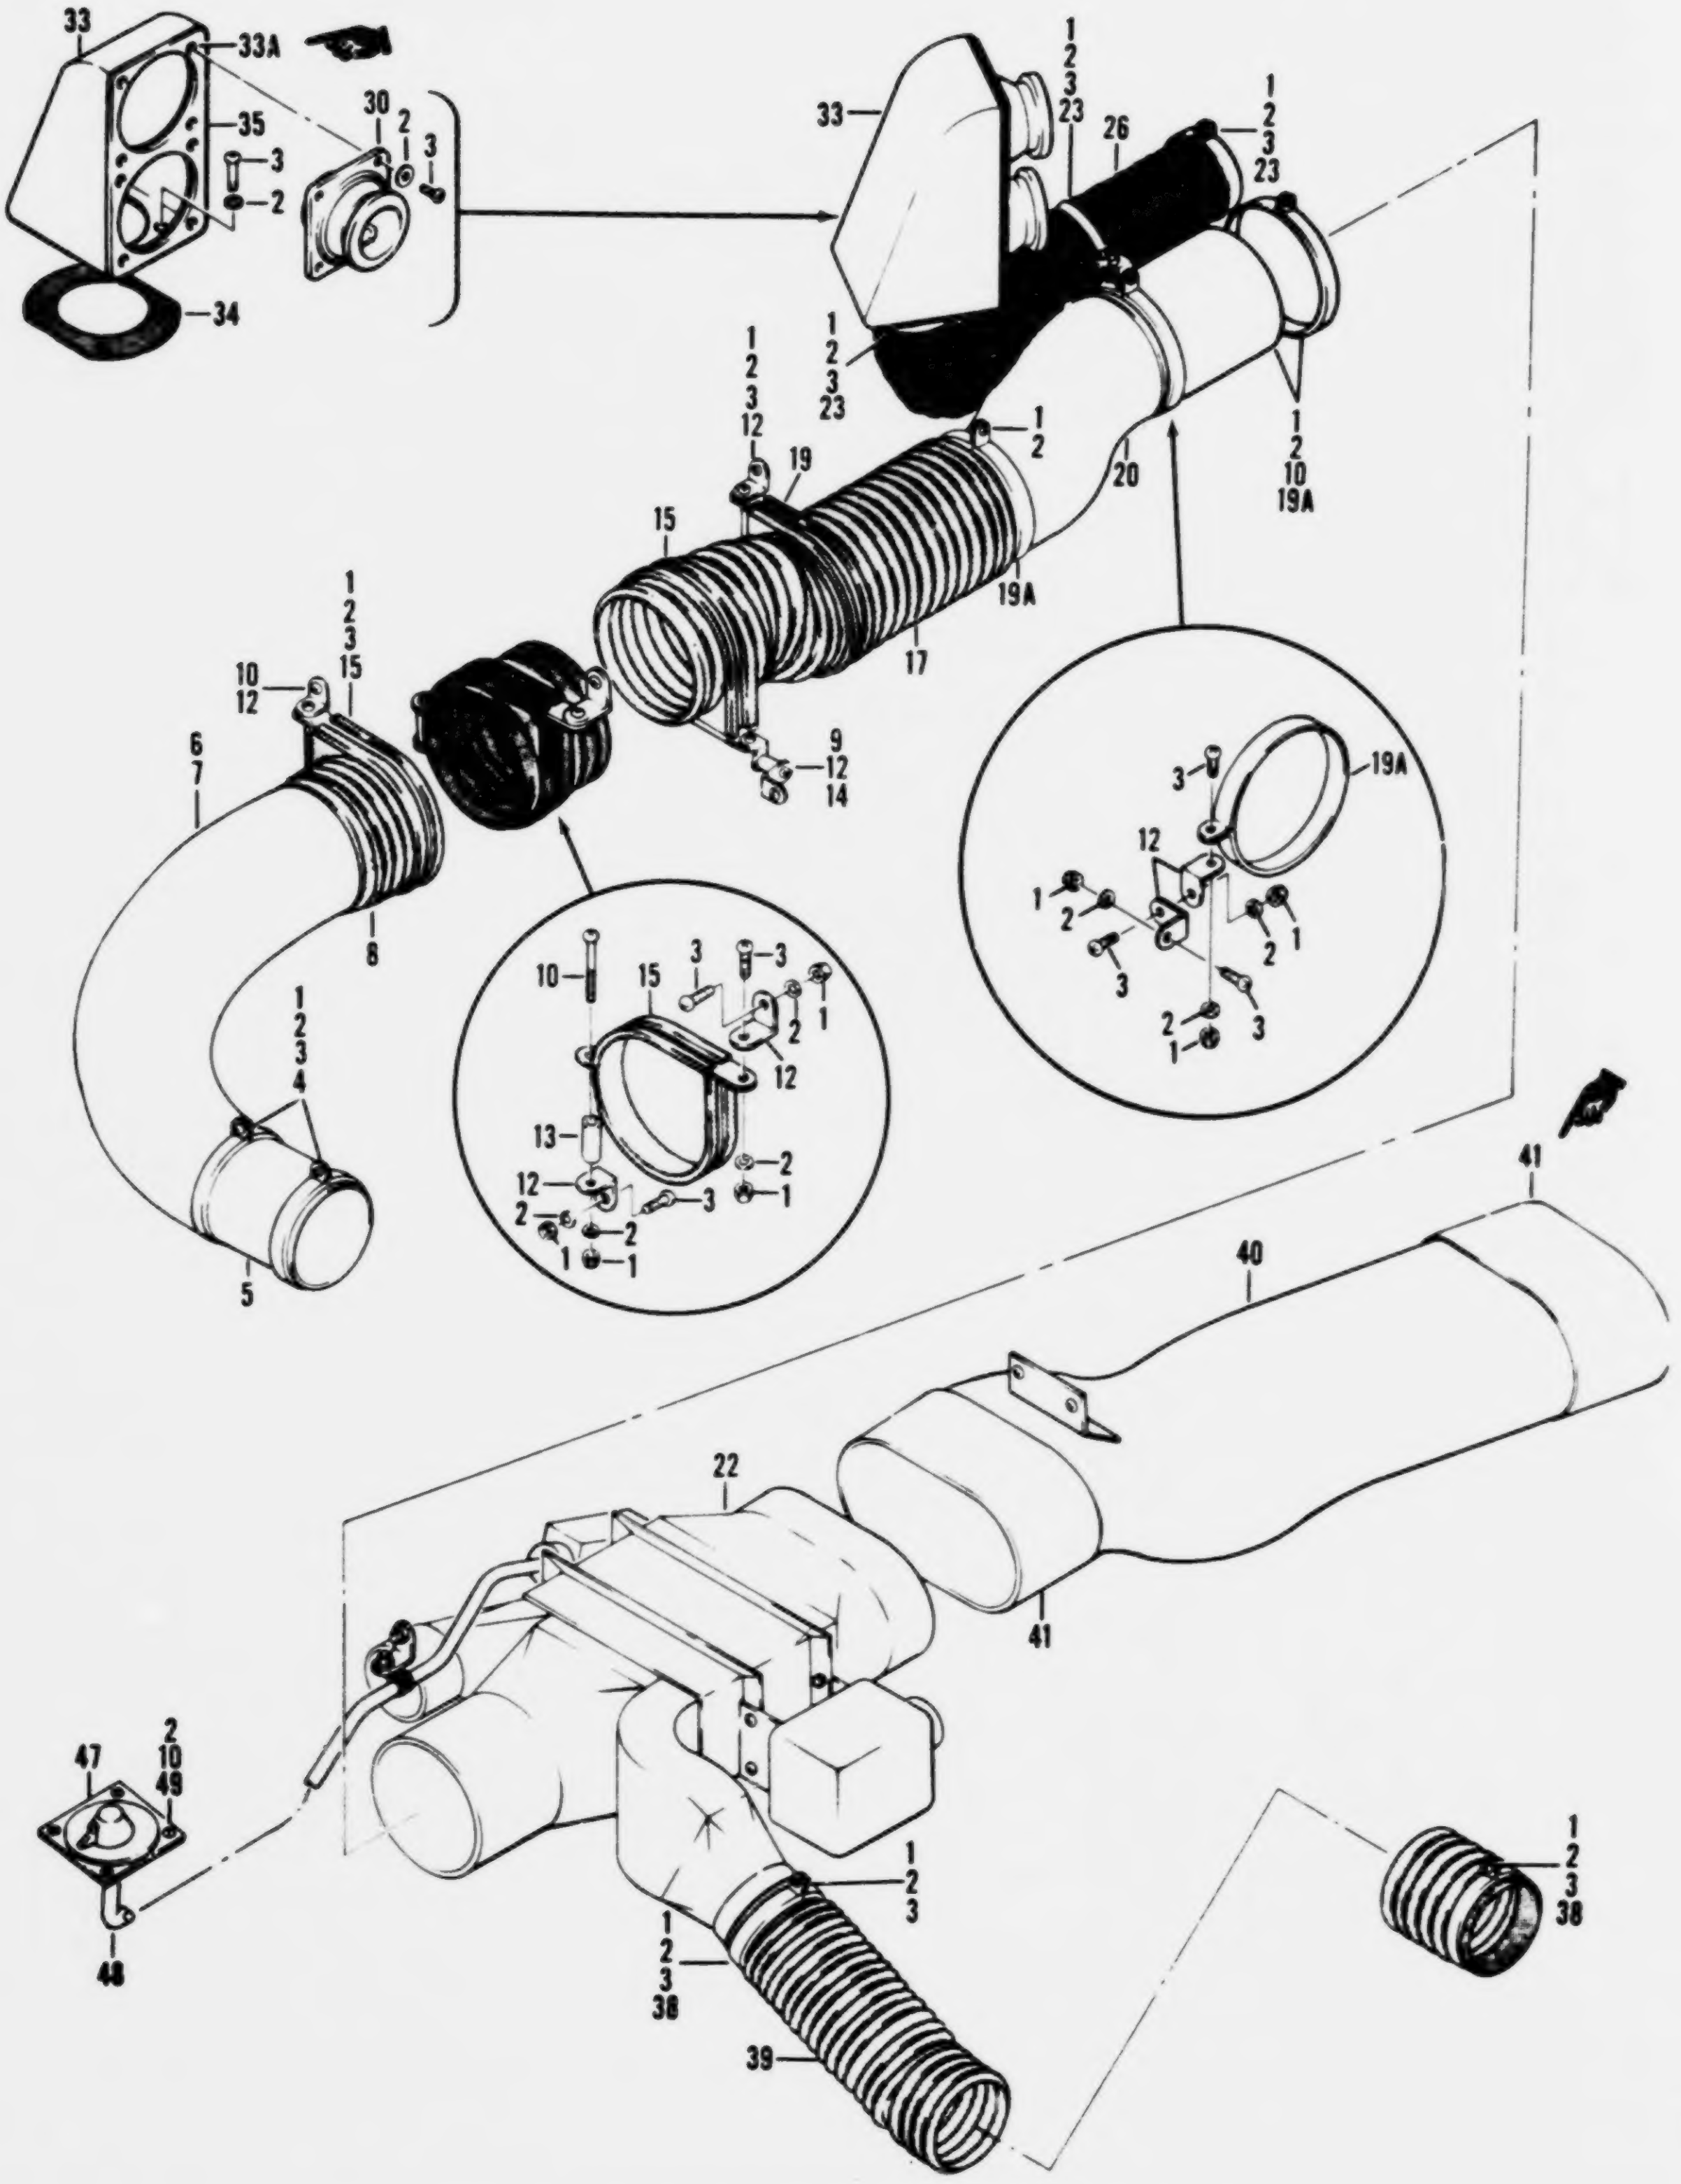
33
33A
35
3
2
34
30
2
3
33
1
2
3
23
26
1
2
3
23
1
2
3
23
1
2
3
12
19
1
2
20
1
2
10
19A
15
19A
17
1
2
3
15
10
12
6
7
9
12
14
8
1
2
3
4
5
10
15
3
3
1
2
12
13
12
2
2
3
2
1
1
1
3
19A
12
1
2
3
2
1
3
2
1
41
40
22
41
47
2
10
49
48
1
2
3
1
2
3
38
39
1
2
3
38

Figure 390. Distribution Installation, Hot Air Aft Right-hand Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
390		XCFZZ		97499	204-070-169-29	DISTRIBUTION INSTL HOT AIR, AFT-RH SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA .... UHC, UHM	EA	1
390	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	. NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON ...... UHB, UHC, UHM	EA	V
390	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	. WASHER, FLAT .... UHB, UHC, UHM	EA	V
390	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	. SCREW, MACHINE .... UHB, UHC, UHM	EA	V
390	4	PAOZZ	5340-00-993-1476	81996	EAB700D46	. CLAMP, LOOP .... UHB, UHC, UHM	EA	2
390	5	XDOZZ		80205	NAS521-24-16	. HOSE, AIR DUCT .... UHB, UHC, UHM	EA	1
390	6	PAOOO	1660-00-918-0731	97499	204-072-454-5	. FITTING, PRESSURE .... UHB, UHC, UHM	EA	1
390	7	PAOZZ	4730-00-918-0723	97499	205-070-474-3	. . ELBOW .... UHC, UHM	EA	1
39C	8	PAOZZ	4720-00-951-0142	80205	NAS1374A16CA146	. HOSE, AIR DUCT .... UHB, UHC, UHM	EA	1
390	9	PAOZZ	5305-00-993-1848	96906	MS35207-265	. SCREW, MACHINE .... UHB, UHC, UHM	EA	3
390	10	PAOZZ	5305-00-990-6444	96906	MS35207-261	. SCREW, MACHINE .... UHB, UHC, UHM	EA	V
39C	12	PAOZZ	5340-00-598-8251	88044	AN743-12	. BRACKET, ANGLE .... UHB	EA	V
390	13	PAOZZ	5365-00-580-4893	80205	NAS43DD3-72	. SPACER, SLEEVE .... UHB, UHC, UHM	EA	1
390	14	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	. SPACER, SLEEVE .... UHB, UHC, UHM	EA	3
390	15	MFOZZ	5340-00-758-1424	97499	204-070-048-1	. CLAMP, LOOP .... UHB, UHC, UHM	EA	3
390	17	PAOZZ	1560-00-912-1175	97499	204-072-456-3	. DUCT, OFFSET, CABIN HEATING .... UHB, UHC, UHM	EA	1
390	19	PAOZZ	5340-00-548-8525	81996	EAB700-64	. CLAMP, LOOP .... UHB, UHC, UHM	EA	1
390	19A	PAOZZ	5340-00-193-0118	88044	AN735D64	. CLAMP, LOOP .... UHC, UHM	EA	3
390	20	PAOZZ	4720-00-843-8274	80205	NAS521-32-18	. HOSE, AIR DUCT .... UHB, UHC, UHM	EA	1
390	22	AFOFF	1660-00-070-6794	97499	204-070-179-7	. VALVE ASSEMBLY HEATING SELECTOR SEE FIG.407 FOR BREAKDOWN .... UHB, UHC, UHM	EA	1
390	23	PAOZZ	5340-00-989-4551	81996	EAB700D32	. CLAMP, LOOP .... UHB, UHC, UHM	EA	3
390	26	PAOZZ	4720-00-730-8290	97499	70-00188F43Z3	. HOSE, AIR DUCT .... UHB, UHC, UHM	EA	1
390	30	PAOZZ	1660-00-070-4606	97499	204-072-465-1	. VALVE ASSEMBLY, AIR .... UHB, UHC, UHM	EA	2
390	33	PAOOO	1560-00-912-1178	97499	204-072-420-5	. DUCT ASSY, AIR DISTRIBUTION .... UHB, UHC, UHM	EA	1
39C	33A	PAOZZ	5310-00-772-3720	96906	MS21075L3	. . NUT, SELF-LOCKING, PLATE .... UHB, UHC, UHM	EA	6
390	34	PAOZZ	5330-00-905-8738	97499	205-070-412-1	. . GASKET .... UHC, UHM	EA	1
39C	35	PAOZZ	5330-00-492-9158	97499	205-070-413-1	. . GASKET .... UHC, UHM	EA	1
390	38	PAOZZ	5340-00-957-1489	81996	EAB700D42	. CLAMP, LOOP .... UHB, UHC, UHM	EA	2
390	39	PAOZZ	4720-00-985-3405	97499	70-004A10F25Z3	. HOSE, AIR DUCT .... UHB, UHC, UHM	EA	1
390	40	PAOOO	1560-00-912-1176	97499	204-072-455-7	. TUBE ASSY, HEATING .... UHB, UHC, UHM	EA	1
390	41	PAOZZ	5330-00-736-1008	97499	204-070-190-1	. . COUPLING, CABIN HEAT .... UHB, UHC, UHM	EA	2
390	47	PAOZZ	1680-00-996-3894	65149	FYLD317-30	. DIAL AND COVER .... UHB, UHC, UHM	EA	1
390	48	PAOZZ	1680-00-075-2009	65149	FYLD243-002	. SHAFT ASSEMBLY, FLEX .... UHB, UHC, UHM	EA	1
390	49	PAOZZ	5310-00-807-1472	96906	MS21042L06	. NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON .... UHB	EA	4

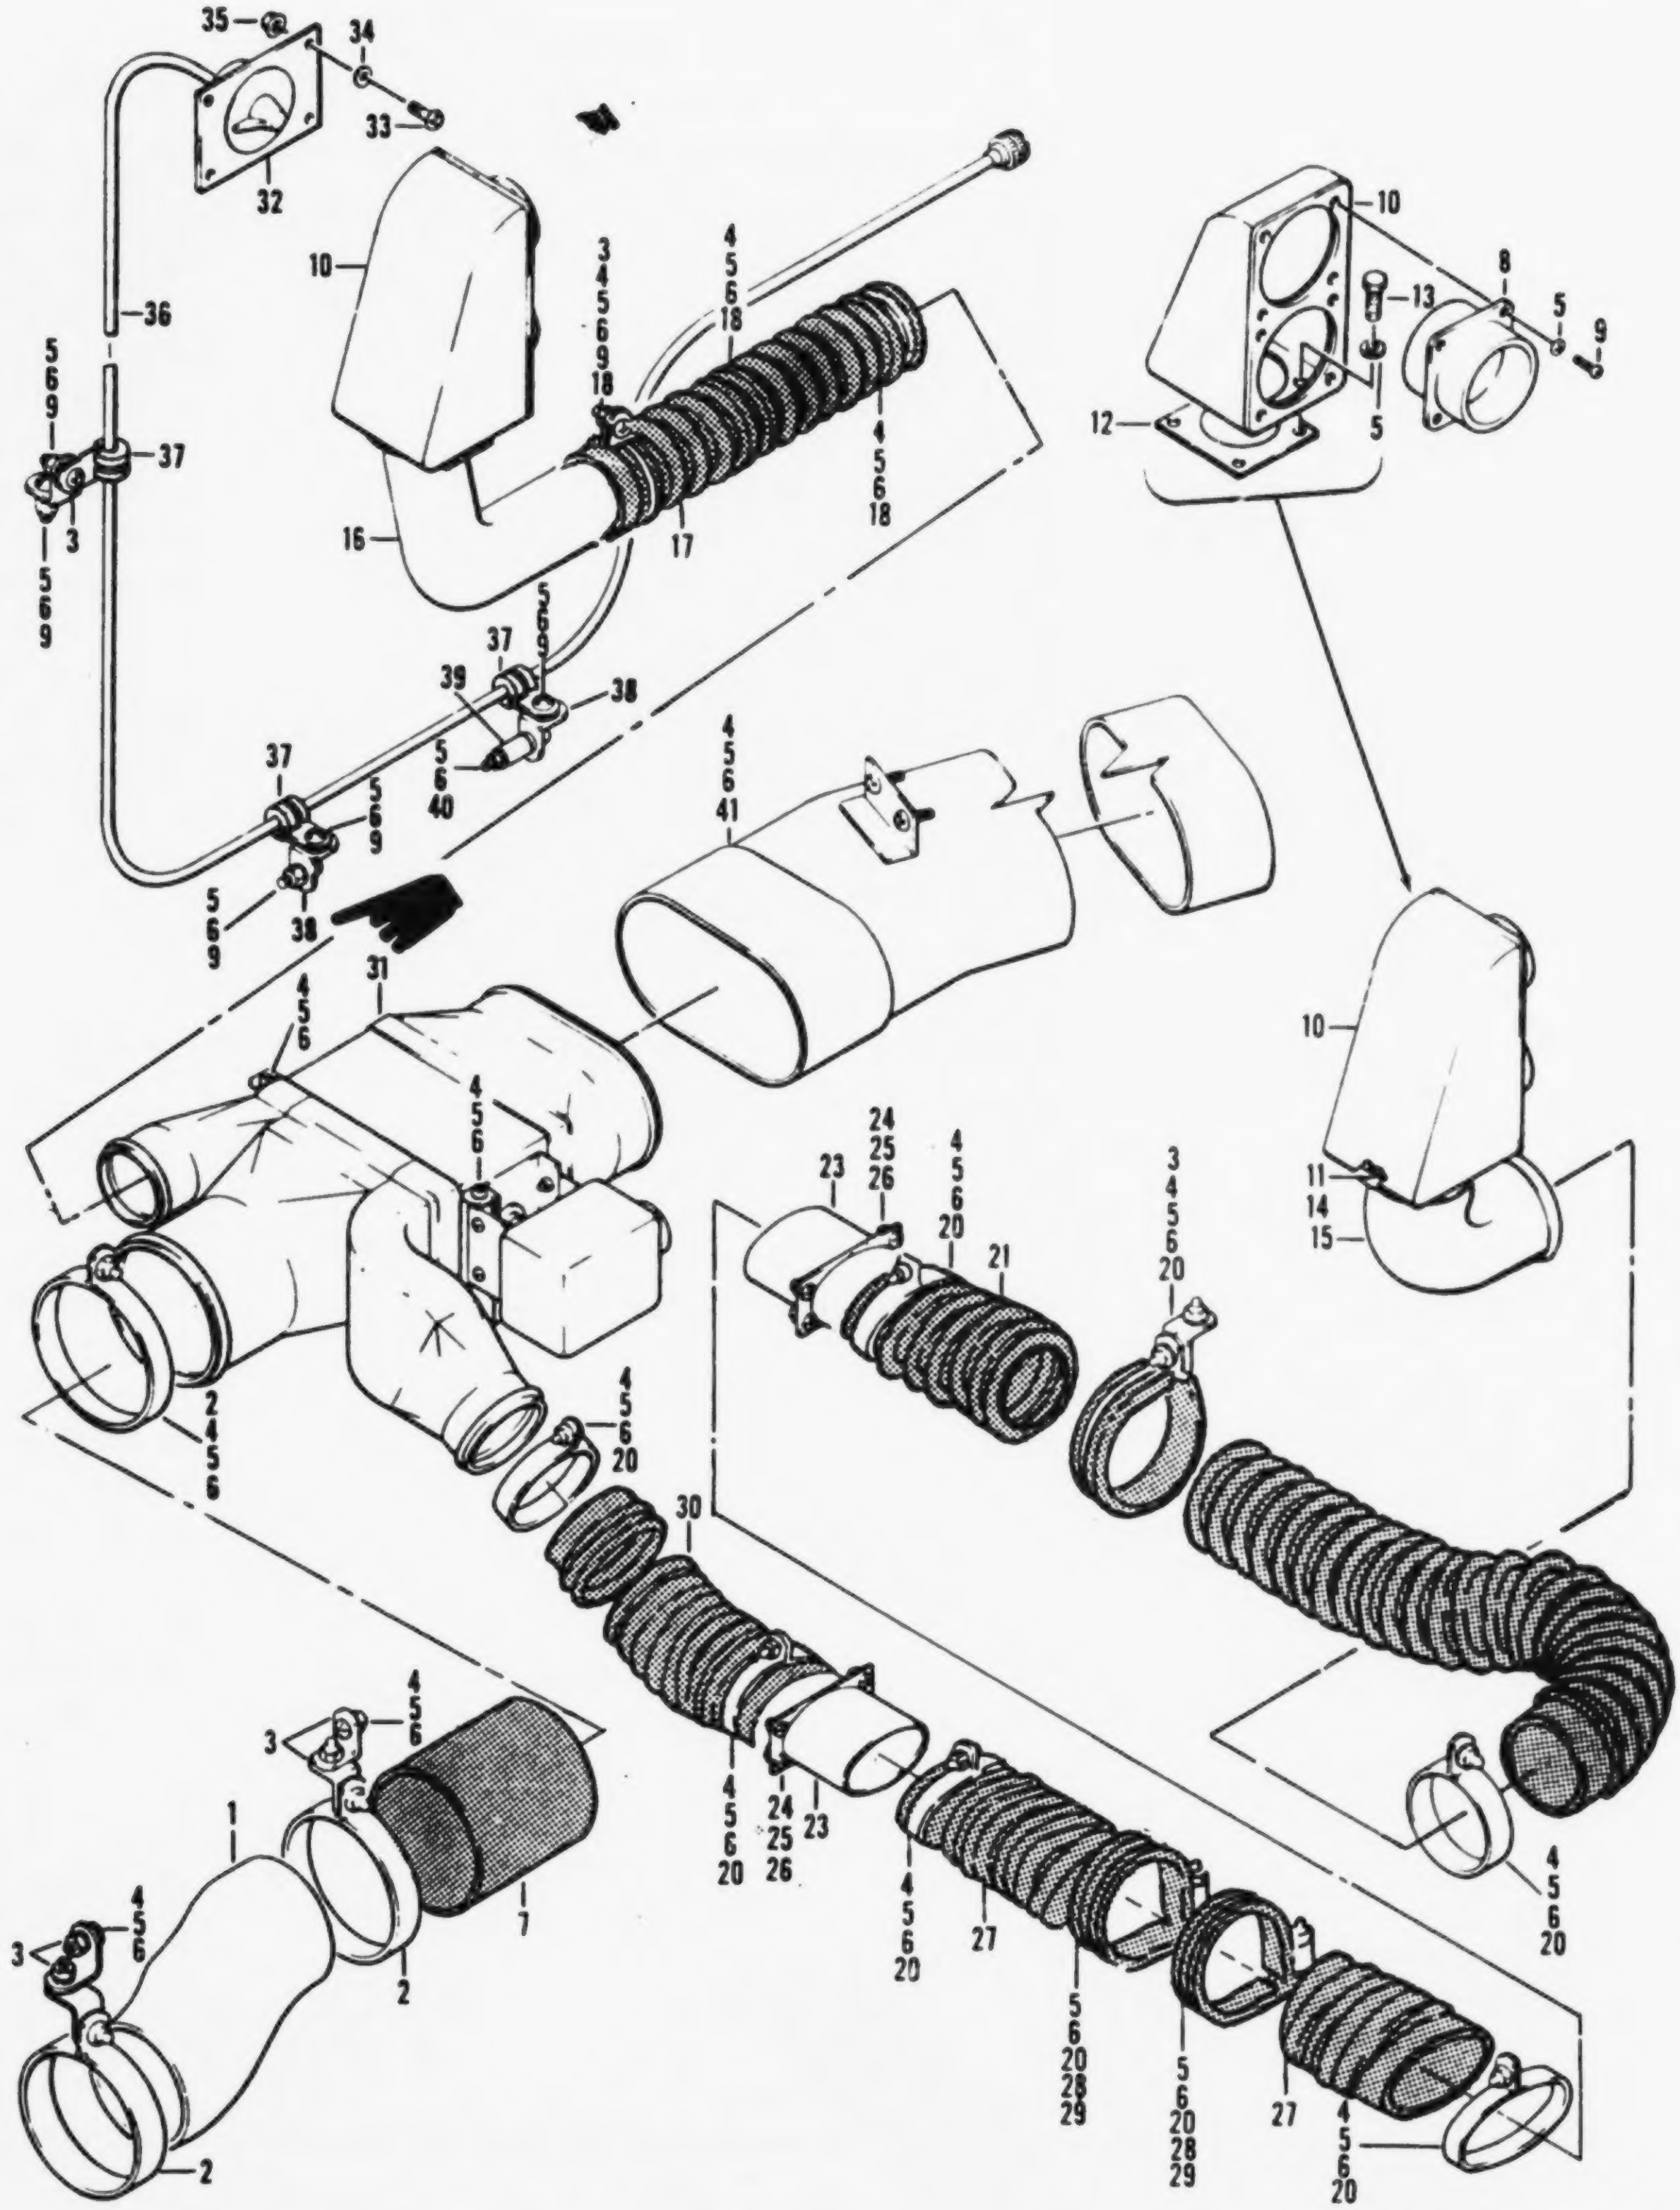
35
34
33
32
36
5 6 9
37
3
5 6 9
10
3 4 5 6 9 18
4 5 6 18
4 5 6 18
16
17
37
5 6 9
39
38
5 6 40
37
5 6 9
5 6 9
38
10
8
13
5
9
12
5
4 5 6 41
31
4 5 6
4 5 6
10
11 14 15
24 25 26
23
4 5 6 20
21
3 4 5 6 20
2 4 5 6
4 5 6 20
30
3
4 5 6
1
7
2
3
4 5 6
2
4 5 6 20
24 25 26
23
4 5 6 20
27
5 6 20 28 29
5 6 20 28 29
27
4 5 6 20
4 5 6 20

Figure 391. Distribution System Installation, Aft Section (Sheet 1 of 2)

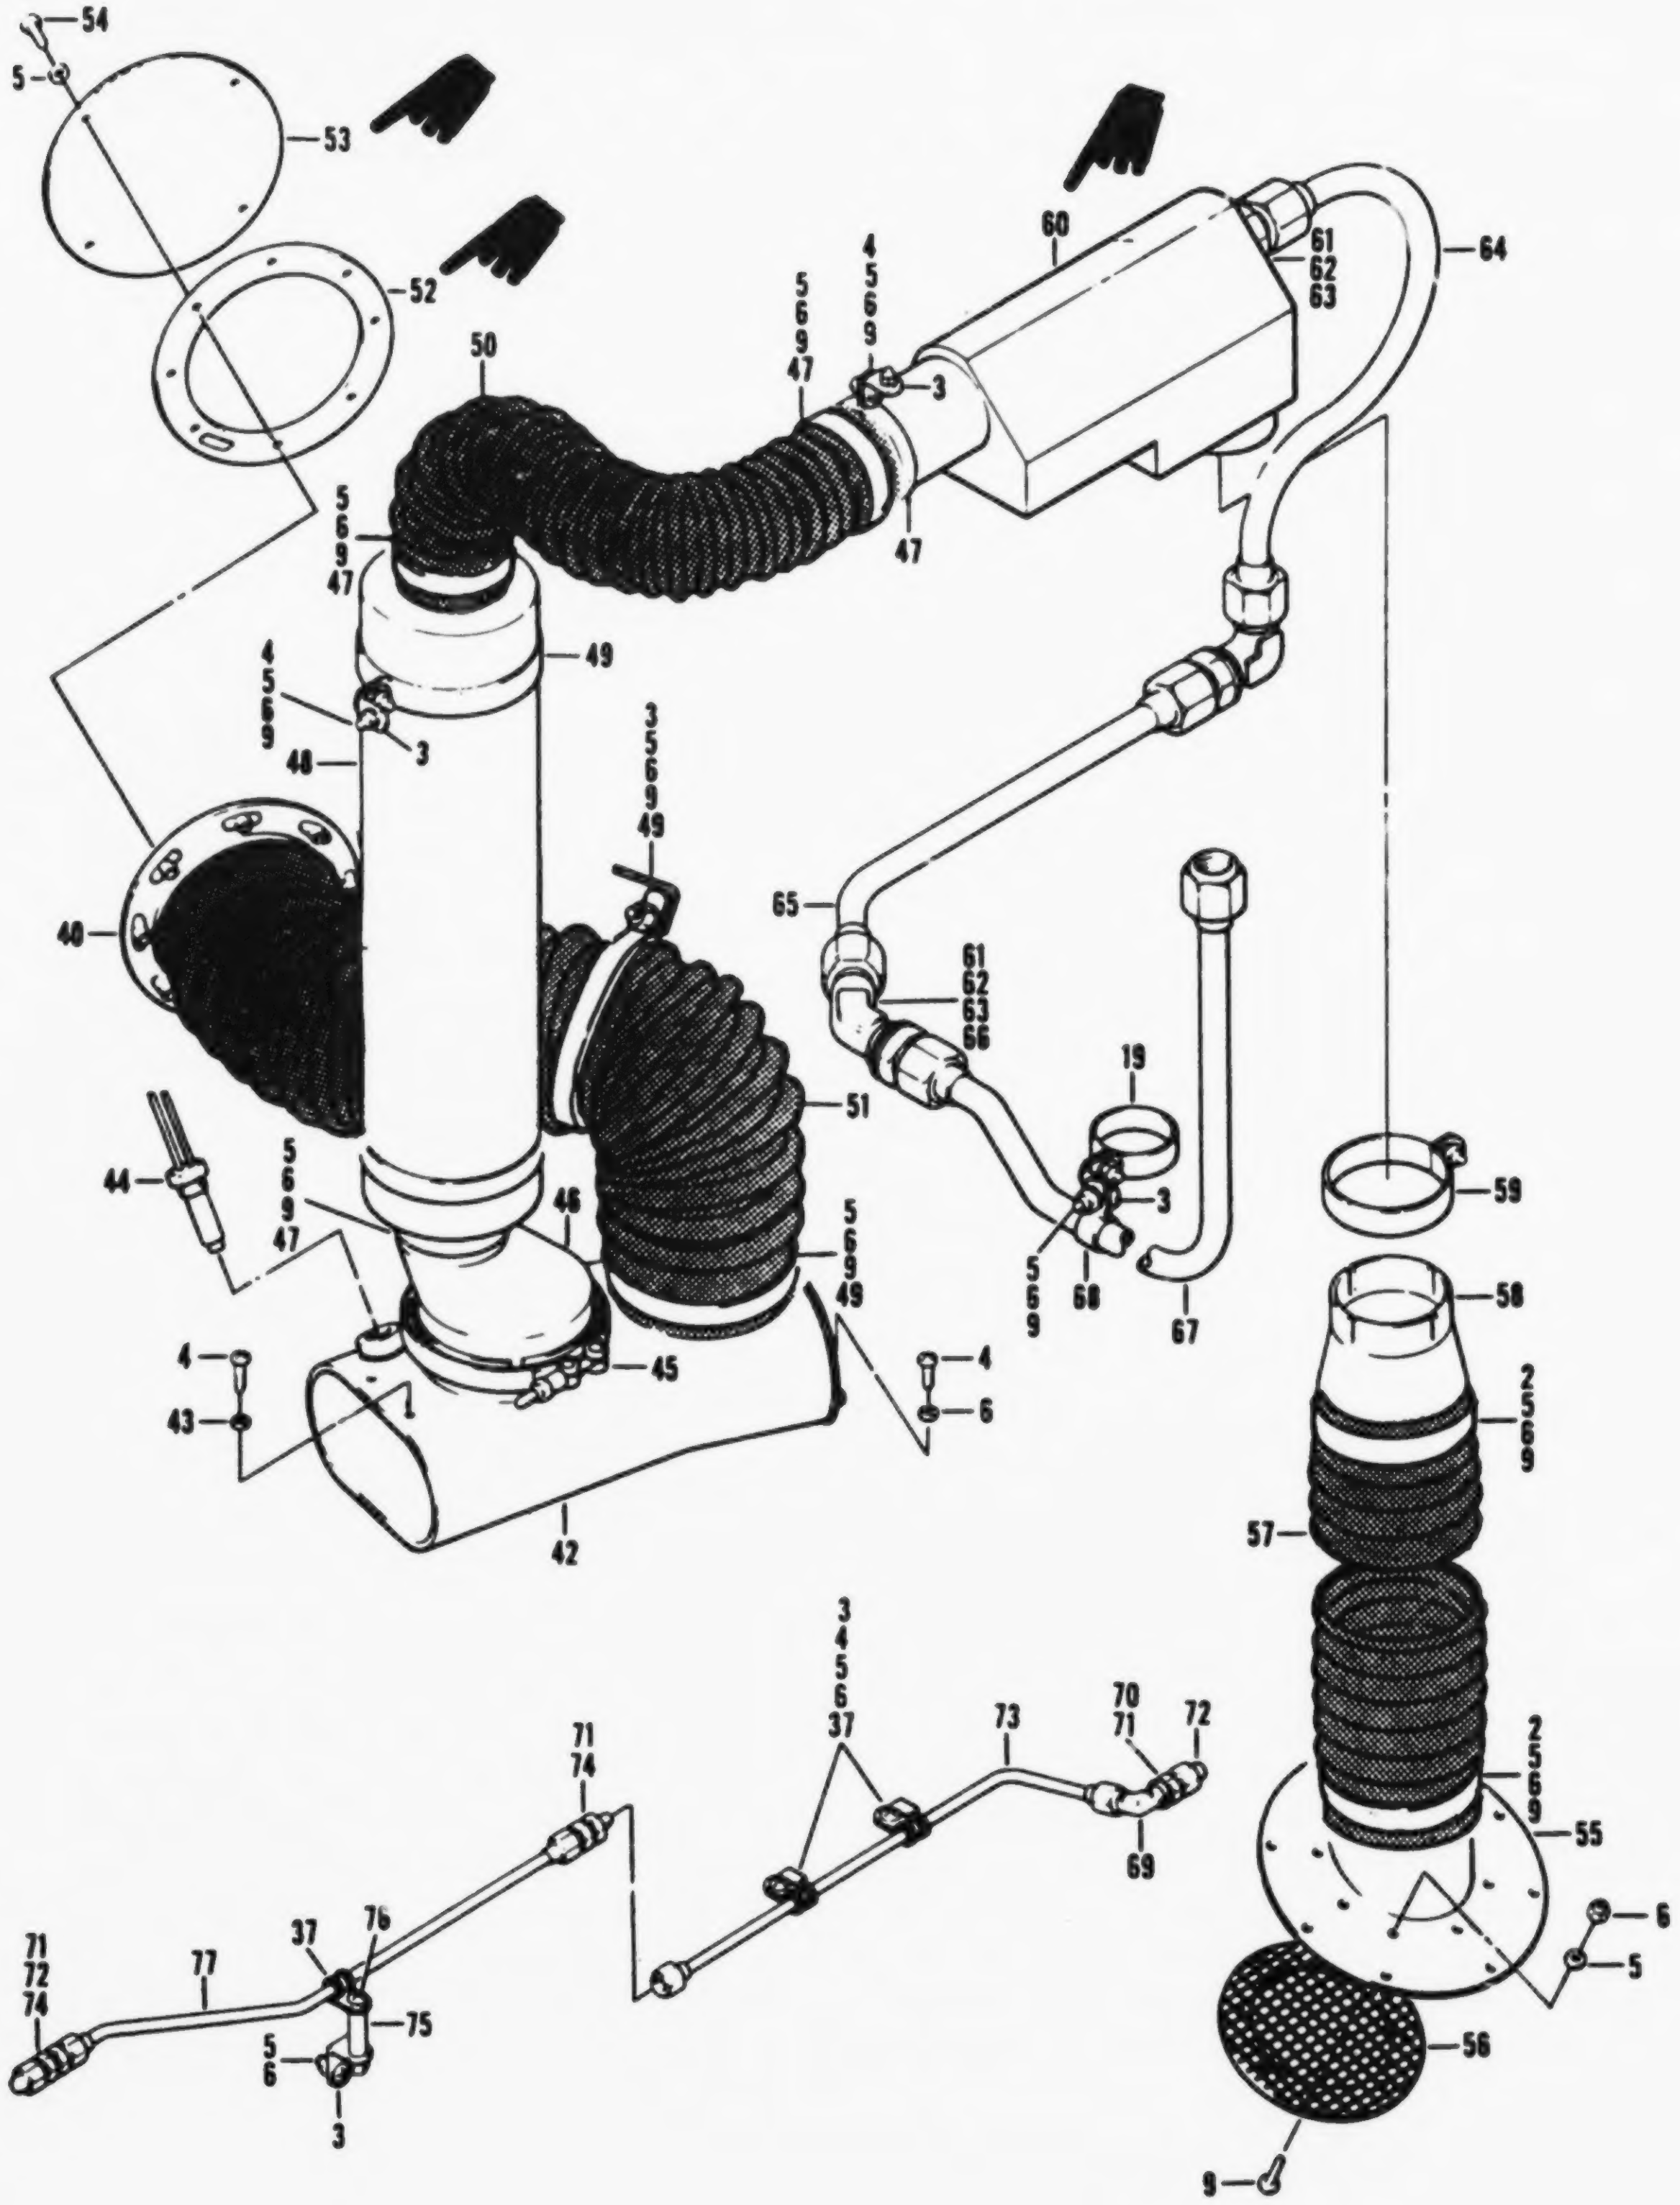
54
5
53
52
50
60
4
5
6
9
3
5
6
9
47
61
62
63
64
47
5
6
9
47
49
4
5
6
9
3
48
3
5
6
9
49
40
65
61
62
63
66
51
19
44
5
6
9
47
46
5
6
9
49
3
5
6
9
68
67
59
58
4
43
45
4
6
42
2
5
6
9
57
3
4
5
6
37
71
74
73
70
71
72
69
2
5
6
9
55
71
72
74
77
37
76
75
5
6
3
6
5
56
9

Figure 391. Distribution System Installation, Aft Section (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USABLE ON CODE	U/M	QTY INC IN UNIT
391		XCFZZ		97499	204-072-417-1	DISTRIBUTION SYSTEM INSTALLATION USBL EFF 65-9416 & SUBSEQUENT SEE FIG.6 FOR NHA	UHC,UHM	EA	1
391	1	PAOZZ	1560-00-912-1175	97499	204-072-456-3	.DUCT,OFFSET,CABIN HEATING	UHC,UHM	EA	1
391	2	PAOZZ	5340-00-993-4849	81996	EAB700D58	.CLAMP,LOOP	UHC,UHM	EA	1
391	3	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHC,UHM	EA	V
391	4	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE	UHC,UHM	EA	V
391	5	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHC,UHM	EA	V
391	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	V
391	7	PAOZZ	4720-00-843-8274	80205	NAS521-32-18	.HOSE,AIR DUCT	UHC,UHM	EA	1
391	8	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY,AIR	UHC,UHM	EA	4
391	9	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHC,UHM	EA	V
391	10	PAOZZ	1560-00-912-1178	97499	204-072-420-5	.DUCT ASSEMBLY,AIR	UHC,UHM	EA	2
391	11	MFOZZ		97499	205-070-416-9	.ORIFICE	UHC,UHM	EA	1
391	12	XDOZZ	1560-00-994-5813	97499	100-064-11	.ORIFICE	UHC,UHM	EA	1
391	13	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE	UHC,UHM	EA	6
391	14	PAOZZ	5330-00-905-8738	97499	205-070-412-1	.GASKET	UHC,UHM	EA	2
391	15	PAOZZ	1560-00-912-1174	97499	204-072-472-5	.CONNECTOR ASSEMBLY,	UHC,UHM	EA	1
391	16	PAOZZ	1560-00-912-1173	97499	204-072-473-5	.CONNECTOR ASSEMBLY,	UHC,UHM	EA	1
391	17	XDOZZ		80205	NAS1374A08CA040	.HOSE,AIR DUCT	UHC,UHM	EA	1
391	18	PAOZZ	5340-00-989-4581	81996	EAB700D32	.CLAMP,LOOP	UHC,UHM	EA	3
391	19	PBOZZ	5340-00-989-4580	81996	EAB700D31	.CLAMP,LOOP	UHC,UHM	EA	1
391	20	PAOZZ	5340-00-957-1488	81996	EAB700D40	.CLAMP,LOOP	UHC,UHM	EA	
391	21	PBOZZ	4720-00-912-8351	80205	NAS1374A10CA130	.HOSE,AIR DUCT	UHC,UHM	EA	1
391	23	PAOZZ	1660-00-918-1521	97499	204-072-430-3	.CONNECTOR,CABIN HEATING	UHC,UHM	EA	2
391	24	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE	UHC,UHM	EA	8
391	25	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT	UHC,UHM	EA	16
391	26	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	6
391	27	PBOZZ	4720-00-912-8348	80205	NAS1374A10CA098	.HOSE,AIR DUCT	UHC,UHM	EA	1
391	28	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE	UHC,UHM	EA	2
391	29	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE	UHC,UHM	EA	2
391	30	PBOZZ	4720-00-912-9137	80205	NAS1374A10CA042	.HOSE,AIR DUCT	UHC,UHM	EA	1
391	31	PBOFF	1660-00-442-2609	97499	204-070-179-9	.VALVE,SELECTOR HEATING SEE FIG.407 FOR BREAKDOWN	UHC,UHM	EA	1
391	32	PAOZZ	1680-00-996-3894	65149	FYLD317-30	.DIAL AND COVER	UHC,UHM	EA	1
391	33	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE	UHC,UHM	EA	4
391	34	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT	UHC,UHM	EA	4
391	35	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHC,UHM	EA	4
391	36	PAOZZ	1680-00-075-2009	65149	FYLD243-002	.SHAFT ASSY,FLEXIBLE	UHC,UHM	EA	1
391	37	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHC,UHM	EA	6
391	38	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE	UHC,UHM	EA	2
391	39	PAOZZ	5365-00-580-4830	80205	NAS43DD3-19	.SPACER,SLEEVE	UHC,UHM	EA	
391	40	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE	UHC,UHM	EA	5
391	41	PAOZZ	1560-00-912-1176	97499	204-072-455-7	.TUBE ASSY,HEATING	UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
391	42	PAOZZ	1660-00-918-1520	97499	204-072-491-1	PLENUM ASSEMBLY,AIR .... UHC,UHM	EA	1
391	43	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER,FLAT .... UHC,UHM	EA	2
391	44	PAOZZ	6685-00-795-1316	82547	21548-4-1-6	THERMOCOUPLE,HEATIN .... UHC,UHM	EA	1
391	45	PAOZZ	5340-00-814-2577	97499	30-057-9	COUPLING,CLAMP .... UHC,UHM	EA	1
391	46	PAOZZ	1660-00-918-0710	97499	204-072-459-1	REDUCER,BLEED AIR .... UHC,UHM	EA	1
391	47	PAOZZ	5340-00-993-1476	81996	EAB700045	CLAMP,LOOP .... UHC,UHM	EA	4
391	48	PAOZZ	1560-00-010-0423	89513	A62C01	SUPPRESSOR,AIR DISTRIBUTION .... UHC,UHM	EA	1
391	49	PAOZZ	5340-00-801-3356	88044	AN735D80	CLAMP,LOOP .... UHC,UHM	EA	4
391	50	PBOZZ	4720-00-912-8352	80205	NAS1374A12CA068	HOSE,AIR DUCT .... UHC,UHM	EA	1
391	51	PAOZZ	1560-00-912-1169	97499	204-072-490-1	DUCT ASSEMBLY,INLET .... UHC,UHM	EA	1
391	52	MFOZZ	DELETED	97499	205-070-404-3	SPACER,CONNECTOR .... UHC,UHM	EA	1
391	53	MFOZZ	DELETED	97499	205-070-483-1	COVER ASSY INLET .... UHC,UHM	EA	1
391	54	PAOZZ	5305-00-993-1848	96906	MS35207-265	SCREW,MACHINE .... UHC,UHM	EA	4
391	55	PAOZZ	1660-00-918-2440	97499	204-072-496-1	ADAPTER,FRESH AIR .... UHC,UHM	EA	1
391	56	PAOZZ	1660-00-918-1891	97499	204-072-495-1	SCREEN ASSY,INTAKE .... UHC,UHM	EA	1
391	57	PAOZZ	4720-00-949-7853	80205	NAS1374A16CA112	HOSE,AIR DUCT .... UHC,UHM	EA	1
391	58	PAOZZ	1660-00-918-1519	97499	204-072-494-1	ADAPTER,AIR INTAKE .... UHC,UHM	EA	1
391	59	PAOZZ	4730-00-278-9138	88044	AN737RM107	CLAMP,HOSE .... UHC,UHM	EA	1
391	60	PAODD	1660-00-762-9781	97499	204-072-475-1	VALVE ASSY,MIXING SEE TM 55-1660-234-40 FOR BREAKDOWN .... UHC,UHM	EA	1
391	61	PAOZZ	5310-00-949-6143	88044	AN924-16D	NUT,PLAIN,HEXAGON .... UHC,UHM	EA	2
391	62	PAOZZ	5310-00-183-4356	88044	AN960PD2116	WASHER,FLAT .... UHC,UHM	EA	2
391	63	PAOZZ	5310-00-595-6902	88044	AN960PD2116L	WASHER,FLAT .... UHC,UHM	EA	2
391	64	PAOZZ	4710-00-912-7548	97499	204-072-492-1	TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
391	65	PAOZZ	4710-00-912-7145	97499	204-072-497-1	TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
391	66	PAOZZ	4730-00-279-0122	88044	AN837-16D	ELBOW,TUBE .... UHC,UHM	EA	1
391	67	PAOZZ	4710-00-912-7549	97499	204-072-493-1	TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
391	68	PAOZZ	5340-00-533-3642	81996	EAB700-15	CLAMP,LOOP .... UHC,UHM	EA	1
391	69	PAOZZ	4730-00-725-4351	96906	MS24394D4	ELBOW,TUBE .... UHC,UHM	EA	1
391	70	PAOZZ	5310-00-187-2401	88044	AN960PD716	WASHER,FLAT .... UHC,UHM	EA	1
391	71	PAOZZ	5310-00-282-7823	96906	MS2440004	NUT,PLAIN,HEXAGON .... UHC,UHM	EA	3
391	72	XDOZZ	4730-00-221-2115	88044	AN929-4	CAP,TUBE .... UHC,UHM	EA	2
391	73	MFOZZ	1660-00-912-9985	97499	204-072-487-1	TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1
391	74	PAOZZ	4730-00-715-0018	96906	MS2439304	NIPPLE,TUBE .... UHC,UHM	EA	2
391	75	PAOZZ	5365-00-820-1070	80205	NAS43DD3-74	SPACER,SLEEVE .... UHC,UHM	EA	1
391	76	XDOZZ		88044	AN520-10R26	SCREW,MACHINE .... UHC,UHM	EA	1
391	77	MFOZZ		97499	204-072-486-1	TUBE ASSEMBLY,METAL .... UHC,UHM	EA	1

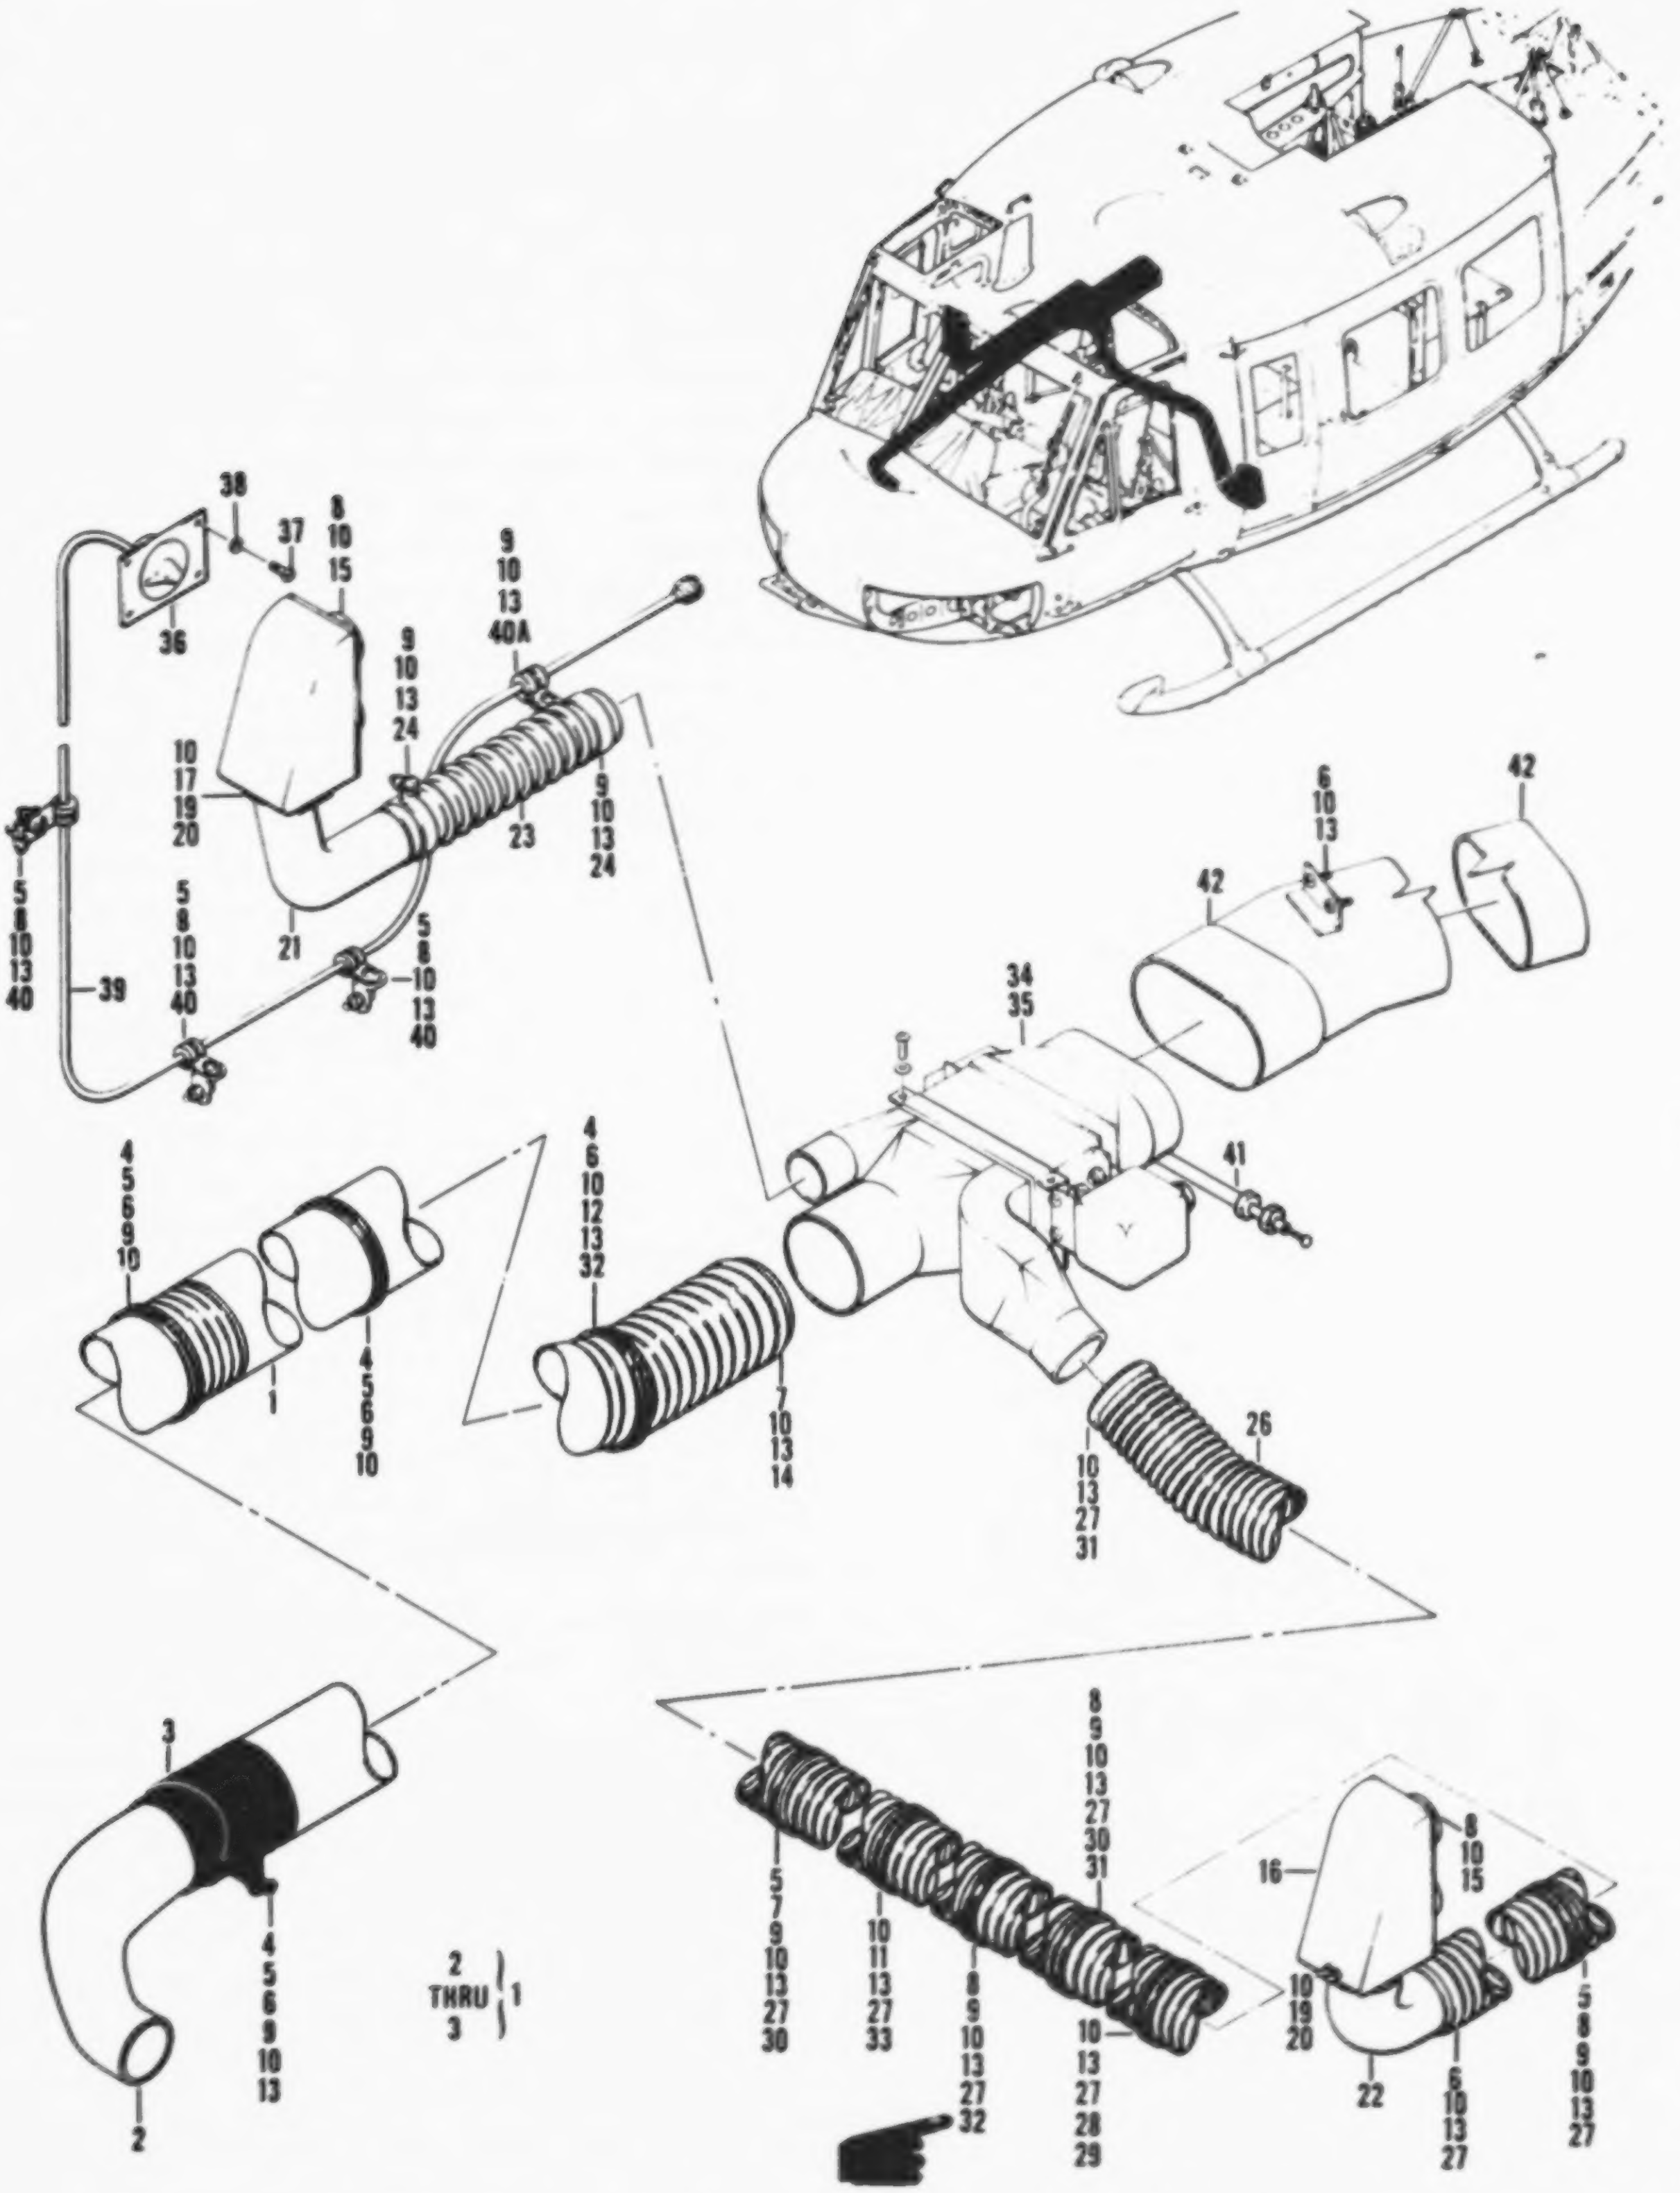
38
37
8 10 15
36
9 10 13 40A
9 10 13 24
10 17 19 20
9 10 13 24
23
21
5 8 10 13 40
39
5 8 10 13 40
5 8 10 13 40
6 10 13
42
42
34 35
41
4 5 6 9 10
1
4 5 6 9 10
4 6 10 12 13 32
7 10 13 14
26
10 13 27 31
3
4 5 6 9 10 13
2
2 THRU 3 } 1
8 9 10 13 27 30 31
5 7 9 10 13 27 30
10 11 13 27 33
8 9 10 13 27 32
10 13 27 28 29
16
8 10 15
10 19 20
22
6 10 13 27
5 8 9 10 13 27

Figure 392. Distribution System Installation, Aft Section (Sheet 1 of 2)

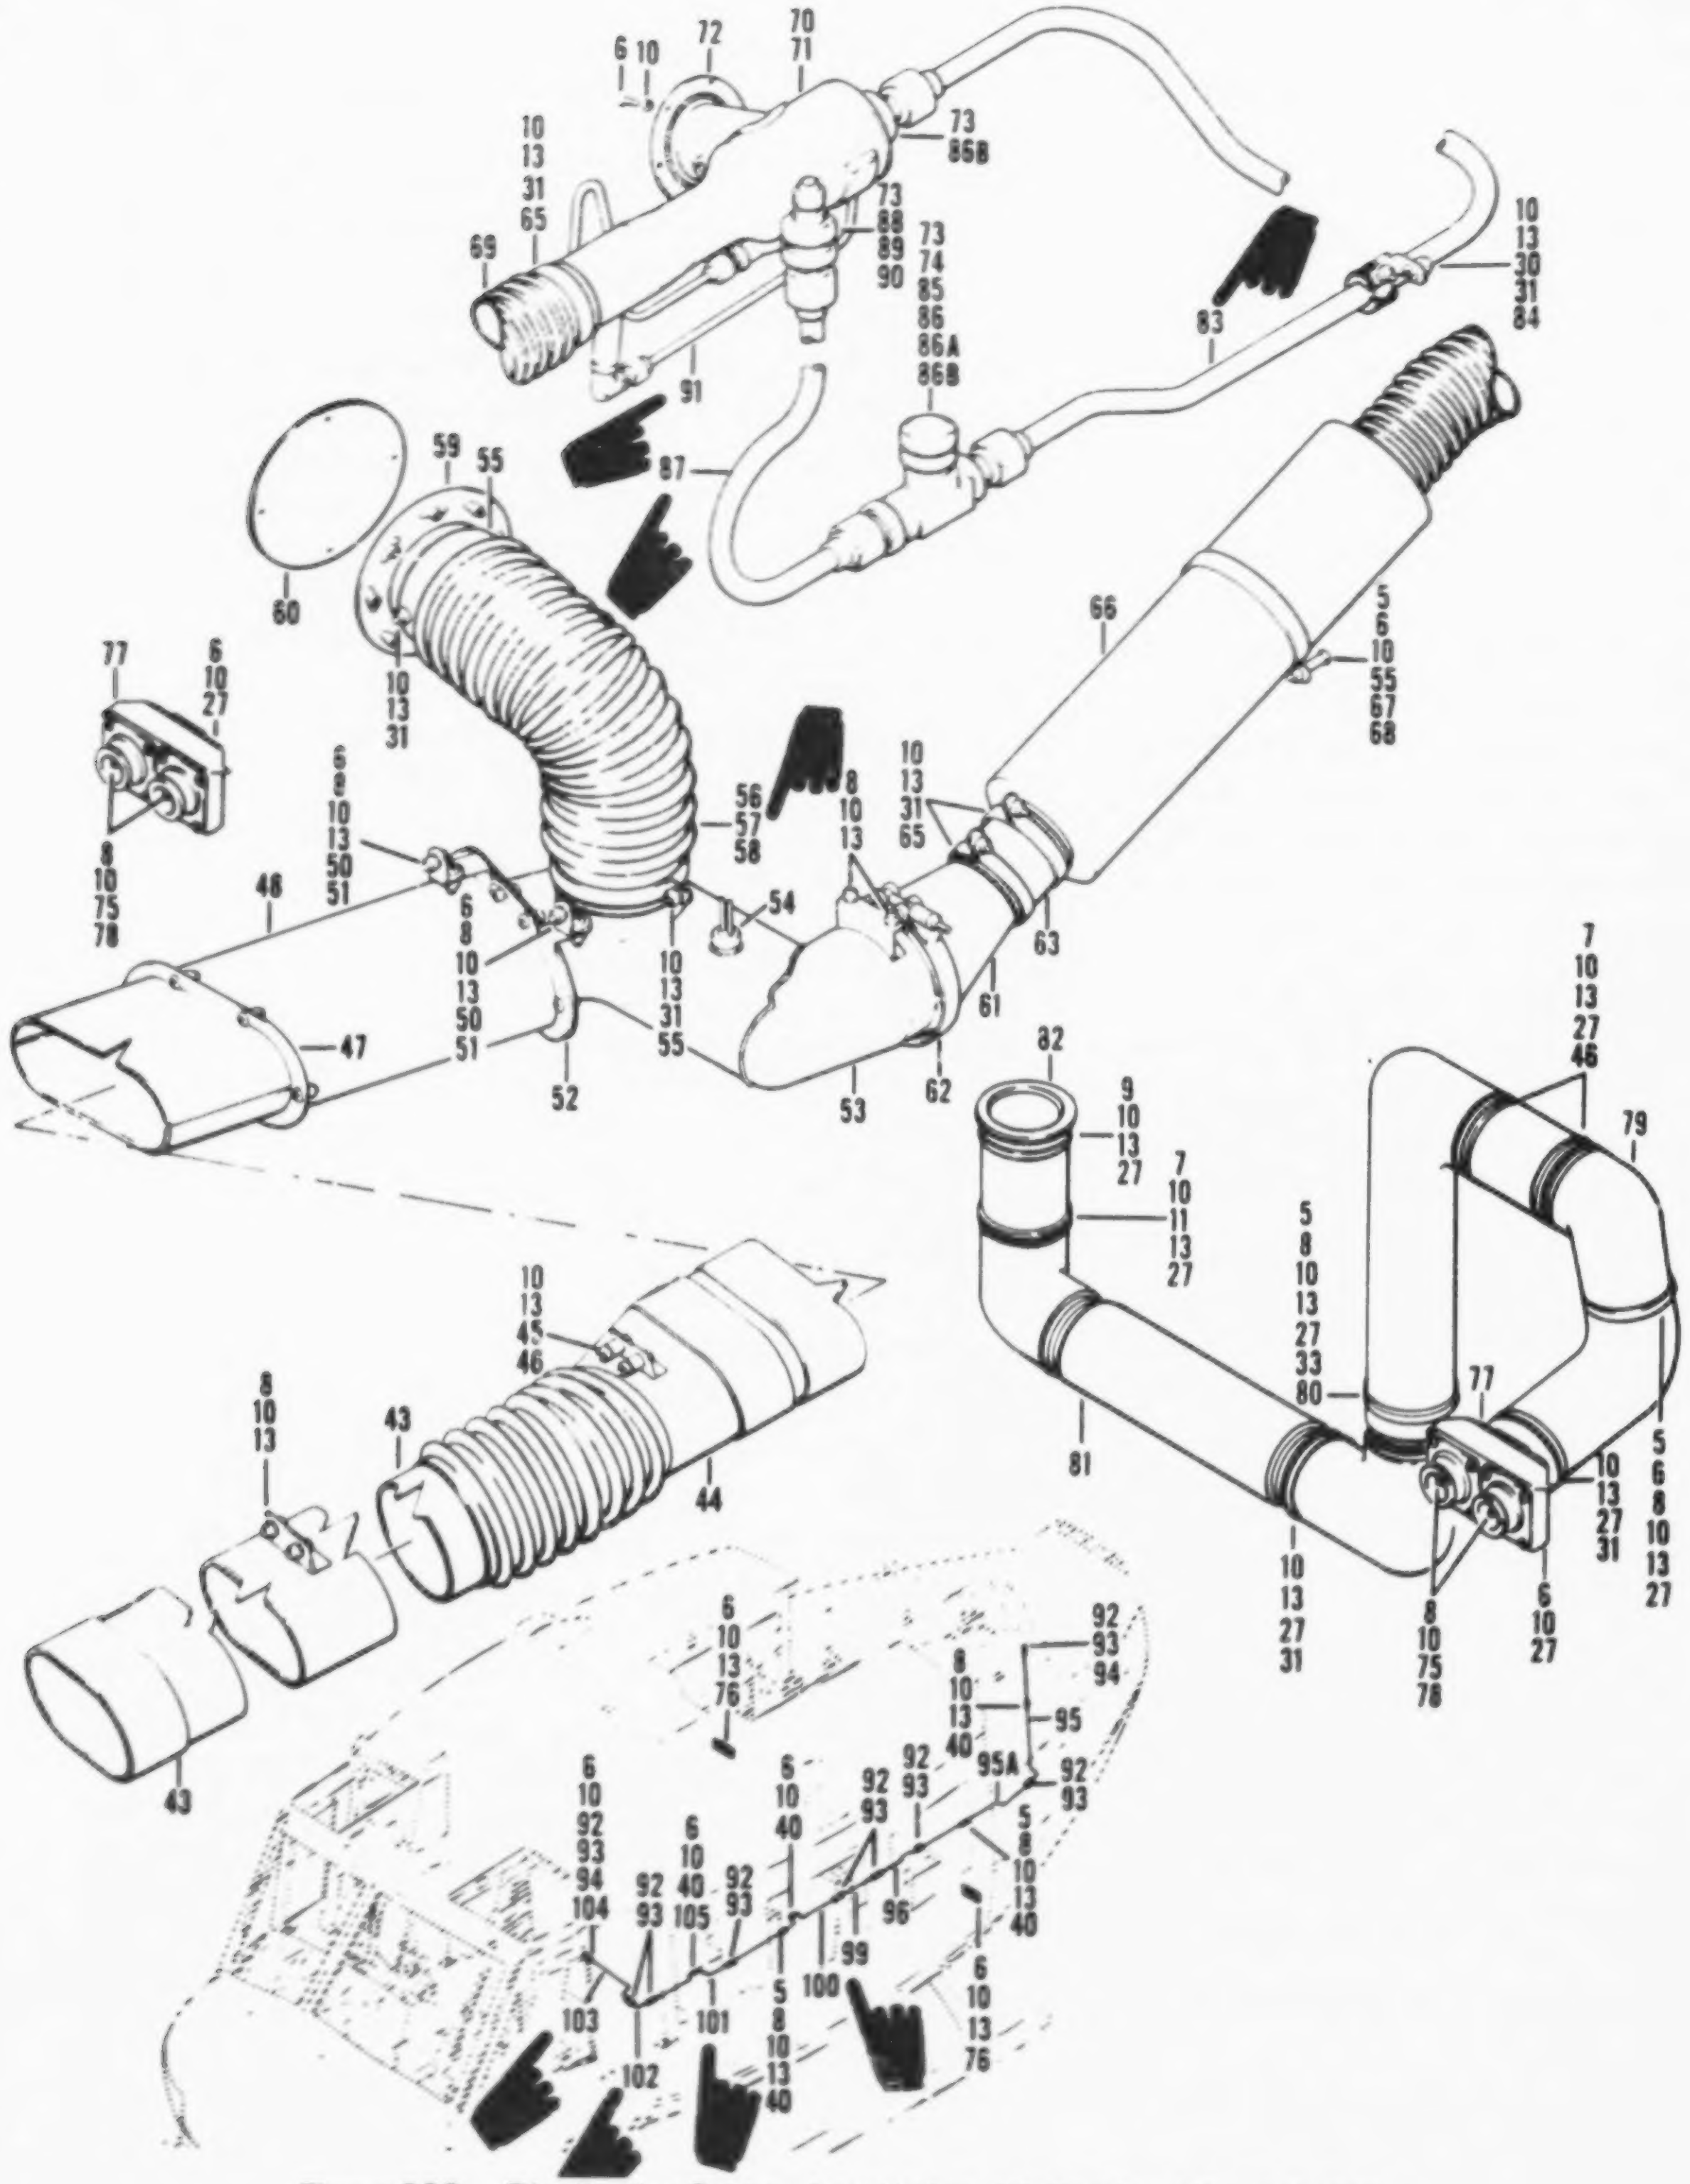
6 10
72
70 71
10 13 31 65
73 86B
73 88 89 90
73 74 85 86 86A 86B
69
91
10 13 30 31 84
83
87
59 55
60
66
5 6 10 55 67 68
77
6 10 27
10 13 31
8 10 75 78
6 8 10 13 50 51
46
47
56 57 58
8 10 13
10 13 31 65
54
6 8 10 13 50 51
52
10 13 31 55
53
62
61
63
7 10 13 27 46
79
82
9 10 13 27
7 10 11 13 27
5 8 10 13 27 33 80
81
77
10 13 27 31
5 6 8 10 13 27
10 13 27 31
8 10 75 78
6 10 27
10 13 45 46
8 10 13
43
44
43
6 10 13 76
92 93 94
8 10 13 40
95
95A
92 93
6 10 92 93 94 104
92 93
6 10 40 105
92 93
6 10 40
92 93
92 93
5 8 10 13 40
99
96
100
103
101
5 8 10 13 40
102
6 10 13 76

Figure 392. Distribution System Installation, Aft Section (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
392		XCFZZ		97499	205-072-400-1	DISTRIBUTION INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
392		XCFZZ		97499	205-072-400-3	DISTRIBUTION INSTL USBL EFF 66-746 THRU 66-16033 SEE FIG 7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
392		XCFZZ		97499	205-072-400-7	DISTRIBUTION INSTL USBL EFF 66-16034 THRU 66-16867 SEE FIG 7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
392		XCFZZ		97499	205-072-400-5	DISTRIBUTION INSTL USBL EFF 66-16868 & SUBSEQUENT SEE FIG 7 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
392	1	AOOOZ	4720-00-950-6844	97499	205-070-525-1	.DUCT ASSEMBLY,AIR.....UHE,UHH,UHV,UHX	EA	1
392	2	PAOZZ	4730-00-918-0723	97499	205-070-474-3	..ELBOW,HEATING DUCT.....UHE,UHH,UHV,UHX	EA	1
392	3	PAOZZ	4720-00-877-6011	97499	205-070-523-3	..DUCT ASSEMBLY,AIR.....UHE,UHH,UHV,UHX	EA	1
392	4	MFOZZ	5340-00-758-1424	97499	204-070-048-1	.CLAMP,LOOP.....UHE,UHH,UHV,UHX	EA	4
392	5	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE.....UHE,UHH,UHV,UHX	EA	V
392	6	PAOZZ	5305-00-990-5444	96906	MS35207-261	.SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	V
392	7	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	V
392	8	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	V
392	9	PAOZZ	5305-00-389-7435	96906	MS35207-264	SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	V
392	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT.....UHE,UHH,UHV,UHX	EA	V
392	11	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE.....UHE,UHH,UHV,UHX	EA	2
392	12	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE U/O PN 205-072-400-1,-3.....UHE,UHH,UHV,UHX	EA	1
392	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.....UHE,UHH,UHV,UHX	EA	V
392	14	PAOZZ	5340-00-548-8525	81996	EAB700-64	.CLAMP,LOOP.....UHE,UHH,UHV,UHX	EA	1
392	15	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY,AIR.....UHE,UHH,UHV,UHX	EA	2
392	16	PAOZZ	1560-00-912-1178	97499	204-072-420-5	.DUCT ASSEMBLY,AIR.....UHE,UHH,UHV,UHX	EA	2
392	17	MFOZZ		97499	205-070-416-5	.ORIFICE PLATE.....UHE,UHH,UHV,UHX	EA	1
392	19	XDOZZ	1560-00-103-5414	97499	205-070-416-13	.ORIFICE PLATE, OUTL USBL EFF 63-8739 & SUBSEQUENT.....UHE,UHH,UHV,UHX	EA	1
392	20	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE.....UHE,UHH,UHV,UHX	EA	8
392	21	PAOZZ	4730-00-918-0716	97499	205-070-460-5	.ELBOW ASSEMBLY,AIR.....UHE,UHH,UHV,UHX	EA	1
392	22	PAOZZ	4730-00-918-0718	97499	205-070-461-5	.ELBOW ASSEMBLY,AIR.....UHE,UHH,UHV,UHX	EA	1
392	23	XDOZZ		80205	NAS1374A08CA030	.HOSE,AIR DUCT.....UHE,UHH,UHV,UHX	EA	1
392	24	PAOZZ	5340-00-193-0122	88044	AN735D35	.CLAMP,LOOP.....UHE,UHH,UHV,UHX	EA	2
392	26	PAOZZ	4720-00-912-8354	80205	NAS1374A10CA368	.HOSE,AIR DUCT.....UHE,UHH,UHV,UHX	EA	1
392	27	PAOZZ	5340-00-957-1488	81996	EAB700D40	.CLAMP,LOOP.....UHE,UHH,UHV,UHX	EA	V
392	28	PAOZZ	5365-00-727-1891	80205	NAS43DD3-128	.SPACER,SLEEVE.....UHE,UHH,UHV,UHX	EA	1
392	29	PAOZZ	5305-00-958-0586	96906	MS35207-273	.SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	1
392	30	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE.....UHE,UHH,UHV,UHX	EA	3
392	31	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	V
392	32	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE U/O PN 205-072-400-5,-7.....UHE,UHH,UHV,UHX	EA	2
392	33	PAOZZ	5306-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	2
392	34	PAOFF	1660-00-442-2608	97499	205-070-442-5	.VALVE ASSEMBLY, HEATING SELECTOR U/O PN 205-072-400-1,-3,& -7 SEE FIG.407 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
392	35	PBOFF	4810-00-162-0938	97499	205-070-442-7	.VALVE ASSEMBLY, HEATING SELECTOR U/O PN 205-072-400-5 SEE FIG.407 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
392	36	PAOZZ	1680-00-996-3894	65149	FYLD317-30	.DIAL AND COVER.....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7)	(8) QTY INC IN UNIT
392	37	PAOZZ	5305-00-984-4988	96906	MS35206-228	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	4
392	38	PAOZZ	5310-00-187-2398	88044	AN960PD6L	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	4
392	39	PAOZZ	1680-00-996-3893	05624	FYLD243-012	SHAFT ASSY, FLEXIBLE	UHE, UHH, UHV, UHX	EA	1
392	40	PAOZZ	5340-00-533-3511	81996	EAB700-4	.CLAMP, SUPPORT	UHE, UHH, UHV, UHX	EA	V
392	40A	PAOZZ	5365-00-304-7579	80205	NAS43DD3-12	.SPACER	UHE, UHH, UHV, UHX	EA	1
392	41	PAOZZ	4720-00-460-2135	97499	70-031AA200-000	.HOSE ASSEMBLY, METAL U/O PN 205-072-400-5	UHE, UHH, UHV, UHX	EA	1
392	42	PAOZZ	1560-00-918-0728	97499	205-070-455-7	DUCT ASSEMBLY, AIR	UHE, UHH, UHV, UHX	EA	1
392	43	PAOZZ	1560-00-918-0725	97499	205-070-456-11	DUCT ASSEMBLY, AIR	UHE, UHH, UHV, UHX	EA	1
392	44	PAOZZ	1560-00-918-0726	97499	205-070-457-7	DUCT ASSEMBLY, AIR	UHE, UHH, UHV, UHX	EA	1
392	45	PAOZZ	5305-00-688-2342	03538	N80P16018C6	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	2
392	46	PAOZZ	5365-00-684-3303	80205	NAS43DD3-34	SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	4
392	47	PAOZZ	1660-00-957-7590	97499	205-070-405-5	SUPPORT ASSEMBLY	UHE, UHH, UHV, UHX	EA	1
392	48	PAOZZ	1560-00-010-0396	97499	205-070-406-11	DUCT ASSEMBLY, AIR	UHE, UHH, UHV, UHX	EA	1
392	50	PAOZZ	5340-00-543-3936	88044	AN743P12	.BRACKET, ANGLE	UHE, UHH, UHV, UHX	EA	2
392	51	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	2
392	52	PAOZZ	5330-00-968-7165	97499	205-070-426-1	GASKET	UHE, UHH, UHV, UHX	EA	1
392	53	PAOZZ	1660-00-909-0907	97499	205-072-407-1	PLENUM ASSY	UHE, UHH, UHV, UHX	EA	1
392	54	PAOZZ	6685-00-795-1316	82647	21548-4-1-6	.THERMOSTATIC SWITCH	UHE, UHH, UHV, UHX	EA	1
392	55	PAOZZ	5340-00-801-3356	88044	AN735D80	CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	3
392	56	PAOZZ	1560-00-918-0746	97499	205-070-427-15	.DUCT ASSEMBLY, AIR U/O PN 205-072-400-1, -3, -7	UHE, UHH, UHV, UHX	EA	1
392	57	MFOZZ	DELETED	97499	205-070-404-3	.SPACER, CONNECTOR	UHE, UHH, UHV, UHX	EA	1
392	58	PAOZZ	5305-00-958-3409	96906	MS24694S52	SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	4
392	59	MFOZZ	1560-00-488-4932	97499	205-070-483-1	COVER ASSY, INLET SPOT	UHE, UHH, UHV, UHX	EA	1
392	60	PAOZZ	1560-00-831-0985	97499	205-072-426-1	COVER, PLENUM OUTLET U/O PN 205-072-400-5	UHE, UHH, UHV, UHX	EA	1
392	61	PAOZZ	1660-00-918-0722	97499	205-072-408-1	.ADAPTER, PLENUM	UHE, UHH, UHV, UHX	EA	1
392	62	PAOZZ	5340-00-814-2577	98625	24540-500	.CLAMP, COUPLING	UHE, UHH, UHV, UHX	EA	1
392	63	PAOZZ	5330-00-435-8509	80205	NAS520-24-12	SLEEVE, SEAL, COUPLER	UHE, UHH, UHV, UHX	EA	1
392	65	PAOZZ	5340-00-548-8207	81996	EAB700-48	.CLAMP, LOOP	UHE, UHH, UHV, UHX	EA	4
392	66	PAOZZ	1560-00-010-0423	89513	AB2C01	SUPPRESSOR, AIR	UHE, UHH, UHV, UHX	EA	1
392	67	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	1
392	68	PAOZZ	5365-00-594-6054	80205	NAS43DD3-22	.SPACER, SLEEVE	UHE, UHH, UHV, UHX	EA	2
392	69	PAOZZ	4720-00-233-7932	80205	NAS1375A12SA022	.HOSE, AIR DUCT	UHE, UHH, UHV, UHX	EA	1
392	70	PAODO	1660-00-762-9781	97499	204-072-475-1	.VALVE ASSY, MIXING U/O PN 205-072-400-1, -3, & -7 SEE TM 55-1660-234-40 FOR BREAKDOWN	UHE, UHH, UHV, UHX	EA	1
392	71	PAODO	1660-00-931-2314	97499	205-072-277-3	VALVE, AIR DISTRIBUT U/O PN 205-072-400-5 SEE FIG 403 FOR BREAKDOWN OF PN 205-072-277-3 35D10	UHE, UHH, UHV, UHX	EA	1
392	72	PAOZZ	1660-00-918-0715	97499	205-072-412-1	.SCREEN ASSY	UHE, UHH, UHV, UHX	EA	1
392	73	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	3
392	74	PAOZZ	5310-00-183-4356	88044	AN960PD2116	.WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
392	75	PAOZZ	1560-00-918-0729	97499	205-070-424-5	.DUCT ASSEMBLY, AIR U/O PN 205-072-400-1, -3	UHE, UHH, UHV, UHX	EA	1
392	76	MFOZZ	1560-00-932-7690	97499	205-072-425-1	.COVER, ACCESS U/O PN 205-072-400-5, -7	UHE, UHH, UHV, UHX	EA	2
392	77	PAOZZ	1560-00-918-0727	97499	205-070-429-5	.DUCT ASSEMBLY, AIR U/O PN 205-072-400-1, -3		EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						... UHE,UHH,UHV,UHX		
392	78	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY,AIR ... UHE,UHH,UHV,UHX	EA	4
392	79	PAOZZ	1660-00-918-0745	97499	205-072-405-1	.DUCT ASSEMBLY,AIR U/O PN 205-072-400-1,-3 ... UHE,UHH,UHV,UHX	EA	1
392	80	PAOZZ	5365-00-684-7923	80205	NAS43D03-20	.SPACER,SLEEVE U/O PN 205-072-400-1,-3 ... UHE,UHH,UHV,UHX	EA	1
392	81	PAOZZ	4720-00-950-6845	05399	BE482-3	.DUCT ASSEMBLY,ELBOW U/O PN 205-072-400-1,-3 ... UHE,UHH,UHV,UHX	EA	1
392	82	PAOZZ	1660-00-967-7568	97499	205-070-463-1	.CAP,HOT AIR U/O PN 205-072-400-1,-3 ... UHE,UHH,UHV,UHX	EA	1
392	83	MFOZZ	DELETED	97499	205-072-424-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	84	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP ... UHE,UHH,UHV,UHX	EA	1
392	85	PAOZZ	4730-00-287-0118	88044	AN806D16	.PLUG,TUBE FITTING ... UHE,UHH,UHV,UHX	EA	1
392	86	PBOZZ	4730-00-725-0052	96906	MS24388D16	.TEE,TUBE TO BOSS ... UHE,UHH,UHV,UHX	EA	1
392	86A	PAOZZ	5330-00-804-5694	96906	MS28778-16	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
392	86B	PAOZZ	5310-00-595-6902	88044	AN960PD216L	.WASHER ... UHE,UHH,UHV,UHX	EA	2
392	87	MFOZZ	DELETED	97499	205-072-410-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	88	PBOZZ	4730-00-810-8828	96906	MS24393D16	.NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	1
392	89	PAOZZ	5330-00-965-6503	97499	205-060-436-5	.GASKET ... UHE,UHH,UHV,UHX	EA	2
392	90	PAOZZ	5310-00-183-4356	88044	AN960PD216	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
392	91	MFOZZ	DELETED	97499	205-072-278-1	.TUBE ASSEMBLY,METAL U/O PN 205-072-400-5 ... UHE,UHH,UHV,UHX	EA	1
392	92	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	V
392	93	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	V
392	94	PAOZZ	4730-00-221-2115	88044	AN929-4	.CAP,TUBE ... UHE,UHH,UHV,UHX	EA	2
392	95	MFOZZ		97499	205-070-491-1	.TUBE ASSY,BLEED AIR U/O PN 205-072-400-1,-3,-7 ... UHE,UHH,UHV,UHX	EA	1
392	95A	PAOZZ	4710-00-488-4935	97499	205-070-490-1	.TUBE ASSEMBLY ... UHE,UHH,UHV,UHX	EA	1
392	96	MFOZZ	4710-00-489-5295	97499	205-070-489-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	99	MFOZZ	DELETED	97499	205-070-488-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	100	MFOZZ	DELETED	97499	205-070-487-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	101	MFOZZ	DELETED	97499	205-070-486-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	102	MFOZZ	DELETED	97499	205-070-485-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	103	MFOZZ	DELETED	97499	205-070-484-1	.TUBE ASSEMBLY,METAL ... UHE,UHH,UHV,UHX	EA	1
392	104	XBOZZ	5340-00-918-1878	97499	205-072-413-1	.BRACKET,ANGLE ... UHE,UHH,UHV,UHX	EA	1
392	105	PAOZZ	5365-00-662-3100	80205	NAS43D03-64	.SPACER ... UHE,UHH,UHV,UHX	EA	1

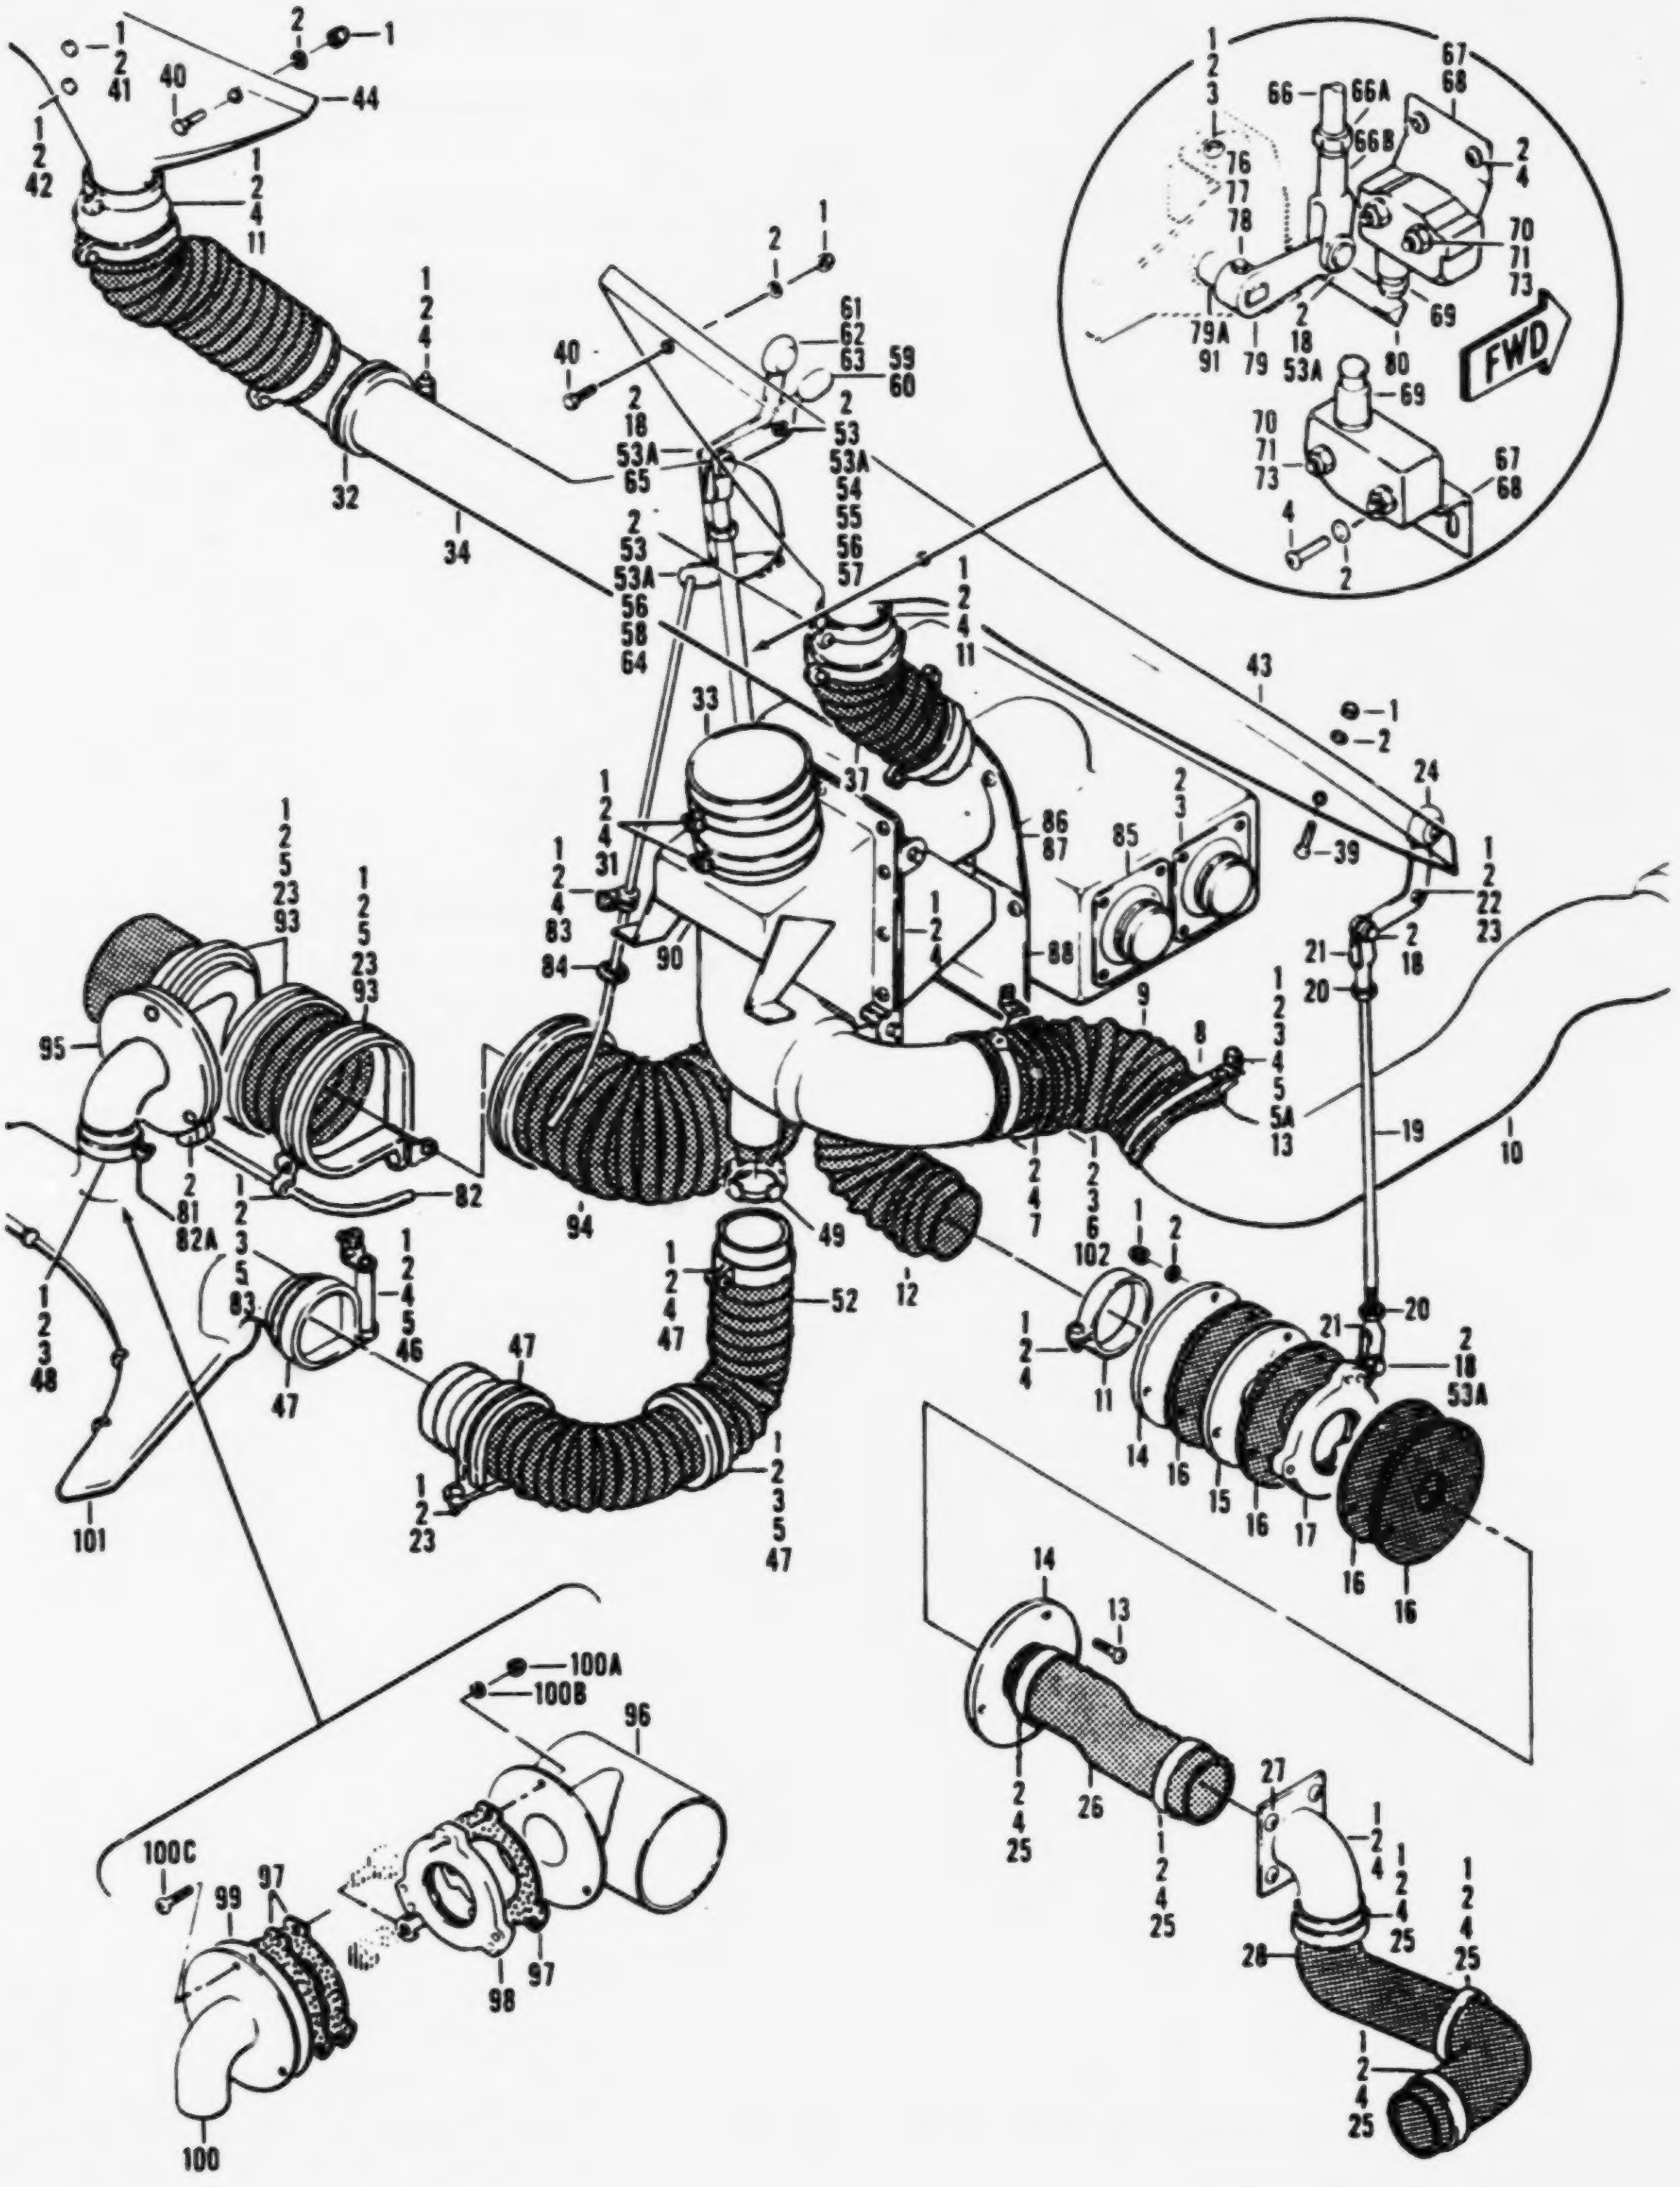
FWD
1
2
41
42
40
44
4
11
32
34
18
53A
65
53
54
55
56
57
58
64
59
60
61
62
63
33
37
31
83
84
90
86
87
85
88
39
43
24
22
23
21
20
19
10
9
8
3
5
5A
13
7
6
102
12
49
52
94
95
93
81
82A
82
48
46
47
101
14
15
16
17
25
26
27
28
66
66A
66B
67
68
69
70
71
73
76
77
78
79
79A
80
91
96
97
98
99
100
100A
100B
100C

Figure 393. Distribution Installation, Hot Air Forward Section

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
393		XCFZZ		97499	204-070-169-29	DISTRIBUTION INSTL HOT AIR FORWARD SECTION USBL EFF 64-14101 THRU 64-14191 SEE FIG 6 FOR NHA UHC,UHM	EA	1
393	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON UHB,UHC,UHM	EA	V
393	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT UHB,UHC,UHM	EA	V
393	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE UHB,UHC,UHM	EA	V
393	4	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW,MACHINE UHB,UHC,UHM	EA	V
393	5	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE UHB,UHC,UHM	EA	V
393	5A	PAOZZ	5340-00-721-8182	88044	AN743-13	BRACKET UHC,UHM	EA	1
393	6	PAOZZ	5340-00-993-5479	81996	EAB700043	CLAMP,LOOP UHB,UHC,UHM	EA	1
393	7	PAOZZ	5340-00-957-1489	81996	EAB700042	CLAMP,LOOP UHB,UHC,UHM	EA	1
393	8	PAOZZ	5340-00-993-1475	81996	EAB700038	CLAMP,LOOP UHB,UHC,UHM	EA	1
393	9	PAOZZ	4720-00-985-3405	97499	70-004A10F25Z3	HOSE,AIR DUCT UHB	EA	1
393	10	PAOZZ	1560-00-987-5168	97499	204-072-458-1	TUBE,BLEED AIR UHB,UHC,UHM	EA	1
393	11	PBOZZ	5340-00-989-4580	81996	EAB700031	CLAMP,LOOP UHB,UHC,UHM	EA	4
393	12	XDOZZ	4720-00-195-6967	80205	NAS1376A08CF024	HOSE,AIR DUCT UHB,UHC,UHM	EA	1
393	13	PAOZZ	5305-00-993-1851	96906	MS35207-267	SCREW,MACHINE UHB,UHC,UHM	EA	4
393	14	PAOZZ	1660-00-991-3312	97499	204-072-422-1	MOUNT,CONTROL, CO-PILOT UHB,UHC,UHM	EA	2
393	15	MFOZZ	1660-00-847-7480	97499	204-070-204-1	ORIFICE,DEFROSTER UHB,UHC,UHM	EA	1
393	16	PAOZZ	5330-00-736-1012	97499	204-070-209-1	GASKET UHB,UHC,UHM	EA	4
393	17	PAOZZ	1660-00-895-9323	97499	204-070-309-3	VALVE,FOOT WARMER UHB,UHC,UHM	EA	1
393	18	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	PIN,STRAIGHT,HEA UHB,UHC,UHM	EA	4
393	19	PAOZZ	3040-00-730-7025	97499	204-070-313-5	CONNECTING LINK,RIG UHB,UHC,UHM	EA	1
393	20	PAOZZ	5310-00-208-7589	88044	AN316-4R	NUT,PLAIN,HEXAGON UHB,UHC,UHM	EA	2
393	21	PAOZZ	5340-00-838-1591	96906	MS27975-4	CLEVIS,ROD END UHB,UHC,UHM	EA	2
393	22	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	SPACER,SLEEVE UHB,UHC,UHM	EA	1
393	23	PAOZZ	5305-00-180-3326	88044	AN525-10R16	SCREW,MACHINE UHB,UHC,UHM	EA	5
393	24	PAOZZ	1560-00-708-2247	97499	204-070-311-1	HANDLE,HEATING, SYSTEM UHB,UHC,UHM	EA	1
393	25	PAOZZ	5340-00-993-5473	81996	EAB700-33	CLAMP,LOOP UHB,UHC,UHM	EA	5
393	26	PAOZZ	4720-00-843-1731	80205	NAS521-16-29	HOSE,AIR DUCT UHB,UHC,UHM	EA	1
393	27	PAOZZ	4730-00-987-5275	97499	204-072-421-1	ELBOW UHB,UHC,UHM	EA	1
393	28	XDOZZ	4720-00-169-5032	80205	NAS1375C08SA048	HOSE,AIR DUCT UHB,UHC	EA	1
393	31	PAOZZ	5340-00-993-1476	81996	EAB700046	CLAMP,LOOP UHB,UHC,UHM	EA	4
393	32	PAOZZ	5340-00-957-1488	81996	EAB700040	CLAMP,LOOP UHB,UHC,UHM	EA	2
393	33	XDOZZ		80205	NAS521-24-13	HOSE,AIR DUCT UHB,UHC,UHM	EA	1
393	34	PAOZZ	1560-00-912-1177	97499	204-072-432-3	DUCT,HEATING AND DEFROST UHB,UHC,UHM	EA	2
393	37	PAOZZ	1560-00-912-1172	97499	204-072-746-3	DUCT,ASSEMBLY, DEFROST UHB	EA	2
393	39	PAOZZ	5306-00-182-2064	88044	AN3H13A	BOLT,MACHINE UHB,UHC,UHM	EA	2
393	40	PAOZZ	5306-00-182-2005	88044	AN3H14A	BOLT,MACHINE UHB,UHC,UHM	EA	2
393	41	PAOZZ	5306-00-182-2011	88044	AN3H22A	BOLT,MACHINE UHB,UHC,UHM	EA	1
393	42	PAOZZ	5306-00-282-5821	88044	AN3H26A	BOLT,MACHINE UHB,UHC,UHM	EA	1
393	43	PAOZZ	1660-00-918-1517	97499	204-072-450-11	NOZZLE ASSY, DEFROSTER UHB,UHC,UHM	EA	1
393	44	PAOZZ	1660-00-918-1518	97499	204-072-450-12	NOZZLE ASSY, DEFROSTER UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION		(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.						USABLE ON CODE		
393	46	PAOZZ	5365-00-899-3700	80205	NAS43DD3-140	.SPACER, SLEEVE	UHB, UHC, UHM	EA	1
393	47	XDOZZ	5340-00-989-4576	81996	EAB700D24	.CLAMP, LOOP	UHB, UHC, UHM	EA	1
393	48	PAOZZ	5340-00-247-6221	81996	EAB700D26	.CLAMP, LOOP	UHB, UHC, UHM	EA	1
393	49	PAOZZ	5310-00-736-4077	97499	204-070-273-1	.WASHER, KEY	UHB, UHC, UHM	EA	1
393	52	PAOZZ	4720-00-169-5031	80205	NAS1375A06SA086	.HOSE, AIR DUCT	UHB, UHC, UHM	EA	1
393	53	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT, PLAIN, SLOTTED, HEXAGON	UHB, UHC, UHM	EA	3
393	53A	PAOZZ	5315-00-815-1405	88044	AN381-2-8	.PIN	UHC, UHM	EA	6
393	54	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER, FLAT	UHB, UHC, UHM	EA	1
393	55	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER, FLAT	UHB, UHC, UHM	EA	4
393	56	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER, FLAT	UHB, UHC, UHM	EA	2
393	57	PAOZZ	5306-00-151-2301	88044	AN23-22	.BOLT, CLEVIS	UHB, UHC, UHM	EA	1
393	58	PAOZZ	5306-00-151-1971	88044	AN23-19	.BOLT, CLEVIS	UHB, UHC, UHM	EA	1
393	59	PAOOO	1660-00-730-7023	97499	204-070-270-1	.LEVER, ASSEMBLY	UHB, UHC, UHM	EA	1
393	60	PAOZZ	5355-00-807-0040	96906	MS26517-2	..KNOB	UHB, UHC, UHM	EA	1
393	61	PAOOO	1660-00-730-7019	97499	204-070-245-1	.LEVER ASSEMBLY	UHB, UHC, UHM	EA	1
393	62	PAOZZ	5355-00-807-0040	96906	MS26517-2	..KNOB	UHB, UHC, UHM	EA	1
393	63	PAOZZ	3120-00-478-6195	97499	21-005B6-8	..BUSHING, SLEEVE	UHB, UHC, UHM	EA	1
393	64	MFOZZ	DELETED	97499	204-070-275-1	.BELL CRANK	UHB, UHC, UHM	EA	1
393	65	MFOZZ	DELETED	97499	204-070-274-1	.LINK	UHB, UHC, UHM	EA	1
393	66	PAOZZ	1660-00-730-6980	97499	204-070-244-1	.ROD ASSEMBLY	UHB, UHC, UHM	EA	1
393	66A	PAOZZ	5310-00-264-1862	88044	AN150408	..NUT	UHC, UHM	EA	2
393	66B	PAOZZ	5340-00-838-1591	88044	AN486-4	..CLEVIS	UHC, UHM	EA	2
393	67	PAOOO	1560-00-996-7493	97499	204-070-582-1	.BRACKET ASSEMBLY	UHB, UHC, UHM	EA	1
393	68	MFOZZ	DELETED	97499	204-070-583-1	..BRACKET, ELECTRICAL	UHB, UHC, UHM	EA	1
393	69	PAOZZ	5930-00-927-8482	81349	M8805-1-020	..SWITCH, SENSITIVE	UHB, UHC, UHM	EA	1
393	70	PAOZZ	5305-00-984-6221	96906	MS35206-234	..SCREW, MACHINE	UHB, UHC, UHM	EA	2
393	71	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER, FLAT	UHB, UHC, UHM	EA	2
393	73	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT, SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHB, UHC, UHM	EA	2
393	76	PAOZZ	5310-00-176-8105	88044	AN320-1	.NUT, PLAIN, SLOTTED HEXAGON	UHB, UHC, UHM	EA	1
393	77	PAOZZ	5306-00-151-0505	88044	AN21-14	.BOLT, CLEVIS	UHB, UHC, UHM	EA	1
393	78	PAOZZ	5365-00-811-6444	80205	NAS43HT5-48	.SPACER, SLEEVE	UHB, UHC, UHM	EA	1
393	79	PAOZZ	1660-00-736-1015	97499	204-070-243-1	.ARM, ACTUATING CONTROL VALVE	UHB, UHC, UHM	EA	1
393	79A	PAOZZ	5315-00-234-1849	88044	AN381-1-6	.PIN	UHC, UHM	EA	1
393	80	PAOZZ	1660-00-980-9554	97499	204-070-581-1	.ARM, ACTUATING CONTROL VALVE	UHB, UHC, UHM	EA	1
393	81	PAOZZ	1680-00-607-8450	77910	3A665-1-16	.SWIVEL ASSY	UHB, UHC, UHM	EA	1
393	82	PAOZZ	1660-00-730-7024	97499	204-070-276-1	.CABLE ASSEMBLY, AIR	UHB, UHC, UHM	EA	1
393	82A	PAOZZ	5315-00-282-1225	68044	AN381-2-7	.PIN	UHC, UHM	EA	2
393	83	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP, LOOP	UHB, UHC, UHM	EA	1
393	84	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET, NONMETALLIC	UHB, UHC, UHM	EA	1
393	85	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY, AIR	UHB, UHC, UHM	EA	4
393	86	PAOZZ	1660-00-736-1014	97499	204-070-221-1	.GASKET	UHB, UHC, UHM	EA	1
393	87	PAOZZ	1560-00-987-5181	97499	204-072-428-1	.DUCT, HOT AIR DISTRIBUTION FORWARD FUSELAGE	UHB, UHC, UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
393	88	MFOZZ	DELETED	97499	204-070-230-1	.BRACKET,HEAT VALVE	UHB,UHC,UHM	EA	1
393	90	AOOOZ	1560-00-682-5190	97499	204-070-591-3	.VALVE ASSEMBLY HEATING AIR BLEED USBL EFF 62-1872 & SUBSEQUENT SEE FIG.409 FOR BREAKDOWN	UHB,UHC,UHM	EA	1
93	91	PAOZZ	5365-01-022-7123	80205	NAS43DD5-60	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
393	93	PAOZZ	5340-00-548-8207	81996	EAB700-48	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
393	94	PAOZZ	4720-00-730-6287	97499	70-004A12F44Z3	.HOSE,AIR DUCT	UHB,UHC,UHM	EA	1
393	95	PAOOO	1660-00-986-9941	97499	204-070-370-5	.DUCT ASSEMBLY	UHB,UHC,UHM	EA	1
393	96	PBOZZ	4730-00-909-3805	97499	204-070-369-9	..DUCT ASSEMBLY LOWER-RH	UHB,UHC,UHM	EA	1
393	97	PAOZZ	5330-00-691-2122	97499	204-070-378-1	..GASKET HOSE TO VALVE	UHB,UHC,UHM	EA	3
393	98	PAOZZ	1560-00-675-5760	97499	204-070-375-1	..VALVE,DEFROSTER LOWER-RH	UHB,UHC,UHM	EA	1
393	99	MFOZZ		97499	204-070-204-3	..PLATE,ORIFICE	UHB,UHC,UHM	EA	1
393	100	PBOZZ	4730-00-911-8588	97499	204-072-426-3	..ELBOW,LOWER DEFROST	UHB,UHC,UHM	EA	1
393	100A	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT	UHC,UHM	EA	1
393	100B	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER	UHC,UHM	EA	1
393	100C	PAOZZ	5305-00-180-3326	88044	AN525-10R16	..SCREW,MACHINE	UHC,UHM	EA	1
393	101	PAOZZ	4730-00-987-5165	97499	204-072-425-1	.DEFROSTER UNIT,AIR	UHB,UHC,UHM	EA	1
393	102	PAOZZ	5365-00-825-7844	80205	NAS43DD3-54	.SPACER	UHC,UHM	EA	1

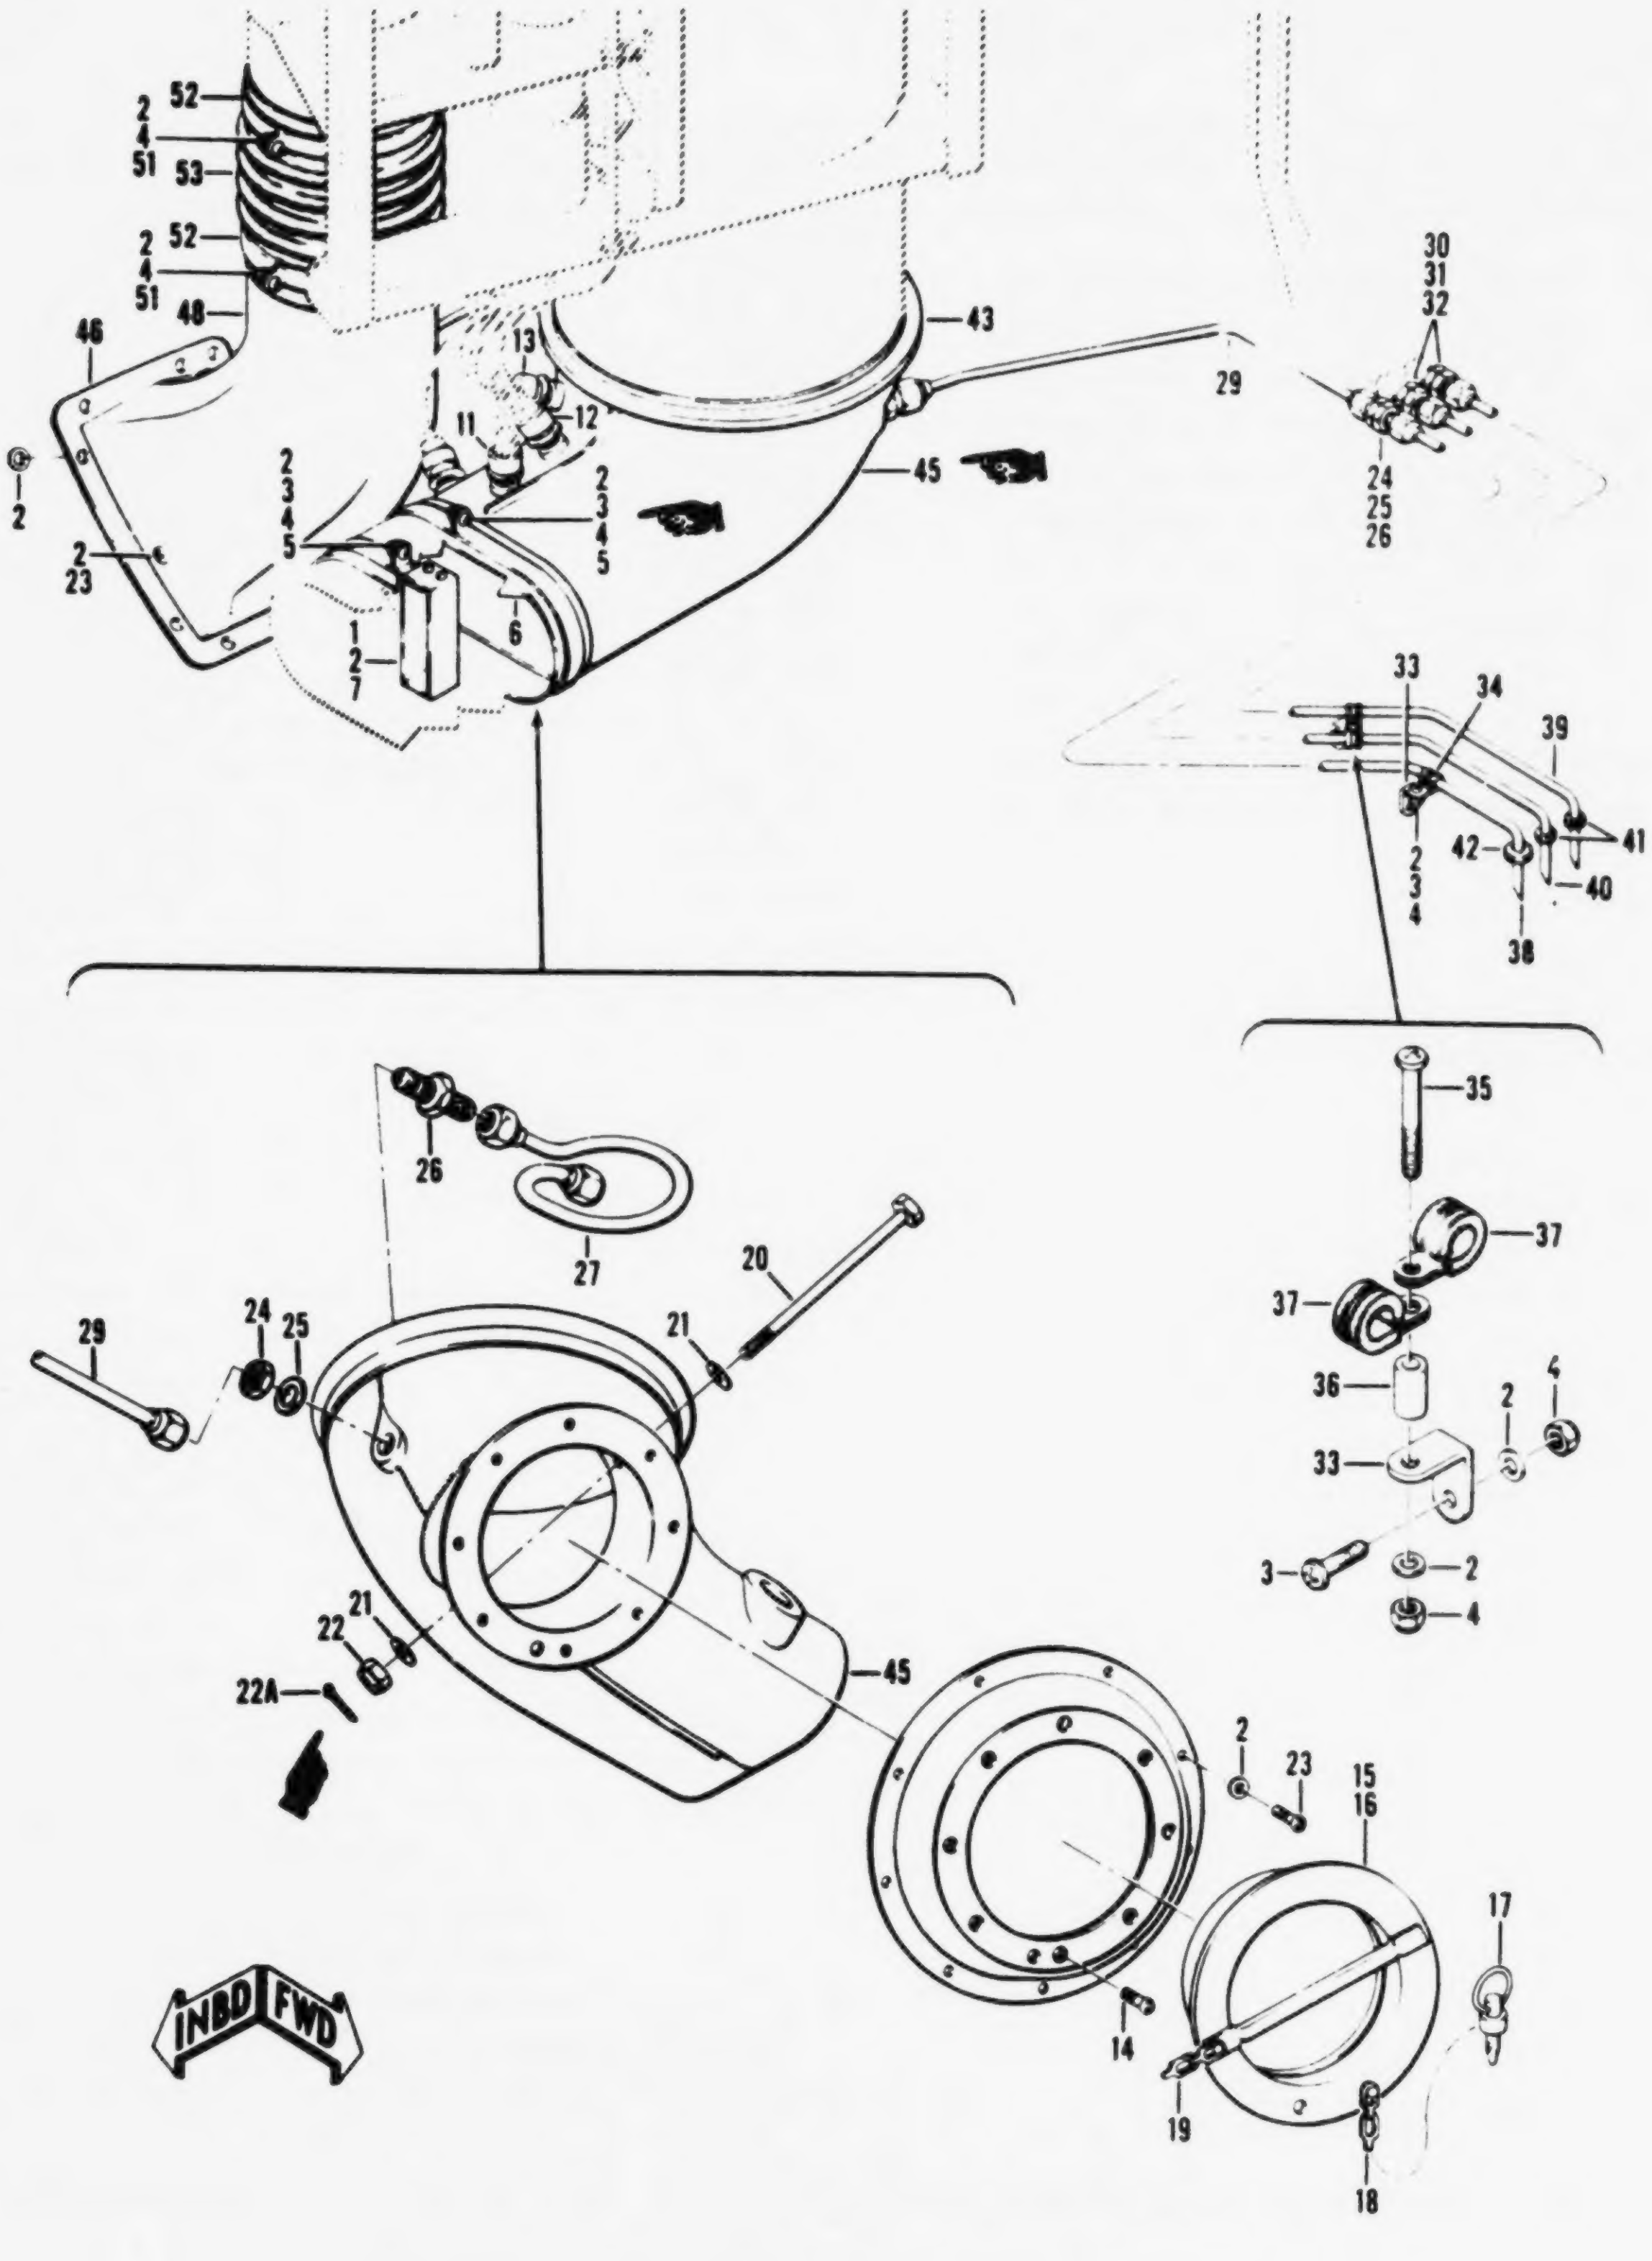
52
2
4
51
53
2
52
4
51
48
46
43
13
29
30
31
32
1
11
12
2
23
2
3
4
5
2
3
4
5
45
24
25
26
6
1
2
7
33
34
39
41
42
40
2
3
4
38
35
26
27
37
20
37
21
29
24
25
36
2
4
33
3
2
4
21
22
22A
45
2
23
15
16
17
14
19
18
INBD
FWD

Figure 394. Heater Installation Winterization Auxiliary Equipment

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
394		PBOZZ	1660-00-018-0055	97499	204-706-012-11	WINTERIZATION KIT,H USBL EFF 63-8500 THRU 64-14191	UHB,UHC,UHM	EA	1
94	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHB,UHC,UHM	EA	2
4	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	V
394	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHM	EA	V
394	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	V
394	5	MFOZZ	4730-00-879-0336	97499	204-070-764-1	.CLAMP,HOSE	UHB,UHC,UHM	EA	2
394	6	PAOZZ	5330-00-736-1008	97499	204-070-190-1	.COUPLING,CABIN HEAT	UHB,UHC,UHM	EA	1
394	7	PAOZZ	1660-00-973-0740	97499	204-070-721-1	.SPACER ASSY,HEATER	UHB,UHC,UHM	EA	1
394	11	XDOZZ		81901	P230200	.SWITCH,CYCLING	UHB,UHC,UHM	EA	1
394	12	XDOZZ		97499	204-070-265-11	.SWITCH,OVERHEAT	UHB,UHC,UHM	EA	1
394	13	XDOZZ		97499	204-070-266-1	.SWITCH,THERMOSTATIC	UHB,UHC,UHM	EA	1
394	14	PAOZZ	5305-00-958-3409	96906	MS24694S52	.SCREW,MACHINE	UHB,UHC,UHM	EA	8
394	15	PA000	1660-00-886-3336	97499	204-070-259-1	.CAP ASSEMBLY	UHB,UHC,UHM	EA	1
394	16	PAOZZ	1660-00-873-2307	97499	204-070-259-9	..SEAL,HEATER INSTL	UHB,UHC,UHM	EA	1
394	17	PAOZZ	5340-00-655-7853	96906	MS17990-405	..PIN,QUICK RELEASE	UHB,UHC,UHM	EA	1
394	18	MOOZZ		97499	25C10-1A3	..CHAIN,SAFETY	UHB,UHC,UHM	EA	1
394	19	XDOZZ		97499	25C10-1A6	..CHAIN,WELDLESS	UHB,UHC,UHM	FT	1
394	20	PAOZZ	5306-00-151-1744	88044	AN4-56	.BOLT,MACHINE	UHB,UHC,UHM	EA	1
394	21	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHB,UHC,UHM	EA	2
394	22	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H	UHB,UHC,UHM	EA	1
94	22A	PAOZZ	5315-00-584-0258	88044	AN381-25-12	.PIN	UHC,UHM	EA	1
394	23	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE	UHB,UHC,UHM	EA	V
394	24	PAOZZ	5310-00-864-5872	88044	AN924-6J	.NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	V
394	25	PBOZZ	5310-00-167-0807	88044	AN960C916	.WASHER,FLAT	UHB,UHC,UHM	EA	V
394	26	PAOZZ	4730-00-510-7192	88044	AN832-6J	.NIPPLE,TUBE	UHB,UHC,UHM	EA	2
394	27	PAOZZ	4710-00-762-7226	97499	204-072-232-1	TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
394	29	XBOZZ	4710-00-866-1894	97499	204-070-280-1	.TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
39	30	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	2
394	31	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT	UHB,UHC,UHM	EA	2
394	32	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE,TUBE	UHB,UHC,UHM	EA	2
394	33	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHB,UHC,UHM	EA	V
394	34	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
394	35	PAOZZ	5305-00-995-3440	96906	MS35207-270	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
394	36	PAOZZ	5365-00-203-8968	80205	NAS43DD3-76	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
394	37	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHB,UHC,UHM	EA	2
394	38	XBOZZ	4710-00-889-9539	97499	204-070-281-1	.TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
394	39	MFOZZ	4710-00-548-8846	97499	204-070-134-7	.TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
394	40	MFOZZ	4710-00-548-8752	97499	204-070-134-5	.TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
394	41	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	2
394	42	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC	UHB,UHC,UHM	EA	1
394	43	PAOZZ	1660-00-674-4369	89513	C07C05	.CLAMP ASSY,HEATER	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
394	45	XBOZZ		97499	204-070-247-15	.PLENUM ASSEMBLY.................................UHB,UHC,UHM	EA	1
394	46	PAOZZ	1880-00-856-3926	97499	204-070-232-1	.STRAINER ELEMENT,SE.............................UHB,UHC,UHM	EA	1
394	48	XBOZZ	1880-00-076-5643	97499	204-070-196-7	.ELBOW,AIR INLET.................................UHB,UHC,UHM	EA	1
394	51	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE...................................UHB,UHC,UHM	EA	2
394	52	PAOZZ	5340-00-801-3356	88044	AN735D80	.CLAMP,LOOP......................................UHB,UHC,UHM	EA	2
394	53	PAOZZ	4720-00-984-3091	97499	70-001B20F1223	.HOSE,AIR DUCT...................................UHB,UHC,UHM	EA	1

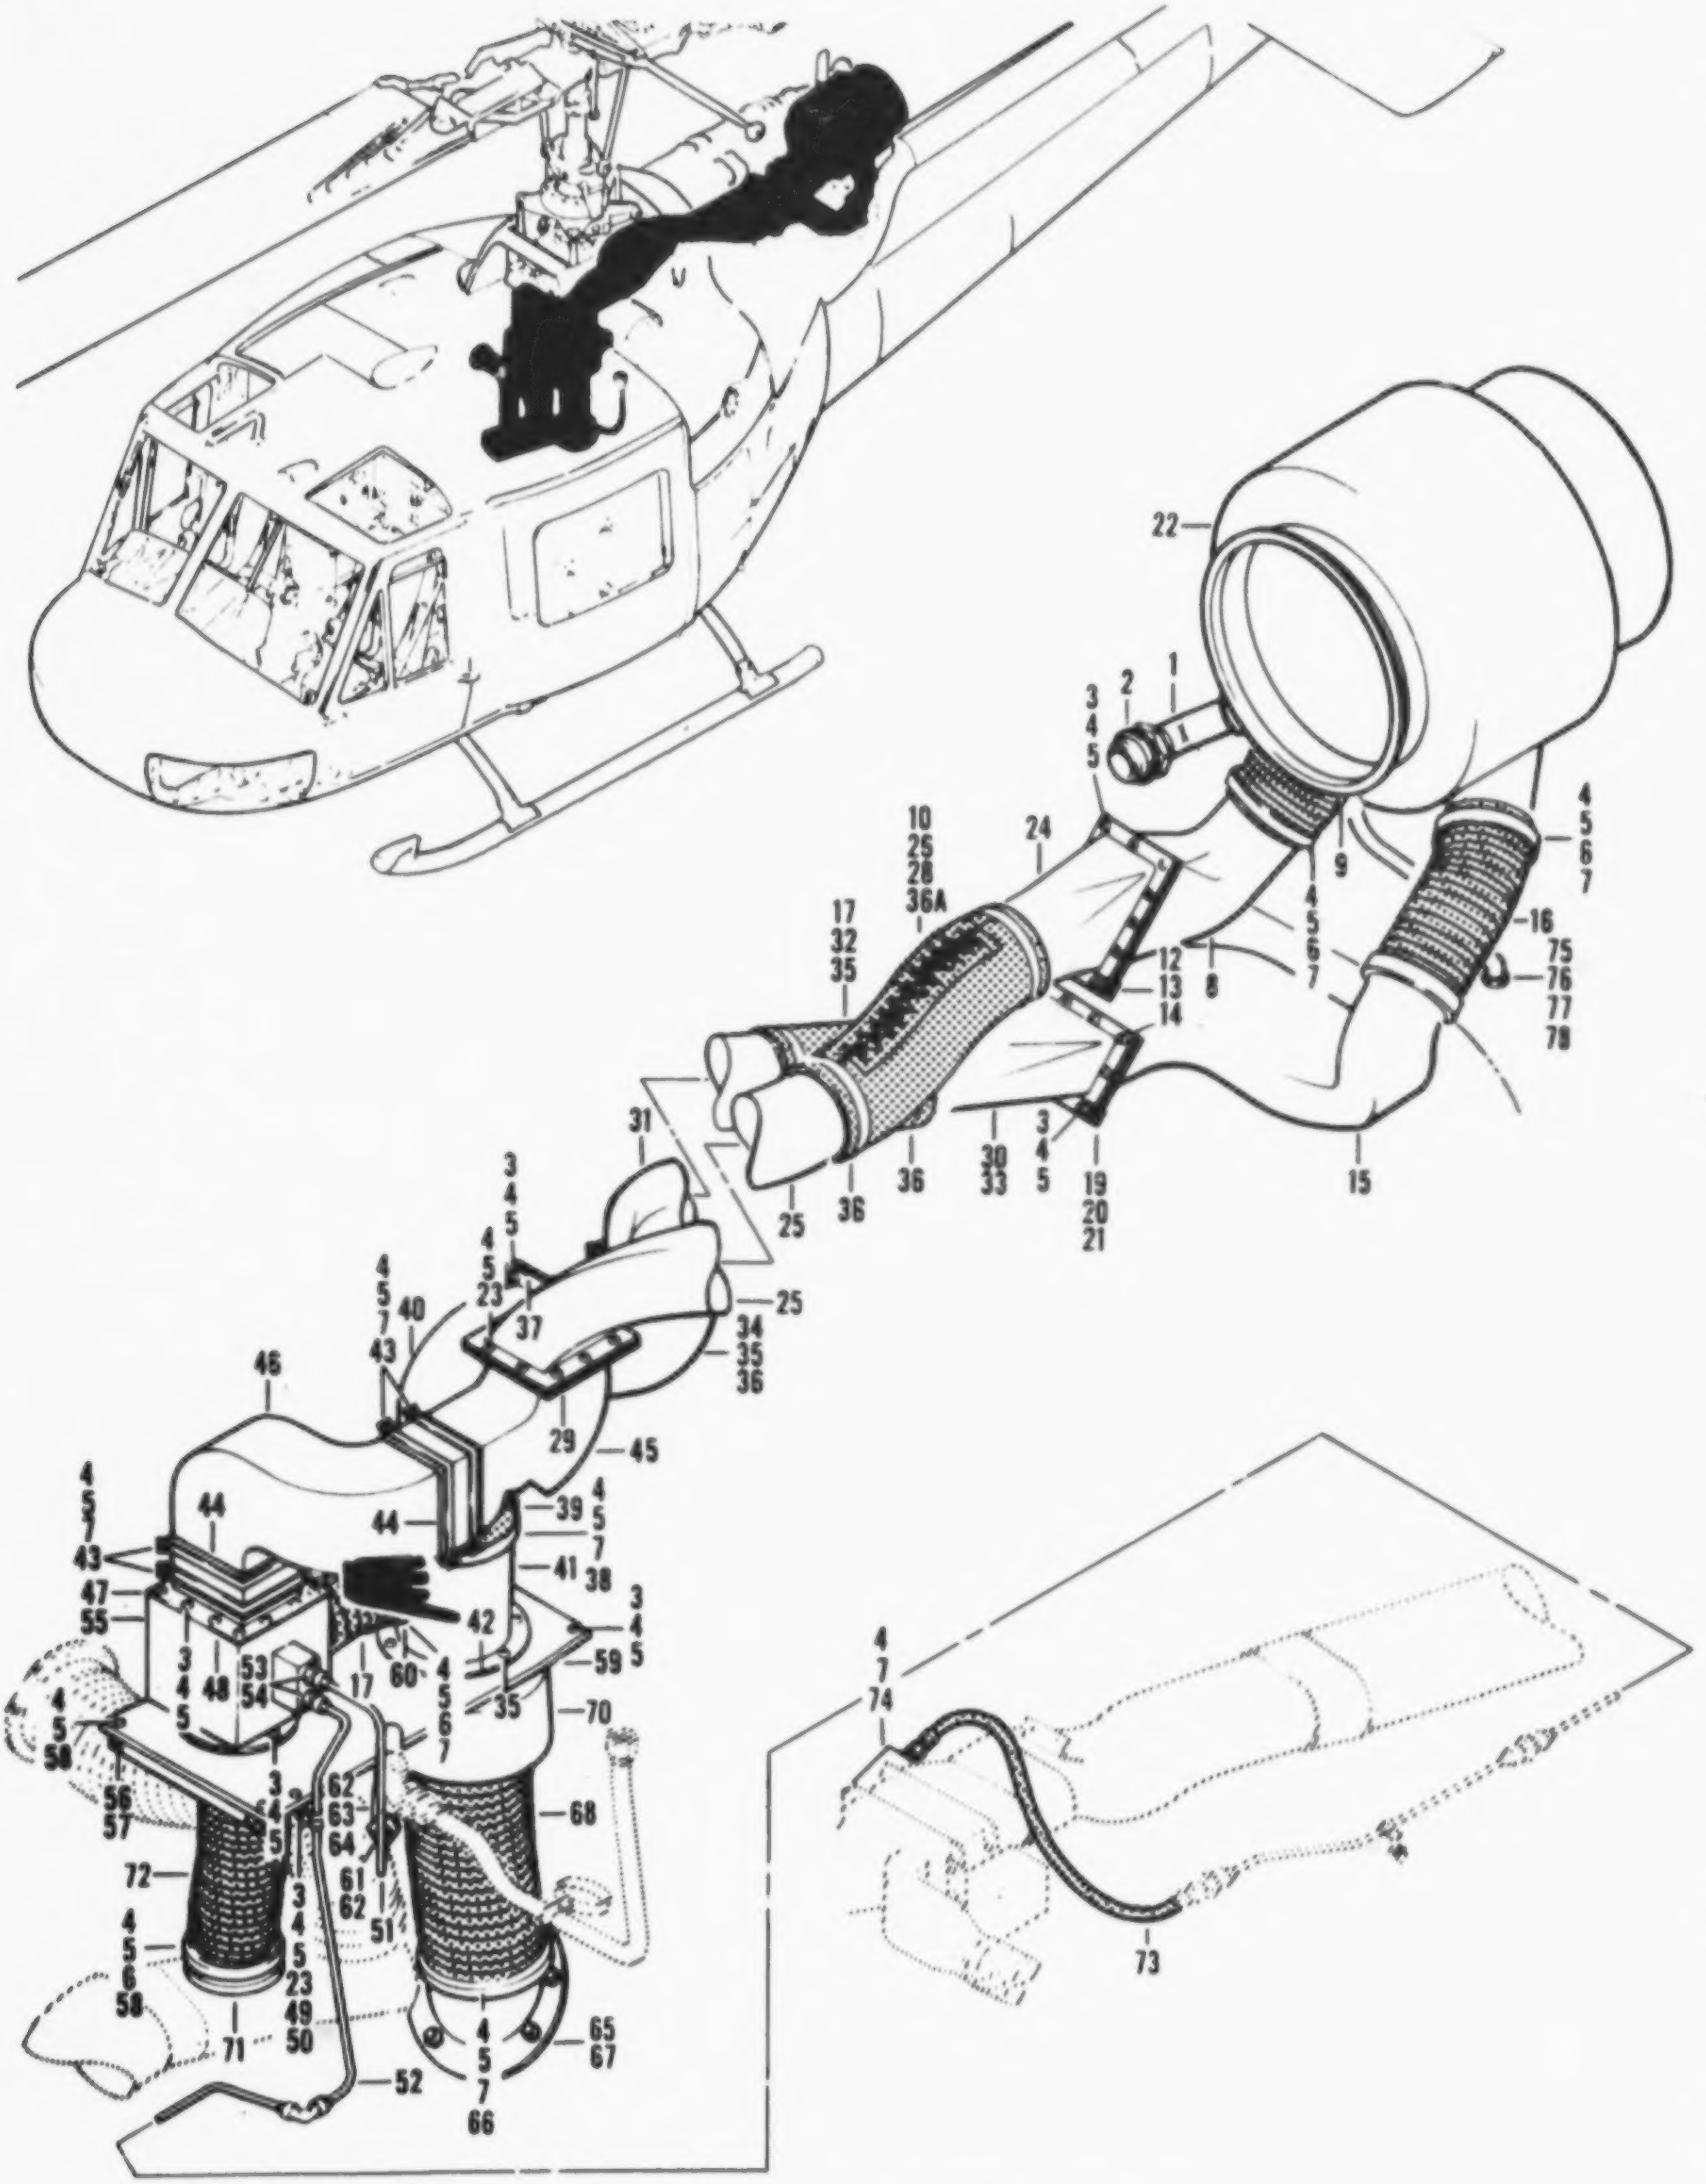
22
1
2
3 4 5
4 5 6 7
9
24
10 25 28 36A
17 32 35
4 5 6 7
12
13
14
8
16
75
76
77
78
31
30 33
3 4 5
19 20 21
15
25
36
36
3 4 5
4 5 23
37
4 5 7 43
40
25
34
35
36
46
29
45
44
44
39
4 5 7
41
38
4 5 7 43
47
55
42
3 4 5
3 4 5
48
53 54
17
60
4 5 6 7
35
59
70
4 5 58
56 57
3 4 5
62 63 64
68
72
61 62
51
4 5 6 58
3 4 5 23 49 50
71
4 5 7 66
65
67
52
4 7 74
73

Figure 395. Installation Kit, Heater, Winterization

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
395		PAOZZ	1660-00-909-3817	97499	204-706-052-1	INSTL KIT,HEATER WINTERIZATION SEE FIG 4 FOR NHA USBL EFF 65-9416 & SUBSEQUENT UHC,UHM	EA	1
395	1	XBOZZ	1560-00-944-5826	97499	204-060-460-7	DUCT ASSY,COOLING UHC,UHM	EA	1
395	2	PAOZZ	5330-00-839-8268	97499	204-060-463-1	.GASKET UHC,UHM	EA	1
395	3	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW,MACHINE UHC,UHM	EA	V
395	4	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT UHC,UHM	EA	V
395	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHC,UHM	EA	V
395	6	PAOZZ	5340-00-801-3356	88044	AN735D80	.CLAMP,LOOP UHC,UHM	EA	V
395	7	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE UHC,UHM	EA	V
395	8	XBOZZ	1560-00-849-4246	97499	204-072-338-1	DUCT ASSY,HOT AIR UHC,UHM	EA	1
395	9	XDOZZ		97499	204-072-264-11	HOSE,DUCT UHC,UHM	EA	1
395	10	XDOZZ		97499	204-072-264-15	HOSE,DUCT UHC,UHM	EA	1
395	12	XBOZZ	1660-00-993-5489	97499	204-072-344-1	.SPACER,AIR INTAKE,H UHC,UHM	EA	1
395	13	XBOZZ	1660-00-993-5497	97499	204-072-345-1	.SPACER,AIR INTAKE,H UHC,UHM	EA	1
395	14	XBOZZ	1560-00-897-3412	97499	204-072-339-1	.RETAINER PLATE,DUCT UHC,UHM	EA	2
395	15	XBOZZ	1560-00-849-4243	97499	204-072-337-1	.DUCT ASSY,HEATER UHC,UHM	EA	1
395	16	XDOZZ		97499	204-072-264-9	.HOSE,AIR DUCT UHC,UHM	EA	1
395	17	XBOZZ	4720-00-933-1245	97499	204-072-264-13	.HOSE,DUCT UHC,UHM	EA	2
395	19	XBOZZ	1660-00-993-5494	97499	204-072-343-1	.SPACER,HOT AIR VENT UHC,UHM	EA	1
395	20	XBOZZ	1660-00-993-5495	97499	204-072-342-1	.SPACER,HOT AIR VENT UHC,UHM	EA	1
395	21	XBOZZ	1560-00-897-3438	97499	204-072-341-1	.RETAINER PLATE,DUCT UHC,UHM	EA	2
395	22	PAOFF	1660-00-994-1131	97499	204-072-263-1	.HEAT EXCHANGER,AIR UHC,UHM	EA	1
395	23	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE UHC,UHM	EA	V
395	24	XBOZZ	1560-00-849-4245	97499	204-072-333-1	.DUCT ASSY,HOT AIR UHC,UHM	EA	1
395	25	XBOZZ	1560-00-849-4244	97499	204-072-332-1	.DUCT ASSY,HOT AIR UHC,UHM	EA	1
395	26	XBOZZ	1560-00-849-4239	97499	204-072-334-1	.DUCT ASSEMBLY,FIRE UHC,UHM	EA	1
395	28	XBOZZ	5640-00-932-5137	97499	204-072-321-7	.INSULATION BLANKET, UHC,UHM	EA	1
395	29	MFOZZ	5330-00-934-8474	97499	204-072-255-1	.GASKET UHC,UHM	EA	6
395	30	XBOZZ	1560-00-849-4242	97499	204-072-336-1	.DUCT ASSEMBLYCOLD UHC,UHM	EA	1
395	31	XBOZZ	1560-00-849-4241	97499	204-072-335-1	.DUCT ASSEMBLY,COLD UHC,UHM	EA	1
395	32	XBOZZ	1560-00-849-4240	97499	204-072-334-3	.DUCT ASSEMBLY,FIRE UHC,UHM	EA	1
395	33	XAOZZ		97499	204-072-334-13	..FLAP ASSEMBLY USBL EFF 65-9416 AND SUBSEQUENT UHC,UHM	EA	1
395	34	XBOZZ	1560-00-944-5824	97499	204-072-242-1	.ELBOW ASSY,HEAT EXC UHC,UHM	EA	1
395	35	XBOZZ	5640-00-932-5136	97499	204-072-321-5	.INSULATION BLANKET, UHC,UHM	EA	1
395	36	XDOZZ		80205	NAS398-90	.CLAMP,HOSE UHC,UHM	EA	4
395	36A	XDOZZ		80205	NAS398-82	.CLAMP,HOSE UHC,UHM	EA	4
395	37	MFOZZ	5330-00-936-5585	97499	204-072-254-1	.GASKET UHC,UHM	EA	2
395	38	PBOZZ	4730-00-842-1187	96906	MS21920-51	.CLAMP,HOSE UHC,UHM	EA	2
395	39	XDOZZ		97499	204-072-264-7	.HOSE,DUCT UHC,UHM	EA	1
395	40	XBOZZ	1560-00-944-5819	97499	204-072-247-1	.ELBOW ASSY,HEAT EXC UHC,UHM	EA	1
395	41	PBOZZ	1560-00-944-5825	97499	204-072-241-1	.DUCT ASSY,BY-PASS UHC,UHM	EA	1
395	42	MFOZZ	DELETED	97499	204-072-258-1	.GASKET UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
395	43	XDOZZ	5340-00-997-2543	97499	204-072-253-1	.STRAP,RETAINING .... UHC,UHM	EA	8
395	44	XBOZZ	5330-00-054-3635	97499	204-072-272-1	.SEAL,COUPLER .... UHC,UHM	EA	2
395	45	XBOZZ	1560-00-944-5823	97499	204-072-243-1	.DUCT ASSY,HOT AIR .... UHC,UHM	EA	1
395	46	PBOZZ	1560-00-944-5815	97499	204-072-250-1	.DUCT ASSY,HEAT EXCH .... UHC,UHM	EA	1
395	47	XBOZZ	1560-00-944-5816	97499	204-072-251-1	.ADAPTER ASSY,MIXING .... UHC,UHM	EA	1
395	48	MFOZZ	DELETED	97499	204-072-259-1	.GASKET .... UHC,UHM	EA	1
395	49	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHC,UHM	EA	1
395	50	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP .... UHC,UHM	EA	1
395	51	MFOZZ		97499	204-072-274-1	.TUBE ASSEMBLY .... UHC,UHM	EA	1
395	52	MFOZZ		97499	204-072-273-1	.TUBE ASSEMBLY .... UHC,UHM	EA	1
395	53	PAOZZ	4730-00-834-9560	96906	MS24392D4	.NIPPLE,TUBE .... UHC,UHM	EA	2
395	54	PCOZZ	5330-00-805-2966	96906	MS28778-4	.PACKING,PREFORMED .... UHC,UHM	EA	2
395	55	PBOOD	1660-00-993-5196	97499	204-072-262-5	.VALVE,AIR MIXTURE,H .... UHC,UHM	EA	1
395	56	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE .... UHC,UHM	EA	2
395	57	MFOZZ		97499	204-072-271-1	.BRACKET .... UHC,UHM	EA	1
395	58	PAOZZ	5305-00-925-7863	96906	MS27039-1-16	.SCREW,MACHINE .... UHC,UHM	EA	8
395	59	XBOZZ	1560-00-849-4238	97499	204-072-252-1	.SHELF ASSEMBLY,BLOW .... UHC,UHM	EA	1
395	60	XDOZZ	4710-00-851-5370	97499	204-072-275-1	.TUBE ASSEMBLY .... UHC,UHM	EA	1
395	61	PBOZZ	4730-00-684-7161	96906	MS24399D22	.REDUCER,TUBE .... UHC,UHM	EA	1
395	62	PAOZZ	5330-00-804-5694	96906	MS28778-16	.PACKING,PREFORMED .... UHC,UHM	EA	2
395	63	PBOZZ	4730-00-080-0334	96906	MS24389D16	.TEE,TUBE TO BOSS .... UHC,UHM	EA	1
395	64	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON .... UHC,UHM	EA	1
395	65	XBOZZ	1560-00-944-5828	97499	204-072-239-1	.SCREEN ASSY,HOT AIR .... UHC,UHM	EA	1
395	66	PBOZZ	5340-00-531-7253	88044	AN735D96	.CLAMP,LOOP .... UHC,UHM	EA	2
395	67	PBOZZ	1560-00-944-5827	97499	204-072-240-1	.ADAPTER,DUCT,INTAKE .... UHC,UHM	EA	1
395	68	XDOZZ		80205	NAS1374A24SA052	.HOSE,AIR DUCT .... UHC,UHM	EA	1
395	70	PAOFF	1660-00-409-8218	89513	169901-7	.BLOWER,UNIT,VENTILA SEE FIG.398A FOR BREAKDOWN OF PN 204-072-261-7 (169901-7) .... UHC,UHM	EA	1
395	71	XBOZZ	1560-00-944-5822	97499	204-072-244-1	.ADAPTER ASSY,PLENUM .... UHC,UHM	EA	1
395	72	XBFZZ		80205	NAS137A20SA058	.HOSE,AIR DUCT .... UHC,UHM	EA	1
395	73	PBOZZ	4720-00-919-5012	78570	S20204-1800	.HOSE ASSEMBLY,METAL .... UHC,UHM	EA	1
395	74	PAOFF	1660-00-977-2455	97499	205-072-277-1	.SENSOR,TEMPERATURE AIR DISTRIBUTION SEE FIG.408 FOR BREAKDOWN OF 206-072-277-1 (35D48) .... UHC,UHM	EA	1
395	76	XBOZZ	4730-00-933-0675	00624	3750-4	.COUPLING ASSEMBLY,Q .... UHC,UHM	EA	1
395	76	PAOZZ	5330-00-263-8028	96906	MS29512-04	.GASKET .... UHC,UHM	EA	2
395	77	PAOZZ	4730-00-278-3682	88044	AN939D4	.ELBOW .... UHC,UHM	EA	1
395	78	PAOZZ	4730-00-277-6445	88044	AN832-4D	.UNION .... UHC,UHM	EA	1

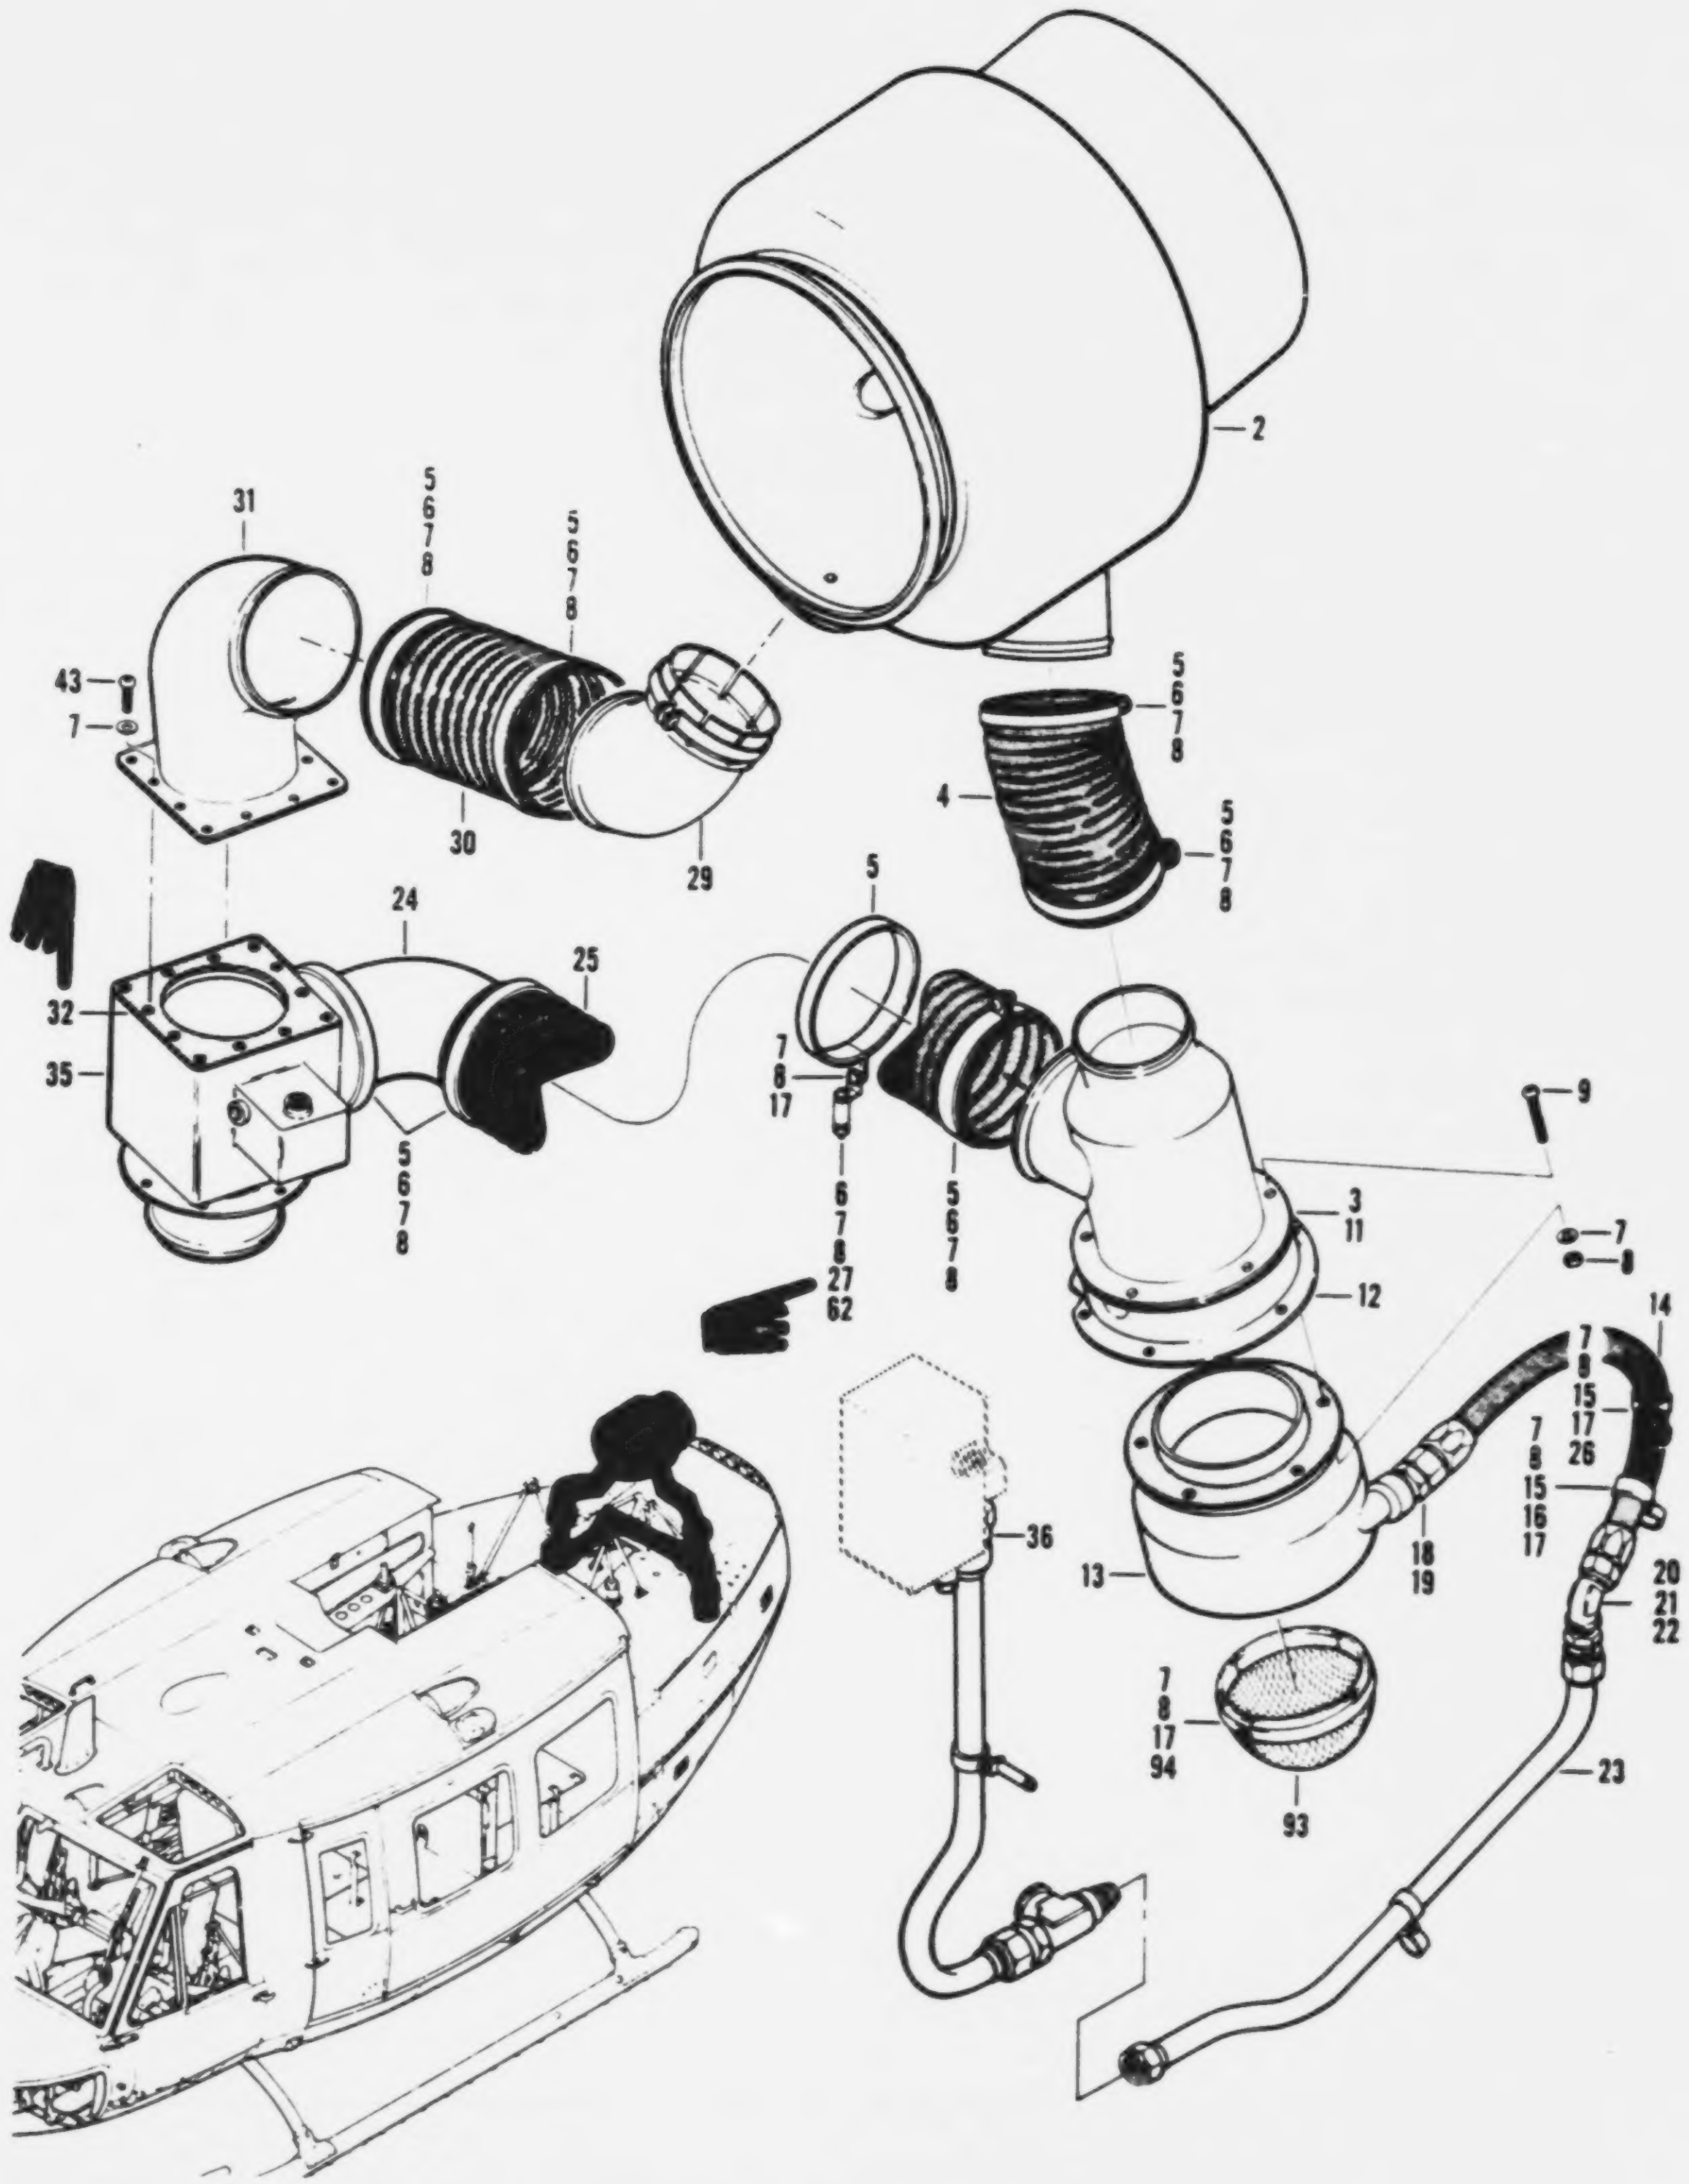
2
31
5 6 7 8
5 6 7 8
43
7
5 6 7 8
4
5 6 7 8
30
29
5
24
25
32
35
7 8 17
5 6 7 8
6 7 8 27 62
5 6 7 8
9
3 11
7
8
12
14
7 8 15 17 26
7 8 15 16 17
36
13
18 19
20 21 22
7 8 17 94
93
23

Figure 396. Heater Kit, Auxiliary (Sheet 1 of 2)

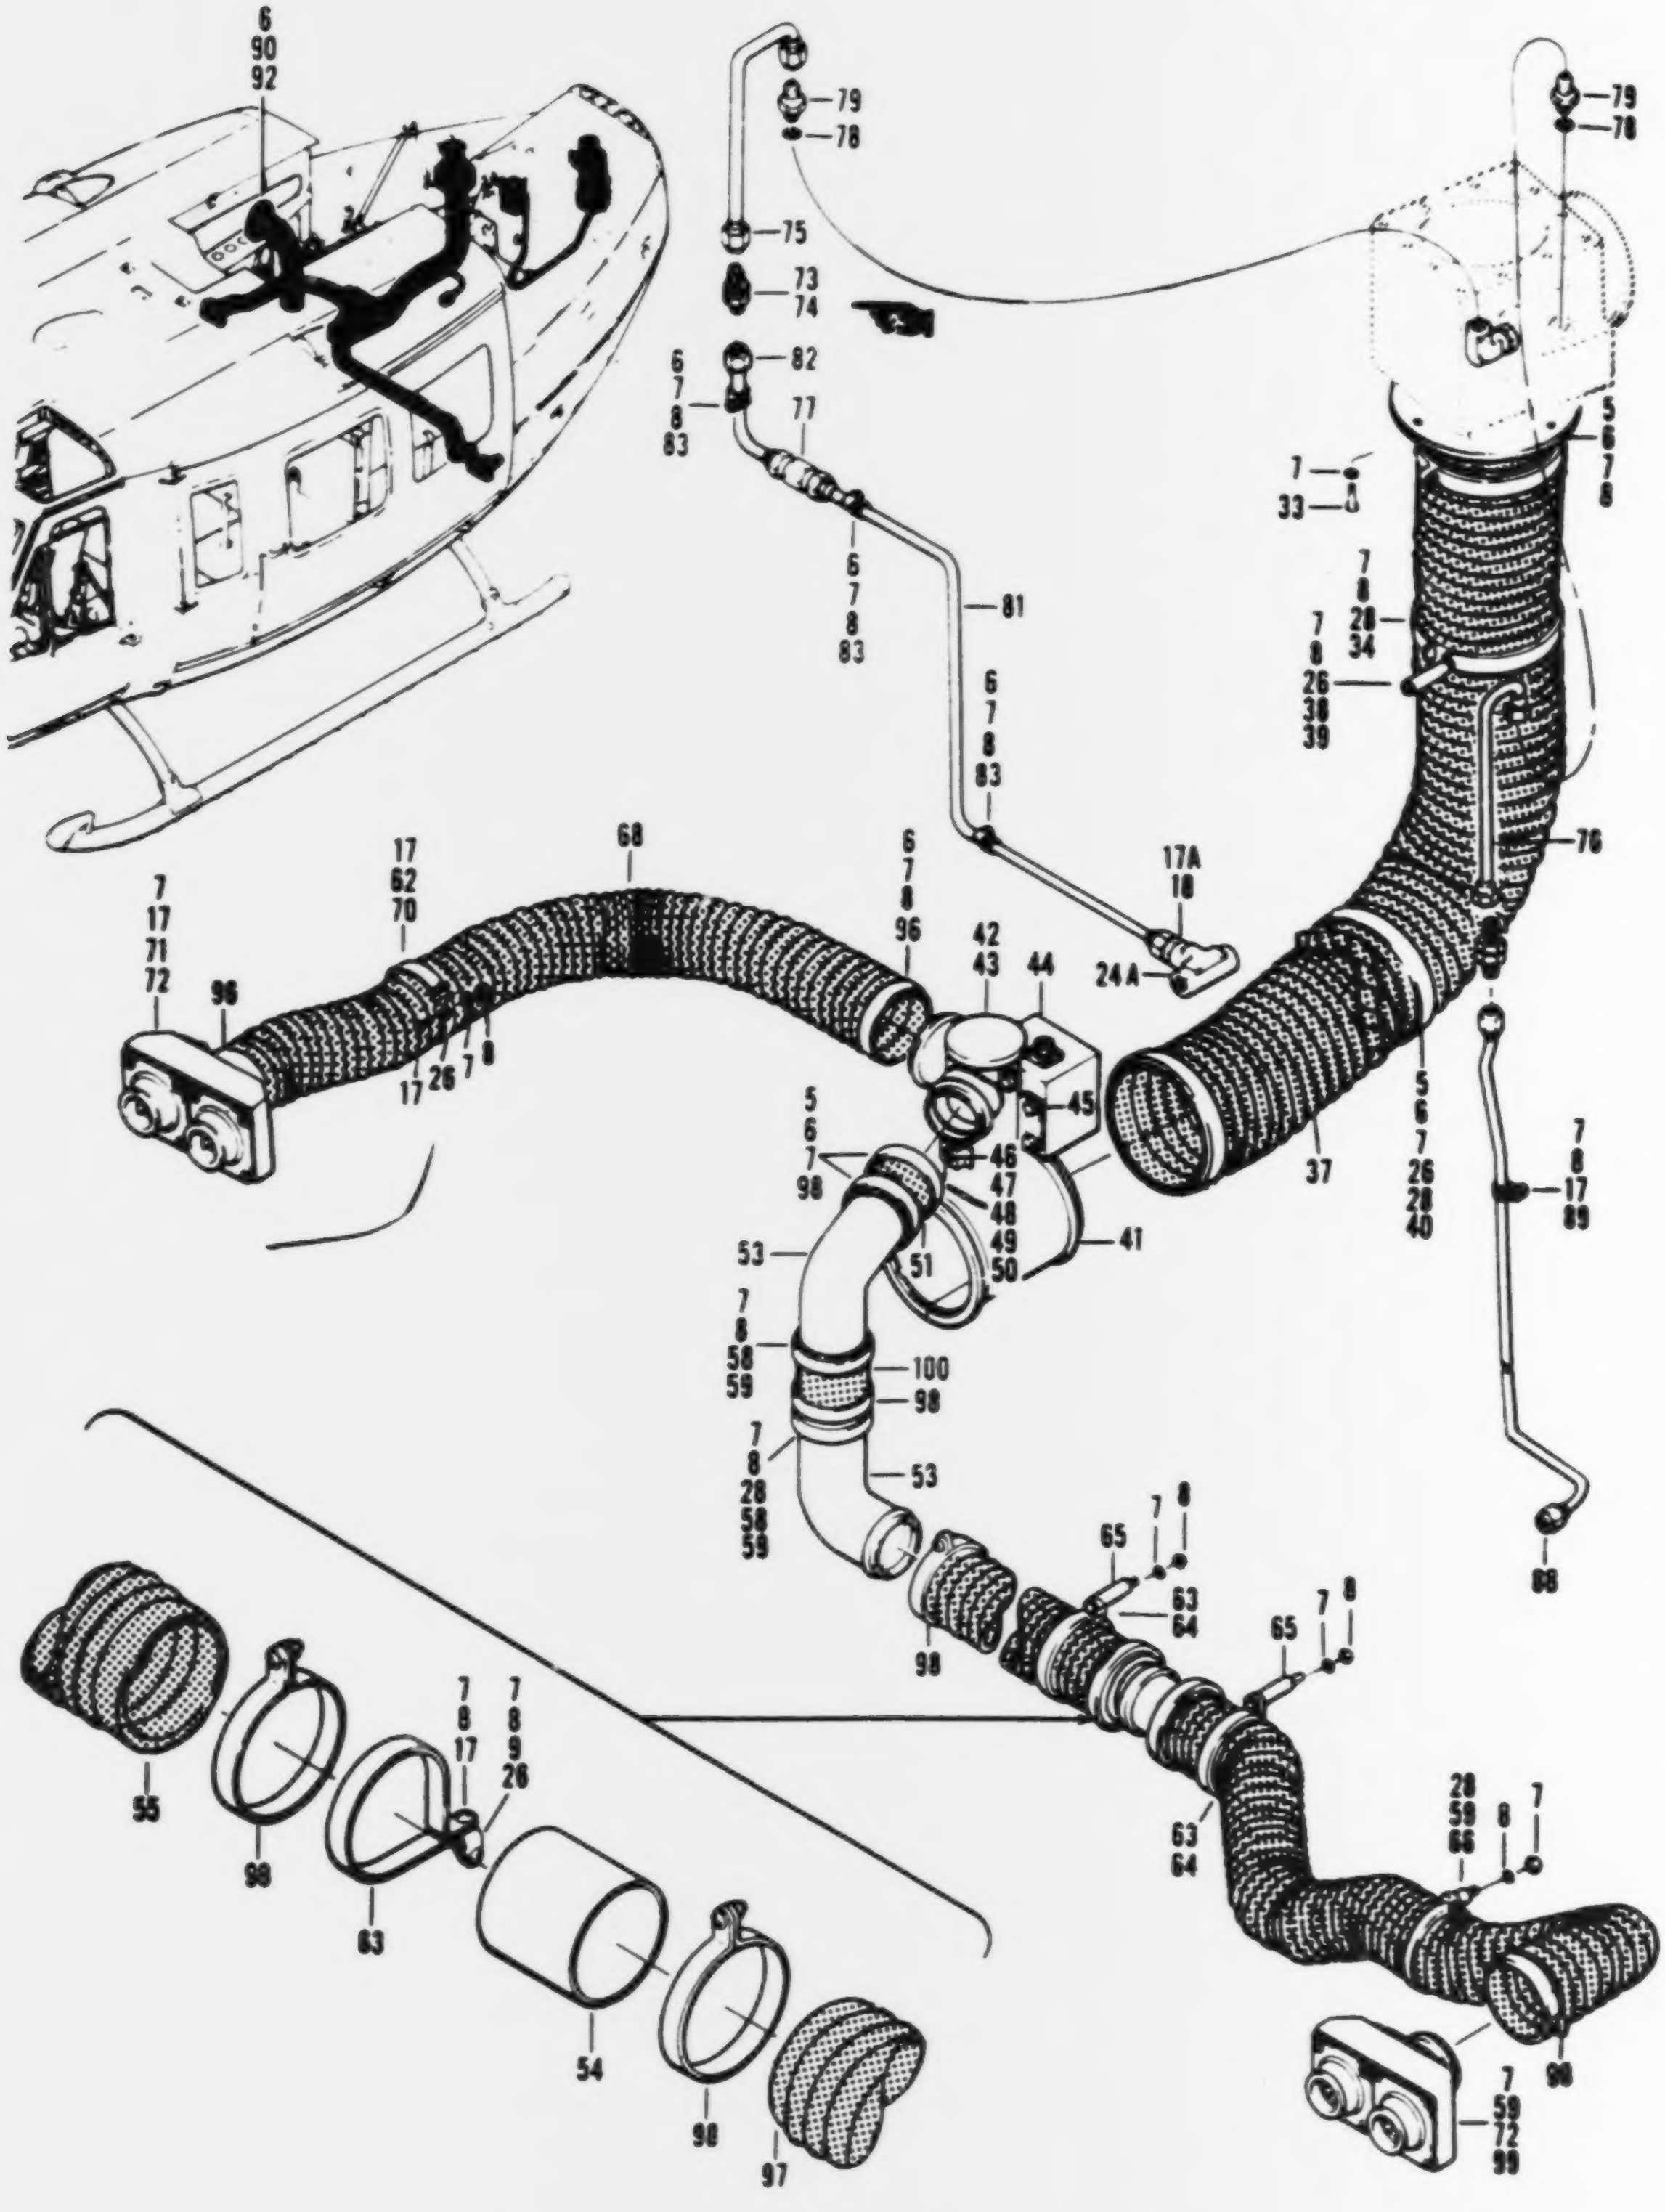
6
90
92
79
78
75
73
74
82
6
7
8
83
77
6
7
8
83
81
6
7
8
83
17A
18
24A
79
78
5
6
7
8
7
33
7
8
28
34
7
8
26
38
39
76
68
17
62
70
7
17
71
72
96
17
26
7
8
6
7
8
96
42
43
44
45
5
6
7
98
46
47
48
49
50
41
51
53
37
5
6
7
26
28
40
7
8
17
89
7
8
58
59
100
98
7
8
28
58
59
53
65
7
8
63
64
98
65
7
8
88
55
98
7
8
17
7
8
9
26
63
54
98
97
63
64
28
59
66
8
7
7
59
72
99
98

Figure 396. Heater Kit, Auxiliary (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
						GROUP 13 ENVIRONMENTAL CONTROL SYSTEM		
396		PAOFF	1660-00-484-8719	97499	205-706-028-11	HEATER KIT, AUXILIARY SEE FIG.5 FOR NHA......UHE,UHH,UHV,UHX	EA	1
396	2	PAOZZ	1660-00-175-0360	97499	204-072-263-9	.HEAT EXCHANGER,AIR..........................UHE,UHH,UHV,UHX	EA	1
396	3	PAOZZ	1660-00-484-8721	97499	205-072-202-5	.FITTING,HEAT CONTRO.........................UHE,UHH,UHV,UHX	EA	1
396	4	PBOZZ	4720-00-134-4282	97499	204-072-264-23	.HOSE,AIR DUCT...............................UHE,UHH,UHV,UHX	EA	1
396	5	PAOZZ	5340-00-801-3356	88044	AN735D80	.CLAMP,LOOP..................................UHE,UHH,UHV,UHX	EA	V
396	6	PAOZZ	5305-00-995-3442	96906	MS35207-268	SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	V
396	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT ....UHE,UHH,UHV,UHX	EA	V
396	8	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON. ....UHE,UHH,UHV,UHX	EA	V
396	9	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	V
396	11	MFOZZ		97499	204-072-258-3	.GASKET...................................... UHE,UHH,UHV,UHX	EA	2
396	12	PAOZZ	1660-00-113-5794	97499	205-072-204-1	.PAN,BLOWER TO TEE...........................UHE,UHH,UHV,UHX	EA	1
396	13	PAOFF	1660-00-409-8216	89513	169901-7	.BLOWER UNIT,VENTILA SEE FIG.398A FOR BREAKDOWN OF PN 204-072-261-7 (169901-7).........................UHE,UHH,UHV,UHX	EA	1
396	14	PBOZZ	1660-00-179-6504	09268	S21916-2200W	.HOSE ASSY,AIR DUCT..........................UHE,UHH,UHV,UHX	EA	1
396	15	PAOZZ	5340-00-995-8005	81996	EAB700D22	.CLAMP,LOOP..................................UHE,UHH,UHV,UHX	EA	2
396	16	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP..................................UHE,UHH,UHV,UHX	EA	1
396	17	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	V
396	17A	PBOZZ	4730-00-684-7161	96906	MS24399D22	.REDUCER,TUBE................................UHE,UHH,UHV,UHX	EA	1
396	18	PAOZZ	5330-00-599-0981	02697	3-16S418-6	.PACKING,PREFORMED...........................UHE,UHH,UHV,UHX	EA	2
396	19	PAOZZ	4730-00-684-6913	96906	MS24392D16	.NIPPLE,TUBE.................................UHE,UHH,UHV,UHX	EA	1
396	20	PAOZZ	4730-00-279-0122	96906	MS24395-D16	.ELBOW,TUBE..................................UHE,UHH,UHV,UHX	EA	1
396	21	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON...........................UHE,UHH,UHV,UHX	EA	1
396	22	PAOZZ	5310-00-183-4356	88044	AN960PD216	.WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	1
396	23	PBOZZ	4710-00-111-6870	97499	205-072-206-1	.TUBE ASSEMBLY,METAL.........................UHE,UHH,UHV,UHX	EA	1
396	24	PBOZZ	4520-00-564-1255	97499	205-072-463-1	.ELBOW,AIR CONDITION.........................UHE,UHH,UHV,UHX	EA	1
396	24A	PBOZZ	4730-00-725-0052	96906	MS24388D16	.TEE,TUBE TO BOSS............................UHE,UHH,UHV,UHX	EA	1
396	25	PBOZZ	4720-00-134-4346	97499	204-072-264-21	.HOSE,AIR DUCT...............................UHE,UHH,UHV,UHX	EA	1
396	26	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE...............................UHE,UHH,UHV,UHX	EA	V
396	27	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE..............................UHE,UHH,UHV,UHX	EA	1
396	28	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE...............................UHE,UHH,UHV,UHX	EA	V
396	29	PAOZZ	1660-00-113-5795	97499	205-072-200-1	.ELBOW,HEAT CONTROL..........................UHE,UHH,UHV,UHX	EA	1
396	30	PAOZZ	4720-00-134-4283	97499	204-072-264-25	.HOSE,AIR DUCT...............................UHE,UHH,UHV,UHX	EA	1
396	31	XDOZZ		97499	205-070-384-1	.ELBOW ASSY,HEATER P.........................UHE,UHH,UHV,UHX	EA	1
396	32	MFOZZ	DELETED	97499	204-072-259-1	.GASKET......................................UHE,UHH,UHV,UHX	EA	1
396	33	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE................................UHE,UHH,UHV,UHX	EA	5
396	34	PAOZZ	5305-00-990-8444	96906	MS35207-261	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	V
396	35	PAOFF	1660-00-113-9808	97499	204-072-262-11	.VALVE,AIR MIXTURE,H HEATER SEE FIG.398 FOR BREAKDOWN OF PN 204-072-262-11 (48D68).........................UHE,UHH,UHV,UHX	EA	1
396	36	PAOZZ	1660-00-113-5799	05624	BYLB9446-1	.VALVE,MIXING,HEATER HEATER SEE FIG.397 FOR BREAKDOWN OF PN BYLB9446-1 PN BYLB9446-1...........UHE,UHH,UHV,UHX	EA	1
396	37	PBOZZ	4720-00-134-4353	80205	NAS1375A20SA200	.HOSE,AIR DUCT...............................UHE,UHH,UHV,UHX	EA	1
396	38	PAOZZ	5365-00-580-4834	80205	NAS43D03-96	.SPACER,SLEEVE...............................UHE,UHH,UHV,UHX	EA	1
396	39	XDOZZ	5305-00-207-1208	88044	AN520-10R30	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
396	40	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
396	41	PBOFF	1660-00-484-8722	97499	205-070-239-3	.PLENUM ASSY,HEATER	UHE,UHH,UHV,UHX	EA	1
396	42	XBFZZ	1660-00-134-1065	97499	205-070-212-1	..CAP,AIR DUCT COVER	UHE,UHH,UHV,UHX	EA	1
396	43	PAFZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	15
396	44	PAFZZ	5945-00-718-6862	81840	A38153-001	..SOLENOID	UHE,UHH,UHV,UHX	EA	1
396	45	PAFZZ	5306-00-182-2056	88044	AN3H3A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
396	46	PBFZZ	1660-00-134-1064	97499	205-070-214-1	..SHAFT,STRAIGHT	UHE,UHH,UHV,UHX	EA	1
396	47	PAFZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER	UHE,UHH,UHV,UHX	EA	2
396	48	PAFZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
396	49	PBFZZ	1660-00-484-8718	97499	204-070-184-7	..FLAPPER ASSY,VALVE	UHE,UHH,UHV,UHX	EA	1
396	50	MFFZZ	DELETED	97499	204-070-185-1	..CONNECTOR,VALVE	UHE,UHH,UHV,UHX	EA	1
396	51	XDOZZ		80205	NAS520-20-10	.HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
396	53	PAOZZ	4730-00-918-0719	97499	205-070-464-3	.ELBOW,DUCT ASSY	UHE,UHH,UHV,UHX	EA	2
396	54	PAOZZ	1660-00-437-2718	97499	205-072-464-1	.UNION,AIR DUCT,HEAT	UHE,UHH,UHV,UHX	EA	1
396	55	PBOZZ	4720-00-438-1532	80205	NAS1375A10SA100	.HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
396	58	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
396	59	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
396	62	PAOZZ	5365-00-684-7923	80205	NAS43D03-20	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
396	63	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	3
396	64	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
396	65	PAOZZ	5365-00-684-3303	80205	NAS43D03-34	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
396	66	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
396	68	PBOZZ	4720-00-134-4354	80205	NAS1375A08SA116	.HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
396	70	PAOZZ	5340-00-548-8035	81996	EAB700-32	.CLAMP,SUPPORT	UHE,UHH,UHV,UHX	EA	1
396	71	PAOZZ	1660-00-918-0727	97499	205-070-429-5	.DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	1
396	72	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY,AIR	UHE,UHH,UHV,UHX	EA	2
396	73	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
396	74	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
396	75	MFOZZ		97499	205-072-304-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
396	76	MFOZZ		97499	205-072-305-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
396	77	PBOZZ	1660-00-484-8720	97499	205-070-304-1	.FILTER,FLUID,PRESSU	UHE,UHH,UHV,UHX	EA	1
396	78	PBOZZ	5330-00-222-1680	96906	MS9385-04	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
396	79	PAOZZ	4730-00-720-3966	96906	MS24392-D4	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
396	81	MFOZZ		97499	205-070-366-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
396	82	MFOZZ		97499	205-070-365-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
396	83	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	3
396	88	XDOZZ		97499	205-070-491-1	.TUBE ASSY,BLEED AIR	UHE,UHH,UHV,UHX	EA	1
396	89	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
396	90	PAOZZ	1660-00-918-0746	97499	205-070-427-15	.DUCT ASSEMBLY,AIRCO	UHE,UHH,UHV,UHX	EA	1
396	92	MFOZZ	DELETED	97499	205-070-404-3	.SPACER,CONNECTOR	UHE,UHH,UHV,UHX	EA	1
396	93	PAOZZ	1660-00-113-0916	97499	205-072-205-1	.SCREEN,BLOWER AIR I	UHE,UHH,UHV,UHX	EA	1
396	94	PBOZZ	5340-00-631-7253	88044	AN735D96	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
396	96	PAOZZ	4730-00-278-9102	88044	AN737RM74	.CLAMP,HOSE..................................UHE,UHH,UHV,UHX	EA	2
396	96	PAOZZ	4730-00-278-0422	88044	AN737TW74	.CLAMP,HOSE..................................UHE,UHH,UHV,UHX	EA	2
395	97	PBOZZ	4720-00-438-1531	80205	NAS1375A10SA138	.HOSE,AIR DUCT...............................UHE,UHH,UHV,UHX	EA	1
396	98	PAOZZ	4730-00-278-9126	88044	AN737TW91	.CLAMP,HOSE..................................UHE,UHH,UHV,UHX	EA	8
396	99	PAOZZ	1560-00-918-0729	97499	205-070-424-5	.DUCT ASSEMBLY...............................UHE,UHH,UHV,UHX	EA	1
396	100	XDOZZ	4720-00-993-9574	80205	NAS521-20-18	.COUPLING....................................UHE,UHH,UHV,UHX	EA	1

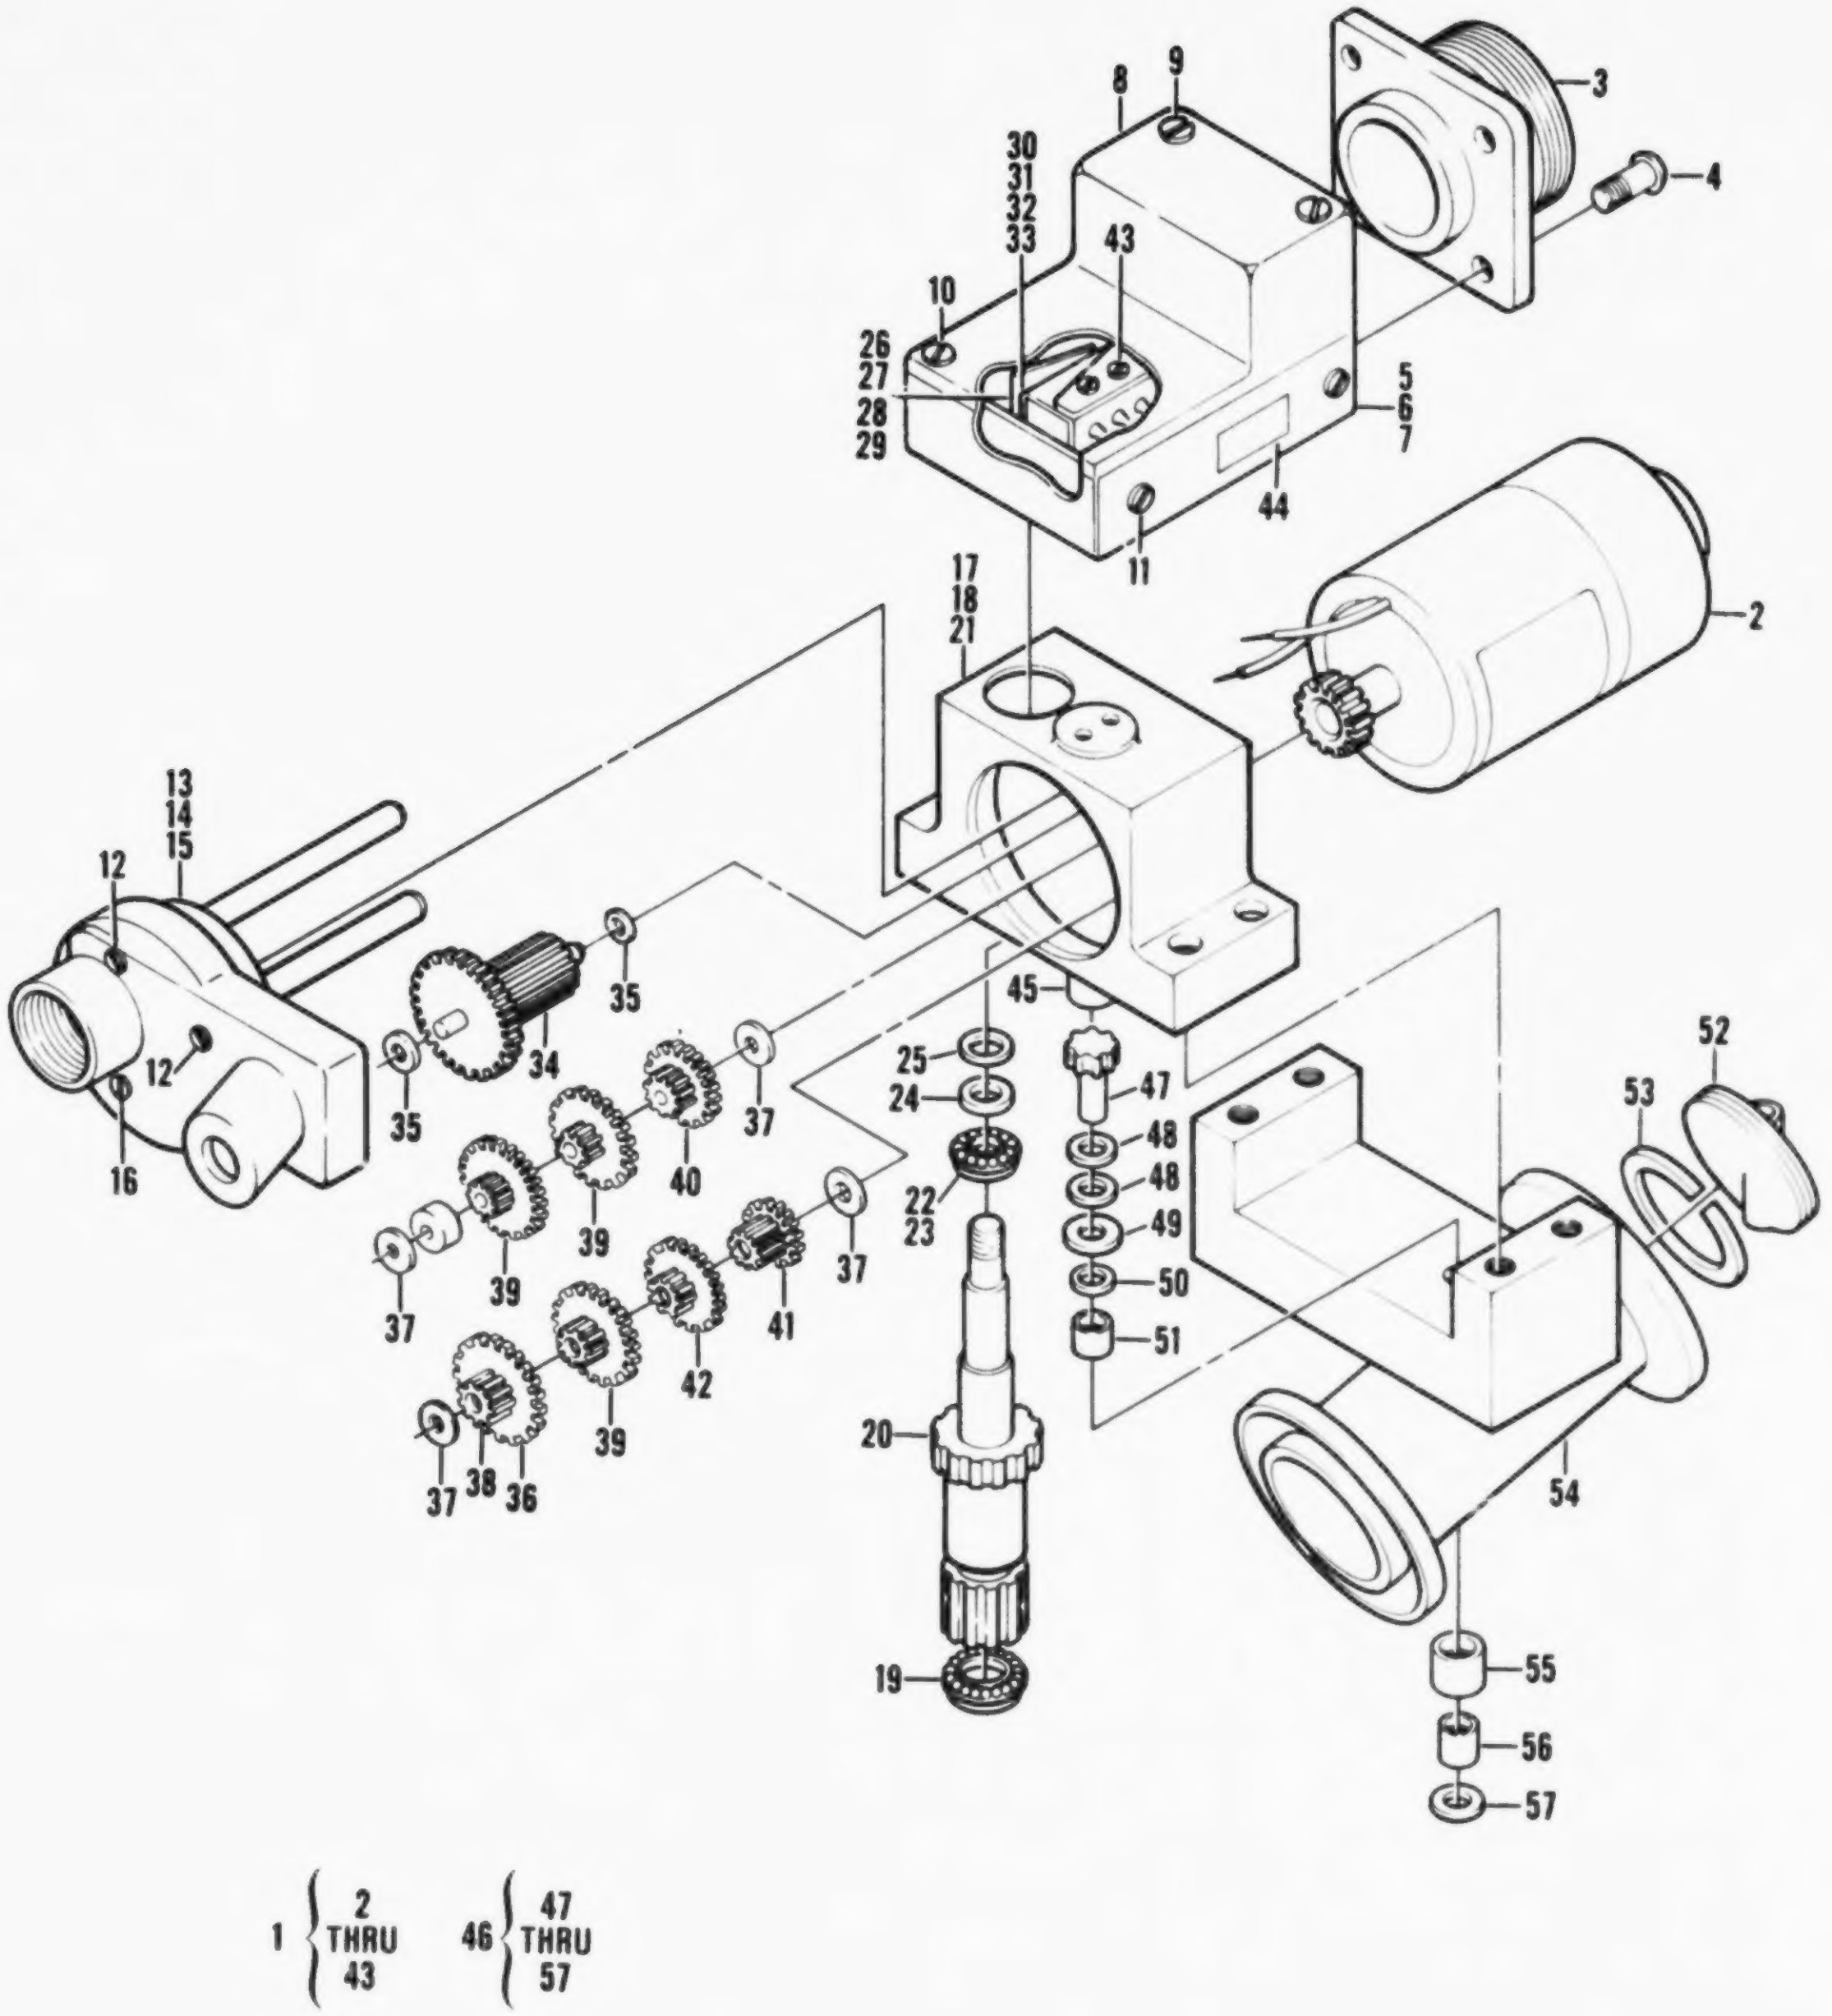
8
9
3
4
30
31
32
33
43
10
26
27
28
29
5
6
7
44
11
17
18
21
2
13
14
15
12
12
16
35
34
35
45
25
24
47
48
48
49
50
51
52
53
37
40
39
39
22
23
37
41
37
42
39
20
38
36
37
54
19
55
56
57
1 { 2 THRU 43
46 { 47 THRU 57

Figure 397. Mixing Valve, Heater

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 13 ENVIRONMENTAL CONTROL SYSTEM		
397		PAOZZ	1660-00-113-5799	05624	BYLB9446-1	VALVE,MIXING,HEATER BREAKDOWN FOR PN BYLB9446-1 SEE FIG.396 FOR NHA USBL EFF 66-16868 AND SUBSEQUENT......UHE,UHH,UHV,UHX	EA	1
397	1	XAFFF		05624	NYLC9449-1	.ACTUATOR..........UHE,UHH,UHV,UHX	EA	1
397	2	PAFFF	6105-00-156-4013	05624	FYLM43500-11	..MOTOR,DIRECT CURREN..........UHE,UHH,UHV,UHX	EA	1
397	3	PAFZZ	5935-00-814-4120	96906	MS3102R14S2P	..CONNECTOR,RECEPT..........UHE,UHH,UHV,UHX	EA	1
397	4	PAFZZ	5305-00-543-5068	96906	MS35265-16	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
397	5	XDOZZ		05624	EYLC-44-2	..SPACER,CONNECTOR..........UHE,UHH,UHV,UHX	EA	1
397	6	XBFFF		05624	NYLC1281	..HOUSING,SWITCH,ASSY..........UHE,UHH,UHV,UHX	EA	1
397	7	XBFZZ		05624	NYLC1282	...HOUSING,SWITCH..........UHE,UHH,UHV,UHX	EA	1
397	8	PBFZZ	1660-00-956-0649	05624	NYLC151	...COVER,SWITCH..........UHE,UHH,UHV,UHX	EA	1
397	9	PAFZZ	5305-00-614-0262	96906	MS35265-20	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
397	10	PAFZZ	5305-00-622-9473	96906	MS35266-21	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
397	11	PAFZZ	5305-00-990-8386	96906	MS35206-201	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
397	12	XDOZZ		05624	JYRF36	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
397	13	PBFFD	1680-00-858-8432	05624	NYLC268	..PLATE ASSEMBLY,GEAR..........UHE,UHH,UHV,UHX	EA	1
397	14	PAFZZ	3120-00-901-9243	05624	BYRB332	...BEARING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
397	15	PAFZZ	1660-00-014-2045	05624	NYLC76	...GEARSHAFT,ACTUATOR..........UHE,UHH,UHV,UHX	EA	2
397	16	PAFZZ	5305-00-614-0263	96906	MS35265-23	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
397	17	XBFFF		05624	NYLC95	..HOUSING,GEAR TRAIN..........UHE,UHH,UHV,UHX	EA	1
397	18	PAFZZ	3120-00-901-9243	05624	BYRB332	...BEARING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
397	19	PAFZZ	3110-00-411-4346	05624	CYRB160	..BEARING,BALL,ANNULA..........UHE,UHH,UHV,UHX	EA	1
397	20	PAFZZ	3040-00-960-7981	05624	NYLC154	..GEARSHAFT,HELICAL..........UHE,UHH,UHV,UHX	EA	1
397	21	PAFZZ	5305-00-958-5453	96906	MS35190-236	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
397	22	XDFZZ		05624	CYRB-80	..BEARING,BALL,ANNULA..........UHE,UHH,UHV,UHX	EA	1
397	23	PAFZZ	1660-00-956-0551	05624	NYLC7	..CARTRIDGE,BEARING..........UHE,UHH,UHV,UHX	EA	1
397	24	PAFZZ	5365-00-824-1355	05624	NYLC96	..SHIM..........UHE,UHH,UHV,UHX	EA	V
397	25	PAFZZ	5365-00-808-3957	96906	MS16625-1056	..RING,RETAINING..........UHE,UHH,UHV,UHX	EA	1
397	26	PAFZZ	5365-00-182-4733	05624	AYRD544-1	..SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
397	27	PAFZZ	3040-00-075-2493	05624	NYLC10-1	..CAM,CONTROL..........UHE,UHH,UHV,UHX	EA	2
397	28	PAFZZ	5930-00-898-7312	05624	CYZP403-1	..ADAPTER,SWITCH ACTU..........UHE,UHH,UHV,UHX	EA	2
397	29	PAFZZ	5365-00-513-0896	05624	CYRD235	..SHIM..........UHE,UHH,UHV,UHX	EA	1
397	30	PBFZZ	5930-00-803-4570	96906	MS24547-1	..SWITCH,SENSITIVE..........UHE,UHH,UHV,UHX	EA	2
397	31	PAFZZ	5365-00-997-0686	05624	NYLC144	..SPACER,PLATE..........UHE,UHH,UHV,UHX	EA	1
397	32	PBFZZ	5970-00-895-7579	05624	NYLC6	..INSULATOR,PLATE..........UHE,UHH,UHV,UHX	EA	2
397	33	PBFZZ	9905-00-182-4909	05624	NYRZ 1-11-2	..PLATE,IDENTIFICATIO..........UHE,UHH,UHV,UHX	EA	1
397	34	PAFZZ	1660-00-014-2051	05624	NYLC73	..GEAR ASSY,ACTUATOR..........UHE,UHH,UHV,UHX	EA	1
397	35	PAFZZ	5365-00-209-4077	05624	CYRD257	..SHIM..........UHE,UHH,UHV,UHX	EA	2
397	36	PBFZZ	3020-00-181-2762	05624	NYLC570	..GEAR CLUSTER,SPUR..........UHE,UHH,UHV,UHX	EA	1
397	37	PAFZZ	5365-00-824-1351	05624	CYRD379	..SHIM..........UHE,UHH,UHV,UHX	EA	2
397	38	PAFZZ	3120-00-540-9687	05624	AYRD367	..BEARING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
397	39	PAFZZ	1660-00-017-3258	05624	NYLC133	..GEAR ASSEMBLY,SPUR..........UHE,UHH,UHV,UHX	EA	2
397	40	XDOZZ		05624	BYLH654-34	..GEAR CLUSTER,SPUR..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
397	41	XDFZZ		05624	BYLH554-50	..GEAR CLUSTER,SPUR	UHE,UHH,UHV,UHX	EA	1
397	43	PAFZZ	5940-00-615-6073	96906	MS25036-152	..TERMINAL,LUG	UHE,UHH,UHV,UHX	EA	2
397	44	PAFZZ	1660-00-984-5315	05624	NYRZ1-11-1	.PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	1
397	45	XBFZZ	4810-00-897-3185	05624	BYLB22	.COUPLING,VALVE	UHE,UHH,UHV,UHX	EA	1
397	46	PAFFF	4820-00-177-0014	05624	BYLB82-60	.VALVE ASSY,BUTTERFL	UHE,UHH,UHV,UHX	EA	1
397	47	XBFZZ		05624	BYLB298	..SHAFT,BUTTERFLY	UHE,UHH,UHV,UHX	EA	1
397	48	PAFZZ	1660-00-610-0616	05624	DYLZ508	..SPACER,SPECIAL,BUTT	UHE,UHH,UHV,UHX	EA	2
397	50	XBFZZ	5310-00-995-2719	05624	BYLB73	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
397	51	PAFZZ	3110-00-179-7296	05624	CYRB106	..BEARING,ROLLER,NEED	UHE,UHH,UHV,UHX	EA	1
397	52	PAFZZ	1660-00-984-5633	05624	BYLB79	..DISK,BUTTERFLY	UHE,UHH,UHV,UHX	EA	1
397	53	PAOOO	5365-00-851-1512	05624	BYLB74	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
397	54	PAFZZ	1660-00-998-0100	05624	BYLB81	..HOUSING,VALVE,HEATE	UHE,UHH,UHV,UHX	EA	1
397	55	PAFZZ	3120-00-540-7533	05624	DYLZ509	..BEARING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
397	56	PAFZZ	3110-00-902-4305	60380	M21-251XASOH	..BEARING,ROLLER,NEED	UHE,UHH,UHV,UHX	EA	1
397	57	PAFZZ	5365-00-597-8487	96906	MS16625-4031	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	1

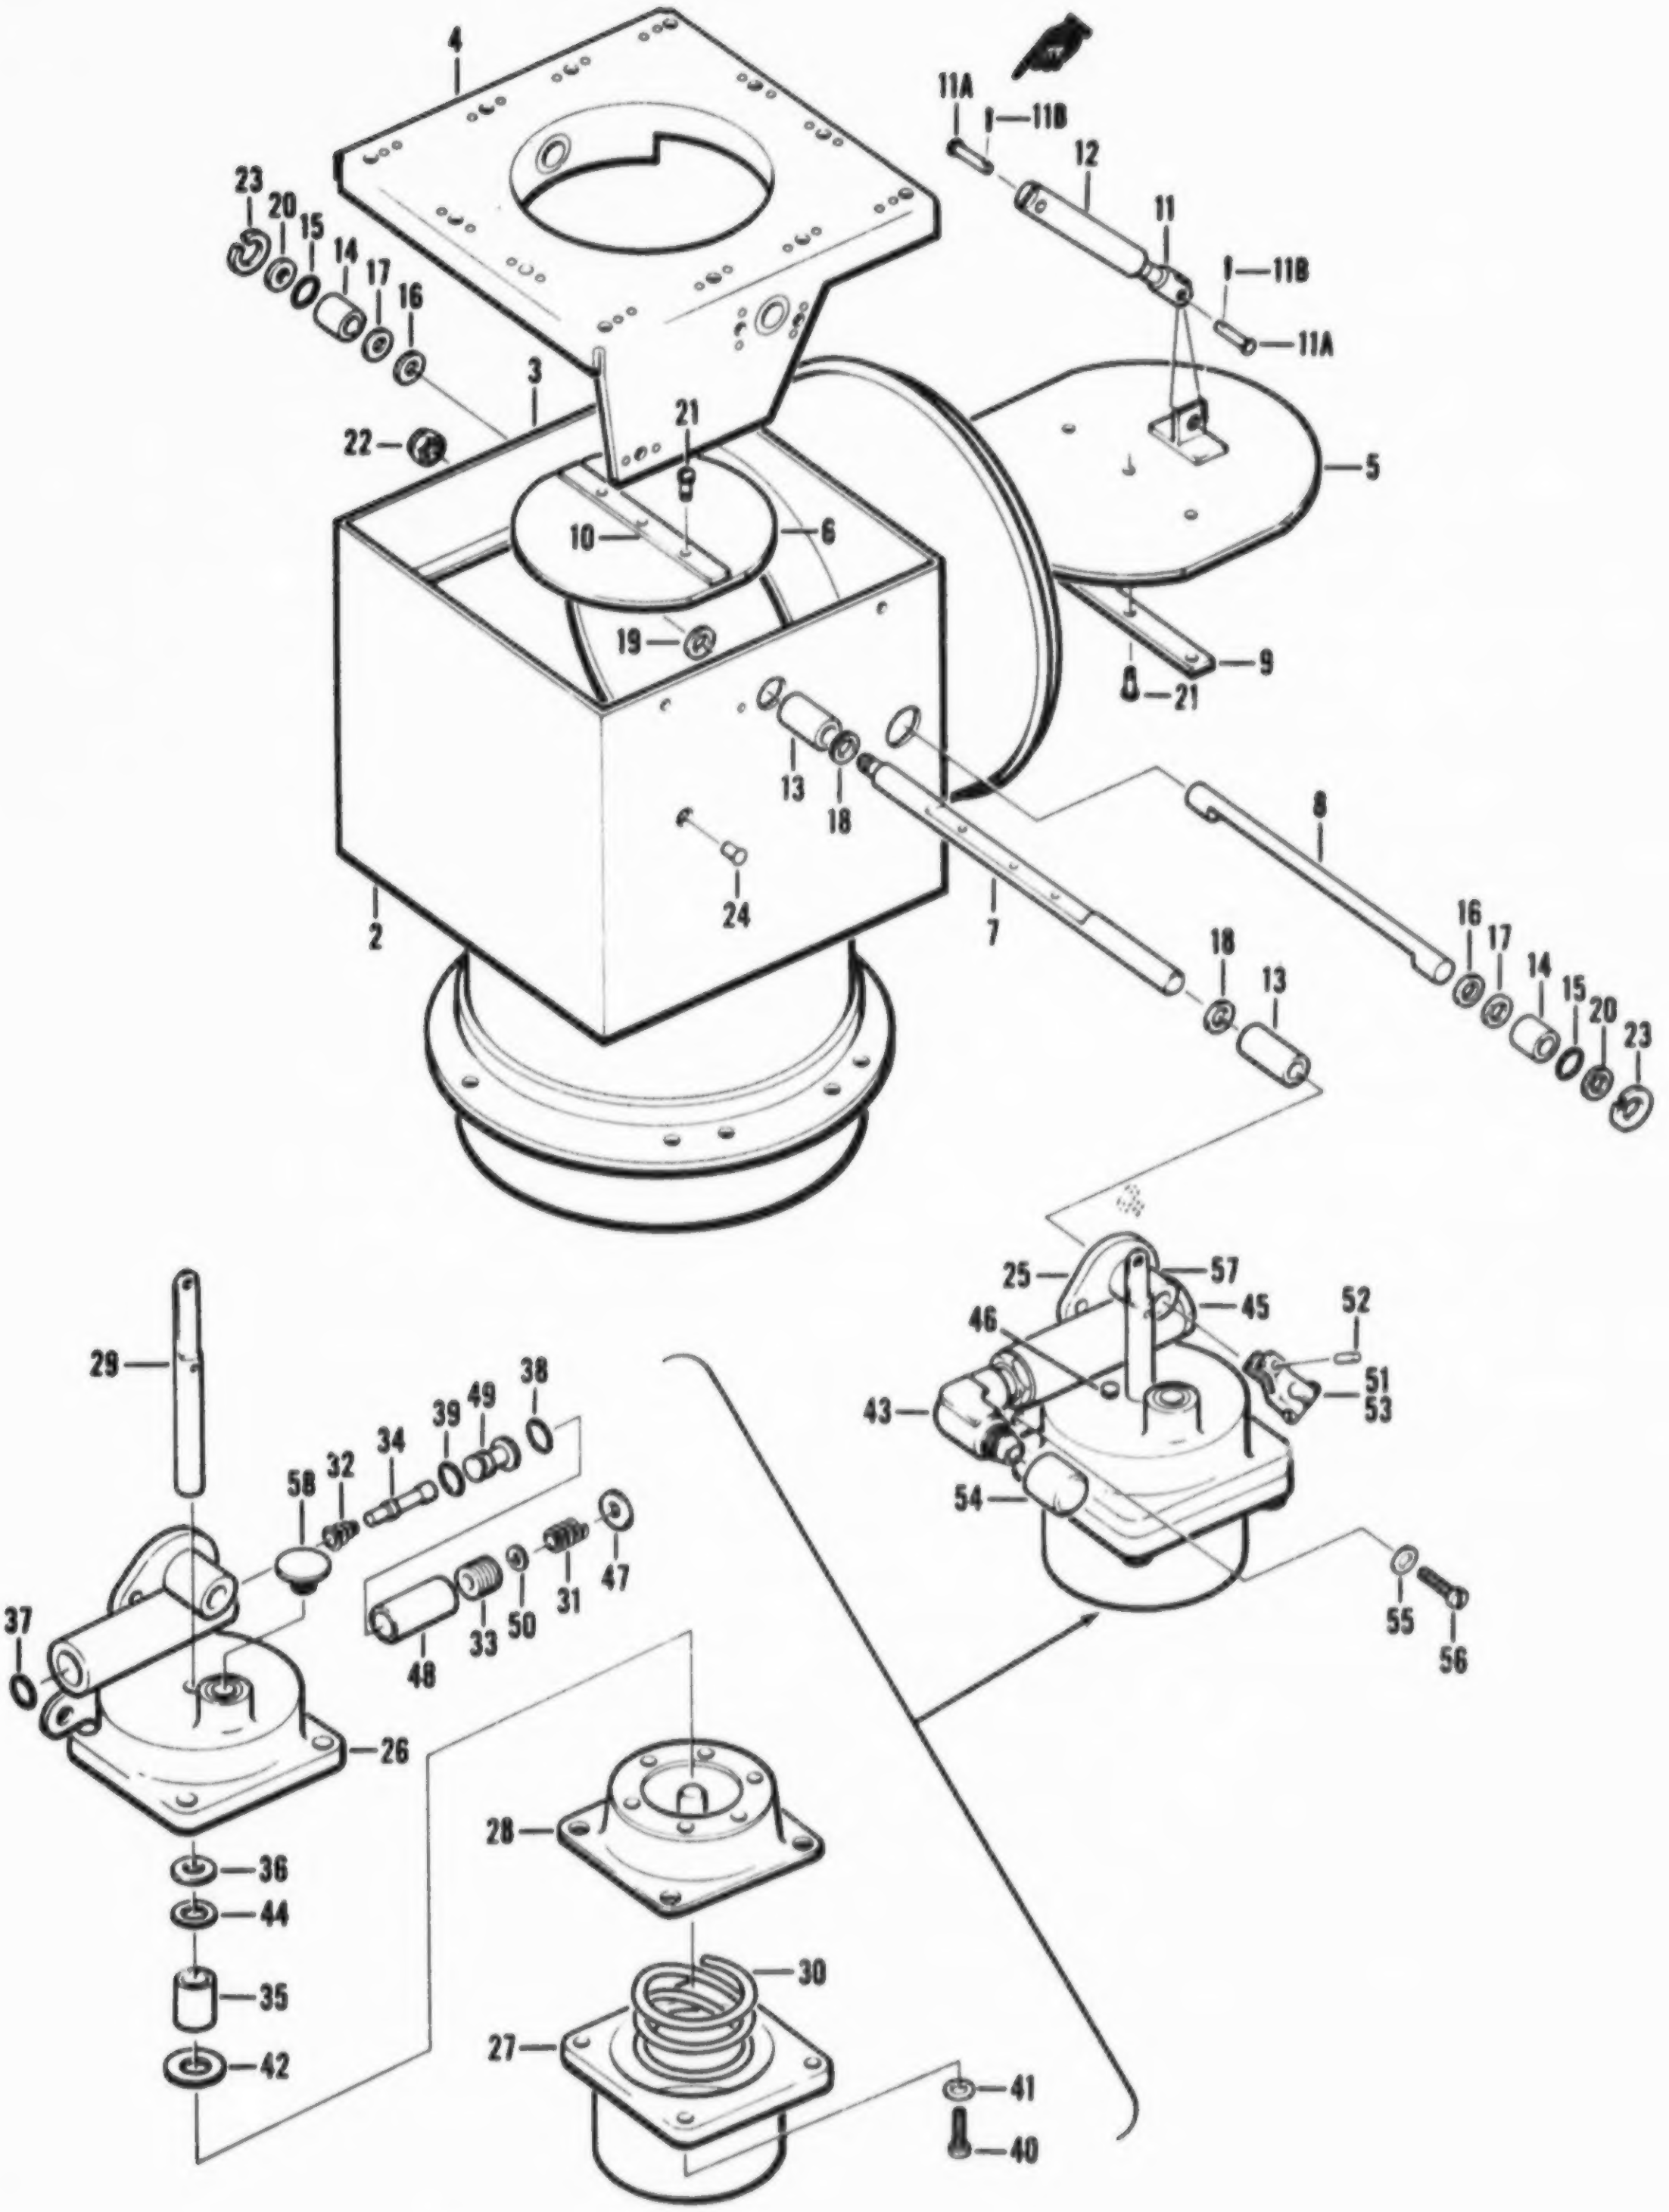
4
11A
11B
12
11
11B
11A
23
20
15
14
17
16
3
21
22
5
10
6
19
9
21
13
18
8
24
7
2
18
13
16
17
14
15
20
23
25
57
45
52
46
51
53
43
54
55
56
29
38
39
49
34
58
32
37
47
31
50
33
48
26
28
36
44
35
30
27
42
41
40

Figure 398. Valve Mixing

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
398		PAOFF	1660-00-113-9808	97499	204-072-262-11	VALVE,AIR MIXTURE HEATER BREAKDOWN FOR 204-072-262-11 48D88 SEE FIG 396 FOR NHA................UHE,UHH,UHV,UHX	EA	1
398	2	PADDO	1660-00-181-3324	89513	57D47	.HOUSING ASSY,AIR VA................UHE,UHH,UHV,UHX	EA	1
398	3	XADZZ		89513	57D48	..HOUSING ASSEMBLY................UHE,UHH,UHV,UHX	EA	1
398	4	XADZZ		89513	57D56	..COVER-INLET,HOT AIR................UHE,UHH,UHV,UHX	EA	1
398	5	PBDZZ	4810-00-176-9712	89513	B51D96	..VALVE ASSY,BUTTERFL................UHE,UHH,UHV,UHX	EA	1
398	6	PBDZZ	4810-00-176-9711	89513	A51D96	..VALVE ASSY,BUTTERFL................UHE,UHH,UHV,UHX	EA	1
398	7	XBDZZ	3040-00-134-8173	89513	51D93	..SHAFT,BUTTERFLY................UHE,UHH,UHV,UHX	EA	1
398	8	XDDZZ		89513	51D94	..SHAFT,BUTTERFLY................UHE,UHH,UHV,UHX	EA	1
398	9	PBDZZ	1660-00-181-3381	89513	51D92	..STIFFENER,HEATER VA................UHE,UHH,UHV,UHX	EA	1
398	10	PBDZZ	1660-00-181-3335	89513	A51D92	..STIFFENER,HEATER VA................UHE,UHH,UHV,UHX	EA	1
398	11	XDDZZ		89513	51D86	..CLEVIS,ROD END................UHE,UHH,UHV,UHX	EA	1
398	11A	PBDZZ		89513	A49C23	..PIN................UHE,UHH,UHV,UHX	EA	2
398	11B	PBDZZ	5315-00-058-3164	96906	MS24665-148	..PIN................UHE,UHH,UHV,UHX	EA	2
398	12	PBDZZ	1660-00-181-3322	89513	51D87	..CONNECTOR,HOUSING A................UHE,UHH,UHV,UHX	EA	1
398	13	PBDZZ	3120-00-180-6694	89513	51D79	..BEARING,SLEEVE................UHE,UHH,UHV,UHX	EA	2
398	14	PBDZZ	3120-00-180-6693	89513	83C70	..BEARING,SLEEVE................UHE,UHH,UHV,UHX	EA	2
398	15	PADZZ	5330-00-180-9287	89513	25C85-24	..PACKING,PREFORME................UHE,UHH,UHV,UHX	EA	2
398	16	XDDZZ		89513	46D01	..WASHER,SPRING TENSI................UHE,UHH,UHV,UHX	EA	2
398	17	PBDZZ	5310-00-176-6564	89513	51D91	..WASHER,FLAT................UHE,UHH,UHV,UHX	EA	2
398	18	XDDZZ	5310-00-176-6563	89513	A51D91	..WASHER,FLAT................UHE,UHH,UHV,UHX	EA	2
398	19	XDDZZ		89513	B51D91	..WASHER,FLAT................UHE,UHH,UHV,UHX	EA	1
398	20	XDDZZ		89513	C51D91	..DISK,SOLID,PLAIN................UHE,UHH,UHV,UHX	EA	2
398	21	PADZZ	5305-00-939-9230	96906	MS35275-243	..SCREW,MACHINE................UHE,UHH,UHV,UHX	EA	6
398	22	PADZZ	5310-00-061-7326	96906	MS21045-3	..NUT,SELF-LOCKING EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
398	23	PADZZ	5365-00-754-1082	96906	MS16625-1075	..RING,RETAINING................UHE,UHH,UHV,UHX	EA	2
398	24	PBDZZ	5320-00-582-3304	96906	MS20600AD4W2	..RIVET,BLIND................UHE,UHH,UHV,UHX	EA	11
398	25	PADDD	1660-00-181-3334	89513	52D27	.ACTUATOR,AIRCRAFT,H................UHE,UHH,UHV,UHX	EA	1
398	26	XBDZZ	1660-00-181-3328	89513	A48D22	..HOUSING,HEATER ACTU................UHE,UHH,UHV,UHX	EA	1
398	27	XBDZZ	1660-00-181-3316	89513	51D84	..COVER,ACTUATOR,AIR................UHE,UHH,UHV,UHX	EA	1
398	28	XBDZZ	1660-00-181-3315	89513	48D06	..DIAPHRAGM ASSY,AIR VALVE................UHE,UHH,UHV,UHX	EA	1
398	29	PADZZ	1660-00-181-3314	89513	48D20	..ROD ASSY,AIR VALVE................UHE,UHH,UHV,UHX	EA	1
398	30	XDDZZ		89513	46D04	..SPRING,HELICAL,COMP................UHE,UHH,UHV,UHX	EA	1
398	31	PADZZ	5360-00-097-8429	89513	46D95	..SPRING,HELICAL,COMP................UHE,UHH,UHV,UHX	EA	1
398	32	PADZZ	5360-00-896-3932	89513	31D44	..SPRING,HELICAL,COMP................UHE,UHH,UHV,UHX	EA	1
398	33	PADZZ	1660-00-010-7859	89513	46D73	..PISTON,VALVE................UHE,UHH,UHV,UHX	EA	1
398	34	PADZZ	1660-00-070-1729	89513	06D32	..STEM,REGULATOR VALV................UHE,UHH,UHV,UHX	EA	1
398	35	PADZZ	3120-00-896-3953	89513	16D98	..BUSHING,SLEEVE................UHE,UHH,UHV,UHX	EA	1
398	36	XDDZZ	5330-00-938-9286	89513	17D82	..RETAINER,PACKING................UHE,UHH,UHV,UHX	EA	1
398	37	PADZZ	5330-00-185-0366	89513	X25C85	..PACKING,PREFORMED................UHE,UHH,UHV,UHX	EA	1
398	38	PADZZ	5330-00-171-7786	86197	376-111-0012	..PACKING,PREFORMED................UHE,UHH,UHV,UHX	EA	1
398	39	PADZZ	5330-00-061-7522	89513	AG25C85	..PACKING,PREFORME................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
398	40	PADZZ	5305-00-614-0247	96906	MS35266-64	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
398	41	PADZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
398	42	PADZZ	5365-00-687-3379	96906	MS16625-1062	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
398	43	XDDZZ		89513	51D85	..ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
398	44	PADZZ	5330-00-166-0980	81349	M83248-1-012	..PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
398	45	PBDZZ	1660-00-181-3318	89513	51D88	..CAP,AIR VALVE	UHE,UHH,UHV,UHX	EA	1
398	46	XDDZZ		89513	G27C88	..JET,CARBURETOR	UHE,UHH,UHV,UHX	EA	1
398	47	PBDZZ	1660-00-181-3321	89513	51D90	..PLATE,REGULATOR	UHE,UHH,UHV,UHX	EA	1
398	48	PADZZ	5365-00-054-0949	89513	46D72	..SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
398	49	PADZZ	1660-00-012-3249	89513	46D75	..SEAT,VALVE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
398	50	PADZZ	5310-00-183-4354	88044	AN960C3L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
398	51	PBDZZ	1660-00-704-7071	89513	54C71	.LEVER,VALVE	UHE,UHH,UHV,UHX	EA	1
398	52	XDDZZ		89513	54C72	.PIN,STRAIGHT,HEADLE	UHE,UHH,UHV,UHX	EA	1
398	53	PBDZZ	5315-00-176-6575	89513	A54C69	.KEY,WOODRUFF	UHE,UHH,UHV,UHX	EA	1
398	54	PADZZ	5340-00-163-4304	80205	NAS814-4	.CAP,PROTECTIVE,DUST	UHE,UHH,UHV,UHX	EA	1
398	55	PADZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
398	56	PADZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
398	57	PADZZ	5365-00-181-1665	89513	55D40	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
398	58	XDOZZ	5340-00-914-0521	80205	NAS815-4A	.PLUG,PROTECTIVE,DUS	UHE,UHH,UHV,UHX	EA	1

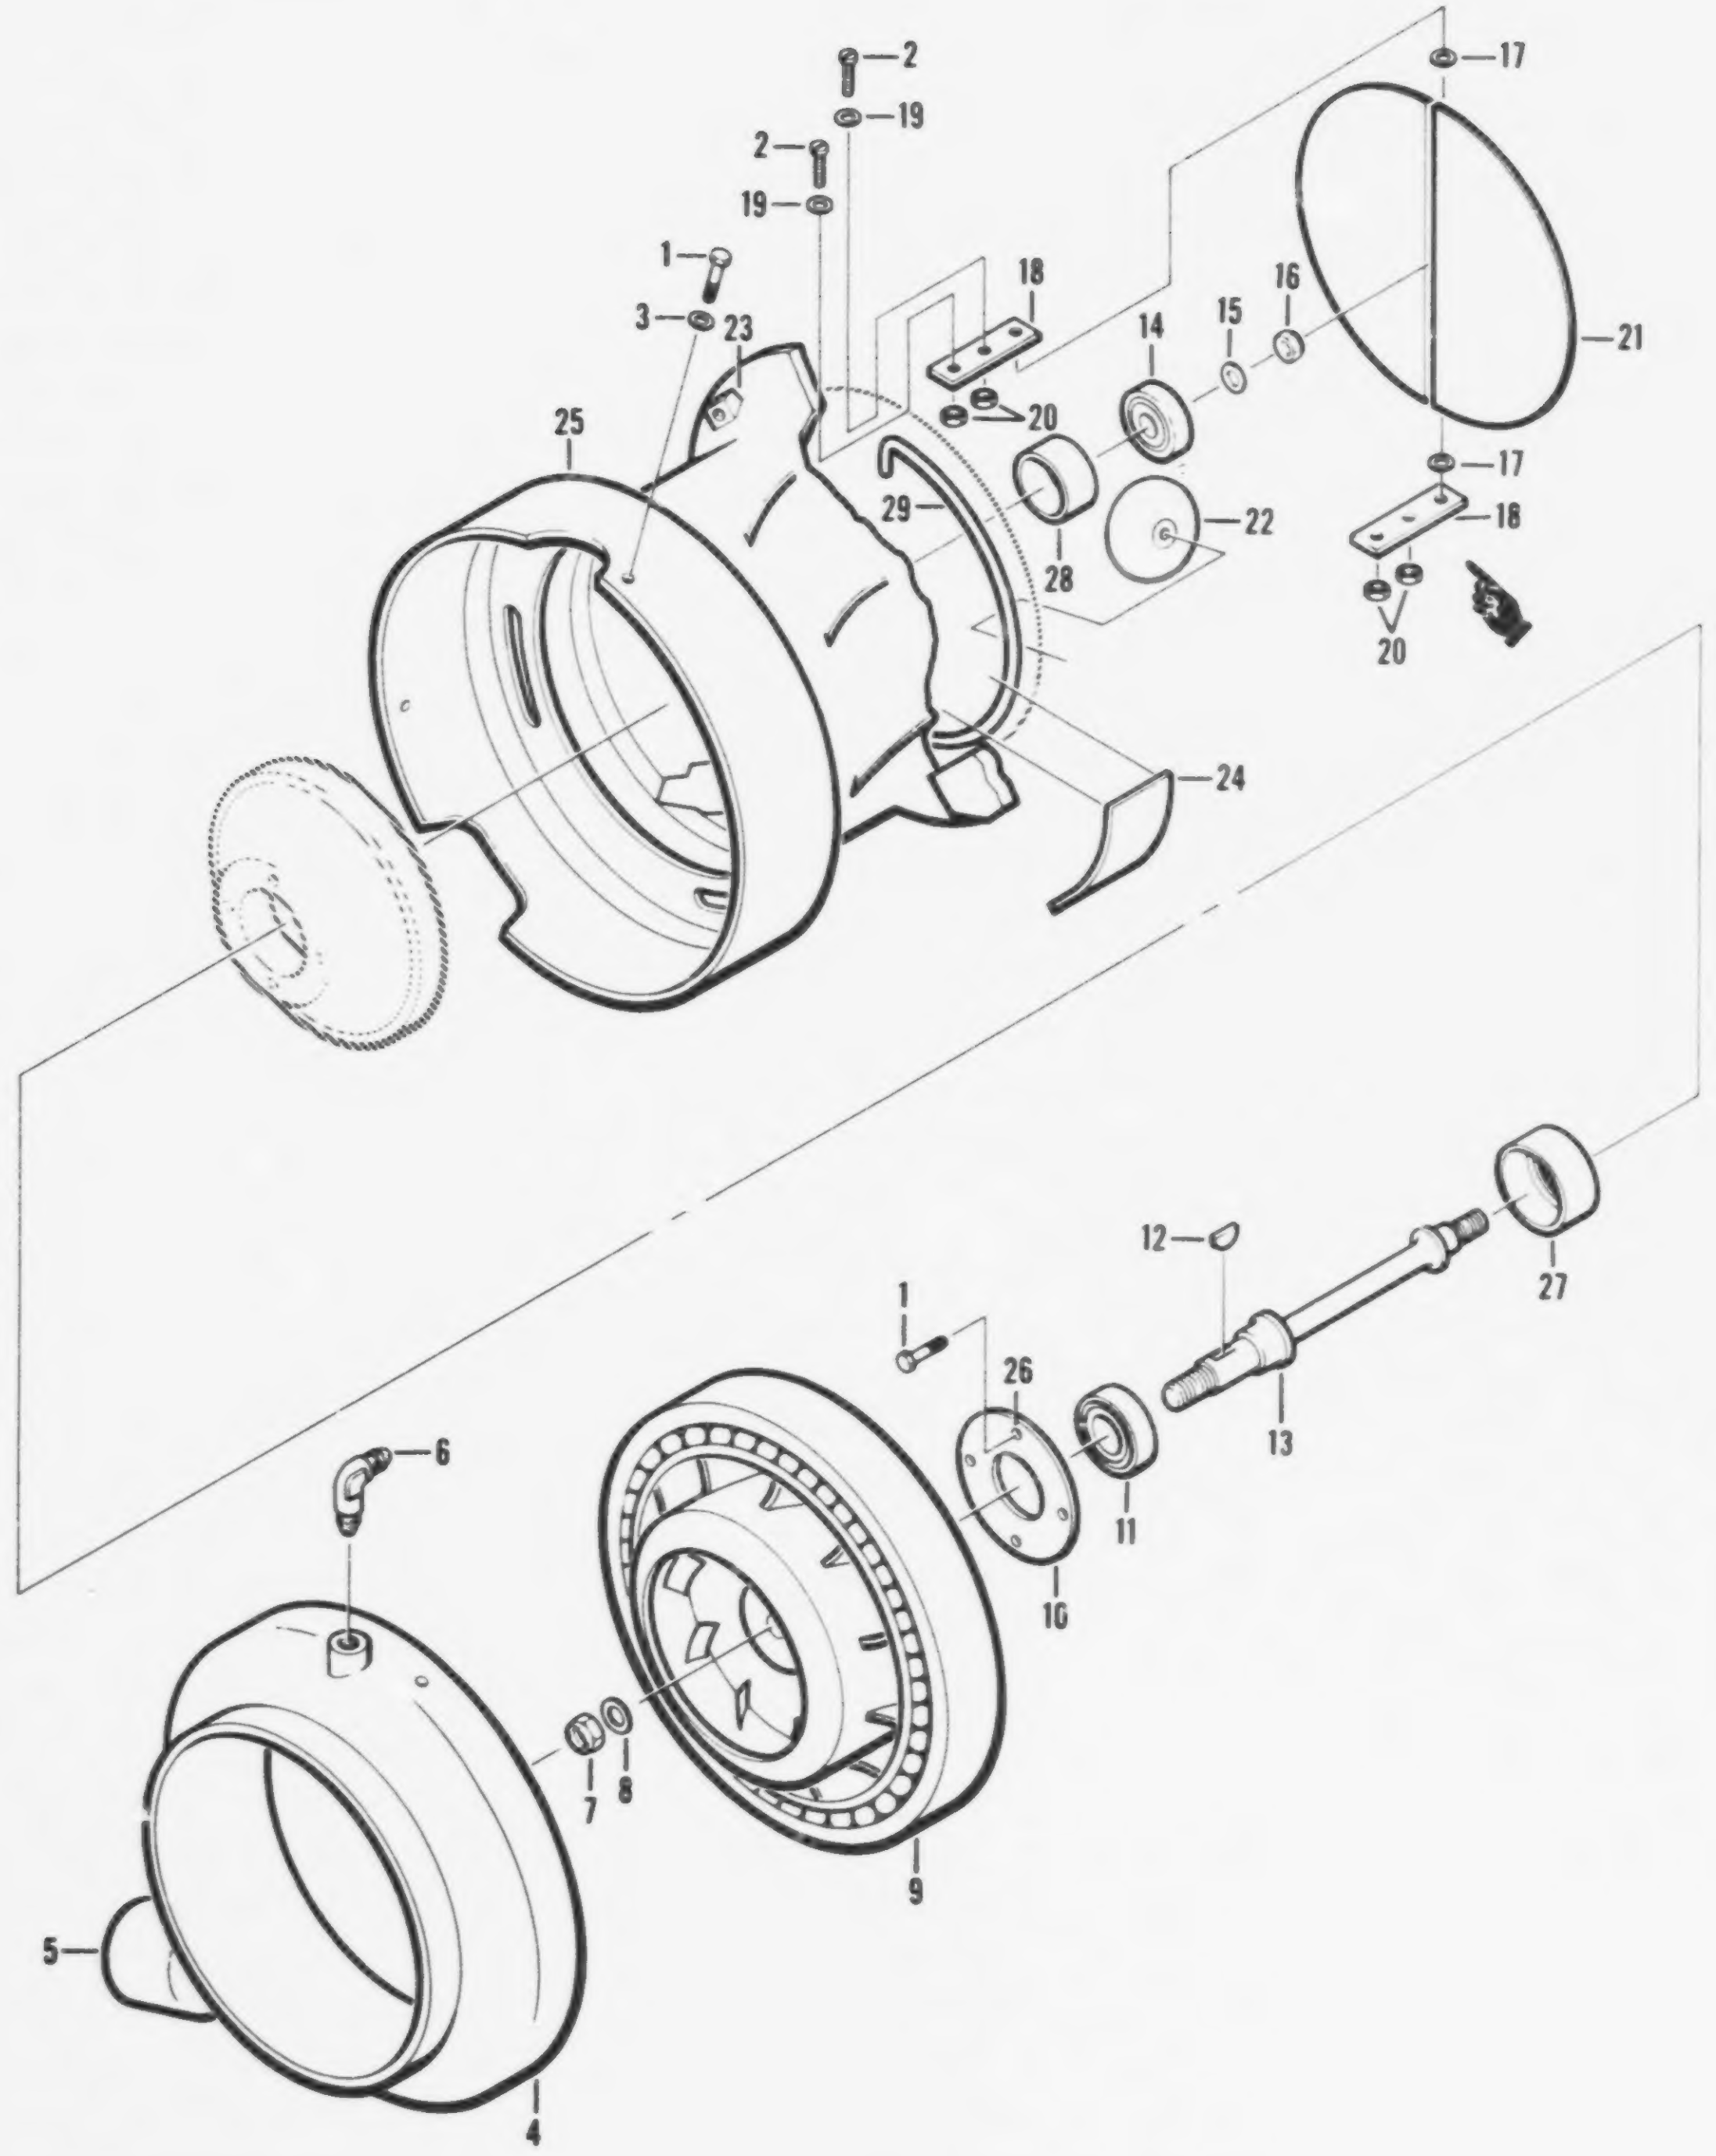
2
19
2
19
17
1
18
16
3
23
15
14
21
25
20
17
29
22
18
28
20
24
12
27
1
26
13
6
11
10
7
8
9
5
4

Figure 398A. Blower Unit

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
398A		PAOFF	1660-00-409-8218	89513	169901-7	BLOWER,UNIT,VENTILA SEE FIG.395 & 396 FOR NHA BREAKDOWN FOR PN 204-072-261-7 (169901-7)...........UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	1	PAFZZ	5306-00-182-2057	88044	AN3H-4A	.BOLT,MACHINE.........................UHC,UHE,UHH,UHM,UHV,UHX	EA	7
398A	2	PAFZZ	5305-00-543-2752	96906	MS35265-45	.SCREW,MACHINE........................UHC,UHE,UHH,UHM,UHV,UHX	EA	4
398A	3	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	3
398A	4	XAFFF		89513	169904-1	.DISTRIBUTION INSTL...................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	5	PAFZZ	5340-00-597-3302	96906	MS124695	..INSERT,SCREW THREAD.................UHC,UHE,UHH,UHM,UHV,UHX	EA	3
398A	6	PAFZZ		96906	MS51815-1P	.ELBOW,PIPE TO PIPE...................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	7	PAFZZ	5310-00-088-0552	96906	MS21044N7	.NUT,SELF-LOCKING.....................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	8	PAFZZ	5310-00-167-0822	88044	AN960-716	.WASHER,FLAT..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	9	XDFZZ		89513	169902-1	.ROTOR ASSEMBLY.......................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	10	PAFZZ	3110-00-953-0205	89513	R3648-1	.PLATE,RETAINING,BEA..................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	11	PAFDZ	3110-01-019-4292	89513	J33C32	.BEARING,BALL,ANNULA..................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	12	PAFZZ	5315-00-616-5514	96906	MS35756-6	.KEY,WOODRUFF.........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	13	PAFZZ	1560-00-967-7670	89513	R3467-1	.SHAFT................................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	14	PAFZZ	3110-01-018-8101	89513	H33C32	.BEARING,BALL.........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	15	PAFZZ	5365-00-965-8541	89513	R2607-1	.WASHER,FLAT..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	16	PAFZZ	5310-00-088-0553	96906	MS21044N5	.NUT,SELF-LOCKING.....................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	17	PAFZZ	5310-00-167-0797	88044	AN960C3	.WASHER,FLAT..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	2
398A	18	XDFZZ		89513	169971-1	.BAR,VALVE CHECK......................UHC,UHE,UHH,UHM,UHV,UHX	EA	2
398A	19	PAFZZ	5310-00-615-8058	88044	AN960-8	.WASHER,FLAT..........................UHC,UHE,UHH,UHM,UHV,UHX	HD	4
398A	20	PAFZZ	5310-00-811-3494	96906	MS21044N08	.NUT,HEXAGON..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	4
398A	21	XDFZZ		89513	169909-1	.VALVE,CHECK..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	22	XDFZZ		89513	169978-1	.STOP,BUTTERFLY.......................UHC,UHE,UHH,UHM,UHV,UHX	EA	2
398A	23	PADZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING.....................UHC,UHE,UHH,UHM,UHV,UHX	EA	6
398A	24	XDFZZ		89513	169980-1	.PLATE,IDENT..........................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	25	XAFDO		89513	169907-7	.HOUSING ASSEMBLY.....................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	26	PAFZZ	5340-00-597-3302	96906	MS124695	..INSERT,SCREW THREAD.................UHC,UHE,UHH,UHM,UHV,UHX	EA	4
398A	27	PADZZ	3130-00-953-0206	89513	R2604-1	..LINER,BEARING HOUSI.................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	28	PADZZ	3130-00-953-0208	89513	R3011-1	..LINER,BEARING HOUSI.................UHC,UHE,UHH,UHM,UHV,UHX	EA	1
398A	29	XDFZZ		89513	169907-3	..TUBE,ALUMINUM.......................UHC,UHE,UHH,UHM,UHV,UHX	EA	1

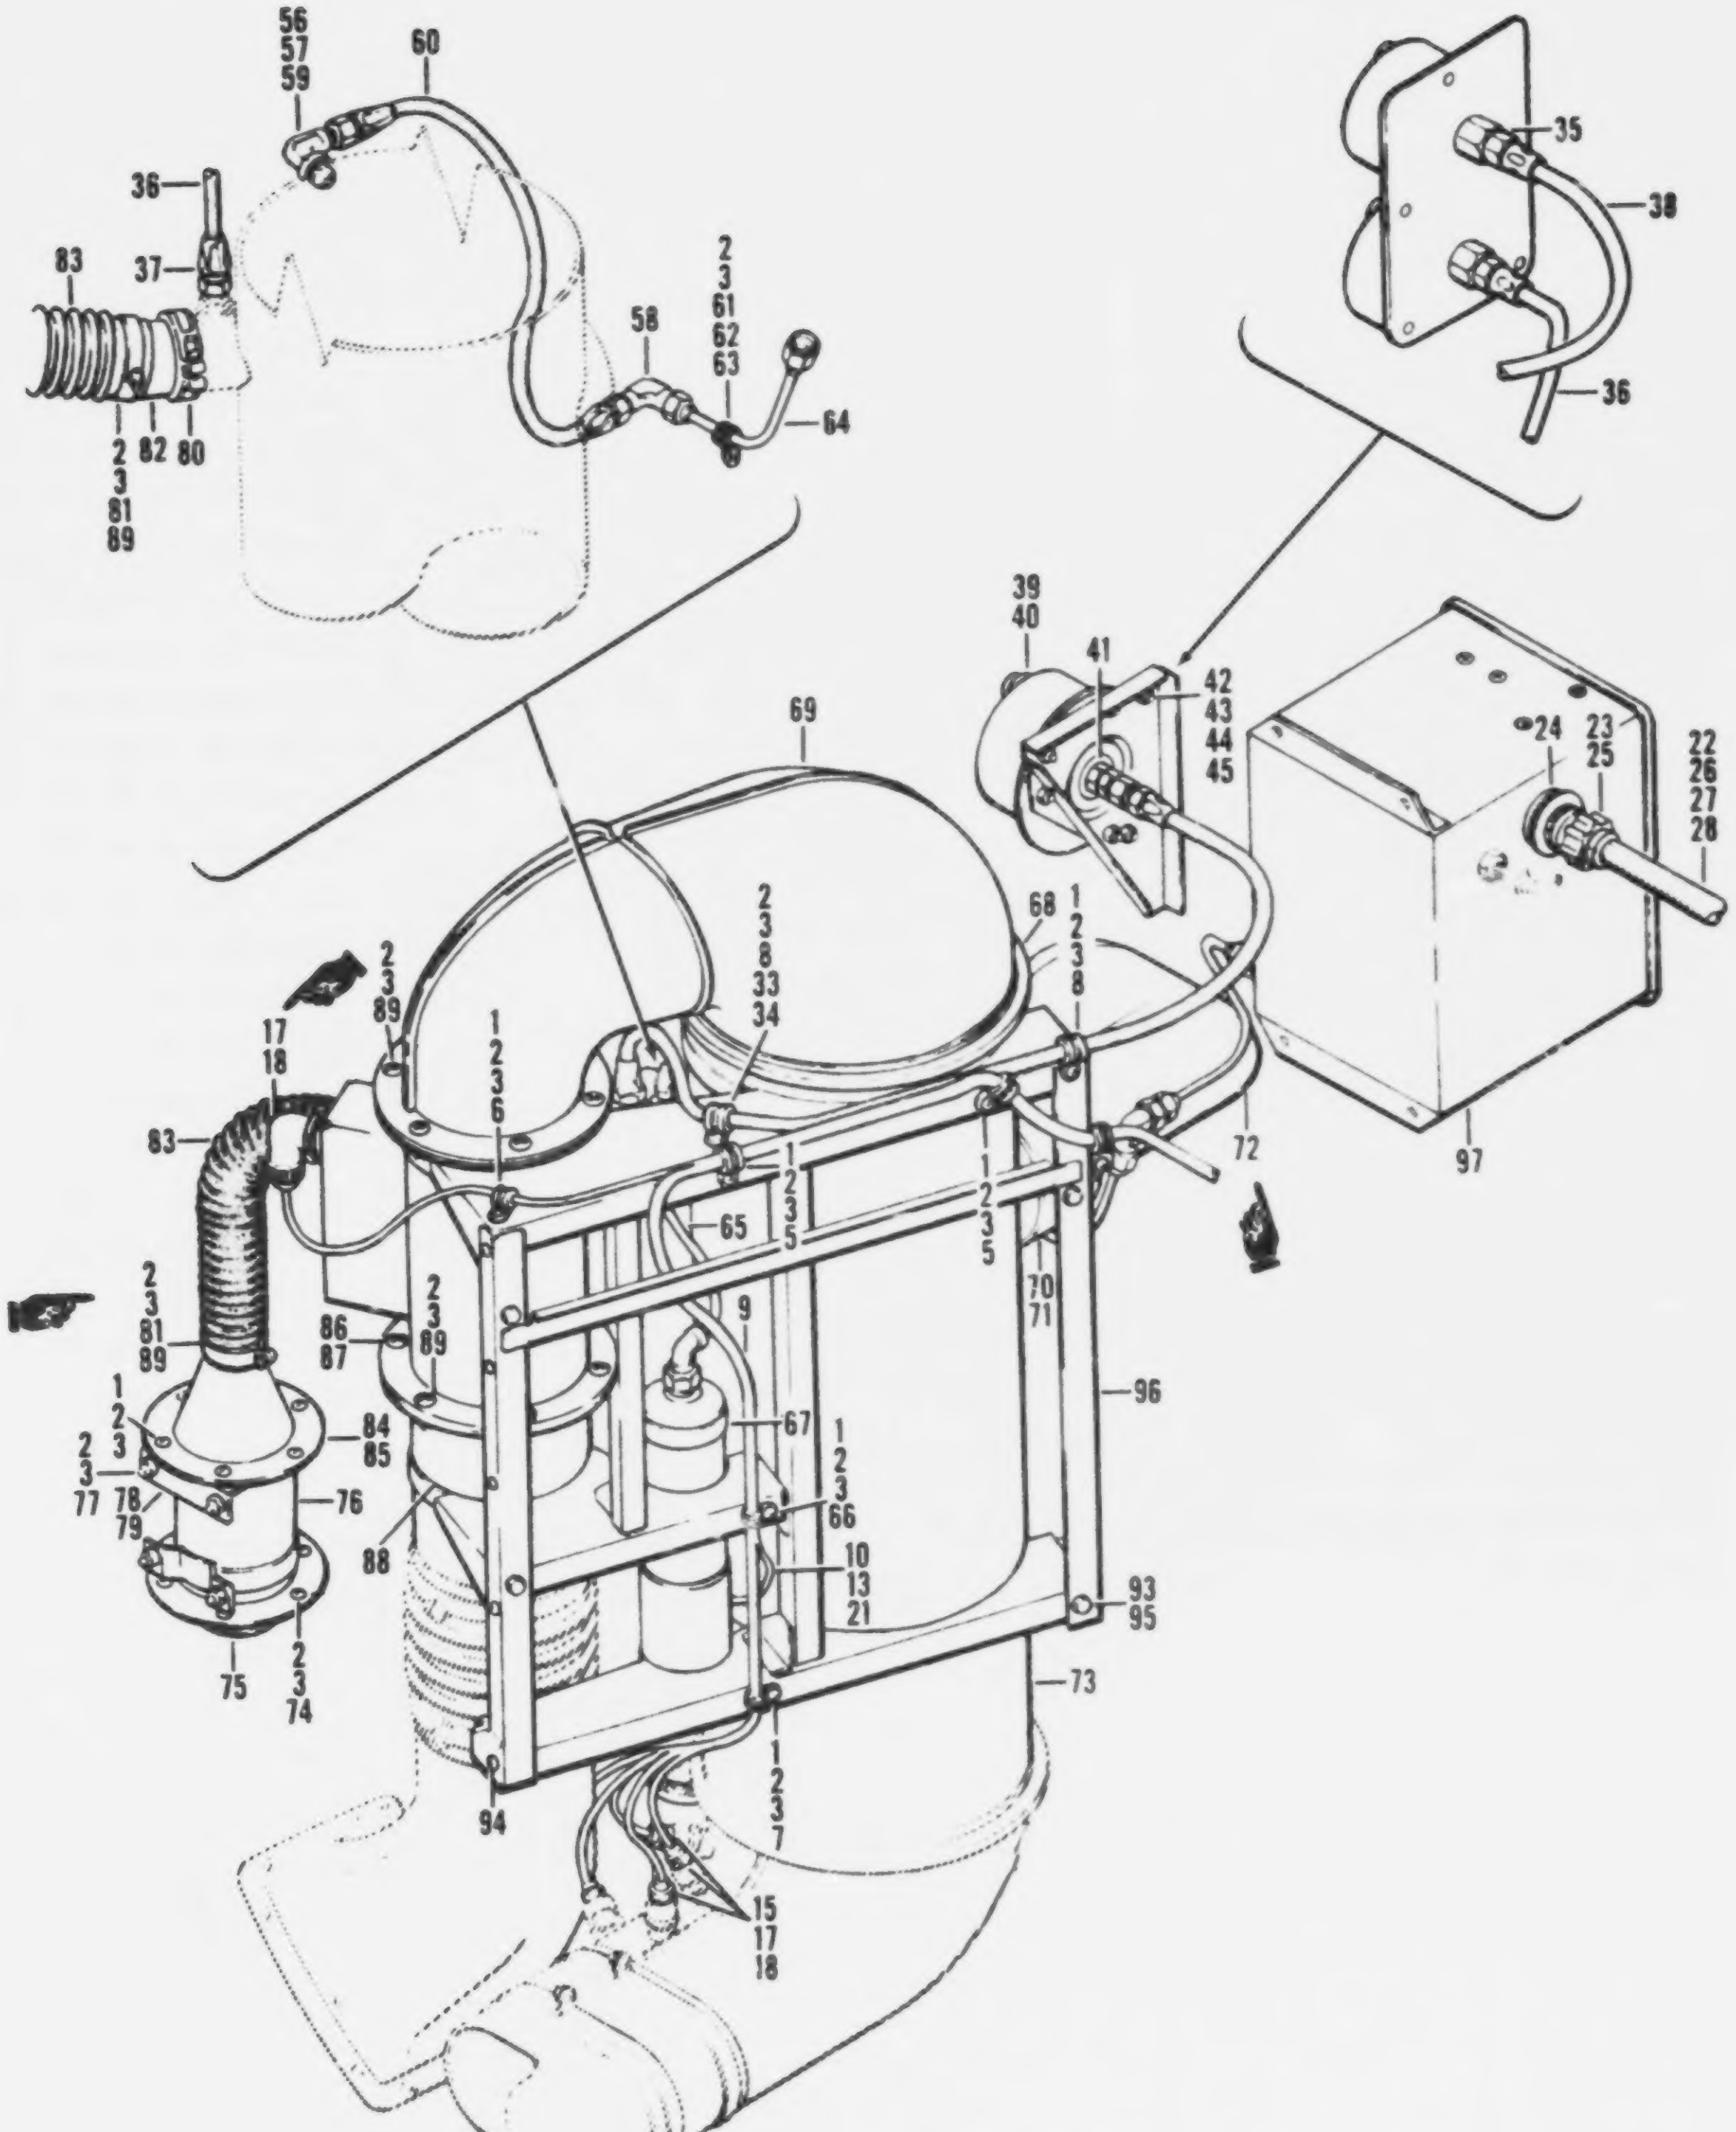
56 57 59
60
36
83
37
2 3 61 62 63
58
64
2 3 81 89
82
80
35
38
36
39 40
41
42 43 44 45
69
24
23 25
22 26 27 28
68
1 2 3 8
2 3 8 33 34
2 3 89
17 18
1 2 3 6
83
72
97
65
1 2 3 5
1 2 3 5
70 71
2 3 81 89
86 87
2 3 89
9
96
67
1 2 3
84 85
2 3 77
78 79
76
88
1 2 3 66
10 13 21
93 95
75
2 3 74
73
94
1 2 3 7
15 17 18

Figure 399. Heater Installation, Winterization Auxiliary

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USAB.E ON CODE	U/M	QTY INC IN UNIT
399		PBOZZ	1660-00-018-0055	97499	204-706-012-11	WINTERIZATION KIT HEATER USBL EFF 63-8500 THRU 64-14191	UHB,UHC,UHM	EA	1
399	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHM	EA	V
399	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	V
399	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	V
399	5	PAOZZ	5340-00-993-6244	81996	EAB700010	.CLAMP,LOOP	UHB,UHC,UHM	EA	2
399	6	PAOZZ	5340-00-993-6245	81996	EAB70005	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
399	7	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
399	8	PAOZZ	5340-00-954-6826	81996	EAB70008	.CLAMP,LOOP	UHB,UHC,UHM	EA	2
399	9	AOOOZ	1560-00-983-4050	97499	204-075-447-1	.CABLE ASSY,HEATER	UHB,UHC,UHM	EA	1
399	10	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC	UHB,UHC,UHM	EA	1
399	13	PAOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	1
399	15	PAOZZ	5935-00-725-4638	96906	MS3106R12S-3S	..CONNECTOR PLUG,ELEC	UHB,UHC,UHM	EA	3
399	17	PBOZZ	5935-00-879-2827	96906	MS3108R16-9S	..CONNECTOR,PLUG,E	UHB,UHC,UHM	EA	1
399	18	PBOZZ	5935-00-879-9366	96905	MS3108R24-7P	..CONNECTOR,PLUG,E	UHB,UHC,UHM	EA	1
399	21	XDOZZ		97499	85T4-7-2	..INSULATION TUBE	UHB,UHC,UHM	FT	3
399	22	AOOOZ	1560-00-885-3553	97499	204-075-428-7	.WIRING ASSEMBLY SEE FIG 400 FOR NHA	UHB,UHC,UHM	EA	1
399	23	XDOZZ	5935-00-240-0173	96906	MS3057-4A	..CLAMP,CABLE,ELEC	UHB,UHC,UHM	EA	2
399	24	PAOZZ	5935-01-048-0092	96906	MS3450W20-27P	..CONNECTOR,RECEPTACL	UHB,UHC,UHM	EA	1
399	25	PAOZZ	5935-00-813-4716	96906	MS3106R10SL3S	..CONNECTOR,PLUG,ELEC	UHB,UHC,UHM	EA	2
399	26	PAOZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG	UHB,UHC,UHM	EA	17
99	27	PAOZZ	5940-00-143-4771	96906	MS25036-103	..TERMINAL,LUG	UHB,UHC,UHM	EA	1
399	28	XDOZZ		97499	85T4-7-2	..INSULATION TUBE	UHB,UHC,UHM	FT	12
399	33	PAOZZ	5305-00-995-3441	96906	MS35207-269	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
399	34	PAOZZ	5365-00-652-3100	80205	NAS43D03-64	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
399	35	PAOZZ	4730-00-240-5905	88044	AN816-4D	.ADAPTER,STRAIGHT,PI TO TUBE	UHB,UHC,UHM	EA	1
399	36	XDOZZ		96906	MS28741-4-0280	.HOSE ASSEMBLY,RUBBE	UHB,UHC,UHM	EA	1
399	37	PAOZZ	4730-00-542-3284	88044	AN816-4-4	.ADAPTER,STRAIGHT,PI	UHB,UHC,UHM	EA	1
399	38	XDOZZ		96906	MS28741-4-0200	.HOSE ASSY,NONMETAL	UHB,UHC,UHM	EA	1
399	39	AOOOG		97499	204-072-204-1	.SWITCH ASSEMBLY	UHB,UHC,UHM	EA	1
399	40	XDOZZ		89513	A75A32	..SWITCH	UHB,UHC,UHM	EA	2
399	41	PAOZZ	4730-00-240-5905	88044	AN816-4D	..ADAPTER,STRAIGHT,PI TUBE	UHB,UHC,UHM	EA	2
399	42	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	..SPACER,SLEEVE	UHB,UHC,UHM	EA	6
399	43	PAOZZ	5305-00-660-2625	88044	AN503-8-12	..SCREW,MACHINE	UHB,UHC,UHM	EA	6
399	44	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	6
399	45	PAOZZ	5310-00-184-8966	88044	AN960P08	..WASHER,FLAT	UHB,UHC,UHM	EA	6
399	56	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	1
399	57	PAOZZ	5330-00-283-8028	96906	MS29512-04	.PACKING,PREFORMED	UHB,UHC,UHM	EA	1
399	58	PBOZZ	4730-00-722-7212	96906	MS24401D4	.ELBOW,TUBE	UHB,UHC,UHM	EA	1
99	59	PAOZZ	4730-00-726-4351	96906	MS24394D4	.ELBOW,TUBE	UHB,UHC,UHM	EA	1
399	60	XDOZZ		96906	MS27363E0130	.HOSE ASSY,NONMETAL	UHB,UHC,UHM	EA	1
399	61	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
399	62	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE .... UHB,UHC,UHM	EA	1
399	63	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
399	64	MFOZZ	1560-00-345-8123	97499	204-070-283-1	.TUBE ASSEMBLY .... UHB,UHC,UHM	EA	1
399	65	PAOZZ	1660-00-737-6662	89513	D29C09	.LEAD ASSEMBLY .... UHB,UHC,UHM	EA	1
399	66	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
399	67	PAODD	1660-01-119-3258	89513	11C30-1	.IGNITION ASSEMBLY A .... UHB,UHC,UHM	EA	1
399	68	PAOZZ	1660-00-674-4369	89513	C07C05	.CLAMP ASSY,HEATER .... UHB,UHC,UHM	EA	2
399	69	XBOZZ		97499	204-070-159-21	.DUCT ASSY .... UHB,UHC,UHM	EA	1
399	70	XDOZZ		98625	333-200-475SH	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
399	71	PAOZZ	5340-00-649-8420	89513	09C33	.COUPLING,CLAMP,GROO .... UHB,UHC,UHM	EA	1
399	72	PAOZZ	1660-00-886-3333	97499	204-070-265-1	.EXHAUST ASSEMBLY .... UHB,UHC,UHM	EA	1
399	73	XDODD	1660-00-073-6823	97499	204-070-282-1	HEATER,AIRCRAFT SEE FIG 410 FOR BREAKDOWN OF PN 204-070-282-1 86C67 .... UHB,UHC,UHM	EA	1
399	74	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHB,UHC,UHM	EA	6
399	75	PAOZZ	1660-00-674-1941	97499	204-070-408-1	.STRAINER ELEMENT,SE .... UHB,UHC,UHM	EA	1
399	76	PAODD	1660-00-886-3335	97499	204-070-157-1	BLOWER ASSY SEE FIG 412 FOR BREAKDOWN OF PN 204-070-157-1 131601-1 .... UHB,UHC,UHM	EA	1
399	77	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE .... UHB,UHC,UHM	EA	4
399	78	XDOZZ	1560-00-770-8280	97499	204-070-404-3	SUPPORT ASSEMBLY,BL .... UHB,UHC,UHM	EA	1
399	79	MFOZZ	5340-00-722-3967	97499	204-070-079-1	.BRACKET,ANGLE .... UHB,UHC,UHM	EA	1
399	80	PAOZZ	1660-00-674-4374	89513	A21C14	.CLAMP ASSY,HEATER .... UHB,UHC,UHM	EA	1
399	81	PAOZZ	5340-00-993-5473	81996	EAB700-33	.CLAMP,LOOP .... UHB,UHC,UHM	EA	2
399	82	XBOZZ	1660-00-898-9557	97499	204-070-422-1	.ADAPTER ASSY,HEATER .... UHB,UHC,UHM	EA	1
399	83	XDOZZ		82918	BACD40A8-60-6A26	.HOSE,AIR DUCT .... UHB,UHC,UHM	EA	1
399	84	MFOZZ	5330-00-871-5125	97499	204-070-407-1	.GASKET .... UHB,UHC,UHM	EA	1
399	85	PAOZZ	1660-00-737-6713	97499	204-070-420-1	.ADAPTER,AIR COMBUST .... UHB,UHC,UHM	EA	1
399	86	XBOZZ	5330-00-856-8142	97499	204-070-264-1	.GASKET .... UHB,UHC,UHM	EA	2
399	87	PAODD	1660-00-886-3334	97499	204-070-158-1	BLOWER SEE FIG 411 FOR BREAKDOWN OF PN 204-070-158-1 131701-1 .... UHB,UHC,UHM	EA	1
399	88	PAOZZ	4520-01-147-6638	97499	204-070-262-1	.ADAPTER,AIR CONDITI .... UHB,UHC,UHM	EA	1
399	89	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW .... UHB,UHC,UHM	EA	14
399	93	PAOZZ	5306-00-150-9105	88044	AN4-4A	.BOLT,MACHINE .... UHB,UHC,UHM	EA	4
399	94	PAOZZ	5305-00-781-9057	88044	AN525-10R8	.SCREW,MACHINE .... UHB,UHC,UHM	EA	5
399	95	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT .... UHB,UHC,UHM	EA	4
399	96	XBOZZ	1660-00-133-7404	97499	204-070-438-5	.FRAME ASSY,HEATER .... UHB,UHC,UHM	EA	1
399	97	XCFZZ		97499	204-070-431-15	.BOX INSTL HEATER FUEL SYSTEM SEE FIG 400 FOR BREAKDOWN .... UHB,UHC,UHM	EA	1

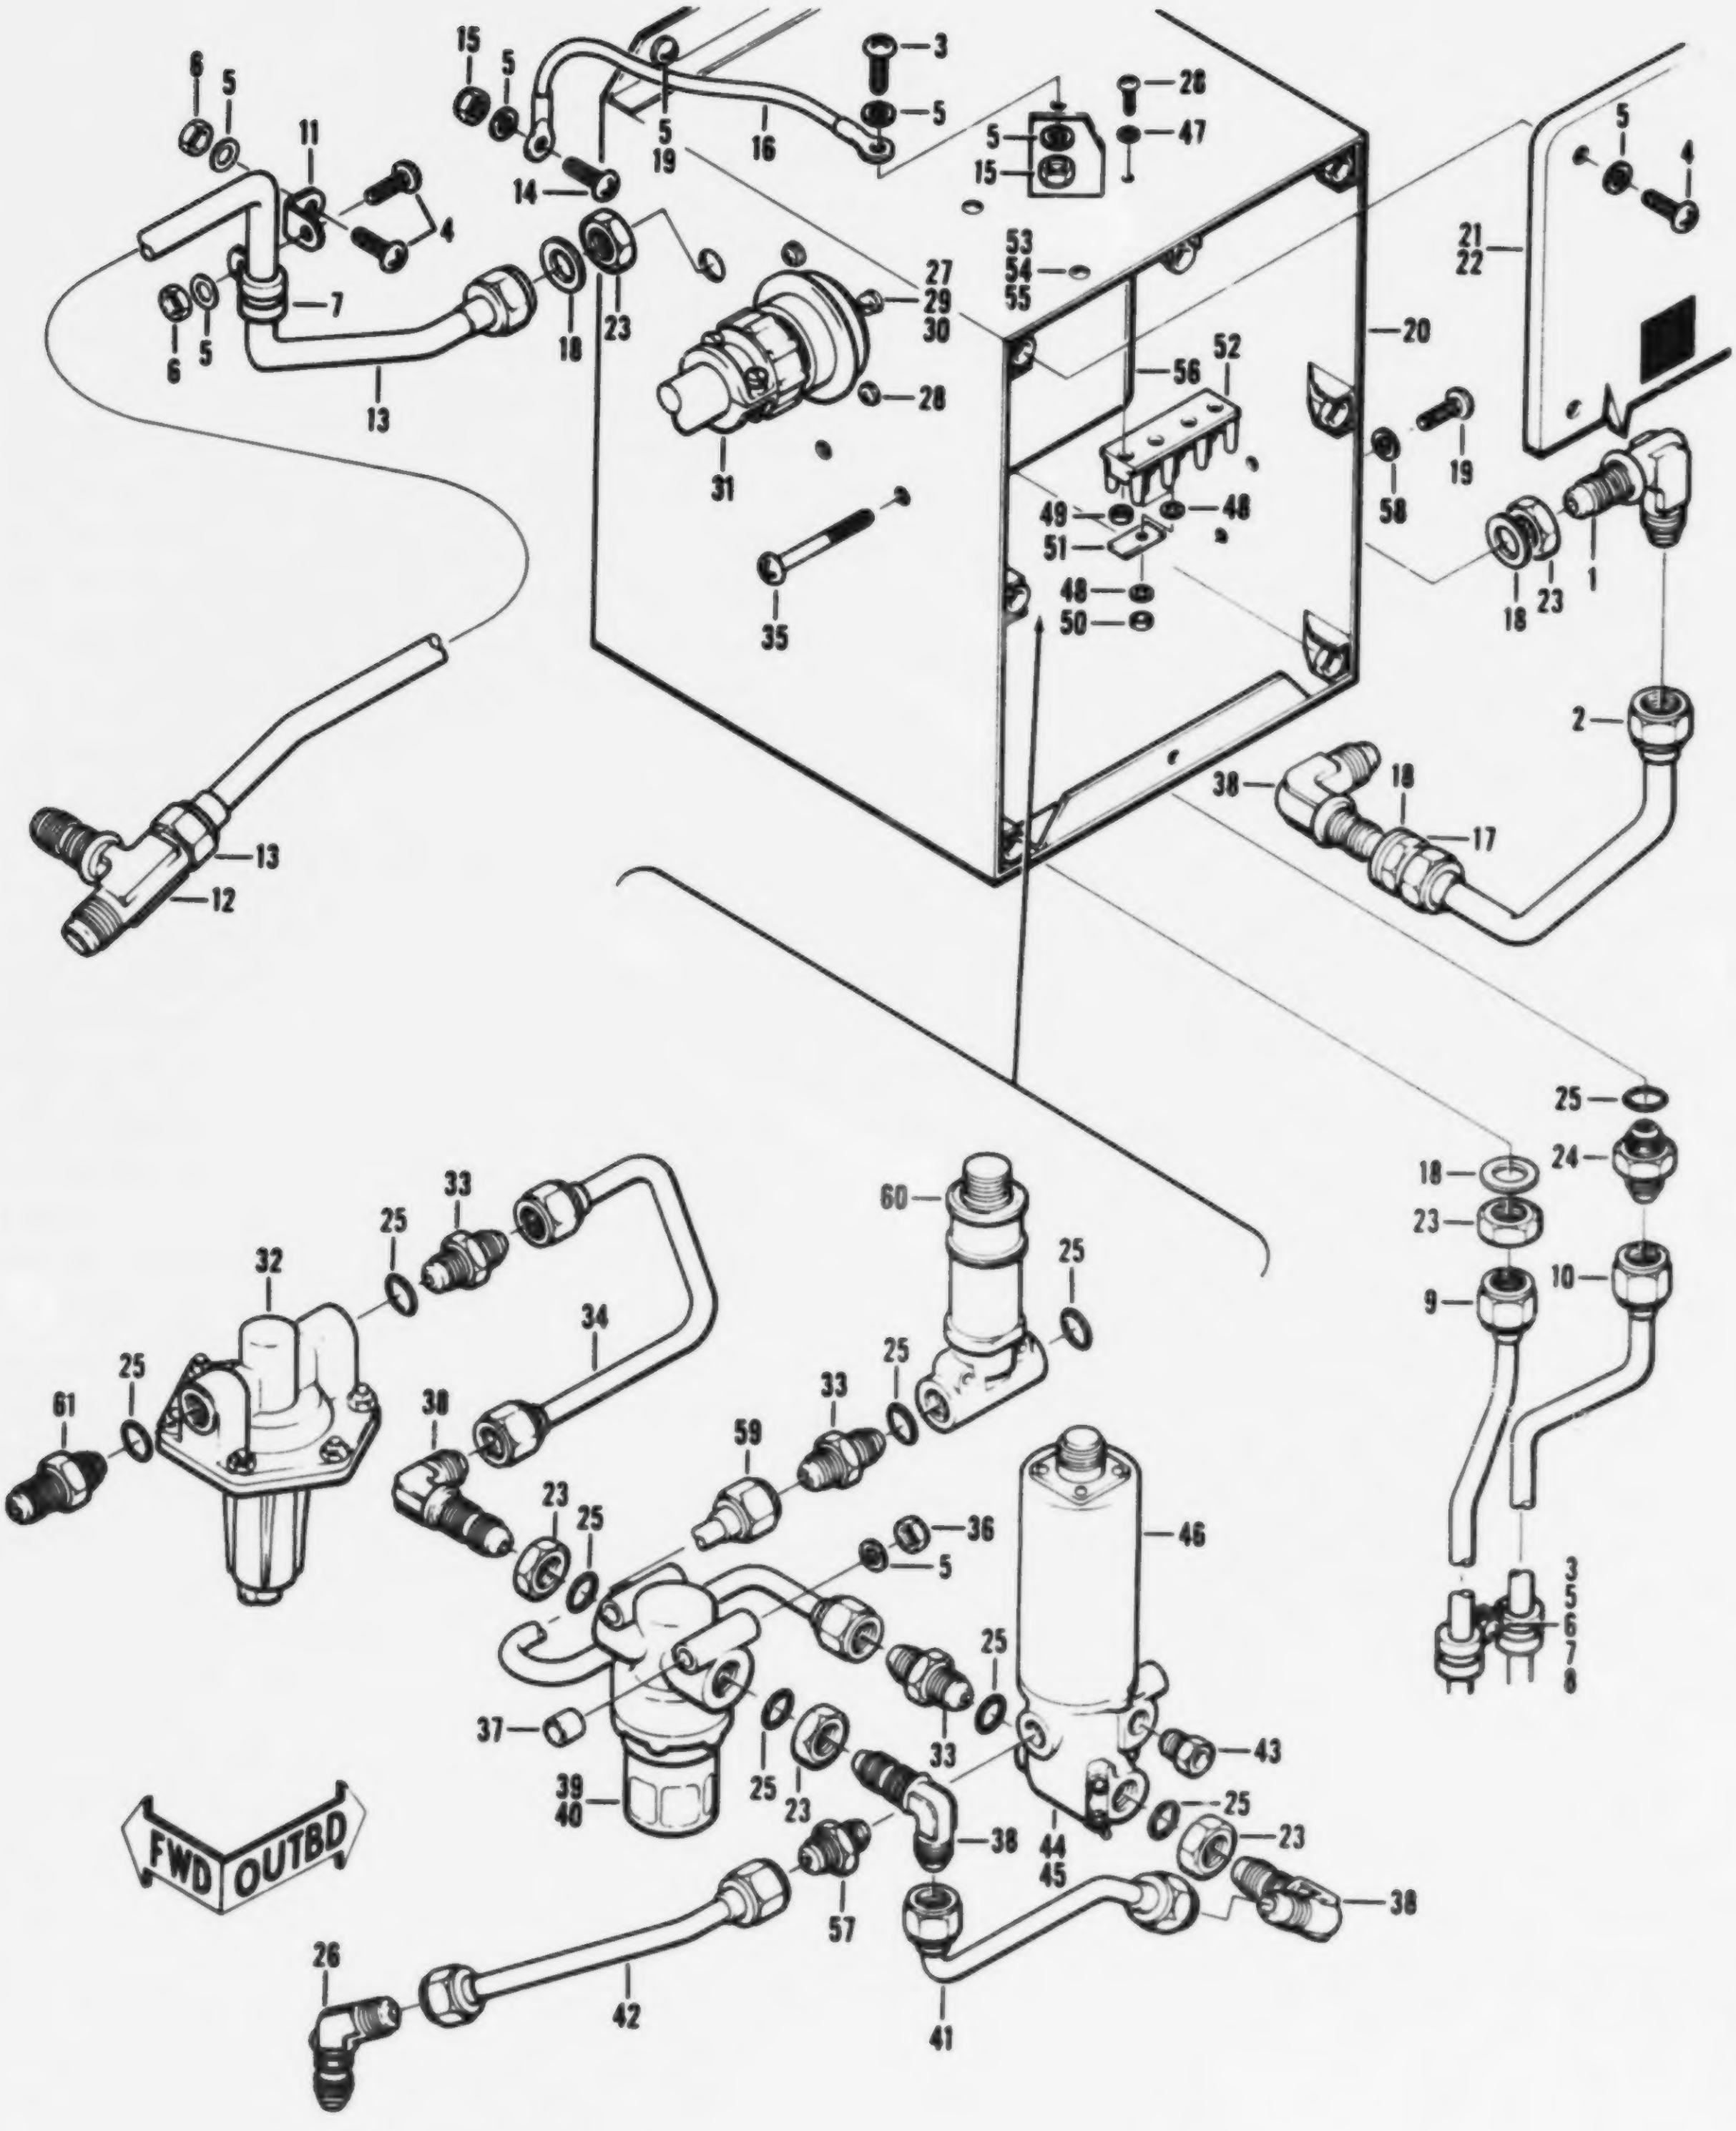
15
5
6
5
11
3
5
26
47
5
15
5
19
16
14
4
5
4
21
22
53
54
55
27
29
30
18
23
7
6
5
6
13
28
20
56
52
19
58
31
49
48
51
48
50
35
1
18
23
2
38
18
17
13
12
25
24
18
23
10
9
60
25
33
25
32
34
25
61
25
38
33
59
23
25
36
5
46
3
5
6
7
8
37
25
33
43
39
40
25
23
44
45
25
23
38
FWD
OUTBD
57
38
26
42
41

Figure 400. Box Installation, Heater Fuel System

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
400		XCFZZ		97499	204-070-431-15	BOX INSTL USBL EFF 60-3546 THRU 64-14191 SEE FIG 399 FOR NHA	UHB,UHC,UHM	EA	1
400	1	PAOZZ	4730-00-725-4351	96906	MS24394D4	.ELBOW,TUBE	UHB,UHC,UHM	EA	1
400	2	MFOZZ	1560-00-885-3542	97499	204-070-278-1	.TUBE ASSEMBLY	UHB,UHC,UHM	EA	1
400	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHM	EA	2
400	4	PAOZZ	5305-00-993-1848	96906	MS35207-265	SCREW,MACHINE	UHB,UHC,UHM	EA	2
400	5	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	9
400	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	4
400	7	PAOZZ	5340-00-151-5997	95906	MS21122-4	CLAMP,LOOP	UHB,UHC,UHM	EA	4
400	8	PAOZZ	5365-00-294-0576	80205	NAS43DD3-14	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
400	9	MFOZZ	1560-00-887-4668	97499	204-070-451-1	TUBE ASSEMBLY	UHB,UHC,UHM	EA	1
400	10	MFOZZ	1560-00-887-4666	97499	204-070-452-1	.TUBE ASSEMBLY	UHB,UHC,UHM	EA	1
400	11	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHB,UHC,UHM	EA	2
400	12	MFOZZ	4730-00-923-4322	97499	204-060-031-11	TEE,HEATER FUEL SYS	UHB,UHC,UHM	EA	1
400	13	MFOZZ	1560-00-887-4667	97499	204-070-453-1	.TUBE ASSEMBLY	UHB,UHC,UHM	EA	1
400	14	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
400	15	PAOZZ	5310-00-263-2862	96906	MS21045C3	NUT,SELF-LOCKING,HE	UHB,UHC,UHM	EA	1
400	16	PAOZZ	6150-00-163-1231	97499	120-055-1-16	.BUS.CONDUCTOR	UHB,UHC	EA	1
400	17	PAOZZ	4730-00-277-6371	88044	AN528D4	LOCKNUT,TUBE FITTIN	UHB,UHC,UHM	EA	1
400	18	PAOZZ	5310-00-187-2401	88044	AN960PD716	WASHER,FLAT	UHB,UHC,UHM	EA	1
400	19	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	SCREW,MACHINE	UHB,UHC,UHM	EA	4
400	20	AOOOZ	1560-00-345-8124	97499	204-070-431-17	.BOX ASSEMBLY,HEATER	UHB,UHC,UHM	EA	1
400	21	PAOOO	1560-00-873-2252	97499	204-070-430-11	..COVER ASSY	UHB,UHC,UHM	EA	1
400	22	PAOZZ	5330-00-770-8285	97499	204-070-430-9	...GASKET	UHB,UHC,UHM	EA	1
400	23	PAOZZ	5310-00-282-7823	96906	MS24400D4	..NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	6
400	24	PAOZZ	4730-00-834-9560	96906	MS24392D4	..NIPPLE,TUBE	UHB,UHC,UHM	EA	1
400	25	PAOZZ	5330-00-263-8028	96906	MS29512-04	..PACKING,PREFORMED	UHB,UHC,UHM	EA	9
400	26	PAOZZ	4730-00-803-5049	96906	MS24396D4	..ELBOW,TUBE	UHB,UHC,UHM	EA	1
400	27	PAOZZ	5305-00-543-5058	96906	MS35265-16	..SCREW,MACHINE	UHB,UHC,UHM	EA	1
400	28	PAOZZ	5305-00-889-2999	96906	MS35206-217	..SCREW,MACHINE	UHB,UHC,UHM	EA	3
400	29	PAOZZ	5310-00-550-5009	96906	MS15795-704	..WASHER,FLAT	UHB,UHC,UHM	EA	8
400	30	PAOZZ	5310-00-088-0551	96906	MS21044N04	..NUT,SELF-LOCKING,HE	UHB,UHC,UHM	EA	4
400	31	AOOOZ	1560-00-885-3553	97499	204-075-428-7	..WIRING ASSEMBLY SEE FIG 399 FOR BREAKDOWN	UHB,UHC,UHM	EA	1
400	32	XDOZZ		97499	204-070-539-1	..REGULATOR ASSY,FUEL	UHB,UHC,UHM	EA	1
400	33	PAOZZ	4730-00-834-9560	96906	MS24392D4	..NIPPLE,TUBE	UHB,UHC,UHM	EA	3
400	34	MFOZZ	4710-00-542-7443	97499	204-070-110-83	..TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
400	35	XDOZZ	5305-00-207-1208	88044	AN520-10R30	..SCREW,MACHINE	UHB,UHC,UHM	EA	2
400	36	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	2
400	37	PAOZZ	5365-00-633-5548	80205	NAS43DD3-21	..SPACER,SLEEVE	UHB,UHC,UHM	EA	2
400	38	PAOZZ	4730-00-725-4351	96906	MS24394D4	..ELBOW,TUBE	UHB,UHC,UHM	EA	4
400	39	PAOOO	2915-00-202-5931	90005	450-0E	..FILTER,FLUID	UHB,UHC,UHM	EA	1
400	40	PAOZZ	2910-00-203-3322	90005	25422-8	...FILTER ELEMENT,FLUI	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
400	41	MFOZZ	4710-00-542-7444	97499	204-070-110-85	..TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
400	42	MFOZZ	4710-00-542-7447	97499	204-070-110-91	..TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
400	43	PAOZZ	4730-00-278-2980	88044	AN933D1	..PLUG,PIPE	UHB,UHC,UHM	EA	2
400	44	XDOOZ		80992	20093-2	..PUMP ASSEMBLY,START	UHB,UHC,UHM	EA	1
400	45	PBOFF	2910-00-869-7398	81982	29574-2	...PUMP FUEL HEATER	UHB,UHC,UHM	EA	1
400	46	PBOFF	6105-00-373-3551	81982	28745	...MOTOR,DIRECT CURREN	UHB,UHC,UHM	EA	1
400	47	PAOZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK	UHB,UHC,UHM	EA	2
400	48	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT	UHB,UHC,UHM	EA	6
400	49	PAOZZ	5310-00-934-9739	96906	MS35649-242	..NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	2
400	50	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	3
400	51	XBOZZ	5970-00-926-2544	96906	MS25227-1A	..INSULATOR,PLATE	UHB,UHC,UHM	EA	2
400	52	XDOZZ		96906	MS27212-1-3	..TERMINAL BOARD	UHB,UHC,UHM	EA	1
400	53	PAOZZ	5305-00-984-6191	96906	MS35206-243	..SCREW,MACHINE	UHB,UHC,UHM	EA	2
400	54	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT	UHB,UHC,UHM	EA	2
400	55	PAOZZ	5310-00-807-1466	96906	MS21042-08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	2
400	56	PACZZ	5945-00-225-8692	96906	MS24149D1	..RELAY,ELECTROMAGNET	UHB,UHC,UHM	EA	1
400	57	PAOZZ	4730-00-240-5905	88044	AN816-4D	..ADAPTER,STRAIGHT,PI TO TUBE	UHB,UHC,UHM	EA	1
400	58	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT	UHB,UHC,UHM	EA	3
400	59	MFOZZ	4710-00-542-7445	97499	204-070-110-87	..TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
400	60	PAOZZ	4810-00-203-5494	89513	09C27	..VALVE,SOLENOID	UHB,UHC,UHM	EA	1
400	61	PAOZZ	4730-00-715-0018	96906	MS24393D4	..NIPPLE,TUBE	UHB,UHC,UHM	EA	1

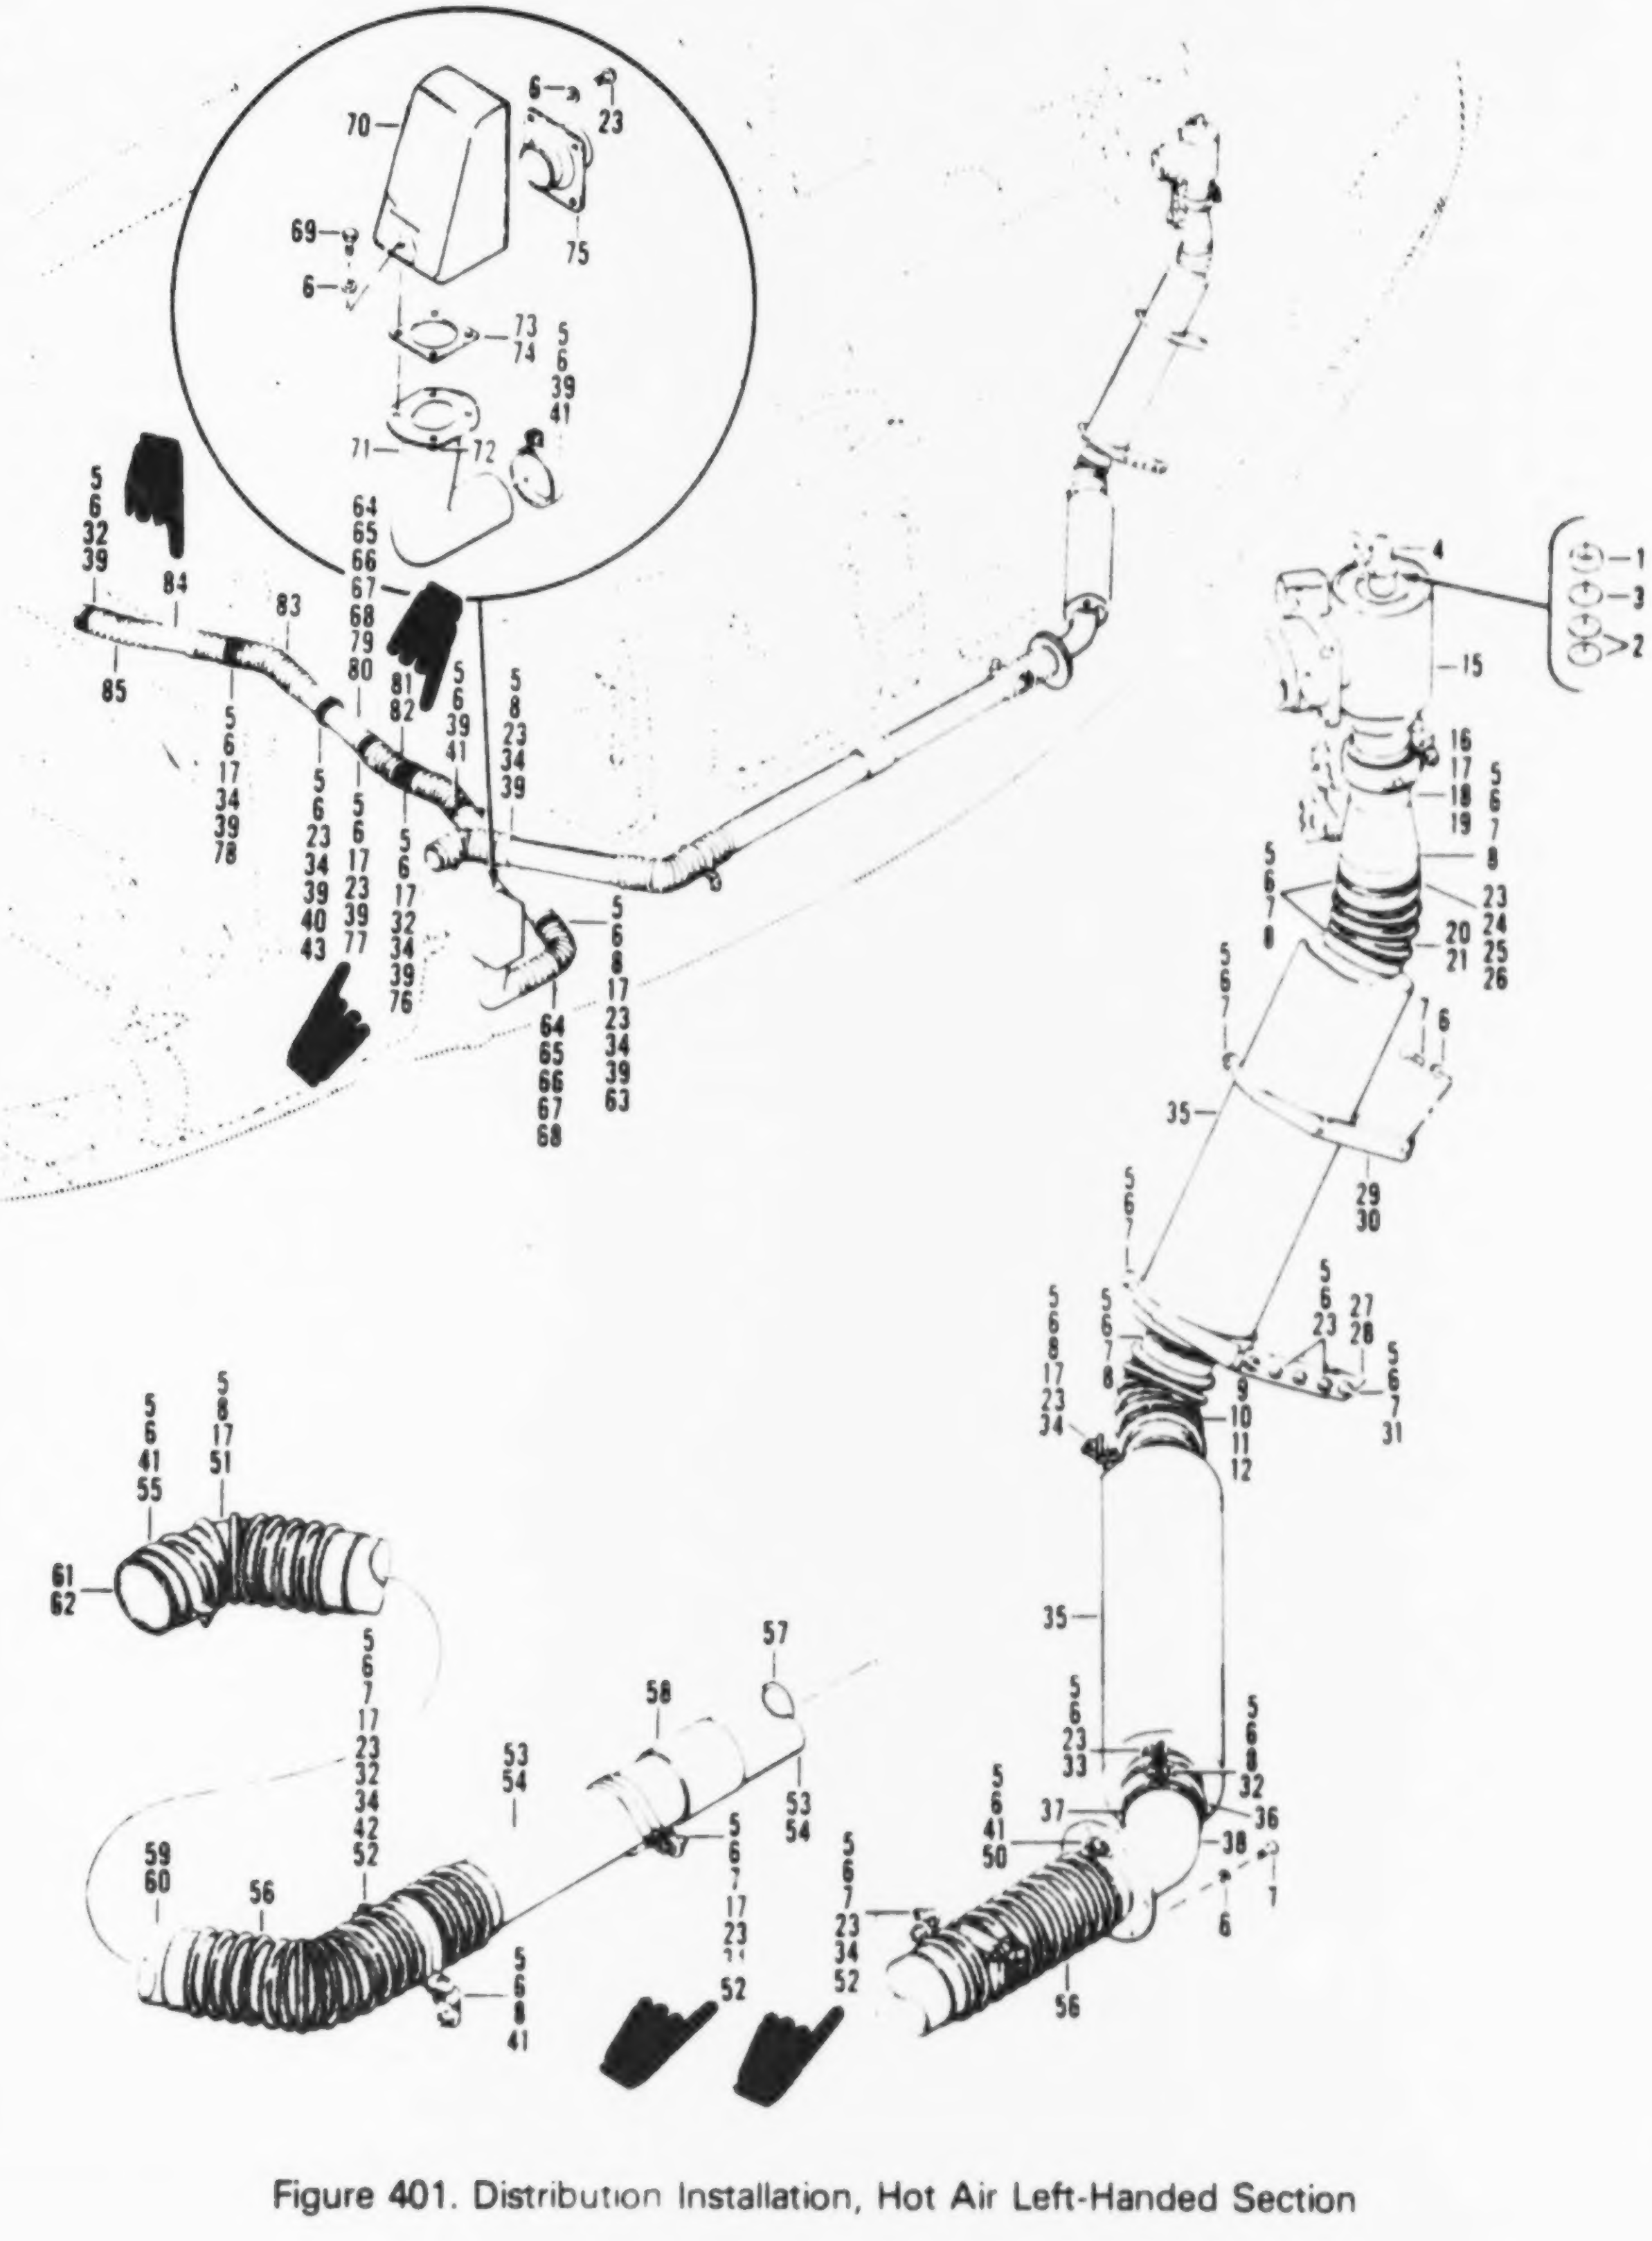
70
6
23
75
69
6
73
74
5
6
39
41
71
72
5
6
32
39
84
83
85
64
65
66
67
68
79
80
81
82
5
6
39
41
5
8
23
34
39
5
6
17
34
39
78
5
6
23
34
39
40
43
5
6
17
23
39
77
5
6
17
32
34
39
76
5
6
8
17
23
34
39
63
64
65
66
67
68
4
1
3
2
15
16
17
18
19
5
6
7
8
5
6
7
8
23
24
25
26
20
21
5
6
7
7
6
35
29
30
5
6
7
5
6
23
27
28
5
6
7
31
5
6
8
17
23
34
5
6
7
8
9
10
11
12
5
6
41
55
5
8
17
51
61
62
5
6
7
17
23
32
34
42
52
35
57
58
53
54
53
54
5
6
23
33
5
6
8
32
36
37
38
5
6
41
50
6
7
59
60
56
5
6
7
17
23
52
5
6
7
23
34
52
56
5
6
8
41

Figure 401. Distribution Installation, Hot Air Left-Handed Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
401		XCFZZ		97499	205-070-480-1	DISTRIBUTION INSTL USBL EFF 62-2106 THRU 62-1237 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
401		XCFZZ		97499	205-070-480-3	DISTRIBUTION INSTL USBL EFF 63-8739 THRU 63-8803 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
401		XCFZZ		97499	205-070-480-7	DISTRIBUTION INSTL USBL EFF 63-8804 THRU 63-13002 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
401		XCFZZ		97499	205-070-480-5	DISTRIBUTION INSTL USBL EFF 64-13492 THRU 64-13661 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
401		XCFZZ		97499	205-070-480-9	DISTRIBUTION INSTL USBL EFF 64-13662 THRU 64-13901 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
401	1	PAOZZ	5310-00-949-5143	88044	AN924-16D	NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
401	2	PAOZZ	5330-00-965-6503	97499	205-060-438-5	GASKET .... UHE,UHH,UHV,UHX	EA	2
401	3	PAOZZ	5310-00-595-6902	88044	AN960PD216L	WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
401	4	PAOZZ	1560-00-847-7473	97499	205-070-454-1	NOZZLE,INSERT BLEED U/O PN 205-070-480-7 ... UHE,UHH,UHV,UHX	EA	1
401	5	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	55
401	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	67
401	7	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	24
401	8	PBOZZ	5340-00-193-0120	88044	AN735D48	CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	10
401	9	PAOZZ	1560-00-759-0757	97499	205-070-231-1	ELBOW,DUCT,AIR U/O PN 205-070-480-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
401	10	PAOZZ	1560-00-794-2579	97499	205-070-482-1	ELBOW,DUCT,AIR U/O PN 205-070-480-5 & -9 ... UHE,UHH,UHV,UHX	EA	1
401	11	PAOZZ	4730-00-758-7305	97499	205-070-234-1	DUCT,MUFFLER TO MUF U/O PN 205-070-480-5 & -9 .... UHE,UHH,UHV,UHX	EA	1
401	12	XDOZZ	5330-00-786-4282	80205	NAS620-24-16	HOSE,AIR DUCT U/O PN 205-070-480-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
401	12	PAOZZ	4720-00-155-4818	80205	NAS1375A12SA038	HOSE,AIR DUCT U/O PN 205-070-480-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
401	15	PAODD	1660-00-762-9781	97499	204-072-475-1	VALVE ASSY,MIXING U/O PN 205-070-480-1,-3 & -7. SEE TM55-1660-234-40 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
401	16	PAOZZ	1560-00-757-2662	97499	205-070-945-1	SUPPORT ASSEMBLY,HE U/O PN 205-070-480-3 & -7 .... UHE,UHH,UHV,UHX	EA	1
401	17	PAOZZ	5305-00-989-7435	96906	MS35207-264	SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	9
401	18	XDOZZ	5305-00-285-1766	88044	AN525-10R20	SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
401	19	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	3
401	20	PAOZZ	4720-00-155-4817	80205	NAS1375A12SA014	HOSE,AIR DUCT U/O PN 205-070-480-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
401	21	PAOZZ	4730-00-758-9277	97499	205-070-235-1	DUCT ASSY,MIXING VALVE U/O PN 205-070-480-5 & -9 .... UHE,UHH,UHV,UHX	EA	1
401	23	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	18
401	24	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX .... UHE,UHH,UHV,UHX	EA	1
401	25	PAOZZ	5365-00-633-5554	80205	NAS43D04-28	SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
401	26	PAOZZ	5306-00-272-2141	88044	AN43B15	BOLT,EYE .... UHE,UHH,UHV,UHX	EA	1
401	27	XBOZZ		97499	205-070-230-1	BRACKET ASSEMBLY U/O PN 205-070-480-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
401	28	PBOZZ	1660-00-919-1374	97499	205-070-236-1	BRACKET ASSEMBLY,AI U/O PN 205-070-480-5 & -9 .... UHE,UHH,UHV,UHX	EA	1
401	29	XBOZZ	1660-00-106-9998	97499	205-070-230-3	BRACKET ASSEMBLY,AI U/O PN 205-070-480-1,-3,& -7 .... UHE,UHH,UHV,UHX	EA	1
401	30	PAOZZ	1560-00-919-1376	97499	205-070-237-1	BRACKET ASSEMBLY,AI U/O PN 205-070-480-5 & -9 .... UHE,UHH,UHV,UHX	EA	1

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
401	31	PAOZZ	5310-00-072-4873	97499	140-001-6	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
401	32	PAOZZ	5305-00-993-1848	96906	MS35207-266	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
401	33	PAOZZ	5340-00-993-1477	81996	EAB700052	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
401	34	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	16
401	35	PAOZZ	1560-00-010-0423	89513	A82C01	.SUPPRESSOR,AIR DIST	UHE,UHH,UHV,UHX	EA	2
401	36	PAOZZ	5340-00-548-8323	81996	EAB700-54	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
401	37	XDOZZ		80205	NAS520-24-18	.HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
401	38	PAOZZ	4730-00-758-7307	97499	205-070-421-1	.ELBOW	UHE,UHH,UHV,UHX	EA	1
401	39	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	14
401	40	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
401	41	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
401	42	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
401	43	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	4
401	50	PAOZZ	5340-00-993-1476	81996	EAB700046	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
401	51	PAOZZ	5340-00-680-3399	96906	MS21919DG50	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
401	52	MFOZZ	DELETED	97499	204-070-048-7	CLAMP,ASSEMBLY,FORW	UHE,UHH,UHV,UHX	EA	3
401	53	A0000		97499	205-070-451-1	.DUCT ASSEMBLY U/O PN 205-070-480-1 & -3	UHE,UHH,UHV,UHX	EA	1
401	54	A0000		97499	205-070-432-3	DUCT ASSEMBLY U/O PN 205-070-480-5,-7,& -9	UHE,UHH,UHV,UHX	EA	1
401	55	PAOZZ	5340-00-782-8514	81996	EAB700050	..CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
401	56	PAOZZ	4720-00-063-8005	30299	GD10A12C28	..HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	2
401	57	PAOZZ	4720-00-758-7308	97499	205-070-432-17	..DUCT ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
401	58	XDOZZ		80205	NAS521-24-13	..HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
401	59	XDOZZ	4720-00-966-7557	97499	205-070-450-3	..HOSE U/O PN 205-070-451-1	UHE,UHH,UHV,UHX	EA	1
401	60	PAOZZ	4720-00-016-5311	97499	205-070-432-19	..DUCT U/O PN 205-070-432-3	UHE,UHH,UHV,UHX	EA	1
401	61	PAOZZ	4720-00-994-3257	97499	70-004A12F1422	..HOSE,AIR DUCT U/O PN 205-070-451-1 INTRCH	UHE,UHH,UHV,UHX	EA	1
401	61	PAOZZ	4720-00-132-0666	80205	NAS1374A12CA020	..HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
401	62	PAOZZ	4720-00-916-8357	97499	70-001B12F2222	..HOSE,AIR DUCT U/O PN 205-070-432-3	UHE,UHH,UHV,UHX	EA	1
401	63	PAOZZ	5365-00-680-4834	80205	NAS43DD3-96	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
401	64	PAOZZ	4720-00-782-9464	80205	NAS1376A10SA366	.HOSE,AIR DUCT U/O PN 205-070-480-5,& -9	UHE,UHH,UHV,UHX	EA	1
401	65	PA000	1660-00-967-7594	97499	205-070-470-1	.DUCT ASSEMBLY,HOT A U/O PN 205-070-480-1	UHE,UHH,UHV,UHX	EA	1
401	66	PA000	1560-00-010-0399	97499	205-070-470-3	.DUCT ASSEMBLY,POST U/O PN 205-070-480-3	UHE,UHH,UHV,UHX	EA	1
401	67	XDOZZ	4720-00-989-1792	97499	70-004A10F2922	..HOSE,AIR DUCT U/O PN 205-070-470-1	UHE,UHH,UHV,UHX	EA	1
401	68	PAOZZ	4720-00-916-8356	97499	70-001B10F6622	..HOSE,AIR DUCT U/O PN 205-070-470-3	UHE,UHH,UHV,UHX	EA	1
401	69	PAOZZ	5306-00-150-9221	88044	AN3-34	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
401	70	PAOZZ	1560-00-912-1178	97499	204-072-420-5	DUCT ASSEMBLY,AIR D DISTRIBUTION	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
401	71	PAOOO	4730-00-918-0718	97499	205-070-461-5	.ELBOW ASSEMBLY,AIR	UHE,UHH,UHV,UHX	EA	1
401	72	PAOZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	4
01	73	MFOZZ		97499	205-070-416-7	.ORIFICE PLATE U/O PN 205-070-480-1	UHE,UHH,UHV,UHX	EA	1
401	74	XDOZZ	1560-00-103-5414	97499	205-070-416-13	.ORIFICE PLATE, OUTL U/O PN 205-070-480-3,-5,-7,&-9	UHE,UHH,UHV,UHX	EA	1
401	75	PAOZZ	1660-00-070-4606	97499	204-072-465-1	.VALVE ASSEMBLY,AIR	UHE,UHH,UHV,UHX	EA	2
401	76	PAOZZ	5365-00-293-9800	80205	NAS43003-24	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
401	77	MFOZZ	DELETED	97499	20-032-1	.BRACKET,ENGINE	UHE,UHH,UHV,UHX	EA	1
401	78	PAOZZ	5305-00-995-3444	96906	MS35207-266	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
401	79	AOOOO		97499	205-070-469-1	.DUCT ASSEMBLY U/O PN 205-070-480-1	UHE,UHH,UHV,UHX	EA	1
401	80	AOOOO		97499	205-070-469-3	DUCT ASSEMBLY U/O PN 205-070-480-3 & -7	UHE,UHH,UHV,UHX	EA	1
401	81	PAOZZ	4720-00-989-1138	97499	70-004A10F14Z2	..HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
401	82	MFOZZ	DELETED	97499	205-070-452-1	..HOSE	UHE,UHH,UHV,UHX	EA	1
401	83	PAOZZ	4720-00-985-3405	97499	70-004A10F25Z3	..HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
401	84	MFOZZ	DELETED	97499	205-070-452-3	..HOSE	UHE,UHH,UHV,UHX	EA	1
401	85	XDOZZ		97499	70-004A10F16Z2	..HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1

Fig 402 NOT USED

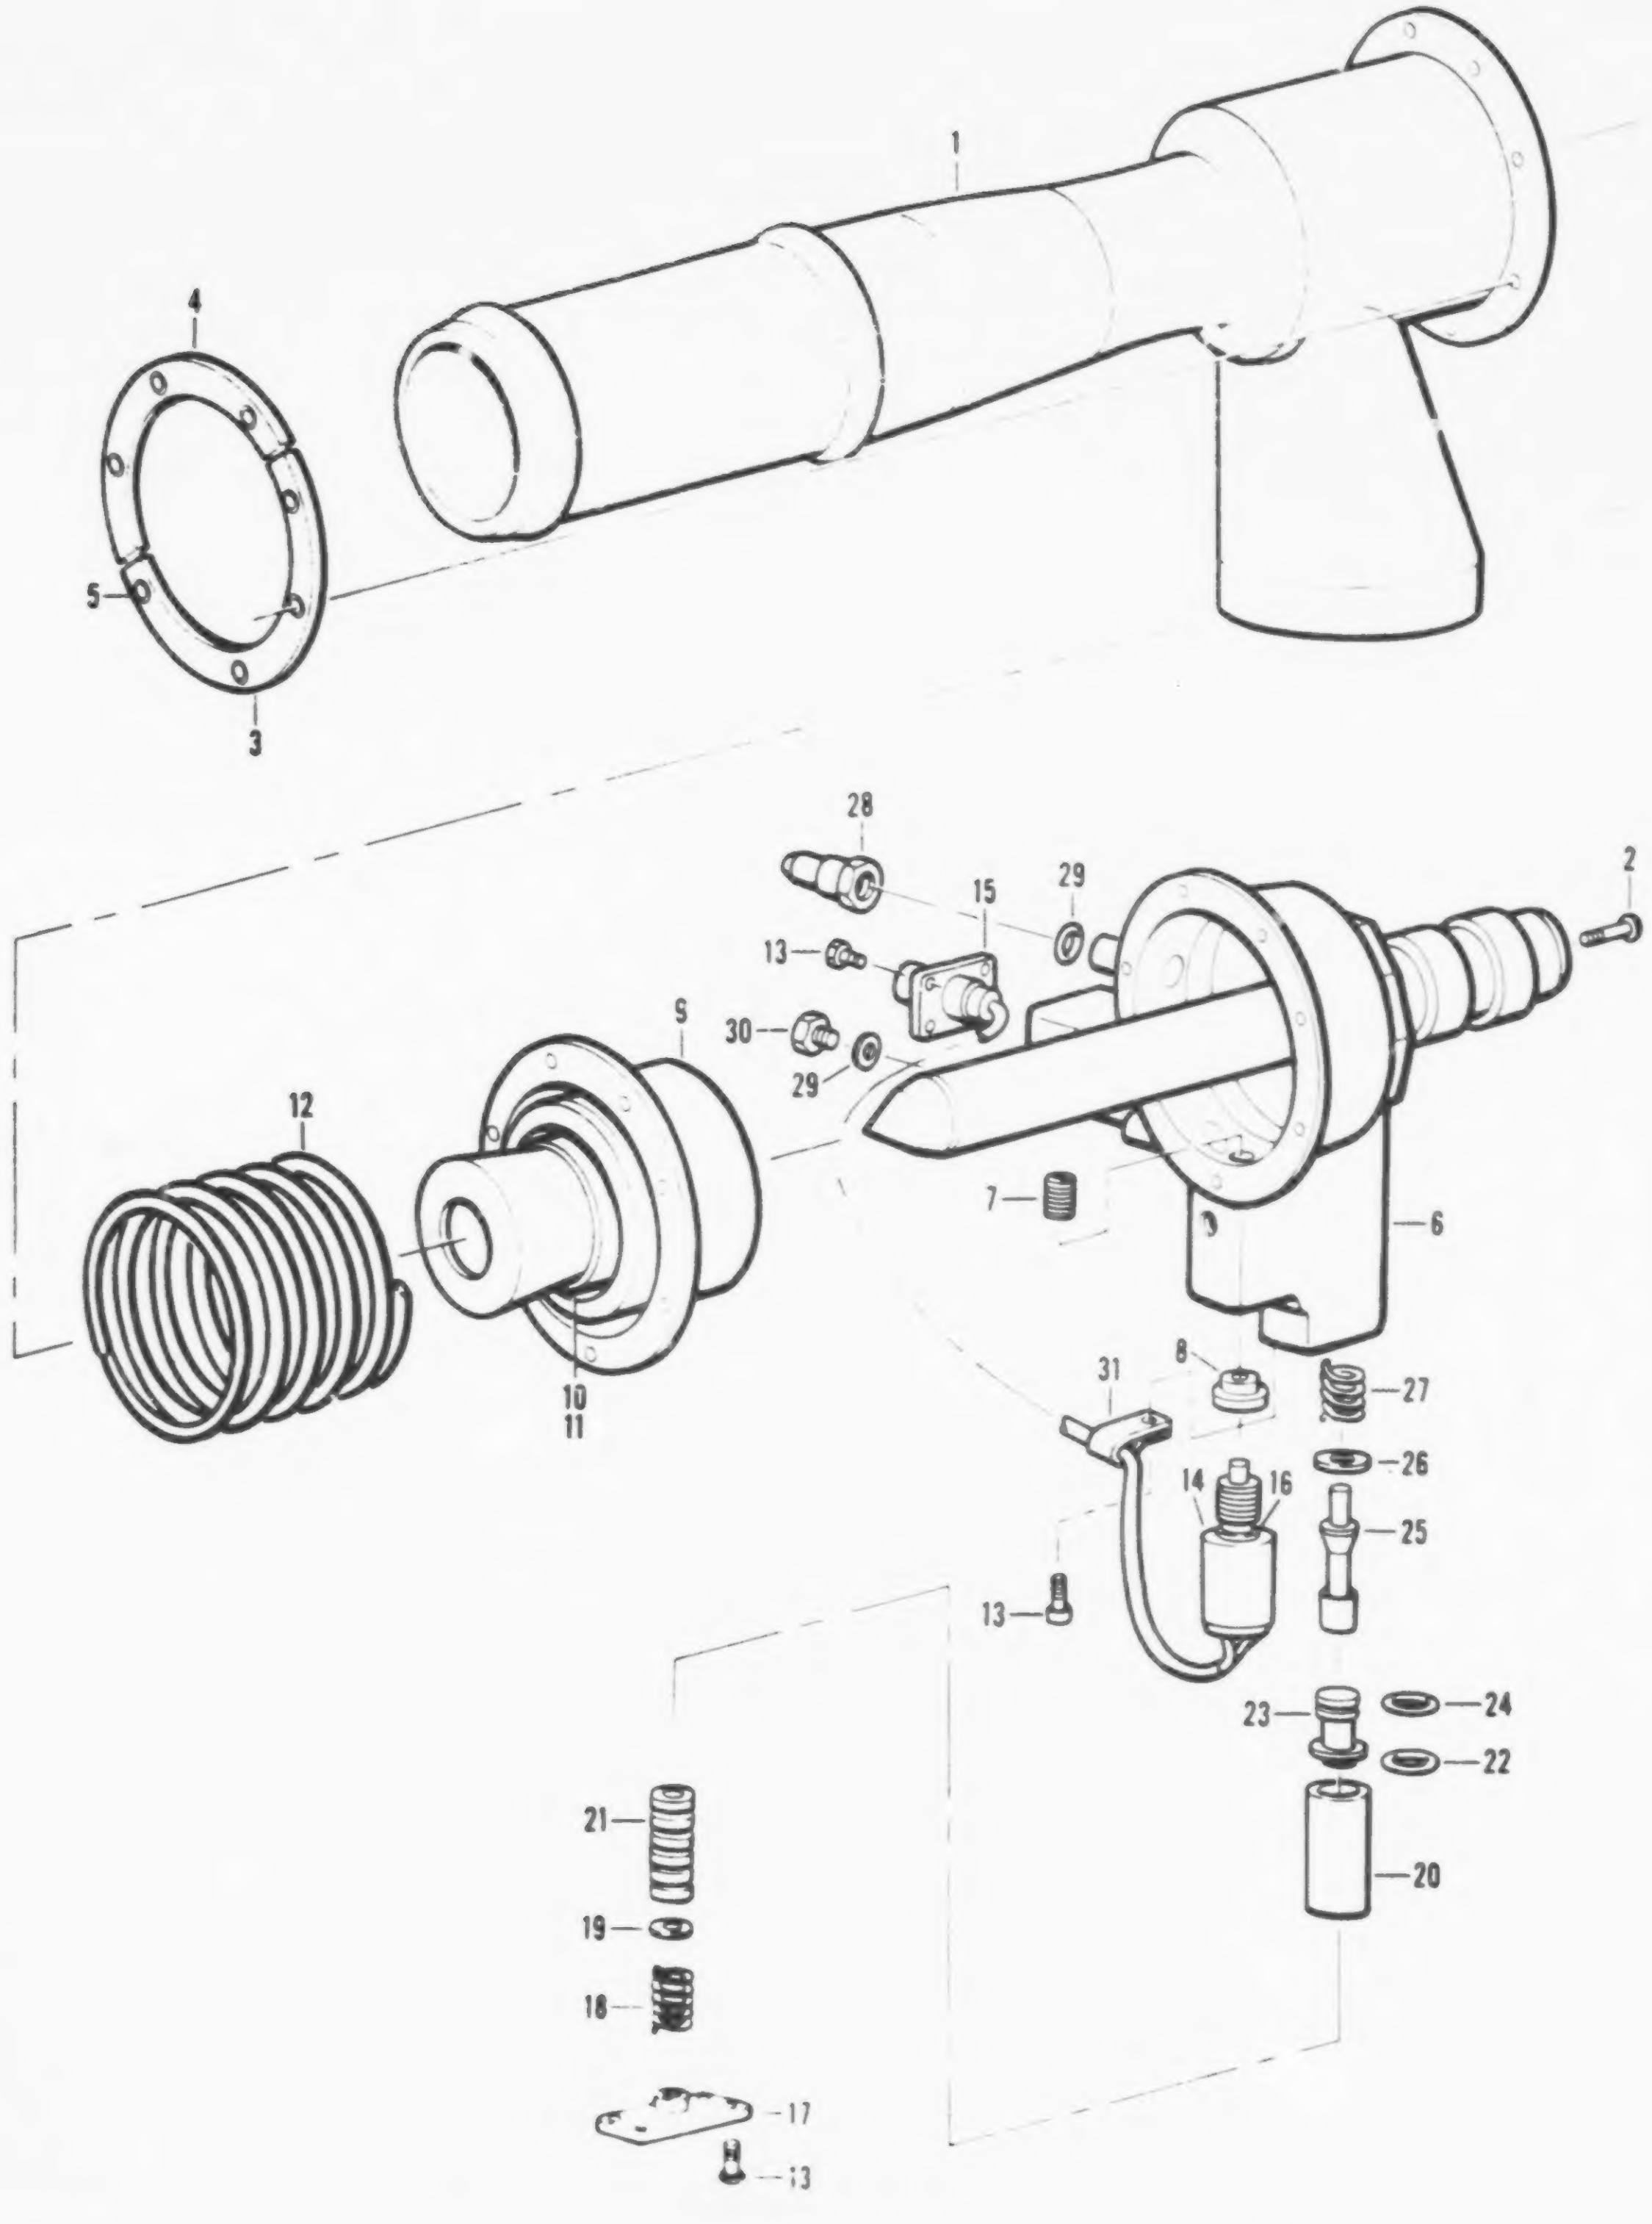
1
4
5
3
28
2
15
29
13
9
30
29
12
7
6
10
11
8
31
27
26
14
16
25
13
23
24
22
21
20
19
18
17
13

Figure 403. Valve, Air Distribution

(1) ILLUSTRATION (A) FIG NO.	(B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
403		PAODD	1660-00-931-2314	97499	205-072-277-3	VALVE,AIR DISTRIBUT USBL EFF 66-16868 & SUBSEQUENT BREAKDOWN FOR PN 205-072-277-3 35D10 SEE FIG 392 FOR NHA	UHE,UHH,UHV,UHX	EA	1
403	1	XBDZZ	1660-00-400-2776	89513	46D32	CHAMBER,AIR CONDITI	UHE,UHH,UHV,UHX	EA	1
403	2	PADZZ	5305-00-614-0246	96906	MS35266-63	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	7
403	3	PAFFF	1660-00-121-6633	89513	A46D91	RING ASSY,HALF	UHE,UHH,UHV,UHX	EA	1
403	4	PAFFF	1660-00-121-6618	89513	B46D91	RING ASSY,HALF	UHE,UHH,UHV,UHX	EA	1
403	5	PAFZZ	5310-00-828-5456	72962	RM12LHCFM2-02	NUT,SELF-LOCKING	UHE,UHH,UHV,UHX	EA	7
403	6	PAFFF	1660-00-012-3246	89513	46D82	VALVE CONTROL,ASSY	UHE,UHH,UHV,UHX	EA	1
403	7	PBDZZ	5305-00-115-6034	89513	46C79	SETSCREW	UHE,UHH,UHV,UHX	EA	1
403	8	PADZZ	1660-00-677-5674	89513	42C74	SEAT,VALVE	UHE,UHH,UHV,UHX	EA	1
403	9	PADDD	1660-00-010-7853	89513	46D81	DIAPHRAM ASSEMBLY,H	UHE,UHH,UHV,UHX	EA	1
403	10	PADZZ	5330-00-103-9796	89513	BG25C85	PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	1
403	11	PADZZ	5330-00-104-9481	89513	B17D82	RETAINER,PACKING	UHE,UHH,UHV,UHX	EA	2
403	12	XBDZZ	5360-01-032-6904	89513	92D82-1	SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
403	13	PADZZ	5305-00-543-2024	96906	MS35265-13	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
403	14	PAFFF	1660-00-010-7857	89513	46D84	SOLENOID ASSY	UHE,UHH,UHV,UHX	EA	1
403	15	PAFZZ	5935-00-988-4353	96906	MS3122E10-6P	CONNECTOR,RECEPTACL	UHE,UHH,UHV,UHX	EA	1
403	16	PADZZ	5330-00-627-5997	96906	MS9020-05	PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	1
403	17	PBDZZ	1660-00-012-3245	89513	46D77	PLATE,REGULATOR	UHE,UHH,UHV,UHX	EA	1
403	18	PADZZ	5360-00-012-3264	89513	A46D95	SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
403	19	PADZZ	5310-00-183-4354	88044	AN960C3L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
403	20	PADZZ	5365-00-054-0949	89513	46D72	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
403	21	PADZZ	1660-00-010-7859	89513	46D73	PISTON,VALVE	UHE,UHH,UHV,UHX	EA	1
403	22	PADZZ	5330-00-171-7786	86197	376-111-0012	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
403	23	PADZZ	1660-00-012-3249	89513	46D75	SEAT,VALVE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
403	24	PADZZ	5330-00-061-7522	89513	AG25C85	PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	1
403	25	PADZZ	1660-00-070-1729	89513	06D32	STEM,REGULATOR VALV	UHE,UHH,UHV,UHX	EA	1
403	26	PADZZ	5310-00-183-4354	88044	AN960C3L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
403	27	PADZZ	5360-00-097-8429	89513	46D95	SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
403	28	PADZZ	4730-00-834-9560	96906	MS24392D4	NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
403	29	PADZZ	5330-00-185-0366	89513	X25C85	PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
403	30	PADZZ	5365-00-837-0856	96906	MS24391D4L	PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	1
403	31	PBDZZ	1660-00-625-1994	89513	30D86	CLIP	UHE,UHH,UHV,UHX	EA	1

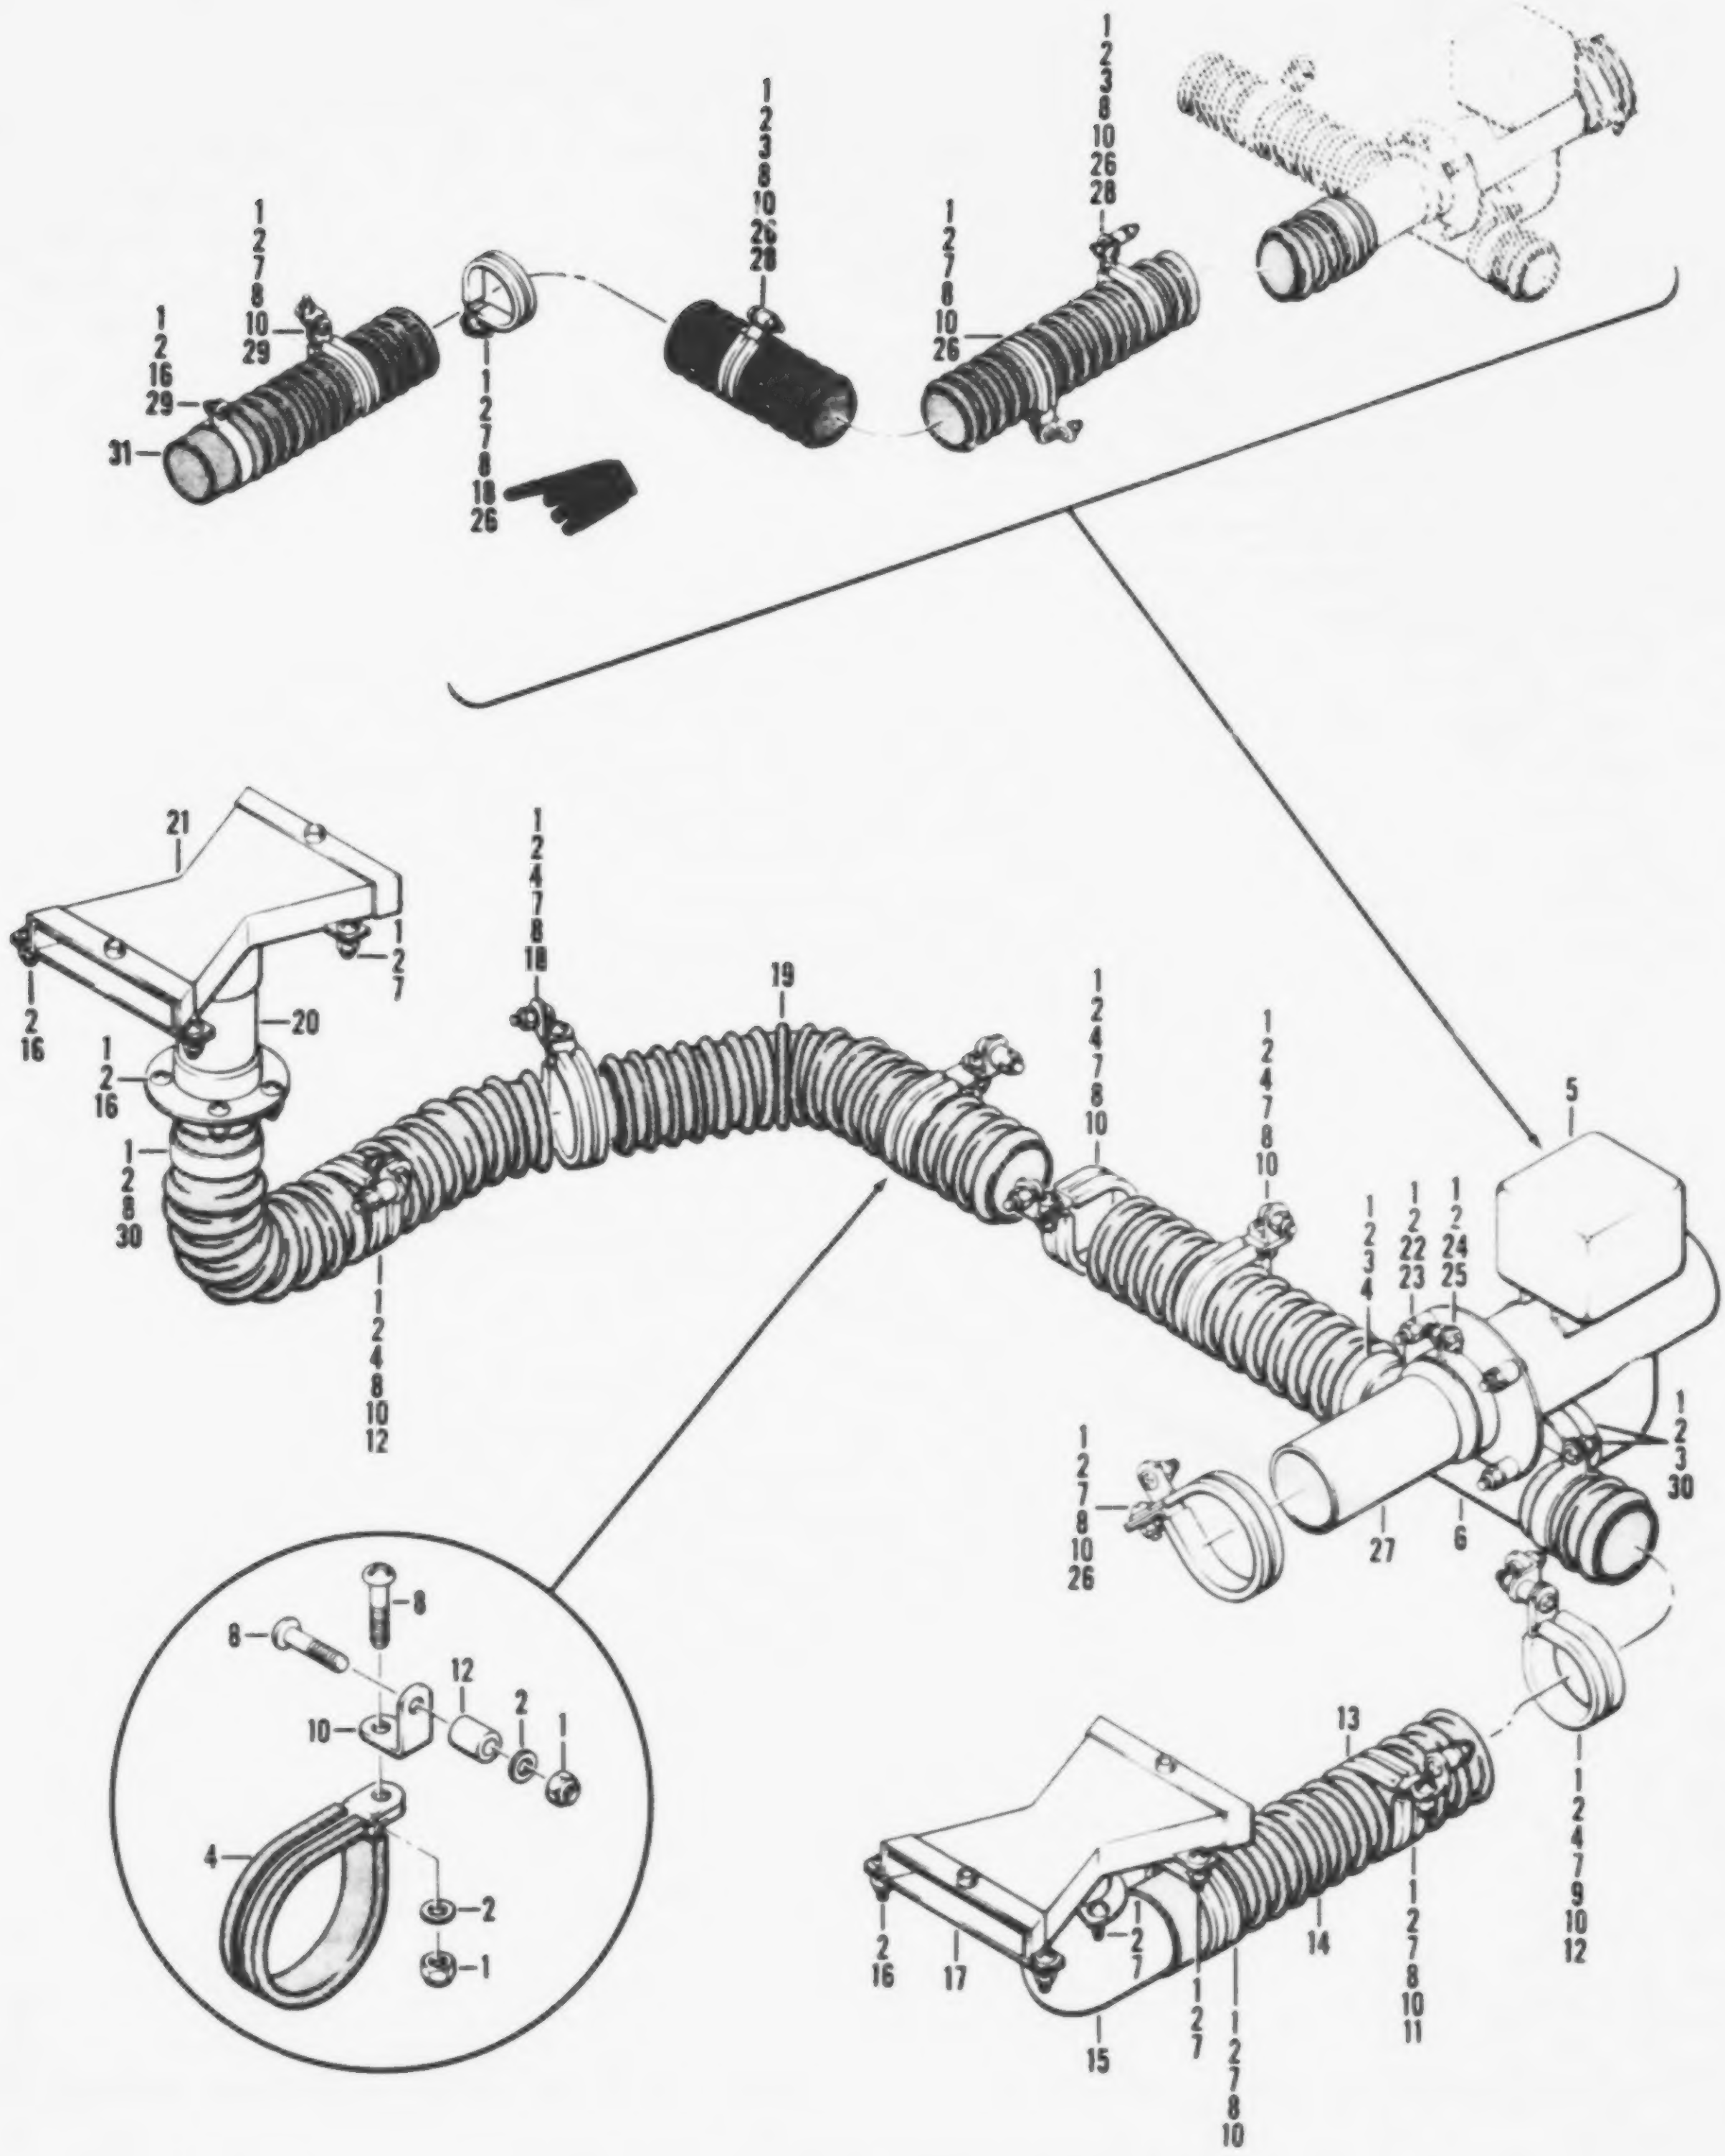
1 2 16 29
31
1 2 7 8 10 29
1 2 7 8 18 26
1 2 3 8 10 26 28
1 2 7 8 10 26
1 2 3 8 10 26 28
21
1 2 7
2 16
20
1 2 16
1 2 8 30
1 2 4 7 8 18
19
1 2 4 8 10 12
1 2 4 7 8 10
1 2 4 7 8 10
5
1 2 3 4
1 2 22 23
1 2 24 25
1 2 3 30
1 2 7 8 10 26
27
6
8
8
12
2
1
10
4
2
1
13
1 2 4 7 9 10 12
2 16
17
2 7
15
1 2 7
1 2 7 8 10
14
1 2 7 8 10 11

Figure 404. Distribution Installation, Hot Air

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
404		XCFZZ		97499	205-070-480-1	DISTRIBUTION INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
404		XCFZZ		97499	205-070-480-3	DISTRIBUTION INSTL USBL EFF 63-8739 THRU 63-8803 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
404		XCFZZ		97499	205-070-480-7	DISTRIBUTION INSTL USBL EFF 63-8804 THRU 63-13002 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
404		XCFZZ		97499	205-070-480-5	DISTRIBUTION INSTL USBL EFF 64-13492 THRU 64-13661 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
404		XCFZZ		97499	205-070-480-9	DISTRIBUTION INSTL USBL EFF 64-13662 THRU 64-13901 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
404	1	PAOZZ	5340-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	42
404	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT UHE,UHH,UHV,UHX	EA	44
404	3	PAOZZ	5305-00-993-1848	96906	MS35207-265	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	4
404	4	PAOZZ	5340-00-989-4581	81996	EAB700D32	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	10
404	5	PBOFF	1660-00-722-3968	97499	204-070-181-1	VALVE ASSEMBLY SEE FIG 388 FOR BREAKDOWN UHE,UHH,UHV,UHX	EA	1
404	6	PAOZZ	1660-00-736-1009	97499	204-070-193-1	TEE,BLEED AIR UHE,UHH,UHV,UHX	EA	1
404	7	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	16
404	8	PAOZZ	5305-00-989-7435	96906	MS35207-264	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	15
404	9	PAOZZ	5305-00-995-3444	96906	MS35207-266	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
404	10	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE UHE,UHH,UHV,UHX	EA	13
404	11	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	1
404	12	PAOZZ	5365-00-304-7679	80205	NAS43DD3-12	SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	3
404	13	MFOZZ		97499	204-070-048-13	CLAMP ASSEMBLY UHE,UHH,UHV,UHX	EA	1
404	14	XDOZZ		80205	NAS1375A08SA110	HOSE,AIR DUCT U/O PN 205-070-480-5,& -9 UHE,UHH,UHV,UHX	EA	1
404	15	PAOZZ	4730-00-966-7583	97499	205-070-466-1	ELBOW UHE,UHH,UHV,UHX	EA	1
404	16	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	9
404	17	PAOZZ	1660-00-986-9920	97499	204-072-429-1	REGISTER ASSY,HEAT UHE,UHH,UHV,UHX	EA	1
404	18	MFOZZ	DELETED	97499	20-032-1	BRACKET,ENGINE UHE,UHH,UHV,UHX	EA	2
404	19	PAOZZ	4720-00-134-8932	80205	NAS1375A08SA260	HOSE,AIR DUCT U/O PN 205-070-480-5,& -9 UHE,UHH,UHV,UHX	EA	1
404	20	PAOZZ	4720-00-966-7562	97499	205-070-462-1	HOSE UHE,UHH,UHV,UHX	EA	1
404	21	PAOZZ	1660-00-986-9921	97499	204-072-429-5	REGISTER ASSY,HEAT UHE,UHH,UHV,UHX	EA	1
404	22	PAOZZ	5305-00-993-1851	96906	MS35207-267	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	4
404	23	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	4
404	24	PAOZZ	5305-00-993-1851	96906	MS35207-267	SCREW,MACHINE UHE,UHH,UHV,UHX	EA	1
404	25	PAOZZ	5340-00-993-1476	81996	EAB700046	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	1
404	26	PAOZZ	5340-00-548-8051	81996	EAB700-42	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	5
404	27	PAOZZ	4720-00-966-7561	97499	205-070-459-1	HOSE UHE,UHH,UHV,UHX	EA	1
404	28	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	2
404	29	PAOZZ	5340-00-081-3638	81996	EAB700-43	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	2
404	30	PAOZZ	5340-00-989-4581	81996	EAB700D32	CLAMP,LOOP UHE,UHH,UHV,UHX	EA	3
404	31	PAOZZ	4720-00-169-5056	80205	NAS1375A10SA258	HOSE,AIR DUCT U/O PN 204-070-480-5,& -9 UHE,UHH,UHV,UHX	EA	1

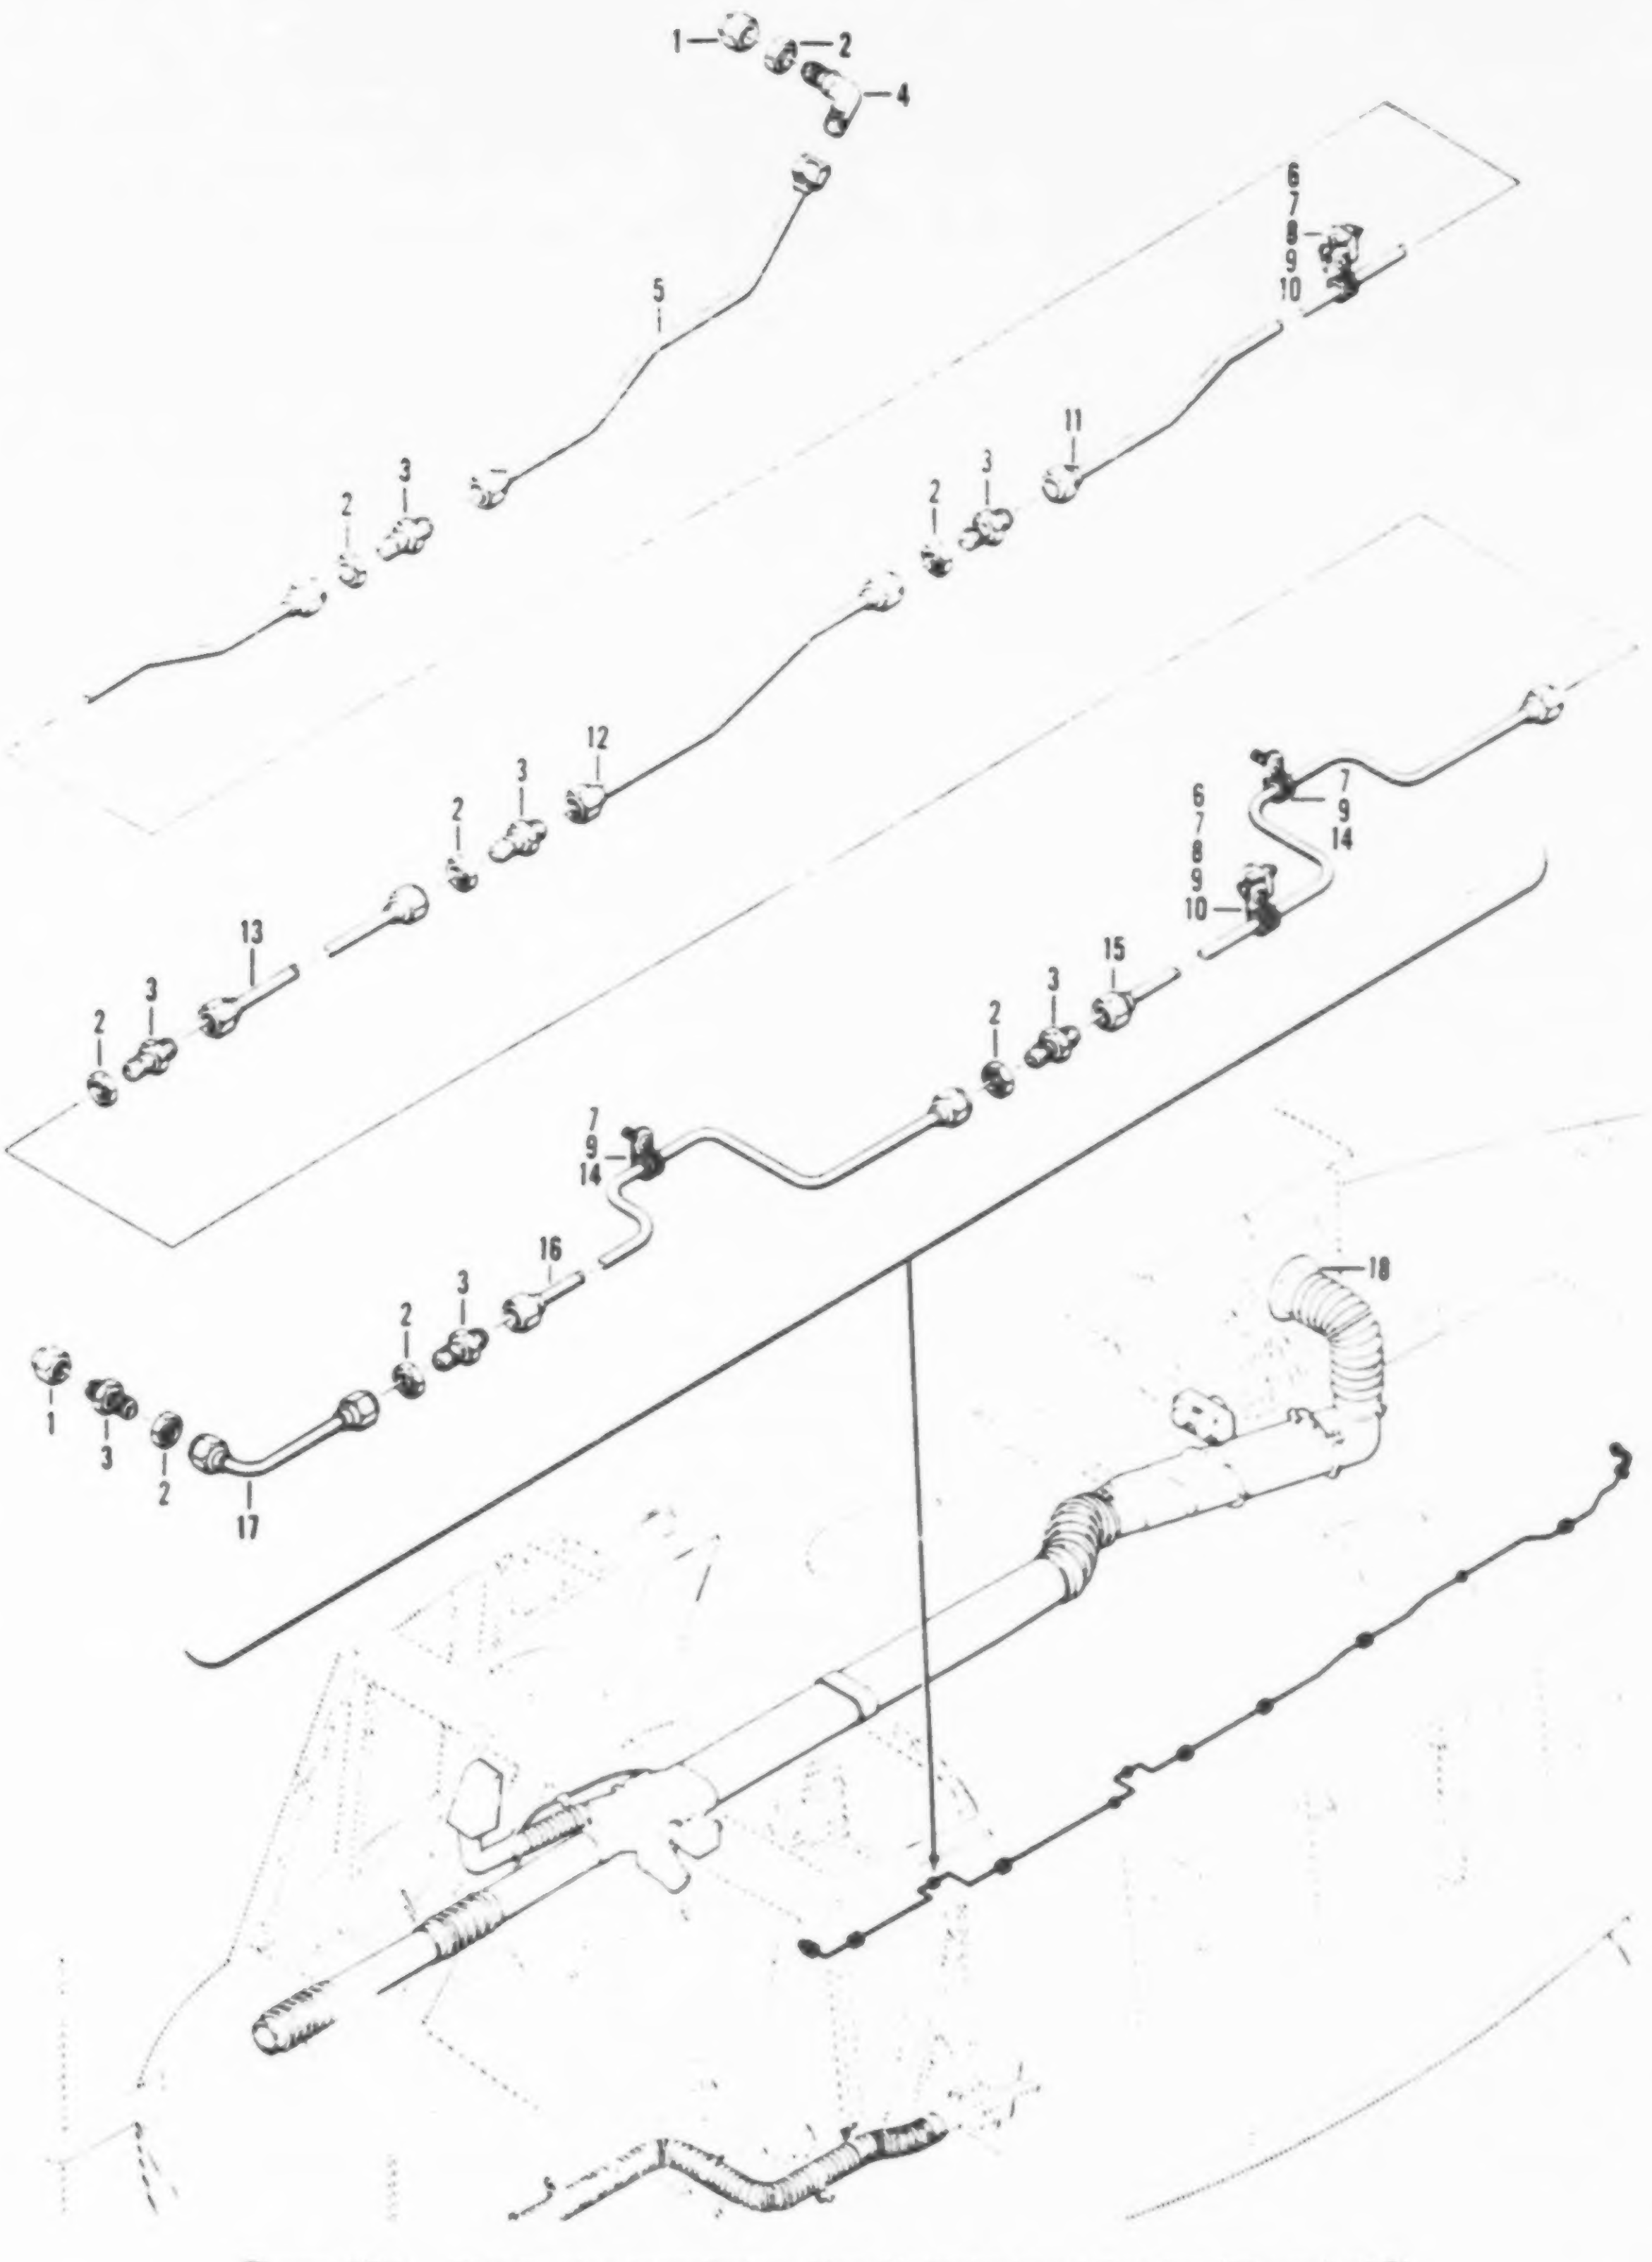
1
2
4
5
6
7
8
9
10
11
2
3
2
3
12
2
3
13
2
3
6
7
8
9
10
7
9
14
15
2
3
7
9
14
16
2
3
1
3
2
17
18

Figure 405. Distribution Installation, Hot Air Right-hand Section (Sheet 1 of 2)

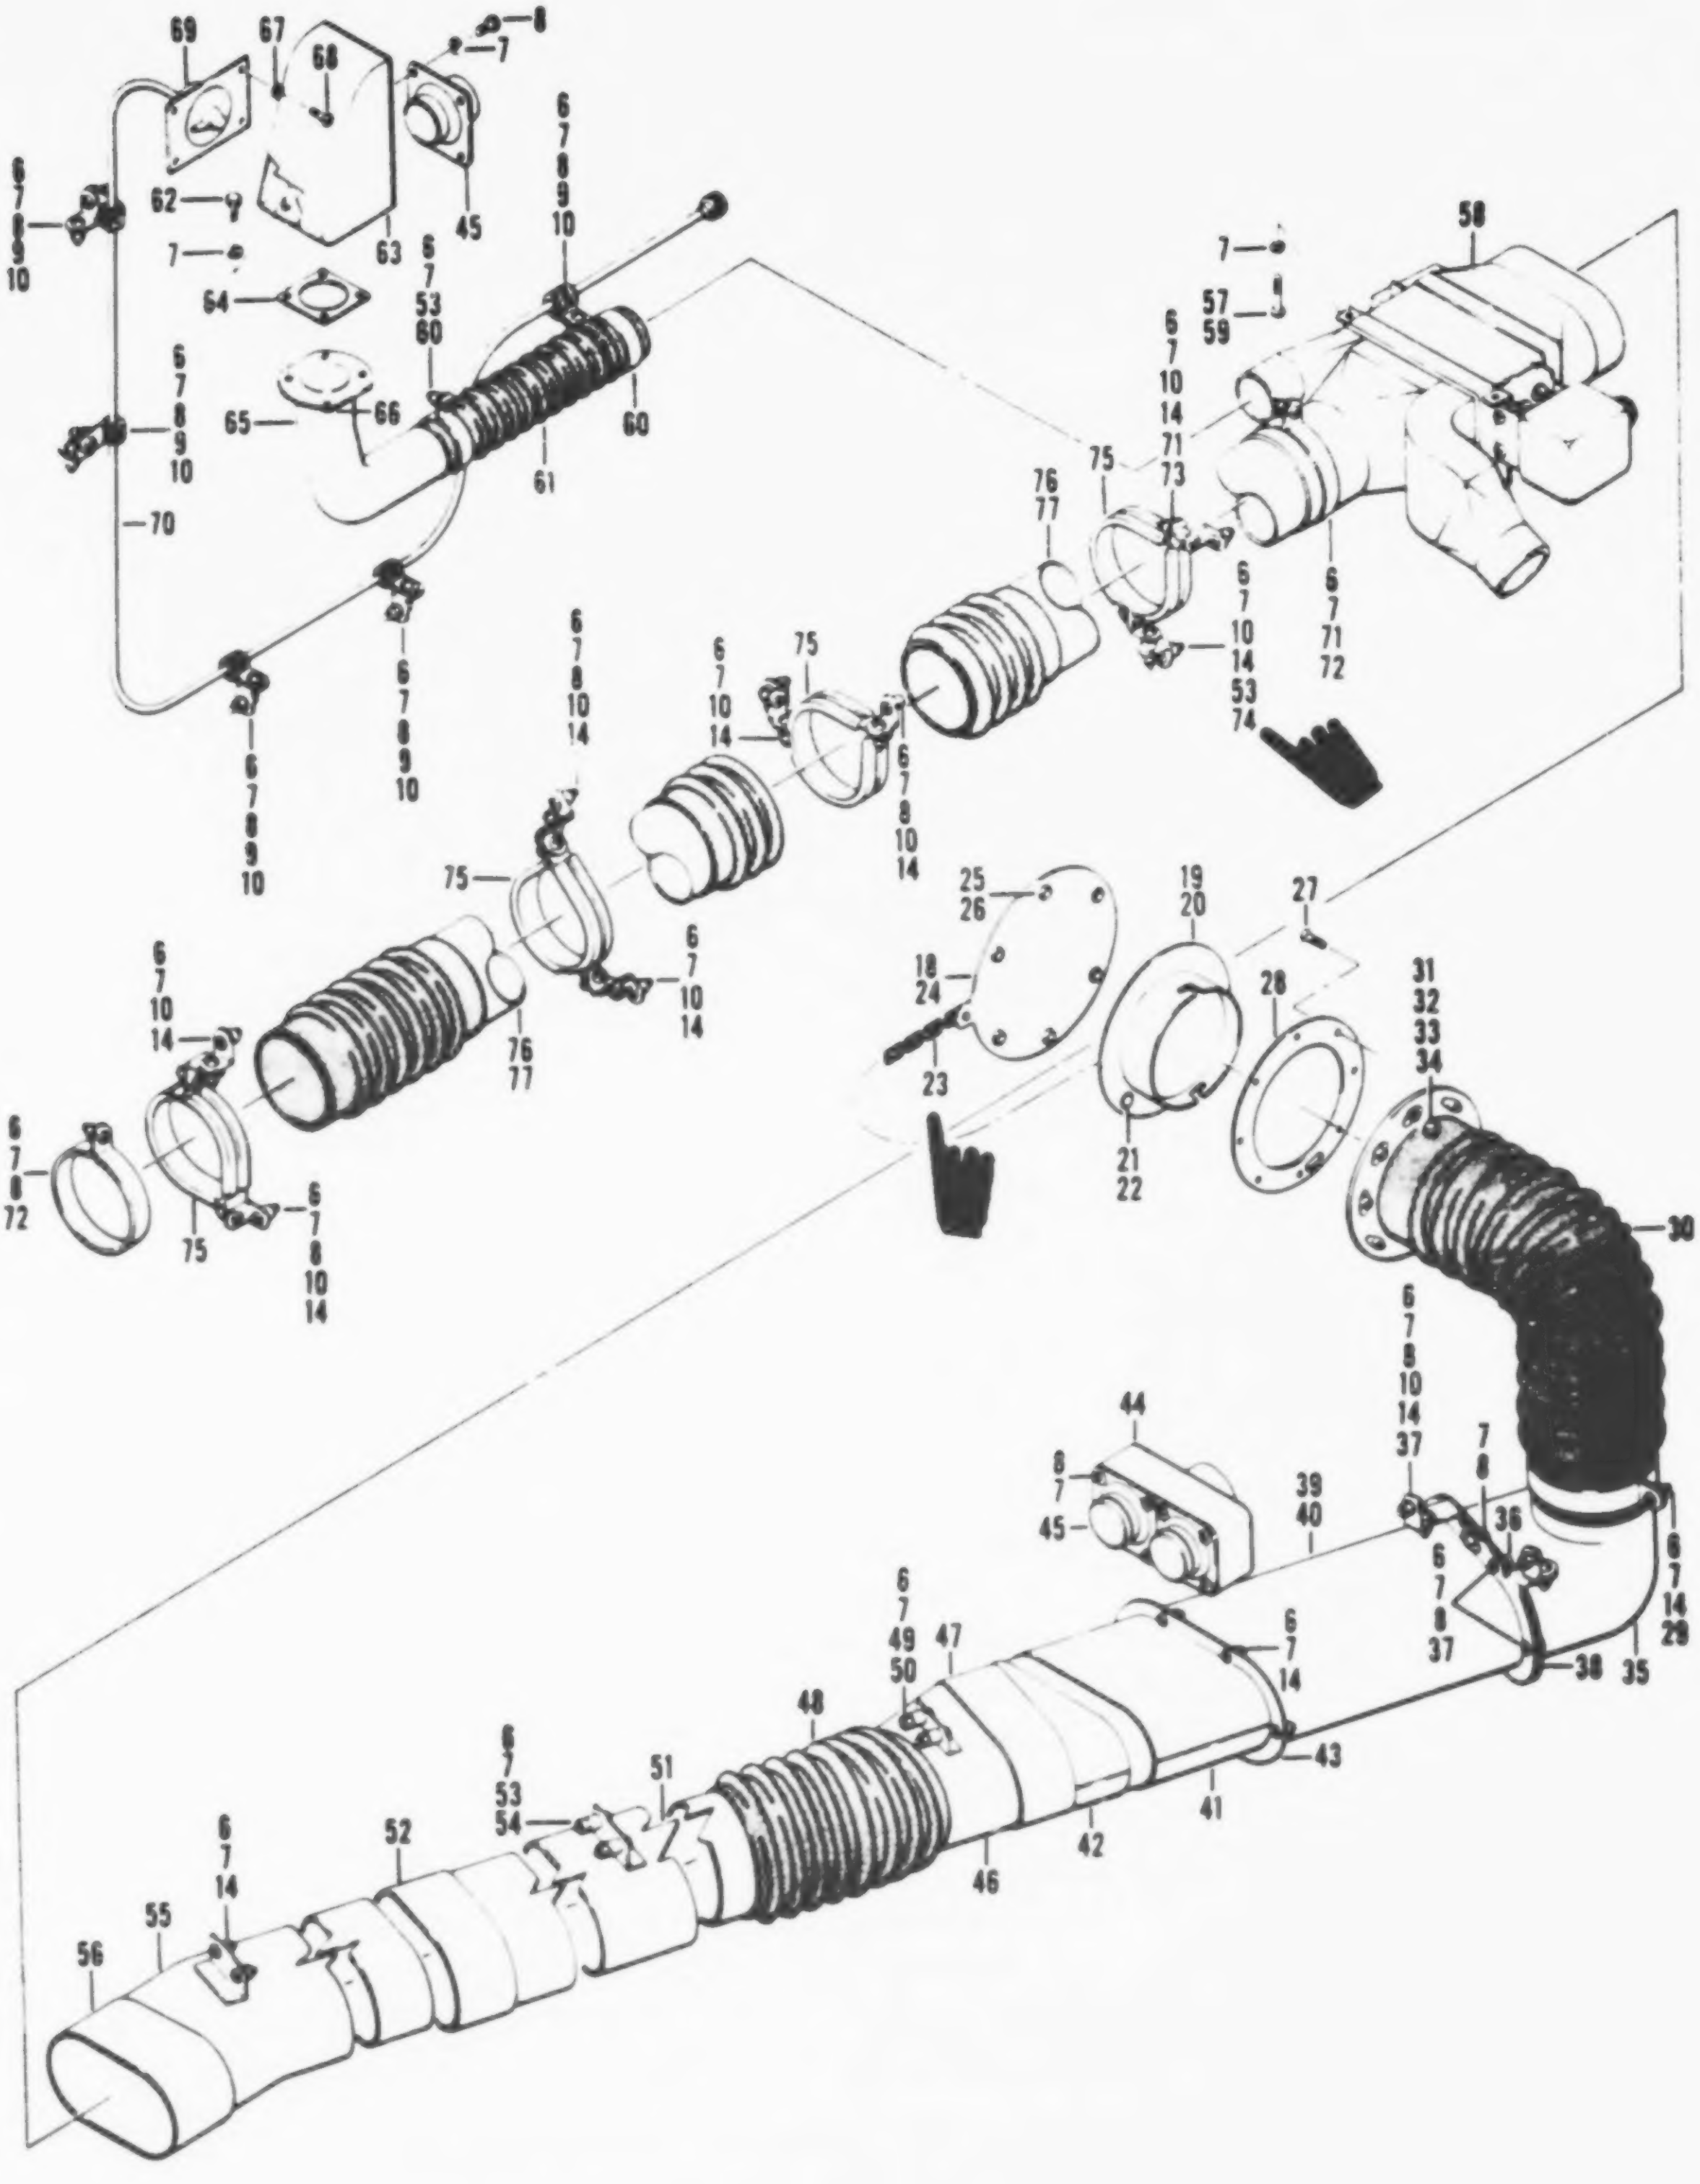
69
67
68
8
7
45
63
62
7
64
65
66
6 7 8 9 10
6 7 8 9 10
70
6 7 53 60
60
61
6 7 8 9 10
6 7 8 9 10
6 7 8 9 10
58
7
57 59
6 7 10 14 71 73
75
76 77
6 7 10 14 53 74
6 7 71 72
6 7 8 10 14
6 7 10 14
75
6 7 8 10 14
75
6 7 10 14
76 77
6 7 10 14
6 7 8 72
75
6 7 8 10 14
25 26
18 24
23
19 20
21 22
27
28
31 32 33 34
30
44
8 7
45
39 40
6 7 8 10 14 37
7 8
36
6 7 8 37
6 7 14 29
38
35
6 7 49 50
47
6 7 14
43
41
42
46
48
51
6 7 53 54
52
6 7 14
55
56

Figure 405. Distribution Installation, Hot Air Right-hand Section (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
405		XCFZZ		97499	205-070-480-1	DISTRIBUTION INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
405		XCFZZ		97499	205-070-480-3	DISTRIBUTION INSTAL USBL EFF 63-8739 THRU 63-8803 SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
405		XCFZZ		97499	205-070-480-7	DISTRIBUTION INSTAL USBL EFF 63-8804 THRU 63-13002 SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
405		XCFZZ		97499	205-070-480-5	DISTRIBUTION INSTAL USBL EFF 64-13492 THRU 64-13661 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
405		XCFZZ		97499	205-070-480-9	DISTRIBUTION INSTAL USBL EFF 64-13662 THRU 64-13901 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
405	1	PAOZZ	4730-00-221-2115	88044	AN929-4	.CAP,TUBE UHE,UHH,UHV,UHX	EA	2
405	2	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	8
405	3	PAOZZ	4730-00-715-0018	96906	MS24393D4	.NIPPLE,TUBE UHE,UHH,UHV,UHX	EA	7
405	4	PAOZZ	4730-00-725-4351	96906	MS24394D4	.ELBOW,TUBE UHE,UHH,UHV,UHX	EA	1
405	5	MFOZZ		97499	205-070-441-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	54
405	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	70
405	8	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	27
405	9	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	9
405	10	PAOZZ	5340-00-596-8251	88044	AN743-12	.BRACKET,ANGLE UHE,UHH,UHV,UHX	EA	20
405	11	MFOZZ		97499	205-070-440-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	12	MFOZZ		97499	205-070-439-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	13	MFOZZ		97499	205-070-476-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	14	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	29
405	15	MFOZZ		97499	205-070-475-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	16	MFOZZ		97499	205-070-436-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	17	MFOZZ		97499	205-070-448-1	.TUBE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	18	PAOOO	1660-00-967-7581	97499	205-070-449-1	.CAP ASSY,HOT AIR UHE,UHH,UHV,UHX	EA	1
405	19	XAOOO		97499	205-070-449-3	..CAP ASSEMBLY UHE,UHH,UHV,UHX	EA	1
405	20	PAOZZ	5330-00-965-6505	97499	205-070-403-9	...GASKET UHE,UHH,UHV,UHX	EA	1
405	21	PAOZZ	5325-00-550-1955	72794	A3 1-2T40	..STUD,TURNLOCK FA UHE,UHH,UHV,UHX	EA	1
405	22	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK UHE,UHH,UHV,UHX	EA	1
405	23	MFOZZ	DELETED	80205	NAS1455-00-3C	..CHAIN,WELDLESS UHE,UHH,UHV,UHX	EA	1
405	24	PAOOO	1660-00-967-7591	97499	205-070-403-15	..COVER ASSEMBLY,HOT UHE,UHH,UHV,UHX	EA	1
405	25	PAOZZ	5325-00-276-4953	88044	AN227-6	...CAP,SNAP FASTENER UHE,UHH,UHV,UHX	EA	6
405	26	PAOZZ	5325-00-276-4946	88044	AN227-7	...SOCKET,SNAP FASTENE UHE,UHH,UHV,UHX	EA	6
405	27	PAOZZ	5305-00-958-3409	96906	MS24694S52	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	8
405	28	MFOZZ		97499	205-070-404-1	.SPACER UHE,UHH,UHV,UHX	EA	1
405	29	PAOZZ	5340-00-801-3356	88044	AN735D80	.CLAMP,LOOP UHE,UHH,UHV,UHX	EA	1
405	30	PAOOO	1660-00-758-9276	97499	205-070-427-1	.DUCT ASSEMBLY,AIR C UHE,UHH,UHV,UHX	EA	1
405	31	PAOZZ	5315-00-234-1854	96906	MS24665-153	..PIN,COTTER UHE,UHH,UHV,UHX	EA	1
405	32	PAOZZ	5310-00-176-8108	88044	AN320-4	..NUT,PLAIN,SLOTTED,H UHE,UHH,UHV,UHX	EA	1
405	33	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
405	34	PAOZZ	5306-00-151-1744	88044	AN4-56	..BOLT,MACHINE UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
405	35	PA000	4730-00-966-7582	97499	205-070-465-1	ELBOW ASSY	UHE,UHH,UHV,UHX	EA	1
05	36	PAOZZ	5310-00-772-3720	96906	MS21075L3	NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	3
5	37	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
405	37	PAOZZ	5310-00-167-0812	88044	AN960C10L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	5
405	38	PAOZZ	5330-00-968-7165	97499	205-070-426-1	GASKET	UHE,UHH,UHV,UHX	EA	1
405	39	PAOZZ	1560-00-010-0396	97499	205-070-406-11	DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	1
405	40	PAOZZ	1560-00-497-8462	97499	205-070-406-13	INSULATION,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
405	41	PAOZZ	1560-00-010-0397	97499	205-070-406-15	INSULATION,AIR DIST	UHE,UHH,UHV,UHX	EA	1
405	42	PAOZZ	1560-00-010-0398	97499	205-070-406-17	INSULATION,AIR DIST	UHE,UHH,UHV,UHX	EA	1
405	43	PAOZZ	1560-00-967-7590	97499	205-070-405-5	SUPPORT,HOT AIR DIS	UHE,UHH,UHV,UHX	EA	1
405	44	PAOZZ	1560-00-918-0727	97499	205-070-429-5	DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	1
405	45	PAOZZ	1560-00-070-4606	97499	204-072-465-1	VALVE ASSEMBLY,AIR	UHE,UHH,UHV,UHX	EA	4
405	46	PA000	1560-00-918-0726	97499	205-070-457-7	DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	1
405	47	PAOZZ	5330-00-736-1008	97499	204-070-190-1	COUPLING,CABIN HEAT	UHE,UHH,UHV,UHX	EA	1
405	48	PBOZZ	4720-00-939-7417	80205	NAS1376A20CA036	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
405	49	PAOZZ	5305-00-688-2342	03538	H80P1601BC6	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
405	50	PAOZZ	5365-00-684-3303	80205	NAS43DD3-34	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
405	51	PA000	1560-00-918-0725	97499	205-070-456-11	DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	1
405	52	PAOZZ	5330-00-736-1008	97499	204-070-190-1	COUPLING,CABIN HEAT	UHE,UHH,UHV,UHX	EA	1
405	53	PAOZZ	5305-00-989-7435	96906	MS35207-264	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
05	54	PAOZZ	5365-00-684-2093	80205	NAS43DD3-15	SPACER,SLEEVE	UHE,UHH,UHV UHX	EA	2
405	55	PA000	1560-00-918-0728	97499	205-070-455-7	DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	1
405	56	PAOZZ	5330-00-736-1008	97499	204-070-190-1	COUPLING,CABIN HEAT	UHE,UHH,UHV,UHX	EA	1
405	57	PAOZZ	5305-00-180-3326	88044	AN525-10R16	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
405	58	PBOFF	1660-00-967-7582	97499	205-070-442-3	VALVE ASSY,HEATING SELECTOR SEE FIG 407 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
405	59	PAOZZ	5305-00-993-1848	96906	MS35207-265	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
405	60	PAOZZ	5340-00-993-5475	81996	EAB700D34	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
405	61	PAOZZ	4720-00-989-1797	97499	70-004ABF2123	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
405	62	PAOZZ	5306-00-150-9221	88044	AN3-3A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
405	63	PAOZZ	1560-00-912-1178	97499	204-072-420-5	DUCT ASSEMBLY,AIR D	UHE,UHH,UHV,UHX	EA	2
405	64	MFOZZ		97499	205-070-416-5	ORIFICE PLATE	UHE,UHH,UHV,UHX	EA	1
405	65	PA000	4730-00-918-0716	97499	205-070-460-5	ELBOW ASSEMBLY,AIR	UHE,UHH,UHV,UHX	EA	1
405	66	PAOZZ	5310-00-772-3720	96906	MS21075L3	NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	4
405	67	PAOZZ	5310-00-187-2398	88044	AN960PD6L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
405	68	PAOZZ	5305-00-984-4988	96906	MS35206-228	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
405	69	PAOZZ	1680-00-996-3894	65149	FYLD317-30	DIAL AND COVER,SELE	UHE,UHH,UHV,UHX	EA	1
405	70	PAOZZ	1680-00-996-3893	05624	FYLD243-012	SHAFT ASSEMBLY,FLEX	UHE,UHH,UHV,UHX	EA	1
405	71	PAOZZ	5305-00-993-1851	96906	MS35207-267	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
405	72	PAOZZ	5340-00-193-0118	88044	AN735D64	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
405	73	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
405	74	MFOZZ	DELETED	97499	20-032-1	BRACKET,ENGINE	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
405	75	MFOZZ	5340-00-758-1424	97499	204-070-048-1	CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	4
405	76	A0000		97499	205-070-472-1	DUCT ASSEMBLY .... UHE,UHH,UHV,UHX	EA	1
405	77	PAOZZ	4720-00-877-6011	97499	205-070-523-3	DUCT,AIR DISTRIBUTI .... UHE,UHH,UHV,UHX	EA	1

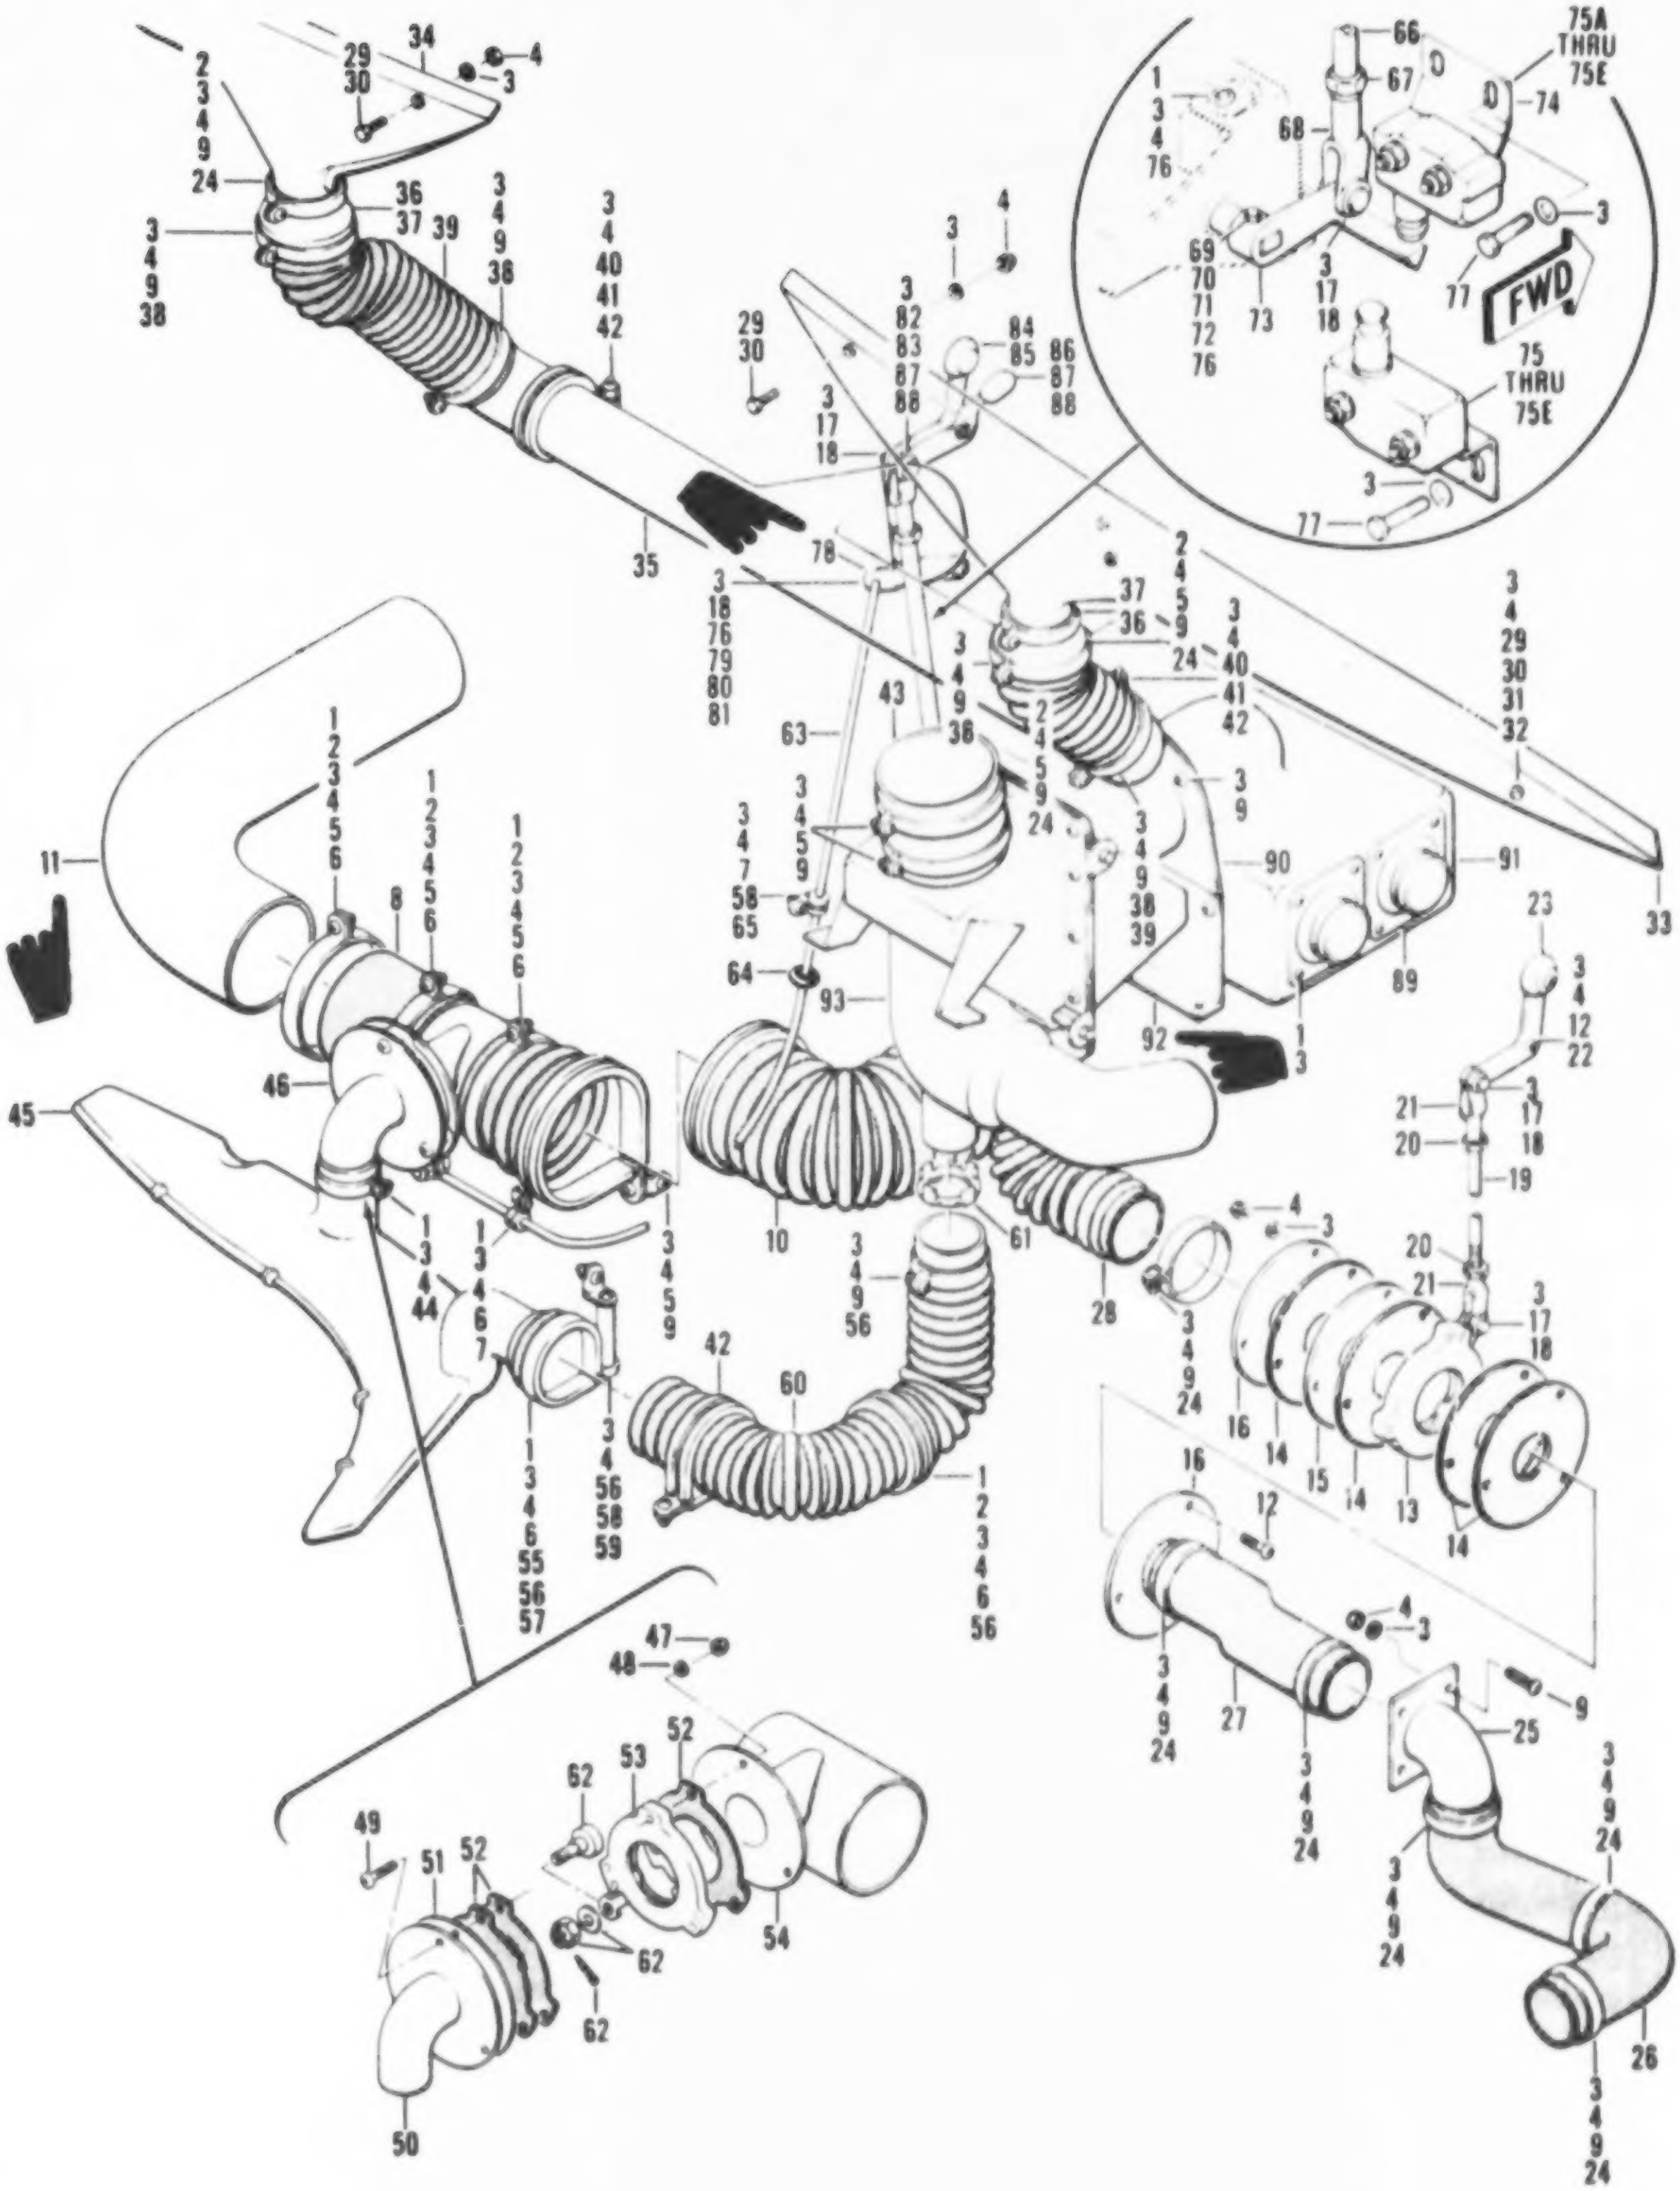
75A
THRU
75E
FWD
75
THRU
75E

Figure 406. Distribution Installation, Hot Air Forward Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL	USABLE ON CODE	U/M	QTY INC IN UNIT
406		XCFZZ		97499	205-070-480-1	DISTRIBUTION INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
406		XCFZZ		97499	205-070-480-3	DISTRIBUTION INSTL USBL EFF 63-8739 THRU 63-8803 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
406		XCFZZ		97499	205-070-480-7	DISTRIBUTION INSTL USBL EFF 63-8804 THRU 63-13002 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
406		XCFZZ		97499	205-070-480-5	DISTRIBUTION INSTL USBL EFF 64-13492 THRU 64-13661 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
406		XCFZZ		97499	205-070-480-9	DISTRIBUTION INSTL USBL EFF 64-13662 THRU 64-13901 SEE FIG 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
406	1	PAOZZ	5305-00-989-7434	96906	MS35207-263	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	13
406	2	PAOZZ	5305-00-989-7435	96906	MS35207-264	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	6
406	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER,FLAT	UHE,UHH,UHV,UHX	EA	73
406	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	50
406	5	PAOZZ	5340-00-548-8207	81996	EA8700-48	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	7
406	6	PAOZZ	5340-00-598-8251	88044	AN743-12	BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	4
406	7	PAOZZ	5340-00-990-9298	81996	EA87000D3	CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
406	8	XDOZZ		80205	NAS521-24-16	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
406	9	PAOZZ	5305-00-990-6444	96906	MS35207-261	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	25
406	10	PAOZZ	4720-00-730-8287	97499	70-004A12F44Z3	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
406	11	PAOZZ	DELETED	97499	205-070-474-3	ELBOW,HEATING DUCT	UHE,UHH,UHV,UHX	EA	1
406	12	PAOZZ	5305-00-180-3326	88044	AN525-10R16	SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
406	13	PAOZZ	1660-00-895-9323	97499	204-070-309-3	VALVE,FOOT WARMER	UHE,UHH,UHV,UHX	EA	1
406	14	PAOZZ	5330-00-736-1012	97499	204-070-209-1	GASKET	UHE,UHH,UHV,UHX	EA	4
406	15	MFOZZ		97499	205-070-430-1	ORIFICE	UHE,UHH,UHV,UHX	EA	1
406	16	PAOZZ	1660-00-991-3312	97499	204-072-422-1	MOUNT,CONTROL,COMPT	UHE,UHH,UHV,UHX	EA	2
406	17	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	PIN,STRAIGHT HEA	UHE,UHH,UHV,UHX	EA	2
406	18	PAOZZ	5315-00-815-1405	96906	MS24665-151	PIN,COTTER	UHE,UHH,UHV,UHX	EA	10
406	19	PAOOO	3040-00-730-7025	97499	204-070-313-5	CONNECTING LINK,RIG	UHE,UHH,UHV,UHX	EA	1
406	20	PAOZZ	5310-00-208-7589	88044	AN316-4R	NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
406	21	PAOZZ	5340-00-838-1591	96906	MS27975-4	CLEVIS,ROD END	UHE,UHH,UHV,UHX	EA	2
406	22	PBOZZ	5365-00-580-3647	80205	NAS43HT3-24	SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
406	23	PAOZZ	1560-00-708-2247	97499	204-070-311-1	HANDLE,HEATING ASSY	UHE,UHH,UHV,UHX	EA	1
406	24	PAOZZ	5340-00-548-8035	81996	EA8700-32	CLAMP,SUPPORT	UHE,UHH,UHV,UHX	EA	6
406	25	PAOZZ	4730-00-987-5275	97499	204-072-421-1	ELBOW	UHE,UHH,UHV,UHX	EA	1
406	26	XDOZZ	4720-00-169-5032	80205	NAS1375C08SA048	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
406	27	PAOZZ	4720-00-843-1731	80205	NAS521-16-29	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
406	28	XDOZZ	4720-00-195-6967	80205	NAS1376A08CF024	HOSE,AIR DUCT	UHE,UHH,UHV,UHX	EA	1
406	29	PAOZZ	5306-00-151-0781	88044	AN3-13A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
406	30	PAOZZ	5306-00-151-0780	88044	AN3-14A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
406	31	PAOZZ	5306-00-337-2861	88044	AN3-22A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
406	32	PAOZZ	5306-00-150-9875	88044	AN3-26A	BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
406	33	PAOZZ	1660-00-918-1517	97499	204-072-450-11	NOZZLE ASSEMBLY,DEF	UHE,UHH,UHV,UHX	EA	1
406	34	PAOZZ	1660-00-918-1518	97499	204-072-450-12	NOZZLE ASSEMBLY,DEF	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
406	35	PAOZZ	1560-00-912-1177	97499	204-072-432-3	.DUCT,HEATING AND DE..........................UHE,UHH,UHV,UHX	EA	1
406	36	PAOZZ	4730-00-987-5276	97499	204-072-423-1	.REDUCER,TUBE,HEATIN U/O PN 205-070-480-1,-3,& -7 ....UHE,UHH,UHV,UHX	EA	2
406	37	PAOZZ	1560-00-912-1172	97499	204-072-748-3	.DUCT ASSY,DEFROSTER U/O PN 205-070-480-5 & -9 ....UHE,UHH,UHV,UHX	EA	2
406	38	PAOZZ	5340-00-993-1475	81996	EAB700038	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	4
406	39	PAOZZ	4720-00-989-1791	97499	70-004A10F2323	.HOSE,AIR DUCT..........................UHE,UHH,UHV,UHX	EA	2
406	40	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	2
406	41	PAOZZ	5340-00-957-1488	81996	EAB700040	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	2
406	42	PAOZZ	5365-00-684-7923	80205	NAS43D03-20	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	2
406	43	XDOZZ		80205	NAS521-24-13	.HOSE,AIR DUCT..........................UHE,UHH,UHV,UHX	EA	1
406	44	PAOZZ	5340-00-247-6221	81996	EAB700026	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	1
406	45	PAOZZ	4730-00-987-5165	97499	204-072-425-1	.DEFROSTER UNIT,AIR..........................UHE,UHH,UHV,UHX	EA	1
406	46	PAOOO	1560-00-919-1371	97499	205-070-434-3	.DUCT ASSEMBLY,LOWER..........................UHE,UHH,UHV,UHX	EA	1
406	47	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	3
406	48	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	3
406	49	PAOZZ	5305-00-180-3325	88044	AN525-10R16	..SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	3
406	50	PAOZZ	4730-00-987-5273	97499	204-072-426-1	..ELBOW..........................UHE,UHH,UHV,UHX	EA	1
406	51	MFOZZ		97499	205-070-430-3	..ORIFICE..........................UHE,UHH,UHV,UHX	EA	1
406	52	PAOZZ	5330-00-691-2122	97499	204-070-378-1	..GASKET..........................UHE,UHH,UHV,UHX	EA	3
406	53	PAOZZ	1560-00-675-5760	97499	204-070-375-1	..VALVE,DEFROSTER..........................UHE,UHH,UHV,UHX	EA	1
406	54	PBOZZ	4730-00-919-1370	97499	204-070-369-1	..DUCT ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
406	55	PAOZZ	5305-00-958-0586	96906	MS35207-273	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	1
406	56	XDOZZ	5340-00-989-4576	81996	EAB700024	.CLAMP,LOOP..........................UHE,UHH,UHV,UHX	EA	4
406	57	PAOZZ	5365-00-826-7868	80205	NAS43D03-144	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
406	58	PAOZZ	5305-00-688-2342	03536	H80P16018C6	.SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	2
406	59	PAOZZ	5365-00-662-3098	80205	NAS43D03-32	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
406	60	PAOZZ	4720-00-410-4396	80205	NAS1375A10SA218	.HOSE,AIR DUCT U/O PN 205-070-480-5,& -9.....UHE,UHH,UHV,UHX	EA	1
406	61	PAOZZ	5310-00-736-4077	97499	204-070-273-1	.WASHER,KEY..........................UHE,UHH,UHV,UHX	EA	1
406	62	PAOZZ	1680-00-607-8450	77910	3A665-1-16	.SWIVEL ASSY..........................UHE,UHH,UHV,UHX	EA	1
406	63	PAOZZ	1680-00-730-7024	97499	204-070-276-1	.CABLE ASSEMBLY,AIR..........................UHE,UHH,UHV,UHX	EA	1
406	64	PAOZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC..........................UHE,UHH,UHV,UHX	EA	1
406	65	PAOZZ	5365-00-825-7844	80205	NAS43D03-54	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
406	66	PAOOO	1680-00-730-6980	97499	204-070-244-1	.ROD ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
406	67	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON..........................UHE,UHH,UHV,UHX	EA	2
406	68	PAOZZ	5340-00-838-1591	96906	MS27975-4	..CLEVIS,ROD END..........................UHE,UHH,UHV,UHX	EA	2
406	69	XAOZZ		96906	MS9245-03	.PIN,COTTER..........................UHE,UHH,UHV,UHX	EA	1
406	70	PAOZZ	5306-00-151-0505	88044	AN21-14	.BOLT,CLEVIS..........................UHE,UHH,UHV,UHX	EA	1
406	71	PAOZZ	5310-00-176-8105	88044	AN320-1	.NUT,PLAIN,SLOTTED H..........................UHE,UHH,UHV,UHX	EA	1
406	72	XDOZZ		80205	NAS43HT5-70	.SPACER,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
406	73	PAOZZ	1680-00-980-9554	97499	204-070-581-1	.ARM,ACTUATING CONTR..........................UHE,UHH,UHV,UHX	EA	1
406	74	PAOZZ	1560-00-996-7493	97499	204-070-582-1	.BRACKET ASSY,UPPER..........................UHE,UHH,UHV,UHX	EA	1
406	75	PAOZZ	1560-00-996-7495	97499	204-070-584-1	.BRACKET ASSY,LOWER..........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) IG. IO.	(B) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
406	75A	PAOZZ	1560-00-960-3897	97499	204-070-583-1	. . BRACKET, ELECTRICAL U/O PN 204-070-582-1	UHE, UHH, UHV, UHX	EA	1
406	75A	PAOZZ	1560-00-996-7494	97499	204-070-585-1	. . BRACKET LOWER SWITC U/O PN 204-070-584-1	UHE, UHH, UHV, UHX	EA	1
406	75B	PAOZZ	5930-00-927-8482	81349	M8805-1-020	. . SWITCH, SENSITIVE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	2
406	75C	PAOZZ	5305-00-984-6221	96906	MS35206-234	. . SCREW, MACHINE	UHE, UHH, UHV, UHX	EA	2
406	75D	PAOZZ	5310-00-167-0816	88044	AN960-6	. . WASHER, FLAT	UHE, UHH, UHV, UHX	EA	2
406	75E	PAOZZ	5310-00-807-1472	96906	MS21042L06	. . NUT	UHE, UHH, UHV, UHX	EA	2
406	76	PAOZZ	5310-00-183-4406	88044	AN960PD10	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	3
406	77	PAOZZ	5306-00-151-0785	88044	AN3-7A	BOLT, MACHINE	UHE, UHH, UHV, UHX	EA	4
406	78	MFOZZ	DELETED	97499	204-070-274-1	LINK	UHE, UHH, UHV, UHX	EA	1
406	79	PAOZZ	5306-00-151-1971	88044	AN23-19	BOLT, CLEVIS	UHE, UHH, UHV, UHX	EA	1
406	80	PAOZZ	5310-00-285-2177	88044	AN320-3	NUT, PLAIN, SLOTTED, H	UHE, UHH, UHV, UHX	EA	2
406	81	MFOZZ	1560-00-994-5598	97499	204-070-275-1	BELL CRANK	UHE, UHH, UHV, UHX	EA	1
406	82	PAOZZ	5306-00-151-2301	88044	AN23-22	BOLT, CLEVIS	UHE, UHH, UHV, UHX	EA	1
406	83	PAOZZ	5310-00-187-2399	88044	AN960PD516	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	2
406	84	PAOOO	1560-00-730-7023	97499	204-070-270-1	LEVER, MANUAL ASSY	UHE, UHH, UHV, UHX	EA	1
406	85	PAOZZ	5355-00-807-0040	96906	MS28517-2	. KNOB	UHE, UHH, UHV, UHX	EA	1
406	86	PAOOO	1560-00-730-7019	97499	204-070-245-1	. LEVER ASSEMBLY	UHE, UHH, UHV, UHX	EA	1
406	87	PAOZZ	5355-00-807-0040	96906	MS28617-2	. . KNOB	UHE, UHH, UHV, UHX	EA	1
406	88	PAOZZ	3120-00-478-6195	97499	21-00686-8	. . BUSHING, SLEEVE	UHE, UHH, UHV, UHX	EA	1
406	89	PAOZZ	1660-00-070-4806	97499	204-072-485-1	VALVE ASSEMBLY, AIR	UHE, UHH, UHV, UHX	EA	4
406	90	PAOZZ	1660-00-736-1014	97499	204-070-221-1	GASKET, VALVE TO PED	UHE, UHH, UHV, UHX	EA	1
406	91	PAOZZ	1560-00-987-5181	97499	204-072-428-1	DUCT, HEATING ASSY	UHE, UHH, UHV, UHX	EA	1
406	92	MFOZZ	DELETED	97499	204-070-230-1	BRACKET HEAT VALVE	UHE, UHH, UHV, UHX	EA	1
406	93	AFOFZ	1560-00-682-5190	97499	204-070-591-3	VALVE ASSEMBLY SEE FIG 409 FOR BREAKDOWN	UHE, UHH, UHV, UHX	EA	1

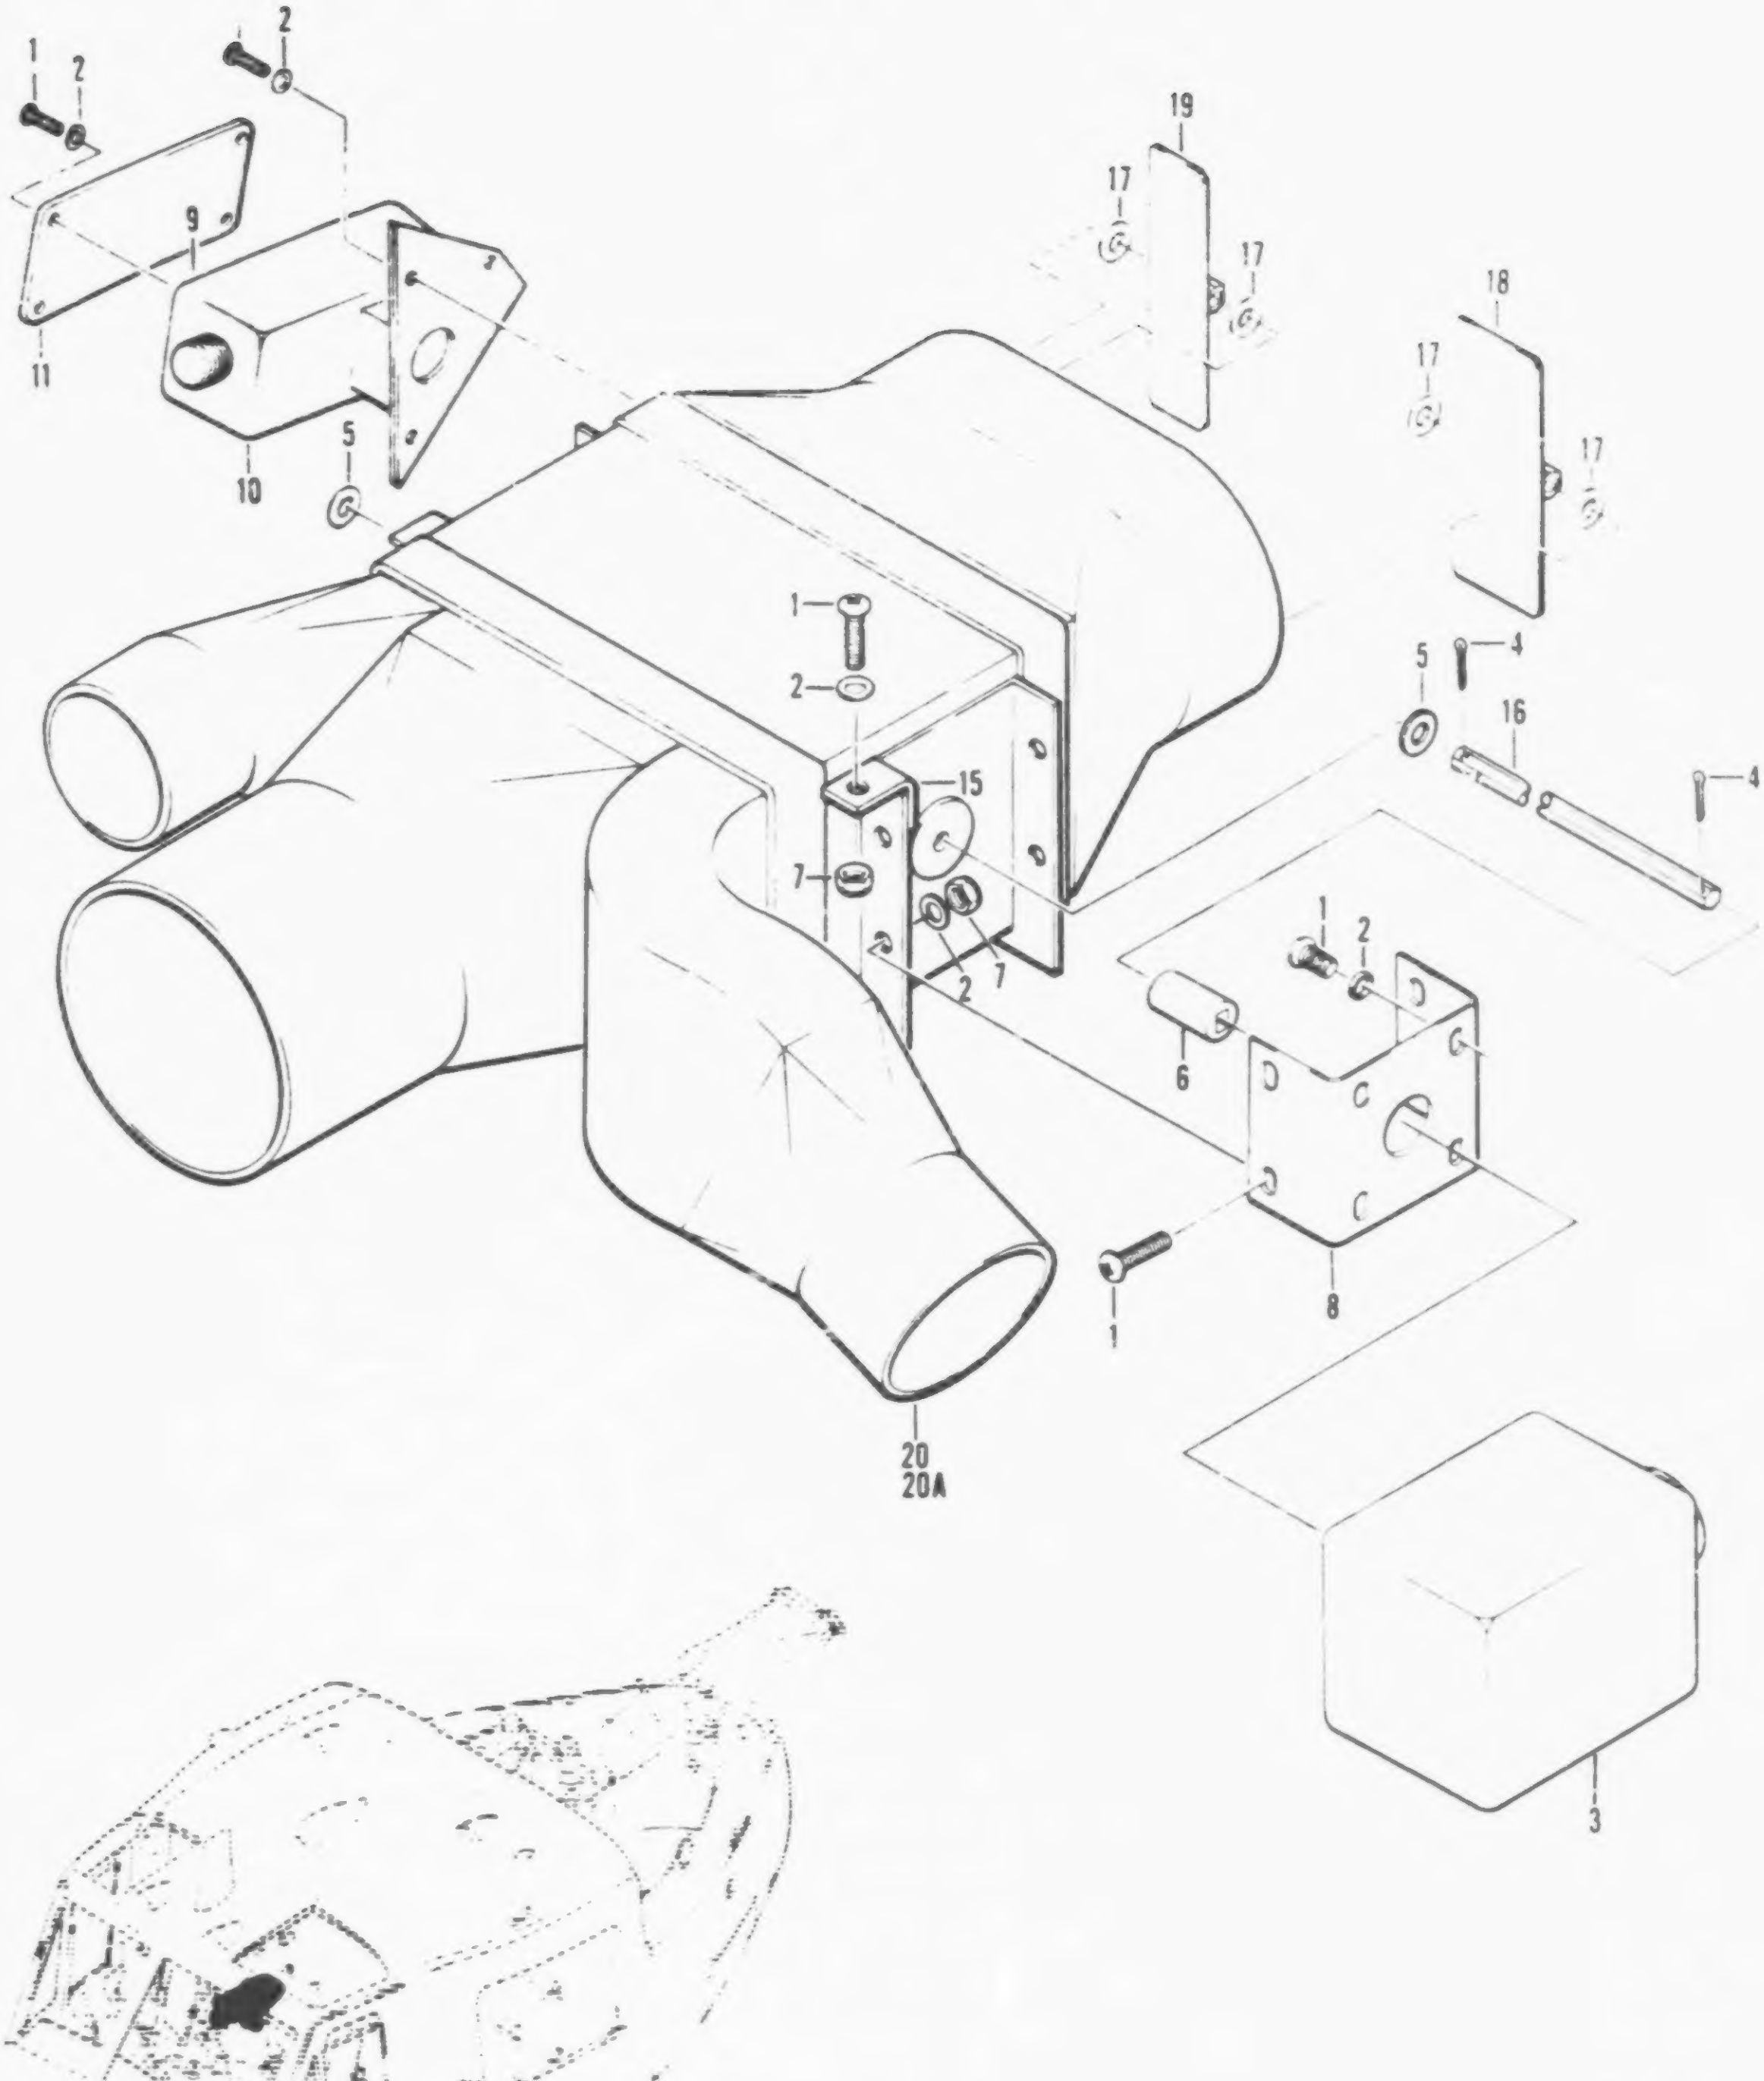
1
2
2
19
17
17
9
11
10
5
18
17
17
1
2
5
4
16
4
15
7
2
7
1
2
6
8
1
20
20A
3

Figure 407. Valve Assembly, Heating Selector

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	U/M	QTY INC IN UNIT
407		PAOFF	1660-00-446-4594	97499	204-070-179-1	VALVE ASSEMBLY HEATING SELECTOR USBL EFF 60-3546 THRU 61-808 SEE FIG.390 FOR NHA ....UHB	EA	1
7		AFOFZ	1660-00-070-6794	97499	204-070-179-7	VALVE ASSEMBLY, HEATING SELECTOR USBL EFF 62-1872 THRU 64-14191 SEE FIG.390 FOR NHA ....UHB,UHC,UHM	EA	1
407		PBOFF	1660-00-442-2609	97499	204-070-179-9	VALVE ASSEMBLY, HEATING SELECTOR USBL EFF 65-9416 & SUBSEQUENT SEE FIG.391 FOR NHA ....UHC,UHM	EA	1
407		AFOFZ	1660-00-967-7582	97499	205-070-442-3	VALVE ASSEMBLY, HEATING SELECTOR USBL EFF 62-2106 THRU 64-13901 SEE FIG.405 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
407		PAOFF	1660-00-442-2608	97499	205-070-442-5	VALVE ASSEMBLY, HEATING SELECTOR USBL EFF 65-9565 THRU 66-16867 SEE FIG.392 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
407		AFOFZ	4810-00-162-0938	97499	205-070-442-7	VALVE ASSEMBLY, HEATING SELECTOR USBL EFF 66-16868 & SUBSEQUENT SEE FIG.392 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
407	1	PAFZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	11
407	2	PAFZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	11
407	3	PAFZZ	5945-00-716-6862	97499	204-070-482-1	.SOLENOID ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	4	PAFZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
407	5	PAFZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
407	6	PAFZZ	1660-00-736-1007	97499	204-070-177-1	.ADAPTER,CONTROL CONNECTOR ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	7	PAFZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
407	8	MFFZZ	1560-00-994-5573	97499	204-070-175-1	.BRACKET,VALVE MOUNT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	9	PAFZZ	5930-00-065-7578	05624	FYLD4060-30	.SWITCH,THERMOSTATIC U/O PN 204-070-179-7 ....UHB,UHC,UHM	EA	1
407	10	PAFFF	1660-00-977-2455	97499	205-072-277-1	.SENSOR,TEMPERATURE AIR DISTRIBUTION U/O PN 205-070-442-7 SEE FIG.408 FOR BREAKDOWN OF PN 205-072-277-1 (35D48) ....UHE,UHH,UHV,UHX	EA	1
07	11	MFFZZ	1560-00-067-8353	97499	205-072-403-1	.COVER,ACCESS U/O PN 204-070-179-9 & 205-070-442-5 ....UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	15	PBFZZ	1660-00-570-9833	97499	205-070-443-1	.HANGER ASSEMBLY ....UHE,UHH,UHV,UHX	EA	1
407	16	PAFZZ	3040-00-893-1704	97499	204-070-176-1	.SHAFT,STRAIGHT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	17	PAFZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
407	18	PAFZZ	1660-00-722-3965	97499	204-070-173-1	.FLAPPER ASSY,VALVE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	19	PAFZZ	1660-00-722-3966	97499	204-070-174-1	.FLAPPER ASSY,VALVE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	20	PAFZZ	1660-00-932-1622	97499	204-072-431-15	.HOUSING ASSY ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
407	20A	MFFZZ		81996	1560-UH1-983-3	.ANGLE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

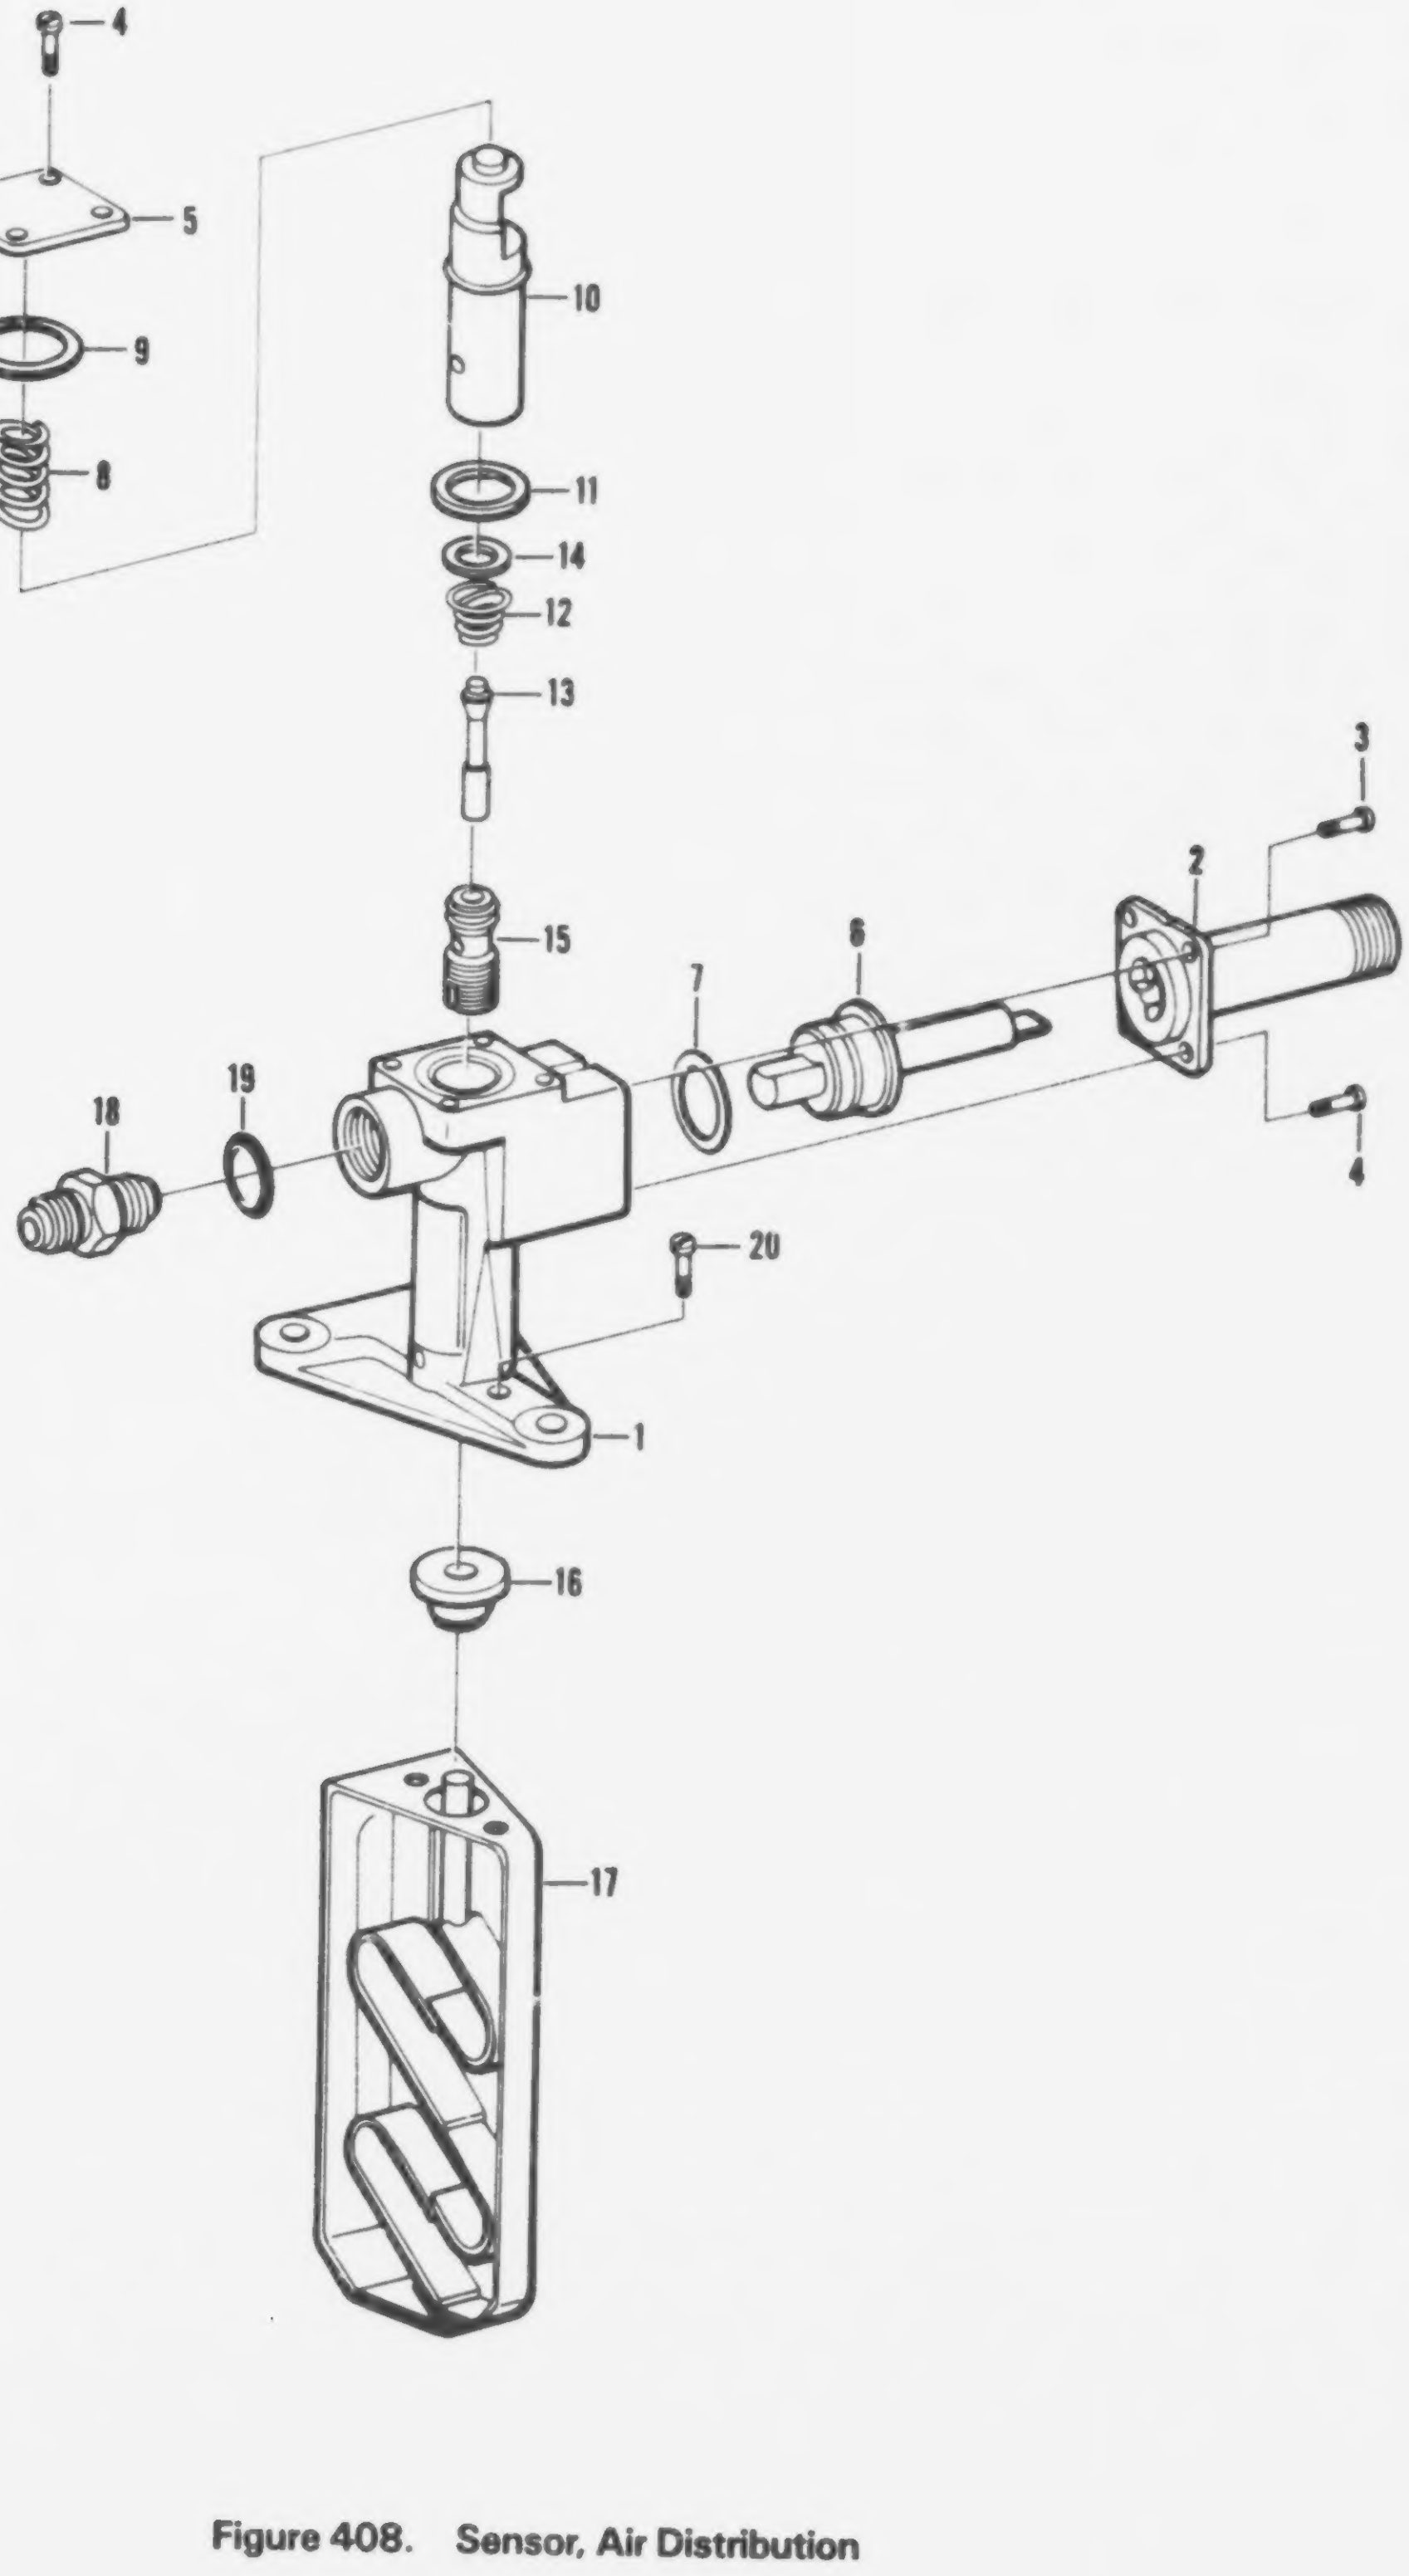
4
5
9
8
10
11
14
12
13
3
2
15
6
7
19
18
4
20
1
16
17

Figure 408. Sensor, Air Distribution

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
408		PAOFF	1660-00-977-2455	97499	205-072-277-1	SENSOR,TEMPERATURE AIR DISTRIBUTION USBL EFF UH-1C,1M 65-9416 & SUBSEQUENT USBL EFF UH-1D,H 65-9565 & SUBSEQUENT BREAKDOWN FOR PN 205-072-277-1 35D48 SEE FIG 395 & 407 FOR NHA .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	1	PBFZZ	1660-00-121-6620	89513	45D33	.BODY,VALVE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	2	PBFZZ	1660-00-012-3247	89513	45D35	.ADAPTER,AIR .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	3	PAFZZ	5305-00-582-5807	96906	MS35265-28	.SCREW,MACHINE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	4	PAFZZ	5305-00-637-8403	02615	NK500-8-8	.SCREW,SELF-LOCKING .... UHC,UHE,UHH,UHM,UHV,UHX	EA	7
408	5	PAFZZ	1660-00-179-6336	89513	45D36	.COVER,ACCESS .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	6	PAFZZ	1660-00-010-7560	89513	45D39	.CAM,ADJUSTMENT,AIR DISTRIBUTION .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	7	PAFZZ	5330-00-105-8679	89513	P25C85	.PACKING,PREFORMED .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	8	PBFZZ	5360-00-103-9442	89513	45D65	.SPRING,HELICAL, COMPRESSION .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	9	PAFZZ	5330-00-106-4848	89513	AP25C85	.PACKING,PREFORMED .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	10	PAFZZ	1660-00-010-7463	89513	45D41	.CAM FOLLOWER .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	11	PAFZZ	5330-00-845-8344	89513	K25C85	.PACKING,PREFORMED .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	12	PBFZZ	5360-00-012-3253	89513	45D64	.SPRING,HELICAL, , COMPRESSION .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	13	PAFZZ	1660-00-014-4490	89513	45D62	.STEM,VALVE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	14	PAFZZ	5330-00-061-7522	89513	AG25C85	.PACKING,PREFORMED .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	15	PAFZZ	1660-00-012-3260	89513	45D63	.SEAT,VALVE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	16	PAFZZ	3120-00-012-3256	89513	45D61	.BEARING,SLEEVE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	17	PAFZZ	1660-00-014-4374	89513	45D57	.BRACKET & BI-METAL .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	18	PAFZZ	4730-00-720-3966	96906	MS24392-D4	.NIPPLE,TUBE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	19	PAFZZ	5330-00-185-0366	89513	X25C85	.PACKING,PREFORMED .... UHC,UHE,UHH,UHM,UHV,UHX	EA	1
408	20	PAFZZ	5305-00-145-7011	88044	AN503-8-6	.SCREW,MACHINE .... UHC,UHE,UHH,UHM,UHV,UHX	EA	2

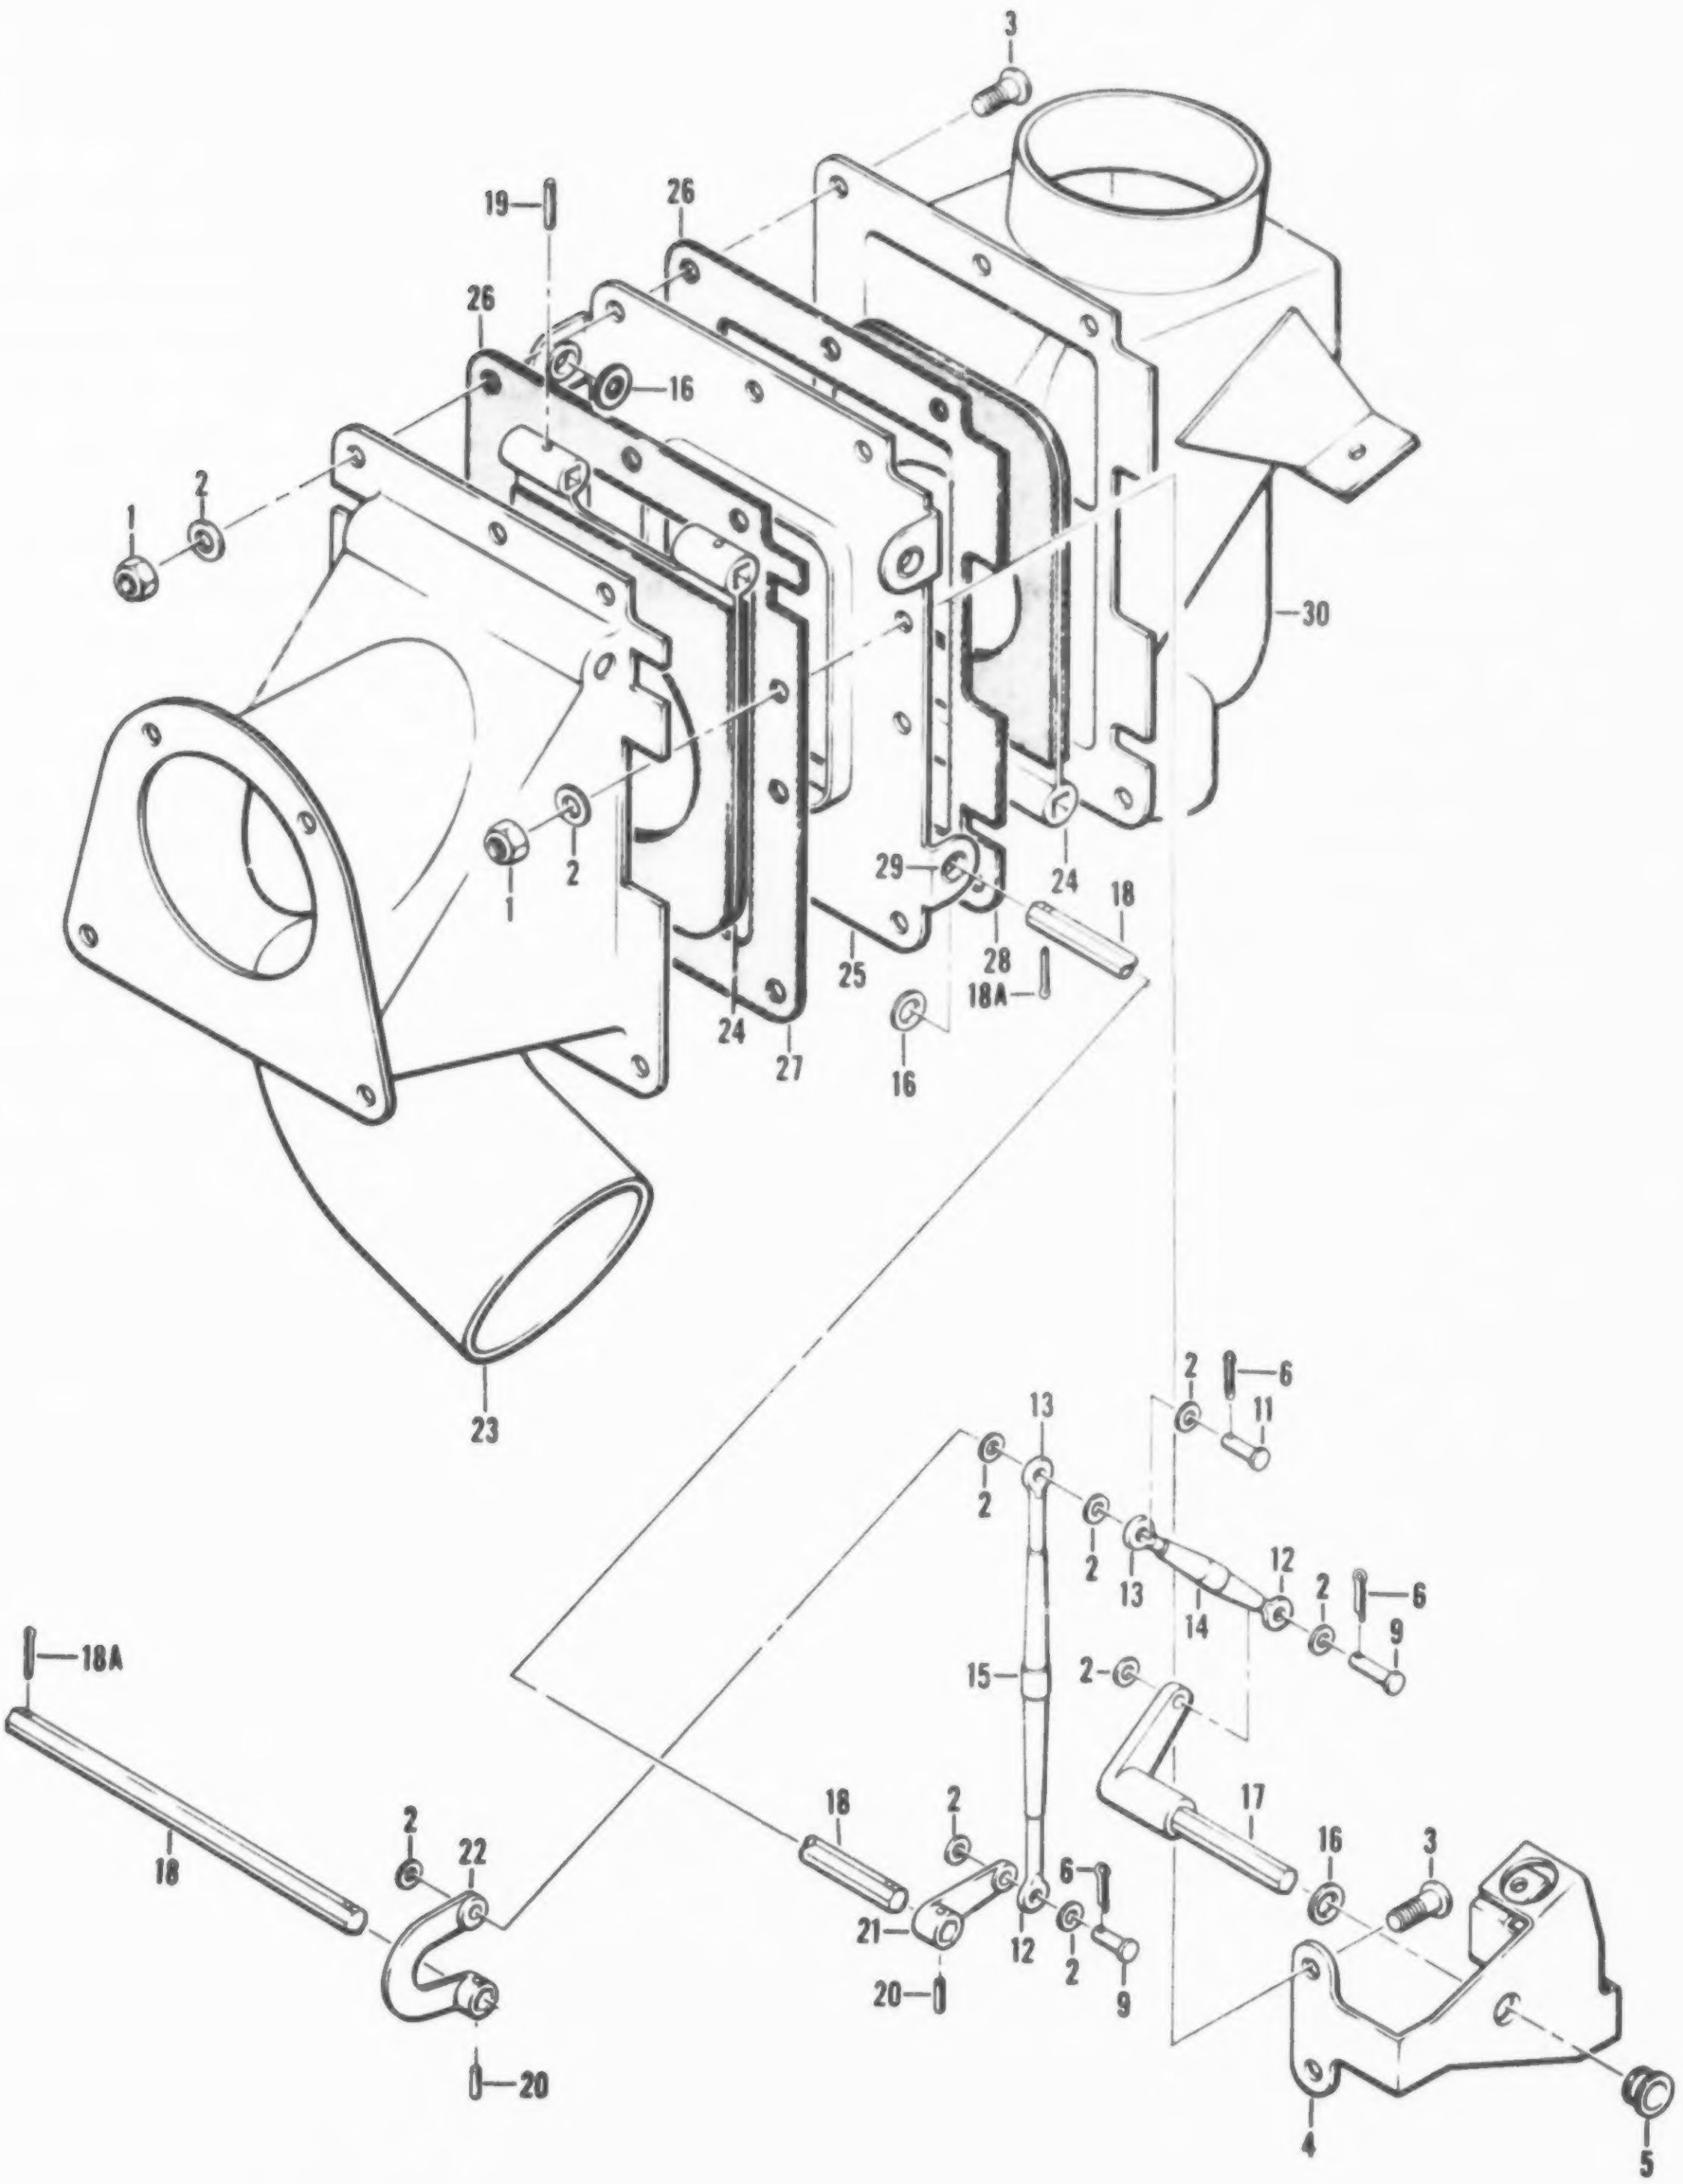
3
19
26
26
16
2
1
30
1
2
29
24
18
28
18A
25
24
27
16
23
2
6
11
13
2
2
13
12
14
2
6
9
15
2
18A
18
17
18
2
22
2
16
3
6
21
12
2
9
20
20
4
5

Figure 409. Valve Assembly, Heating Air Bleed

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
409		A000Z	1560-00-682-5190	97499	204-070-591-3	VALVE ASSY HEATING AIR BLEED USBL EFF 62-1872 & SUBSEQUENT SEE FIG 393 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
409	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	20
409	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
409	4	PAOOC	1560-00-979-7562	97499	204-072-433-1	.SUPPORT ASSY...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	5	PAOZZ	3120-00-225-5176	07997	FB3-08	..BUSHING,DRILL,FLARA...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	6	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
409	9	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	.PIN,STRAIGHT, HEADLESS.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
409	11	PAOZZ	5315-00-812-3766	96906	MS20392-2C15	.PIN,STRAIGHT, HEADLESS.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	12	PAOZZ	5340-00-069-0595	96906	MS21254-2RS	.BOLT,EYE.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
409	13	PBOZZ	5306-00-069-0594	96906	MS21254-2LS	.BOLT,EYE.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
409	14	PAOZZ	5340-00-067-9671	96906	MS21251B2S	.TURNBUCKLE BODY................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	15	PAOZZ	5340-00-067-9873	96906	MS21251B2L	.TURNBUCKLE BODY................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	16	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
409	17	PAOZZ	1660-00-961-1333	97499	204-070-589-1	.SHAFT..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	18	PAOZZ	1660-00-807-7792	97499	204-070-240-1	.SHAFT,HEATING CONTROL VALVE....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
409	18A	PAOZZ	5315-00-844-3942	96906	MS16562-6	.PIN,SPRING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
409	19	PAOZZ	5315-00-844-5644	96906	MS16562-194	.PIN,SPRING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
409	20	PBOZZ	5315-00-843-7986	96906	MS16562-33	.PIN,SPRING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
409	21	PAOZZ	1560-00-873-2280	97499	204-070-234-1	.LEVER,REMOTE CONTROL...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	22	PAOZZ	1560-00-873-2279	97499	204-070-075-1	.LEVER,REMOTE CONTROL...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	23	PAOZZ	4820-00-980-0342	97499	204-070-494-1	.VALVE HALF ASSY,AFT............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	24	PAOZZ	1660-00-979-7563	97499	204-072-434-1	.FLAPPER,VALVE ASSY.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
409	25	PAOOO	1560-00-979-7564	97499	204-072-435-1	.SUPPORT,VALVE ASSY.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	26	XAOOC		97499	204-072-435-3	..GASKET ASSEMBLY...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	27	PAOZZ	5330-00-736-1013	97499	204-070-227-1	...GASKET.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	28	PAOZZ	5330-00-856-8424	97499	204-070-227-3	...GASKET.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
409	29	PAOZZ	3120-00-805-3005	97499	22-006-16-10-16	..BUSHING,SLEEVE................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
409	30	PAOZZ	4820-00-980-0343	97499	204-070-493-1	.VALVE HALF ASSY,FWD............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

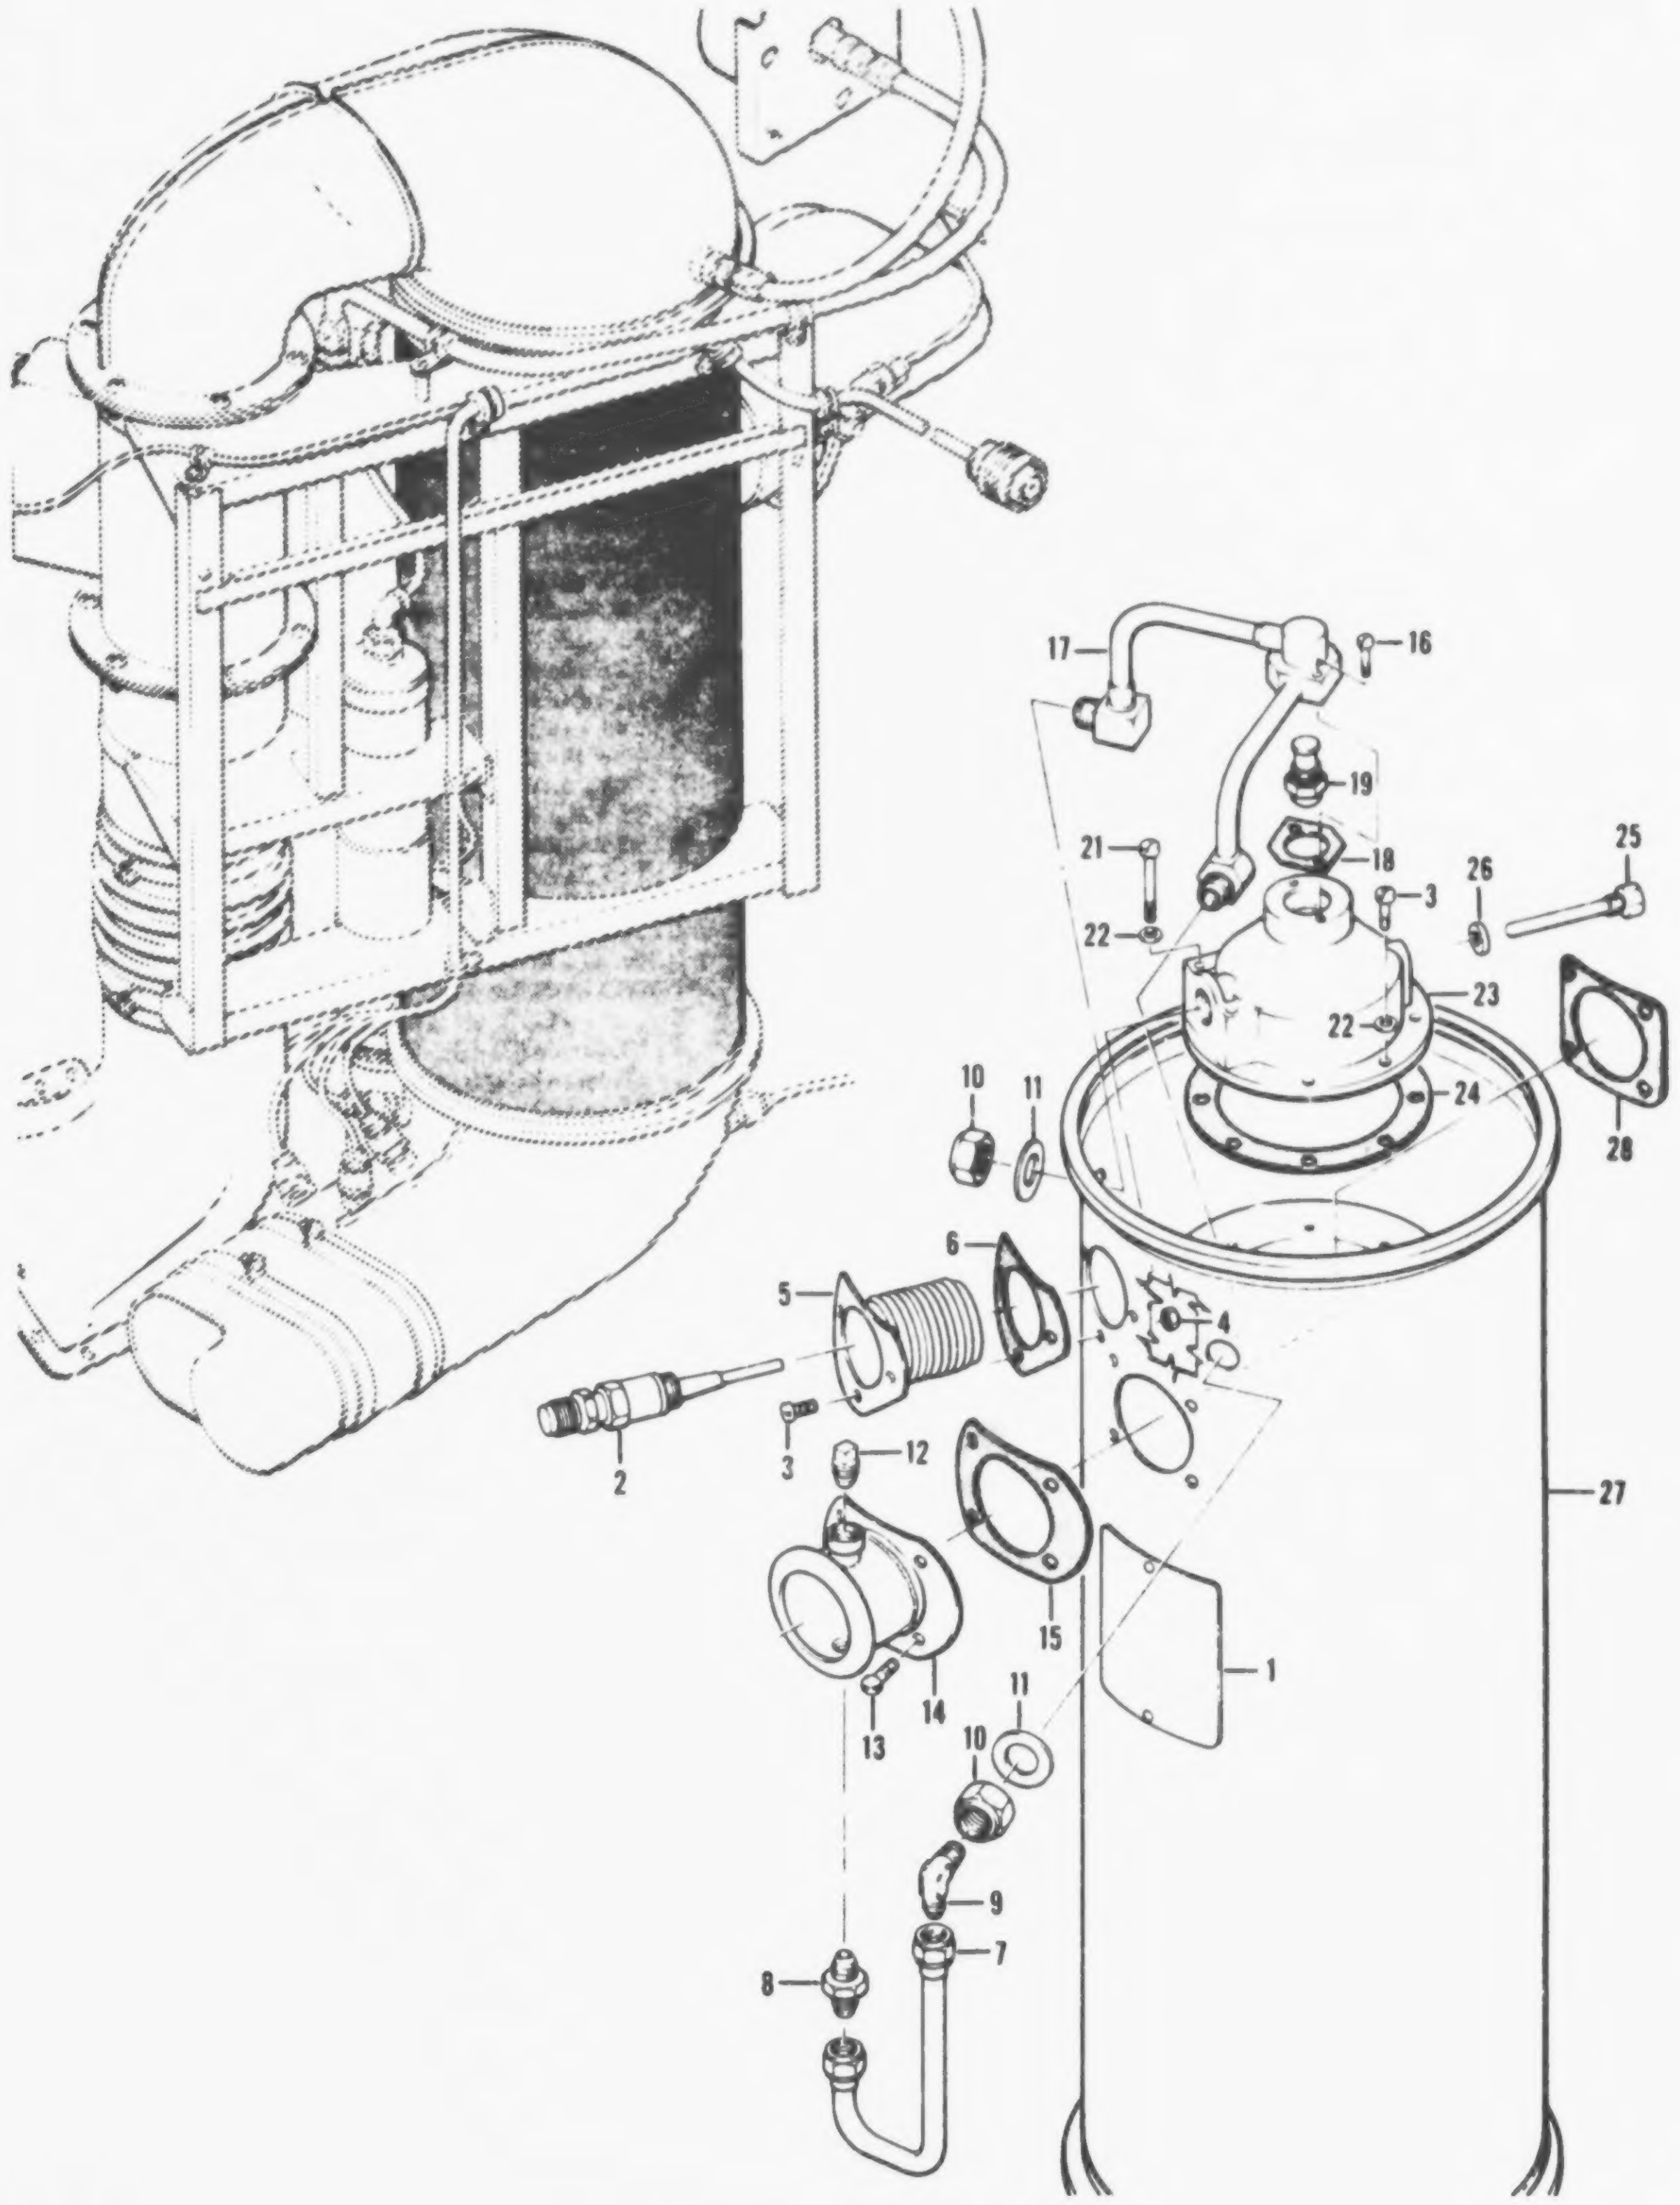
17
16
19
21
18
25
26
3
22
23
22
10
11
24
28
6
5
4
2
3
12
27
15
1
11
14
13
10
9
7
8

Figure 410. Heater Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
410		XD000	1660-00-073-6823	97499	204-070-282-1	HEATER,AIRCRAFT BREAKDOWN FOR PN 204-070-282-1 86C67 SEE FIG.399 FOR NHA..........UHB,UHC,UHM	EA	1
410	1	XBDZZ	9905-00-089-0048	89513	FY99A30	.PLATE,IDENTIFICATIO..........UHB,UHC,UHM	EA	1
410	2	PADZZ	1660-00-726-1876	89513	H02C12	.IGNITER,PLUG..........UHB,UHC,UHM	EA	1
410	3	PADZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE..........UHB,UHC,UHM	EA	3
410	4	PADZZ	5310-00-811-3494	96906	MS21044N08	.NUT,SELF-LOCKING, HEXAGON..........UHB,UHC,UHM	EA	3
410	5	XBDZZ	1660-00-076-6620	89513	64C44	.HOUSING ASSY,HEATER..........UHB,UHC,UHM	EA	1
410	6	XBDZZ	5330-00-982-4423	89513	64C42	.GASKET..........UHB,UHC,UHM	EA	1
410	7	XBDZZ	1660-00-019-0279	89513	K10C70	.TUBE ASSEMBLY..........UHB,UHC,UHM	EA	1
410	8	PADZZ	4730-00-995-1559	96906	MS51500A6	.ADAPTER,STRAIGHT, PIPE TO TUBE..........UHB,UHC,UHM	EA	1
410	9	PADZZ	4730-00-231-4013	96906	MS20822-6	.ELBOW,PIPE TO TUBE..........UHB,UHC,UHM	EA	1
410	10	PADZZ	5310-00-939-0783	96906	MS21083N12	.NUT,SELF-LOCKING, HEXAGON..........UHB,UHC,UHM	EA	2
410	11	PADZZ	5310-00-167-0826	88044	AN960-1216	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
410	12	PADZZ	4730-00-221-2137	96906	MS20913-2S	.PLUG,PIPE..........UHB,UHC,UHM	EA	1
410	13	PADZZ	5305-00-614-0247	96906	MS35266-64	.SCREW,MACHINE..........UHB,UHC,UHM	EA	4
410	14	XBDZZ	1660-00-723-1793	89513	06C17	.FLANGE ASSY,HEATER..........UHB,UHC,UHM	EA	1
410	15	PADZZ	1660-00-337-4546	89513	82A52	.GASKET,OUTER AIR COMBUSTION..........UHB,UHC,UHM	EA	1
410	16	PADZZ	5305-00-638-0761	88044	AN117011	.SCREW,MACHINE..........UHB,UHC,UHM	EA	2
410	17	XBDZZ	1660-00-226-6164	89513	99C70	.FEED ASSY,HEATER..........UHB,UHC,UHM	EA	1
410	18	PADZZ	5330-00-166-6509	89513	51A66	.GASKET .NOZZLE HOLDER..........UHB,UHC,UHM	EA	1
410	19	PADZZ	1660-00-449-1415	89513	036A47	.TIP AND STRAINER ASSEMBLY,SPRAY NOZZLE..........UHB,UHC,UHM	EA	1
410	21	PADZZ	5305-00-725-7203	96906	MS35266-63	.SCREW,MACHINE..........UHB,UHC,UHM	EA	2
410	22	PADZZ	5310-00-264-1069	58588	45A28	.WASHER,FLAT..........UHB,UHC,UHM	EA	8
410	23	XBDZZ	1660-00-226-6166	89513	70C06	.HEAD ASSY,HEATER..........UHB,UHC,UHM	EA	1
410	24	PADZZ	5330-00-166-6511	89513	52A02	.GASKET,HEAD..........UHB,UHC,UHM	EA	1
410	25	PADZZ	1660-00-167-2613	89513	51A06	.ELECTRODE ASSY..........UHB,UHC,UHM	EA	1
410	26	PADZZ	5310-00-166-5228	89513	56A14	.WASHER,FLAT..........UHB,UHC,UHM	EA	1
410	27	XBDZZ	1660-00-226-6166	89513	90C40	.JACKET ASSY,HEATER..........UHB,UHC,UHM	EA	1
410	28	PADZZ	5330-00-547-6219	58588	82A54	.GASKET..........UHB,UHC,UHM	EA	1

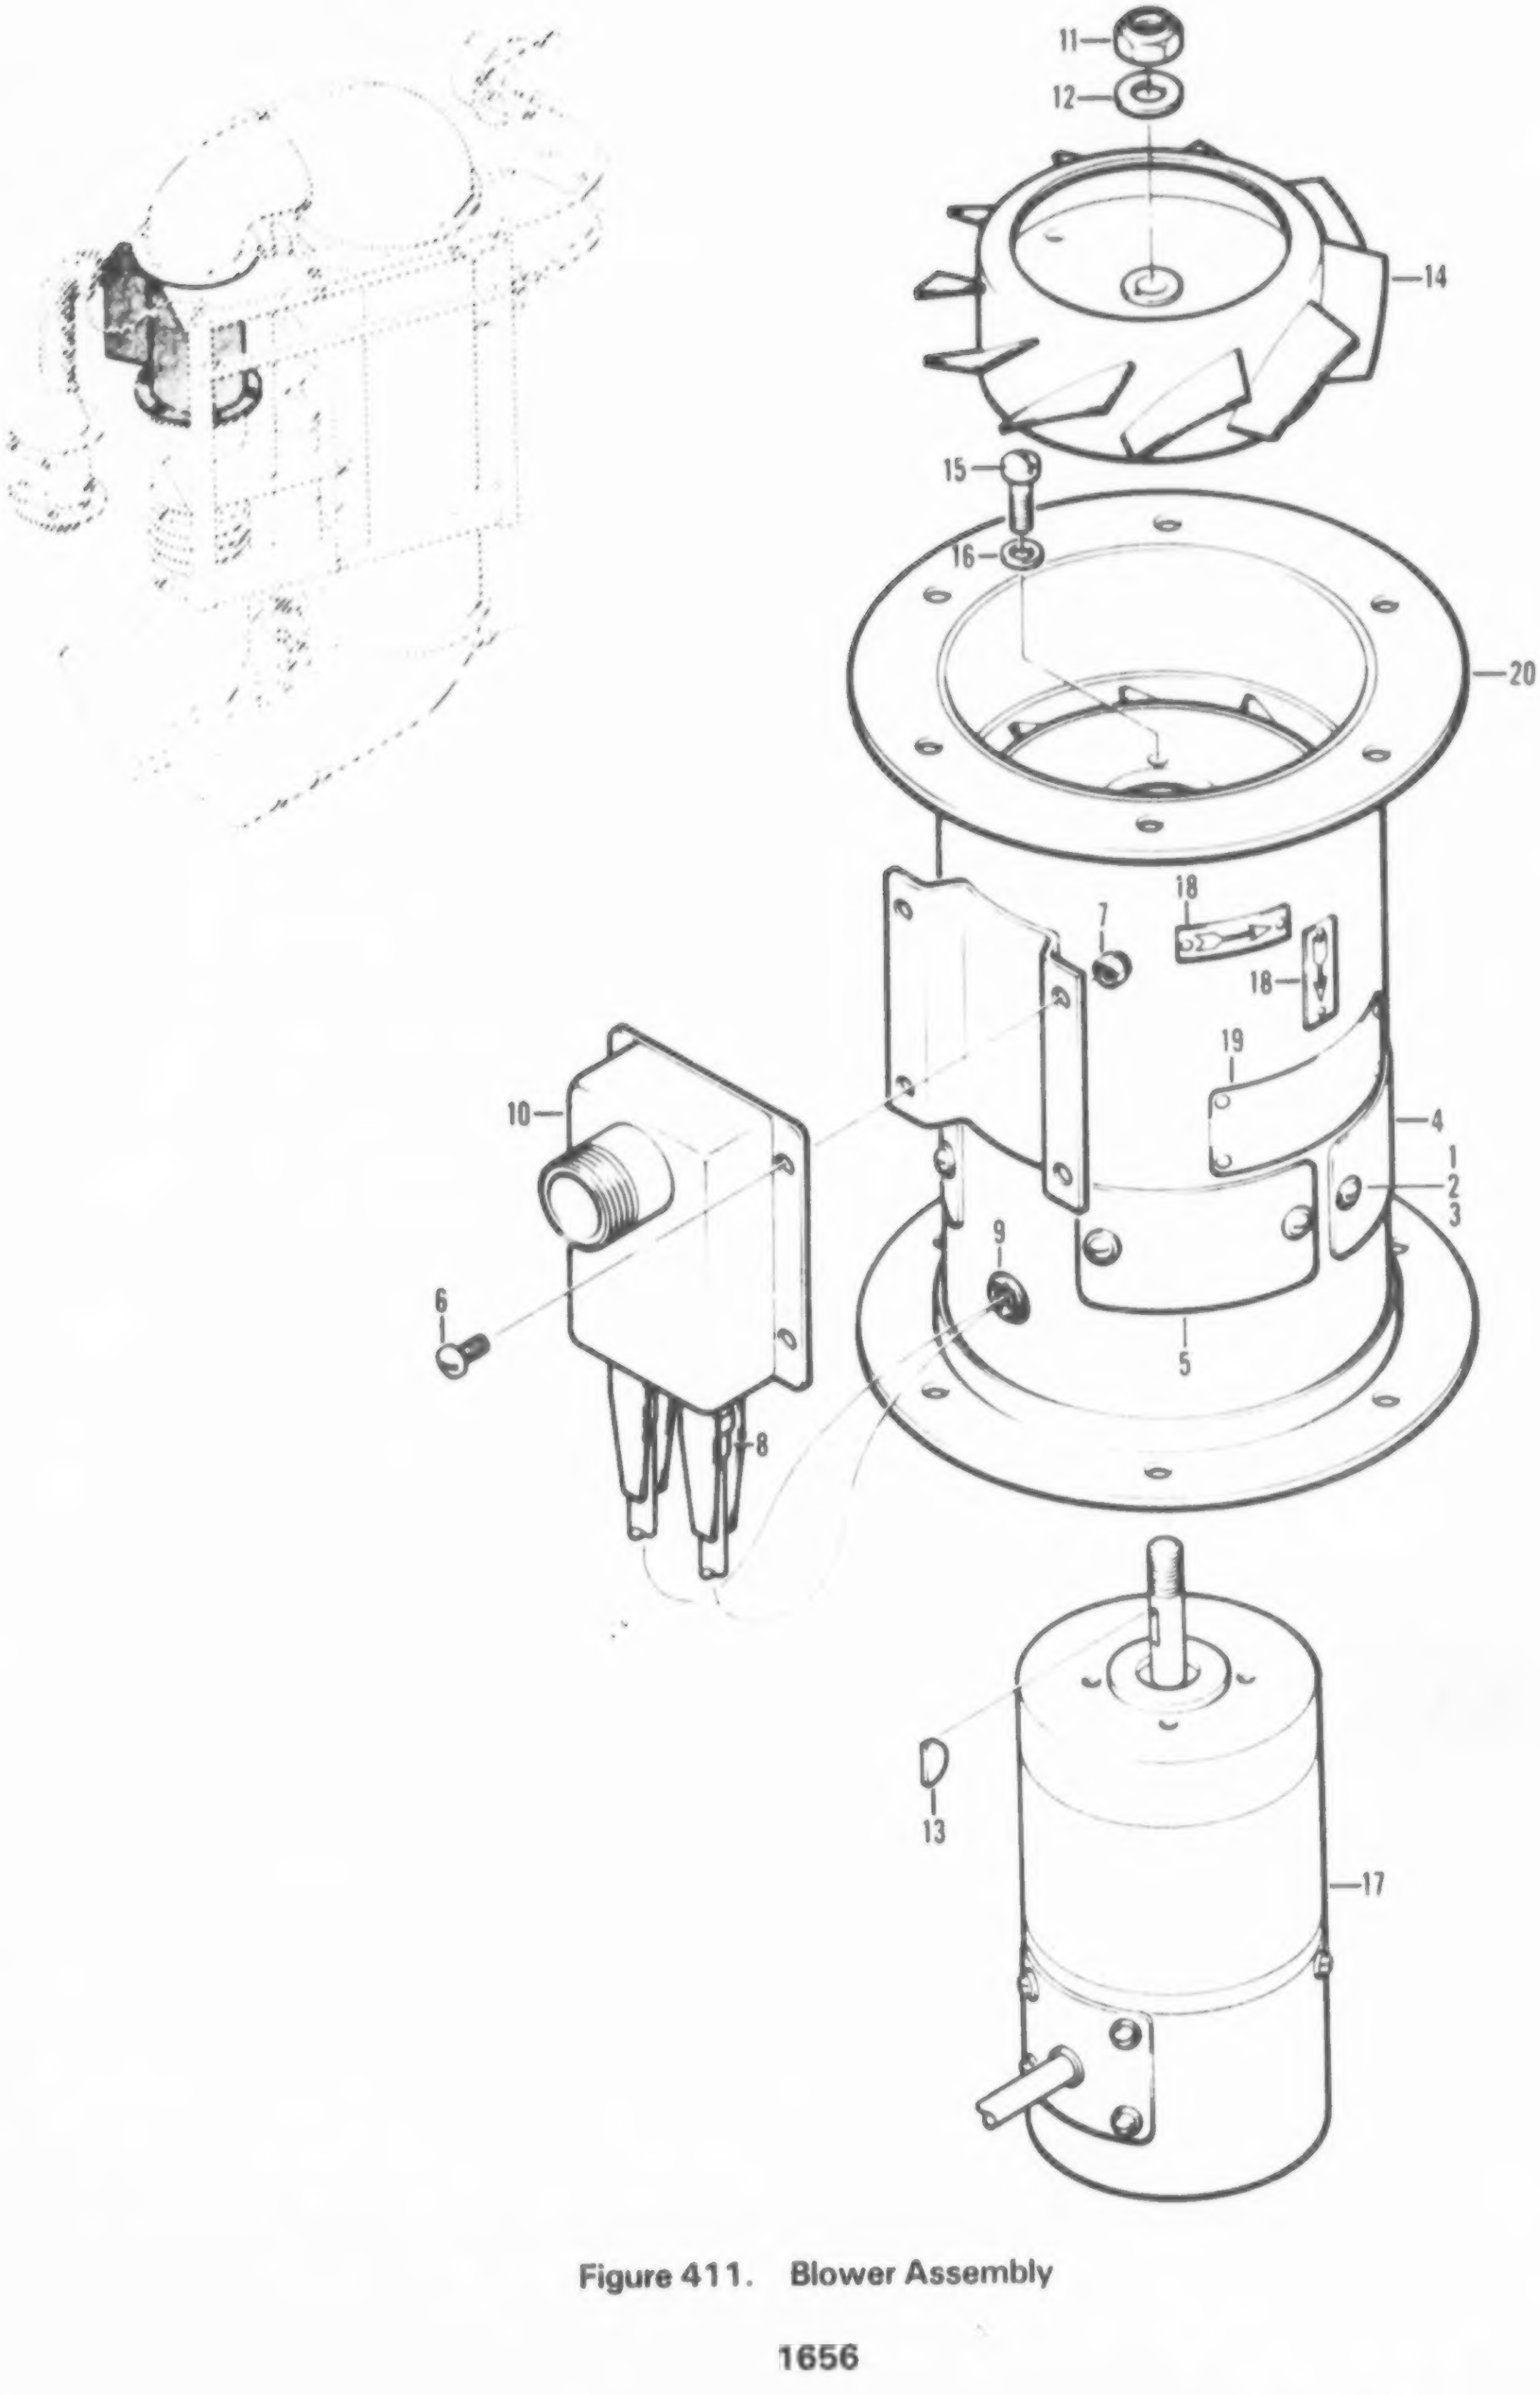
11
12
14
15
16
20
18
7
18
19
10
4
1
2
3
9
6
5
8
13
17

Figure 411. Blower Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
411		PAOFF	1660-00-886-3334	97499	204-070-158-1	BLOWER ASSEMBLY BREAKDOWN FOR PN 204-070-158-1 131701-1 USBL EFF 60-3546 THRU 64-14191 SEE FIG.399 FOR NHA .... UHB,UHC,UHM	EA	1
11	1	PAFZZ	5310-00-886-3506	72962	F12NCFMA2-62	.NUT,SELF-LOCKING........ UHB,UHC,UHM	EA	8
411	2	PAFZZ	5310-00-167-0816	88044	AN960-6	.WASHER,FLAT........ UHB,UHC,UHM	EA	8
411	3	PAFZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE........ UHB,UHC,UHM	EA	8
411	4	MFOZZ		70951	131762-1	.BRUSH COVER BLOWER........ UHB,UHC,UHM	EA	1
411	5	MFOZZ		70951	131761-1	.BRUSH COVER........ UHB,UHC,UHM	EA	1
411	6	PAFZZ	5305-00-984-6191	96906	MS35206-243	.SCREW,MACHINE........ UHB,UHC,UHM	EA	4
411	7	PAFZZ	5310-00-811-3494	96906	MS21044N08	.NUT,SELF-LOCKING, HEXAGON........ UHB,UHC,UHM	EA	4
411	8	PAFZZ	5940-00-143-4790	96906	MS25036-108	.TERMINAL,LUG........ UHB,UHC,UHM	EA	2
411	9	PAFZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC........ UHB,UHC,UHM	EA	1
411	10	XDFZZ		89513	131705-1	.FILTER,RADIO........ UHB,UHC,UHM	EA	1
411	11	PAFZZ	5310-00-088-0553	96906	MS21044N6	.NUT,SELF-LOCKING, HEXAGON........ UHB,UHC,UHM	EA	1
411	12	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT........ UHB,UHC,UHM	EA	1
411	13	PBFZZ	5315-00-616-5516	96906	MS35756-4	.KEY,WOODRUFF........ UHB,UHC,UHM	EA	1
411	14	XDFZZ	1660-00-075-9384	70951	131704-1	.ROTOR ASSEMBLY........ UHB,UHC,UHM	EA	1
411	15	PAFZZ	5305-00-614-0274	96906	MS35265-63	.SCREW,MACHINE........ UHB,UHC,UHM	EA	4
411	16	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT........ UHB,UHC,UHM	EA	4
411	17	PBFFF	6105-00-759-4201	70951	131702-1	.MOTOR,DIRECT CURREN........ UHB,UHC,UHM	EA	1
411	18	PBFFF	9905-00-954-1968	89513	R2297-1	.PLATE,DESIGNATION........ UHB,UHC,UHM	EA	2
411	19	PBFFF	1660-00-799-0487	70951	131756-1	.PLATE,HEATER,ACFT........ UHB,UHC,UHM	EA	1
411	20	PBFFF		89513	131707-1	.STATOR ASSY,BLOWER........ UHB,UHC,UHM	EA	1

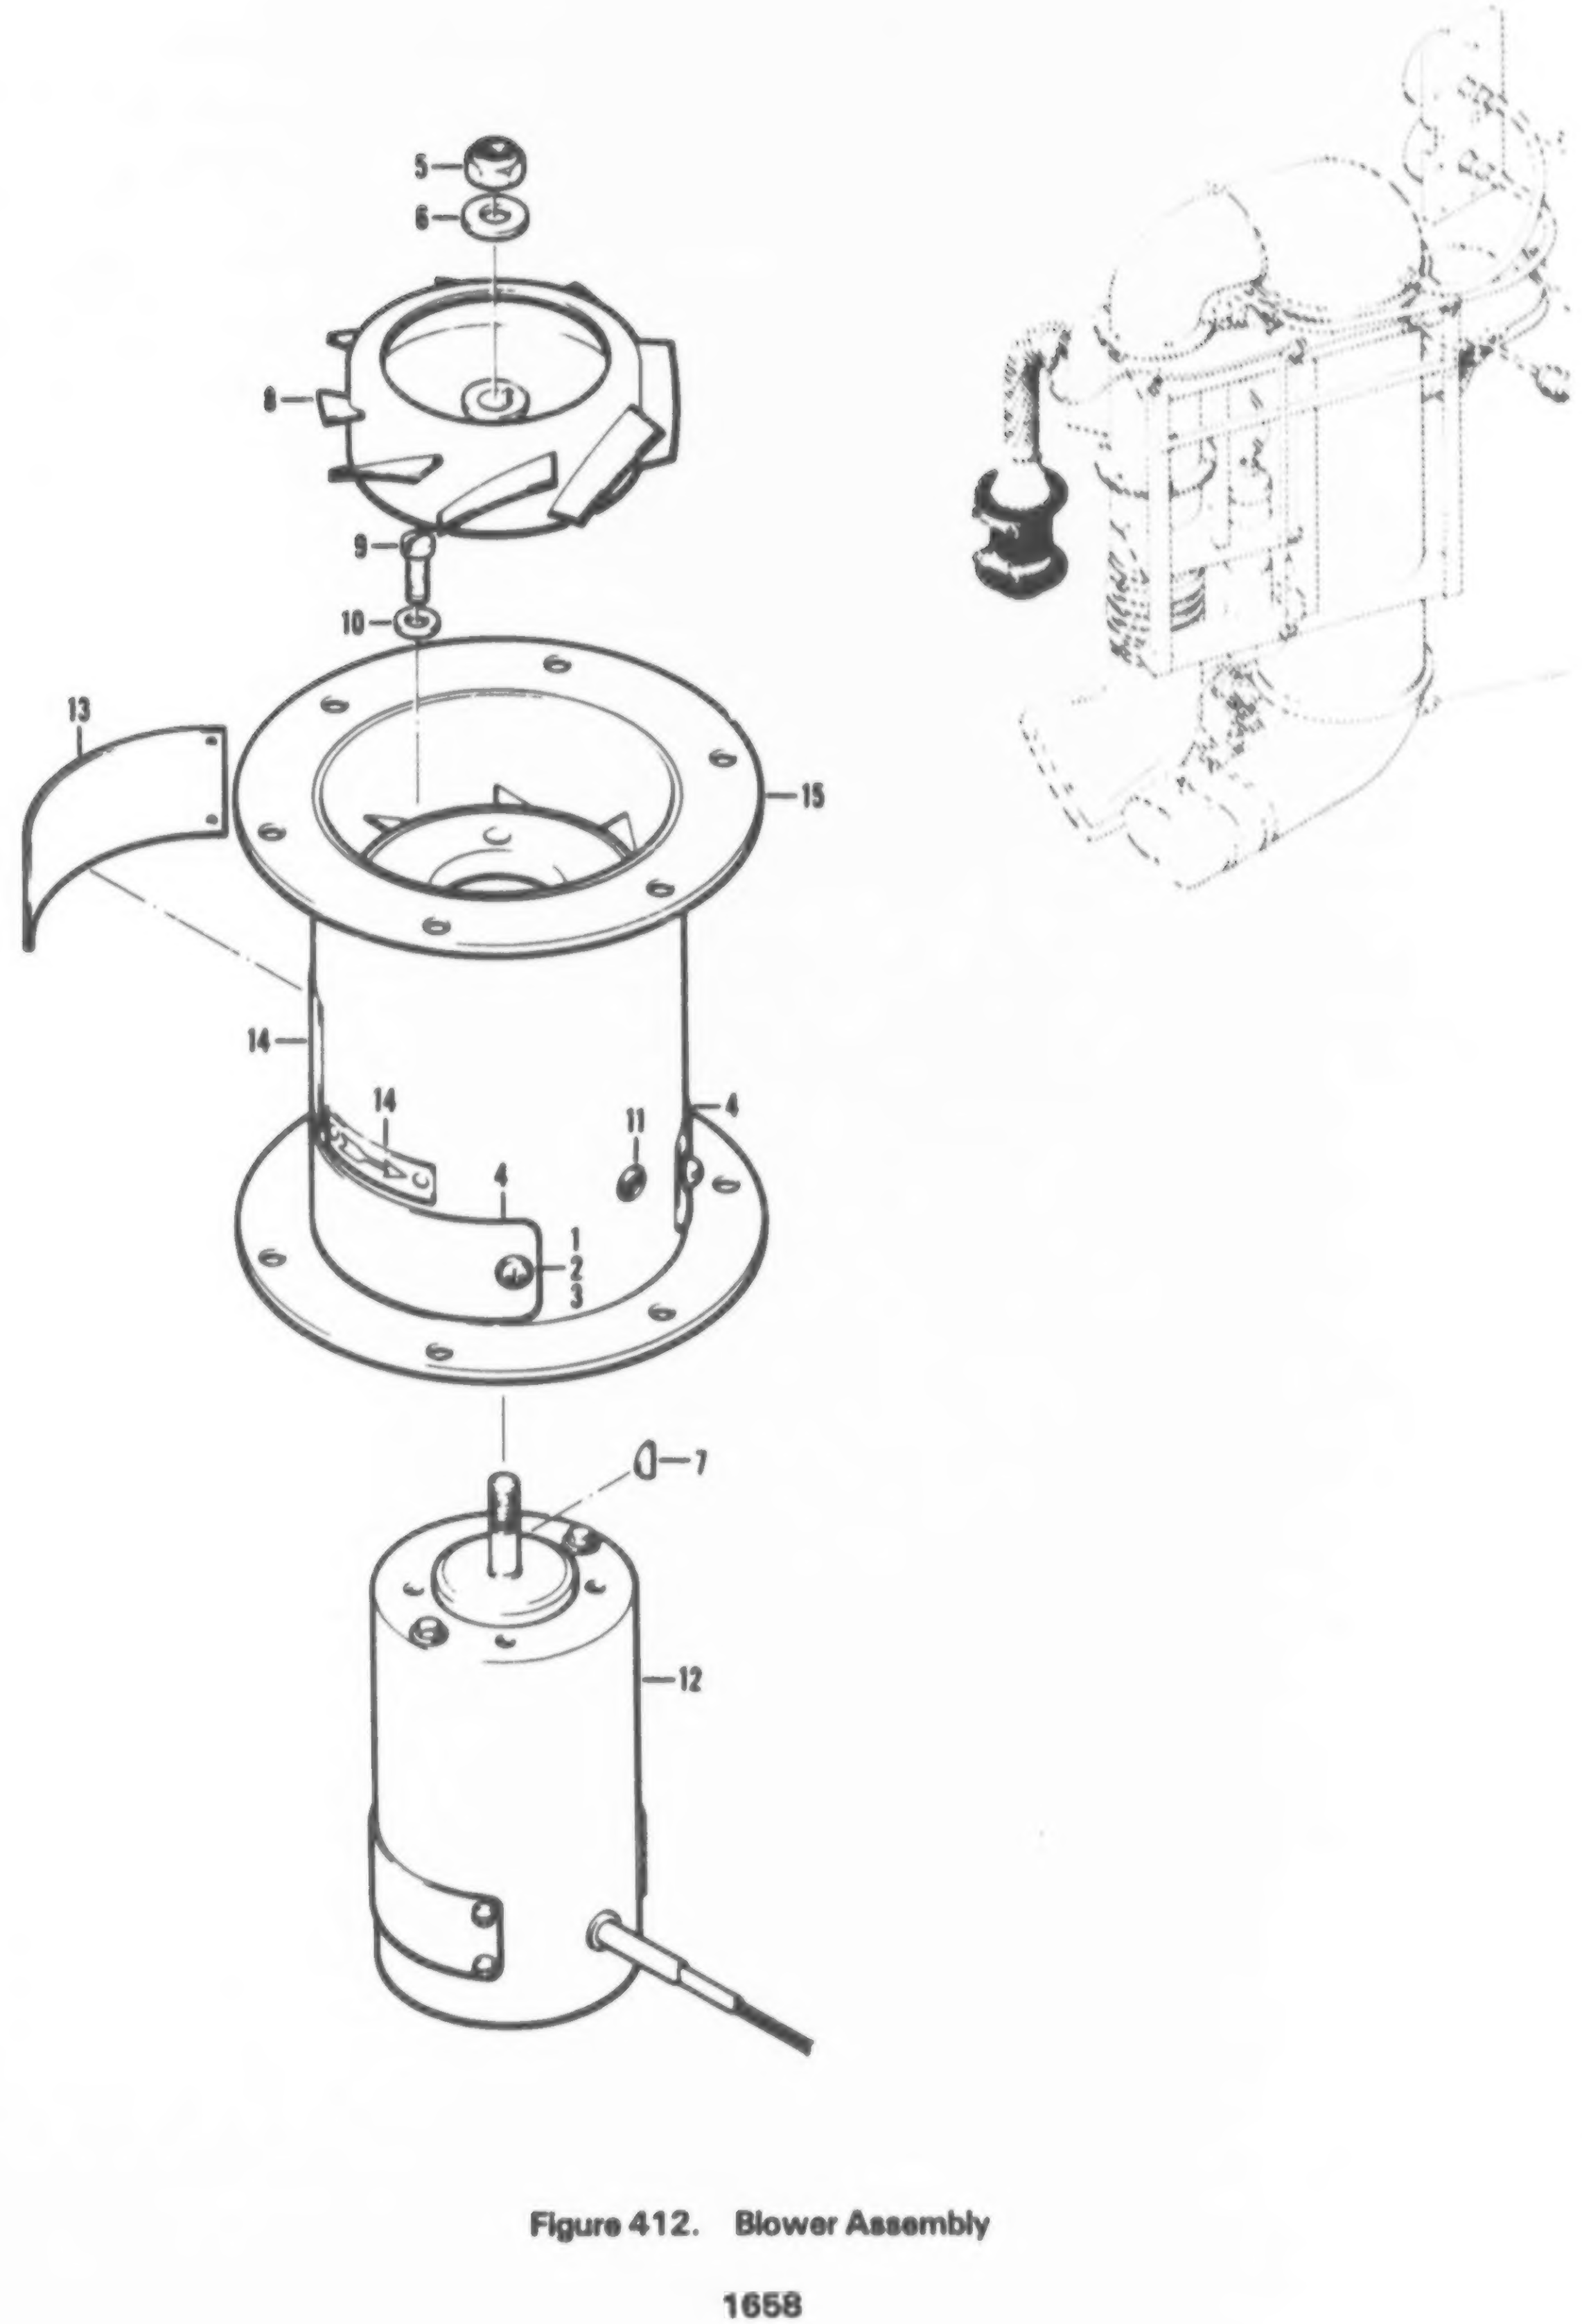
5
6
8
9
10
13
15
14
14
11
4
4
1
2
3
7
12

Figure 412. Blower Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 13 ENVIRONMENTAL CONTROL USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
412		PAOOO	1660-00-886-3335	97499	204-070-157-1	BLOWER ASSY, BREAKDOWN FOR PN 204-070-157-1 (131601-1)USBL EFF 60-3546 THRU 64-14191 SEE FIG.399 FOR NHA.....UHB,UHC,UHM	EA	1
2	1	PADZZ	5310-00-866-3506	72962	F12NCFMA2-62	.NUT,SELF-LOCKING.......................UHB,UHC,UHM	EA	4
.12	2	PADZZ	5310-00-167-0816	88044	AN960-6	.WASHER,FLAT.......................UHB,UHC,UHM	EA	4
412	3	PADZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE.......................UHB,UHC,UHM	EA	4
412	4	MDOZZ		70951	131657-1	.BRUSH COVER.......................UHB,UHC,UHM	EA	2
412	5	PADZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING, HEXAGON.......................UHB,UHC,UHM	EA	1
412	6	PADZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.......................UHB,UHC,UHM	EA	1
412	7	PADZZ	5315-00-616-5519	96906	MS35756-1	.KEY,WOODRUFF.......................UHB,UHC,UHM	EA	1
412	8	XBOZZ	1660-00-075-9386	89513	131604-1	.FAN ASSEMBLY.......................UHB,UHC,UHM	EA	1
412	9	PADZZ	5305-00-614-0274	96906	MS35266-63	.SCREW,MACHINE.......................UHB,UHC,UHM	EA	4
412	10	PADZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT.......................UHB,UHC,UHM	EA	4
412	11	PADZZ	5325-00-174-5317	96906	MS35489-4	.GROMMET,NONMETALLIC.......................UHB,UHC,UHM	EA	1
412	12	PADZZ	6105-01-166-9683	89513	131602-3	.MOTOR,DIRECT CURREN.......................UHB,UHC,UHM	EA	1
412	13	XBOZZ		70951	131655-1	.PLATE,IDENTIFICATIO.......................UHB,UHC,UHM	EA	1
412	14	PADZZ	9905-00-954-1968	89513	R2297-1	.PLATE,DESIGNATION.......................UHB,UHC,UHM	EA	2
412	15	XBOZZ		70951	131605-1	.BLOWER,STATOR ASSY.......................UHB,UHC,UHM	EA	1

Fig 413 NOT USED

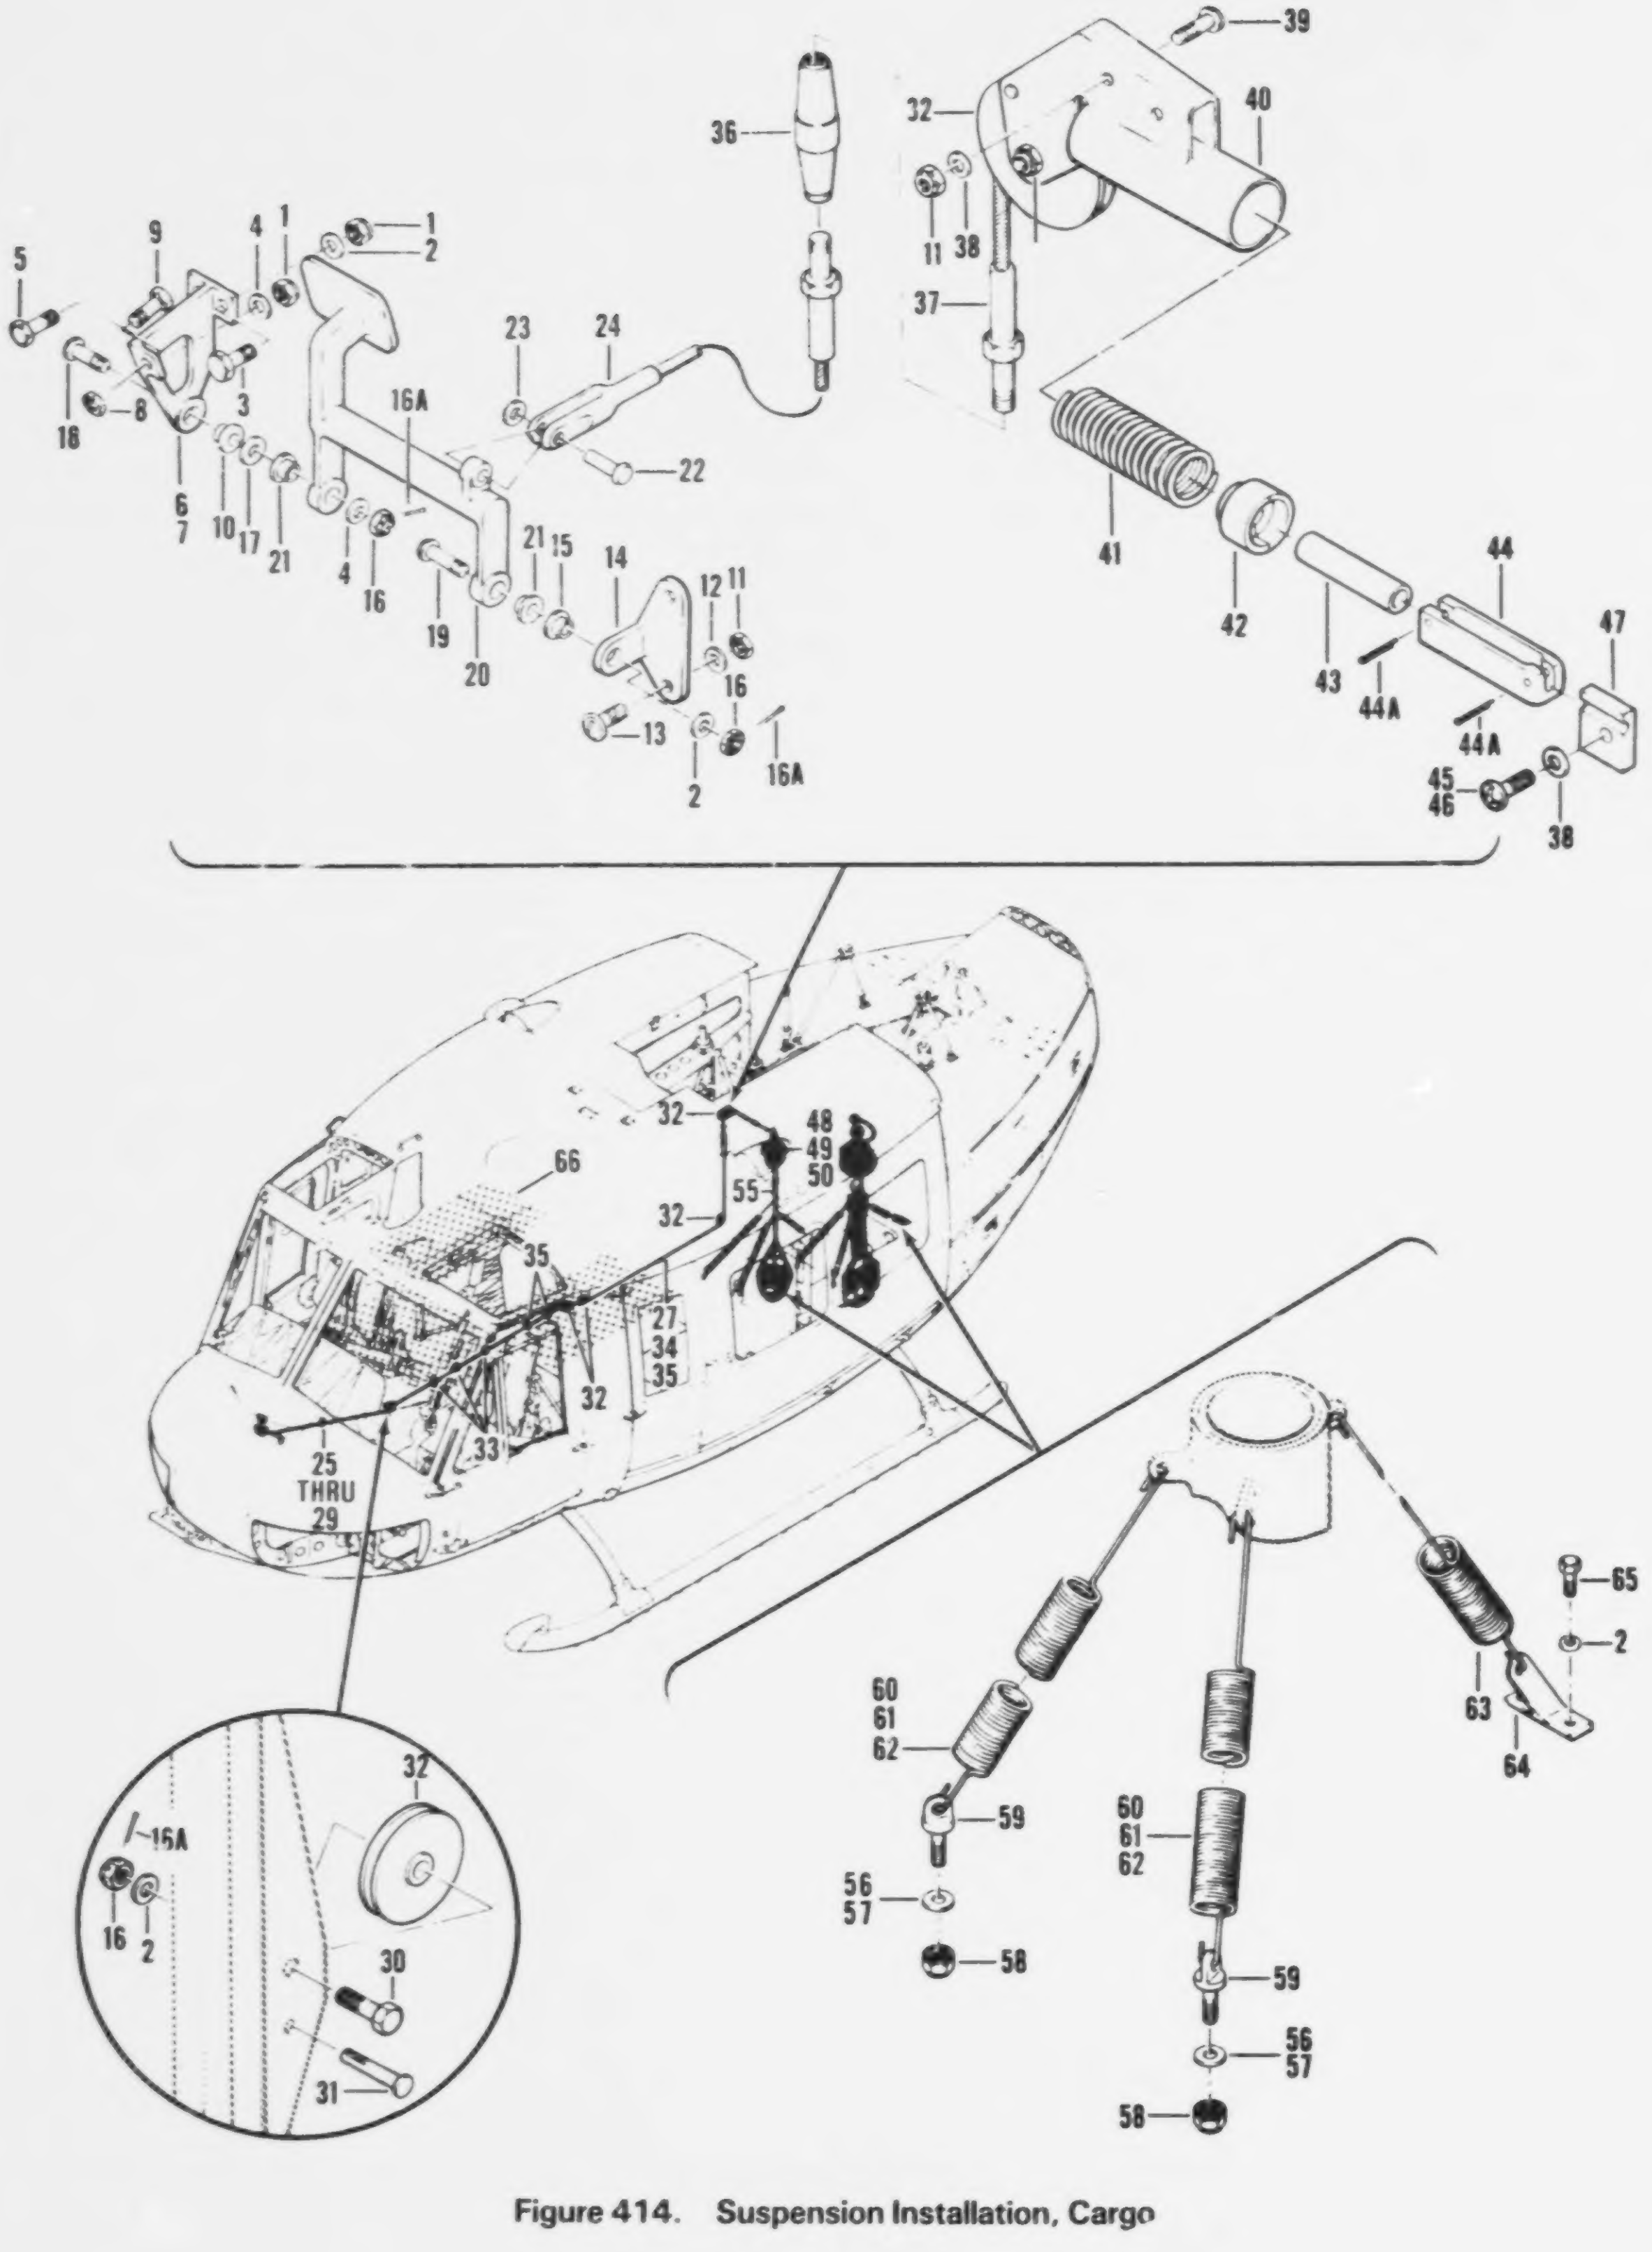
39
32
40
36
11
38
37
1
2
9
4
1
5
3
8
16
6
7
10
17
21
16A
23
24
22
4
16
19
20
21
15
14
12
11
16
13
2
16A
41
42
43
44
44A
44A
47
45
46
38
32
48
49
50
55
66
32
35
27
34
35
32
33
25
THRU
29
65
2
63
64
60
61
62
59
56
57
58
60
61
62
59
56
57
58
32
16A
16
2
30
31

Figure 414. Suspension Installation, Cargo

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
414		XCFZZ		97499	204-070-529-7	SUSPENSION INSTL CARGO USBL EFF (UH-1B) 63-8500 & SUBSEQUENT USBL EFF (UH-1C)64-14101 THRU 64-14191 SEE FIG.6 FOR NHA .... UHB,UHC,UHM	EA	1
414		XCFZZ		97499	204-070-529-11	SUSPENSION INSTL CARGO USBL EFF 65-9416 THRU 65-9421 SEE FIG.6 FOR NHA .... UHC,UHM	EA	1
414		XCFZZ		97499	204-070-529-13	SUSPENSION INSTL CARGO USBL EFF 65-9422 & SUBSEQUENT SEE FIG.6 FOR NHA .... UHC,UHM	EA	1
414		XCFZZ		97499	205-070-900-3	SUSPENSION INSTL CARGO USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
414		XCFZZ		97499	205-070-900-5	SUSPENSION INSTL CARGO USBL EFF 63-8739 THRU 64-13901 SEE FIG 7 FOR NHA .... UHH,UHV	EA	1
414		XCFZZ		97499	205-070-900-7	SUSPENSION INSTL CARGO USBL EFF 65-9565 THRU 67-19537 SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
414		XCFZZ		97499	205-070-900-19	SUSPENSION INSTL CARGO USBL EFF 68-15214 & SUBSEQUENT SEE FIG.7 FOR NHA .... UHH,UHV	EA	1
414	1	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
414	2	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
414	3	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	4	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
414	5	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	6	PAOOO	1560-00-739-4581	97499	204-070-991-1	.STOP ASSEMBLY,CARGO SUSPENSION .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	7	XAOZZ		97499	204-070-992-1	..STOP AND HINGE FITTING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	8	PAOZZ	5310-00-167-1344	88044	AN315-4R	..NUT,PLAIN,HEXAGON .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	9	XDOZZ		80205	NAS428K4-10	..BOLT,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	10	XDOZZ	3120-00-801-8442	97499	22-006B16-22-16	..BUSHING,SLEEVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
414	12	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	13	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	14	PBOOO	1560-00-435-4825	97499	204-070-993-3	.BRACKET,EYE,ROTATIN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	15	PAOZZ	3120-00-711-6197	97499	22-006B16-16-16	..BUSHING,SLEEVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	16	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
414	16A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER .... UHB,UHC,UHH,UHM,UHV	EA	5
414	17	PAOZZ	5365-00-767-2035	97499	120-047-16-9	.SHIM .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	18	PAOZZ	5306-00-156-2702	88044	AN24-18	.BOLT,CLEVIS .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	19	PAOZZ	5306-00-156-2699	88044	AN24-15	.BOLT,CLEVIS .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	20	PAOOO	1680-00-730-7028	97499	204-070-989-1	.PEDAL ASSY,CARGO .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	21	XDOZZ		97499	22-006B16-23-16	.BUSHING,SLEEVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	22	PBOZZ	5315-00-811-1266	96906	MS20392-1C19	.PIN,STRAIGHT,HEA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	23	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	24	PAOZZ	4010-00-708-3006	97499	204-070-216-1	.WIRE ROPE ASSEMBLY, SINGLE LEG .... UHB,UHC,UHM	EA	1
414	25	PAOZZ	4010-00-968-7820	97499	205-070-901-1	.WIRE ROPE ASSEMBLY, SINGLE LEG .... UHH,UHV	EA	1
414	26	PAOZZ	5325-00-584-9435	97820	S11154-12AY	.GROMMET,NONMETALLIC .... UHH,UHV	EA	1
414	27	PAOZZ	5325-00-986-3229	97820	S11154-3AYS	.GROMMET,NONMETALLIC .... UHH,UHV	EA	V
414	28	PAOZZ	5325-00-630-9442	97820	S11154-3ATS	.GROMMET,NONMETALLIC .... UHH,UHV	EA	1

best copy available

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
414	29	PAOZZ	5340-00-253-1671	97499	50-004-1A	.FAIRLEAD ASSEMBLY........................UHH,UHV	EA	1
414	30	PAOZZ	5306-00-182-1528	88044	AN4H10	.BOLT,MACHINE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
414	31	PAOZZ	5315-00-597-1562	80205	NAS427K9	.PIN,SPRING..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
414	32	PAOZZ	3020-00-288-3411	96906	MS20219A2	.PULLEY,GROOVE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
414	33	PAOZZ	5325-00-685-6221	97820	S11154-6AY	.GROMMET,NONMETALLIC........................UHH,UHV	EA	5
414	34	PAOZZ	5325-00-630-9439	97820	S11154-3CTS	.GROMMET,NONMETALLIC........................UHB,UHC,UHM	EA	1
414	35	PAOZZ	5325-00-616-4470	97820	S11154-6BY	.GROMMET,NONMETALLIC........................UHH,UHV	EA	1
414	36	PAOZZ	5340-00-067-9875	96906	MS21251B3S	.TURNBUCKLE BODY..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	37	PAOZZ	4010-00-708-3006	97499	204-070-215-1	.WIRE ROPE ASSEMBLY,..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	38	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
414	39	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	40	PAOZZ	1560-00-682-5191	97499	204-070-999-1	.BRACKET,SPRING GUID PULLEY......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	41	PAOZZ	5360-00-710-9428	97499	204-070-998-1	.SPRING,HELICAL,COMP..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	42	PAOZZ	1560-00-778-0631	97499	204-070-997-1	.GUIDE HALF..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	43	PAOZZ	5365-00-711-7013	80205	NAS43HT4-108	.SPACER,SLEEVE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	44	PAOZZ	1680-00-691-2153	97499	204-070-995-1	.CONNECTOR,CARGO SUS..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	44A	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER..............UHB,UHC,UHE,UHH,UHV,UHX	EA	2
414	45	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........................UHH,UHV	EA	1
414	46	PAOZZ	5306-00-993-1848	96906	MS35207-265	.SCREW,MACHINE........................UHB,UHC,UHM	EA	1
414	47	PAOZZ	5340-00-772-0458	97499	204-070-996-1	.CLAMP ASSEMBLY..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	48	PAOZZ	5310-00-176-8112	88044	AN320-8	.NUT,PLAIN,SLOTTED,H..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	49	PAOZZ	5310-00-167-0806	88044	AN960C816	.WASHER,FLAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	50	PAOZZ	5306-00-151-0430	88044	AN28-34	.BOLT,CLEVIS..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	55	PAOFF	1560-00-921-8559	97499	204-072-024-1	.SUSPENSION ASSY, CARGO USBL EFF 62-1872 & SUBSEQUENT SEE FIG.416 FOR BREAKDOWNRPLS-- PN 204-072-900-3 U/O PN 204-070-529-3 RPLS-- PN 204- 072-900-5 U/O PN 204-070-529-7 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
414	56	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT U/O PN 204-070-529-1,-3,& -7........UHB,UHC,UHM	EA	2
414	57	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT U/O PN 205-070-900-3 & -5..............UHH,UHV	EA	2
414	58	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE U/O PN 204-070-529-1,-3, & -7 ....UHB,UHC,UHM	EA	2
414	59	PAOZZ	5306-00-271-6859	88044	AN43B4	.BOLT,EYE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	60	PAOZZ	5360-00-803-5210	97499	205-070-923-3	.SPRING,HELICAL,EXTE USBL EFF 64-14101 THRU 65-9421 ....UHB,UHC,UHM	EA	2
414	61	PAOZZ	5360-00-968-4589	97499	205-070-923-5	.SPRING,HELICAL,EXTE........................UHH,UHV	EA	2
414	62	PAOZZ	5360-00-806-2426	97499	204-070-458-1	.SPRING,HELICAL,EXTE U/O PN 204-070-529-1,-3,& -7 USBL EFF 64-14101 THRU 65-9421..............UHB,UHC,UHH,UHM,UHV	EA	1
414	63	PAOZZ	5360-00-055-2979	97499	204-070-458-3	.SPRING,HELICAL,EXTE........................UHH,UHV	EA	1
414	64	PAOZZ	1560-00-806-2427	97499	204-070-533-1	.FITTING,CARGO SUSPE U/W PN 204-070-458-1 USBL EFF UH-1C 64-14101 THRU 65-9421...........UHB,UHC,UHH,UHM,UHV	EA	1
414	65	PAOZZ	5306-00-150-9105	88044	AN4-4A	.BOLT,MACHINE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
414	66	PAOZZ	1670-00-027-0040	97499	205-070-507-7	.NET ASSY,CARGO TIE DOWN........................UHH,UHV	EA	1
414		XBOOZ	1680-00-919-1857	97499	204-706-077-1	.PARTS KIT,CARGO USE ONLY WHEN REQUIRED FOR MISSION ACCOMPLISHMENT C/O 1 EA 204-070-458-1 SPRING 1 EA 204-070-533-1 FITTING 2 EA 205-070-923-3 SPRING 1 EA 204-072-024-1 SUSPENSION........................UHC,UHM	EA	1
414		XBOOZ	1680-00-133-6877	97499	205-706-060-1	.CARGO KIT, SUSPENSION........................UHH,UHV	EA	1

Fig 415 NOT USED

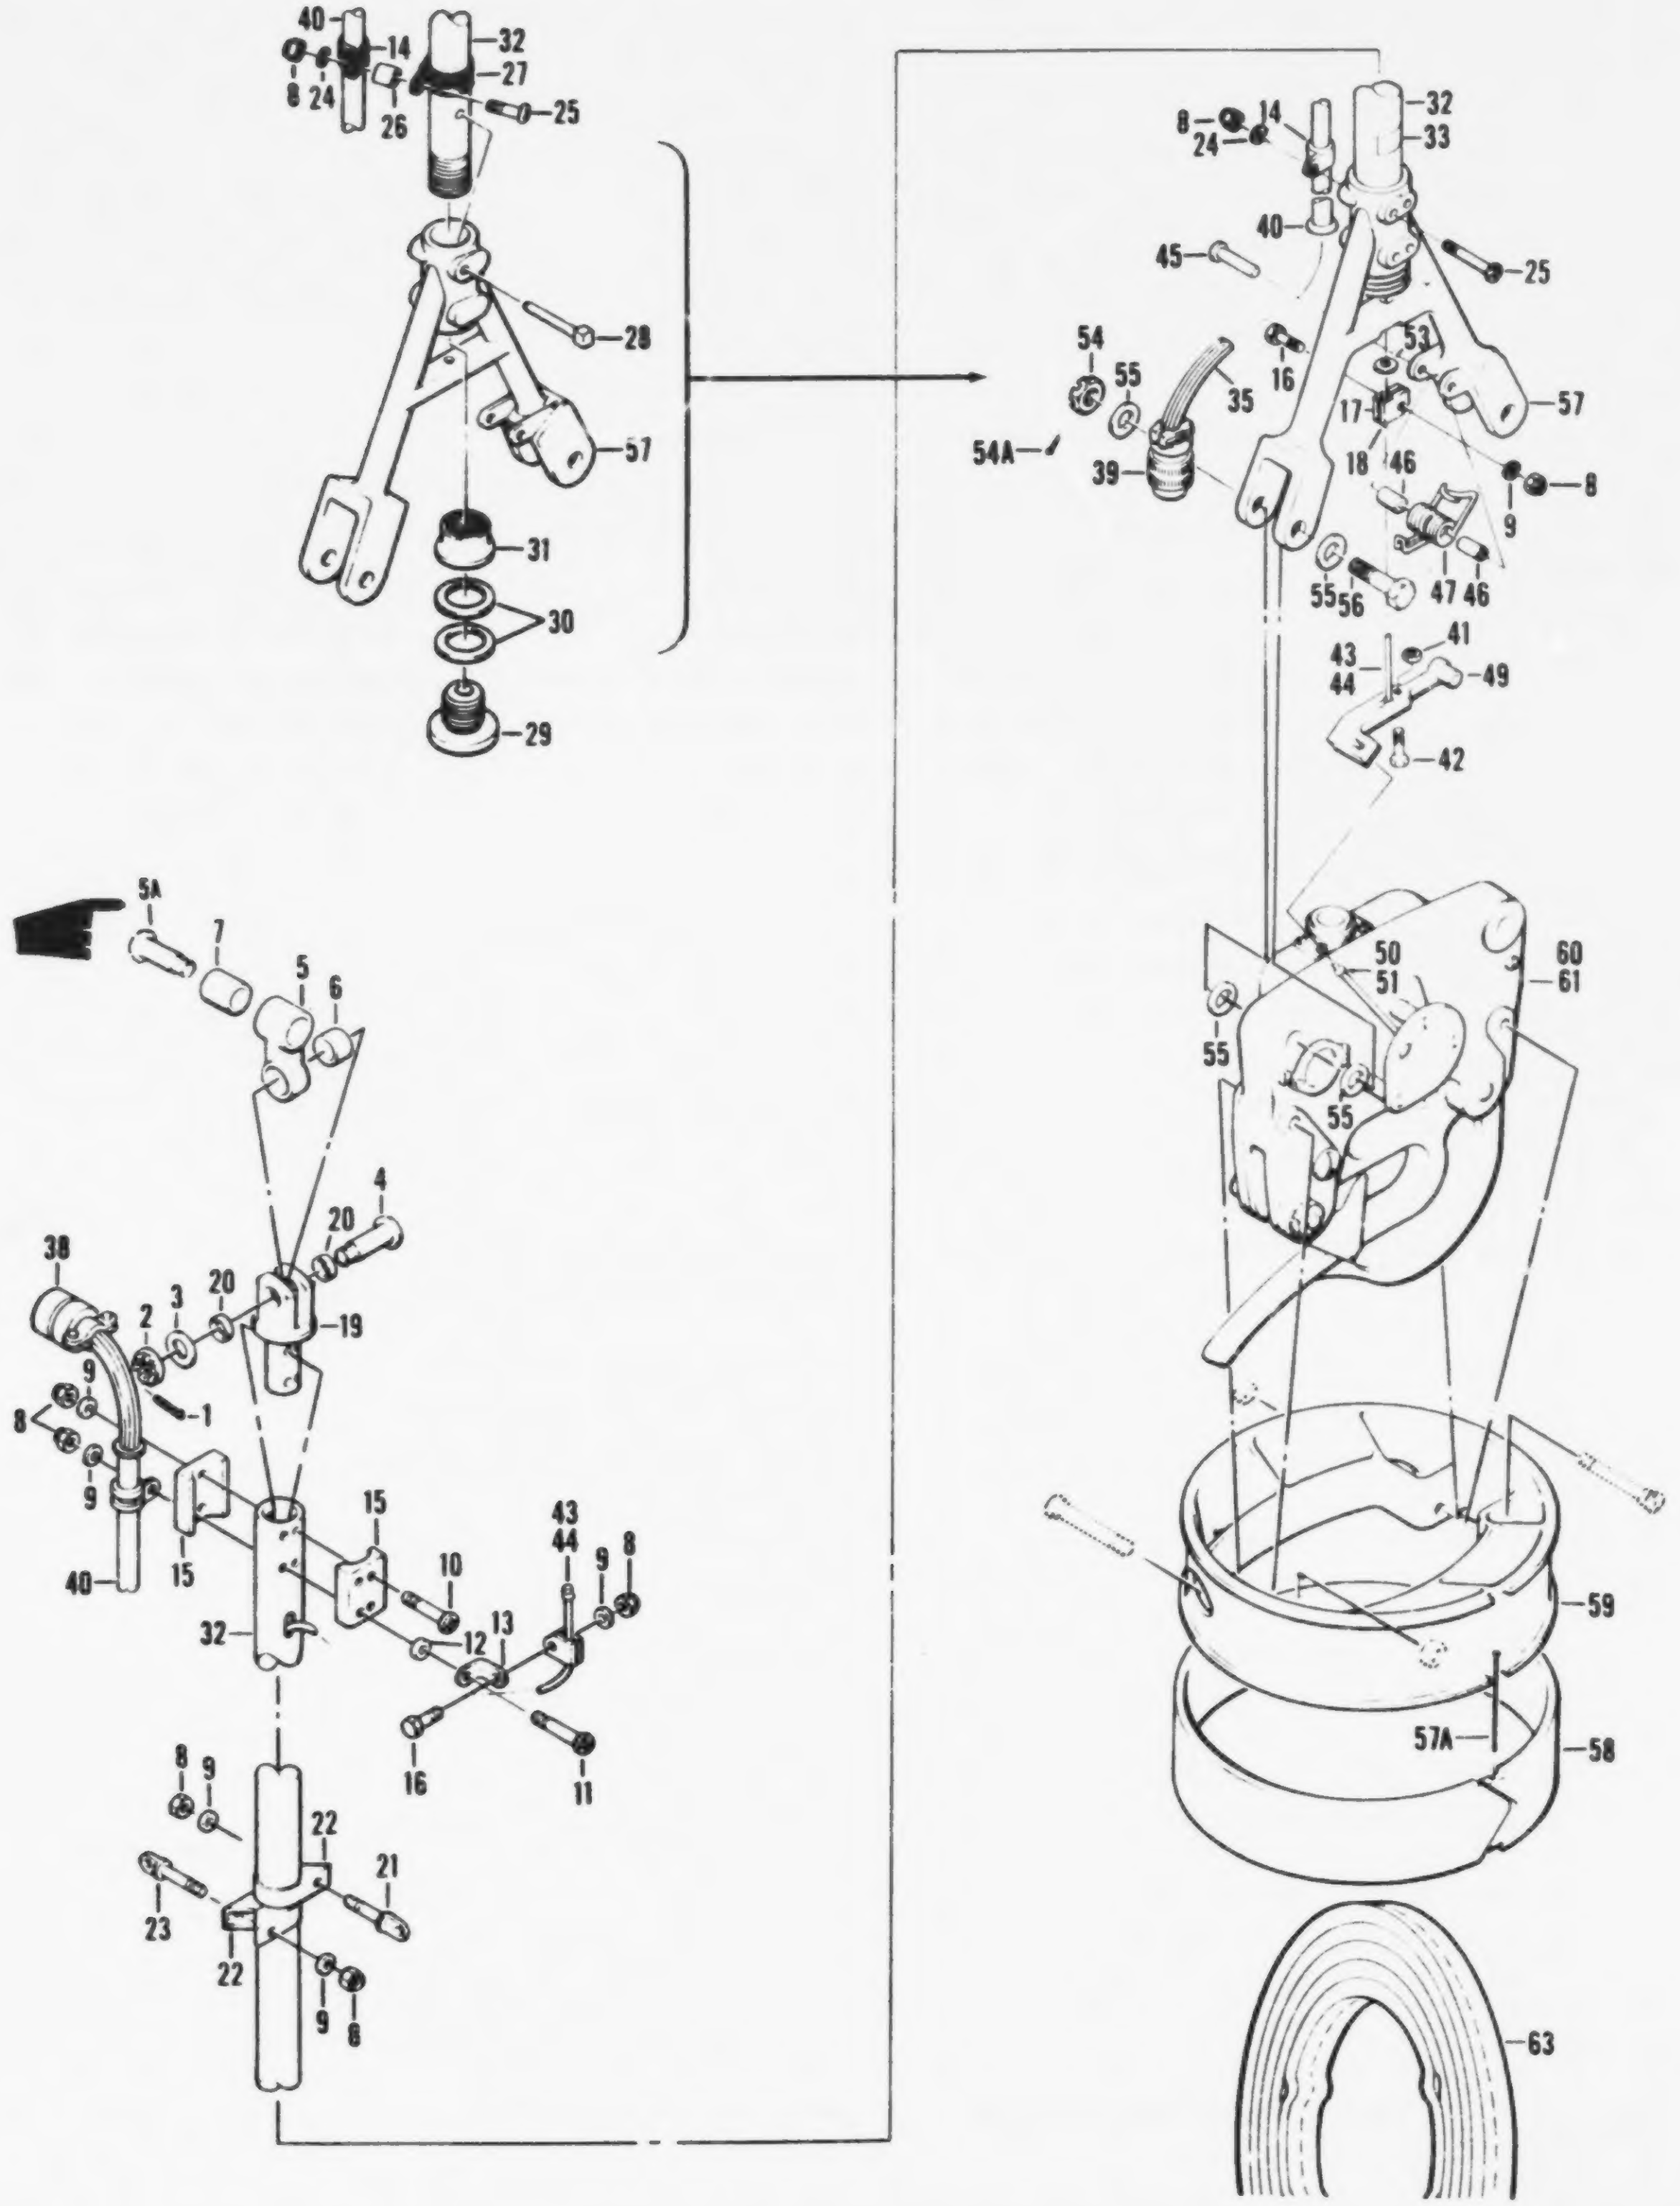
40
14
32
27
8
24
26
25
28
57
31
30
29
8
24
14
32
33
40
45
25
54
55
35
16
53
57
54A
39
17
18
46
8
9
55
56
47
46
43
44
41
49
42
50
51
60
61
55
55
59
57A
58
63
5A
7
5
6
4
38
20
20
3
2
19
1
9
8
9
15
40
15
32
10
43
44
9
8
12
13
16
11
8
9
22
21
23
22
9
8

Figure 416. Suspension Assembly

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER		USABLE ON CODE	U/M	QTY INC IN UNIT
416		PAOFF	1560-00-921-8559	97499	204-072-024-1	SUSPENSION ASSEMBLY CARGO USBL EFF 62-1872 & SUBSEQUENT USBL EFF 64-14101 THRU 65-9421 SEE FIG.414 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
416	1	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER	UHE,UHH,UHM,UHV,UHX	EA	1
416	2	PAOZZ	5310-00-176-8112	88044	AN320-8	.NUT,PLAIN,SLOTTED,H HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	1
416	3	PAOZZ	5310-00-167-0806	88044	AN960C816	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
416	4	PAOZZ	5306-00-151-0812	88044	AN28-23	.BOLT,CLEVIS	UHE,UHH,UHM,UHV,UHX	EA	1
416	5	PA000	3040-00-973-3347	97499	205-070-944-1	.CONNECTING LINK, RIGID	UHE,UHH,UHM,UHV,UHX	EA	1
416	5A	PAOZZ	5306-00-151-0430	88044	AN28-34	..BOLT,CLEVIS	UHE,UHH,UHM,UHV,UHX	EA	1
416	6	PAOZZ	3120-00-995-3064	97499	21-010-15-5-12-5	..BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
416	7	PAOZZ	3120-00-995-8000	97499	21-010-15-5-29-5	..BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	8
416	8	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER, HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	6
416	9	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
416	10	XDOZZ	5305-00-182-1365	88044	AN525-10R26	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
416	11	XDOZZ		88044	AN525-10R30	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
416	12	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
416	13	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHE,UHH,UHM,UHV,UHX	EA	1
416	14	PAOZZ	5340-00-533-3513	81996	EAB700-6	.CLAMP,LOOP	UHE,UHH,UHM,UHV,UHX	EA	2
416	15	PAOZZ	1680-00-722-3940	97499	204-070-027-1	.BLOCK,BEARING,CARGO SUSPENSION	UHE,UHH,UHM,UHV,UHX	EA	1
416	16	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
416	17	PAOZZ	5340-00-771-2301	97499	204-070-972-1	.STRAP,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
416	18	PAOZZ	5340-00-770-9356	97499	204-070-972-2	.STRAP,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
416	19	PA000	1560-00-996-0837	97499	204-072-902-5	.YOKE ASSEMBLY,CARGO SUSPENSION NON ROTATING	UHE,UHH,UHM,UHV,UHX	EA	2
416	20	PAOZZ	3120-00-995-8001	97499	21-010-15-5-8	..BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
416	21	PAOZZ	5306-00-825-1060	88044	AN42BC14A	.BOLT,EYE	UHE,UHH,UHM,UHV,UHX	EA	2
416	22	PAOZZ	5340-00-695-1502	97499	45C20AA16	.CLAMP,LOOP	UHE,UHH,UHM,UHV,UHX	EA	1
416	23	PAOZZ	5306-00-954-3488	97499	204-072-904-1	.BOLT,EYE	UHE,UHH,UHM,UHV,UHX	EA	1
416	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
416	25	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
416	26	PAOZZ	5365-00-684-7923	80205	NAS43DD3-20	.SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
416	27	PAOZZ	5340-00-989-4573	81996	EAB700D16	.CLAMP,LOOP	UHE,UHH,UHM,UHV,UHX	EA	1
416	28	PAOZZ	5315-00-780-9321	97499	204-072-003-1	.PIN,STRAIGHT,HEADED	UHE,UHH,UHM,UHV,UHX	EA	1
416	29	PAOZZ	5365-00-780-7821	97499	204-072-004-1	.BUSHING,MACHINE THREAD	UHE,UHH,UHM,UHV,UHX	EA	2
416	30	PAOZZ	3120-00-088-9748	97499	204-072-005-1	.BEARING,WASHER	UHE,UHH,UHM,UHV,UHX	EA	1
416	31	PAOZZ	5365-00-042-9486	97499	204-072-006-1	.SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
416	32	PAOZZ	1680-00-074-4093	97499	204-072-002-1	.SHAFT,STRAIGHT	UHE,UHH,UHM,UHV,UHX	EA	1
416	33	PAOZZ	9905-00-856-8504	97499	100-024-1M	.PLATE,IDENTIFICATIO	UHE,UHH,UHM,UHV,UHX	EA	1
416	35	A0000		97499	204-075-959-1	.CABLE ASSEMBLY	UHE,UHH,UHM,UHV,UHX	FT	V
416	36A	PBOZZ	6145-00-581-1615	81349	M16878/4BHB0	..WIRE ELEC-BLACK	UHE,UHH,UHM,UHV,UHX	FT	V
416	37A	PBOZZ	6145-00-726-8393	81349	MIL-W-16878/2	..WIRE ELEC-RED	UHE,UHH,UHM,UHV,UHX	EA	1
416	38	PBOZZ	5935-00-557-2577	96906	MS25183A14S7P	..CONNECTOR,PLUG,ELEC		EA	1
416	39	XDOZZ		96906	MS25183A16S5S	..CONNECTOR,PLUG,ELEC - ALTERNATE	UHE,UHH,UHM,UHV,UHX	EA	1
416	39	PAOZZ	5935-00-921-5605	77820	SC06P16S5S	..CONNECTOR,PLUG,ELEC USBL EFF 62-1872 THRU 64-14100	UHH,UHV		

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
416	40	XDOZZ		97499	204-070-037-5	..CONDUIT,METAL,RIGID............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	41	PAOZZ	5310-00-167-1343	88044	AN315-3R	.NUT,PLAIN,HEXAGON...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	42	PAOZZ	5306-00-282-9949	80205	NAS428K3-11	.BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	43	PAOZZ	4010-00-718-6636	97499	204-070-041-1	.WIRE ROPE ASSEMBLY,.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	44	PAOZZ	4030-00-273-3081	96906	MS20664C2	..BALL END,WIRE ROPE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	45	PAOZZ	5315-00-811-9107	96906	MS20392-3C45	.PIN,STRAIGHT, HEADLESS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	46	PAOZZ	5365-00-833-4205	80205	NAS43DD4-23	.SPACER,SLEEVE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
416	47	PAOZZ	5340-00-735-9125	97499	204-070-033-1	.SPRING..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	49	PAOZZ	1680-00-939-7580	97499	204-072-029-1	.LEVER,CARGO,....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	50	PAOZZ	4010-00-718-6632	97499	204-070-040-1	.WIRE ROPE ASSEMBLY,.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	51	PAOZZ	5340-00-085-7403	97499	45C20AAD16	.CLAMP,LOOP......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
416	53	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	54	PAOZZ	5310-00-167-1288	88044	AN310-7	.NUT,PLAIN,CASTELLAT...............UHB,UHC,UHE,UHH,UHM,UHV	EA	2
416	54A	PAOZZ	5315-00-234-1863	96906	MS24665-300	.PIN,COTTER......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
416	55	PAOZZ	5310-00-167-0822	88044	AN960-716	.WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
415	56	PAOZZ	5306-00-275-9550	88044	AN177H22	.BOLT,CLOSE TOLERANC.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
416	57	PAOZZ	1680-00-911-2713	97499	204-070-026-3	.YOKE,CARGO SUSPENSION...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	57A	PAOZZ		96906	MS24665-183	.COTTER PIN......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	58	PAOZZ	1680-00-075-3388	97499	204-072-905-3	.RING,SUSPENSION ASSY............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	59	PAOZZ	1560-00-996-0838	97499	204-072-901-1	.BUMP,CARGO SUSPENSION...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	60	PBOFF	1680-00-967-7639	96603	SP4220-2	.HOOK ASSEMBLY,CARGO SUSPENSION USBL EFF (UH-1B) 62-1872 & SUBSEQUENT USBL EFF (UH-1C) 64-14101 THRU 64-14191 SEE FIG. 417 FOR BREAKDOWN.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	61	PBOFF	1680-00-939-7582	97499	204-072-912-1	.HOOK ASSEMBLY,CARGO RELEASE SEE FIG.417 FOR BREAKDOWN OF PN 204-072-912-1 (SP4405-1)..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
416	63	PBOZZ	3940-00-675-5001	MILS8	053	.SLING,ENDLESS U/W CARGO HOOK....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

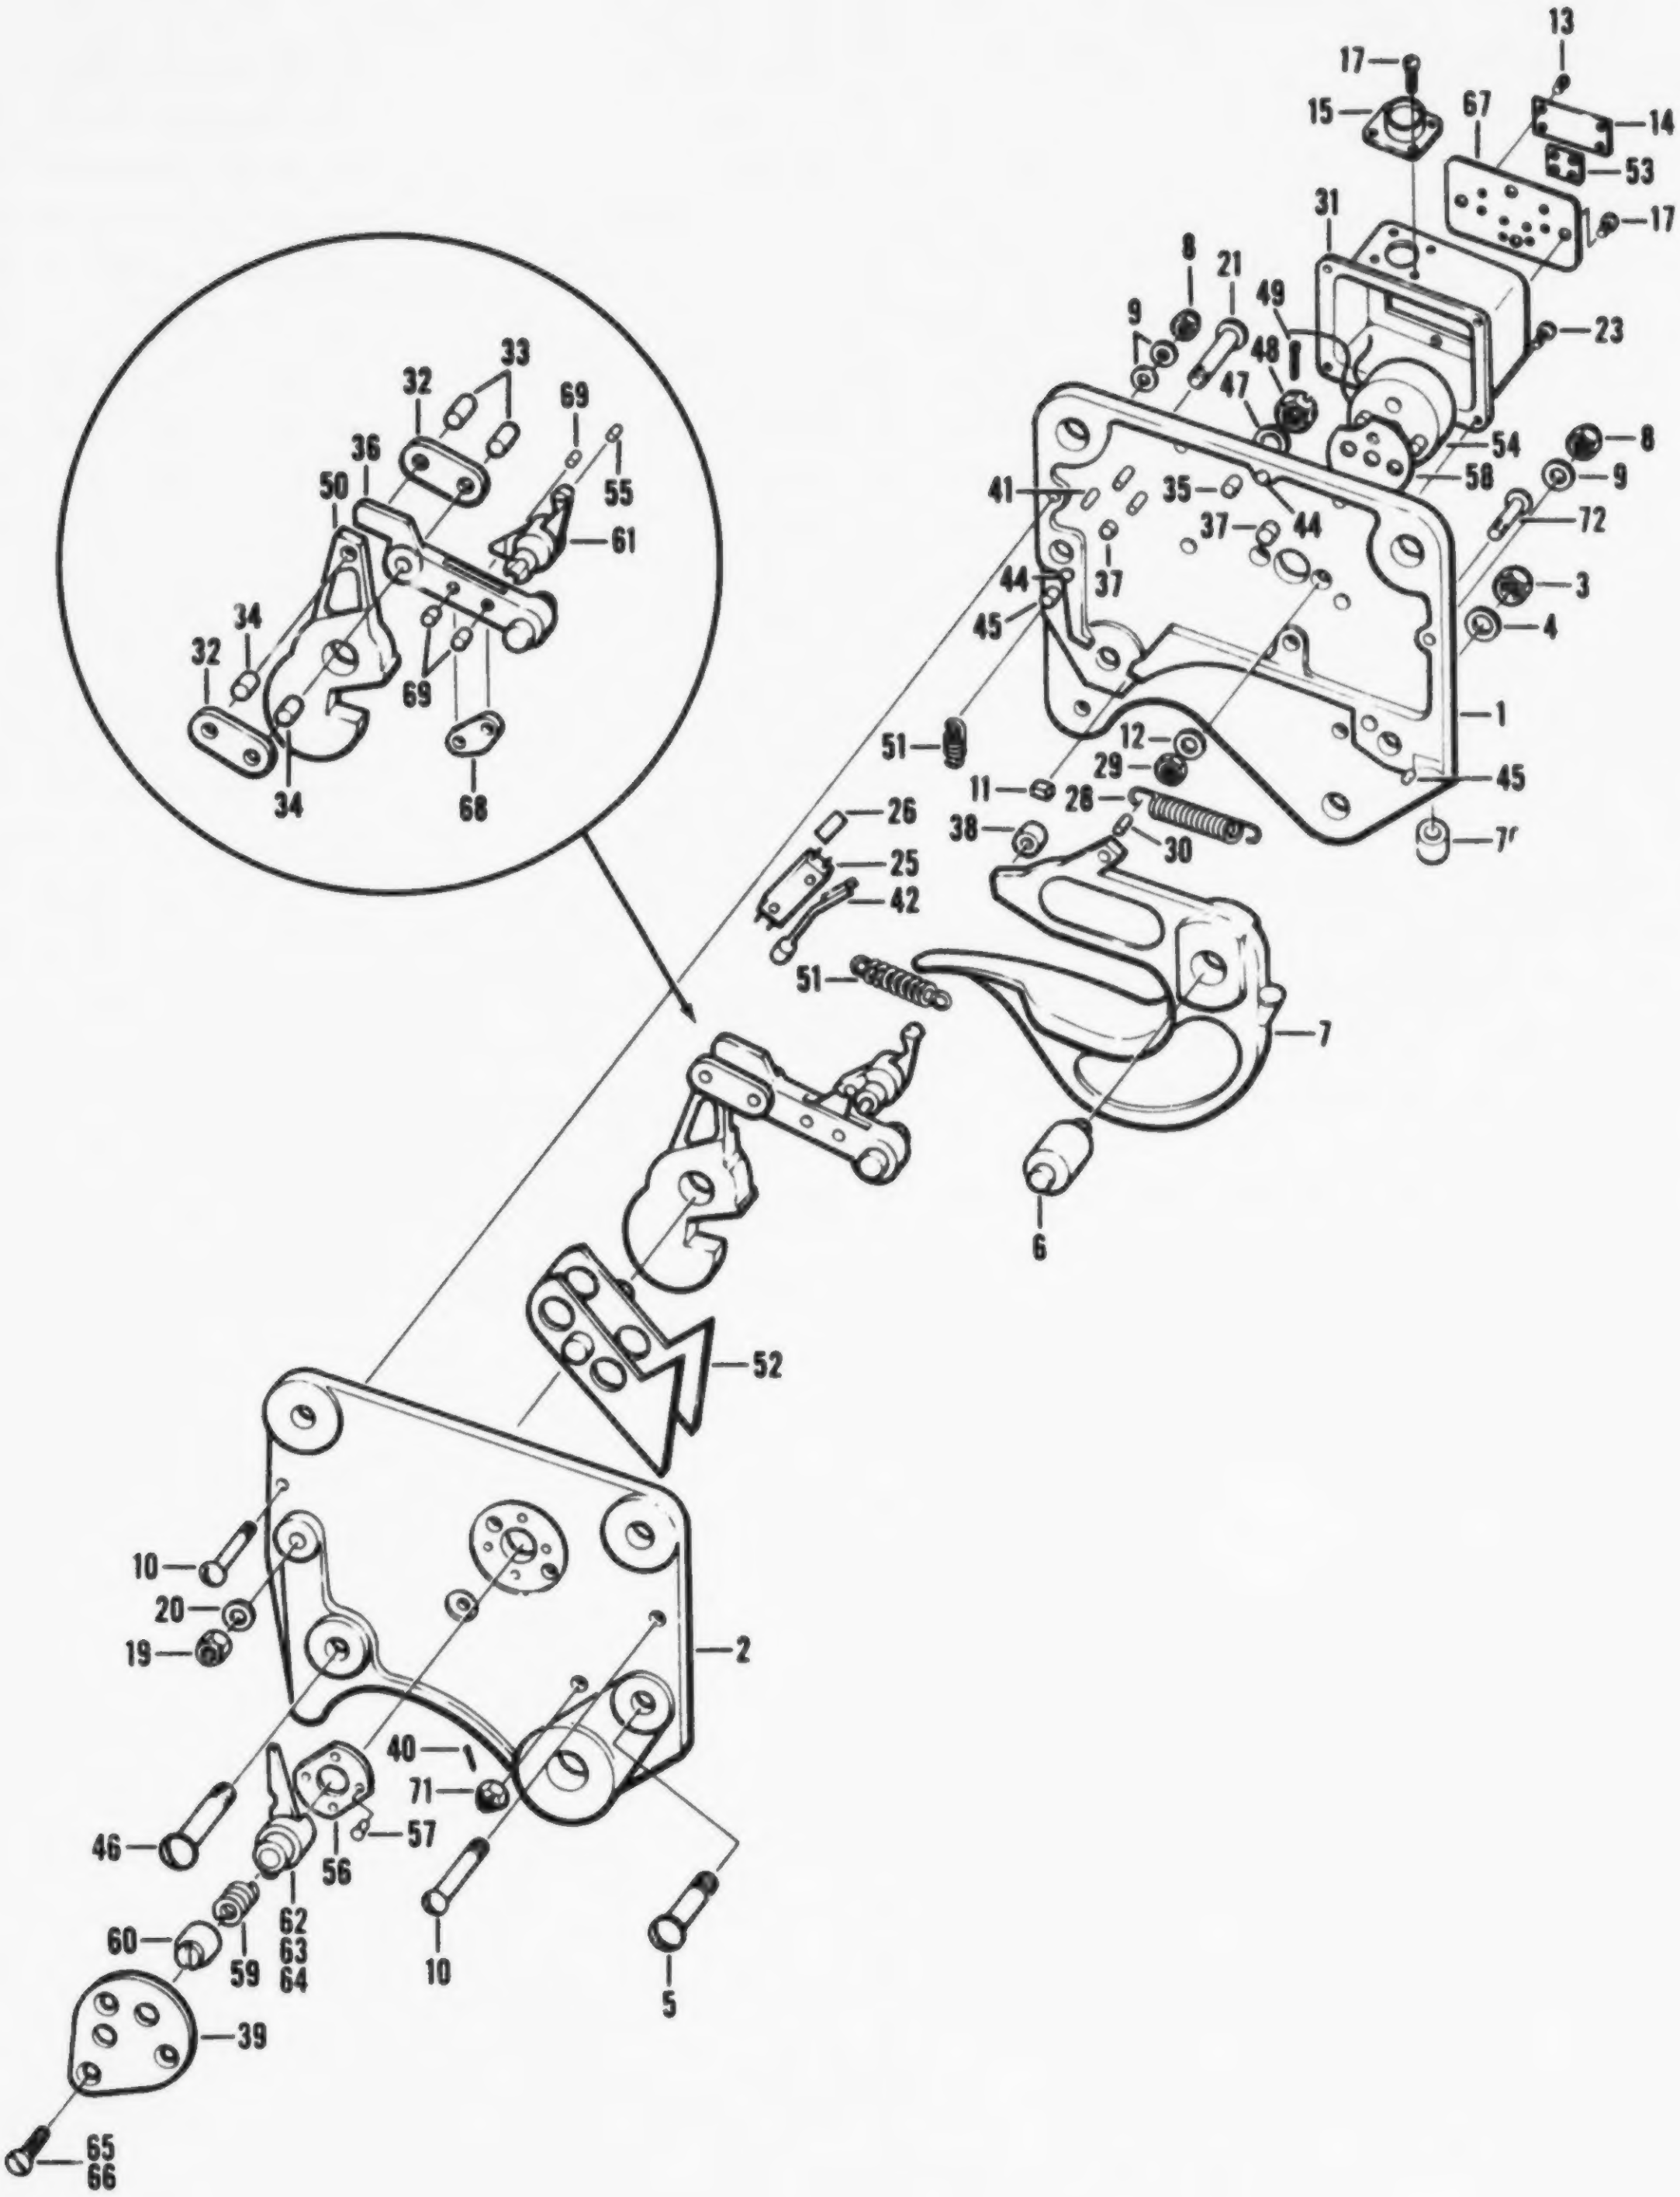
13
17
15
67
14
53
17
31
8
21
49
23
9
48
47
54
8
58
9
41
35
44
72
37
37
44
3
45
4
1
51
12
29
45
11
28
30
26
38
7
25
42
51
7
6
52
10
20
19
2
40
71
57
46
56
62
63
64
60
59
10
5
39
65
66
33
32
69
36
55
50
61
34
32
69
34
68

Figure 416A. Hook, External Cargo

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
416A		PBOFF	1680-01-143-0045	58822	HAP-0001-01-1	HOOK,ASSEMBLY,CARGO	UHH,UHM,UHV	EA	1
416A	1	XDFZZ		58822	HAP-0002-01	.CASE	UHH,UHM,UHV	EA	1
416A	2	XDFZZ		58822	HAP-0005-01	.COVER	UHH,UHM,UHV	EA	1
416A	3	PAFZZ	5310-00-660-3381	96906	MS21083N5	.NUT,SELF-LOCKING	UHH,UHM,UHV	EA	1
416A	4	PAFZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT	UHM,UHV	EA	1
416A	5	PAFZZ	5305-01-164-8512	58822	HAP-0021-01	.SCREW,SHOULDER	UHH,UHM,UHV	EA	1
416A	6	XDFZZ		58822	HAP-0032-01	.PIN	UHH,UHM,UHV	EA	1
416A	7	XDFZZ		58822	HAP-0003-01	.BEAM	UHH,UHM,UHV	EA	1
416A	8	PAFZZ	5310-00-902-6676	96906	MS21083N3	.NUT,SELF-LOCKING	UHH,UHM,UHV	EA	2
416A	9	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHH,UHM,UHV	EA	2
416A	10	PAFZZ	5306-00-156-2525	88044	AN23-23A	.BOLT,CLEVIS	UHH,UHM,UHV	EA	2
416A	11	XDFZZ		58822	HAP-0041-01	.BUMPER	UHH,UHM,UHV	EA	1
416A	12	PAFZZ	3120-01-163-5938	58822	HAP-0029-01	.BUSHING,SLEEVE	UHH,UHM,UHV	EA	2
416A	13	PAOZZ	5305-00-175-3230	88044	AN535-2-3	.SCREW,DRIVE	UHH,UHM,UHV	EA	1
416A	14	XDFZZ		58822	HAP-0024-01	.PLATE	UHH,UHM,UHV	EA	1
416A	15	PAFZZ	5935-00-636-5918	88044	AN3102E16S5P	.CONNECTOR,RECEPTACLE	UHH,UHM,UHV	EA	1
416A	17	PAFZZ	5305-00-947-2169	96906	MS35275-217	.SCREW,MACHINE	UHH,UHM,UHV	EA	8
416A	19	PAFZZ	5310-00-926-1852	96906	MS21083N6	.NUT,SELF-LOCKING	UHH,UHM,UHV	EA	1
416A	20	PAFZZ	5310-00-167-0838	88044	AN960-716L	.WASHER,FLAT	UHH,UHM,UHV	EA	1
416A	21	PAFZZ	5305-01-166-6138	58822	HAP-0020-01	.SCREW,SHOULDER	UHH,UHM,UHV	EA	1
416A	23	PAFZZ	5305-00-939-9231	96906	MS35275-244	.SCREW,MACHINE	UHH,UHM,UHV	EA	4
416A	25	PAFZZ	5930-00-613-4438	91929	1TB1-1	.SWITCH,SENSITIVE	UHH,UHM,UHV	EA	1
416A	26	PAOZZ		06383	PLT1 5M-M	.TIE DOWN	UHH,UHM,UHV	EA	1
416A	28	PAFZZ	5360-01-168-0931	58822	HAP-0018-01	.SPRING,HELICAL,EXTE	UHH,UHM,UHV	EA	1
416A	29	PAFZZ		96906	MS93956-09	.NUT	UHH,UHM,UHV	EA	2
416A	30	PAFZZ	5315-01-063-2512	96906	MS9390-280	.PIN,STRAIGHT HEADLE	UHH,UHM,UHV	EA	1
416A	31	XDFZZ		58822	HAP-0009-01	.COVER	UHH,UHM,UHV	EA	1
416A	32	PBFZZ	4010-01-157-5417	58822	HAP-0034-01	.LINK,PIVOT,HOOK CAR	UHH,UHM,UHV	EA	2
416A	33	PAFZZ	5315-01-159-9701	58822	HAP-0051-01	.PIN,STRAIGHT HEADLE	UHH,UHM,UHV	EA	2
416A	34	PAFZZ	1680-01-159-9700	58822	HAP-0036-01	.RACE,PIVOT LINK	UHH,UHM,UHV	EA	2
416A	35	PAFZZ	5315-01-019-9306	96906	MS171590	.PIN,SPRING	UHH,UHM,UHV	EA	1
416A	36	PAFFF	1680-01-160-5619	58822	HAP-0004-01-1	.LEVER ASSY, HOOK CAR	UHH,UHM,UHV	EA	1
416A	37	PAFZZ	5315-01-165-3541	58822	HAP-0026-01	.PIN,SHOULDER,HEADLE	UHH,UHM,UHV	EA	2
416A	38	PAFZZ	1680-01-157-5416	58822	HAP-0038-01	.STOP,CARGO HOOK	UHH,UHM,UHV	EA	1
416A	39	XDFZZ		58822	HAP-0028-01	.COVER	UHH,UHM,UHV	EA	1
416A	40	PAFZZ	5315-00-234-1619	96906	MS24665-170	.PIN,COTTER	UHH,UHM,UHV	EA	1
416A	41	PAFZZ	5315-00-815-9366	96906	MS16555-622	.PIN,STRAIGHT,HEADLE	UHH,UHM,UHV	EA	3
416A	42	XDFZZ		58822	HAP-0040-1	.ACTUATOR	UHH,UHM,UHV	EA	1
416A	44	PAFZZ	5315-00-899-3103	96906	MS9390-300	.PIN,STRAIGHT	UHH,UHM,UHV	EA	3
416A	45	PAFZZ	5315-00-753-3894	96906	MS16562-238	.PIN,SPRING	UHH,UHM,UHV	EA	2
416A	46	PAFZZ	5306-00-151-0941	88044	AN27-34	.BOLT,CLEVIS	UHH,UHM,UHV	EA	1
416A	47	PAFZZ	5310-00-167-0838	88044	AN960-716L	.WASHER,FLAT	UHH,UHM,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
416A	48	PAFZZ	5310-00-176-8111	88044	AN320-7	.NUT,PLAIN,SLOTTED	UHH,UHM,UHV	EA	1
416A	49	PAFZZ	5315-01-061-2060	96906	MS24665-285	.PIN,COTTER	UHH,UHM,UHV	EA	1
416A	50	PBFFF	1680-01-155-0641	58822	HAP-0008-01-1	.LATCH,ASSEMBLY HOOK	UHH,UHM,UHV	EA	1
416A	51	PAFZZ	5360-01-165-1572	58822	HAP-0019-01	.SPRING,HELICAL,EXTE	UHH,UHM,UHV	EA	2
416A	52	XDFZZ		58822	HAP-0006-01	.KEEPER	UHH,UHM,UHV	EA	1
416A	53	XDFZZ		58822	HAP-0025-01	.TAG	UHH,UHM,UHV	EA	1
416A	54	PAFZZ	5945-01-162-4123	58822	HAP-0045-01-1	.SOLENOID,ELECTRICAL	UHH,UHM,UHV	EA	1
416A	55	PAFZZ	5315-00-682-1726	96906	MS16555-617	.PIN,STRAIGHT HEADLE	UHH,UHM,UHV	EA	1
416A	56	XDFZZ		58822	HAP-0023-01	.SUPPORT	UHH,UHM,UHV	EA	1
416A	57	PAFZZ	5320-00-584-0672	96906	MS20426AD3-6	.RIVET,SOLID	UHH,UHM,UHV	EA	4
416A	58	XDFZZ		58822	HAP-0022-01	.RETAINER	UHH,UHM,UHV	EA	1
416A	59	PAFZZ	5360-01-165-1575	58822	HAP-0017-01	.SPRING,ELECTRICAL	UHH,UHM,UHV	EA	1
416A	60	XDFZZ		58822	HAP-0013-01	.INDICATOR	UHH,UHM,UHV	EA	1
416A	61	XDFZZ		58822	HAP-0011-01	.BELLCRANK	UHH,UHM,UHV	EA	1
416A	62	XDFZZ		58822	HAP-0012-01	.LEVER	UHH,UHM	EA	1
416A	63	PAFZZ	5310-00-193-7577	96906	MS35333-36	.WASHER,LOCK	UHH,UHM,UHV	EA	1
416A	64	PAFZZ	5305-00-206-0541	88044	AN515-4-5	.SCREW,MACHINE	UHH,UHM,UHV	EA	1
416A	65	PAFZZ	5365-01-163-5951	58822	HAP-0042-01	.SPACER,SLEEVE	UHH,UHM,UHV	EA	3
416A	66	PAOZZ	5305-00-957-2635	96906	MS35191-277	.SCREW,MACHINE	UHH,UHM,UHV	EA	3
416A	67	XDFZZ		58822	HAP-0043-01	.COVER	UHH,UHM,UHV	EA	1
416A	68	PBFZZ	4010-01-157-5418	58822	HAP-0037-01	.LINK,TRIP,CARGO HOOK	UHH,UHM,UHV	EA	1
416A	69	XDFZZ		58822	HAP-0052-1	.DOWEL	UHH,UHM,UHV	EA	3
416A	70	PAFZZ	5365-01-165-3726	58822	HAP-0050-01	.BUSHING,RUBBER	UHH,UHM,UHV	EA	1
416A	71	PAFZZ	5310-00-167-1284	88044	AN310-3	.NUT,PLAIN,CASTELLAT	UHH,UHM,UHV	EA	1
416A	72	PAFZZ	5306-00-151-2301	88044	AN23-22	.BOLT,CLEVIS	UHH,UHM,UHV	EA	1

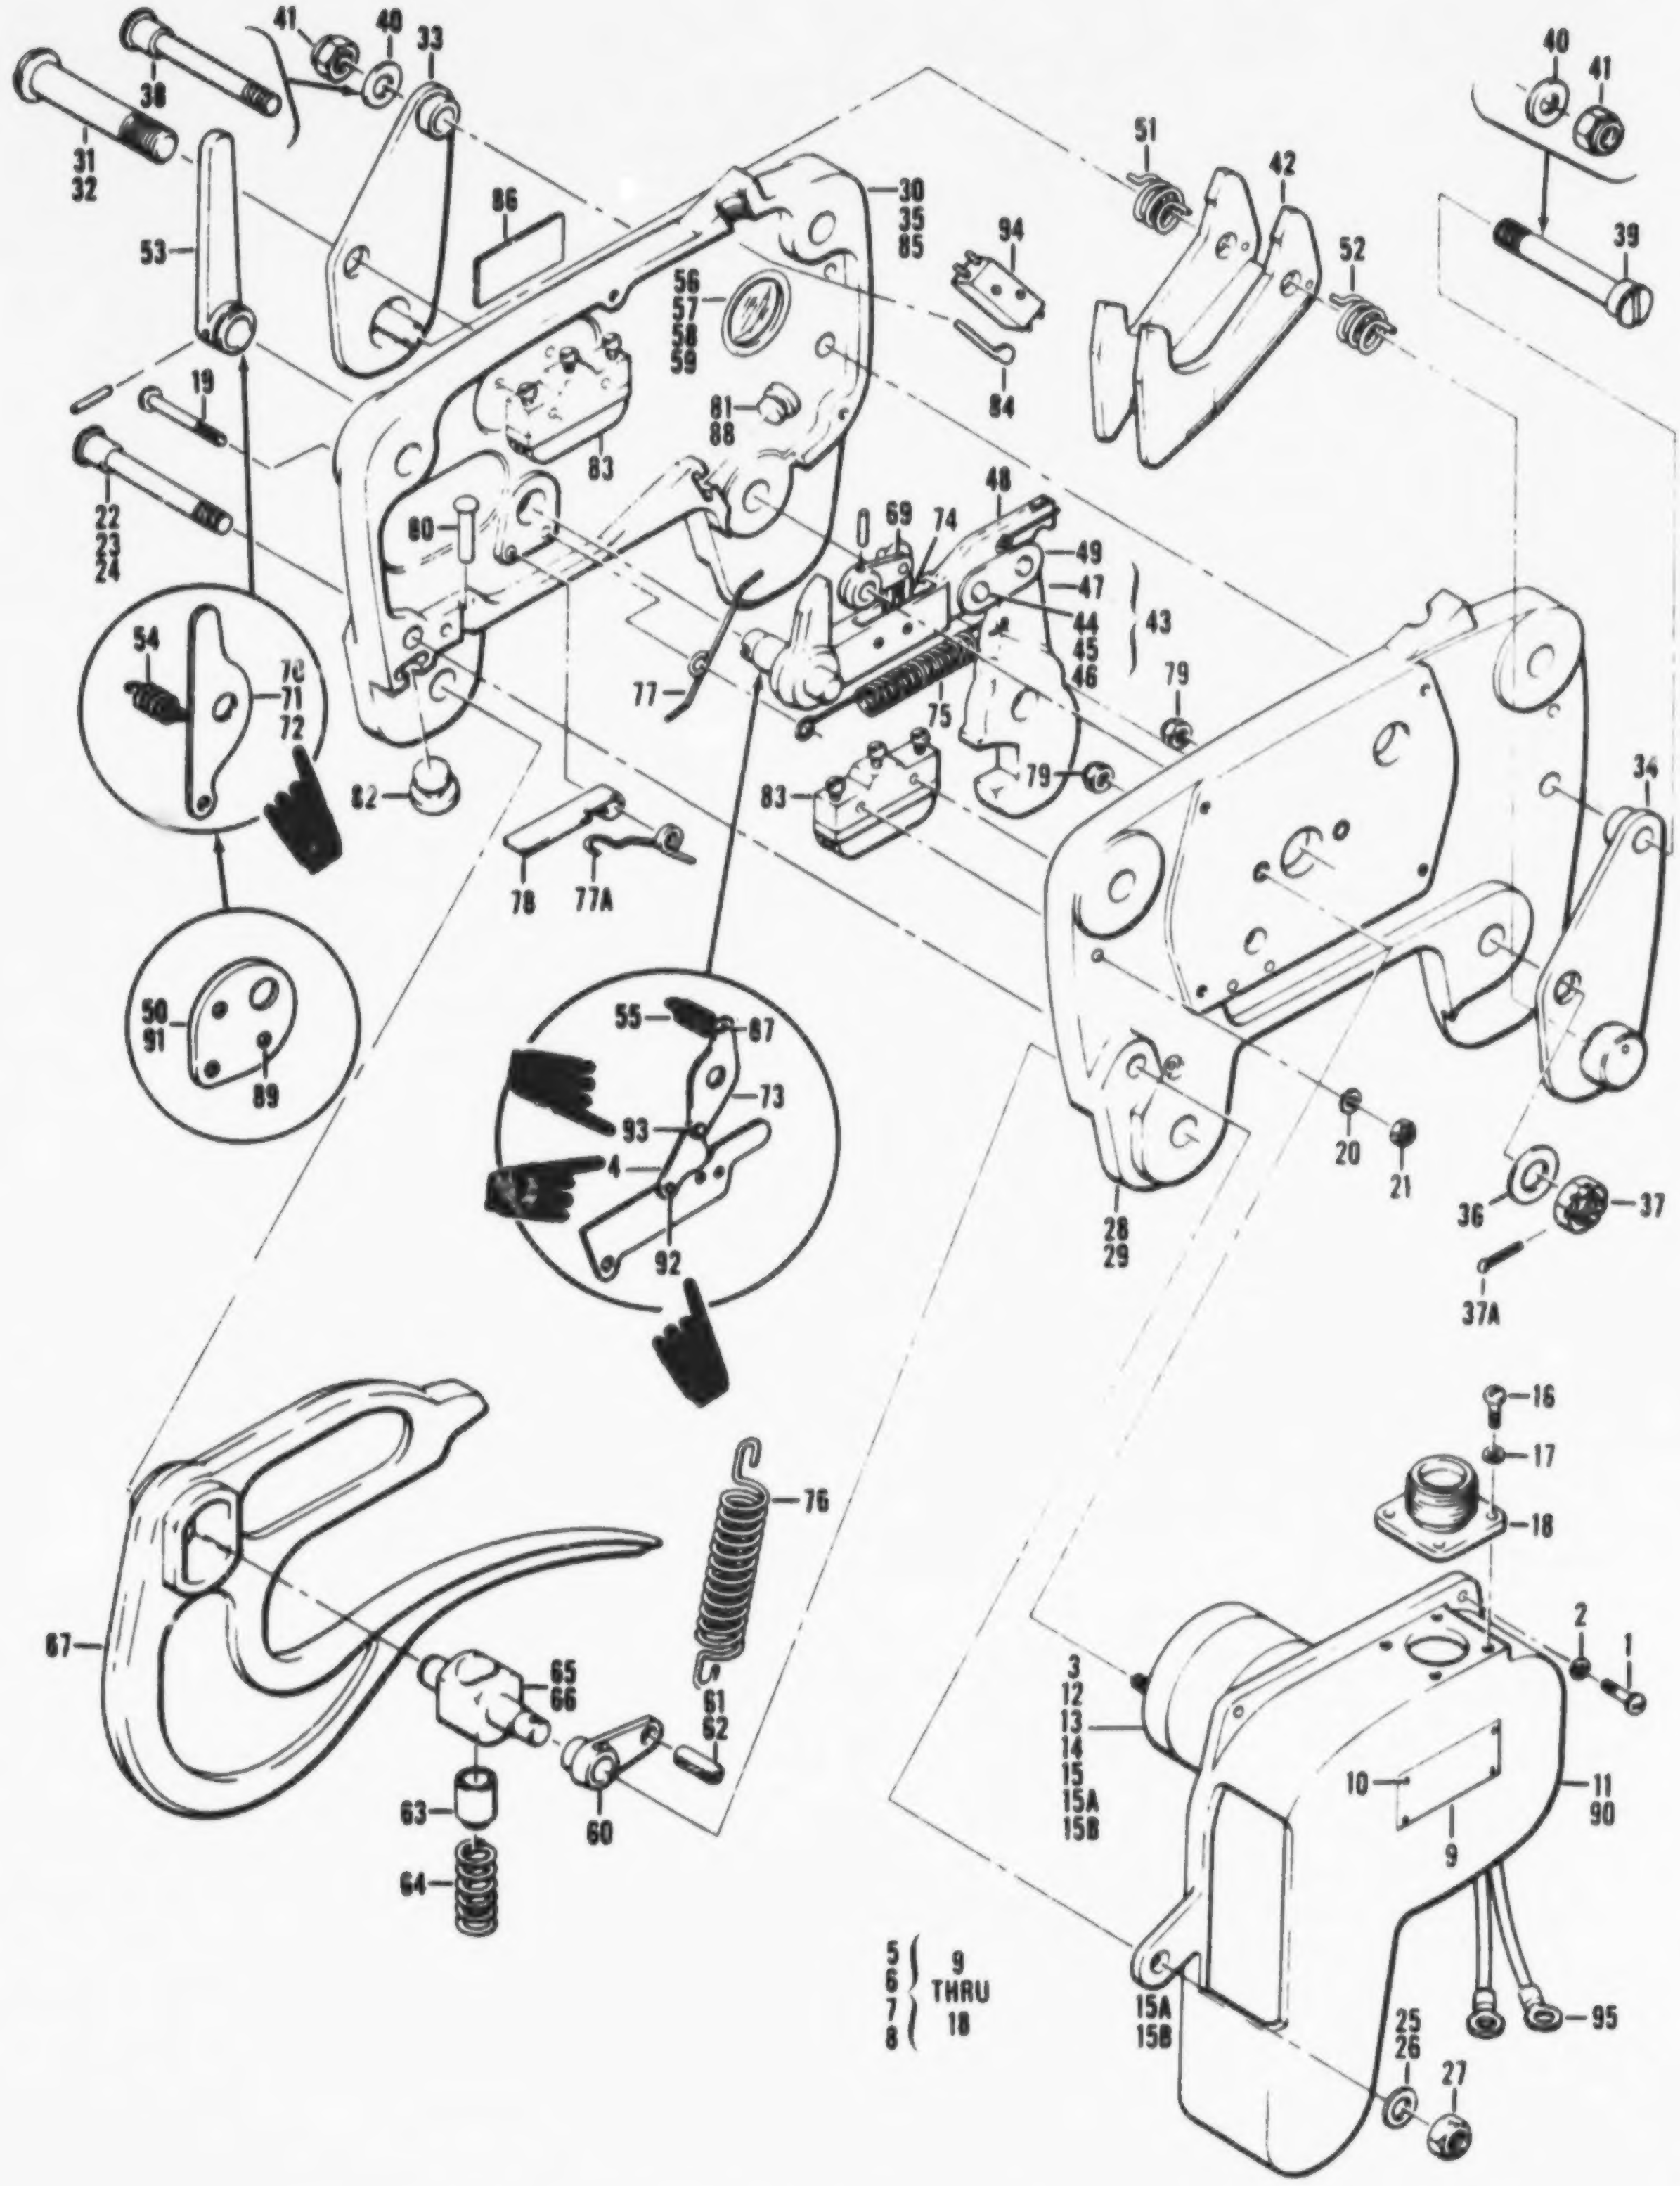
41
40
33
38
31
32
53
86
30
35
85
56
57
58
59
94
51
42
52
40
41
39
84
81
88
83
19
22
23
24
80
69
74
48
49
47
44
45
46
43
54
70
71
72
77
75
79
79
82
83
34
78
77A
50
91
89
55
87
73
93
4
92
20
21
28
29
36
37
37A
16
17
18
76
67
65
66
61
62
60
63
64
3
12
13
14
15
15A
15B
2
1
10
11
90
9
5 6 7 8 { 9 THRU 18
15A
15B
25
26
27
95

Figure 417. Release Assembly, Cargo

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
417		PBOFF	1680-00-718-6633	96603	SP4100-3	HOOK ASSEMBLY,CARGO RELEASE USBL EFF 60-3546 THRU 60-3619 SEE FIG 415 FOR NHA.................. UHB	EA	1
417		PBOFF	1560-00-875-7991	96603	SP4220-1	HOOK ASSEMBLY CARGO RELEASE USBL EFF 61-686 THRU 61-803 SEE FIG 415 FOR NHA.................. UHB	EA	1
417		PBOFF	1680-00-967-7639	96603	SP4220-2	HOOK ASSEMBLY,CARGO SUSPENSION USBL EFF UH-1B 62-1872 & SUBSEQUENT USBL EFF 64-13901 U/W PN 204-072-912-1 SEE FIG 416 FOR NHA 64-13901 U/O PN 204-072-912-1 SEE FIG 416 FOR NHA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417		PBOFF	1680-00-939-7582	97499	204-072-912-1	HOOK ASSEMBLY,CARGO RELEASE USBL EFF (UH-1B) 62-1872 & SUBSEQUENT USBL EFF (UH-1C) 64-14101 THRU 65-9421 SEE FIG 416 FOR NHA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	1	PAFZZ	5305-00-145-7011	88044	AN503-8-8	SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
417	2	PAFZZ	5310-00-045-3299	96906	MS35338-42	WASHER,LOCK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
417	3	XBFZZ	1680-00-940-9214	96603	SP2969-1	RETAINER,SOLENOID U/O 204-072-912-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	4	MDFZZ	DELETED	96603	SP1710-1	LINK,SOLENOID,CARGO ASSY U/O PN SP4100-3 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	5	XBFFF		96603	SP2267	SOLENOID AND COVER ASSEMBLY U/O PN SP4100-3..........UHB	EA	1
417	6	PAFFF	5945-00-869-9020	96603	SP3342-1	SOLENOID AND COVER ASSY U/O PN SP4220-1..........UHB	EA	1
417	7	XBFFF		96603	SP3342-2	SOLENOID AND COVER ASSY U/O PN SP4220-2 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	8	XBFFF		96603	SP3548-2	SOLENOID AND COVER ASSY U/O PN 204-072-912-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	9	PAFZZ	9905-00-723-2588	96603	SK145	..PLATE,IDENTIFICATIO U/O SP3548-2 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	10	PAFZZ	5305-00-175-3230	96906	MS21318-14	..SCREW,DRIVE U/O PN SP3548-2....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
417	11	XBFZZ	2925-00-925-7154	96603	SP3420-1	..COVER,ACCESS U/O PN SP3548-2 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	12	PAFZZ	5945-00-977-5760	96603	SP519	..SOLENOID,ELECTRICAL U/O PN SP2267,SP3342-1,& -2 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	13	PAFFF	5945-00-948-0664	96603	SP2967-1	..SOLENOID,ELECTRICAL U/O PN SP3548-2 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	14	MDFZZ		96603	SP1705-1	...PIN,STRAIGHT,HEADLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	15	MDFZZ		96603	11021-1	...SPACER,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	15A	XAFZZ		96603	SP2967-3	...SOLENOID,ELECTRICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	15B	PAFZZ	5935-00-801-6616	96906	MS3102R14S7P	..CONNECTOR,RECEPTACL ELECTRICAL U/O PN SP3548-2 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	16	PAFZZ	5305-00-543-5058	96906	MS35265-16	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
417	17	PAFZZ	5310-00-543-2410	96906	MS35338-40	..WASHER,LOCK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
417	18	XDFZZ		71468	CA3102R16S5P	..CONNECTOR,RECEPT ELECTRICAL....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	19	PAFZZ	5306-00-151-1972	88044	AN23-20	.BOLT,CLEVIS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
417	20	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
417	21	PAFZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
417	22	PAFZZ	5306-00-144-3863	88044	AN25-27	.BOLT,CLEVIS U/O PN SP4100-3..........UHB	EA	1
417	23	PAFZZ	5306-00-151-3539	88044	AN25-28A	.BOLT,CLEVIS U/O PN SP4220-1..........UHB	EA	1
417	24	XDFZZ		96603	SP2642-2	.BOLT,CLEVIS..........UHB,UHC,UH[illegible]HH,UHM,UHV,UHX	EA	1
417	25	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........UHB,UHC,UHM	EA	1
417	26	PAFZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT..........UHH,UHV	EA	1
417	27	PAFZZ	5310-00-880-3381	96906	MS21083N5	NUT,SELF-LOCKING, HEXAGON.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
417	28	XBFFF		96603	SP3183-1	CASE AND COVER ASSY	UHB	EA	1
417	29	XBFFF		96603	SP3547-1	CASE AND COVER ASSY U/O PN SP4405-1 SEE FIG 418 FOR BREAKDOWN	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	30	XBFZZ	1680-00-869-8950	96603	SP3185-1	.CARGO RELEASE U/O PN SP3183-1	UHB	EA	
417	31	PAFZZ	5306-00-144-3865	88044	AN25-29	BOLT, CLEVIS	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	32	PAFZZ	5306-00-151-0941	88044	AN27-34	BOLT, CLEVIS	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	33	PAFZZ	1680-00-066-9403	96603	SP2546-1R	PLATE, PIVOT, REEL U/O PN 204-072-912-1	UHB, UHC, UHE, UHH, UHM UHV, UHX	EA	1
417	34	PAFZZ	1680-00-066-9402	96603	SP2546-1L	PLATE, PIVOT, REEL U/O PN 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	35	XDFZZ		96603	SP1706-1	SPACER, SLEEVE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	36	PAFZZ	5310-00-167-0822	88044	AN960-716	WASHER, FLAT	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	37	PAFZZ	5310-00-176-8111	81352	AN320-7	NUT SLOTTED, HEXAGON	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	37A	PAOZZ	5315-00-234-1863	96906	MS24665-300	.PIN, COTTER	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	38	PAFZZ	5306-00-156-2226	88044	AN26-34	BOLT, CLEVIS	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	39	PAFZZ	5305-00-027-0042	96603	SP2642-1	.SCREW, SHOULDER	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	40	PAFZZ	5310-00-167-0821	88044	AN960-616	.WASHER, FLAT U/O PN SP4220-1, -2 & 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	41	PAFZZ	5310-00-960-0039	96906	MS21044N6	.NUT, SELF-LOCKING, HEXAGON U/O PN SP4220-1 & 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	42	PAFFF	1680-00-066-9399	96603	SP3291-1	.LATCH, RELEASE U/O PN SP4220-1, & 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	43	PAFFF	1680-00-923-2766	96603	SP2978-1	.LATCH AND LEVER U/O PN SP4220-1 & 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	44	XDFZZ		96603	SP1683-1	..PIN, STRAIGHT, HEADLESS	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	2
417	45	PAFZZ	3110-00-944-1768	96603	SP1673-1	..RING, BEARING, INNER	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	2
417	46	PAFZZ	3110-00-183-6716	96906	MS17131-7	..BEARING, ROLLER NEEDLE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	2
417	47	XBFZZ	1680-00-946-2590	96603	SP2950-1	..LATCH, CARGO RELEASE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	48	XBFZZ	1680-00-940-9229	96603	SP2979-1	..LEVER, INTERNAL	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	49	PAFZZ	1680-00-940-9213	96603	SP1684-1	..LINK, CARGO RELEASE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	2
417	50	XDFZZ	1680-00-436-9178	96603	SP2972-1	.COVER, RELEASE U/O PN 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	51	PAFZZ	5360-00-976-0985	96603	SP1183-1L	.SPRING, CARGO RELEASE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	52	PAFZZ	5360-00-976-0984	96603	SP1183-1R	.SPRING, CARGO RELEASE	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	53	PAFZZ	1680-00-677-3661	96603	SP404	.LEVER, HAND RELEASE CARGO	UHB	EA	1
417	54	PAFZZ	5360-00-946-4223	96603	SP1719-1	.SPRING, HELICAL, TORSION U/O PN 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	55	PAFZZ	5360-00-946-4222	96603	SP1718-1	.SPRING, HELICAL, EXTENSION USBL EFF UH-1B 62-1872 & SUB UH-1C 64-14101 THRU 65-9421	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	56	MDFZZ	5305-00-104-4086	96603	SP584	.SCREW	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	57	PAFZZ	5340-00-973-3730	96603	SP804-1	.PLUG, PROTECTIVE, DUST AND MOISTURE SEAL	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	58	PAFZZ	1680-00-976-0982	96603	SP805-2	.COVER, ACCESS	UHB	EA	1
417	59	PAFZZ	5315-00-823-8745	96906	MS16562-215	.PIN, SPRING	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	60	PAFZZ	1680-00-076-0346	96603	SP1180-1	.LEVER U/O PN 204-072-912-1	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	61	PAFZZ	5315-00-881-2253	96906	MS16562-221	PIN, SPRING U/O PN SP4220-1 & -2	UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
417	62	PAFZZ	5315-00-058-9747	96906	MS16562-222	PIN, SPRING U/O PN SP4220-1, -2, & SP4405-1		EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						.... UHB,UHC,UHE,UHH,UHM,UHV,UHX		
417	63	PAFZZ	1680-00-975-7136	96603	SP397	.PLUNGER .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	64	PAFZZ	5360-00-630-5664	96603	SP406	.SPRING,HELICAL,COMP .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	65	XBFZZ	1680-00-975-7137	96603	SP398	.TRUNNION U/O PN SP4100-3 .... UHB	EA	1
417	66	PAFZZ	1680-00-076-0347	96603	SP1181-1	.TRUNNION U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	67	PBFZZ	1680-00-065-9398	96603	SP3289-1	BEAM,LOAD U/O PN 204-072-912-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	69	XDFZZ	1680-00-975-7138	96603	SP403	.ARM,SOLENOID U/O PN SP4100-3,SP4220-1,& -2 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	70	PAFFF	1680-00-940-9231	96603	SP2974-1	ARM ASSY,RELEASE U/O PN SP4100-3,& SP4220-1,& -2 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	71	XBFZZ	1680-00-020-8311	96603	SP2974-3	ARM,CARGO RELEASE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	72	MDFZZ	DELETED	96603	SP1709-2	.PIN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	73	PAFZZ	1680-00-940-9230	96603	SP2976-1	SHAFT-ARM ASSY USBL EFF UH-1B 62-1872 & SUBSEQUENT, UH-1C 64-14101 THRU 65-9421 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	74	PBFZZ	3040-00-134-8130	96603	SP471	CONNECTING LINK, RIGID .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	75	PAFZZ	5360-00-088-4659	96603	SP476	SPRING,HELICAL, EXTENSION U/O PN SP4100-3 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	76	PAFZZ	5360-00-027-0044	96603	SP2545-4	SPRING,HELICAL, EXTENSION U/O PN SP4200-1,& SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	77	XDFZZ		96603	SP512	SPRING,HELICAL,TORS .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	77A	XDFZZ		96603	SP631	SPRING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	78	PAFZZ	1680-00-801-6961	96603	SP412	ARM,SPRING .... UHB,UHC,UHM	EA	1
417	79	PAFZZ	5310-00-268-6022	08804	4AN315C-3R	NUT,PLAIN,HEXAGON .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
417	80	MFFZZ	5320-00-104-4095	96603	SP399	.PIN,ACTUATOR U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	81	PAFZZ	5340-00-983-4062	96603	SP513	BUMPER,RUBBER U/O PN SP4100-3,& SP4220-1,& -2 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	82	PAFZZ	1560-00-064-3303	96603	22028-1	BUMPER,BEAM,CARGO R .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	83	PAFZZ	5930-00-548-4885	91929	BZ7RW822T03	.SWITCH,SENSITIVE U/O PN SP4100-3, SP4220-1,&-2 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
417	84	PAFZZ	1680-00-940-9232	96603	SP1717-1	ADAPTER,SWITCH, ACTUATOR U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	85	PAFZZ	5365-00-925-4073	96603	SP1716-1	SPACER,SLEEVE U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	86	PAFZZ	9905-00-944-1776	96603	SK63-1	PLATE,INSTRUCTION U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	87	PAFZZ	5315-00-616-3839	72962	79-028-125-0812	PIN,SPRING U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	88	XDFZZ		96603	11020-1	PIN,GROOVED .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	89	PAFZZ	5305-00-620-5111	02615	NK509-10-21	.SCREW,SELF-LOCKING U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
417	90	MDFZZ		96603	SP1699-1	PIN,STRAIGHT, HEADLESS U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	91	PAFZZ	1680-00-130-5913	96603	12040-1	INDICATOR,CARGO RELEASE U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	92	MDFZZ	DELETED	96603	SP1707-1	PIN,STRAIGHT, HEADLESS U/O PN SP4405-1 .... UHB,UHC UHE,UHH,UHM,UHV,UHX	EA	1
417	93	MDFZZ	DELETED	96603	SP1707-2	PIN STRAIGHT, HEADLESS U/O PN SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
417	94	PAFZZ	5930-00-613-4438	91929	1TB1-1	SWITCH,SENSITIVE U/O SP4405-1 .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
417	95	XAFZZ		96603	SP2241-7	LEAD,ELECTRICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

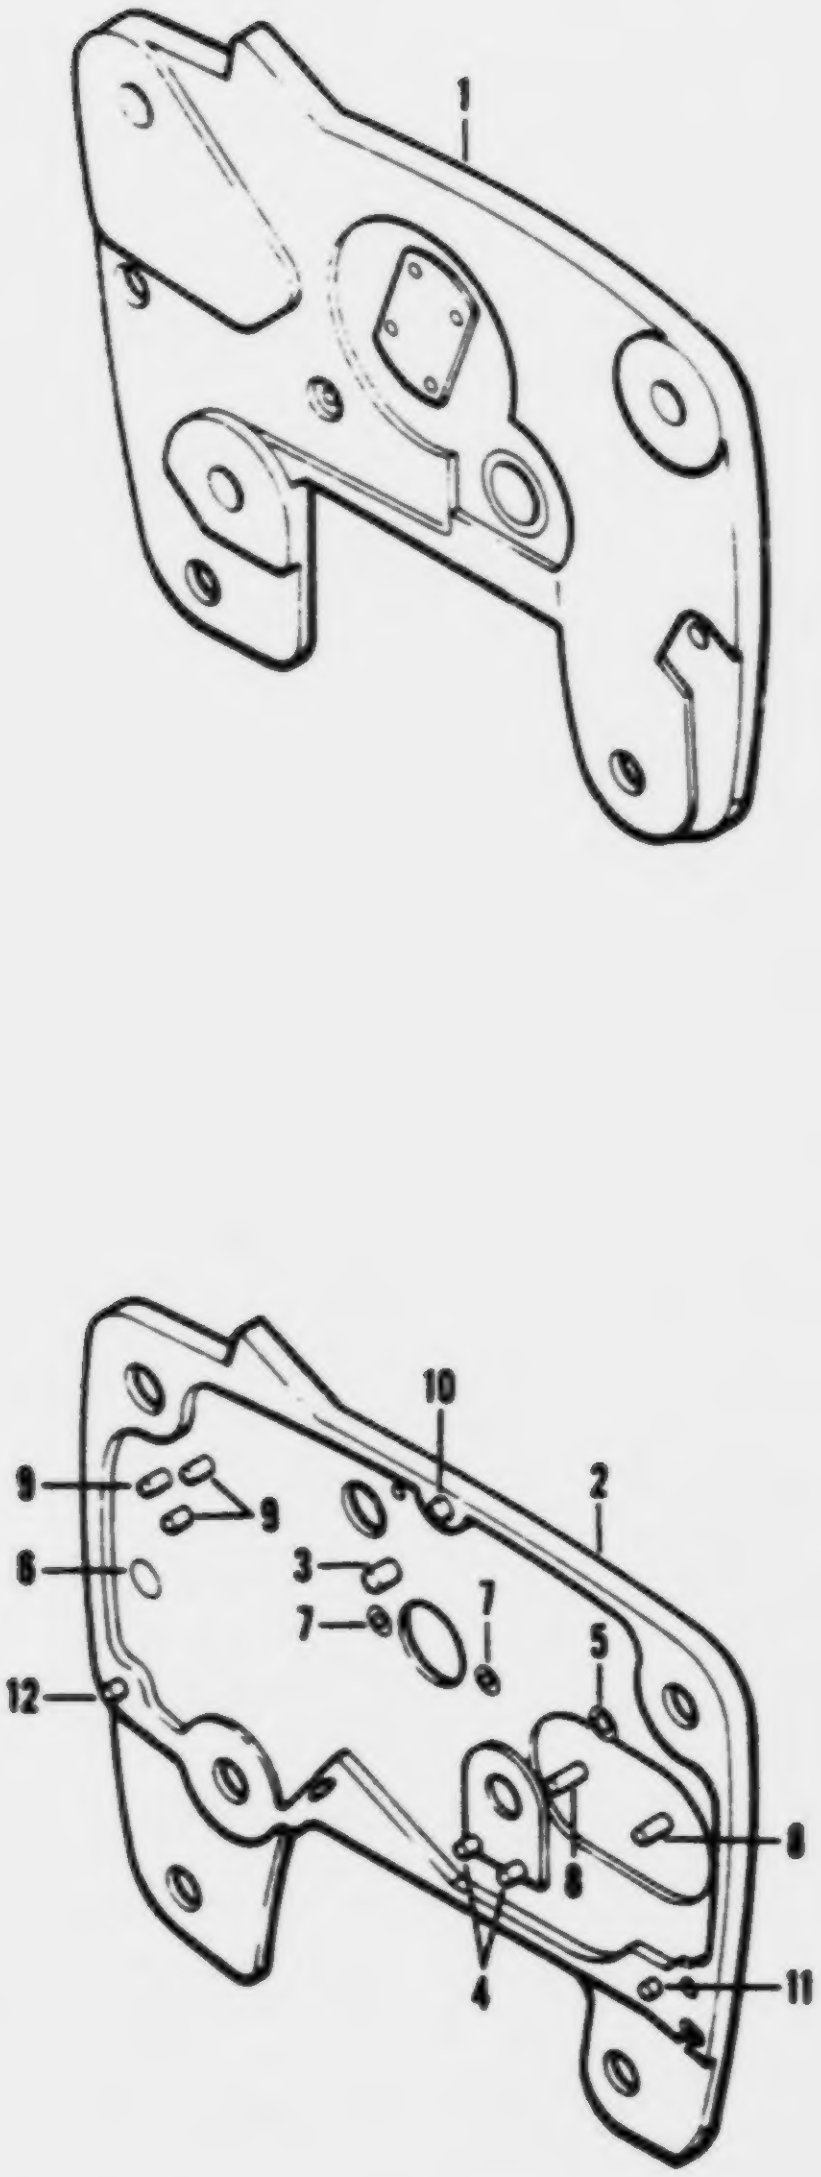
1
10
2
9
9
6
3
7
7
5
12
8
8
4
11

Figure 418. Case and Cover Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
418		XBFFF		96603	SP3547-1	CASE AND COVER ASSY SEE FIG.417 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
418	1	XAFZZ		96603	SP4406-1	.COVER ASSEMBLY.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
418	2	XAFFF		96603	SP4407-1	.CASE ASSEMBLY..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
418	3	XDFZZ		96603	SP1715-1	..PIN,STOP...........................UHB,UHC,UHH,UHM,UHV	EA	1
418	4	XDFZZ		96603	SP401-1	..PIN,SHOULDER.......................UHB,UHC,UHH,UHM,UHV	EA	2
418	5	XDFZZ	1680-00-197-8699	96603	SP1152-2	..PIN,SHOULDER HEADLESS.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
418	6	PAFZZ	5320-00-104-4096	96603	SP401-2	..PIN,CARGO RELEASE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
418	7	XDFZZ		96603	SP616	..BUSHING,SLEEVE................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
418	8	PAFZZ	5315-00-433-4661	96603	SP469-1	..PIN,SHOULDER HEADLESS.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
418	9	XDFZZ		96603	SP1585-2	..POST,MICRO SWITCH..................UHB,UHC,UHH,UHM,UHV	EA	3
418	10	XDFZZ		96603	SP3184-4	..DOWEL PIN..........................UHB,UHC,UHH,UHM,UHV	EA	1
418	11	XDFZZ		96603	SP3184-5	..DOWEL PIN..........................UHB,UHC,UHH,UHM,UHV	EA	1
418	12	XDFZZ		96603	SP3184-6	..DOWEL PIN..........................UHB,UHC,UHH,UHM,UHV	EA	1

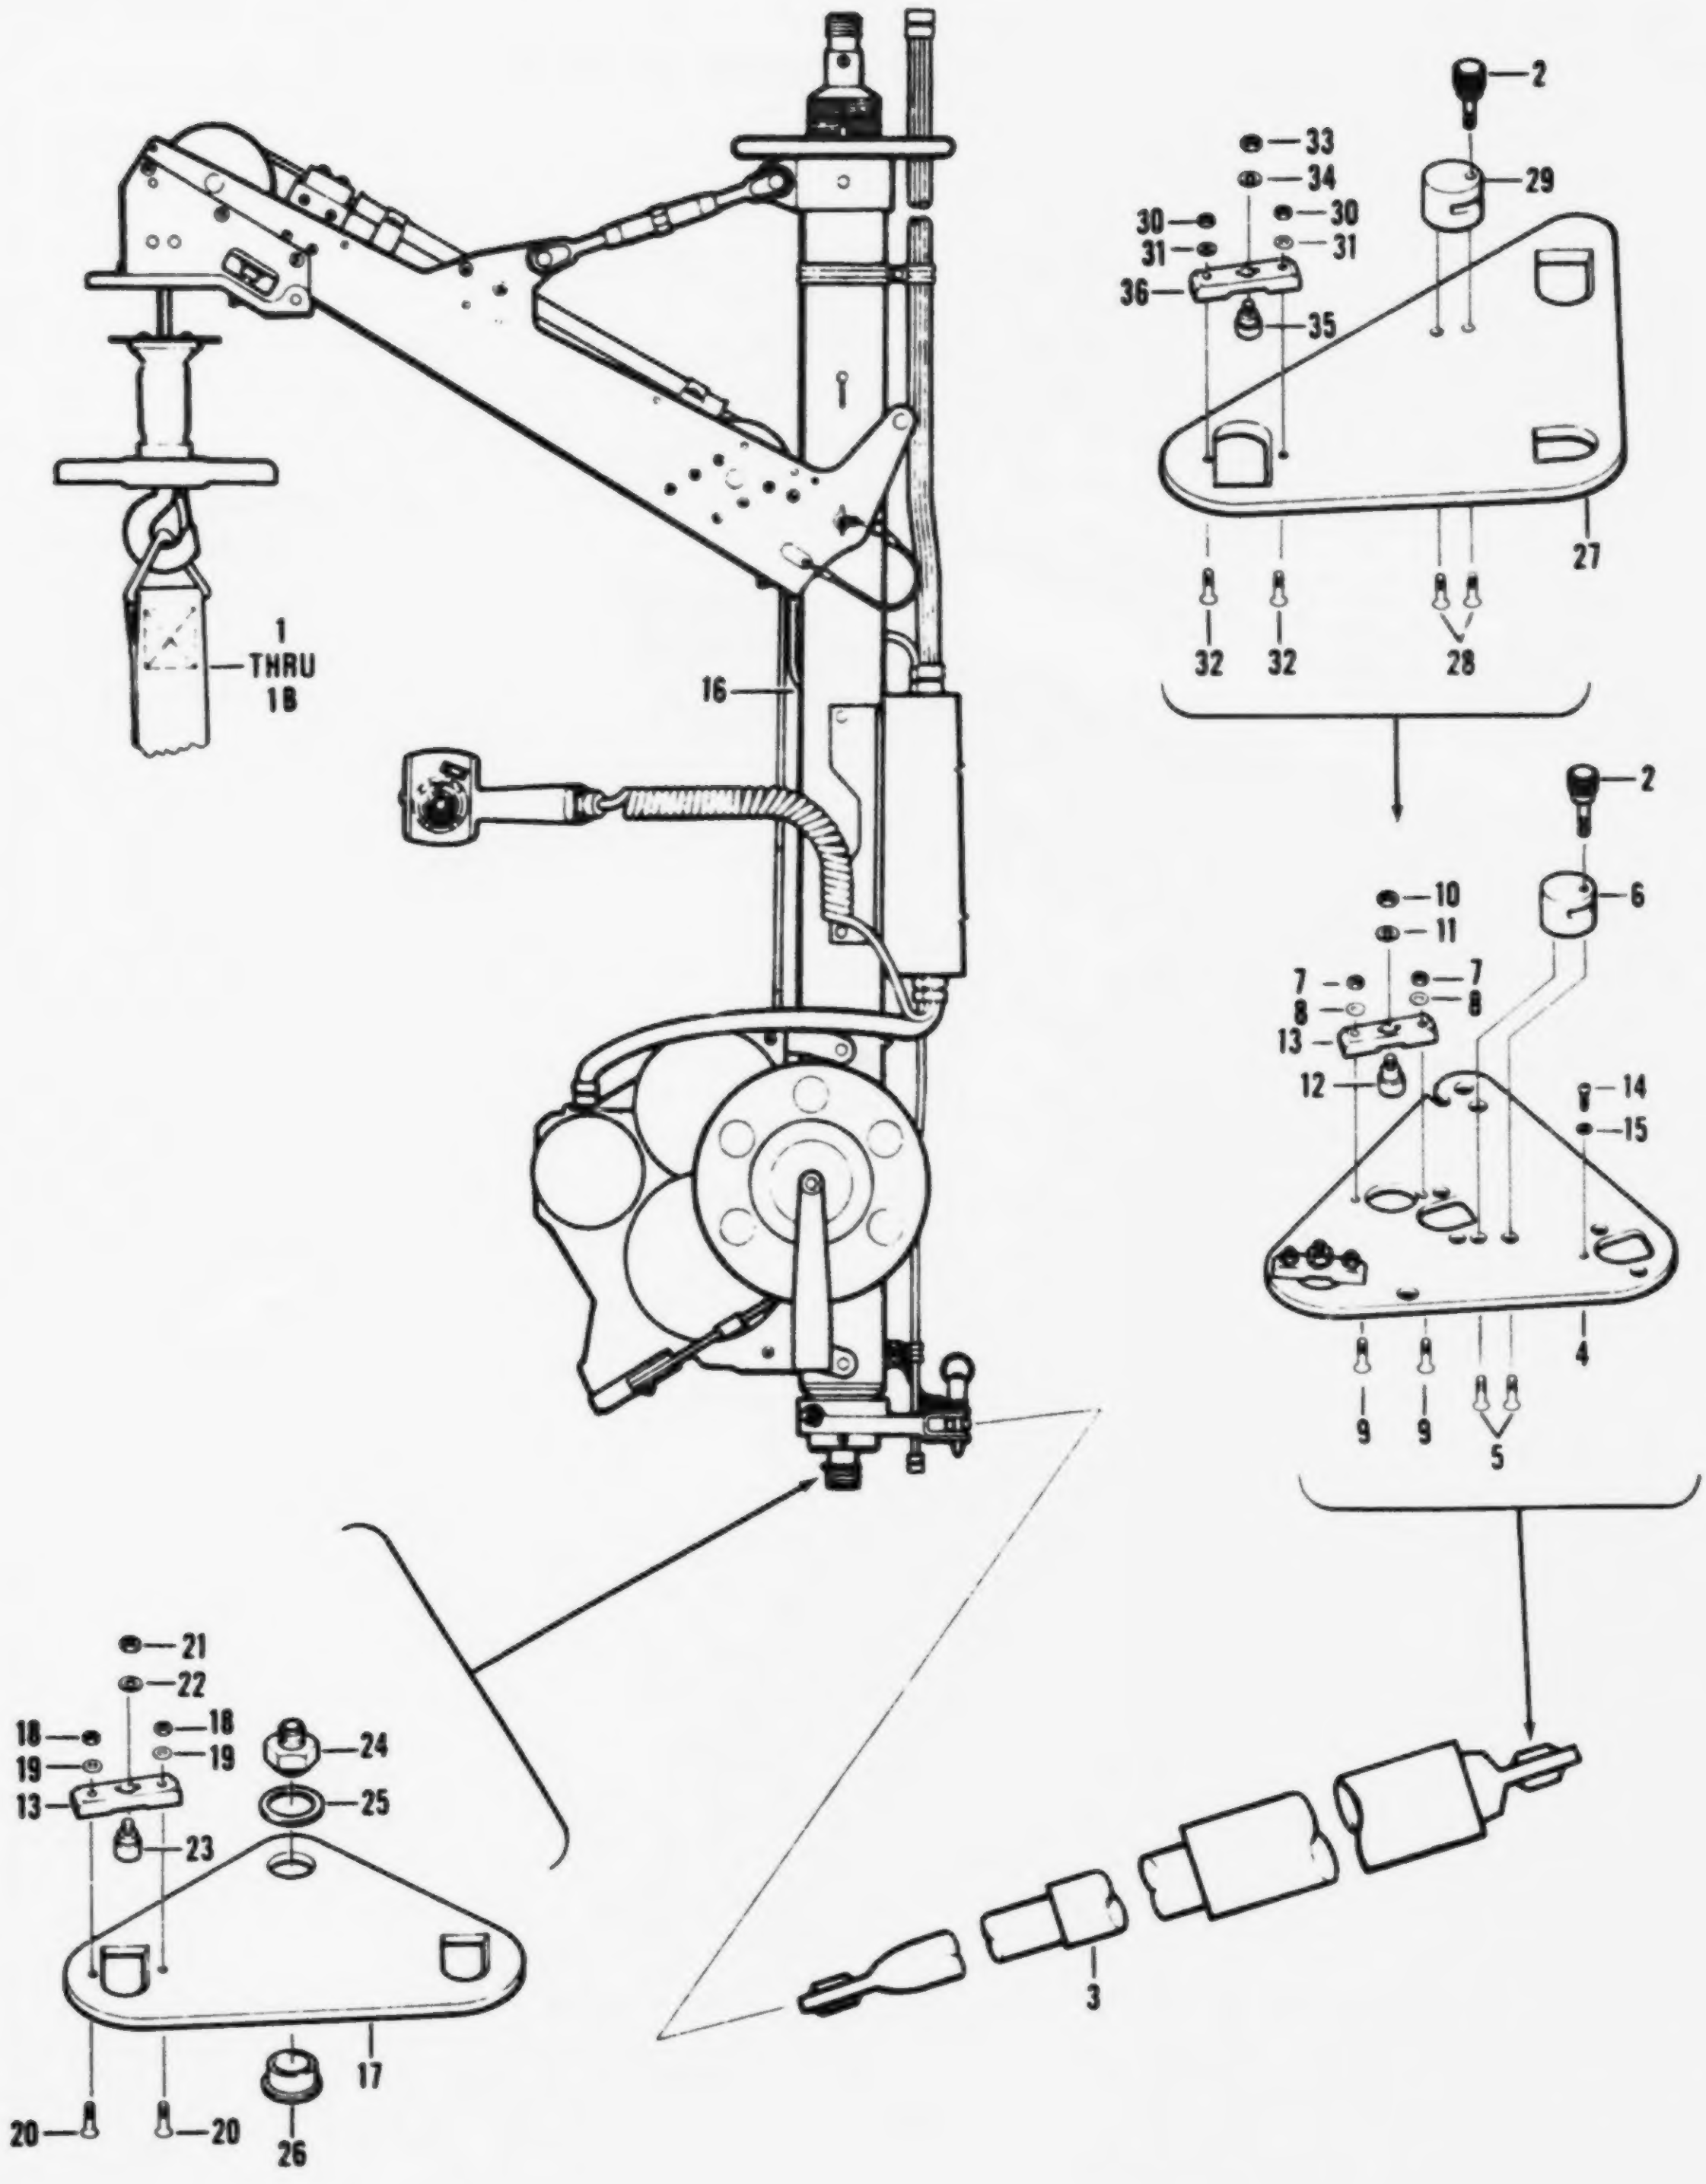
2
33
34
30
31
30
31
29
36
35
27
32
32
28
1
THRU
18
16
2
10
11
6
7
8
7
8
13
12
14
15
4
9
9
5
21
22
18
19
18
19
24
25
13
23
3
17
20
20
26

Figure .19. Internal Rescue Hoist Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
419		PBODD	1680-00-183-5994	97499	205-706-030-15	HOIST ASSY,RESCUE INSTALLATION .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
19	1	PAOZZ	1680-00-975-0515	97499	205-070-522-1	.STRAP ASSY,LITTER .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
419	1A	PAOZZ	1670-00-979-7831	09986	AL2008-1	.VEST,HOISTING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	1B	PAOZZ	1680-00-982-9973	09986	AL10101-2	.HARNESS,SAFETY,PERS .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	2	PAOZZ	5355-00-841-0075	97499	205-072-233-1	.KNOB .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	3	PAODO	1680-00-176-1262	97499	205-072-262-1	.ACTUATOR,RESCUE HOIST INTRCH .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	3	PAODO	1680-00-986-6121	93697	WE2834	.ACTUATOR,RESCUE HOIST SEE TM55-1680-271-40 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	3	PAODO	1680-00-143-8794	25140	65A119-1	.ACTUATOR,RESCUE HOIST SEE FIG.420 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	4	PBOOO	1680-00-931-2313	97499	205-072-236-1	PLATE,ACTUATOR,ASSY .... UHE,UHH,UHV,UHX	EA	1
419	5	PAOZZ	5305-00-282-4107	88044	AN509-616R12	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
419	6	PAOZZ	1680-00-931-2311	97499	205-072-229-1	..FITTING,RESCUE HOIS .... UHE,UHH,UHV,UHX	EA	1
419	7	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
419	8	PAOZZ	5310-00-184-8980	88044	AN960PD516L	..WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
419	9	PAOZZ	5305-00-269-4217	96906	MS24694S159	..SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	4
419	10	PAOZZ	5310-00-806-1831	96906	MS21040-7	..NUT,SELF-LOCKING,HE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
419	11	PAOZZ	5310-00-852-6742	97499	205-072-240-1	..WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
419	12	PAOZZ	1680-00-979-8352	98313	FDC2650M19	..ADAPTER,HOISTING,AI .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
19	13	PAOZZ	1680-00-931-7096	97499	205-072-239-1	..FITTING,RESCUE HOIS .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
19	14	PAOZZ	5305-00-945-0539	96906	MS27039-1-22	.SCREW,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	15	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	16	AOOOO	1680-00-179-6047	97499	205-072-311-1	.WINCH,ACFT MOUNTING SEE FIG.422 FOR BREAKDOWN .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
419	17	XBOOZ	1680-00-986-6254	97499	204-072-282-1	.PLATE ASSEMBLY,INTE .... UHB,UHC,UHM	EA	1
419	18	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHM	EA	4
419	19	PAOZZ	5310-00-184-8980	88044	AN960PD516L	..WASHER,FLAT .... UHB,UHC,UHM	EA	4
419	20	PAOZZ	5305-00-269-4217	96906	MS24694S159	..SCREW,MACHINE .... UHB,UHC,UHM	EA	4
419	21	PAOZZ	5310-00-806-1831	96906	MS21040-7	..NUT,SELF-LOCKING,HE .... UHB,UHC,UHM	EA	2
419	22	PAOZZ	5310-00-852-6742	97499	205-072-240-1	..WASHER,FLAT .... UHB,UHC,UHM	EA	2
419	23	PAOZZ	1680-00-979-8352	98313	FDC2650M19	..ADAPTER,HOISTING AI .... UHB,UHC,UHM	EA	2
419	24	XDOZZ		14821	VBP6922A375	..STUD,CARGO TIEDOWN .... UHB,UHC,UHM	EA	1
419	25	PAOZZ	5310-00-167-0837	88044	AN960-616L	..WASHER,FLAT .... UHB,UHC,UHM	EA	1
419	26	XBOZZ	1560-00-896-8858	97499	204-072-283-1	..BUSHING,RESCUE HOIS .... UHB,UHC,UHM	EA	1
419	27	XBOOZ	1680-00-986-6257	97499	204-072-284-1	..PLATE ASSEMBLY,INTE .... UHB,UHC,UHM	EA	1
419	28	PAOZZ	5305-00-282-4107	88044	AN509-616R12	..SCREW,MACHINE .... UHB,UHC,UHM	EA	2
419	29	PBOZZ	1680-00-986-6258	97499	204-072-285-1	..ACTUATOR FITTING,IN .... UHB,UHC,UHM	EA	1
419	30	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHM	EA	6
19	31	PAOZZ	5310-00-184-8980	88044	AN960PD516L	..WASHER,FLAT .... UHB,UHC,UHM	EA	6
19	32	PAOZZ	5305-00-269-4217	96906	MS24694S159	..SCREW,MACHINE .... UHB,UHC,UHM	EA	6
419	33	PAOZZ	5310-00-806-1831	96906	MS21040-7	..NUT,SELF-LOCKING,HE .... UHB,UHC,UHM	EA	3
419	34	PAOZZ	5310-00-852-6742	97499	205-072-240-1	..WASHER,FLAT .... UHB,UHC,UHM	EA	3

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
419	35	PAOZZ	1680-00-979-8352	98313	FDC2650M19	..ADAPTER,HOISTING,AI..............................UHB,UHC,UHM	EA	3
419	36	PAOZZ	1680-00-931-7096	97499	205-072-239-1	..FITTING,RESCUE HOIS..............................UHB,UHC,UHM	EA	3

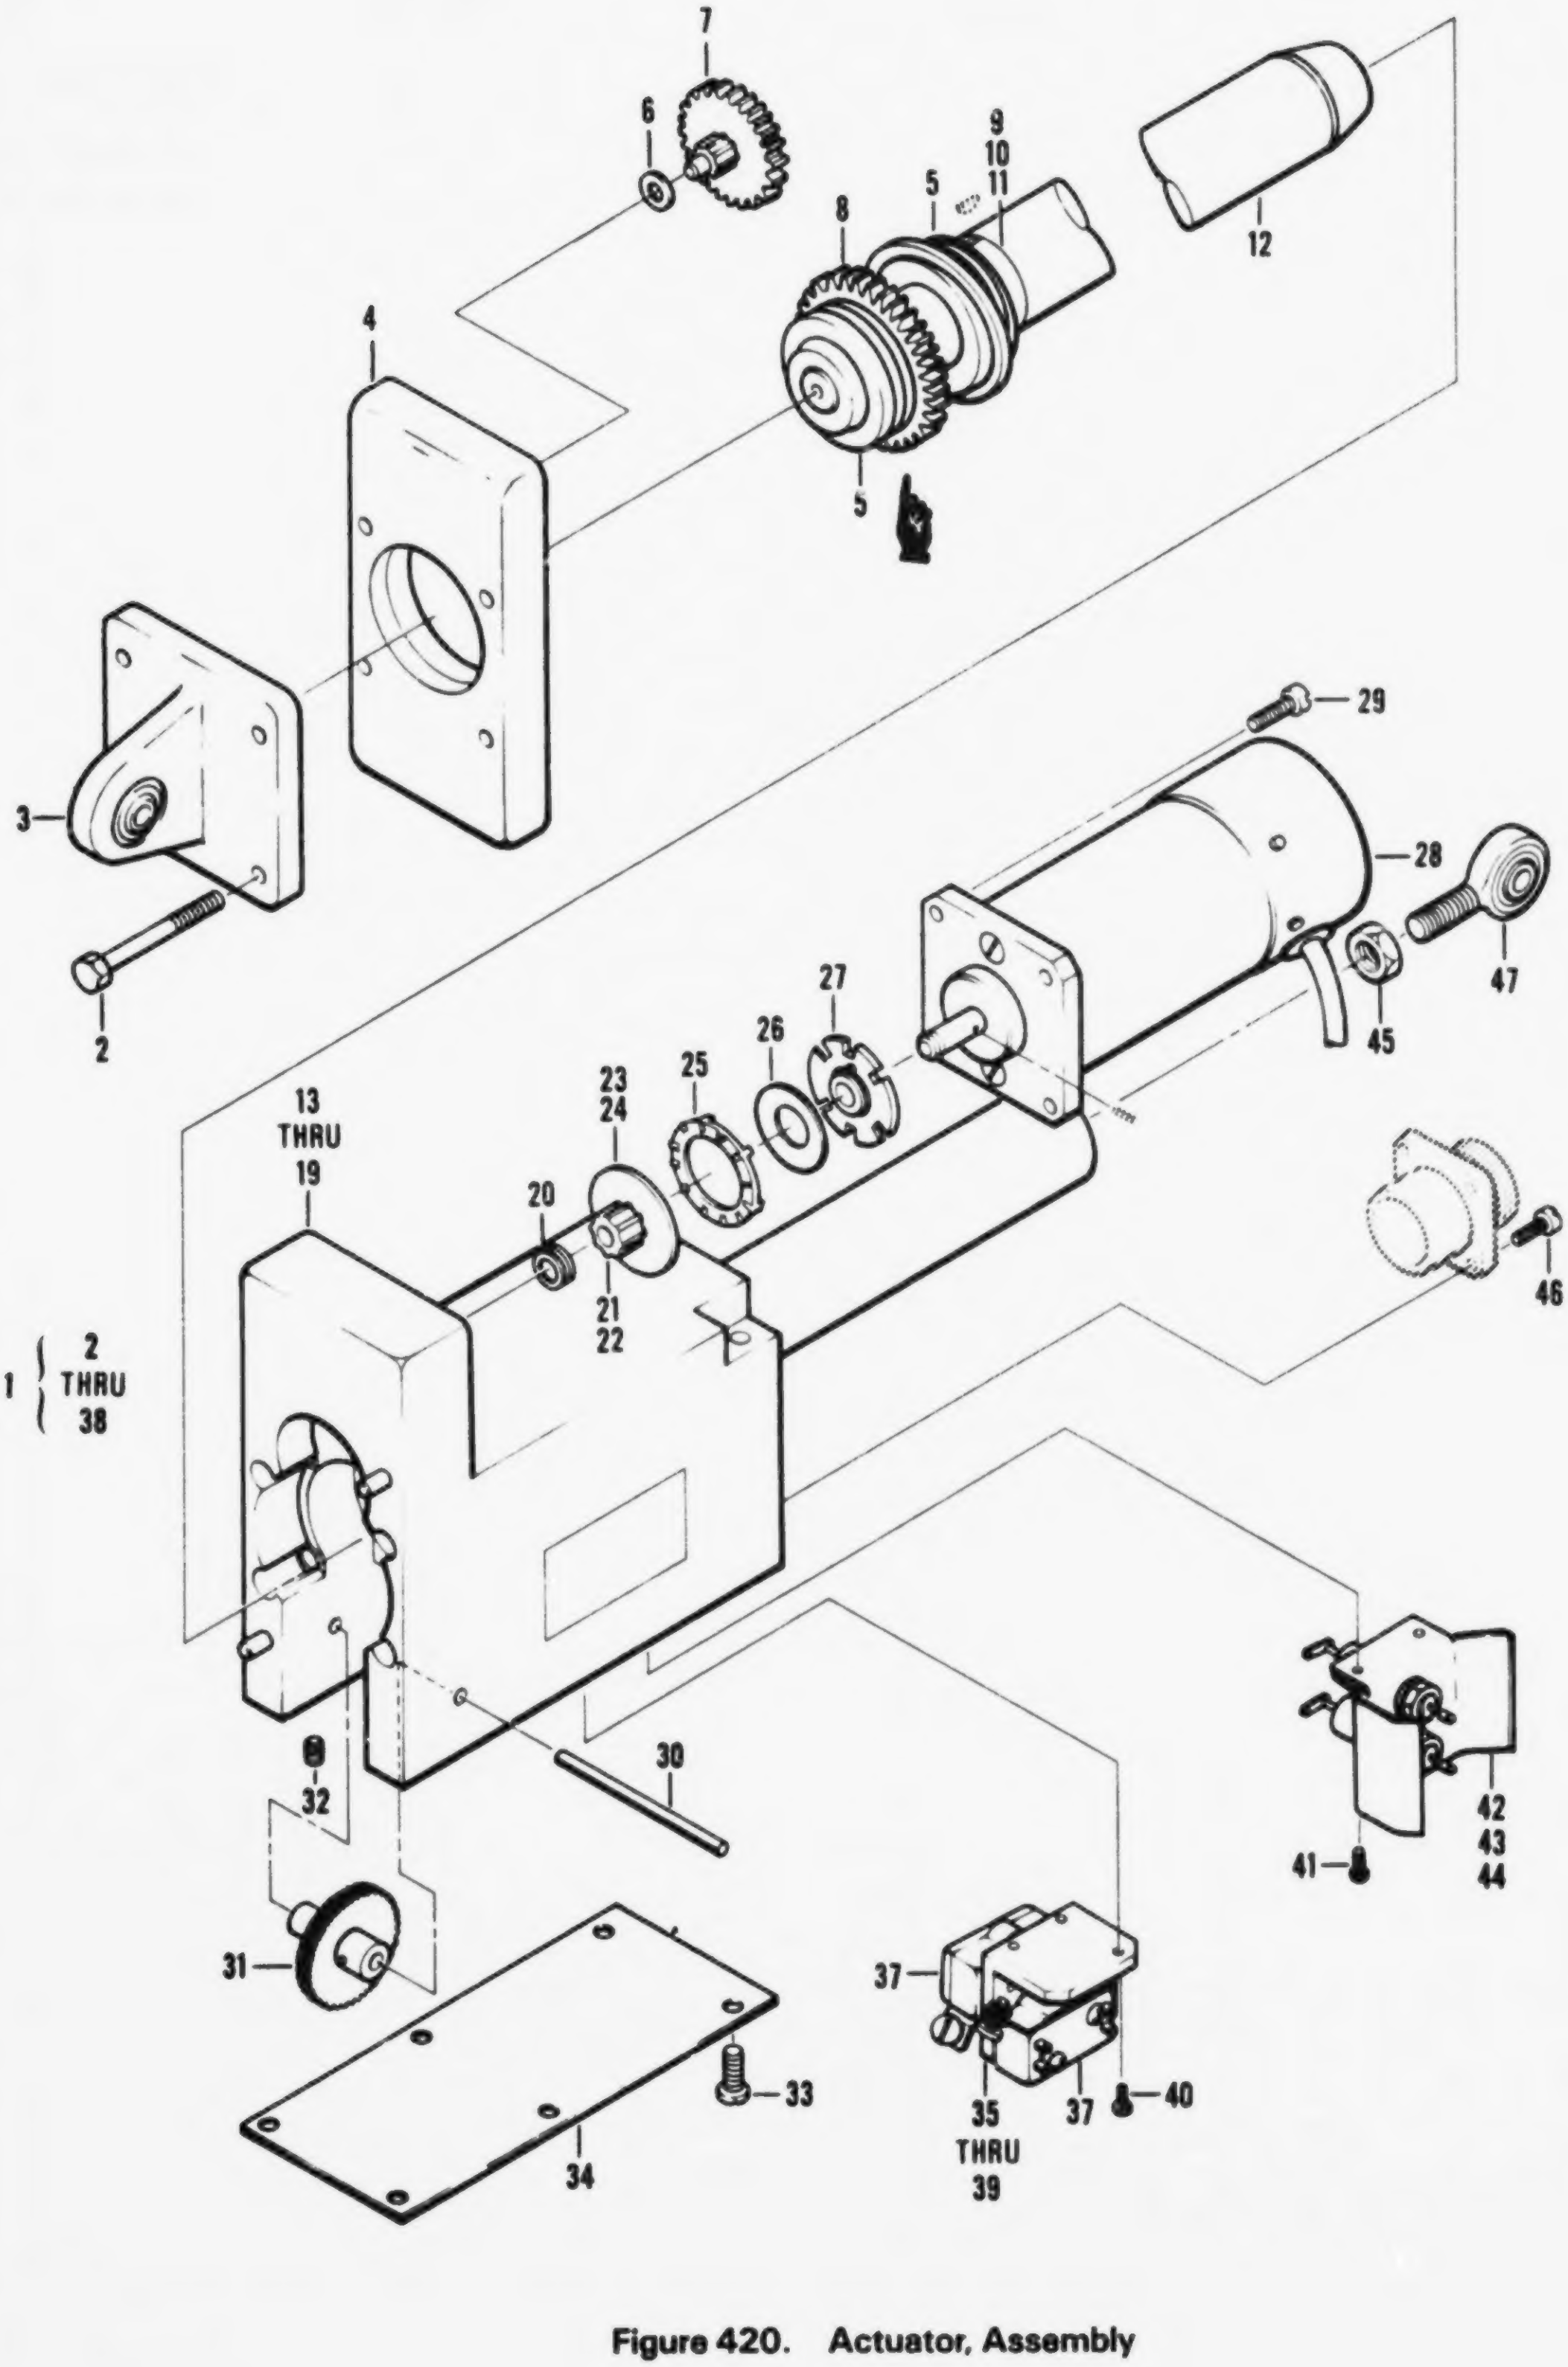
7
6
9
10
11
5
8
12
4
5
3
2
29
28
47
45
27
26
25
23
24
13
THRU
19
20
21
22
46
1 { 2 THRU 38
30
32
31
33
34
42
43
44
41
37
37
40
35
THRU
39

Figure 420. Actuator, Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	U/M	QTY INC IN UNIT
420		PBODD	1680-00-143-8794	25140	66A119-1	ACTUATOR,RESCUE HOI SEE FIG.419 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
20	1	XAODD		25140	66A119-1	.ACTUATOR ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
0	2	XDDZZ		96906	MS51095-317	..SCREW,CAP,HEXAGO........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
420	3	PBDZZ	3130-00-133-6615	25140	14A553	..BEARING UNIT,PLAIN........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	4	PBDZZ	1680-00-176-1967	25140	14A552	..PLATE AND BEARING A........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	5	PADZZ	3110-00-166-1713	96906	MS17161-19	..BEARING,BALL,THRUST........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
420	6	PADZZ	5310-00-181-1294	25140	21D1049	..WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	7	PADZZ	3020-00-134-8161	25140	1A2991	..GEAR ASSY,ACTUATOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	8	PADZZ	1680-00-176-1888	25140	16A582	..ROD AND GEAR ASSY,A........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	9	PBDZZ	1680-00-176-1895	25140	26D549	..STOP,ROD END,ACTUAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	10	XDDZZ	1680-00-176-1916	25140	26D548	..STOP,ACTUATOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	11	PBDZZ	5305-00-724-5820	96906	MS51964-78	..SETSCREW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	12	XBDZZ	1680-00-176-1906	25140	16A581	..ROD,ACTUATOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	13	XBDDZ	1680-00-176-1914	25140	2A889	..HOUSING ASSY,ACTUAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	14	PBDZZ	5315-00-811-6495	96906	MS16555-40	...PIN,STRAIGHT,HEADLE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
420	15	PADZZ	5315-00-844-3963	96906	MS16562-15	...PIN,SPRING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
420	16	PADZZ	3110-00-902-4281	25140	15D733	...BEARING,ROLLER,NEED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	17	XBDZZ	1680-00-176-1913	25140	37D686	...SLEEVE,SUPPORT,ACTU........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	18	PADZZ	5340-00-286-2458	96906	MS21208C4-20	...INSERT,SCREW THREAD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
420	19	PADZZ	5340-00-479-9197	96906	MS122119	...INSERT,SCREW THR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
0	20	PADZZ	5365-00-181-1291	25140	21D678-2	..SHIM........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
20	21	PADDD	1680-00-176-1898	25140	1A2990	..GEAR AND BEARING AS........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	22	XBDZZ	3020-00-134-8144	25140	3D1574	...GEAR,SPUR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	23	XBDZZ	3120-00-133-6621	25140	15D1308	...BEARING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
420	24	XBDZZ	1680-00-176-1900	25140	17D2805	...PLATE,CLUTCH,ACTUAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	25	PADZZ	1680-00-176-1968	25140	27D1474	..RING,DRIVE,ACTUATOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	26	PADZZ	5310-00-176-6276	25140	10D816	..WASHER,SPRING TENSI........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	27	PADZZ	1680-00-176-1915	25140	17D2806	..PLATE,DRIVE,ACTUATO........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	28	PADDD	6105-00-177-3118	25140	112A193	..MOTOR,DIRECT CURREN SEE FIG.421 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	29	PADZZ	5305-00-614-0247	96906	MS35266-64	..SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
420	30	XDDZZ		25140	5D2666	..SHAFT,STRAIGHT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	31	PBDZZ	1680-00-176-1918	25140	1A2993	..GEAR AND BEARING AS........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	32	PBDZZ	5305-00-717-6948	96906	MS51963-11	..SETSCREW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	33	PADZZ	5305-00-622-9475	96906	MS35265-41	..SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
420	34	MDDZZ	1680-00-412-2745	25140	17D2808	..COVER PLATE,ACTUATO........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	35	ADDDD		25140	4A1078	..SWITCH AND BRACKET ASSY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	36	PBDZZ	5305-00-177-5740	25140	1D1271-1	...SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
20	37	XDDZZ		25140	1D1271-2	...SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
0	38	PBDZZ	5930-00-177-3247	25140	18D812	...BRACKET,SWITCH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	39	PBDZZ	5930-00-177-3248	25140	8A542	...SWITCH,ACTUATOR N........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
420	40	PBDZZ	5305-00-177-5739	25140	1D750	..SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
420	41	PADZZ	5305-00-543-2024	96906	MS35265-13	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	42	ADDDD		25140	4A1077	..CAPACITOR AND BRACK ASSY.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	43	PBDZZ	5910-00-177-2578	25140	4002028	...CAPACITOR,ELECTR...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
420	44	XDOZZ		25140	18D811	...BRACKET,CAPACITO...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	45	PBDZZ	5310-00-054-4892	96906	MS35650-3312	..NUT,PLAIN,HEXAGON...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
420	46	PADZZ	5305-00-531-0298	96906	MS35265-15	..SCREW,MACHINE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
420	47	PBDZZ	3120-00-133-6620	25140	16A583	..BEARING,PLAIN,RD................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

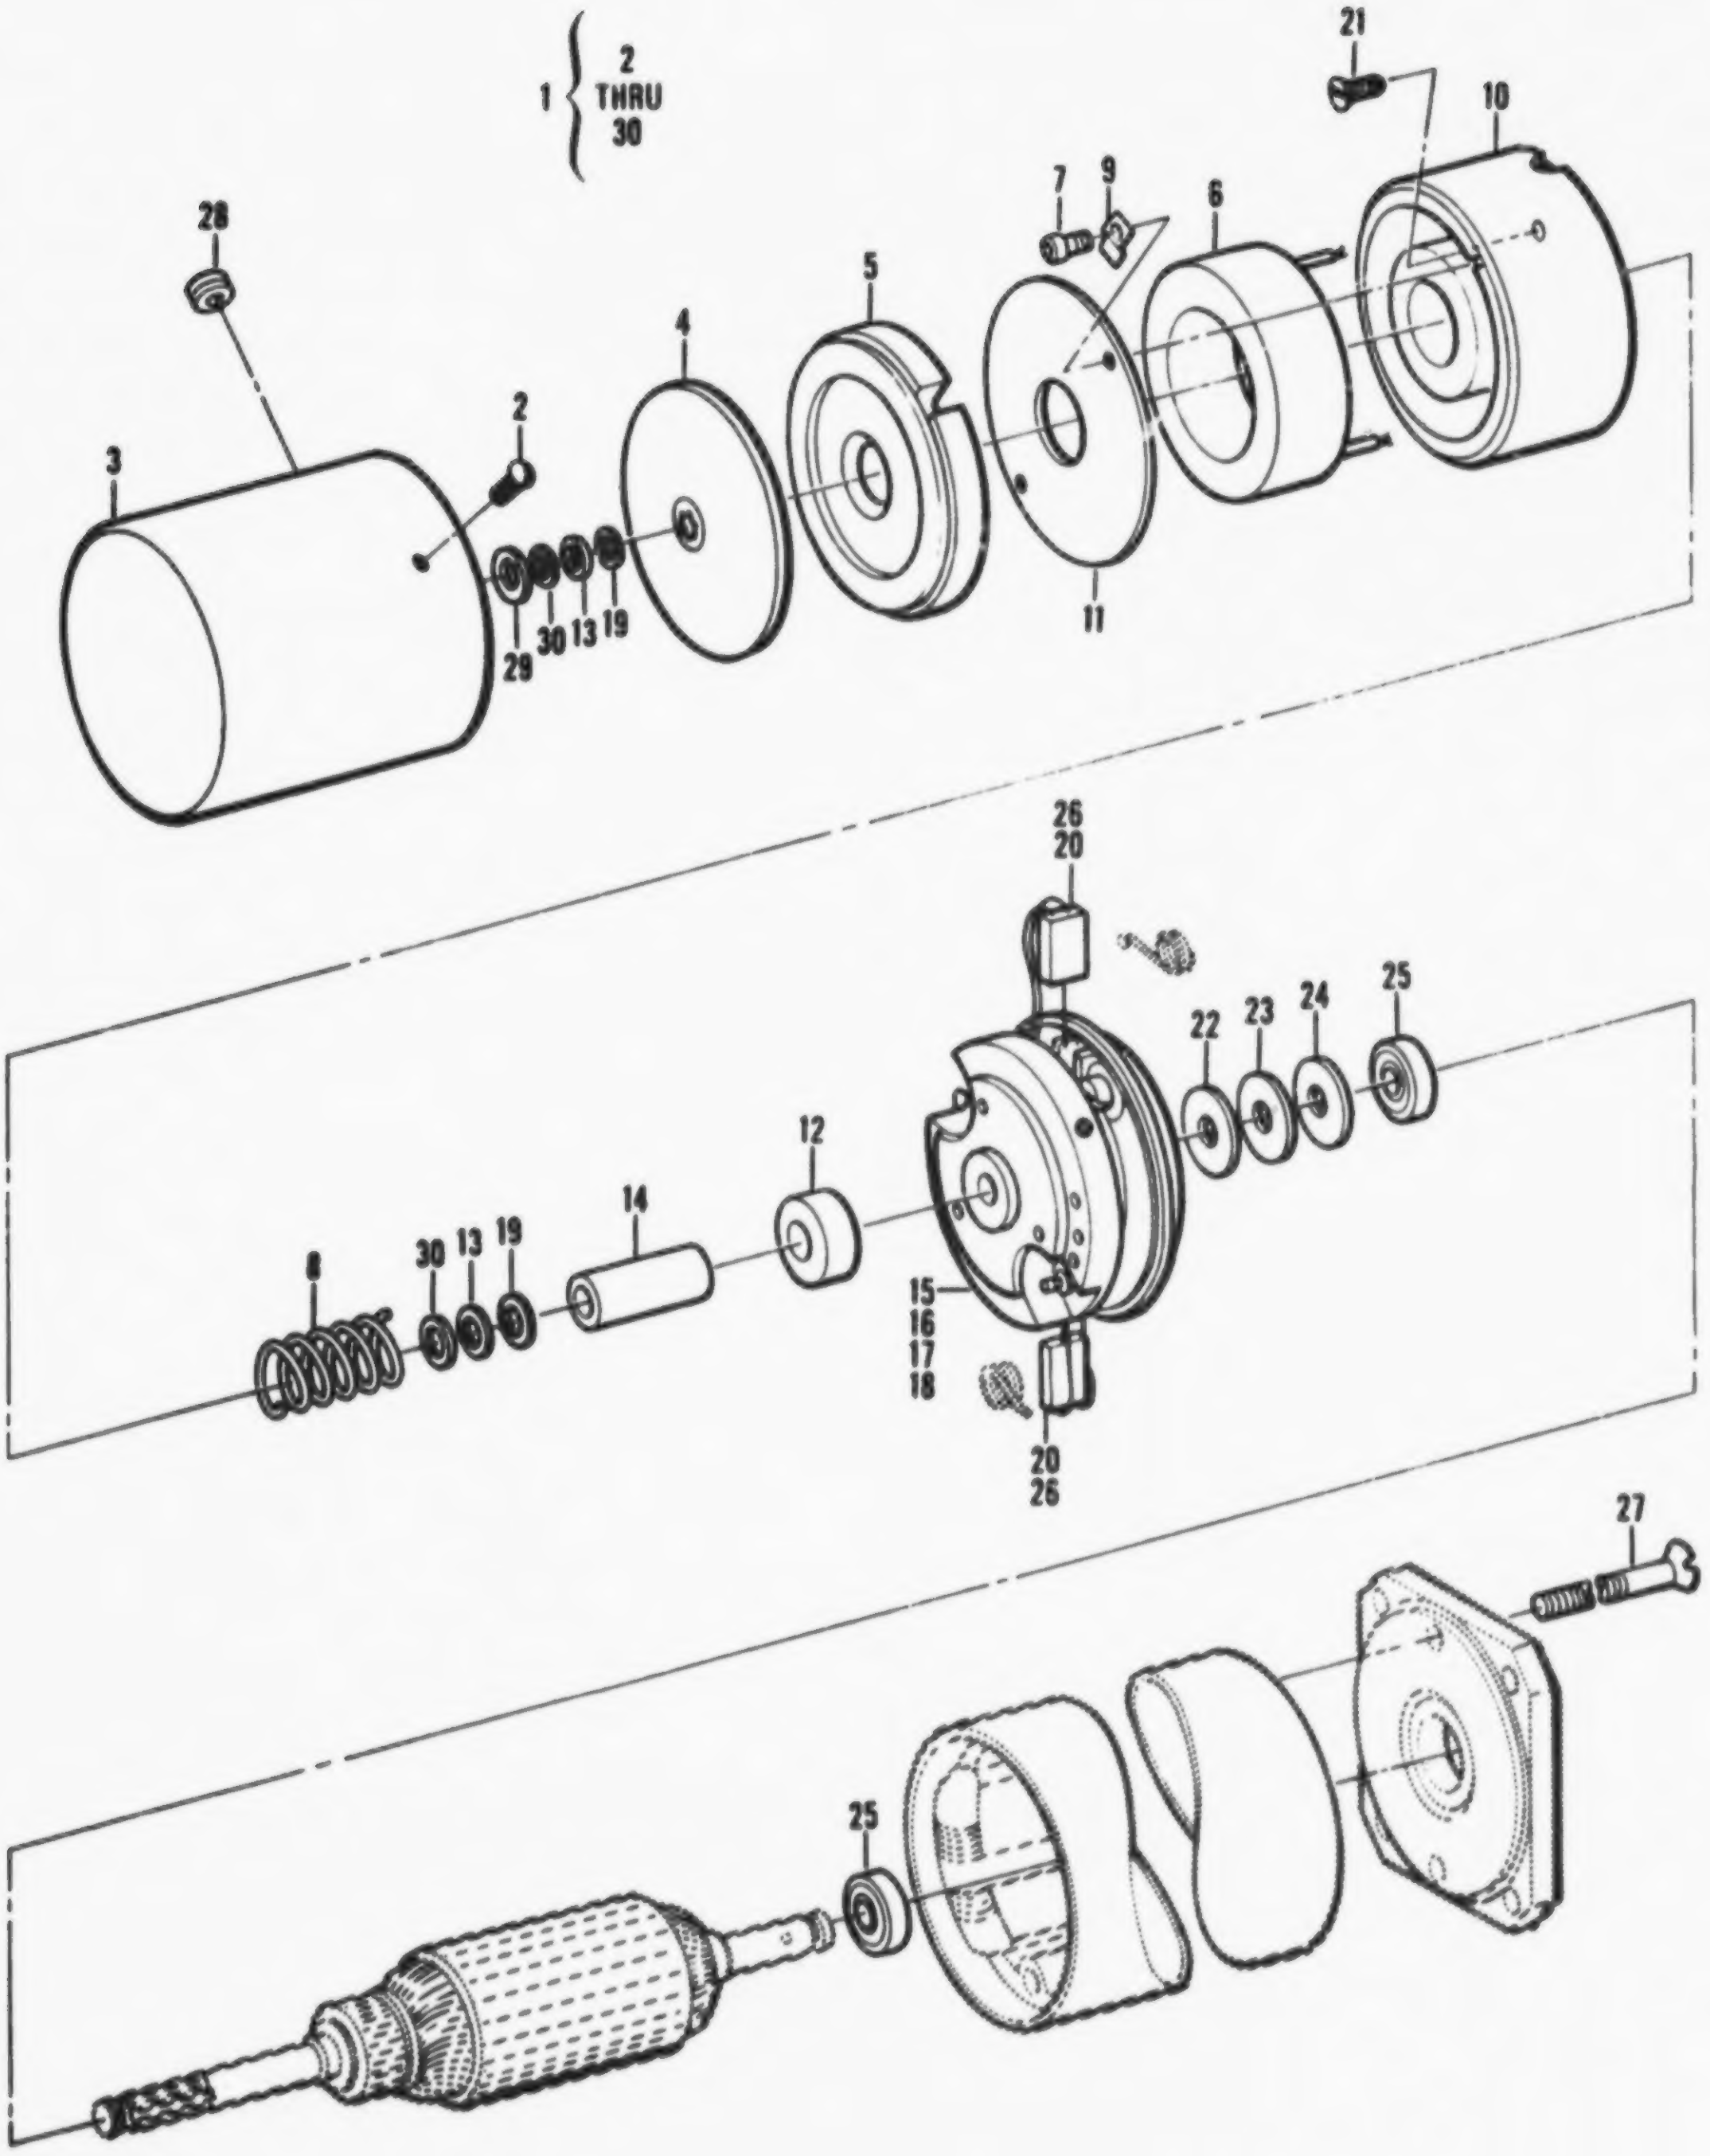
1
2
THRU
30
21
10
7
9
6
28
5
4
2
3
29
30
13
19
11
26
20
22
23
24
25
12
14
8
30
13
19
15
16
17
18
20
26
27
25

Figure 421. Motor, Direct Current

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
421		PADDO	6105-00-177-3118	25140	112A193	MOTOR,DIRECT CURREN SEE FIG.420 FOR NHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	1	XADDO		25140	113A193	.MOTOR,DC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	2	PADZZ	5305-00-054-5637	96906	MS35233-3	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
421	3	XDOZZ		25140	4D2416	..COVER,ELECTRIC MOTO	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	4	XDOZZ		25140	27D1082	..DISK,BRAKE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	5	PADDO	6105-00-177-3113	25140	7A3432	..ARMATURE MAGNETIC B	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	6	XDOZZ		25140	9D1322	..LINING,FRICTION	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	7	XBOZZ	5305-00-068-5276	96906	MS16995-9	..SCREW,CAP,SOCKET	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
421	8	XDOZZ		25140	10D817	..SPRING,HELICAL,COMP	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	9	XDOZZ		25140	18D767	..CLAMP,ELECTRICAL CO	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
421	10	XDOZZ		25140	4D2417	..HOUSING,COIL-MAG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	11	PBOZZ	5365-00-181-1285	25140	19D1401	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	12	PBOZZ	5365-00-181-1284	25140	19D1400	..SPACER,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	13	PAOZZ	5365-00-181-1291	25140	21D678-2	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
421	14	PBOZZ	5365-00-181-1287	25140	19D1399	..SPACER,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	15	PBODO	6150-00-177-3106	25140	11A741	..END BELL,ELECTRICAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	16	XDOZZ		25140	4001771	...BRUSH,ELECTRICAL CO	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
421	17	PBOZZ	5360-00-939-9262	25140	10D719	...SPRING,HELICAL,TORS	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
421	18	PAOZZ	5305-00-811-9853	96906	MS35265-12	...SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	19	PAOZZ	5365-00-181-1290	25140	21D678-3	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
421	20	MDOZZ	5325-00-181-1639	25140	35D601	..GROMMET,RETAINER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	21	PBOZZ	5305-00-724-6831	96906	MS51963-16	..SETSCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
421	22	PBOZZ	5365-00-950-6271	00141	B3-14	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
421	23	PBOZZ	5365-00-815-3134	25140	21D700-2	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
421	24	PBOZZ	5365-00-143-0018	25140	21D700-1	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
421	25	PBOZZ	3110-00-731-5061	25140	15D024A066	..BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
421	26	XDOZZ		25140	9D1748	..CONTACT,ELECTRIC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	27	PBOZZ	5305-00-177-5755	25140	10932-2	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
421	28	PBOZZ	5325-00-181-1332	25140	9D1335	..GROMMET,NONMETALLIC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	29	PAOZZ	5365-00-720-8064	96906	MS16624-1025	..RING,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
421	30	PAOZZ	5365-00-181-1293	25140	21D678-1	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V

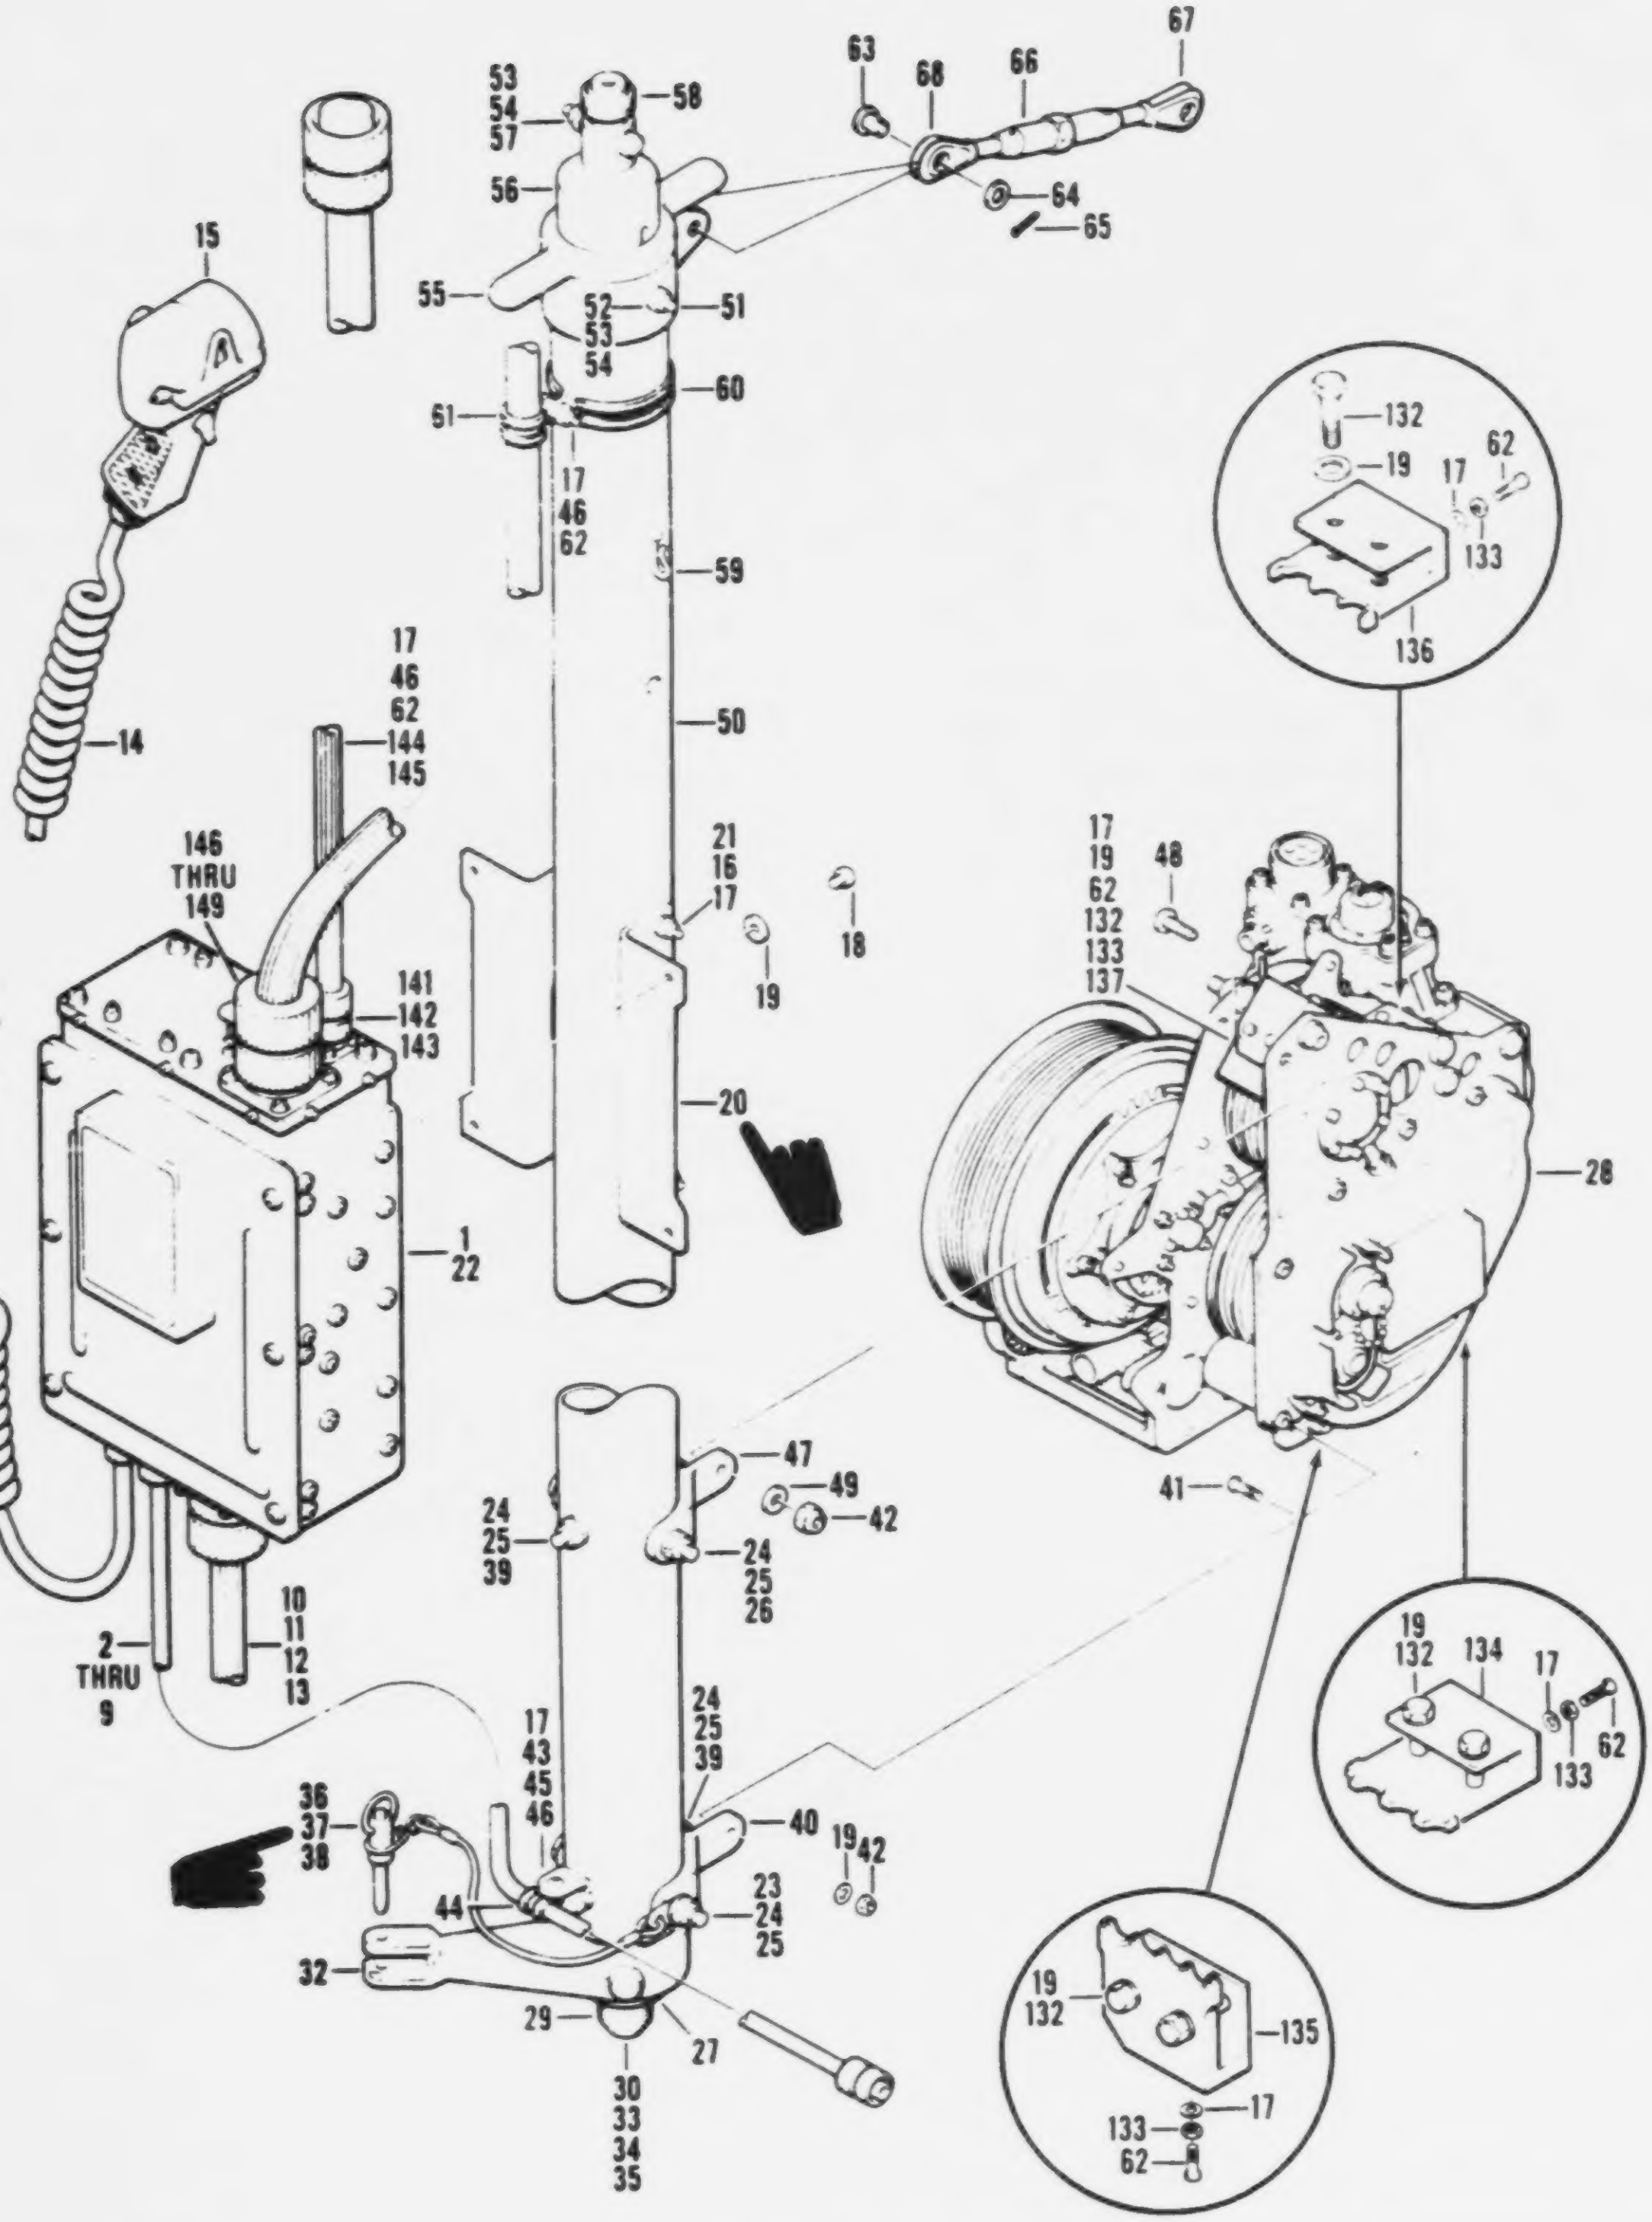
67
63
68
66
53
54
57
58
64
65
56
15
55
52
53
54
51
60
61
17
46
62
132
19
62
17
133
136
59
17
46
62
144
145
50
14
21
16
17
18
19
17
19
62
132
133
137
48
146
THRU
149
141
142
143
20
28
1
22
47
49
42
41
24
25
39
24
25
26
2
THRU
9
10
11
12
13
19
132
134
17
62
133
24
25
39
17
43
45
46
36
37
38
40
19
42
44
23
24
25
32
29
27
30
33
34
35
19
132
135
17
133
62

Figure 422. Winch, Aircraft Mounting (Sheet 1 of 2)

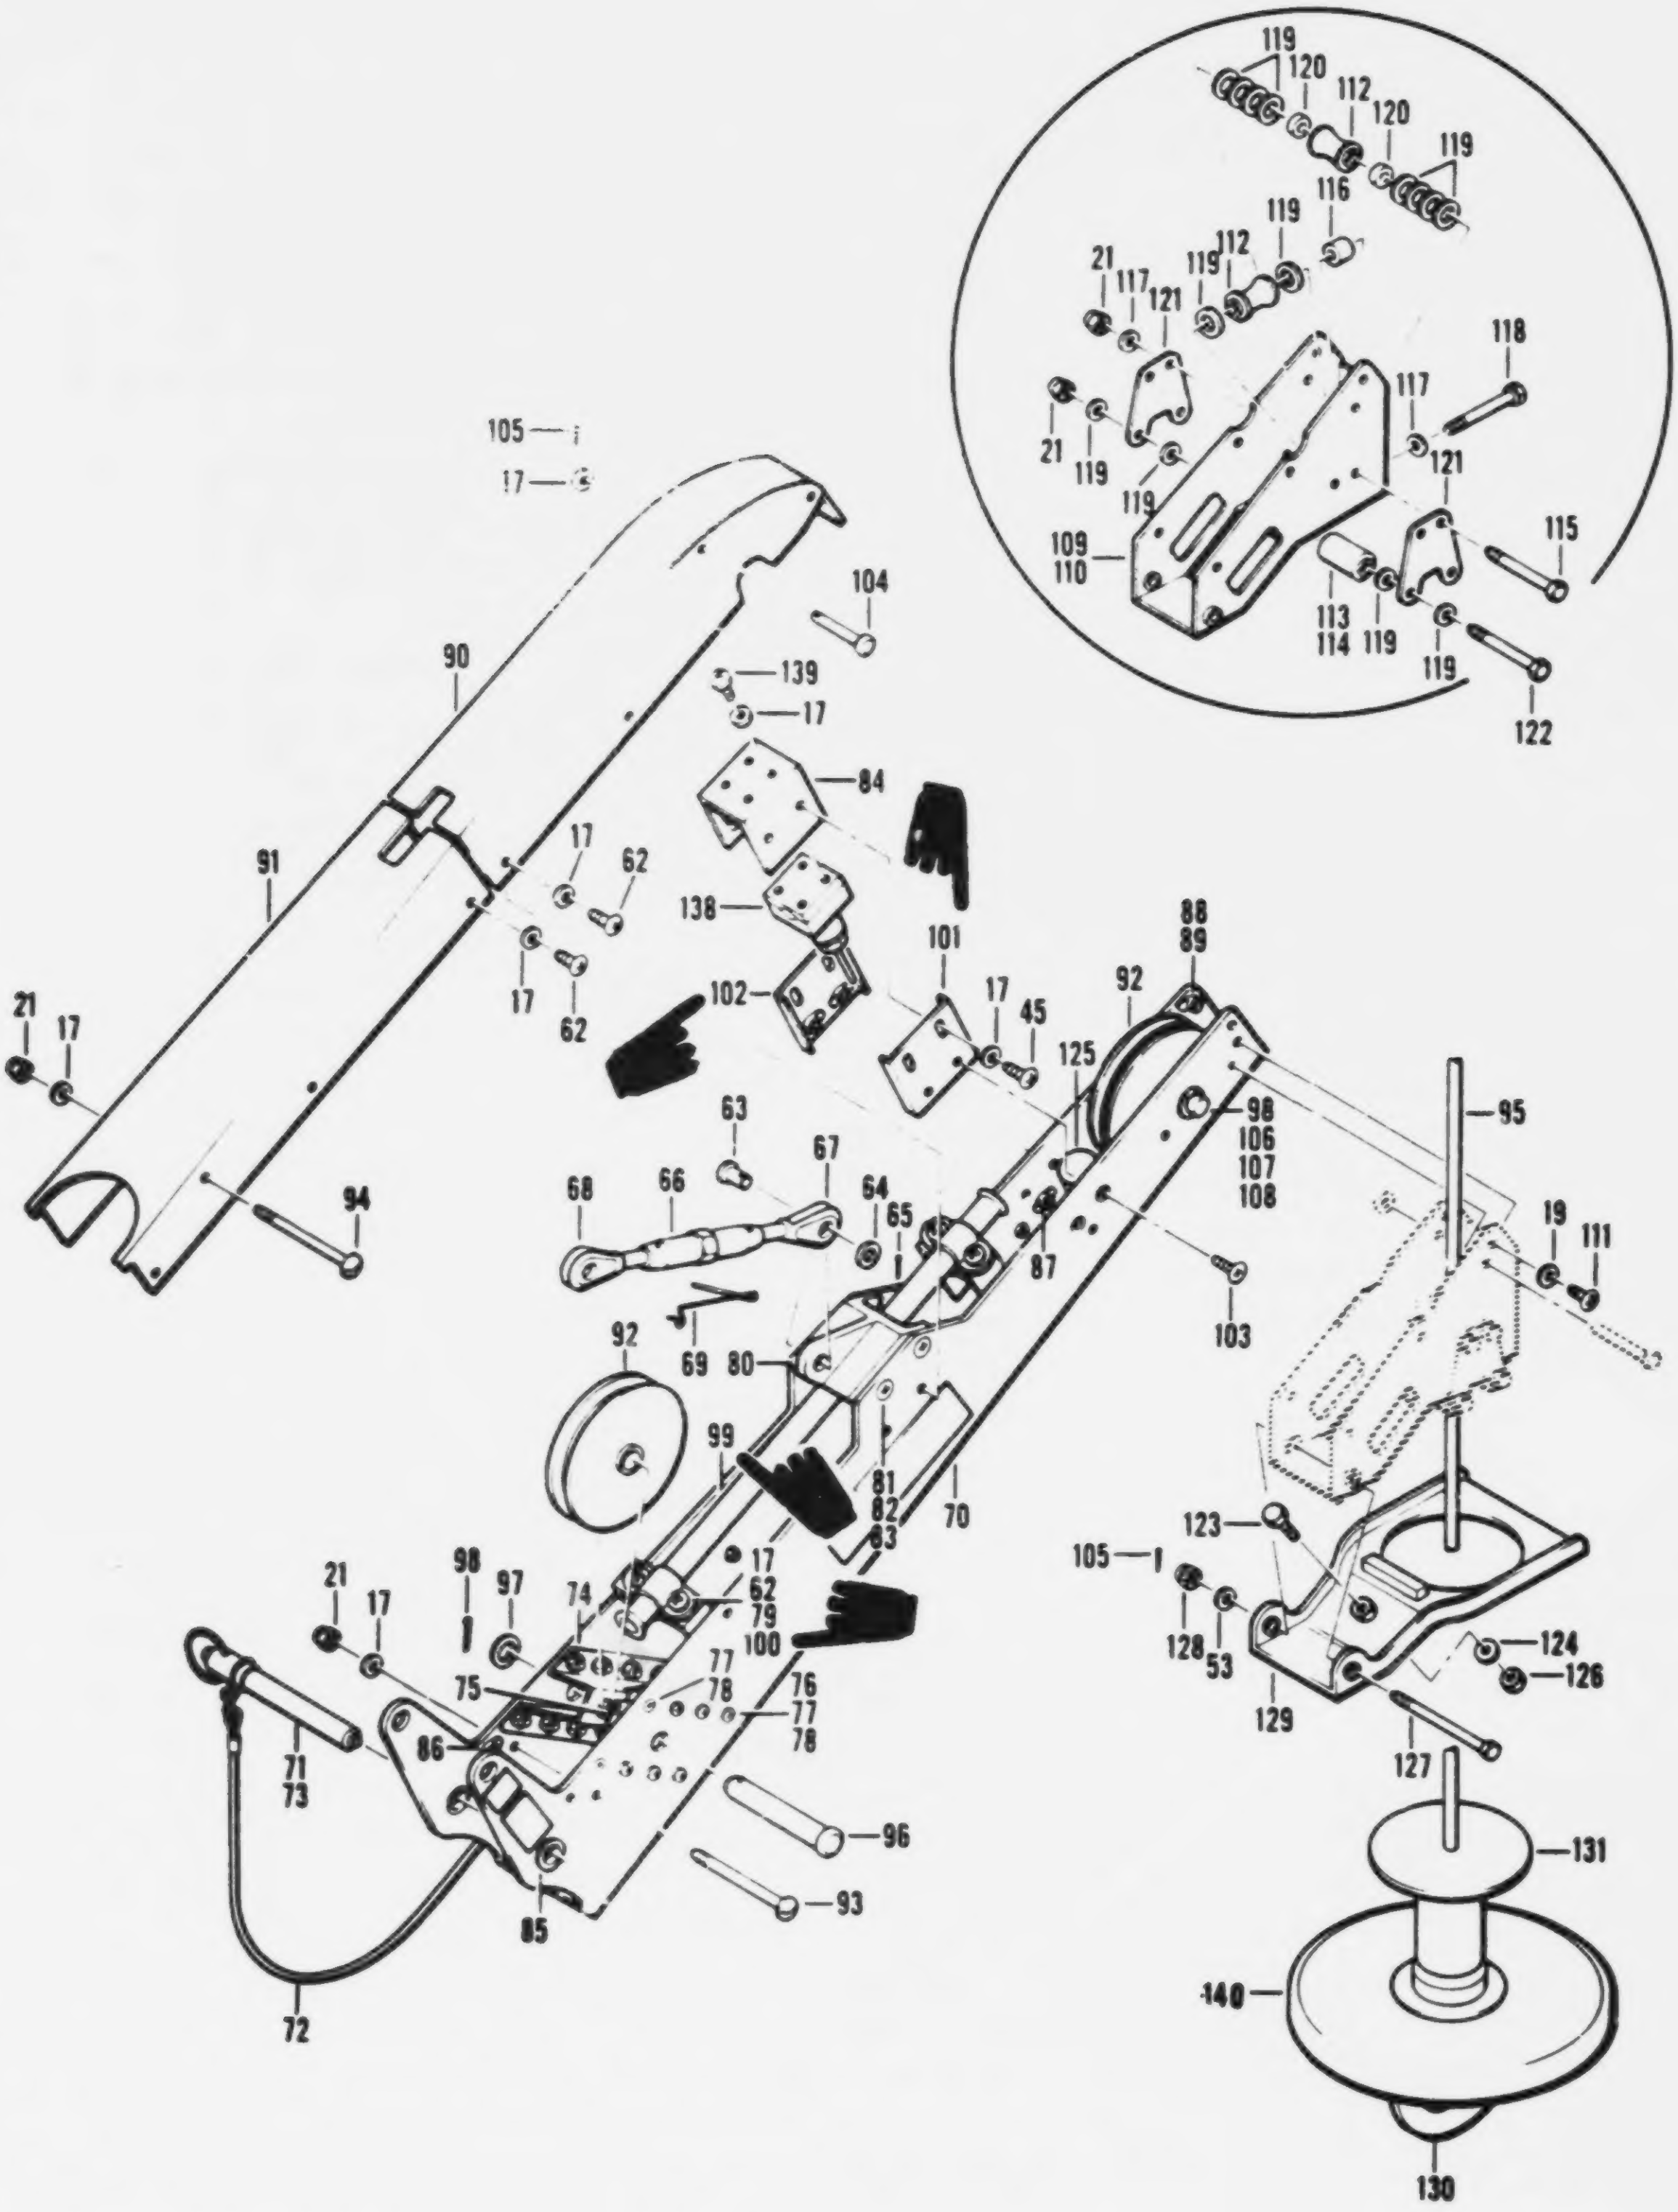
119
120
112
120
119
116
119
21
117
121
119
112
119
118
21
119
119
117
121
119
109
110
113
114
119
119
115
122
105
17
104
139
17
90
84
17
62
91
138
17
62
21
17
102
101
17
45
88
89
92
125
98
106
107
108
95
94
63
68
66
67
64
65
87
103
19
111
92
69
80
99
81
82
83
70
123
105
21
17
98
97
74
17
62
79
100
77
78
76
77
78
75
86
71
73
128
53
124
126
129
127
96
93
85
131
72
140
130

Figure 422. Winch, Aircraft Mounting (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	U/M	QTY INC IN UNIT
422		AFOZO	1680-00-179-6047	97499	205-072-311-1	WINCH,ACFT MOUNTING USBL EFF (UH-1B) 62-1872 & SUBSEQUENT SEE FIG.419 FOR NHA RPLS-- PN 205-072-211-5 ....UHB,UHC,UHH,UHM	EA	1
422	1	PAOZZ	7610-00-901-1824	97499	205-070-028-1	.SHEET,TECHNICAL INSTRUCTIONS...........UHB,UHC,UHH,UHM,UHV	EA	1
422	2	AFOZZ	6150-00-489-0094	97499	205-075-438-13	.CABLE ASSEMBLY,WINC.....................UHB,UHC,UHH,UHM,UHV	EA	1
422	2A	PAFZZ	6145-00-578-6595	96906	MS25190C4	..WIRE,ELECTRICAL........................UHB,UHC,UHH,UHM,UHV	FT	V
422	3	PBFZZ	6145-00-851-8505	96906	MS25190B20	..WIRE,ELECTRICAL........................UHB,UHC,UHH,UHM,UHV	FT	1
422	4	PBFZZ	5935-00-080-4238	71468	CA3106E28-2009-1	..PLUG,ENGINE PLUG,WINCH ASSY...........UHB,UHC,UHH,UHM,UHV	EA	1
422	5	PBFZZ	5935-01-127-6013	71468	CA3106E28A16P	..PLUG,ENGINE PLUG,HOIST CONT BOX.......UHB,UHC,UHH,UHM,UHV	EA	1
422	6	MFFZZ		97499	85T4-375-2	..INSULATION,TUBING......................UHB,UHC,UHH,UHM,UHV	EA	6
422	7	PAFZZ	5975-00-821-6446	96906	MS25066-23	..NUT,COUPLING,ELECTR....................UHB,UHC,UHH,UHM,UHV	EA	2
422	8	PAFZZ	5975-00-916-8396	96906	MS25064-16	..CONDUIT,METAL,FLEXI....................UHB,UHC,UHH,UHM,UHV	EA	V
422	9	PAFZZ	5975-00-926-7454	96906	MS25065-16	..FERRULE,ELECTRIC CO....................UHB,UHC,UHH,UHM,UHV	EA	2
422	10	AFOZZ	6150-00-489-0093	97499	205-075-438-11	.CABLE ASSEMBLY,BOOM U/O PN 205-072-211-5 ....UHB,UHC,UHH,UHM,UHV	EA	1
422	11	PBFZZ	5935-00-805-4991	96906	MS3106R14S7S	..CONNECTOR,PLUG,ELEC PLUG,BOOM ACT......UHB,UHC,UHH,UHM,UHV	EA	1
422	12	XDFZZ	5935-00-781-8654	96906	MS3126E14-5P	..CONNECTOR,PLUG,ELEC....................UHB,UHC,UHH,UHM,UHV	EA	1
422	13	PAFZZ	5970-00-815-1295	08795	RNF100-1-4BLACK	..INSULATION SLEEVING ELECTRICAL.........UHB,UHC,UHH,UHM,UHV	FT	1
422	14	PAFZZ	1680-00-975-0604	25714	VE563	.CABLE ASSEMBLY,RETR.....................UHB,UHC,UHH,UHM,UHV	EA	1
422	15	PAFDD	1680-00-938-3129	97499	205-072-260-5	.CONTROL BOX,PENDENT SEE TM 55-1680-271-40 FOR BREAKDOWN OF PN 205-072-260-5 BL8430................UHB,UHC,UHH,UHM,UHV	EA	1
422	16	PAOZZ	5306-00-551-7006	88044	AN3H33A	.BOLT,MACHINE............................UHB,UHC,UHH,UHM,UHV	EA	2
422	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.............................UHB,UHC,UHH,UHM,UHV	EA	23
422	18	PAOZZ	5305-00-926-5667	80205	NAS1190-4P8L	.SCREW,MACHINE...........................UHB,UHC,UHH,UHM,UHV	EA	4
422	19	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT.............................UHB,UHC,UHH,UHM,UHV	EA	14
422	20	MFOZZ	DELETED	97499	205-072-264-1	.BRACKET,ANGLE...........................UHB,UHC,UHH,UHM,UHV	EA	2
422	21	PAOZZ	5310-00-816-1879	80205	NAS679C3M	.NUT,SELF-LOCKING,HE.....................UHB,UHC,UHH,UHM,UHV	EA	10
422	22	PAFDC	1680-00-938-3142	97499	205-072-260-13	.CONTROL BOX,HOIST SEE TM 55-1680-271-40 FOR BREAKDOWN OF PN 205-072-260-13 BL8420-20 RPLS-- PN 205-072-060-3 NSN 1680-00-975-0505.........................UHB,UHC,UHH,UHM,UHV	EA	1
422	23	PAOZZ	5306-00-582-8551	88044	AN5C37A	.BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
422	24	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT.............................UHB,UHC,UHH,UHM,UHV	EA	2
422	25	PAOZZ	5310-00-881-0944	96906	MS21043-5	.NUT,EXTENDED WASHER.....................UHB,UHC,UHH,UHM,UHV	EA	2
422	26	PAOZZ	5306-00-582-9455	88044	AN5C36A	.BOLT,MACHINE............................UHB,UHC,UHH,UHM,UHV	EA	1
422	27	XDOZZ	1680-00-020-3838	97499	205-072-231-1	.SUPPORT.................................UHB,UHC,UHH,UHM,UHV	EA	1
422	28	PBFDD	1680-00-938-3141	97499	205-072-260-11	.WINCH,ACFT MOUNTING RESCUE SEE TM55-1680-271-40 FOR BREAKDOWN OF PN 205-072-260-11 BL8300-4 RPLS-- 205-072-260-1 NSN 1680-00-977-1504................UHB,UHC,UHH,UHM,UHV	EA	1
422	29	PAOZZ	1680-00-977-1503	98313	FDC2650M18	.ADAPTER,QUICK DISCO RESCUE HOIST........UHB,UHC,UHH,UHM,UHV	EA	1
422	30	PAOZZ	5315-00-058-9816	96906	MS16562-257	.PIN,SPRING..............................UHB,UHC,UHH,UHM,UHV	EA	1
422	32	XDOZZ	1680-00-020-3790	97499	205-072-217-1	.LEVER...................................UHB,UHC,UHH,UHM,UHV	EA	1
422	33	PAOZZ	5306-00-721-3299	88044	AN7C36A	.BOLT,MACHINE............................UHB,UHC,UHH,UHM,UHV	EA	1
422	34	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT.............................UHB,UHC,UHH,UHM,UHV	EA	1
422	35	PAOZZ	5310-00-804-1445	80205	NAS1022C7	.NUT,SELF-LOCKING,HE.....................UHB,UHC,UHH,UHM,UHV	EA	1
422	36	AFOZZ	5340-00-839-0762	97499	205-072-221-1	.PIN ASSY,QUICK RELEASE..................UHB,UHC,UHH,UHM,UHV	EA	1
422	37	MFFZZ	DELETED	97499	205-072-221-3	..PIN,QUICK RELEASE......................UHB,UHC,UHH,UHM,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
422	38	PAFZZ	5340-00-834-8401	80205	NAS1354C7C12	..PIN,QUICK RELEASE	UHB,UHC,UHH,UHM,UHV	EA	1
422	39	XDOZZ		88044	AN5C35A	.BOLT,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	2
422	40	XDOZZ	1680-00-020-3792	97499	205-072-219-1	.BRACKET	UHB,UHC,UHH,UHM,UHV	EA	1
422	41	PAOZZ	5306-00-151-1426	88044	AN4-6A	.BOLT,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	2
422	42	PAOZZ	5310-00-813-3232	80205	NAS679C4M	.NUT,SELF-LOCKING,HE	UHB,UHC,UHH,UHM,UHV	EA	4
422	43	MFOZZ	1560-00-430-7785	97499	205-072-274-1	.BRACKET,ANGLE	UHB,UHC,UHH,UHM,UHV	EA	1
422	44	PAOZZ	5340-00-990-9298	81996	EAB70003	.CLAMP,LOOP	UHB,UHC,UHH,UHM,UHV	EA	1
422	45	PAOZZ	5305-00-990-6444	95906	MS35207-261	.SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	5
422	46	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	5
422	47	XDOZZ	1680-00-020-3793	97499	205-072-219-3	.BRACKET	UHB,UHC,UHH,UHM,UHV	EA	1
422	48	PAOZZ	5305-00-167-3635	88044	AN525-415-12	.SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	2
422	49	PAOZZ	5365-00-780-5432	97499	120-032E32-8	.SHIM	UHB,UHC,UHH,UHM,UHV	EA	V
422	50	XDOOO	1680-00-020-3781	97499	205-072-214-1	.POST ASSY RESCUE HOIST	UHB,UHC,UHH,UHM,UHV	EA	1
422	51	XDOZZ	1680-00-020-3779	97499	205-070-010-1	..FITTING ASSEMBLY	UHB,UHC,UHH,UHM,UHV	EA	1
422	52	PAOZZ	5306-00-281-8945	88044	AN4H35A	..BOLT,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	1
422	53	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	3
422	54	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,EXTENDED WASHER	UHB,UHC,UHH,UHM,UHV	EA	2
422	55	XBOZZ	5310-00-902-8192	97499	205-070-022-1	..NUT,WING	UHB,UHC,UHH,UHM,UHV	EA	1
422	56	XDOZZ		97499	205-072-238-1	..SUPPORT	UHB,UHC,UHH,UHM,UHV	EA	1
422	57	PAOZZ	5306-00-182-1963	88044	AN4H15A	..BOLT,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	1
422	58	PAOZZ	1680-00-977-1503	98313	FDC2650M18	...ADAPTER,QUICK DISCO	UHB,UHC,UHH,UHM,UHV	EA	1
422	59	MFOZZ	5340-00-401-7612	97499	205-072-269-1	...CLIP,RETAINING	UHB,UHC,UHH,UHM,UHV	EA	2
422	60	PAOZZ	5340-00-548-8207	81996	EAB700-48	.CLAMP,LOOP	UHB,UHC,UHH,UHM,UHV	EA	1
422	61	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP	UHB,UHC,UHH,UHM,UHV	EA	1
422	62	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	12
422	63	PAOZZ	5315-00-957-0757	96906	MS20392-6C25	.PIN,STRAIGHT,HEADED	UHB,UHC,UHH,UHM,UHV	EA	2
422	64	PAOZZ	5310-00-184-8985	88044	AN960PD716L	.WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	2
422	65	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER	UHB,UHC,UHH,UHM,UHV	EA	2
422	66	PBOZZ	5340-00-849-4534	97499	205-072-234-1	.TURNBUCKLE BODY	UHB,UHC,UHH,UHM,UHV	EA	1
422	67	PAOZZ	5340-00-267-9697	96906	MS21252-9RL	.CLEVIS,ROD END	UHB,UHC,UHH,UHM,UHV	EA	1
422	68	PAOZZ	5340-00-267-9694	96906	MS21252-9LL	.CLEVIS,ROD END	UHB,UHC,UHH,UHM,UHV	EA	1
422	69	PAOZZ	5340-00-841-9960	97499	205-072-237-1	.CLIP,TURNBUCKLE LOC	UHB,UHC,UHH,UHM,UHV	EA	2
422	70	XBOOZ	1680-00-120-0541	97499	205-072-312-1	.BOOM,RESCUE HOIST ASSEMBLY	UHB,UHC,UHH,UHM,UHV	EA	1
422	71	AFOZZ	5340-00-834-6920	97499	205-072-230-1	..PIN,QUICK RELEASE	UHB,UHC,UHH,UHM,UHV	EA	1
422	72	PBFZZ	4010-00-075-7941	83014	LW1023-1-8	...WIRE ROPE,ASSEMBLY	UHB,UHC,UHH,UHM,UHV	EA	1
422	73	PAFZZ	5340-00-990-0384	80205	NAS1358DC7C35	...PIN,QUICK RELEASE	UHB,UHC,UHH,UHM,UHV	EA	1
422	74	PBOZZ	5340-00-841-9947	97499	205-072-220-1	..BRACKET	UHB,UHC,UHH,UHM,UHV	EA	1
422	75	PAOZZ	5340-00-841-9949	97499	205-072-220-2	..BRACKET	UHB,UHC,UHH,UHM,UHV	EA	1
422	76	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE	UHB,UHC,UHH,UHM,UHV	EA	12
422	77	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHB,UHC,UHH,UHM,UHV	EA	16
422	78	PAUZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHH,UHM,UHV	EA	16
422	79	MFOZZ		97499	205-072-225-1	..SUPPORT	UHB,UHC,UHH,UHM,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
422	80	PBOZZ	1680-00-931-2312	97499	205-072-218-1	..FITTING.............UHB,UHC,UHH,UHM,UHV	EA	1
422	81	PAOZZ	5305-00-043-2682	88044	AN509-416R11	..SCREW,MACHINE.............UHB,UHC,UHH,UHM,UHV	EA	1
422	82	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT.............UHB,UHC,UHH,UHM,UHV	EA	
422	83	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,EXTENDED WASHER.............UHB,UHC,UHH,UHM,UHV	EA	4
422	84	MFOZZ		97499	205-072-224-1	.SUPPORT.............UHB,UHC,UHE,UHH UHM,UHV,UHX	EA	1
422	85	PAOZZ	3120-00-516-1843	80205	NAS77-8-16	..BUSHING.............UHB,UHC,UHH,UHM,UHV	EA	2
422	86	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL.............UHB,UHC,UHH,UHM,UHV	EA	10
422	87	PAFZZ	5310-00-728-7717	96906	MS21069L4	..NUT,SELF-LOCKING,PL.............UHB,UHC,UHH,UHM,UHV	EA	6
422	88	PAFZZ	5310-00-761-4221	96906	MS21073L3	..NUT,SELF-LOCKING,PL.............UHB,UHC,UHH,UHM,UHV	EA	1
422	89	PAFZZ	5310-00-989-0560	80205	NAS1330S3K116	..NUT,PLAIN,BLIND RIV.............UHB,UHC,UHH,UHM,UHV	EA	1
422	90	PAOZZ	1680-00-128-7482	97499	205-072-313-1	COVER,BOOM,RESCUE H.............UHB,UHC,UHH,UHM,UHV	EA	1
422	91	XDOZZ	1680-00-020-3817	97499	205-072-228-3	.COVER.............UHB,UHC,UHH,UHM,UHV	EA	1
422	92	PAOZZ	3020-00-517-1327	96906	MS20221A2	PULLEY,GROOVE.............UHB,UHC,UHH,UHM,UHV	EA	2
422	93	PAOZZ	5306-00-156-2529	88044	AN23-56A	.BOLT,MACHINE.............UHB,UHC,UHH,UHM,UHV	EA	1
422	94	PAOZZ	5306-00-156-2528	88044	AN23-54A	.BOLT,MACHINE.............UHB,UHC,UHH,UHM,UHV	EA	1
422	95	PAOZZ	4010-00-986-6199	08484	BL8439	.WIRE ROPE ASSEMBLY.............UHB,UHC,UHH,UHM,UHV	EA	1
422	96	PAOZZ	5315-00-904-0912	96906	MS20392-7C101	.PIN,STRAIGHT,HEADED.............UHB,UHC,UHH,UHM,UHV	EA	1
422	97	PAOZZ	5310-00-184-8976	88044	AN960PD816L	.WASHER,FLAT.............UHB,UHC,UHH,UHM,UHV	EA	2
422	98	PAOZZ	5315-00-241-7330	96906	MS24665-304	.PIN,COTTER.............UHB,UHC,UHH,UHM,UHV	EA	2
422	99	MFOZZ	DELETED	97499	205-072-222-1	.GUIDE,CABLE.............UHB,UHC,UHH,UHM,UHV	EA	1
422	100	MFOZZ	DELETED	97499	205-072-226-1	.STRAP,RETAINING.............UHB,UHC,UHH,UHM,UHV	EA	7
422	101	MFOZZ	DELETED	97499	205-072-227-1	.BRACKET,SUPPORT.............UHB,UHC,UHH,UHM,UHV	EA	1
422	102	MFOZZ	DELETED	97499	205-072-227-3	.BRACKET,SUPPORT.............UHB,UHC,UHH,UHM,UHV	EA	2
422	103	PAOZZ	5305-00-702-0609	96906	MS24694S50	.SCREW,MACHINE.............UHB,UHC,UHH,UHM,UHV	EA	4
422	104	PAOZZ	5315-00-812-3752	96906	MS20392-2C57	.PIN,STRAIGHT,HEADED.............UHB,UHC,UHH,UHM,UHV	EA	1
422	105	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER.............UHB,UHC,UHH,UHM,UHV	EA	2
422	106	PAOZZ	5365-00-753-3337	80205	NAS43HT6-20	.SPACER,SLEEVE.............UHB,UHC,UHH,UHM,UHV	EA	2
422	107	PAOZZ	5315-00-904-1641	96906	MS20392-7C57	.PIN,STRAIGHT,HEADED.............UHB,UHC,UHH,UHM,UHV	EA	1
422	108	PAOZZ	5310-00-184-8976	88044	AN960PD816L	.WASHER,FLAT.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
422	109	XDOZZ	1680-00-020-3788	97499	205-072-216-1	.HOUSING,HOIST U/O PN 205-072-211-5.....UHB,UHC,UHH,UHM,UHV	EA	1
422	110	XBOZZ	1680-00-128-7483	97499	205-072-314-1	.HOUSING U/O PN 205-072-311-1.............UHB,UHC,UHH,UHM,UHV	EA	1
422	111	PAOZZ	5305-00-993-2738	96906	MS35207-280	.SCREW,MACHINE.............UHB,UHC,UHH,UHM,UHV	EA	6
422	112	PAOFF	1680-00-931-7085	97499	205-070-244-1	.ROLLER ASSEMBLY.............UHB,UHC,UHH,UHM,UHV	EA	4
422	113	PAOFF	1680-00-931-7086	97499	205-070-247-1	.ROLLER ASSY,CABLE INTERNAL RESCUE HOIST ....UHB,UHC,UHH,UHM,UHV	EA	2
422	114	PAFZZ	3120-00-891-1422	97499	205-070-242-1	..BEARING,SLEEVE.............UHB,UHC,UHH,UHM,UHV	EA	8
422	115	XDOZZ		80205	NAS1303-28	.BOLT,MACHINE.............UHB,UHC,UHH,UHM,UHV	EA	2
422	116	PAOZZ	5365-00-662-8788	80205	NAS43DD3-36	.SPACER,SLEEVE.............UHB,UHC,UHH,UHM,UHV	EA	2
422	117	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT.............UHB,UHC,UHH,UHM,UHV	EA	4
422	118	PAOZZ	5306-00-182-2012	88044	AN3H23A	.BOLT,MACHINE.............UHB,UHC,UHH,UHM,IHV	EA	4
422	119	PAOZZ	5310-00-842-6400	97499	205-070-243-1	.WASHER,NONMETALLIC.............UHB,UHC,UHH,UHM,UHV	EA	20
422	119	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT.............UHB,UHC,UHH,UHM,UHV	EA	10

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
422	120	PAOZZ	5365-00-580-5787	80205	NAS43HT3-12	.SPACER,SLEEVE..........UHB,UHC,UHH,UHM,UHV	EA	4
422	121	PAOZZ	5340-00-134-3501	97499	205-070-246-1	.PLATE,SIDE..........UHB,UHC,UHH,UHM,UHV	EA	2
422	122	PAOZZ	5306-00-180-1948	88044	AN3-23A	.BOLT,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	4
422	123	XDOZZ		80205	NAS428K3-6	.BOLT,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	1
422	124	PAOZZ	5310-00-576-5752	96906	MS35333-39	.WASHER,LOCK..........UHB,UHC,UHH,UHM,UHV	EA	1
422	125	PBOZZ	5930-00-503-3883	96906	MS24331-1	.SWITCH,SENSITIVE..........UHB,UHC,UHH,UHM,UHV	EA	1
422	126	PAOZZ	5310-00-268-6022	88044	AN315C-3R	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHH,UHM,UHV	EA	1
422	127	XDOZZ		88044	AN4C32	.BOLT,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	1
422	128	PAOZZ	5310-00-721-4434	88044	AN320C4	.NUT,PLAIN,SLOTTED,H..........UHB,UHC,UHH,UHM,UHV	EA	1
422	129	XDOZZ	1680-00-020-3804	97499	205-072-223-1	.TRIGGER ASSY..........UHB,UHC,UHH,UHM,UHV	EA	1
422	130	PA000	1680-00-006-5162	08484	BL7370-1	.HOOK AND HANDW HEEL..........UHB,UHC,UHH,UHM,UHV	EA	1
422	131	PAOZZ	5340-00-445-7673	08484	BL6304	..BUMPER ASSEMBLY..........UHB,UHC,UHH,UHM,UHV	EA	1
422	132	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	8
422	133	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHH,UHM,UHV	EA	8
422	134	PAOZZ	1680-00-902-5274	97499	205-070-253-1	.GUARD,INTERNAL RESCUE HOIST..........UHB,UHC,UHH,UHM,UHV	EA	1
422	135	PAOZZ	1680-00-902-5276	97499	205-070-254-1	.GUARD,INTERNAL RESCUE HOIST..........UHB,UHC,UHH,UHM,UHV	EA	1
422	136	PAOZZ	1680-00-902-5278	97499	205-070-255-1	.GUARD,INTERNAL RESCUE HOIST..........UHB,UHC,UHH,UHM,UHV	EA	1
422	137	PAOZZ	1680-00-900-3275	97499	205-070-256-1	.GUARD,INTERNAL RESCUE HOIST..........UHB,UHC,UHH,UHM,UHV	EA	1
422	138	XDOZZ		26798	100996	.CUTTER,CARTRIDGE AS..........UHB,UHC,UHH,UHM,UHV	EA	1
422	139	XDOZZ	5305-00-282-4919	88044	AN502-10-12	.SCREW,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	4
422	140	PAOZZ	1680-00-902-5272	97499	205-070-026-1	.BUMPER ASSY,RESCUE HOIST..........UHB,UHC,UHH,UHM,UHV	EA	1
422	141	AFOZZ	6150-00-489-0120	97499	205-075-438-9	.CABLE ASSEMBLY,SHI..........UHB,UHC,UHH,UHM,UHV	EA	1
422	142	PAFZZ	5935-00-726-2674	96906	MS3106R32-6P	..CONNECTOR,PLUG,ELEC PLUG,CABIN ROOF DISC ....UHB,UHC,UHH,UHM,UHV	EA	1
422	143	PAFZZ		96906	MS3456W32-9S	..CONNECTOR,PLUG..........UHB,UHC,UHH,UHM,UHV	EA	1
422	144	PAOZZ	5305-00-993-1848	96906	MS35207-265	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
422	145	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP..........UHB,UHC,UHH,UHM,UHV	EA	3
422	146	AFOZZ	6150-00-489-0119	97499	205-075-438-17	.CABLE ASSEMBLY,HOIS..........UHB,UHC,UHH,UHM,UHV	EA	1
422	147	PAFZZ	5935-00-927-0882	96906	MS3126E12-10PW	..CONNECTOR,PLUG,ELEC PLUG HOIST CONT BOX ....UHB,UHC,UHH,UHM,UHV	EA	1
422	148	PAFZZ	5970-00-954-1624	06090	RNF100-3-8BLACK	..INSULATION SLEEVING..........UHB,UHC,UHE,UHH,UHM,UHV	EA	1
422	149	PAFZZ	5940-01-079-1647	81349	M7928/5-3	..SPLICE,CONDUCTOR..........UHB,UHC,UHH,UHM,UHV	EA	4
422		PAOZZ	1377-00-011-9082	26798	278C01-10	PARTS KIT,CUTTER RELOADING SEE FUNCTIONAL GROUP 50 FOR COMPONENTS U/O PN 100996..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

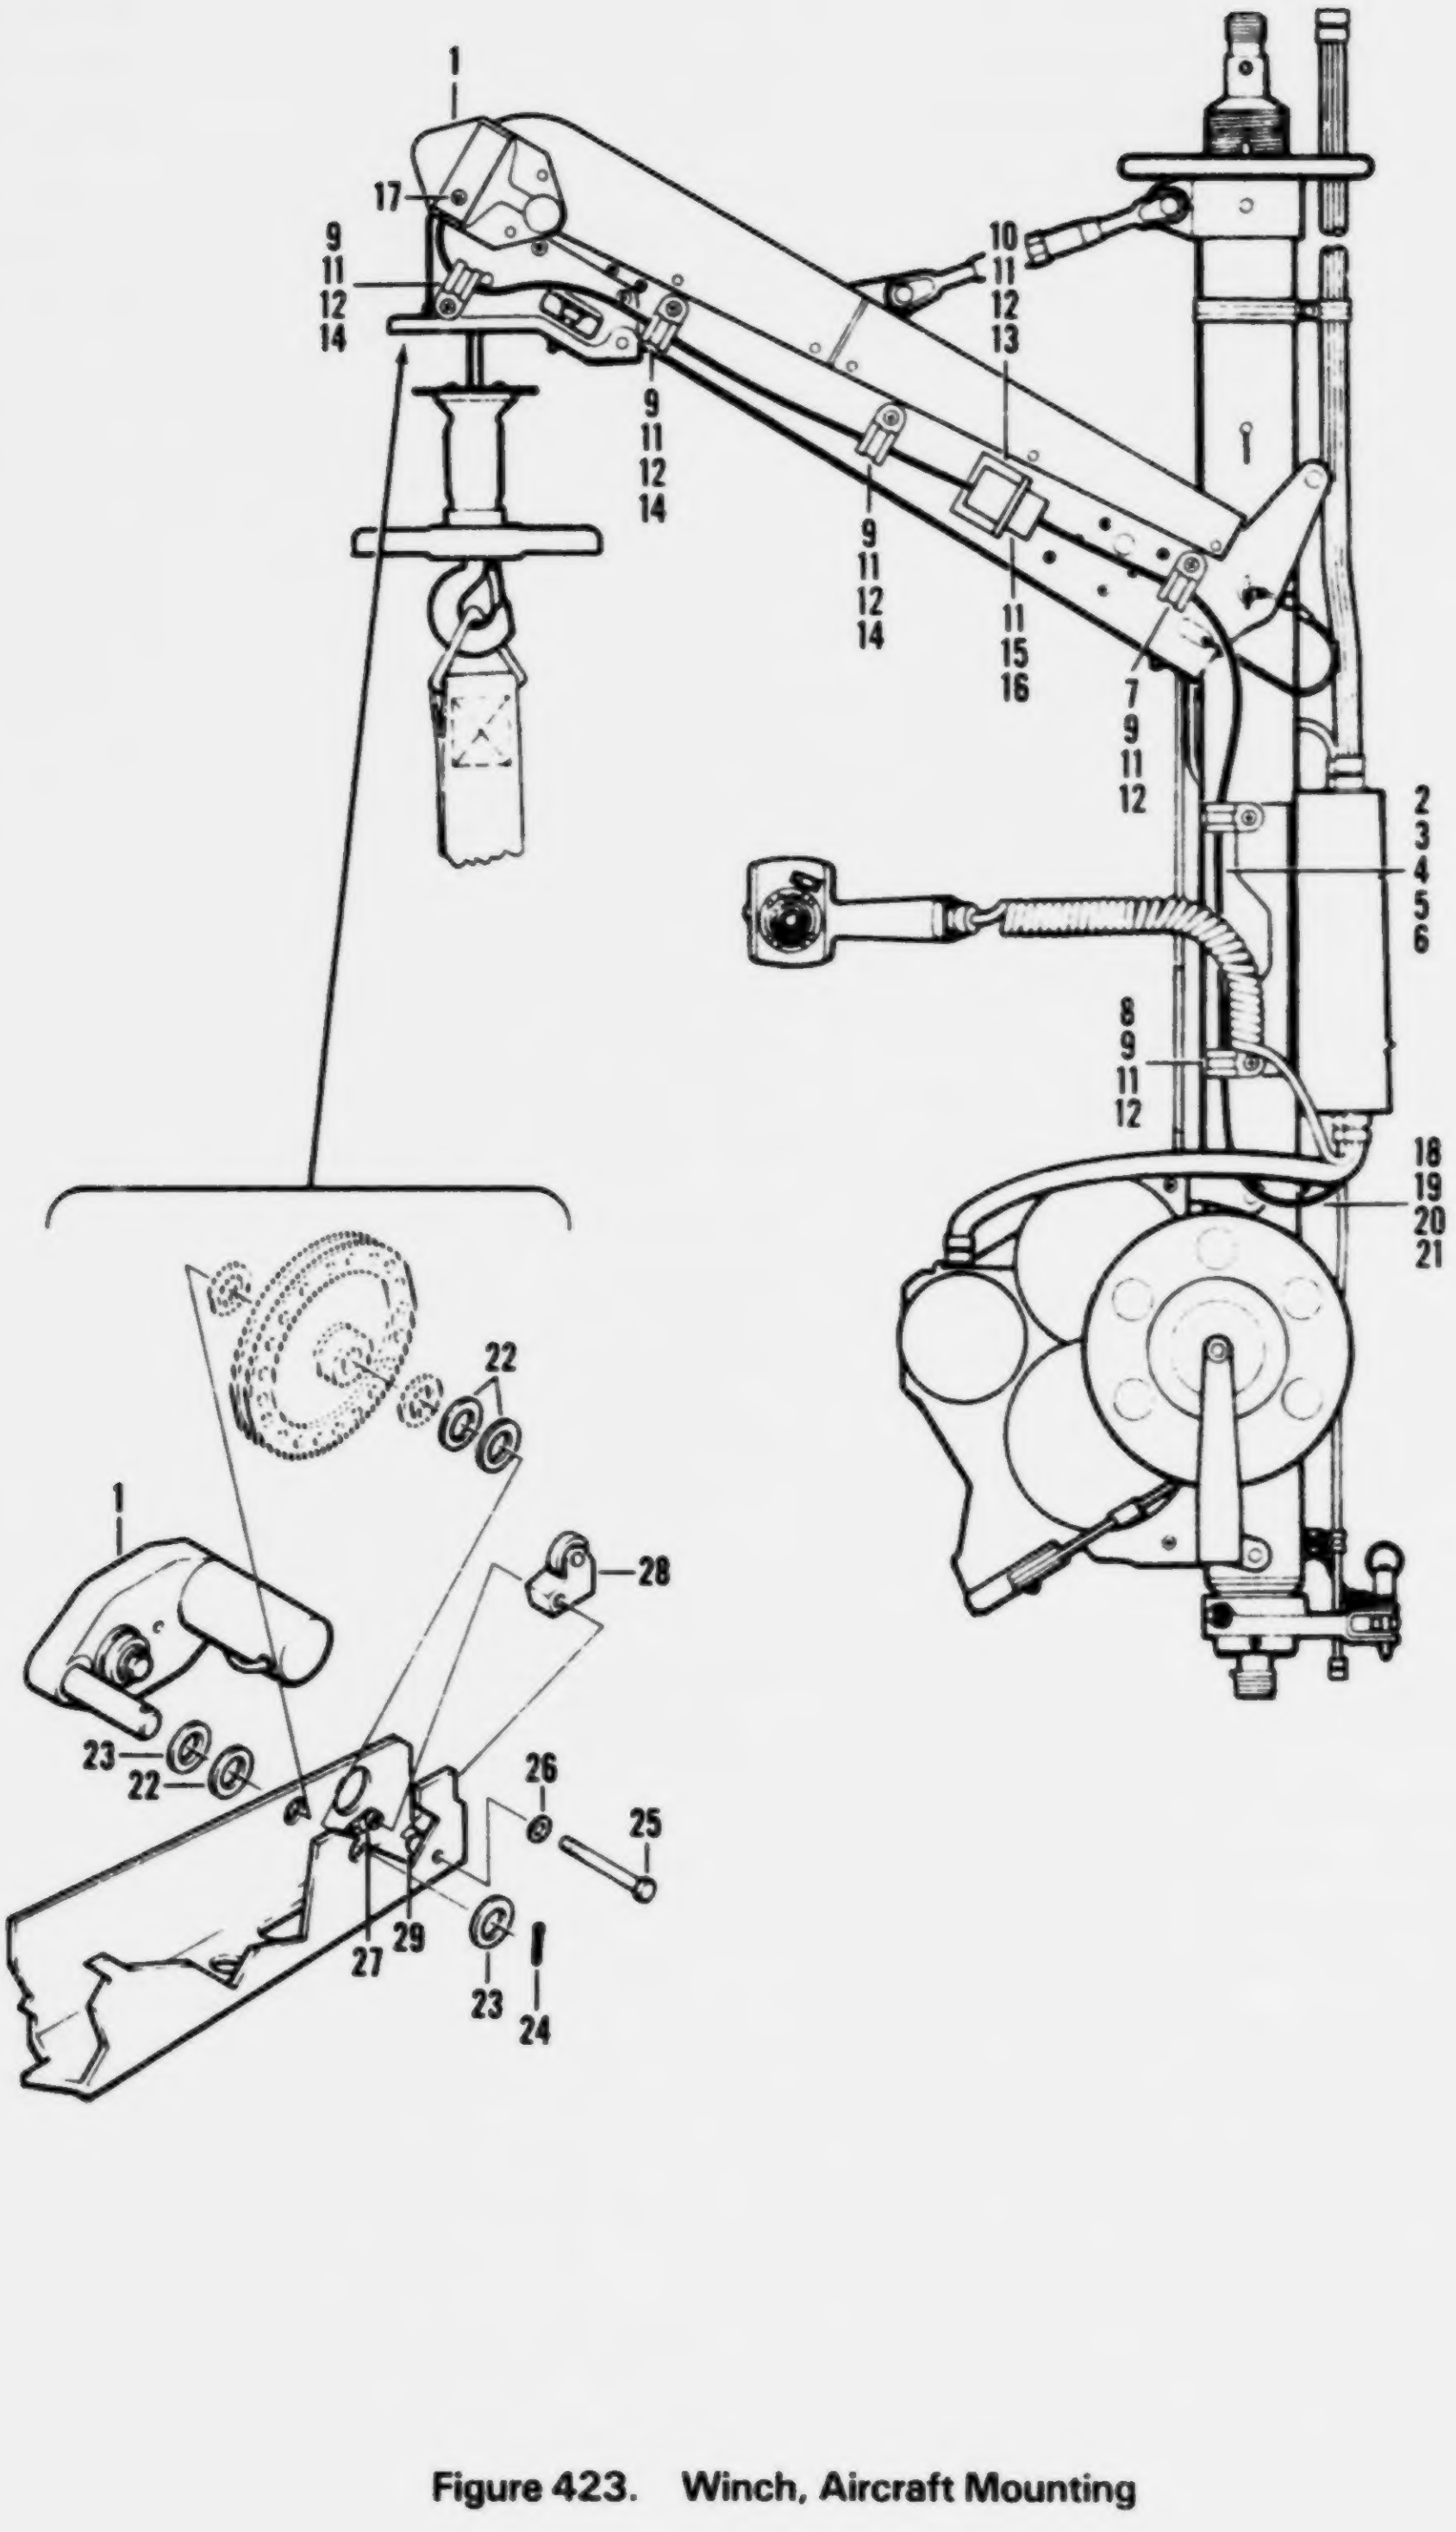
1
17
9
11
12
14
10
11
12
13
9
11
12
14
9
11
12
14
11
15
16
7
9
11
12
2
3
4
5
6
8
9
11
12
18
19
20
21
22
1
28
23
22
26
25
27
29
23
24

Figure 423. Winch, Aircraft Mounting

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	U/M	QTY INC IN UNIT
423		A0000	1680-00-179-6047	97499	205-072-311-1	WINCH,ACFT MOUNTING USBL EFF (UH-1P)62-1872 & SUBSEQUENT SEE FIG.419 FOR NHA RPLS-- PN 205-072-211-5 ....UHB,UHC,UHH,UHM	EA	1
423	1	PA000	1680-00-115-2639	08484	BL13800	.TRACTION SHEAVE ASS..........UHB,UHC,UHH,UHM,UHV	EA	1
423	2	AFOFF		97499	205-075-438-29	.CABLE ASSEMBLY..........UHB,UHC,UHH,UHM,UHV	EA	1
423	3	PBFZZ	5935-00-880-2668	96906	MS3110F8-4S	..CONNECTOR,RECEPT..........UHB,UHC,UHH,UHM,UHV	EA	1
423	4	PAFZZ	5935-00-761-3884	96906	MS3126F14-5P	..CONNECTOR,PLUG,ELEC..........UHB,UHC,UHH,UHM,UHV	EA	1
423	5	MFFZZ		97499	130-005-7-50	..INSULATION SLEEVING..........UHB,UHC,UHH,UHM,UHV	EA	1
423	6	MFFZZ		97499	130-005-6-58	..INSULATION SLEEVING PLUG,HOIST CONT BOX ....UHB,UHC,UHH,UHM,UHV	EA	1
423	7	PAOZZ	5306-00-156-2528	88044	AN23-54A	.BOLT,CLEVIS..........UHB,UHC,UHH,UHM,UHV	EA	1
423	8	PAOZZ	5306-00-551-7006	88044	AN3H33A	.BOLT,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	1
423	9	PAOZZ	5340-00-151-6997	96906	MS21122-4	.CLAMP,LOOP..........UHB,UHC,UHH,UHM,UHV	EA	5
423	10	PAOZZ	5305-00-842-7492	96906	MS27039C1-06	.SCREW,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	2
423	11	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHH,UHM,UHV	EA	13
423	12	PAOZZ	5310-00-816-1879	80205	NAS679C3M	.NUT,SELF-LOCKING,HE..........UHB,UHC,UHH,UHM,UHV	EA	7
423	13	MFOZZ		97499	205-072-317-1	.BRACKET,ANGLE..........UHB,UHC,UHH,UHM,UHV	EA	1
423	14	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	2
423	15	PAOZZ	5305-00-957-7815	96906	MS24693S4	.SCREW,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	4
423	16	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON......UHB,UHC,UHH,UHM,UHV	EA	4
423	17	PAOZZ	5305-00-088-9665	96906	MS24693C29	.SCREW,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	1
423	18	AFOFF		97499	205-075-438-31	.CABLE ASSEMBLY..........UHB,UHC,UHH,UHM,UHV	EA	1
423	19	PBFZZ	6145-00-851-8506	96906	MS25190B20	..WIRE,ELECTRICAL..........UHB,UHC,UHH,UHM,UHV	FT	1
423	20	PAFZZ	5940-00-813-0698	96906	MS25036-101	..TERMINAL,LUG..........UHB,UHC,UHH,UHM,UHV	EA	1
423	21	PAFZZ	5940-00-113-8184	96906	MS25036-150	..TERMINAL,LUG..........UHB,UHC,UHH,UHM,UHV	EA	V
423	22	PAOZZ	5365-00-121-6607	97499	205-072-316-1	.SHIM..........UHB,UHC,UHH,UHM,UHV	EA	3
423	23	PAOZZ	5310-00-167-0806	88044	AN960C816	.WASHER,FLAT..........UHB,UHC,UHH,UHM,UHV	EA	2
423	24	PAOZZ	5315-00-852-2336	96906	MS9245-45	.PIN,COTTER..........UHB,UHC,UHH,UHM,UHV	EA	1
423	25	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE..........UHB,UHC,UHH,UHM,UHV	EA	1
423	26	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT..........UHB,UHC,UHH,UHM,UHV	EA	1
423	27	PAOZZ	5310-00-734-1850	96906	MS21071L3	.NUT,SELF-LOCKING,PL..........UHB,UHC,UHH,UHM,UHV	EA	1
423	28	PAOZZ	1680-00-115-2638	08484	BL13802	.ROLLER,PRESSURE,HOI..........UHB,UHC,UHH,UHM,UHV	EA	1
423	29	PBOZZ	5315-00-485-0637	96906	MS9048-191	.PIN,SPRING..........UHB,UHC,UHH,UHM,UHV	EA	1

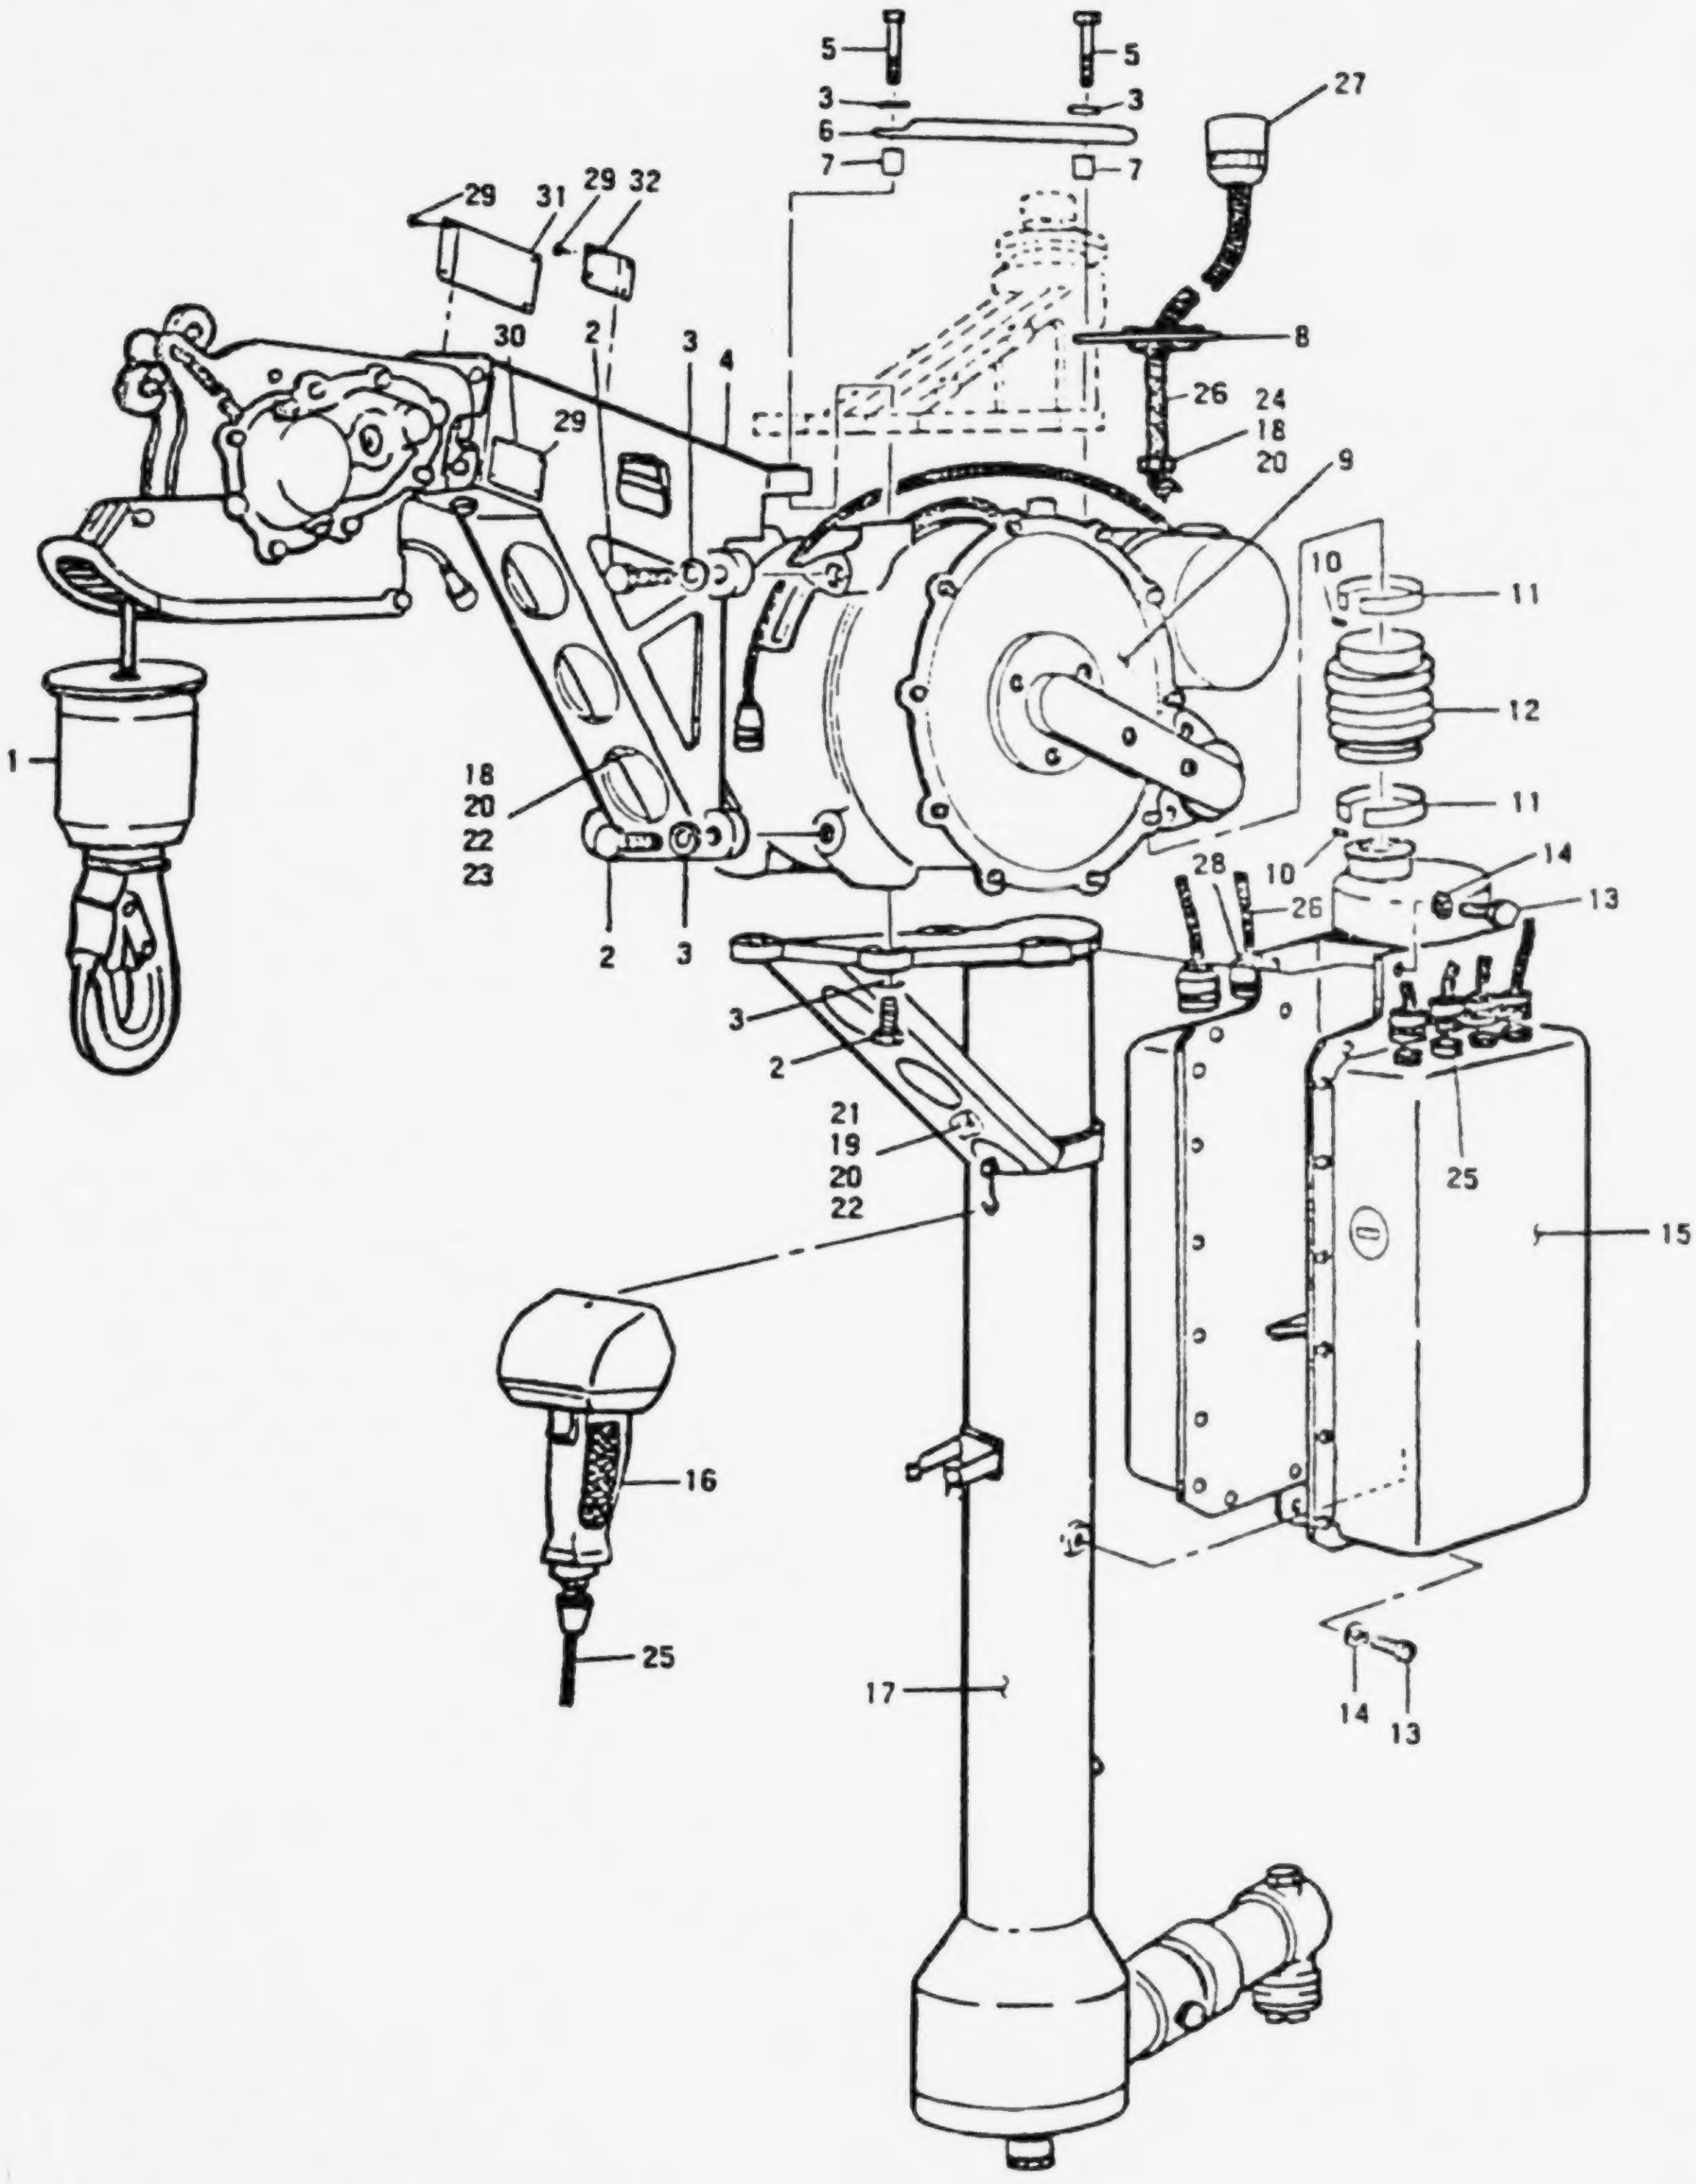
5
5
3
3
6
7
7
27
29
31
29
32
30
2
3
4
29
8
26
24
18
20
9
10
11
12
1
11
18
20
22
23
28
10
14
26
13
2
3
3
2
21
19
20
22
25
15
16
25
17
14
13

Figure 423A. Hoist, High Performance

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423A		PAODD	1680-01-058-3671	82402	42305R1	HOIST,HIGH PERFORMA BREAKDOWN OF PN 42305R1..........UHH,UHV	EA	1
423A	1	PAOFF	1680-01-070-0971	82402	42305E280	.HOOK ASSY,HOIST SEE FIG.423D FOR BREAKDOWN..........UHH,UHV	EA	1
423A	2	PAOZZ	5306-00-975-2073	96906	MS21250H06006	.BOLT,SHEAR..........UHH,UHV	EA	8
423A	3	PAOZZ	5310-00-149-9146	96906	MS20002C6	.WASHER,RECESSED..........UHH,UHV	EA	12
423A	4	PAOFF	1680-01-070-9953	82402	42277R300	.BOOM HEAD ASSY,HOIS SEE FIG.423B FOR BREAKDOWN......UHH,UHV	EA	1
423A	5	PAOZZ	5306-00-275-9564	88044	AN176H24	.BOLT,CLOSE TOLERANC..........UHH,UHV	EA	4
423A	6	PAOZZ	1680-01-112-2944	82402	42305E42	.HANDLE,CARRYING..........UHH,UHV	EA	2
423A	7	PAOZZ	5365-01-106-4280	82402	42305C41	.SPACER,SLEEVE..........UHH,UHV	EA	4
423A	8	PAOZZ	1680-01-102-8760	82402	42305D711	.BRACKET ASSEMBLY..........UHH,UHV	EA	1
423A	9	PAODD	1680-01-089-4331	82402	42305R100	.WINCH,AIRCRAFT MOUN SEE FIG.423C FOR BREAKDOWN......UHH,UHV	EA	1
423A	10	PAOZZ	5340-00-165-7832	25281	502R	.STRAP,RETAINING..........UHH,UHV	EA	2
423A	11	PAOZZ	5340-00-094-3554	25281	503R	.CLIP..........UHH,UHV	FT	2
423A	12	PAOZZ	1680-01-071-9545	82402	42277E194	.BOOT,DUST AND MOISTURE..........UHH,UHV	EA	1
423A	13	PAOZZ	5306-00-177-5558	96906	MS9530-09	.BOLT,MACHINE..........UHH,UHV	EA	4
423A	14	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHH,UHV	EA	4
423A	15	PAODD	1680-01-070-0985	82402	42305R700	.CONTROL PANEL ASSEM SEE FIG.423G FOR BREAKDOWN......UHH,UHV	EA	1
423A	16	PAOFF	1680-01-070-7556	82402	42305E720	.PENDANT CONTROL ASS SEE FIG.423M FOR BREAKDOWN......UHH,UHV	EA	1
423A	17	PAODD	1680-01-070-9950	82402	42305R500	.SUPPORT ASSY,BOOM SEE FIG.423E FOR BREAKDOWN........UHH,UHV	EA	1
423A	18	PAOZZ	5305-00-614-0246	96906	MS35266-63	.SCREW,MACHINE..........UHH,UHV	EA	3
423A	19	PAOZZ	5305-00-271-7746	88044	AN115807	.SCREW,MACHINE..........UHH,UHV	EA	1
423A	20	PAOZZ	5310-00-902-6676	96906	MS21083N3	.NUT,SELF-LOCKING,HE..........UHH,UHV	EA	3
423A	21	PAOZZ	5340-00-990-7610	96906	MS21333-66	.CLAMP,LOOP..........UHH,UHV	EA	3
423A	22	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE..........UHH,UHV	EA	2
423A	23	PAOZZ	5340-00-471-1913	96906	MS21103-4	.CLAMP,LOOP..........UHH,UHV	EA	1
423A	24	PBOZZ	5340-01-075-2154	84971	TA5000LH14HA	.CLAMP,LOOP..........UHH,UHV	EA	1
423A	25	PBOZZ	1680-01-082-8321	82402	42305E710	.CABLE ASSEMBLY,SPEC..........UHH,UHV	EA	1
423A	26	FAOZZ	1680-01-122-3580	82402	42305E730	.CABLE ASSEMBLY,SPEC..........UHH,UHV	EA	1
423A	27	PAOZZ	5935-01-055-3891	96906	MS3106F32-6P	.CONNECTOR,PLUG,ELEC..........UHH,UHV	EA	1
423A	28	PAOZZ	5935-01-136-8073	96906	MS3106F32-9S	.CONNECTOR,PLUG,ELEC..........UHH,UHV	EA	1
423A	29	PAOZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE..........UHH,UHV	EA	12
423A	30	PAOZZ	9905-01-122-2121	82402	42305C229	.PLATE,INSTRUCTION..........UHH,UHV	EA	1
423A	31	MFFZZ		82402	42305D30	.PLATE,IDENTIFICATIO..........UHH,UHV	EA	1
423A	32	XDOZZ		82402	42305C12	.PLATE..........UHH,UHV	EA	1

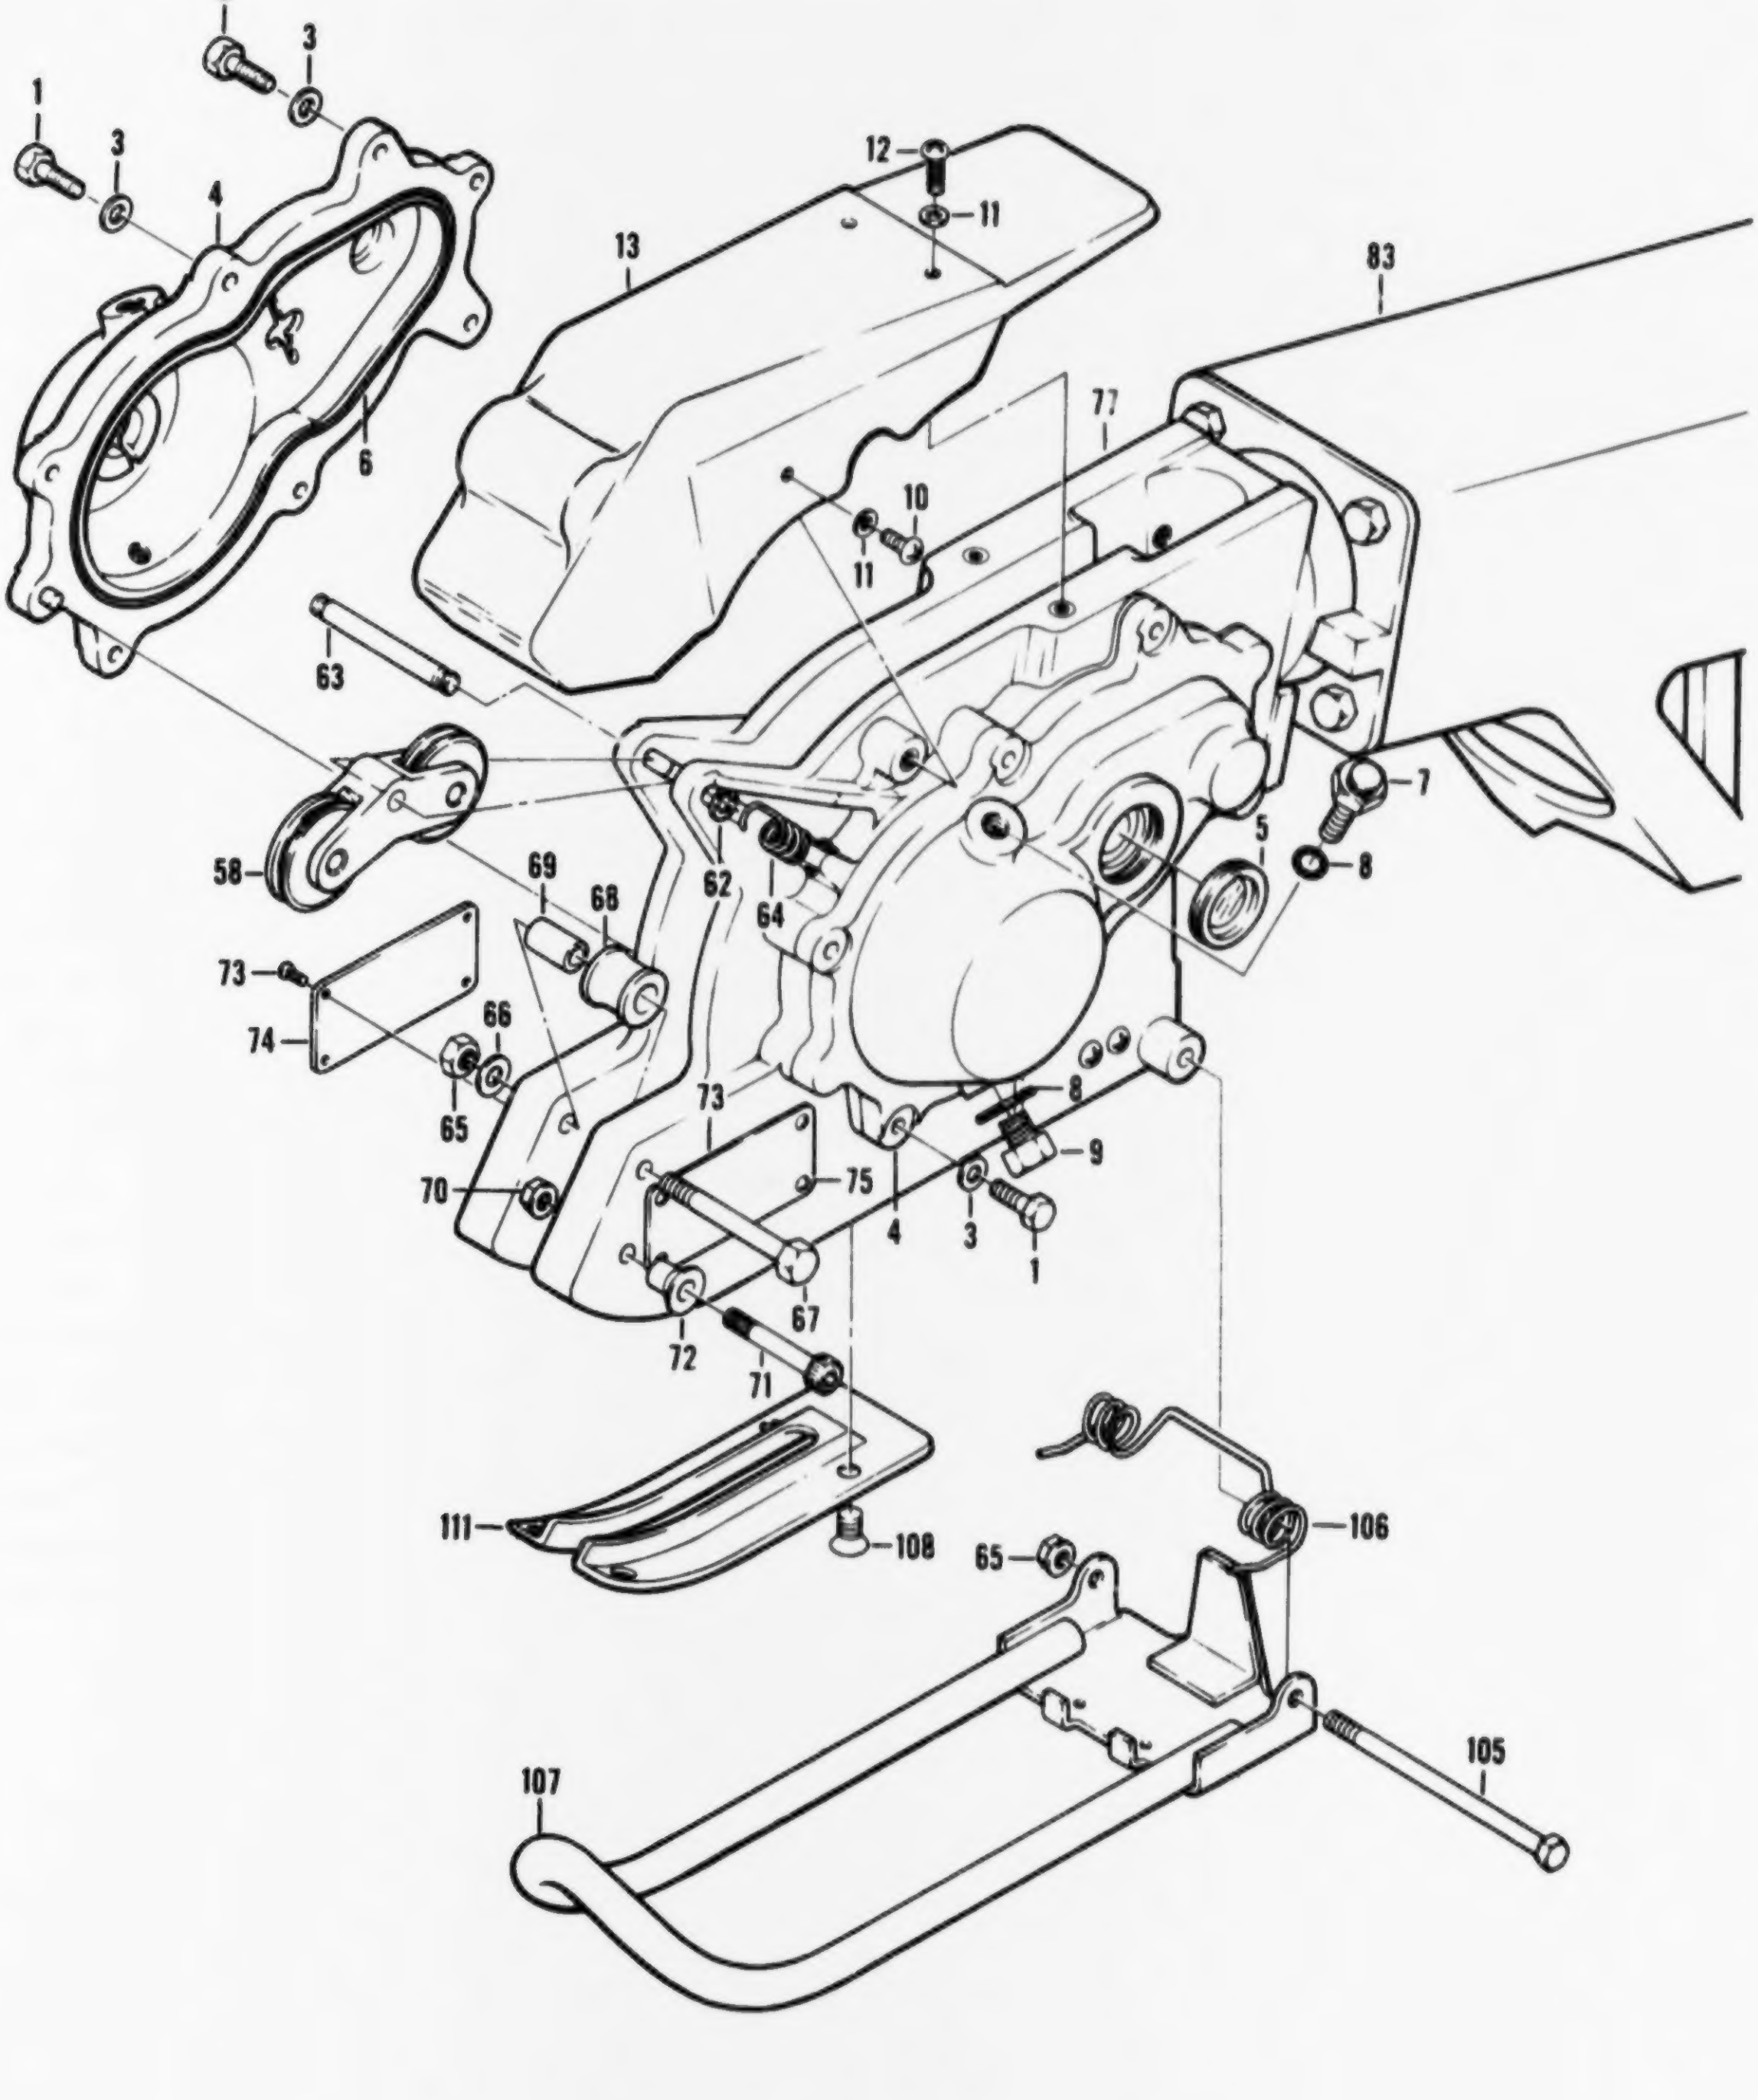
2
3
1
3
4
12
11
13
83
6
77
10
11
63
7
5
8
58
69
68
62
64
73
66
74
65
8
73
9
70
75
4
3
1
67
72
71
106
111
108
65
105
107

Figure 423B. Boomhead Assembly (Sheet 1 of 3)

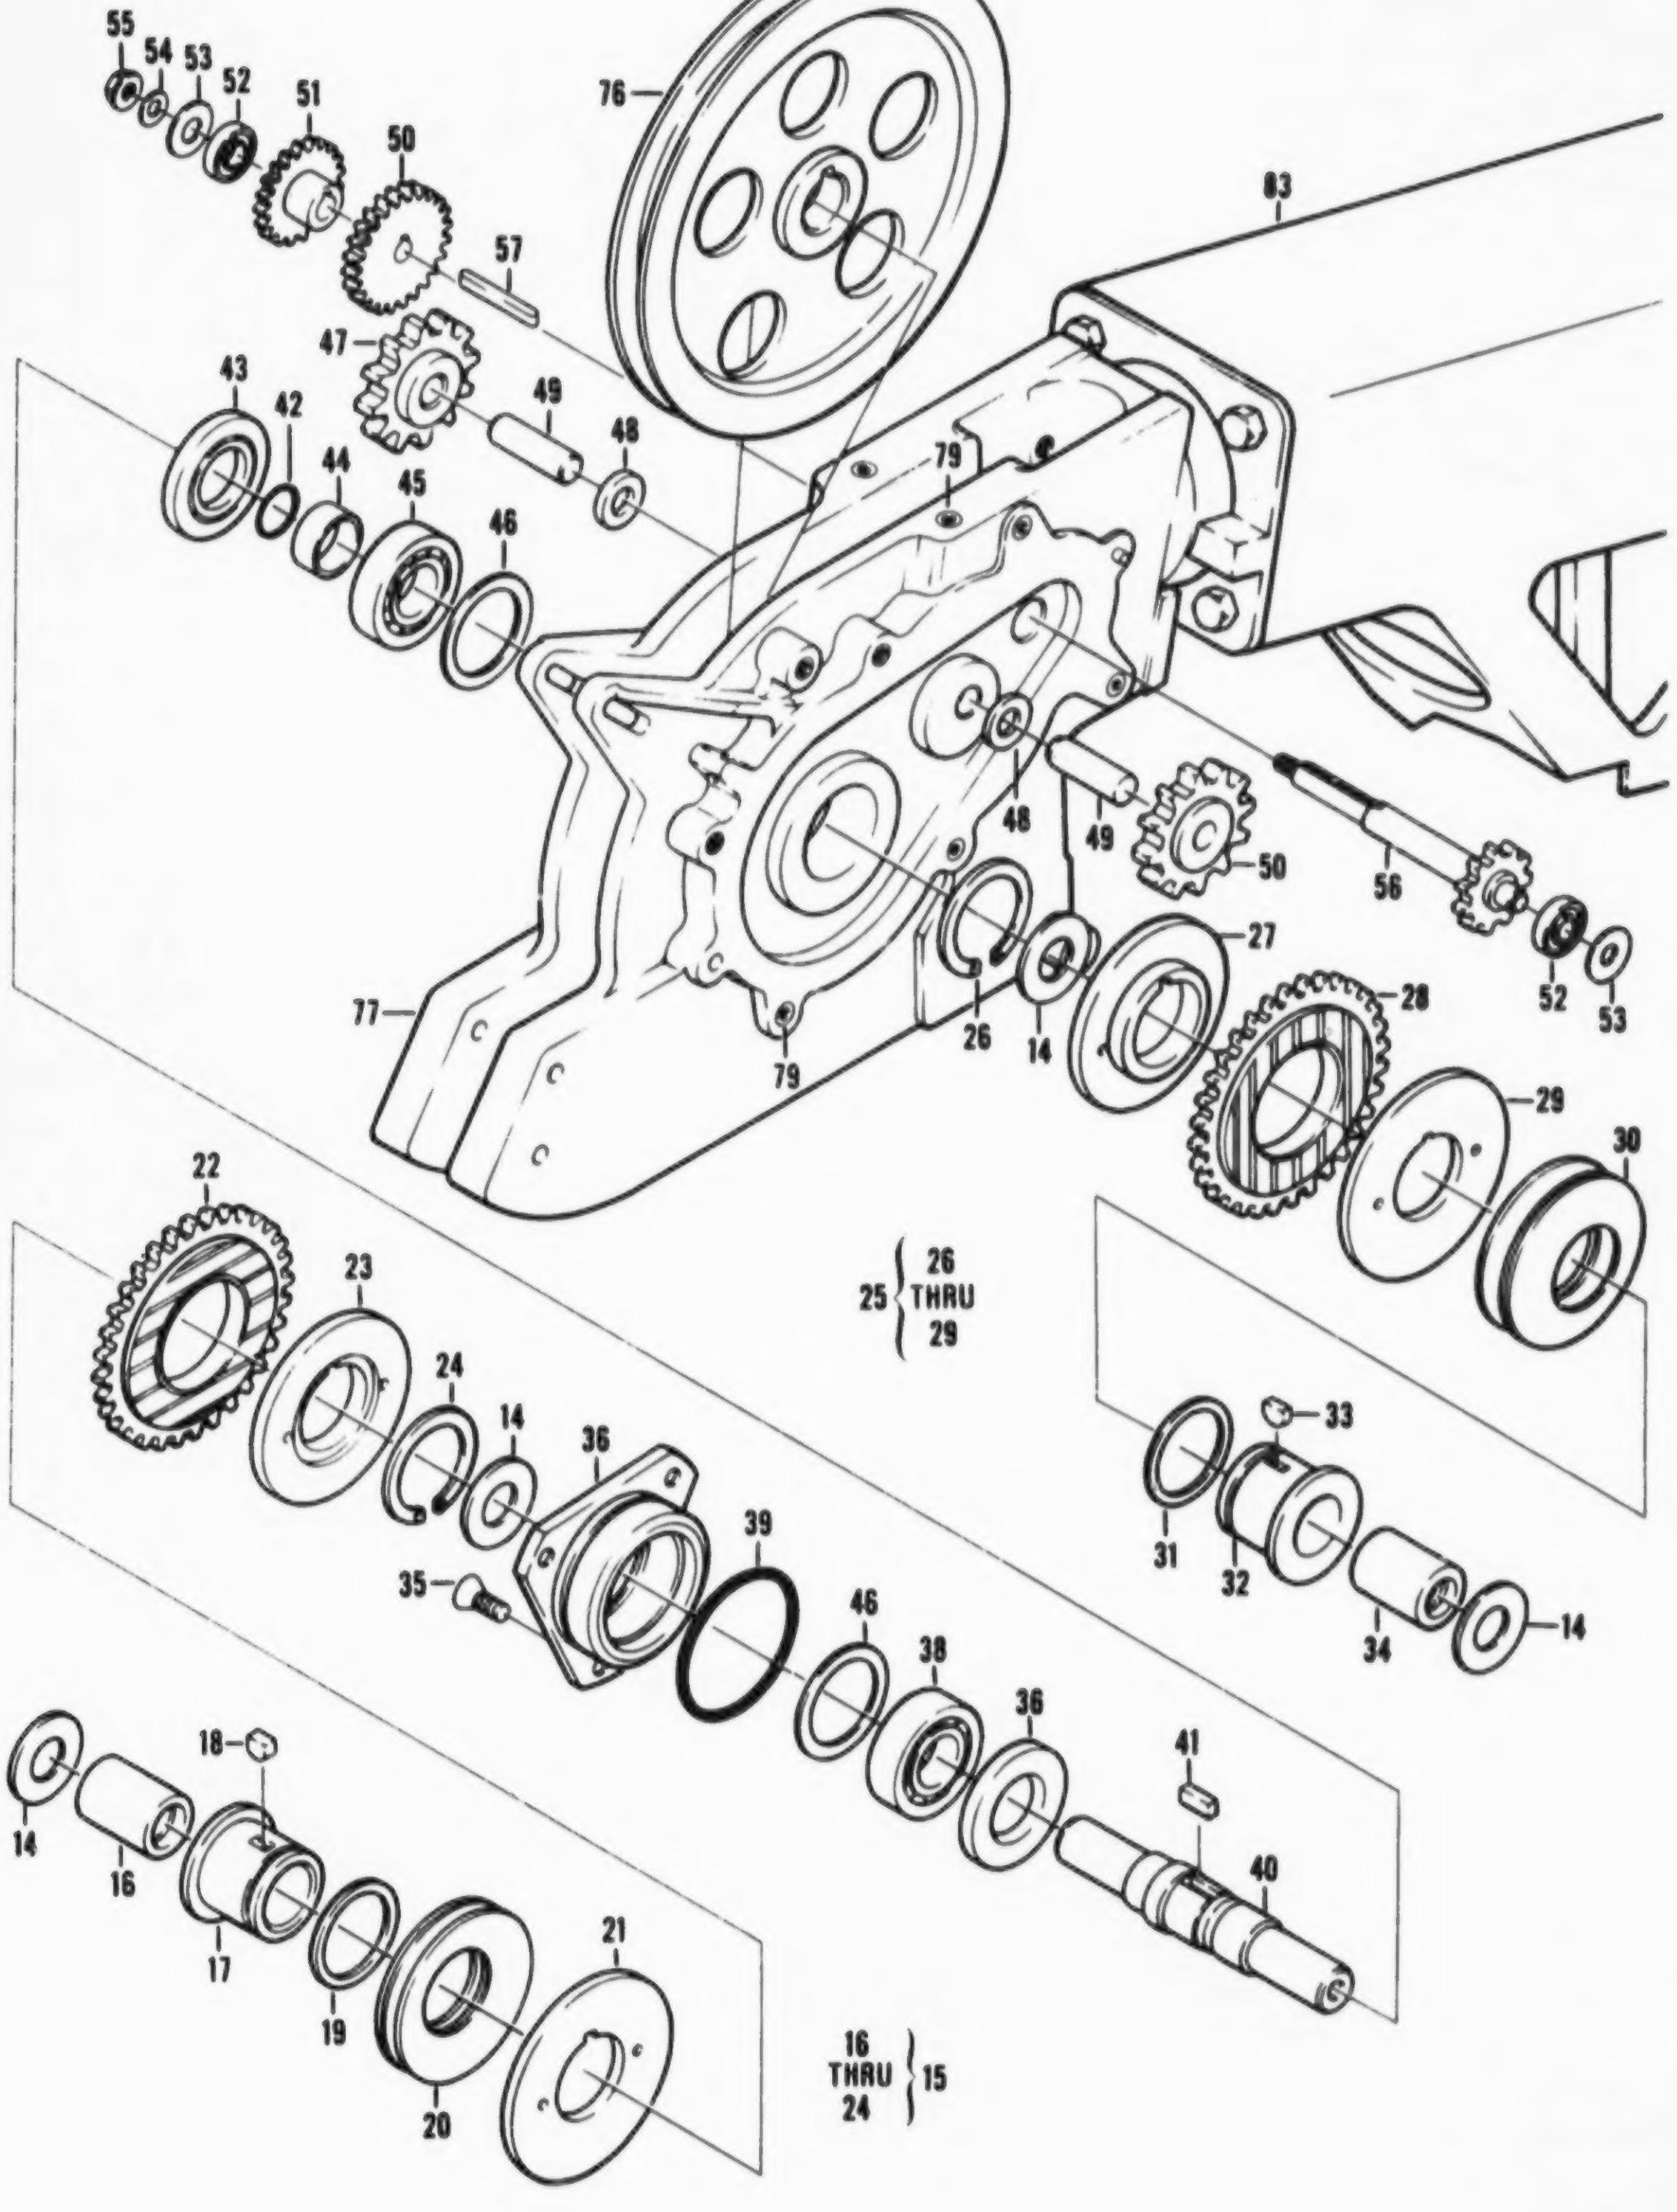
55
54
53
52
51
50
57
76
83
47
49
48
43
42
44
45
46
79
48
49
50
56
52
53
27
28
77
26
14
79
29
30
22
23
24
14
36
25 { 26 THRU 29
33
31
32
34
14
35
39
46
38
36
41
40
18
14
16
17
19
20
21
16 THRU 24 } 15

Figure 423B. Boomhead Assembly (Sheet 2 of 3)

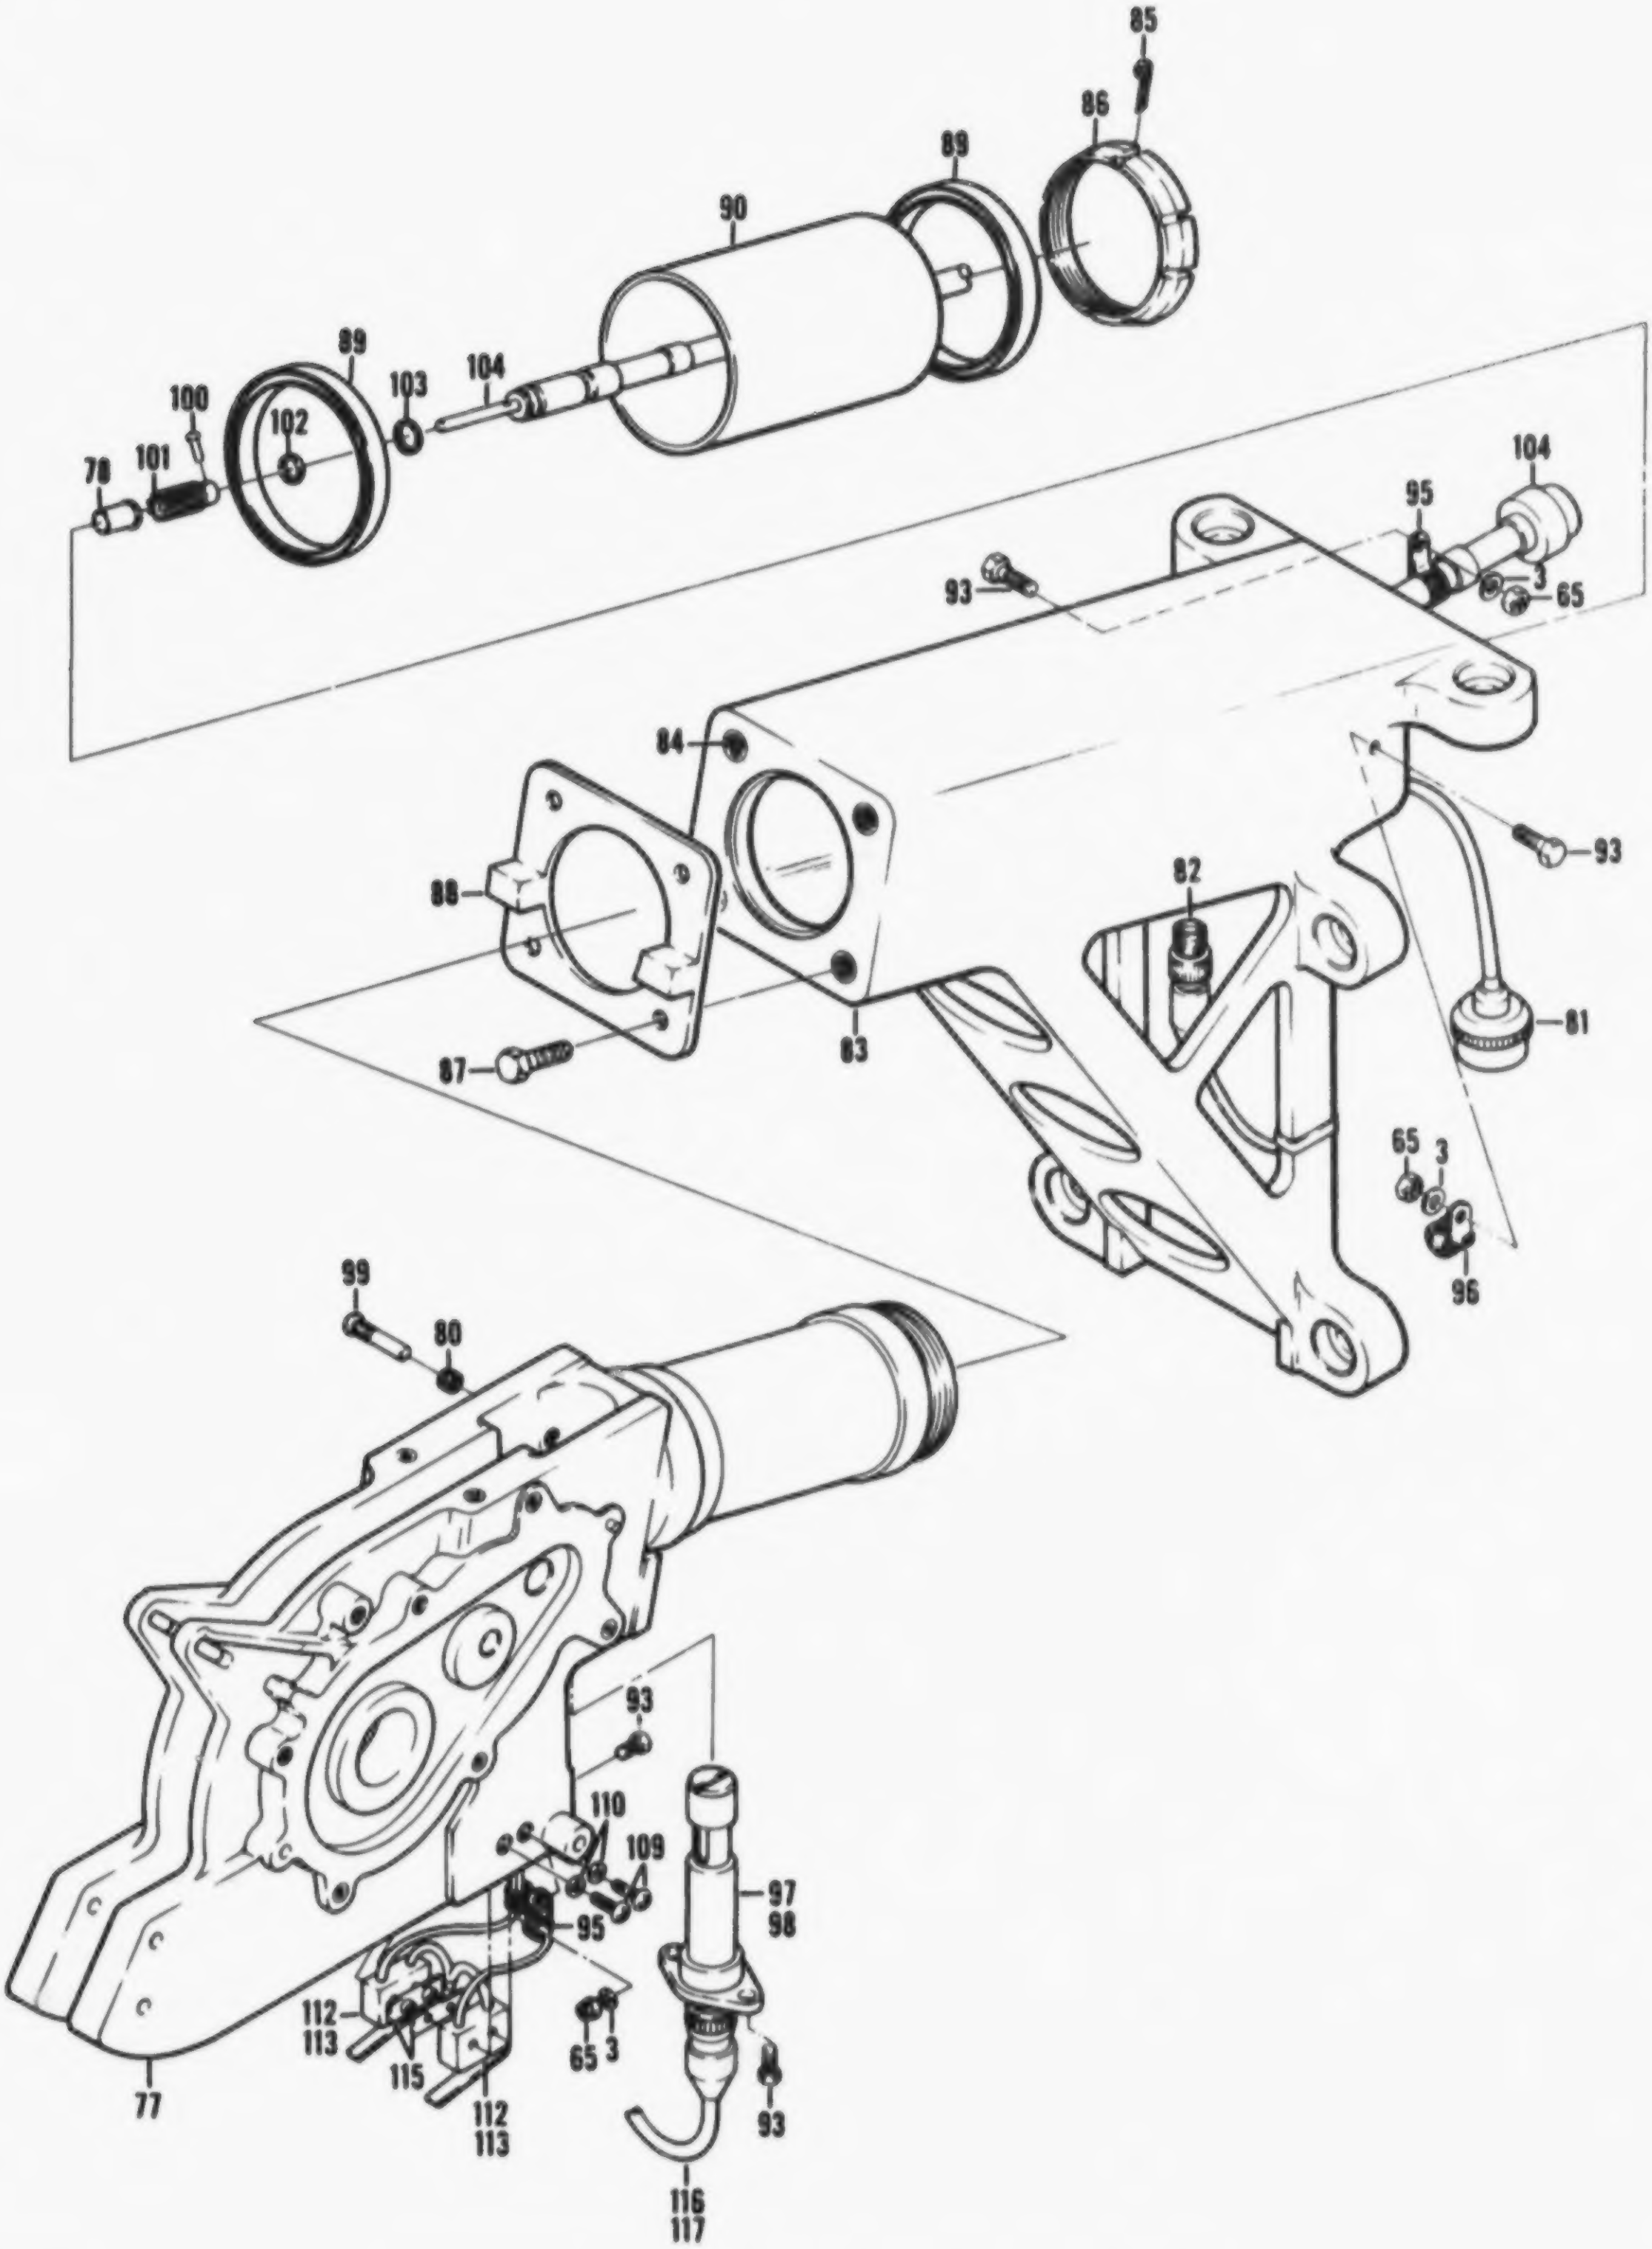
85
86
89
90
89
103
104
100
102
78
101
104
95
93
3
65
84
93
82
88
81
87
83
65
3
96
99
80
93
110
109
97
98
95
112
113
115
65
3
112
113
93
77
116
117

Figure 423B. Boomhead Assembly (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423B		PAOFF	1680-01-070-9953	82402	42277R300	BOOM HEAD ASSY,HOIS SEE FIG. 423A FOR NHA............UHH,UHV	EA	1
423B	1	PAOZZ	5306-00-150-9527	88044	AN3C5A	.BOLT,MACHINE..UHH,UHV	EA	8
423B	2	PAOZZ	5306-00-182-1854	88044	AN3CH5A	.BOLT,MACHINE..UHH,UHV	EA	4
423B	3	PAOZZ	5310-00-819-5413	80205	NAS1252-10L	.WASHER,FLAT...UHH,UHV	EA	14
423B	4	XBOOO		82402	42277R311	.COVER ASSY..UHH,UHV	EA	2
423B	5	PAOZZ	6680-00-070-1212	70925	B5602	..WINDOW,OBSERVATION...................................UHH,UHV	EA	1
423B	6	PAOZZ	5330-01-071-0432	96906	MS28775-156	.PACKING,PREFORMED.....................................UHH,UHV	EA	2
423B	7	PAOZZ	1680-01-071-5372	97484	A4266	.BREATHER,VENT...UHH,UHV	EA	1
423B	8	PAOZZ	5330-00-584-0266	96906	MS28775-010	.PACKING,PERFORMED.....................................UHH,UHV	EA	4
423B	9	PAOZZ	5365-00-289-3073	96906	MS9015-02	.PLUG,MACHINE THREAD...................................UHH,UHV	EA	3
423B	10	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE...UHH,UHV	EA	2
423B	11	PAOZZ	5310-01-007-1565	96906	MS14151-2	.WASHER,FLAT...UHH,UHV	EA	4
423B	12	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE...UHH,UHV	EA	2
423B	13	PBOZZ	1680-01-070-9949	82402	42277E339	.COVER ASSY,PRESSURE ROLLER............................UHH,UHV	EA	1
423B	14	PAFZZ	3120-01-080-0821	09455	LTD0816	.BEARING,WASHER,THRU...................................UHH,UHV	EA	4
423B	15	PBFFF	1680-01-022-5788	82402	42277D318	.CLUTCH,FRICTION.......................................UHH,UHV	EA	1
423B	16	PAFZZ	3110-01-083-3250	60380	RCB081214FS	..ROLLER,CLUTCH..UHH,UHV	EA	1
423B	17	XBFZZ		82402	42277D317	. HUB..UHH,UHV	EA	1
423B	18	PAFZZ	5315-00-687-5218	96906	MS35756-3	..KEY,WOODRUFF...UHH,UHV	EA	1
423B	19	PAFZZ	5365-00-058-9557	82402	49002C39	..SHIM...UHH,UHV	EA	1
423B	20	PAFZZ	5310-01-073-9225	82402	42277C349	..WASHER,SPRING TENSI..................................UHH,UHV	EA	3
423B	21	PAFZZ	1680-01-070-7727	82402	42277C315	..PLATE,PRESSURE,BRAK..................................UHH,UHV	EA	1
423B	22	PAFZZ	1680-01-071-0210	82402	42277D348	..DISK,CLUTCH..UHH,UHV	EA	1
423B	23	PAFZZ	1680-01-078-6059	82402	42277C314	..PLATE,BACKING,BRAKE..................................UHH,UHV	EA	1
423B	24	PAFZZ	5365-00-281-9885	96906	MS16626-1100	..RING,RETAINING.......................................UHH,UHV	EA	1
423B	25	PBFFF	1680-01-070-9952	82402	42277D312	.BRAKE ASSY,HOIST......................................UHH,UHV	EA	1
423B	26	PAFZZ	5365-00-281-9885	96906	MS16626-1100	..RING,RETAINING.......................................UHH,UHV	EA	1
423B	27	PBFZZ	1680-01-078-6059	82402	42277C314	..PLATE,BACKING,BRAKE..................................UHH,UHV	EA	1
423B	28	PBFFF	1680-01-070-5839	82402	42277D347	..DISK,CLUTCH..UHH,UHV	EA	1
423B	29	PAFZZ	1680-01-070-7727	82402	42277C315	..PLATE,PRESSURE,BRAK..................................UHH,UHV	EA	1
423B	30	PAFZZ	5310-01-073-9225	82402	42277C349	.WASHER,SPRING TENSI...................................UHH,UHV	EA	3
423B	31	PAFZZ	5365-00-058-9557	82402	49002C39	..SHIM...UHH,UHV	EA	1
423B	32	XBFZZ		82402	42277D317	..HUB..UHH,UHV	EA	1
423B	33	PAFZZ	5315-00-687-5218	96906	MS35756-3	..KEY,WOODRUFF...UHH,UHV	EA	1
423B	34	PAFZZ	3110-01-083-3260	60380	RCB081214FS	..ROLLER,CLUTCH..UHH,UHV	EA	1
423B	35	PAFZZ	5305-00-071-1322	96906	MS51960-65	.SCREW,MACHINE...UHH,UHV	EA	3
423B	36	PBFFF	1680-01-071-5377	82402	42277D322	.RETAINER ASSY...UHH,UHV	EA	1
423B	38	PAFZZ	3110-00-156-5190	38443	102KR	..BEARING,BALL,ANNULA..................................UHH,UHV	EA	1
423B	39	PAFZZ		96906	MS28775-127	.O-RING..UHH,UHV	EA	1
423B	40	PBFZZ	1680-01-071-5373	82402	42277D356	.SHAFT,SLEEVE..UHH,UHV	EA	1
423B	41	PAFZZ	5315-00-732-2841	96906	MS20066-117	.KEY,MACHINE...UHH,UHV	EA	1
423B	42	PAFZZ	5330-00-684-3420	96906	MS28775-013	.PACKING,PREFORMED.....................................UHH,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423B	43	PAFZZ	5330-00-482-1844	73680	71X9758	.SEAL,PLAIN ENCASED	UHH,UHV	EA	1
423B	44	PAFZZ	5365-01-075-7741	82402	42277C326	.SPACER,SLEEVE	UHH,UHV	EA	1
423B	45	PBFZZ	3110-00-156-5190	38443	102KR	.BEARING,BALL,ANNULA	UHH,UHV	EA	1
423B	46	PAFZZ	5365-01-072-0192	82402	49001C42	.SHIM	UHH,UHV	EA	2
423B	47	PAFZZ	1680-01-071-5376	82402	42277D320	.GEAR ASSY	UHH,UHV	EA	1
423B	48	PAFZZ	3120-01-056-1584	09455	LTD-0510	.BEARING,WASHER,THRU	UHH,UHV	EA	2
423B	49	PAFZZ	5315-00-753-3899	96906	MS16555-63	.PIN,STRAIGHT,HEADLE	UHH,UHV	EA	2
423B	50	PAFZZ	3020-01-070-8559	82402	42277E362	.GEAR,HELICAL	UHH,UHV	EA	1
423B	51	PBFZZ	3020-01-076-0566	82402	42277D335	.GEAR,SPUR	UHH,UHV	EA	1
423B	52	PBFZZ	3110-00-198-2050	21335	PAMS1K7FS60160	.BEARING,BALL,ANNULA	UHH,UHV	EA	2
423B	53	PAFZZ	5365-01-069-1803	82402	49001C6	.SHIM	UHH,UHV	EA	2
423B	54	PAOZZ	5310-00-680-7296	80205	NAS620-10L	.WASHER,FLAT	UHH,UHV	EA	1
423B	55	PAFZZ	5310-00-894-3637	80205	NAS1291C4M	.NUT,SELF-LOCKING,EX	UHH,UHV	EA	1
423B	56	PBFZZ	3040-01-070-5122	82402	42277D359	.GEARSHAFT,SPUR	UHH,UHV	EA	1
423B	57	PAFZZ	5315-01-073-2976	82402	42277C346	.KEY,MACHINE	UHH,UHV	EA	1
423B	58	PBOZZ	1680-01-160-6033	82402	42277D330	.PRESSURE ASSEMBLY,R	UHH,UHV	EA	1
423B	62	PAOZZ	5310-00-655-7549	80205	NAS620A416L	.WASHER,FLAT	UHH,UHV	EA	2
423B	63	PBOZZ	5315-01-075-2126	82402	42277C341	.SHAFT,PRESS ROLLER	UHH,UHV	EA	1
423B	64	PAOZZ	5360-01-073-1187	83553	E0360-055-1120M	.SPRING,HELICAL,EXTE	UHH,UHV	EA	2
423B	65	PAOZZ	5310-00-061-7326	96906	MS21045-3	.NUT,SELF-LOCKING,HE	UHH,UHV	EA	3
423B	66	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHH,UHV	EA	4
423B	67	PAOZZ	5306-00-151-0778	88044	AN3-16A	.BOLT,MACHINE	UHH,UHV	EA	1
423B	68	PAOZZ	1680-01-071-5375	82402	42277C352	.ROLLER,CABLE GUIDE	UHH,UHV	EA	1
423B	69	PAOZZ	5365-01-072-9358	82402	42277C342	.SPACER,CABLE GUIDE	UHH,UHV	EA	1
423B	70	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX	UHH,UHV	EA	1
423B	71	PAOZZ	5305-00-983-6653	96906	MS16998-30	.SCREW,CAP,SOCKET HE	UHH,UHV	EA	1
423B	72	PAOZZ	5930-01-089-1281	82402	42277C366	.STOP,ELECTRICAL SWI	UHH,UHV	EA	1
423B	73	PAOZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE	UHH,UHV	EA	8
423B	74	PBOZZ	9905-01-086-4517	82402	42277C221	.PLATE,INSTRUCTION	UHH,UHV	EA	1
423B	75	PBOZZ		82402	42305C350	.PLATE,IDENTIFICATIO	UHH,UHV	EA	1
423B	76	PBFZZ	3020-01-073-9890	82402	42277E327	.PULLEY ASSEMBLY,TRA	UHH,UHV	EA	1
423B	77	XAFFF		82402	42277R310	.HOUSING	UHH,UHV	EA	1
423B	78	PAFZZ	3120-00-854-6166	70417	FF303-4	..BEARING,SLEEVE	UHH,UHV	EA	1
423B	79	PAFZZ	5340-00-021-3495	96906	MS51830-201L	..INSERT,SCREW THR	UHH,UHV	EA	25
423B	80	PAOZZ	5340-00-085-0219	96906	MS51830-202	..INSERT,SCREW THREAD	UHH,UHV	EA	1
423B	81	PAOZZ	5935-00-726-6519	96906	MS3126F10-6P	.CONNECTOR,PLUG,E	UHH,UHV	EA	1
423B	82	PBOOO	1680-01-070-9955	82402	42277D369	.WIRING HARNESS,SENS	UHH,UHV	EA	1
423B	83	XBFFF		82402	42277R312	.BOOM ASSY	UHH,UHV	EA	1
423B	84	PAFZZ	5340-00-085-0219	96906	MS51830-202	..INSERT,SCREW THREAD	UHH,UHV	EA	4
423B	85	PAFZZ	5315-00-839-2326	96906	MS24665-281	.PIN,COTTER	UHH,UHV	EA	1
423B	86	PAFZZ	5310-01-151-1708	82402	42277C370	.NUT,PLAIN,ROUND	UHH,UHV	EA	1
423B	87	PAFZZ	5306-00-180-2778	88044	AN4CH4A	.BOLT,MACHINE	UHH,UHV	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423B	88	PBFZZ	3110-00-147-1155	82402	42234D220	.PLATE,RETAINING,BEA	UHH,UHV	EA	1
423B	89	PAFZZ	3110-00-678-5425	38443	B545ZZ	.BEARING,BALL,AIRFRA	UHH,UHV	EA	2
423B	90	PAFZZ	5365-01-072-2926	82402	42277D354	.SPACER,SLEEVE	UHH,UHV	EA	1
423B	93	PAOZZ	5306-00-150-9528	88044	AN3C4A	.BOLT,MACHINE	UHH,UHV	EA	4
423B	95	PAOZZ	5340-00-471-1913	96906	MS21103-4	.CLAMP,LOOP	UHH,UHV	EA	3
423B	96	PAOZZ	5340-00-057-2904	96906	MS21333-71	.CLAMP,LOOP	UHH,UHV	EA	1
423B	97	PBOOO	1377-01-087-5166	22567	303104-1	.CUTTER,CARTRIDGE AC	UHH,UHV	EA	1
423B	98	PAOZZ	1377-01-073-3831	82402	42277C182	..REFIRE KIT	UHH,UHV	EA	1
423B	99	PAOZZ	5305-01-074-1462	82402	42277C344	.SCREW,MACHINE	UHH,UHV	EA	1
423B	100	PAFZZ	5320-00-231-9423	88044	AN125406	.RIVET,SOLID	UHH,UHV	EA	1
423B	101	PBFZZ	3020-01-070-6832	82402	42277D361	.WORM-TRACTION DRIVE	UHH,UHV	EA	1
423B	102	PAFZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT	UHH,UHV	EA	1
423B	103	PAFZZ	5330-00-584-0265	96906	MS28775-012	.PACKING,PREFORMED	UHH,UHV	EA	1
423B	104	PAFZZ	1680-01-071-9401	82402	42277E328	.SHAFT ASSEMBLY,FLEX	UHH,UHV	EA	1
423B	105	PAOZZ	5306-00-816-0117	80205	NAS1103-44	.BOLT,SHEAR	UHH,UHV	EA	1
423B	106	PAOZZ	5360-01-026-0217	82402	42277E358	.SPRING,HELICAL,TORS	UHH,UHV	EA	1
423B	107	PBFZZ	1680-01-071-5374	82402	42277E332	.ACTUATOR ASSY	UHH,UHV	EA	1
423B	108	PAOZZ	5305-00-824-2024	96906	MS24694C49	.SCREW,MACHINE	UHH,UHV	EA	4
423B	109	PAOZZ	5305-00-054-5643	96906	MS51957-9	.SCREW,MACHINE	UHH,UHV	EA	4
423B	110	PAOZZ	5310-00-660-2084	80205	NAS620A2	.WASHER,FLAT	UHH,UHV	EA	4
423B	111	PAOZZ	1680-01-077-6896	82402	42277E368	.GUIDE,CABLE	UHH,UHV	EA	1
423B	112	PAOOO	1680-01-071-9211	82402	42277D343	.SWITCH ASSEMBLY,HOI	UHH,UHV	EA	1
423B	113	PAOZZ	5930-01-078-7566	91929	JE12	.SWITCH,ROTARY	UHH,UHV	EA	2
423B	115	PAOZZ	5110-00-918-3027	82402	4067C193	.ADAPTER,PLATE ASSY	UHH,UHV	EA	2
423B	116	PBOOO	1680-01-070-5392	82402	42277D353	.WIRING HARNESS,CABL	UHH,UHV	EA	1
423B	117	PAOZZ	5935-00-615-7405	77820	PC06A8-4S	..CONNECTOR,PLUG,ELEC	UHH,UHV	EA	1

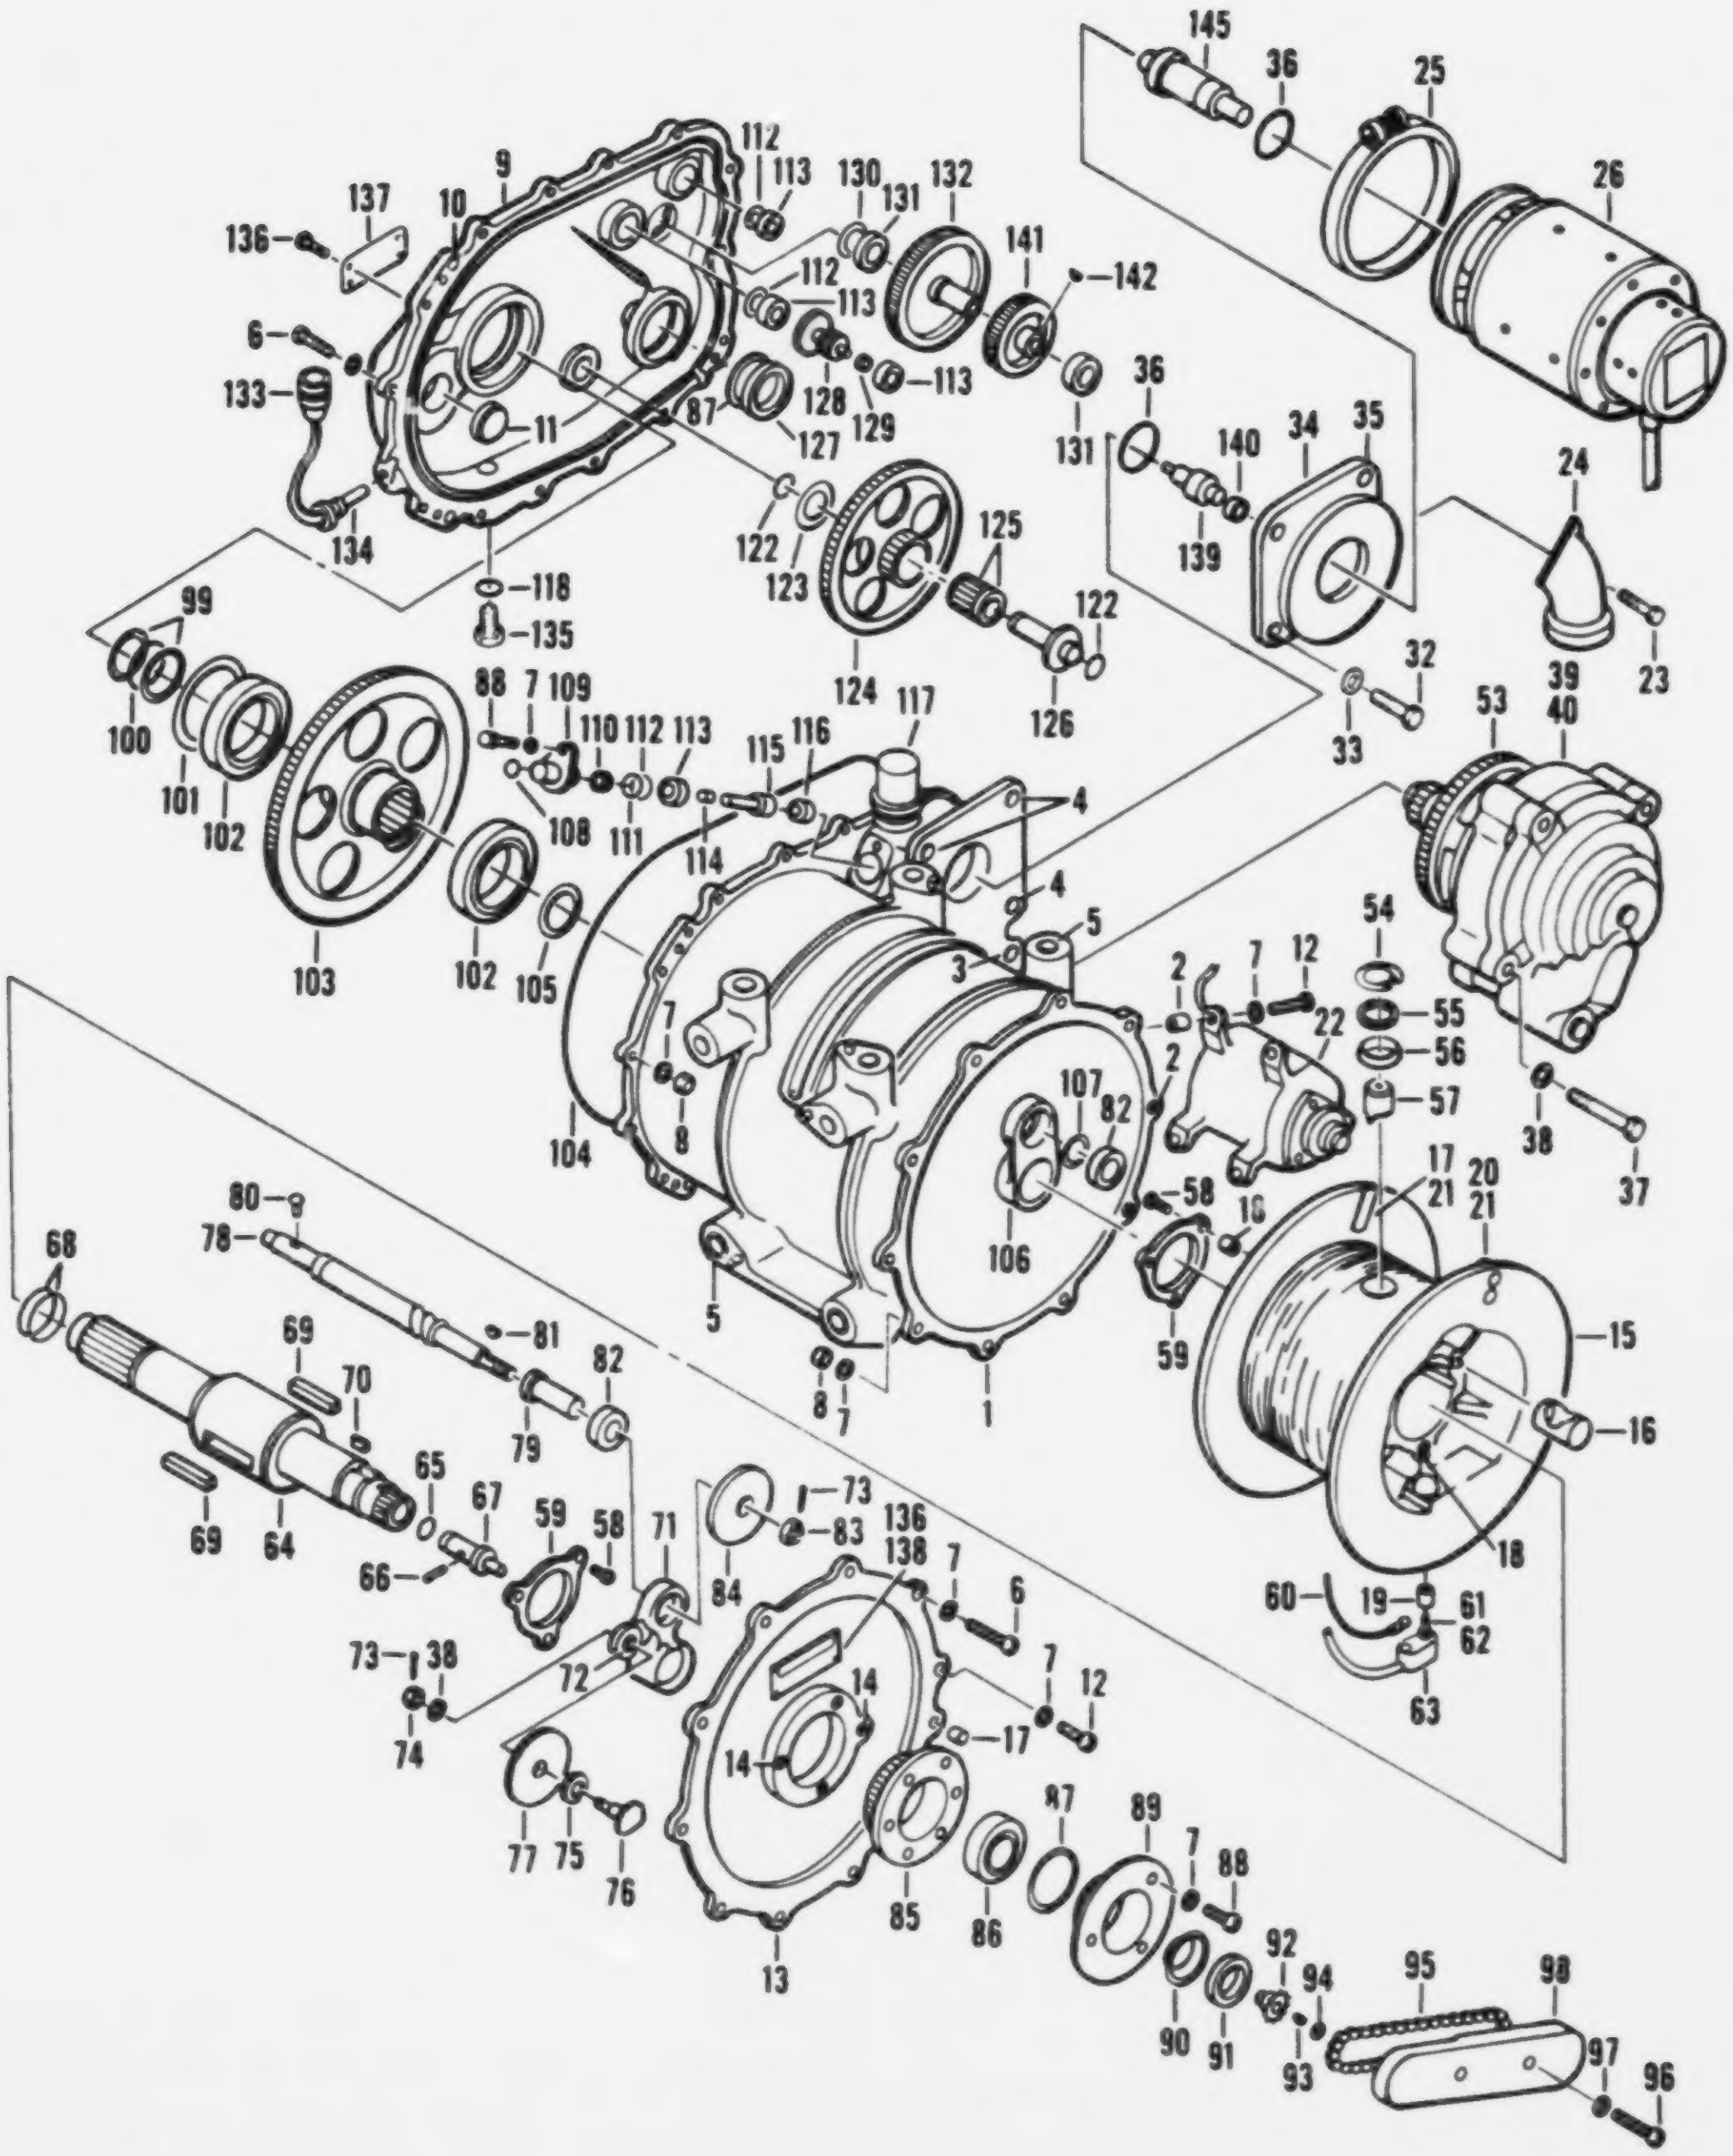
145
36
25
26
112
113
9
130
131
132
137
10
136
141
142
112
113
6
133
11
87
128
129
113
127
131
36
140
34
35
24
134
122
123
125
139
118
99
135
122
124
126
32
33
39
40
23
100
88
7
109
110
112
113
115
116
117
101
102
108
111
114
4
53
4
103
102
105
5
54
3
7
12
2
55
22
56
7
2
107
82
57
38
8
104
37
17
20
21
80
58
21
18
68
78
106
59
5
15
81
69
82
70
8
7
1
16
79
65
67
73
136
138
59
58
71
83
69
64
66
84
7
6
18
60
19
61
62
73
38
72
14
7
12
63
74
17
14
87
89
77
75
76
7
88
85
86
13
92
94
95
98
90
91
93
97
96

Figure 423C. Winch Assembly (Sheet 1 of 2)

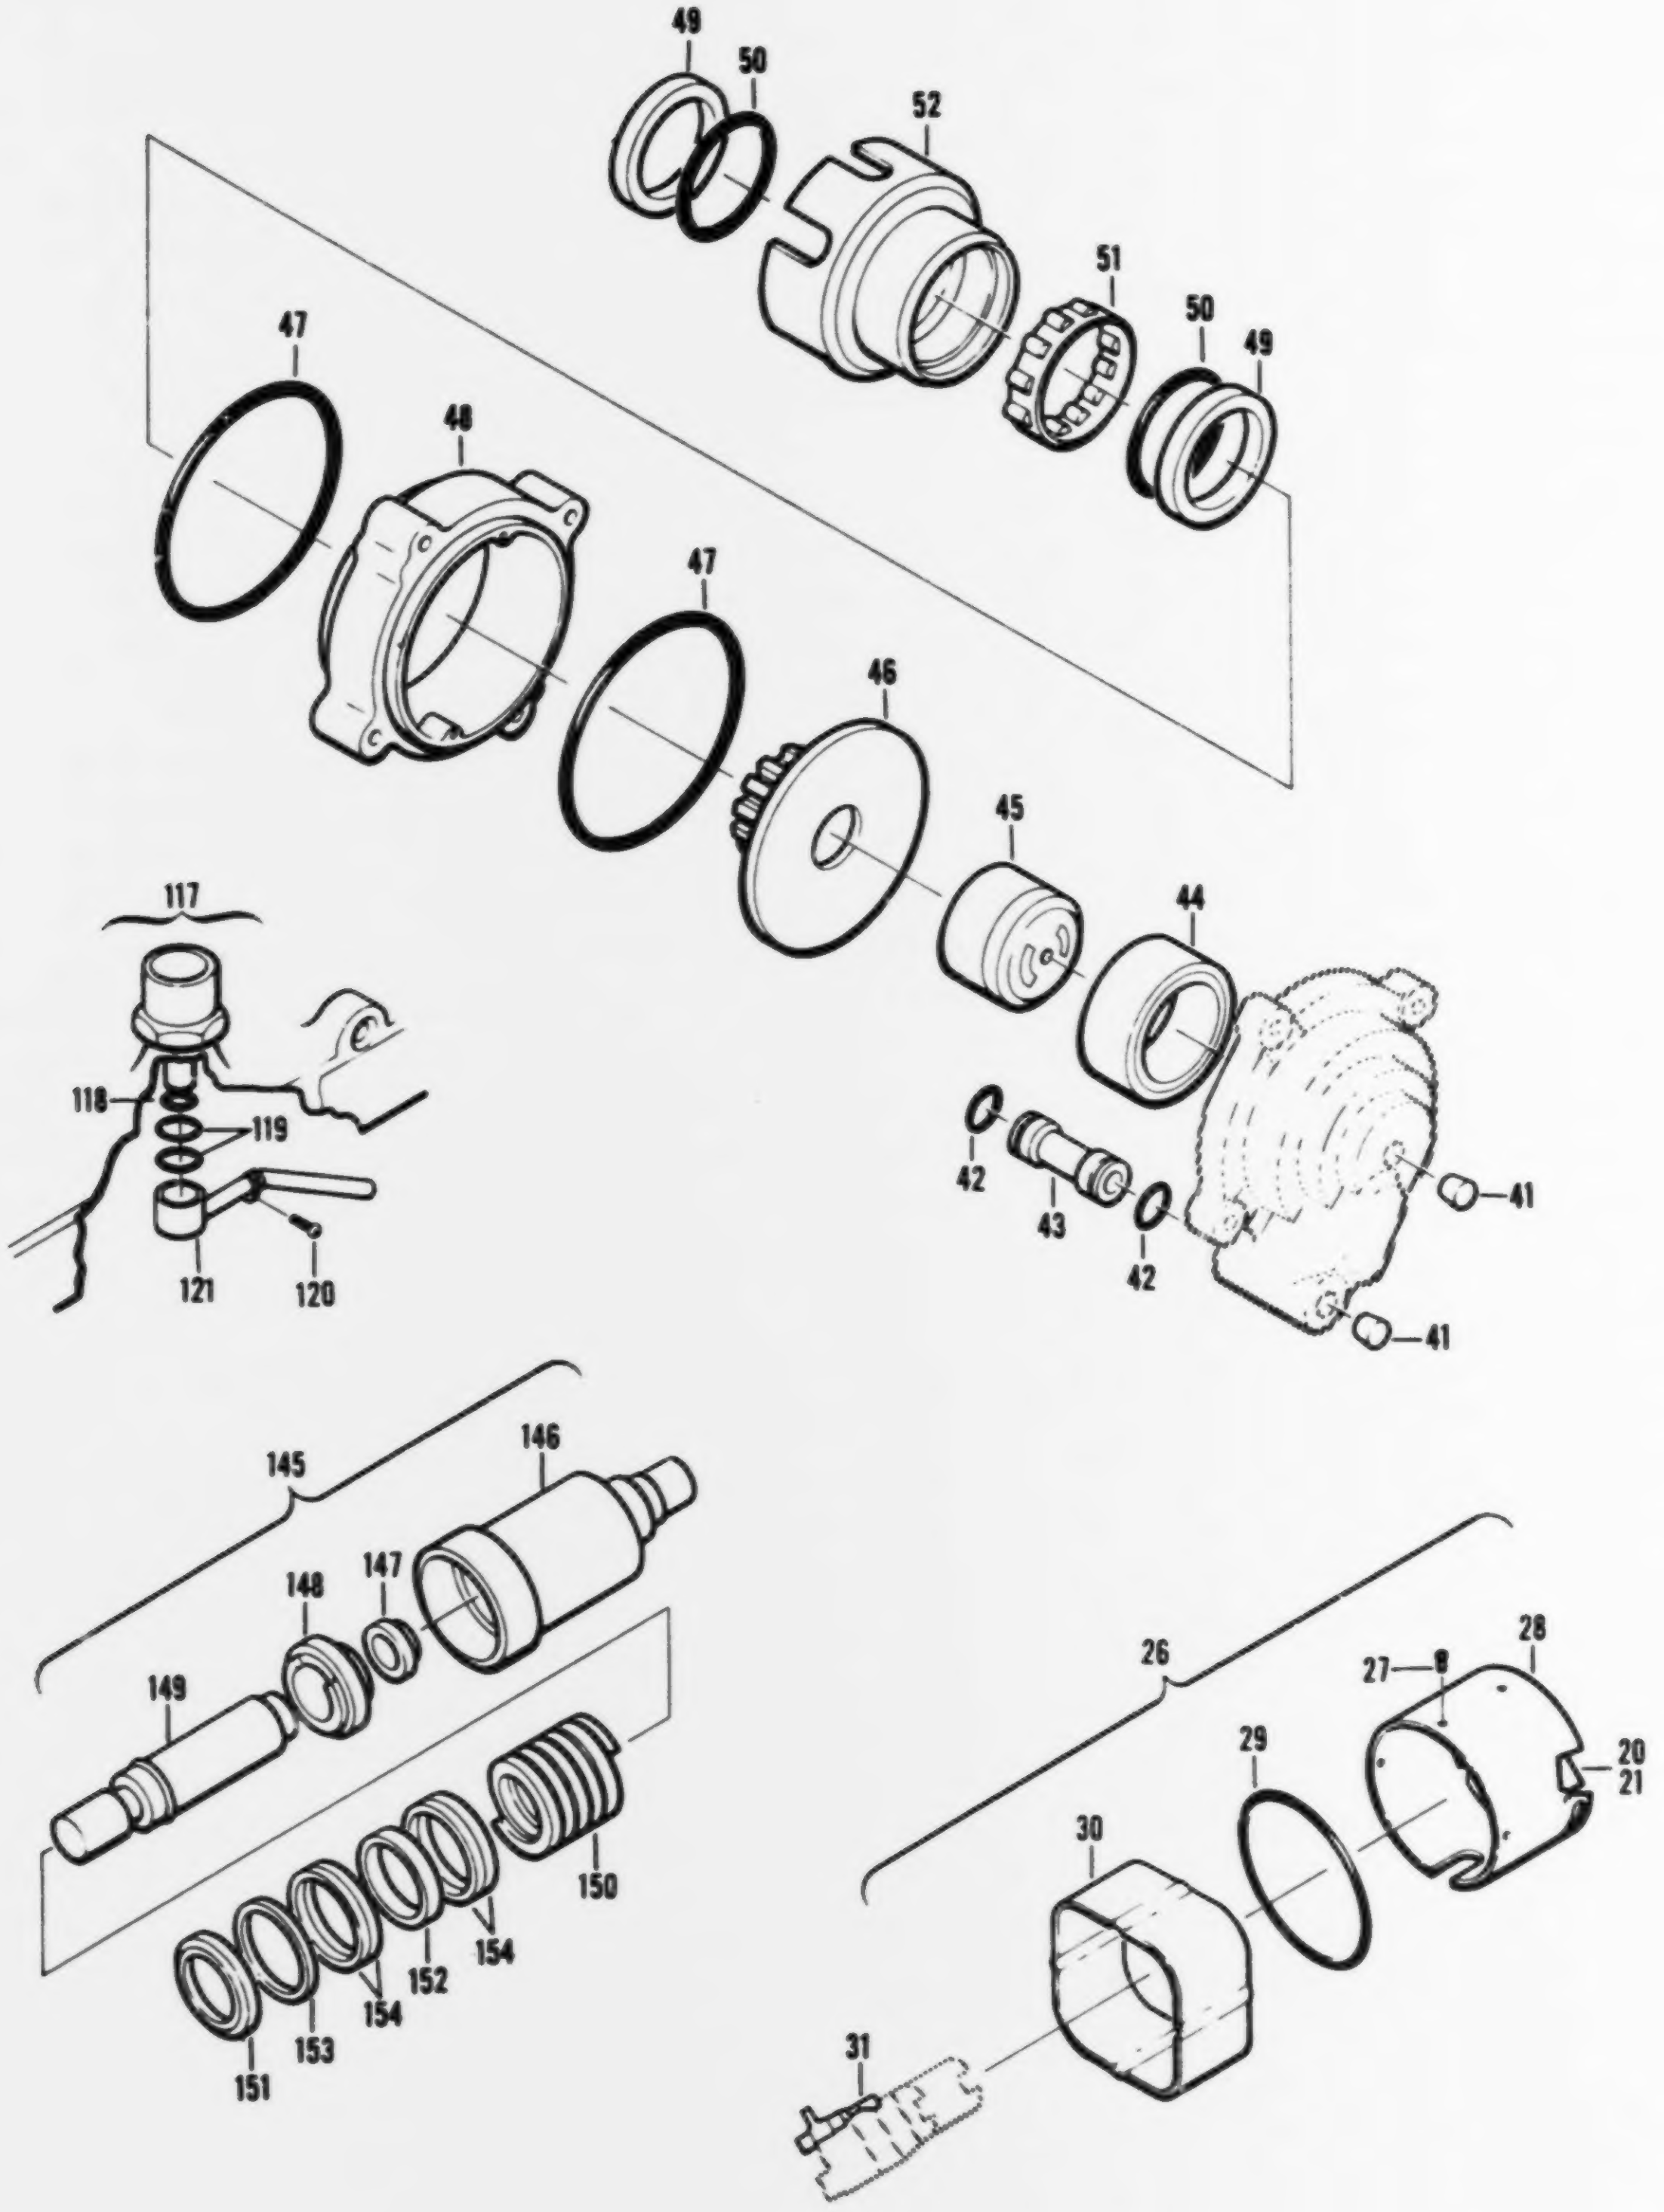
49
50
52
51
50
49
47
48
47
46
45
117
44
118
119
42
43
41
121
120
42
41
145
146
147
148
149
26
28
27
20
21
29
30
150
154
152
154
153
151
31

Figure 423C. Winch Assembly (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNI
423C		PAODD	1680-01-089-4331	82402	42305R100	.WINCH,AIRCRAFT MOUN SEE FIG. 423A FOR NHA..........UHH,UHV	EA	1
423C	1	PBFDD	1615-01-147-6639	82402	42277R110	.HOUSING,DRIVE MECHA..........UHH,UHV	EA	1
423C	2	PAFZZ	5340-00-021-3495	80205	NAS1394C3L	..INSERT,SCREW THR..........UHH,UHV	EA	
423C	3	PAOZZ	5340-00-085-0219	80205	NAS1394C4L	..INSERT,SCREW THREAD..........UHH,UHV	EA	4
423C	4	PAFZZ	5340-00-924-5909	80205	NAS1394C5L	..INSERT,SCREW THREAD..........UHH,UHV	EA	4
423C	5	PAFZZ	5340-00-177-3862	80205	NAS1394C6L	..INSERT,SCREW THREAD..........UHH,UHV	EA	12
423C	6	PAFZZ	5305-00-614-0248	96906	MS35266-66	.SCREW,MACHINE..........UHH,UHV	EA	23
423C	7	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHH,UHV	EA	56
423C	8	PAFZZ	5310-00-902-6676	96906	MS21083N3	.NUT,SELF-LOCKING,HE..........UHH,UHV	EA	23
423C	9	PAFFF	1680-01-077-6892	82402	42277R111	.COVER ASSEMBLY,GEAR..........UHH,UHV	EA	1
423C	10	PAFZZ	5340-00-973-6933	80205	NAS1394C3	..INSERT,SCREW THREAD..........UHH,UHV	EA	3
423C	11	PAFZZ	9340-00-028-7122	70925	B-5631	..WINDOW,OBSERVATION..........UHH,UHV	EA	1
423C	12	PAFZZ	5305-00-616-4831	96906	MS35266-65	.SCREW,MACHINE..........UHH,UHV	EA	2
423C	13	PAFFF	1680-01-068-3035	82402	42277E112	.COVER ASSEMBLY,DRUM..........UHH,UHV	EA	1
423C	14	PAFZZ	5340-00-471-3745	80205	NAS1394CA3	..INSERT,SCREW THREAD..........UHH,UHV	EA	5
423C	15	PBFFF	1680-01-146-0887	82402	42277R115	.DRUM ASSEMBLY,CABLE..........UHH,UHV	EA	1
423C	16	PAFZZ	3120-00-406-0601	70417	AA921-3	..BEARING,SLEEVE..........UHH,UHV	EA	1
423C	17	PAFZZ	3120-00-970-4623	96906	MS17795-103	..BEARING,SLEEVE..........UHH,UHV	EA	1
423C	18	PAFZZ	5340-00-085-0219	96906	MS51830-202	..INSERT,SCREW THREAD..........UHH,UHV	EA	6
423C	19	PAFZZ	5340-00-021-3495	96906	MS51830-201L	..INSERT..........UHH,UHV	EA	1
423C	20	PAFZZ	1680-00-769-0425	82402	42234D85	..KICKER,CABLE,WINCH..........UHH,UHV	EA	7
423C	21	PAFZZ	5310-00-806-7632	80205	NAS620-8	..WASHER,FLAT..........UHH,UHV	EA	4
423C	22	PAODD	1680-01-082-9699	82402	42305R220	.DRIVE ASSEMBLY,LIMI SEE FIG.423F FOR DETAIL BREAKDOWN ....UHH,UHV	EA	1
423C	23	PAOZZ	5306-00-150-9874	88044	AN3-25A	.BOLT,MACHINE..........UHH,UHV	EA	1
423C	24	PBOZZ	1680-01-071-5515	82402	42305E143	.DUCT,AIR FEED..........UHH,UHV	EA	1
423C	25	PAOZZ	5340-01-073-1579	98625	MV83523TS446V	.COUPLING,CLAMP,GROO..........UHH,UHV	EA	1
423C	26	PAODD	6105-01-070-7614	82402	527KE3	.MOTOR,DIRECT CURREN..........UHH,UHV	EA	1
423C	27	PAFZZ	5305-00-514-7506	96906	MS35265-26	..SCREW,MACHINE..........UHH,UHV	EA	6
423C	28	PBFZZ	6150-01-079-8863	82402	19777	..CASE,ELECTRIC MOTOR..........UHH,UHV	EA	1
423C	29	PAFZZ	5330-00-940-9475	96906	MS9068-044	..PACKING,PREFORMED..........UHH,UHV	EA	1
423C	30	PAOZZ		82402	19776	..INSULATOR,PLATE..........UHH,UHV	EA	1
423C	31	PAOZZ	5977-01-076-4202	82402	80251	..BRUSH,ELECTRICAL CO..........UHH,UHV	EA	4
423C	32	PAFZZ	5306-00-839-9642	88044	AN5-6	.BOLT,MACHINE..........UHH,UHV	EA	4
423C	33	PAFZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT..........UHH,UHV	EA	4
423C	34	XBFFF		82402	42305R142	.ADAPTER ASSY,MOTOR..........UHH,UHV	EA	1
423C	35	PAFZZ	5340-00-021-3495	80205	NAS1394C3L	..INSERT,SCREW THR..........UHH,UHV	EA	1
423C	36	PAFZZ	5330-00-167-5122	81349	M83248-1-134	.PACKING,PREFORMED..........UHH,UHV	EA	2
423C	37	PBFZZ	5306-00-818-7516	80205	NAS1304-18	.BOLT,SHEAR..........UHH,UHV	EA	4
423C	38	PAFZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHH,UHV	EA	9
423C	39	XDFFF		82402	42305R113	.HOUSING ASSY,PUMP..........UHH,UHV	EA	1
423C	40	PAFZZ	5315-01-072-9585	82402	42305C114	..PIN,STRAIGHT,HEADED..........UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
423C	41	PAFZZ	3110-00-030-3381	88044	AN932-2	.PLUG,PIPE UHH,UHV	EA	2
423C	42	PAFZZ	5330-01-048-5000	80205	NAS1593-111	.PACKING,PREFORMED UHH,UHV	EA	2
423C	43	PAFZZ	1680-01-070-0991	82402	42277C214	.TUBE,OIL TRANSFER UHH,UHV	EA	1
423C	44	PAFZZ	3110-01-009-6768	80657	J2816	.BEARING,ROLLER,NEED UHH,UHV	EA	1
423C	45	PAFZZ	1680-01-070-0972	82402	42305E213	.PUMP ASSY,BRAKE UHH,UHV	EA	1
423C	46	PBFZZ	1680-01-077-6897	82402	42277D217	.SHAFT ASSEMBLY UHH,UHV	EA	1
423C	47	PAFZZ		80205	NAS1593-152	.PACKING,O-RING UHH,UHV	EA	2
423C	48	PBFZZ	1680-01-070-0966	82402	42277E210	.HOUSING,BRAKE UHH,UHV	EA	1
423C	49	PAFZZ	3110-01-027-3186	38443	B543	.BEARING,BALL,AIRFRA UHH,UHV	EA	2
423C	50	PAOZZ	5365-01-073-2807	82402	42277C216	.SPACER,BRAKE UHH,UHV	EA	2
423C	51	PBFZZ	1680-00-768-9670	82402	42234D178	.SPRAG CLUTCH ASSEMB UHH,UHV	EA	1
423C	52	PBFZZ	1680-01-070-0973	82402	42277E206	.CUP,BRAKE DISK UHH,UHV	EA	1
423C	53	PADDD	1680-01-070-0977	82402	42305E200	.BRAKE ASSY,HOIST UHH,UHV	EA	1
423C	54	PAFZZ	5365-00-808-0645	96906	MS16625-1090	.RING,RETAINING UHH,UHV	EA	1
423C	55	PAFZZ	5365-00-514-8291	82402	1700B67	.SHIM UHH,UHV	EA	1
423C	56	PAOZZ	1680-00-020-9478	82402	42234D54	.RETAINER, SHOE, LEV UHH,UHV	EA	1
423C	57	PBFZZ	1680-00-020-8325	82402	42234D167	.SHOE,LEVEL WIND,WIN UHH,UHV	EA	1
423C	58	PAFZZ	5305-00-709-2013	96906	MS24693C295	.SCREW,MACHINE UHH,UHV	EA	6
423C	59	PBOZZ	1680-00-001-5314	82402	42234D52	.PLATE, RETAINER, RA UHH,UHV	EA	2
423C	60	PAOZZ	4010-01-168-0123	82402	42305D179	.CABLE UHH,UHV	EA	1
423C	61	XDOZZ		07326	WA510	.RING,RETAINING UHH,UHV	EA	1
423C	62	PAOZZ	5305-00-001-5326	82402	42234D97	.SCREW,CAP,SOCKET HE UHH,UHV	EA	1
423C	63	PBOZZ	1680-00-472-1671	82402	42234E56	.RETAINER,CABLE UHH,UHV	EA	1
423C	64	PBFFF	1680-01-070-0993	82402	42277E180	.BALL SPLINE ASSY UHH,UHV	EA	1
423C	65	PAFZZ	5330-00-166-0990	81349	M83248-1-014	..PACKING,PREFORMED UHH,UHV	EA	1
423C	66	PAFZZ	5315-01-077-7289	96906	MS51838-93	..PIN,STRAIGHT UHH,UHV	EA	1
423C	67	PAFZZ	1680-01-070-0990	82402	42277D181	..ADAPTER,SPROCKET UHH,UHV	EA	1
423C	68	PBFZZ	5365-00-021-1729	82402	42234D65	.RING,RETAINING UHH,UHV	EA	2
423C	69	PAFZZ	5315-00-729-6991	96906	MS20066-234	.KEY,MACHINE UHH,UHV	EA	2
423C	70	PAFZZ	5315-00-990-6023	96906	MS20068-53	.KEY,MACHINE UHH,UHV	EA	1
423C	71	PBFZZ	1680-01-070-0974	82402	42277E184	.ARM,GEAR,LEVEL WIND UHH,UHV	EA	1
423C	72	PAFZZ	5340-00-021-3495	80205	NAS1394C3L	..INSERT,SCREW THR UHH,UHV	EA	2
423C	73	PAFZZ	5315-00-839-5820	96906	MS24665-134	.PIN,COTTER UHH,UHV	EA	2
423C	74	PAFZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H UHH,UHV	EA	1
423C	75	PAFZZ	3120-00-230-6596	09455	LTD0714	.BEARING,WASHER,THRU UHH,UHV	EA	1
423C	76	PAFZZ	1680-00-091-6645	82402	42234D179	.SHAFT,SHOULDERED UHH,UHV	EA	1
423C	77	PBFZZ	3020-01-076-3464	82402	42277D131	.GEAR CLUSTER UHH,UHV	EA	1
423C	78	PAFFF	1680-01-146-0888	82402	42277D137	.SCREW ASSEMBLY,WIND UHH,UHV	EA	1
423C	79	PBFZZ	5365-01-071-8480	82402	42277D139	..SPACER,SLEEVE UHH,UHV	EA	1
423C	80	PAFZZ	5320-00-990-2844	96906	MS20613-4C14	..RIVET,SOLID UHH,UHV	EA	1
423C	81	PAFZZ	5315-00-143-9681	96906	MS9841-05	.KEY,WOODRUFF UHH,UHV	EA	1
423C	82	PAFZZ	3110-00-850-4811	38443	R8ZZ	.BEARING,BALL,ANNULA UHH,UHV	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
423C	83	PAFZZ	5310-00-176-8109	88044	AN320-5	.NUT,PLAIN,SLOTTED,H	UHH,UHV	EA	1
423C	84	PBFZZ	3020-01-072-3615	82402	42277D130	.GEAR,OUTPUT	UHH,UHV	EA	1
423C	85	PBFZZ	3020-01-069-8447	82402	42277E125	.GEAR,SPUR,STATIONAX	UHH,UHV	EA	1
423C	86	PAFZZ	3110-00-109-1183	21335	9105KPP	.BEARING,BALL,ANNULA	UHH,UHV	EA	1
423C	87	PBFZZ	5365-00-121-3558	81349	MILS2299	.SHIM	UHH,UHV	EA	2
423C	88	PAFZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE	UHH,UHV	EA	8
423C	89	PBFZZ	3110-01-078-5025	82402	42277D124	.PLATE,RETAINING,BEA	UHH,UHV	EA	1
423C	90	PAFZZ	5310-00-619-6446	96906	MS172206	.WASHER,KEY	UHH,UHV	EA	1
423C	91	PAFZZ	5310-00-515-7592	96906	MS172241	.NUT,PLAIN,ROUND	UHH,UHV	EA	1
423C	92	PAFZZ	3020-01-068-1568	82402	42277D156	.SPROCKET CHAIN	UHH,UHV	EA	1
423C	93	PAFZZ	5315-00-688-0373	82402	49008C3	.KEY,MACHINE	UHH,UHV	EA	1
423C	94	PAFZZ	5365-00-720-8064	96906	MS16624-1025	.RING,RETAINING	UHH,UHV	EA	1
423C	95	PAOZZ	3020-01-071-2843	82402	42277C175	.CHAIN,ROLLER	UHH,UHV	EA	1
423C	96	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE	UHH,UHV	EA	2
423C	97	PAOZZ	5310-01-007-1565	96906	MS14151-2	.WASHER,FLAT	UHH,UHV	EA	2
423C	98	PBOZZ	1680-01-070-1188	82402	42277E168	.GUARD,CHAIN	UHH,UHV	EA	1
423C	99	PAFZZ	5330-00-171-9225	96906	MS28782-20	.RETAINER,PACKIN	UHH,UHV	EA	2
423C	100	PAFZZ	5330-00-166-8404	81349	M83248/1-215	.PACKING,PREFORMED	UHH,UHV	EA	1
423C	101	PBFZZ	5365-01-071-3640	82402	49001C82	.SHIM	UHH,UHV	EA	1
423C	102	PAFZZ	3110-00-293-9605	38443	1908S	.BEARING,BALL,ANNULA	UHH,UHV	EA	2
423C	103	PBFZZ		82402	42277E117	.GEAR,DRUM DRIVE	UHH,UHV	EA	1
423C	104	PAFZZ	5330-01-005-0525	81349	M83248/1-278	.PACKING,PREFORMED	UHH,UHV	EA	1
423C	105	PAFZZ	5330-01-095-3724	82402	42277C244	.SEAL,OIL	UHH,UHV	EA	1
423C	106	PBFZZ	1680-01-070-0975	82402	42277E183	.ARM,LEVEL WIND DRIV	UHH,UHV	EA	1
423C	107	PBFZZ	5365-00-938-0138	82402	49001C12	.SHIM	UHH,UHV	EA	1
423C	108	PAOZZ	5330-00-167-5112	81349	M83248-1-123	.PACKING,PREFORMED	UHH,UHV	EA	1
423C	109	PBFZZ	1680-01-070-0992	82402	42277D167	.ADAPTER,FLEXIBLE SH	UHH,UHV	EA	1
423C	110	PAFZZ	5330-00-285-4142	73680	71X7000	.SEAL,PLAIN ENCASED	UHH,UHV	EA	1
423C	111	PAFZZ	5330-00-166-0992	81349	M83248-1-016	.PACKING,O-RING	UHH,UHV	EA	1
423C	112	PAFZZ	5365-01-053-3337	82402	49001C8	.SHIM	UHH,UHV	EA	3
423C	113	PAFZZ	3110-00-186-1104	38443	R4A4ST0305A023H1 0X7296L	.BEARING,BALL,ANNULA	UHH,UHV	EA	4
423C	114	PAFZZ	5365-01-071-2386	82402	42277C195	.SPACER,SLEEVE	UHH,UHV	EA	1
423C	115	PBFZZ	1680-01-070-0967	82402	42277E166	.GEARSHAFT ASSEMBLY	UHH,UHV	EA	1
423C	116	PAFZZ		21335	PAMS1K7FS60160	.BEARING,BALL,ANNULA	UHH,UHV	EA	1
423C	117	PBOZZ	1680-01-099-6309	82402	42305D119	.BREATHER ASSY	UHH,UHV	EA	1
423C	118	PAOZZ	5330-00-810-9659	80205	NAS1595-8	.PACKING,PREFORMED	UHH,UHV	EA	2
423C	119	PAOZZ	5330-00-167-5166	81349	M83248-1-905	.PACKING,PREFORMED	UHH,UHV	EA	2
423C	120	PAOZZ	5305-01-102-1857	88044	AN503-6-12	.SCREW,MACHINE	UHH,UHV	EA	1
423C	121	PAFZZ	1680-01-070-1189	82402	42305E127	.TUBE ASSEMBLY,BREAT	UHH,UHV	EA	1
423C	122	PAFZZ	5330-00-166-0990	81349	M83248-1-014	.PACKING,PREFORMED	UHH,UHV	EA	2
423C	123	PAFZZ	3120-01-088-6907	09455	LTD1020	.BEARING,WASHER,THRU	UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
423C	124	PBFZZ	3020-01-078-6108	824C2	42277E198	.GEAR,SPUR	UHH,UHV	EA	1
423C	125	PAFZZ	3110-00-068-9393	60380	J108	.BEARING,ROLLER,NEED	UHH,UHV	EA	2
423C	126	PBFZZ	3040-01-072-4524	82402	42277D121	.SHAFT,SHOULDERED	UHH,UHV	EA	1
423C	127	PAFZZ	3110-00-516-5377	21335	9306K	.BEARING,BALL,ANNULA	UHH,UHV	EA	1
423C	128	PAFZZ	1680-01-070-0965	82402	42277D165	.GEARSHAFT ASSEMBLY	UHH,UHV	EA	1
423C	129	PAFZZ	5365-01-068-8553	82402	42277C150	.SPACER,SLEEVE	UHH,UHV	EA	2
423C	130	PAFZZ	5365-01-071-7559	82402	49001C36	.SHIM	UHH,UHV	EA	1
423C	131	PAFZZ	3110-00-868-2669	38443	1902S	.BEARING,BALL,ANNULA	UHH,UHV	EA	2
423C	132	PBFZZ	3020-01-069-6912	82402	42305E222	.GEAR,SPUR	UHH,UHV	EA	1
423C	133	PAOZZ	5935-00-813-2020	77820	PC06E-8-4SSR	.CONNECTOR,PLUG,ELEC	UHH,UHV	EA	1
423C	134	PAOZZ	5930-01-073-8884	82402	42277D179	.SWITCH,THERMOSTATIC	UHH,UHV	EA	1
423C	135	PAOZZ	5365-00-289-3070	95906	MS9015-08	.PLUG,MACHINE THREAD	UHH,UHV	EA	1
423C	136	PAOZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE	UHH,UHV	EA	8
423C	137	PBOZZ	9905-01-086-4517	82402	42277C221	.PLATE,INSTRUCTION	UHH,UHV	EA	1
423C	138	PBOZZ	9905-01-155-8332	82402	42305C173	.PLATE,IDENTIFICATIX	UHH,UHV	EA	1
423C	139	PBFZZ	1680-01-076-4802	82402	42305D128	.PINION,INPUT DRIVE	UHH,UHV	EA	1
423C	140	PAFZZ	3110-00-180-7284	38443	1903S	.BEARING,BALL,ANNULA	UHH,UHV	EA	10
423C	141	PBFZZ	3020-01-078-1069	82402	42305E159	.GEAR,SPUR	UHH,UHV	EA	1
423C	142	PAFZZ	5315-00-687-5218	95906	MS35756-3	.KEY,WOODRUFF	UHH,UHV	EA	1
423C	145	PAFFF	1680-01-070-0986	82402	42305E132	.INERTIA DUMP ASSEMB	UHH,UHV	EA	1
423C	146	PAFFF	1680-01-071-0174	82402	42305E237	..DRIVER ASSEMBLY,INE	UHH,UHV	EA	1
423C	147	PAFZZ	3120-01-072-9236	82402	42305C234	...BEARING,SLEEVE	UHH,UHV	EA	1
423C	148	PAFZZ	1680-01-071-5517	82402	42305D235	...STOP,DOG,SPRING CLU	UHH,UHV	EA	1
423C	149	PAFFF	1680-01-078-6045	82402	42305D232	..SHAFT ASSY,CLUTCH	UHH,UHV	EA	1
423C	150	PAFZZ	5360-01-074-7823	82402	42305D231	...SPRING,HELICAL,COMP	UHH,UHV	EA	1
423C	151	PAFZZ	1680-01-071-5516	82402	42305D238	..RING,LOCKING,SPACER	UHH,UHV	EA	1
423C	152	PAFFF	1680-01-073-3842	82402	42305E236	..STOP ASSEMBLY,INERT	UHH UHV	EA	1
423C	153	PAFZZ	5365-00-551-7910	80756	RR102	..RING,RETAINING	UHH,UHV	EA	1
423C	154	PAFZZ	5365-01-105-7134	82402	886-360	..SHIM	UHH,UHV	EA	3
423C	154	PAFZZ	5365-01-105-7133	82402	886-361	..SHIM	UHH,UHV	EA	2
423C	154	PAFZZ	5365-01-105-7132	82402	886-362	..SHIM	UHH,UHV	EA	3

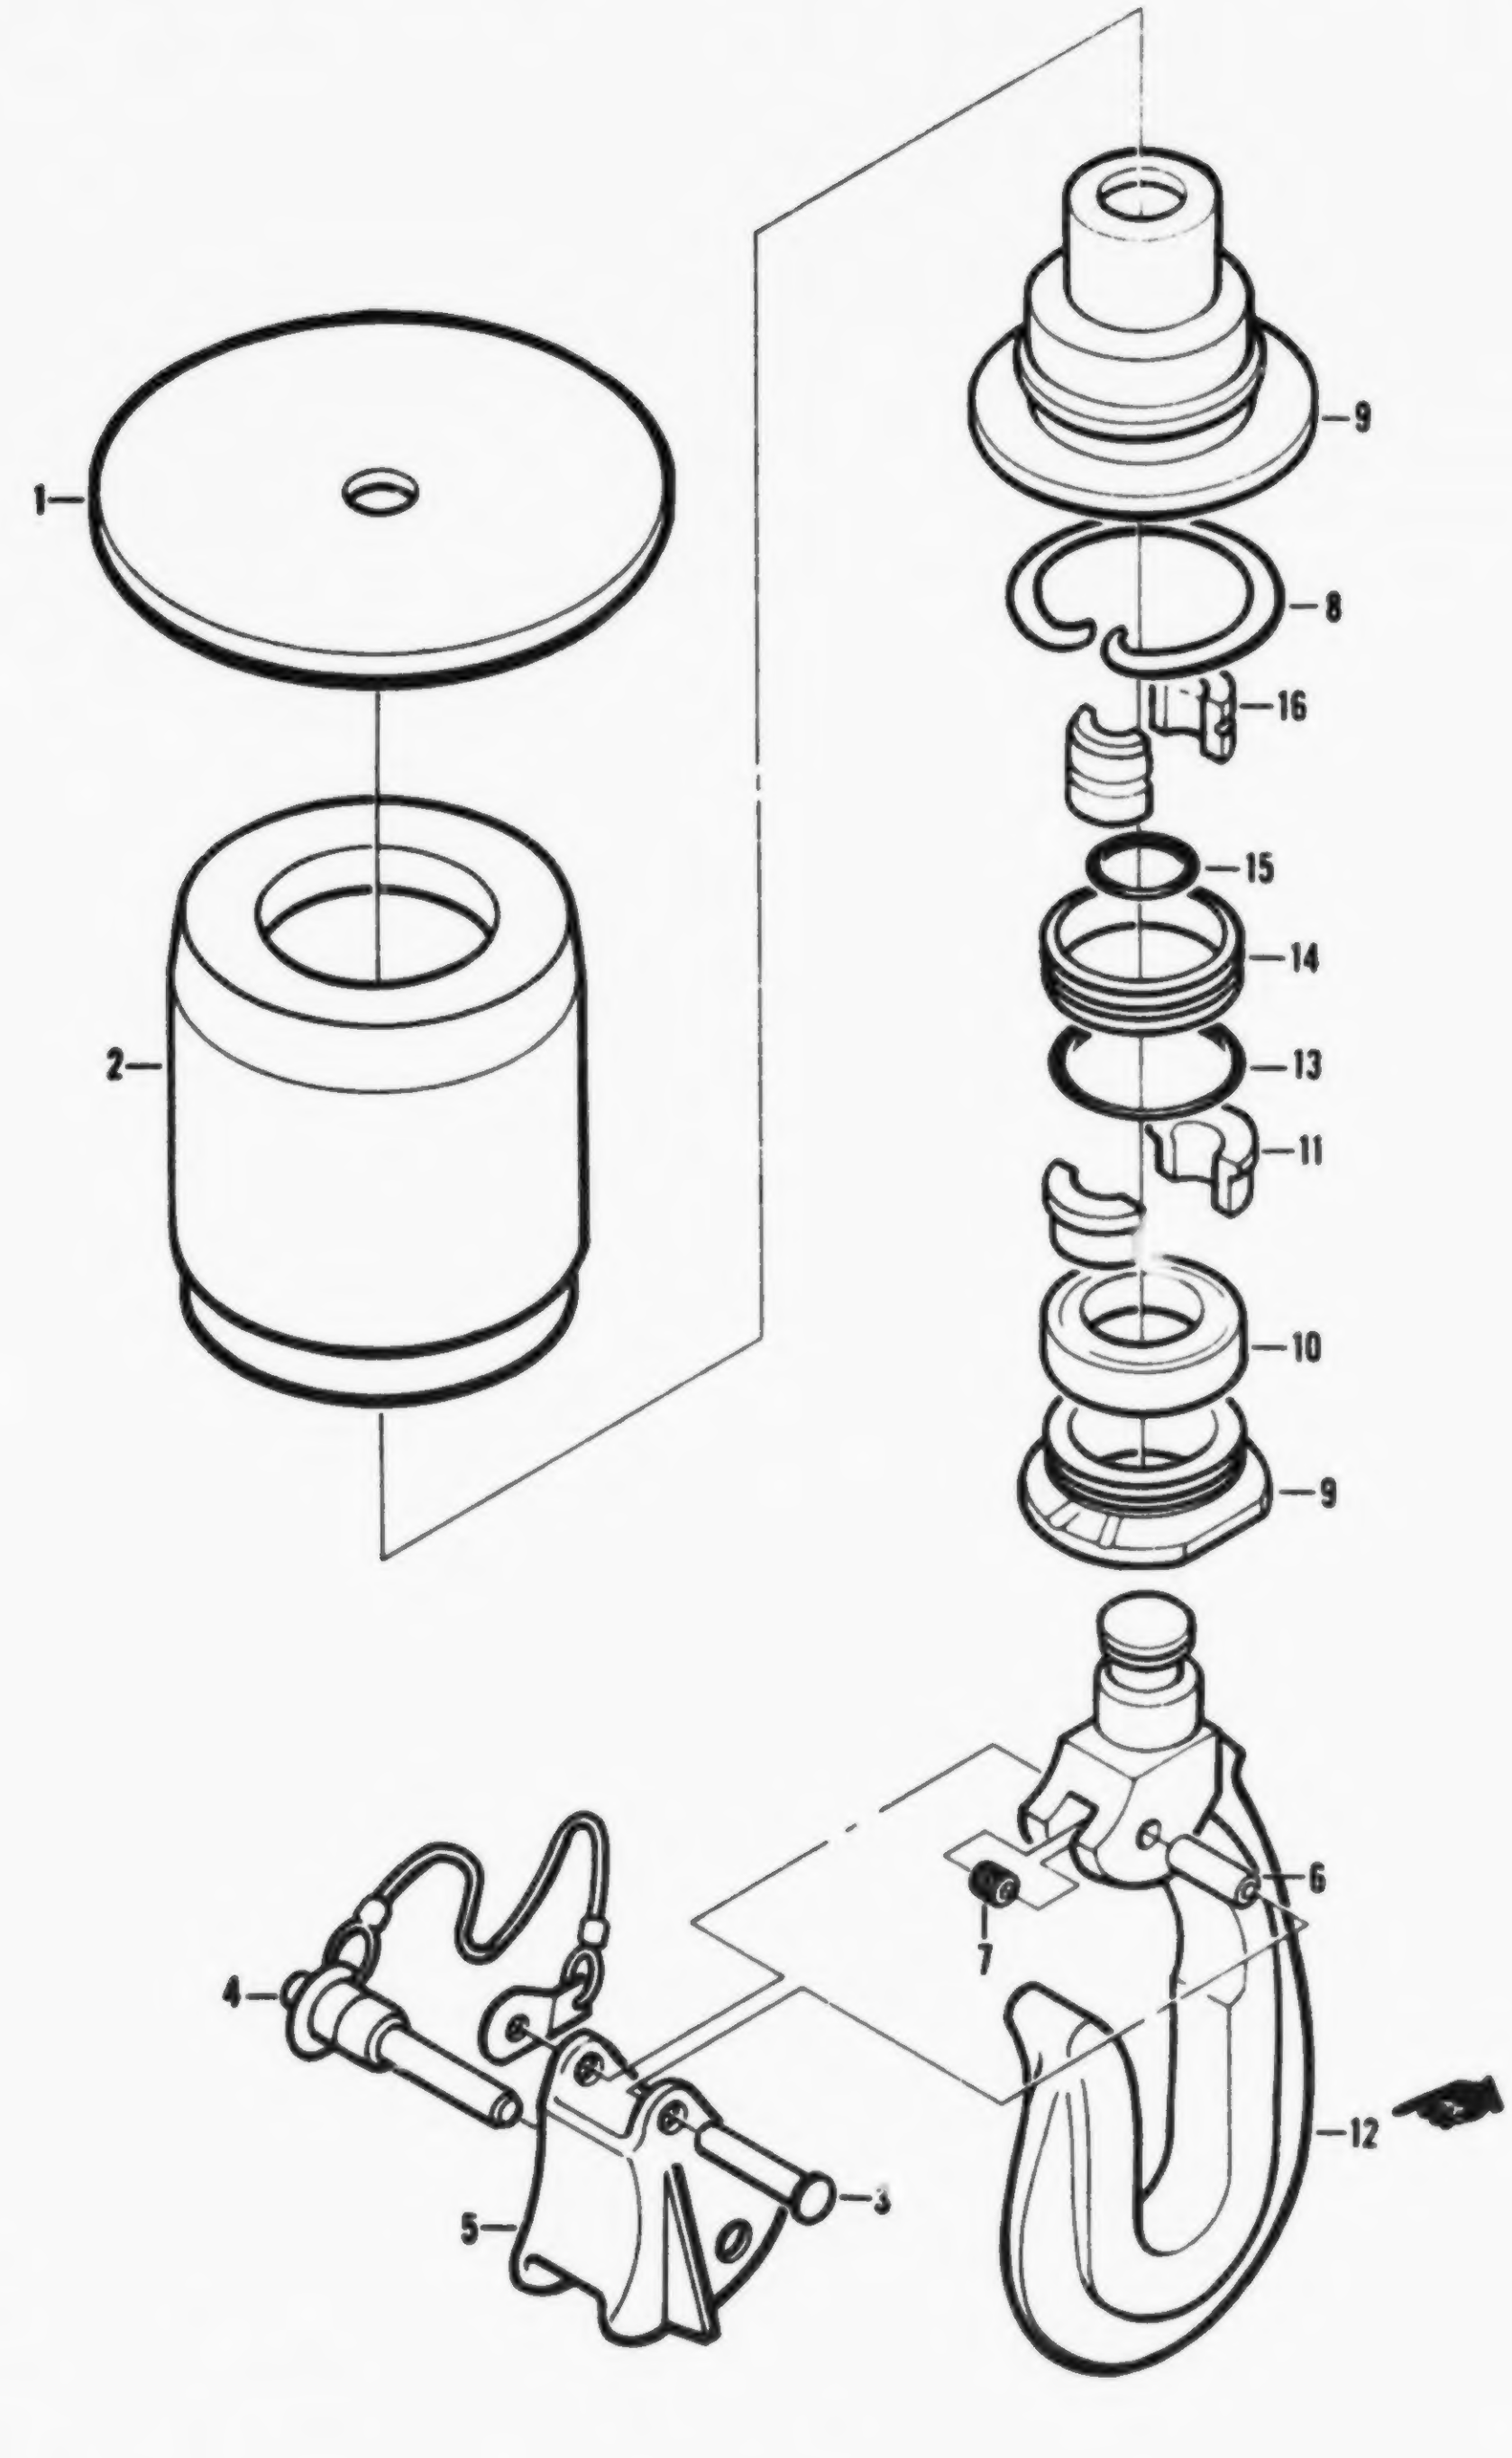
1
2
3
4
5
6
7
8
9
9
10
11
12
13
14
15
16

Figure 423D. Cable Hook Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423D		PA000	1680-01-070-0971	82402	42305E280	HOOK ASSY,HOIST SEE FIG 423A FOR NHA	UHH,UHV	EA	1
423D	1	PBOZZ	1680-01-072-1481	82402	42305D291	.DISC,STRIKER	UHH,UHV	EA	1
423D	2	PBOZZ	1680-01-082-1130	82402	42305D290	.CYLINDER,ENERGY ABS	UHH,UHV	EA	1
423D	3	PAOZZ	5320-00-881-6193	96906	MS20613-4C20	.RIVET,SOLID	UHH,UHV	EA	1
423D	4	PAOZZ	5340-01-018-9050	82402	42234D418	.PIN,QUICX RELEASE	UHH,UHV	EA	1
423D	4	PAOZZ	5340-01-105-7110	82402	42277D293	.PIN,QUICKRELEASE	UHH,UHV	EA	1
423D	5	PBOZZ	1680-01-070-0976	82402	42277D285	.KEEPER,CABLE HOOK	UHH,UHV	EA	1
423D	6	PAOZZ	3120-01-078-2842	82402	42277C286	.BUSHING,SLEEVE	UHH,UHV	EA	1
423D	7	PAOZZ	5360-01-072-1353	82402	42277D288	.SPRING,HELICAL,TORS	UHH,UHV	EA	1
423D	8	PAOZZ	5365-01-071-3629	82402	42277D289	.RING,RETAINING	UHH,UHV	EA	1
423D	9	PBOZZ	1680-01-070-0970	82402	42305D287	.CARRIER ASSEMBLY	UHH,UHV	EA	1
423D	10	PAOZZ	3110-00-027-4028	96906	MS27641-10	.BEARING,BALL,AIRFRA	UHH,UHV	EA	1
423D	11	PBOZZ	1680-00-001-6850	82402	42234D402	.RETAINER, SPLIT,CAB	UHH,UHV	EA	1
423D	12	PBOZZ	4030-01-071-0121	82402	42305E281	.HOOK,HOIST CABLE	UHH,UHV	EA	1
423D	13	PAOZZ	5330-00-727-2637	96906	MS28775-023	.PACKING,PREFORMED	UHH,UHV	EA	1
423D	14	PBOZZ	1680-01-070-1190	82402	42277D284	.CAP,SEAL,CARRIER	UHH,UHV	EA	1
423D	15	PAOZZ	5330-00-684-3419	96906	MS28775-016	.PACKING,PREFORMED	UHH,UHV	EA	1
423D	16	PBOZZ	1680-00-497-7491	82402	42234D405	.RETAINER,SPLIT-CABL	UHH,UHV	EA	1

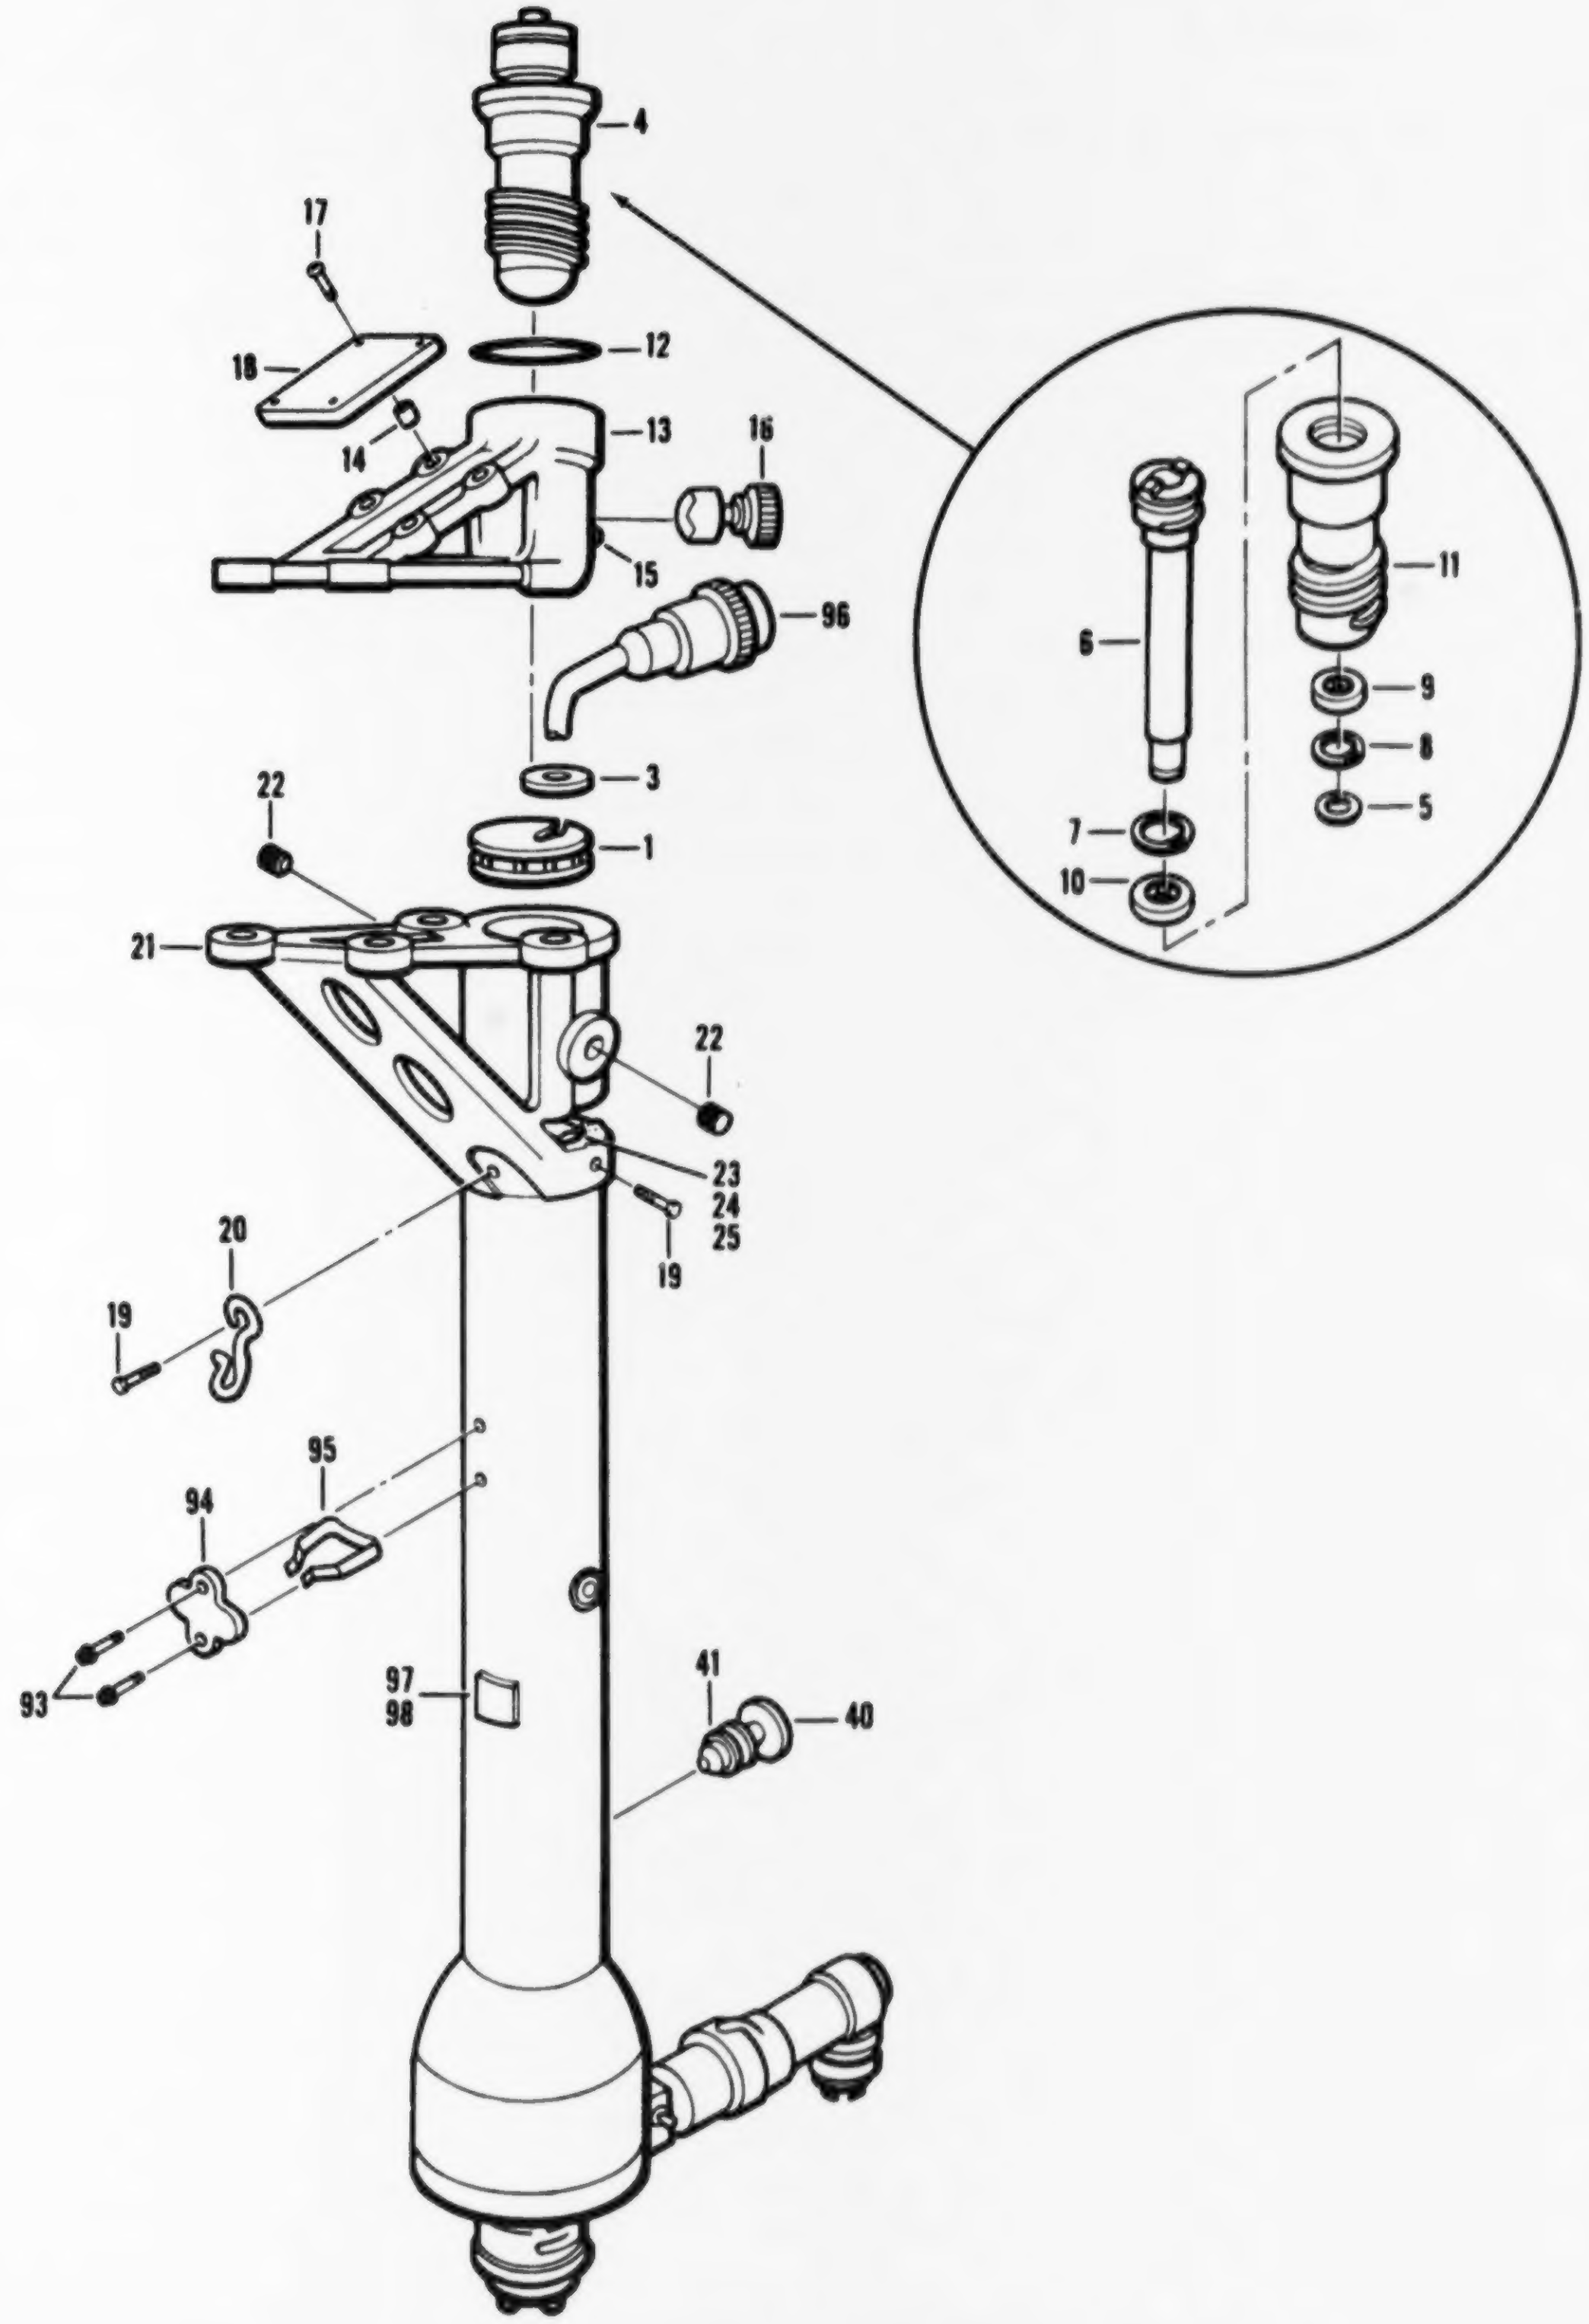
4
17
12
18
13
16
14
15
96
11
6
9
8
5
7
10
3
22
1
21
22
23
24
25
19
20
19
95
94
93
97
98
41
40

Figure 423E. Reaction Arm Assembly (Sheet 1 of 3)

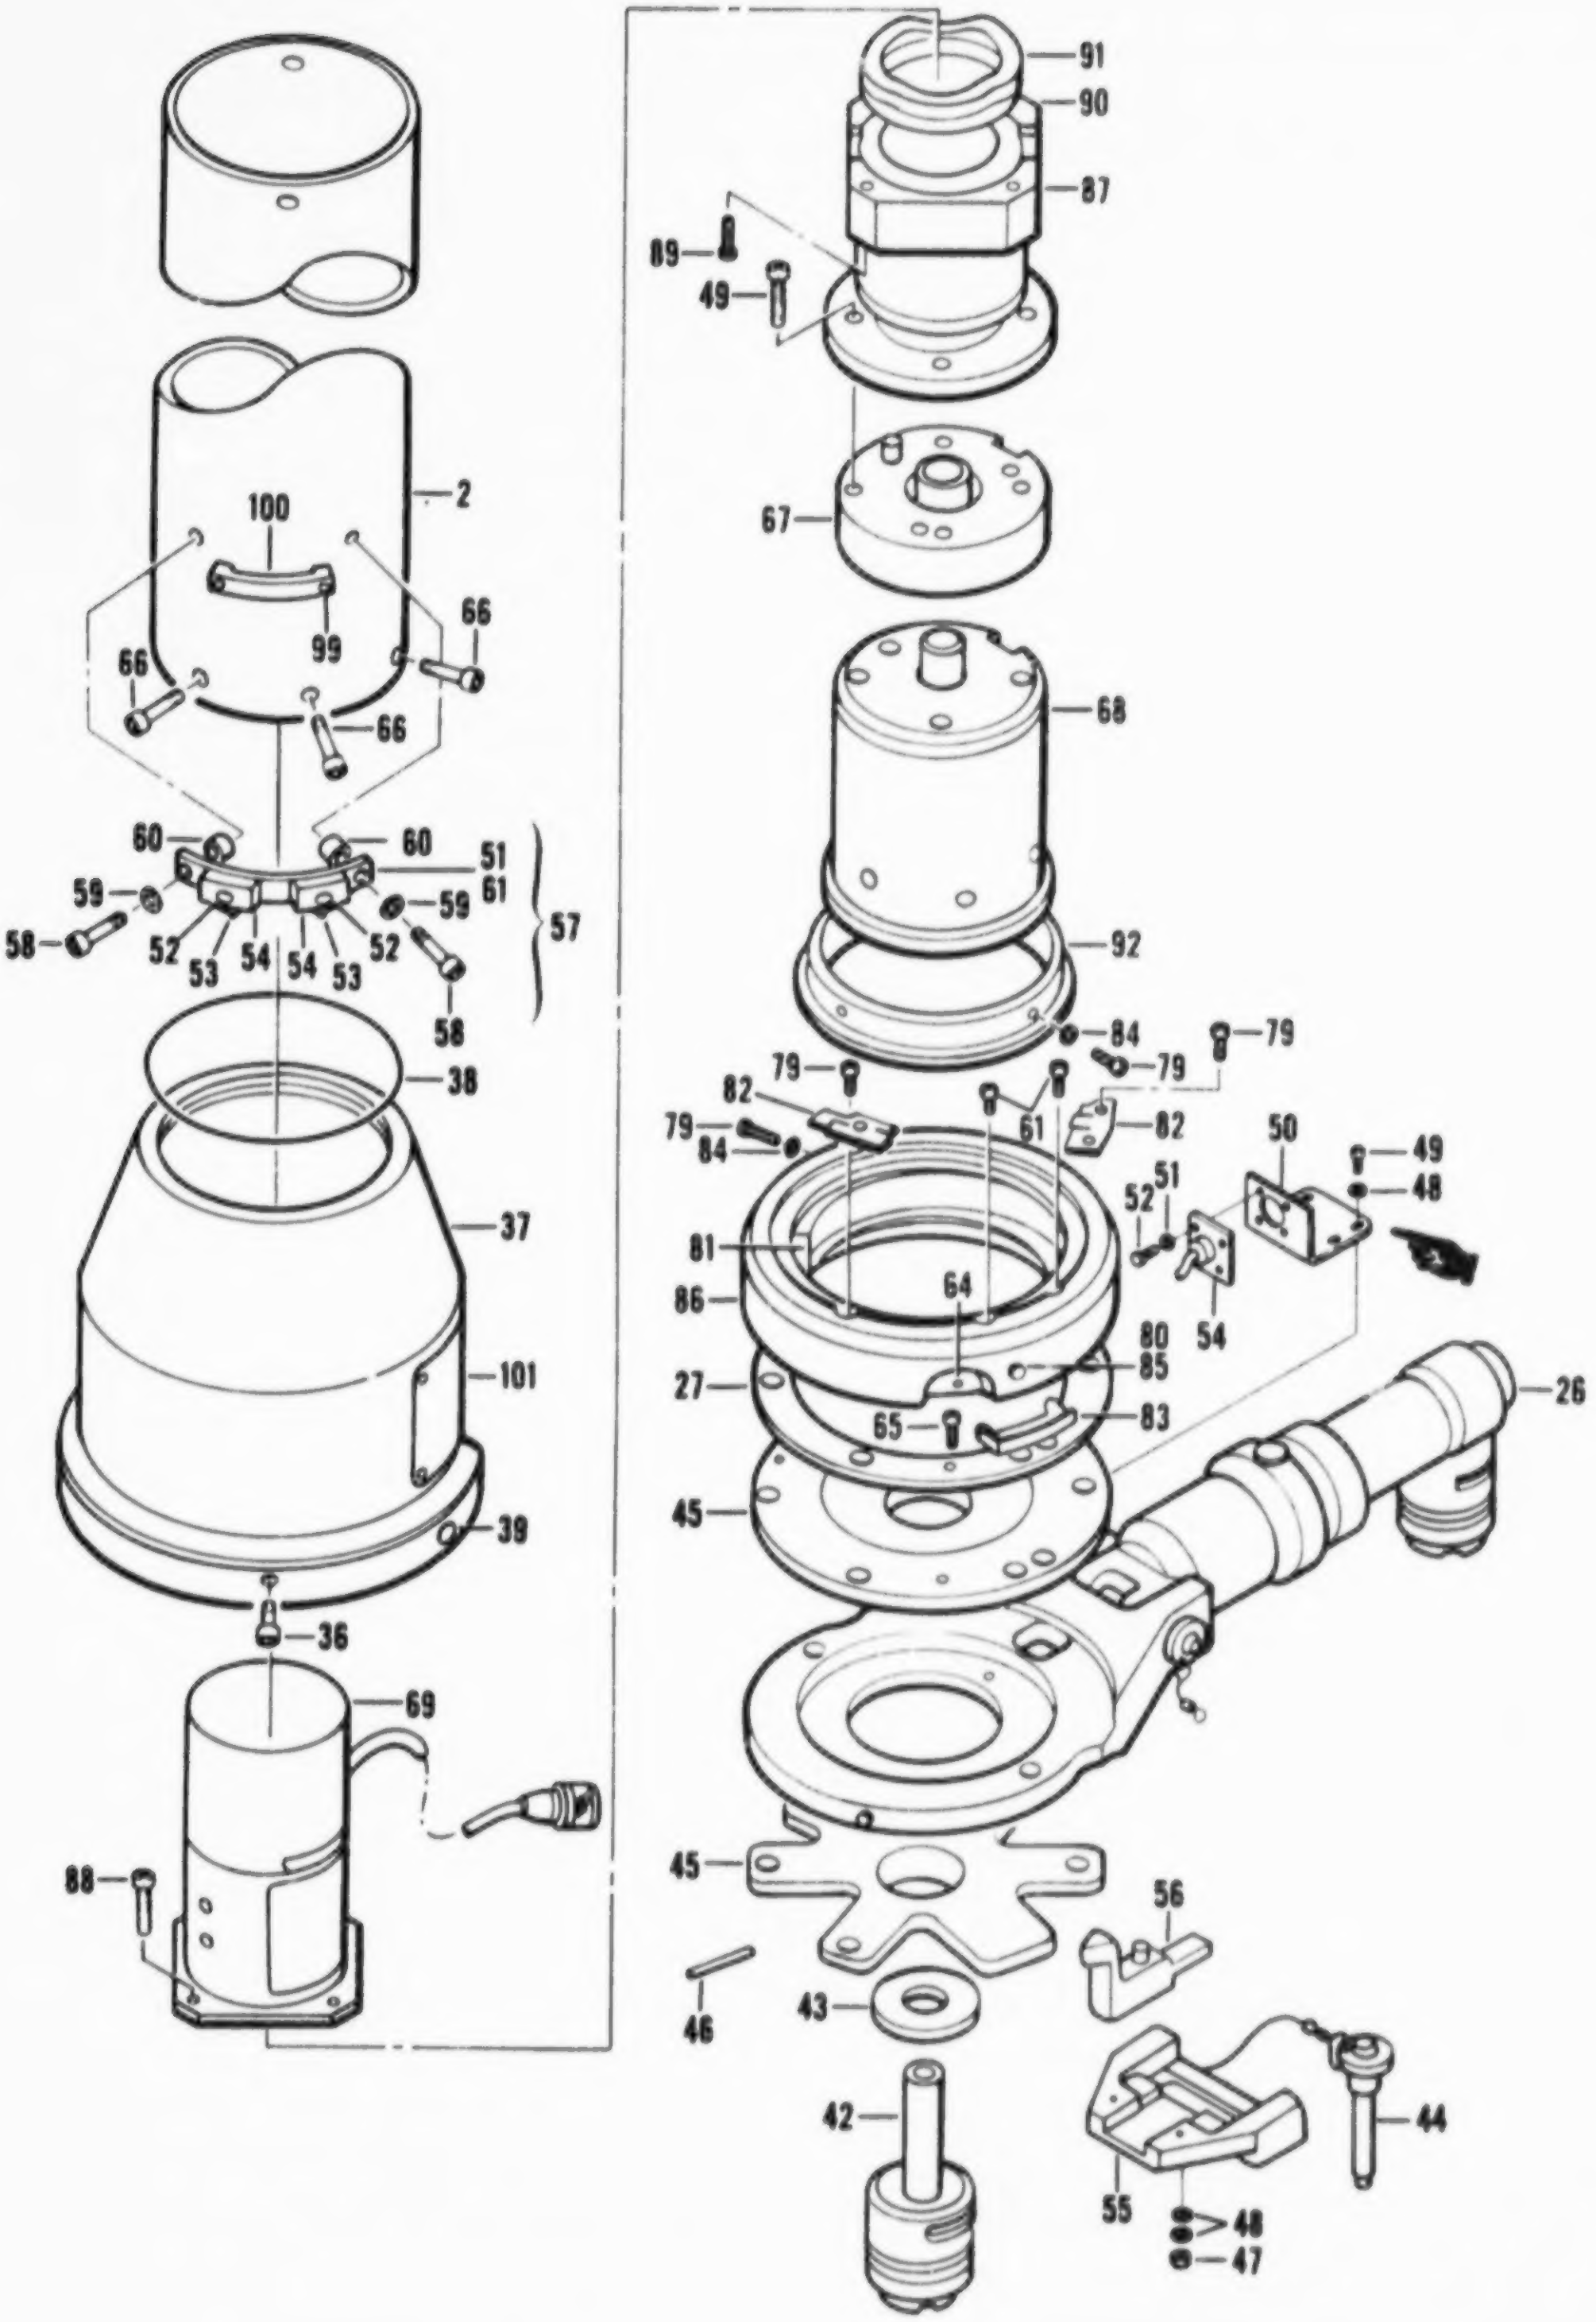
91
90
87
89
49
2
100
99
66
66
66
67
68
60
60
51
61
57
59
59
58
52
53
54
54
53
52
58
92
84
79
79
79
38
82
82
61
79
84
50
49
48
52
51
81
86
64
80
85
54
37
101
27
26
65
83
45
39
36
69
45
56
88
46
43
42
44
55
48
47

Figure 423E. Reaction Arm Assembly (Sheet 2 of 3)

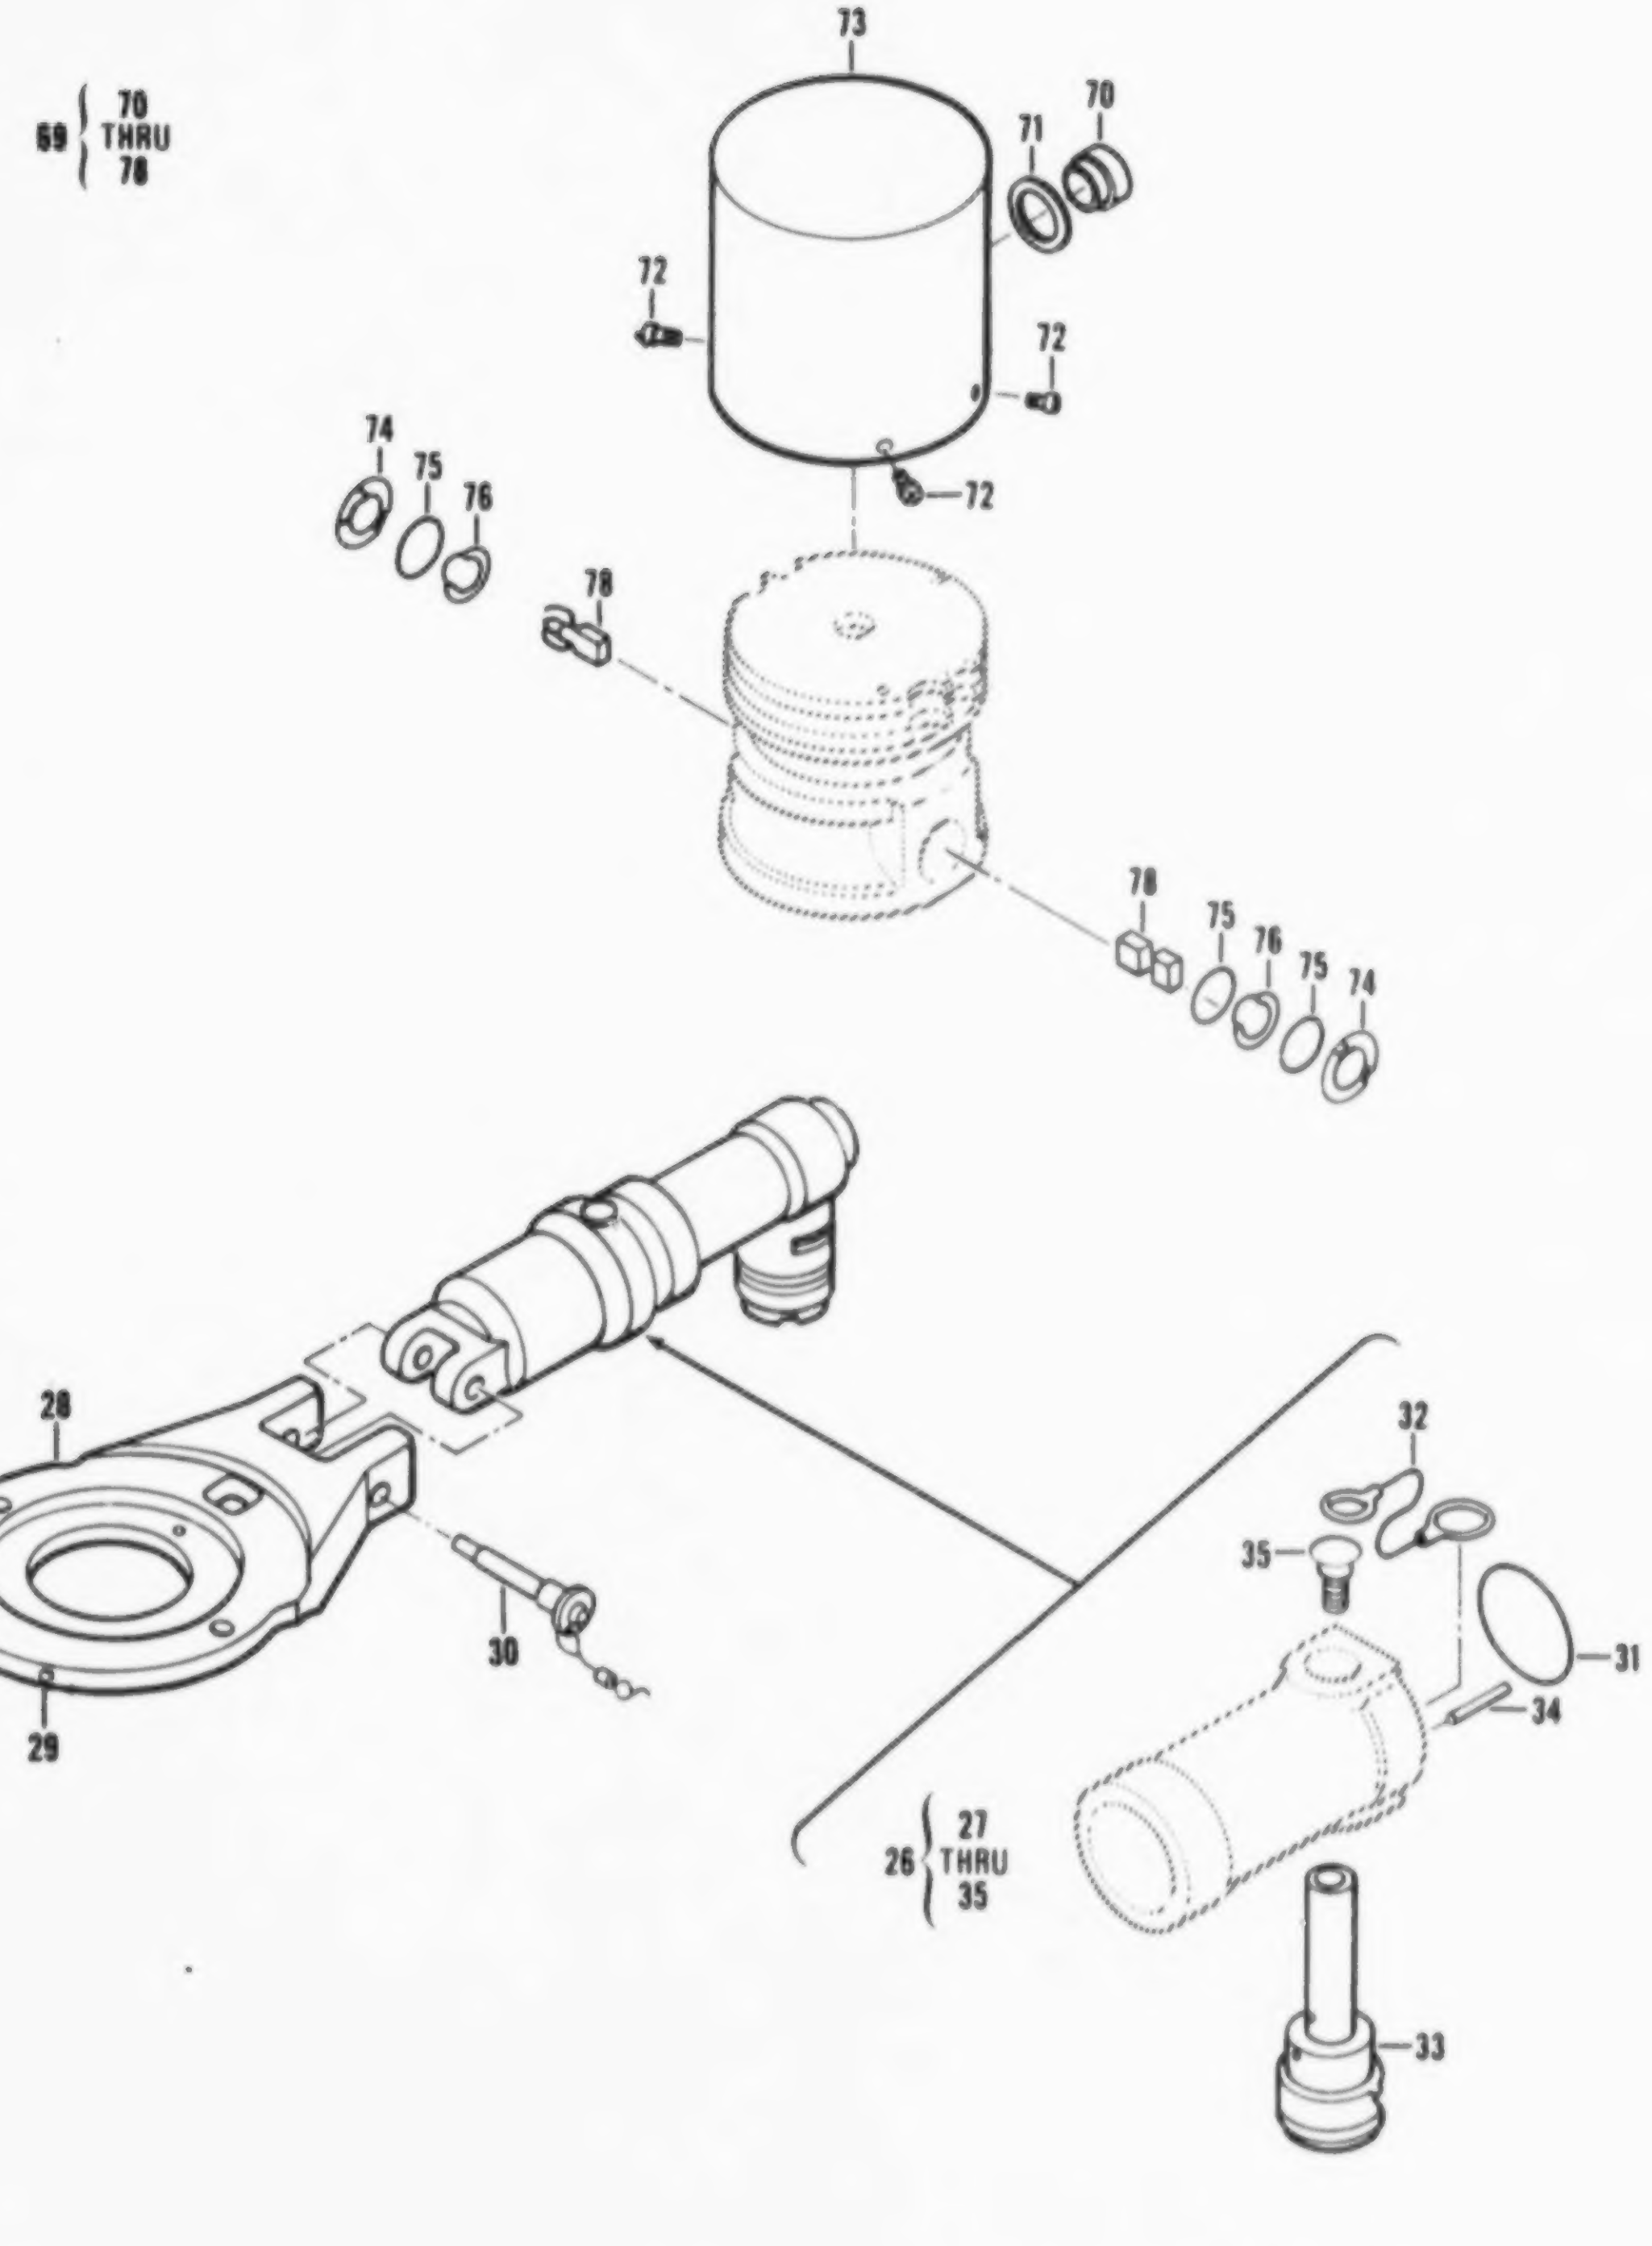
69 { 70 THRU 78
73
71
70
72
72
72
74
75
76
78
78
75
76
75
74
28
32
35
31
34
30
27
29
26 { 27 THRU 35
33

Figure 423E. Reaction Arm Assembly (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423E		PAODD	1680-01-070-9950	82402	42305R500	SUPPORT ASSY,BOOM SEE FIG 423A FOR NHA	UHH,UHV	EA	1
423E	1	PBFZZ	1680-01-071-0178	82402	42277E594	.PLATE,STANCHION	UHH,UHV	EA	1
423E	2	XBFFF		82402	42305R530	.STANCHION TUBE ASSY	UHH,UHV	EA	1
423E	3	PAOZZ	5325-00-276-6100	96906	MS35489-14	.GROMMET,NONMETALLIC	UHH,UHV	EA	1
423E	4	AFFFF		82402	42305D525	.HEIGHT ADJUSTER ASSEMBLY	UHH,UHV	EA	1
423E	5	PAFZZ	5365-00-282-5583	80756	RST62	..RING,RETAINING	UHH,UHV	EA	1
423E	6	PAOZZ	1680-01-111-0186	82402	42305E566	..ADAPTER,CEILING	UHH,UHV	EA	1
423E	7	PAFZZ		80756	RRT118	..RING,RETAING	UHH,UHV	EA	1
423E	8	PAFZZ	5365-00-800-8270	80756	RRT10LCX	..RING	UHH,UHV	EA	1
423E	9	PAFZZ	3110-00-106-8823	96906	MS27646-36	..BEARING,BALL,AIRFRM	UHH,UHV	EA	1
423E	10	PAFZZ	3110-00-293-8818	38443	B539DD	..BEARING,BALL,AIRFRA	UHH,UHV	EA	1
423E	11	XDFZZ		82402	42305E526	..SHAFT HOUSING	UHH,UHV	EA	1
423E	12	PAOZZ	5330-00-802-2130	96906	MS28775-133	.PACKING,PREFORMED	UHH,UHV	EA	1
423E	13	XBFFF		82402	42277R522	.SUPPORT ASSY,UPPER	UHH,UHV	EA	1
423E	14	PAFZZ	5340-00-021-3495	96906	MS51830-201L	..INSERT,SCREW THR	UHH,UHV	EA	4
423E	15	PAOZZ	5305-01-088-0263	95906	MS51973-112	.SETSCREW	UHH,UHV	EA	1
423E	16	PBOZZ	5340-01-084-5152	01226	SL-375	.PLUNGER,QUICK RELEA	UHH,UHV	EA	1
423E	17	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE	UHH,UHV	EA	4
423E	18	XBOZZ		82402	42277D528	.COVER PLATE	UHH,UHV	EA	1
423E	19	PAOZZ	5306-00-144-4041	88044	AN175H10A	.BOLT,CLOSE TOLER	UHH,UHV	EA	4
423E	20	PAOZZ	1680-01-071-0176	82402	42277E539	.HOOK,PENDANT,WINCH	UHH,UHV	EA	1
423E	21	XBFFF		82402	42277R521	.SUPPORT ASSY,LOWER	UHH,UHV	EA	1
423E	22	PAFZZ	5340-00-793-0760	29372	KNL524	..INSERT,SCREW THREAD	UHH,UHV	EA	2
423E	23	PBFFF	1680-01-071-5380	82402	42277D523	.RING ASSY,ANCHOR	UHH,UHV	EA	1
423E	24	PBFZZ	5310-01-074-7453	75237	F2400-5	..NUT,SELF-LOCKING	UHH,UHV	EA	4
423E	25	PAFZZ	5320-00-117-7208	96906	MS20426D04-6	..RIVET,SOLID	UHH,UHV	EA	8
423E	26	PAODD	1680-01-070-9974	82402	42305E510	.ARM ASSY,REACTION,B SEE FIG.423E FOR BREAKDOWN	UHH,UHV	EA	1
423E	27	PBFFF	1680-01-075-2221	82402	42305E593	..REACTION PLATE ASSY	UHH,UHV	EA	1
423E	28	PAFZZ		82402	42305D553	...BUSHING,SLEEVE	UHH,UHV	EA	2
423E	29	PAFZZ	5340-00-324-9146	96906	MS21209F0815	...INSERT,SCREW THREAD	UHH,UHV	EA	2
423E	30	PAFZZ		82402	42305D573	..PIN,QUICK RELEASE	UHH,UHV	EA	1
423E	31	PAFZZ		82402	42277C529	..PLUG,EXPANSION	UHH,UHV	EA	1
423E	32	PAFZZ	1680-01-070-9965	82402	42277C517	..LANYARD,EXTENSION	UHH,UHV	EA	1
423E	33	PAFZZ	1680-01-070-9964	82402	42305E561	..ADAPTER,QUICK DISCO	UHH,UHV	EA	1
423E	34	PAFZZ	5315-00-810-3701	96906	MS16562-36	..PIN,SPRING	UHH,UHV	EA	1
423E	35	PAFZZ	5307-01-080-2270	82402	42305D569	..STUD,SELF-LOCKING	UHH,UHV	EA	1
423E	36	PAOZZ	5305-00-052-8250	96906	MS16998-19	.SCREW,CAP,SOCKET HE	UHH,UHV	EA	2
423E	37	PBOOO	1680-01-071-9215	82402	42277R578	.SWITCH COVER	UHH,UHV	EA	1
423E	38	PAOZZ	5330-00-579-7545	96906	MS28775-238	.PACKING,PREFORMED	UHH UHV	EA	1
423E	39	PBFZZ	1680-01-071-0175	82402	42305E599	.RING,ANTI-SCUFF	UHH,UHV	EA	1
423E	40	PAOZZ	5307-01-080-2270	82402	42305D569	.STUD	UHH,UHV	EA	1
423E	41	PAOZZ	5310-00-003-9264	96906	MS25082C6	.NUT,PLAIN,HEXAGON	UHH,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UN
423E	42	PAFZZ	1680-01-070-9964	82402	42305E561	.ADAPTER,QUICK DISCO	UHH,UHV	EA	1
423E	43	PAFZZ	5310-01-077-1029	82402	42305C533	.BEARING,WASHER,THPU	UHH,UHV	EA	1
423E	44	PAFZZ	5340-01-089-4259	82402	42277D587	.PIN,QUICK RELEASE	UHH,UHV	EA	
423E	45	PB000	1680-01-071-5390	82402	42305D536	.PLATE SET,BASE,BOOM	UHH,UHV	EA	
423E	46	PAOZZ	5315-00-543-3716	96906	MS9048-111	.PIN,SPRING	UHH,UHV	EA	1
423E	47	PAOZZ	5310-00-941-6019	96906	MS21083N08	.NUT,SELF-LOCKING,HE	UHH,UHV	EA	2
423E	48	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT	UHH,UHV	EA	4
423E	49	PAOZZ	5305-00-151-0376	96906	MS35265-52	.SCREW,MACHINE	UHH,UHV	EA	6
423E	50	PBFZZ	1680-01-072-5919	82402	42277D591	.BRACKET,OVERLOAD SW	UHH,UHV	EA	1
423E	51	PBOZZ	5310-01-067-3438	82402	4067C193	.WASHER,SPRING TENSI	UHH,UHV	EA	4
423E	52	PAFZZ	5305-00-054-5642	96906	MS51957-8	.SCREW,MACHINE	UHH,UHV	EA	4
423E	53	PAOZZ	5930-00-917-7083	91929	JE5	.ACTUATOR LEAF	UHH,UHV	EA	2
423E	54	PAFZZ	5930-00-917-7083	91929	1SE2	.SWITCH,SENSITIVE	UHH,UHV	EA	2
423E	55	PBFZZ	1680-01-099-6311	82402	42305E571	.PLATE,HEEL,SWITCH	UHH,UHV	EA	1
423E	56	PBFZZ	1680-01-070-9976	82402	42305D519	.LEVER ASSY,SWITCH A	UHH,UHV	EA	1
423E	57	XD000		82402	42277D597	.LIMIT SWITCH ASSY	UHH,UHV	EA	1
423E	58	PAOZZ	5305-00-934-0114	80205	NAS1352-06H6	..SCREW,CAP,SOCKET HE	UHH,UHV	EA	2
423E	59	PAOZZ	5310-00-616-6822	80205	NAS620-6L	..WASHER,FLAT	UHH,UHV	EA	2
423E	60	PAOZZ	5365-00-302-8098	80205	NAS43DD1-16	..SPACER,SLEEVE	UHH,UHV	EA	2
423E	61	XDOZZ	1680-01-083-3414	82402	42277D577	..BRACKET,SWITCH	UHH,UHV	EA	1
423E	64	PAFZZ	5305-00-889-3116	96906	MS35206-213	.SCREW,MACHINE	UHH,UHV	EA	
423E	65	PADZZ	5305-00-957-7816	96906	MS24693-S24	.SCREW,MACHINE	UHH,UHV	EA	
423E	66	PAOZZ	5306-00-145-0700	88044	AN174CH6A	.BOLT,CLOSE TOLERANC	UHH,UHV	EA	6
423E	67	PAFDD	1680-01-075-2234	82402	42305E540	.MECHANICAL STOP ASS	UHH,UHV	EA	1
423E	68	PAFDD	1680-01-070-9953	82402	42305E555	.ROTARY ACTUATOR ASS	UHH,UHV	EA	1
423E	69	PAFDD	6105-01-071-5413	82402	239YC32	.MOTOR,DIRECT CURREN	UHH,UHV	EA	1
423E	70	PAFZZ	5975-00-351-6114	28520	SR5P4	..BUSHING,STRAIN RELI	UHH,UHV	EA	1
423E	71	PAFZZ	5330-00-579-8108	96906	MS28775-111	..PACKING,PREFORMED	UHH,UHV	EA	1
423E	72	PAFZZ	5305-00-579-2138	96906	MS35265-2	..SCREW,MACHINE	UHH,UHV	EA	4
423E	73	XBFZZ		82402	14304-1	..END COVER	UHH,UHV	EA	1
423E	74	PAFZZ	5365-00-347-8254	96906	MS16629-1056	..RING,RETAINING	UHH,UHV	EA	2
423E	75	PADZZ	5340-01-072-9343	82402	15205-1	..DISK,SOLID,PLAIN	UHH,UHV	EA	3
423E	76	PAFZZ	5310-01-105-7122	82402	80186	..WASHER,SPRING TENSI	UHH,UHV	EA	2
423E	78	PAFZZ	5977-01-073-7394	82402	8732	..BRUSH,ELECTRICAL CO	UHH,UHV	EA	2
423E	79	PAOZZ	5305-00-984-4983	96906	MS35206-226	.SCREW,MACHINE	UHH,UHV	EA	5
423E	80	PAFZZ	5305-00-993-0191	96906	MS35206-212	.SCREW,MACHINE	UHH,UHV	EA	1
423E	81	PBFZZ	1680-01-071-5389	82402	42305R568	.WIRING HARNESS,FLEX	UHH,UHV	EA	1
423E	82	PAOZZ	1680-01-071-9669	82402	42305D585	.CAM,LIMIT SWITCH	UHH,UHV	EA	2
423E	83	PBOZZ	1680-01-099-6312	82402	42305E572	.CLAMP,LIMIT SWITCH	UHH,UHV	EA	1
423E	84	PAFZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT	UHH,UHV	EA	
423E	85	PAFZZ	5310-00-584-3782	88044	AN960C4L	.WASHER,FLAT	UHH,UHV	EA	1
423E	86	PBFZZ	1680-01-072-1731	82402	42305E554	.SUPPORT,LIMIT.SWITC	UHH,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423E	87	PAFDD	1680-01-070-0969	82402	42277E600	.INERTIA DUMP ASSY SEE FIG.423K FOR BREAKDOWN	UHH,UHV	EA	1
423E	88	PAFZZ	5305-00-151-0373	88044	AN500A8-20	.SCREW,MACHINE	UHH,UHV	EA	4
423E	89	PAFZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX	UHH,UHV	EA	4
423E	90	PADZZ	5365-01-071-3639	82402	42277C610	.SHIM	UHH,UHV	EA	1
423E	91	PADZZ	5310-00-595-7484	92830	W2420-025	.WASHER,SPRING TENSI	UHH,UHV	EA	1
423E	92	PBFZZ	1680-01-087-9443	82402	42305D537	.RING,CONDUCTOR HOLD	UHH,UHV	EA	1
423E	93	PAOZZ	5305-00-308-9735	80205	NAS1352-08H4	.SCREW,CAP,SOCKET HE	UHH,UHV	EA	2
423E	94	PBOZZ		82402	42277C596	.RETAINER,HOOK	UHH,UHV	EA	1
423E	95	PAOZZ	5340-01-106-3690	82402	42277D598	.CLIP,RETAINING	UHH,UHV	EA	1
423E	96	PAOZZ		96906	MS3126E14-12P	.CONNECTOR	UHH,UHV	EA	1
423E	97	PAOZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE	UHH,UHV	EA	4
423E	98	XDOZZ		82402	42305C534	.PLATE	UHH,UHV	EA	1
423E	99	PAFZZ	5305-00-051-6521	96906	MS24693S25	.SCREW,MACHINE	UHH,UHV	EA	2
423E	100	PBFZZ	1680-01-099-6313	82402	42305E574	.CLAMP,STANCHION	UHH,UHV	EA	1
423E	101	PAFZZ	1680-01-099-6314	82402	42305E592	.PLATE,POSITIONING	UHH,UHV	EA	1

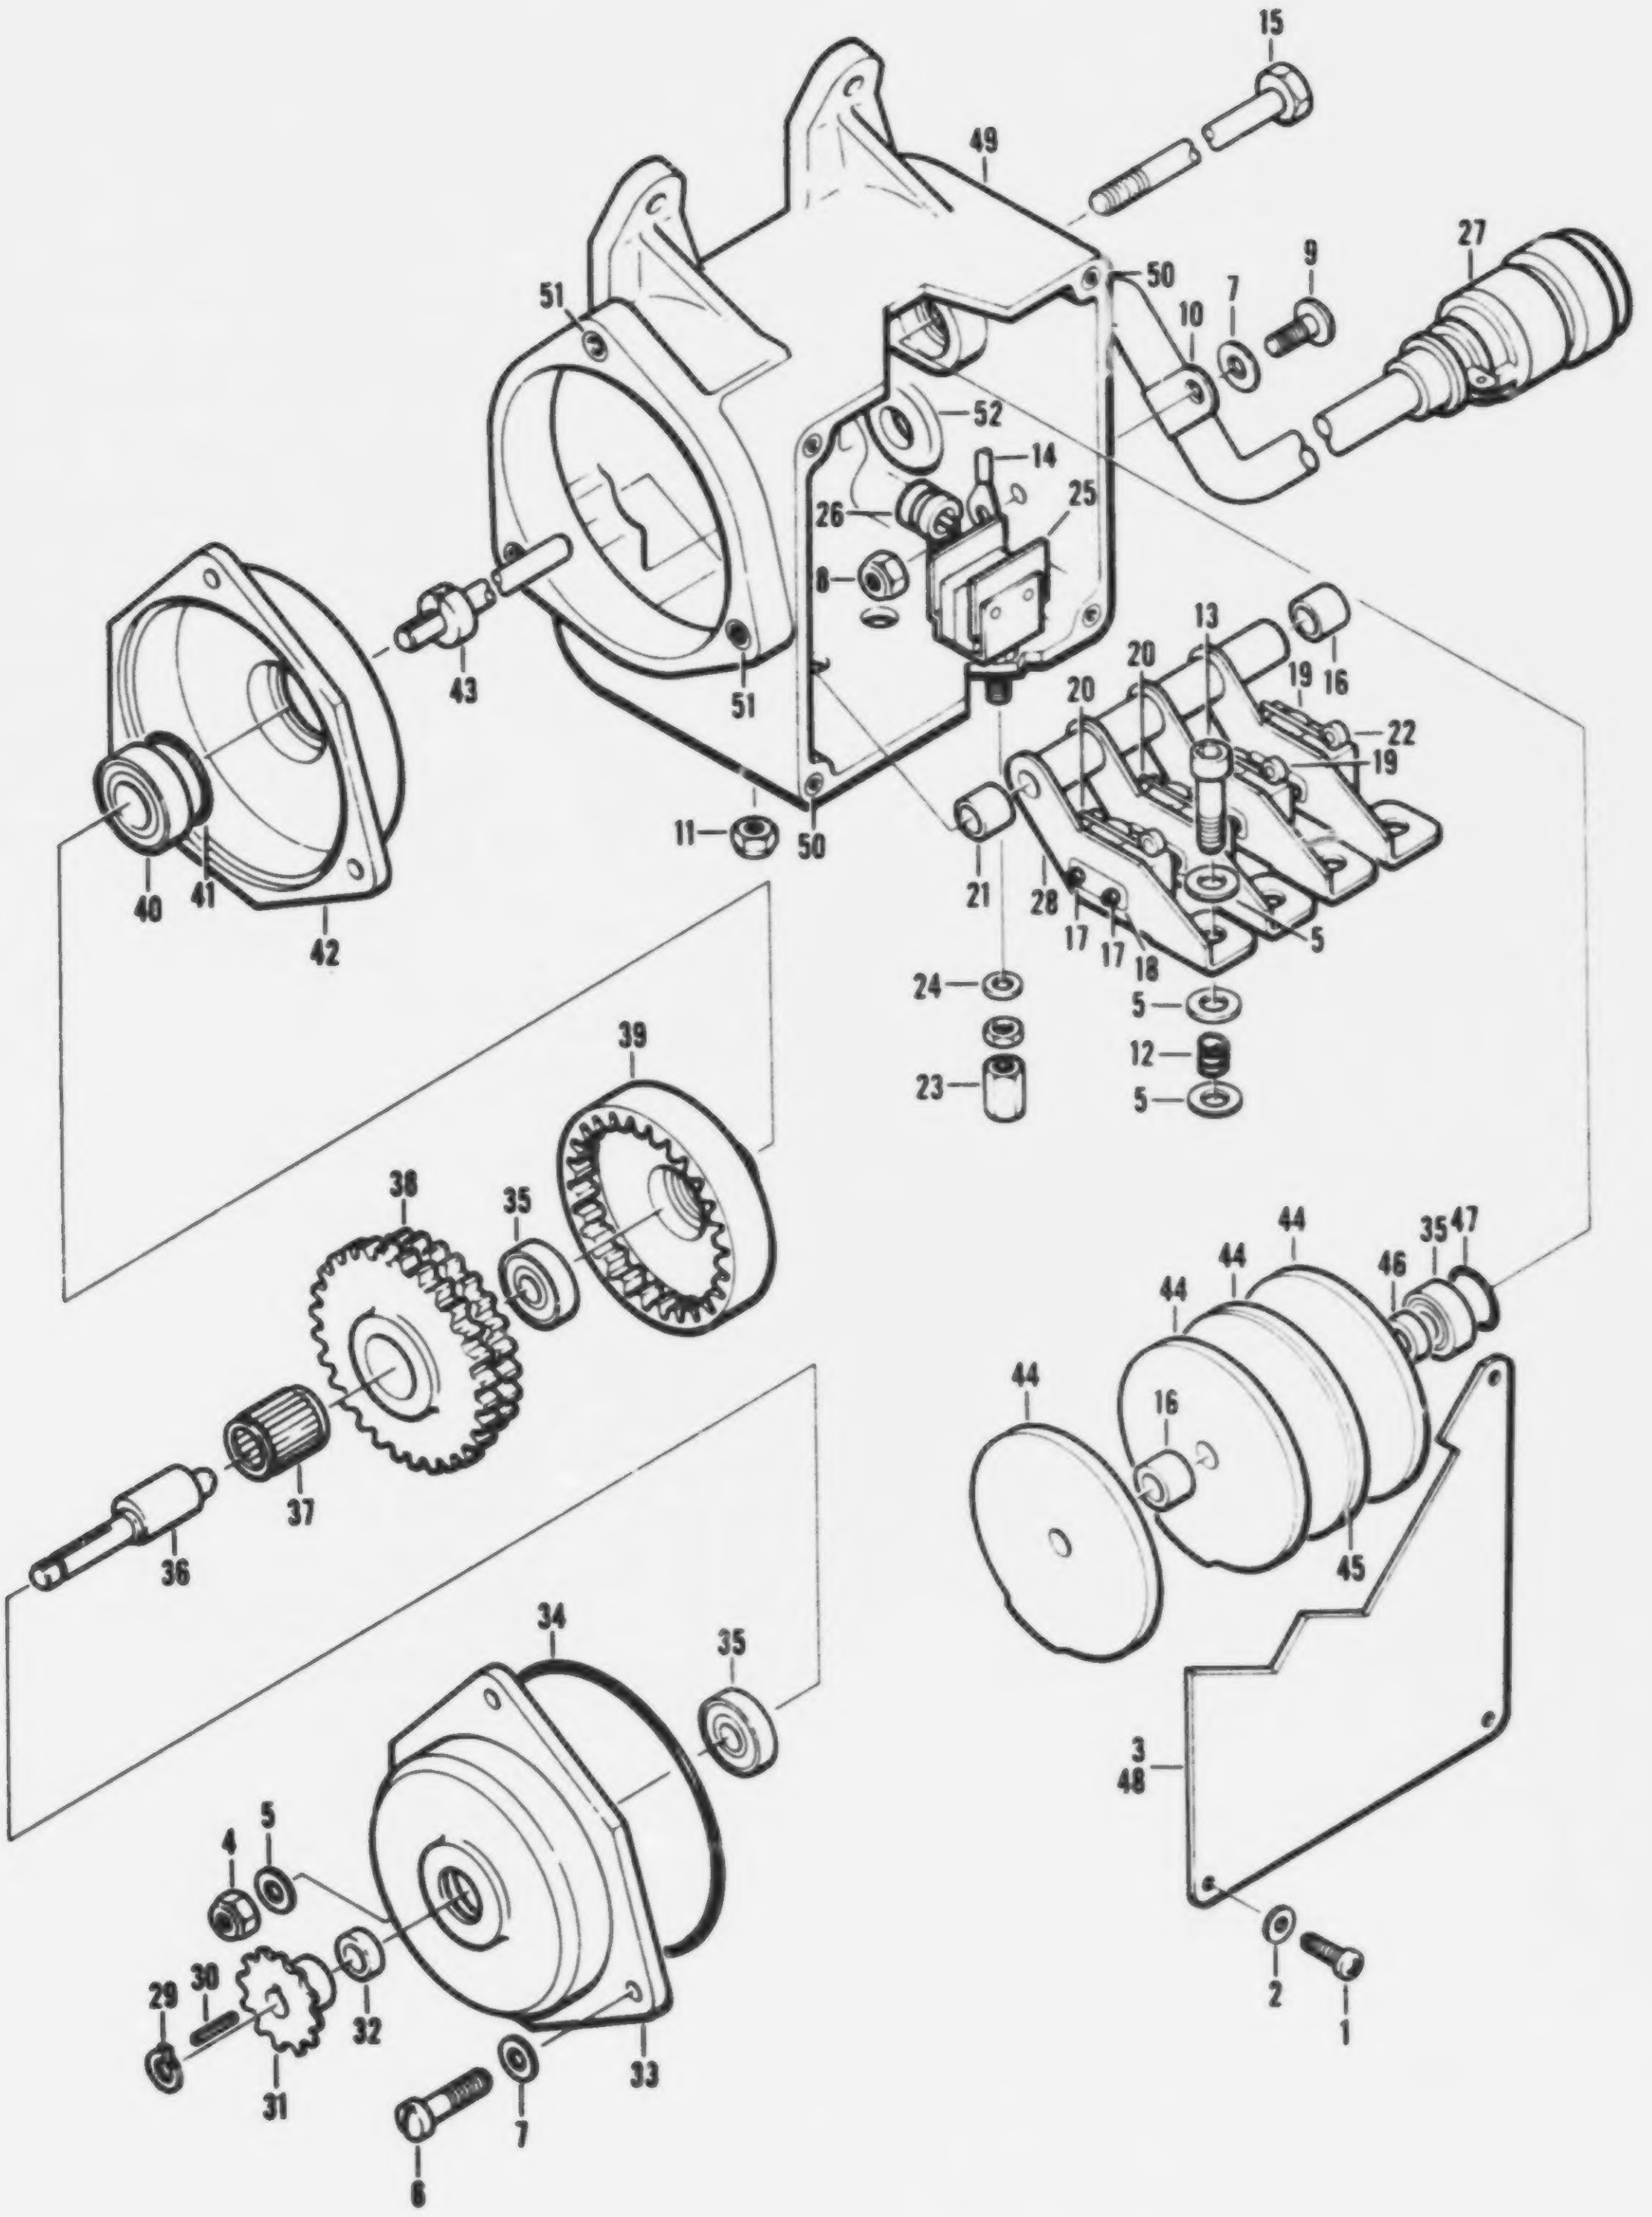
15
49
27
9
50
7
10
51
52
14
25
26
8
43
13
20
16
19
22
20
19
51
11
50
21
28
17
17
18
5
40
41
42
24
5
12
23
5
39
38
35
44
44
44
35
47
46
44
16
37
45
36
34
35
3
48
4
5
29
30
32
31
33
7
6
2
1

Figure 423F. Limit Switch Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
423F		PAOFF	1680-01-082-9699	82402	42305R220	DRIVE ASSEMBLY,LIMI SEE FIG.423C FOR NHA............UHH,UHV	EA	1
423F	1	PAFZZ	5305-00-978-9346	96906	MS16997-18	.SCREW,CAP,SOCKET HE............UHH,UHV	EA	4
23F	2	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT............UHH,UHV	EA	4
23F	3	PBOZZ	1680-01-082-9700	82402	42277D153	.COVER,LIMIT SWITCH............UHH,UHV	EA	1
423F	4	PAFZZ		96906	MS21083D3	.NUT,SELF LOCKING............UHH,UHV	EA	1
423F	5	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT............UHH,UHV	EA	13
423F	6	PAFZZ	5305-00-622-9476	96906	MS35265-46	.SCREW,MACHINE............UHH,UHV	EA	2
423F	7	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT............UHH,UHV	EA	4
423F	8	PAOZZ	5310-00-941-6440	96906	MS21083D08	.NUT,SELF-LOCKING HE............UHH,UHV	EA	1
423F	9	PAOZZ	5305-00-207-3929	88044	AN525D832-8	.SCREW,MACHINE............UHH,UHV	EA	1
423F	10	PAOZZ	5340-00-764-7051	96906	MS21333-69	.CLAMP,LOOP............UHH,UHV	EA	1
423F	11	PACZZ		15653	MF7200-3	.NUT,SELF-LOCKING,CL............UHH,UHV	EA	4
423F	12	PAOZZ	5360-01-095-3662	70472	C0300-032-0440S	.COMPRESSION SPRING............UHH,UHV	EA	4
423F	13	PAOZZ	5305-00-983-6652	96906	MS16998-29	.SCREW,CAP SOCKET HD............UHH,UHV	EA	4
423F	14	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL,LUG............UHH,UHV	EA	1
423F	15	PBFZZ		82402	42277D197	.SHAFT............UHH,UHV	EA	1
423F	16	PAFZZ	5365-01-068-5631	82402	42277C149	.SPACER,SLEEVE............UHH,UHV	EA	3
423F	17	PAOZZ	5305-00-054-5643	96906	MS51957-9	.SCREW,MACHINE............UHH,UHV	EA	8
423F	18	PBOZZ	5110-00-918-3027	82402	4067D193	.WASHER,SPRING TENSI............UHH,UHV	EA	4
423F	19	PAOZZ	5930-00-917-7083	91929	1SE2	.SWITCH,SENSITIVE............UHH,UHV	EA	2
423F	20	PAOZZ	5930-00-729-1662	91929	1SE2-3	.SWITCH,SENSITIVE............UHH,UHV	EA	2
23F	21	PAFZZ	5365-01-106-7114	82402	42277C228	.SPACER,SLEEVE............UHH,UHV	EA	1
423F	22	PADZZ	5930-00-538-6790	91929	JE5	.ADAPTER,SWITCH ACTU............UHH,UHV	EA	4
423F	23	PBFZZ	5310-01-069-0525	82402	42305C122	.NUT,SLEEVE............UHH,UHV	EA	1
423F	24	PAFZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT............UHH	EA	1
423F	25	PAFZZ	5930-01-078-6491	04426	76-2190-404	.SWITCH,PUSH............UHH,UHV	EA	1
423F	26	PAFZZ	5340-00-988-3210	96906	MS25281-4	.CLAMP,LOOP............UHH,UHV	EA	1
423F	27	PAOZZ	5935-00-730-9955	12143	PT06SE12-8P(SR)	.CONNECTOR,PLUG,ELEC............UHH,UHV	EA	1
423F	28	PBFZZ	1680-01-082-9696	82402	42277D151	.BRACKET SWITCH............UHH,UHV	EA	4
423F	29	PAFZZ	5365-00-720-8064	96906	MS16624-1025	.RING,RETAINING............UHH,UHV	EA	1
423F	30	PBFZZ	5315-00-688-0373	82402	49008C3	.KEY,MACHINE............UHH,UHV	EA	1
423F	31	PAFZZ	3020-01-068-1568	82402	42277D156	.SPROCKET WHEEL............UHH,UHV	EA	1
423F	32	PAFZZ	5365-01-068-5632	82402	42277C155	.SPACER,SLEEVE............UHH,UHV	EA	1
423F	33	PBFZZ		82402	42277E145	.GEAR,INTERNAL............UHH,UHV	EA	1
423F	34	PAFZZ	5330-00-166-8395	81349	M83248-1-035	.PACKING,PREFORMED............UHH,UHV	EA	1
423F	35	PAFZZ	3110-00-017-8900	38443	R4ZZ	.BEARING,BALL,ANNULA............UHH,UHV	EA	3
423F	36	PAFZZ	1680-01-082-7811	82402	42277D140	.SHAFT,SHOULDERED............UHH,UHV	EA	1
423F	37	PAFZZ	3110-00-169-7131	60380	J680H	.BEARING,ROLLER,NEED............UHH,UHV	EA	1
423F	38	PBFZZ	3020-01-068-2101	82402	42277D223	.GEAR CLUSTER,SPUR............UHH,UHV	EA	1
23F	39	PBFZZ	3020-01-068-1504	82402	42277E144	.GEAR,INTERNAL............UHH,UHV	EA	1
423F	40	PAFZZ		38443	R6ZZST03ST023H20	.BEARING,BALL,ANNULA............UHH,UHV	EA	1
423F	41	PAFZZ	5365-01-066-5073	82402	49001C10	.SHIM............UHH,UHV	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423F	42	PAFZZ	3110-01-069-4978	82402	42277D146	.PLATE,RETAINING,BEA	UHH,UHV	EA	1
423F	43	PBFZZ	1680-01-067-3100	82402	42277D158	.SHAFT,CAM,LIMIT SWI	UHH,UHV	EA	1
423F	44	PAFZZ	1680-01-082-9695	82402	42277D185	.CAM,LIMIT SWITCH	UHH,UHV	EA	4
423F	45	PAFZZ	1680-01-082-9701	82402	42305D186	.AUXILARY CAM ASSY	UHH,UHV	EA	1
423F	46	PAFZZ	5365-01-068-8553	82402	42277C150	.SPACER,SLEEVE	UHH,UHV	EA	1
423F	47	PAFZZ	5365-01-069-1803	82402	49001C5	.SHIM	UHH,UHV	EA	V
423F	48	PBOZZ		82402	42306E225	.PLATE,INSTRUCTION	UHH,UHV	EA	1
423F	49	XAFZZ		82402	42277R196	.HOUSING ASSY	UHH,UHV	EA	1
423F	50	PAFZZ	5340-01-047-8340	96906	MS21209C0615P	..INSERT,SCREW THREAD	UHH,UHV	EA	4
423F	51	PAFZZ	5340-01-035-4121	96906	MS21209C0815P	..INSERT,SCREW THREAD	UHH,UHV	EA	2
423F	52	PAOZZ	5325-00-682-3601	96906	MS35489-38	.GROMMET,NONMETALLIC	UHH,UHV	EA	1

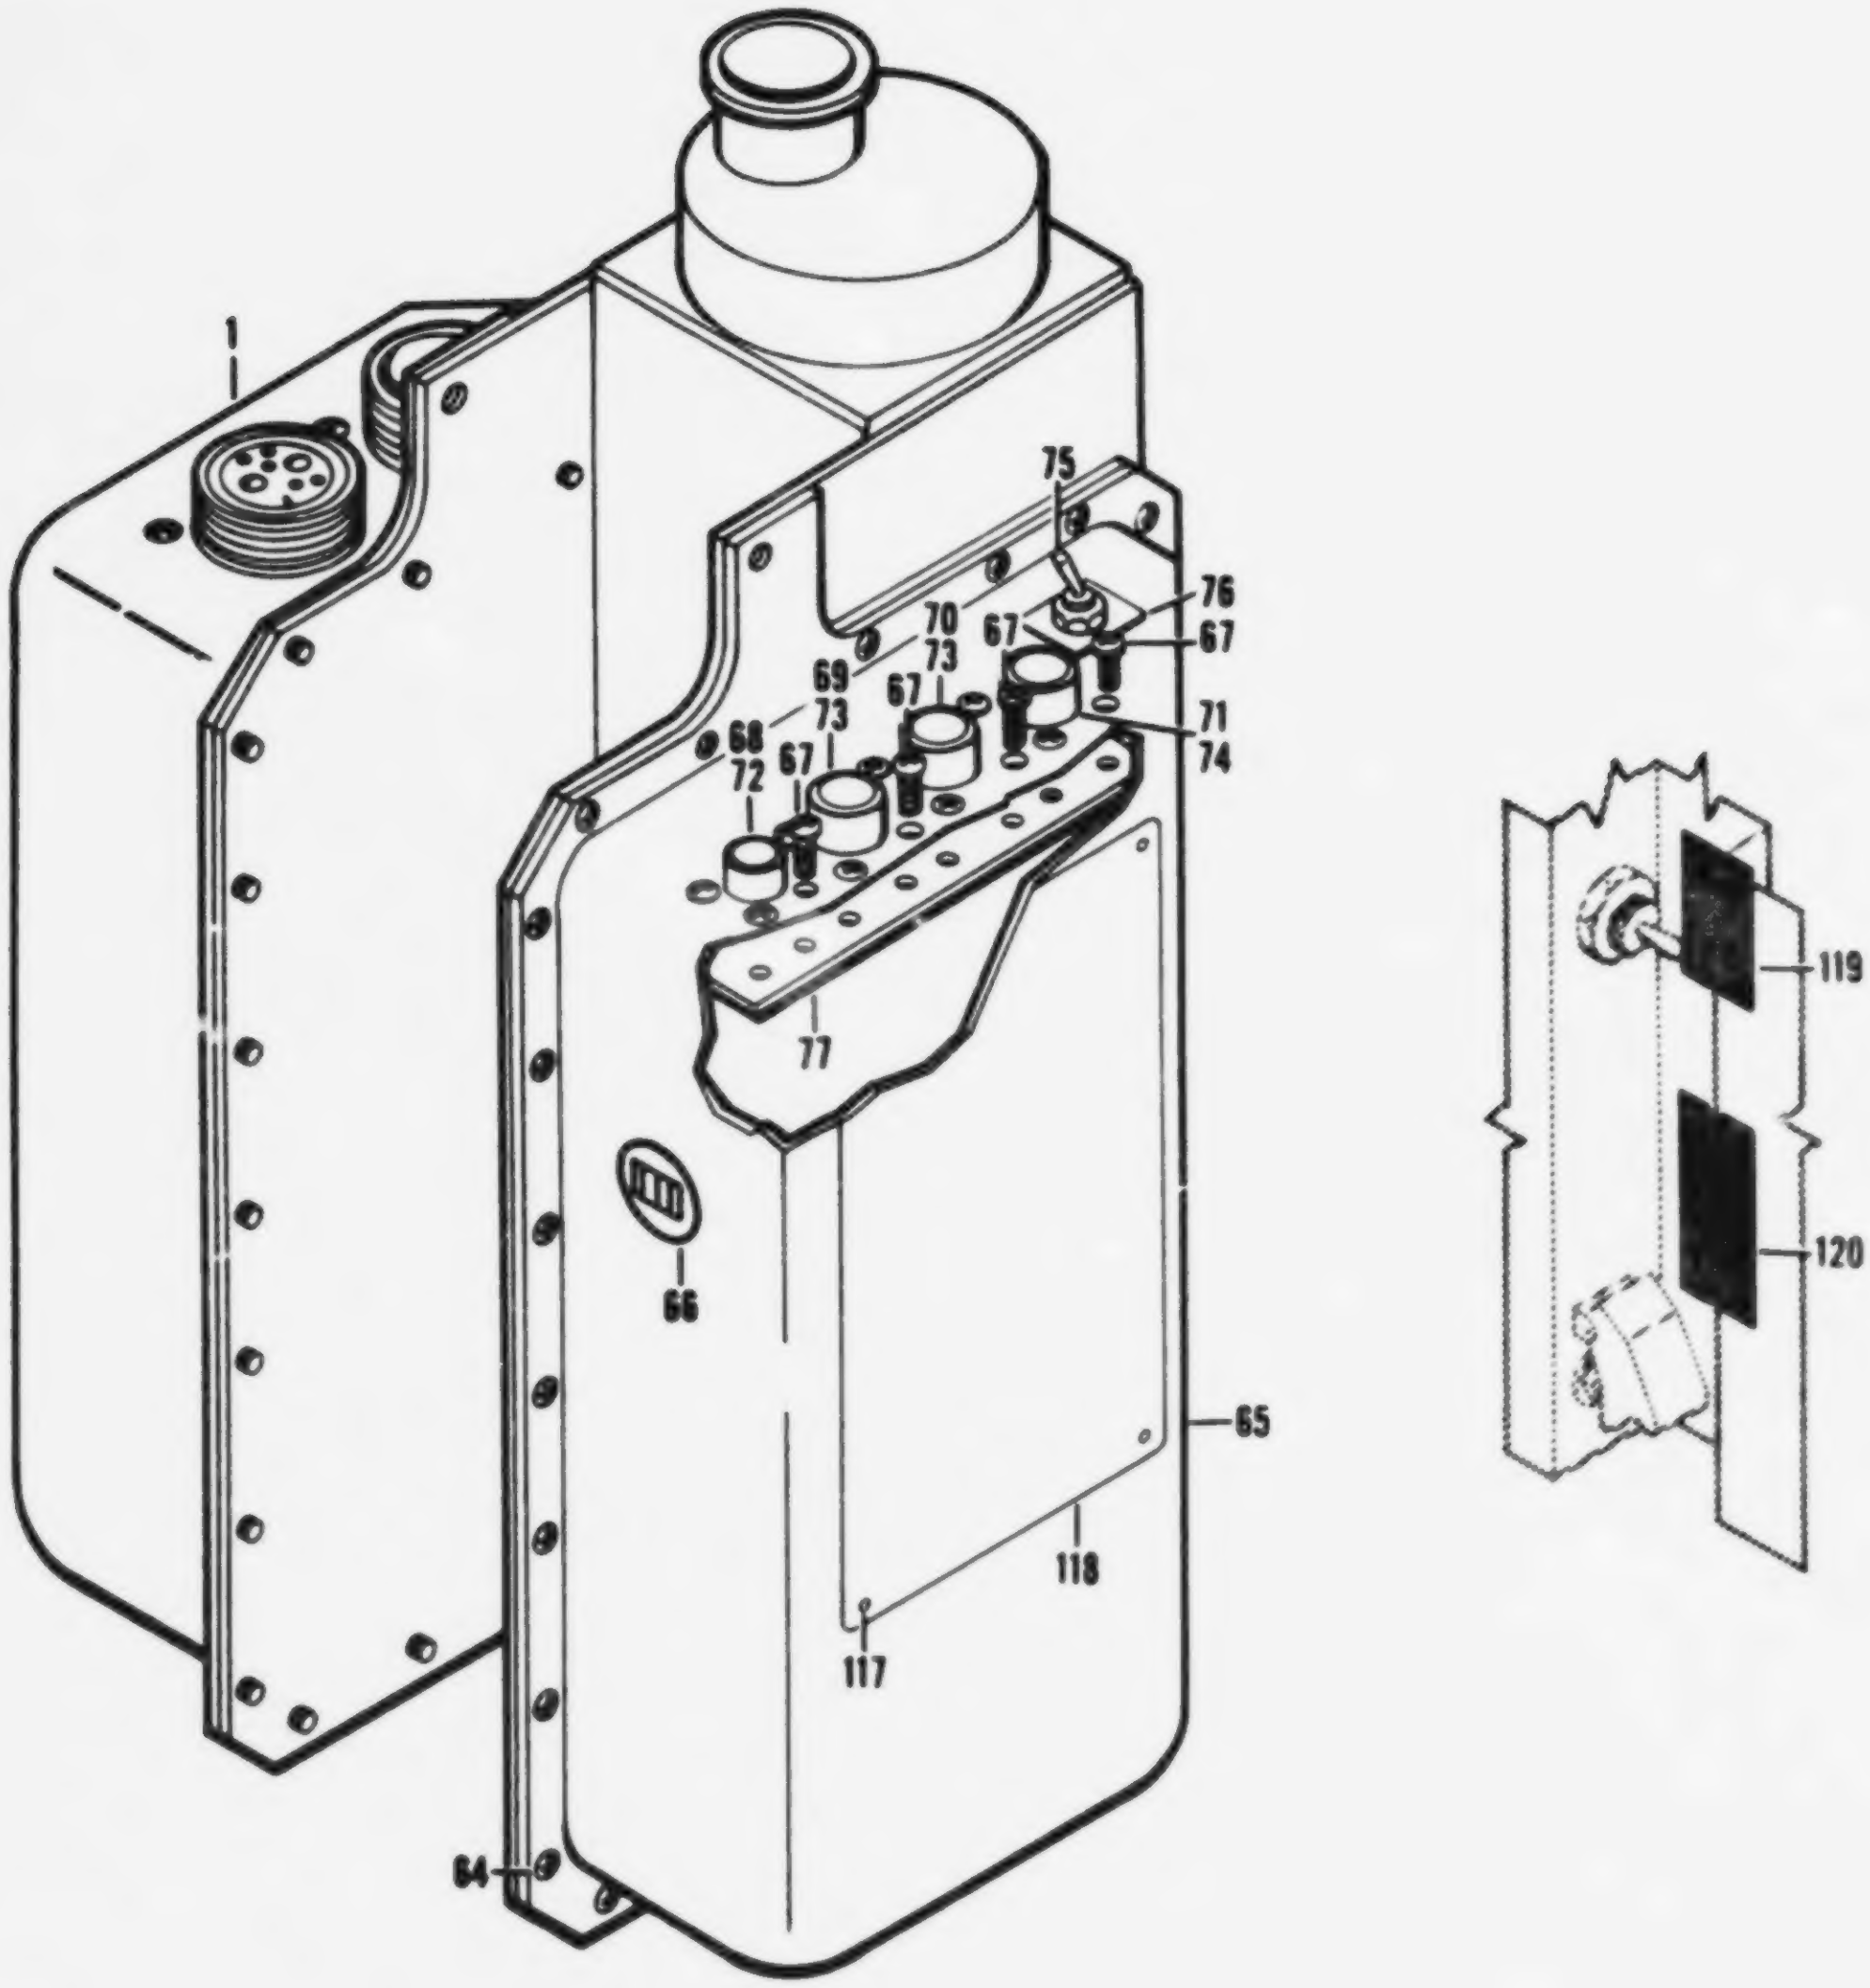
1
75
76
67
70
67
73
69
67
73
71
68
73
74
72
67
77
119
120
66
65
118
117
64

Figure 423G. Power Side Cover Installation (Sheet 1 of 3)

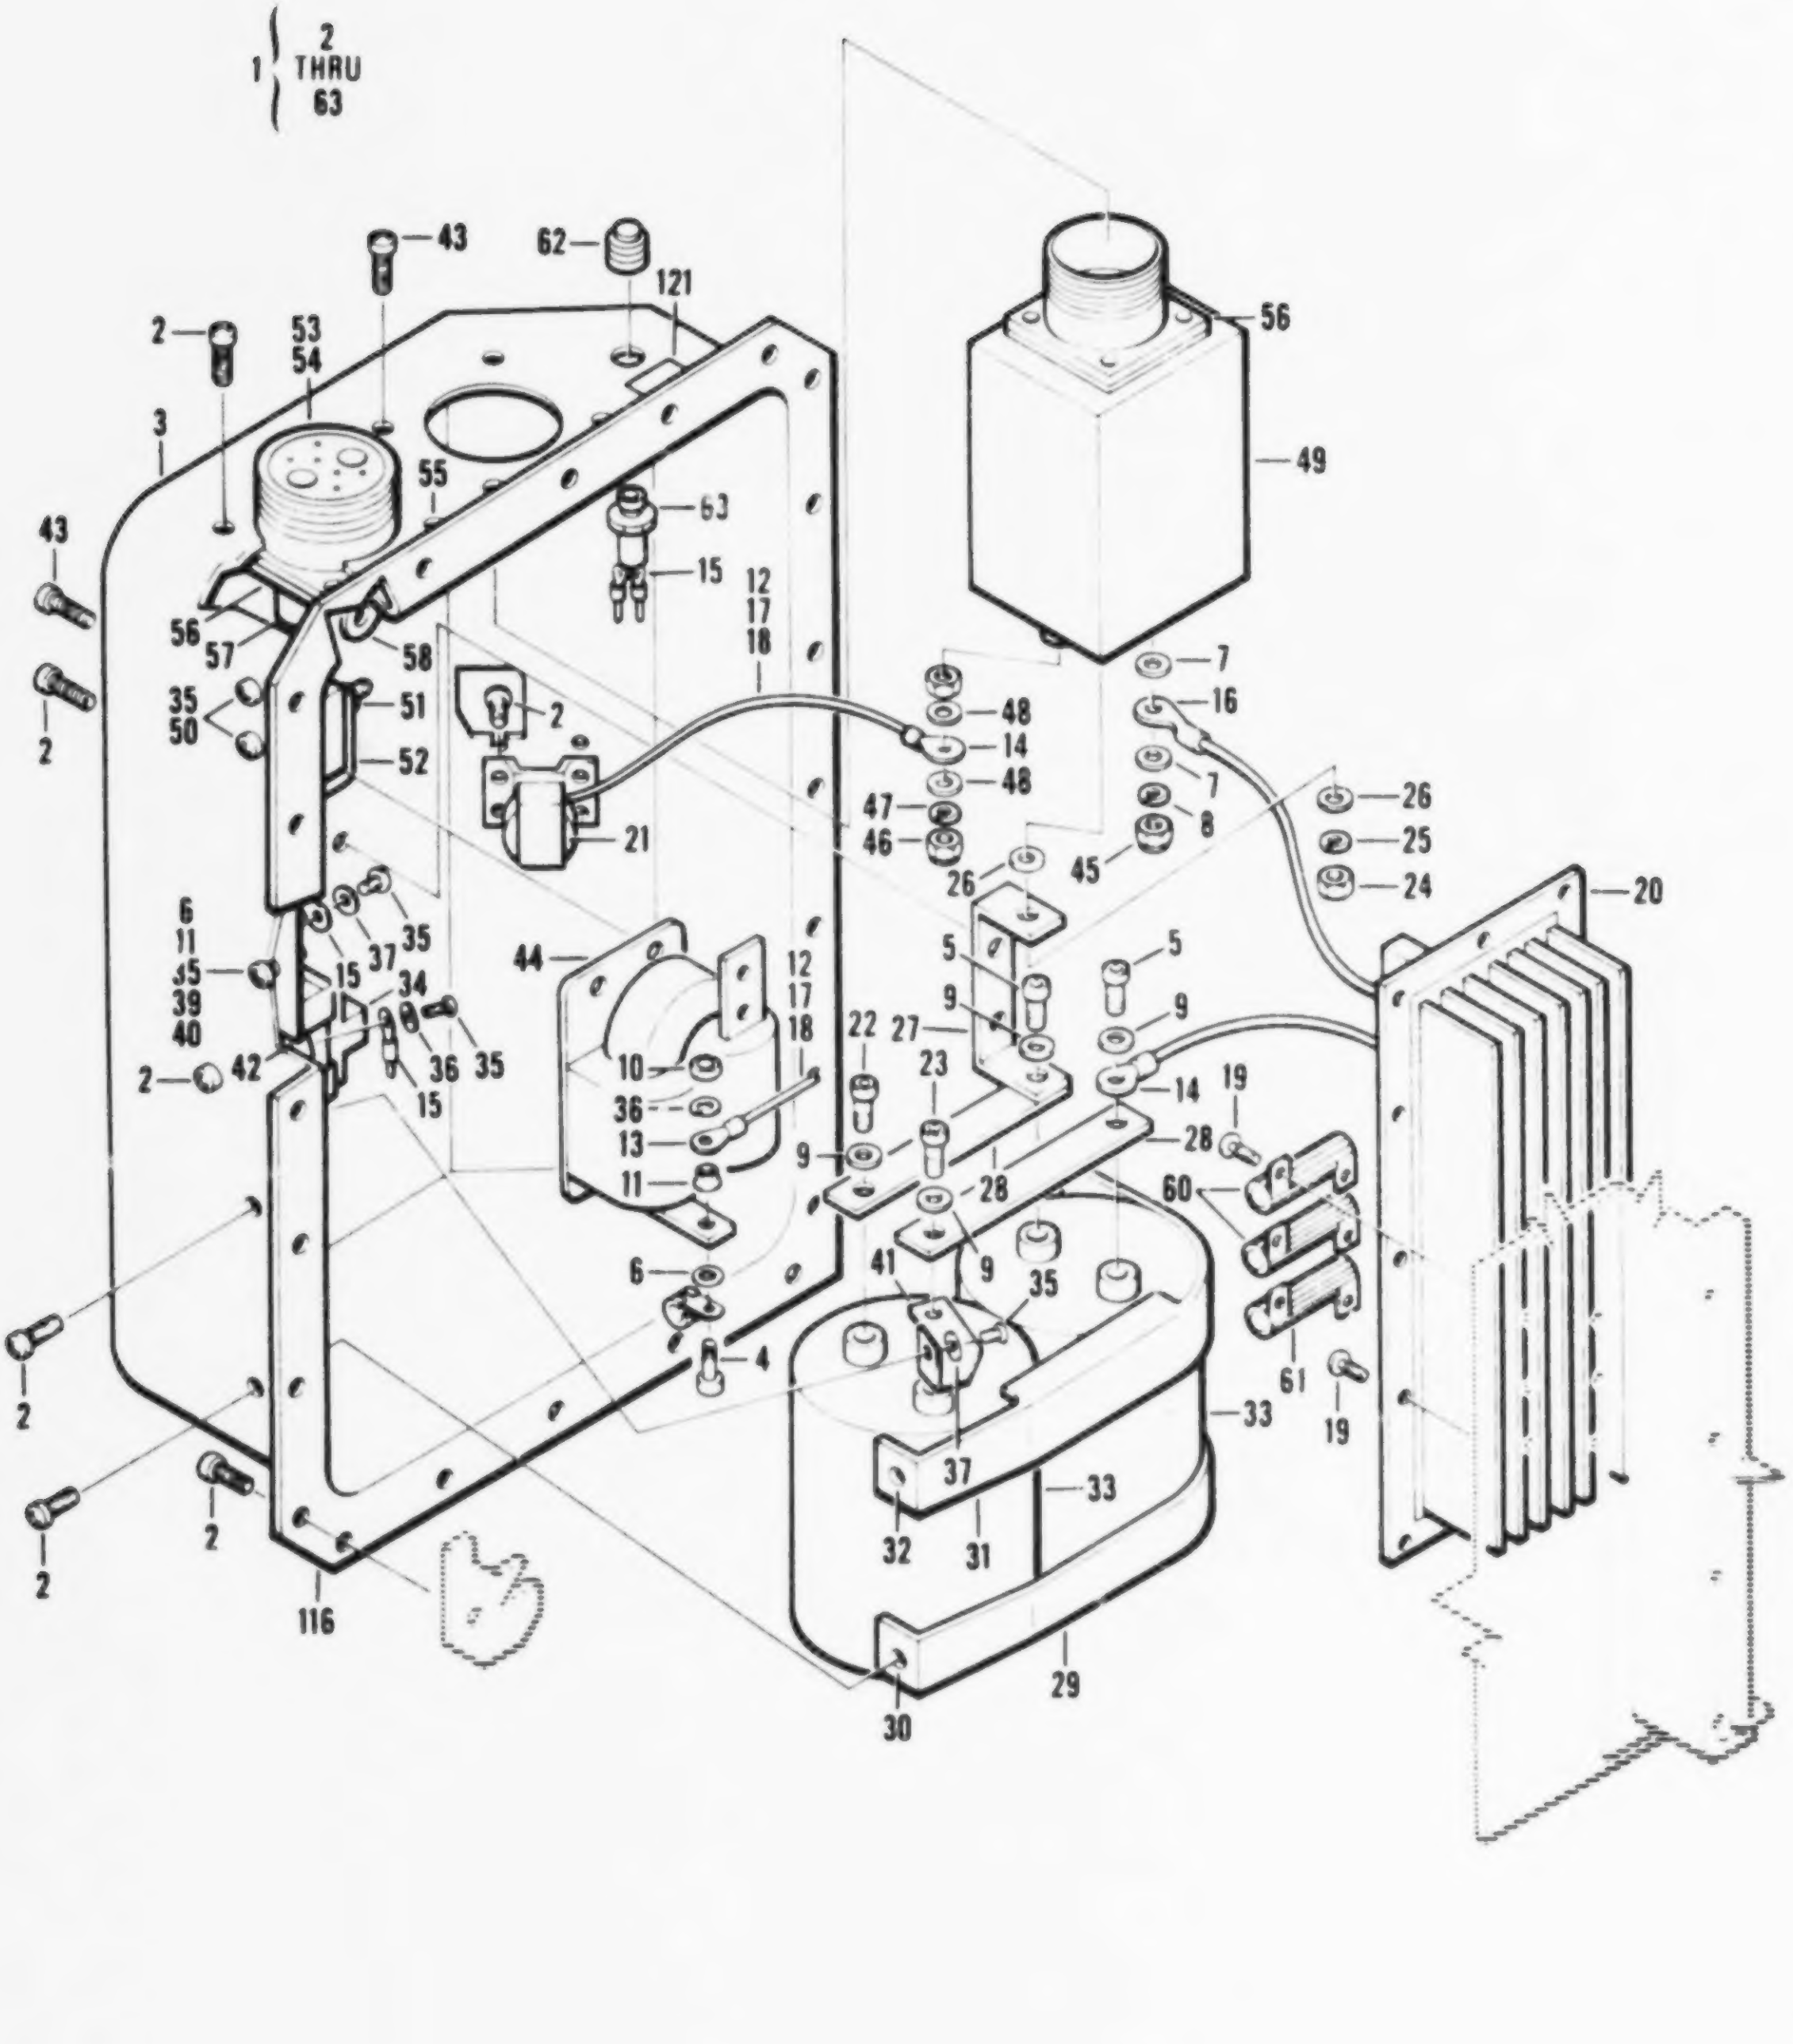
1
2
THRU
63
43
62
121
2
53
54
3
55
63
15
12
17
18
56
49
43
2
56
57
58
35
50
51
52
2
48
14
48
47
46
21
7
16
7
8
45
26
26
25
24
20
6
11
35
39
40
37
35
15
34
42
36
35
15
2
44
12
17
18
10
36
13
11
5
9
27
5
9
22
23
14
19
28
9
28
60
9
35
41
6
4
2
2
2
2
116
37
32
31
33
33
61
19
29
30

Figure 423G. Power Side Cover Installation (Sheet 2 of 3)

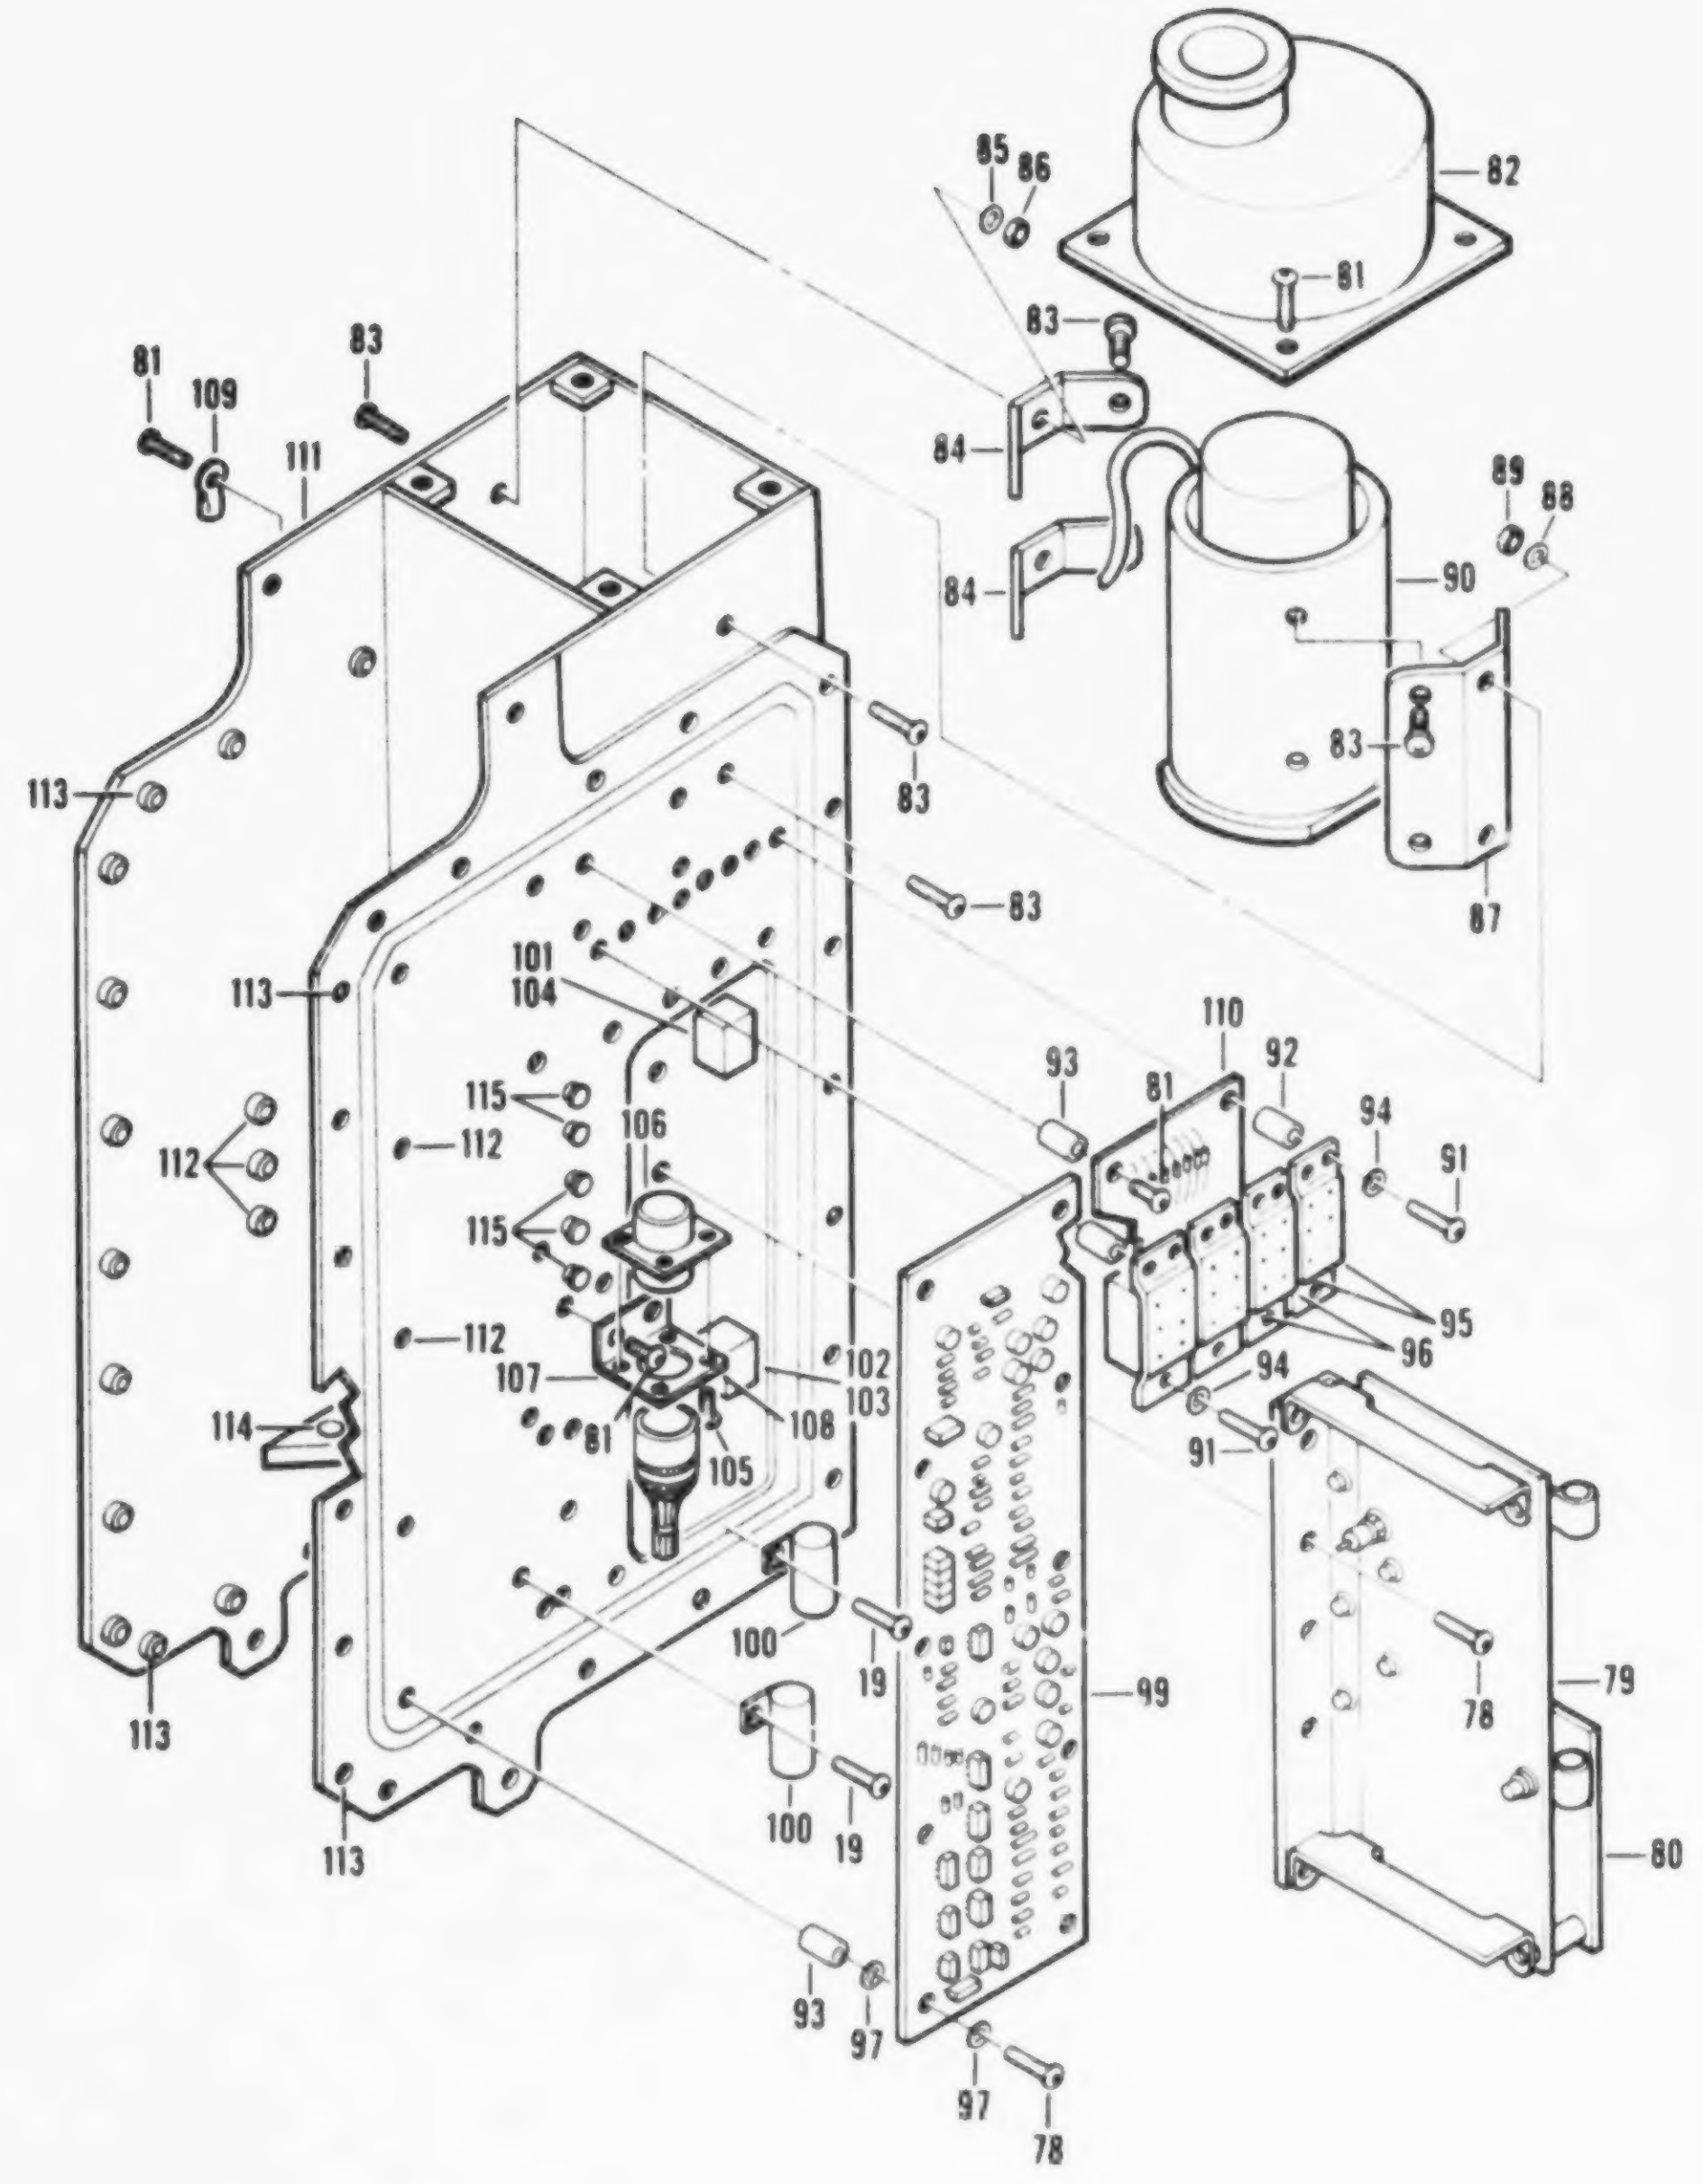
85
86
82
81
83
81
109
83
111
84
84
89
88
90
83
113
83
83
87
113
101
104
110
93
81
92
94
91
115
112
106
112
115
95
96
112
102
107
103
108
81
105
94
91
114
79
78
100
19
99
113
100
19
80
113
93
97
97
78

Figure 423G. Power Side Cover Installation (Sheet 3 of 3)

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423G		PAODO	1680-01-070-0985	82402	42305R700	CONTROL PANEL ASSY SEE FIG 423A FOR NHA	UHH,UHV	EA	1
423G	1	PBFDO	1680-01-073-3358	82402	19215-3	COVER ASSEMBLY SEE FIG 423G FOR BREAKDOWN	UHH,UHV	EA	1
423G	2	PAFZZ	5305-00-052-1488	96906	MS21096-06001	. SCREW,SELF-LOCKING	UHH,UHV	EA	39
423G	3	XBFZZ		82402	149091	. COVER ASSY,POWER	UHH,UHV	EA	1
423G	4	PAFZZ	5305-00-978-9371	96906	MS16997-33	. SCREW,CAP,SOCKET,HE	UHH,UHV	EA	2
423G	5	PAFZZ	5305-00-052-7004	96906	MS21295-36	. SCREW,SELF-LOCKING	UHH,UHV	EA	2
423G	6	PAFZZ	5310-00-167-0833	88044	AN960-8L	. WASHER,FLAT	UHH,UHV	EA	3
423G	7	PAFZZ	5310-00-167-0836	88044	AN960-516L	. WASHER,FLAT	UHH,UHV	EA	2
423G	8	PAFZZ	5310-00-004-5033	96906	MS35338-46	. WASHER,LOCK	UHH,UHV	EA	1
423G	9	PAFZZ	5310-00-261-8278	96906	MS35338-100	. WASHER,LOCK	UHH,UHV	EA	4
423G	10	PAFZZ	5310-00-934-9762	96906	MS35649-286	. NUT,PLAIN,HEXAGON	UHH,UHV	EA	2
423G	11	PAFZZ	5310-00-807-1473	96906	MS21042L08	. NUT,SELF-LOCKING,EX	UHH,UHV	EA	3
423G	12	XDFFF		82402	149097	. WIRE ASSEMBLY	UHH,UHV	EA	1
423G	13	PAOZZ	5940-00-557-1629	96906	MS25036-149	.. TERMINAL,LUG	UHH,UHV	EA	4
423G	14	PAOZZ	5940-00-143-4771	96906	MS25036-103	.. TERMINAL,LUG	UHH,UHV	EA	13
423G	15	PAOZZ	5940-00-813-0698	96906	MS25036-101	.. TERMINAL,LUG	UHH,UHV	EA	22
423G	16	PAOZZ	5940-00-143-4780	96906	MS25036-108	.. TERMINAL,LUG	UHH,UHV	EA	2
423G	17	PAOZZ	5975-00-727-5153	96906	MS3367-4-9	.. STRAP,TIEDOWN,ELECT	UHH,UHV	EA	50
423G	18	PAOZZ	5975-00-111-3208	96906	MS3367-5-9	.. STRAP,TIEDOWN,ELECT	UHH,UHV	EA	4
423G	19	PAFZZ	5305-00-132-1497	96906	MS21090-0414	. SCREW,SELF-LOCKING	UHH,UHV	EA	26
423G	20	PBFDO	5961-01-070-7629	82402	19221-3	. TRANSISTOR ASSY	UHH,UHV	EA	1
423G	21	PAFZZ		82402	149540	. INDUCTOR ASSEMBLY	UHH,UHV	EA	1
423G	22	PAFZZ	5305-00-889-1097	96906	MS21295-16	. SCREW,SELF-LOCKING	UHH,UHV	EA	1
423G	23	PAFZZ	5305-00-931-8601	96906	MS21295-22	. SCREW,SELF-LOCKING	UHH,UHV	EA	1
423G	24	PAFZZ	5310-00-926-5832	96906	MS2108386	. NUT,SELF-LOCKING,HE	UHH,UHV	EA	1
423G	25	PAFZZ	5310-00-407-9566	96906	MS35338-45	. WASHER,LOCK	UHH,UHV	EA	1
423G	26	PAFZZ	5310-00-167-0837	88044	AN960-616L	. WASHER,FLAT	UHH,UHV	EA	2
423G	27	XDFZZ		82402	19210	. BUS BAR ASSY,EMI	UHH,UHV	EA	1
423G	28	XDFZZ		82402	19208	. BUS BAR,CAPACITOR	UHH,UHV	EA	2
423G	29	PBFFF	1680-01-070-7558	82402	19240-2	. BRACKET ASSEMBLY	UHH,UHV	EA	1
423G	30	PAFZZ	5310-00-137-3332	84256	9505-06	.. NUT,PLAIN,CLINCH	UHH,UHV	EA	2
423G	31	PBFFZ	1680-01-070-7554	82402	19240-1	. BRACKET ASSEMBLY	UHH,UHV	EA	1
423G	32	PAFZZ	5310-00-137-3332	84256	9505-06	.. NUT,PLAIN,CLINCH	UHH,UHV	EA	2
423G	33	XDFZZ		80031	3120GE243U050AP	. CAPACITOR,FIXED,ELE	UHH,UHV	EA	2
423G	34	PBFZZ	5945-01-074-2661	14304	755017A4021	. RELAY,ELECTROMAGNET	UHH,UHV	EA	1
423G	35	PAFZZ	5305-00-984-6194	96906	MS35206-246	. SCREW,MACHINE	UHH,UHV	EA	6
423G	36	PAFZZ	5310-00-576-0546	96906	MS35338-99	. WASHER,LOCK	UHH,UHV	EA	4
423G	37	PAFZZ	5310-00-184-8977	96906	MS35338-98	. WASHER,LOCK	UHH,UHV	EA	2
423G	39	PAFZZ	5310-00-998-5039	83330	2665	. WASHER,SHOULDERED	UHH,UHV	EA	1
423G	40	PBFZZ	5365-01-133-6174	51506	136-093N1	. WASHER,FLAT	UHH,UHV	EA	2
423G	41	PBFZZ	6150-01-076-3918	82402	19261	. BUS,CONDUCTOR	UHH,UHV	EA	1
423G	42	PBFZZ	6150-01-077-7519	82402	19262	. BUS,CONDUCTOR	UHH,UHV	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423G	43	PAFZZ	5305-00-182-9570	96906	MS21096-08001	..SCREW,SELF-LOCKING	UHH,UHV	EA	8
423G	44	PBFZZ	5950-01-102-3992	82402	149131	..TRANSFORMER ASSEMBL	UHH,UHV	EA	1
423G	45	PAFZZ	5310-00-016-7228	96906	MS21083B5	..NUT,SELF-LOCKING	UHH,UHV	EA	1
423G	46	PAFZZ	5310-00-905-8434	96906	MS21083B3	..NUT,SELF-LOCKING,HE	UHH,UHV	EA	1
423G	47	PAFZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,LOCK	UHH,UHV	EA	1
423G	48	PAFZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHH,UHV	EA	2
423G	49	PBFZZ	5915-01-101-3888	82402	149304-1	..FILTER,RADIO FREQUE	UHH,UHV	EA	1
423G	50	PAFZZ	5310-00-934-9757	96906	MS35649-282	..NUT,PLAIN,HEXAGON	UHH,UHV	EA	2
423G	51	PAFZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT	UHH,UHV	EA	1
423G	52	XDFZZ		82402	149128	..SHUNT,INSTRUMENT	UHH,UHV	EA	1
423G	53	AFFFF		82402	19257	..RECEPTACLE ASSY	UHH,UHV	EA	1
423G	54	PBFZZ	5935-00-837-9892	96906	MS3102R32-15S	...CONNECTOR,RECEPTACL	UHH,UHV	EA	1
423G	55	PAFZZ	5310-00-137-3332	84255	9505-06	...NUT,PLAIN,CLINCH	UHH,UHV	EA	4
423G	56	PAFZZ		53217	42-81496	..GASKET	UHH,UHV	EA	2
423G	57	PAFZZ	5940-00-115-2678	96906	MS20659-111	..TERMINAL,LUG	UHH,UHV	EA	1
423G	58	PAFZZ	5940-00-754-5432	96906	MS20659-44	..TERMINAL,LUG	UHH,UHV	EA	1
423G	60	PAFZZ		81349	RER75G12R1R	..RESISTOR,FIXED WIRE	UHH,UHV	EA	2
423G	61	PAFZZ		81349	RER75F4R00S	..RESISTOR,FIXED,WIRE	UHH,UHV	EA	1
423G	62	PAOZZ	6210-00-818-0230	96906	MS25041-10	..LIGHT,INDICATOR	UHH,UHV	EA	1
423G	63	PAFZZ	6240-00-155-7836	96906	MS25237-327	..LAMP,INCANDESCENT	UHH,UHV	EA	1
423G	64	PAOZZ	5305-00-052-1488	96906	MS21096-06001	.SCREW,SELF-LOCKING	UHH,UHV	EA	24
423G	65	XBFZZ		82402	149090	.COVER ASSY,LOGIC	UHH,UHV	EA	1
423G	66	PAFZZ		82227	KT19722H0	METER,TIME TOTALIZI	UHH,UHV	EA	1
423G	67	PAOZZ	5305-01-073-5051	96906	MS21096-04003	.SCREW,SELF-LOCKING	UHH,UHV	EA	16
423G	68	PBOZZ	5935-00-074-2907	96906	MS3112E10-6S	.CONNECTOR,RECEPTACL	UHH,UHV	EA	1
423G	69	PBOZZ	5935-00-825-8862	96906	MS3112E14-19S	.CONNECTOR,RECEPTACL	UHH,UHV	EA	1
423G	70	PBOZA	5935-00-021-9512	96906	MS3112E14-12S	.CONNECTOR,RECEPTACL	UHH,UHV	EA	1
423G	71	PBOZZ	5935-01-029-8970	96906	MS3112E12-8S	.CONNECTOR,RECEPTACL	UHH,UHV	EA	1
423G	72	PAOZZ		53217	42-81652	.GASKET	UHH,UHV	EA	1
423G	73	PAOZZ	5999-01-143-8453	53217	42-81656	.SHIELDING GASKET,EL	UHH,UHV	EA	2
423G	74	PAOZZ	5999-01-144-5239	53217	42-81654	.SHIELDING GASKET,EL	UHH,UHV	EA	1
423G	75	PAOZZ	5930-00-847-2599	96906	MS24660-23D	.SWITCH,TOGGLE	UHH,UHV	EA	1
423G	76	MDOZZ		82402	42277C704	.IDENIFICATION,PLATE	UHH,UHV	EA	1
423G	77	MFFZZ		82402	149093	.NUTPLATE ASSY	UHH,UHV	EA	1
423G	78	PAFZZ	5305-01-073-3636	96906	MS21096-06003	.SCREW,SELF-LOCKING	UHH,UHV	EA	17
423G	79	PBFDD	5999-01-071-9221	82402	19225-3	.HEATSINK ASSEMBLY SEE FIG 423I FOR BREAKDOWN	UHH,UHV	EA	1
423G	80	PBFDD	6110-01-103-3121	82402	149470	.CONTROL,VOLTAGE REG	UHH,UHV	EA	1
423G	81	PAFZZ	5305-00-052-1488	96906	MS21096-06001	.SCREW,SELF-LOCKING	UHH,UHV	EA	69
423G	82	XBOZZ		82402	19230	.PLENUM,FAN ASSY	UHH,UHV	EA	1
423G	83	PAOZZ	5305-00-182-9570	96906	MS21096-08001	.SCREW,SELF-LOCKING	UHH,UHV	EA	12
423G	84	PBOOO	1680-01-070-7555	82402	19236-1	.BRACKET ASSEMBLY	UHH,UHV	EA	2
423G	85	PAOZZ	5310-00-952-0309	80205	NAS620C416	..WASHER,FLAT	UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
423G	86	PAOZZ	5310-00-351-4000	84256	9505-08	..NUT,PLAIN,BLIND RIV UHH,UHV	EA	1
423G	87	PBOOO	1680-01-146-8059	82402	19236-3	.BRACKET ASSEMBLY UHH,UHV	EA	1
423G	88	PAOZZ	5310-00-952-0309	80205	NAS620C416	..WASHER,FLAT UHH,UHV	EA	2
423G	89	PAOZZ	5310-00-351-4000	84256	9505-08	..NUT,PLAIN,BLIND RIV UHH,UHV	EA	2
423G	90	ADOFF		82402	FV3-4	.BLOWER ASSEMBLY SEE FIG.423J FOR BREAKDOWN UHH,UHV	EA	1
423G	91	PAFZZ	5305-01-102-3605	96906	MS21096-06014	.BOLT,SELF-LOCKING UHH,UHV	EA	12
423G	92	PBFZZ	5365-00-455-6940	83330	8505	.SPACER,SLEEVE UHH,UHV	EA	12
423G	93	PBFZZ		06540	8217-S0632-38	.SPACER UHH,UHV	EA	10
423G	94	PAFZZ	5310-00-616-6822	80205	NAS620-6L	.WASHER,FLAT UHH,UHV	EA	12
423G	95	PBFZZ	5945-01-073-2419	35344	KD-D2A	.RELAY,SOLENOID UHH,UHV	EA	2
423G	96	PBFZZ	5945-00-509-2831	96906	MS27400-1	.RELAY,ELECTROMAGNET UHH,UHV	EA	2
423G	97	PAFZZ	5365-01-133-0264	51506	140-015-N-1	.WASHER,FLAT UHH,UHV	EA	20
423G	99	PAFDO		82402	19246	.PRINTED CIRCUIT BOA UHH,UHV	EA	1
423G	100	PAFZZ		81349	RE70G25R0	.RESISTOR,FIXED,WIRE UHH,UHV	EA	2
423G	101	PAFZZ	5930-00-655-1514	96906	MS35058-22	.SWITCH,TOGGLE UHH,UHV	EA	1
423G	102	PAFZZ	5930-00-728-4328	96906	MS25306-222	.SWITCH,TOGGLE UHH,UHV	EA	1
423G	103	PAOZZ		82402	19241	.GUARD,SWITCH UHH,UHV	EA	1
423G	104	PAFZZ	5930-00-689-6786	81349	M6423101-01	.BOOT,DUST AND MOIST UHH,UHV	EA	1
423G	105	PAFZZ	5305-01-073-5052	96906	MS21096-04001	.SCREW,SELF-LOCKING UHH,UHV	EA	16
423G	106	PBFZZ	5935-00-088-7712	96906	MS3110E18-32P	.CONNECTOR,RECEPTACL UHH,UHV	EA	1
423G	107	MOFFF		82402	19234	.BRACKET CONNECTOR UHH,UHV	EA	1
423G	108	PAOZZ	5340-00-455-1117	19738	9505-04	..INSERT,SCREW THREAD UHH,UHV	EA	4
423G	109	PAOZZ	5940-00-114-1316	96906	MS20659-130	.TERMINAL,LUG UHH,UHV	EA	1
423G	110	XBOOO		82402	19255-1	.DIODE CIRCUIT BOARD UHH,UHV	EA	1
423G	.11	XAOOO		82402	149119	.CHASSIS,HOIST UHH,UHV	EA	1
423G	112	PAFZZ	5340-00-455-1117	19738	9505-04	..INSERT,SCREW THREAD UHH,UHV	EA	20
423G	113	PAFZZ	5310-00-137-3332	84256	9505-06	..NUT,PLAIN,CLINCH UHH,UHV	EA	100
423G	114	PAFZZ	5340-00-085-0219	80205	NAS1394C4L	..INSERT,SCREW THREAD UHH,UHV	EA	2
423G	115	PAFZZ	5940-01-031-1027	81349	SE096E02	.TERMINAL,STUD UHH,UHV	EA	5
423G	116	PAFZZ	1680-01-070-7616	12881	01-0504-1891	.WIRE MESH,KNITTED UHH,UHV	FT	V
423G	117	PAFZZ	5320-00-932-1972	07707	AD42H	.RIVET,BLIND UHH,UHV	EA	4
423G	118	PBFZZ	9905-01-157-0836	82402	42305E724	.PLATE,INSTRUCTION UHH,UHV	EA	1
423G	119	PBFZZ	7690-01-135-2985	82402	149161	.DECAL UHH,UHV	EA	1
423G	120	PBFZZ		82402	149182	.PLATE,IDENTIFICATIO UHH,UHV	EA	1
423G	121	PBFZZ	7690-01-135-2986	82402	149192	.DECAL UHH,UHV	EA	1

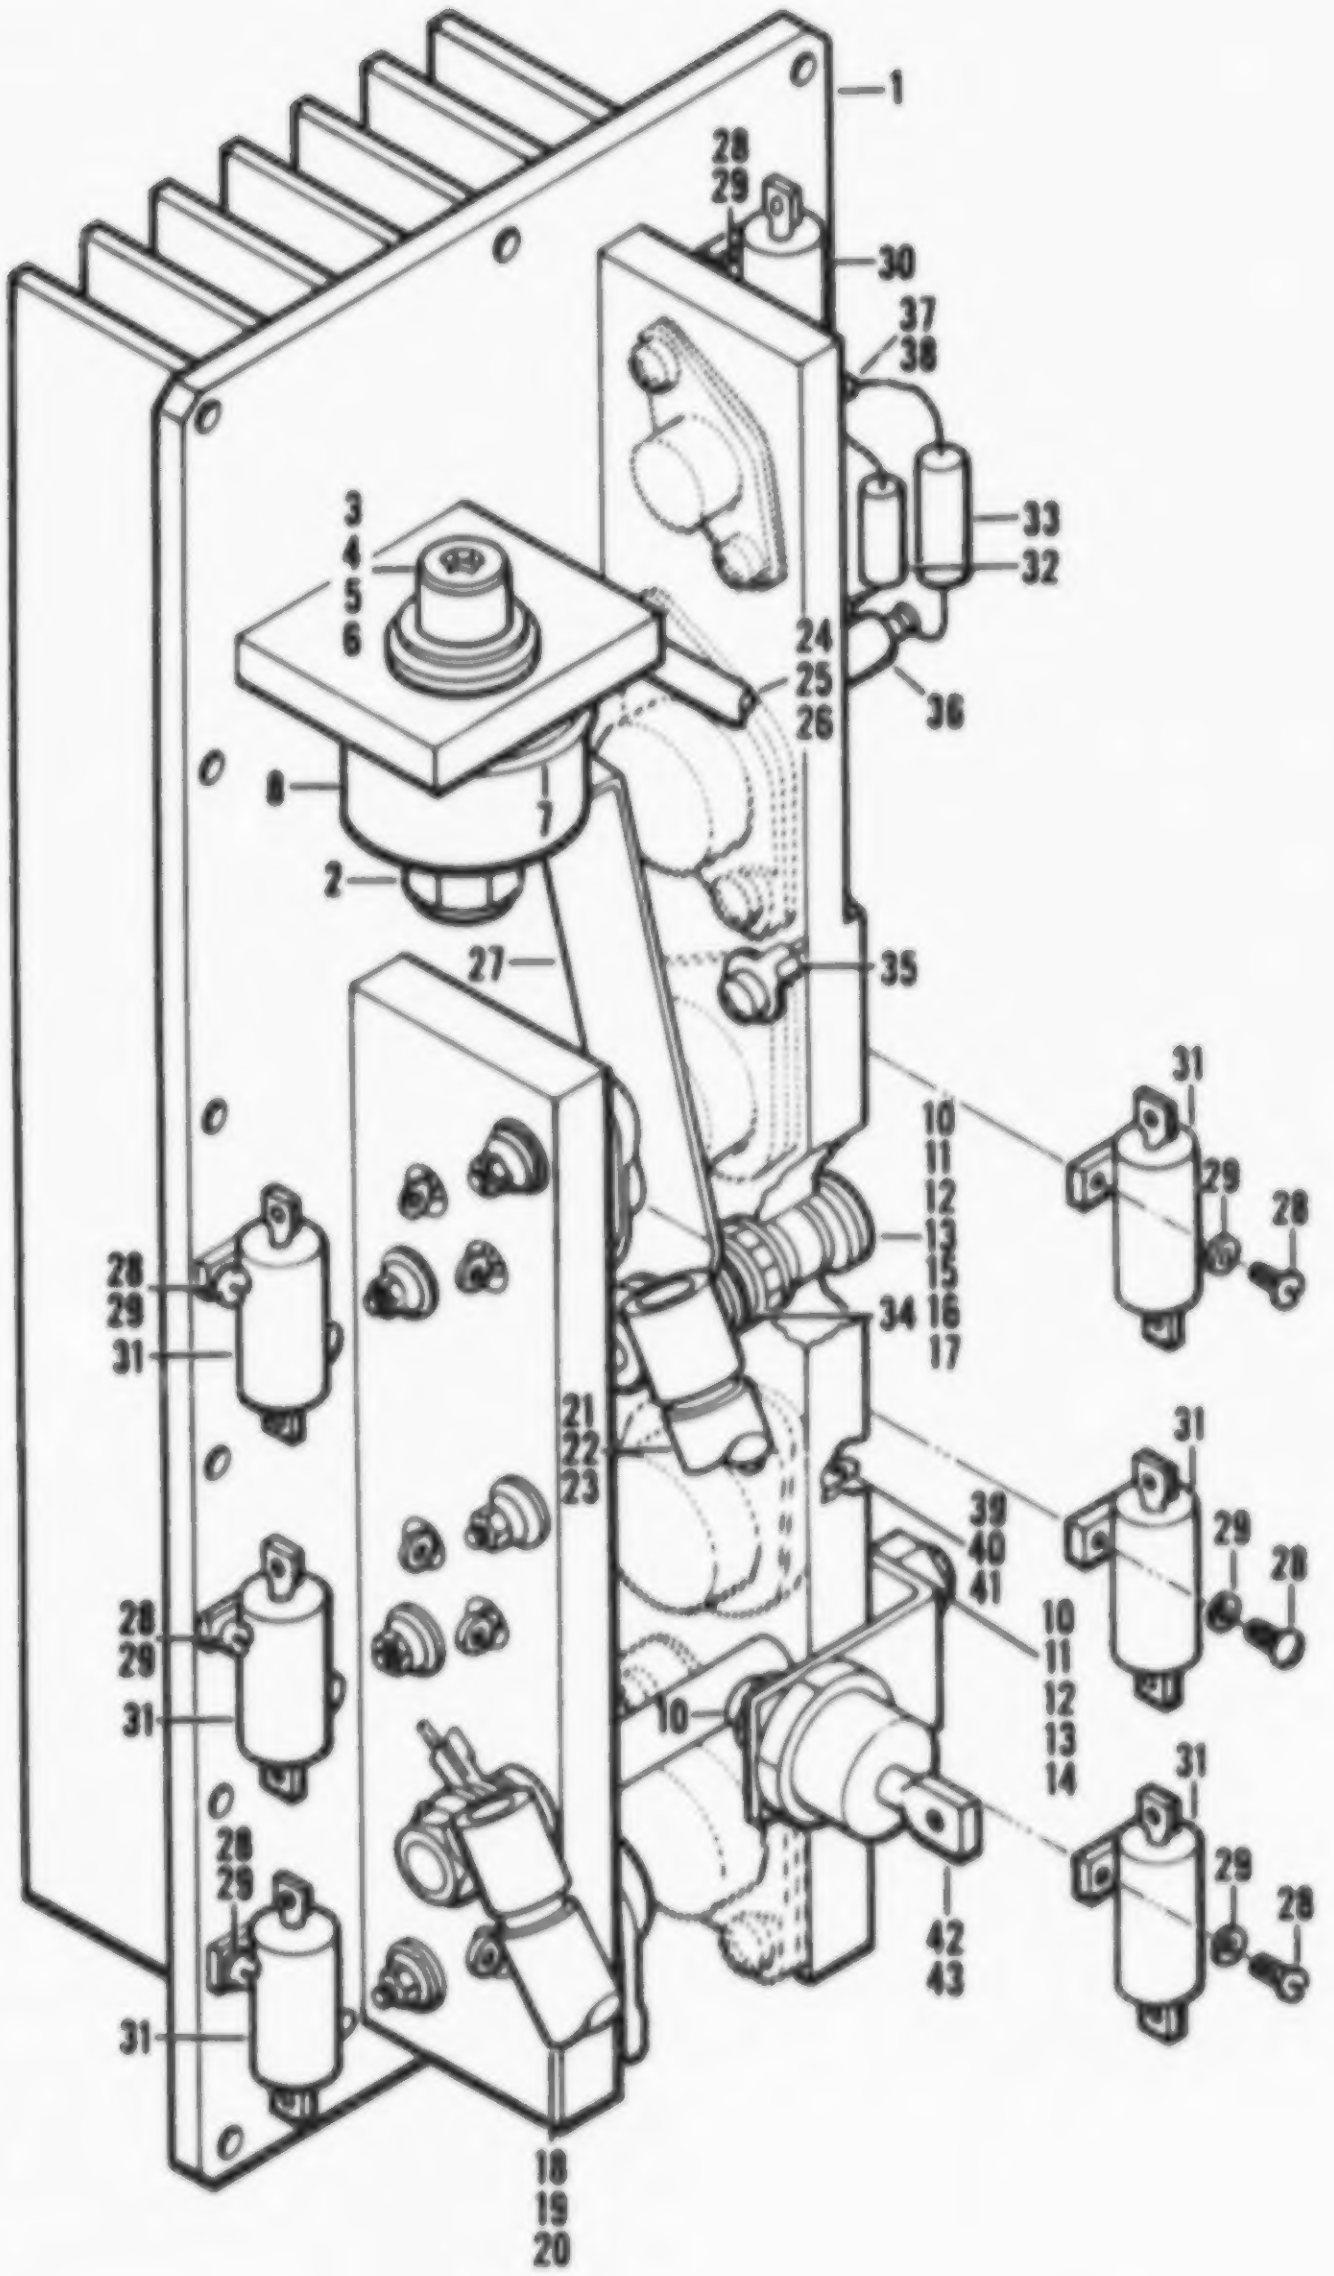
1
28
29
30
37
38
33
32
3
4
5
6
24
25
26
36
8
7
2
27
35
31
10
11
12
13
15
16
17
29
28
34
28
29
31
21
22
23
31
39
40
41
29
28
10
11
12
13
14
28
29
31
10
31
28
29
31
29
28
42
43
18
19
20

Figure 423H. Transistor Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423H		PBFDA	5961-01-070-7629	82402	19221-3	TRANSISTOR ASSEMBLY UHH,UHV	EA	1
423H	1	XDFFF		82402	19220	.DRIVER UHH,UHV	EA	1
423H	2	PAFZZ	5310-00-158-5280	72962	21NE058	.NUT,SELF-LOCKING,HE UHH,UHV	EA	1
423H	3	PAFZZ		16941	LP15D068S13	.PAN HEAD SCREW UHH,UHV	EA	1
423H	4	PAFZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT UHH,UHV	EA	1
423H	5	PAFZZ	5310-00-479-4161	86928	5605-44	.WASHER,SHOULDERED UHH,UHV	EA	1
423H	6	PAFZZ	5365-01-075-6445	08289	TW-325-425-115N	.SPACER,RING UHH,UHV	EA	2
423H	7	PAFZZ	5999-01-075-7669	08289	DBW1062-330-062	.WASHER,BERYLLUM OXI UHH,UHV	EA	1
423H	8	PAFZZ	5961-01-081-4805	14099	SCSF1R	.SEMICONDUCTOR DEVIC UHH,UHV	EA	1
423H	10	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX UHH,UHV	EA	4
423H	11	PAFZZ	5310-00-184-8970	96906	MS35338-101	.WASHER,LOCK UHH,UHV	EA	3
423H	12	PAFZZ	5310-00-822-0077	96906	MS2508284	.NUT,PLAIN,HEXAGON UHH,UHV	EA	4
423H	13	PAFZZ	5310-00-167-0702	88044	AN960B416	.WASHER,FLAT UHH,UHV	EA	4
423H	14	PAFZZ	5307-01-078-4001	82402	19214	.STUD,PLAIN UHH,UHV	EA	1
423H	15	PAFZZ	5365-01-078-4121	08289	TW260-370-100TS	.SPACER,RING UHH,UHV	EA	2
423H	16	PAFZZ	5310-00-478-9768	86928	5605-40	.WASHER,SHOULDERED UHH,UHV	EA	2
423H	17	PAFZZ	5305-00-954-9010	96906	MS35215-76	.SCREW,MACHINE UHH,UHV	EA	1
423H	18	XDOZZ	1680-01-075-6046	82402	149129	.SUPPORT,HEATSINK UHH,UHV	EA	1
423H	19	PAOZZ	5940-01-076-9412	96906	MS25189-113	..TERMINAL,LUG UHH,UHV	EA	2
423H	20	XDOZZ		96906	MS25189-115	..TERMINAL,LUG UHH,UHV	EA	1
423H	21	XDFFF		82402	19258-3	.CABLE ASSY UHH,UHV	EA	1
423H	22	PAOZZ	5940-00-929-3706	96906	MS25189-112	..TERMINAL,LUG UHH,UHV	EA	1
423H	23	PAFZZ	5940-01-076-9412	96906	MS25189-113	..TERMINAL,LUG UHH,UHV	EA	1
423H	24	AFFFF		82402	19258-7	.CABLE ASSY UHH,UHV	EA	1
423H	25	PAFZZ		96906	MS25189-115	..TERMINAL,LUG UHH,UHV	EA	1
423H	26	PAFZZ	5940-00-143-5284	96906	MS25036-115	..TERMINAL,LUG UHH,UHV	EA	1
423H	27	PAFZZ	6150-01-073-8442	82402	19263	.BUS,CONDUCTOR UHH,UHV	EA	1
423H	28	PAFZZ	5305-00-889-3118	96906	MS35206-203	.SCREW,MACHINE UHH,UHV	EA	14
423H	29	PAFZZ	5310-00-616-6791	80205	NAS620-2	.WASHER,FLAT UHH,UHV	EA	14
423H	30	PAFZZ	5905-00-211-1318	81349	RER65F1R00R	.RESISTOR,FIXED,WIRE UHH,UHV	EA	1
423H	31	XDOZZ		81349	RER65F1R10R	.RESISTOR,FIXED,WIRE UHH,UHV	EA	5
423H	32	PAFZZ	5905-00-247-8710	81349	RCR32G220JS	.RESISTOR,FIXED,COMP UHH,UHV	EA	1
423H	33	PAFZZ	5905-00-247-8722	81349	RCR32G271JS	.RESISTOR,FIXED,COMP UHH,UHV	EA	1
423H	34	PAFZZ	5940-00-230-0515	96906	MS25036-154	.TERMINAL,LUG UHH,UHV	EA	14
423H	35	PAFZZ	5940-00-283-5280	96906	MS25036-106	.TERMINAL,LUG UHH,UHV	EA	7
423H	36	PAFZZ	5940-01-031-1027	81349	SE096E02	.TERMINAL,STUD UHH,UHV	EA	1
423H	37	PAFZZ	5365-01-073-3030	83330	9164	.SPACER,SLEEVE UHH,UHV	EA	2
423H	38	PAFZZ	5940-01-020-0872	00779	50334	.TERMINAL,LUG UHH,UHV	EA	2
423H	39	PAFZZ	5365-01-073-3031	83330	4013	.SPACER,SLEEVE UHH,UHV	EA	14
423H	40	XDFZZ	5940-00-113-3136	30721	NH59SB	.TERMINAL,LUG UHH,UHV	EA	7
423H	41	PAFZZ	5940-01-050-7460	04618	34103	.TERMINAL,LUG UHH,UHV	EA	7
423H	42	PAFZZ	6150-01-154-9661	04618	149126	.BUS,CONDUCTOR UHH,UHV	EA	1
423H	43	PAFZZ	5961-00-491-2228	81349	JAN1N3911R	.SEMICONDUCTOR DEVIC UHH,UHV	EA	1

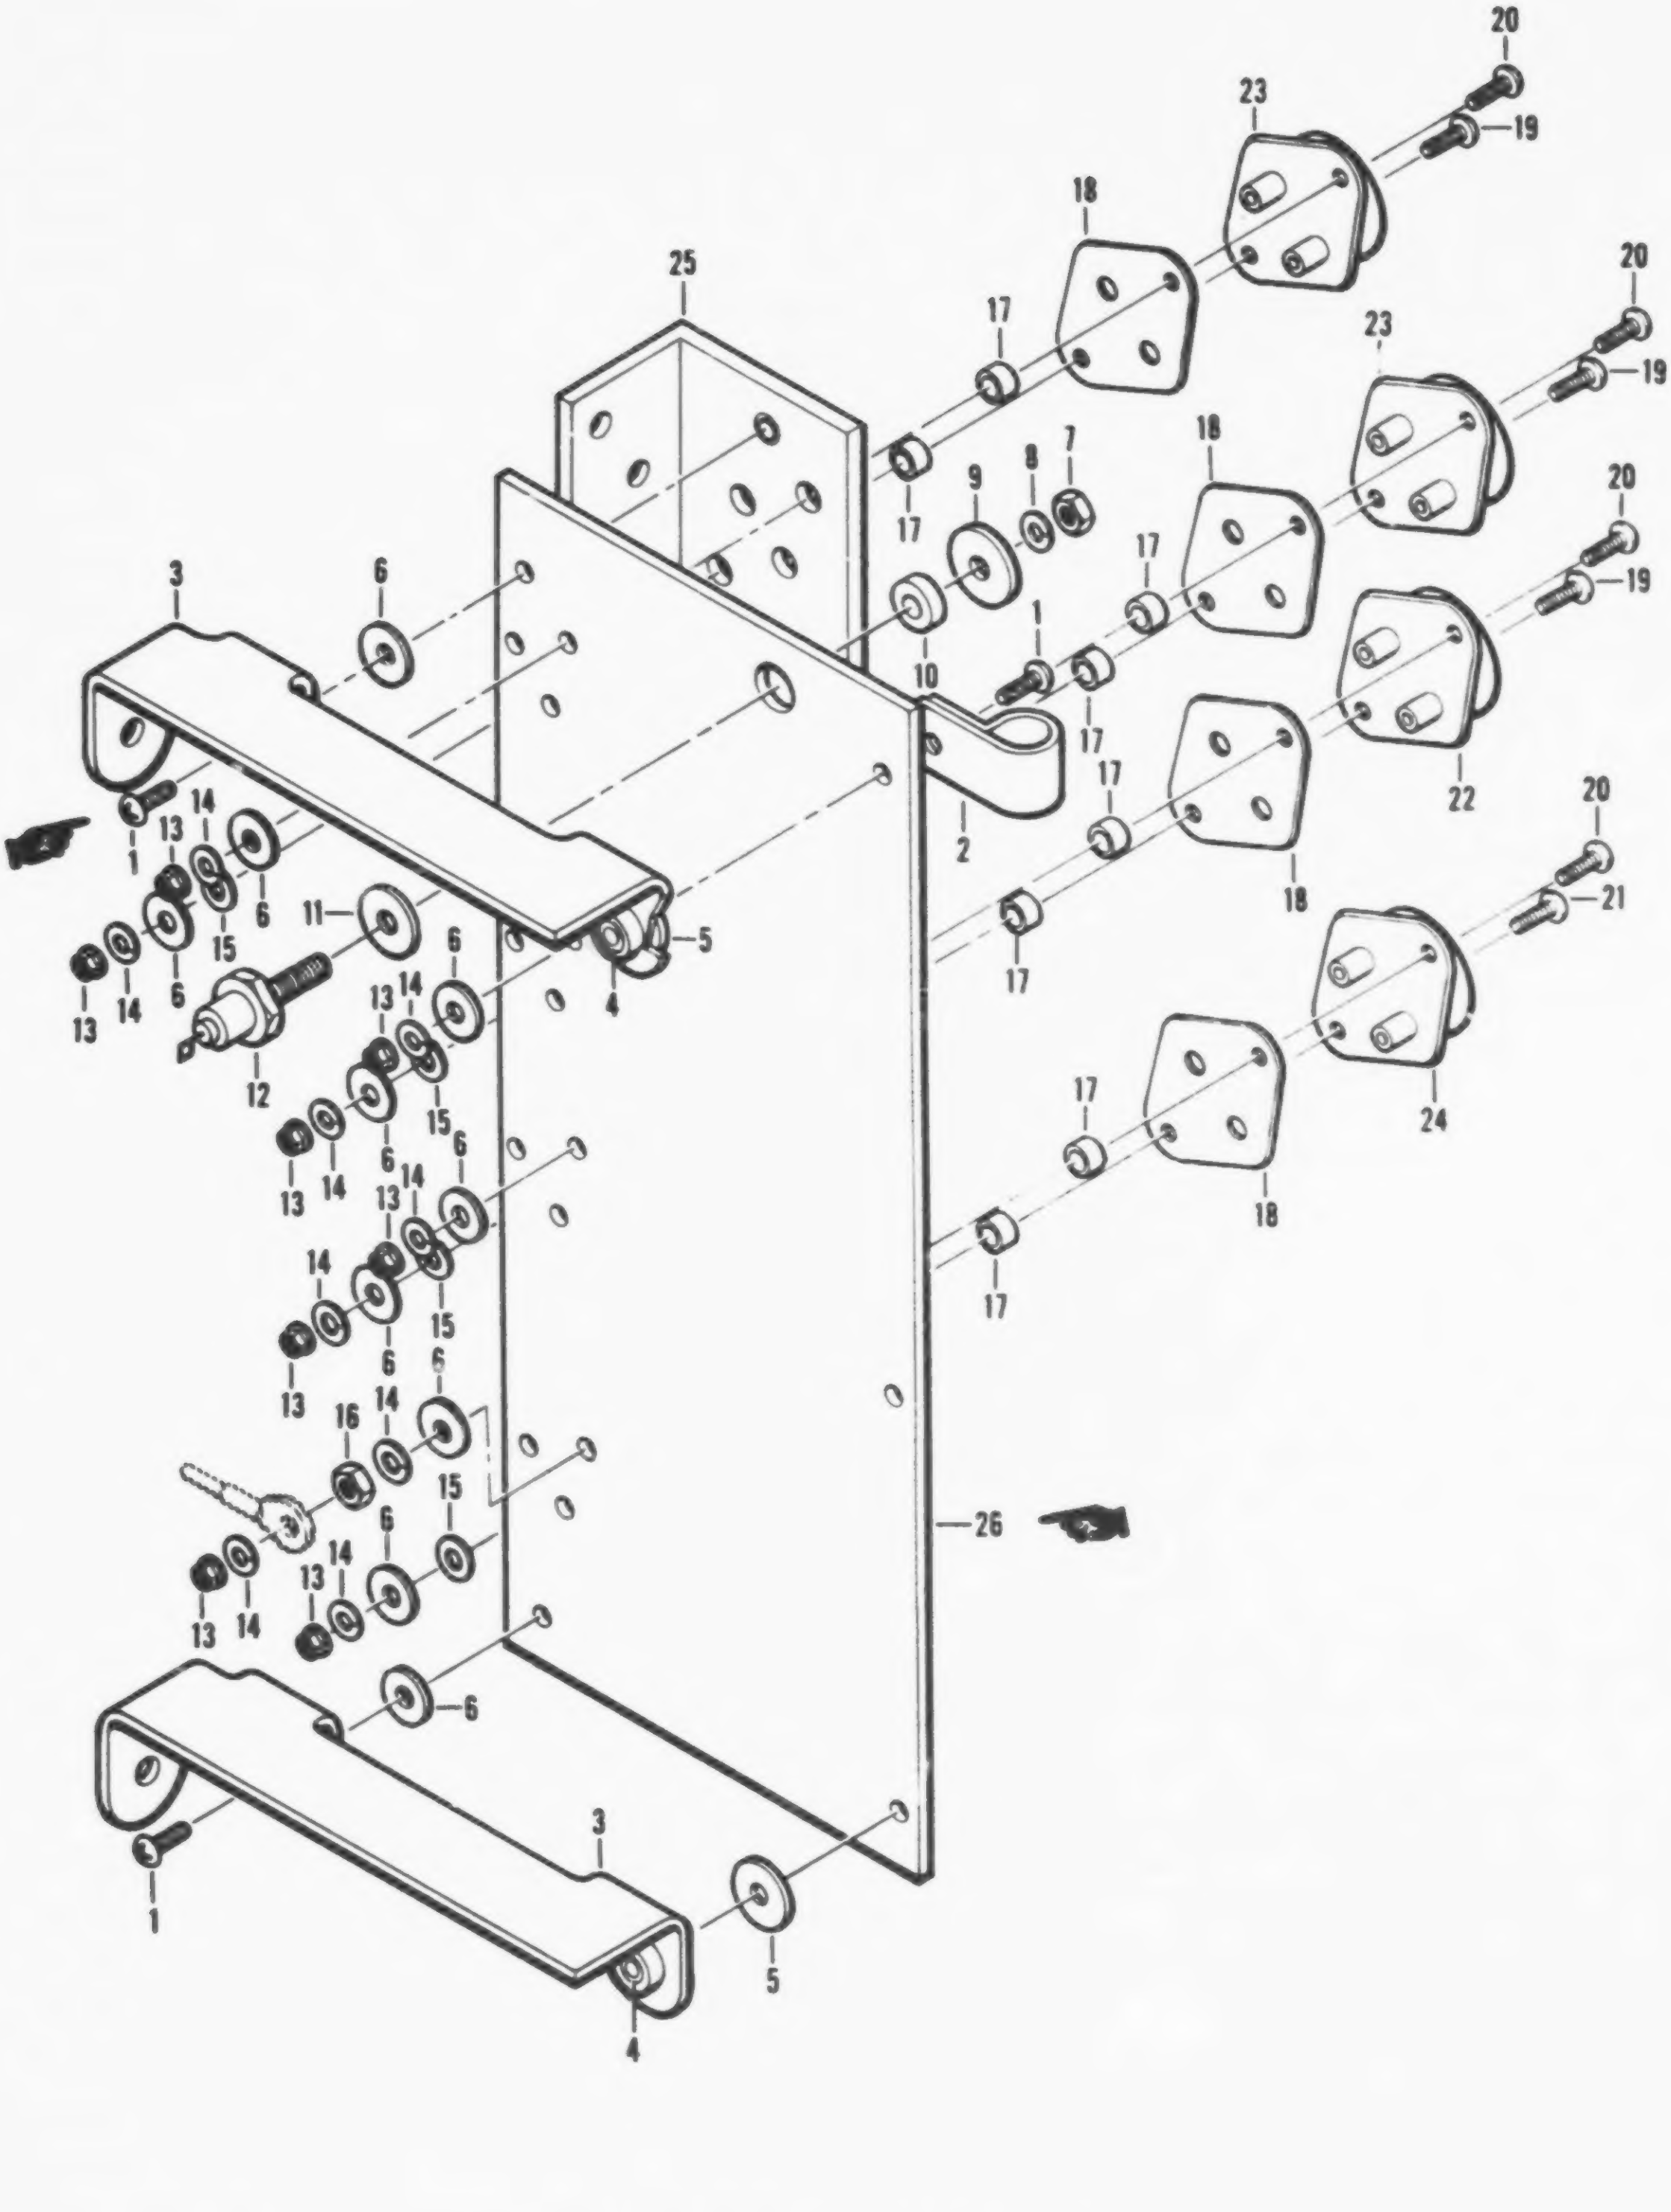
20
23
19
18
25
17
20
23
19
17
9
8
7
18
17
20
3
6
1
19
10
17
2
17
22
14
13
1
6
11
5
20
15
6
17
21
18
13
14
6
14
4
12
13
15
17
24
6
6
14
13
13
14
18
15
17
14
6
13
6
16
14
15
26
13
14
6
13
14
6
3
1
5
4

Figure 4231. Heatsink Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	U/M	QTY INC IN UNIT
4231		PBFDD	5999-01-071-9221	82402	19225-3	HEATSINK ASSEMBLY SEE FIG 423G FOR NHA	UHH, UHV	EA	1
4231	1	PAFZZ	5305-01-073-3636	96906	MS21096-06003	.SCREW, SELF-LOCKING	UHH, UHV	EA	2
4231	2	PAFZZ	5340-00-915-2342	96906	MS25281F6	.CLAMP, LOOP	UHH, UHV	EA	1
4231	3	XBFZZ		82402	19223	.BRACKET, HEATSINK	UHH, UHV	EA	2
4231	4	PAFZZ	5310-00-137-3332	84256	9505-06	..NUT, PLAIN, CLINCH	UHH, UHV	EA	2
4231	5	PAFZZ	5310-00-809-8546	96906	MS27183-8	..WASHER, FLAT	UHH, UHV	EA	2
4231	6	PAFZZ		88044	AN960-6	.WASHER	UHH, UHV	EA	10
4231	7	PAFZZ	5310-00-165-1886	96906	MS25082S3	.NUT, PLAIN, HEXAGON	UHH, UHV	EA	1
4231	8	PAFZZ	5310-00-261-8278	96906	MS35338-100	.WASHER, LOCK	UHH, UHV	EA	1
4231	9	PAFZZ	5310-00-167-0834	88044	AN960-10L	.WASHER, FLAT	UHH, UHV	EA	1
4231	10	PAFZZ	5365-01-073-2805	08289	TW-200-280-093-T	.SPACER, SLEEVE	UHH, UHV	EA	1
4231	11	XDFZZ	5310-01-007-6897	08289	MW-562-203-002	.WASHER, FLAT	UHH, UHV	EA	1
4231	12	PAFZZ	5961-00-883-3598	81349	JAN1N2973B	.SEMICONDUCTOR DEVIC	UHH, UHV	EA	1
4231	13	PAFZZ	5310-00-807-1472	96906	MS21042L06	.NUT, SELF LOCKING	UHH, UHV	EA	8
4231	14	PAFZZ		96906	MS35338-98	.WASHER, LOCK	UHH, UHV	EA	9
4231	15	PAFZZ		08289	MW-296-140	.INSULATOR, WASHER	UHH, UHV	EA	4
4231	16	PAFZZ	5310-00-934-9763	96906	MS35649-265	.NUT, PLAIN, HEXAGON	UHH, UHV	EA	1
4231	17	PAFZZ		08289	TW-147-236-094T	.SPACER, RING	UHH, UHV	EA	7
4231	18	PBFZZ	5970-00-756-4801	08289	DM-123	.INSULATOR, PLATE	UHH, UHV	EA	8
4231	19	PAFZZ	5305-00-993-5767	96906	MS35206-327	.SCREW, MACHINE	UHH, UHV	EA	3
4231	20	PAFZZ	5305-00-984-4989	96906	MS35206-229	.SCREW, MACHINE	UHH, UHV	EA	4
4231	21	PAFZZ	5305-00-889-3001	96906	MS35206-231	.SCREW, MACHINE	UHH, UHV	EA	1
4231	22	PBFZZ	5962-00-759-0771	27014	LM10[illegible]K	.MICROCIRCUIT, LINEAR	UHH, UHV	EA	1
4231	23	PBFZZ	5962-00-593-6554	27014	LM120K-5.2/883B	.MICROCIRCUIT, LINEAR	UHH, UHV	EA	2
4231	24	PAFZZ	5961-01-076-6492	81349	2N6284	TRANSISTOR	UHH, UHV	EA	1
4231	25	XBFZZ		82402	19078	.HEATSINK	UHH, UHV	EA	1
4231	26	PAFDD		82402	19076-3	.PRINTED CIRCUIT BOA	UHH, UHV	EA	1

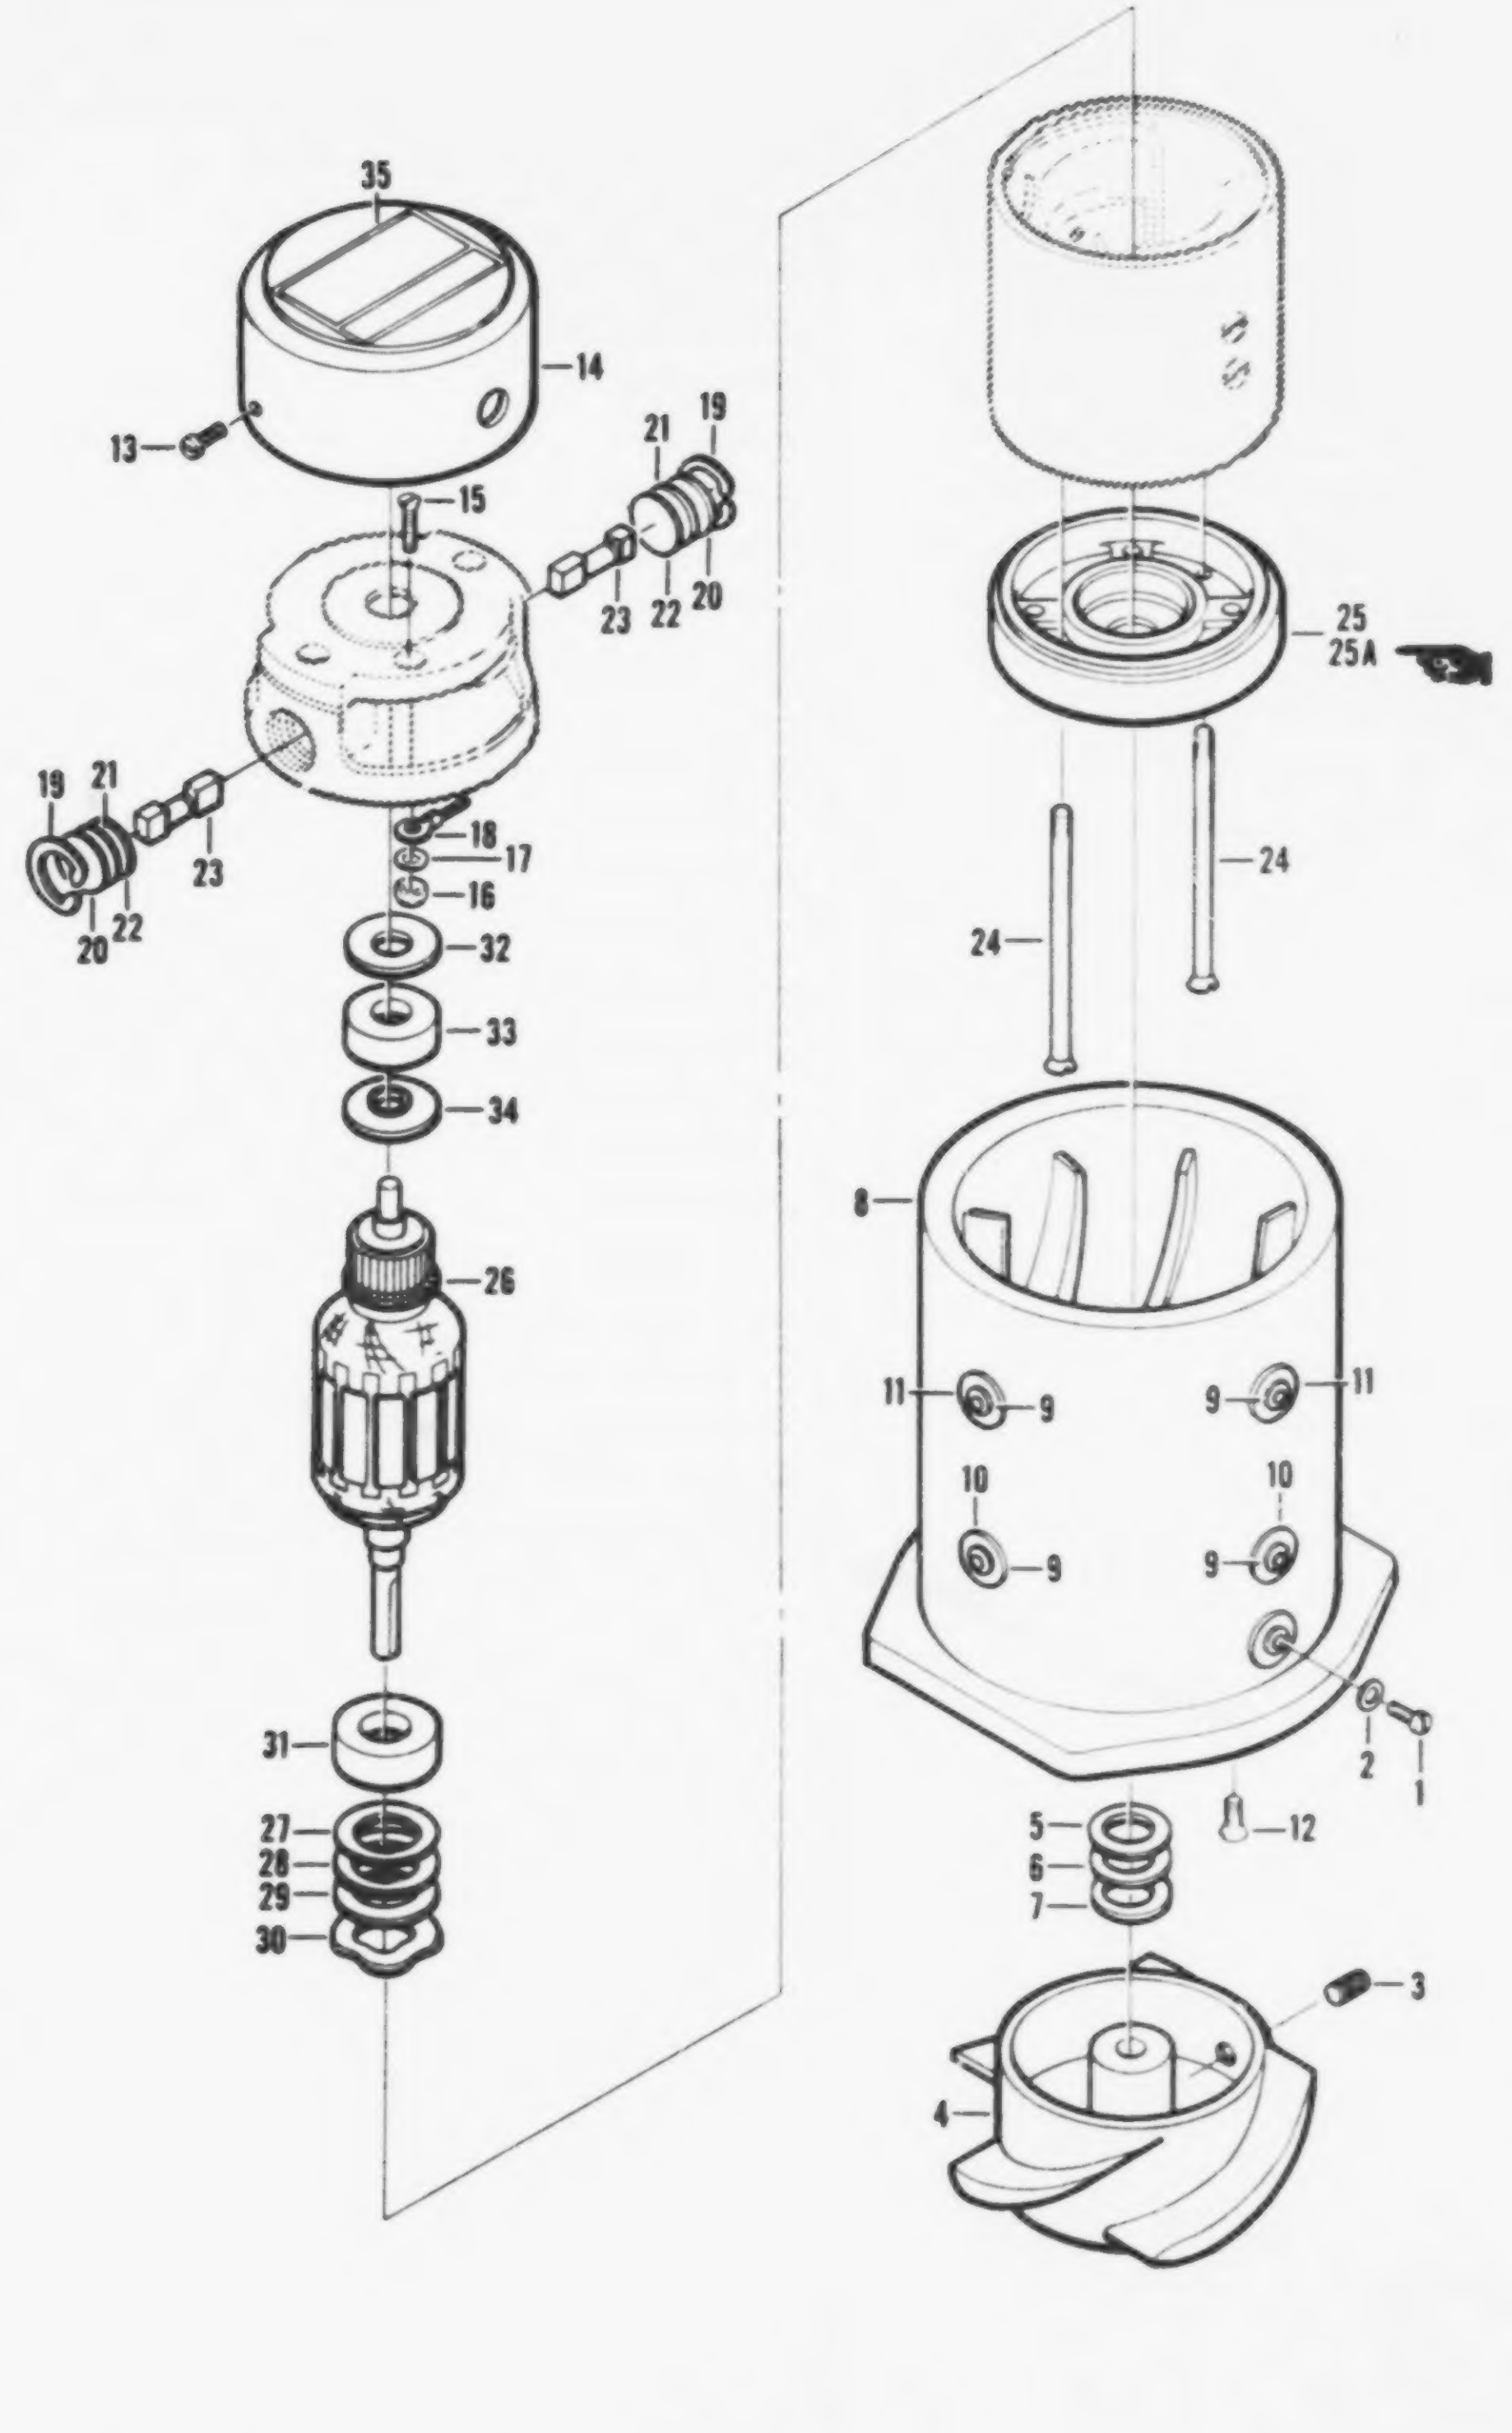
35
14
13
21
19
15
23
22
20
25
25A
19
21
18
17
16
23
22
20
24
24
32
33
34
8
26
11
9
9
11
10
10
9
9
31
2
1
5
12
27
6
28
7
29
30
3
4

Figure 423J. Blower Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423J		ADOFF		82402	FV3-4	BLOWER ASSEMBLY SEE FIG 4236 FOR NHA	UHH,UHV	EA	1
23J		PAOFF	6105-01-070-7615	82402	239YC33	.MOTOR,DIRECT CURREN	UHH,UHV	EA	1
3J	1	PAFZZ	5305-00-984-6226	96906	MS35206-240	..SCREW,MACHINE	UHH,UHV	EA	1
423J	2	PAFZZ	5310-00-559-0070	96906	MS35333-38	..WASHER,LOCK	UHH,UHV	EA	1
423J	3	PAFZZ	5305-00-935-7502	96906	MS18063-6	.SETSCREW	UHH,UHV	EA	2
423J	4	XAFZZ	1680-01-070-9975	82402	36409	.IMPELLER,MACHINED	UHH,UHV	EA	1
423J	5	XDFZZ	5365-00-162-7874	82402	886-1	.SHIM	UHH,UHV	EA	1
423J	6	PBFZZ	5365-00-161-4109	82402	886-29	.SHIM	UHH,UHV	EA	1
423J	7	PBFZZ	5365-00-119-9352	82402	886-211	.SHIM	UHH,UHV	EA	1
423J	8	XBFFF		82402	19516	..SHROUD ASSY	UHH,UHV	EA	1
423J	9	PAFZZ	5310-00-351-4000	84256	9605-08	...NUT,PLAIN,BLIND RIV	UHH,UHV	EA	8
423J	10	PAFZZ	5310-00-655-7549	80205	NAS620A416L	...WASHER,FLAT	UHH,UHV	EA	4
423J	11	PAFZZ	5310-00-952-0309	80205	NAS620C416	...WASHER,FLAT	UHH,UHV	EA	4
423J	12	PAFZZ	5305-00-957-6272	96906	MS35190-269	...SCREW,MACHINE	UHH,UHV	EA	4
423J	13	PAFZZ	5305-00-559-8144	96906	MS35265-2	..SCREW,MACHINE	UHH,UHV	EA	4
423J	14	XBFZZ		82402	10982	..END COVER	UHH,UHV	EA	1
423J	15	PAFZZ	5305-00-958-6230	96906	MS35190-224	..SCREW,MACHINE	UHH,UHV	EA	1
423J	16	PAFZZ	5310-00-956-0054	22599	22NTM-40	..NUT,SELF-LOCKING,HE	UHH,UHV	EA	1
423J	17	PAFZZ	5310-00-167-0831	88044	AN960-4L	..WASHER,FLAT	UHH,UHV	EA	1
423J	18	PAFZZ		79963	6	..TERMINAL,LUG	UHH,UHV	EA	1
23J	19	PAFZZ	5365-00-347-8254	79136	N5001-56MD	..RING,RETAINING	UHH,UHV	EA	2
423J	20	PAFZZ	5340-01-072-9343	82402	15205-1	..DISK,SOLID,PLAIN	UHH,UHV	EA	2
423J	21	PAFZZ	5970-01-074-5856	82402	15205-2	..DISK,SOLID,PLAIN	UHH,UHV	EA	2
423J	22	PAFZZ	5340-01-095-5668	82402	15205-3	..DISK,SOLID,PLAIN	UHH,UHV	EA	2
423J	23	PAFZZ	5977-01-075-0901	82402	80314	..BRUSH,ELECTRICAL CO	UHH,UHV	EA	2
423J	24	PBFZZ	5305-01-071-7111	82402	10981-1	..SCREW	UHH,UHV	EA	2
423J	25	PBFFF		82402	15250	..END BELL,ELECTRICAL	UHH,UHV	EA	1
423J	25A	PADZZ	5970-01-072-0647	82402	15207	...INSULATOR,BRUSHHOLD	UHH,UHV	EA	1
423J	26	XAFZH	6105-01-072-2400	82402	36783	..ARMATURE,MOTOR	UHH,UHV	EA	1
423J	27	PAFZZ	5365-00-836-2808	82402	886-5	..SHIM	UHH,UHV	EA	1
423J	28	PAFZZ	5365-00-454-8684	82402	886-12	..SHIM	UHH,UHV	EA	1
423J	29	PAFZZ	5365-01-081-5692	82402	885-144	..SHIM	UHH,UHV	EA	1
423J	30	PAFZZ	5310-00-988-0443	82402	146687	..WASHER,SPRING TENSI	UHH,UHV	EA	1
423J	31	PAFZZ	3110-00-293-8889	43334	SS77038LR305JE9	..BEARING,BALL,ANNULA	UHH,UHV	EA	1
423J	32	PAFZZ	5365-01-060-3788	82402	886-7	..SHIM	UHH,UHV	EA	1
423J	33	PAFZZ		43334	77035LR1CJ3	..BEARING,BALL,ANNULA	UHH,UHV	EA	1
423J	34	PAFZZ	2805-01-060-7633	82402	1209-5	..DEFLECTOR,DIRT AND	UHH,UHV	EA	1
423J	35	MFFZZ		82402	149099	..PLATE	UHH,UHV	EA	1

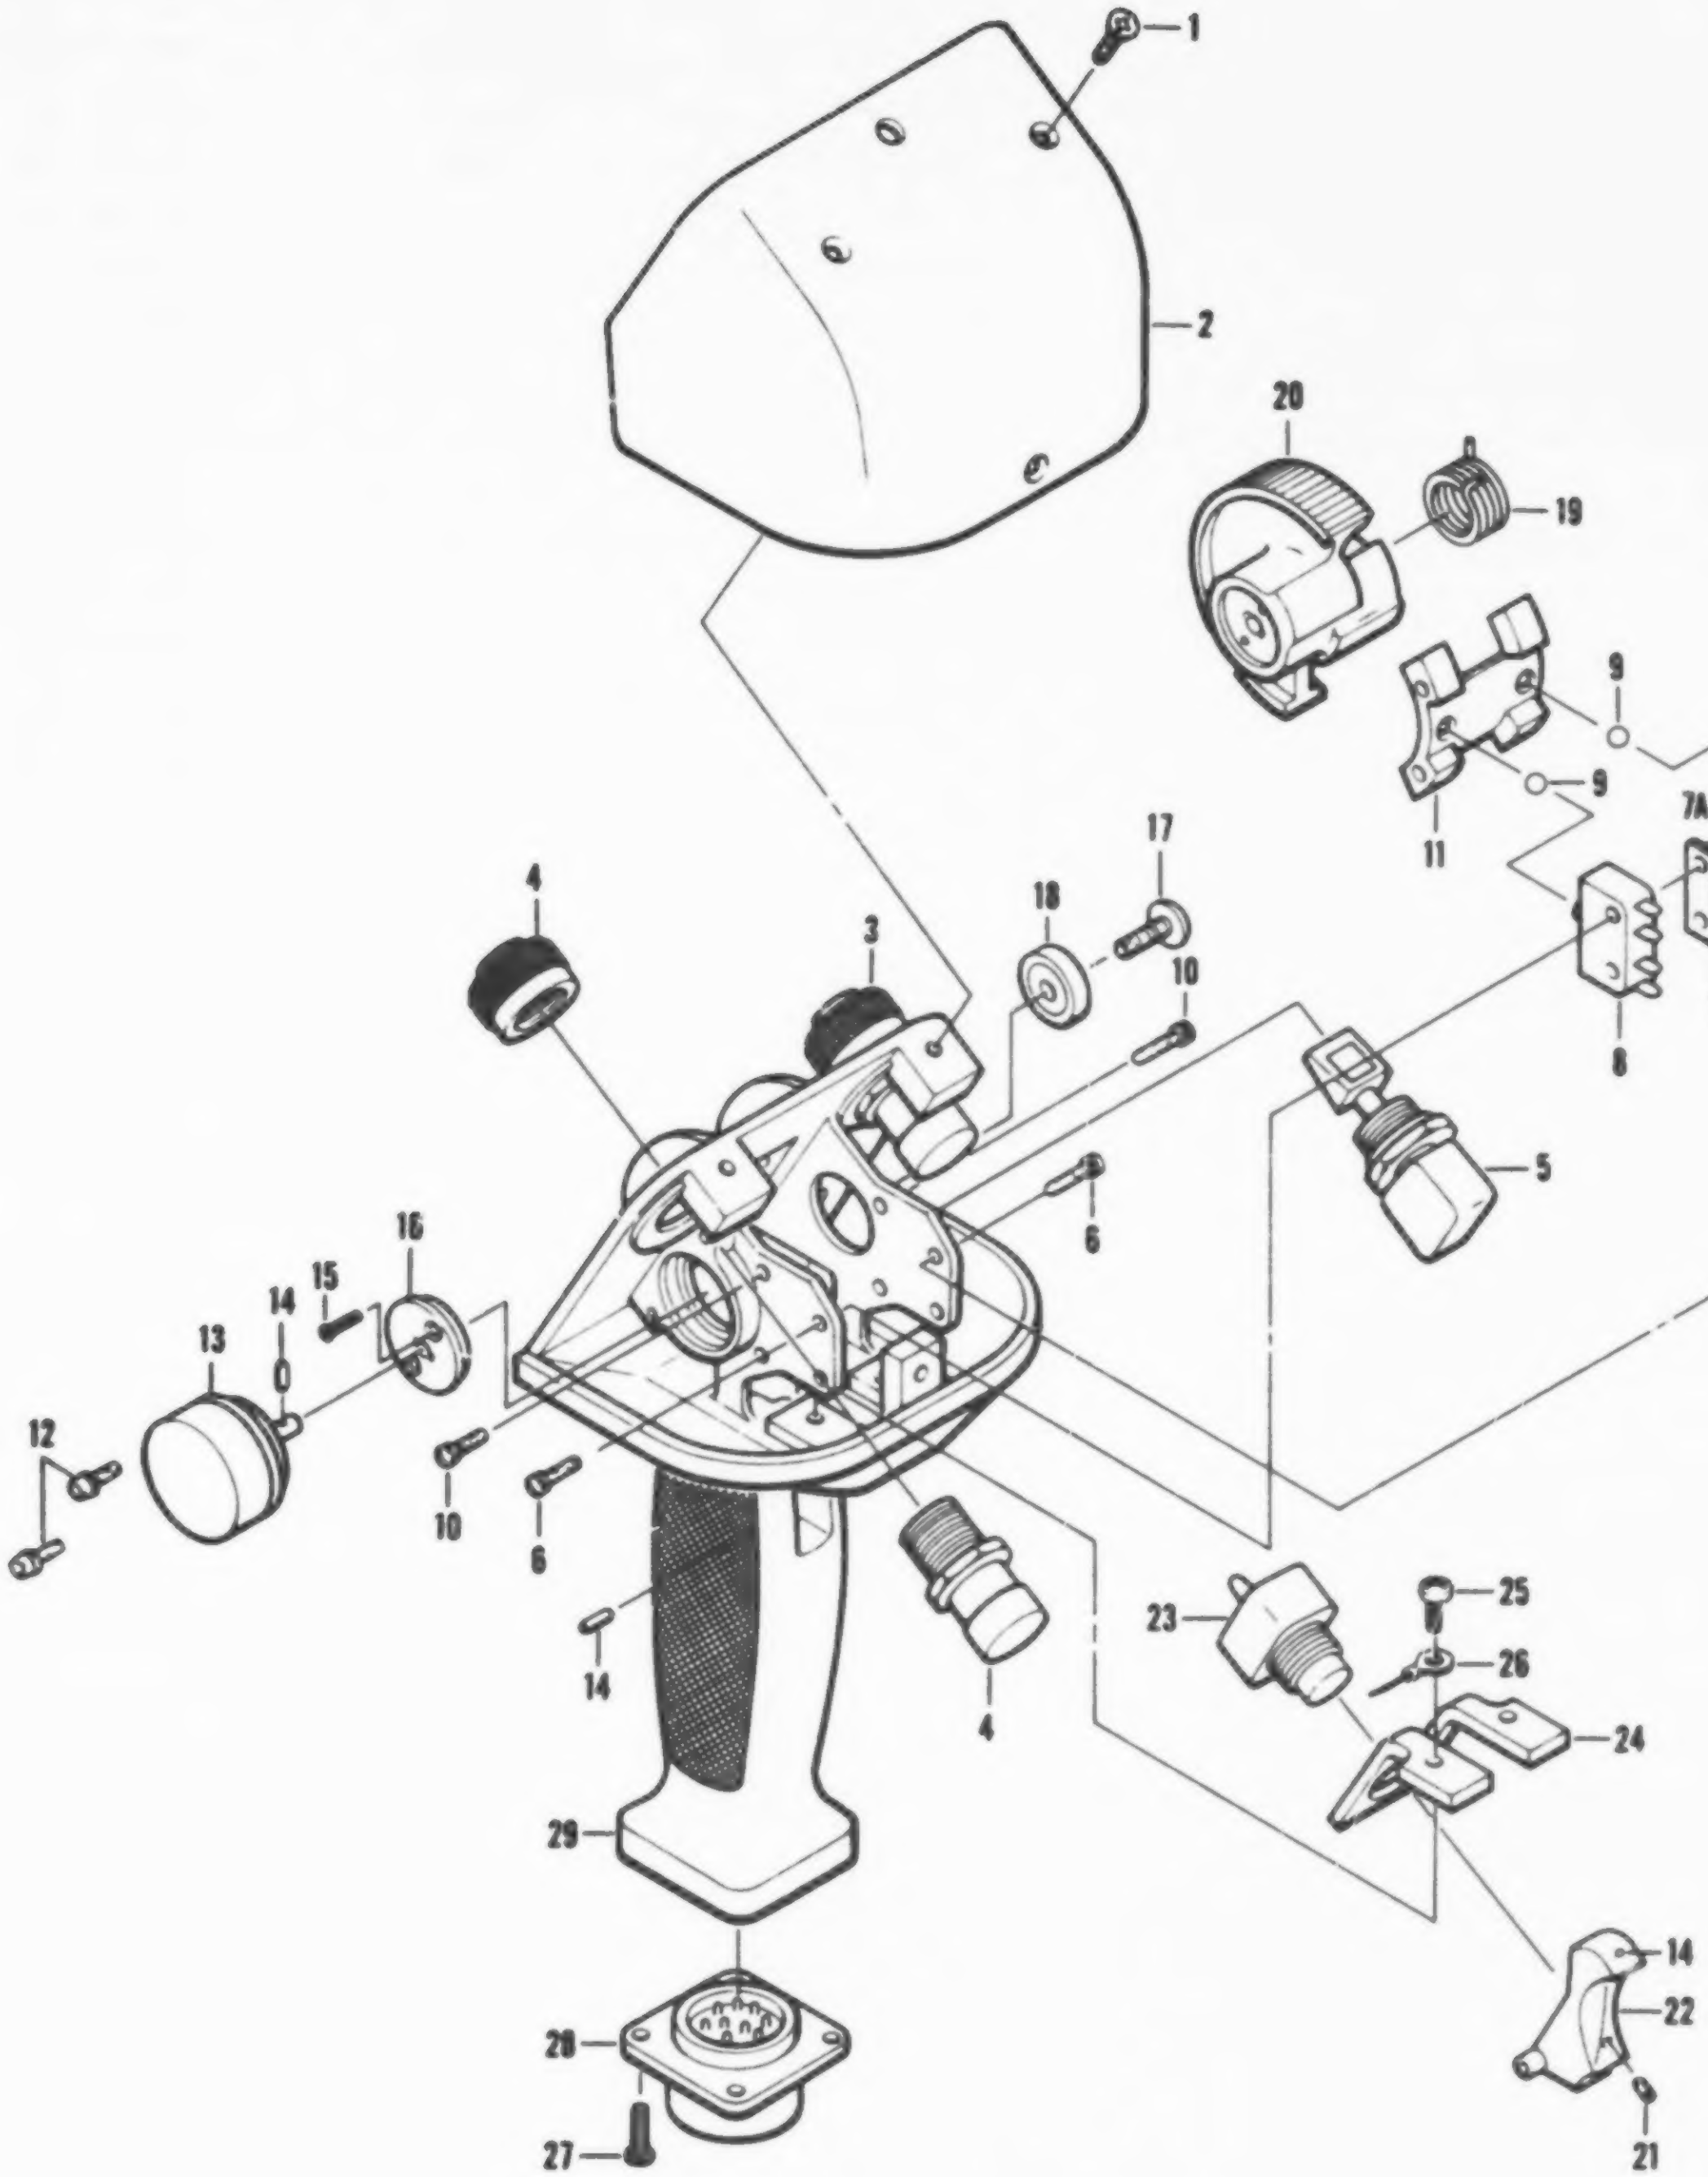
1
2
20
19
9
9
11
17
7A
8
4
18
3
10
7
7
8
8
5
6
16
15
14
13
12
10
6
25
23
26
14
4
24
29
14
22
28
21
27

Figure 423M. Pendant Control Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 14 HOIST AND WINCHES	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
423M		PAOFF	1680-01-070-7556	82402	42305E720	PENDANT CONTROL ASS SEE FIG. 423A FOR NHA	UHH,UHV	EA	1
423M		XAFFF		82402	149145	. CONTROL PENDANT,ASS	UHH,UHV	EA	1
423M	1	PAFZZ	5305-01-084-4655	96906	MS24693-B25	. . SCREW	UHH,UHV	EA	3
423M	2	XBFZZ		82402	149156	. . COVER	UHH,UHV	EA	1
423M	3	PAOZZ	6210-00-284-0289	96906	MS25041-4	. . LIGHT,INDICATOR	UHH,UHV	EA	1
423M	4	PAOZZ	6210-00-542-6393	96906	MS25041-2	. . LIGHT,INDICATOR	UHH,UHV	EA	1
423M	5	PAFZZ	5930-01-074-8711	82402	80327	. . SWITCH,TOGGLE	UHH,UHV	EA	1
423M	6	PAFZZ	5305-00-614-0288	96906	MS35266-7	. . SCREW,MACHINE	UHH,UHV	EA	4
423M	7	PBFZZ	1680-01-070-7559	82402	149163	. . PLATE,SWITCH SUPPOR	UHH,UHV	EA	2
423M	7A	PAFZZ	5340-00-934-0115	46384	M-256-1	. . . INSERT,SELF CLINCH	UHH,UHV	EA	2
423M	8	PAFZZ	5930-00-324-9433	96906	MS27217-1	. . SWITCH,SENSITIVE	UHH,UHV	EA	2
423M	9	PAFZZ	3110-00-838-6033	96906	MS19060-20	. . BALL,BEARING	UHH,UHV	EA	2
423M	10	PAFZZ	5305-00-614-0286	96906	MS35266-4	. . SCREW,MACHINE	UHH,UHV	EA	4
423M	11	PBFZZ	3110-01-075-5287	82402	149152	. . RETAINER,BALL,BEARI	UHH,UHV	EA	1
423M	12	PBFZZ	5340-01-030-9500	00141	L3-20	. . CLAMP,RIM CLENCHING	UHH,UHV	EA	2
423M	13	PAFZZ	5905-01-076-5606	02111	152-79-00	. . RESISTOR,VARIABLE,W	UHH,UHV	EA	1
423M	14	PAFZZ	5315-01-116-6789	96906	MS171434	. . PIN,SPRING	UHH,UHV	EA	4
423M	15	PAFZZ	5305-00-764-2964	96906	MS51959-4	. . SCREW	UHH,UHV	EA	2
423M	16	PBFZZ	1680-01-070-7560	82402	149155	. . BEARING,THUBWHEEL	UHH,UHV	EA	1
423M	17	PAFZZ	5305-00-054-6668	96906	MS51957-43	. . SCREW,MACHINE	UHH,UHV	EA	1
423M	18	PAFZZ	3120-01-108-2420	82402	149224	. . BEARING,SLEEVE	UHH,UHV	EA	1
423M	19	PAFZZ	5360-01-073-5416	82402	80326	. . SPRING,HELICAL TORS	UHH,UHV	EA	1
423M	20	PBFZZ	1680-01-070-7561	82402	149150	. . THUMBWEEL	UHH,UHV	EA	1
423M	21	XDFZZ		96906	MS51977-20	. . SETSCREW	UHH,UHV	EA	1
423M	22	PBFZZ	1680-01-078-4181	82402	149148	. . TRIGGER	UHH,UHV	EA	1
423M	23	PAFZZ	5930-00-258-4524	81640	C1002	. . SWITCH,PUSH	UHH,UHV	EA	1
423M	24	XBFZZ		82402	149154	. . BRACKET,SWITCH	UHH,UHV	EA	1
423M	25	PAFZZ	5305-00-054-5647	96906	MS51957-13	. . SCREW,MACHINE	UHH,UHV	EA	2
423M	26	PAFZZ	5940-00-681-8186	96906	MS35430-4	. . TERMINAL,LUG	UHH,UHV	EA	1
423M	27	PAFZZ	5305-00-459-4687	96906	MS51957-14B	. . SCREW,MACHINE	UHH,UHV	EA	4
423M	28	PBFZZ	5935-00-988-4277	96906	MS3122E14-19S	. . CONNECTOR,RECEPTACL	UHH,UHV	EA	1
423M	29	XBFZZ		82402	149146	. . GRIP	UHH,UHV	EA	1

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Major General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational Maintenance Requirements for UH-1B, UH-1C/M, UH-1D/H, and EH-1H aircraft.

✿U.S. GOVERNMENT PRINTING OFFICE: 1990 262-842/25175

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)
PFC JohN Doe
CoA, 3d ENGINEER BN
FT. LEONARDWOOD MO 63108

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 55-1520-210-23P-2	27 Feb 81	Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
6	2-1 a			In line 6 of paragraph 2-1a the manual states the engine has 6 cylinders. The engine on my set only has 4 cylinders. Change the manual to show 4 cylinders.
81		4-3		Callout 16 on figure 4-3 is pointing at a bolt. In the key to fig. 4-3, item 16 is called a shim. Please correct one or the other.
125	line 20			I ordered a gasket, item 19 on figure B-16 by NSN 2910-00-762-3001. I got a gasket but it doesn't fit. Supply says I got what I ordered so the NSN is wrong. Please give me a good NSN.

SAMPLE

PRINTED NAME, GRADE OR TITLE AND TELEPHONE NUMBER	SIGN HERE
JOHN DOE, PFC (268) 317-7111	John Doe

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 1, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

TEAR ALONG PERFORATED LINE

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-2	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT . . . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 **2028-2**

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

TEAR ALONG PERFORATED LINE

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-2	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

TEAR ALONG PERFORATED LINE

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 55-1520-210-23P-2	27 Feb 81	HELICOPTER, UTILITY - TACTICAL TRANS UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-2	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. PIN-POINT WHERE IT IS				IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	

PRINTED NAME. GRADE OR TITLE. AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

REVERSE OF DA FORM 2028-2

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-2	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE HELICOPTER, UTILITY - TACTICAL TRANS UH-1B/C/H/M & EH-1H (BELL)

BE EXACT PIN-POINT WHERE IT IS				IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

TEAR ALONG PERFORATED LINE

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

The Metric System and Equivalents

Linear Measure

1 centimeter = 10 millimeters = .39 inch
1 decimeter = 10 centimeters = 3.94 inches
1 meter = 10 decimeters = 39.37 inches
1 dekameter = 10 meters = 32.8 feet
1 hectometer = 10 dekameters = 328.08 feet
1 kilometer = 10 hectometers = 3,280.8 feet

Weights

1 centigram = 10 milligrams = .15 grain
1 decigram = 10 centigrams = 1.54 grains
1 gram = 10 decigram = .035 ounce
1 dekagram = 10 grams = .35 ounce
1 hectogram = 10 dekagrams = 3.52 ounces
1 kilogram = 10 hectograms = 2.2 pounds
1 quintal = 100 kilograms = 220.46 pounds
1 metric ton = 10 quintals = 1.1 short tons

Liquid Measure

1 centiliter = 10 milliters = .34 fl. ounce
1 deciliter = 10 centiliters = 3.38 fl. ounces
1 liter = 10 deciliters = 33.81 fl. ounces
1 dekaliter = 10 liters = 2.64 gallons
1 hectoliter = 10 dekaliters = 26.42 gallons
1 kiloliter = 10 hectoliters = 264.18 gallons

Square Measure

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch
1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches
1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet
1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet
1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres
1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

Cubic Measure

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch
1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches
1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

Approximate Conversion Factors

To change	*To*	*Multiply by*	*To change*	*To*	*Multiply by*
inches	centimeters	2.540	ounce-inches	newton-meters	.007062
feet	meters	.305	centimeters	inches	.394
yards	meters	.914	meters	feet	3.280
miles	kilometers	1.609	meters	yards	1.094
square inches	square centimeters	6.451	kilometers	miles	.621
square feet	square meters	.093	square centimeters	square inches	.155
square yards	square meters	.836	square meters	square feet	10.764
square miles	square kilometers	2.590	square meters	square yards	1.196
acres	square hectometers	.405	square kilometers	square miles	.386
cubic feet	cubic meters	.028	square hectometers	acres	2.471
cubic yards	cubic meters	.765	cubic meters	cubic feet	35.315
fluid ounces	milliliters	29,573	cubic meters	cubic yards	1.308
pints	liters	.473	milliliters	fluid ounces	.034
quarts	liters	.946	liters	pints	2.113
gallons	liters	3.785	liters	quarts	1.057
ounces	grams	28.349	liters	gallons	.264
pounds	kilograms	.454	grams	ounces	.035
short tons	metric tons	.907	kilograms	pounds	2.205
pound-feet	newton-meters	1.365	metric tons	short tons	1.102
pound-inches	mewton-meters	.11375			

Temperature (Exact)

°F	Fahrenheit temperature	5/9 (after subtracting 32)	Celsius temperature	°C